



IEEE Standard for IP-XACT, Standard Structure for Packaging, Integrating, and Reusing IP within Tool Flows

IEEE Computer Society
and the
IEEE Standards Association Corporate Advisory Group

Sponsored by the Design Automation Standards Committee

IEEE 3 Park Avenue New York, NY 10016-5997, USA

18 February 2010

IEEE Std 1685™-2009



IEEE Standard for IP-XACT, Standard Structure for Packaging, Integrating, and Reusing IP within Tool Flows

Sponsor

Design Automation Standards Committee
of the
IEEE Computer Society
and the
IEEE Standards Association Corporate Advisory Group

Approved 9 December 2009

IEEE SA-Standards Board

Grateful acknowledgment is made to The SPIRIT Consortium, Inc., for permission to use the following source material:

IP-XACT 1.2 and IP-XACT 1.5

Abstract: Conformance checks for eXtensible Markup Language (XML) data designed to describe electronic systems are formulated by this standard. The meta-data forms that are standardized include: components, systems, bus interfaces and connections, abstractions of those buses, and details of the components including address maps, register and field descriptions, and file set descriptions for use in automating design, verification, documentation, and use flows for electronic systems. A set of XML schemas of the form described by the World Wide Web Consortium (W3C®) and a set of semantic consistency rules (SCRs) are included. A generator interface that is portable across tool environments is provided. The specified combination of methodology-independent meta-data and the tool-independent mechanism for accessing that data provides for portability of design data, design methodologies, and environment implementations.

Keywords: abstraction definitions, address space specification, bus definitions, design environment, EDA, electronic design automation, electronic system level, ESL, implementation constraints, IP-XACT, register transfer level, RTL, SCRs, semantic consistency rules, TGI, tight generator interface, tool and data interoperability, use models, XML design meta-data, XML schema

The Institute of Electrical and Electronics Engineers, Inc. 3 Park Avenue, New York, NY 10016-5997, USA

Copyright © 2010 by the Institute of Electrical and Electronics Engineers, Inc. All rights reserved. Published 18 February 2010. Printed in the United States of America.

IEEE is a registered trademark in the U.S. Patent & Trademark Office, owned by the Institute of Electrical and Electronics Engineers, Incorporated.

AMBA is a registered trademark of ARM Limited.

Design Compiler and VCS are registered trademarks of Synopsys, Inc.

SystemC is a registered trademarks of Open SystemC Initiative, Inc. in the United States and other countries.

Verilog is a registered trademark of Cadence Design Systems, Inc. in the United States and/or other jurisdictions.

W3C is a registered trademark of the World Wide Web Consortium.

XMLSpy is a registered trademark of Altova GmbH in the U.S., the European Union and/or other countries.

PDF: ISBN 978-0-7381-6159-4 STD96015 Print: ISBN 978-0-7381-6160-0 STDPD96015

IEEE prohibits discrimination, harassment and bullying. For more information, visit http://www.ieee.org/web/aboutus/whatis/policies/p9-26.html. No part of this publication may be reproduced in any form, in an electronic retrieval system or otherwise, without the prior written permission of the publisher.

IEEE Standards documents are developed within the IEEE Societies and the Standards Coordinating Committees of the IEEE Standards Association (IEEE-SA) Standards Board. The IEEE develops its standards through a consensus development process, approved by the American National Standards Institute, which brings together volunteers representing varied viewpoints and interests to achieve the final product. Volunteers are not necessarily members of the Institute and serve without compensation. While the IEEE administers the process and establishes rules to promote fairness in the consensus development process, the IEEE does not independently evaluate, test, or verify the accuracy of any of the information or the soundness of any judgments contained in its standards.

Use of an IEEE Standard is wholly voluntary. The IEEE disclaims liability for any personal injury, property or other damage, of any nature whatsoever, whether special, indirect, consequential, or compensatory, directly or indirectly resulting from the publication, use of, or reliance upon this, or any other IEEE Standard document.

The IEEE does not warrant or represent the accuracy or content of the material contained herein, and expressly disclaims any express or implied warranty, including any implied warranty of merchantability or fitness for a specific purpose, or that the use of the material contained herein is free from patent infringement. IEEE Standards documents are supplied "AS IS."

The existence of an IEEE Standard does not imply that there are no other ways to produce, test, measure, purchase, market, or provide other goods and services related to the scope of the IEEE Standard. Furthermore, the viewpoint expressed at the time a standard is approved and issued is subject to change brought about through developments in the state of the art and comments received from users of the standard. Every IEEE Standard is subjected to review at least every five years for revision or reaffirmation, or every ten years for stabilization. When a document is more than five years old and has not been reaffirmed, or more than ten years old and has not been stabilized, it is reasonable to conclude that its contents, although still of some value, do not wholly reflect the present state of the art. Users are cautioned to check to determine that they have the latest edition of any IEEE Standard.

In publishing and making this document available, the IEEE is not suggesting or rendering professional or other services for, or on behalf of, any person or entity. Nor is the IEEE undertaking to perform any duty owed by any other person or entity to another. Any person utilizing this, and any other IEEE Standards document, should rely upon the advice of a competent professional in determining the exercise of reasonable care in any given circumstances.

Interpretations: Occasionally questions may arise regarding the meaning of portions of standards as they relate to specific applications. When the need for interpretations is brought to the attention of IEEE, the Institute will initiate action to prepare appropriate responses. Since IEEE Standards represent a consensus of concerned interests, it is important to ensure that any interpretation has also received the concurrence of a balance of interests. For this reason, IEEE and the members of its societies and Standards Coordinating Committees are not able to provide an instant response to interpretation requests except in those cases where the matter has previously received formal consideration. A statement, written or oral, that is not processed in accordance with the IEEE-SA Standards Board Operations Manual shall not be considered the official position of IEEE or any of its committees and shall not be considered to be, nor be relied upon as, a formal interpretation of the IEEE. At lectures, symposia, seminars, or educational courses, an individual presenting information on IEEE standards shall make it clear that his or her views should be considered the personal views of that individual rather than the formal position, explanation, or interpretation of the IEEE.

Comments for revision of IEEE Standards are welcome from any interested party, regardless of membership affiliation with IEEE. Suggestions for changes in documents should be in the form of a proposed change of text, together with appropriate supporting comments. Recommendations to change the status of a stabilized standard should include a rationale as to why a revision or withdrawal is required. Comments and recommendations on standards, and requests for interpretations should be addressed to:

Secretary, IEEE-SA Standards Board 445 Hoes Lane Piscataway, NJ 08854 USA

Authorization to photocopy portions of any individual standard for internal or personal use is granted by the Institute of Electrical and Electronics Engineers, Inc., provided that the appropriate fee is paid to Copyright Clearance Center. To arrange for payment of licensing fee, please contact Copyright Clearance Center, Customer Service, 222 Rosewood Drive, Danvers, MA 01923 USA; +1 978 750 8400. Permission to photocopy portions of any individual standard for educational classroom use can also be obtained through the Copyright Clearance Center.

Introduction

This introduction is not part of IEEE Std 1685-2009, IEEE Standard for IP-XACT, Standard Structure for Packaging, Integrating, and Reusing IP within Tool Flows.

The purpose of this standard is to provide the electronic design automation (EDA), semiconductor, electronic design intellectual property (IP) provider, and system design communities with a well-defined and unified specification for the meta-data that represents the components and designs within an electronic system. The goal of this specification is to enable delivery of compatible IP descriptions from multiple IP vendors; better enable importing and exporting complex IP bundles to, from, and between EDA tools for system on chip (SoC) design environments (DEs); better express configurable IP by using IP meta-data; and better enable provision of EDA vendor-neutral IP creation and configuration scripts (*generators*). The data and data access specification is designed to coexist and enhance the hardware description languages (HDLs) presently used by designers while providing capabilities lacking in those languages.

The SPIRIT Consortium is a consortium of electronic system, IP provider, semiconductor, and EDA companies. IP-XACT enables a productivity boost in design, transfer, validation, documentation, and use of electronic IP and covers components, designs, interfaces, and details thereof. The data specified by IP-XACT is extensible in locations specified in the schema.

IP-XACT enables the use of a unified structure for the meta specification of a design, components, interfaces, documentation, and interconnection of components. This structure can be used as the basis of both manual and automatic methodologies. IP-XACT specifies the tight generator interface (TGI) for access to the data in a vendor-independent manner.

This standardization project provides electronic design engineers with a well-defined standard that meets their requirements in structured design and validation, and enables a step function increase in their productivity. This standardization project will also provide the EDA industry with a standard to which they can adhere and that they can support in order to deliver their solutions in this area.

The SPIRIT Consortium has prepared a set of bus and abstraction definitions for several common buses. It is expected, over time, that those standards groups and manufacturers who define buses will include IP-XACT eXtensible Markup Language (XML) bus and abstraction definitions in their set of deliverables. Until that time, and to cover existing useful buses, a set of bus and abstraction definitions for common buses has been created.

A set of reference bus and abstraction definitions allows many vendors who define IP using these buses to easily interconnect IP together. The SPIRIT Consortium posts these for use by its members, with no warranty of suitability, but in the hope that these will be useful. The SPIRIT Consortium will, from time-to-time, update these files and if a Standards body wishes to take over the work of definition, will transfer that work to that body.

These reference bus and abstraction definition templates (with comments and examples) are available from the public area of The SPIRIT Consortium Web site.^a

^aAvailable at http://www.spiritconsortium.org.

Notice to users

Laws and regulations

Users of these documents should consult all applicable laws and regulations. Compliance with the provisions of this standard does not imply compliance to any applicable regulatory requirements. Implementers of the standard are responsible for observing or referring to the applicable regulatory requirements. IEEE does not, by the publication of its standards, intend to urge action that is not in compliance with applicable laws, and these documents may not be construed as doing so.

Copyrights

This document is copyrighted by the IEEE. It is made available for a wide variety of both public and private uses. These include both use, by reference, in laws and regulations, and use in private self-regulation, standardization, and the promotion of engineering practices and methods. By making this document available for use and adoption by public authorities and private users, the IEEE does not waive any rights in copyright to this document.

Updating of IEEE documents

Users of IEEE standards should be aware that these documents may be superseded at any time by the issuance of new editions or may be amended from time to time through the issuance of amendments, corrigenda, or errata. An official IEEE document at any point in time consists of the current edition of the document together with any amendments, corrigenda, or errata then in effect. In order to determine whether a given document is the current edition and whether it has been amended through the issuance of amendments, corrigenda, or errata, visit the IEEE Standards Association website at http://ieeexplore.ieee.org/xpl/standards.jsp, or contact the IEEE at the address listed previously.

For more information about the IEEE Standards Association or the IEEE standards development process, visit the IEEE-SA website at http://standards.ieee.org.

Errata

Errata, if any, for this and all other standards can be accessed at the following URL: http://standards.ieee.org/reading/ieee/updates/errata/index.html. Users are encouraged to check this URL for errata periodically.

Interpretations

Current interpretations can be accessed at the following URL: http://standards.ieee.org/reading/ieee/interp/index.html.

Patents

Attention is called to the possibility that implementation of this standard may require use of subject matter covered by patent rights. By publication of this standard, no position is taken with respect to the existence or validity of any patent rights in connection therewith. The IEEE shall not be responsible for identifying patents or patent applications for which a license may be required to implement an IEEE standard or for conducting inquiries into the legal validity or scope of those patents that are brought to its attention.

Participants

The SPIRIT Standardization Working Group is entity based. At the time this standard was submitted to the IEEE-SA Standards Board for approval, the SPIRIT Standardization Working Group had the following membership:

Greg Ehmann, Chair Kathy Werner, Vice Chair Joe Daniels, Technical Editor

Victor Berman Dennis Brophy Bill Chown Gary Delp Jean-Michel Fernandez Mark Gogolewski Serge Hustin Prabhu Krishnamurthy Stan Krolikoski Mark Noll John Swanson Yatin Trivedi Ralph von Vignau Richard Weber

The following members of the entity balloting committee voted on this standard. Balloters may have voted for approval, disapproval, or abstention.

Accellera Organization Inc. Cadence Design Systems Inc. Freescale Semiconductor Inc. NXP Semiconductors STMicroelectronics Semifore, Inc. The SPIRIT Consortium Synopsys, Inc. Texas Instruments Inc. When the IEEE-SA Standards Board approved this standard on 9 December 2009, it had the following membership:

Robert M. Grow, Chair Thomas Prevost, Vice Chair Steve M. Mills, Past Chair Judith Gorman, Secretary

John Barr Karen Bartleson Victor Berman Ted Burse Richard DeBlasio Andy Drozd Mark Epstein Alexander Gelman Jim Hughes Richard H. Hulett Young Kyun Kim Joseph L. Koepfinger* John Kulick David J. Law
Ted Olsen
Glenn Parsons
Ronald C. Petersen
Narayanan Ramachandran
Jon Walter Rosdahl
Sam Sciacca

Also included are the following nonvoting IEEE-SA Standards Board liaisons:

Howard L. Wolfman, *TAB Representative* Satish K. Aggarwal, *NRC Representative* Michael Janezic, *NIST Representative*

Michelle Turner
IEEE Standards Program Manager, Document Development

Michael D. Kipness
IEEE Standards Program Manager, Technical Program Development

^{*}Member Emeritus



Contents

1.	Overview	1
	1.1 Scope	
	1.2 Purpose	2
	1.3 Design environment	
	1.4 IP-XACT Enabled implementations	6
	1.5 Conventions used	7
	1.6 Use of color in this standard	
	1.7 Contents of this standard	
2.	Normative references	13
3.	Definitions, acronyms, and abbreviations	
	3.1 Definitions	
	3.2 Acronyms and abbreviations	21
4.	Interoperability use model	23
	4.1 Roles and responsibilities	
	4.2 IP-XACT IP exchange flows	24
5.	Interface definition descriptions	
	5.1 Definition descriptions	27
	5.2 Bus definition	27
	5.3 Abstraction definition	30
	5.4 Ports	31
	5.5 Wire ports	32
	5.6 Qualifiers	34
	5.7 Wire port group	36
	5.8 Wire port mode constraints	38
	5.9 Wire port mirrored-mode constraints	39
	5.10 Transactional ports	41
	5.11 Transactional port group	43
	5.12 Extending bus and abstraction definitions	
	5.13 Clock and reset handling	47
6.	Component descriptions	
	6.1 Component	49
	6.2 Interfaces	
	6.3 Interface interconnections	
	6.4 Complex interface interconnections	54
	6.5 Bus interfaces	
	6.6 Component channels	67
	6.7 Address spaces	69
	6.8 Memory maps	81
	6.9 Remapping	97
	6.10 Registers	
	6.11 Models	
	6.12 Component generators	
	6.13 File sets	
	6.14 Choices	165

	6.15 White box elements	167
	6.16 White box element reference	168
	6.17 CPUs	170
7	Design descriptions	171
7.	7.1 Design	
	7.2 Design component instances	
	7.3 Design interconnections	
	7.4 Active, monitored, and monitor interfaces	
	7.5 Design ad hoc connections	
	7.6 Design hierarchical connections	
8.	Abstractor descriptions	183
	8.1 Abstractor	
	8.2 Abstractor interfaces	
	8.3 Abstractor models	
	8.4 Abstractor views	189
	8.5 Abstractor ports	191
	8.6 Abstractor wire ports	193
	8.7 Abstractor generators	195
9.	Generator chain descriptions	199
	9.1 generatorChain	199
	9.2 generatorChainSelector	201
	9.3 generatorChain component selector	202
	9.4 generatorChain generator	
10.	Design configuration descriptions	207
	10.1 Design configuration	207
	10.2 designConfiguration	207
	10.3 generatorChainConfiguration	209
	10.4 interconnectionConfiguration	211
11.	Addressing and data visibility	
	11.1 Calculating the bit address of a bit in a memory map	
	11.2 Calculating the bus address at the slave bus interface	
	11.3 Address modifications of an interconnection	
	11.4 Address modifications of a channel	
	11.5 Addressing in the master	
	11.6 Visibility of bits	
	11.7 Address translation in a bridge	218
Anne	ex A (informative) Bibliography	219
Anne	ex B (normative) Semantic consistency rules	221
Anne	ex C (normative) Common elements and concepts	
Anne	ex D (normative) Types	263
Anne	ex E (normative) Dependency XPATH	267

Annex F (informative) External bus with an internal/digital interface	271
Annex G (normative) Tight generator interface	273
Annex H (informative) Bridges and channels	351



IEEE Standard for IP-XACT, Standard Structure for Packaging, Integrating, and Reusing IP within Tool Flows

IMPORTANT NOTICE: This standard is not intended to ensure safety, security, health, or environmental protection in all circumstances. Implementers of the standard are responsible for determining appropriate safety, security, environmental, and health practices or regulatory requirements.

This IEEE document is made available for use subject to important notices and legal disclaimers. These notices and disclaimers appear in all publications containing this document and may be found under the heading "Important Notice" or "Important Notices and Disclaimers Concerning IEEE Documents." They can also be obtained on request from IEEE or viewed at http://standards.ieee.org/IPR/disclaimers.html.

1. Overview

This clause explains the scope and purpose of this standard; gives an overview of the basic concepts, major semantic components, and conventions used in this standard; and summarizes its contents.

1.1 Scope

This standard describes an eXtensible Markup Language (XML) schema¹ for meta-data documenting *intellectual property* (IP) used in the development, implementation, and verification of electronic systems and an *application programming interface* (API) to provide tool access to the meta-data. This schema provides a standard method to document IP that is compatible with automated integration techniques. The API provides a standard method for linking tools into a *system development* framework, enabling a more flexible, optimized development environment. Tools compliant with this standard will be able to interpret, configure, integrate, and manipulate IP blocks that comply with the IP meta-data description. The standard is based on version 1.4 IP-XACT of The SPIRIT Consortium. The standard is independent of any specific design processes. It does not cover those behavioral characteristics of the IP that are not relevant to integration.

¹Information on references can be found in <u>Clause 2</u>.

1.2 Purpose

This standard enables the creation and exchange of IP in a highly automated design environment.

1.3 Design environment

The IP-XACT specification is a mechanism to express and exchange information about design IP and its required configuration.² While the IP-XACT description formats are the core of this standard, describing the IP-XACT specification in the context of its basic use model, the design environment (DE), more readily depicts the extent and limitations of the semantic intent of the data. The DE coordinates a set of tools and IP, or expressions of that IP (e.g., models), through the creation and maintenance of meta-data descriptions of the system on chip (SoC) such that its system design and implementation flows are efficiently enabled and reuse centric.

The use of the IP-XACT specified formats and interfaces are shown, in **bold**, in <u>Figure 1</u> and described in the following subclauses.

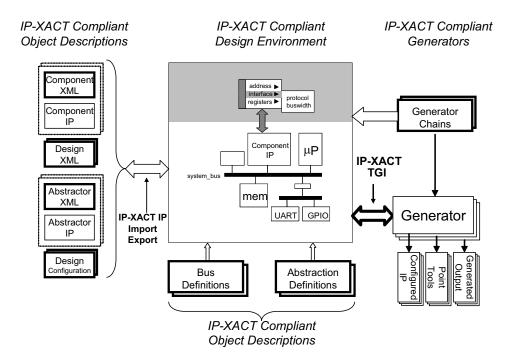


Figure 1—IP-XACT design environment

1.3.1 IP-XACT design environment

A DE enables the designer to work with IP-XACT design IP through a coordinated front-end and IP design database. These tools create and manage the top-level meta-description of system design and may provide two basic types of services: *design capture*, which is the expression of design configuration by the IP

²IP-XACT uses the World Wide Web Consortium (W3C[®]) standard for the XML version 1.0 data (http://www.w3.org/TR/2000/REC-xml-20001006). The valid format of that XML data is described in a *schema* by using the Schema Description Language described therein. W3C is a registered trademark of the World Wide Web Consortium.

provider and design intent by the IP user; and *design build*, which is the creation of a design (or design model) to those intentions.

As part of design capture, a system design tool shall recognize the structure and configuration options of imported IP. In the case of *structure*, this implies both the structure of the design [e.g., how specific pin-outs refer to lines in the hardware description language (HDL) code] as well as the structure of the IP package (e.g., where design descriptions and related generators are provided in the packaged IP data-structure). In the case of *configuration*, this is the set of options for handling the imported IP (e.g., setting the base address and offset, bus width) that may be expressed as configurable parameters in the IP-XACT meta-data.

As part of design build, generators may be provided internally by a system design tool to achieve the required IP integration or configuration, or provided externally (e.g., by an IP provider) and launched by the system design tool as appropriate.

The system design tool set defines a DE where the support for conceptual context and management of IP-XACT meta-data resides. However, the IP-XACT specifications make no requirements upon system design tool architecture or a tool's internal data structures. To be considered IP-XACT v1.5 enabled, a system design tool shall support the import/export of IP expressed with valid IP-XACT v1.5 meta-data for both component IP and designs, and it needs to support the tight generator interface (TGI) for interfacing with external generators (to the DE).

1.3.2 IP-XACT object descriptions

The IP-XACT schema is the core of the IP-XACT specification. There are seven top-level schema definitions. Each schema definition can be used to create object descriptions of the corresponding type.

- A bus definition description defines the type attributes of an bus.
- An abstraction definition description defines the representation attributes of a bus.
- A *component* description defines an IP or interconnect structure.
- A *design* description defines the configuration of and interconnection between components.
- An *abstractor* description defines an adaptor between interfaces of two different abstractions.
- A *generator chain* description defines the grouping and ordering of generators.
- A design configuration description defines additional configuration information for a generator chain or design description.

1.3.3 Object interactions

An object description contains a unique identifier in the header. The identifier in IP-XACT terms is called a VLNV after the four elements that define its value: vendor, library, name, and version. See $\underline{C.6}$ for further details on a VLNV. This VLNV is used to create a reference from one description to another. The links between these objects are illustrated in Figure 2. The arrows (A \rightarrow B) illustrate a reference of one object to another (e.g., reference of object B from object A).

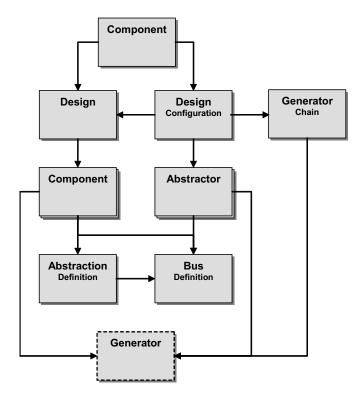


Figure 2—IP-XACT object interactions

1.3.4 IP-XACT generators

Generators are executable objects (e.g., scripts or binary programs) that may be integrated within a DE (referred to as *internal*) or provided separately as an executable (referred to as *external*). Generators may be provided as part of an IP package (e.g., for configurable IP, such as a bus-matrix generator) or as a way of wrapping point tools for interaction with a DE (e.g., an external design netlister, external design checker).

An internal generator may perform a wide variety of tasks and may access IP-XACT compliant meta-data by any method a DE supports. IP-XACT does not describe these protocols.

An *external generator* (often referred to as a *TGI generator*) is an executable program or script invoked from within a DE to query or configure design descriptions and their related component and abstractor descriptions. External generators can use the TGI to *access* their IP-XACT meta-data descriptions (as currently loaded into the DE) and perform the various operations associated with those descriptions. In addition, external generators shall only *operate* upon IP-XACT compliant meta-data through the defined TGI, see <u>1.3.6</u>.

Generators can be referenced from a component, abstractor, or generator chain description. Generators can also be grouped and ordered in generator chain descriptions and those chain descriptions contained inside other chain descriptions. This sequencing of generators is *critical* for providing script-based support for SoC flow creation.

1.3.5 IP-XACT design environment interfaces

There are two obvious interfaces expressed in <u>Figure 1</u>: from the DE to the external IP libraries and from the DE to the generators. In the former case, the IP-XACT specifications are *neutral* regarding the design tool

interfaces to IP repositories. Being able to read and write IP with IP-XACT meta-data is required; however, the *formal interaction* between an external IP repository and a DE is not specified.

1.3.6 Tight generator interface

The *tight generator interface* (TGI) is the method a generator uses to efficiently access a design or component description in a DE-independent and generator-language-independent manner. Therefore, a generator running on two different DEs produces the same results. The DE and the generator communicate with each other by sending messages utilizing the Simple Object Access Protocol (SOAP) standard version 1.2³ specified in the Web Services Description Language (WSDL) version 1.1.⁴ SOAP provides a simple means for sending XML-format messages using the Hypertext Transfer Protocol (HTTP) or other transport protocols. IP-XACT supports using an HTTP protocol or a file protocol.

The SOAP messages passed between the generator and the DE allow the generator to get all information about the design interconnections (which contain components and abstractors), provide set information for any configurable elements in a component or abstractor, and make simple modifications of the design description. For additional details on the DE generator invocation and the SOAP messages passed between the generator and the DE, see Annex G.

1.3.7 Design intellectual property

IP-XACT is structured around the concept of IP reuse. *Electronic design intellectual property*, or IP, is a term used in the ED community to refer to a reusable collection of design specifications that represent the behavior, properties, and/or representation of the design in various media. The name IP is partially derived from the common practice of considering a collection of this type to be the intellectual property of one party. Both hardware and software collections are encompassed by this term.

These collections may include the following:

- a) Design objects—This can include the following:
 - 1) Transaction-level modeling (TLM) descriptions: SystemC[®] and SystemVerilog⁵
 - 2) Fixed HDL descriptions: Verilog[®], VHDL⁶
 - 3) Configurable HDL descriptions (e.g., bus-fabric generators)
 - 4) Design models for register transfer level (RTL) and transactional simulation (e.g., compiled core models)
 - 5) HDL-specified verification IP (VIP) (e.g., basic stimulus generators and checkers)
- b) IP views—This is a list of different views (levels of description and/or languages) to describe the IP object. In IP-XACT v1.5, these views include:
 - 1) Design view: RTL Verilog or VHDL, flat or hierarchical components
 - 2) Simulation view: model views, targets, simulation directives, etc.
 - 3) Documentation view: standard, user guide, etc.

IP-XACT XML meta-data descriptions provide a standardized way of collecting much of the structural information contained in the file sets. *IP-XACT* also can contain the information that identifies the appropriate files included in a collection to be used for different parts of the design process.

³Available from the W3C Web site at http://www.w3.org/TR/2007/REC-soap12-part1-20070427/.

⁴Available from the W3C Web site at http://www.w3.org/TR/wsdl.

⁵SystemC is a registered trademarks of Open SystemC Initiative, Inc. in the United States and other countries. Verilog is a registered trademark of Cadence Design Systems, Inc. in the United States and/or other jurisdictions. This information is given for the convenience of users of this standard and does not constitute an endorsement by the IEEE of these products. Equivalent products may be used if they can be shown to lead to the same results.

⁶See Footnote 5.

1.4 IP-XACT Enabled implementations

Complying with the rules outlined in this subclause allows the provider of tools, IP, or generators to class their products as *IP-XACT Enabled*. Conversely, any violation of these rules removes that naming right. This subclause first introduces the set of metrics for measuring the valid use of the specifications. It then specifies when those validity checks are performed by the various classes of products and providers: DEs, point tools, IPs, and generators.

- a) Parse validity
 - 1) Parsing correctness: Ability to read all IP-XACT descriptions.
 - Parsing completeness: Cannot require information that could be expressed in an IP-XACT format to be specified in a non-IP-XACT format. Processing of all information present in an IP-XACT document is not required.
- b) Description validity
 - 1) Schema correctness: IP is described using XML files that conform to the IP-XACT schema.
 - 2) Usage completeness: Extensions to the IP-XACT schema shall only be used to express information that cannot otherwise be described in IP-XACT.
- c) Semantic validity
 - 1) Semantic correctness: Adheres to the semantic interpretations of IP-XACT data described in this standard.
 - 2) Semantic completeness: Obeys all the semantic consistency rules (SCRs) described in Annex B.

These validity rules can be combined with the product class specific rules to cover the full IP-XACT enabled space. The following subclauses describe the rules a provider has to check to claim a product is IP-XACT Enabled.

An IP-XACT Enabled DE or point tool may read descriptions based on multiple versions of the IP-XACT schema. If the DE or point tool does provide this capability, the effect shall be as if all of the descriptions had been translated by the XSL Transform (XSLT) version 1.0,⁷ which is provided with the IP-XACT release to convert descriptions from one version to the next. In addition, a DE or point tool may preserve information in the initial description for use outside of the scope of the IP-XACT specification.

1.4.1 Design environments

An IP-XACT Enabled DE:

- a) Shall follow the parse validity requirements shown in 1.4.
- b) Shall only create IP that is IP-XACT Enabled.
- c) When modifying any existing IP-XACT descriptions, shall do so without losing any preexisting information. In particular, it shall preserve any vendor extension data included in the existing IP-XACT description.
- d) Shall support the IP-XACT generator interfaces fully for interaction with underlying database.
- e) Shall be able to invoke all IP-XACT Enabled generators.

XPATH version 1.0⁸ support is required for DE-compliance.

⁷Available from the W3C Web site at http://www.w3.org/TR/1999/REC-xslt-19991116.

⁸Available from the W3C Web site at http://www.w3.org/TR/1999/REC-xpath-19991116.

1.4.2 Point tools

A point tool is a tool that has a particular rather than a general set of capabilities. In contrast to IP-XACT Enabled DE (see <u>1.4.1</u>), an IP-XACT Enabled point tool:

- a) Shall follow the parse validity requirements shown in <u>1.4</u>.
- b) Shall only create IP that is IP-XACT Enabled.
- c) When modifying any existing IP-XACT descriptions, shall do so without losing any preexisting information. In particular, it shall preserve any vendor extension data included in the existing IP-XACT description.

1.4.3 IPs

An IP-XACT Enabled IP:

- a) Shall have an IP-XACT description that follows the description and semantic validity requirements shown in 1.4.
- b) Shall only use IP-XACT Enabled generators for any generators associated with this IP.

XML descriptions compliant to IP-XACT shall provide a namespace reference to the index.xsd schema file, not to any of the other files in the release.

1.4.4 Generators

An IP-XACT Enabled generator:

- a) Shall only create IP that is IP-XACT Enabled.
- b) When modifying any existing IP-XACT descriptions, shall do so without losing any preexisting information. In particular, it shall preserve any vendor extension data included in the existing IP-XACT description.
- c) Shall be callable though the IP-XACT TGI (see Annex G).
- d) Shall only communicate with the DE that invoked it through the IP-XACT TGI (see Annex G).

1.5 Conventions used

The conventions used throughout the document are included here.

IP-XACT is case-sensitive.

1.5.1 Visual cues (meta-syntax)

Bold shows required keywords and/or special characters, e.g., **addressSpace**. For the initial definitional use (per element), keywords are shown in **boldface-red text**, e.g, **bitsInLau** (see also: <u>1.6</u>).

Bold italics shows group names or data types, e.g., *nameGroup* or *boolean*. For definitions of types, see $\underline{\text{Annex } D}$.

Courier shows examples, external command names, directories and files, etc., e.g., address 0×0 is on D[31:0].

1.5.2 Notational conventions

The keywords required, shall, shall not, should, should not, recommended, may, and optional in this document are to be interpreted as described in the IETF Best Practices Document 14, RFC-2119 [B5]. 9

1.5.3 Syntax examples

Any syntax examples shown in this standard are for information only and are only intended to illustrate the use of such syntax.

1.5.4 Graphics used to document the schema

The W3C Web site¹⁰ specifies the XML schema language used to define the IP-XACT XML schemas. Normative details for compliance to the IP-XACT standard are contained in the schema files. Within this document, pictorial representations of the information in the schema files *illustrate* the structure of the schema and *define* any constraints of the standard. With the exception of scope and visibility issues, the information in the figures and the schema files is intended to be identical. Where the figures and schema are in conflict, the XML schema file shall take precedence.¹¹

1.5.4.1 Elements and attributes

The *element* is the fundamental building block on which this standard is based. An element may be either a *leaf element*, which is a container for information, or a *branch element*, which may contain further branch elements or leaf elements.

A leaf or branch element may also contain *attributes*. Attributes are containers for information within the containing element.

1.5.4.2 Types

A *type* is a designation of the format for the contents of an element or attribute. There are two different styles of types that can be defined. A type may be assigned to a leaf element or an attribute. This type is called a *simpleType* and defines the format of data that may be stored in this container. A type may also be assigned to a branch element. This type is called a *complexType* and defines further elements and attributes contained in the branch element.

1.5.4.3 Groups

A group is a collection of elements or attributes, which allow the same collection of items to be referenced consistently in many places. There are two different types of groups that can be defined. A *group* is a combination of leaf or branch elements; an *attributeGroup*, a simple list of attributes. The names assigned to either group have no representation in the resulting description.

1.5.4.4 Namespace

Each element, attribute, type, or group has a name, which is preceded by a namespace and separated from the name by a colon (:). For the examples in 1.5.4.5, xyz is used as the namespace for all of the items

⁹The number in brackets correspond to those of the bibliography in Annex A.

 $^{^{10}} Available from the W3C Web site at \ http://www.w3.org/TR/2004/REC-xmlschema-1-20041028/.$

¹¹The graphics for this document have been generated by taking "screen-shots" of the various files as they are displayed in Altova's XML environment XMLSpy[®]. XMLSpy is a registered trademark of Altova GmbH. This information is given for the convenience of users of this standard and does not constitute an endorsement by the IEEE of this product. Equivalent products may be used if they can be shown to lead to the same results.

whereas the standard uses **spirit**. Within the text of this standard, the namespace is not written when describing an item; it is only shown in examples.

1.5.4.5 Diagrams

The diagrams used throughout this standard graphically detail the organization the elements and attributes.

1.5.4.5.1 Elements and sequences

Figure 3 shows the sequence-compositor. At the left is a branch element, element1, with some descriptive text below. element1 is connected to a sequence-compositor. The sequence-compositor defines the order the subelements appear in the branch element. subElement1 shall appear first inside of element1. This is followed by subElement2, subElement3, subElement4, and subElement5 before closing element1.

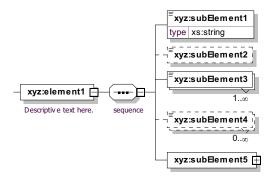


Figure 3—Sequence-compositor

- a) **subElement1** is a mandatory element, as indicated by the solid line of the containing box. The type of the data contained in this element is set to **string** and it has a default value of ip-xact if the element is present, but left empty.
- b) **subElement2** is an optional element, as indicated by the dashed-line of the containing box.
- c) subElement3 is an mandatory element that may appear multiple times, indicated by the double-solid line of the containing box. The number of times the element may appear is indicated by the range of the numbers listed below the element.
- d) **subElement4** is an optional element that may appear multiple times, as indicated by the double-dashed line of the containing box. The number of times the element may appear is indicated by the range of the numbers listed below the element.
- e) **subElement5** is an mandatory branch element that contains further elements inside, as indicated by the small plus sign (+) in the small box on the right.

<u>Figure 4</u> shows variations of a sequence-compositor. **root1** is connected to an optional sequence-compositor, as indicated by the symbol being drawn with a dashed line. **element1** may appear first inside of **root1**; if it does, it shall be followed by **element2**. Each subelement is connected to a sequence-compositor.

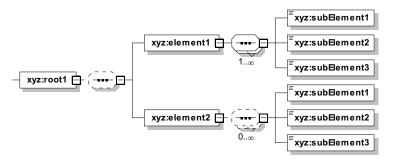


Figure 4—Sequence-compositor variations

- element1 may contain one or more of the following sequences in the following order: subElement1 and subElement2 and subElement3. The number of times the sequence-compositor may appear is indicated by the range of the numbers listed below the symbol. If the range is greater than 1, the sequence-compositor symbol is drawn with double lines.
- element2 is optional and may contain one or more of the following sequences in the following order: subElement1 and subElement2 and subElement3. The number of times the sequence-compositor may appear is indicated by the range of the numbers listed below the symbol. If the range starts at 0 and the maximum is greater then 1, the sequence-compositor symbol is drawn with double-dashed lines.

1.5.4.5.2 Elements and choices

<u>Figure 5</u> shows the variations of the choice-compositor. **root** is connected to a choice-compositor. The choice-compositor specifies that one of the elements on the right side shall be chosen. **root** may contain one of the following: **element1**, **element2**, or **element3**. Each subelement is connected to a choice-compositor.

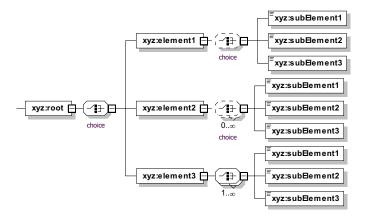


Figure 5—Choice-compositor variations

- a) **element1** may contain one of the following: **subElement1**, **subElement2**, or **subElement3**, as indicated by the symbol being drawn with a dashed line.
- b) **element2** may contain any (0 or more) of the following: **subElement1**, **subElement2**, or **subElement3** in any order. The number of times the choice-compositor may appear is indicated by

- the range of the numbers listed below the symbol. If the range starts at 0, the choice-compositor is drawn with dashed lines.
- c) **element3** may contain one or more of the following: **subElement1**, **subElement2**, or **subElement3** in any order. The number of times the choice-compositor may appear is indicated by the range of the numbers listed below the symbol. If the range is greater than 1, the choice-compositor is drawn with double lines.

1.5.4.5.3 Elements, attributes, groups, and attributeGroups

Figure 6 shows the use of attributes, groups, and attributeGroups. **element1** contains two attributes, shown in the tab shaped box labeled *attributes*. **attribute1** is optional, as indicated by the dashed containing box. **attribute1** also has a type defined of *integer* and a default value of 7 if the attribute is not present. **attribute2** is a required attribute, as indicated by the solid containing box, and is of type **boolean** with no default. The ordering in which **attribute1** and **attribute2** appear inside **element1** is irrelevant.

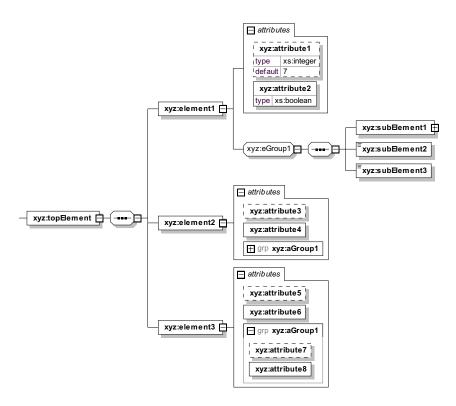


Figure 6—Attributes, groups, and attributeGroups

- a) **eGroup1** is an element group inside **element1**. This group contains three subelements and the group symbol can be replaced by a solid line. The name of the group has no representation in the resulting output description. An element group can be optional, as indicated by a dashed outline (not shown) and it can also have a range, as indicated by numbers below the group symbol (not shown).
- b) aGroup1 is an attributeGroup inside element2 and element3. This attributeGroup contains two attributes, attribute7 and attribute8. Inside element2, the attributeGroup is shown in its collapsed form, as indicated by the small plus sign (+) inside the small box. Inside element3 the attributeGroup is shown in it expanded form, as indicated by the small minus sign (-) inside the small box. element2 contains four attributes: attribute3, attribute4, attribute7, and attribute8. element3 also contains four attributes: attribute5, attribute6, attribute7, and attribute8. The name of the attributeGroup has no representation in the resulting description.

1.5.4.5.4 Wildcards

<u>Figure 7</u> shows the use of wildcards. A *wildcard* is depicted by the rounded box with the **any** ##any text. Wildcards indicate that any well-formed attribute or element may be inserted into the containing element.

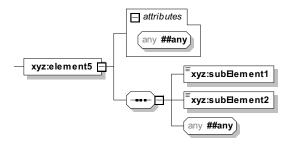


Figure 7—Wildcards

1.6 Use of color in this standard

This standard uses a minimal amount of color to enhance readability. The coloring is not essential and does not affect the accuracy of this standard when viewed in pure black and white. The places where color is used are the following:

- Cross references that are hyperlinked to other portions of this standard are shown in <u>underlined-blue</u> text (hyperlinking works when this standard is viewed interactively as a PDF file).
- Syntactic keywords and tokens in the formal language definitions are shown in boldface-red text.

1.7 Contents of this standard

The organization of the remainder of this standard is as follows:

- <u>Clause 2</u> provides references to other applicable standards that are assumed or required for this standard.
- <u>Clause 3</u> defines terms, acronyms, and abbreviations used throughout the different specifications contained in this standard.
- <u>Clause 4</u> defines the interoperability use model.
- Clause 5 defines the bus and abstraction definitions.
- <u>Clause 6</u> defines the component and interconnect models.
- <u>Clause 7</u> defines the designs and their connections.
- <u>Clause 8</u> defines the abstractor model between abstraction definitions.
- <u>Clause 9</u> defines the generator chain.
- <u>Clause 10</u> defines the design and generator chain configuration.
- Clause 11 defines addressing and data visibility.
- Annexes. Following <u>Clause 11</u> are a series of annexes.

2. Normative references

The following referenced documents are indispensable for the application of this document (i.e., they must be understood and used, so each referenced document is cited in text and its relationship to this document is explained). For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments or corrigenda) applies.

Simple Object Access Protocol (SOAP) version 1.2 specification, available from the W3C Web site at http://www.w3.org/TR/2007/REC-soap12-part1-20070427/.

Web Services Description Language (WSDL) version 1.1 specification, available from the W3C Web site at http://www.w3.org/TR/wsdl.

XML schema specification, available from the W3C Web site at http://www.w3.org/TR/2004/REC-xmlschema-0-20041028; http://www.w3.org/TR/2004/REC-xmlschema-1-20041028; http://www.w3.org/TR/2004/PER-xmlschema-2-20040318.

XML version 1.0 specification, available from the W3C Web site at http://www.w3.org/TR/2000/REC-xml-20001006.

XPATH version 1.0 specification, available from the W3C Web site at http://www.w3.org/TR/1999/REC-xpath-19991116.

XSLT version 1.0 specification, available from the W3C Web site at http://www.w3.org/TR/1999/REC-xslt-19991116.



3. Definitions, acronyms, and abbreviations

For the purposes of this document, the following terms and definitions apply. The IEEE Standards Dictionary: Glossary of Terms & Definitions should be referenced for terms not defined in this clause. 12

3.1 Definitions

abstraction definition: An object that describes a representation of bus interface, including details of the **ports** this type of **bus interface** may have and the **constraints** that apply to these **ports**.

abstractor: A top level IP-XACT element used to convert between two bus interfaces having different abstraction types and sharing the same bus type.

active interface: An interface that participates in the transactions.

ad hoc connection: Directly connects two ports without the use of bus interfaces or interconnections. Wire ad hoc connections have a wire protocol and transactional connections have a transactional connection.

application programmers interface (API): A method for accessing design and meta-data in a procedural way.

architectural rules: Generic rules that define how subsystems relate to platforms that relate to components of system design.

bridge: A mechanism to model the internal relationship between master interfaces and slave interfaces inside a component. Bridges explicitly describe the internal point-to-point connections between the component interfaces. A bridge can have multiple address spaces, supports memory mapping and remapping, and can only have direct interfaces. Syn: bus bridge.

bus: A collection of ports used to connect blocks connected to it involving both hardware and software protocols. Within IP-XACT, buses are components.

bus definition: An object that describes the type properties for a bus, such as the maximum masters allowed or if one bus expands upon the definition of another.

bus interface: The interface of an IP to a bus. Components are connected together by linking the bus interfaces together. There are three different classes of bus interfaces: master, slave, and system with two flavors: direct and mirrored.

channel: A special object that can be used to describe multi-point connections between regular components, which may require some interface adaptation. A channel connects component master, slave, and system interfaces on the same bus. A channel can also represent a simple wiring interconnection or a more complex structure, such as a bus. A channel can only have one address space. Channel interfaces are always mirrored interfaces. A channel supports memory mapping and remapping.

component: The central place holder for object meta-data and its bus and generator interfaces. Components are used to describe cores, peripherals, and buses. Components may reference designs to create hierarchy. Syn: component description.

configurable element: An element in an IP-XACT description that can be set to a new value by a user, generator, or dependency equation. This includes all elements with a resolve attribute.

¹²The IEEE Standards Dictionary: Glossary of Terms & Definitions is available at http://shop.ieee.org/.

configurable IP: **IP** that contains **configurable elements** and an IP-specific generator capable of creating new components from the configured component and updating the design with the new version of the **component**. *Syn*: **configurable component**.

configuration manager: An object that creates and manages top-level meta-description of **system on chip** (SoC) design. It can annotate SoC schema with details of a specific SoC design including: IP versions, IP views, IP configuration, IP connectivity, and IP constraints. It manages the launching of **IP generators** and **tool plug-ins**, and any meta-data updates occurring as a consequence of a launch. It also handles the updating and retrieval of relevant **IP meta-data** from the IP repository.

connection: Generally describes a communication mechanism between one or more components.

constraint: Defines a limitation on a part of the system that needs to be satisfied for the system to be correct. Timing constraints are often specified on ports, requiring that during a given clock cycle the value of the port becomes stable in a certain time period and remains stable for a certain time period relative to a particular clock edge.

constraint set: Constraints defined in groups to associate different constraints with different views of the component.

design: An IP-XACT description of a **system** or **subsystem** listing its **components**, the **connections** between these components, and the **interfaces** exported by the system or subsystem.

design configuration: This description contains non-essential ancillary information for generators, the active or current view selected for instances in the design, and configurable information defined in vendor extensions. It references a design description and can specify a **view** for the **component** instances and **abstractors** for each **interconnection**, and configure generator **chains**. *Syn*: **configuration**.

design database: Working storage for both **meta-data** and **component** information that helps create and verify **systems** and **subsystems**.

design environment (**DE**): The coordination of a set of tools and **IP**, or expressions of that IP (e.g., models) so the system-design and implementation flows of a SoC reuse-centric development flow is efficiently enabled. This is managed by creating and maintaining a meta-data description of the **SoC**.

endianness: **big endian** is the most significant byte at the lowest memory address and **little endian** is the least significant byte at the lowest memory address.

electronic design intellectual property (IP): Used in the electronic design community to refer to a reusable collection of design specifications that represent the behavior, properties, and/or representation of the design in various media. The name IP is partially derived from the common practice of considering a collection of this type to be the intellectual property of one party. Both hardware and software collections are encompassed by this term. IP utilized in the context of a SoC design or design flow may include specifications; design models; design implementation descriptions; verification coordinators, stimulus generators, checkers and assertion/constraint descriptions; soft design objects (such as embedded software and real-time operating systems); design and verification flow information and scripts. IP-XACT distinguishes between fixed IP and configurable IP.

electronic system level (ESL): A high level of design modeling typically done with, but not limited to, SystemC or SystemVerilog design languages.

eXtensible Markup Language (XML): A simple, very flexible text format derived from SGML.

NOTE—See ISO/IEC 8879 [B12].13

external components: **Components** that do not end up on the **SoC**, but are needed for total system verification.

fixed IP: IP that has no elements that are configured by the DE or set by industry de facto tools.

generator: Combines component meta-data with architectural rules to provide a consistent system description that uses a specified tight generator interface (TGI) to generate specific design views or configurations for the purposes of supporting a number of design styles. The generator may add/remove/replace components, add/remove/replace interconnections, add/remove/replace project settings, and add/remove/replace persistent data.

generator API: This API provides a common interface for algorithmic code in a generator or tool plug-in to the SOAP interface of the TGI.

generator chain: A hierarchical list of generators used to define the order for executing **generators**. A design flow can be represented by a generator chain.

generator group: A symbolic name assigned to a generator to enable generator selection.

generator invocation: A method of running an application at a defined phase in the **generator group** with a given number of **elements**.

generator TGI: This SOAP messaging interface connects the generators and tool plug-ins to the design environment (DE), allowing the execution of these scripts and code-elements against the SoC meta-description. The DE enables the registration of new generators or plug-ins, exporting SoC meta-data and updating that data following generator or plug-in execution, and handling generator or plug-in error conditions that relate to the meta-data description.

hierarchical child bus interface: A bus interface IC of component CC is a hierarchical child of bus interface IP of component CP if and only if CP contains a hierarchical view, the design description of which contains a hierarchical connection with interface name IP, component ref CC, and interface ref IC. A hierarchical child bus interface may be a hierarchical bus interface itself.

hierarchical child component: A hierarchical child of a component C is any component referenced in a design of C.

hierarchical component: A **component** that has one or more **view**s that reference IP-XACT design descriptions.

hierarchical descendant bus interface: A bus interface DC is a hierarchical descendant of bus interface AC if and only if DC is a hierarchical child of AC or a hierarchical child of a hierarchical descendant of AC.

hierarchical descendent component: A hierarchical descendent of a component is any hierarchical child of that component or any hierarchical child of any hierarchical descendent of the component

hierarchical family of bus interfaces: A hierarchical family of bus interfaces is a set of bus interfaces composed of a hierarchical bus interface and all its hierarchical descendants.

17

¹³Notes in text, tables, and figures are given for information only and do not contain requirements needed to implement the standard.

hierarchical family of components: A hierarchical family of components is a component and all its hierarchical descendents.

initiative: An abstract description of port modes: requires, provides, both, or phantom. Used for transactional level modeling (TLM).

interconnection: Defines the point-to-point connection between two bus interfaces.

interface connection: Bus interfaces with **bus definition**s and **abstraction definition**s can be listed in the design as connected to another compatible interface on another component. The listing of the **interconnection** creates a **connection** to that **interface**.

IP generators: Tools that create specific **IP** based upon **SoC** meta-data details entered into the configuration manager. IP generators serve as interfaces to IP repository for placing and retrieval of IP and can annotate completion details (e.g., generated IP or failure of generation of IP) back into the configuration manager.

IP integrator: A party in the design process who receives configured IP and subsystems and combines them into a larger system.

IP platform architect: Creator of platform-based architectures.

IP provider: Creator and supplier of **IP**.

IP repository: Database of IP.

leaf component: Components that do not contain other IP-XACT descriptions.

legacy IP: IP that has no specific IP-XACT meta-data view.

master interface: The bus interface that initiates a transaction (like a read or write) on a bus.

memory map: A block of memory in a component (which may be accessible through a slave interface).

meta-data: A tool-interpretable way of describing the design history, locality, object association, configuration options, constraints against, and integration requirements of an **object**.

meta IP: Meta-data description of an object.

mirror interface: Has the same (or similar) ports to its related direct bus interface, but the port directions are reversed. So, a port that is an input on a direct bus interface would be an output in the matching mirror interface.

monitor interface: An interface used in verification that is neither a master, slave, nor system interface.

multi-layer buses: Buses that have to be modeled as component bridges with direct interfaces or as a hierarchical component.

objects: XML descriptions of the following types: **components**, **designs**, **busDefinitions**, **abstractionDefinitions**, **abstractors**, **designConfigurations**, and **generatorChains**. To be able to be uniquely referenced, each object has an unique identifier called its **Vendor Library Name Version** (VLNV).

opaque bridge: A bus interconnect component that may modify the address space of a master bus interface of one bus type to the memory map of a slave bus interface of another bus type and does not allow direct access to any components residing on that address space. An opaque bridge has the **opaque** attribute equal to **true**.

Open SystemC Initiative (OSCI): An independent non-profit organization composed of a broad range of companies, universities and individuals dedicated to supporting and advancing SystemC as an open source standard for system-level design.

NOTE—See Transaction-Level Model of SystemC [B13].

phantom port: An initiative of a port that indicates this port does not have a true connection to the implementation, e.g., the port does not appear on the VHDL entity.

phase number: Defines the sequence in which generators should be fired.

platform: Architectural (sub)system framework.

platform consumer: User/group that builds a SoC based on a particular platform.

platform provider: User/group that develops and delivers platforms to platform consumers.

platform rules: Rules that define how components interface to a specific platform.

port: Specifies interface items of a component. These interface items allow dynamic exchange of information. Connections between ports may be specified by using **ad hoc connections** or by including them in **bus interface**s connected together by **interconnections**.

schema: A means for defining the structure, content, and semantics of eXtensible Markup Language (XML) documents.

segment: A portion of an **addressSpace**, defined with an address offset and range.

semantic consistency rules (**SCR**s): Additional rules applied to an XML description that cannot be expressed in the **schema**. Typically, these are rules between elements in multiple XML descriptions.

slave interface: The **bus interface** that terminates or consumes a transaction initiated by a **master interface**. Slave interfaces often contain information about the registers accessible through the slave interface.

SoC platform: The top netlist containing all the instances and **connections** of the **design**.

style sheets: How documents are presented on screens and in print.

subsystem: A set of connected **components** that have dependencies on other **IP**.

system: A configured set of connected components.

system interface: An **interface** that is neither a **master** nor **slave interface**, and allows specialized (or non-standard) connections to a bus (e.g., clock).

system on chip (SoC): Also refers to a general system that may not be implemented on a chip, such as a **transaction-level modeling** (TLM) design.

tight generator interface (TGI): Used to manipulate values of elements and attributes for IP-XACT compliant XML.

tool plug-ins: Tools that integrate **IP**, based upon **SoC meta-data** details, and prep **IP** for animation (e.g., simulation or emulation), optimization (e.g., synthesis), and **verification** (e.g., regression-suite generation). They can also annotate completion details (e.g., integrated SoC IP or failure of integration) back into the **configuration manager**.

transactional port: A **port** that has a service name (which can specify the data type of the port) and a port initiative. Used for high-level modeling.

transaction-level modeling (TLM): An **abstraction level** higher than register transfer level (RTL), used for specifying, simulating, verifying, implementing, and evaluating **SoC designs**.

transparent bridge: A bus interconnect component that modifies the address space of a master bus interface of one bus type to the memory map of a slave bus interface of another bus type with directly addressable access to any components residing on that address space. A transparent bridge has the **opaque** attribute equal to **false**.

use model: A process method of working with a tool.

user interface: Methods of interacting between a tool and its user.

validation: Proving the correctness of construction of a set of components.

Vendor Library Name Version (VLNV): Each IP-XACT **object** is assigned a unique identifier that is defined in the header of each XML file.

verification: Proving the behavior of a set of connected **components**.

verification IP (VIP): Components included in a design for verification purposes.

view: An implementation of a component. A **component** may have multiple views, each with its own function in the design flow.

white box interface (WBI): Internal points in the IP to be probed or driven by verification tools and/or test benches.

wire connections: Connections that connect wire ports.

wire port: A port that describes binary values or an array of binary values. Wire ports can have a direction: in, out, or inout.

XPATH: An expression language used by **XSLT** to access or refer to parts of an XML document.

XSLT: XSL Transform is a particular program written in the XSL language for performing a transformation (from one version to the next).

3.2 Acronyms and abbreviations

AHB AMBA® high-speed bus 14

APB AMBA peripheral bus

API application programmers interface

AXI Advanced eXtensible Interface

DE design environment

EDA electronic design automation

ESL electronic system level

HDL hardware description language

IP electronic design intellectual property

LAU least addressable unit (of memory)

OSCI Open SystemC Initiative

PV programmer's view

PVT programmer's view with timing

RAM random access memory

ROM read only memory

RTL register transfer level (design)

SCR semantic consistency rule

SoC system on chip

TGI tight generator interface

TLI task level interface

TLM transaction-level modeling

VIP verification IP

VLNV Vendor Library Name Version

WBI white box interface

XSLT XSL Transform

XML eXtensible Markup Language

3MD three levels of meta-data

 $^{^{14}}$ AMBA is an open specification on-chip backbone for interconnecting **intellectual property** (IP) blocks. AMBA is a registered trademark of ARM Limited. This information is given for the convenience of users of this standard and does not constitute an endorsement by the IEEE of this product. Equivalent products may be used if they can be shown to lead to the same results.



4. Interoperability use model

To introduce the use model for the IP-XACT specifications, it is first necessary to identify specific roles and responsibilities within the model, and then relate these to how the IP-XACT specifications impact their interactions. All or some of the roles can be mixed within a single organization, e.g., some electronic design automation (EDA) providers are also providing IP, a component IP provider can also be a platform provider, and an IP system design provider may also be a consumer.

4.1 Roles and responsibilities

For this standard, the roles and responsibilities are restricted to the scope of IP-XACT v1.5 HDL and TLM system design.

4.1.1 Component IP provider

This is a person, group, or company creating IP components or subsystems for integration into a SoC design. These IPs can be hardware components (processors, memories, buses, etc.), verification components, and/or hardware-dependent software elements. They may be provided as source files or in a compiled form (i.e., simulation model). An IP is usually provided with a functional description, a timing description, some implementation or verification constraints, and some parameters to characterize (or configure) the IP. All these types of characterization data may be described as meta-data compliant with the IP-XACT schema. Those elements not already provided in the base schema can be provided using namespace extensibility mechanisms of the specification.

The IP provider can use one or more EDA tools to create/refine/debug IP. During this process, the IP provider may export and re-import his design from one environment to another. The IP-XACT IP descriptions need to enable this exchange for component IP.

At some point, this IP can be transferred to customers, partners, and external EDA tool suppliers by using IP-XACT compliant XML. IP can be characterized into the following different types.

- Fixed IP is IP that is straightforward to describe and exchange as there are no configurable parameters. No generators need to be provided.
- Parameterized IP are those IP blocks that do not need IP specific generators, but have standard customizations (where standard is defined as industry de facto tool support), i.e., no generators need be provided for SoC design tools that support these parameterizations. An example of a parameterized IP is an AHB/APB bridge with configurable bus widths, done with VHDL generics or Verilog parameters.
- Configurable IP is IP created or modified as a direct result of running an IP-specific generator to build the IP to the user's specified configuration. This IP usually requires generators to be provided with it. An example of a configurable IP is an AHB bus fabric component that has a selectable number of masters and slaves, and automatic generation of decode functionality.

4.1.2 SoC design IP provider

This is a person, group, or company that integrates and validates IP provided by one or more IP providers to build system platforms, which are complete and validated systems or subsystems. Like the IP provider, the platform provider can use EDA tools to create/refine/debug its platform, but at some point the IP needs to be exchanged with others (customers, partners, other EDA tools, etc.). To do so, the platform IP has to be expressed in the IP-XACT specified format as a hierarchical component.

4.1.3 SoC design IP consumer

This is a person, group, or company that configures and generates system applications based on platforms supplied by SoC design IP providers. These platforms are complete system designs or subsystems. Like the platform provider, the platform consumer can use EDA tools to create/refine/debug its system application and/or configure the design architecture. To do so, the EDA tool needs to support any platform IP expressed in the IP-XACT specified format.

4.1.4 Design tool supplier

This is a group or company that provides tools to verify and/or implement an IP or platform IP. There are three major tools (which could be combined) provided in a system flow:

- Platform builder (or system design environment) tools: these help to assemble a platform with some automation (e.g., automatic generation of interconnect).
- Verification point tools: these handle functional and timing simulation, verification, analysis, debugging, co-simulation, co-verification, and acceleration.
- Implementation point tools: these handle synthesizing, floor-planing, place, and routing, etc.

The EDA provider needs to be able to import IP-XACT component or system IP libraries from multiple sources and export them in the same format.

Further, IP-XACT EDA tools need to recognize, associate, and launch generators that may be provided by a Generator or IP provider in support of configurable IP bundles. The imported IP might need to be created and/or modified by the tool and then exported back (e.g., to be exchanged with other EDA vendor tools) to satisfy the customer design flow.

To further support any generators supplied with IP bundles, the IP-XACT DE tools need to be able to recognize and interface with generator-wrapped point tools. These may be provided by another EDA provider or by the IP designer/consumer as part of a company's internal design and verification flow. In general, these support specialized design-automation features, such as architectural-rule checking.

4.2 IP-XACT IP exchange flows

This subclause describes a typical IP exchange flow that the IP-XACT specifications technically support between the roles defined in 4.1. By way of example, the following specific exchange flow can benefit from use of the IP-XACT specification:

The Component IP provider generates an IP-XACT XML package and sends it to a SoC design tool (EDA tool supplier) or directly to a Platform (i.e., SoC design IP) provider. The EDA tool supplier imports IP-XACT XML IP and generates platform IP and/or updates (configures) the IP components. The Platform provider generates a configurable platform IP and exports it in IP-XACT XML format, which the end user imports to build system applications. The platform provider can also generate its own platform IP into IP-XACT format and send it to the EDA provider.

Although many different possible IP exchange flows exist, from the user's viewpoint, there are three main use models, as follows:

- IP (component or SoC design) provider use model
- Generator (IP provider and design tool provider) use model
- SoC design tool provider use model

4.2.1 Component or SoC design IP provider use model

The IP provider (a hardware component IP designer or platform IP architect) can use IP-XACT to package IP in a standard and reusable format. The first step consists in creating an IP-XACT XML package (XML plus any IP views) to export the IP database in a valid format. To express this IP as an IP-XACT IP, the IP provider needs to parse the entire design description tree (which is composed of files of different types: HDL source files, data sheets, interfaces, parameters, etc.) and package it into an IP-XACT XML format. This can be a manual step (by directly editing IP-XACT compliant XML) or an automated one (using scripts to generate schema-compliant IP-XACT XML).

Once the IP has been packaged in an IP-XACT format, the IP provider can use a SoC design tool to write/debug/simulate/implement the IP.

4.2.2 Generator provider use model

The author of a generator expects to interact with the SoC design tool through a fixed interface during well defined times in the design life cycle: when components are instantiated or modified or when a generator chain is started.

Generators are used within the SoC design tool to extend its capabilities: wrapping a point tool, e.g. a simulator; wiring up IP within the design; or checking the design is correct or maybe modifying the design. Many of these features may be supplied by the IP author and handled by generators embedded in the IP itself.

Consequently, there are at least two groups of generator providers: the IP vendor who supplies generators that are written specifically to support their IP, and generic generator authors who wish to extend the features available within the SoC design tool. This latter group will be mainly SoC design tool vendors at first, but will also come to include third-party generator vendors.

4.2.3 System design tool provider use model

The system design tool takes IP-XACT components and designs as input, configures them, and loads them into its own database format. Then it can automate some tasks, such as creating the platform, generating the component interconnect and bus fabric, and generating or updating the IP-XACT IP as an output (by providing new or updated XML with the attached information: new source files, parameters, documentation, etc.).

Customer design flows are usually composed of a chain of different tools from the same or different EDA vendors (e.g., when an EDA provider is not providing the entire tool chain to cover all the user flow or the customer is selecting the best-in-class point tools). To address this requirement, the EDA vendor providing an IP-XACT enabled tool needs to read and produce the IP-XACT specified format, and utilize and implement the interfaces defined by IP-XACT documents. In this use model, each SoC design tool uses its own generators (possibly utilizing the IP-XACT TGI) to build and update its internal meta-data state and export to an IP-XACT format. Then the IP-XACT description can be imported by another IP-XACT enabled EDA tool.



5. Interface definition descriptions

5.1 Definition descriptions

In IP-XACT, a group of ports that together perform a function are described by a set of elements and attributes split across two descriptions, a bus definition and an abstraction definition. These two descriptions are referenced by components or abstractors in their bus or abstractor interfaces.


The bus definition description contains the high-level attributes of the interface, including items such as the connection method and indication of addressing.

The *abstraction definition* contains the low-level attributes of the interface, including items such as the name, direction, and width of the ports. This is a list of logical ports that may appear on a bus interface for that bus type. See <u>6.5</u>.

5.2 Bus definition

5.2.1 Schema

The following schema details the information contained in the **busDefinition** element, which is one of the seven top-level elements in the IP-XACT specification used to describe the high-level aspects of a bus.

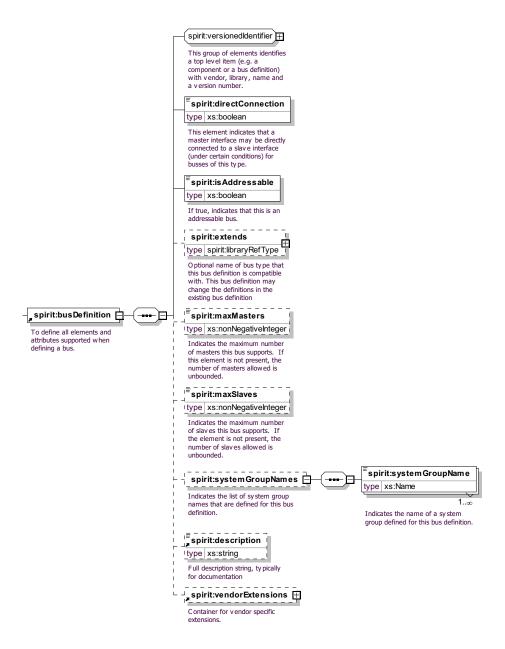

5.2.2 Description

The top-level **busDefinition** element describes the high-level aspects of a bus or interconnect. It contains the following elements and attributes.

- a) The *versionedIdentifier* group provides a unique identifier; it consists of four subelements for a top-level IP-XACT element. See <u>C.6</u>
- b) directConnection (mandatory) specifies what connections are allowed. The directConnection element is of type boolean. A value of true specifies these interfaces may be connected in a direct master to slave fashion. A value of false indicates only non-mirror to mirror type connections are allowed (i.e., master-mirroredMaster, slave-mirroredSlave, or system-mirroredSystem).
- c) **isAddressable** (mandatory) specifies the bus has addressing information. The **isAddressable** element is of type *boolean* (see <u>6.3</u>). A value of **true** specifies these interfaces contain addressing

- information and a memory map can be traced through this interface. A value of **false** indicates these interfaces do not contain any traceable addressing information.
- d) **extends** (optional) specifies if this definition is an extension from another bus definition. The **extends** element is of type *libraryRefType* (see <u>C.7</u>), it contains four attributes to specify a unique VLNV. See also: <u>5.12</u>.
- e) **maxMasters** specifies the maximum number of masters that are allowed on the bus. If the **maxMasters** element is not present, the numbers of masters is unbounded. The **maxMasters** elements is of type *nonNegativeInteger*.
- f) maxSlaves specifies the maximum number of slaves that are allowed to appear on the bus. If the maxSlaves element is not present, the numbers of slaves is unbounded. The maxSlaves elements is of type nonNegativeInteger.
- g) **systemGroupNames** (optional) defines an unbounded list of **systemGroupName** elements, which in turn define the possible group names to be used under an **onSystem** element in an abstraction definition. The definition of the group names in the bus definition allows multiple abstraction definitions to indicate which system interfaces match each other. The **systemGroupName** shall be unique with the containing **systemGroupNames** element. The **systemGroupName** element is of type **Name**.
- h) **description** (optional) allows a textual description of the interface. The type of this element is *string*.
- i) **vendorExtensions** (optional) contains any extra vendor-specific data related to the interface. See C.10.

See also: <u>SCR 1.3</u>, <u>SCR 1.9</u>, <u>SCR 1.11</u>, and <u>SCR 6.17</u>.

5.2.3 Example


This is an example of an AHB **busDefinition**.

```
<?xml version="1.0" encoding="UTF-8" ?>
<spirit:busDefinition</pre>
xmlns:spirit= http://www.spiritconsortium.org/XMLSchema/SPIRIT/1.5
xmlns:xsi=http://www.w3.org/2001/XMLSchema-instance
xsi:schemaLocation="http://www.spiritconsortium.org/XMLSchema/SPIRIT/1.5
http://www.spiritconsortium.org/XMLSchema/SPIRIT/1.5/index.xsd">
   <spirit:vendor>amba.com</spirit:vendor>
   <spirit:library>AMBA</spirit:library>
   <spirit:name>AHB</spirit:name>
   <spirit:version>v1.0</spirit:version>
   <spirit:directConnection>false</spirit:directConnection>
   <spirit:isAddressable>true</spirit:isAddressable>
   <spirit:extends spirit:vendor="amba.com"</pre>
      spirit:library="AMBA"
      spirit:name="AHBlite"
       spirit:name="v1.0" />
   <spirit:maxMasters>16</spirit:maxMasters>
   <spirit:maxSlaves>16</spirit:maxSlaves>
   <spirit:systemGroupNames>
       <spirit:systemGroupName>ahb clk</spirit:systemGroupName>
       <spirit:systemGroupName>ahb reset</spirit:systemGroupName>
   </spirit:systemGroupNames>
</spirit:busDefinition>
```

5.3 Abstraction definition

5.3.1 Schema

The following schema details the information contained in the **abstractionDefinition** element, which is one of the seven top-level elements in the IP-XACT specification used to describe the low-level aspects of a bus.

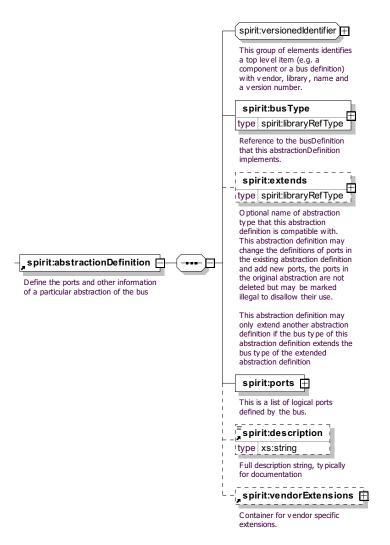

5.3.2 Description

The **abstractionDefinition** element describes the low-level aspects of a bus or interconnect. It contains the following elements and attributes.

- a) The *versionedIdentifier* group provides a unique identifier; it consists of four subelements for a top-level IP-XACT element. See <u>C.6</u>.
- b) **busType** (mandatory) specifies the bus definition that this abstraction defines. The **busType** element is of type *libraryRefType* (see <u>C.7</u>); it contains four attributes to specify a unique VLNV. See also: 5.12.
- extends (optional) specifies if this definition is an extension from another abstraction definition. The extends element is of type *libraryRefType* (see <u>C.7</u>), it contains four attributes to specify a unique

VLNV. The extending abstraction definition may change the definition of logical ports, add new ports, or mark existing logical ports illegal (to disallow their use). See also: <u>5.12</u>.

- d) ports (mandatory) is a list of logical ports, see <u>5.4</u>.
- e) **description** (optional) allows a textual description of the interface. The type of this element is *string*.
- f) **vendorExtensions** (optional) contains any extra vendor-specific data related to the interface. See C.10.

The **abstractionDefinition** element contains a list of logical ports that define a representation of the bus type to which it refers. A port can be a wire port (see <u>5.7</u>) or a transactional port (see <u>5.10</u>). A *wire port* carries logic information or an array of logic information. A *transactional port* carries information that is represented on a higher level of abstraction.

See also: SCR 1.9, SCR 1.11, SCR 1.13, SCR 3.1, SCR 3.16, SCR 3.17, and SCR 6.11.

5.3.3 Example


The following example shows an abstraction definition for the interrupt bus in the Leon2 TLM example.

```
<spirit:vendor>spiritconsortium.org</spirit:vendor>
<spirit:library>Leon</spirit:library>
<spirit:name>INT PV</spirit:name>
<spirit:version>1.5</spirit:version>
<spirit:busType spirit:vendor="spiritconsortium.org"</pre>
spirit:library="Leon" spirit:name="Int" spirit:version="v1.0"/>
<spirit:ports>
   <spirit:port>
      <spirit:logicalName>INT TRANSACTION</spirit:logicalName>
      <spirit:wire>
          <spirit:onMaster>
             <spirit:presence>required</spirit:presence>
             <spirit:direction>out</spirit:direction>
          </spirit:onMaster>
          <spirit:onSlave>
             <spirit:presence>required</spirit:presence>
             <spirit:direction>in</spirit:direction>
          </spirit:onSlave>
      </spirit:wire>
   </spirit:port>
</spirit:ports>
```

5.4 Ports

5.4.1 Schema

The following schema details the information contained in the **ports** element, which appears as part of the **abstractionDefinition** element within an abstraction definition. This is different from the **ports** element that appears as part of the **model** element within components.

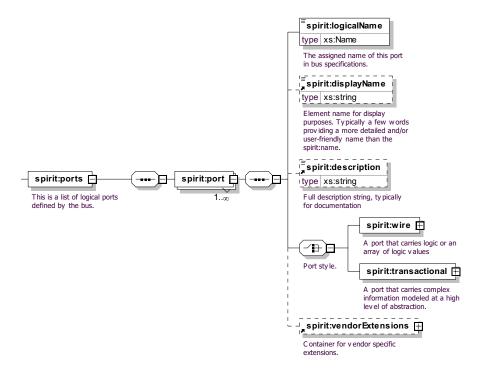

5.4.2 Description

The **ports** element is an unbounded list of **port** elements. Each **port** element defines the logical port information for the containing abstraction definition. It contains the following elements.

- a) logicalName (mandatory) gives a name to the logical port that can be used later in component description when the mapping is done from a logical abstraction definition port to the components physical port. The logicalName shall be unique within the abstractionDefinition. The type of this element is Name.
- b) **displayName** (optional) allows a short descriptive text to be associated with the port. The type of this element is *string*.
- c) description (optional) allows a textual description of the port. The type of this element is *string*.
- d) Each port also requires a wire element or a transactional element to further describe the details about this port. See <u>5.5</u> or <u>5.10</u>, respectively. A wire style port is a port that carries logic values or an array of logic values. A transactional style port is a port that carries any other type of information, typically used for TLM.
- e) vendorExtensions (optional) contains any extra vendor-specific data related to the port. See <u>C.10</u>.


5.4.3 Example

See 5.3.3 for an example.

5.5 Wire ports

5.5.1 Schema

The following schema details the information contained in the **wire** element, which may appear as part of the **port** element within an abstraction definition (**abstractionDefinition/ports/port**).

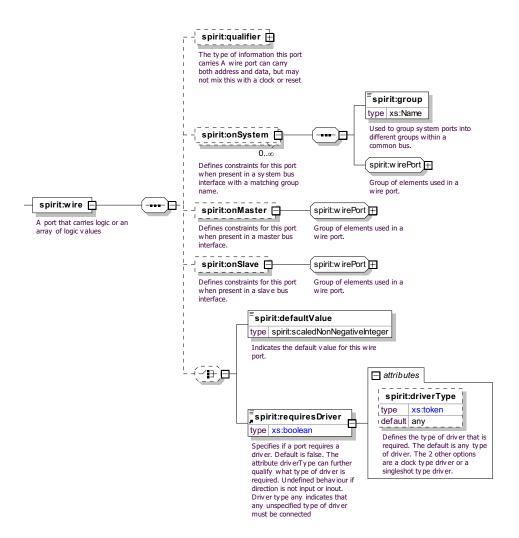

5.5.2 Description

A wire element represents a port that carries logic values or an array of logic values. This logical wire port may provide optional constraints for a wire port, to which it is mapped inside a component or abstractor's **busInterface**. It contains the following elements and attributes.

- a) qualifier (optional) indicates which type of information this wire port carries. See <u>5.6</u>.
- b) **onSystem** (optional) defines constraints, e.g., timing constraints, for this wire port if it is present in a system bus interface with a matching group name.
 - 1) The **group** (mandatory) attribute indicates the group name for the wire port. It distinguishes between different sets of system interfaces. Usually, all the arbiter ports are processed together, or all the clock or reset ports are processed together. So, this is really a mechanism to specify any sort of non-standard bus interface capabilities for the interconnect. The type of this element is *Name*.
 - 2) The group *wirePort* specifies what elements are used in this port. See 5.7.
- c) **onMaster** (optional) defines constraints for this wire port when present in a master bus interface. The group *wirePort* specifies what elements are used in this port. See <u>5.7</u>.
- d) **onSlave** (optional) defines constraints for this wire port when present in a slave bus interface. The group *wirePort* specifies what elements are used in this port. See <u>5.7</u>.

- e) Either of the following two elements are allowed, but not both.
 - defaultValue (optional) contains the default logic value for this wire port. This value is applied when the **busInterface** is connected, this logical port is not connected, and there is not an ad hoc connection to the corresponding physical port. The type of this element is *scaledNonNegativeInteger*.
 - 2) requires Driver (optional) specifies whether the port requires a driver when used in a completed design. The type of this element is boolean. If this element is not present, its effective value is false, indicating this port does not require a driver. When set to true, the attribute driver Type further qualifies what driver type is required: any (meaning any logic signal or value), clock (meaning a repeating type waveform), or singleshot (a non-repeating type waveform). If this element is not present, its effective value is any.

NOTE—The **onMaster**, **onSlave**, and **onSystem** elements associated with each logical port provide optional constraints. If any of these are missing, there are no constraints for how the port appears on interfaces with that mode (master, system, or slave). A port may appear in any system interface group unless its presence is marked as illegal for that group. The abstraction definition author has the choice of how far to constrain the definitions. Generally speaking, more constraints in the definitions reduce implementation flexibility for whoever is creating IP with interface that conforms to the abstraction definition.

See also: <u>SCR 6.12</u> and <u>SCR 6.15</u>.


5.5.3 Example

See 5.3.3 for an example.

5.6 Qualifiers

5.6.1 Schema

The following schema details the information contained in the **qualifier** element, which may appear as part of the **wire** element within an abstraction definition (**abstractionDefinition/ports/port/wire**).

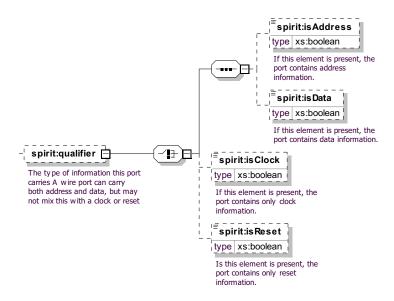

5.6.2 Description

The qualifier element indicates which type of information a wire port carries. It contains the following elements.

- a) **isAddress** (optional), when **true**, specifies the port contains address information. This **qualifier** may be paired with the **isData** element (e.g., used with serial protocols). The type of this element is **boolean**. See also: Clause 11.
- b) **isData** (optional), when **true**, specifies the port contains data information. This data resides in registers defined in the memory map referenced by the interface. The width defined by the port on each side of the two connected bus interfaces can be used to determine which portions of the data may be lost or gained (tied off to defaults) during transfers if the two widths do not match. This **qualifier** may be paired with the **isAddress** element (e.g., used with serial protocols). The type of this element is **boolean**. See also: Clause 11.
- c) **isClock** (optional), when **true**, specifies this port is a clock for this bus interface, i.e., it provides a repeating pattern that the interface uses to implement the protocol. No method of processing is implied with this tag. This tag shall only be applied to pure clock ports. This **qualifier** shall not be combined with other qualifiers. The type of this element is **boolean**.
- d) **isReset** (optional), when **true**, specifies this port is a reset for this bus interface., i.e., it provides the necessary input to put the interface into a known state. No method of processing is implied with this tag. This tag should only be applied to pure reset ports. This **qualifier** shall not be combined with other qualifiers. The type of this element is **boolean**.

See also: SCR 6.17, SCR 9.1, SCR 9.2, and SCR 12.8.

5.6.3 Example


```
<spirit:port>
   <spirit:logicalName>Clock</spirit:logicalName>
   <spirit:wire>
      <spirit:qualifier>
          <spirit:isClock>true</spirit:isClock>
      </spirit:qualifier>
      <spirit:onSystem>
          <spirit:group>clk</spirit:group>
          <spirit:width>1</spirit:width>
          <spirit:direction>out</spirit:direction>
      </spirit:onSystem>
      <spirit:onMaster>
          <spirit:direction>in</spirit:direction>
      </spirit:onMaster>
      <spirit:onSlave>
          <spirit:direction>in</spirit:direction>
      </spirit:onSlave>
   </spirit:wire>
</spirit:port>
<spirit:port>
   <spirit:logicalName>Resetn</spirit:logicalName>
   <spirit:wire>
      <spirit:qualifier>
          <spirit:isReset>true</spirit:isReset>
      </spirit:qualifier>
      <spirit:onSystem>
          <spirit:group>reset</spirit:group>
          <spirit:width>1</spirit:width>
          <spirit:direction>out</spirit:direction>
```

```
</spirit:onSystem>
      <spirit:onMaster>
          <spirit:direction>in</spirit:direction>
      </spirit:onMaster>
      <spirit:onSlave>
          <spirit:direction>in</spirit:direction>
      </spirit:onSlave>
   </spirit:wire>
</spirit:port>
<spirit:port>
   <spirit:logicalName>Address</spirit:logicalName>
   <spirit:wire>
      <spirit:qualifier>
          <spirit:isAddress>true</spirit:isAddress>
      </spirit:qualifier>
      <spirit:onMaster>
          <spirit:direction>out</spirit:direction>
      </spirit:onMaster>
      <spirit:onSlave>
          <spirit:direction>in</spirit:direction>
      </spirit:onSlave>
   </spirit:wire>
</spirit:port>
```

5.7 Wire port group

5.7.1 Schema

The following schema details the information contained in the *wirePort* group, which may appear as part of the **onSystem**, **onMaster**, or **onSlave** element within a **wire** element within an abstraction definition (abstractionDefinition/ports/port/wire/onmode).

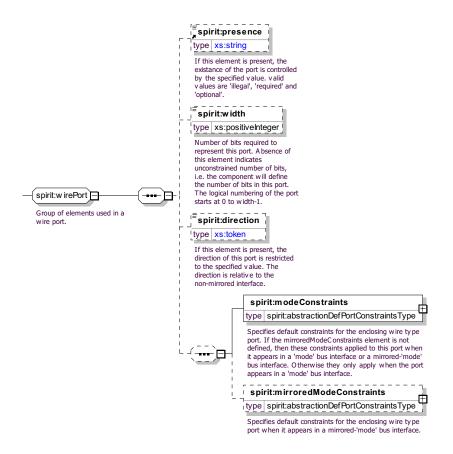

5.7.2 Description

The wirePort group specifies what elements are used in a wire port. It contains the following elements.

- a) presence (optional) provides the capability to require or forbid a port from appearing in a busInterface. The three possible values are illegal, required, or optional. If this element is not present, its effective value is optional.
- b) width (optional) represents the number of logical bits that are required to represent this port. When mapping to this logical port in a busInterface/portmap, the numbering shall start from 0 to width-1. If width is not specified, the component shall define the number of bits in this port, but the logical portmap numbering shall still start at 0. If necessary, logical bit 0 shall be the least significant bit. The width element is of type positveInteger.
- c) direction (optional) restricts the direction of the port relative to the non-mirrored interface (see <u>6.2</u>). The three possible values are in, out, or inout.
- d) Each wirePort group can also have a sequence of modeConstraints and mirroredModeConstraints specifying the default constraints of this interface during synthesis. The modeConstraints apply to this port if it appears in a non-mirrored mode bus interface (see 5.8). Any mirroredModeConstraints apply to this port if it appears in a mirrored-mode bus interface (see 5.9).

If mirroredModeConstraints are not specified, the modeConstraints also apply to this port in a mirrored-mode bus interface.

See also: <u>SCR 6.5</u>, <u>SCR 6.6</u>, <u>SCR 6.7</u>, and <u>SCR 6.18</u>.


5.7.3 Example

See 5.3.3 for an example.

5.8 Wire port mode constraints

5.8.1 Schema

The following schema defines the information contained in the **modeConstraints** element, which may appear within an **onMaster**, **onSlave**, or **onSystem** element within an abstraction definition (abstractionDefinition/ports/port/wire/onmode).

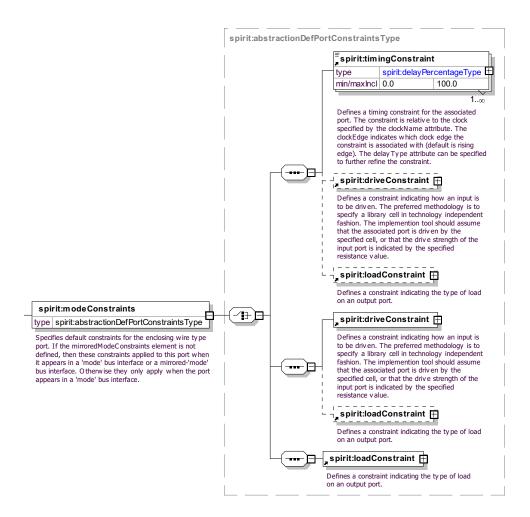

5.8.2 Description

The **modeConstraints** element defines any default implementation constraints associated with the containing wire port of the abstraction definition. It contains one or more of the following elements.

- a) **timingConstraint** (optional) element defines a technology-independent timing constraint associated with the containing wire port. See <u>6.11.13</u>.
- b) **driveConstraint** (optional) element defines a technology-independent drive constraint associated with the containing wire port. See <u>6.11.12</u>.

c) **loadConstraint** (optional) element defines a technology-independent load constraint associated with the containing wire port. See <u>6.11.11</u>.

The constraints contained within the **modeConstraints** element are only applied to the corresponding physical ports in a component when the physical port does not have any constraints defined within its own port element and there is no standard design constraint (SDC) file associated with the component. For example, if it appears inside an **onMaster** element, the constraints apply when the port appears in a master interface. If the **modeConstraints** element is immediately followed by a **mirroredModeConstraints** element (see <u>5.9</u>), the constraints defined in the **modeConstraints** element apply only when the port is used in a non-mirrored *mode* interface. Otherwise, the constraints apply when the port appears in a *mode* interface or a mirrored-*mode* interface.


5.8.3 Example

The following example shows a port within an abstraction definition, containing a single timing constraint. Since there is no **mirroredModeConstraint** element, this timing constraint applies when the HRDATA port appears in either a master interface or a mirrored-master interface. On a master interface the port gets 40% of the cycle time and on a mirrored master interface it gets 60% of the cycle time.

5.9 Wire port mirrored-mode constraints

5.9.1 Schema

The following schema defines the information contained in the **mirroredModeConstraints** element, which may appear within an **onMaster**, **onSlave**, or **onSystem** element within an abstraction definition (abstractionDefinition/ports/port/wire/onmode).

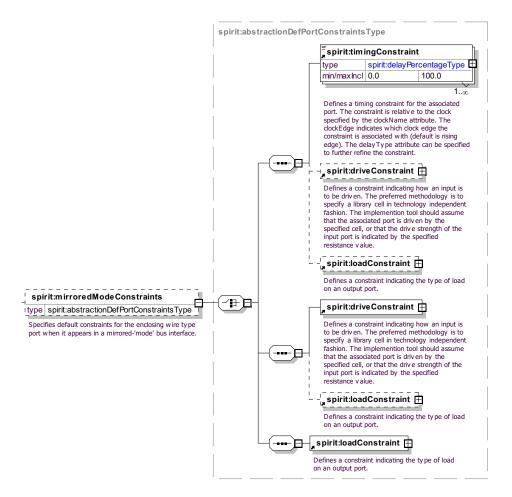

5.9.2 Description

The **mirroredModeConstraints** element also defines any default implementation constraints associated with the containing wire port of the abstraction definition. It contains one or more of the following elements.

- a) **timingConstraint** (optional) element defines a technology-independent timing constraint associated with the containing wire port. See <u>6.11.13</u>.
- b) **driveConstraint** (optional) element defines a technology-independent drive constraint associated with the containing wire port. See <u>6.11.12</u>.
- c) **loadConstraint** (optional) element defines a technology-independent load constraint associated with the containing wire port. See <u>6.11.11</u>.

The constraints contained within the **mirroredModeConstraints** element are only applied to the corresponding physical port in a component when the physical port does not have any constraints defined within its own port element and there is no SDC file associated with the component. For example, if it appears inside an **onMaster** element, the constraints only apply when the port appears in a mirrored-master interface.


5.9.3 Example

The following example shows a port within an abstraction definition, containing a single timing constraint. On a master interface the port gets 40% of the cycle time and on a mirrored master interface it gets 50% of the cycle time.

5.10 Transactional ports

5.10.1 Schema

The following schema defines the information contained in the **transactional** element, which may appear within a **port** within an abstraction definition (**abstractionDefinition/ports/port**).

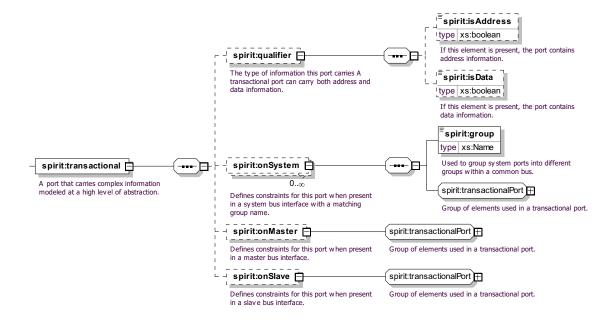

5.10.2 Description

The **transactional** element defines a logical transactional port of the abstraction definition. This logical transactional port may provide optional constraints for a transactional port, to which it is mapped inside a component or abstractor's **busInterface**. The **transactional** element also contains the following elements and attributes.

- a) The **qualifier** (optional) element indicates which type of information this transactional port carries. It contains either or both of the following elements.
 - 1) **isAddress** (optional) specifies the port contains address information.
 - 2) isData (optional) specifies the port contains data information.
- b) **onSystem** (optional) defines constraints for this transactional port if it is present in a system bus interface with a matching group name.
 - 1) The **group** attribute indicates the group name for the transactional port. It distinguishes between different sets of system interfaces. Usually, all the arbiter ports are processed together, or all the clock or reset ports are processed together. So, this is really a mechanism to specify any sort of non-standard bus interface capabilities for the interconnect. The **group** name shall match the one specified in the bus definition **systemGroupName**.
 - 2) The group *transactionalPort* specifies what elements are used in this port. See <u>5.11</u>.
- c) **onMaster** (optional) defines constraints for this transactional port when present in a master bus interface. The group *transactionalPort* specifies what elements are used in this port. See <u>5.11</u>.
- d) **onSlave** (optional) defines constraints for this transactional port when present in a slave bus interface. The group *transactionalPort* specifies what elements are used in this port. See <u>5.11</u>.

NOTE—The **onMaster**, **onSlave**, and **onSystem** elements associated with each logical port provide optional constraints. If any of these are missing, there are no constraints for how the port appears on interfaces with that mode (master, system, or slave). If no **onSystem** constraint is specified with a particular group, there are no constraints for system interfaces in that group. The abstraction definition author has the choice of how far to constrain the definitions. Generally speaking, more constraints in the definitions reduce implementation flexibility for whoever is creating IP with interface that conform to the abstraction definition.

See also: <u>SCR 6.13</u>, <u>SCR 6.14</u>, <u>SCR 6.15</u>, and <u>SCR 6.17</u>.


5.10.3 Example

The following example shows a transactional port within an abstraction definition, carrying data information.

5.11 Transactional port group

5.11.1 Schema

The following schema defines the information contained in the **transactionalPort** group, which may appear within an **onMaster**, **onSlave**, or **onSystem** element within an abstraction definition (**abstractionDefinition/ports/port/transactional/on**).

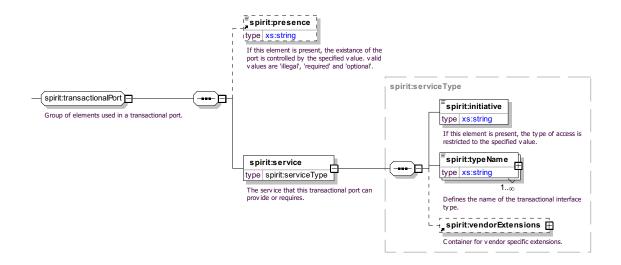

5.11.2 Description

A **transactionalPort** group contains elements defining constraints associated with a transactional logical port within an **abstractionDefinition**. It contains the following elements.

- a) **presence** (optional) provides the capability to require or forbid a port to appear in a **busInterface**. Its three possible values are **illegal**, **required**, or **optional**. If this element is not present, its effective value is **optional**.
- b) **service** (mandatory) defines constraints on the service type, which the component transactional port can provide or require. It also contains the following elements or attributes.
 - initiative (mandatory) defines the type of access: requires, provides, or both. For example, a SystemC sc port is defined using requires, since it requires a SystemC interface.
 - 2) typeName (mandatory) is an unbounded list that defines the names of the transactional interface types. The typeName element is of type anyURI. The implicit (optional) attribute may be be used here to indicate this element is implicit and a netlister shall not declare this service in a language-specific top-level netlist.
 - 3) **vendorExtensions** contains any extra vendor-specific data related to the interface. See <u>C.10</u>.

See also: SCR 6.2, SCR 6.3, SCR 6.4, SCR 6.8, and SCR 6.18.

5.11.3 Example

The following example shows a custom transactional port within an abstraction definition. Constraints are defined for transactional port used in master or slave interfaces.

```
<spirit:port>
    <spirit:logicalName>custom_tlm_port</spirit:logicalName>
```

```
<spirit:transactional>
      <spirit:onMaster>
          <spirit:service>
             <spirit:initiative>provides</spirit:initiative>
             <spirit:typeName implicit="true">TLM
                 </spirit:typeName>
          </spirit:service>
      </spirit:onMaster>
      <spirit:onSlave>
          <spirit:service>
             <spirit:initiative>requires</spirit:initiative>
             <spirit:typeName implicit="true">TLM
                 </spirit:typeName>
          </spirit:service>
      </spirit:onSlave>
   </spirit:transactional>
</spirit:port>
```

5.12 Extending bus and abstraction definitions

5.12.1 Extending bus definitions

Bus definitions may use the **extends** element to create a family of compatible interconnectable bus definitions. A bus definition (B) extends another existing bus definition (A) by specifying the **extends** element in the B bus definition's element list. Bus definition B is referred to as the *extending* bus definition and bus definition A is referred to as the *extended* bus definition. For two bus definitions related by the **extends** relation to be interconnectable, they need to be in a direct line of descent in the hierarchical *extension* tree, as illustrated in Figure 8.

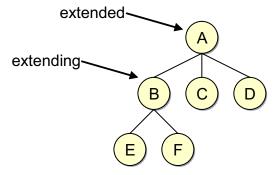


Figure 8—Extends relation hierarchy tree

In <u>Figure 8</u>, bus definition B extends bus definition A. Bus interfaces of bus definition B shall only be connected with bus interfaces of bus definitions B, B, and A. By the same token, bus interfaces of bus definition B shall only be connected with bus interfaces of bus definitions B, B, and B.

5.12.2 Extending abstraction definitions

The **abstractionDefinition** that references the *extended* **busDefinition** via the **busType** element is referred to as the *extended* **abstractionDefinition**. The bus definition writer shall supply an **abstractionDefinition** that references the *extending* **busDefinition**, and it is referred to as the *extending* **abstractionDefinition**. The *extending* **abstractionDefinition** shall reference the *extended* **abstractionDefinition** via its **extends** element. An example of extending is shown in Figure 9.

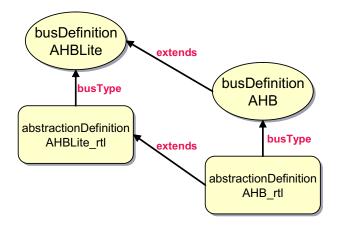


Figure 9—Example of extending

The *extending* bus definition and abstraction definition pair shall be able to stand on its own independent of the *extended* bus definition and abstraction definition pair; therefore, all the elements and attributes of the *extended* bus definition and abstraction definition pair shall be specified in the *extending* bus definition and abstraction definition pair. Also, all the ports in the *extended* abstraction definition shall be explicitly defined in the *extending* abstraction definition. Some of the elements and attributes of the *extending* bus definition and abstraction definition pair may be modified from the *extended* bus definition and abstraction definition pair, while others may not.

See also: <u>SCR 3.17</u>.

5.12.3 Modifying definitions

<u>Table 1</u> specifies which elements and attributes may be modified in a bus definition.

Table 1—Elements of extending bus definition

Item	Modified	Comment
directConnection	No	
isAddressable	No	
maxMasters	Yes	Smaller number applies when connecting interfaces of extended bus definitions.
maxSlaves	Yes	Smaller number applies when connecting interfaces of extended bus definitions.
systemGroupNames	Yes	New group names may be added; group names not specified are not allowed by this bus definition.
description	Yes	
vendorExtensions	Yes	

<u>Table 2</u> specifies which elements and attributes may be modified in an abstraction definition.

Table 2—Elements of extending abstraction definition

Item	Modified	Comment
ports	Yes	See <u>Table 3</u> and <u>SCR 6.11</u> .
description	Yes	
vendorExtensions	Yes	

The *extending* abstraction definition may add new ports and the *extending* abstraction definition may mark certain ports as illegal to disallow their use. <u>Table 3</u> specifies which port elements may be modified when extending bus definitions.

Table 3—Elements of a port in an extending abstraction definition

Item	Modified	Comment
logicalName	No	Changing this name implies a port that is different from the one in the <i>extended</i> abstractionDefinition .
requiresDriver	Yes	
isAddress	No	
isData	No	
isClock	No	
isReset	No	
onSystem/group	Yes	
presence	Yes	
width	Yes	
direction	No	
modeConstraints	Yes	
mirroredModeConstraints	Yes	
defaultValue	Yes	This default can be used to set a value for the extended abstraction definition logical port, if this port is not mapped or its presence is marked as illegal.
service/initiative	No	
service/typeName	No	
service/vendorExtensions	Yes	
vendorExtensions	Yes	

5.12.4 Interface connections

When a bus interface of the *extended* bus definition and abstraction definition pair is connected with a bus interface of the *extending* bus definition and abstraction definition pair, it is possible either interface may have unconnected ports due to the previous modifications of the port list (i.e., adding or removing ports). The abstraction definition writer needs to be aware of these scenarios and specify default values where necessary. Following are the possible connections between two extended interfaces (A and B):

```
master(A) connecting to slave(B) (if directConnection = true)
master(A) connecting to mirror-master(B)
slave(A) connecting to mirror-slave(B)
system(A) connecting to mirrored-system(B)
master(B) connecting to slave(A) (if directConnection = true)
master(B) connecting to mirror-master(A)
slave(B) connecting to mirror-slave(A)
system(B) connecting to mirrored-system(A)
```

5.13 Clock and reset handling

Abstraction definitions shall include all the logical ports that can participate in the protocol of the bus; bus interfaces also need to map to the component all the logical ports that participate in the protocol of that bus at that interface. For example, on an AXI bus, the ports of the write channel can participate in the protocol of the bus, so they shall be included in the AXI abstraction definition. These ports participate in the protocol at any AXI bus interface that supports writes, so they need to be included in all such bus interfaces, but not included in any AXI bus interfaces that only support reads.

This requirement applies to clock and reset ports as much as it does to other ports. If the protocol of a bus is dependent on a clock or reset port, the bus definition for that bus shall include that clock or reset port. Similarly if the bus protocol at a bus interface is dependent on a particular clock or reset port, the port map of that bus interface shall include that port. The clock or reset port, however, does not need to exist as a port of the component implementation, since it may be mapped to a phantom port of the component (see 6.11.18.2). Also, since multiple bus ports may be mapped to a single component port (and component ports may also participate in ad hoc connections), the clock routing is not required to match or be defined by the bus infrastructure.

In some cases, a component may have clock or reset ports that are not associated with and do not participate in the protocol of any bus interface, but do provide a clock or reset to the internal logic of the component instead, e.g., a processor clock. In such cases, the clock port should be included in a special purpose clock or reset bus interface, with an appropriate special purpose bus type, or not be mapped into any interface and connected using ad hoc connections instead.



6. Component descriptions

6.1 Component


An IP-XACT *component* is the central placeholder for the objects meta-data. Components are used to describe cores (processors, co-processors, DSPs, etc.), peripherals (memories, DMA controllers, timers, UART, etc.), and buses (simple buses, multi-layer buses, cross bars, network on chip, etc.). An IP-XACT component can be of two kinds: static or configurable. A DE cannot change a *static component*. A *configurable* (or *parameterized*) *component* has configurable elements (such as parameters) that can be configured by the DE and these elements may also configure the RTL or TLM model.

An IP-XACT components and be a hierarchical object or a leaf object. *Leaf components* do not contain other IP-XACT components, while *hierarchical components* contain other IP-XACT sub-components. This can be recursive by having hierarchical components that contain hierarchical components, etc.—leading to the concept of *hierarchy depth*. The IP being described may have a completely different hierarchical arrangement in terms of its implementation in RTL or TLM to that of its IP-XACT description. So, a description of a large IP component may be made up of many levels of hierarchy, but its IP-XACT description need only be a leaf object as that completely describes the IP. On the other hand, some IP can only be described in terms of a hierarchical IP-XACT description, no matter what the arrangement of the implementation hierarchy.

An IP-XACT component may contain a channel or a bridge. A *channel* is a special IP-XACT object that can be used to describe multi-point connections between regular components that may require some interface adaptation. A *bridge* is a point-to-point reference of slave to master interfaces. Both of these concepts are used to describe the interconnect between components.

6.1.1 Schema

The following schema details the information contained in the **component** element, which is one of the seven top-level elements in the IP-XACT specification used to describe a component.

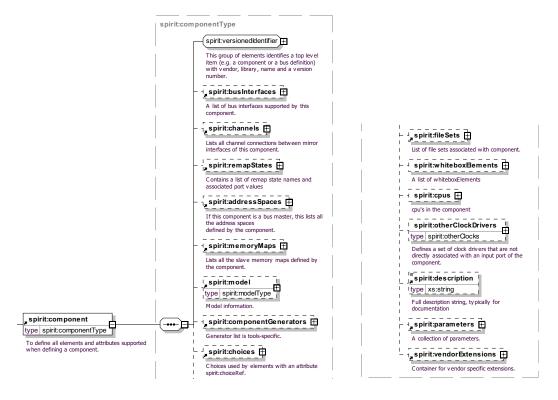

6.1.2 Description

Each element of a **component** is detailed in the rest of this subclause; the main sections of a **component** are as follows:

- a) *versionedIdentifier* group provides a unique identifier; it consists of four subelements for a top-level IP-XACT element. See <u>C.6</u>.
- b) **busInterfaces** (optional) specifies all the interfaces for this component. A **busInterface** is a grouping of ports related to a function, typically a bus, defined by a bus definition and abstraction definition. See <u>6.5</u>.
- c) **channels** (optional) specifies the interconnection between interfaces inside of the component. See <u>6.6</u>.
- d) **remapStates** (optional) specifies the combination of logic states on the component ports and translates them into a logical name for use by logic that controls the defined address map. See <u>6.9.2</u>.
- e) **addressSpaces** (optional) specifies the addressable area as seen from **busInterface**s with an interface mode of **master** or from **cpus**. See <u>6.7</u>.
- f) memoryMaps (optional) specifies the addressable area as seen from busInterfaces with an interface mode of slave. See <u>6.8</u>.
- g) **model** (optional) specifies all the different views, ports, and model configuration parameters of the component. See <u>6.11</u>.
- h) **componentGenerators** (optional) specifies a list of generator programs attached to this component. See <u>6.12</u>.

- i) **choices** (optional) specifies multiple enumerated lists. These lists are referenced by other sections of this component description. See <u>6.14</u>.
- j) **fileSets** (optional) specifies groups of files and possibly their function for reference by other sections of this component description. See <u>6.13</u>.
- k) **whiteboxElements** (optional) specifies all the different locations in the component that can be accessed for verification purposes. See <u>6.15</u>.
- l) cpus (optional) indicates this component contains programmable processors. See <u>6.17</u>.
- m) **otherClockDrivers** (optional) specifies any clock signals that are referenced by implementation constraints, but are not external ports of the component. See <u>6.11.15</u>.
- n) **description** (optional) allows a textual description of the component. The **description** element is of type *string*.
- o) **parameters** (optional) describes any **parameter** that can be used to configure or hold information related to this component. See <u>C.11</u>.
- p) **vendorExtensions** (optional) contains any extra vendor-specific data related to the component. See <u>C.10</u>.

See also: SCR 1.9.

6.1.3 Example

This is an example of a component (a timers peripheral in a Leon2 library).

```
<?xml version="1.0" encoding="UTF-8" ?>
<spirit:component</pre>
   xmlns:spirit="http://www.spiritconsortium.org/XMLSchema/SPIRIT/1.5"
   xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
   xsi:schemaLocation="http://www.spiritconsortium.org/XMLSchema/SPIRIT/1.5
   http://www.spiritconsortium.org/XMLSchema/SPIRIT/1.5/index.xsd">
   <spirit:vendor>spiritconsortium.org</spirit:vendor>
   <spirit:library>Leon2</spirit:library>
   <spirit:name>timers</spirit:name>
   <spirit:version>1.00</spirit:version>
   <spirit:busInterfaces>
   <spirit:memoryMaps>
   <spirit:model>
   <spirit:choices>
   <spirit:fileSets>
</spirit:component>
```

6.2 Interfaces

Each IP component normally identifies one or more bus interfaces. *Bus interfaces* are groups of ports that belong to an identified bus type [i.e., a reference to a **busDefinition** (see <u>5.2</u>)] and an abstraction type [i.e., a reference to an **abstractionDefinition** (see <u>5.3</u>)]. The purpose of the bus interface is to map the physical ports of the component to the logical ports of the abstraction definition. This mapping provides more information about the interface.

There are seven possible modes for a bus interface: a bus interface may be a master, slave, or system interface, and may be direct or mirrored. The seventh interface mode is the monitor mode. A monitor interface can be used to connect IP into the design for verification.

6.2.1 Direct interface modes

A master interface is the interface mode that initiates a transaction (like a read or write) on a bus. Master interfaces tend to have associated address spaces [address spaces with programmer's view (PV)].

A *slave interface* is the interface mode that terminates or consumes a transaction initiated by a master interface. Slave interfaces often contain information about the registers that are accessible through the slave interface.

A *system interface* is neither a master nor slave interface; this interface mode allows specialized (or non-standard) connections to a bus, such as external arbiters. System interfaces can be used to handle situations not covered by the bus specification or deviations from the bus specification standard.

The following guidelines also apply to the direct interface modes.

- If a port participates in the protocol of the master or slave interfaces, it shall be included in master and slave interfaces. System interfaces often contain some of the same ports as master or slave interfaces.
- Some buses have specialized sideband ports. If these are tied or related to the standard ports in the bus (as opposed to being completely stand-alone), these ports should have some sort of system element designator in the bus definition.

6.2.2 Mirrored interface modes

As the name suggests, a *mirrored interface* has the same (or similar) ports to its related direct bus interface, but each port's direction or initiative is reversed. So a port that is an input on a direct bus interface would be an output in the matching mirrored interface. A mirrored bus interface (like its direct counterpart) supports the master, slave, and system interface modes.

6.2.3 Monitor interface modes

A *monitor interface* connects to a master, slave, system, mirrored-master, mirrored-slave, or mirrored-system for observation. The connection shall not modify the connected interfaces. A monitor interface is identified by using the **monitor** element in the interface definition and specifying the type of active interface being monitored (master, slave, etc.).

6.3 Interface interconnections

IP-XACT provides for three different types of connections between interfaces. A *direct connection* is a connection between a master interface and a slave interface. A *direct-mirrored connection* is a connection between a direct interface and its corresponding mirrored interface (i.e., slave and mirrored-slave). A

monitor connection is a connection between any interface type (other than monitor) and a monitor interface. It is not possible to connect two mirrored interfaces.

All interconnections are described in a top-level design object. See 7.1.

6.3.1 Direct connection

A direct connection is a connection between a master interface and a slave interface. This connection is a single point-to-point connection. More complex connection schemes with direct connections are possible with the use of a component containing a **bridge** element(s).

See also: <u>SCR 2.2</u>, <u>SCR 2.10</u>, <u>SCR 2.11</u>, <u>SCR 2.12</u>, <u>SCR 2.13</u>, and <u>SCR 2.14</u>.

6.3.2 Mirrored-non-mirrored connection

A mirrored-non-mirrored connection is a connection between a master interface and a mirrored-master interface, a slave interface and a mirrored-slave interface, or a system interface and a mirrored-system interface. These connections are all single point-to-point connections. More complex connection schemes with mirrored-non-mirrored connections are possible with the use of a component containing a **channel** element.

See also: SCR 2.2, SCR 2.12, and SCR 2.14.

6.3.3 Monitor connection

A monitor connection is a connection between a monitor interface and any other interface mode: master, mirrored-master, slave, mirrored-slave, system, or mirrored-system interface. The monitor interface is defined for only one mode and can only be used with that specific mode. Monitor connections are purely for non-intrusive observation of an interface. These connections are single-point to multi-point connections: the single point being the interface to be monitored and the multi-point being the monitor interface. More than one monitor may be attached to the same interface. The monitor connection shall meet the following.

- a) The connection of a monitor interface shall not count as a connected interface in the determination of the maximum master or maximum slave calculations.
- b) The direction or initiative of ports in a monitor interface cannot be specified in an abstraction definition. All wire ports on a monitor interface shall be treated as having a logical direction of in. A monitor interface connected to any active interface shall see the values on the wire ports of the active interface as inputs on its ports regardless of the direction they have on the active interface. All transactional ports on a monitor interface shall be treated as having a logical initiative of requires.

See also: SCR 2.2, SCR 4.6, and the SCRs in Table B.4.

6.3.4 Interface logical to physical port mapping

An interface on a component contains a port map to associate the physical ports on the component with the logical ports in the abstraction definition. This mapping is what provides the extra information needed to enable a higher level of design.

A *physical port* defined in a component is assigned a physical port name and optionally can be assigned a **left** and a **right** element to represent a vector. The **left** element indicates the first boundary, the **right** element, the second boundary. **left** may be larger than **right** and that **left** may be the MSB or LSB (the **right** being the opposite). The **left** and **right** elements are the (bit) rank of the left-most and right-most bits of the port.

A *logical port* defined in an abstraction definition is assigned a logical port name and, optionally, a width. The logical port is assigned a numbering from width-1 down to 0 if the width is present. If the width is not present, the logical port number shall have a lower bound of 0 and does not have an upper bound.

6.3.4.1 Mapping rules

Mapping rules describe the assignment of logical bit numbers to physical bit numbers.

- a) First, apply all the rules defined in <u>B.1.8</u> to determine the logical and physical ranges.
- b) The mapping is logical.left-> physical.left down to logical.right-> physical.right.

6.3.4.2 Physical interconnections

With all logical bits having been assigned from the abstraction definition to physical port, it is a simple matter to describe the physical connections that result from an interface connection. All connections are made purely based on the logical bit assignment. Like logical bit numbers from each interface are connected. The alignment is always such that logical bit 0 from interface A connects to logical bit 0 from interface B, logical bit 1 from interface B, and so on.

6.4 Complex interface interconnections

There are two constructs used to connect interfaces of standard components together (traditional components, usually with *master* and *slave* interfaces), a channel and a bridge. These constructs are encapsulated into components. Not only does the **channel** or **bridge** component provide a connection between standard components, but it also provides information on the addressing and data flow. With this information, it is possible to construct things such as a memory map for the system.

A *channel* identifies interfaces in a component that connect a component's master, slave, and system interfaces on the same bus. All masters connected to a channel see each slave at the same physical address. On a channel, only one master may initiate transactions at a time. This does not preclude bus protocols that utilize pipelining or out-of-order completion. A bus that has addresses that are simultaneously seen differently from different masters or a bus that allows transactions from different masters to be simultaneously initiated may only be represented using bus bridges, not channels.

A *bridge* is an interface between two separate buses, which may be of the same or different types. Such a component has at least one master interface (onto the peripheral bus) and one slave interface (onto the main system bus). Crossbar bus infrastructure (e.g., an ARM Multilayer AMBA) is also treated as a component containing bus bridges—such examples might have multiple master and multiple slave interfaces.

6.4.1 Channel

A *channel* is a general name that denotes the collection of connections between multiple internal bus interfaces. The memory map between these connections is restricted so that, for example, a generator can be called to automatically compute all the address maps for the complete design. A channel can represent a simple wiring interconnect or a more complex structure such as a bus.

A channel also encapsulates the connection between master and slave components. A channel is the construct, which represents the bus infrastructure and allows transactions initiated by a master interface to be completed by a slave interface.

The following rules apply for using channels.

a) A slave connected to a channel has the same address as seen from all masters connected to this channel. This guarantees the slave addresses (as seen by each master) are consistent for the system.

As a consequence, all slave interfaces connected to a channel see the same address (if they do not, they are connected to different channels).

b) A channel supports memory mapping and remapping (see <u>6.8</u>, <u>6.9</u>, <u>Clause 10</u>, and <u>H.3</u>).

See also: SCR 3.2.

6.4.2 Bridge

Some buses can be modeled using a component as a bridge. A *bridge* is a component that physically links one or more master bus interfaces to a slave bus interface and logically connects the master address space(s) to a slave memory map having two bus types on each side. This component has at least one master bus interface and at least one slave bus interface, each for different protocols, and the bridge translates any signals between them. The slave bus's interface definition contains a **bridge** element (or a set of them) to designate the corresponding master bus interface(s). There are two different types of bridges defined in IP-XACT: transparent and opaque. See also: Annex H.

The bridge relationship is *transparent* (**opaque** attribute is **false**) when the address space on the bridged master bus interface is a decoded subset of the main address space, as seen through the bus bridge's slave bus interface. In this case, a slave component connected on the bridged master side shall reserve an address block on the main memory map seen on the bridging slave side. If nothing is attached to the bridged master bus interface, then no address block is reserved on the main memory map.

The bridge relationship is *opaque* (**opaque** attribute is **true**) when the address space on the bridged master bus interface is not directly accessible to the main address space, as seen from the channel to which the slave bus interface is connected. In this case, the bridging component occupies a single address block, which is the size of its slave bus interface, reserved on the memory map of the masters attached to the main bus channel.

The following rules apply for using bridges.

- a) A slave interface can bridge to multiple address spaces. Specifically, a bridge shall have one or more master interfaces and each master interface may have an address space associated with that interface.
- b) A bridge can only have direct interfaces. As a consequence, a bridge can directly connect to another component (e.g., master interface to slave interface connection) under the conditions defined in 6.3.1. Or it can connect to a channel (e.g., master interface to mirrored-master interface).
- c) A bridge supports memory mapping and remapping (see <u>6.8</u>, <u>6.9</u>, <u>Clause 10</u>, and <u>H.3</u>).

The transfer of addressing information from the slave interface to the master interface of a bridge is done through the address space assigned to the master interface. This address space defines the visible address range from this master interface.

6.4.3 Combining channels and bridges

It is possible to combine channels and bridges together each in separate components to form a new hierarchical component for the purpose of modeling more complex interconnects. A multi-layer bus is a more complex interconnect that supports multiple memory maps. As such, it cannot be modeled as a channel and, if the interfaces are asymmetric (they do not allow direct connections), then the bus also cannot be modeled as a bridge.

The solution is to use a combination of channel and bridge components. The bridge component in the center forms the main crossbar for the communications between components. It decides which interfaces may bridge to other interfaces. The smaller channels then come in to convert the direct interface of the bridge (which could not connect to the master's or slave's because of the asymmetric bus) into a mirrored interface that can now connect with a direct-mirrored connection to the master or slave, as shown in Figure 10.

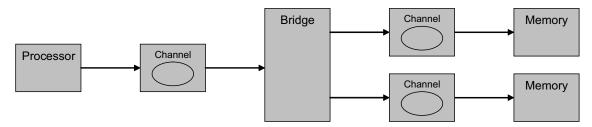



Figure 10—Asymmetric multi-layer bus connection using channels

6.5 Bus interfaces

6.5.1 busInterface

6.5.1.1 Schema

The following schema details the information contained in the **busInterfaces** element, which may appear as an element inside the top-level **component** element.

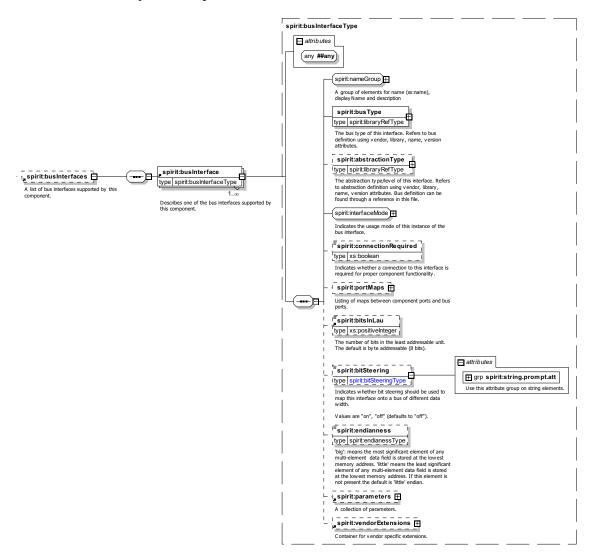

6.5.1.2 Description

Bus interfaces enable individual ports that appear on the component to be grouped together into a meaningful, known protocol. When the protocol is known, a lot of additional information can be written down about the characteristics of that interface.

The **busInterfaces** element contains an unbounded list of **busInterface** elements; therefore, a **component** may have multiple bus interfaces of the same or different types. Each **busInterface** element defines properties of this specific interface in a component. The **busInterface** element also allows for vendor attributes to be applied. It contains the following elements and attributes.

- a) **nameGroup** group is defined in <u>C.1</u>. The **name** element shall be unique within the containing **component** element.
- b) **busType** (mandatory) specifies the bus definition that this bus interface is referenced. A bus definition (see <u>5.2</u>) describes the high-level attributes of a bus description. The **busType** element is of type *libraryRefType* (see <u>C.7</u>); it contains four attributes to specify a unique VLNV.
- c) **abstractionType** (optional) specifies the abstraction definition where this bus interface is referenced. An abstraction definition describes the low-level attributes of a bus description (see <u>5.3</u>). The **abstractionType** element is of type *libraryRefType* (see <u>C.7</u>); it contains four attributes to specify a unique VLNV.
- d) *interfaceMode* group describes further information on the *mode* for this interface. There are seven possible modes for an interface: master, slave, mirroredMaster, mirroredSlave, system, mirrored-System and monitor. See <u>6.5.2</u>.
- e) **connectionRequired** (optional), if **true**, specifies when this component is integrated; this interface shall be connected to another interface for the integration to be valid. If **false**, this interface may be left unconnected. If this element is not present, its effective value is **false**. The **connectionRequired** element is of type **boolean**.
- f) **portMaps** (optional) describes the mapping between the abstraction definition's logical ports and the component's physical ports. See <u>6.5.6</u>.
- g) **bitsInLau** (optional) describes the number of data bits that are addressable by the least significant address bit in the bus interface. It is only appropriate to specify this element for interfaces that are addressable. The **bitsInLau** element is of type *positiveInteger*. The default value is **8**.
- h) **bitSteering** (optional) designates if this interface has the ability to dynamically align data on different byte channels on a data bus. This element shall only be specified for interfaces that are addressable. The **bitSteering** element is a choice of two values: **on** indicating this interface uses data steering logic and **off** that this interface does not use data steering logic. The **bitSteering** element is configurable using attributes from *string.prompt.att*, see <u>C.12</u>.
- i) **endianness** (optional) indicates the endianness of the bus interface. The two choices are **big** for bigendian and **little** for little-endian. If this element is not present, its effective value is **little**. See also 6.5.1.2.1.
- j) parameters (optional) specifies any parameter data value(s) for this bus interface. See C.11.
- k) **vendorExtensions** (optional) holds any vendor-specific data from other namespaces, which is applicable to this bus interface. See <u>C.10</u>.

See also: SCR 1.4, SCR 2.14, SCR 2.15, SCR 9.4, SCR 9.5, and SCR 9.6.

6.5.1.2.1 Endianness

Endianness is defined under the **busInterface** element of the component. There are (only) two legal values (big and little) to specify the **endianness**.

— *Big endian* (**big**) means the most significant byte of any multi-byte data field is stored at the lowest memory address, which is also the address of the larger field.

— Little endian (little) means the least significant byte of any multi-byte data field is stored at the lowest memory address, which is also the address of the larger field.

NOTE—The description of endianness is byte-centric as that is the most common least addressable unit (LAU). However, this description generally applies to any size LAU.

6.5.1.2.2 Big-endianness

There are at least two ways for big-endianness to manifest itself, byte-invariant and word-invariant (also known as *middle-endian*); the difference being if data is stored as *word-invariant*, the data is stored differently for transfers larger than a byte, for example,

- a) Byte invariant: A word access to address 0x0 is on D[31:0]. The MSB is D[7:0], the LSB is D[31:24].
- b) Word invariant: A word access to address 0x0 is on D[31:0]. The MSB is D[31:24], the LSB byte is D[7:0].
- c) In IP-XACT, the interpretation of big-endian is the byte-invariant style.

6.5.1.3 Example


The following example shows a simple bus interface for a clock port. The interface references a bus definition and an abstraction definition.

```
<spirit:busInterface>
   <spirit:name>APBClk</spirit:name>
   <spirit:busType spirit:vendor="spiritconsortium.org"</pre>
   spirit:library="busdef.clock" spirit:name="clock" spirit:version="1.0"/>
   <spirit:abstractionType spirit:vendor="spiritconsortium.org"</pre>
   spirit:library="busdef.clock" spirit:name="clock_rtl"
   spirit:version="1.0"/>
   <spirit:slave/>
   <spirit:portMaps>
       <spirit:portMap>
          <spirit:logicalPort>
              <spirit:name>CLK</spirit:name>
          </spirit:logicalPort>
          <spirit:physicalPort>
              <spirit:name>clk</spirit:name>
          </spirit:physicalPort>
      </spirit:portMap>
   </spirit:portMaps>
</spirit:busInterface>
```

6.5.2 Interface modes

The following schema details the information contained in the *interfaceMode* group, which appears as a group inside the **busInterface** element.

6.5.2.1 Schema

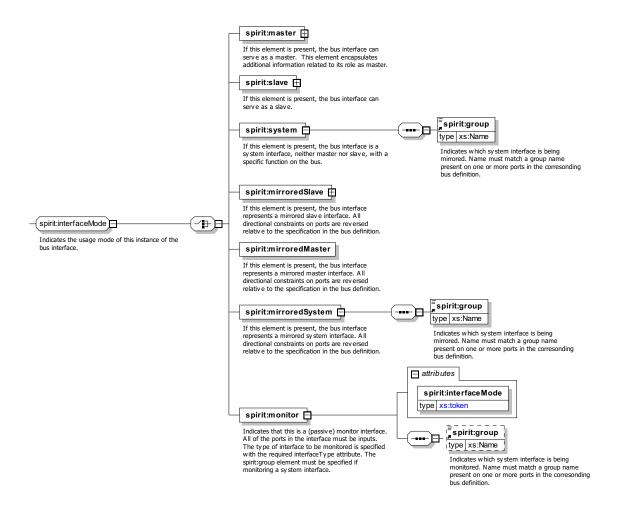

6.5.2.2 Description

The **busInterface**'s mode designates the purpose of the **busInterface** on this component. There are seven possible modes: three pairs of standard functional interfaces and their mirrored counterparts, and a monitor interface for VIP.

The *interfaceMode* group shall contain one of the following seven elements.

- a) A master interface mode (sometimes also known as an *initiator*) is one that initiates transactions. See <u>6.5.3</u>.
- b) A **slave** interface mode (sometimes also known as a *target*) is one that responds to transactions. See <u>6.5.4</u>.
- c) A system interface mode is used for some classes of interfaces that are standard on different bus types, but do not fit into the master or slave category.

The **group** (mandatory) attribute for the **system** element defines the name of the group to which this system interface belongs. The type of the group attribute is *Name*.

- d) A mirroredSlave interface mode is the mirrored version of a slave interface and can provide addition address offsets to the connected slave interface. See 6.5.5.
- e) A mirroredMaster interface mode is the mirrored version of a master interface.

f) A mirroredSystem interface mode is the mirrored version of a system interface.

The **group** (mandatory) attribute for the **mirroredSystem** element defines the name of the group to which this **mirroredSystem** interface belongs. The type of the group attribute is *Name*.

- g) A **monitor** interface mode is a special interface that can be used for verification. This monitor interface mode is used to gather data from other interfaces. See <u>6.3.3</u>.
 - The interfaceMode (mandatory) attribute defines the interface mode for which this monitor interface can be connected: master, slave, system, mirroredMaster, mirroredSlave, or mirroredSystem.
 - 2) The group (optional) element is required if the interfaceMode attribute is set to system or mirroredSystem. This element defines the name of the system group for this monitor interface. The type of the group element is Name.

See also: <u>SCR 2.12</u>, <u>SCR 4.3</u>, <u>SCR 4.4</u>, and <u>SCR 6.16</u>.

6.5.2.3 Example


The following example shows a portion of a bus interface for an AHB bus interface. The interface mode is defined as monitor for a slave.

```
<spirit:busInterface>
   <spirit:name>ambaAHBSlaveMonitor</spirit:name>
   <spirit:busType spirit:vendor="amba.com" spirit:library="AMBA2"</pre>
   spirit:name="AHB" spirit:version="r2p0 5"/>
   <spirit:abstractionType spirit:vendor="amba.com" spirit:library="AMBA2"</pre>
   spirit:name="AHB rtl" spirit:version="r2p0 5"/>
   <spirit:monitor spirit:interfaceMode="slave"/>
      <spirit:portMaps>
          <spirit:portMap>
             <spirit:logicalPort>
                 <spirit:name>HRESP</spirit:name>
             </spirit:logicalPort>
             <spirit:physicalPort>
                 <spirit:name>hresp</spirit:name>
             </spirit:physicalPort>
          </spirit:portMap>
</spirit:busInterface>
```

6.5.3 Master interface

The following schema details the information contained in the **master** element, which appears as an element inside the *interfaceMode* group inside **busInterface** element.

6.5.3.1 Schema

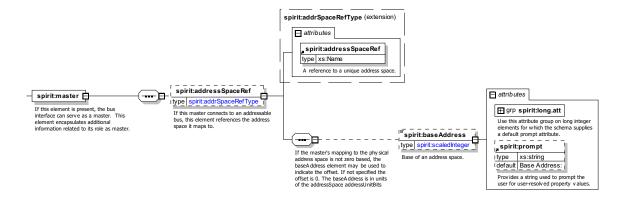

6.5.3.2 Description

A **master** interface (also known as an *initiator*) is one that initiates transactions. The **master** element contains the following elements and attributes.

- a) addressSpaceRef (optional) element contains attributes and subelements to describe information about the range of addresses with which this master interface can generate transactions.
 - 1) **addressSpaceRef** (mandatory) attribute references a name of an address space defined in the containing description. The address space shall define the range and width for transaction on this interface. See <u>6.7</u>.
 - baseAddress (optional) specifies the starting address of the address space. The address space numbering normally starts at 0. Some address spaces may use *offset addressing* (starting at a number other than 0) so the base address element can be used to designate this information. The type of this element is set to *scaledInteger*, see <u>D.15</u>. The **baseAddress** element is configurable with attributes from *long.att*, see <u>C.12</u>. The **prompt** (optional) attribute allows the setting of a string for the configuration and has a default value of "Base Address:". See also: Clause 11.

See also: <u>SCR 9.1</u>.


6.5.3.3 Example

The following example shows a portion of a bus interface for an AHB master bus interface. The interface contains a reference to an address space called main that has its base address starting at 0.

6.5.4 Slave interface

The following schema details the information contained in the **slave** element, which appears as an element inside the *interfaceMode* group inside **busInterface** element.

6.5.4.1 Schema

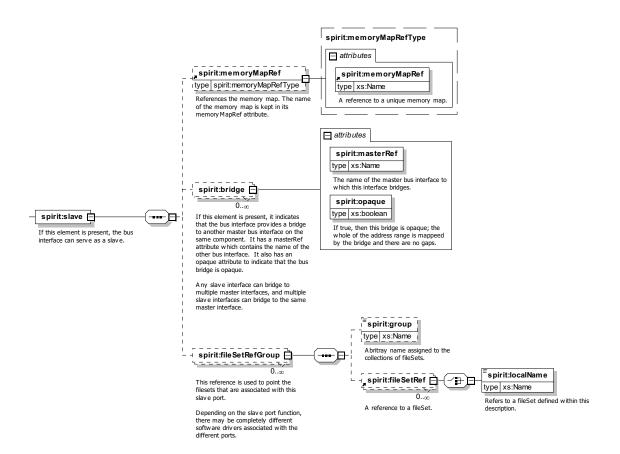

6.5.4.2 Description

A **slave** interface (sometimes also known as a *target*) is one that responds to transactions. The memory map reference points to information about the range of registers, memory, or other address blocks accessible through this slave interface. This slave interface can also be used in a bridge application to "bridge" a transaction from a slave interface to a master interface.

a) memoryMapRef (optional) element contains an attribute that references a memory map.

The **memoryMapRef** (mandatory) attribute references a name of a memory map defined in the containing description. The memory map contains information about the range of registers, memory, or other address blocks. See <u>6.8</u>.

- b) **bridge** (optional) element is an unbounded list of references to master interfaces. If the interface is of a bus definition that is addressable, a bridge element may be included.
 - 1) The **masterRef** (mandatory) attribute shall reference a master interface (see <u>6.5.3</u>) in the containing description. Under some conditions, transactions from the slave interface may be bridged to the referenced master interface, as defined by **opaque** (see also <u>6.4.2</u>).
 - 2) The opaque (mandatory) attribute defines the type of bridging. The opaque attribute is of type boolean. true means the addressing entering into the slave interface shall have the subspace maps baseAddress added and, if non-negative, the result shall exit on the subspace maps' referenced master interface's referenced address space (see 6.4.2 and Clause 11). false means all addressing entering the slave interface shall exit the above referenced master interface without any modifications, this type of bridge is sometimes called transparent.
- c) **fileSetRefGroup** (optional) element is an unbounded list of the references to file sets contained in this component. These file set references are associated with this slave interface. This element may seem out of place, but it allows each slave port to reference a unique **fileSet** element (see <u>6.13</u>). This element can further be used to reference a software driver, which can be made different for each slave port.

group (optional) element allows the definition of a group name for the **fileSetRefGroup**. The **group** element is of type *Name*.

d) **fileSetRef** (optional) is an unbounded list of references to a **fileSet** by **name** within the containing document or another document referenced by the **VLNV**. See <u>C.8</u>.

See also: SCR 3.6 and SCR 9.2.

6.5.4.3 Example


The following example shows a portion of an opaque bridge from and AHB slave bus interface to an APB master bus interface.

```
<spirit:busInterface>
   <spirit:name>ambaAPB</spirit:name>
   <spirit:busType spirit:vendor="amba.com" spirit:library="AMBA2"</pre>
   spirit:name="APB" spirit:version="r2p0 3"/>
   <spirit:abstractionType spirit:vendor="amba.com" spirit:library="AMBA2"</pre>
   spirit:name="APB rtl" spirit:version="r2p0 3"/>
   <spirit:master>
       <spirit:addressSpaceRef spirit:addressSpaceRef="apb"/>
   </spirit:master>
<spirit:busInterface>
   <spirit:name>ambaAHB</spirit:name>
   <spirit:busType spirit:vendor="amba.com" spirit:library="AMBA2"</pre>
   spirit:name="AHB" spirit:version="r2p0 5"/>
   <spirit:abstractionType spirit:vendor="amba.com" spirit:library="AMBA2"</pre>
   spirit:name="AHB rtl" spirit:version="r2p0 5"/>
   <spirit:slave>
       <spirit:memoryMapRef spirit:memoryMapRef="ambaAHB"/>
       <spirit:bridge spirit:masterRef="ambaAPB" spirit:opaque="true"/>
   </spirit:slave>
<spirit:addressSpaces>
   <spirit:addressSpace>
      <spirit:name>apb</spirit:name>
       <spirit:range spirit:choiceRef="addressWidthChoice"</pre>
   spirit:format="choice" spirit:id="masterRange" spirit:prompt="Master Port
   Size :" spirit:resolve="user">1M</spirit:range>
```

6.5.5 Mirrored slave interface

The following schema details the information contained in the **mirroredSlave** element, which appears as an element inside the *interfaceMode* group inside **busInterface** element.

6.5.5.1 Schema

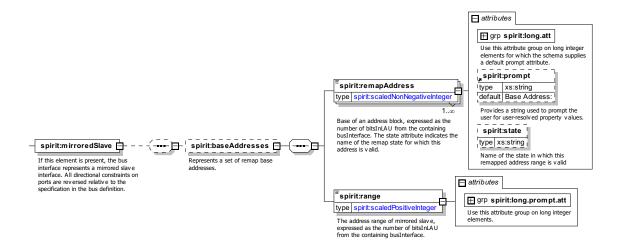

6.5.5.2 Description

A mirroredSlave interface is used to connect to a slave interface. The mirroredSlave interface may contain additional address information in the baseAddresses (optional) element.

- remapAddress (mandatory) element is an unbounded list that specifies the address offset to apply to the connected slave interface. The remapAddress is expressed as the number of addressable units based on the size of an addressable unit as defined inside the containing busInterface/bitsInLau element. The type of this element is set to scaledNonNegativeInteger, see D.15. The remapAddress element is configurable with attributes from long.att, see C.12. The prompt (optional) attribute allows the setting of a string for the configuration and has a default value of "Base Address:". The state (optional) attribute references a defined state in the component and identifies the remapState/name for which the remapAddress and range apply. See 6.9.2.
- b) **range** (mandatory) specifies the address range to apply to the connected **slave** interface. The **range** is expressed as the number of addressable units based on the size of an addressable unit as defined inside the containing **busInterface/bitsInLau** element. See <u>6.5.1</u>. The type of this element is set to

scaledPositiveInteger. The range element is configurable with attributes from *long.prompt.att*, see C.12.

6.5.5.3 Example


This example shows a portion of a bus interface for an AHB mirroredSlave bus interface. The interface contains two remap addresses. The first does not have a state attribute and is always active unless a named state is active; in this case, the base address of the connected slave is offset by 0×000000000 . The second remap address is active when **state=remapped** is selected; in this case the base address of the slave is offset by 0×10000000 .

```
<spirit:busInterface>
   <spirit:name>MirroredSlave0</spirit:name>
   <spirit:busType spirit:vendor="amba.com" spirit:library="AMBA2"</pre>
   spirit:name="AHB" spirit:version="r2p0 5"/>
   <spirit:abstractionType spirit:vendor="amba.com" spirit:library="AMBA2"</pre>
   spirit:name="AHB rtl" spirit:version="r2p0 5"/>
   <spirit:mirroredSlave>
      <spirit:baseAddresses>
          <spirit:remapAddress spirit:resolve="user"</pre>
   spirit:id="start addr slv0 mirror" spirit:choiceRef="BaseAddressChoices"
   spirit:format="choice" spirit:prompt="Slave 0 Starting
   Address: ">0x00000000</spirit:remapAddress>
          <spirit:remapAddress spirit:resolve="user"</pre>
   spirit:id="restart addr slv0 mirror"
   spirit:choiceRef="BaseAddressChoices" spirit:format="choice"
   spirit:prompt="Remap Slave 0 Starting Address:"
   spirit:state="remapped">0x10000000</spirit:remapAddress>
          <spirit:range spirit:resolve="user" spirit:id="range slv0 mirror"</pre>
   spirit:prompt="Slave 0 Range:">0x00010000</spirit:range>
      </spirit:baseAddresses>
   </spirit:mirroredSlave>
</spirit:busInterface>
```

6.5.6 Port map

The following schema details the information contained in the **portMaps** element, which appears as an element inside **busInterface** element.

6.5.6.1 Schema

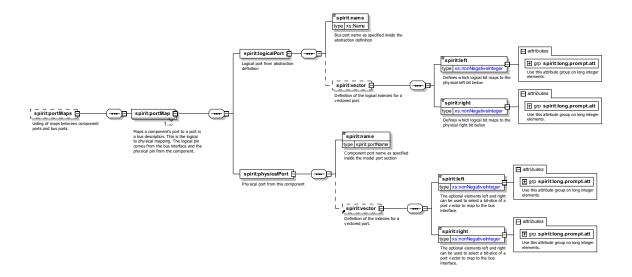

6.5.6.2 Description

The **portMaps** (optional) element contains an unbounded list of **portMap** elements. Each **portMap** element describes the mapping between the logical ports, defined in the referenced abstraction definition, to the physical ports, defined in the containing component description.

- a) **logicalPort** (mandatory) contains the information on the logical port from the abstraction definition.
 - name (mandatory) specifies the logical port name. The name shall be a name of a logical port in the referenced abstraction definition that is defined as legal for this interface mode. The name element is of type Name.
 - 2) vector (optional) is used for a vectored logical port to specify the indices of the logical port mapping. The vector element contains two subelements: left and right. The values of left and right shall be less than the width if specified for the logical port from the abstraction definition. The left and right elements are both of type nonNegativeInteger. The left and right elements are configurable with attributes from long.prompt.att, see C.12.
- b) **physicalPort** (mandatory) contains information on the physical port contained in the component.
 - 1) **name** (mandatory) specifies the physical port name. The name shall be a name of a port in the containing component. The **name** element is of type *Name*.
 - vector (optional) is used for a vectored physical port to specify the indices of the physical port mapping. The vector element contains two subelements: left and right. The values of left and right shall be within the left and right values specified for the physical port. The left and right elements are both of type nonNegativeInteger. The left and right elements are configurable with attributes from long.prompt.att, see C.12.

The same physical port may be mapped to a number of different logical ports on the same or different bus interfaces, and the same logical port may be mapped to a number of different physical ports. For port mapping rules, see <u>6.3.4.1</u>.

See also: <u>SCR 6.1</u>, <u>SCR 6.2</u>, <u>SCR 6.3</u>, <u>SCR 6.4</u>, <u>SCR 6.5</u>, <u>SCR 6.6</u>, <u>SCR 6.7</u>, <u>SCR 6.12</u>, <u>SCR 6.13</u>, <u>SCR 6.19</u>, <u>SCR 6.20</u>, <u>SCR 6.21</u>, <u>SCR 6.22</u>, <u>SCR 6.23</u>, <u>SCR 6.24</u>, and <u>SCR 6.25</u>.

6.5.6.3 Example


The following example shows a portion of a bus interface for an APB bus interface. The logical port PADDR is mapped to the lower 12 bits of the physical port paddr, and the logical port PWRITE is mapped to the physical port pwrite.

```
<spirit:portMap>
   <spirit:logicalPort>
      <spirit:name>PADDR</spirit:name>
   </spirit:logicalPort>
   <spirit:physicalPort>
      <spirit:name>paddr</spirit:name>
      <spirit:vector>
          <spirit:left>11</spirit:left>
          <spirit:right>11</spirit:right>
      </spirit:vector>
   </spirit:physicalPort>
</spirit:portMap>
<spirit:portMap>
   <spirit:logicalPort>
      <spirit:name>PWRITE</spirit:name>
   </spirit:logicalPort>
   <spirit:physicalPort>
      <spirit:name>pwrite</spirit:name>
   </spirit:physicalPort>
</spirit:portMap>
```

6.6 Component channels

6.6.1 Schema

The following schema details the information contained in the **channels** element, which may appear as an element inside the top-level **component** element.

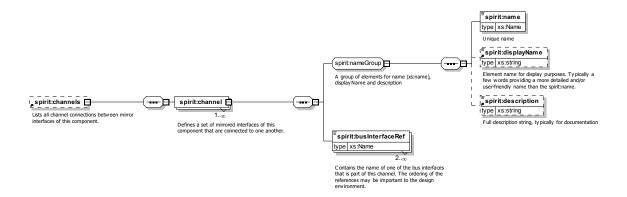

6.6.2 Description

The **channels** element contains an unbounded list of **channel** elements. Each **channel** element contains a list of all the mirrored bus interfaces in the containing component that belong to the same channel.

a) **nameGroup** group is defined in <u>C.1</u>. The **name** element shall be unique within the containing **channels** element.

b) **busInterfaceRef** (mandatory) is an unbound list of references (a minimum of two) to mirrored bus interfaces in the containing component. Each mirrored bus interface in a component may be referenced in any channel at most once. The order of this list may be used by the DE in some way and shall be maintained. The **busInterfaceRef** element is of type *Name*. See <u>6.5.1</u>.

See also: <u>SCR 3.1</u>, <u>SCR 3.2</u>, <u>SCR 3.3</u>, <u>SCR 3.4</u>, and <u>SCR 3.5</u>.

6.6.3 Example

The following example shows a channel with two connected **busInterfaces**.

```
<spirit:busInterfaces>
 <spirit:busInterface>
   <spirit:name>InterfaceA</spirit:name>
   <spirit:busType>...</spirit:busType>
   <spirit:mirroredMaster>...</spirit:mirroredMaster>
 </spirit:busInterface>
 <spirit:busInterface>
   <spirit:name>InterfaceB</spirit:name>
   <spirit:busType>...</spirit:busType>
   <spirit:mirroredSlave>...</spirit:mirroredSlave>
 </spirit:busInterface>
</spirit:busInterfaces>
<spirit:channels>
 <spirit:channel>
   <spirit:name>masterChannel</spirit:name>
   <spirit:displayName>Channel for Master communication/spirit:displayName>
   <spirit:description>This channel includes all transaction calls used by
   the master component of the system</spirit:description>
   <spirit:busInterfaceRef>InterfaceA</spirit:busInterfaceRef>
   <spirit:busInterfaceRef>InterfaceB</spirit:busInterfaceRef>
 </spirit:channel>
</spirit:channels>
```


6.7 Address spaces

An address space is defined as a logical addressable space of memory. Each master interface can be assigned a logical address space. Address spaces are effectively the programmer's view looking out from a master interface. Some components may have one address space associated with more than one master interface (for instance, a processor that has a system bus and a fast memory bus). Other components (for instance, Harvard architecture processors) may have multiple address spaces associated with multiple master interfaces—one for instruction and the other for data.

6.7.1 addressSpaces

6.7.1.1 Schema

The following schema details the information contained in the **addressSpaces** element, which may appear as an element inside the top-level **component** element.

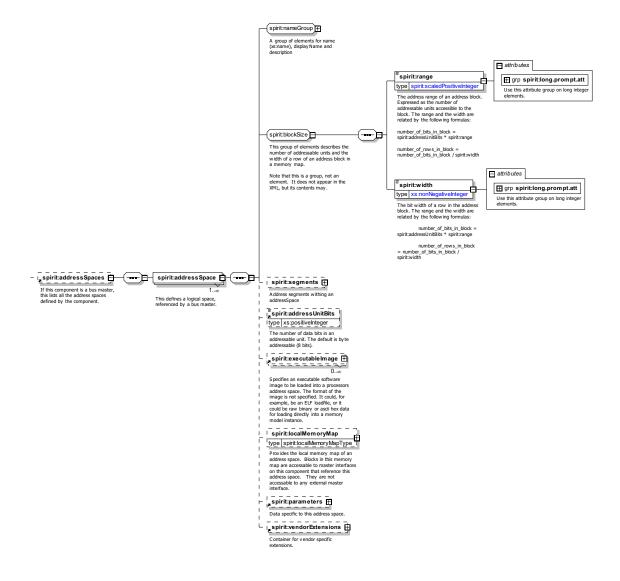


6.7.1.2 Description

The **addressSpaces** element contains an unbounded list of **addressSpace** elements. Each **addressSpace** element defines a logical address space seen by a master bus interface. It contains the following elements.

- a) nameGroup group is defined in <u>C.1</u>. The name element shall be unique within the containing addressSpaces element.
- b) **blockSize** group includes the following.
 - 1) **range** (mandatory) gives the address range of an address space. This is expressed as the number of addressable units of the address space. The size of an addressable unit is defined inside the **addressUnitBits** element. The type of the **range** element is set to **scaledPositiveInteger**. The **range** element is configurable with attributes from *long.prompt.att*, see C.12.
 - 2) width (mandatory) is the bit width of a row in the address space. The type of this element is set to nonNegativeInteger. The width element is configurable with attributes from long.prompt.att, see C.12.
- c) **segments** (optional) describes a portion of the address space starting at an address offset and continuing for a given range. A **segment** can be referenced by a **subspaceMap**. See <u>6.7.7</u>.
- d) **addressUnitBits** (optional) defines the number of data bits in each address increment of the address space. If this element is not present, it is presumed to be 8.
- e) **executableImage** (optional) describes the details of an executable image that can be loaded and executed in this address space on the processor to which this master bus interface belongs. See <u>6.7.3</u>.
- f) **localMemoryMap** (optional) describes a local memory map that is seen exclusively by this master bus interface viewing this address space. See <u>6.7.7</u>.
- g) parameters (optional) specifies any parameter data value(s) for this address space. See <u>C.11</u>.
- h) **vendorExtensions** (optional) holds any vendor-specific data from other namespaces, which is applicable to this address space. See <u>C.10</u>.

The **range** and **width** elements are related by the following formulas.

number_of_bits_in_block = addressUnitBits × range
number of rows in block = number of bits in block / width

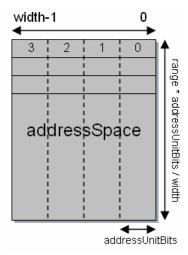

See also: <u>SCR 9.3</u> and <u>SCR 9.8</u>.


6.7.1.3 Example

The following example shows the definition of an address space with a range (length) of 4 GB and a width of 32 bits.

6.7.2 Segments

6.7.2.1 Schema

The following schema details the information contained in the **segments** element, which may appear inside an **addressSpace** element.

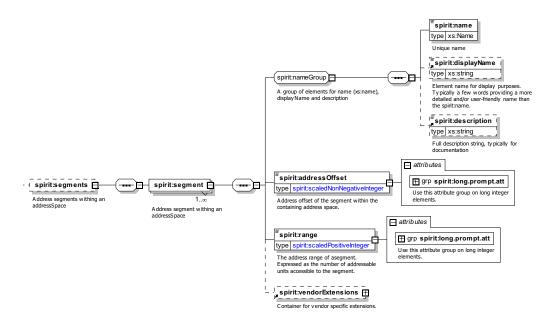

6.7.2.2 Description

The **segments** element contains an unbounded list of **segment** elements. Each **segment** describes the location and size of an area in the containing **addressSpace**. The **segment** element contains the following elements.

- a) *nameGroup* group is defined in <u>C.1</u>. The **name** element shall be unique within the containing **segments** element.
- b) addressOffset (mandatory) describes, in addressing units from the containing addressSpace/addressUnitBits element, the offset from the start of the addressSpace. The addressOffset element is of type scaledNonNegativeInteger. The addressOffset element is configurable with attributes from long.prompt.att, see C.12.

- c) range (mandatory) gives the address range of an address space segment. This is expressed as the number of addressable units of the address space segment. The size of an addressable unit is defined inside the addressUnitBits element. The type of the range element is set to scaledPositiveInteger. The range element is configurable with attributes from long.prompt.att, see C.12.
- d) **vendorExtensions** (optional) holds any vendor-specific data from other namespaces, which is applicable to this address space. See <u>C.10</u>.

See also: SCR 9.8.

6.7.2.3 Example


The following example shows the definition of an address space with a range (length) of 4 GB and a width of 32 bits. The address space contains two segments, one starting at 0×10000000 with a range of 32 MB, the second segment starts at 0×80000000 with a range of 1 GB.

```
<spirit:addressSpaces>
   <spirit:addressSpace>
      <spirit:name>main</spirit:name>
      <spirit:range>4G</spirit:range>
      <spirit:width>32</spirit:width>
      <spirit:segments>
          <spirit:segment>
             <spirit:name>segment1</spirit:name>
             <spirit:addressOffset>0x10000000/spirit:addressOffset>
             <spirit:range>32M</spirit:range>
          </spirit:segment>
          <spirit:segment>
             <spirit:name>segment2</spirit:name>
             <spirit:addressOffset>0x80000000/spirit:addressOffset>
             <spirit:range>1G</spirit:range>
          </spirit:segment>
      </spirit:segments>
      <spirit:addressUnitBits>8</spirit:addressUnitBits>
   </spirit:addressSpace>
</spirit:addressSpaces>
```

6.7.3 executableImage

6.7.3.1 Schema

The following schema details the information contained in the **executableImage** element, which may appear inside an **addressSpace** element.

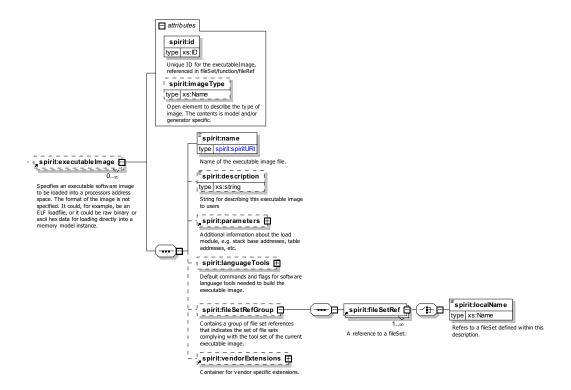

6.7.3.2 Description

The **executableImage** element describes the details of an executable image that can be loaded and executed in this address space on the processor to which this master bus interface belongs and contains the following elements.

- a) **id** (mandatory) attribute uniquely identifies the **executableImage** for reference in a **fileSet/ function/fileRef**. The **id** attribute is of type **ID**.
- b) **imageType** (optional) attribute can describe the binary executable format (e.g., raw binary). The list of possible values is user-defined. The **imageType** attribute is of type *Name*.
- c) **name** (mandatory) identifies the location of the executable object. The **name** element is of type *spiritURI*.
- d) description (optional) allows a textual description of the address space. The description element is of type string.
- e) parameters (optional) specifies any parameter data value(s) for this executable object. See <u>C.11</u>.
- f) **languageTools** (optional) contains further elements to describe the information needed to build the executable image. See <u>6.7.4</u>.
- g) **fileSetRefGroup** (optional) element contains a list of **fileSetRef** subelements, each one containing the name of a file set associated with this **executableImage**. See <u>6.13</u>.
- h) **vendorExtensions** (optional) holds any vendor-specific data from other namespaces, which is applicable to this address space. See <u>C.10</u>.

See also: <u>SCR 9.3</u>.

6.7.3.3 Example


The following example shows the definition of a binary executable produced using the Gnu C Compiler (GCC) software tools.

```
<spirit:executableImage spirit:id="gnu" spirit:imageType="bin">
   <spirit:name>calculator.x</spirit:name>
   <spirit:description>Calculator function</spirit:name>
   <spirit:languageTools>
      <spirit:fileBuilder>
          <spirit:fileType>cSource</spirit:fileType>
          <spirit:command spirit:id="gccCompilerDefault"> gcc/
   spirit:command>
          <spirit:flags spirit:id="gccCFlags">-c -g -I${INCLUDES LOCATION}/
   software/include -I${GCC LIBRARY}/common/include</spirit:flags>
      </spirit:fileBuilder>
      <spirit:fileBuilder>
          <spirit:fileType>asmSource</spirit:fileType>
          <spirit:command spirit:id="gccAssemblerDefault">gcc/
   spirit:command>
          <spirit:flags spirit:id="qccAsmFlags">-c -Wa,--qdwarf2 -
   I${INCLUDES LOCATION}/software/include -I${GCC LIBRARY}/common/include</
   spirit:flags>
      </spirit:fileBuilder>
      <spirit:linker spirit:id="gccLinker">gcc</spirit:linker>
      <spirit:linkerFlags spirit:id="gccLnkFlags">-g -nostdlib -static -
   mcpu=arm9</spirit:linkerFlags>
      <spirit:linkerCommandFile>
      <spirit:name spirit:id="lnkCmdFile">linker.ld</spirit:name>
      <spirit:commandLineSwitch spirit:id="lnkCmSwitch">-T
   spirit:commandLineSwitch>
      <spirit:enable spirit:id="lnkCmdEnable">true</spirit:enable>
      <spirit:generatorRef>org.spiritconsortium.tool</spirit:generatorRef>
      </spirit:linkerCommandFile>
   </spirit:languageTools>
   <spirit:fileSetRefGroup>
      <spirit:fileSetRef>
          <spirit:localName>calculatorAppC</spirit:localName>
      </spirit:fileSetRef>
      <spirit:fileSetRef>
          <spirit:localName>mathFunctions/spirit:localName>
      </spirit:fileSetRef>
      <spirit:fileSetRef>
          <spirit:localName>coreLib-gnu</spirit:localName>
      </spirit:fileSetRef>
   </spirit:fileSetRefGroup>
</spirit:executableImage>
```

6.7.4 languageTools

6.7.4.1 Schema

The following schema details the information contained in the **languageTools** element, which may appear as an element inside the **executableImage** element.

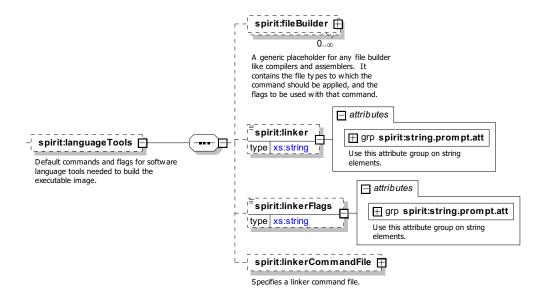

6.7.4.2 Description

The **languageTools** element contains the following list of optional elements to document a set of software tools used to create an executable binary documented by the parent **executableImage** element. Multiple **languageTools** information can be created to reflect various software tool sets that can create this executable binary file.

- a) **fileBuilder** (optional) contains the information details of a compiler or assembler for software source code. See 6.7.5.
- b) **linker** (optional) documents the link editor associated with the software tools described in **file-Builder**. The **linker** element is of type string. The **linker** element is configurable with attributes from **string.prompt.att**, see <u>C.12</u>.
- c) **linkerFlags** (optional) can also be associated with any **linker** information. The **linkerFlags** element is of type *string*. The **linkerFlags** element is configurable with attributes from *string.prompt.att*, see C.12.
- d) **linkerCommandFile** (optional) documents a file containing commands the linker follows. See <u>6.7.6</u>.

See also: SCR 9.7.

6.7.4.3 Example


The following example shows the definition of GCC software tools used together to produce an executable binary code file.

```
<spirit:command spirit:id="gccAssemblerDefault">gcc</spirit:command>
      <spirit:flags spirit:id="gccAsmFlags">-c -Wa,--gdwarf2 -
   I${INCLUDES LOCATION}/software/include -I${GCC LIBRARY}/common/include</
   spirit:flags>
   </spirit:fileBuilder>
   <spirit:linker spirit:id="gccLinker">gcc</spirit:linker>
   <spirit:linkerFlags spirit:id="gccLnkFlags">-g -nostdlib -static -
   mcpu=arm9</spirit:linkerFlags>
   <spirit:linkerCommandFile>
      <spirit:name spirit:id="lnkCmdFile">linker.ld</spirit:name>
      <spirit:commandLineSwitch spirit:id="lnkCmSwitch">-T
   spirit:commandLineSwitch>
      <spirit:enable spirit:id="lnkCmdEnable">true</spirit:enable>
      spirit:generatorRef>org.spiritconsortium.tool</spirit:generatorRef>
   </spirit:linkerCommandFile>
</spirit:languageTools>
```

6.7.5 fileBuilder

6.7.5.1 Schema

The following schema details the information contained in the **fileBuilder** element, which may appear as an element inside a **languageTools** element within the **executableImage** element.

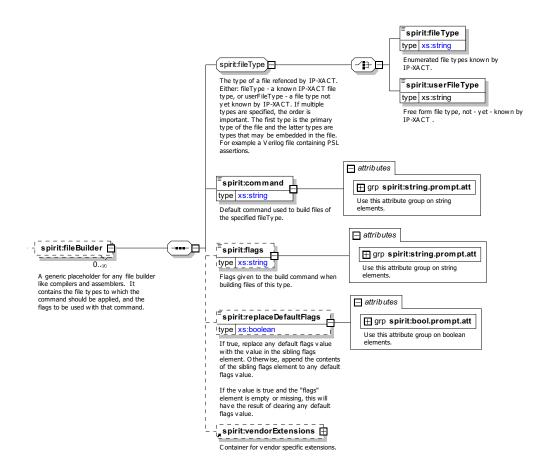

6.7.5.2 Description

The **fileBuilder** element contains the following elements.

- a) *fileType* (mandatory) group contains one or more of the elements defined in <u>C.9</u>.
- b) **command** (optional) element defines a compiler or assembler tool that processes the software of this type. The **command** element is of type *string*. The **command** element is configurable with attributes from *string.prompt.att*, see <u>C.12</u>.
- c) **flags** (optional) documents any flags to be passed along with the software tool command. The **flags** element is of type *string*. The **flags** element is configurable with attributes from *string.prompt.att*, see C.12.
- d) replaceDefaultFlags (optional) documents, when true, flags that replace any of the default flags from a build script generator. If false, the flags contained in the flags element are appended to the current command. If the value is true and the flags element is empty or does not exist, this has the effect of clearing all the flags in build script generator. The replaceDefaultFlags element is of type boolean. The replaceDefaultFlags element is configurable with attributes from bool.prompt.att, see C.12.
- e) **vendorExtensions** (optional) holds vendor-specific data from other namespaces applicable to building this software source code file into an executable object file. See <u>C.10</u>.

6.7.5.3 Example


The following example shows the specification for compiling a C language file using GCC.

```
<spirit:fileBuilder>
    <spirit:fileType>cSource</spirit:fileType>
    <spirit:command spirit:id="gccCompilerDefault"> gcc</spirit:command>
        <spirit:flags spirit:id="gccCFlags">-c -g -I${INCLUDES_LOCATION}/software/
        include -I${GCC_LIBRARY}/common/include</spirit:flags>
    </spirit:fileBuilder>
```

6.7.6 linkerCommandFile

6.7.6.1 Schema

The following schema details the information contained in the **linkerCommandFile** element, which may appear as an element inside a **languageTools** element within the **executableImage** element.

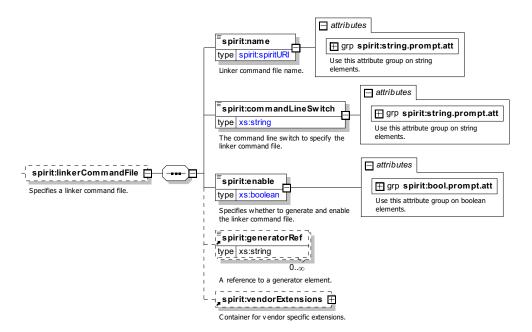

6.7.6.2 Description

The **linkerCommandFile** element contains information related to contents of the **linker** and **linkerFlags** elements, specifically about a file containing linker commands. It contains the following elements.

- a) **name** (mandatory) documents the location and name of the file containing commands for the linker. The **name** element is of type *spiritURI*. The **name** element is configurable with attributes from *string.prompt.att*, see C.12.
- b) **commandLineSwitch** (mandatory) documents the flag on the command line specifying the linker command file. The **commandLineSwitch** element is of type *spiritURI*. The **commandLineSwitch** element is configurable with attributes from *string.prompt.att*, see <u>C.12</u>.
- c) **enable** (mandatory) indicates whether to use this linker command file in the default scenario. The **enable** element is of type *boolean*. The **enable** element is configurable with attributes from *bool.prompt.att*, see <u>C.12</u>. The following also apply. For:
 - enable=true and a generatorRef, run the generator to link the executableImage; it may use
 the other elements to link the executableImage.
 - 2) **enable=true** and no **generatorRef**, run the linker with the **-commandLineSwitch** *name* (the command file).
 - 3) **enable=false**, run the linker with **linkerFlags**.
- d) **generatorRef** (optional) references the generator (in the containing component) that creates and launches the linker command. There may be any number of these elements present. The **generator-Ref** element is of type *string*. See <u>6.12</u>.
- e) **vendorExtensions** (optional) holds any vendor-specific data from other namespaces applicable to using this linker. See <u>C.10</u>.

6.7.6.3 Example


The following example shows the definition of a status register which can be accessed within a component during verification.

```
<spirit:linkerCommandFile>
    <spirit:name spirit:id="linkerCommandFileName2">linker.ld</spirit:name>
    <spirit:commandLineSwitch spirit:id="lnkCmSwitch">-T</
        spirit:commandLineSwitch>
        <spirit:enable spirit:id="lnkCmdEnable">true</spirit:enable>
        <spirit:generatorRef>org.spiritconsortium.tool.gccLinkerLauncher</
        spirit:generatorRef>
    </spirit:linkerCommandFile>
```

6.7.7 Local memory map

6.7.7.1 Schema

The following schema details the information contained in the **localMemoryMap** element, which may appear inside an **addressSpace** element.

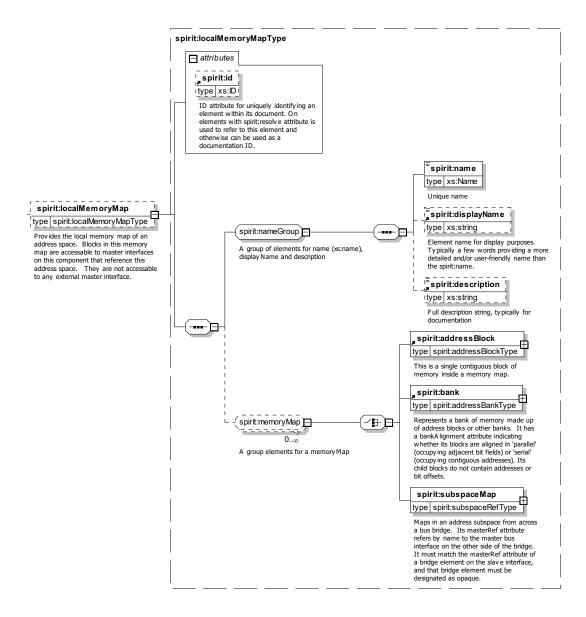

6.7.7.2 Description

Some processor components require specifying a memory map that is local to the component. *Local memory maps* (the **localMemoryMap** element in the **addressSpace** element of the component) are blocks of memory within a component that can only be accessed by the master interfaces of that component. If the master interface containing a local memory map is bridged from a slave interface (see <u>6.4.2</u>), the local memory map is visible from this slave interface. The **localMemoryMap** element contains an **id** (optional) attribute that assigns a unique identifier to the containing element for reference throughout the containing description. **localMemoryMap** contains the following mandatory and optional elements.

- a) *nameGroup* group is describe in <u>C.1</u>.
- b) *memoryMap* group (optional) is any number of the following.
 - 1) addressBlock describes a single block. See <u>6.8.2</u>.
 - 2) bank represents a collection of address blocks, banks, or subspace maps. See <u>6.8.5</u>.
 - 3) **subspaceMap** maps the address subspaces of master interfaces into the slave's memory map. See <u>6.8.9</u>.

6.7.7.3 Example


The following example shows a secure register space with limited access to the master bus interface as the definition of a local memory map for an address space.

6.8 Memory maps

6.8.1 memoryMaps

6.8.1.1 Schema

The following schema details the information contained in the **memoryMaps** element, which may appear as an element inside the **component** element.

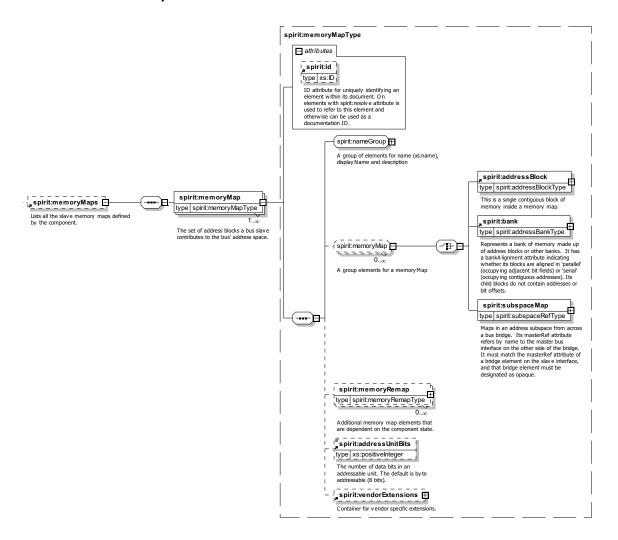

6.8.1.2 Description

A memory map can be defined for each slave interface of a component. The **memoryMaps** element contains an unbounded list of **memoryMap** elements. The **memoryMap** elements are referenced by the component's slave interface. The **memoryMap** element contains an **id** (optional) attribute that assigns a unique identifier to the containing element for reference throughout the containing description. **memoryMap** contains the following mandatory and optional elements.


- a) **nameGroup** group is defined in <u>C.1</u>. The **name** element shall be unique within the containing **memoryMaps** element.
- b) *memoryMap* group (optional) is any number of the following.
 - 1) addressBlock describes a single block. See <u>6.8.2</u>.

- 2) bank represents a collections of address blocks, banks, or subspace maps. See <u>6.8.5</u>.
- 3) **subspaceMap** maps the address subspaces of master interfaces into the slave's memory map. See <u>6.8.9</u>.
- c) The optional memoryRemap element describes additional address blocks, banks, and subspace maps of a slave bus interface in a specific remap state.
- d) The optional **addressUnitBits** element defines the number of data bits in each address increment of the memory map. This is required to allow the elements in the memory map to define items such as register offsets. The **addressUnitBits** element is of type **positiveInteger**.
- e) **vendorExtensions** (optional) adds any extra vendor-specific data related to the memory map. See C.10.

6.8.2 Address block

6.8.2.1 Schema

The following schema details the information contained in the **addressBlock** element, which may appear in a **memoryMap** element. It is of type *addressBlockType*.

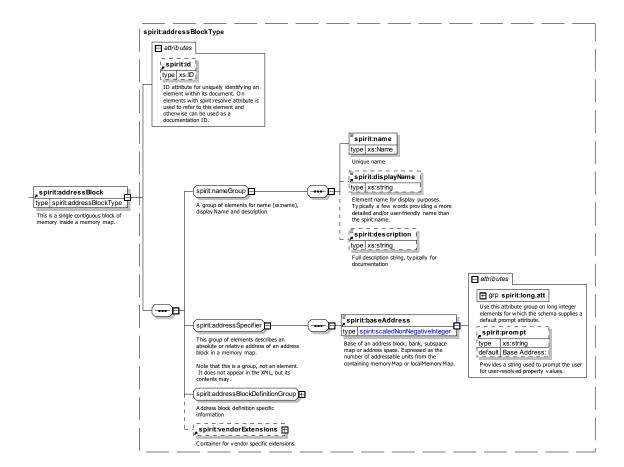

6.8.2.2 Description

The addressBlock element describes a single, contiguous block of memory that is part of a memory map. The addressBlock element contains an id (optional) attribute that assigns a unique identifier to the containing element for reference throughout the containing description. addressBlock contains the following mandatory and optional elements.

- a) nameGroup is defined in <u>C.1</u>. The name of the addressBlock, subspaceMap, bank, and memoryRemap shall be unique within the containing memoryMap, localMemoryMap, or memoryRemap element.
- b) addressSpecifier group includes the following.

baseAddress (mandatory) specifies the starting address of the block. The baseAddress is expressed in addressing units from the containing memoryMap/addressUnitBits or localMemoryMap/addressUnitBits element. The baseAddress element is of type scaledNonNegativeInteger. The baseAddress element is configurable with attributes from long.att, see C.12. The prompt (optional) attribute allows the setting of a string for the configuration and has a default value of "Base Address:".

- c) *addressBlockDefinitionGroup* group contains definition information about address blocks. See <u>6.8.3</u>.
- d) vendorExtensions (optional) adds any extra vendor-specific data related to the address block. See C.10.

See also: <u>SCR 8.1</u> and <u>SCR 8.16</u>.


6.8.2.3 Example

The following example shows an address block starting at address 0x1000 in memory map map1, containing 64 addressable 8-bit units, organized into larger 32-bit units.

6.8.3 Address block definition group

6.8.3.1 Schema

The following schema details the information contained in the *addressBlockDefinitionGroup* group, which may appear in an *addressBlock* element.

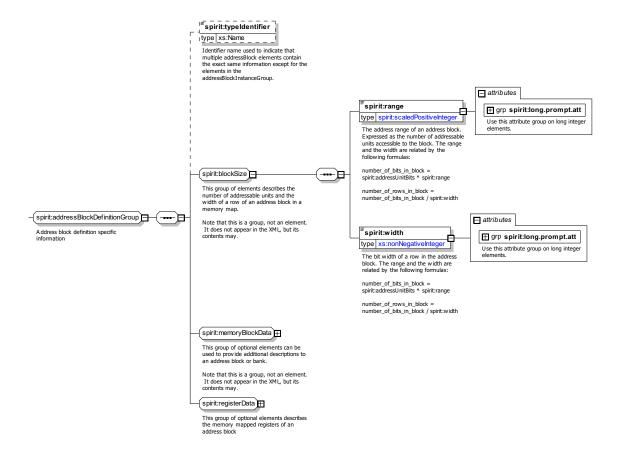


6.8.3.2 Description

The *addressBlockDefinitionGroup* group describes the definition information about address blocks. It contains the following mandatory and optional elements.

- a) **typeIdentifier** (optional) indicates multiple address block elements with the same **typeIdentifier** in the same description contain the exact same information for the elements in the **addressBlockDefinitionsGroup**. The **typeIdentifier** element is of type *Name*.
- b) blockSize group includes the following.
 - range (mandatory) gives the address range of an address block. This is expressed as the number of addressable units. The size of an addressable unit is defined inside the containing memoryMap/addressUnitBits or memoryMap/addressUnitBits element. The range element is of type scaledPositiveInteger. The range element is configurable with attributes from long.prompt.att, see C.12.
 - 2) width (mandatory) is the bit width of a row in the address block. A row in an address block sets the maximum single transfer size into the memory map allowed by the referencing bus interface and also defines the maximum size that a single register can be defined across an interconnection. The width element is of type nonNegativeInteger. The width element is configurable with attributes from long.prompt.att, see C.12.
- c) *memoryBlockData* group contains information about usage, access, volatility, and other parameters. See 6.8.4.
- d) *registerData* group contains information about the grouping of bits into registers and fields. See 6.10.1.

The **range** and **width** elements are related by the following formulas.

```
number_of_bits_in_block = addressUnitBits × range
number of rows in block = number of bits in block / width
```

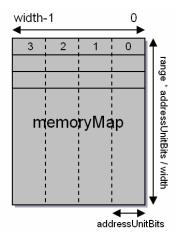

See also: <u>SCR 8.1</u> and <u>SCR 7.15</u>.


6.8.3.3 Example

The following example shows an address block starting at address 0 in memory map map1, containing 1024 addressable 8-bit units, organized into larger 32-bit units.

6.8.4 memoryBlockData group

6.8.4.1 Schema

The following schema details the information contained in the *memoryBlockData* group, an optional part of both addressBlock and bank.

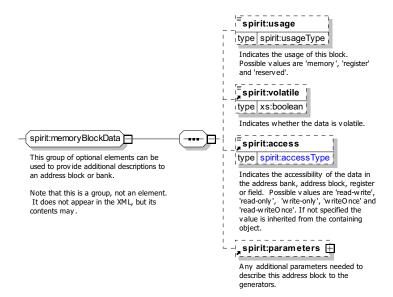

6.8.4.2 Description

The *memoryBlockData* group is a collection of elements that contains further specification of **addressBlock** or **bank** elements. It contains the following elements.

- a) usage (optional) specifies the type of usage for the address block or bank to which it belongs.
 - For an addressBlock:
 - i) memory defines, when the access element is set to read-only, the entire range of the addressBlock as a ROM. If the access element is set to read-write, the entire range of the addressBlock is a RAM. If the access element is set to write-only, the entire range of the addressBlock is a write-only memory. This usage type shall not contain registers.
 - ii) register defines the entire range of the addressBlock as possible locations for registers.
 - iii) **reserved** defines the entire range of the **addressBlock** as reserved or for unknown usage to IP-XACT. This type shall not contain registers.
 - iv) If unspecified, the presumed value for **usage** shall be **register** if the **addressBlock** contains **register** elements; otherwise it is **reserved**.
 - 2) For a **bank**:
 - i) memory defines all containing addressBlock elements are of this access type.
 - ii) register defines all containing addressBlock elements are of this access type.
 - iii) reserved defines all containing addressBlock elements are of this access type.
 - iv) Unspecified usage means the bank may contain a mixture of **memory**, **register**, and **reserved addressBlock** elements.
- b) volatile (optional) when true indicates the case of a write followed by read, or in the case of two consecutive reads, there is no guarantee what is returned by the read on the second transaction or that this return value is consistent with the write or read of the first transaction. The element implies there is some additional mechanism by which these registers can acquire new values other than reads/writes/resets and other access methods known to IP-XACT. If this element is not present, it is presumed to be false for a field and unspecified for bank, addressBlock, or register. The volatile element is of type boolean.

- c) **access** (optional) specifies the accessibility of the data in the address block. If the **usage** element is **reserved**, this element has no meaning. If the **access** is not specified, the value shall be inherited from the containing **bank** or default to **read-write** if this element is contained in a **memoryMap**.
 - read-write defines, when the usage element is memory, the entire range is a RAM. If the
 usage element is register, then any access type for a register or alternate register is
 allowed.
 - ii) **read-only** defines, when the **usage** element is **memory**, the entire range is a ROM. If the **usage** element is **register**, then an access type shall be **read-only** for a register or alternate register.
 - iii) **write-only** defines, when the **usage** element is **memory**, the entire range is a write-only memory. If the **usage** element is **register**, then an access type shall be **write-only** or **writeOnce** for a register or alternate register.
 - iv) **read-writeOnce** defines, when the **usage** element is **memory**, the entire range is a RAM that is writable once after power up. If the **usage** element is **register**, then the access type for a register or alternate register shall be **read-only**, **read-writeOnce**, **write-only**, or **writeOnce**.
 - v) **writeOnce** defines, when the **usage** element is **memory**, the entire range is a write-only memory that is writable once after power up. If the **usage** element is **register**, then the access type for a register or alternate register shall be **writeOnce**.
- d) **parameters** (optional) details any additional parameters that describe the address block for generator usage. See <u>C.11</u>.

See also: SCR 8.3, SCR 8.4, SCR 8.6, SCR 8.7, SCR 8.9, SCR 8.10, SCR 8.11, SCR 8.13, and SCR 8.14.


6.8.4.3 Example

The following example shows an address block starting at address 0x0 containing 64 addressable memory locations of 8 bits, organized into larger 32-bit units.

6.8.5 Bank

6.8.5.1 Schema

The following schema details the information contained in the **bank** element, which can appear in a **memoryMap** element. It is of type *addressBankType*.

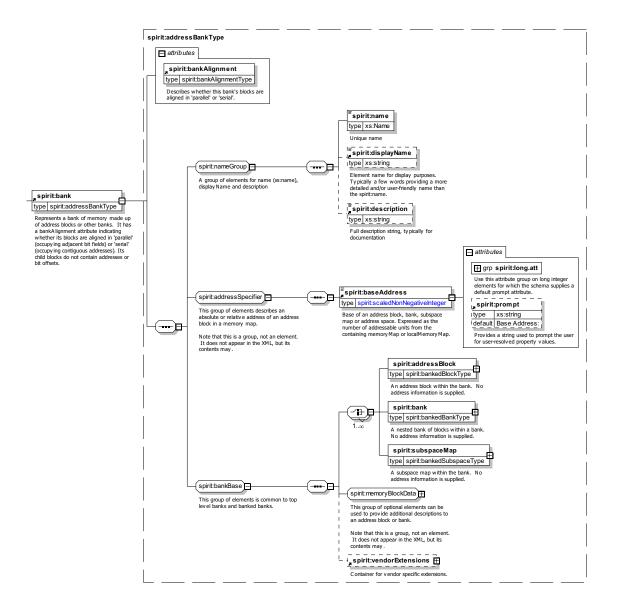

6.8.5.2 Description

The **bank** element allows multiple **addressBlocks**, **banks**, or **subspaceMaps** to be concatenated together horizontally or vertically as a single entity. It contains the following attributes and elements.

- a) bankAlignment (mandatory) attribute organizes the bank:
 - parallel specifies each item is located at the same base address with different bit offsets. The bit offset of the first item in the bank always starts at 0, the offset of the next items in the bank is equal to the widths of all the previous items.
 - 2) serial specifies the first item is located at the bank's base address. Each subsequent item is located at the previous item's address, plus the range of that item (adjusted for LAU and bus width considerations, rounded up to the next whole multiple). This allows the user to specify only a single base address for the bank and have each item assigned an address in sequence.
- b) nameGroup is defined in <u>C.1</u>. The name of the addressBlock, subspaceMap, bank, and memoryRemap shall be unique within the containing memoryMap, localMemoryMap, or memoryRemap element.

- c) addressSpecifier group includes the following.
 - baseAddress (mandatory) specifies the starting address of the block. The baseAddress is expressed in addressing units from the containing memoryMap/addressUnitBits or localMemoryMap/addressUnitBits element. The type of this element is set to scaledNonNegativeInteger. The baseAddress element is configurable with attributes from bool.prompt.att, see C.12. The prompt attribute allows the setting of a string for the configuration and has a default value of "Base Address:".
- d) **bankBase** group includes the following. This group is later used inside the **bankedBaseType** type to create recursion.
 - addressBlock (multiple usage allowed) is an address block that makes up part of the bank. See 6.8.6.
 - 2) bank (multiple usage allowed) is a bank within the bank. This allows for complex configurations with nested banks. See <u>6.8.7</u>.
 - 3) **subspaceMap** (multiple usage allowed) is a reference to the master's address map for inclusion in the bank. See <u>6.8.9</u>.
 - 4) *memoryBlockData* group contains information about usage, access, volatility, and other parameters. See <u>6.8.4</u>.
 - 5) **vendorExtensions** adds any extra vendor-specific data related to this bank. See <u>C.10</u>.

See also: SCR 8.2.

6.8.5.3 Example


The following example shows a serial bank with four memory blocks of 1 k units of 32-bit data. The only address specified is 0×10000 , but this causes address block ram0, ram1, ram2, and ram3 to be mapped to addresses 0×10000 , 0×11000 , 0×11000 , 0×12000 , and 0×13000 respectively.

```
<spirit:memoryMap>
   <spirit:bank bankAlignment="serial">
      <spirit:name>bank1</spirit:name>
      <spirit:baseAddress>0x10000</spirit:baseAddress>
      <spirit:addressBlock>
          <spirit:name>ram0</spirit:name>
          <spirit:range>0x1000</spirit:range>
          <spirit:width>32</spirit:width>
      </spirit:addressBlock>
      <spirit:addressBlock>
          <spirit:name>ram1</spirit:name>
          <spirit:range>0x1000</spirit:range>
          <spirit:width>32</spirit:width>
      </spirit:addressBlock>
      <spirit:addressBlock>
          <spirit:name>ram2</spirit:name>
          <spirit:range>0x1000</spirit:range>
          <spirit:width>32</spirit:width>
      </spirit:addressBlock>
      <spirit:addressBlock>
          <spirit:name>ram3</spirit:name>
          <spirit:range>0x1000</spirit:range>
          <spirit:width>32</spirit:width>
      </spirit:addressBlock>
   </spirit:bank>
   <spirit:addressUnitBits>8</spirit:addressUnitBits>
</spirit:memoryMap>
```

6.8.6 Banked address block

6.8.6.1 Schema

The following schema details the information contained in the **addressBlock** element, which can appear in a **bank** element. It is of type **bankedBlockType**.

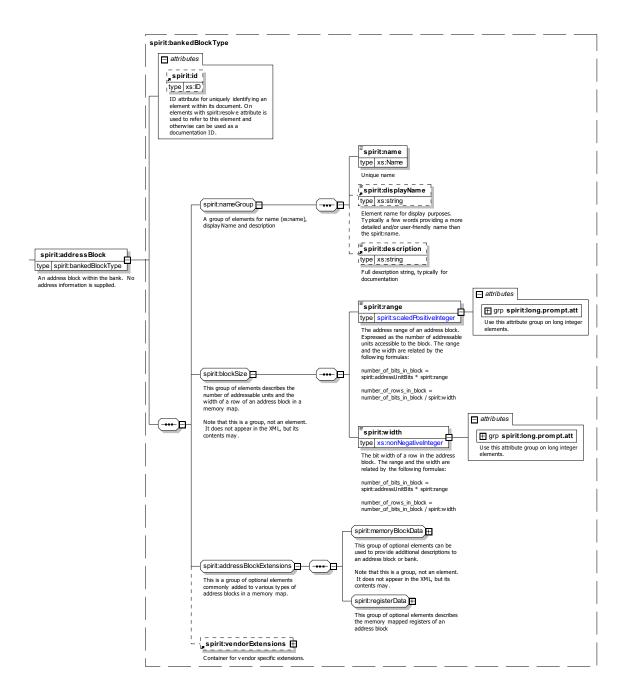

6.8.6.2 Description

The addressBlock element inside a bank element describes a single, contiguous block of memory that is part of a bank. The addressBlock element contains an id (optional) attribute that assigns a unique identifier to the containing element for reference throughout the containing description. addressBlock contains the following mandatory and optional elements.

- a) *nameGroup* group is defined in <u>C.1</u>. The **name** of the **addressBlock**, **subspaceMap**, and **bank** shall be unique within the containing **bank** element.
- b) blockSize group includes the following.
 - 1) range (mandatory) gives the address range of an address block. This is expressed as the number of addressable units of the memory map. The size of an addressable unit is defined inside the containing memoryMap/addressUnitBits or localMemoryMap/addressUnitBits element. The type of this element is set to scaledPositiveInteger. The range element is configurable with attributes from long.prompt.att, see C.12.
 - 2) width (mandatory) is the bit width of a row in the address block. The type of this element is set to nonNegativeInteger. The width element is configurable with attributes from long.prompt.att, see C.12.
- memoryBlockData group contains information about usage, access, volatility, and other parameters.
 See 6.8.4.
- d) *registerData* group contains information about the grouping of bits into registers and fields. See 6.10.2.
- e) **vendorExtensions** (optional) adds any extra vendor-specific data related to the address block. See C.10.

NOTE—The *bankedBlockType* of an **addressBlock** element is almost identical to the *addressBlockType* of an **addressBlock** element (see <u>6.8.2</u>); the only difference is there is no **baseAddress** and **typeIdentifier** in the *bankedBlockType* version.

See also: SCR 7.5.


6.8.6.3 Example

See the example in 6.8.5.3.

6.8.7 Banked bank

6.8.7.1 Schema

The following schema details the information contained in the nested **bank** element, which can appear in another **bank** element. It is of type **bankBankType**.

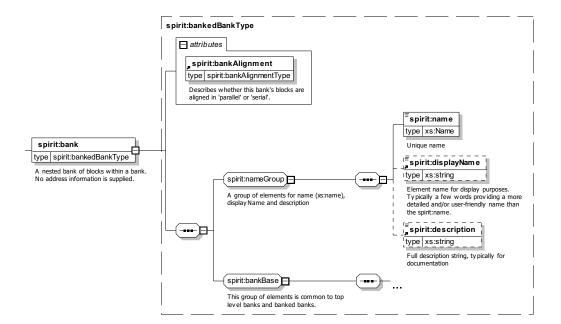

6.8.7.2 Description

The **bank** element allows multiple address **blocks**, **banks**, or **subspaceMaps** to be to be concatenated together horizontally or vertically as a single entity. It contains the following attributes and elements.

- a) **bankAlignment** (mandatory) attribute organizes the bank:
 - 1) *parallel* specifies each item is located at the same base address with different bit offsets. The bit offset of the first item in the bank always starts at 0, the offset of the next items in the bank is equal to the widths of all the previous items.
 - 2) serial specifies the first item is located at the bank's base address. Each subsequent item is located at the previous item's address, plus the range of that item (adjusted for LAU and bus width considerations, rounded up to the next whole multiple). This allows the user to specify only a single base address for the bank and have each item assigned an address in sequence.
- b) *nameGroup* group is defined in <u>C.1</u>. The **name** of the **addressBlock**, **subspaceMap**, and **bank** shall be unique within the containing **bank** element.
- c) The **bank** element of type **bankedBankType** contains the **bankBase** group. This group is defined inside the **bank** element of type **addressBankType**. See <u>6.8.5</u>. The effect of its inclusion here creates recursion, whereby banks maybe included inside banks included inside banks.

NOTE—A banked bank is similar to a bank in a memory map (see <u>6.8.5</u>); the only difference is there is no **baseAddress** element in a **bank** of type **bankedBankType**.

See also: SCR 8.2.

6.8.7.3 Example


The following example shows a serial bank with two memory blocks of 1 k units of 32-bit data. The only address specified is 0×10000 , but this causes address block ram0 and bankRam1 to be mapped to addresses 0×10000 and 0×11000 , respectively. The memory bank bankRam1 is made up of two parallel memory blocks each with 16 bits of data.

```
<spirit:memoryMap>
   <spirit:bank bankAlignment="serial">
      <spirit:name>bank1</spirit:name>
      <spirit:baseAddress>0x10000</spirit:baseAddress>
      <spirit:addressBlock>
          <spirit:name>ram0</spirit:name>
          <spirit:range>0x1000</spirit:range>
          <spirit:width>32</spirit:width>
      </spirit:addressBlock>
      <spirit:bank bankAlignment="parallel">
          <spirit:name>bankRam1</spirit:name>
          <spirit:addressBlock>
             <spirit:name>ram1.0</spirit:name>
             <spirit:range>0x1000</spirit:range>
             <spirit:width>16</spirit:width>
          </spirit:addressBlock>
          <spirit:addressBlock>
             <spirit:name>ram1.1</spirit:name>
             <spirit:range>0x1000</spirit:range>
             <spirit:width>16</spirit:width>
          </spirit:addressBlock>
      </spirit:bank>
   </spirit:bank>
   <spirit:addressUnitBits>8</spirit:addressUnitBits>
</spirit:memoryMap>
```

6.8.8 Banked subspace

6.8.8.1 Schema

The following schema details the information contained in the **subspaceMap** element, which can appear in a **bank** element. It is of type **bankSubspaceType**.

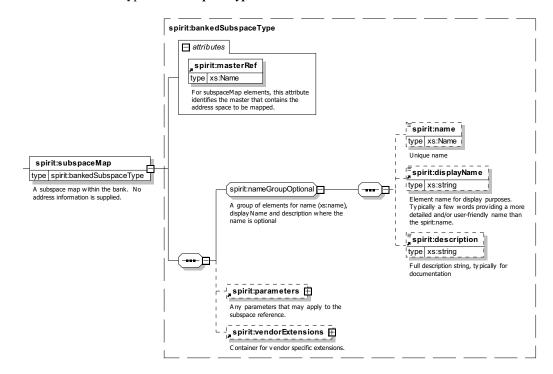

6.8.8.2 Description

The **subspaceMap** element allows a bank to map the address space of a master interface into the bank. It contains the following elements.

- a) masterRef attribute contains the name of the master interface whose address space needs to be mapped. This shall reference a bus interface name with an interface mode of master (see <u>6.5.3</u>). The master interface shall also be referenced by a second interface through a slave/bridge/masterRef element, and the bridge element shall also have the opaque attribute set to true.
- b) *nameGroupOptional* group is defined in <u>C.2</u>. The **name** of the **addressBlock**, **subspaceMap**, and **bank** shall be unique within the containing **bank** element.
- c) parameters details any additional parameters that apply to the **subspaceMap**. See <u>C.11</u>.
- d) **vendorExtensions** adds any extra vendor-specific data related to the **subspaceMap**. See <u>C.10</u>.

See also: SCR 8.2.

6.8.8.3 Example

The following example shows an address space from master M1 mapped into the slave interface S memory map starting at address 0×0000 . An address space from master M2 is mapped into the slave interface S memory map starting at address 0×1000 .


```
<spirit:component>...
   <spirit:busInterfaces>
      <spirit:busInterface>
          <spirit:name>M1</spirit:name>
          <spirit:master>
             <spirit:addressSpaceRef spirit:addressSpaceRef="memAS1"\>
          </spirit:master>
      </spirit:busInterface>
      <spirit:busInterface>
          <spirit:name>M2</spirit:name>
          <spirit:master>
             <spirit:addressSpaceRef spirit:addressSpaceRef="memAS2"\>
          </spirit:master>
      </spirit:busInterface>
      <spirit:busInterface>
          <spirit:name>S</spirit:name>
          <spirit:slave>
             <spirit:memoryMapRef spirit:memoryMapRef="memMap"/>
             <spirit:bridge spirit:masterRef="M1" spirit:opaque="true"/>
             <spirit:bridge spirit:masterRef="M2" spirit:opaque="true"/>
          </spirit:slave>
      </spirit:busInterface>
   </spirit:busInterfaces>
   <spirit:addressSpaces>
      <spirit:addressSpace>
          <spirit:name>memAS1</spirit:name>
          <spirit:range>0x1000</spirit:range>
          <spirit:width>32</spirit:width>
      </spirit:addressSpace>
      <spirit:addressSpace>
          <spirit:name>memAS2</spirit:name>
          <spirit:range>0x1000</spirit:range>
          <spirit:width>32</spirit:width>
      </spirit:addressSpace>
   </spirit:addressSpaces>
```

```
<spirit:memoryMaps>
      <spirit:memoryMap>
          <spirit:name>memMap</spirit:name>
          <spirit:bank bankAlignment="serial">
             <spirit:name>memBank</spirit:name>
             <spirit:baseAddr baseAddress>0x0000</spirit:baseAddress>
             <spirit:subspaceMap spirit:masterRef="M1">
                 <spirit:name>submap1</spirit:name>
             </spirit:subspaceMap>
             <spirit:subspaceMap spirit:masterRef="M2">
                 <spirit:name>submap2</spirit:name>
             </spirit:subspaceMap>
          </spirit:bank>
      </spirit:memoryMap>
   </spirit:memoryMaps>
</spirit:component>
```

6.8.9 Subspace map

6.8.9.1 Schema

The following schema details the information contained in the **subspaceMap** element, which can appear in a **memoryMap** element. It is of type **subspaceRefType**.

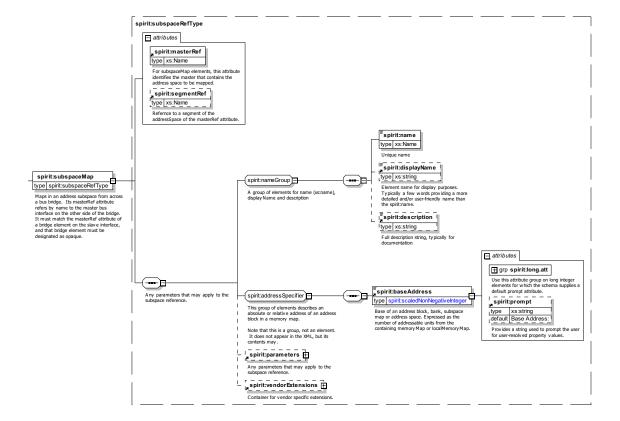

6.8.9.2 Description

The **subspaceMap** element maps the address space of a master interface from an opaque bus bridge into the memory map. It contains the following elements.

- a) masterRef (mandatory) attribute contains the name of the master interface whose address space needs to be mapped. This shall reference a bus interface name with an interface mode of master (see 6.5.3). The master interface shall also be referenced by a second interface through an slave/bridge/masterRef element, and the bridge element shall also have the opaque attribute set to true.
- b) **segmentRef** (optional) references a **segment** in the **addressSpace** referred by the **masterRef** attribute. If the **segmentRef** attribute is not present, the entire **addressSpace** is presumed to be referenced.
- c) nameGroup group is defined in <u>C.1</u>. The name of the addressBlock, subspaceMap, bank, and memoryRemap shall be unique within the containing memoryMap, localMemoryMap, or memoryRemap element.
- d) addressSpecifier group includes the following.
 - baseAddress (mandatory) specifies the starting address of the block. The baseAddress is expressed in addressing units from the containing memoryMap/addressUnitBits or localMemoryMap/addressUnitBits element. The type of this element is set to scaledNonNegativeInteger. The baseAddress element is configurable with attributes from long.att, see C.12. The prompt attribute allows the setting of a string for the configuration and has a default value of "Base Address:".
- e) parameters (optional) details any additional parameters that apply to the **subspaceMap**. See <u>C.11</u>.
- f) **vendorExtensions** (optional) adds any extra vendor-specific data related to the **subspaceMap**. See <u>C.10</u>.

See also: <u>SCR 9.9</u> and <u>SCR 3.18</u>.

6.8.9.3 Example

The following example shows an address space from master M1 mapped into the slave interface S memory map starting at address 0×0000 . An address space from master M2 is mapped into the slave interface S memory map starting at address 0×1000 .

```
<spirit:component>...
   <spirit:busInterfaces>
      <spirit:busInterface>
          <spirit:name>M1</spirit:name>
          <spirit:master>
             <spirit:addressSpaceRef spirit:addressSpaceRef="memAS1"\>
          </spirit:master>
      </spirit:busInterface>
      <spirit:busInterface>
          <spirit:name>M2</spirit:name>
          <spirit:master>
             <spirit:addressSpaceRef spirit:addressSpaceRef="memAS2"\>
          </spirit:master>
      </spirit:busInterface>
      <spirit:busInterface>
          <spirit:name>S</spirit:name>
          <spirit:slave>
             <spirit:memoryMapRef spirit:memoryMapRef="memMap"/>
             <spirit:bridge spirit:masterRef="M1" spirit:opaque="true"/>
             <spirit:bridge spirit:masterRef="M2" spirit:opaque="true"/>
          </spirit:slave>
      </spirit:busInterface>
   </spirit:busInterfaces>
   <spirit:addressSpaces>
      <spirit:addressSpace>
          <spirit:name>memAS1</spirit:name>
          <spirit:range>0x1000</spirit:range>
```


```
<spirit:width>32</spirit:width>
      </spirit:addressSpace>
      <spirit:addressSpace>
          <spirit:name>memAS2</spirit:name>
          <spirit:range>0x1000</spirit:range>
          <spirit:width>32</spirit:width>
      </spirit:addressSpace>
   </spirit:addressSpaces>
   <spirit:memoryMaps>
      <spirit:memoryMap>
          <spirit:name>memMap</spirit:name>
          <spirit:subspaceMap spirit:masterRef="M1">
             <spirit:name>submap1</spirit:name>
             <spirit:baseAddr baseAddress>0x0000</spirit:baseAddress>
          </spirit:subspaceMap>
          <spirit:subspaceMap spirit:masterRef="M2">
             <spirit:name>submap2</spirit:name>
             <spirit:baseAddress>0x1000</spirit:baseAddress>
          </spirit:subspaceMap>
      </spirit:memoryMap>
   </spirit:memoryMaps>
</spirit:component>
```

6.9 Remapping

6.9.1 Memory remap

6.9.1.1 Schema

The following schema details the information contained in the **memoryRemap** element, which can appear in a **memoryMap** element. It is of type *memoryRemapType*.

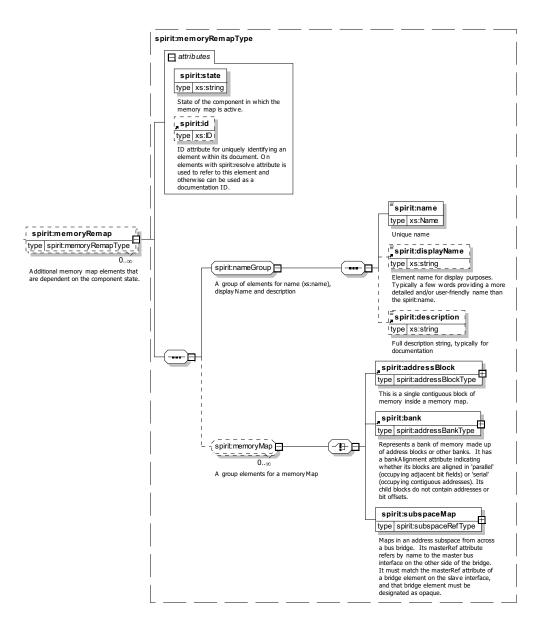

6.9.1.2 Description

The memoryRemap element describes additional addressBlocks, banks, and subspaceMaps that are mapped on the referencing slave bus interface in a specific remap state. If multiple memoryRemap/state attributes are active, then the first memoryRemap listed shall be selected. The memoryRemap element contains an id (optional) attribute that assigns a unique identifier to the containing element for reference throughout the containing description. This element contains the following elements, attributes, and groups.

- a) **state** attribute (mandatory) identifies the remap state name for which the optional memory map element are active. The **state** attribute shall reference a **remapState/name** in the containing description. The **state** attribute of all **memoryRemap** elements contained in a single **memoryMap** element shall be unique. The **state** attribute is of type **string**. See <u>6.9.2</u>.
- b) *nameGroup* group is defined in <u>C.1</u>. The **name** of the **addressBlock**, **subspaceMap**, **bank**, and **memoryRemap** shall be unique within the containing **memoryMap** element.
- c) *memoryMap* group (optional) is any number of the following.

- 1) addressBlock describes a single block. See <u>6.8.2</u>.
- 2) bank represents a collections of address blocks, banks, or subspace maps. See 6.8.5.
- 3) **subspaceMap** maps the address subspaces of master interfaces into the slave's memory map. See <u>6.8.9</u>.

6.9.1.3 Example


This is an example of a memory that is read-write in the normal state, but in state lock is remapped to be a read-only memory.

```
<spirit:memoryMaps>
   <spirit:memoryMap>
      <spirit:name>mmap1</spirit:name>
      <spirit:memoryReMap spirit:state="normal">
          <spirit:addressBlock>
             <spirit:name>ab1</spirit:name>
             <spirit:baseAddress>0x0000</spirit:baseAddress>
             <spirit:range>4096</spirit:range>
             <spirit:usage>memory</spirit:usage>
             <spirit:access>read-write</spirit:access>
          </spirit:addressBlock>
      </spirit:memoryRemap >
      <spirit:memoryReMap spirit:state="lock">
          <spirit:addressBlock>
             <spirit:name>ab1readonly</spirit:name>
             <spirit:baseAddress>0x0000</spirit:baseAddress>
             <spirit:range>4096</spirit:range>
             <spirit:usage>memory</spirit:usage>
             <spirit:access>read-only</spirit:access>
          </spirit:addressBlock>
      </spirit:memoryRemap >
   </spirit:memoryMap>
</spirit:memoryMaps>
```

6.9.2 Remap states

6.9.2.1 Schema

The following schema details the information contained in the **remapStates** element, which may appear as an element inside a **component** element. This element may contain one or more **remapState** elements.

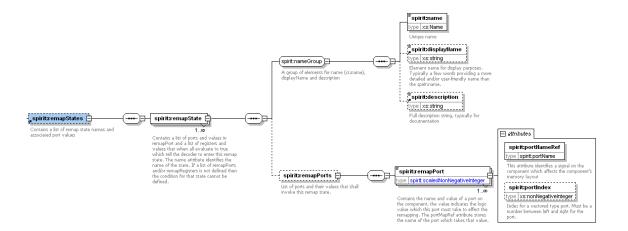

6.9.2.2 Description

A remapStates element describes a set of one or more remapState elements. Each remapState element defines a conditional remap state where each state is conditioned by a remap port specified with a remapPort element. A remapState element does not specify remapping addresses. The remapping addresses are defined by the memoryRemap element (of a memoryMap element) and its state attribute refers to the remapState element's name explained in this subclause.

remapState contains the following elements and attributes.

- a) **nameGroup** group is defined in <u>C.1</u>. The **name** element shall be unique within the containing **remapStates** element.
- b) **remapPorts** (optional) contains a list of **remapPort** elements. **remapPort** (mandatory) specifies when the remap state gets effective. A collection of **remapPort** elements make up the condition for this remap state. All elements shall be true for the remap state to be enabled. The type of this element is of **scaledNonNegativeInteger**. This element contains the logical value of the single port bit specified by the following two attributes.
 - 1) **portNameRef** (mandatory) attribute is the name of the port in the containing description for which this logic value comparison is assigned. The **portNameRef** attribute is of type **portName**. See 6.11.3.
 - 2) **portIndex** (optional) attribute references the index of a port in the containing description, when the port being referenced is vectored. The **portIndex** attribute is of type *nonNegativeInteger*.

6.9.2.3 Example


This is an example of the **remapState** element with the state name of boot. The example specifies a remap state called boot is in effect when the port named doRemap gets the logic value of 0×01 , while another remap state called normal is in effect when the port gets the logic value of 0×00 .

6.10 Registers

6.10.1 Register data

6.10.1.1 Schema

The following schema details the information contained in the *registerData* group that may appear as an element inside the **addressBlock** element.

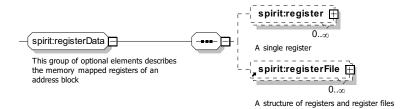

6.10.1.2 Description


The *registerData* group describes registers and register files. The containing **register/name** elements, the **register/alternateRegister/name** elements and the **registerFile/name** elements shall be unique within the containing **addressBlock** element. The *registerData* group contains these elements.

- a) register (optional) defines a list of registers contained in this addressBlock. See <u>6.10.2</u>.
- b) registerFile (optional) defines a list of register files contained in this addressBlock. See 6.10.2.

6.10.2 Register

6.10.2.1 Schema

The following schema details the information contained in the **register** element, which is contained in the **registerData** group that may appear as an element inside the **addressBlock** element. This element describes a register.

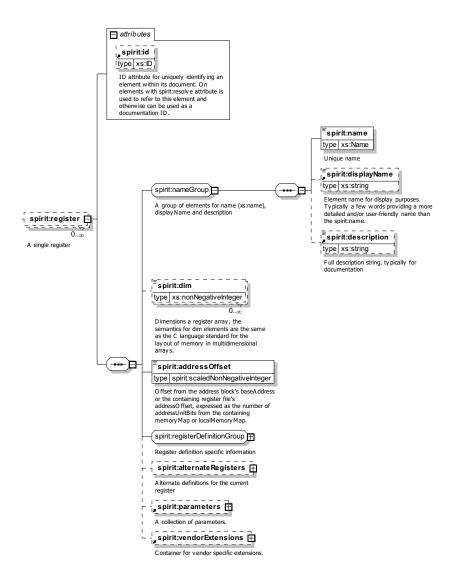

6.10.2.2 Description

A **register** element describes a register in an address block or register file. The bits in the register are numbered from size-1 down to 0, with bit zero (0) being the least significant bit. The **register** element contains an **id** (optional) attribute that assigns a unique identifier to the containing element for reference throughout the containing description. **register** contains the following elements.

- a) nameGroup group is defined in <u>C.1</u>. The register/name, registerFile/name, and register/alternateRegisters/alternateRegister/name element shall be unique within the containing addressBlock or registerFile element.
- b) **dim** (optional) assigns an unbounded dimension to the register, so it is repeated as many times as the value of the **dim** elements. For multi-dimensional register arrays, the memory layout is presumed to follow the IEEE Std 1666[™]-2005 [B4] (SystemC) language rules. The **dim** element is of type **nonNegativeInteger**.
- c) addressOffset (mandatory) describes the offset from the start of the containing addressBlock or registerFile element. The addressOffset is expressed in addressing units from the containing

memoryMap/addressUnitBits or localMemoryMap/addressUnitBits element. The addressOffset element is of type scaledNonNegativeInteger.

- d) registerDefinitionGroup group describes additional elements for a register. See 6.10.3
- e) alternateRegisters (optional) describes alternate description for the containing register. See 6.10.4
- f) **parameters** (optional) describes any parameter names and types when the register width can be parameterized. See <u>C.11</u>.
- g) vendorExtensions (optional) adds any extra vendor-specific data related to this register. See C.10.

See also: <u>SCR 7.1</u>, <u>SCR 7.2</u>, <u>SCR 7.3</u>, <u>SCR 7.4</u>, <u>SCR 7.5</u>, <u>SCR 7.7</u>, <u>SCR 7.8</u>, <u>SCR 7.9</u>, <u>SCR 7.13</u>, <u>SCR 8.3</u>, <u>SCR 8.4</u>, <u>SCR 8.5</u>, <u>SCR 8.7</u>, <u>SCR 8.8</u>, and <u>SCR 8.9</u>.

6.10.2.3 Example


The following example shows a register with its subelements.

```
<spirit:register>
   <spirit:name>control</spirit:name>
   <spirit:description>Control register</spirit:description>
   <spirit:addressOffset>0x8</spirit:addressOffset>
   <spirit:size>32</spirit:size>
   <spirit:access>read-write</spirit:access>
   <spirit:field>
      <spirit:name>enable</spirit:name>
      <spirit:description>Enables the receiver</spirit:description>
      <spirit:bitOffset>0</spirit:bitOffset>
      <spirit:bitWidth>1</spirit:bitWidth>
   </spirit:field>
   <spirit:field>
   <!-- ... -->
   </spirit:field>
</spirit:register>
```

6.10.3 Register definition group

6.10.3.1 Schema

The following schema details the information contained in the *registerDefinitionGroup* group, which is contained in the *register* element. This group describes register definition information.

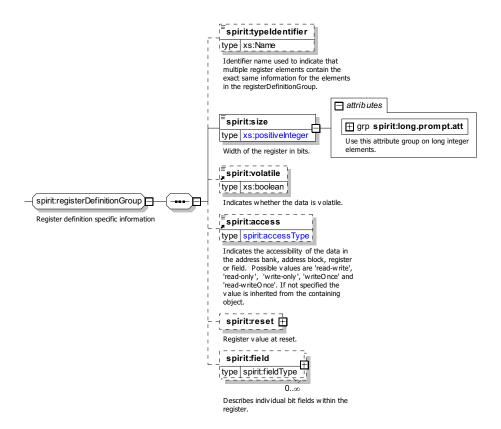

6.10.3.2 Description

A *registerDefinitionGroup* group contains the following elements.

- a) typeIdentifier (optional) indicates multiple register elements with the same typeIdentifier in the same description contain the exact same information for the elements in the registerDefinitionsGroup.
- b) **size** (mandatory) is the width of the register, counting in bits. The type of this element is set to *positiveInteger*. The **size** element is configurable with attributes from *long.prompt.att*, see <u>C.12</u>.
- c) volatile (optional) when true indicates in the case of a write followed by read, or in the case of two consecutive reads, there is no guarantee as to what is returned by the read on the second transaction or that this return value is consistent with the write or read of the first transaction. The element implies there is some additional mechanism by which this register can acquire new values other than by reads/writes/resets and other access methods known to IP-XACT. If this element is not present, no presumptions can be made about its value. The volatile element is of type boolean.
- d) access (optional) indicates the accessibility of the register. If this is not present, the access is inherited from the containing addressBlock. There are several choices.
 - read-write: Both read and write transactions may have an effect on this register. Write
 transactions may affect the contents of the register and read transactions return a value related
 to the values in the register.
 - 2) **read-only**: A read transaction to this address returns a value related to the values in the register. A write transaction to this register has undefined results.
 - 3) write-only: A write transaction to this address affects the contents of the register. A read transaction to this register has undefined results.

- 4) read-writeOnce: Both read and write transactions may have an effect on this register. Only the first write transaction, after an event that caused the reset value of the register to be loaded, may affect the contents of the register and read transactions return a value related to the values in the register.
- 5) writeOnce: Only the first write transaction, after an event that caused the reset value of the register to be loaded, affects the contents of the register. A read transaction to this register has undefined results.
- e) reset (optional) indicates the value of the register's contents when the device is reset. See <u>6.10.7</u>.
- f) field (optional) describes any bit fields in a register. See 6.10.8.

See also: <u>SCR 7.1</u>, <u>SCR 7.2</u>, <u>SCR 7.3</u>, <u>SCR 7.4</u>, <u>SCR 7.5</u>, <u>SCR 7.7</u>, <u>SCR 7.8</u>, <u>SCR 7.9</u>, <u>SCR 7.13</u>, <u>SCR 8.3</u>, SCR 8.4, SCR 8.5, SCR 8.7, SCR 8.8, SCR 8.9, SCR 8.11, SCR 8.12, SCR 8.14, and SCR 8.15.


6.10.3.3 Example

The following example shows a register with its subelements. The register contains a one bit field.

6.10.4 Alternate registers

6.10.4.1 Schema

The following schema details the information contained in the **alternateRegisters** element, which is contained in the **register** element that may appear as an element inside the **addressBlock** element. This element describes a list of alternate registers.

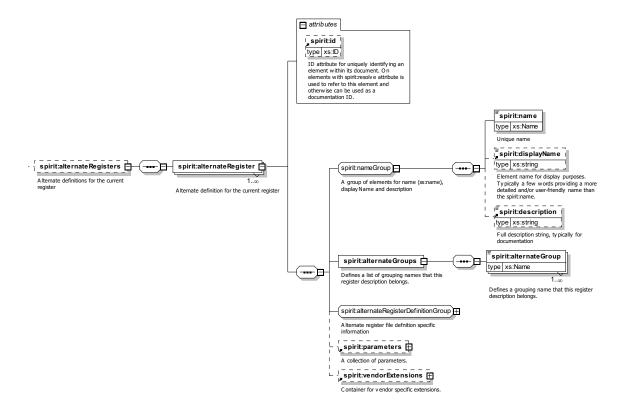

6.10.4.2 Description

The alternateRegisters (optional) element contains an unbounded list of alternateRegister elements. An alternateRegister element contains an alternate definition for the containing register. The alternateRegister element contains an id (optional) attribute that assigns a unique identifier to the containing element for reference throughout the containing description. alternateRegister contains the following elements.

- a) nameGroup group is defined in <u>C.1</u>. The register/name, registerFile/name, and register/alternateRegister/name element shall be unique within the containing addressBlock or registerFile element.
- b) **alternateGroups** (mandatory) defines an unbounded list of grouping names for which this alternate description belongs. **alternateGroup** (mandatory) defines a grouping name for this alternate register description. All **alternateGroup** elements shall be unique for each containing **register**. The **alternateGroup** element is of type *Name*.
- c) *alternateRegisterDefinitionGroup* group describes additional elements for an alternate register. See <u>6.10.3</u>
- d) **parameters** (optional) describes any parameter names and types when the register width can be parameterized. See <u>C.11</u>.
- e) vendorExtensions (optional) adds any extra vendor-specific data related to this register. See C.10.

See also: <u>SCR 7.1</u>, <u>SCR 7.2</u>, <u>SCR 7.3</u>, <u>SCR 7.4</u>, <u>SCR 7.7</u>, <u>SCR 7.8</u>, <u>SCR 7.9</u>, <u>SCR 7.13</u>, <u>SCR 8.3</u>, <u>SCR 8.4</u>, <u>SCR 8.5</u>, <u>SCR 8.7</u>, <u>SCR 8.8</u>, <u>SCR 8.9</u>, <u>SCR 8.11</u>, <u>SCR 8.12</u>, <u>SCR 8.14</u>, and <u>SCR 8.15</u>.

6.10.4.3 Example


The following example shows a register with an alternate register definition that is a group called transmit.

```
<spirit:register>
   <spirit:name>control</spirit:name>
   <spirit:addressOffset>0x8</spirit:addressOffset>
   <spirit:size>32</spirit:size>
   <spirit:access>read-write</spirit:access>
   <spirit:field>
      <spirit:name>enable</spirit:name>
      <spirit:description>Enables the receiver</spirit:description>
      <spirit:bitOffset>0</spirit:bitOffset>
      <spirit:bitWidth>1</spirit:bitWidth>
   </spirit:field>
   <spirit:alternateRegisters>
      <spirit:alternateRegister>
          <spirit:name>control</spirit:name>
          <spirit:access>read-only</spirit:access>
          <spirit:field>
             <spirit:name>enable</spirit:name>
             <spirit:description>Enables the transmitter
   spirit:description>
             <spirit:alternateGroups>
                 <spirit:alternateGroup>transmit</spirit:alternateGroup>
             </spirit:alternateGroups>
          </spirit:field>
      </spirit:alternateRegister>
   </spirit:alternateRegisters>
</spirit:register>
```

6.10.5 Alternate register definition group

6.10.5.1 Schema

The following schema details the information contained in the *alternateRegisterDefinitionGroup* group, which is contained in the *alternateRegister* element. This group describes alternate register definition information.

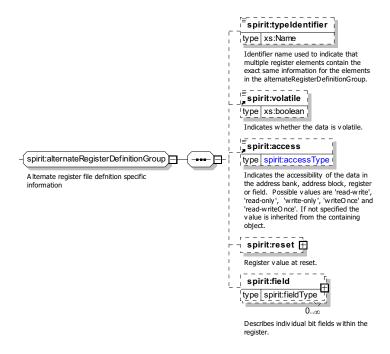

6.10.5.2 Description

A *alternateRegisterDefinitionGroup* group contains the following elements.


- a) **typeIdentifier** (optional) indicates multiple register elements with the same **typeIdentifier** in the same description contain the exact same information for the elements in the *alternateRegisterDefinitionsGroup*.
- b) **volatile** (optional) when **true** indicates in the case of a write followed by read, or in the case of two consecutive reads, there is no guarantee as to what is returned by the read on the second transaction or that this return value is consistent with the write or read of the first transaction. The element implies there is some additional mechanism by which this register can acquire new values other than by reads/writes/resets and other access methods known to IP-XACT. If this element is not present, no presumptions can be made about its value. The **volatile** element is of type **boolean**.
- c) **access** (optional) indicates the accessibility of the register. If this is not present, the **access** is inherited from the containing **addressBlock**. There are several choices.
 - 1) **read-write**: Both read and write transactions may have an effect on this register. Write transactions may affect the contents of the register and read transactions return a value related to the values in the register.
 - 2) **read-only**: A read transaction to this address returns a value related to the values in the register. A write transaction to this register has undefined results.
 - 3) **write-only**: A write transaction to this address affects the contents of the register. A read transaction to this register has undefined results.
 - 4) **read-writeOnce**: Both read and write transactions may have an effect on this register. Only the first write transaction, after power up, may affect the contents of the register and read transactions return a value related to the values in the register.
 - 5) writeOnce: Only the first write transaction, after power up, to this address affects the contents of the register. A read transaction to this register has undefined results.
- d) reset (optional) indicates the value of the register's contents when the device is reset. See 6.10.7.
- e) **field** (optional) describes any bit fields in a register. See <u>6.10.8</u>.

See also: <u>SCR 7.1</u>, <u>SCR 7.2</u>, <u>SCR 7.3</u>, <u>SCR 7.4</u>, <u>SCR 7.7</u>, <u>SCR 7.8</u>, <u>SCR 7.9</u>, <u>SCR 7.13</u>, <u>SCR 8.3</u>, <u>SCR 8.4</u>, <u>SCR 8.5</u>, <u>SCR 8.7</u>, <u>SCR 8.8</u>, and <u>SCR 8.9</u>.

6.10.6 Register file

6.10.6.1 Schema

The following schema details the information contained in the **registerFile** element, which is contained in the **registerData** group that may appear as an element inside the **addressBlock** element. This element describes a register file.

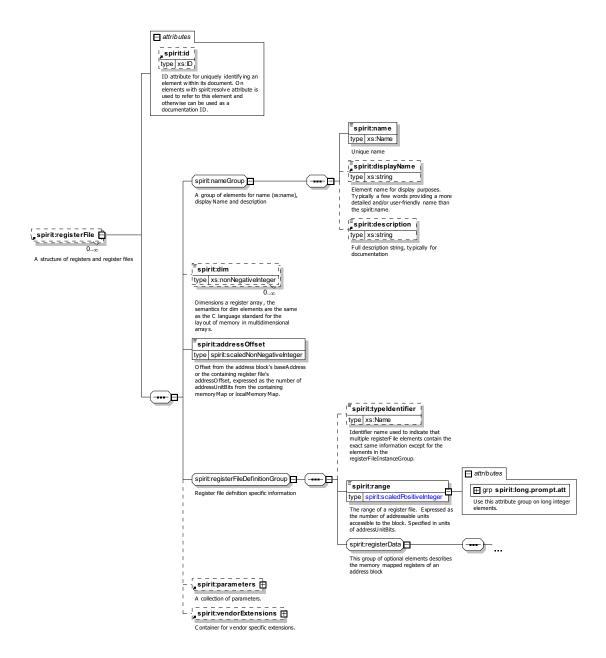

6.10.6.2 Description

A **registerFile** element describes a grouping of registers in an address block or register file. The **registerFile** element contains an **id** (optional) attribute that assigns a unique identifier to the containing element for reference throughout the containing description. **registerFile** contains the following elements.

- a) nameGroup group is defined in <u>C.1</u>. The register/name, registerFile/name, and register/alternateRegisters/alternateRegister/name element shall be unique within the containing addressBlock or registerFile element.
- b) **dim** (optional) assigns an unbounded dimension to the register, so it is repeated as many times as the value of the **dim** elements. For multi-dimensional register arrays, the memory layout is presumed to follow the IEEE Std 1666-2005 [B4] (SystemC) language rules. The **dim** element is of type **nonNegativeInteger**.

- c) addressOffset (mandatory) describes the offset from the start of the containing addressBlock or registerFile element. The addressOffset is expressed in addressing units from the containing memoryMap/addressUnitBits or localMemoryMap/addressUnitBits element. The addressOffset element is of type scaledNonNegativeInteger.
- d) registerFileDefinitionGroup group describes additional elements for a register file.
 - 1) **typeIdentifier** (optional) indicates multiple register elements with the same **typeIdentifier** in the same description contain the exact same information for the elements in the **registerDefinitionsGroup**.
 - 2) range (mandatory) gives the range of a register file. This is expressed as the number of addressable units of the register file. The size of an addressable unit is defined inside the containing memoryMap/addressUnitBits element. The type of this element is set to scaledPositiveInteger. The range element is configurable with attributes from long.prompt.att, see C.12.
 - 3) *registerData* group contains information about the grouping of bits into registers and fields. See 6.10.2.
- e) **parameters** (optional) describes any parameter names and types when the register width can be parameterized. See <u>C.11</u>.
- f) vendorExtensions (optional) adds any extra vendor-specific data related to this register. See C.10.

See also: <u>SCR 7.6</u>, <u>SCR 7.7</u>, and <u>SCR 7.14</u>.

6.10.6.3 Example

The following example shows a register file within an address block starting at address 0×200 . The register file is 32 bytes in length and contains two registers at an absolute address of 0×200 and 0×204 within the address block.


```
<spirit:addressBlock>
   <spirit:name>abname</spirit:name>
   <spirit:baseAddress>0x0</spirit:baseAddress>
   <spirit:range>0x1000</spirit:range>
   <spirit:width>32</spirit:width>
   <spirit:registerFile>
      <spirit:name>status</spirit:name>
      <spirit:description>Status register</spirit:description>
      <spirit:addressOffset>0x200</spirit:addressOffset>
      <spirit:range>32</spirit:range>
      <spirit:register>
          <spirit:name>control</spirit:name>
          <spirit:addressOffset>0x0</spirit:addressOffset>
          <spirit:size>32</spirit:size>
          <spirit:access>read-write</spirit:access>
          <spirit:field>
          <!-- ... -->
          </spirit:field>
      </spirit:register>
      <spirit:register>
          <spirit:name>status</spirit:name>
          <spirit:addressOffset>0x4</spirit:addressOffset>
          <spirit:size>32</spirit:size>
          <spirit:access>read-only</spirit:access>
          <spirit:field>
          <!--->
          </spirit:field>
      </spirit:register>
```

```
</spirit:registerFile>
  <spirit:addressUnitBits>8</spirit:addressUnitBits>
</spirit:addressBlock>
```

6.10.7 Register reset value

6.10.7.1 Schema

The following schema details the information contained in the **reset** element, which may appear as an element inside the **register** element. This element describes the reset value of the register.

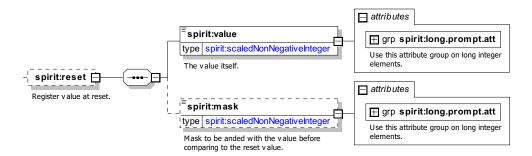

6.10.7.2 Description

The **reset** element describes the value of a register at reset. It has the following subelements.

- a) **value** (mandatory) contains the actual reset value. The **value** element is of type *scaledNonNegativeInteger*. The **value** element is configurable with attributes from *long.prompt.att*, see <u>C.12</u>.
- b) mask (optional) defines which bits of the register have a known reset value. The mask element is of type scaledNonNegativeInteger. The mask element is configurable with attributes from long.prompt.att, see C.12.

A 1 bit in the **mask** means the corresponding bit of the register has a known reset value; a 0 bit means it does not. All bits of the **value** that correspond to 0 bits of the **mask** are ignored. The absence of a mask element is equivalent to a mask of the same size as the register consisting of all 1 bits.


6.10.7.3 Example

The following example shows a reset value. Any register with this reset value has bit 7 and bits 5 down to 1 set to logic 0, and bits 6 and 0 set to a logic 1 on reset.

6.10.8 Register bit fields

6.10.8.1 Schema

The following schema details the information contained in the **field** element, which may appear as an element inside the **register** element. This element describes a bit field of a register.

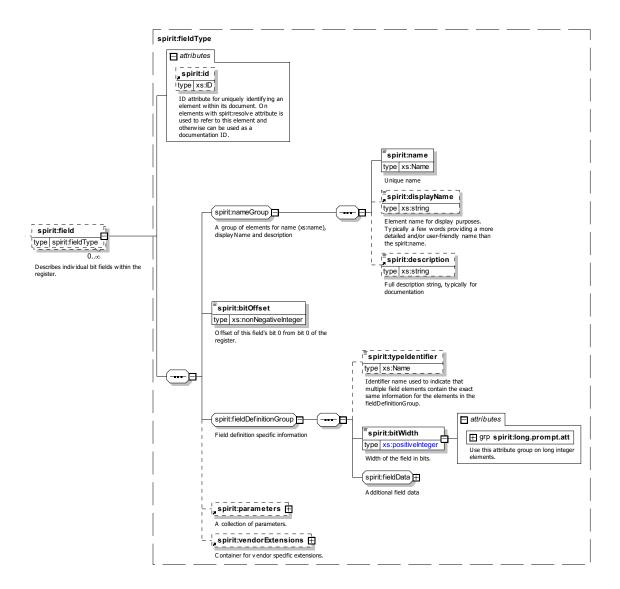

6.10.8.2 Description

A **field** element of a **register** describes a smaller bit field of a register. The **field** element contains an **id** (optional) attribute that assigns a unique identifier to the containing element for reference throughout the containing description. **field** contains the following elements.

- a) *nameGroup* group is defined in <u>C.1</u>. The **name** element shall be unique within the containing register or alternateRegister element.
- b) **bitOffset** (mandatory) describes the offset (from bit 0 of the register) where this bit field starts. The **bitOffset** element is of type *nonNegativeInteger*.
- c) *fieldDefinitionGroup* group describes additional elements for a field.
 - 1) **typeIdentifier** (optional) indicates multiple fields elements with the same **typeIdentifier** in the same description contain the exact same information for the elements in *fieldDefinitionsGroup*.
 - 2) bitWidth (mandatory) is the width of the field, counting in bits. The bitWidth element is of type postiveInteger. The bitWidth element is configurable with attributes from long.prompt.att, see C.12.

- 3) *fieldData* group describes additional elements for a field. See <u>6.10.10</u>.
- d) parameters (optional) details any additional parameters that describe the field for generator usage.
 See C.11.
- e) vendorExtensions (optional) adds any extra vendor-specific data related to this field. See <u>C.10</u>.

See also: SCR 7.2, SCR 7.4, SCR 7.9, SCR 7.10, SCR 7.11, and SCR 7.12.

6.10.8.3 Example


The following example shows a 1-bit field with its subelements.

```
<spirit:field>
    <spirit:name>paritySelect</spirit:name>
    <spirit:displayName>Parity Select</spirit:displayName>
    <spirit:description>Selects parity polarity (0=odd parity, 1=even parity)</spirit:description>
    <spirit:bitOffset>2</spirit:bitOffset>
    <spirit:bitWidth>1</spirit:bitWidth>
</spirit:field>
```

6.10.9 Field data group

6.10.9.1 Schema

The following schema details the information contained in the *fieldData* group, which is contained inside the *field* element. This group describes the optional properties of a *field*.

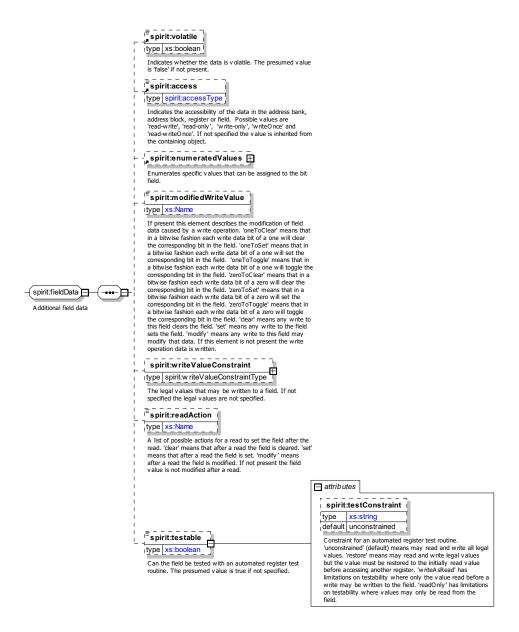

6.10.9.2 Description

The *fieldData* group contains the following elements.

- a) volatile (optional) when true indicates in the case of a write followed by read, or in the case of two consecutive reads, there is no guarantee as to what is returned by the read on the second transaction or that this return value is consistent with the write or read of the first transaction. The element implies there is some additional mechanism by which this field can acquire new values other than by reads/writes/resets and other access methods known to IP-XACT. If this element is not present, it is presumed to be false. The volatile element is of type boolean.
- b) **access** (optional) indicates the accessibility of the field. If this is not present, the **access** is inherited from the containing **register**. There are several choices.
 - 1) **read-write**: Both read and write transactions may have an effect on this field. Write transactions may affect the contents of the field and read transactions return a value related to the values in the field.

- read-only: A read transaction to this address returns a value related to the values in the field. A
 write transaction to this field has undefined results.
- 3) write-only: A write transaction to this address affects the contents of the field. A read transaction to this field has undefined results.
- 4) **read-writeOnce**: Both read and write transactions may have an effect on this field. Only the first write transaction, after power up, may affect the contents of the field and read transactions return a value related to the values in the field.
- writeOnce: Only the first write transaction, after power up, to this address affects the contents of the field. A read transaction to this field has undefined results.
- c) enumerated Values (optional) describes a name for different values of a field. See <u>6.10.10</u>.
- d) modifiedWriteValue (optional) element to describe the manipulation of data written to a field. The value shall be one of oneToClear, oneToSet, oneToToggle, zeroToClear, zeroToSet, zeroToToggle, clear, set, or modify. If the modifiedWriteValue element is not specified, the value written to the field is the value stored in the field.

oneToClear means in a bitwise fashion each write data bit of a one shall clear (set to zero) the corresponding bit in the field.

oneToSet means in a bitwise fashion each write data bit of a one shall set (set to one) the corresponding bit in the field.

oneToToggle means in a bitwise fashion each write data bit of a one shall toggle the corresponding bit in the field.

zeroToClear means in a bitwise fashion each write data bit of a zero shall clear (set to zero) the corresponding bit in the field.

zeroToSet means in a bitwise fashion each write data bit of a zero shall set (set to one) the corresponding bit in the field.

zeroToToggle means in a bitwise fashion each write data bit of a zero shall toggle the corresponding bit in the field.

clear means after a write operation all bits in the field are cleared (set to zero).

set means that after a write operation all bits in the field are set (set to one).

modify means that after a write operation all bits in the field may be modified.

- e) writeValueConstraint (optional) describes a set of constraint values that are the only values that can be written to this field. If writeValueConstraint is not present, no constraint values are defined for this field. See 6.10.11.
- f) **readAction** (optional) describes an action that happens to a field after a read operation happens. **clear** indicates the field is cleared after a read operation. **set** indicates the field is set after a read operation. **modify** indicates the field is modified in some way after a read operation. If **readAction** not specified, the field is not modified after a read operation.
- g) **testable** (optional) defines if the field is testable by a simple automated register test. If this is not present, **testable** is presumed to be **true**. The **testable** element is of type **boolean**.

testConstraint (optional) attribute defines the constraint for the field during a simple automated register test.

unConstrained (default) indicates there are no restrictions on the data that may be written or read from the field. restore indicates the field's value shall be restored to the original value before accessing another register. writeAsRead indicates the field shall only be written to a value just previously read from the field. readOnly indicates the field shall only be read.

6.10.9.3 Example

The following example describes a field with a write behavior that sets a field bit if the value written is a 1 and a read behavior that reads the written value and afterwards clears the register.


```
<spirit:field>
    <spirit:name>interrupt</spirit:name>
    <spirit:bitOffset>0</spirit:bitOffset>
    <spirit:bitWidth>1</spirit:bitWidth>
        <spirit:modifiedWriteValue>oneToSet</spirit:modifiedWriteValue>
        <spirit:readAction>clear</spirit:readAction>
</spirit:field>
```

See also: <u>SCR 7.2</u>, <u>SCR 7.4</u>, <u>SCR 7.9</u>, <u>SCR 7.10</u>, <u>SCR 7.11</u>, and <u>SCR 7.12</u>.

6.10.10 Enumeration values

6.10.10.1 Schema

The following schema details the information contained in the **enumeratedValues** element, which may appear as an element inside the **field** element.

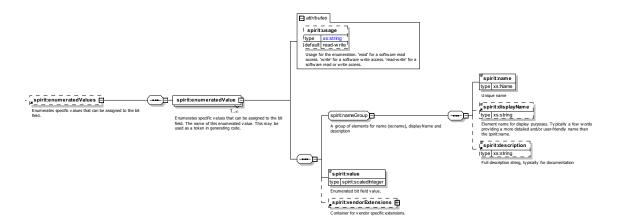

6.10.10.2 Description

The enumerated Values element describes a list of name and values pairs for the given field.

- a) **usage** (optional) attribute defines the software access condition under which this name value pair is valid. Possible values are **read**, **write**, and **read-write** (default).
- b) **nameGroup** group is defined in <u>C.1</u>. All **name** elements shall be unique within the containing **enumeratedValues** element.
- c) **value** (mandatory) defines the value to assign to the specified name. The **value** element is of type *scaledInteger*.
- d) **vendorExtensions** (optional) adds any extra vendor-specific data related to this enumeration. See <u>C.10</u>.

6.10.10.3 Example


The following example shows two enumerated values for a 1-bit field: 0 for oddParity and 1 for evenParity.

See also: <u>SCR 7.10</u> and <u>SCR 7.11</u>.

6.10.11 Write value constraint

6.10.11.1 Schema

The following schema details the information contained in the **writeValueConstraint** element, which may appear as an element inside the **field** element.

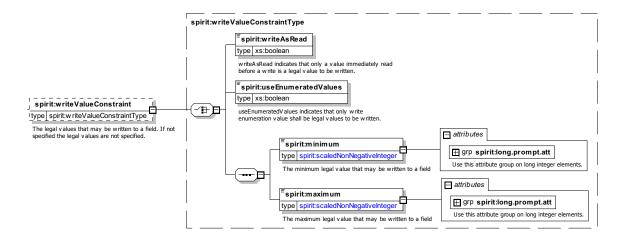

6.10.11.2 Description

The **writeValueConstraint** element describes a set of constraint values that are the only values that can be written to this field. If **writeValueConstraint** is not present, the legal values for this field are not defined.

- a) writeAsRead (mandatory) if true implies the only legal value to write to this field is a value previously read from this field. If writeAsRead is not present, it is presumed to be false. The writeAsRead element is of type boolean.
- b) **useEnumeratedValues** (mandatory) if **true** implies the only legal values to write to this field are the values specified in the **useEnumeratedValues** element for this field. If **useEnumeratedValues** is not present, it is presumed to be **false**. The **useEnumeratedValues** element is of type **boolean**.
- c) **minimum** (mandatory) contains the minimum value that may be written to this field. The **minimum** element is of type **scaledNonNegativeInteger**. The **minimum** element is configurable with attributes from **long.prompt.att**, see <u>C.12</u>.
- d) **maximum** (mandatory) contains the maximum value that may be written to this field. The **maximum** element is of type *scaledNonNegativeInteger*. The **maximum** element is configurable with attributes from *long.prompt.att*, see <u>C.12</u>.

See also: <u>SCR 7.10</u> and <u>SCR 7.11</u>.

6.10.11.3 Example


The following example is for a two-bit field that only allows the values 0, 1, and 2 to be written.

6.11 Models

6.11.1 Model

6.11.1.1 Schema

The following schema details the information contained in the **model** element, which may appear as an element inside the **component** element.

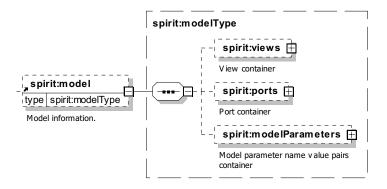

6.11.1.2 Description


The **model** element describes the views, ports, and model-related parameters of a component. A **model** element may contain the following.

- a) views (optional) contains a list of all the views for this object. An object may have many different views. An RTL view may describe the source hardware module/entity with its pin interface; a software view may define the source device driver C file with its .h interface; a documentation view may define the written specification of this IP. See 6.11.2.
- b) **ports** (optional) contains the list of ports for this object. A ports is an external connection from the object. An object may only have one set of ports that shall be valid for all views. See 6.11.3.
- c) modelParameters (optional) contains a list of parameters that are needed to configure a model implementation specified in a view. An object shall only have one set of model parameters that are valid for all views. See 6.11.20.

6.11.2 Views

6.11.2.1 Schema

The following schema details the information contained in the **views** element, which may appear as an element inside a **model** element. This element may contain one or more **view** elements.

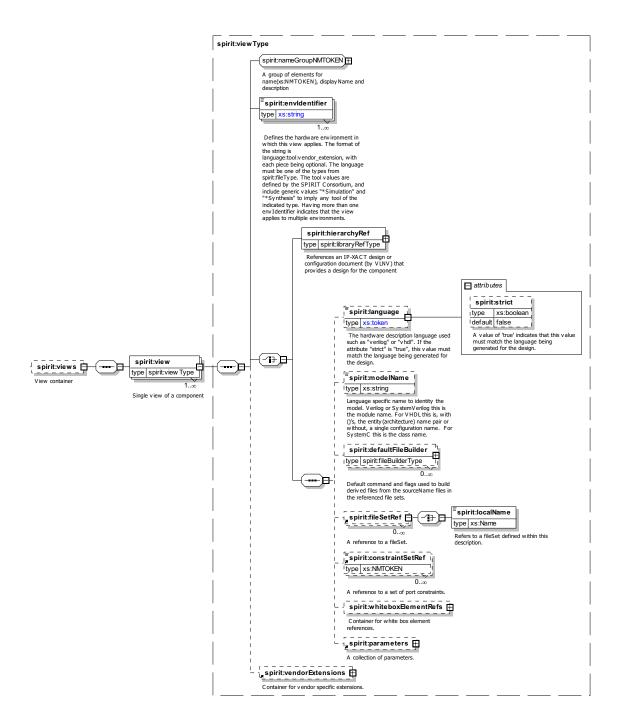

6.11.2.2 Description

A **views** element describes an unbounded set of **view** elements. Each **view** element specifies a representation level of a component. It contains the following elements.

- a) *nameGroupNMToken* group is detailed in <u>C.4</u>. The **name** elements shall be unique within the containing **views** element.
- b) **envIdentifier** (mandatory) designates and qualifies information about how this model view is deployed in a particular tool environment. The format of the element is a string with three fields separated by colons [:] in the format of *Language:Tool:VendorSpecific*. The regular expression that

is used to check the string is $[A-Za-z0-9_+*\.]*:[A-Za-z0-9_+*\.]*:[A-Za-z0-9_+*\.]*$ The sections are:

- Language indicates this view may be compatible with a particular tool, but only if that language is supported in that tool, e.g., different versions of some simulators may support two or more languages. In some cases, knowing the tool compatibility is not enough and may be further qualified by language compatibility, e.g., a compiled HDL model may work in a VHDL-enabled version of a simulator, but not in a SystemC-enabled version of the same simulator.
- 2) Tool indicates this view contains information that is suitable for the named tool. This might be used if this view references data that is tool-specific and would not work generically, e.g., HDL models that use simulator-specific extensions.

Vendors shall publish lists of approved tool identification strings. These strings shall contain the tool name, as well as the company's domain name, separated by dots. Some examples of well-formed tool entries are:

```
designcompiler.synopsys.com
ncsim.cadence.com
modelsim.mentor.com
```

This field can alternatively indicate generic tool family compatibility, including *Simulation and *Synthesis. To support transportability of created data files, it is important to use the published, generally recognized, tool designation when referencing a tool. See IP-XACT standard tool names for **envIdentifier** [B14].

3) VendorSpecific can be used to further qualify tool and language compatibility. This can be used to indicate additional processing information may be required to use this model in a particular environment. For instance, if the model is a SWIFT simulation model, the appropriate simulator interface may need to be enabled and activated.

Any or all of the **envIdentifier** fields may be used. Where there are multiple environments for which a particular **view** is applicable, multiple **envIdentifier** elements can be listed.

c) All of the information for a view shall be in the containing component. Specifically, the fileSets that are referenced in a view shall contain entries for all of the required files. If a view in the component contains a hierarchyRef, other views shall not assume the inclusion of files in a fileSet referenced through that hierarchyRef. The implementation details for this view has two possibilities.

The first possibility is a hierarchical view that uses the **hierarchyRef** element. In this case:

hierarchyRef (mandatory) references a hierarchical design from a **view** of a **component**. This element is required only if the **view** is used to reference a hierarchical design. The **hierarchyRef** element is of type *libraryRefType*, it contains four attributes to specify a unique VLNV. See C.7.

- d) The second possibility is a non-hierarchical view that references a file set. In this case:
 - language (optional) specifies the HDL used for a specific view, for example, verilog or vhdl. The language element is of type *token*. This may have an attribute strict (optional) of type *boolean*; if true the language shall be strictly enforced. If this attribute is not present, its effective value is false.
 - 2) modelName (optional) is a language-specific identifier of the model. For Verilog or System-Verilog, this is the module name. For VHDL, this is, with ()'s, the entity (architecture) name pair or, without ()'s, a configuration name. For SystemC, this is the sc_module class name. The modelName element is of type string.
 - 3) **defaultFileBuilder** (optional) is an unbounded list of default file builder options for the **fileSets** referenced in this **view**. This contains all the same elements as the element **fileBuilder**. See <u>6.13.5</u>.

- 4) **fileSetRef** (optional) is an unbounded list of references to **fileSet names** within the containing document or another document referenced by the VLNV. See <u>C.8</u>.
- 5) **constraintSetRef** (optional) is an unbounded list of references to constraint sets, valid timing constraints for a view. **constraintsSets** are only defined for **wire** style **ports**. The **constraintSetRef** element is of type *NMTOKEN*. See <u>6.11.9</u>.
- 6) whiteboxElementRefs (optional) contains references to white box elements of a component that are valid for this view. If the view contains an implementation of any of the white box elements for the component, the view section shall include a reference to that whitebox element, with a string providing a language-dependent path to enable the DE to access the whitebox element. See 6.15.
- 7) parameters (optional) details any additional parameters that describe the view. See C.11.
- e) vendorExtensions (optional) adds any extra vendor-specific data related to the view. See <u>C.10</u>.

See also: <u>SCR 14.3</u>.

6.11.2.3 Example


The following is an example of a non-hierarchical view element with the name of vhdlsource.

```
<spirit:views>
   <spirit:view>
      <spirit:name>vhdlsource</spirit:name>
      <spirit:envIdentifier>:modelsim.mentor.com:</spirit:envIdentifier>
      <spirit:envIdentifier>:ncsim.cadence.com:</spirit:envIdentifier>
      <spirit:envIdentifier>:vcs.synopsys.com:</spirit:envIdentifier>
      <spirit:envIdentifier>:designcompiler.synopsys.com:
          </spirit:envIdentifier>
      <spirit:language>vhdl</spirit:language>
      <spirit:modelName>leon2 Uart(struct)</spirit:modelName>
      <spirit:fileSetRef>
          <spirit:localName>fs-vhdlSource</spirit:localName>
      </spirit:fileSetRef>
      <spirit:constraintSetRef>normal</spirit:constraintSetRef>
   </spirit:view>
</spirit:views>
```

6.11.3 Component ports

6.11.3.1 Schema

The following schema defines the information contained in the **ports** element, which may appear within a **component**.

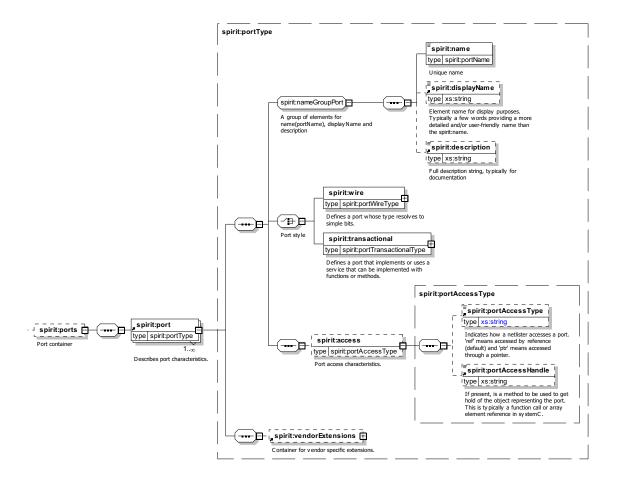

6.11.3.2 Description

The **ports** element defines an unbounded list of **port** elements. Each **port** element describes a single external port on the component.

- a) *nameGroupPort* group is defined in <u>C.4</u>. The **name** elements shall be unique within the containing **ports** element.
- b) Each **port** shall be described as a **wire** or **transactional** port.
 - 1) wire (mandatory) defines ports that transport purely binary values or vectors of binary values. See <u>6.11.4.2</u>.
 - transactional (mandatory) defines all other styles of ports, typically used for TLM. See 6.11.16.
- c) access (optional) defines the access for a port.
 - 1) **portAccessType** (optional) indicates to a netlister how to access the port. The **portAccessType** has one of two possible values **ref** or **ptr**. If **ref** (the default), a netlister should access the port directly and, if **ptr**, it should access the port with a pointer.
 - 2) **portAccessHandle** (optional) indicates to a netlister the method to be used to access the object representing the port. This is typically a function call or array element reference in IEEE Std 1666-2005 [B4] (SystemC). The **portAccessHandle** is of type *string*.
- d) vendorExtensions (optional) adds any extra vendor-specific data related to the port. See <u>C.10</u>.

6.11.3.3 Example


This example shows a component with a wire port (clk) and two transactional ports (initiator and target).

```
<spirit:ports>
   <spirit:port>
      <spirit:name>clk</spirit:name>
      <spirit:wire>
          <spirit:direction>in</spirit:direction>
      </spirit:wire>
   </spirit:port>
   <spirit:port>
      <spirit:name>initiator</spirit:name>
      <spirit:transactional>
          <spirit:service>
             <spirit:initiative>requires</spirit:initiative>
             <spirit:serviceTypeDefs>
                 <spirit:serviceTypeDef>
                    <spirit:typeName>read write if</spirit:typeName>
                 </spirit:serviceTypeDef>
             /spirit:serviceTypeDefs>
          </spirit:service>
      </spirit:transactional>
   </spirit:port>
   <spirit:port>
      <spirit:name>initiator</spirit:name>
      <spirit:transactional>
          <spirit:service>
             <spirit:initiative>provides</spirit:initiative>
                 <spirit:serviceTypeDefs>
                    <spirit:serviceTypeDef>
                        <spirit:typeName>read write if
                    </spirit:typeName>
                 </spirit:serviceTypeDef>
             </spirit:serviceTypeDefs>
          </spirit:service>
      </spirit:transactional>
   </spirit:port>
</spirit:ports>
```

6.11.4 Component wire ports

6.11.4.1 Schema

The following schema details the information contained in the **wire** element, which may appear as an element inside the top-level **component/model/port** element.

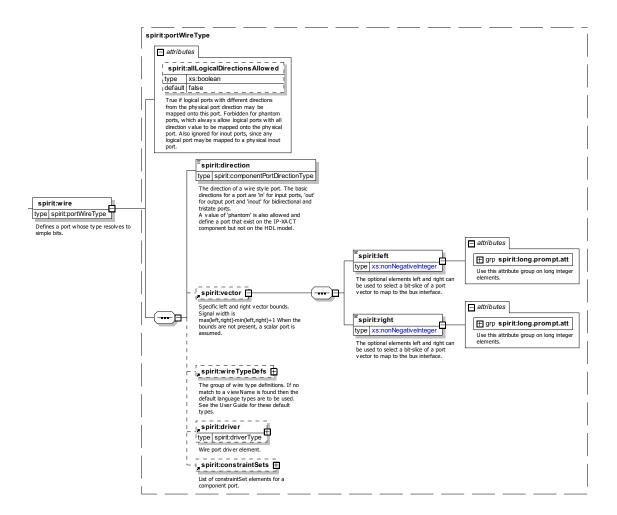

6.11.4.2 Description

The wire element describes the properties for ports that are of a wire style. A port can come in two different styles, wire or transactional. A wire port applies for all scalar types (e.g., VHDL std_logic and Verilog wire) and vectors of scalars. Scalar types in VHDL also include integer and enumeration values; however, scalars in IP-XACT only include binary values that relate to a single wire in a hardware implementation.

A wire port transports purely binary values or vectors of binary values; IP-XACT does not support tri-state or multiple strength values.

The wire element contains the following elements.

- allLogicalDirectionsAllowed (optional) attribute defines whether the port may be mapped to a port in an abstractionDefinition with a different direction. The default value is false. The allLogical-DirectionsAllowed attribute is of type boolean. See <u>5.3</u>.
- b) direction (mandatory) specifies the direction of this port: in for input ports, out for output ports, and inout for bidirectional and tri-state ports. phantom can also be used to define a port that only exists on the IP-XACT component, but not on the implementation referenced from the view.
- c) **vector** (optional) determines if this port is a scalar port or a vectored port. The **left** and **right** vector bounds elements inside the **vector** element are those specified in the implementation source. The port width is max (left,right) min (left,right) +1. The **left** and **right** elements are of type

nonNegativeInteger. The **left** and **right** elements are configurable with attributes from **long.prompt.att**, see C.12.

The **left** element means first boundary, the **right** element, the second boundary. **left** may be larger than **right** and **left** may be the MSB or LSB (**right** being the opposite). The **left** and **right** elements are the (bit) rank of the left-most and right-most bits of the port.

When the **vector** element is present and the **left** and **right** elements are not equal, the port is defined as a *multi-bit vector port*. When the **vector** element is present and the **left** and **right** elements are equal, the port is defined as a *single-bit vector port*. When the **vector** element and the **left** and **right** elements are not present, the port is defined as a *scalar port*.

- d) wireTypeDefs (optional) describes the ports type as defined by the implementation, see 6.11.5.
- e) **driver** (optional) defines a driver that may be attached to this port if no other object is connected to this port. This allows the IP to define the default state of unconnected inputs. A wire style port may only define a **driver** element for a port if the direction of the port is **in** or **inout**. See also <u>6.11.6</u>
- f) **constraintSets** (optional) defines multiple set of constraints on a port used for synthesis or other operations. See <u>6.11.11</u>.

See also: <u>SCR 6.5</u>, <u>SCR 6.6</u>, <u>SCR 6.7</u>, and <u>SCR 6.12</u>.

6.11.4.3 Example

The following examples show how the vector elements are used when mapping to an HDL language.

```
reset: in std logic; -- VHDL
```

would be defined with no left or right elements under the vector element.

```
<spirit:wire>
     <spirit:direction>in</spirit:direction>
</spirit:wire>
```

Whereas

```
data: out std logic vector(29 downto 3); -- VHDL
```


would be defined in IP-XACT as left=29 and right=3 with all bits in descending order.

```
<spirit:wire>
    <spirit:direction>out</spirit:direction>
    <spirit:vector>
        <spirit:left>29</spirit:left>
        <spirit:right>3</spirit:right>
        </spirit:vector>
</spirit:wire>
```

6.11.5 Component wireTypeDef

6.11.5.1 Schema

The following schema details the information contained in the **wireTypeDef** element, which may appear as an element inside the **wire** element of a top-level wire style **port** element. These elements define the definition type name, where the type is defined, and which views of a component or an abstractor use this type.

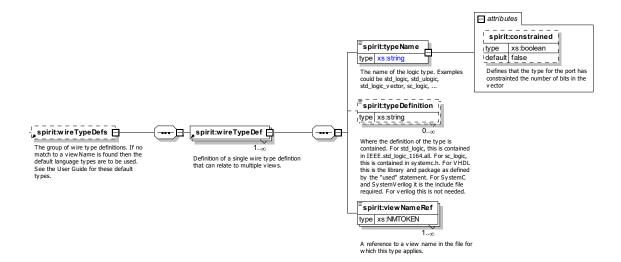

6.11.5.2 Description

The **wireTypeDefs** element describes the type properties for a port per view of a component or abstractor. There can be an unbounded series of **wireTypeDefs** defined for each port, allowing the type properties to be defined differently for each view. **wireTypeDef** contains the following elements.

- a) **typeName** (mandatory) defines the name of the type for the port. For VHDL, some typical values would be std logic and std ulogic. The **typeName** element is of type *string*.
 - **constrained** (optional) attribute indicates whether or not the number of bits in the type declaration is fixed or not. The **constrained** attribute is of type **boolean**. If the number of bits is fixed (**constrained** == **true**) the bit indices are not required when referencing the type. When **constrained** is **false** (the default), bit indices are required on all references to the type definition. See <u>6.11.5.2.1</u> and <u>6.11.5.2.2</u>.
- b) **typeDefinition** (optional) contains a language-specific reference to where the given type is actually defined. <u>Table 4</u> shows some examples. There can be multiple **typeDefinition**s for each port. The **typeDefinition** element is of type *string*.

Language	Meaning	
VHDL	"Use" statement text (IEEE.std_logic_1164.all).	
Verilog	Nothing needed, no meaning.	
SystemC	Include file name (systemc.h).	
SystemVerilog	Include file name (if the name does not contain a:); import package name (if the	

name contains a:).

Table 4—typeDefinition examples

c) viewNameRef (mandatory) indicates the view or views in which this type definition applies. Multiple views can use the same set of type properties by specifying multiple viewNameRef elements. The viewNameRef shall match a view/name in the containing object. The viewNameRef element is of type NMTOKEN. See 6.11.2.

6.11.5.2.1 Constrained array type

A constrained array type is a type for which the indices of the array have been specified in the definition.

```
type BYTE is array (7 downto 0) of std_logic;
entity example is
  port(
    A: out BYTE;
    B: in BYTE
  );
end example;
```

Also, the definition of port A in an IP-XACT description contains the indices in XML to designate the width so the following types can be mixed in the same component.

```
<spirit:port>
   <spirit:name>A</spirit:name>
   <spirit:wire>
      <spirit:vector>
         <spirit:left>7</spirit:left>
          <spirit:right>0</spirit:right>
      </spirit:vector>
      <spirit:typeDefs>
          <spirit:typeDef>
             <spirit:typeName spirit:constrained="true">BYTE
                </spirit:typeName>
             <spirit:typeDefinition>MYLIB.MYPKG.all</spirit:typeDefinition>
             <spirit:viewNameRef>VHDLsimView</spirit:viewNameRef>
          </spirit:typeDef>
      </spirit:typeDefs>
   </spirit:wire>
<spirit:port>
```

6.11.5.2.2 Unconstrained array type

An *unconstrained array type* is a type for which the indices of the array have not been specified in the definition, for example,

```
type std_logic_vector is array ( NATURAL RANGE <> ) of std_logic;
entity example is
  port(
    A: out std_logic_vector (7 downto 0);
    B: in std_logic_vector (7 downto 0)
  );
end example;
```

could be described in IP-XACT as

6.11.5.2.3 Defaults

wire TypeDefs do not need to be defined for every view of a port. IP-XACT provides for these defaults based on the language of the view, as shown in <u>Table 5</u>. For those languages not shown here, no defaults can be presumed.

Language	Single bit	Vectors
VHDL	std_logic	std_logic_vector
Verilog	wire	wire
SystemC	sc_logic	sc_lv
SystemVerilog	logic	logic

Table 5—View defaults

6.11.5.2.4 Rules

- A view name may only appear once in all the ports **viewNameRef** elements.
- If the view name is not found in a **viewNameRef**, the default type properties apply (see <u>Table 5</u>).


6.11.5.3 Example

See the examples in 6.11.5.2.2.

6.11.6 Component driver

6.11.6.1 Schema

The following schema details the information contained in the **driver** element, which may appear as an element inside the **wire** element of a top-level wire style **port** element. This element defines the type and value(s) to drive on this port when it is not connected in a design; it is only allowed on ports with the direction **in** or **inout**.

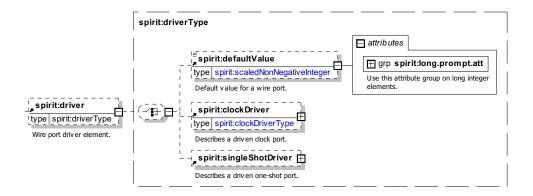

6.11.6.2 Description

The **driver** element shall contain one of three different types of drivers that can be applied to a wire port of a component or abstractor.

- defaultValue (optional) specifies a static logic value for this port. The defaultValue can specify a simple 1-bit wire port or a vectored wire port. The value shall be applied to this port when it is left unconnected, independent of being part of a busInterface. This value shall be over-ridden by the default value from the abstraction definition if the interface is connected. The defaultValue element is of type scaledNonNegativeInteger. The defaultValue element is configurable with attributes from long.prompt.att, see C.12.
- b) **clockDriver** (optional) specifies a repeating waveform for this port. See <u>6.11.7</u>.
- c) singleShotDriver (optional) specifies a non-repeating waveform for this port. See 6.11.8.

See also: <u>SCR 6.26</u> and <u>SCR 12.13</u>.


6.11.6.3 Example

This example shows a default value of 0x0F set for a vectored wire port named scaler.

6.11.7 Component driver/clockDriver

6.11.7.1 Schema

The following schema details the information contained in the **clockDriver** element, which may appear as an element inside the top-level wire style **port/wire/driver** element. This element defines the properties of a clock waveform. When this element is contained within a non-scalar wire port, the clock waveform shall apply to all bits of this port.

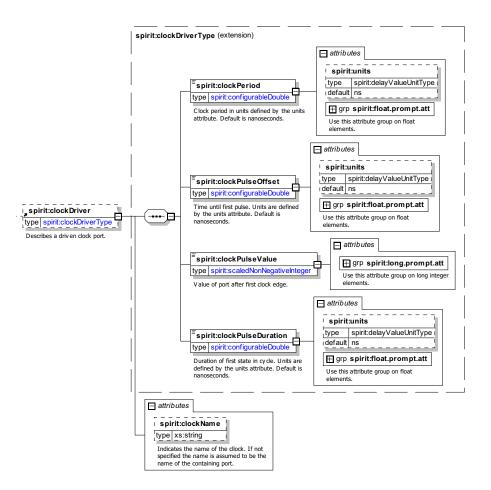

6.11.7.2 Description

The **clockDriver** element contains four elements that describe the properties of a clock waveform. These are also depicted in <u>Figure 11</u>.

- a) clockPeriod (mandatory) specifies the overall length (in time) of one cycle of the waveform. The clockPeriod element is of type configurableDouble. The clockPeriod element is configurable with attributes from float.prompt.att, see C.12. This element also contains a units (optional) attribute for specifying the units of the time values: ns (the default) and ps.
 - **ns** stands for nanosecond and is equal to 10^{-9} seconds. **ps** stands for picosecond and is equal to 10^{-12} seconds.
- b) **clockPulseOffset** (mandatory) specifies the time delay from the start of the waveform to the first transition. The **clockPulseOffset** element is of type *configurableDouble*. The **clockPulseOffset** element is configurable with attributes from *float.prompt.att*, see <u>C.12</u>. This element also contains a **units** (optional) attribute for specifying the units of the time values: **ns** (the default) and **ps**.

- c) **clockPulseValue** (mandatory) specifies the logic value to which the port transitions. This value is also the opposite of the value from which the waveform starts. The value of this element shall be 0 or 1. The **clockPulseValue** element is of type **scaledNonNegativeInteger**. The **clockPulseValue** element is configurable with attributes from **long.prompt.att**, see <u>C.12</u>.
- d) **clockPulseDuration** (mandatory) specifies how long the waveform remains at the value specified by **clockPulseValue**. The **clockPulseDuration** element is of type **configurableDouble**. The **clock-PulseDuration** element is configurable with attributes from **float.prompt.att**, see <u>C.12</u>. This element also contains a **units** (optional) attribute for specifying the units of the time values: **ns** (the default) and **ps**.
- e) **clockName** (optional) attribute specifies a name for the clock driver. If this is not defined, the name of the port to which this **clockDriver** is applied shall be used. The **clockName** element is of type *string*.

See also: <u>SCR 12.9</u> and <u>SCR 12.10</u>.

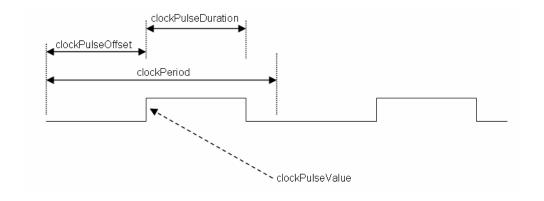


Figure 11—clockDriver elements


6.11.7.3 Example

This is an example of a clock driver set on the wire port named clk. The clock starts off in the logic 0 state for 4 ns, then transitions to the logic 1 state for 4 ns. This cycle is repeated forever.

6.11.8 Component driver/singleShotDriver

6.11.8.1 Schema

The following schema details the information contained in the **singleShotDriver** element, which may appear as an element inside the top-level wire style **port/wire/driver** element. This element defines the properties of a single-shot waveform. When this element is contained within a non-scalar wire port, the single-shot waveform shall apply to all bits of this port.

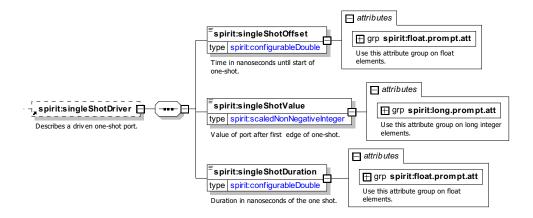

6.11.8.2 Description

The **singleShotDriver** element contains three elements that describe the properties of the waveform. These are also depicted in <u>Figure 12</u>.

- a) singleShotOffset (mandatory) specifies the time delay from the start of the waveform to the transition. The singleShotOffset element is of type configurableDouble. The singleShotOffset element is configurable with attributes from float.prompt.att, see C.12. This element also contains a units (optional) attribute for specifying the units of the time values: ns (the default) and ps.
 ns stands for nanosecond and is equal to 10⁻⁹ seconds. ps stands for picosecond and is equal to 10⁻¹² seconds.
- b) **singleShotValue** (mandatory) specifies the logic value to which the port transitions. This value is also the opposite of the value from which the waveform starts. The value of this element shall be 0 or 1. The **singleShotValue** element is of type *scaledNonNegativeInteger*. The **singleShotValue** element is configurable with attributes from *long.prompt.att*, see <u>C.12</u>.
- c) **singleShotDuration** (mandatory) specifies how long the waveform remains at the value specified by **singleShotValue**. The **singleShotDuration** element is of type *configurableDouble*. The **single-ShotDuration** element is configurable with attributes from *float.prompt.att*, see <u>C.12</u>. This element also contains a **units** (optional) attribute for specifying the units of the time values: **ns** (the default) and **ps**.

See also: <u>SCR 12.11</u> and <u>SCR 12.12</u>.

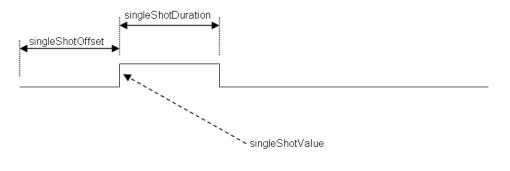


Figure 12—singleShotDriver elements

6.11.8.3 Example

This is an example of a single-shot driver set on the wire port named reset. The waveform starts off in the logic 0 state for 100 ns and then transitions to the logic 1 state for 100 ns.


6.11.9 Implementation constraints

Implementation constraints can be defined to document requirements that need to be met by an implementation of the component. Constraints are defined in groups called *constraint sets* (in the IP-XACT element **port/wire/constraintSets/constraintSet)** so different constraints can be associated with different views of the component. A particular set of constraints is tied to a component view by the **constraintSetId** attribute in the constraint set and the matching **constraintSetRef** element in the view.

6.11.10 Component wire port constraints

6.11.10.1 Schema

The following schema defines the information contained in the **constraintSets** element, which may appear within a **wire** element within a component **port** element (**component/model/ports/port/wire**).

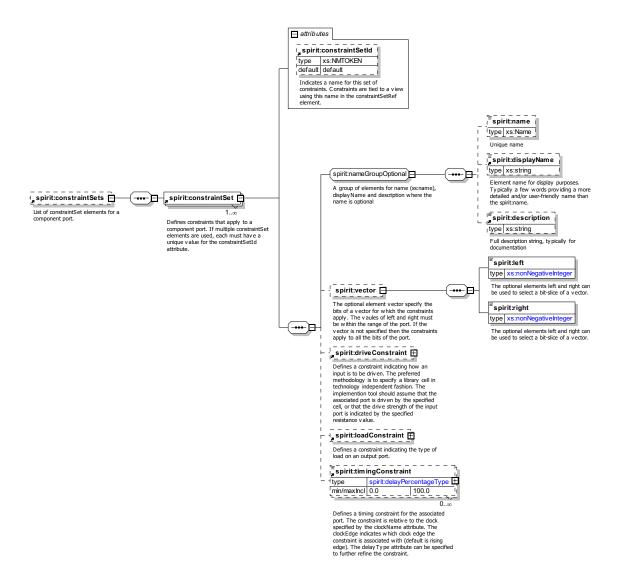

6.11.10.2 Description

The **constraintSets** element is used to define technology independent implementation constraints associated with the containing wire port of the component. The **constraintSets** element contains one or more **constraintSet** elements that define a set of constraints for the port. If more than one **constraintSet** element is present, each shall have a unique value for the **constraintSetId** attribute so each **constraintSet** can be uniquely referenced from a **view**. **constraintSet** contains the following elements.

- a) *nameGroupOptional* is defined in <u>C.2</u>.
- b) vector (optional) determines to which bits of a vectored port the constraint applies. The left and right vector bounds elements inside the vector element specify the bounds of the vector. The left and right elements are of type nonNegativeInteger.
- c) driveConstraint (optional) defines a drive constraint for this port. See 6.11.11 for details.
- d) loadConstraint (optional) defines a load constraint for this port. See 6.11.12 for details.
- e) **timingConstraint** (optional) defines a timing constraint relative to a clock for this port. See <u>6.11.13</u> for details.

NOTE—To specify technology-dependent constraints (which is not represented in the schema), use an SDC file and reference the file via **fileSet**.

6.11.10.3 Example


This example shows a port containing a single timing constraint appearing in two different constraint sets.

```
<spirit:port>
   <spirit:name>hgrant</spirit:name>
   <spirit:wire>
      <spirit:direction>in</spirit:direction>
      <spirit:constraintSets>
          <spirit:constraintSet spirit:constraintSetId="timing">
             <spirit:timingConstraint spirit:clockName="hclk">40
                 </spirit:timingConstraint>
          </spirit:constraintSet>
          <spirit:constraintSet spirit:constraintSetId="area">
             <spirit:timingConstraint spirit:clockName="hclk">50
                 </spirit:timingConstraint>
          </spirit:constraintSet>
      </spirit:constraintSets>
   </spirit:wire>
</spirit:port>
```

6.11.11 Port drive constraints

6.11.11.1 Schema

The following schema defines the information contained in the **driveConstraint** element, which may appear within a **modeConstraints** or **mirroredModeConstraints** element within a wire type port in an abstraction definition or within a **constraintSet** element within a wire type port in a component.

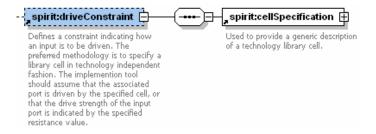

6.11.11.2 Description

The **driveConstraint** element defines a technology-independent drive constraint associated with the containing wire port of a component or the component port associated with the logical port within an abstraction definition if the **driveConstraint** element is contained within an abstraction definition. The actual constraint consists of a technology-independent specification of a library cell presumed to drive the input port. The **cellSpecification** element defines the cell (see <u>6.11.14</u>).

The **driveConstraint** element is not valid on an output port.

See also: <u>SCR 12.1</u>, <u>SCR 12.3</u>, and <u>SCR 12.6</u>.


6.11.11.3 Example

This example shows two different drive constraints. The first represents a median-strength D flop and the second a low-strength sequential cell.

6.11.12 Port load constraints

6.11.12.1 Schema

The following schema element defines the information contained in the **loadConstraint** element, which may appear within a **modeConstraints** or **mirroredModeConstraints** element within a wire type port in an abstraction definition or within a **constraintSet** element within a wire type port in a component.

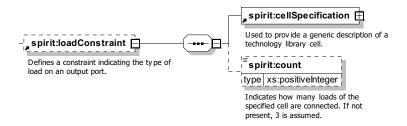

6.11.12.2 Description

The **loadConstraint** element defines a technology-independent load constraint associated with the containing wire port of a component or the component port associated with the logical port within an abstraction definition if the **loadConstraint** element is contained within an abstraction definition. The actual constraint consists of two parts, the technology-independent specification of a library cell and a count. **loadConstraint** also contains the following elements.

- a) **cellSpecification** (mandatory) defines the library cell (see <u>6.11.14</u>).
- b) **count** (optional) indicates how many loads of the indicated type are modeled as if attached to the output port. The default is three loads. The **count** element is of type **positiveInteger**.

The **loadConstraint** element is not valid on input ports.

See also: SCR 12.2, SCR 12.4, and SCR 12.5.


6.11.12.3 Example

This example shows two different load constraints. The first is load consisting of three D flops of median strength and the second is a load consisting of four low-strength sequential cells.

6.11.13 Port timing constraints

6.11.13.1 Schema

The following schema defines the information contained in the **timingConstraint** element, which may appear within a **modeConstraints** or **mirroredModeConstraints** element within a wire type port in an abstraction definition or within a **constraintSet** element within a wire type port in a component.

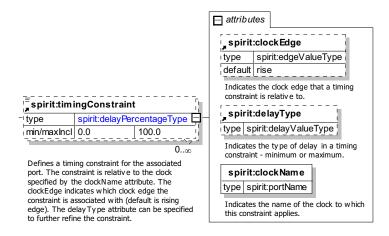

6.11.13.2 Description

The **timingConstraint** element defines a technology-independent timing constraint associated with the containing wire port of a component or abstraction definition. It is of type *delayPercentageType*; the value is a floating point number between 0 and 100, which represents the percentage of the cycle time to be allocated to the timing constraint on the port. If the component port is an input (or the port in an abstraction definition ends up mapping to a physical port with direction **in**), the timing constraint represents an input delay constraint; otherwise, it represents an output delay constraint. **timingConstraint** also contains the following attributes.

- a) clockEdge (optional) specifies to which edge of the clock the constraint is relative. The default behavior is that the constraint is relative to the rising edge of the clock. The clockEdge attribute may have two values rise (the default) or fall.
- b) **delayType** (optional) restricts the constraint to applying to only best-case (minimum) or worst-case (maximum) timing analysis. By default, the constraint is applied to both. The **delayType** attribute may have two values **min** or **max**.
- c) clockName (mandatory) specifies the delay constraint relative to the clock. clockName shall be a valid port name or another clock name in the containing description. The cycle time of the referenced clock is what actually determines the actual magnitude of the delay constraint (<clock</p>

cycle time> × 100 / <timing constraint element value>). The **clockName** element is of type *portName*.

See also: <u>SCR 12.7</u> and <u>SCR 12.8</u>.

6.11.13.3 Example


This example shows three basic timing constraints. The first indicates a delay of 40% of the clock hclk, relative to the rising edge of hclk, and applicable to both best- and worst-case timing analysis. The second indicates a delay of 30% of the clock hclk, relative to the falling edge of hclk, and applicable to best-case timing. The third indicates a delay of 50% of the clock hclk, relative to the falling edge of hclk, and applicable to worst-case timing.

```
<spirit:timingConstraint
    spirit:clockName="hclk">40</spirit:timingConstraint>
<spirit:timingConstraint spirit:clockName="hclk"spirit:clockEdge="fall"
    spirit:delayType="min">30</spirit:timingConstraint>
<spirit:timingConstraint spirit:clockName="hclk" spirit:clockEdge="fall"
    spirit:delayType="max">50</spirit:timingConstraint>
```

6.11.14 Load and drive constraint cell specification

6.11.14.1 Schema

The following schema defines the information contained in the **cellSpecification** element, which may appear within a **loadConstraint** or **driveConstraint** element indicating the type of cell to use in the constraint.

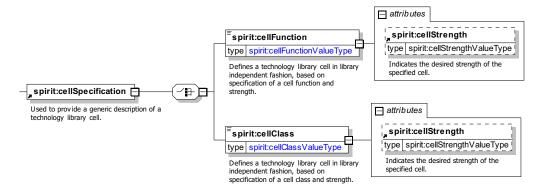

6.11.14.2 Description

The **cellSpecification** element defines a cell in a technology-independent fashion such that drive and load constraints can be defined without referencing a specific technology library. The cell is defined so a DE can map it to an appropriate cell in a specific library when the actual constraint is generated. The **cellSpecification** element shall contain *one* of the following two elements.

- a) **cellFunction** (mandatory) specifies a cell function from the user-defined library. The **cellFunction** element shall be one of the following values: **nd2**, **buf**, **inv**, **mux21**, **dff**, **latch** or **xor2**. The **cellFunction** element contains a **cellStrength** (optional) attribute that provides the cell strength specification. The value shall be one of **low**, **median** (the default), or **high**. **median** implies the middle cell of all the cells that match the desired function, sorted by drive or load strength (as appropriate for the given constraint), is used.
- b) **cellClass** (mandatory) specifies a cell class from the user-defined library. The **cellClass** element shall be one of the following values: **combinational** or **sequential**. The **cellClass** element contains a

cellStrength (optional) attribute that provides the cell strength specification. The value shall be one of **low**, **median** (the default), or **high**. **median** implies the middle cell of all the cells that match the desired class, sorted by drive or load strength (as appropriate for the given constraint), is used.


6.11.14.3 Example

This example shows two different variations of cell specifications. The first indicates a median-strength D flop cell and the latter a low-strength sequential cell.

6.11.15 Other clock drivers

6.11.15.1 Schema

The following schema defines the information contained in the **otherClockDrivers** element, which may appear within a **component** element.

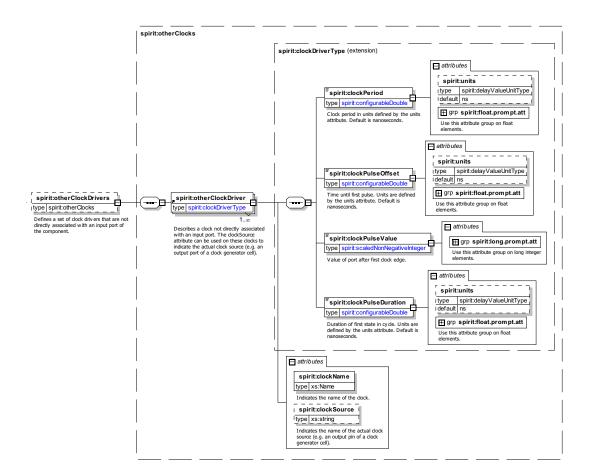

6.11.15.2 Description

The **otherClockDrivers** element defines clocks within a component that are not directly associated with a top-level port, e.g., virtual clocks and generated clocks. The **otherClockDrivers** element contains one or more **otherClockDriver** elements, each of which represents a single clock. The **otherClockDriver** element consists of a number of subelements that define the format of the clock waveform.

- a) **clockPeriod**, **clockPulseOffset**, **clockPulseValue**, and **clockPulseDuration** (all required) are all detailed in the description of the element **clockDriver**. See <u>6.11.7</u>.
- b) **clockName** (mandatory) attribute indicating the name of the clock for reference by a constraint. The **clockName** element is of type *Name*.
- c) **clockSource** (optional) attribute defines the physical path and name of the clock generation cell. The **clockSource** element is of type *string*.

6.11.15.3 Example


This example shows a virtual and a generated clock within the **otherClockDrivers** element.

```
<spirit:otherClockDrivers>
   <spirit:otherClockDriver spirit:clockName="virtClock">
      <spirit:clockPeriod>5</spirit:clockPeriod>
      <spirit:clockPulsOffset>0</spirit:clockPulseOffset>
      <spirit:clockPulseValue>1</spirit:clockPulseValue>
      <spirit:clockPulseDuration>2.5</spirit:clockPulseDuration>
   </spirit:otherClockDriver>
   <spirit:otherClockDriver spirit:clockName="genClock"</pre>
      spirit:clockSource="i clkGen/clk1">
      <spirit:clockPeriod spirit:units="ps">10</spirit:clockPeriod>
      <spirit:clockPulsOffset spirit:units="ps">2</spirit:clockPulseOffset>
      <spirit:clockPulseValue>0</spirit:clockPulseValue>
      <spirit:clockPulseDuration spirit:units="ps">5
          </spirit:clockPulseDuration>
   </spirit:otherClockDriver>
<spirit:otherClockDrivers>
```

6.11.16 Component transactional port type

6.11.16.1 Schema

The following schema defines the information contained in the **transactional** element (in a **component**/ **model/ports/port** element).

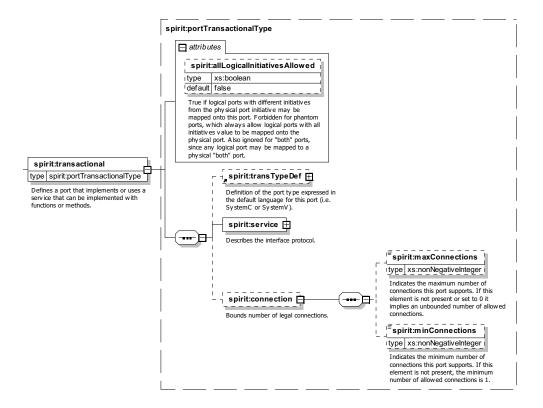

6.11.16.2 Description

A **transactional** element in a component model port defines a physical transactional port of the component, which implements or uses a service. A service can be implemented with functions or methods. It contains the following elements.

- a) **allLogicalInitiativesAllowed** (optional) attribute defines whether the port may be mapped to a port in an **abstractionDefinition** with a different initiative. The default value is **false**. The **allLogical-InitiativesAllowed** attribute is of type **boolean**. See <u>5.3</u>.
- b) **transTypeDef** (optional) defines the port type expressed in the default language for this port. See 6.11.17.
- c) **service** (mandatory) describes the interface protocol associated with the transactional port. See 6.11.18.
- d) connection (optional) defines the number of legal connections for a port.
 - 1) **maxConnections** (optional) indicating the maximum number of connections that this port supports. Its default value is 0, which indicates an unbounded number of legal connections. The **maxConnections** element is of type *nonNegativeInteger*.
 - 2) **minConnections** (optional) indicating the minimum number of connections that this ports supports. Its default value is 1. The **minConnections** element is of type *nonNegativeInteger*.

See also: <u>SCR 6.2</u>, <u>SCR 6.3</u>, <u>SCR 6.4</u>, <u>SCR 6.13</u>, <u>SCR 6.24</u>, and <u>SCR 6.25</u>.

6.11.16.3 Example


This example shows a transactional port requiring a service of type tlm_interface and allowing only a point-to-point connection.

```
<spirit:port> <spirit:name>tlm initiator port</spirit:name>
   <spirit:transactional>
      <spirit:transTypeDef>
          <spirit:typeName>sc port</spirit:typeName>
      </spirit:transTypeDef>
   <spirit:service>
      <spirit:initiative>requires</spirit:initiative>
      <spirit:serviceTypeDefs>
          <spirit:serviceTypeDef>
             <spirit:typeName>tlm interface</spirit:typeName>
          </spirit:serviceTypeDef>
      </spirit:serviceTypeDefs>
      </spirit:service>
          <spirit:connection>
             <spirit:maxConnections>1</spirit:maxConnections>
          </spirit:connection>
   </spirit:transactional>
</spirit:port>
```

6.11.17 Component transactional port type definition

6.11.17.1 Schema

The following schema defines the information contained in the **transTypeDef** element (in a **component/model/ports/port/transactional** element).

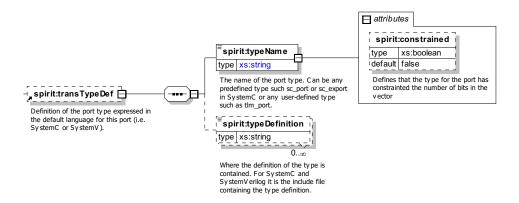

6.11.17.2 Description

A **transTypeDef** element defines the port type expressed in the default language for this port (e.g., SystemC or SystemVerilog). It contains the following elements.

- typeName (mandatory) defines the port type (such as sc_port/sc_export in SystemC or any user-defined type, such as tlm_port). The typeName element may be associated with an optional boolean constrained attribute (the default value is false). If true this indicates that the port type definition has constrained the number of bits in the vector.
- b) typeDefinition (optional) contains a language-specific reference to where the given type is actually defined. <u>Table 4</u> shows some examples. There can be multiple typeDefinitions for each port. The typeDefinition element is of type string.

6.11.17.3 Example


The following example shows the transactional type definition of a custom specific tlm_port, defined in the include file tlm port.h.

```
<spirit:transTypeDef>
    <spirit:typeName>tlm_port</spirit:typeName>
    <spirit:typeDefinition>tlm_port.h</spirit:typeDefinition>
</spirit:transTypeDef>
```

6.11.18 Component transactional port service

6.11.18.1 Schema

The following schema defines the information contained in the **service** element (in a **component/model/ports/port/transactional** element).

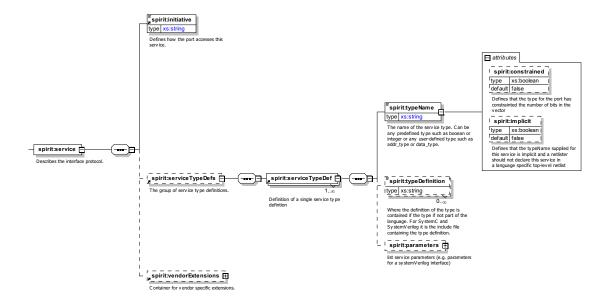

6.11.18.2 Description

A service element describes the interface protocol associated with the transactional port. It contains the following elements and attributes.

- a) initiative (mandatory) defines the type of access: requires, provides, both, or phantom.
 - 1) For example, a SystemC sc_port should be defined with the **requires** initiative, since it requires a SystemC interface. A SystemC sc_export should be defined with the **provides** initiative, since it provides a SystemC interface.
 - 2) **both** indicates the type of access is both **requires** and **provides**.
 - 3) **phantom** indicates a phantom port is being defined. See 6.11.19.
- b) **serviceTypeDefs** (optional) contains one or more **serviceTypeDef** elements. This **serviceTypeDef** element defines a single service type definition.
 - typeName (mandatory) defines the name of the service type (can be any predefined type, such as *boolean* or any user-defined type, such as addr_type). The typeName element may be defined with two optional attributes: constrained (a *boolean* indicating if the port type has

constrained the number of bits in the vector) and **implicit** (a **boolean** indicating a netlister should not declare this service in a language-specific, top-level netlist).

- 2) **typeDefinition** (optional) indicates a location where the type is defined, e.g., in SystemC and SystemVerilog, this is the include file containing the type definition.
- 3) parameters (optional) specifies any service type parameters. See <u>C.11</u>.
- c) vendorExtensions (optional) adds any extra vendor-specific data related to the service. See <u>C.10</u>.

6.11.18.3 Example

The following example shows the definition of the service provided by a SystemC port.

6.11.19 Phantom ports

In some components, the RTL or TLM implementation of the component does not fully implement the functionality of the component described by IP-XACT. In RTL components, this is typically because the component has to work in design flows that only allow a signal to be routed though an RTL component if there is some logic within the RTL component associated with that signal. This is particularly a problem for components containing channels.


An IP-XACT channel is supposed to represent the complete bus infrastructure between the master, slave, and system bus interfaces connected to the bus. As such, the component containing the channel should contain everything that is needed to create this infrastructure. In many buses, however, some signals are directly connected between the components attached to the bus, with no intervening logic. This is most often the case with clock and reset signals. If the component is to be usable in a wide range of design flows, these signals cannot be included in the RTL of the component.

To fully describe such a channel component and allow netlisters that have no special knowledge of that bus type to netlist designs containing it, IP-XACT describes these additional connections as phantom ports. *Phantom ports* are additional ports included in the component's port list, but marked as **phantom**. As with real component ports, the mapping of a set of logical bus ports to that phantom port implies any design using that component needs to connect those logical ports with no intervening logic. The difference is a real component port needs to have a corresponding port in any RTL, TLM, or hierarchical IP-XACT implementation of the component; whereas, for phantom ports there is no corresponding port in the implementation.

6.11.20 modelParameters

6.11.20.1 Schema

The following schema details the information contained in the **modelParameters** element, which may appear as an element inside the top-level **component/model** or **abstractor/model** element.

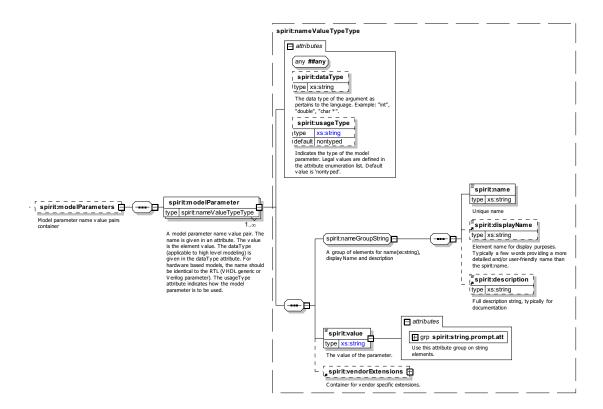

6.11.20.2 Description

Model parameters are most often used in HDL languages to specify information that is passed to the model to configure it for a process. The **modelParameters** element may contain any number of **modelParameter** elements. The **modelParameter** elements describe the properties for a single parameter that is applied to all the models specified under the **model/views** element. It contains the following elements.

- a) dataType (optional) attribute specifies the data type as it pertains to the language of the model. This definition is used to define the type for component declaration and as such has no IP-XACT semantic meaning. For example, SystemC could be int, double, char*, etc. For VHDL, this could be std_logic, std_logic_vector, integer, etc. The dataType attribute is of type string.
- b) **usageType** (optional) attribute specifies how this parameter is used in different modeling languages: **nontyped** (the default) and **typed**. See <u>6.11.20.2.1</u>.
- c) *nameGroup* group is defined in C.1.
- d) **value** (mandatory) contains the actual value of the **modelParameter**. The **value** element is of type *string*. The **value** element is configurable with attributes from *string.prompt.att*, see <u>C.12</u>.
- e) **vendorExtensions** (optional) adds any extra vendor-specific data related to the **modelParameter**. See <u>C.10</u>.

6.11.20.2.1 Typed and non-typed parameters classification

There are two categories of parameters: typed and non-typed.

The *typed* parameters (or declaration parameters) appear in object-oriented (OO) languages such a C++/ SystemC or SystemVerilog.

In C++/SystemC, these are named Class template parameters. Templates can be used to develop a generic class prototype (specification), which can be instantiated with different data types. This is very useful when the same kind of class is used with different data types for individual members of the class. Parameterized types are used as data types and then a class can be instantiated, i.e., constructed and used by providing arguments for the parameters of the class template. A class template is a specification of how a class should be built (i.e., instantiated) given the data type or values of its parameters.

Class template parameters can have default arguments, which are used during class template instantiation when arguments are not provided. Because the provided arguments are used starting from the far left parameter, default arguments should be provided for the right-most parameters.

Example 1

```
template <typename T>
class FIFO {
         FIFO();
         T pull();
         void push(T &x);
};
```

In SystemVerilog, typed parameters are named type parameters. Type parameters can be used in SystemVerilog classes, interfaces, or modules to provide the basic function of C++ templates.

Example 2

The generic *non-typed* parameters (or initialization parameters) appear in all languages (procedural or OO) and in particular in VHDL, Verilog, SystemC, and SystemVerilog. A non-typed parameter is like an ordinary (function-parameter) declaration. In SystemC, it represents a constant in a class template definition or a parameter in a class constructor, i.e., this can be determined at compilation time. In VHDL, it is represented by generics. In Verilog or SystemVerilog, it is represented by parameters.

Example 3

Here is an example of non-typed parameters usage on a simple GCD model expressed in various languages.

VHDL

```
entity GCD is
generic (Width: natural);
port (
Clock, Reset, Load: in std_logic;
```

```
A,B:
                                in unsigned(Width-1 downto 0);
                        Done: out std_logic;
Y: out unsigned(Width-1 downto 0));
   end entity GCD;
(System) Verilog
   module GCD (Clock, Reset, Load, A, B, Done, Y);
   parameter Width = 8;
                        input
                                 Clock, Reset, Load;
                        input
                                  [Width-1:0] A, B;
                        output Done;
                        output [Width-1:0] Y;
   endmodule
SystemC 

   template <unsigned int Width = 8>
   SC MODULE (GCD) {
                        sc in<bool> Clock, Reset, Load;
                        sc in<sc uint<Width> >a, b;
                        sc out<bool> Done;
                        sc out<sc uint<Width> > y;
```

These two kinds of parameters (typed and non-typed) can be combined to model complex IP modules.

Example 4

In SystemC:

In a top SC netlist design, such a class is instantiated as follows.

```
testModule<bool> test("myModuleName", "port1");
```

In IP-XACT, the **testModule** parameters are represented as follows.

```
spirit:id="Tid"
          spirit:prompt="T:"
          spirit:resolve="user">boolean</spirit:value>
   </spirit:modelParameter>
   <!-- constructor parameters -->
   <spirit:modelParameter spirit:usageType="nontyped">
      <spirit:name>modname</spirit:name>
      <spirit:value</pre>
          spirit:choiceRef="modulenameChoice"
          spirit:configGroups="requiredConfig"
          spirit:id="modnameId"
          spirit:prompt="moduleName:"
          spirit:resolve="user">myModuleName</spirit:value>
   </spirit:modelParameter>
   <spirit:modelParameter spirit:usageType="nontyped">
      <spirit:name>portname</spirit:name>
      <spirit:value</pre>
          spirit:choiceRef="portnameChoice"
          spirit:configGroups="requiredConfig"
          spirit:id="portnameid"
          spirit:prompt="portName:"
          spirit:resolve="user">port1</spirit:value>
   </spirit:modelParameter>
</spirit:modelParameters>
```

6.11.20.2.2 Generic parameters mapping in different languages

<u>Table 6</u> summarizes the two kinds of parameters (initialization and declaration) expressed in the four most commonly used hardware languages.

Language	Non-typed parameters (initialization)	Typed parameters (declaration)
VHDL	generics	NA
Verilog	parameter	NA
SystemC	constructor	template(constant or variable type)
SystemVerilog	parameter	parameter


Table 6—Parameter mappings

A declaration parameter (e.g., int) shall be used when declaring an IP instance in a top netlist (e.g., myIP int myIntIP;). An initialization parameter (e.g., myName) shall be used when initializing the instance of that IP (e.g., myIntIP ("myName");).

6.12 Component generators

6.12.1 Schema

The following schema details the information contained in the **componentGenerators** element, which may appear as an element inside the top-level **component** element.

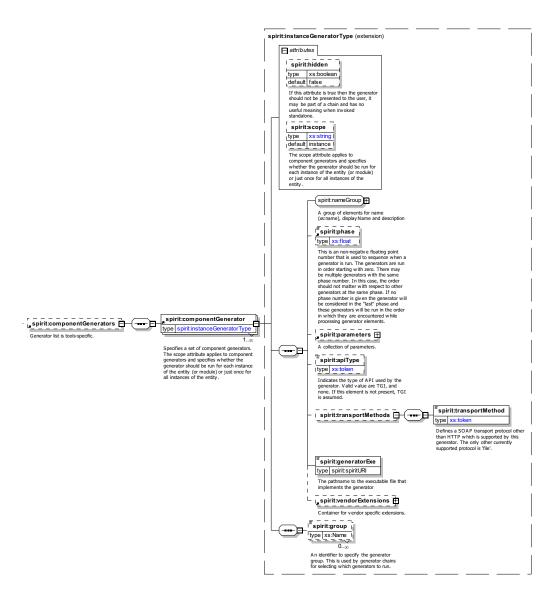

6.12.2 Description

The **componentGenerators** element contains an unbounded list of **componentGenerator** elements. Each **componentGenerator** element defines a generator that is assigned and may be run on this component. **componentGenerator** contains two attributes: **hidden** and **scope**. The **hidden** (optional) attribute specifies, when **true**, this generator shall not be run as a stand-alone generator and is required to be run as part of a chain. This generator should not be presented to the user for direct invocation. If **false** (the default), this generator may be run as a stand-alone generator or in a generator chain. This attribute is of type **boolean**. The **scope** (optional) attribute is an enumerated list of **instance** and **entity**. **instance** indicates this generator

shall be run once for all instances of this component. **entity** indicates this generator shall be run once for each instance of this component.

componentGenerator contains the following elements.

- a) **nameGroup** group is defined in <u>C.1</u>. The **name** elements shall be unique within the containing **componentGenerators** element.
- b) **phase** (optional) determines the sequence in which generators are run. Generators are run in order starting with zero (0). If two generators have the same phase number, the order shall be interpreted as not important and the generators can be run in any order. If no phase number is given, the generator is considered in the "last" phase and these generators are run in any order after the last generator with a phase number. The **phase** element is of type *float* and shall also be a positive number.
- c) **parameters** (optional) specifies any **componentGenerator** parameters. See <u>C.11</u>.
- d) **apiType** (optional) indicates the type of API used by the generator: an enumerated list of **TGI** or **none**. **TGI** indicates the generator communicates with the DE using SOAP as defined by the IP-XACT TGI. **none** indicates the generator does not communicate with the DE.
- e) **transportMethods** (optional) defines alternate SOAP transport protocols that this generator can support. The default SOAP transport protocol is HTTP if this element is not present.
 - 1) **transportMethod** specifies an alternate transport protocol. This element is an enumerated list of only one element **file**.
 - 2) **file** indicates the SOAP transport protocol is transported to the DE via a file or file handle.
- f) **generatorExe** (mandatory) contains an absolute or relative (to the location of the containing document) path to the generator executable. The path may also contain environment variables from the host system, which are used to abstract the location of the generator. The **generatorExe** element is of type **spiritURI**.
- g) vendorExtensions (optional) adds any extra vendor-specific data related to the component-Generator. See C.11.
- h) **group** (optional) is an unbounded list of names used to assign this generator to a group with other generators. These **group** names are then referenced by a generator chain selector to forming a chain of generators. See <u>9.1</u>. The **group** element is of type *Name*.

6.12.3 Example


This example shows a component generator used to validate the connections to a component.

6.13 File sets

6.13.1 fileSets

6.13.1.1 Schema

The following schema details the information contained in the **fileSets** element, which may appear in a component or an abstractor.

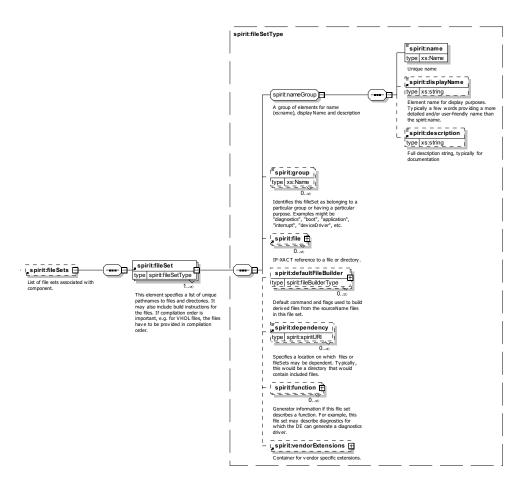

6.13.1.2 Description

The **fileSets** element contains one or more **fileSet** elements. A **fileSet** contains a list of files and directories associated with a component and/or instructions for further processing. If compilation order is important (e.g., for VHDL files), the files shall be listed in the order needed for compilation (the files to compile first are listed first). **fileSet** has the following mandatory and optional elements.

- a) *nameGroup* group is defined in <u>C.1</u>. The **name** elements shall be unique within the containing **fileSets** element.
- b) **group** (optional) describes the function or purpose of the file set with a single unbounded word group name (e.g., diagnostics, interrupt, etc.). The **group** element is of type *Name*.
- c) **file** (optional) references a single unbounded file or directory associated with the file set. If compilation order is important (e.g., for VHDL files), the files shall be listed in the order needed for compilation (see <u>6.13.2</u>).

- d) **defaultFileBuilder** (optional) specifies the unbounded default build commands for the files within this file set. See 6.13.5.
- e) **dependency** (optional) is the path to a directory containing (include) files on which the file set depends. The **dependency** element is of type *spiritURI*.
- f) **function** (optional) specifies the unbounded information about a software function for a generator (see 6.13.6).
- g) vendorExtensions (optional) provides a place for any vendor-specific extensions. See C.10.


6.13.1.3 Example

The following is an example of a **fileSet** with two VHDL files.

6.13.2 file

6.13.2.1 Schema

The following schema details the information contained in the **file** element, which may appear as an element inside the **fileSet** element.

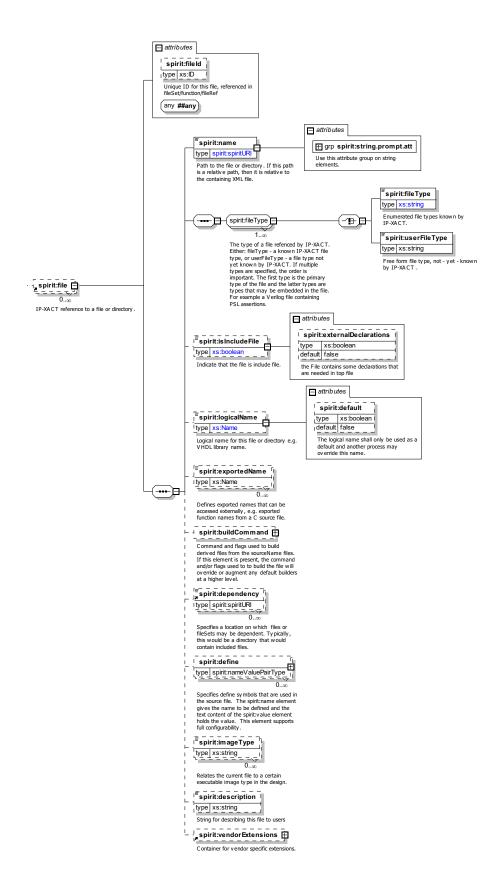

6.13.2.2 Description

A **file** is a reference to a file or directory. It is an optional element of a **fileSet**. If compilation order is important (e.g., for VHDL files), the files shall be listed in the order needed for compilation (the files to compile first are listed first). The **file** element contains an attribute **fileId** (optional) that is used for references to this file from inside the **fileSet/function/fileRef** element. The **file** element also allows for vendor attributes to be applied. **file** contains the following elements.

- name (mandatory) contains an absolute or relative (to the location of the containing document) path to a file name or directory. The path may also contain environment variables from the host system, used to abstract the location of files (see <u>D.17</u>). The **name** element is of type *spiritURI*. The **name** element is configurable with attributes from *string.prompt.att*, see <u>C.12</u>.
- b) *fileType* (mandatory) group contains one or more of the elements defined in <u>C.9</u>.
- c) includeFile (optional), when true, declares the file as an include file. If this element is not present the default value is false. includeFile is of type boolean. includeFile has an attribute external-Declarations (optional); when true, this indicates the include file is needed by users of any files in this file set.
- d) logicalName (optional) is the logical name for the file or directory, such as a VHDL library. The logicalName element is of type Name. logicalName includes an attribute default (optional) that means (when true) the logical name shall only be used as a default and another process may override this name. If false (the default), this logical name shall always be used. The default attribute is of type boolean.
- e) **exportedName** (optional, unbounded) defines any names that can be referenced externally. **exportedName** is of type *Name*.
- f) buildCommand (optional) contains flags or commands for building the containing source file. These flags or commands override any flags or commands present in higher-level defaultFile-Builder elements. See 6.13.3.
- g) **dependency** (optional, unbounded) is the path to a directory containing (include) files on which the file depends. The **dependency** element is of type *spiritURI*.
- h) **define** (optional) specifies the define symbols to use in the source file. See <u>6.13.4</u>.
- i) **imageType** (optional, unbounded) relates the current file to an executable image type in the design. The **imageType** element is of type *string*.
- j) description (optional) details the file for the user. The description element is of type string.
- k) vendorExtensions (optional) provides a place for any vendor-specific extensions. See C.10.

See also <u>SCR 14.1</u>.


6.13.2.3 Example

The following is an example of two file sets: one with a Verilog file with a dependency on a directory and one with a VHDL file.

6.13.3 buildCommand

6.13.3.1 Schema

The following schema details the information contained in the **buildCommand** element, which may appear as an element inside the **file** element.

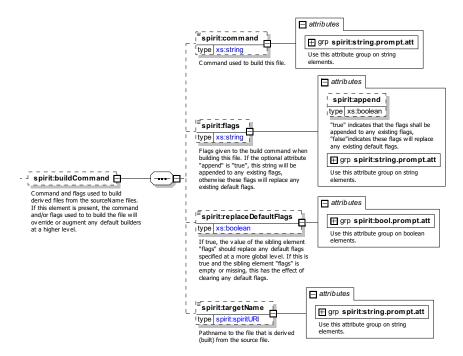

6.13.3.2 Description

A **buildCommand** contains flags or commands for building the containing source file. These flags or commands override any flags or commands present in higher-level **defaultFileBuilder** elements.

- a) **command** (optional) element defines a compiler or assembler tool that processes files of this type. The **command** element is of type *string*. The **command** element is configurable with attributes from *string.prompt.att*, see <u>C.12</u>.
- b) **flags** (optional) documents any flags to be passed along with the software tool command. The **flag** element is of type *string*. The **flags** element is configurable with attributes from *string.prompt.att*, see <u>C.12</u>. The **flags** element contains an attribute **append** (optional), which when **true**, indicates the **flags** shall be appended to the current flags from the **defaultFileBuilder** (see <u>6.13.5</u>), **fileBuilder** (see <u>6.7.5</u>), or the build script generator. If **false**, the **flags** shall replace the existing flags.
- c) **replaceDefaultFlags** (optional), when **true**, documents flags that replace any of the default flags from the build script generator. If **false**, the flags are appended. If **true** and the flags element is

- empty or not present, this has the effect of clearing all the flags. If this element is not present, its effective value is **false**. The **replaceDefaultFlags** element is of type **boolean**. The **replaceDefaultFlags** element is configurable with attributes from **bool.prompt.att**, see <u>C.12</u>.
- d) **targetName** (optional) defines the path to the file derived from the source file. The **targetName** element is of type **spiritURI**. The **targetName** element is configurable with attributes from **string.prompt.att**, see C.12.


6.13.3.3 Example

The following example specifies the build command for the containing file.

6.13.4 define

6.13.4.1 Schema

The following schema details the information contained in the **define** element, which may appear as an element inside the **file** element.

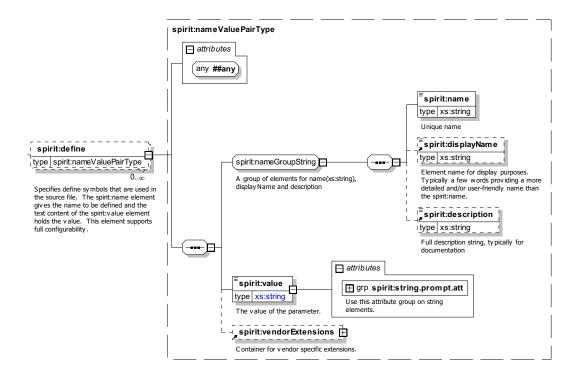

6.13.4.2 Description

The **define** element specifies the define symbols to use in the source file. This **define** element allows for vendor attributes to be applied.

a) *nameGroupString* group is defined in <u>C.5</u>.

- b) **value** (mandatory) contains the value of the **define** symbol. The **value** element is of type *string*. The **value** element is configurable with attributes from *string.prompt.att*, see <u>C.12</u>.
- c) vendorExtensions (optional) provides a place for any vendor-specific extensions. See <u>C.10</u>.


6.13.4.3 Example

This example defines a symbol called PROCESSOR ARCH to be equal to amrV5.

6.13.5 defaultFileBuilder

6.13.5.1 Schema

The following schema details the information contained in the **defaultFileBuilder** element, which may appear as an element inside the **fileSet** or **view** element.

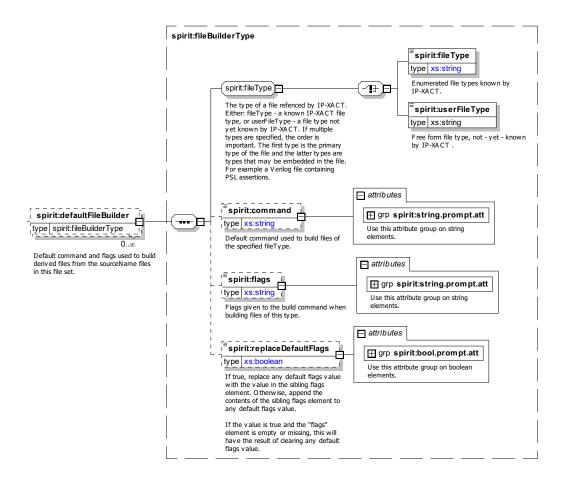

6.13.5.2 Description

A **defaultFileBuilder** contains default flags or commands for building the containing source file types. These flags or commands may be overridden by flags or commands present in lower-level **defaultFileBuilder** or **buildCommand** elements.

- a) *fileType* (mandatory) group contains one or more of the elements defined in <u>C.9</u>.
- b) **command** (optional) element defines a compiler or assembler tool that processes files of this type. The **command** element is of type *string*. The **command** element is configurable with attributes from *string.prompt.att*, see C.12.
- c) **flags** (optional) documents any flags to be passed along with the software tool command. The **flag** element is of type *string*. The **flags** element is configurable with attributes from *string.prompt.att*, see C.12.
- d) replaceDefaultFlags (optional) when true indicates the flags shall be appended to the current flags. If false, the flags shall replace the existing flags. The replaceDefaultFlags element is of type boolean. The replaceDefaultFlags element is configurable with attributes from bool.prompt.att, see C.12.


6.13.5.3 Example

The following is an example that specifies the default compiler command to use.

6.13.6 function

6.13.6.1 Schema

The following schema details the information contained in the **function** element, which may appear as an element inside the **fileSet** element.

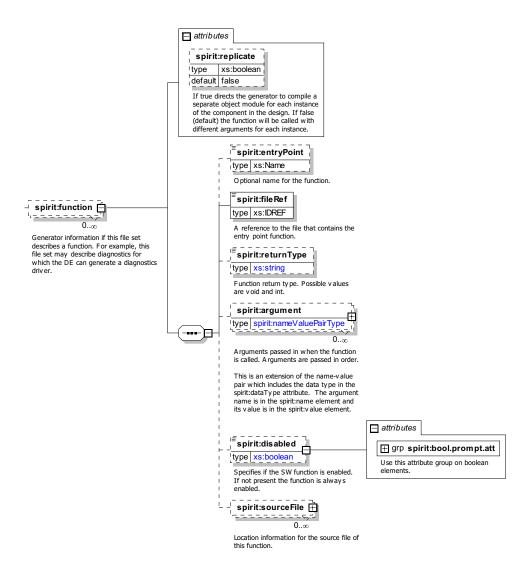

6.13.6.2 Description

A function specifies information about a software function. function contains an attribute replicate (optional), when set to true, the generator compiles a separate object module for each instance of the component in the design. This allows the function to be called with different attributes for each instance within the design (e.g., base address). The replicate attribute is of type *boolean* and the default value is false. function has the following elements.

- a) entryPoint (optional) is the entry point name for the function or subroutine. The entryPoint element is of type Name.
- b) **fileRef** (mandatory) reference to the file that contains the entry point for the function. The value of this element shall match an attribute in **file/fileId**. The **fileRef** element is of type **IDREF**. See 6.13.2.
- c) **returnType** (optional) is an enumerated *string* type that indicates the return type for the function. The two possible values are **int** and **void**.
- d) **argument** (optional) lists any arguments passed when this function is called. All arguments shall be passed in the order presented in this description. See <u>6.13.7</u>.

- e) **disabled** (optional) disables the software function. The **disabled** element is of type **boolean**. When **true**, the software function is not available for use. When **false**, the function is available. If this element is not present, its effective value is **false**. The **disabled** element is configurable with attributes from **bool.prompt.att**, see <u>C.12</u>.
- f) **sourceFile** (optional) references any source files. The order of the source files may be important, as this could indicate a compile order. See <u>6.13.8</u>.

6.13.6.3 Example


The following example includes a file with a fileId and a **function** referencing that file.

```
<spirit:fileSets>
   <spirit:fileSet spirit:fileSetId="fs-systemcSource">
      <spirit:name>sourceFiles</spirit:name>
      <spirit:file spirit:fileId="source">
          <spirit:name>src/source.cc</spirit:name>
          <spirit:fileType>systemCSource-2.1</spirit:fileType>
      </spirit:file>
      <spirit:function>
          <spirit:fileRef>source</spirit:fileRef>
          <spirit:returnType>void</spirit:returnType>
          <spirit:argument spirit:dataType="int">
             <spirit:name>argument 1</spirit:name>
             <spirit:value>0</spirit:value>
          </spirit:argument>
      </spirit:function>
   </spirit:fileSet>
</spirit:fileSets>
```

6.13.7 argument

6.13.7.1 Schema

The following schema details the information contained in the **argument** element, which may appear as an element inside the **function** element.

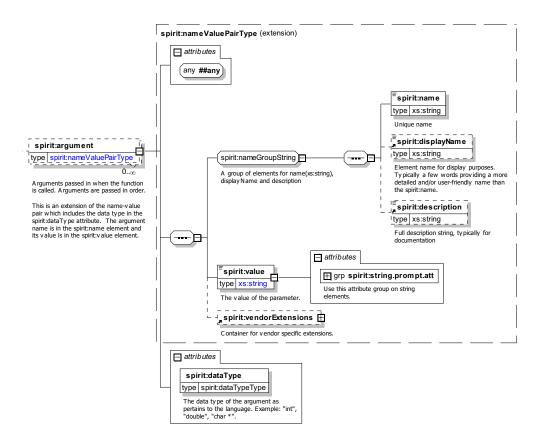

6.13.7.2 Description

The **argument** element specifies the arguments passed to the **function** when making a call. All arguments shall be passed in the order presented in this description. The **dataType** (mandatory) attribute specifies the type for this argument, e.g., an int or boolean. The **argument** element also allows for vendor attributes to be applied.

- a) *nameGroupString* group is defined in <u>C.5</u>.
- b) **value** (mandatory) contains the value of the **argument**. The **value** element is of type *string*. The **value** element is configurable with attributes from *string.prompt.att*, see <u>C.12</u>.
- c) vendorExtensions (optional) provides a place for any vendor-specific extensions. See C.10.


6.13.7.3 Example

The following example includes a file with a fileId and a function referencing that file.

6.13.8 sourceFile

6.13.8.1 Schema

The following schema details the information contained in the **sourceFile** element, which may appear as an element inside the **function** element.

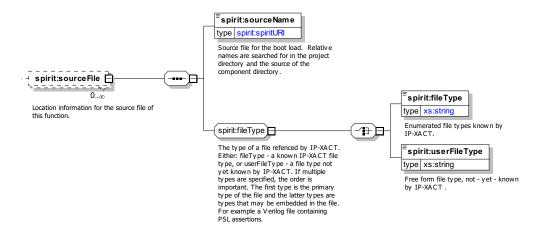

6.13.8.2 Description

The **sourceFile** element specifies the location of the source files for this **function**. All source files shall be processed in the order presented in this description.

- a) sourceName (mandatory) contains an absolute or relative (to the location of the containing document) path to a file name or directory. The path may also contain environment variables from the host system, used to abstract the location of files. The sourceName element is of type spiritURI.
- b) *fileType* (mandatory) group contains one or more of the elements defined in <u>C.9</u>.


6.13.8.3 Example

The following example specifies the type and location of a source file.

6.14 Choices

6.14.1 Schema

The following schema details the information contained in the **choices** element, which may appear as an element inside the top-level **component**, **abstractor**, or **generatorChain** element.

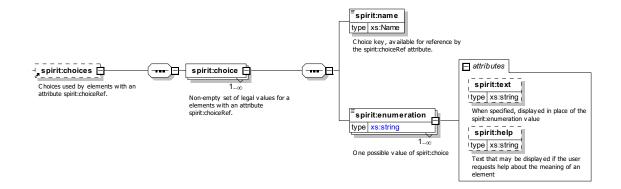

6.14.2 Description

The **choices** element contains an unbounded list of **choice** elements. Each **choice** element is a list of items used by a **modelParameter** element, **parameter** element, or any other configurable element with a **choiceRef** attribute. These elements indicate they are using a **choice** element by setting the attribute **choiceRef**. This **choiceRef** attribute shall reference a valid **choice/name** element in the containing description.

The **choice** definition contains the following elements.

- a) name (mandatory) specifies the name of this list and is used by other elements for reference. The name elements shall be unique within the containing choices element. The name element is of type Name.
- b) **enumeration** (mandatory) is an unbounded list of elements, where each holds a possible value that the referencing element may contain. The **enumeration** element is of type *string*.
 - 1) text (optional) attribute causes optional text to be displayed when choosing the choice value. The resulting value stored in the configurable element corresponds to the enumeration value for the choice. If the text attribute is not present, the enumeration value may be displayed. The text element is of type string.
 - 2) **help** (optional) attribute gives any additional information about this enumeration element. The **help** element is of type *string*.

See also: <u>SCR 5.11</u>.

6.14.3 Example

This example shows the addressable size (width) and the word size (Dwidth) of a memory component.

```
<spirit:model>
  <spirit:modelparameters>
    <spirit:modelparameter>
        <spirit:name>width</spirit:name>
```


```
<spirit:value spirit:format="choice"</pre>
   spirit:choiceRef="widthOptions">1</spirit:value>
   </spirit:modelparameter>
   <spirit:modelparameter>
      <spirit:name>Dwidth</spirit:name>
       <spirit:value spirit:format="choice"</pre>
   spirit:choiceRef="DwidthOptions">4</spirit:value>
   </spirit:modelparameter>
  </spirit:modelparameters>
</spirit:model>
<spirit:choices>
  <spirit:choice>
    <spirit:name>widthOptions</spirit:name>
    <spirit:enumeration spirit:text="8K">1</spirit:enumeration>
    <spirit:enumeration spirit:text="64K">2</spirit:enumeration>
    <spirit:enumeration spirit:text="256K">3</spirit:enumeration>
  </spirit:choice>
  <spirit:choice>
    <spirit:name>DwidthOptions</spirit:name>
    <spirit:enumeration spirit:text="2Bytes">4</spirit:enumeration>
    <spirit:enumeration spirit:text="4Bytes">5</spirit:enumeration>
    <spirit:enumeration spirit:text="8Bytes">6</spirit:enumeration>
  </spirit:choice>
</spirit:choices>
```

6.15 White box elements

Verification IP (VIP), with monitor bus interfaces, connect to an active bus interface to monitor only that interface's protocol for a variety of uses. Other verification tools may require access to component IP in a design, at a level deeper than the interfaces defined for the component. A white box element provides such access. This can be used in situations where internal registers, pins, signals, or whole IP-XACT interfaces need to be monitored or driven by VIP.

6.15.1 Schema

The following schema details the information contained in the **whiteboxElements** element, which may appear as an element inside the top-level **component** element.

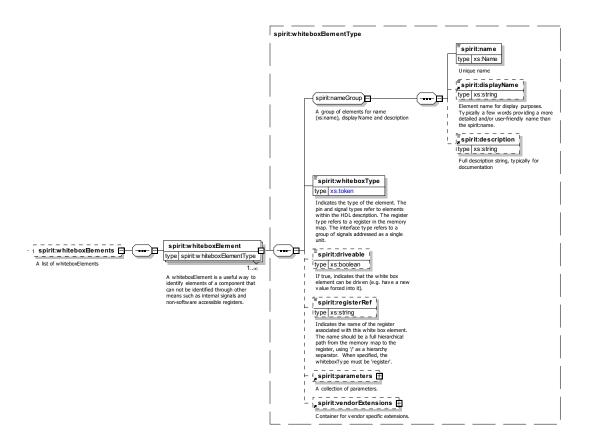

6.15.2 Description

The **whiteboxElements** element contains a list of one or more **whiteboxElement** elements. Each **whiteboxElement** element contains the following elements.

- a) nameGroup group is defined in <u>C.1</u>. The name element shall be unique within the containing whiteboxElements element.
- whiteboxType (mandatory) documents this white box element's referent: a register, pin, signal, or interface within the component. register indicates a register definition (referenced by the registerRef element) in this component can be mapped to physical signals. pin indicates a port on an internal instance in this component can be mapped to physical signals. signal indicates a signal between two internal instances in this component can be mapped to physical signals. interface indicates a group of signals that can be addressed as a single name.

In each case, the view-specific path is contained in the matching **model/view/whiteboxElementRef** element.

- c) **drivable** (optional), when **true**, indicates the white box describes a point within the IP that can be driven, i.e., forced to a new value. If **false**, the white box references a point that cannot be driven. If this element is not present, its effective value is **false**. The **drivable** element is of type **boolean**.
- d) **registerRef** (optional) names the register indicated by this white box when the **whiteboxType** is **register**. The **registerRef** is the full hierarchical path from the component's top-level memory map to the register, using/as a hierarchy separator. The **registerRef** element is of type *string*.
- e) **parameters** (optional) specifies any parameter names and types for a white box that can be parameterized. See C.11.
- f) vendorExtensions (optional) provides a space for any vendor-specific extensions. See <u>C.10</u>.


6.15.3 Example

The following example shows the definition of a register (status) that can be accessed (i.e., during verification) within a component.

6.16 White box element reference

6.16.1 Schema

The following schema details the information contained in the **whiteboxElementRefs** element, which may appear as an element inside the **component/model/views/view** element.

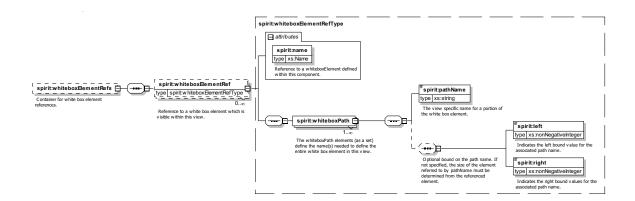

6.16.2 Description

The whiteboxElementRef element contains a list of one or more whiteboxElementRef elements. The whiteboxElementRef makes a reference to a whiteboxElement of the component and defines the view specific path to the element. name (mandatory) attribute identifies the whiteboxElement in the containing

component for which the following **whiteboxPath** applies. The **name** attribute is of type *Name*. **whiteboxElement** element contains the following elements.

whiteboxPath (mandatory) contains unbounded elements to define the path in this view to the above referenced whiteboxElement.

- 1) **pathName** (mandatory) is the language and view specific path to the location of the **whitebox- Element**. The **pathName** is of type *string*.
- 2) **left** (optional, paired with **right**) sets the element bounds of the **pathName** if required by the language. The **left** element is of type *nonNegativeInteger*.
- 3) **right** (optional, paired with **left**) sets the element bounds of the **pathName** if required by the language. The **right** element is of type **nonNegativeInteger**.

See also SCR 12.14 and SCR 12.15.


6.16.3 Example

The following example shows the definition of a white box path to the status register bits in a component.

6.17 CPUs

6.17.1 Schema

The following schema details the information contained in the **CPUs** element, which may appear as an element inside the top-level **component** element.

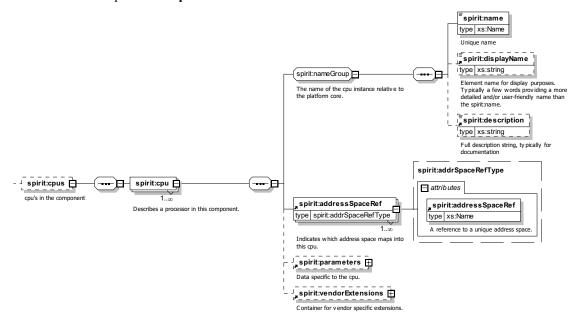

6.17.2 Description

The **cpus** element contains an unbounded list of **cpu** elements for the containing component. The **cpu** element describes a containing component with a programmable core that has some sized address space. That same address space may also be referenced by a master interface and used to create a link for the programmable core to know from which interface transaction the software departs.

- a) *nameGroup* group is defined in <u>C.1</u>. The **name** element shall be unique within the containing **component** element.
- b) **addressSpaceRef** (mandatory) contains an attribute to describe information about the range of addresses with which the master interface related to this **cpu** can generate transactions.

addressSpaceRef (mandatory) attribute references a name of an address space defined in the same component. The address space defines the range and width for transaction on this interface. See <u>6.7.1</u>.

- c) parameters (optional) specifies any **cpu**-type parameters. See <u>C.11</u>.
- d) vendorExtensions (optional) adds any extra vendor-specific data related to the cpu. See <u>C.10</u>.

6.17.3 Example

This example shows a simple cpu with a single addressMap reference.

7. Design descriptions


7.1 Design

An IP-XACT *design* is the central placeholder for the assembly of component objects meta-data. A design describes a list of components referenced by this description, their configuration, and their interconnections to each other. The interconnections may be between interfaces or between ports on a component. A design description is analogous to a schematic of components.

While a design description, with referenced components and interconnections, describes most of the information for a design, some information is missing, such as the exact port names used by a bus interface. To resolve this a component description (referred to as a *hierarchical component*) is used. This *component description* contains a view with a reference to the design description. Together, the component and referenced design description form a complete single-level hierarchical description. From this point, it is simple to create additional hierarchical descriptions by including hierarchical component description in design descriptions.

7.1.1 Schema

The following schema details the information contained in the **design** element, which is one of the seven top-level elements of the schema.

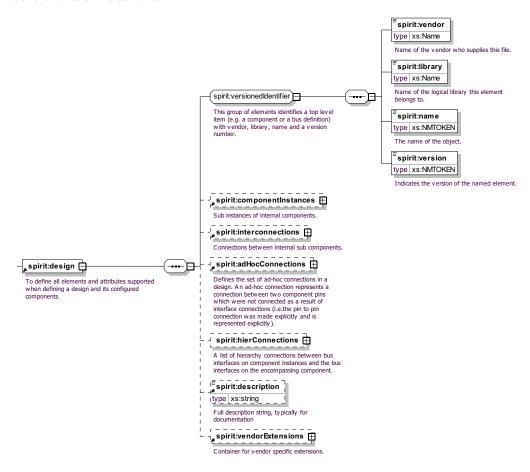

7.1.2 Description

The **design** element describes a list of referenced components, their configuration and interconnections to each other. Each element of a **design** is detailed in the rest of this clause; the main sections of a **design** are:

- a) *versionedIdentifier* group provides a unique identifier, made up of four subelements for a top level IP-XACT element. See <u>C.6</u>.
- b) **componentInstances** (optional) contains the list of components that are instantiated (referenced) inside the design (see 7.2).
- c) interconnections (optional) contains the list of connections between bus interfaces of components listed inside the design (see 7.3).
- d) **adHocConnections** (optional) contains a list of connections between component ports listed inside this design (see <u>7.5</u>).
- e) hierConnections (optional) contains a list of connections between a component instance's bus interface and a bus interface inside the encompassing component (see <u>7.6</u>). See also: <u>6.11.2</u>.
 - This element only allows making hierarchical reference between bus interfaces. Hierarchical reference between ports is made inside the **adHocConnections** element.
- f) **description** (optional) allows a textual description of the design. The **description** element is of type *string*.
- g) vendorExtensions (optional) adds any extra vendor-specific data related to the design. See C.10.

See also: SCR 1.9.

7.1.3 Example

The following example shows as sample design with three components.


```
<spirit:design xmlns:spirit="http://www.spiritconsortium.org/XMLSchema/</pre>
   SPIRIT/1.5" xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
   xsi:schemaLocation="http://www.spiritconsortium.org/XMLSchema/SPIRIT/1.5
   http://www.spiritconsortium.org/XMLSchema/SPIRIT/1.5/index.xsd">
   <spirit:vendor>spiritconsortium.org</spirit:vendor>
   <spirit:library>work</spirit:library>
   <spirit:name>design MCS</spirit:name>
   <spirit:version>1.0</spirit:version>
   <spirit:componentInstances>
      <spirit:componentInstance>
          <spirit:instanceName>i ahbMaster</spirit:instanceName>
          <spirit:componentRef spirit:vendor="spiritconsortium.org"</pre>
   spirit:library="Addressing" spirit:name="ahbMaster" spirit:version="1.0"/>
          <spirit:configurableElementValues>
             <spirit:configurableElementValue</pre>
   spirit:referenceId="asBase">0</spirit:configurableElementValue>
             </spirit:configurableElementValues>
          </spirit:componentInstance>
      <spirit:componentInstance>
          <spirit:instanceName>i ahbChannel12</spirit:instanceName>
          <spirit:componentRef spirit:vendor="spiritconsortium.org"</pre>
   spirit:library="Addressing" spirit:name="ahbChannel12"
   spirit:version="1.0"/>
       </spirit:componentInstance>
      <spirit:componentInstance>
          <spirit:instanceName>i_ahbSlave</spirit:instanceName>
          <spirit:componentRef spirit:vendor="spiritconsortium.org"</pre>
   spirit:library="Addressing" spirit:name="ahbSlave" spirit:version="1.0"/>
```

```
</spirit:componentInstance>
   </spirit:componentInstances>
   <spirit:interconnections>
      <spirit:interconnection>
          <spirit:name>m2c</spirit:name>
          <spirit:activeInterface spirit:componentRef="i ahbMaster"</pre>
   spirit:busRef="AHBMaster"/>
          <spirit:activeInterface spirit:componentRef="i ahbChannel12"</pre>
   spirit:busRef="MirroredMaster0"/>
      </spirit:interconnection>
      <spirit:interconnection>
          <spirit:name>c2s</spirit:name>
          <spirit:activeInterface spirit:componentRef="i ahbSlave"</pre>
   spirit:busRef="AHBSlave"/>
          <spirit:activeInterface spirit:componentRef="i ahbChannel12"</pre>
   spirit:busRef="MirroredSlave0"/>
       </spirit:interconnection>
   </spirit:interconnections>
   <spirit:description>master-channel-slave</spirit:description>
</spirit:design>
```

7.2 Design component instances

7.2.1 Schema

The following schema details the information contained in the **componentInstances** element, which may appear as an element inside the top-level **design** element.

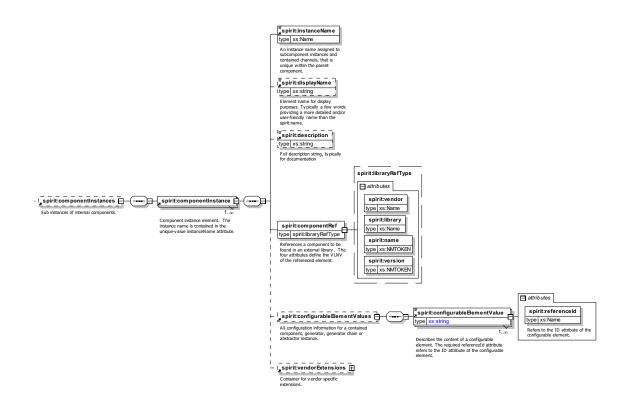

7.2.2 Description

The **componentInstances** element contains an unbounded list of component instances that are described inside the **componentInstance** element. This element contains the following subelements.

- a) instanceName (mandatory) assigns a unique name for this instance of the component in this design. The value of this element shall be unique inside a design element. The instanceName element is of type Name.
- b) **displayName** (optional) allows a short descriptive text to be associated with the instance. The **displayName** is of type *string*.
- c) description (optional) allows a textual description of the instance. The description is of type string.
- d) **componentRef** (mandatory) is a reference to a component description (see <u>6.1</u>) for this component instance. The componentRef element is of type *libraryRefType* (see <u>C.7</u>); it contains four attributes to specify a unique VLNV.
- e) **configurableElementValues** (optional) specifies the configuration for a specific component instance by providing the value of a specific component parameter. The **configurableElements-Values** is an unbounded list of **configurableElementValue** elements.
 - configurableElementValue (mandatory) is an unbounded list that specifies the value to apply
 to a configurable element; in this instance, it is pointed to by the referenceId attribute. The
 configurableElementValue is of type string.
 - 2) The contained **referenceId** (mandatory) attribute is a reference to the **id** attribute of an element in the component instance. The **referenceId** attribute is of type *Name*.
- f) vendorExtensions (optional) adds any extra vendor-specific data related to the design. See <u>C.10</u>.

See also: <u>SCR 1.8</u> and <u>SCR 5.14</u>.

7.2.3 Example


The following example shows two component instances of a design. The first one, i_timers, has a configurable element attached to it while the second one, i_irqctrl, is not configurable. The configurable element with the id equal to TPRESC has its value set to 22.

```
<spirit:componentInstances>
   <spirit:componentInstance>
      <spirit:instanceName>i_timers</spirit:instanceName>
      <spirit:componentRef spirit:vendor="spiritconsortium.org"</pre>
          spirit:library="Leon2" spirit:name="timers"
spirit:version="1.5"/>
      <spirit:configurableElementValues>
          <spirit:configurableElementValue spirit:referenceId="TPRESC">22
          </spirit:configurableElementValue>
      </spirit:configurableElementValues>
   </spirit:componentInstance>
   <spirit:componentInstance>
      <spirit:instanceName>i_irqctrl</spirit:instanceName>
      <spirit:componentRef spirit:vendor="spiritconsortium.org"</pre>
          spirit:library="Leon2" spirit:name="irqctrl"
spirit:version="1.5"/>
   </spirit:componentInstance>
</spirit:componentInstances>
```

7.3 Design interconnections

7.3.1 Schema

The following schema details the information contained in the **interconnections** element, which may appear as an element inside the top-level **design** element.

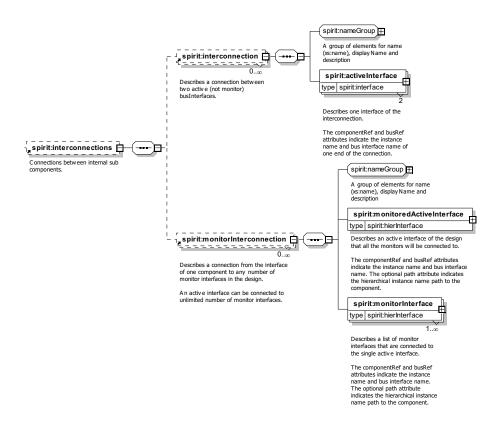

7.3.2 Description

The interconnections element contains an unbounded list of interconnection and monitorInterconnection elements. For further description on interface connections, see 6.3.4.

- a) **interconnection** (optional) specifies a connection between one bus interface of a component and another bus interface of a component. Each interconnection contain the following elements.
 - 1) *nameGroup* group is defined in <u>C.1</u>. The **name** elements shall be unique within the containing **interconnections** element.
 - 2) **activeInterface** (mandatory) specifies the two bus interfaces that are part of the interconnection. Only connections between two bus interfaces are allowed; broadcasting of interconnections is not allowed. The **activeInterface** element is of type *interface*, see <u>7.4</u>.
- b) monitorInterconnection (optional) specifies the connection between a monitored active interface on a component and a list of monitor interfaces on component instances.
 - 1) *nameGroup* group is defined in <u>C.1</u>. The **name** elements shall be unique within the containing **interconnections** element.
 - monitoredActiveInterface (mandatory) specifies the component bus interface to monitor.
 Only one monitored active interface is allowed. The monitoredActiveInterface element is of type hierInterface, see 7.4.

3) **monitorInterface** (mandatory) specifies the component bus interface that will do the monitoring. There may be one or more **monitorInterface** elements specified. The **monitorInterface** element is of type *hierInterface*, see <u>7.4</u>.

See also: SCR 6.9, SCR 6.10, and SCR 6.14 and the SCRs in Table B.2 and Table B.4.

7.3.3 Example


The following example shows two interconnections between three components: the interconnection intercol connects the interface ambaAPB on i_timers to the interface MirroredSlaveO on i_apbbus while interco2 connects the interface ambaAPB on i_irqctrl to the interface MirroredSlavel on i apbbus.

```
<spirit:interconnections>
   <spirit:interconnection>
      <spirit:name>interco1</spirit:name>
      <spirit:activeInterface spirit:componentRef="i timers"</pre>
                        spirit:busRef="ambaAPB"/>
      <spirit:activeInterface spirit:componentRef="i apbbus"</pre>
spirit:busRef="MirroredSlave0"/>
   </spirit:interconnection>
   <spirit:interconnection>
      <spirit:name>interco2</spirit:name>
      <spirit:activeInterface spirit:componentRef="i irqctrl"</pre>
spirit:busRef="ambaAPB"/>
      <spirit:activeInterface spirit:componentRef="i apbbus"</pre>
spirit:busRef="MirroredSlave1"/>
   </spirit:interconnection>
</spirit:interconnections>
```

7.4 Active, monitored, and monitor interfaces

7.4.1 Schema

The following schema details the information contained in the **activeInterface** element, the **monitoredActiveInterface** element, and the **monitorInterface** elements, which may appear as an element inside the **interconnection** or **monitorInterconnection** element within the **interconnections** element.

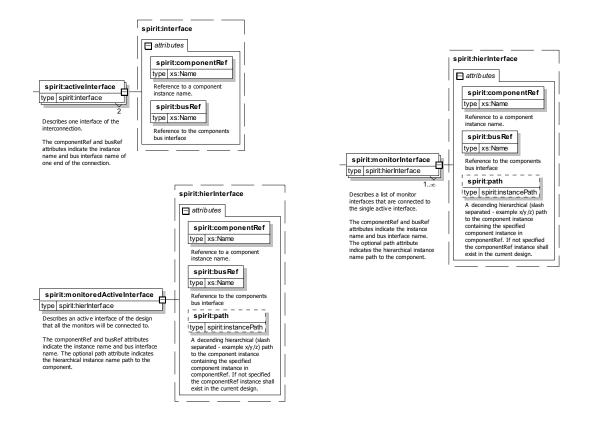

7.4.2 Description

The activeInterface, monitoredInterface, or monitorInterface element specifies the bus interface of a design component instance that is part of an interconnection or a monitor interconnection. They all have the following attributes.

- a) **componentRef** (mandatory) references the instance name of a component present in the design if the path attribute is not present. This component instance name needs to exist in the specified design. The **componentRef** attribute is of type *Name*. See <u>6.1</u>.
- b) **busRef** (mandatory) references one of the component bus interfaces. This specific bus interface needs to exist on the specified component instance. The **busRef** attribute is of type *Name*. See <u>6.5</u>.

The monitored Active Interface and monitor Interface elements have the following attribute.

path (optional) defines the hierarchical path of instance names to the design that contains the component instance specified in the **componentRef** attribute. The path is a slash (/) separated list of instance names. If the **path** attribute is not present, the component referenced by **componentRef** needs to exist in the current design. The **path** attribute is of type **instancePath**. See <u>D.5</u>.

See also: SCR 2.1, SCR 2.16, SCR 4.1, and SCR 4.2.

7.4.3 Example

The following example shows a monitored interface referring to the ambaAPB bus interface on the component instance <code>i_timers</code> in the design within the component with instance name <code>apbsubsys/group1</code> and a monitor interface referring to the <code>ambaAPBMonitor</code> bus interface on the monitor instance <code>i monitor</code> in the design within the component with instance name <code>umon</code>.

```
<spirit:monitoredInterface spirit:path="apbsubsys/group1"
    spirit:componentRef="i_timers" spirit:busRef="ambaAPB"/>
<spirit:monitorInterface spirit:path="umon" spirit:componentRef="i_monitor"
    spirit:busRef="ambaAPBMonitor"/>
```


7.5 Design ad hoc connections

The name *ad hoc* is used for connections that are made on a port-by-port basis and not done through the higher-level bus interface. The same **ports** that make up a **busInterface** can be used in ad hoc connections.

IP-XACT supports two cases of ad hoc connections: the wire connection (between ports having a wire style) and the transactional connection (between ports having a transactional style). The direct connection between a wire-style port and a transactional-style port is not allowed; a specific adapter component needs to be inserted in between them.

7.5.1 Schema

The following schema details the information contained in the **adHocConnections** element, which may appear as an element inside the top-level **design** element.

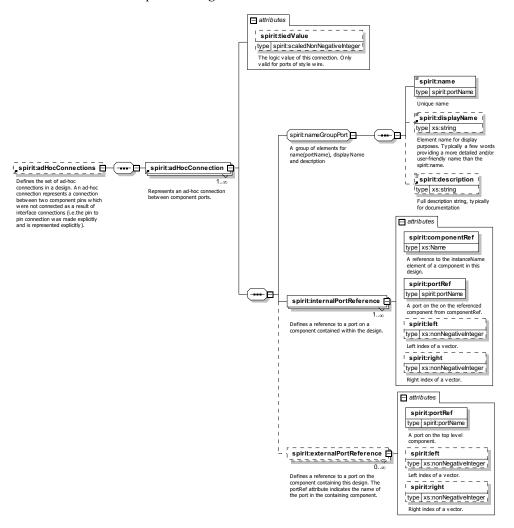

7.5.2 Description

The adHocConnections element contains an unbounded list of adHocConnection elements. An adHocConnection specifies connections between component instance ports or between component instance ports and ports of the encompassing component (in the case of a hierarchical component). Each adHocConnection element has a tiedValue (optional) attribute that specifies a fixed logic (1 and 0) value for this connection. The tiedValue attribute is of type scaledNonNegativeInteger. The adHocConnection element contains the following subelements.

- a) nameGroup group is defined in <u>C.1</u>. The name elements shall be unique within the containing adHocConnections element.
- internalPortReference (mandatory) references the port of a component instance. This element has four attributes.
 - 1) **componentRef** (mandatory) references the component instance name for the port. The **componentRef** attribute is of type *Name*. See <u>6.1</u>.
 - 2) **portRef** (mandatory) references the port name on the specific component instance. The **portRef** attribute is of type *Name*. See <u>6.11.3</u>.
 - 3) **left** and **right** (optional) specify a portion of the port range. The **left** and **right** attributes are of type *nonNegativeInteger*.
- externalPortReference (optional) references a port of the encompassing component where this design is referred (for hierarchical ad hoc connections). This element has three attributes.
 - 1) **portRef** (mandatory) references the port name on the encompassing component. The **portRef** attribute is of type *Name*. See <u>6.11.3</u>.
 - 2) **left** and **right** (optional) specify a portion of the port range. The **left** and **right** attribute is of type *nonNegativeInteger*.

See also: <u>SCR 6.14</u>.

7.5.3 Example

The following example shows two ad hoc connections. The first one, dle1074, connects port irlin on component instance i_irqctrl and port irqvec on component instance i_leon2Proc. The second one, i_leon2Proc_mresult, connects port mresult on component instance i_leon2Proc and port i_leon2Proc_mresult of the encompassing component.

```
<spirit:adHocConnections>
   <spirit:adHocConnection>
      <spirit:name>d1e1074</spirit:name>
      <spirit:internalPortReference spirit:componentRef="i_irqctrl"</pre>
spirit:portRef="irlin" spirit:left="3"
          spirit:right="0"/>
      <spirit:internalPortReference spirit:componentRef="i_leon2Proc"</pre>
spirit:portRef="irqvec"
          spirit:left="3" spirit:right="0"/>
   </spirit:adHocConnection>
   <spirit:adHocConnection>
      <spirit:name>i leon2Proc mresult</spirit:name>
      <spirit:internalPortReference spirit:componentRef="i leon2Proc"</pre>
spirit:portRef="mresult"
          spirit:left="31" spirit:right="0"/>
      <spirit:externalPortReference spirit:portRef="i leon2Proc mresult"/>
   </spirit:adHocConnection>
</spirit:adHocConnections>
```

7.5.4 Ad hoc wire connection

For ad hoc connections between wire-style ports, IP-XACT requires:

- The style of each port be the same style (i.e., wire).
- The bits of the ports are connected from left to right. In the internalPortReference element, left and right define the actual bits to connect.

See also: <u>SCR 6.9</u> and <u>SCR 6.27</u>.

Example

This is an example of these rules being applied.

Implies these connections:

```
U1/A[8] = U2/B[7]

U1/A[7] = U2/B[6]

U1/A[6] = U2/B[5]

U1/A[5] = U2/B[4]

U1/A[4] = U2/B[3]

U1/A[3] = U2/B[2]

U1/A[2] = U2/B[1]

U1/A[1] = U2/B[0]
```

NOTE—The **typeNames** do not have to match between the two ports, it is up to the DE or simulator to potentially resolve unmatching types, e.g., it is possible to connect a VHDL std_logic port to a SystemC sc_logic port.

7.5.5 Ad hoc transactional connection

For ad hoc transactional connections, IP-XACT requires:

- The style of each port be the same style (i.e., **transactional**).
- If defined, the **transTypeDef/typeName** name of each port are the same (e.g., sc tlm port).
- The service/serviceTypeDef/typeNames match.


Also, two ports with a **requires** initiative can be connected. This means they would both connect to a mediated link (e.g., a wire, buffer, FIFO, or any complex link) in a top SystemC or SystemVerilog netlist. This mediated link provides the protocol interfaces required by each port. The name, type, and parameters of this mediated link are not defined by IP-XACT, but could be given as input to a netlister generator.

See also: <u>SCR 6.10</u>.

7.6 Design hierarchical connections

7.6.1 Schema

The following schema details the information contained in the **hierConnections** element, which may appear as an element inside the top-level **design** element.

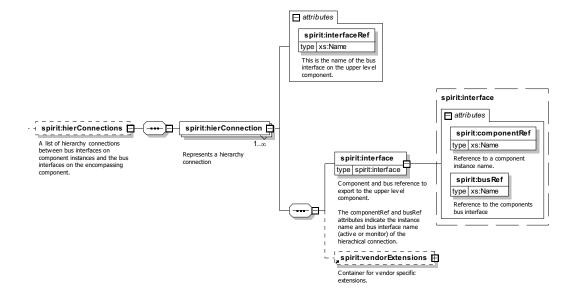

7.6.2 Description

The hierConnections element contains an unbounded list of hierConnection elements. hierConnection represents a hierarchical interface connection between a bus interface on the encompassing component and a bus interface on a component instance of the design. hierConnection contains an interfaceRef (mandatory) attribute that provides one end of the interconnection; it is the name of the bus interface on the encompassing component (see <u>6.5.1</u>). The interfaceRef attribute is of type *Name*. The name of the ports and the mapping to this interface are defined in the referencing hierarchical component. The hierConnection element contains the following elements and attributes.

- a) **interface** (mandatory) specifies the component instance bus interface for connection to the encompassing component; only one **interface** is allowed. The **interface** element may reference an active interface or a monitor interface. The **interface** element is of type *interface*, see <u>7.4</u>.
- b) **vendorExtensions** (optional) adds any extra vendor-specific data related to the hierarchical interface connection. See <u>C.10</u>.

See also: SCRs in <u>Table B.10</u> and <u>Table B.11</u>.

7.6.3 Example

The following example shows a hierarchical interconnection between the AHBReset_1 bus interface on the encompassing component and the AHBReset bus interface on the i_ahbbus component instance.



8. Abstractor descriptions


Designs that incorporate IP models using different interface modeling styles (e.g., TLM and RTL modeling styles) may contain interconnections between such component interfaces using different abstractions of the same bus type. An IP-XACT description may describe how such interconnections are to be made using a special-purpose object called an *abstractor*. An abstractor is used to connect between two different abstractions of the same bus type (e.g., an APB_RTL and an APB_TLM). An abstractor shall only contain two interfaces, which shall be of the same bus definition and different abstraction definitions.

Unlike a component, an abstractor is not referenced from a design description, but instead is referenced from a design configuration description. See <u>Clause 10</u>.

8.1 Abstractor

8.1.1 Schema

The following schema details the information contained in the **abstractor** element, which is one of the seven top-level elements in the IP-XACT specification used to describe an abstractor.

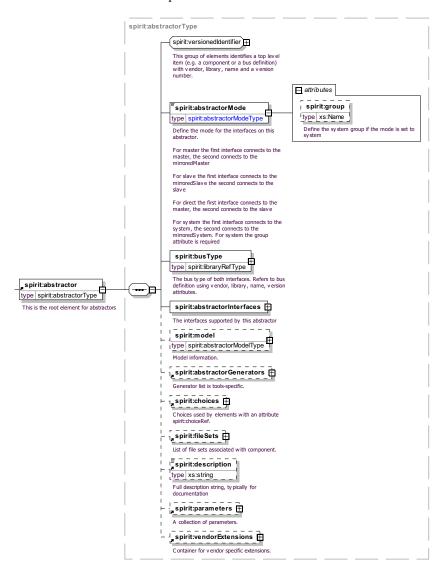

8.1.2 Description

Each element of an abstractor is detailed in the rest of this clause; the main sections of an abstractor are:

- a) *versionedIdentifier* group provides a unique identifier, made up of four subelements for a top-level IP-XACT element. See <u>C.6</u>.
- b) abstractorMode (mandatory) determines the mode of the two interfaces contained in abstractorInterfaces. The abstractor can be inserted in a connection between two instances or between an instance and an exported interface. The abstractorMode element can take one of the following four values.
 - 1) master specifies for
 - master to mirrored-master connection—the first interface connects to the master interface, the second connects to the mirrored-master interface;
 - ii) exported master connection—the first interface connects to the master interface, the second connects to the exported interface;
 - iii) exported mirrored-master connection—the first interface connects to the exported interface, the second connects to the mirrored-master interface.
 - 2) slave specifies for
 - i) mirrored-slave to slave connection—the first interface connects to the mirrored-slave interface, the second connects to the slave interface;
 - ii) exported slave connection—the first interface connects to the exported interface, the second connects to the slave interface;
 - iii) exported mirrored-slave connection—the first interface connects to the mirrored-slave interface, the second connects to the exported interface.
 - 3) **direct** specifies the first interface connects to the master interface, the second connects to the slave interface. This option is not allowed for an exported interface.
 - 4) **system** specifies for
 - i) system to mirrored-system connection—the first interface connects to the system interface, the second connects to the mirrored-system interface;
 - ii) exported system connection—the first interface connects to the system interface, the second connects to the exported interface;
 - iii) exported mirrored-system connection—the first interface connects to the exported interface, the second connects to the mirrored-system interface.

The **group** (mandatory, when **abstractorMode="system"**) attribute defines the name of the group to which this system interface belongs. This attribute is of type *Name*, which indicates the value of this group shall be unique inside the **abstractor** element. The specified value of **group** needs to be a group defined in the referenced abstraction definition. A connection between a **system** and **mirroredSystem** interfaces shall have matching group names.

- busType (mandatory) specifies the bus definition this bus interface references. A bus definition (see <u>5.2</u>) describes the high-level attributes of a bus description. The **busType** element is of type *libraryRefType* (see <u>C.7</u>); it contains four attributes to specify the referenced VLNV.
- d) **abstractorInterfaces** (mandatory) are interfaces having the same bus type, but differing abstraction types. See <u>8.2</u>.
- e) model (optional) specifies all the different views, ports, and model configuration parameters of the abstractor. See <u>8.3</u>.
- f) **abstractorGenerators** (optional) specifies a list of generator programs attached to this abstractor. See <u>8.7.</u>
- g) **choices** (optional) specifies multiple enumerated lists, which are referenced by other sections of this abstractor description. See <u>6.14</u>.

- h) **fileSets** (optional) specifies groups of files and possibly their function for reference by other sections of this abstractor description. See <u>6.13</u>.
- i) **description** (optional) allows a textual description of the abstractor. The **description** element is of type *string*.
- j) **parameters** (optional) describes any **parameter** that can be used to configure or hold information related to this abstractor. See C.11.
- k) **vendorExtensions** (optional) contains any extra vendor-specific data related to the abstractor. See C.10.

See also: <u>SCR 1.9</u>, <u>SCR 1.10</u>, and <u>SCR 3.16</u>.

8.1.3 Example


The following example shows a simple slave abstractor having AHB UT and AHB LT interfaces.

```
<spirit:abstractor>
   <spirit:vendor>spiritconsortium.org</spirit:vendor>
   <spirit:library>Leon2</spirit:library>
   <spirit:name>pv2rtl</spirit:name>
   <spirit:version>1.5</spirit:version>
   <spirit:abstractorMode>slave</spirit:abstractorMode>
   <spirit:busType spirit:vendor="amba.com" spirit:library="AMBA2"</pre>
   spirit:name="AHB" spirit:version="r2p0 5"/>
   <spirit:abstractorInterfaces>
      <spirit:abstractorInterface>
          <spirit:name>UTinterface</spirit:name>
          <spirit:abstractionType</pre>
             spirit:vendor="spiritconsortium.org"
             spirit:library="Leon2"
             spirit:name="AHB UT"
             spirit:version="1.0"/>
      </spirit:abstractorInterface>
      <spirit:abstractorInterface>
          <spirit:name>LTinterface</spirit:name>
          <spirit:abstractionType</pre>
             spirit:vendor="spiritconsortium.org"
             spirit:library="Leon2"
             spirit:name="AHB LT"
             spirit:version="1.0"/>
      </spirit:abstractorInterface>
   </spirit:abstractorInterfaces>
</spirit:abstractor>
```

8.2 Abstractor interfaces

8.2.1 Schema

The following schema defines the information contained in the **abstractorInterfaces** element, which appears within an **abstractor** description.

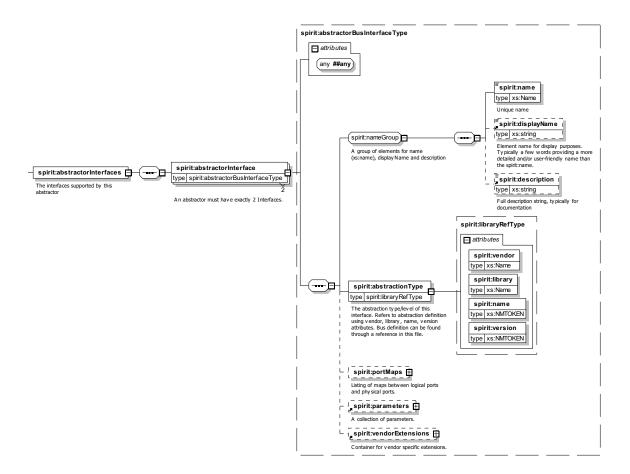

8.2.2 Description

The abstractorInterface element contains a list of two abstractorInterface elements. Each abstractorInterface element defines properties of this specific interface in an abstractor. The abstractorInterface element also allows for vendor attributes to be applied. Each abstractorInterface contains the following elements.

- a) nameGroup group is defined in <u>C.1</u>. The name elements shall be unique within the containing abstractor element.
- b) **abstractionType** (mandatory) specifies the abstraction definition where this bus interface is referenced. An abstraction definition describes the low-level attributes of a bus description (see <u>5.3</u>). The **abstractionType** element is of type *libraryRefType* (see <u>C.7</u>); it contains four attributes to specify the referenced VLNV.
- c) **portMaps** (optional) describes the mapping between the abstraction definition's logical ports and the abstractor's physical ports. See <u>6.5.6</u>.
- d) parameters (optional) specifies any parameter data value(s) for this bus interface. See <u>C.11</u>.
- e) **vendorExtensions** (optional) holds any vendor-specific data from other namespaces, which is applicable to this bus interface. See <u>C.10</u>.

8.2.3 Example


This example shows an abstractorInterface of type AHB_PV, which includes a single portMap between the logical port PV TRANS and the abstractor physical port abb slave port.

```
<spirit:abstractorInterface>
   <spirit:name>PVinterface</spirit:name>
   <spirit:abstractionType</pre>
      spirit:vendor="spiritconsortium.org"
      spirit:library="Leon2"
      spirit:name="AHB PV"
      spirit:version="1.0"/>
   <spirit:portMaps>
      <spirit:portMap>
          <spirit:logicalPort>
             <spirit:name>PV TRANS</spirit:name>
          </spirit:logicalPort>
          <spirit:physicalPort>
             <spirit:name>ahb slave port</spirit:name>
          </spirit:physicalPort>
      </spirit:portMap>
   </spirit:portMaps>
</spirit:abstractorInterface>
```

8.3 Abstractor models

8.3.1 Schema

The following schema defines the information contained in the abstractor **model** element, which may appear within an **abstractor** description.

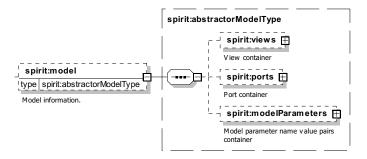

8.3.2 Description

The **model** element describes the views, ports, and model related parameters of an abstractor. A **model** element may contain the following.

- a) views (optional) contains a list of all the views for this object. An object may have many different views. An RTL view may describe the source hardware module/entity with its pin interface; a software view may define the source device driver C file with its .h interface; a documentation view may define the written specification of this IP. See 8.4.
- b) **ports** (optional) contains the list of ports for this object. A ports is an external connection from the object. An object may only have one set of ports that shall be valid for all views. See <u>8.5</u>.
- c) modelParameters (optional) contains a list of parameters that are needed to configure a model implementation. The same set of model parameters shall be valid for all views. See <u>6.11.20</u>.

8.3.3 Example

The following example shows an abstractor model with a single SystemC view, two transactional ports, and a constructor model parameter.

```
<spirit:model>
   <spirit:views>
      <spirit:view>
          <spirit:name>systemCView</spirit:name>
          <spirit:envIdentifier>:*Simulation:
          <spirit:language>systemc2.1</spirit:language>
          <spirit:modelName>pv2pvt</spirit:modelName>
          <spirit:fileSetRef>abstractorFileSetRef/spirit:fileSetRef>
      </spirit:view>
   </spirit:views>
   <spirit:ports>
      <spirit:port>
          <spirit:name>pv_slave</spirit:name>
          <spirit:transactional>
             <spirit:service>
                <spirit:initiative>provides</spirit:initiative>
                <spirit:serviceTypeDefs>
                    <spirit:serviceTypeDef>
                       <spirit:typeName>trans if</spirit:typeName>
                    </spirit:serviceTypeDef>
                </spirit:serviceTypeDefs>
             </spirit:service>
          </spirit:transactional>
      </spirit:port>
      <spirit:port>
          <spirit:name>pvt_master</spirit:name>
          <spirit:transactional>
             <spirit:service>
                <spirit:initiative>requires</spirit:initiative>
                <spirit:serviceTypeDefs>
                    <spirit:serviceTypeDef>
                       <spirit:typeName>req rsp if</spirit:typeName>
                    </spirit:serviceTypeDef>
                </spirit:serviceTypeDefs>
             </spirit:service>
          </spirit:transactional>
      </spirit:port>
   </spirit:ports>
   <spirit:modelParameters>
      <spirit:modelParameter spirit:usageType="nontyped">
          <spirit:name>moduleName</spirit:name>
          <spirit:value spirit:id="moduleNameId"</pre>
   spirit:resolve="user">ABSTRACTOR_PV2PVT</spirit:value>
      </spirit:modelParameter>
   </spirit:modelParameters>
</spirit:model>
```


8.4 Abstractor views

8.4.1 Schema

The following schema defines the information contained in the **views** element, which appears within the **model** element of an **abstractor** description.

This schema is almost identical to the **component/views/view** element (see 6.11.2), except:

- Abstractors have no hierarchyRef elements.
- Abstractors have no constraintSetRef elements.
- Abstractors have no whiteboxElementRefs elements.

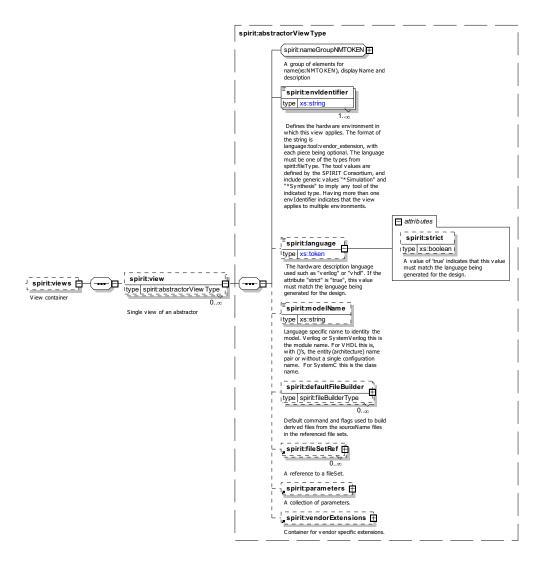

8.4.2 Description

A **views** element describes an unbounded set of **view** elements. Each **view** element specifies a representation level of an abstractor. It contains the following elements.

- a) *nameGroupNMToken* group is defined in <u>C.4</u>. The **name** elements shall be unique within the containing **views** element.
- b) **envIdentifier** (mandatory) designates and qualifies information about how this model view is deployed in a particular tool environment. The format of the element is a string with three fields separated by colons [:] in the format of *Language:Tool:VendorSpecific*. The regular expression that is used to check the string is [A-Za-z0-9_+*\.]*:[A-Za-z0-9_+*\.]*:[A-Za-z0-9_+*\.]* The sections are:
 - 1) Language indicates this view may be compatible with a particular tool, but only if that language is supported in that tool, e.g., different versions of some simulators may support two or more languages. In some cases, knowing the tool compatibility is not enough and may be further qualified by language compatibility, e.g., a compiled HDL model may work in a VHDL-enabled version of a simulator, but not in a SystemC-enabled version of the same simulator.
 - 2) Tool indicates this view contains information that is suitable for the named tool. This might be used if this view references data that is tool-specific and would not work generically, e.g., HDL models that use simulator-specific extensions.

Vendors shall publish lists of approved tool identification strings. These strings shall contain the tool name, as well as the company's domain name, separated by dots. Some examples of well-formed tool entries are:

```
designcompiler.synopsys.com
ncsim.cadence.com
modelsim.mentor.com
```

This field can alternatively indicate generic tool family compatibility, such as *Simulation or *Synthesis. To support transportability of created data files, it is important to use the published, generally recognized, tool designation when referencing a tool. See IP-XACT standard tool names for **envIdentifier** [B14].

3) VendorSpecific can be used to further qualify tool and language compatibility. This can be used to indicate additional processing information may be required to use this model in a particular environment. For instance, if the model is a SWIFT simulation model, the appropriate simulator interface may need to be enabled and activated.

Any or all of the **envIdentifier** fields may be used. Where there are multiple environments for which a particular **view** is applicable, multiple **envIdentifier** elements can be listed.

- c) language (optional) specifies the HDL used for a specific view, e.g., verilog, vhdl, or SystemC. The language element needs to support a mix of the two abstraction definitions described in the abstractor (e.g., a TLM to RTL abstractor would need a language, such as SystemC, supporting both a transactional abstract level description and an RTL description). The language element is of type *token*. This may have an attribute strict (optional) of type *boolean*; if true the language shall be strictly enforced. The default is false.
- d) modelName (optional) is a language-specific identifier of the model. For Verilog or SystemVerilog, this is the module name. For VHDL, this is, with ()'s, the entity (architecture) name pair or, without ()'s, a configuration name. For SystemC, this is the sc_module class name. The modelName element is of type string.
- e) **defaultFileBuilder** (optional) is an unbounded list of default file builder options for the **fileSets** referenced in this **view**. See <u>6.13.5</u>.
- f) **fileSetRef** (optional) is an unbounded list of references to a **fileSet name** within the containing document or another document referenced by the **VLNV**. See <u>C.8</u>.
- g) **parameters** (optional) details any additional parameters that describe the **view** for generator usage. See <u>C.11</u>.
- h) **vendorExtensions** (optional) adds any extra vendor-specific data related to the view. See <u>C.10</u>.

8.4.3 Example

This example shows two abstractor views: a SystemC view and a SystemVerilog view. Such a configuration assumes the abstractor ports can be expressed with a generic **typeDef** that is supported in both languages.


```
<spirit:views>
   <spirit:view>
      <spirit:name>systemCView</spirit:name>
      <spirit:envIdentifier>:*Simulation:</spirit:envIdentifier>
      <spirit:language>systemc2.1</spirit:language>
      <spirit:modelName>pv2pvt</spirit:modelName>
      <spirit:fileSetRef>
         <spirit:localName>scFileSetRef</spirit:localName>
      </spirit:fileSetRef>
   </spirit:view>
   <spirit:view>
      <spirit:name>systemVView</spirit:name>
      <spirit:envIdentifier>:*Simulation:
      <spirit:language>systemVerilog</spirit:language>
      <spirit:modelName>pv2pvt</spirit:modelName>
      <spirit:fileSetRef>
         <spirit:localName>svFileSetRef</spirit:localName>
      </spirit:fileSetRef>
   </spirit:view>
</spirit:views>
```

8.5 Abstractor ports

8.5.1 Schema

An abstractor's **ports** are almost identical to a component's **ports**; the abstractor **transactional** ports are exactly the same as the component **transactional** ports. The access methods are the same for an abstractor or component port. The abstractor **wire** ports defined here only differ from component **wire** ports by the absence of the **constraintSet** element, because implementation constraints are not needed for abstractors.

The following schema defines the information contained in the **ports** element, which may appear within an **abstractor**.

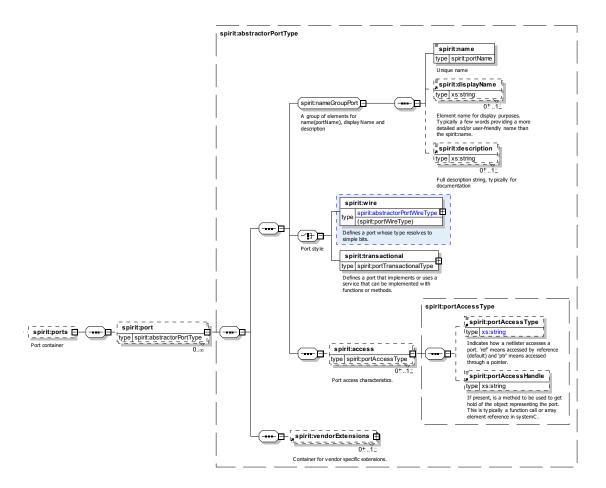

8.5.2 Description

The **ports** element defines an unbounded list of **port** elements. Each **port** element describe a single external port on the abstractor.

- a) *nameGroupPort* group is defined in <u>C.4</u>. The **name** elements shall be unique within the containing **ports** element.
- b) Each **port** shall be described as a **wire** or **transactional** port.
 - wire (mandatory) defines ports that transport purely binary values or vectors of binary values. A wire port in an abstractor contains most of the same elements and attributes as a wire port in a component, except for the **contraintSet** element. See <u>8.6.</u>
 - 2) **transactional** (mandatory) defines all other style ports, typically used for TLM. A transactional port in an abstractor contains all the same elements and attributes as a transactional port in a component. See <u>6.11.16</u>.
- c) access (optional) defines the access for a port.
 - 1) **portAccessType** (optional) indicates to a netlister how to access the port. The **portAccessType** shall have one of two possible values **ref** or **ptr**. If **ref** (the default), a netlister should access the port directly, and if **ptr**, it should access the port with a pointer.
 - 2) **portAccessHandle** (optional) indicates to a netlister the method to be used to access the object representing the port. This is typically a function call or array element reference in IEEE Std 1666-2005 [B4] (SystemC). The **portAccessHandle** is of type *string*.
- d) vendorExtensions (optional) adds any extra vendor-specific data related to the port. See <u>C.10</u>.

8.5.3 Example

The following example shows a simple address port with a transactional interface.


```
<spirit:ports>
   <spirit:port>
      <spirit:name>paddr</spirit:name>
      <spirit:transactional>
          <spirit:service>
           <spirit:initiative>provides</spirit:initiative>
             <spirit:serviceTypeDefs>
             <spirit:serviceTypeDef>
             <spirit:typeName>trans if</spirit:typeName>
             <spirit:parameters>
             <spirit:parameter name="addr" resolve="user">ADDR
             </spirit:parameter>
             </spirit:parameters>
             </spirit:serviceTypeDef>
             </spirit:serviceTypeDefs>
             </spirit:service>
      </spirit:transactional>
   </spirit:port>
</spirit:ports>
```

8.6 Abstractor wire ports

8.6.1 Schema

The abstractor **wire** ports defined here only differ from component **wire** ports by the absence of the **constraintSet** element, because implementation constraints are not needed for abstractors.

The following schema element defines the information contained in the **wire** element, which appears within an abstractor **port**.

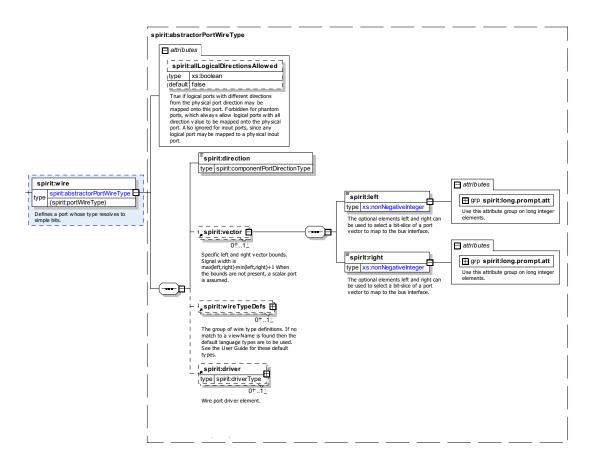

8.6.2 Description

The wire element describes the properties for ports that are of a wire style. A port can come in two different styles, wire or transactional. A wire port applies for all scalar types (e.g., VHDL std_logic and Verilog wire) and vectors of scalars. A wire port transports purely binary values or vectors of binary values.

- Scalar types in VHDL also include integer and enumeration values. Scalars in IP-XACT only include binary values that relate to a single wire in a hardware implementation.
- Since wire ports allow only binary values, IP-XACT does not support tri-state or multiple strength values.

The wire element contains the following elements.

- allLogicalDirectionsAllowed (optional) attribute defines whether the port may be mapped to a port in an abstractionDefinition with a different direction. The default value is false. The allLogical-DirectionsAllowed attribute is of type boolean. See 5.3.
- b) **direction** (mandatory) specifies the direction of this port: **in** for input ports, **out** for output ports, and **inout** for bidirectional and tri-state ports. **phantom** can also be used to define a port that only exists on the IP-XACT component, but not on the implementation referenced from the view.
- c) vector (optional) determines if this port is a scalar port or a vectored port. The left and right vector bounds elements inside the vector element are those specified in the implementation source. The port width is max(left,right) min(left,right) +1. The left and right elements are of type nonNegativeInteger. The left and right elements are configurable with attributes from long.prompt.att, see C.12.

- 1) The **left** element means first boundary, the **right** element, the second boundary. **left** may be larger than **right** and that **left** may be the MSB or LSB (**right** being the opposite). The **left** and **right** elements are the (bit) rank of the left-most and right-most bits of the port.
- 2) When the **vector** element is present and the **left** and **right** elements are not equal, the port is defined as a *multi-bit vector port*. When the **vector** element is present and the **left** and **right** elements are equal, the port is defined as a *single-bit vector port*. When the **vector** element and the **left** and **right** elements are not present, the port is defined as a *scalar port*.
- d) wireTypeDefs (optional) describes the ports type as defined by the implementation, see 6.11.5.
- driver (optional) defines a driver that may be attached to this port if no other object is connected to this port. This allows the IP to define the default state of unconnected inputs. A wire style port may only define a **driver** element for a port if the direction of the port is **in** or **inout**. See also <u>6.11.6</u>.

See also: <u>SCR 6.5</u>, <u>SCR 6.6</u>, <u>SCR 6.7</u>, and <u>SCR 6.12</u>.


8.6.3 Example

The following example shows a simple address port of 32 bits.

8.7 Abstractor generators

8.7.1 Schema

The following schema defines the information contained in the **abstractorGenerators** element, which may appear within an **abstractor** object.

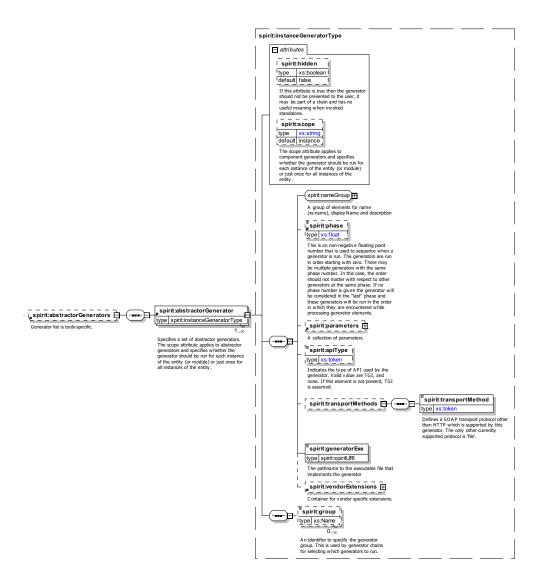

8.7.2 Description

The abstractorGenerators element contains an unbounded list of abstractorGenerator elements. Each abstractorGenerator element defines a generator that is assigned and may be run on this abstractor. The abstractorGenerator has exactly the same schema definition as a componentGenerator. See <u>6.12</u>.

8.7.3 Example

The following example shows a document generator attached to an abstractor. This generator is a Tcl script that can be executed as tclsh ../bin/absDocGen.tcl -url file (and useDefaultValues is true). Here, the parameter is a configurable parameter named useDefaultValues, which can be configured by the user. This generator uses the TGI API with a SOAP transport protocol based on file.

```
<spirit:abstractorGenerator>
    <spirit:name>genAbstractorDoc</spirit:name>
    <spirit:parameters>
          <spirit:parameter>
                <spirit:name>useDefaultValues</spirit:name>
```




9. Generator chain descriptions

9.1 generatorChain

In IP-XACT, a design flow can be represented as a generator chain. A generator chain is an ordered sequence of named tasks. Each named task can be represented as a single generator or as another generator chain. This way, design flow hierarchies can be constructed and executed from within a given DE. The DE itself is responsible for understanding the semantics of the specified chain described in the generator chain description.

9.1.1 Schema

The following schema details the information contained in the **generatorChain** element, which is one of the seven top-level elements in the IP-XACT specification.

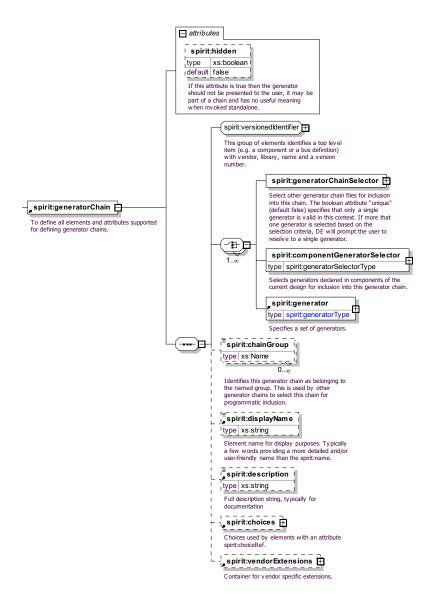

9.1.2 Description

The **generatorChain** element describes a single generator chain. The **generatorChain** element contains a **hidden** (optional) attribute that, when **true**, indicates this generator chain is not presented to the user of a DE. This may be the case if the chain is part of another chain and has no useful meaning when invoked as stand-alone. The default is **false**. The **hidden** attribute is of type **boolean**. The **generatorChain** element contains the following elements.

- a) *versionedIdentifier* group provides a unique identifier; it consists of four subelements for a top-level IP-XACT element. See <u>C.6</u>.
- b) One or more of the following three elements.
 - 1) **generatorChainSelector** (optional) is a selection criteria for selecting one or more **generator- Chains** or a reference to another **generatorChain** (see 9.2).
 - 2) **componentGeneratorSelector** (optional) is a selection criteria for selecting one or more component generators (see <u>9.3</u>).
 - 3) **generator** (optional) defines the generator (see 9.4).
- chainGroup (optional) is an unbounded list of names to which this chain belongs. The group names are referenced in the generatorChainSelector element and can be used to organize the inclusion of generators. The chainGroup element is of type Name.
- d) **displayName** (optional) allows a short descriptive text to be associated with the generator chain. The **displayName** element is of type *string*.
- e) **description** (optional) allows a textual description of the generator chain. The **description** element is of type *string*.
- f) **choices** (optional) specifies multiple enumerated lists, which are referenced by other sections of this generator chain description. See <u>6.14</u>.
- g) **vendorExtensions** (optional) contains any extra vendor-specific data related to the **generator- Chain**. See C.10.

See also: SCR 1.9.

9.1.3 Example


The following example defines a generator chain with a group name of MY_HW_SW_COMPILATION_CHAIN, which is intended to specify a sequence of four simulation tasks (e.g., INIT, CONFIG, BUILD, and COMPILE) for both hardware and software compilation.

```
<?xml version="1.0" encoding="UTF-8"?>
<spirit:generatorChain</pre>
   xmlns:xs=http://www.w3.org/2001/XMLSchema
   xmlns:spirit=http://www.spiritconsortium.org/XMLSchema/SPIRIT/1.5
   xsi:schemaLocation="http://www.spiritconsortium.org/XMLSchema/SPIRIT/1.5
   http://www.spiritconsortium.org/XMLSchema/SPIRIT/1.5/index.xsd">
   <spirit:vendor>spiritconsortium.org</spirit:vendor>
   <spirit:library>buildChain</spirit:library>
   <spirit:name>CompleteBuild</spirit:name>
   <spirit:version>1.0</spirit:version>
   <spirit:generatorChainSelector>
      <spirit:groupSelector>
          <spirit:name>INIT</spirit:name>
      </spirit:groupSelector>
   </spirit:generatorChainSelector>
   <spirit:generatorChainSelector>
      <spirit:groupSelector>
          <spirit:name>CONFIG</spirit:name>
```

9.2 generatorChainSelector

9.2.1 Schema

The following schema defines the information contained in the **generatorChainSelector** element, which may appear within a **generatorChain**.

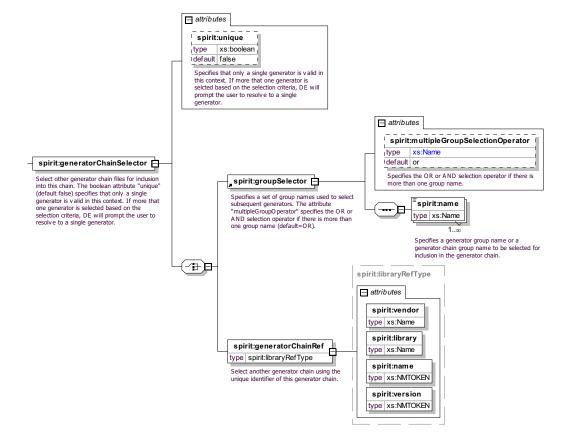

9.2.2 Description

The **generatorChainSelector** element defines which generator(s) to invoke based on a selection criteria. The **generatorChainSelector** element contains a **unique** (optional) attribute that, when **true**, indicates the generatorChainSelector shall resolve to a single generator. If more than one generator is selected, the DE

shall resolve the selection to a single generator. The **unique** attribute default is **false** and is of type **boolean**. The **generatorChainSelector** element can specify the selection criteria in one of two ways: as a selection based on the **chainGroup** names via the **groupSelector** element or as a direct VLNV reference via the **generatorChainRef** element. The **generatorChainSelector** element shall contain one of the **groupSelector** or **generatorChainRef** elements.

- a) groupSelector (mandatory) is a container for an unbounded list of chain group name elements.
 - 1) When more than one **name** element is specified, the **multipleGroupSelectorOperator** (optional) attribute can specify if the selection applies when *one* of the generator group names matches (**multipleGroupSelectorOperator** equals **or**) or *all* the generator group names match (**multipleGroupSelectorOperator** equals **and**).
 - 2) **name** (mandatory) is an unbounded list of selection names. The names are compared to the **generatorChain/chainGroup** elements within all generator chains visible to the DE. The **name** element is of type *Name*.
- b) **generatorChainRef** (mandatory) specifies a reference to another generator chain description for inclusion in this generator chain. The **generatorChainRef** element is of type *libraryRefType* (see C.7); it contains four attributes to specify a unique VLNV.

See also: SCR 1.7.


9.2.3 Example

Assume three **generatorChains** X, Y, and Z have been created with the **chainGroup** names $\{A, B\}$, $\{A, C\}$, and $\{B, C\}$, respectively. This example shows how a new **generatorChain** object can select Y.

9.3 generatorChain component selector

9.3.1 Schema

The following schema defines the information contained in the **componentGeneratorSelector** element, which may appear within a **generatorChain**.

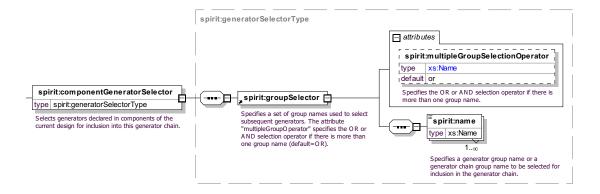

9.3.2 Description

Similar to the **generatorChainSelector**, **componentGeneratorSelector** selects a component generator or a list of component generators based on the assigned group name. The **componentGeneratorSelector** contains the **groupSelector** element.

groupSelector (mandatory) is a container for an unbounded list of chain group name elements.

- 1) When more than one **name** element is specified, the **multipleGroupSelectorOperator** (optional) attribute can specify if the selection applies when *one* of the generator group names matches (**multipleGroupSelectorOperator** equals **or**) or *all* the generator group names match (**multipleGroupSelectorOperator** equals **and**).
- 2) **name** (mandatory) is an unbounded list of selection names. The names are compared to the **componentGenerator/group** elements within all components in the current design. The **name** element is of type *Name*.


9.3.3 Example

The following example shows a **generatorChain** selecting all the component generators whose **group** element matches the name docGen.

9.4 generatorChain generator

9.4.1 Schema

The following schema defines the information contained in the **generator** element, which may appear within a **generatorChain**.

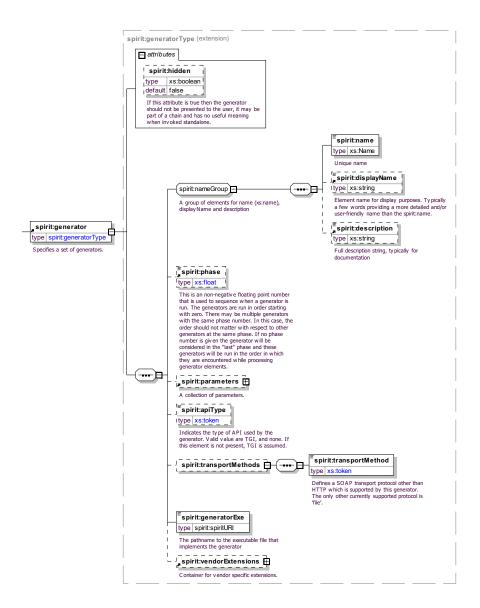

9.4.2 Description

The **generator** element defines a specific generator executable. The **generator** element contains a **hidden** attribute. The **hidden** (optional) attribute specifies, when **true**, this generator shall not be run as a standalone generator and is required to be run as part of a chain. This generator is not presented to the user. If **false** (the default), this generator may be run as a standalone generator or in a generator chain. The **hidden** attribute is of type **boolean**. **generator** contains the following elements.

- a) *nameGroup* group is defined in <u>C.1</u>.
- b) **phase** (optional) determines the sequence in which a generators are run. Generators are run in order starting with zero (0). If two generators have the same phase numbers, the order shall be interpreted as not important and the generators can be run in any order. If no phase number is given the generator is considered in the "last" phase and these generators are run in any order after the last generator with a phase number. The **phase** element is of type *float* and shall also be a positive number.
- c) parameters (optional) specifies any generator type parameters. See <u>C.11</u>.

- d) **apiType** (optional) indicates the type of API used by the generator: an enumerated list of **TGI** or **none**. **TGI** indicates the generator uses communication to the DE compliant with the TGI. **none** indicates the generator does not use any communication with the DE.
- e) **transportMethods** (optional) defines alternate SOAP transport protocol that this generator can support. The default SOAP transport protocol is HTTP if this element is not present.
 - **transportMethod** specifies the alternate transport protocol. This element is an enumerated list of only one element **file**. **file** indicates the SOAP transport protocol is transported to the DE via a file or file handle.
- f) **generatorExe** (mandatory) contains an absolute or relative (to the location of the containing description) path to the generator executable. The path may also contain environment variables from the host system, which are used to abstract the location of the generator. The **generatorExe** element is of type *spiritURI*.
- g) **vendorExtensions** (optional) adds any extra vendor-specific data related to the **generator**. See <u>C.10</u>.

9.4.3 Example

The following example shows a netlist generator.



10. Design configuration descriptions

10.1 Design configuration

An IP-XACT *design configuration* is a placeholder for additional configuration information of a design or generator chain description. Design configuration information is useful when transporting designs between design environments and automating generator chain execution for a design, by storing information that would otherwise have to be re-entered by the designer.

The design configuration description contains the following configuration information:


- Configurable information for parameters defined in generators within generator chains; this information is not referenced via the design description;
- Active view or current view selected for instances in the design description;
- Configuration information for interconnections between the same bus types with differing abstraction types (i.e., abstractor reference, parameter configuration, and view selection). See also <u>Clause 8</u>.

A design configuration applies to a single design, but a design may have multiple design configuration descriptions.

10.2 designConfiguration

10.2.1 Schema

The following schema details the information contained in the **designConfiguration** element, which is one of the seven top-level elements of the schema.

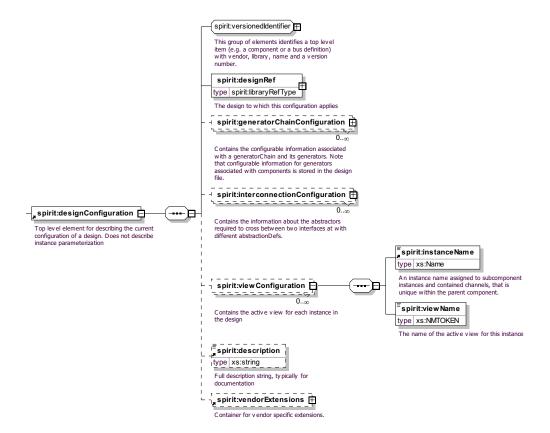

10.2.2 Description

The **designConfiguration** element details the configuration for a design or generator chain description. The **designConfiguration** element contains the following mandatory and optional elements.

- a) The *versionedIdentifier* group provides a unique identifier, made up of four subelements for a top-level IP-XACT element. See C.6.
- b) **designRef** (mandatory) specifies the design description for this design configuration. The **design-Ref** element is of type *libraryRefType* (see <u>C.7</u>); it contains four attributes to specify the referenced VLNV.
- c) **generatorChainConfiguration** (optional) is an unbounded list of configuration information associated with a **generatorChain** or a **generator** defined within a **generatorChain**. See <u>10.3</u>.
- d) interconnectionConfiguration (optional) is an unbounded list of information associated with interface interconnections. Any abstractors required for the connection of two interfaces are specified here. See 10.4.
- e) **viewConfiguration** (optional) lists the active view for an instance of the design. It has the following subelements.
 - instanceName (mandatory) specifies the component instance name for which the view is being selected. This instance name shall be unique within the containing design configuration description. The instanceName element is of type Name.
 - 2) **viewName** (mandatory) defines the current valid view for the selected component instance. The **viewName** element is of type *NMTOKEN*.
- f) **description** (optional) allows a textual description of the design configuration. The **description** element is of type *string*.

g) **vendorExtensions** (optional) adds any extra vendor-specific data related to the design configuration. See <u>C.10</u>.

See also: <u>SCR 1.5</u>, <u>SCR 1.9</u>, <u>SCR 13.1</u>, <u>SCR 13.2</u>, and <u>SCR 13.4</u>.

10.2.3 Example


The following example shows a **designConfiguration** containing a generator chain configuration: one abstractor configuration in an **interconnectionConfiguration** and one instance view configuration.

```
<spirit:designConfiguration xmlns:spirit="http://www.spiritconsortium.org/</pre>
   XMLSchema/SPIRIT/1.5" xmlns:xsi="http://www.w3.org/2001/XMLSchema-
   instance" xsi:schemaLocation="http://www.spiritconsortium.org/XMLSchema/
   SPIRIT/1.5/index.xsd">
   <spirit:vendor>spiritconsortium.org</spirit:vendor>
   <spirit:library>Library</spirit:library>
   <spirit:name>Configs</spirit:name>
   <spirit:version>1.0</spirit:version>
   <spirit:designRef spirit:vendor="spiritconsortium.org"</pre>
   spirit:library="DesignLibrary" spirit:name="Design1"
   spirit:version="1.0"/>
   <spirit:generatorChainConfiguration>
      <spirit:generatorChainRef spirit:vendor="spiritconsortium.org"</pre>
   spirit:library="generatorLibrary" spirit:name="generator1"
   spirit:version="1.0"/>
          <spirit:configurableElementValues>
             <spirit:configurableElementValue spirit:referenceId="tmpDir">
   my temp dir</spirit:configurableElementValue>
          </spirit:configurableElementValues>
   </spirit:generatorChainConfiguration>
   <spirit:interconnectionConfiguration>
      <spirit:interconnectionRef>connection1</spirit:interconnectionRef>
      <spirit:abstractors>
          <spirit:abstractor>
             <spirit:instanceName>a1</spirit:instanceName>
             <spirit:abstractorRef</pre>
             spirit:vendor="spiritconsortium.org"
             spirit:library="AbstractorLibrary"
             spirit:name="AHBPvToRtl"
             spirit:version="1.0"/>
             <spirit:viewName>verilog</spirit:viewName>
          </spirit:abstractor>
      </spirit:abstractors>
   </spirit:interconnectionConfiguration>
   <spirit:viewConfiguration>
      <spirit:instanceName>instance 1</spirit:instanceName>
      <spirit:viewName>verilog</spirit:viewName>
   </spirit:viewConfiguration>
</spirit:designConfiguration>
```

10.3 generatorChainConfiguration

10.3.1 Schema

The following schema defines information contained in **generatorChainConfiguration**, which may appear as an element inside the **designConfiguration** element.

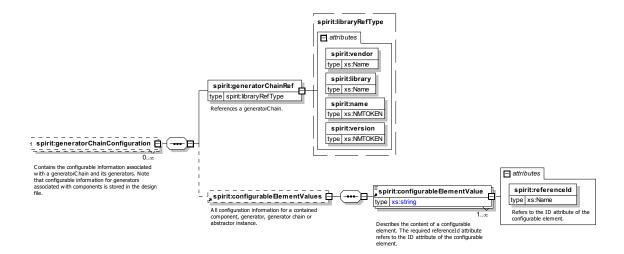

10.3.2 Description

The **generatorChainConfiguration** element contains the configurable information associated with a **generatorChain** and its generators. It is up to the DE to decide how and when this configuration information is applied. Configurable information for any generators defined in a component or abstractor is stored in the design description with the associated instance's configuration. The **generator-ChainConfiguration** element contains the following elements.

- a) **generatorChainRef** (mandatory) specifies the generator chain description for this configuration information. The **generatorChainRef** element is of type *libraryRefType* (see <u>C.7</u>); it contains four attributes to specify the referenced **VLNV**.
- b) configurableElementValues (optional) lists the generator chain's configurable parameter values. The configurableElementValues includes an unbounded list of configurableElementsValue elements.
 - configurableElementValue (mandatory) is an unbounded list that specifies the value to apply
 to a configurable element; in this instance, it is pointed to by the referenceId attribute. The
 configurableElementValue is of type string.
 - The contained **referenceId** (mandatory) attribute is a reference to the **id** attribute of a configurable parameter value in the generator definition. The **referenceId** attribute is of type **Name**.

See also: SCR 1.6, SCR 5.12, and SCR 13.6.


10.3.3 Example

The following example shows the configurable information for a **generatorChain**. Here parameters inside the referenced **generatorChain** are configured.

10.4 interconnectionConfiguration

10.4.1 Schema

The following schema defines information contained in **interconnectionConfiguration** element, which may appear as an element inside the **designConfiguration** element.

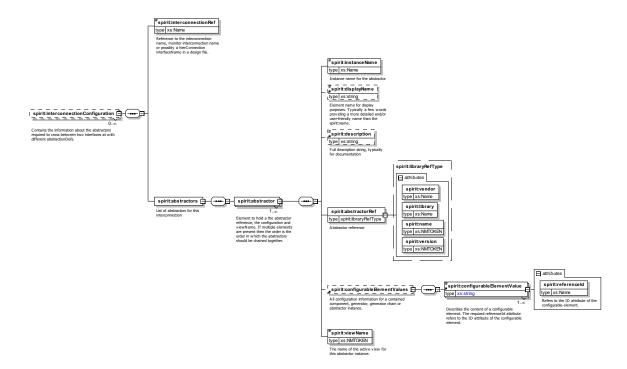

10.4.2 Description

The interconnectionConfiguration element contains information about the abstractors used to connect two interfaces having the same busDefinition types, but different abstractionDefinition types. The interconnectonConfiguration element contains the following elements.

- a) interconnectionRef (mandatory) contains a reference to a design interconnection/name name, design monitorInterconnection/name name, or a design hierConnection/interfaceRef name. All interconnectionRef elements shall be unique within the containing design configuration description. The interconnectionRef element is of type Name.
- abstractors (mandatory) contains an unbounded list of abstractor elements. The list of abstractor elements is an ordered list for chaining the abstractors together to bridge from one abstraction to another. This element has the following subelements.
 - instanceName (mandatory) assigns a unique name for this instance of the abstractor in this
 design. The value of this element shall be unique inside the designConfiguration and the referenced design element. The instanceName element is of type Name.
 - 2) **displayName** (optional) allows a short descriptive text to be associated with the instance. The **displayName** is of type *string*.

- description (optional) allows a textual description of the instance. The **description** is of type *string*.
- 4) **abstractorRef** (mandatory) is a reference to an abstractor description for this abstractor instance. The abstractorRef element is of type *libraryRefType* (see <u>C.7</u>); it contains four attributes to specify a unique VLNV.
- 5) **configurableElementValues** (optional) lists the abstractor instance's configurable parameter values. The **configurableElementValues** is an unbounded list of **configurableElementsValue** elements.
 - configurableElementValue (mandatory) is an unbounded list that specifies the value to apply to a configurable element; in this instance, it is pointed to by the referenceId attribute. The configurableElementValue is of type string.
 - ii) The contained **referenceId** (mandatory) attribute is a reference to the **id** attribute of a configurable parameter value in the abstractor instance. The **referenceId** attribute is of type **Name**.
- 6) **viewName** (mandatory) defines the current valid view for the selected abstractor instance. The **viewName** element is of type *NMTOKEN*.

See also: <u>SCR 1.12</u>, <u>SCR 3.7</u>, <u>SCR 3.8</u>, <u>SCR 3.9</u>, <u>SCR 3.10</u>, <u>SCR 3.11</u>, <u>SCR 3.12</u>, <u>SCR 3.13</u>, <u>SCR 3.14</u>, <u>SCR 3.15</u>, <u>SCR 5.13</u>, <u>SCR 13.3</u>, and <u>SCR 13.5</u>.

10.4.3 Example

The following example shows the configuration of the connection1 interconnection, with the definition of a chain of two abstractors to insert between the two component **busInterfaces**. The abstractor instances are abstraction1 and abstraction2, which convert from abstraction interface PV to PVT and PVT to RTL, respectively. The active views of these abstractor instances are systemc and systemc_view, respectively. The abstractor VLNVs are defined in the **abstractorRef** elements.

```
<spirit:interconnectionConfiguration>
   <spirit:interconnectionRef>connection1</spirit:interconnectionRef>
   <spirit:abstractors>
      <spirit:abstractor>
          <spirit:instanceName>abstractor1</spirit:instanceName>
          <spirit:abstractorRef</pre>
             spirit:vendor="spiritconsortium.org"
             spirit:library="AbstractorLibrary"
             spirit:name="AHBPvToAHBPvt"
             spirit:version="1.0" />
          <spirit:viewName>systemc</spirit:viewName>
      </spirit:abstractor>
      <spirit:abstractor>
          <spirit:instanceName>abstractor2</spirit:instanceName>
          <spirit:abstractorRef</pre>
             spirit:vendor="spiritconsortium.org"
             spirit:library="AbstractorLibrary"
             spirit:name="AHBPvtToRtl"
             spirit:version="1.0" />
          <spirit:viewName>systemc_view</spirit:viewName>
      </spirit:abstractor>
   </spirit:abstractors>
</spirit:interconnectionConfiguration>
```

11. Addressing and data visibility

This clause describes how addresses are transformed between a slave's memory map and a master's address space. It also describes how to determine which bits of the memory map are visible in the master's address space.

The addressing descriptions here presume each bus interface only maps a single logical address port (a port with an **isAddress** qualifier) and a single logical data port (a port with an **isData** data qualifier). See also: $\underline{5.6}$ and $\underline{5.10}$.

If a bus interface maps more than one address or data port, then each combination of address and data ports implies a separate addressing and data visibility calculation. To calculate the address map for a particular type of transaction, the data and address ports that transaction uses need to be known first.

The most common case for multiple data ports in a single bus interface is where there are separate read and write data ports; however, their relevant properties of the read and write data ports are typically identical—giving identical read and write address maps.

11.1 Calculating the bit address of a bit in a memory map

A memory map consists of a set of address blocks, subspace maps, and banks containing further address blocks, subspace maps, and banks (to any number of levels). To calculate the address of a bit within an address block or subspace map relative to the containing memory map, its bit address needs to be calculated relative to its parent. If that parent is a bank, how that bank modifies the address needs to be calculated first, and then continue working up the bank structure until the memory map is reached. To do so, the following formulas apply.

— For a bit in an address block directly in a memory map:

$$memory_map_bit_address = bit_number_in_address_block + addressBlock.baseAddress \times \\ memoryMap.addressUnitBits$$
 (1)

— For a bit in a subspace map:

$$memory_map_bit_address = bit_number_in_subspace_map + subspaceMap.baseAddress \times \\ memory_Map.addressUnitBits$$
 (2)

For an address block or subspace map within a bank, the local bit address of a bit is simply its bit number. However, the following formulas need to be used on any containing banks.

a) For an item (bank, subspace map, or address block) within a serial bank:

$$item.rows = (item.range \times memoryMap.addressUnitBits) \div item.width$$
 (3)

(i.e., the effective range of an item is its range rounded up to the nearest complete row)

The *item.range* of an item is calculated depending on its type:

- 1) For an address block or subspace map, the range is the value of the **range** subelement;
- 2) For a serial bank, the range is the sum of the effective ranges of the sub-items;
- 3) For a parallel bank, the range is the (largest *item.rows* of all the sub-items) \times (bank width/addressUnitBits).

The *item.width* of an item is calculated depending on its type:

- 4) For an address block, the width is defined as the value of the width subelement;
- 5) For a subspace map, the width is the width of the address space of the referenced bus interface;
- 6) For a serial bank, the width is the width of the widest sub-item;
- 7) For a parallel bank, the width is the sum of the widths of the sub-items.
- b) For a bit within item *n* in a serial bank:

$$parent_bit_address = child_bit_address + \sum_{i=1}^{n-1} item_i.effective_range \times memoryMap.addressUnitBits$$
 (5)

c) For a bit within item n in a parallel bank containing m items:

$$bit_offset_in_row = child_bit_address \ mod \ item_n.width + \sum_{i=1}^{n-1} item_i.width$$
 (6)

$$row_offset = \sum_{i=1}^{m} item_{i}.width \times (child_bit_address \div (item_{n}.width))$$
(7)

$$parent_bit_address = bit_offset_in_row + row_offset$$
 (8)

Once the bit address within a top-level bank has been calculated, the bit address within the memory map can be derived from the following formula:

$$memory_map_bit_address = bank_bit_address + bank.baseAddress \times \\ memoryMap.addressUnitBits$$
 (9)

11.2 Calculating the bus address at the slave bus interface

The bus address of a bit at the slave bus interface can be derived from the following formulas:

$$slave bus address = memory map bit address ÷ slave.bitsInLau$$
 (10)

$$bus_bit_offset = memory_map_bit_address\ mod\ slave.bitsInLau$$
 (11)

On a bus, the bus address is the address carried by the address lines; the bit offset gives the offset within the LAU of the bit using the following formula:

where *slave_mapped_address_bits* is a mask derived from the set of address bits mapped in the slave.

11.3 Address modifications of an interconnection

The bus address is carried between adjacent bus interfaces (slave and mirrored slave, master and mirrored master, or master and slave) on the bus's **isAddress** logical port. If this port is a wire port, the address is

always carried as parallel bits with the least significant bit of the address on logical bit 0 of the port. ¹⁵ The interconnection can modify the address in two ways:

- If some address bits are not connected, addresses with those bits set are not accessible from the master.
 - 1) Examine the logical vectors in the port maps to determine which address bits are connected.
 - 2) Transactional ports always carry all address bits across the interconnection.
- b) If the value of **bitsInLau** differs on the two sides of the interconnection, the interpretation of the address as a bit address can vary by the ratio of the interfaces' **bitsInLau**. This, however, does not alter the actual bus address.

11.4 Address modifications of a channel

The address at the mirrored slave interface can be derived from the following formula:

where *slave_interconnection_address_bits* is a mask derived from the set of address bits connected between the slave and the mirrored slave.

This is then modified by the remap address:

where *remapAddress* is the remap address for the current state of the channel.

How addresses are modified within a channel depends on the value of **bitSteering** in the mirrored slave interface. It also depends on the relative width of the mirrored master and mirrored slave data ports, where this width is defined to be the total number of bits of the logical data port that are mapped in the bus interface. If **bitSteering** is **true**, or the slave is wider than or the same width as the master, the addresses are simply modified to take into account any change in **bitsInLau** between the mirrored slave and the mirrored master, as shown in the following formula:

$$mirrored_master_bus_address = floor\Big(\frac{mirrored_slave_row_address \times mirroredSlave.bitsInLau}{mirroredMaster.bitsInLau}\Big) \ (15)$$

& mirrored master mapped address bits

If **bitSteering** is **false** and the mirrored slave is narrower than the mirrored master, the address is adapted so all locations in the slave's memory map are visible:

$$mirrored_slave_bit_address = mirrored_slave_row_address \times mirroredSlave.bitsInLau$$
 (16)

$$mirrored_master_bit_address = mirrored_slave_bit_address \ mod \ mirroredSlave.width +$$
 (17)

$$floor \left(\frac{\textit{mirrored_slave_bit_address}}{\textit{mirroredSlave.width}}\right) \times \textit{mirroredMaster.width}$$

¹⁵ This gives a little-endian description of the address, which may differ from the address port description in the bus's documentation.

$$mirrored_master_bus_address = floor\Big(\frac{mirrored_master_bit_address}{mirroredMaster.bitsInLau}\Big)$$
 (18)

& mirrored_master_mapped_address_bits

where *mirrored_master_mapped_address_bits* is a mask derived from the set of address bits mapped in the mirrored master port.

Finally, **bitSteering** has a different meaning in a mirrored slave interface than in a master or slave interface. In a master or slave interface, it means the component shall modify which bit lanes are used for data when accessing narrow devices. In a mirrored slave interface, it means the addresses from a mirrored master interface are not modified for transfers to a narrower mirrored slave data port.

11.5 Addressing in the master

The bus address at the master bus interface can be derived from the following formula:

where *master_interconnection_address_bits* is a mask derived from the set of address bits connected between the master and the mirrored master.

This gives a bit address of

The bit address may then be converted to an addressing unit address and offset using the formulas:

$$address = master \ bit \ address \div address Space. address Unit Bits$$
 (21)

$$offset = master \ bit \ address \ mod \ address \ Space. address \ Unit Bits$$
 (22)

11.6 Visibility of bits

A bit in the slave's memory map is visible in the master's address space if:

- it is in an address range visible to the master;
- the master and slave agree on which bit lane the bit should appear and this bit lane is connected between the master and the slave.

11.6.1 Visible address ranges

Two conditions need to be fulfilled for an address in the slave to be visible to the master.

a) The address at the mirrored slave shall be within the range supported by the mirrored slave interface:

b) The address in the address space shall be within the range supported by the master address space for that bus interface:

$$0 \le master_bit_address < addressSpace.range \times addressSpace.addressUnitBits$$
 (24)

11.6.2 Bit lanes in memory maps

The local bit lane of a bit in an address block is:

Similarly, in a subspace map the bit lane is:

where the width of a subspace map is the width of the address space of the referenced master bus interface.

If the address block or subspace map is at the top-level of the memory map or only within serial banks, the bit lane in the memory map is the local bit lane.

If it is item *n* in a parallel bank, then:

$$bank_bit_lane = \sum_{i=1}^{n-1} item_i \cdot width + local_bit_lane$$
(27)

If it is in multiple hierarchical parallel banks, this formula is applied at each higher level with the lower-level bank bit lane replacing local bit lane.

The bit lane in the memory map is the top-level bank bit lane.

11.6.3 Bit lanes in address spaces

The bit lane in an address space can be derived from the following formula:

$$address\ space\ bit\ lane = address\ space\ bit\ address\ mod\ address\ Space.width$$
 (28)

11.6.4 Bit lanes in bus interfaces

In a bus interface, the logical bit numbers of the data port carry the corresponding bit lanes. For example, if a slave bus interface has a data port with a logical vector of [15:8], this port can access bit lanes 15 to 8 of the memory map and logical bit lanes 15 to 8 in the connected mirrored slave or master interface.

11.6.5 Bit lanes in channels

All bus interfaces on a channel shall use the same logical numbering of data port bits. This means data bits cannot be moved between bit lanes in a channel by giving the mirrored bus interfaces different logical to physical mappings on their data ports.

11.6.6 Bit steering in masters and slaves

Bit steering only takes effect when the master and the slave have data ports of different widths. If they do and bit steering is enabled (i.e., **bitSteering** is **true** in the master or slave interface) for the bus interface with the wider data port, then this data port shall move its copy of output data to the correct bit lanes for the narrower port and read its input data from the correct bit lanes for the narrower port.

If bit steering is disabled in the wider port, the master can only access data at a particular address when the bit lane for that address in the address space is connected (through the bus interfaces and a channel) to the bit lane for the corresponding address in the memory map.

The following also apply.

- The **bitSteering** value has a different meaning in mirrored slaves. See <u>11.4</u>.
- Some buses with bit steering may only support certain data port widths. Describing which widths are supported is outside the scope of IP-XACT.
- Bit steering allows software or hardware away from the bus interface to work without knowing the width of devices on the far side of the bus. To provide this functionality, a bus supporting bit steering normally gives the same address bits to all devices, irrespective of their widths, and does not adapt addresses to the width of the slave bus interfaces (i.e., bitSteering is true in the mirrored slave bus interfaces). Thus, a non-bit-steering master on such a bus only has access to some of the memory rows of narrower slaves.

11.7 Address translation in a bridge

The address at the master interface for a bridge can be derived from the following formulas:

a) The bus address at the master bus interface is:

where *master_interconnection_address_bits* is a mask derived from the set of address bits connected between the master and the slave.

This gives a bit address of

$$master_bit_address = master_bus_address \times master.bitsInLau + \\ master.addressSpaceRef.baseAddress \times addressSpace.addressUnitBits$$
 (30)

The master bit address (also equal to the address space bit address) may be converted to an addressing unit address and offset of the **addressSpace** using the formulas:

$$address\ space\ address\ =\ master\ bit\ address\ \div\ address\ Space.address\ UnitBits$$
 (31)

$$address_space_offset = master_bit_address\ mod\ addressSpace.addressUnitBits$$
 (32)

- b) The bit address may also be converted to the address of the bridged slave interface by using the following formulas.
 - 1) For a transparent bridge:

2) For an opaque bridge:

```
bridge_slave_address = ((address_space_address - segmentAddressOffset) × (34)
addressSpace.addressUnitBits ÷ (bridged_slave.bitsInLau + bridge_slave.baseAddress))
& bridged_slave_mapped_address_bits
```

Annex A

(informative)

Bibliography

- [B1] IEC/IEEE 61691-1-1, Behavioral languages—Part 1: VHDL language reference manual. 16, 17
- [B2] IEEE Std 754[™]-1985, IEEE Standard for Binary Floating-Point Arithmetic. ¹⁸
- [B3] IEEE Std 1364[™], IEEE Standard for Verilog Hardware Description Language.
- [B4] IEEE Std 1666[™]-2005, IEEE Standard for SystemC Language Reference Manual.
- [B5] IETF RFC 2119, "Key words for use in RFCs to Indicate Requirement Levels," Bradner, S., Best Current Practice: 14. 19
- [B6] IP-XACT Leon Register Transfer Examples, v1.5.²⁰
- [B7] IP-XACT Leon Transaction Level Examples, v1.5.²¹
- [B8] IP-XACT Schema, v1.5.²²
- [B9] IP-XACT Schema on-line documentation, v1.5.²³
- [B10] IP-XACT TGI WSDL, v1.5.²⁴
- [B11] ISO/IEC 8859-1, Information technology—8-bit single-byte coded graphic character sets—Part 1: Latin Alphabet No. 1.²⁵
- [B12] ISO/IEC 8879, Information processing—Text and office systems—Standard Generalized Markup Language (SGML).

¹⁶IEC publications are available from the Sales Department of the International Electrotechnical Commission, Case Postale 131, 3, rue de Varembé, CH-1211, Genève 20, Switzerland/Suisse (http://www.iec.ch/). IEC publications are also available in the United States from the Sales Department, American National Standards Institute, 25 West 43rd Street, 4th Floor, New York, NY 10036, USA (http://www.ansi.org/).

¹⁷IEEE publications are available from the Institute of Electrical and Electronics Engineers, Inc., 445 Hoes Lane, Piscataway, NJ 08854, USA (http://standards.ieee.org/).

¹⁸The IEEE standards or products referred to in this clause are trademarks of the Institute of Electrical and Electronics Engineers, Inc.

¹⁹ Available from http://www.ietf.org/rfc/rfc2119.txt.

²⁰Available from http://www.spiritconsortium.org/doc downloads/.

²¹Available from http://www.spiritconsortium.org/XMLSchema/SPIRIT/1.5/index.xsd.

²²See Footnote 21.

²³See Footnote 21.

²⁴Available from http://www.spiritconsortium.org/XMLSchema/SPIRIT/1.5/TGI/TGI.wsdl.

²⁵ISO/IEC publications are available from the ISO Central Secretariat, Case Postale 56, 1 rue de Varembé, CH-1211, Genève 20, Switzerland/Suisse (http://www.iso.ch/). ISO/IEC publications are also available in the United States from Global Engineering Documents, 15 Inverness Way East, Englewood, CO 80112, USA (http://global.ihs.com/). Electronic copies are available in the United States from the American National Standards Institute, 25 West 43rd Street, 4th Floor, New York, NY 10036, USA (http://www.ansi.org/).

[B13] Transaction-Level Model of SystemC. 26

[B14] IP-XACT standard tool names for envIdentifier. 27

²⁶Available at http://www.systemc.org.

²⁷Available at http://www.spiritconsortium.org/tech/refs/toolnames.

Annex B

(normative)

Semantic consistency rules

For an IP-XACT document or a set of IP-XACT documents to be valid, they shall, in addition to conforming to the IP-XACT schema, obey certain semantic rules. While many of these are described informally in other clauses of this document, this annex defines them formally. Tools generating IP-XACT documents shall ensure these rules are obeyed. Tools reading IP-XACT documents shall report any breaches of these rules to the user.

B.1 Semantic consistency rule definitions

The following definitions apply when determining a semantic consistency rule (SCR) interpretation.

B.1.1 Compatibility of busDefinitions

- a) A **busDefinition** A is an extension of **busDefinition** B if A contains an extension element that references B or an extension of B.
- b) A **busDefinition** is compatible with itself.
- c) If A is an extension of B, then A and B are compatible.
- d) No other pairs of **busDefinition**s are compatible.
- e) A set of **busDefinition**s {A, B, C, ...} is compatible if every possible pair of **busDefinition**s from the set ({ A, B }, { A, C }, { B, C } ...) is compatible.

B.1.2 Interface mode of a bus interface

Specifies whether the bus interface is a master, slave, system, mirroredMaster, mirroredSlave, mirroredSystem, or monitor interface.

B.1.3 Compatibility of abstractionDefinitions

- a) An **abstractionDefinition** A is an extension of **abstractionDefinition** B if A contains an extension element that references B or an extension of B.
- b) An abstractionDefinition is compatible with itself.
- c) If A is an extension of B, then A and B are compatible.
- d) No other pairs of **abstractionDefinition**s are compatible.

B.1.4 Configurable element

Some elements in a component, abstractor, or generator chain description are defined as being configurable. See $\underline{C.12}$.

NOTE—This is different from a **configurableElement** element, which is an element that references and sets the value of a configurable element.

B.1.5 Element referenced by configurable Element element

Every **configurableElement** element references a component document and is contained within a **componentInstance** element. The element referenced by a **configurableElement** element is the configurable element in that component document with an **id** attribute matching the **referenceId** of the **configurableElement** element.

B.1.6 Memory mapping

If an access is not specified, the value defaults to the value from the level above. If the top level is not specified, the access defaults to read-write.

B.1.7 Port connection equivalence class

The *port connection equivalence class* of a (logical or component) port is the set of model and logical ports that can be reached from that port through any sequence of the following:

- a) Bus interfaces' logical to physical port maps
- b) Interconnections between logical ports implied by interconnections between bus interfaces using the same abstraction of the bus
- c) Ad hoc connections

B.1.8 Logical and physical ports

- a) If a wire **port** element in a component has a vector subelement, its range shall be [**left:right**], where **left** and **right** are the left and right values of the vector subelement. If it does not have a vector subelement, its range shall be [0:0].
- b) If a **physicalPort** element has a vector subelement, its range shall be [**left:right**], where **left** and **right** are the left and right values of the vector subelement. If a **physicalPort** element does not have a vector subelement and it references a wire port, then its range shall be the range of the referenced model port.
- c) If a logicalPort element has a vector subelement, its range shall be [left:right], where left and right are the left and right values of the vector subelement. If a logicalPort element does not have a vector subelement and the physicalPort element in the same portMap references a wire port, then its physical range shall be taken as [abs(physical.left physical.right):0], where physical.left and physical.right are the left and right values of the physical port's range.
- d) A logical bit of a port is mapped if it is included in the range of a **logicalPort** element referencing that bus interface port.

B.1.9 Addressable bus interface

A bus interface shall be *addressable* if the **isAddressable** element of the bus definition it references has the value **true**.

B.2 Rule listings

Most of the semantic rules listed here can be checked purely by manually examining a set of IP-XACT documents. A few, listed in <u>Table B.14</u>, need some external knowledge, so they cannot be checked this way. In <u>Table B.14</u>, *Single doc check* indicates a rule can be checked purely by manually

examining a single IP-XACT document. Rules for which *Single doc check* is No require the examination of the relationships between IP-XACT documents.

NOTE—Where these tables contain references to the values of elements and those elements are configurable in IP-XACT, then the values used are the configured values (not the XML element values).

B.2.1 Cross-references and VLNVs

Table B.1—Cross-references and VLNVs

Rule number	Rule	Single doc check	Notes
SCR 1.1	Every IP-XACT document visible to a tool shall have a unique VLNV.	No	Only applies to those documents visible to a particular tool or DE at one time. In particular, users are likely to store multiple versions of the same documents, with the same VLNVs, in source control systems. See also: C.6.2 and C.6.4.
SCR 1.2	Any VLNV in an IP-XACT document used to reference another IP-XACT document shall precisely match the identifying VLNV of an existing IP-XACT document.	No	In the schema, such references always use the attribute group versionedIdentifier . See also: <u>C.6.2</u> and <u>C.6.4</u> .
SCR 1.3	The VLNV in an extends element in a bus definition shall be a reference to a bus definition.	No	See also: <u>5.2.2</u> .
SCR 1.4	The VLNV in a busType element in a bus interface or abstraction definition shall be a reference to a bus definition.	No	See also: <u>6.5.1</u> .
SCR 1.5	The VLNV in a designRef element in a design configuration shall be a reference to a design .	No	See also: <u>10.2.2</u> .
SCR 1.6	The VLNV in a generatorChainRef element in a design configuration shall be a reference to a generator chain.	No	See also: <u>10.2.2</u> and <u>10.3.2</u> .
SCR 1.7	The VLNV in a generatorChainRef subelement of the element generatorChainSelector in a generator chain shall be a reference to a generator chain.	No	See also: <u>9.2.2</u> .
SCR 1.8	The VLNV in a componentRef element in a design shall be a reference to a component .	No	See also: <u>7.2.2</u> .
SCR 1.9	The XML document element of an IP-XACT document shall be an abstractor, abstractionDefinition, busDefinition, component, design, designConfiguration or generatorChain element.	Yes	See also: <u>5.2.2</u> , <u>5.3</u> , <u>6.1.2</u> , <u>7.1.2</u> , <u>8.1.2</u> , <u>9.1.2</u> , and <u>10.2.2</u> .
SCR 1.10	The VLNV in an abstractionType element in a component or abstractor shall reference an abstractionDefiniton .	No	See also: <u>8.1.2</u> .
SCR 1.11	If a bus interface contains an abstractionType subelement, the abstraction definition's busType element and the bus interface's busType element shall reference the same bus definition.	No	I.e., the abstraction referenced shall be an abstraction of the referenced bus. See also: 5.2.2, 5.3.2, and 6.5.1.2.

Table B.1—Cross-references and VLNVs (continued)

Rule number	Rule	Single doc check	Notes
SCR 1.12	The VLNV in an abstractorRef in a design-Configuration shall reference an abstractor.	No	See also: <u>10.4.2</u> .
SCR 1.13	The VLNV in an extends element in an abstraction definition shall be a reference to an abstraction definition.	No	See also: <u>5.3.2</u> .

B.2.2 Interconnections

Table B.2—Interconnections

Rule number	Rule	Single doc check	Notes
SCR 2.1	In the attributes of an activeInterface, monitoredActiveInterface or monitorInterface element, the value of the busRef attribute shall be the name of a busInterface in the component description referenced by the VLNV of the component instance named in componentRef and optional path attributes.	No	See also: <u>7.3.2</u> and <u>7.4.2</u> .
SCR 2.2	In the subelements of an interconnection , the bus interfaces referenced by the two activeInterface subelements shall be compatible, i.e., the VLNVs of the busType elements within the two busInterface elements shall reference compatible busDefinitions .	No	See also: <u>6.3.1</u> , <u>6.3.2</u> , <u>6.3.3</u> , and <u>7.3.2</u> .
SCR 2.3	A particular component/bus interface combination shall appear in only one interconnection element in a design.	Yes	See also: <u>7.3.2</u> .
SCR 2.4	An interconnection element shall only connect a master interface to a slave interface or a mirrored-master interface.	No	See also: <u>7.3.2</u> .
SCR 2.5	An interconnection element shall only connect a mirrored-master interface to a master interface.	No	See also: <u>7.3.2</u> .
SCR 2.6	An interconnection element shall only connect a slave interface to a master interface or a mirrored-slave interface.	No	See also: <u>7.3.2</u> .
SCR 2.7	An interconnection element shall only connect a mirrored-slave interface to a slave interface.	No	See also: <u>7.3.2</u> .
SCR 2.8	An interconnection element shall only connect a direct system interface to a mirrored-system interface.	No	See also: <u>7.3.2</u> .
SCR 2.9	An interconnection element shall only connect a mirrored-system interface to a direct system interface.	No	See also: <u>7.3.2</u> .

Table B.2—Interconnections (continued)

Rule number	Rule	Single doc check	Notes
SCR 2.10	In a direct master to slave connection, the value of bitsInLAU in the master's bus interface shall match the value of bitsInLAU in the slave's bus interface.	No	See also: <u>6.3.1</u> and <u>7.3.2</u> .
SCR 2.11	In a direct master to slave connection, the bus- Definitions referenced by the busInterfaces shall have a directConnection element with the value true.	No	See also: <u>6.3.1</u> and <u>7.3.2</u> .
SCR 2.12	In a connection between a system interface and a mirrored-system interface, the values of the group elements of the two bus interfaces shall be identical.	No	See also: <u>6.3.1</u> , <u>6.3.2</u> , <u>6.5.2.2</u> , and <u>7.3.2</u> .
SCR 2.13	If the same logical port is mapped in the port maps of both ends of a direct master to slave connection, then both bus interfaces shall map the same set of bits of that logical port.	No	Logical ports can only be identified with one another if the two bus interfaces reference the same abstraction definition. See also: 6.3.1 and 7.3.2.
SCR 2.14	The endianess in the two bus interfaces shall match for any interconnection using an addressable bus. If the endianess is not specified at either bus interface, it is presumed to be little endian.	No	See also: <u>6.3.1</u> , <u>6.3.2</u> , <u>6.5.1.2</u> , and <u>7.3.2</u> .
SCR 2.15	If a design contains a component with a busInter- face that has a connectionRequired element with the value true , that busInterface shall be included in an interconnection of the design.	No	See also: <u>6.5.1.2</u> and <u>7.3.2</u> .
SCR 2.16	A monitorInterconnection with interfaces that contain a path attribute with a componetRef and busRef shall exist in all hierarchical views.	No	See also: <u>7.4</u> .

B.2.3 Channels, bridges, and abstractors

Table B.3—Channels, bridges, and abstractors

Rule number	Rule	Single doc check	Notes
SCR 3.1	Within a channel element, all the busInterfaceRef elements shall refer to compatible abstraction definitions, i.e., the VLNVs of the abstractionType elements within the busInterface elements shall reference compatible abstractionDefinitions .	No	Compatibility of the abstraction definitions implies compatibility of their associated bus definitions. See also: 5.3.2 and 6.6.2.
SCR 3.2	All bus interfaces referenced by a channel shall be mirrored interfaces.	Yes	See also: <u>6.4.1</u> and <u>6.6.2</u> .

Table B.3—Channels, bridges, and abstractors (continued)

Rule number	Rule	Single doc check	Notes
SCR 3.3	A channel can be connected to no more mirrored-master busInterfaces than the least value of maxMasters in the bus definitions referenced by the connected bus interfaces (whether these interfaces are mirrored-master or mirrored-slave interfaces).	No	A channel may connect ports with different bus definitions, and hence different values of maxMasters , as long as the bus definitions are compatible. See also: <u>6.6.2</u> .
SCR 3.4	A channel can be connected to no more mirrored- slave bus interfaces than the least value of maxSlaves in the bus definitions referenced by the connected bus interfaces (whether these interfaces are mirrored-master or mirrored-slave interfaces).	No	A channel may connect ports with different bus definitions, and hence different values of maxSlaves , as long as the bus definitions are compatible. See also: <u>6.6.2</u> .
SCR 3.5	Each bus interface on a component shall connect to only one channel of that channel component.	Yes	See also: <u>6.6.2</u> .
SCR 3.6	The interface referenced by masterRef subelement of a bridge element shall be a master.	Yes	See also: <u>6.5.4.2</u> .
SCR 3.7	The value of the interconnectionRef subelement of an interconnectionConfiguration element shall precisely match a design interconnection/name, a design monitorInterconnection/name, or a design hierConnection/interfaceRef of an interconnection described in the design referenced by the containing design configuration.	No	See also: <u>10.4.2</u> .
SCR 3.8	An interconnectionConfiguration element of a design configuration document that references a master to mirrored-master interconnection in the corresponding design shall only reference abstractors with an abstractorMode of master.	No	See also: <u>10.4.2</u> .
SCR 3.9	An interconnectionConfiguration element of a design configuration document that references a slave to mirrored-slave interconnection in the corresponding design shall only reference abstractors with an abstractorMode of slave.	No	See also: <u>10.4.2</u> .
SCR 3.10	An interconnectionConfiguration element of a design configuration document that references a system to mirrored-system interconnection in the corresponding design shall only reference abstractors with an abstractorMode of system.	No	See also: <u>10.4.2</u> .
SCR 3.11	An interconnectionConfiguration element of a design configuration document that references a master to slave interconnection in the corresponding design shall only reference abstractors with an abstractorMode of direct.	No	See also: <u>10.4.2</u> .
SCR 3.12	An interconnectionConfiguration element shall not reference an interconnection in which the abstraction types referenced by the two endpoints are identical.	No	See also: <u>10.4.2</u> .

Table B.3—Channels, bridges, and abstractors (continued)

Rule number	Rule	Single doc check	Notes
SCR 3.13	In the list of abstractors referenced by an inter- connectionConfiguration element, the first abstractionType element of the first referenced abstractor shall be compatible with the abstrac- tionType element of the master, system, or mirrored-slave endpoint of the interconnection.	No	SCR 3.13 – SCR 3.15 mean the abstractors associated with an interconnection need to form a non-looping chain between the two ends. See also: 10.4.2.
SCR 3.14	In the list of abstractors referenced by an interconnectionConfiguration element, the second abstractionType element of the last referenced abstractor shall be compatible with the abstractionType element of the mirrored-master, mirrored-system, or slave endpoint of the interconnection.	No	See also: <u>10.4.2</u> .
SCR 3.15	In the list of abstractors referenced by an inter- connectionConfiguration element, the first abstractionType element of every referenced abstractor, except the first, shall be compatible with the second abstractionType element of the previous abstractor in the interconnection- Configuration list.	No	See also: <u>10.4.2</u> .
SCR 3.16	The VLNVs in the busType elements of both abstraction definitions referenced by an abstractor shall exactly match the VLNV in the busType element of the abstractor.	No	See also: <u>5.3.2</u> and <u>8.1.2</u> .
SCR 3.17	If abstraction definition AA is an abstraction of bus definition A and abstraction definition AB is an abstraction of bus definition B, then abstraction definition AA shall only contain an extends element referencing abstraction definition AB if bus definition A contains an extends element referencing bus definition B.	No	If abstraction definition AA extends abstraction definition AB, AA and AB need to be abstractions of different buses. See also: <u>5.3.2</u> .
SCR 3.18	The interface referenced by the masterRef attribute of a subspaceMap element shall be a master interface that is bridged from a slave interface with a valid memory map referenced by its memoryMapRef element.	Yes	See also: <u>6.8.9.2</u> .

B.2.4 Monitor interfaces and monitor interconnections

Table B.4—Monitor interfaces and monitor interconnections

Rule number	Rule	Single doc check	Notes
SCR 4.1	An activeInterface or monitoredActiveInterface element shall reference a master, slave, system, mirroredMaster, mirroredSlave, or mirrored-System interface.	No	See also: <u>6.3.3</u> , <u>7.3.2</u> , <u>7.4.2</u> , and <u>7.6.2</u> .
SCR 4.2	The monitorInterface subelements of a monitorInterconnection element shall reference a monitor bus interface.	No	See also: <u>6.3.3</u> and <u>7.3.2</u> .
SCR 4.3	In a monitorInterconnection element, the value of the interfaceMode of the monitor interfaces shall match the mode of the monitoredActiveInterface.	No	This means all the monitor interfaces shall have the same interface mode. See also: <u>6.3.3</u> , <u>6.5.2.2</u> , and <u>7.3.2</u> .
SCR 4.4	A monitor interface shall only be connected to a system or mirroredSystem interface if it has a group subelement and the value of this element matches the value of the group subelement of the system or mirroredSystem interface.	No	See also: <u>6.3.3</u> , <u>6.5.2.2</u> , and <u>7.3.2</u> .
SCR 4.5	A particular componentRef/busRef combination shall only appear in one monitorInterconnection element.	No	This applies to both monitor and active interfaces; however, a single monitorInterconnection element can connect an active interface to many monitor interfaces. The same active interface can also appear in at most one interconnection element. See also: 6.3.3 and 7.3.2.
SCR 4.6	All ports mapped in a busInterface with a mode of monitor shall have a direction of in for wire type ports or requires for transactional type ports.	Yes	See also: <u>6.3.3</u> .

B.2.5 Configurable elements

Table B.5—Configurable elements

Rule number	Rule	Single doc check	Notes
SCR 5.1	A configurable element shall have a dependency attribute if and only if it has a resolve attribute with the value dependent .	Yes	See also: <u>C.13</u> – <u>C.17</u> .
SCR 5.2	The value of a dependency attribute shall be an XPATH expression. This XPATH expression shall only reference items in the containing document.	Yes	See also: <u>C.13</u> – <u>C.17</u> .
SCR 5.3	The XPATH expression in a dependency attribute shall not reference configurable elements having a resolve attribute value of dependent or generated .	Yes	See also: <u>C.13</u> – <u>C.17</u> .
SCR 5.4	Any parameters used within all dependent parameter's XPATH id() calls shall exist.	Yes	See also: <u>C.13</u> – <u>C.17</u> .
SCR 5.5	All references to elements in dependency XPATH expressions shall be by id . Dependency XPATH expressions shall not use document navigation to reference other elements.	Yes	This rule allows XPATH expressions to remain valid through schema or design changes. DEs reading IP-XACT documents should treat breaches of this rule as minor errors and attempt to interpret any XPATH expressions in the document. See also: C.13 – C.17.
SCR 5.6	An id attribute is required in any element with a resolve attribute value of user or generated .	Yes	See also: <u>C.13</u> – <u>C.17</u> .
SCR 5.7	configurableElement elements within componentInstance elements shall only reference configurable elements that exist in the component referenced by the enclosing componentInstance element; the value of the referenceId attribute of the configurableElement element shall match the value of the id attribute of some configurable element of the component.	No	The schema guarantees uniqueness of id values in a component . See also: <u>C.13</u> – <u>C.17</u> .
SCR 5.8	configurableElement elements shall only reference configurable elements with a resolve attribute value of user or generated .	No	See also: <u>C.13</u> – <u>C.17</u> .
SCR 5.9	If a configurableElement element references an element with a formatType attribute value of float or long and contains a minimum attribute, the value of the configurableElementValue element shall be greater or equal to the specified value of the minimum attribute.	No	See also: <u>C.13</u> – <u>C.17</u> .
SCR 5.10	If a configurableElement element references an element with a format attribute value of float or long and contains a maximum attribute, the value of the configurableElementValue subelement shall be less than or equal to the specified value of the maximum attribute.	No	See also: <u>C.13</u> – <u>C.17</u> .

Table B.5—Configurable elements (continued)

Rule number	Rule	Single doc check	Notes
SCR 5.11	If a configurableElement element references an element with a choiceRef attribute, the value for configurableElementValue subelement shall be one of the values listed in the choice element referenced by the choiceRef attribute.	No	See also: <u>6.14.2</u> and <u>C.13</u> – <u>C.17</u> .
SCR 5.12	configurableElement elements within generatorChainConfiguration elements in design configuration documents elements shall only reference configurable elements that exist in the generator chain referenced by the generatorChainRef element; the value of the referenceId attribute of the configurableElement element shall match the value of the id attribute of some configurable element of a generator in the generator chain.	No	The schema guarantees uniqueness of id values in a generator chain. See also: 10.3.2.
SCR 5.13	configurableElement elements within abstractor elements in design configuration documents elements shall only reference configurable elements that exist in the abstractor referenced by the enclosing abstractor element; the value of the referenceId attribute of the configurableElement element shall match the value of the id attribute of some configurable element of the abstractor.	No	The schema guarantees uniqueness of id values in an abstractor. See also: 10.4.2.
SCR 5.14	A parameter's value or a configurable element's value shall match the element's format attribute.	See Note.	Yes for a parameter's value and No for a configurable element's value. See also: 7.2, C.13, C.14, C.15, C.16, and C.17.
SCR 5.15	A configurable element shall have a bitString- Length attribute if and only if it has a format attribute with the value bitString .	Yes	See also: <u>C.13</u> , <u>C.14</u> , <u>C.15</u> , <u>C.16</u> , and <u>C.17</u> .

B.2.6 Ports

Table B.6—Ports

Rule number	Rule	Single doc check	Notes
SCR 6.1	The value of the name subelement of any logicalPort element within a busInterface or abstractorInterface element shall match the value of a logicalName element of the abstraction definition referenced by the busInterface element.	No	This implies a bus interface that does not have an abstractionType element shall not contain a portMaps element, since there are no legal names for the logicalPorts within it. See also: <u>6.5.6.2</u> .
SCR 6.2	If the abstraction definition referenced by a bus interface or abstractor interface specifies an initiative value for a logical transactional port of requires for that interface mode of bus interface, the port map shall only map that logical port to a component port with an initiative value of requires, both, or phantom, or to a component port with an allLogicalInitiativesAllowed attribute with the value true. For system interfaces, the port initiative values shall be looked up from the onSystem element with the group name matching that of the bus interfaces or abstractor interfaces. For mirrored interfaces, the bus port initiative values needs to be reversed before doing the comparison.	No	See also: <u>5.11.2</u> , <u>6.5.6.2</u> , and <u>6.11.16.2</u> .
SCR 6.3	If the abstraction bus definition referenced by a bus or abstractor interface specifies an initiative value for a logical transactional port of provides for that interface mode of bus or abstractor interface, the port map shall only map that logical port to a component port with an initiative value of provides , both , or phantom , or to a component port with an allLogicalInitiativesAllowed attribute with the value true . For system interfaces, the port initiative values shall be looked up from the onSystem element with the group name matching that of the bus or abstractor interfaces. For mirrored interfaces, the bus port initiative values shall be reversed before doing the comparison. Mirrored bus and abstractor interface shall be looked up as if they were not mirrored.	No	See also: <u>5.11.2</u> , <u>6.5.6.2</u> , and <u>6.11.16.2</u> .

Table B.6—Ports (continued)

Rule number	Rule	Single doc check	Notes
SCR 6.4	If the abstraction definition referenced by a bus or abstraction interface specifies an initiative value for a logical transactional port of both for that interface mode of the bus or abstraction interface, and the bus interface has a port map, the port map shall only map that logical port to a component port with an initiative value of both or phantom , or to a component port with an allLogical InitiativesAllowed attribute with the value true. For system interfaces, the port initiative values shall be looked up from the onSystem element with the group name matching that of the bus or abstraction interfaces. For mirrored interfaces, the bus port initiative values shall be reversed before doing the comparison. Mirrored bus and abstraction interfaces shall be looked up as if they were not mirrored.	No	See also: <u>5.11.2</u> , <u>6.5.6.2</u> , and <u>6.11.16.2</u> .
SCR 6.5	If the abstraction definition referenced by a bus or abstraction interface specifies a direction for a logical wire port of in for that interface mode of bus interface, the port map shall only map that logical port to a component port with a direction of in , inout , or phantom , or to a component port with an allLogicalDirectionsAllowed attribute with the value true . For system interfaces, the port directions shall be looked up from the onSystem element with the group name matching that of the bus interfaces. For mirrored interfaces, the bus port directions shall be reversed before doing the comparison.	No	See also: <u>5.7.2</u> , <u>6.5.6.2</u> , <u>6.11.4.2</u> , and and <u>8.6.2</u> .
SCR 6.6	If the abstraction definition referenced by a bus or abstraction interface specifies a direction for a logical wire port of out for that interface mode of bus interface, the port map shall only map that logical port to a component port with a direction of out , inout , or phantom , or to a component port with an allLogicalDirectionsAllowed attribute with the value true . For system interfaces, the port directions shall be looked up from the onSystem element with the group name matching that of the bus or abstraction interfaces. For mirrored interfaces, the bus port directions shall be reversed before doing the comparison.	No	See also: <u>5.7.2</u> , <u>6.5.6.2</u> , <u>6.11.4.2</u> , and and <u>8.6.2</u> .

Table B.6—Ports (continued)

Rule number	Rule	Single doc check	Notes
SCR 6.7	If the abstraction definition referenced by a bus or abstraction interface specifies a direction for a logical wire port of inout for that interface mode of bus interface, the port map shall only map that logical port to a component port with a direction of inout or phantom , or to a component port with an allLogicalDirectionsAllowed attribute with the value true . For system interfaces, the port directions shall be looked up from the onSystem element with the group name matching that of the bus or abstraction interfaces. For mirrored interfaces, the bus port directions shall be reversed before doing the comparison.	No	See also: <u>5.7.2</u> , <u>6.5.6.2</u> , <u>6.11.4.2</u> , and and <u>8.6.2</u> .
SCR 6.8	If the abstraction definition referenced by a bus or abstraction interface specifies, for a port, a presence value of required for that interface mode of bus interface, and the bus interface has a port map, the port shall be in that port map. For system interfaces, the port presence shall be looked up from the onSystem element with the group name matching that of the bus interfaces. Mirrored bus interfaces shall be looked up as if they were not mirrored.	No	Port maps are optional, even on buses with required ports. See also SCR 6.18. The third possible presence value (optional) neither forces nor forbids the inclusion of the port in the port map. See also: 5.11.2.
SCR 6.9	Only one component port in a port connection equivalence class may have the direction out .	No	See also: <u>7.3.2</u> and <u>7.5.4</u> .
SCR 6.10	Only one component port in a port connection equivalence class may have the initiative provides .	No	See also: <u>7.3.2</u> and <u>7.5.5</u> .
SCR 6.11	If abstraction definition A extends abstraction definition B, then abstraction definition A needs to have port elements for every port declared in abstraction definition B.	No	If a port in abstraction definition B is not used in bus interfaces using abstraction definition A, then, in abstraction definition A, that port shall have a presence value of illegal for all bus interface modes. See also: 5.3.2 and Table 2.
SCR 6.12	If the abstraction definition referenced by a bus or abstraction interface specifies a port is a wire port (i.e., the port element contains a wire subelement), the port map shall only map that logical port to a wire component port.	No	See also: <u>5.5.2</u> , <u>6.5.6.2</u> , <u>6.11.4.2</u> , and and <u>8.6.2</u> .
SCR 6.13	If the abstraction definition referenced by a bus or abstraction interface specifies a port is a transactional port (i.e., the port element contains a transactional subelement), the port map shall only map that logical port to a transactional component port.	No	See also: <u>5.10.2</u> , <u>6.5.6.2</u> , and <u>6.11.16.2</u> .
SCR 6.14	At most one logical port of a port equivalence class shall be a port of a bus interface that participates in an interconnection to a bus interface using a different abstraction.	No	This rule prevents shared ports from crossing abstraction boundaries, since abstractors cannot describe the handling of such ports. See also: 5.10.2, 7.3.2, and 7.5.2.

Table B.6—Ports (continued)

Rule number	Rule	Single doc check	Notes
SCR 6.15	The value of the group subelement of an onSystem element shall match the value of one of the system group names referenced in the bus definition referenced by the abstraction definition containing the onSystem element.	No	See also: <u>5.5.2</u> and <u>5.10.2</u> .
SCR 6.16	The value of the group subelement of a system element shall match the value of one of the system group names referenced in the bus definition referenced by the bus interface containing the onSystem element.	No	See also: <u>6.5.2.2</u> .
SCR 6.17	If an abstraction definition's busType element references an addressable bus, the abstraction definition shall contain at least one port element with an isAddress subelement.	No	See also: <u>5.2.2</u> , <u>5.6.2</u> , and <u>5.10.2</u> .
SCR 6.18	If the abstraction definition referenced by a bus interface specifies, for a port, a presence value of illegal for that interface mode of bus or abstraction interface, and the bus interface has a port map, the port shall not be in that port map. For system interfaces, the port presence shall be looked up from the onSystem element with the group name matching that of the bus or abstraction interfaces. Mirrored bus and abstraction interfaces shall be looked up as if they were not mirrored.	No	Port maps are optional, even on buses with required ports. See also SCR 6.8. The third possible presence value (optional) neither forces nor forbids the inclusion of the port in the port map. See also: 5.7.2 and 5.11.2.
SCR 6.19	The range of a physicalPort shall be a subset of the range of the referenced port in the component's model element.	Yes	See also: <u>6.5.6.2</u> and <u>B.1.7</u> .
SCR 6.20	Within any portMap , the sizes of the ranges of the physicalPort and the logicalPort shall be equal.	Yes	See also: <u>6.5.6.2</u> .
SCR 6.21	If the abstraction definition port referenced by a logicalPort has a width defined, the upper limit of the range of the logical port shall be less than the width.	No	See also: <u>6.5.6.2</u> .
SCR 6.22	Within a single bus interface no logical bit may be mapped more than once, i.e., if two or more logicalPort elements for that bus interface reference the same bus definition port, their ranges shall not overlap.	Yes	See also: <u>6.5.6.2</u> .
SCR 6.23	If an abstraction definition port has a width defined, any bus interface containing a port map referencing that port needs to map all the bits of that port, i.e., every bit in the range [width-1:0] shall be mapped precisely once in the port maps of that bus interface.	No	This implies if there is only a single logicalPort referencing that bus port, its vector shall be [width-1:0] or [0:width-1]. See also: 6.5.6.2.

Table B.6—Ports (continued)

Rule number	Rule	Single doc check	Notes
SCR 6.24	If a transactional port in a component is mapped in a bus interface to a transactional port in an abstraction definition, then the set of names of serviceTypeDef elements in component port shall match the set of typeNames in the ServiceType element of the abstraction definition's port.	No	See also: <u>6.5.6.2</u> and <u>6.11.16.2</u> .
SCR 6.25	Transactional ports shall only be connected together (by an ad hoc connection or through an interconnection) if neither of them contains a serviceTypeDefs element or they both contain identical serviceTypeDefs elements.	No	See also: <u>6.5.6.2</u> and <u>6.11.16.2</u> .
SCR 6.26	A wire port with a direction of out shall not have a driver element.	Yes	See also: <u>6.11.6.2</u> .
SCR 6.27	All ports referenced in an ad hoc connection shall have the same width, i.e., the absolute sizes of their ranges shall be identical.	No	See also: <u>7.5.4</u> .

B.2.7 Registers

Table B.7—Registers

Rule number	Rule	Single doc check	Notes
SCR 7.1	No register shall have an addressOffset that falls within the address range of another register in the same address block, unless one of the registers and their alternateRegisters have non-conflicting access elements. Non-conflicting access elements have a value of read-only , write-only, or writeOnce. The address range of a register is the range [addressOffset, addressOffset+ ((size + addressBitUnits-1) ÷ addressBitUnits-1) *dim[n-10], where dim is the maximum number of elements for each of n dimensions.	Yes	I.e., registers shall not overlap, unless one is only visible when reading and the other is only visible when writing. See also: 6.10.2.2.
SCR 7.2	No bit field shall have a bitOffset value that falls within the bit range of another bit field, unless one of the registers has an access element with the value read-only and the other has an access element with the value write-only or writeOnce . The range of a bit field is the range [bitOffset, bitOffset + width-1].	Yes	I.e., bit fields shall not overlap, unless one is only visible when reading and the other is only visible when writing. See also: 6.10.2.2 and 6.10.8.2.

Table B.7—Registers (continued)

Rule number	Rule	Single doc check	Notes
SCR 7.3	Any register in an address block shall fall entirely within that address block, i.e., for every register 0 <= addressOffset < addressBlockRange - registerSize; where addressBlockRange is the range of the address block and registerSize is the size of the register in LAUs. This is equal to (((size + addressBitUnits-1) ÷ addressBitUnits))* dim[n-10], where dim is the maximum number of elements for each of n dimensions.	Yes	See also: <u>6.10.2.2</u> .
SCR 7.4	Any bit field in a register shall fall entirely within that register, i.e., for every bit field 0 <= bitOffset <= RegisterSize - bitFieldWidth; where RegisterSize is the size (in bits) of the register, and bitFieldWidth is the width of bit field.	Yes	See also: <u>6.10.2.2</u> and <u>6.10.8.2</u> .
SCR 7.5	The size of any register shall be no greater than the width of the containing address block.	Yes	See also: <u>6.8.6.2</u> .
SCR 7.6	Any register in a register file shall fall entirely within that register file, i.e., for every register 0 <= register.addressOffset < registerFileRange - registerSize, where registerFileRange is the range of the register file and registerSize is the size of the register in LAUs. This is equal to (((size + addressBitUnits-1) ÷ addressBitUnits))* dim[n-10], where dim is the maximum number of elements for each of n dimensions.	Yes	See also: <u>6.10.2</u> , <u>6.10.3</u> , and <u>6.10.6</u> .
SCR 7.7	Any register file in an address block shall fall entirely within that address block, i.e., for every register file 0 <= registerFile.addressOffset < addressBlockRange - registerFileSize, where registerBlockRange is the range of the address block and registerFileSize is the size of the register in LAUs. This is equal to registerFile.range * dim[n-10], where dim is the maximum number of elements for each of n dimensions.	Yes	See also: <u>6.8.2</u> .
SCR 7.8	volatile cannot be set to false for an addressBlock where any containing register or field already has volatile set to true.	Yes	See also: <u>6.10.2</u> , <u>6.10.3</u> , <u>6.10.8</u> , <u>6.10.9</u> , and <u>6.8.3</u> .
SCR 7.9	volatile can not be set to false for a register where any containing field already has volatile set to true.	Yes	See also: <u>6.10.2</u> , <u>6.10.3</u> , <u>6.10.8</u> , and <u>6.10.9</u>
SCR 7.10	When a field has writeValueConstraint/ useEnumeratedValues set to true, it also needs to have at least one enumeratedValue with the attribute usage set to write or read-write.	Yes	See also: <u>6.10.8</u> , <u>6.10.9</u> , and <u>6.10.10</u> .

Table B.7—Registers (continued)

Rule number	Rule	Single doc check	Notes
SCR 7.11	When a field has a writeValueConstraint/minimum value and has a writeValueConstraint/maximum value, the value of maximum shall be greater than or equal to the value of minimum.	Yes	See also: <u>6.10.8</u> , <u>6.10.9</u> , and <u>6.10.10</u> .
SCR 7.12	When multiple field elements have the same typeIdentifier , the field object shall contain the same contents for the elements in fieldDefinitionGroup .	Yes	See also: <u>6.10.8</u> and <u>6.10.9</u> .
SCR 7.13	When multiple register or alternateRegister elements have the same typeIdentifier, the register object shall contain the same contents for the elements in the registerDefinitionGroup or alternateRegisterDefinitionGroup.	Yes	See also: <u>6.10.3</u> and <u>6.10.5</u> .
SCR 7.14	When multiple registerFile elements have the same typeIdentifier , the register file object shall contain the same contents for the elements in the registerFileDefinitionGroup .	Yes	See also: <u>6.10.6</u> .
SCR 7.15	When multiple addressBlock elements have the same typeIdentifier, the address block object shall contain the same contents for the elements in the addressBlockDefinitionGroup.	Yes	See also: <u>6.8.3</u> .

B.2.8 Memory maps

Table B.8—Memory maps

Rule number	Rule	Single doc check	Notes
SCR 8.1	The width of an address block included in a memory map shall be a multiple of the memory map's addressUnitBits.	Yes	See also: <u>6.8.2.2</u> .
SCR 8.2	Neither a parallel bank, nor banks within a parallel bank, shall contain subspace maps.	Yes	See also: <u>6.8.5.2</u> , <u>6.8.7.2</u> , and <u>6.8.8.2</u> .
SCR 8.3	A read-only bank shall only contain read-only addressBlocks or banks.	Yes	See also: <u>6.8.4.2</u> and <u>6.10.2.2</u> .
SCR 8.4	A read-only addressBlock shall only contain read-only registers.	Yes	See also: <u>6.8.4.2</u> and <u>6.10.2.2</u> .
SCR 8.5	A read-only register shall only contain read-only fields.	Yes	See also: <u>6.10.2.2</u> .
SCR 8.6	A write-only bank shall only contain write-only or writeOnce addressBlocks or banks.	Yes	See also: <u>6.8.4.2</u> and <u>6.10.2.2</u> .
SCR 8.7	A write-only addressBlock shall only contain write-only or writeOnce registers.	Yes	See also: <u>6.8.4.2</u> and <u>6.10.2.2</u> .

Table B.8—Memory maps (continued)

Rule number	Rule	Single doc check	Notes
SCR 8.8	A write-only register shall only contain write-only or writeOnce fields.	Yes	See also: <u>6.10.2.2</u> .
SCR 8.9	A register shall only appear in an addressBlock of usage register.	Yes	See also: <u>6.8.4.2</u> and <u>6.10.2.2</u> .
SCR 8.10	A read-writeOnce bank shall only contain read- only, read-writeOnce, or writeOnce addressBlocks or banks.	Yes	See also: <u>6.8.4.2</u> and <u>6.10.2.2</u> .
SCR 8.11	A read-writeOnce addressBlock shall only contain read-only, read-writeOnce, or writeOnce registers.	Yes	See also: <u>6.8.4.2</u> and <u>6.10.2.2</u> .
SCR 8.12	A read-writeOnce register shall only contain read-only, read-writeOnce, or writeOnce fields.	Yes	See also: <u>6.10.2.2</u> .
SCR 8.13	A writeOnce bank shall only contain writeOnce addressBlocks or banks.	Yes	See also: <u>6.8.4.2</u> and <u>6.10.2.2</u> .
SCR 8.14	A writeOnce addressBlock shall only contain writeOnce registers.	Yes	See also: <u>6.8.4.2</u> and <u>6.10.2.2</u> .
SCR 8.15	A writeOnce register shall only contain writeOnce fields.	Yes	See also: <u>6.10.2.2</u> .
SCR 8.16	Two addressBlock elements in the same memoryMap shall not overlap.	Yes	See also: <u>6.8.2.2</u> .

B.2.9 Addressing

Table B.9—Addressing

Rule number	Rule	Single doc check	Notes
SCR 9.1	A non-hierarchical addressable master bus interface shall have an addressSpaceRef subelement.	No	Since there are potentially useful applications of IP-XACT that do not require addressing information, failure to obey this rule should be treated as a warning rather than an error. See also: <u>5.6.2</u> and <u>6.5.3</u> .
SCR 9.2	A non-hierarchical addressable slave bus interface shall have a memoryMapRef subelement or one or more bridge subelements referencing addressable master bus interfaces.	No	Since there are potentially useful applications of IP-XACT that do not require addressing information, failure to obey this rule should be treated as a warning rather than an error. See also: 5.6.2 and 6.5.4.2.
SCR 9.3	Only an address space referenced by the addressSpaceRef subelement of a cpu element may contain an exectutableImage subelement.	No	See also: <u>6.7.1.2</u> and <u>6.7.3.2</u> .

Table B.9—Addressing (continued)

Rule number	Rule	Single doc check	Notes
SCR 9.4	bitSteering is not allowed in mirrored-masters, system, or mirrored-system interface modes.	Yes	See also: <u>6.5.1.2</u> .
SCR 9.5	Data widths in a channel shall all be a power 2 multiple of their bitsInLau .	Yes	See also: <u>6.5.1.2</u> .
SCR 9.6	bitsInLau in a channel shall all be a power 2 multiple of the smallest bitsInLau.	Yes	See also: <u>6.5.1.2</u> .
SCR 9.7	If a languageTools element contains a linkerFlags element or a linkerCommandFile element, it shall also contain a linker element.	Yes	See also: <u>6.7.4.2</u> .
SCR 9.8	For each segment within an addressSpace , everything between offsetAddress and offsetAddress + range shall be contained within the range of that addressSpace .	Yes	See also: <u>6.7.1.2</u> and <u>6.7.2.2</u> .
SCR 9.9	The segmentRef needs to reference an existing segment of the addressSpace in the master referenced by the masterRef .	Yes	See also: <u>6.8.9.2</u> .

B.2.10 Hierarchy

Table B.10—Hierarchy

Rule number	Rule	Single doc check	Notes
SCR 10.1	All members of a hierarchical family of bus interfaces shall reference the same busDefinition in their busType subelements.	No	They need not reference the same abstraction definitions in their abstractionType elements. See also: 7.6.2.
SCR 10.2	All members of a hierarchical family of bus interfaces shall have the same interface mode (master, slave, system, etc.).	No	See also: <u>7.6.2</u> .
SCR 10.3	If any member of a hierarchical family of bus interfaces has a connectionRequired element with a value of true , they all shall have this value.	No	See also: <u>7.6.2</u> .
SCR 10.4	If any member of a hierarchical family of bus interfaces has a bitSteering element with a value of true , they all shall have this value.	No	See also: <u>7.6.2</u> .
SCR 10.5	If any member of a hierarchical family of bus interfaces has a portMap subelement, they all shall.	No	See also: <u>7.6.2</u> .
SCR 10.6	If any two bus interfaces in a hierarchical family of bus interfaces reference the same abstraction definitions, their portMaps shall also reference the same set of logical ports.	No	See also: <u>7.6.2</u> .

Table B.10—Hierarchy (continued)

Rule number	Rule	Single doc check	Notes
SCR 10.7	In a hierarchical family of bus interfaces, all ports in the portMap s referencing the same bus port shall map the same set of bits from that logical port.	No	See also: <u>7.6.2</u> .
SCR 10.8	In a hierarchical family of bus interfaces, the physicalPort/name of all ports in the portMap referencing the same logical port shall reference ports with the same direction.	No	See also: <u>7.6.2</u> .
SCR 10.9	In a hierarchical family of bus interfaces, if the component ports referenced by the physicalPort/name of all ports in the portMaps referencing the same logical port have default values, they shall have identical default values.	No	I.e., it is legal for any descriptions of a port to have default values, but those that have default values shall have identical default values. See also: 7.6.2.
SCR 10.10	In a hierarchical family of bus interfaces, the physicalPort/name of all ports in the portMap referencing the logical bus port shall reference ports with identical clockDriver subelements.	No	See also: <u>7.6.2</u> .
SCR 10.11	In a hierarchical family of bus interfaces, the physicalPort/name of all ports in the portMap referencing the same logical port shall reference ports with identical singleShotDriver subelements.	No	See also: <u>7.6.2</u> .
SCR 10.12	In a hierarchical family of bus interfaces, the physicalPort/name of all ports in the portMap referencing the same logical port shall reference ports with identical portConstraintSets subelements.	No	See also: <u>7.6.2</u> .

B.2.11 Hierarchy and memory maps

Table B.11—Hierarchy and memory maps

Rule number	Rule	Single doc check	Notes
SCR 11.1	In a hierarchical family of slave or mirrored- master bus interfaces, all bus interfaces that define addressing information shall define the same set of addresses to be visible.	No	I.e., if one member of the family defines an address as a valid address accessible through that bus interface, all members of the family that define addressing information shall define that same address as a valid address accessible through that bus interface. See also: 7.6.2.
SCR 11.2	For any member of a hierarchical family of slave or mirrored-master bus interfaces, if an address resolves to reference a location outside the containing hierarchical family of components, that address shall reference the same location (i.e., the same address on the same bus) in every member of the hierarchical family that defines addressing information.	No	I.e., if $\mathbb C$ is a hierarchical component and the IP-XACT description of $\mathbb C$ itself or some design of $\mathbb C$ specifies accessing address $\mathbb A$ of $\mathbb C$ on bus interface $\mathbb I$ results in an access to address $\mathbb A$ of $\mathbb C$, all designs of $\mathbb C$ that specify addressing on $\mathbb I$ shall indicate the same about this address. See also: 7.6.2.
SCR 11.3	If any bit address (i.e., address plus bit offset) is resolved to a bit within an address block by any member of a hierarchical family of slave bus interfaces, all members of that family with addressing information shall resolve that bit address to a bit with identical behavioral properties.	No	If an address resolves to a location within the hierarchical family of components, its only observable features from outside the hierarchical family are its behavioral properties (except as defined in SCR 11.4). See also: 7.6.2.
SCR 11.4	When any two addresses resolve to the same location in the addressing information of any member of a hierarchical family of bus interfaces, this shall be true for all members of the hierarchical family of bus interfaces that have addressing information.	No	I.e., aliasing of addresses shall be preserved. Aliasing is observable from outside the hierarchical family. See also: 7.6.2.

B.2.12 Constraints

Table B.12—Constraints

Rule number	Rule	Single doc check	Notes
SCR 12.1	A component wire port with direction out shall not have a drive constraint.	Yes	See also: <u>6.11.11.2</u> .
SCR 12.2	A component wire port with a direction in shall not have a load constraint.	Yes	See also: <u>6.11.12.2</u> .

Table B.12—Constraints (continued)

Rule number	Rule	Single doc check	Notes
SCR 12.3	An onMaster , onSlave , or onSystem element of a wire port with direction out shall not contain a drive constraint within its modeConstraint element.	Yes	See also: <u>6.11.11.2</u> .
SCR 12.4	An onMaster , onSlave , or onSystem element of a wire port with direction in shall not contain a load constraint within its modeConstraint element.	Yes	See also: <u>6.11.12.2</u> .
SCR 12.5	An onMaster , onSlave , or onSystem element of a wire port with direction out shall not contain a load constraint within its mirroredModeConstraint element.	Yes	See also: <u>6.11.12.2</u> .
SCR 12.6	An onMaster , onSlave , or onSystem element of a wire port with direction in shall not contain a drive constraint with its mirroredModeConstraint element.	Yes	See also: <u>6.11.11.2</u> .
SCR 12.7	The clockName in a timing constraint of a component port shall be the name of another component port of the component or an otherClockDriver of the component.	Yes	See also: <u>6.11.13.2</u> .
SCR 12.8	The clockName in a timing constraint of a port within an abstraction definition shall be the name of another port of the abstraction definition; that referenced port shall have an isClock subelement.	Yes	See also: <u>5.6.2</u> and <u>6.11.13.2</u> .
SCR 12.9	The value of any clockPeriod element shall be greater than 0.	Yes	See also: <u>6.11.7.2</u> .
SCR 12.10	The value of any clockPulseValue element shall be 0 or 1.	Yes	See also: <u>6.11.7.2</u> .
SCR 12.11	The value of any singleShotDuration element shall be greater than 0.	Yes	See also: <u>6.11.8.2</u> .
SCR 12.12	The value of any singleShotValue element shall be 0 or 1.	Yes	See also: <u>6.11.8.2</u> .
SCR 12.13	Only a scalar port (i.e., a single-bit port) may have a clockDriver or a singleShotDriver subelement.	Yes	See also: <u>6.11.6.2</u> .
SCR 12.14	A whiteboxElementRef, which references a whiteboxElement with a whiteboxType of pin, shall have a pathName that is a port in the containing description.	Yes	See also: <u>6.16</u> .
SCR 12.15	A whiteboxElementRef, which references a whiteboxElement with a whiteboxType of register, shall have a pathName that is a register in the containing description.	Yes	See also: <u>6.16</u> .

B.2.13 Design configurations

Table B.13—Design configurations

Rule number	Rule	Single doc check	Notes
SCR 13.1	The value of an instanceName within a viewConfiguration shall match the value of the instanceName element of a componentInstance of the design document referenced by the design configuration document containing the viewConfiguration element.	No	See also: <u>10.2.2</u> .
SCR 13.2	The value of an viewName within a viewConfiguration shall match the value of the name element of a view within the component referenced by the component instance that is itself referenced by the instanceName subelement of the viewConfiguration element.	No	See also: <u>10.2.2</u> .
SCR 13.3	No two interconnectionConfiguration elements within a design configuration shall have the same interconnectionRef value.	Yes	See also: <u>10.4.2</u> .
SCR 13.4	No two viewConfiguration elements within a design configuration shall reference the same view. i.e., no two viewConfiguration elements may have the same instanceName .	Yes	See also: <u>10.2.2</u> .
SCR 13.5	No two abstractor elements within a design configuration shall have the same instanceName element values.	Yes	Also unique to the component instance names in the referenced design. See also: <u>10.4.2</u> .
SCR 13.6	No two generatorChainConfiguration elements within the same design configuration shall reference the same generator chain through their generatorChainRef elements.	Yes	See also: <u>10.3.2</u> .

B.2.14 Rules requiring external knowledge

Table B.14—Rules requiring external knowledge

Rule number	Rule	Single doc check	Notes
SCR 14.1	The name subelement of a file element can contain environment variables in the form of \${ENV_VAR} that are meaningful to the host operating system and, when expanded, shall result in a string that is a valid URI.	Yes	See also: <u>6.13.2.2</u> .
SCR 14.2	In VLNVs, the vendor name shall be specified as the top-level Internet domain name for that organization. The domain shall be ordered with the top-level domain name at the end (as in HTTP URLs), e.g., mentor.com, arm.com.	Yes	This is to guarantee uniqueness of vendor names. See also: <u>C.6.2</u> and <u>C.6.4</u> .
SCR 14.3	The envIdentifier of a view shall be a text string consisting of three fields delimited by colons (:). The first two fields shall be a language name, which shall be one of the languages available for fileTypes , and a tool name. The tool name may be generic (e.g., *Simulation or *Synthesis) or a specific tool name, such as DesignCompiler® or VCS®. The third field shall be an arbitrary vendor-specific text string.	Yes	Tool vendors need to publish a list of valid tool names in The SPIRIT Consortium Web site. See also: 6.11.2.2.

^aDesign Compiler and VCS are registered trademarks of Synopsys, Inc. This information is given for the convenience of users of this standard and does not constitute an endorsement by the IEEE of these products. Equivalent products may be used if they can be shown to lead to the same results.

Annex C

(normative)


Common elements and concepts

This annex details common elements and concepts that appear many times throughout the standard.

C.1 nameGroup group

C.1.1 Schema

The following schema details the information contained in the *nameGroup* group.

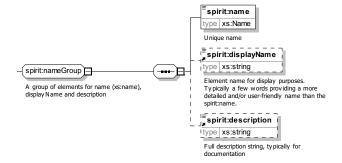

C.1.2 Description


The *nameGroup* group defines any descriptive text for the containing element. The *nameGroup* group definition contains the following elements.

- a) **name** (mandatory) identifies the containing element. The **name** element is of type *Name*.
- b) **displayName** (optional) allows a short descriptive text to be associated with the containing element. The **displayName** element is of type *string*.
- c) **description** (optional) allows a textual description of the containing element. The **description** element is of type *string*.

C.2 nameGroupOptional group

C.2.1 Schema

The following schema details the information contained in the *nameGroupOptional* group.

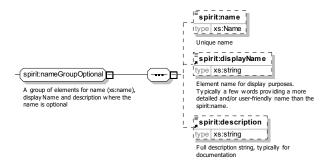

C.2.2 Description


The *nameGroupOptional* group defines any descriptive text for the containing element. The *nameGroupOptional* group definition contains the following elements.

- a) name (optional) identifies the containing element. The name element is of type *Name*.
- b) **displayName** (optional) allows a short descriptive text to be associated with the containing element. The **displayName** element is of type *string*.
- description (optional) allows a textual description of the containing element. The description element is of type string.

C.3 nameGroupPort group

C.3.1 Schema

The following schema details the information contained in the *nameGroupPort* group.

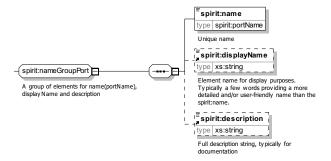

C.3.2 Description


The *nameGroupPort* group defines any descriptive text for the containing element. The *nameGroupPort* group definition contains the following elements.

- a) **name** (mandatory) identifies the containing element. The **name** element is of type *portName*.
- b) **displayName** (optional) allows a short descriptive text to be associated with the containing element. The **displayName** element is of type *string*.
- description (optional) allows a textual description of the containing element. The description element is of type string.

C.4 nameGroupNMTOKEN group

C.4.1 Schema

The following schema details the information contained in the *nameGroupNMTOKEN* group.

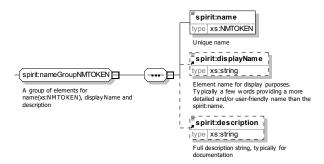

C.4.2 Description


The *nameGroupNMTOKEN* group defines any descriptive text for the containing element. The *nameGroupNMTOKEN* group definition contains the following elements.

- a) name (mandatory) identifies the containing element. The name used shall match the corresponding port name found in any views of the containing component. The name element is of type NMTOKEN.
- b) **displayName** (optional) allows a short descriptive text to be associated with the containing element. The **displayName** element is of type *string*.
- c) **description** (optional) allows a textual description of the containing element. The **description** element is of type *string*.

C.5 nameGroupString group

C.5.1 Schema

The following schema details the information contained in the *nameGroupString* group.

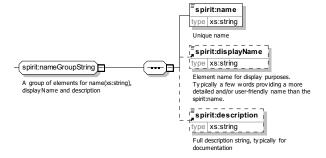

C.5.2 Description


The *nameGroupString* group defines any descriptive text for the containing element. The *nameGroupString* group definition contains the following elements.

- a) name (mandatory) identifies the containing element. The name element is of type *string*.
- b) **displayName** (optional) allows a short descriptive text to be associated with the containing element. The **displayName** element is of type *string*.
- description (optional) allows a textual description of the containing element. The description element is of type string.

C.6 versionedIdentifier group

C.6.1 Schema

The following schema details the information contained in the *versionedIdentifier* group.

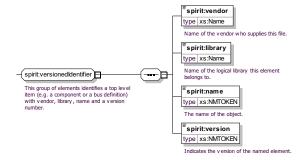

C.6.2 Description

The *versionedIdentifier* group defines a unique reference of or from an IP-XACT description. Only one object with a given VLNV may be present in a DE at any given time. The timing and way to change the VLNV of an object is completely up to the user or developer. The *versionedIdentifier* group definition contains the following four subelements.

- a) **vendor** (mandatory) identifies the owner of this description. The format of the **vendor** element is the company internet domain name in left-to-right order (e.g., spiritconsortium.org not org.spiritconsortium). The **vendor** element is of type *Name*.
- b) **library** (mandatory) identifies the library of this description. This allows a vendor to group descriptions. The **library** element is of type *Name*.
- c) **name** (mandatory) identifies the name of this description within a library. The **name** element is of type *NMTOKEN*.
- d) version (mandatory) identifies the version of this description. This allows a vendor to provide many descriptions that all have the same name, but are still uniquely identified. The version may appear as an alphanumeric string and contain a set of substrings, with non-alphanumeric delimiters inbetween. Each IP supplier shall have their own cataloguing system for setting version numbers. The version element is of type NMTOKEN.

See also: <u>SCR 1.1</u>, <u>SCR 1.2</u>, and <u>SCR 14.2</u>.

C.6.3 Sorting and comparing version elements

Sorting and comparing version elements determines whether:

- an IP is a component that has been previously imported;
- multiple versions of the same IP exist in a design;
- a newer version of an IP exists.

To sort and compare **version** elements, subdivide the version number into major fields and subfields. Major fields may be separated by a non-alphanumeric delimiter such as :, ., -, _, etc. Each major field can be compared to determine equivalence and broken down further into subfields if necessary.

C.6.3.1 Comparison rules

- a) Each **version** element is broken into its major fields, which are separated using the appropriate delimiter (e.g., : or .).
- b) Major fields are compared against each other from left to right.
- c) Subfields, within each major field, need to be examined if the major fields are alphanumeric. Each major field shall have alphabetical and numerical subfields that are separated from right to left.
- d) To summarize the rules for the comparison of each subfield in a major field:
 - 1) Numeric—Compare the integer values of numeric subfields.
 - 2) Alphabetic
 - i) String—Perform a simple string comparison.
 - ii) Case—Ignore alphabetic case (e.g., a and A are the same).

It is possible for different representations of version numbers to be considered equal. For example, under these rules, A1 and A01 are equal, since numerical subfields are compared numerically, and A.B equals A_B , since delimiters are not compared.

C.6.3.2 Comparison examples

The following examples illustrate the sorting and comparing of a version elements.

Example 1

The first case uses: 205:75WR16 and 215:50HR15.

- a) Each of these version numbers break down into the following two major fields, separated by the : delimiter: 205 75WR16 and 215 50HR15.
- b) Major fields are compared against each other from left to right. In this example, the first major fields (205 and 215) differ between the VLNV strings and the comparison ends there. This case is also simplified since the first major field is an integer (i.e., numeric).
- c) Subfields, within each major field, need to be examined if the major fields are alphanumeric. Each major field shall have alphabetical and numerical subfields that are separated from right to left.

Example 2

In the next case, two VLNV have the same first major field, and their second major subfields need to be compared: e.g., 205:45R16 and 205:55R15.

a) The first major field (205) is the same between these two VLNV, so the second major field is checked. These second major fields are broken down into the following alphabetic and numeric subfields: 45 R 16 and 55 R 15.

b) The subfields are compared from left to right. The first (and in this case only) comparison is 45 versus 55, so these subfields are not equal. The major fields are not equivalent.

C.6.4 Version control

Each file conforming to the top-level schema has a set of VLNV elements that, when considered together, form a unique identifier (a *version control number*) for the information contained in that XML document. The VLNV of any IP-XACT information is not the same as the version of the file that might contain that information.

NOTE—An XML file might be revised in a way that does not materially affect the IP-XACT information content. For example, copyright notices are updated, comments are added, and environment variable names used as part of the filenames might be changed (but still point to the same files). These changes may not necessitate changing the VLNV.

Many developers of IP libraries use a version control system to track updates and changes to the various files that contribute to the overall design and IP package information. At any time, individual files may be modified and updated as development of that design or IP progresses. At appropriate junctures, releases are made, each consisting of a particular combination of files at different levels of a version.


An IP-XACT description is one of the files that can be very usefully tracked in this way and updated in line with other design modifications. There is no direct link between the version number of the file and the VLNV identifier contained in that description. In many cases, however, the VLNV can be coordinated with the overall release package version.

See also: <u>SCR 1.1</u>, <u>SCR 1.2</u>, and <u>SCR 14.2</u>.

C.7 libraryRefType

C.7.1 Schema

The following schema details the information contained in the *libraryRefType* type.

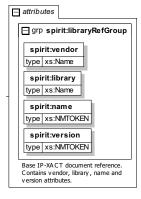

C.7.2 Description


The *libraryRefType* type defines a set of four attributes that reference another IP-XACT description through the unique VLNV identifier.

- a) The **vendor** attribute (mandatory) identifies the owner of the referenced description. This attribute is of type *Name*.
- b) The **library** attribute (mandatory) identifies the library of the referenced description. This attribute is of type *Name*.
- c) The **name** attribute (mandatory) identifies the name of the referenced description. This attribute is of type *NMTOKEN*.
- d) The **version** attribute (mandatory) identifies the version of the referenced description. This attribute is of type *NMTOKEN*.

C.8 fileSetRef

C.8.1 Schema

The following schema details the information contained in the **fileSetRef** element.

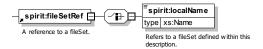

C.8.2 Description


The **fileSetRef** element defines a reference to a **fileSet** contained in the containing document. The **fileSetRef** element contains the following element.

localName (mandatory) shall contain a name of a **fileSet/name** within the local description. **localName** is of type *Name*.

C.9 fileType

C.9.1 Schema

The following schema details the information contained in the *fileType* type.

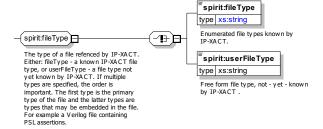

C.9.2 Description


The *fileType* type defines the format of a referenced file. The *fileType* group contains one or more of the following two elements.

- a) **fileType** (mandatory) describes the type of file referenced from this enumerated list of industry standard files types.
 - 1) unknown
 - 2) asmSource, cSource, cppSource, eSource, OVASource, perlSource, pslSource, SVASource, tclSource, veraSource, systemCSource, systemCSource-2.0, systemCSource-2.1, systemCSource-2.2, systemVerilogSource, systemVerilogSource-3.1, systemVerilogSource-3.1a, verilogSource, verilogSource-95, verilogSource-2001, vhdlSource, vhdlSource-87, and vhdlSource-93
 - 3) swObject and swObjectLibrary
 - 4) vhdlBinaryLibrary and verilogBinaryLibrary
 - 5) executableHdl and unelaboratedHdl
 - 6) **SDC**
- b) **userFileType** (mandatory) describes any other file type that can not be described from the list for **fileType**. The **userFileType** element is of type *string*.

C.10 vendorExtensions

C.10.1 Schema

The following schema details the information contained in the **vendorExtensions** element.

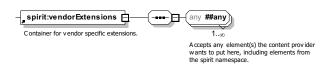


C.10.2 Description

The **vendorExtensions** element is a place in the description in which any vendor specific information can be stored. The **vendorExtensions** element allows any well-formed description.

C.11 parameters

C.11.1 Schema

The following schema details the information contained in the **parameters** element.

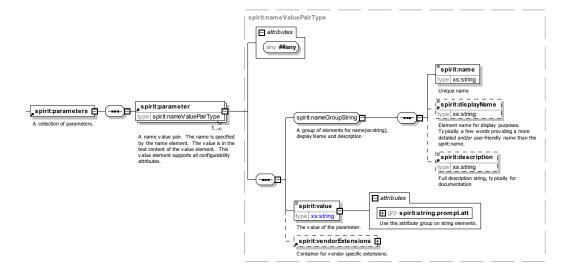

C.11.2 Description

The **parameters** element contains an unbounded list of **parameter** elements. **parameter** (mandatory) defines a configurable element related to the containing element. The parameter definition allows for the assignment of a name and a value. The **parameter** element also allows for vendor attributes to be applied. The **parameter** element definition contains the following elements.

- a) *nameGroupString* is defined in <u>C.1</u>.
- b) **value** (mandatory) contains the actual value of the **parameter**. The **value** element is of type *string*. The **value** element is configurable with attributes from *string.prompt.att*, see <u>C.12</u>.
- vendorExtensions (optional) adds any extra vendor-specific data related to the parameter. See C.10.

C.12 Configuration

Some elements in a component, abstractor, or generator chain description are defined as being configurable. This means that the value of the element can be set differently for each use of the description, which allows a single description to be used in many different ways.

The same method is used to configure elements in a component, abstractor, or generator chain. The configuration is done via a reference to an **id** attribute in the configured element. Any element in a component, abstractor, or generator chain description with an **id** attribute is configurable. The **id** attribute is always contained inside an attribute group. This group provides other attributes that specify how the element may be configured, e.g., from a choice list or free-form text. This group also defines the type of values for setting the element, e.g., **integer**, **float**, or **string**. There are five different attribute groups defined for four different types of configurable elements:

- a) <u>bool.prompt.att</u>, see <u>C.13</u>.
- b) <u>float.prompt.att</u>, see <u>C.14</u>.
- c) <u>long.prompt.att</u> or <u>long.att</u>, see <u>C.15</u> or <u>C.16</u>, respectively.
- d) <u>string.prompt.att</u>, see <u>C.17</u>.


The location of the configuration values differs based on the description being configured. A component description is configured via the design description, see <u>Clause 7</u>. When the component instance is

referenced in the design description, a **configurableElementValue** element may be specified to configure any elements for this instance, see <u>7.2</u>. An abstractor or generator chain description is configured via the design configuration description, see <u>10.2</u>. A design configuration description may contain an **interconnectionConfiguration** element or a **generatorChainConfiguration** element, each of which may contain a **configurableElementValue** element used to configure an abstractor or generator chain, respectively.

C.13 bool.prompt.att

C.13.1 Schema

The following schema details the information contained in the *bool.prompt.att* attribute group.

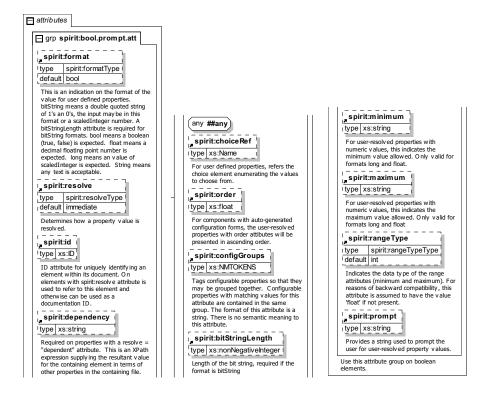

C.13.2 Description

The *bool.prompt.att* attribute group defines a set of attributes to be applied to the containing element. The *bool.prompt.att* attribute group contains the following attributes.

- a) **format** (optional) is the input and storage type for the configurable elements and, optionally, the output type for **modelParameters**. The value shall be one from of the following.
 - 1) **bitString** indicates the input or storage shall be in the format of a double quoted string of 1's and 0's or a *scaledInteger* number. The output shall be a bit string in the format specified by the language, e.g., VHDL = "1010" or Verilog = 4'b1010.
 - 2) **bool** (the default) indicates the input or storage shall be one of **true** or **false**. The output shall be a **boolean** type as specified by the language.


- 3) **float** indicates the input or storage shall a decimal floating point number. The output shall be a decimal floating point number.
- 4) **long** indicates the input shall be a *scaledInteger* number. The storage shall be in a format compatible with the containing element and the output shall be a decimal integer number.
- 5) **string** indicates the input and storage shall contain any characters. The output shall be a string in the format as specified by the language.
- b) **resolve** (optional) defines how the value for the containing element is configured. The value shall be one of the following.
 - 1) immediate (the default) indicates the value shall be specified in the containing element.
 - 2) **user** indicates the value shall be specified by user input and the new value stored in a design or design configuration description under the **configurableElement** element.
 - 3) **dependent** indicates the value shall be defined by an XPATH equation (see <u>Annex E</u>) defined in the **dependency** attribute. The **dependency** attribute requires the **resolve** attribute to be equal to **dependent**.
 - 4) **generated** indicates the value shall be set by a generator and the new value stored in a design or design configuration description under the **configurableElement** element.
- c) id (optional) assigns a unique identifier to the containing element for reference throughout the containing description. The id attribute is required if the element has a resolve type equal to user, generated, or is referenced in a dependency equation. This id is referenced in two ways. The first reference is by the configurableElement in a design or design configuration description. The second is in a dependency attribute XPATH equation. The id attribute if of type ID.
- d) **dependency** (optional) is an XPATH 1.0 equation (see <u>Annex E</u>) for the value of the containing element. The **resolve** attribute shall be equal to **dependent**. The **dependency** attribute is of type *string*.
- e) ##any (optional) indicates any additional attributes in any namespace are allowed in the containing element. These additional attributes are called *vendor attributes*.
- f) **choiceRef** (optional) indicates the value of the containing element is defined in the referenced **choice** element. The **choiceRef** attribute is of type *Name*.
- g) **order** (optional) indicates how elements are presented, when **resolve** equals **user**. The elements are presented in ascending order. The **order** attribute is of type *float*.
- h) **configGroups** (optional) indicates a name to group elements together; elements with matching values for this attribute are contained in the same group. There is no semantic meaning to this attribute. The **configGroups** attribute is of type *NMTOKENS*.
- i) **bitStringLength** (optional) indicates the length of the bit string. The **format** attribute shall be equal to **bitString**. The **bitStringLength** attribute is of type *nonNegativeInteger*.
- j) **minimum** (optional) indicates the lower bound for the value of the containing element. This check is only valid for a format of **bitString**, **float**, or **long**. The **rangeType** attribute shall specify the type of the **minimum** attribute. The **minimum** attribute is of type *string*.
- k) maximum (optional) indicates the upper bound for the value of the containing element. This check is only valid for a format of bitString, float, or long. The rangeType attribute shall specify the type of the maximum attribute. The maximum attribute is of type string.
- 1) rangeType (optional) indicates the range for the minimum and maximum attributes. The value shall be one from the enumerated list of float (the default), int, unsigned int, long, or unsigned long. float indicates a floating point number, int or long indicates a scaledInteger, and unsigned int or unsigned long indicates a scaledNonNegativeInteger.
- m) **prompt** (optional) defines a prompt string that a DE can use if the **resolve** attribute is equal to **user**. The **prompt** attribute is of type *string*.

See also: SCRs in <u>Table B.5</u>.

C.14 float.prompt.att

C.14.1 Schema

The following schema details the information contained in the *float.prompt.att* attribute group.

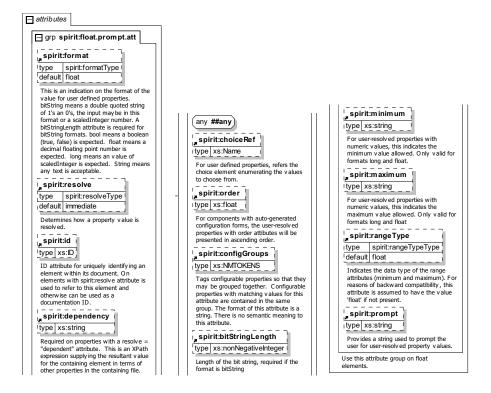

C.14.2 Description

The *float.prompt.att* attribute group defines a set of attributes to be applied to the containing element. The *float.prompt.att* attribute group contains the following attributes.

- a) **format** (optional) is the input and storage type for the configurable elements and, optionally, the output type for **modelParameters**. The value shall be one from of the following.
 - 1) **bitString** indicates the input or storage shall be in the format of a double quoted string of 1's and 0's or a *scaledInteger* number. The output shall be a bit string in the format specified by the language, e.g., VHDL = "1010" or Verilog = 4'b1010.
 - 2) **bool** indicates the input or storage shall be one of **true** or **false**. The output shall be a **boolean** type as specified by the language.
 - 3) **float** (the default) indicates the input or storage shall a decimal floating point number. The output shall be a decimal floating point number.
 - 4) **long** indicates the input shall be a *scaledInteger* number. The storage shall be in a format compatible with the containing element, and the output shall be a decimal integer number.
 - 5) **string** indicates the input and storage shall contain any characters. The output shall be a string in the format as specified by the language.
- b) **resolve** (optional) defines how the value for the containing element is configured. The value shall be one from the enumerated list of **immediate**, **user**, **dependent**, or **generated**.


- 1) immediate (the default) indicates the value shall be specified in the containing element.
- 2) **user** indicates the value shall be specified by user input and the new value stored in a design or design configuration description under the **configurableElement** element.
- 3) **dependent** indicates the value shall be defined by an XPATH equation (see <u>Annex E</u>) defined in the **dependency** attribute. The **dependency** attribute requires the **resolve** attribute to be equal to **dependent**.
- 4) **generated** indicates the value shall be set by a generator and the new value stored in a design or design configuration description under the **configurableElement** element.
- c) id (optional) assigns a unique identifier to the containing element for reference throughout the containing description. The id attribute is required if the element has a resolve type equal to user, generated, or is referenced in a dependency equation. This id is referenced in two ways. The first reference is by the configurableElement in a design or design configuration description. The second is in a dependency attribute XPATH equation. The id attribute if of type ID.
- d) **dependency** (optional) is an XPATH 1.0 equation (see Annex E) for the value of the containing element. The **resolve** attribute shall be equal to **dependent**. The **dependency** attribute is of type *string*.
- e) ##any (optional) indicates any additional attributes in any namespace are allowed in the containing element. These additional attributes are called *vendor attributes*.
- f) **choiceRef** (optional) indicates the value of the containing element is defined in the referenced **choice** element. The **choiceRef** attribute is of type *Name*.
- g) **order** (optional) indicates how elements are presented, when **resolve** equals **user**. The elements are presented in ascending order. The **order** attribute is of type *float*.
- h) **configGroups** (optional) indicates a name to group elements together; elements with matching values for this attribute are contained in the same group. There is no semantic meaning to this attribute. The **configGroups** attribute is of type *NMTOKENS*.
- bitStringLength (optional) indicates the length of the bit string. This attribute is required if the format attribute is equal to bitString. The bitStringLength attribute is of type nonNegativeInteger.
- j) **minimum** (optional) indicates the lower bound for the value of the containing element. This check is only valid for a format of **bitString**, **float**, or **long**. The **rangeType** attribute shall specify the type of the **minimum** attribute. The **minimum** attribute is of type *string*.
- k) **maximum** (optional) indicates the upper bound for the value of the containing element. This check is only valid for a format of **bitString**, **float**, or **long**. The **rangeType** attribute shall specify the type of the **maximum** attribute. The **maximum** attribute is of type *string*.
- 1) rangeType (optional) indicates the range for the minimum and maximum attributes. The value shall be one from the enumerated list of float (the default), int, unsigned int, long, or unsigned long. float indicates a floating point number, int or long indicates a scaledInteger, and unsigned int or unsigned long indicates a scaledNonNegativeInteger.
- m) **prompt** (optional) defines a prompt string that a DE can use if the **resolve** attribute is equal to **user**. The **prompt** attribute is of type *string*.

See also: SCRs in <u>Table B.5</u>.

C.15 long.prompt.att

C.15.1 Schema

The following schema details the information contained in the *long.prompt.att* attribute group.

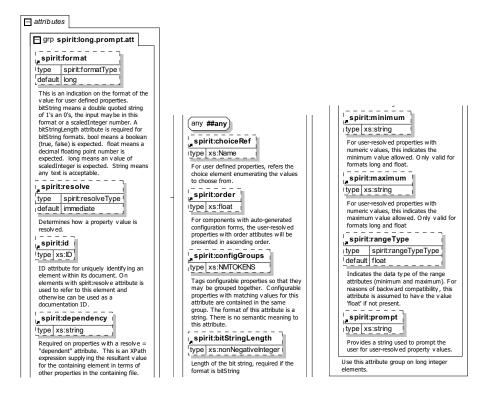

C.15.2 Description

The *long.prompt.att* attribute group defines a set of attributes to be applied to the containing element. The *long.prompt.att* attribute group contains the following attributes.

- a) **format** (optional) is the input and storage type for the configurable elements and, optionally, the output type for **modelParameters**. The value shall be one from of the following.
 - 1) **bitString** indicates the input or storage shall be in the format of a double quoted string of 1's and 0's or a *scaledInteger* number. The output shall be a bit string in the format specified by the language, e.g., VHDL = "1010" or Verilog = 4'b1010.
 - bool indicates the input or storage shall be one of **true** or **false**. The output shall be a **boolean** type as specified by the language.
 - 3) **float** indicates the input or storage shall a decimal floating point number. The output shall be a decimal floating point number.
 - 4) **long** (the default) indicates the input shall be a *scaledInteger* number. The storage shall be in a format compatible with the containing element and the output shall be a decimal integer number.
 - string indicates the input and storage shall contain any characters. The output shall be a string in the format as specified by the language.
- b) **resolve** (optional) defines how the value for the containing element is configured. The value shall be one from the enumerated list of **immediate**, **user**, **dependent**, or **generated**.
 - 1) **immediate** (the default) indicates the value shall be specified in the containing element.
 - 2) **user** indicates the value shall be specified by user input and the new value stored in a design or design configuration description under the **configurableElement** element.


- dependent indicates the value shall be defined by an XPATH equation (see Annex E) defined in the dependency attribute. The dependency attribute requires the resolve attribute to be equal to dependent.
- 4) **generated** indicates the value shall be set by a generator and the new value stored in a design or design configuration description under the **configurableElement** element.
- c) id (optional) assigns a unique identifier to the containing element for reference throughout the containing description. The id attribute is required if the element has a resolve type equal to user, generated or is referenced in a dependency equation. This id is referenced in two ways. The first reference is by the configurableElement in a design or design configuration description. The second is in a dependency attribute XPATH equation. The id attribute if of type ID.
- d) **dependency** (optional) is an XPATH 1.0 equation (see Annex E) for the value of the containing element. The **resolve** attribute shall be equal to **dependent**. The **dependency** attribute is of type *string*.
- e) ##any (optional) indicates any additional attributes in any namespace are allowed in the containing element. These additional attributes are called *vendor attributes*.
- f) **choiceRef** (optional) indicates the value of the containing element is defined in the referenced **choice** element. The **choiceRef** attribute is of type *Name*.
- g) **order** (optional) indicates how elements are presented, when **resolve** equals **user**. The elements are presented in ascending order. The **order** attribute is of type *float*.
- h) **configGroups** (optional) indicates a name to group elements together; elements with matching values for this attribute are contained in the same group. There is no semantic meaning to this attribute. The **configGroups** attribute is of type *NMTOKENS*.
- i) **bitStringLength** (optional) indicates the length of the bit string. This attribute is required if the **format** attribute is equal to **bitString**. The **bitStringLength** attribute is of type **nonNegativeInteger**.
- j) **minimum** (optional) indicates the lower bound for the value of the containing element. This check is only valid for a format of **bitString**, **float**, or **long**. The **rangeType** attribute shall specify the type of the **minimum** attribute. The **minimum** attribute is of type *string*.
- k) **maximum** (optional) indicates the upper bound for the value of the containing element. This check is only valid for a format of **bitString**, **float**, or **long**. The **rangeType** attribute shall specify the type of the **maximum** attribute. The **maximum** attribute is of type *string*.
- l) **rangeType** (optional) indicates the range for the **minimum** and **maximum** attributes. The value shall be one from the enumerated list of **float** (the default), **int**, **unsigned int**, **long**, or **unsigned long**. **float** indicates a floating point number, **int** or **long** indicates a *scaledInteger*, and **unsigned int** or **unsigned long** indicates a *scaledNonNegativeInteger*.
- m) **prompt** (optional) defines a prompt string that a DE can use if the **resolve** attribute is equal to **user**. The **prompt** attribute is of type *string*.

See also: SCRs in Table B.5.

C.16 long.att

C.16.1 Schema

The following schema details the information contained in the *long.att* attribute group.

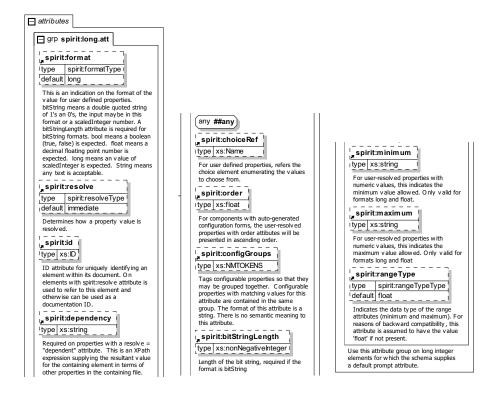

C.16.2 Description


The *long.att* attribute group defines a set of attributes to be applied to the containing element. The *long.att* attribute group contains all the same attributes as the *long.prompt.att* attribute group, except for the **prompt** attribute. See C.15.

See also: SCRs in Table B.5.

C.17 string.prompt.att

C.17.1 Schema

The following schema details the information contained in the *string.prompt.att* attribute group.

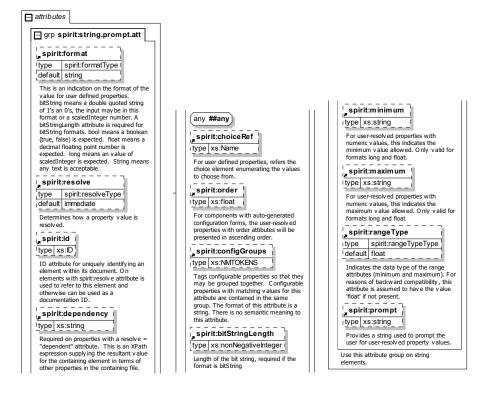

C.17.2 Description

The *string.prompt.att* attribute group defines a set of attributes to be applied to the containing element. The *string.prompt.att* attribute group contains the following attributes.

- a) format (optional) is the input and storage type for the configurable elements and, optionally, the output type for modelParameters. The value shall be one from of the following.
 - 1) bitString indicates the input or storage shall be in the format of a double quoted string of 1's and 0's or a *scaledInteger* number. The output shall be a bit string in the format specified by the language, e.g., VHDL = "1010" or Verilog = 4'b1010.
 - 2) **bool** indicates the input or storage shall be one of **true** or **false**. The output shall be a **boolean** type as specified by the language.
 - 3) **float** indicates the input or storage shall a decimal floating point number. The output shall be a decimal floating point number.
 - 4) **long** indicates the input shall be a *scaledInteger* number. The storage shall be in a format compatible with the containing element and the output shall be a decimal integer number.
 - 5) **string** (the default) indicates the input and storage shall contain any characters. The output shall be a string in the format as specified by the language.
- b) **resolve** (optional) defines how the value for the containing element is configured. The value shall be one from the enumerated list of **immediate**, **user**, **dependent**, or **generated**.
 - 1) **immediate** (the default) indicates the value shall be specified in the containing element.
 - user indicates the value shall be specified by user input and the new value stored in a design or design configuration description under the configurableElement element.
 - 3) **dependent** indicates the value shall be defined by an XPATH equation (see <u>Annex E</u>) defined in the **dependency** attribute. The **dependency** attribute requires the **resolve** attribute to be equal to **dependent**.

- 4) **generated** indicates the value shall be set by a generator and the new value stored in a design or design configuration description under the **configurableElement** element.
- c) id (optional) assigns a unique identifier to the containing element for reference throughout the containing description. The id attribute is required if the element has a resolve type equal to user, generated, or is referenced in a dependency equation. This id is referenced in two ways. The first reference is by the configurableElement in a design or design configuration description. The second is in a dependency attribute XPATH equation. The id attribute if of type ID.
- d) **dependency** (optional) is an XPATH 1.0 equation (see <u>Annex E</u>) for the value of the containing element. The **resolve** attribute shall be equal to **dependent**. The **dependency** attribute is of type *string*.
- e) ##any (optional) indicates any additional attributes in any namespace are allowed in the containing element. These additional attributes are called *vendor attributes*.
- f) **choiceRef** (optional) indicates the value of the containing element is defined in the referenced **choice** element. The **choiceRef** attribute is of type *Name*.
- g) **order** (optional) indicates how elements are presented, when **resolve** equals **user**. The elements are presented in ascending order. The **order** attribute is of type *float*.
- h) **configGroups** (optional) indicates a name to group elements together; elements with matching values for this attribute are contained in the same group. There is no semantic meaning to this attribute. The **configGroups** attribute is of type *NMTOKENS*.
- i) **bitStringLength** (optional) indicates the length of the bit string. This is required if the **format** attribute is equal to **bitString**. The **bitStringLength** attribute is of type **nonNegativeInteger**.
- j) **minimum** (optional) indicates the lower bound for the value of the containing element. This check is only valid for a format of **bitString**, **float**, or **long**. The **rangeType** attribute shall specify the type of the **minimum** attribute. The **minimum** attribute is of type *string*.
- k) **maximum** (optional) indicates the upper bound for the value of the containing element. This check is only valid for a format of **bitString**, **float**, or **long**. The **rangeType** attribute shall specify the type of the **maximum** attribute. The **maximum** attribute is of type *string*.
- 1) rangeType (optional) indicates the range for the minimum and maximum attributes. The value shall be one from the enumerated list of float (the default), int, unsigned int, long, or unsigned long. float indicates a floating point number, int or long indicates a scaledInteger, and unsigned int or unsigned long indicates a scaledNonNegativeInteger.
- m) **prompt** (optional) defines a prompt string that a DE can use if the **resolve** attribute is equal to **user**. The **prompt** attribute is of type *string*.

See also: SCRs in Table B.5.

Annex D

(normative)

Types

Many elements and attributes defined in the standard have associated types. These types define the legal values and ranges for input into these element and attributes.

D.1 boolean

The **boolean** type defines two possible values, **true** and **false**.

D.2 configurableDouble

The **configurableDouble** type defines a decimal floating point number based on the IEEE single-precision 64-bit floating point type (see IEEE Std 754-1985 [B2]).

D.3 float

The **float** type defines a decimal floating point number based on the IEEE single-precision 32-bit floating point type (see IEEE Std 754-1985 [B2]).

D.4 ID or IDREF

The **ID** or **IDREF** type defines a unique identifier through the containing description. It needs to begin with a letter or underscore (_). An **ID** or **IDREF** shall only contain letters, numbers, and the underscore (_), dash (-), and dot (.) characters. Any leading or trailing spaces are removed.

D.5 instancePath

The **instancePath** type defines a series of **Name** type character strings, see <u>D.8</u>, separated by a slash (/). Any leading or trailing space is removed.

D.6 integer

The integer type defines a decimal integer number of infinite precision, containing the numbers 0–9.

D.7 libraryRefType

The **libraryRefType** type is an element type, not a data type. This type defines the four attributes of a VLNV required for a reference from one description to another description. See <u>C.7</u>.

D.8 Name

The Name type defines a series of any characters, excluding embedded whitespace. It needs to begin with a letter, colon (:), or underscore (_). A Name shall only contain letters, numbers, and the colon (:), underscore (_), dash (-), and dot (.) characters. Any leading or trailing spaces are removed.

D.9 NMTOKEN

The **NMTOKEN** type defines a series of any characters, excluding embedded whitespace. It shall only contain letters, numbers, and the colon (:), underscore (_), dash (-), and dot (.) characters. Any leading or trailing spaces are removed.

D.10 NMTOKENS

The **NMTOKENS** type defines a series of any characters, including embedded whitespace. It shall only contain letters, numbers, and the colon (:), underscore (), dash (-), and dot (.) characters.

D.11 nonNegativeInteger

The **nonNegativeInteger** type is a subtype of **integer**; it follows all the same rules, except its value shall be greater than or equal to 0.

D.12 portName

The **portName** type defines a series of any characters, excluding embedded whitespace. It shall only contain letters, numbers, and the colon (:), underscore (_), dash (-), and dot (.) characters. It also needs to begin with a letter, colon (:), or underscore (_). Any leading or trailing spaces are removed.

D.13 positiveInteger

The **positiveInteger** type is a subtype of **integer**; it follows all the same rules, except its value shall be greater than 0.

D.14 scaledInteger

The **scaledInteger** type defines an integer of infinite precision. The number may be in any of the follow formats with or without a leading +/- indication.

- a) Decimal containing numbers 0-9.
- b) Hexadecimal representation starting with $0 \times \text{ or } \#$, and containing the numbers 0-9 and letters A-F (case-insensitive).
- c) Optionally, the number may end with the following case-insensitive suffixes. Each suffix is a multiplier of the resulting value.
 - 1) K is a multiplier of 1024.
 - 2) M is a multiplier of 1024×1024 .

- 3) G is a multiplier of $1024 \times 1024 \times 1024$.
- 4) T is a multiplier of $1024 \times 1024 \times 1024 \times 1024$.

Example: 4K evaluates to 4096. 0x1000 evaluates to 4096.

D.15 scaledNonNegativeInteger

The **scaledNonNegativeInteger** type is a subtype of **scaledInteger**; it follows all the same rules, except its value shall be greater than or equal to 0.

D.16 scaledPositiveInteger

The **scaledPositiveInteger** type is a subtype of **scaledInteger**; it follows all the same rules, except its value shall be greater than 0.

D.17 SpiritURI

The **SpiritURI** type defines a string of characters for an absolute or relative path to a file, a directory, or an executable in URI format (xs:anyURI), except it can contain environment variables in the \${ENV_VAR} form, which are replaced by their value(s) to provide the underlying URI.

D.18 string

The **string** type defines a series of any characters and may include spaces.

D.19 token

The **token** type defines a series of any characters, excluding carriage-return, line-feed, and tab. Any leading or trailing spaces are removed and all internal sequences of two or more spaces are reduced to one space.



Annex E

(normative)

Dependency XPATH

This standard utilizes XPATH 1.0 as a means to specify an equation for the contents of a resolvable element. This is done by setting the **resolve** attribute to resolve="dependent". When the **resolve** attribute is set to dependent, a **dependency** attribute is required.

The accuracy of the XPATH numeric functions shall be of infinite precision and are not limited to any fixed number of bits. This is necessary to ensure all systems are interoperable and the large calculations required by the configuration of IP-XACT components are successful.

In addition to the standard XPATH 1.0 functions, IP-XACT also defines the following functions to aid expressions calculations.

E.1 id

```
id(string)
```

The **id** function returns the value of the element with an attribute of **id** that matches the input *string*. This function has been modified from the standard XPATH definition to return the value applied to the element at the time of evaluation; this is the configured value of the element from the design description (see <u>G.4</u>).

E.2 spirit:containsToken

```
spirit:containsToken(string1, string2)
spirit:containsToken(node, stringx)
```

The **containsToken** function (boolean) returns *true* if *string1* contains *string2* as a token (or *node* contains *stringx* as a token) and otherwise returns *false*. To be interpreted as a token, *string2* needs to be found within *string1* (or *stringx* needs to be found within *node*) and be separated by whitespace from any other characters in the *string1* (or *node*) that are not whitespace characters.

containsToken only uses the configured value while executing its function.

Purpose: Some attributes in IP-XACT are a list of tokens separated by whitespace. This function allows XPATH selection based on whether the attribute contains a specific token.

Example: spirit:containsToken('default spine driver', 'pin') evaluates to *false*, whereas the standard XPATH function **contains** would evaluate to *true* with the same arguments.

E.3 spirit:decode

```
spirit:decode(string)
spirit:decode(node)
```

The **decode** function (number) decodes the string (or node) argument to a number and returns the number or NaN [if the string (or node) cannot be decoded]. If the string (or node) argument is a decimal formatted number, it is returned unchanged. If it is a hexadecimal representation starting with $0 \times$ or #, it is converted to a decimal number and returned. If it is in engineering notation ending in a k, m, g, or t suffix (case-insensitive), the numeric part is multiplied by the appropriate power of two. K is a multiplier of $1024 \times 1024 \times$

Purpose: IP-XACT allows numbers to be expressed in hexadecimal format and engineering format. When setting up dependencies on configurable values, it is sometimes necessary to perform some arithmetic in the dependency XPATH expression. However, XPATH only supports arithmetic on numbers and it only recognizes decimal strings as numbers. This function allows the alternate formats to be converted to numbers recognizable by XPATH.

Example: spirit:decode('0x4000') evaluates to 16384. spirit:decode('4G') evaluates to 4294967296.

E.4 spirit:pow

```
spirit:pow(number, number)
spirit:pow(number, node)
spirit:pow(node, number)
spirit:pow(node, node)
```

The **pow** function (number) returns a number (or node), which is the first argument raised to the power of the second argument.

Purpose: It is common for a component to have a configurable number of address bits. When this happens, the size of the address range it occupies on a memory map varies exponentially with the number of address bits. This function gives XPATH the mathematical capabilities needed to describe this relationship in a dependency expression.

Example: spirit:pow(2, 10) evaluates to 1024.

E.5 spirit:log

```
spirit:log(number, number)
spirit:log(number, node)
spirit:log(node, number)
spirit:log(node, node)
```

The **log** function (number) returns a number (or node), which is the log of the second argument in the base of the first argument.

Purpose: This is the inverse of **pow** function. It is intended to express the reverse of the dependency described for the **pow** function. In this case, the range of an address block might be configurable and the number of address bits might be expressed as a dependency of the address range using the log function.

Example: spirit:log(2, 1024) evaluates to 10.

E.6 Dependency example

This is a example of using **resolve=dependent**.

```
<spirit:memoryMaps>
 <spirit:memoryMap>
   <spirit:name>mmap</spirit:name>
   <spirit:addressBlock>
      <spirit:name>ab1</spirit:name>
     <spirit:baseAddress spirit:resolve="user" spirit:id="baseAddr">0/
   spirit:baseAddress>
<spirit:range spirit:id="range">786K</spirit:range>
     <spirit:width>32</spirit:width>
      <spirit:usage>memory</spirit:usage>
     <spirit:access>read-write</spirit:access>
   </spirit:addressBlock>
 </spirit:memoryMap>
 <spirit:memoryMap>
    <spirit:name>dependent mmap</spirit:name>
   <spirit:addressBlock>
<!-- The baseAddress in this memoryMap is dependent on the previous memory map
   and the formula to compute the baseAddress from the baseAddress of previous
   map is expressed as an XPATH expression -->
      <spirit:baseAddress spirit:resolve="dependent"</pre>
   spirit:dependency="spirit:pow(2, floor(spirit:log(2,
   spirit:decode(id('baseAddr'))+ spirit:decode(id('range')))+1))"
   spirit:id="dependentBaseAddress">0</spirit:baseAddress>
<spirit:range>4096</spirit:range>
      <spirit:width>32</spirit:width>
      <spirit:usage>register</spirit:usage>
      <spirit:access>read-write</spirit:access>
    </spirit:addressBlock>
 </spirit:memoryMap>
```



Annex F

(informative)

External bus with an internal/digital interface

While the current use of IP-XACT schema may be viewed as describing single chip implementations, the schemas works equally well at the package- and board-level. Often a PHY component exists that interconnects the internal and external bus. Some interface standards define both of these interfaces, some define only the internal, and some define only the external. A common point of confusion is to use an external bus standard as an interface on an internal component. This is legal if the component caries the full PHY implementation, but this often makes the component very technology- or implementation-dependant.

F.1 Example: ethernet interfaces

An Ethernet bus might be described as more than a single wire, and in a system that includes Ethernet buses, it might also include all the interfaces shown in <u>Figure F.1</u>.

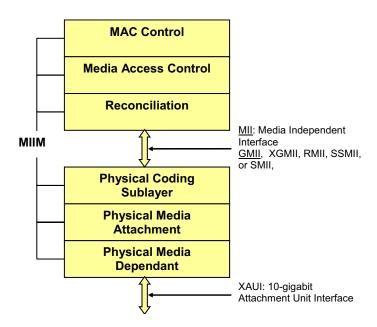


Figure F.1—Ethernet interface examples

XAUI: 10-gigabit Attachment Unit Interface

MII: Media Independent Interface

GMII: Gigabit Media Independent Interface **XGMII**: 10-gigabit media-independent interface

RMII: Reduced MII, 7-pin interface **SSMII**: Source Synchronous MII

SMII: Serial Media Independent Interface, this provides an interface to Ethernet MAC. The SMII provides the same interface as the MII, but with a reduced pin-out. The reduction in ports is

achieved by multiplexing data and control information to a port transmit port and a single receive port.

F.2 Example: I²C bus

The I^2C bus is a two-wire bus with a clock and data line. The standard described bus is the two-wire bus. IP-XACT has defined an additional, related bus that is the internal digital interface. The internal digital interface shown in Figure F.2 contains three pins for each external pin: for SDA (the data line), the internal pins are defined as input, output, and enable as SDA_I, SDA_O, and SDA_E; in a similar manner, for the clock bus SCL, the internal pins are defined again for the functions of input, output, and enable as SCL_I, SCL_O, and SCL_E.

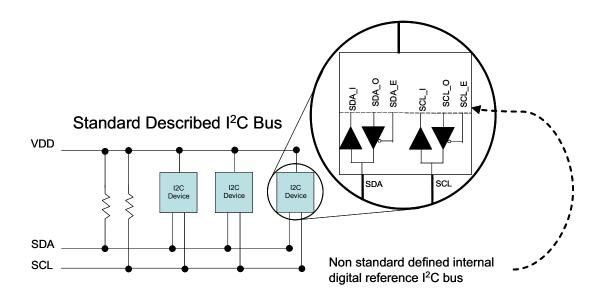


Figure F.2—I²C interface example

Annex G

(normative)

Tight generator interface

IP-XACT generators are tools that are invoked from within a DE to perform an operation required by the user of the DE. For example, generators can be provided to verify the configuration of a subsystem, generate an address map, or write a netlist representation of the subsystem in a target language such as Verilog or SystemC. To perform their various operations, most generators need access to the IP-XACT meta-data describing the subsystem, as currently loaded into the DE. Generators need both read- and write-access to the IP-XACT meta-data. All generators are external applications running in a separate address space from the DE.

The TGI defines how the DE and generator cooperate to achieve the desired end-goal of the user of the DE. The TGI defines the method of communication between the DE and generator, the method for invoking the generator, and the actual application programming interface (API) that can be used to read and write the IP-XACT meta-data stored in the DE. <u>G.1</u>, <u>G.2</u>, and <u>G.3</u> describe each of these three aspects of the TGI, respectively.

G.1 Method of communication

The DE and the generator communicate with each other by sending messages to each other utilizing the SOAP standard. SOAP provides a simple means for sending XML-format messages using HTTP or other transport protocols. The TGI restricts the set of allowed transport protocols to HTTP and a file-based protocol. All generators are required to support the HTTP protocol, but support for the file-based protocol is optional. The same rules apply to the DE—it shall support the use of the HTTP protocol, but is not required to support the file-based protocol, even though a generator may allow it. The protocols supported by a generator are specified using the **transportMethod** element within the **componentGenerator** element.

The information required to use a particular transport protocol shall be passed to the generator by the DE when it is invoked, as described in <u>G.2</u>. For the HTTP protocol, the generator is passed a URL of the form http://host_name:port_number. All SOAP messages sent to the DE shall be sent using the referenced URL. For the file-based protocol, the generator is passed a URL of the form file://file_name. In this case, all SOAP messages are written to the specified file.

Each DE and generator is responsible for setting itself up to communicate using SOAP with the appropriate transport protocol. For example, a generator written in Tcl might include the Tcl SOAP package to enable SOAP functionality. Once the communication channel is set up, the generator can read and write the IP-XACT meta-data using any legal SOAP message. The set of legal SOAP messages defines the API portion of the TGI (see <u>G.7</u>).

G.2 Generator invocation

All of the information known by the DE about a particular generator comes from an instance of the **componentGenerator** (see $\underline{6.12}$), **abstractorGenerator** (see $\underline{8.7}$), or **generator** (see $\underline{9.4}$) elements. These elements provides the following information.

- a) **name** is the name of the generator as seen within the DE.
- b) **executable** is the URL defining the location of the generator.

- c) parameters is a list of name/value pairs defining information to be passed to the generator.
- d) **apiType** indicates the generator type: **TGI** or **none** (no communication).
- e) transportMethods show any transport mechanisms supported (in addition to HTTP).
- f) **phase** (not relevant to the TGI).
- g) **vendorExtensions** (not relevant to the TGI).
- h) **group** (not relevant to the TGI).

G.2.1 Resolving the URL

The URL defining the generator executable shall resolve to one of the following forms.

- file:path_to_executable (e.g., file:/usr/jdoe/bin/mygen.pl or file:../bin/mygen.pl) defines the path for invoking the generator on the machine from which the DE was invoked.
- file://machine_name/path_to_executable (e.g., file://server1/tmp/othergen.pl) defines the path for invoking a generator on the specified machine.
- http://web_address:port_number (e.g., http://www.acme.com/generator:1500) defines the URL of a generator implemented as a Web-based server.

All *file references* are relative to the location of the XML description in which the file reference is contained.

For the file-based generators, the DE shall invoke the generator as a sub-process with a command line built up as:

```
executable -url transport URL generator parameter arguments
```

The <code>generator_parameter_arguments</code> are the parameters from the <code>componentGenerator</code> element with the user-specified values. Each parameter causes two additional arguments to be passed to the generator with the following format: <code>-parameter_name parameter_value</code>. The <code>transport_URL</code> is created by the DE, but is guaranteed to specify a protocol supported by the generator as defined by the transport methods within the <code>componentGenerator</code>. The DE is responsible for ensuring any passed parameters can be interpreted correctly. This URL is to be used in the generator to set up the SOAP communication channel.

For Web-based generators, the DE shall send a message to the address and port defined as the executable. The format of this message is

```
url=transport_URL&generator_parameter_arguments
```

In this case, the generator parameters are formatted using the standard HTTP parameter passing syntax. The specified transport URL shall be used by the generator for any return messages to the DE.

The invocation syntax described above applies only to generators with an API type of **TGI**. Generators with an API type of **none** are invoked as described above, excluding the **transport_URL** argument.

G.2.2 Example

This example shows file-based and Web-based componentGenerator elements.

produces the following output.

```
path_to _XML/../bin/myGenerator -url http://host:port -param1 default1
    -param2 fixedValue
```

Whereas:

produces the following output.

```
\label{lem:http://www.acme.com:1500?url=http%3a%2f%2fhost%3aport&param1=default1 &param2=fixedValue
```

G.3 TGI API

The TGI API defines the set of legal SOAP messages that can be sent from a generator to a DE, along with the format of the responses the generator can expect from a given request (message) to the DE. The API shall provide the means of getting and setting values within the IP-XACT design currently represented in the DE. The API commands can be classified as shown in <u>Table G.1</u>.

Table G.1—TGI API classifications

Category	Description	Example
Get	Commands which get attribute or element values. These commands are available for getting all information from the design and component schemas. If the attribute or element does not exist, this may return a default value, an empty string, or an empty array.	Get port width.
Set	Commands which set element values. These commands are available to set each element for which the resolve attribute is legal. Setting the value of the element fails unless the resolve value is user or generator . Set routines return a Boolean value where a <i>true</i> return code implies a successful operation. If false is returned, the SOAP fault code shall provide additional information detailing the failure.	Get parameter value.
Traversal	Commands that return a list of elements, which can then be traversed for further manipulation.	Get components in a design.
Administrative	Commands that do not deal directly with the IP-XACT meta-data.	Terminate communication.

The complete set of API commands is defined using WSDL so that it can be defined in a language-independent format.

G.3.1 TGI fault codes

The fault codes for TGI failures are as follows:

- 1 Unknown (undefined) error
- 2 Illegal element ID
- 3 Illegal value(s)
- 4 Element is not modifiable (incompatible **resolve** value)
- 5 Operation not supported by the DE
- 6 Operation not supported in this version of the schema
- 7 Operation failed

G.3.2 Administrative commands

There are three administrative commands defined in the API.

- a) Init is the required first message from the generator to the DE. It tells the DE that the generator has properly connected via SOAP.
 - 1) Input
 - apiVersion of type string—Indicates the API version for which the generator is defined to work.
 - ii) **failureMode** of type *apiFailureMode*—Compatibility failure mode

fail indicates the DE shall return an error on the init call if its API version does not match the one passed to the init call;

error indicates the DE shall return an error each time a potentially incompatible API call is made:

warning indicates the DE shall increment a warning count each time a potentially incompatible API call is made.

- iii) **message** of type *string*—Message that the DE may display to the user.
- 2) Returns: **status** of type **boolean**.
- b) **End** is the required last message from the generator to the DE. It tells the DE it is okay to stop listening for messages from the generator. This includes a generator return status, although the generator is not strictly required to terminate after sending the message.
- c) Message indicates some form of generator status to pass to the user.

G.4 IDs and configurable values

Most TGI calls take an element identifier that acts as a handle or pointer to the element and are referred to as *ID*s. These IDs allow a single TGI command to operate on many different ID types to produce a result. One such example is **getDescription**(*ID*), which takes any ID type as input and returns its description if that ID contains a description element. When an ID is passed to a TGI routine that returns an element's value, the configured value (component) is always returned. If the unconfigured value (design) is desired (the default), **getUnconfiguredID** can be used to translate the ID into an unconfigured identifier, which is referred to as a *UID*. The configured and unconfigured values may be the same. The only time the values are different is when the unconfigured (default) value is overridden via a **configureElementValue** from the design file.

The TGI API presumes the data stored in the design description to configure an element that has a **resolve** attribute value of **user** or **generated** is applied to the component instance by the DE. This enables the TGI author to simply ask for the value of an element on a given component instance and retrieve the correct answer. The setting of an element works similarly. When an element is set on a component instance, the value of this element is ultimately stored in the design description.

The design configuration description is handled in the same manner as the configurable elements as in the design description. The settings in the design configuration description are applied to the elements in the referenced design description or the containing component instances. Therefore, there are no TGI functions to retrieve the design configuration information directly; the TGI author can find this information applied to the correct element in the design or component instance. For example, the configured view of a component instance is accessed using the normal **getComponentViewIDs** with a Boolean argument set to indicate the configured view (specified in the design configuration description) should be returned.

IDs returned by TGI commands are guaranteed to be persistent for the duration of a single generator invocation provided the element being referenced is not removed. For example, if an ID represents an address space element, that ID can be utilized as often as is needed during a single generator invocation, unless the component containing the address map is removed by calling **removeComponentInstance()**.

G.5 TGI messages

The TGI is a set of messages used to query and modify an IP-XACT compliant database. The TGI messages are composed of a SOAP envelope and a TGI body. The TGI services are specified in the TGI.wsdl file. Each TGI body message is an XML element whose name is the name of the TGI command and whose elements are the arguments of the TGI command. All TGI messages apply to IP-XACT XML elements, identified by an ID, i.e., a TGI server-defined constant uniquely identifying an IP-XACT XML element throughout a TGI server session.

G.6 Vendor attributes

One case of special interest to a user may be the location of vendor attributes in the schema. These attributes are allowed in more places in the schema than the TGI allows a user to retrieve them. This goes back to the concept where one function uses many different ID types to return some data. In the case of vendor attributes, these can only be accessed if the containing element has an ID.

G.7 TGI SOAP messages

G.7.1 TGI SOAP message index

Abstraction definition operations

- <u>getAbstractionDefBusTypeVLNV</u> Get VLNV of the bus definition.
- <u>getAbstractionDefExtends</u> VLNV of the abstraction definition being extended.
- <u>getAbstractionDefID</u> ID for the abstraction definition with the given VLNV.
- <u>getAbstractionDefPortDefaultValue</u> Default value for port when not connected.
- <u>getAbstractionDefPortDriveConstraintIDs</u> List of drive constraint IDs of the port.
- <u>getAbstractionDefPortIDs</u> List of abstraction definition port element IDs.
- <u>getAbstractionDefPortIsAddress</u> Is this port an address port.

- <u>getAbstractionDefPortIsClock</u> Is this port a clock port.
- <u>getAbstractionDefPortIsData</u> Is this port a data port.
- <u>getAbstractionDefPortIsReset</u> Is this port a reset port.
- <u>getAbstractionDefPortLoadConstraintIDs</u> List of load constraint IDs of the port.
- <u>getAbstractionDefPortLogicalName</u> Logical name of this abstraction definition port.
- <u>getAbstractionDefPortMirroredConstraintIDs</u> List of constraint IDs for a mirrored port.
- <u>getAbstractionDefPortModeBitWidth</u> Bit width constraint when present on an interface of the given type.
- <u>getAbstractionDefPortModeDirection</u> Port direction constraint when present on an interface of the given type.
- <u>getAbstractionDefPortModeGroup</u> Group name when present on a system interface.
- <u>getAbstractionDefPortModeIDs</u> Returns an array of IDs for accessing the given port in the given interface mode. The array shall only contain one element if the modeValue input is master or slave. The array may contain multiple elements for modeValue system.
- <u>getAbstractionDefPortModePresence</u> Existence requirement for this port on an interface of the given type.
- <u>getAbstractionDefPortModeServiceID</u> AbstractionDef service ID on a transactional port.
- <u>getAbstractionDefPortNonMirroredConstraintIDs</u> List of constraint IDs for a non-mirrored port.
- <u>getAbstractionDefPortRequiredDriverType</u> Required driver type for this port.
- <u>getAbstractionDefPortRequiresDriver</u> Does this port require a driver.
- <u>getAbstractionDefPortStyle</u> Returns wire or transactional to indicate the port style.
- <u>getAbstractionDefPortTimingConstraintIDs</u> List of timing constraint IDs of the port.
- <u>getAbstractionDefVLNV</u> VLNV of the abstraction definition.

Abstractor instance operations

- <u>getAbstractorInstanceAbstractorID</u> ID for the abstractor associated with given instance (crossing from design configuration to abstractor file).
- <u>getAbstractorInstanceName</u> Instance name of the abstractor.
- <u>getAbstractorInstanceVLNV</u> VLNV of the abstractor (from the design file).
- <u>getAbstractorInstanceXML</u> Return the abstractor XML in text format. Schema version is DE dependent.

Abstractor operations

- <u>getAbstractorAbstractorInterfaceIDs</u> List of two interface IDs.
- <u>getAbstractorAbstractorMode</u> Get the mode that the abstractor can be master, slave, direct, or system.
- <u>getAbstractorBusTypeVLNV</u> List of VLNV of the bus definition.
- <u>getAbstractorChoiceIDs</u> List of choices IDs.
- <u>getAbstractorFileSetIDs</u> List of file set IDs.
- <u>getAbstractorGeneratorIDs</u> List of generator IDs of the abstractor.
- <u>getAbstractorModelParameterIDs</u> A list of model parameter IDs.
- getAbstractorPortIDs A list of abstractor model port IDs.
- <u>getAbstractorViewIDs</u> A list of model view IDs.

Address map operations

- <u>getAddressBlockAccess</u> The accessibility of the data in the local address block.
- <u>getAddressBlockBaseAddress</u> The base address of an address block.

- <u>getAddressBlockRange</u> The address range of an address block expressed as the number of accessible and addressable units.
- <u>getAddressBlockRegisterFileIDs</u> The IDs of the available register files in the address block.
- <u>getAddressBlockRegisterIDs</u> The IDs of the available registers in the address block.
- <u>getAddressBlockUsage</u> Indicates the usage of this address block.
- <u>getAddressBlockVolatility</u> Indicates whether or not the data is volatile.
- <u>getAddressBlockWidth</u> The bit width of an address block in the local memory map.
- <u>getAddressSpaceAddressUnitBits</u> The number bits in an addressable unit. If none exists, the default 8 bits is returned.
- <u>getAddressSpaceLocalMemoryMapID</u> The ID for the local memory map of the address space.
- <u>getAddressSpaceRange</u> The address range of an address block expressed as the number of accessable and addressable units.
- <u>getAddressSpaceSegmentIDs</u> List of IDs for address block segments for the address space.
- <u>getAddressSpaceWidth</u> The bit width of an address block.
- <u>getBankAccess</u> The accessibility of the data in the local address bank.
- <u>getBankAlignment</u> The bank alignment value, serial or parallel.
- <u>getBankBaseAddress</u> The base address of an address bank.
- <u>getBankUsage</u> Indicates the usage of this address bank.
- getBankVolatility Indicates whether or not the data is volatile.
- <u>getExecutableImageFileBuilderIDs</u> List of default file builder IDs of the executable image.
- <u>getExecutableImageFileSetIDs</u> The group of file set reference IDs complying with the tool set of the current executable image.
- <u>getExecutableImageIDs</u> The IDs of the executable images belonging to the specified address space.
- <u>getExecutableImageLinkerCommand</u> The linker command for the current executable image.
- <u>getExecutableImageLinkerCommandFileID</u> Element ID of linkerCommandFile associated with given executable image.
- <u>getExecutableImageLinkerFlags</u> The flags of the current executable image linker command.
- <u>getExecutableImageType</u> The type of the executable image if existent.
- <u>getLinkerCommandFileEnable</u> Indicates whether or not to generate and enable the linker command file
- <u>getLinkerCommandFileLineSwitch</u> The command line switch to specify with the linker command file.
- <u>getLinkerCommandFileName</u> The name of the linker command file.
- <u>getLinkerCommandGeneratorIDs</u> Reference IDs to the generator elements for generating the linker command file.
- <u>getMemoryMapAddressUnitBits</u> The number bits in an addressable unit for a memory map. If none exists, the default 8 bits is returned.
- <u>getMemoryMapElementIDs</u> List of element IDs (addressBlockID, bankID, subspaceMapID) within a memory map, memory remap, local memory map, or bank.
- <u>getMemoryMapElementType</u> Indicates type of memory map element: addressBlock, bank, or subspaceMap.
- <u>getMemoryMapRemapElementIDs</u> List of IDs for memory map remap elements of the given memory map.
- <u>getMemoryRemapStateID</u> Remap State ID for which this remap is applicable.
- <u>getSegmentAddressOffset</u> The address offset of an address space segment in an address space.

- <u>getSegmentRange</u> The address range of an address space segment expressed as the number of accessable addressable units.
- <u>getSubspaceMapBaseAddress</u> The base address of a memory subspace.
- <u>getSubspaceMapMasterID</u> Master bus interface ID on the other side of a bus bridge.
- <u>getSubspaceMapSegmentID</u> Address space segment ID on the other side of a bus bridge.
- getTypeIdentifier Indicates the type identifier of an addressBlock, registerFile, register, or field.
- <u>setAddressBlockBaseAddress</u> Set the base address of an address block.
- <u>setAddressBlockRange</u> Set the address range of an address block expressed as the number of accessable and addressable units.
- <u>setAddressBlockWidth</u> Set the bit width of an address block.
- <u>setAddressSpaceRange</u> Set the address range of an address block expressed as the number of accessable and addressable units.
- <u>setAddressSpaceWidth</u> Set the bit width of an address block.
- <u>setBankBaseAddress</u> Set the base address of an address bank.
- <u>setExecutableImageLinkerCommand</u> Set the linker command for the current executable image.
- <u>setExecutableImageLinkerFlags</u> Set the flags of the current executable image linker command.
- <u>setLinkerCommandFileEnable</u> Set whether or not to generate and enable the linker command file.
- <u>setLinkerCommandFileLineSwitch</u> Set the command line switch to specify with the linker command file.
- <u>setLinkerCommandFileName</u> Set the name of the linker command file.
- <u>setSegmentAddressOffset</u> Set the address offset of an address space segment expressed in the number addressable units.
- <u>setSegmentRange</u> Set the address range of an address space segment expressed as the number of accessable addressable units.
- <u>setSubspaceMapBaseAddress</u> Set the base address of a memory subspace.

Bus definition operations

- <u>getBusDefinitionDirectConnection</u> Indicates whether or not the bus definition supports direct connections.
- <u>getBusDefinitionExtends</u> VLNV of the bus definition being extended.
- getBusDefinitionID ID for the bus definition with the given VLNV.
- <u>getBusDefinitionIsAddressable</u> Indicates whether or not the bus definition is an addressable bus.
- <u>getBusDefinitionMaxMasters</u> Maximum # of masters supported by this bus definition.
- <u>getBusDefinitionMaxSlaves</u> Maximum # of slaves supported by this bus definition.
- <u>getBusDefinitionSystemGroupNames</u> List of system group names for this bus definition.
- <u>getBusDefinitionVLNV</u> VLNV of the bus definition.

Bus interface operations

- <u>getBridgeIsOpaque</u> Value of the opaque attribute.
- <u>getBridgeMasterID</u> The slave interface or master interface reference ID.
- <u>getBusInterfaceBitSteering</u> Bit steering description of the bus interface: on or off.
- <u>getBusInterfaceBitsInLAU</u> The number bits in the least addressable unit. If none exists, the default 8 bits is returned.
- <u>getBusInterfaceConnectionRequired</u> Connection required for this bus interface.
- <u>getBusInterfaceEndianness</u> The endianess of the bus interface, big or little. The default is little.
- <u>getBusInterfaceGroupName</u> Group name of a system, mirroredSystem, or monitor bus interface.
- <u>getBusInterfaceMasterAddressSpaceID</u> ID of the master addressSpace.

- <u>getBusInterfaceMasterBaseAddress</u> Base address of the master addressSpace.
- <u>getBusInterfaceMirroredSlaveRange</u> The address range of the mirrored slave interface.
- <u>getBusInterfaceMirroredSlaveRemapAddressIDs</u> List of remap address IDs of the mirrored slave interface.
- <u>getBusInterfaceMonitorInterfaceMode</u> Indicates the mode of interface being monitored, slave, master, system, mirrorslave, mirrormaster, or mirrorslave.
- <u>getBusInterfaceSlaveBridgeIDs</u> List of slave bridge IDs.
- <u>getBusInterfaceSlaveFileSetGroupIDs</u> List of fileSetGroup IDs.
- <u>getBusInterfaceSlaveMemoryMapID</u> ID of the memoryMap referenced from a slave interface.
- <u>getRemapAddressRemapStateID</u> Remap state ID of the given remap address element.
- <u>getRemapAddressValue</u> Remap address of the given remap address element.
- <u>setBusInterfaceBitSteering</u> Set bus interface bit steering value.
- setBusInterfaceMasterBaseAddress Set base address of the master bus interface.
- <u>setBusInterfaceMirroredSlaveRange</u> Set address range for the associated interface.
- <u>setRemapAddressValue</u> Set remap address value for the associated interface.

Component instance operations

- <u>getComponentInstanceComponentID</u> ID for the component associated with given instance (crossing from design to component file).
- <u>getComponentInstanceName</u> Instance name of the component.
- <u>getComponentInstanceVLNV</u> VLNV of the component (from the design file).
- <u>getComponentInstanceXML</u> Return the component XML in text format. Schema version is DE dependent.

Component operations

- <u>getChannelBusInterfaceIDs</u> List of busInterface IDs in this channel.
- <u>getComponentAddressSpaceIDs</u> List of IDs for the logical address spaces in the component.
- <u>getComponentBusInterfaceIDs</u> List of interface IDs.
- <u>getComponentChannelIDs</u> A list of channel IDs.
- getComponentChoiceIDs List of choices IDs.
- <u>getComponentCpuIDs</u> List of cpu IDs of the component.
- <u>getComponentElementType</u> Returns the type name of the XML element associated with the component (currently only component). This call is being provided to cover a future scenario where there can be different types of component elements instantiated in a design (e.g., macroComponent elements).
- <u>getComponentFileSetIDs</u> List of file set IDs.
- <u>getComponentGeneratorIDs</u> List of generator IDs of the component.
- <u>getComponentMemoryMapIDs</u> List of IDs for memory map elements in the given component.
- <u>getComponentModelParameterIDs</u> A list of model parameter IDs.
- <u>getComponentOtherClockDriverIDs</u> List of clock driver IDs of the component.
- <u>getComponentPortIDs</u> A list of component model port IDs.
- <u>getComponentRemapStateIDs</u> A list of remap state IDs.
- <u>getComponentVLNV</u> VLNV of the component (from the component file).
- <u>getComponentViewIDs</u> A list of model view IDs.
- <u>getComponentWhiteboxElementIDs</u> List of white box element IDs of the component.
- <u>getCpuAddressSpaceIDs</u> List of address space reference IDs of the cpu.

Constraint operations

- <u>getDriveConstraintType</u> Indicates the type of drive constraint: function class.
- <u>getDriveConstraintValue</u> Returns the drive constraint. Format depends on the constraint type.
- <u>getLoadConstraintCount</u> Returns the load constraint count, the number of loads.
- <u>getLoadConstraintType</u> Indicates the type of load constraint: function class.
- <u>getLoadConstraintValue</u> Returns the load constraint. Format is cell function and strength or cell class and strength.
- <u>getPortConstraintSetDriveConstraintIDs</u> List of drive constraint IDs of the port.
- <u>getPortConstraintSetLoadConstraintIDs</u> List of load constraint IDs of the port.
- <u>getPortConstraintSetRange</u> List of the left and right range of a port referenced by this constraint set.
- <u>getPortConstraintSetReferenceName</u> Reference name of the given port constraint set.
- <u>getPortConstraintSetTimingConstraintIDs</u> List of timing constraint IDs of the port.
- <u>getTimingConstraintClockDetails</u> Indicates the clock name, clock edge, and delay type.
- <u>getTimingConstraintValue</u> Returns the timing constraint value (cycle time percentage).

Design operations

- addAdHocConnection Add new ad hoc connection.
- <u>addAdHocExternalPortReference</u> Add an external port reference to an existing ad hoc connection.
- <u>addAdHocInternalPortReference</u> Add an internal port reference to an existing ad hoc connection.
 An identical port reference must not already exist in the ad hoc connection.
- <u>addComponentInstance</u> Add new component instance.
- <u>addHierConnection</u> Add new hierarchical connection.
- <u>addHierarchicalMonitorInterconnection</u> Add new hierarchical interconnection between a component and monitor. If there is already a monitorInterconnection for the given componentRef/ componentInterfaceRef, then the monitor connection is added to that element.
- addInterconnection Add new interconnection between components.
- <u>addMonitorInterconnection</u> Add new interconnection between a component and monitor. If there is already a monitorInterconnection for the given componentRef/componentInterfaceRef, then the monitor connection is added to that element.
- appendAbstractorInstance Append a new abstractor instance to the interconnection.
- <u>getAdHocConnectionExternalPortDetails</u> List for an external connection containing the portRef, left, and right attribute values.
- <u>getAdHocConnectionExternalPortReferenceIDs</u> List of external ad hoc port reference element IDs.
- <u>getAdHocConnectionInternalPortReferenceDetails</u> List for an internal connection containing the componentRef, portRef, left, and right attribute values.
- <u>getAdHocConnectionInternalPortReferenceIDs</u> List of internal ad hoc port reference element IDs.
- <u>getAdHocConnectionTiedValue</u> Get the tied value for an ad hoc connection.
- <u>getComponentInstanceID</u> Return the component instance ID of the named component instance in the given design.
- getDesignAdHocConnectionIDs List of ad hoc connection element IDs.
- <u>getDesignComponentInstanceIDs</u> Components instances IDs of the given design.
- <u>getDesignHierConnectionIDs</u> List of hierarchical connection element IDs.
- <u>getDesignID</u> Get ID of the current or top design.
- <u>getDesignInterconnectionAbstractorInstanceIDs</u> List of abstractor instances IDs for this interconnection.
- <u>getDesignInterconnectionIDs</u> List of interconnection element IDs.

- <u>getDesignMonitorInterconnectionIDs</u> List of monitorInterconnection element IDs.
- <u>getDesignVLNV</u> VLNV of the design.
- <u>getHierConnectionDetails</u> List containing the interface name, component reference, and interface reference.
- <u>getInterconnectionActiveInterfaces</u> Returns the active interfaces as a list: componentRef interfaceRef componentRef interfaceRef.
- <u>getMonitorInterconnectionInterfaces</u> Returns the active interface and monitor interfaces as a list in componentPathRef, componentRef, componentInterface, monitorPathRef, monitorRef, monitorInterface format; the active interface comes first in the list.
- <u>removeAbstractorInstance</u> Remove specified abstractor instance.
- <u>removeAdHocExternalPortReference</u> Remove an external port reference from existing ad hoc connection.
- <u>removeAdHocInternalPortReference</u> Remove an internal port from existing ad hoc connection. The
 ad hoc connection is removed when the last port reference is removed.
- <u>removeComponentInstance</u> Remove specified component instance.
- <u>removeHierConnection</u> Remove existing hierarchical connection.
- <u>removeHierarchicalMonitorInterconnection</u> Remove a hierarchical interconnection between a component and monitor. When the last monitor reference is removed, the entire monitorInterconnection element will be removed.
- <u>removeInterconnection</u> Remove interconnection between components, and any abstractors if present.
- <u>removeMonitorInterconnection</u> Remove interconnection between a component and monitor. When
 the last monitor reference is removed, the entire monitorInterconnection element will be removed.
- <u>replaceAbstractorInstance</u> Replace specified abstractor with new provided abstractor.
- replaceComponentInstance Replace specified component with new provided component.

Field operations

- <u>getRegisterFieldAccess</u> The accessibility of the data in the field.
- <u>getRegisterFieldBitOffset</u> Bit offset of the fields LSB inside the register.
- getRegisterFieldBitWidth Width of the field in bits.
- getRegisterFieldModifiedWriteValue The modified write value for the field.
- getRegisterFieldReadAction The read action for the field.
- <u>getRegisterFieldTestConstraint</u> The test constraint required if the field can be tested with a simple register test.
- <u>getRegisterFieldTestable</u> True if the field can be tested with a simple register test.
- <u>getRegisterFieldValue</u> Enumerated bit field value.
- <u>getRegisterFieldValueIDs</u> List of IDs for field values for the given register field.
- <u>getRegisterFieldValueName</u> Enumerated name for this register field value. Deprecated—use getName.
- <u>getRegisterFieldValueUsage</u> Enumerated bit field usage.
- <u>getRegisterFieldVolatility</u> Indicates whether or not the data is volatile. The presumed value is false
 if the element is not present.
- <u>getRegisterFieldWriteValueConstraintMinMax</u> The value of a write constraint.
- <u>getRegisterFieldWriteValueConstraintUseEnumeratedValues</u> The write value constraint shall use the enumerated values.
- <u>getRegisterFieldWriteValueConstraintWriteAsRead</u>
 The write value constraint is write as read.
- <u>setRegisterFieldBitWidth</u> Set the width of the field in bits.

File and fileset operations

- getFileBuildCommandFlags Flags of the file build command.
- <u>getFileBuildCommandFlagsIsAppend</u> Value of append attribute on the flag element.
- <u>getFileBuildCommandName</u> Name of the build command of the file.
- <u>getFileBuildCommandReplaceDefaultFlags</u> Indicates whether or not to replace default flags.
- <u>getFileBuildCommandTargetName</u> Target name of the file build command.
- <u>getFileBuilderCommand</u> Command of the file builder.
- <u>getFileBuilderFileType</u> FileType or userFileType of the file builder.
- <u>getFileBuilderFlags</u> Flags of the file builder.
- <u>getFileBuilderReplaceDefaultFlags</u> Value of the replaceDefaultFlags element of the file builder.
- <u>getFileDefineSymbolIDs</u> List of define symbol IDs used in the file.
- <u>getFileDependencies</u> List of dependent locations for the file, typically directories.
- <u>getFileExportedNames</u> List of exported names of the file.
- <u>getFileHasExternalDeclarations</u> Indicates that the file includes external declarations required by the top-level netlist file.
- <u>getFileImageTypes</u> List of image types of the file.
- <u>getFileIsIncludeFile</u> Indicates that the given file is an include file.
- <u>getFileLogicalName</u> Logical name of the file.
- <u>getFileLogicalNameDefault</u> Default attribute of logical name of the file.
- <u>getFileName</u> Get name of the given fileID.
- <u>getFileSetDependencies</u> List of dependent locations for the fileSet, typically directories.
- <u>getFileSetFileBuilderIDs</u> List of file builder IDs used for this fileSet.
- <u>getFileSetFileIDs</u> List of file IDs of the fileSet.
- <u>getFileSetFunctionIDs</u> List of function IDs.
- <u>getFileSetGroupFileSetIDs</u> List of fileSet IDs in this file set group.
- <u>getFileSetGroupName</u> Name of fileSet group.
- <u>getFileSetGroups</u> List of group names of the fileSet.
- <u>getFileType</u> FileType or userFileType of the file.
- <u>getFunctionArgumentDataType</u> Data type of the argument.
- <u>getFunctionArgumentIDs</u> List of argument IDs of the function of the fileSet.
- <u>getFunctionDisabled</u> Indicates whether or not the function is disabled.
- <u>getFunctionEntryPoint</u> Entry point of the function.
- <u>getFunctionFileID</u> File ID containing the function entry point.
- <u>getFunctionReplicate</u> Value of replicate attribute on function element.
- <u>getFunctionReturnType</u> Return type of the function.
- getFunctionSourceFileIDs List of source file IDs of the function of the fileSet.
- <u>getFunctionSourceFileName</u> Name of the source file.
- <u>getFunctionSourceFileType</u> FileType or userFileType of the source file.
- <u>setFileBuildCommandFlags</u> Set command flags for the given file builder.
- <u>setFileBuildCommandName</u> Set command name for the given file builder.
- <u>setFileBuildCommandReplaceDefaultFlags</u> Set replace default flags for the given file builder.
- <u>setFileBuildCommandTargetName</u> Set target name for build command for the given file.
- <u>setFileBuilderCommand</u> Set command associated with file builder.

- <u>setFileBuilderFlags</u> Set flags associated with the given file builder.
- <u>setFileBuilderReplaceDefaultFlags</u> Set value of replace default flags in file builder.
- setFileName Set name of the given file.
- <u>setFunctionDisabled</u> Set disable flag on function.

Generator operations

- <u>getGeneratorApiType</u> Api type of the generator.
- <u>getGeneratorExecutable</u> Executable name associated with the generator.
- <u>getGeneratorGroups</u> List of group names of the generator.
- <u>getGeneratorIsHidden</u> Value of hidden attribute on the generator.
- <u>getGeneratorPhase</u> Phase number of the generator.
- <u>getGeneratorScope</u> Scope of the generator.
- <u>getGeneratorTransportMethods</u> List of transport methods of the generator.

Interface operations

- <u>getInterfaceAbstractionTypeVLNV</u> List of VLNV of the abstraction definition.
- <u>getInterfaceBusTypeVLNV</u> List of VLNV of the bus definition.
- <u>getInterfaceMode</u> Mode of the interface: master, slave, system, mirroredMaster, mirroredSlave, mirroredSystem, or monitor.
- <u>getInterfacePortMapIDs</u> List of interface port map IDs.
- <u>getLogicalPhysicalMapIDs</u> List of the logical and physical port map IDs.
- <u>getPortMapRange</u> List of left and right range of the port map.
- <u>setPortMapRange</u> Set left/right range of an interface port map.

Miscellaneous operations

- end Terminate connection to the DE.
- <u>getChoiceEnumerationHelp</u> Value of the enumeration help attribute.
- <u>getChoiceEnumerationIDs</u> List of choice enumeration IDs of the choice.
- getChoiceEnumerationText Value of the enumeration text attribute.
- <u>getChoiceEnumerationValue</u> Value of the enumeration element.
- getChoiceName Name of the choice.
- <u>getDescription</u> Return the description of the specified element.
- <u>getDisplayName</u> Return the displayName of the specified element.
- <u>getErrorMessage</u> Get error message from prior callback.
- <u>getGeneratorContextComponentInstanceID</u> ID for the component instance associated with the currently invoked generator.
- <u>getIdValue</u> Return the value of the spirit:id attribute on a ID.
- <u>getModelParameterDataType</u> Data type of the model parameter.
- <u>getModelParameterUsageType</u> Usage type of the model parameter.
- <u>getName</u> Return the name of the specified element.
- <u>getParameterIDs</u> List of parameter IDs from the given element (any of which contains spirit:parameter elements).
- <u>getUnconfiguredID</u> Return the unconfigured ID from a configured ID.
- <u>getValue</u> Get the value of a parameterID, fileDefineIDs, or argumentIDs.
- <u>getValueAttribute</u> Returns the value of the given attribute name on the elementID/value element.
- <u>getVendorAttribute</u> Get vendor-defined attribute from the given element.

- <u>getVendorExtensions</u> Returns the complete XML text of the vendor extension element including the spirit:vendorExtension tag, as a well-formed XML document.
- <u>getWarningCount</u> Return count of how many potentially incompatible API calls have been made.
- <u>getXMLForVLNV</u> Return XML of the IP-XACT object identified by the given VLNV.
- <u>init</u> API initialization function. Must be called before any other API call.
- <u>message</u> Send message level and message text to DE.
- <u>registerVLNV</u> Indicate to DE where the file resides for the IP-XACT element with the given VLNV.
- <u>setValue</u> Set the value of a parameterID, fileDefineIDs, or argumentIDs.
- <u>setVendorAttribute</u> Set vendor-defined attribute on the given element.
- <u>setVendorExtensions</u> Set vendor extensions. See NOTE.

Port operations

- <u>getAllLogicalDirectionsAllowed</u> Get the value of the allLogicalDirectionAllowed attribute.
- <u>getClockDriverName</u> Name of the clock driver.
- <u>getClockDriverPeriod</u> Clock period of the given clock.
- <u>getClockDriverPeriodUnits</u> Units of the clock period of the given clock.
- <u>getClockDriverPulseDuration</u> Clock period of the given clock.
- <u>getClockDriverPulseDurationUnits</u> Units of the clock pulse duration of the given clock.
- <u>getClockDriverPulseOffset</u> Clock pulse offset of the given clock.
- <u>getClockDriverPulseOffsetUnits</u> Units of the clock pulse offset of the given clock.
- <u>getClockDriverPulseValue</u> Clock pulse value of the given clock.
- <u>getClockDriverSource</u> Source name of the clock driver.
- <u>getPortAccessHandle</u> Alternate name to be used when accessing this port.
- <u>getPortAccessType</u> Indicates the access type for this port.
- getPortClockDriverID Element ID of clock driver element, if present.
- <u>getPortConstraintSetIDs</u> List of constraint sets IDs of the port.
- <u>getPortDefaultValue</u> Default value of the port, if not set returns "".
- <u>getPortDirection</u> Direction of the port.
- getPortMaxAllowedConnections Maximum allowed connections for this transactional port.
- <u>getPortMinAllowedConnections</u> Minimum allowed connections for this transactional port.
- getPortRange List of the left and right range of the port.
- <u>getPortServiceID</u> ID of element representing the service of a transactional port.
- <u>getPortSingleShotDriverID</u> Element ID of single shot driver element, if present.
- <u>getPortSingleShotPulseDuration</u> Clock period of the port.
- <u>getPortSingleShotPulseOffset</u> Clock pulse offset of the port.
- <u>getPortSingleShotPulseValue</u> Clock pulse value of the port.
- <u>getPortStyle</u> Returns wire or transactional to indicate the port style.
- <u>getPortTransactionalTypeDefID</u> The type definition for a transactional portID.
- <u>getPortWireTypeDefIDs</u> List of typeDefs for a wire portID.
- <u>setClockDriverPeriod</u> Set period of the given clock port.
- <u>setClockDriverPulseDuration</u> Set pulse duration of the given clock port.
- <u>setClockDriverPulseOffset</u> Set pulse offset value of the given clock port.
- <u>setClockDriverPulseValue</u> Set pulse value of the given clock port.

- setPortDefaultValue Set default value of the given port.
- <u>setPortRange</u> Set left/right range for the given port.
- <u>setPortSingleShotPulseDuration</u> Set pulse duration of given single shot port.
- <u>setPortSingleShotPulseOffset</u> Set pulse offset of given single shot port.
- <u>setPortSingleShotPulseValue</u> Set pulse value of given single shot port.

Register file operations

- getRegisterFileAddressOffset The offset from the base address.
- <u>getRegisterFileDimensions</u> Dimensions of a register file array.
- <u>getRegisterFileRange</u> The register file range in number of addressable units.
- <u>getRegisterFileRegisterFileIDs</u> List of IDs for the register files of the given register file.
- <u>getRegisterFileRegisterIDs</u> List of IDs for the registers of the given register file.
- <u>setRegisterFileRange</u> Set the register file range in addressable units.

Register operations

- <u>getRegisterAccess</u> The accessibility of the data in the register.
- <u>getRegisterAddressOffset</u> The offset from the base address.
- <u>getRegisterAlternateGroups</u> Indicates the group names for an alternate register.
- <u>getRegisterAlternateRegisterIDs</u> List of IDs for the alternate registers of the given register.
- <u>getRegisterDimensions</u> Dimensions of a register array.
- <u>getRegisterFieldIDs</u> List of IDs for the fields of the given register.
- <u>getRegisterResetMask</u> Mask to be ANDed with the value before comparing to reset value.
- <u>getRegisterResetValue</u> Register value at reset.
- <u>getRegisterSize</u> The register size in bits.
- getRegisterVolatility Indicates whether or not the data is volatile.
- <u>setRegisterResetMask</u> Set the mask to be ANDed with the value before comparing to reset value.
- <u>setRegisterResetValue</u> Set register value at reset.
- <u>setRegisterSize</u> Set the register size in bits.

Remap operations

- <u>getRemapStatePortIDs</u> List of remap port IDs of a remap state.
- getRemapStatePortPortID Port ID for the remap state.
- <u>getRemapStatePortPortIndex</u> Index of the port if a vector for the remap state.
- <u>getRemapStatePortPortValue</u> Value of the port for the remap state.

Service operations

- <u>getAbstractionDefAbstractionServiceTypeDefIDs</u> List of type definitions for an abstractionServiceID.
- getAbstractionDefServiceInitiative Port service initiative from the abstraction definition.
- getServiceInitiative Initiative of the service.
- <u>getServiceTypeDefIDs</u> List of typeDefs for a serviceID.

Typedef operations

- <u>getTypeDefConstrained</u> Is the type name constrained?
- <u>getTypeDefImplicit</u> Is the type name implicit?
- <u>getTypeDefinitions</u> List of type definition for the given type.
- <u>getTypeDefTypeName</u> Name of the type.
- <u>getTypeDefTypeViewIDs</u> List of type viewIDs for the given type.

View operations

- <u>getViewDefaultFileBuilderIDs</u> List of default file builder IDs of the view.
- <u>getViewDesignID</u> ID of the design associated with a hierarchical view.
- <u>getViewEnvIdentifiers</u> List of environment identifiers of the view.
- <u>getViewFileSetIDs</u> List of fileSet IDs for fileSets referenced by the view.
- <u>getViewLanguage</u> View Language.
- <u>getViewLanguageIsStrict</u> Value of strict attribute on view language element.
- getViewModelName Get the model name for this view.
- <u>getViewPortConstraintSetIDs</u> Constraint set ID for the port referenced by the view.
- <u>getViewWhiteboxElementRefIDs</u> List of white box element reference IDs of the view.

White box operations

- <u>getWhiteboxElementDrivable</u> Indicates whether or not the white box element is drivable.
- getWhiteboxElementRefID White box element reference ID.
- <u>getWhiteboxElementRegisterIDs</u> Register reference IDs of the white box element.
- <u>getWhiteboxElementType</u> Type of the white box element.
- <u>getWhiteboxRefPathIDs</u> List of path IDs of the white box element reference.
- <u>getWhiteboxRefPathName</u> Name of the white box reference path element.
- <u>getWhiteboxRefPathRange</u> List of left and right range of the white box reference path element.

G.7.2 Abstraction definition operations

G.7.2.1 getAbstractionDefBusTypeVLNV

Description: Get VLNV of the bus definition.

- Input: abstractionDefID of type xsd:string.
- Returns: vlnvValue of type *spirit:soapStringArrayType*.

G.7.2.2 getAbstractionDefExtends

Description: VLNV of the abstraction definition being extended.

- Input: abstractionDefID of type xsd:string.
- Returns: vlnvValue of type *spirit:soapStringArrayType*.

G.7.2.3 getAbstractionDefID

Description: ID for the abstraction definition with the given VLNV.

- Input: vlnvValue of type spirit:soapStringArrayType.
- Returns: abstractionDefID of type xsd:string.

G.7.2.4 getAbstractionDefPortDefaultValue

Description: Default value for port when not connected.

- Input: abstractionDefPortID of type xsd:string.
- Returns: value of type xsd:string.

G.7.2.5 getAbstractionDefPortDriveConstraintIDs

Description: List of drive constraint IDs of the port.

- Input: abstractionDefPortModeConstraintID of type xsd:string.
- Returns: driveConstraintIDs of type spirit:soapStringArrayType.

G.7.2.6 getAbstractionDefPortIDs

Description: List of abstraction definition port element IDs.

- Input: abstractionDefID of type xsd:string.
- Returns: abstractionDefPortIDs of type spirit:soapStringArrayType.

G.7.2.7 getAbstractionDefPortIsAddress

Description: Is this port an address port.

- Input: abstractionDefPortID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.2.8 getAbstractionDefPortIsClock

Description: Is this port a clock port.

- Input: abstractionDefPortID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.2.9 getAbstractionDefPortIsData

Description: Is this port a data port.

- Input: abstractionDefPortID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.2.10 getAbstractionDefPortIsReset

Description: Is this port a reset port.

- Input: abstractionDefPortID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.2.11 getAbstractionDefPortLoadConstraintIDs

Description: List of load constraint IDs of the port.

- Input: abstractionDefPortModeConstraintID of type xsd:string.
- Returns: loadConstraintIDs of type spirit:soapStringArrayType.

G.7.2.12 getAbstractionDefPortLogicalName

Description: Logical name of this abstraction definition port.

- Input: abstractionDefPortID of type xsd:string.
- Returns: value of type xsd:string.

G.7.2.13 getAbstractionDefPortMirroredConstraintIDs

Description: List of constraint IDs for a mirrored port.

- Input: abstractionDefPortModeID of type xsd:string.
- Returns: abstractionDefPortModeConstraintIDs of type spirit:soapStringArrayType.

G.7.2.14 getAbstractionDefPortModeBitWidth

Description: Bit width constraint when present on an interface of the given type.

- Input: abstractionDefPortModeID of type xsd:string.
- Returns: nonNegativeIntegerValue of type xsd:nonNegativeInteger. a return value of 0 indicates unbounded.

G.7.2.15 getAbstractionDefPortModeDirection

Description: Port direction constraint when present on an interface of the given type.

- Input: abstractionDefPortModeID of type xsd:string.
- Returns: direction of type xsd:string.

G.7.2.16 getAbstractionDefPortModeGroup

Description: Group name when present on a system interface.

- Input: abstractionDefPortModeID of type xsd:string.
- Returns: value of type xsd:string.

G.7.2.17 getAbstractionDefPortModelDs

Description: Returns an array of IDs for accessing the given port in the given interface mode. The array shall only contain one element if the modeValue input is master or slave. The array may contain multiple elements for modeValue system.

- Input: modeValue of type xsd:string. modeValue should be one of master, slave or system.
- Input: abstractionDefPortID of type xsd:string.
- Returns: abstractionDefPortModeID of type spirit:soapStringArrayType.

G.7.2.18 getAbstractionDefPortModePresence

Description: Existence requirement for this port on an interface of the given type.

- Input: abstractionDefPortModeID of type xsd:string.
- Returns: presence of type xsd:string.

G.7.2.19 getAbstractionDefPortModeServiceID

Description: AbstractionDef service ID on a transactional port.

- Input: abstractionDefPortModeID of type xsd:string.
- Returns: abstractionServiceID of type xsd:string.

G.7.2.20 getAbstractionDefPortNonMirroredConstraintIDs

Description: List of constraint IDs for a non-mirrored port.

— Input: abstractionDefPortModeID of type xsd:string.

Returns: abstractionDefPortModeConstraintIDs of type spirit:soapStringArrayType.

G.7.2.21 getAbstractionDefPortRequiredDriverType

Description: Required driver type for this port.

- Input: abstractionDefPortID of type xsd:string.
- Returns: value of type xsd:string.

G.7.2.22 getAbstractionDefPortRequiresDriver

Description: Does this port require a driver.

- Input: abstractionDefPortID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.2.23 getAbstractionDefPortStyle

Description: Returns wire or transactional to indicate the port style.

- Input: abstractionDefPortID of type xsd:string.
- Returns: value of type xsd:string.

G.7.2.24 getAbstractionDefPortTimingConstraintIDs

Description: List of timing constraint IDs of the port.

- Input: abstractionDefPortModeConstraintID of type xsd:string.
- Returns: timingConstraintIDs of type spirit:soapStringArrayType.

G.7.2.25 getAbstractionDefVLNV

Description: VLNV of the abstraction definition.

- Input: abstractionDefID of type xsd:string.
- Returns: vlnvValue of type *spirit:soapStringArrayType*.

G.7.3 Abstractor instance operations

G.7.3.1 getAbstractorInstanceAbstractorID

Description: ID for the abstractor associated with given instance (crossing from design configuration to abstractor file).

- Input: abstractorInstanceID of type xsd:string.
- Returns: abstractorID of type xsd:string.

G.7.3.2 getAbstractorInstanceName

Description: Instance name of the abstractor.

- Input: abstractorInstanceID of type xsd:string.
- Returns: value of type xsd:string.

G.7.3.3 getAbstractorInstanceVLNV

Description: VLNV of the abstractor (from the design file).

- Input: abstractorInstanceID of type xsd:string.
- Returns: vlnvValue of type *spirit:soapStringArrayType*.

G.7.3.4 getAbstractorInstanceXML

Description: Return the abstractor XML in text format. Schema version is DE dependent.

- Input: abstractorInstanceID of type xsd:string.
- Returns: xmlText of type xsd:string.

G.7.4 Abstractor operations

G.7.4.1 getAbstractorAbstractorInterfaceIDs

Description: List of two interface IDs.

- Input: abstractorID of type xsd:string.
- Returns: interfaceIDs of type spirit:soapStringArrayType.

G.7.4.2 getAbstractorAbstractorMode

Description: Get the mode that the abstractor can be master, slave, direct, or system.

- Input: abstractorID of type xsd:string.
- Returns: value of type xsd:string.

G.7.4.3 getAbstractorBusTypeVLNV

Description: List of VLNV of the bus definition.

- Input: interfaceID of type xsd:string.
- Returns: vlnvValue of type spirit:soapStringArrayType.

G.7.4.4 getAbstractorChoicelDs

Description: List of choices IDs.

- Input: abstractorID of type xsd:string.
- Returns: choiceIDs of type spirit:soapStringArrayType.

G.7.4.5 getAbstractorFileSetIDs

Description: List of file set IDs.

- Input: abstractorID of type xsd:string.
- Returns: fileSetIDs of type spirit:soapStringArrayType.

G.7.4.6 getAbstractorGeneratorIDs

Description: List of generator IDs of the abstractor.

- Input: abstractorID of type xsd:string.
- Returns: generatorIDs of type spirit:soapStringArrayType.

G.7.4.7 getAbstractorModelParameterIDs

Description: A list of model parameter IDs.

- Input: abstractorID of type xsd:string.
- Input: usageType of type xsd:string. Restrict returned parameters to those that match the given usageType. nontyped or typed or all if not specified.
- Returns: parameterIDs of type spirit:soapStringArrayType.

G.7.4.8 getAbstractorPortIDs

Description: A list of abstractor model port IDs.

- Input: abstractorID of type xsd:string.
- Returns: portIDs of type spirit:soapStringArrayType.

G.7.4.9 getAbstractorViewIDs

Description: A list of model view IDs.

- Input: abstractorID of type xsd:string.
- Input: configured of type xsd:boolean. If true returns only the view configured by a designConfiguration. If false returns all views.
- Returns: viewIDs of type spirit:soapStringArrayType.

G.7.5 Address map operations

G.7.5.1 getAddressBlockAccess

Description: The accessibility of the data in the local address block.

- Input: addressBlockID of type xsd:string.
- Returns: value of type xsd:string.

G.7.5.2 getAddressBlockBaseAddress

Description: The base address of an address block.

- Input: elementID of type xsd:string.
 - Legal value: addressBlockID of type xsd:string.
 - Legal value: addressBlockUID of type xsd:string.
- Returns: baseAddress of type spirit:spiritNumberType.

G.7.5.3 getAddressBlockRange

Description: The address range of an address block expressed as the number of accessible and addressable units.

- Input: elementID of type xsd:string.
 - Legal value: addressBlockID of type xsd:string.
 - Legal value: addressBlockUID of type xsd:string.
- Returns: range of type spirit:spiritNumberType.

G.7.5.4 getAddressBlockRegisterFileIDs

Description: The IDs of the available register files in the address block.

- Input: addressBlockID of type xsd:string.
- Returns: registerFileIDs of type spirit:soapStringArrayType.

G.7.5.5 getAddressBlockRegisterIDs

Description: The IDs of the available registers in the address block.

- Input: addressBlockID of type xsd:string.
- Returns: registerIDs of type spirit:soapStringArrayType.

G.7.5.6 getAddressBlockUsage

Description: Indicates the usage of this address block.

- Input: addressBlockID of type xsd:string.
- Returns: usage of type xsd:string. One of memory, register, reserved or "" if not set.

G.7.5.7 getAddressBlockVolatility

Description: Indicates whether or not the data is volatile.

- Input: addressBlockID of type xsd:string.
- Returns: value of type xsd:string. Returns true, false or "".

G.7.5.8 getAddressBlockWidth

Description: The bit width of an address block in the local memory map.

- Input: elementID of type xsd:string.
 - Legal value: addressBlockID of type xsd:string.
 - Legal value: addressBlockUID of type xsd:string.
- Returns: width of type xsd:nonNegativeInteger.

G.7.5.9 getAddressSpaceAddressUnitBits

Description: The number bits in an addressable unit. If none exists, the default 8 bits is returned.

- Input: addressSpaceID of type xsd:string.
- Returns: addressUnitBits of type xsd:positiveInteger.

G.7.5.10 getAddressSpaceLocalMemoryMapID

Description: The ID for the local memory map of the address space.

- Input: addressSpaceID of type xsd:string.
- Returns: localMemoryMapID of type xsd:string.

G.7.5.11 getAddressSpaceRange

Description: The address range of an address block expressed as the number of accessable and addressable units.

— Input: elementID of type xsd:string.

- Legal value: addressSpaceID of type xsd:string.
- Legal value: addressSpaceUID of type xsd:string.
- Returns: range of type spirit:spiritNumberType.

G.7.5.12 getAddressSpaceSegmentIDs

Description: List of IDs for address block segments for the address space.

- Input: addressSpaceID of type xsd:string.
- Returns: segmentIDs of type *spirit:soapStringArrayType*.

G.7.5.13 getAddressSpaceWidth

Description: The bit width of an address block.

- Input: elementID of type xsd:string.
 - Legal value: addressSpaceID of type xsd:string.
 - Legal value: addressSpaceUID of type xsd:string.
- Returns: width of type xsd:nonNegativeInteger.

G.7.5.14 getBankAccess

Description: The accessibility of the data in the local address bank.

- Input: bankID of type xsd:string.
- Returns: value of type xsd:string.

G.7.5.15 getBankAlignment

Description: The bank alignment value, serial or parallel.

- Input: bankID of type xsd:string.
- Returns: value of type xsd:string.

G.7.5.16 getBankBaseAddress

Description: The base address of an address bank.

- Input: elementID of type xsd:string.
 - Legal value: bankID of type xsd:string.
 - Legal value: bankUID of type *xsd:string*.
- Returns: value of type spirit:spiritNumberType.

G.7.5.17 getBankUsage

Description: Indicates the usage of this address bank.

- Input: bankID of type xsd:string.
- Returns: usage of type xsd:string.

G.7.5.18 getBankVolatility

Description: Indicates whether or not the data is volatile.

- Input: bankID of type xsd:string.
- Returns: value of type xsd:string. Returns true, false, or "".

G.7.5.19 getExecutableImageFileBuilderIDs

Description: List of default file builder IDs of the executable image.

- Input: executableImageID of type xsd:string.
- Returns: fileBuilderIDs of type *spirit:soapStringArrayType*.

G.7.5.20 getExecutableImageFileSetIDs

Description: The group of file set reference IDs complying with the tool set of the current executable image.

- Input: executableImageID of type xsd:string.
- Returns: fileSetIDs of type spirit:soapStringArrayType.

G.7.5.21 getExecutableImageIDs

Description: The IDs of the executable images belonging to the specified address space.

- Input: addressSpaceID of type xsd:string.
- Returns: executableImageIDs of type *spirit:soapStringArrayType*.

G.7.5.22 getExecutableImageLinkerCommand

Description: The linker command for the current executable image.

- Input: elementID of type xsd:string.
 - Legal value: executableImageID of type xsd:string.
 - Legal value: executableImageUID of type xsd:string.
- Returns: value of type xsd:string.

G.7.5.23 getExecutableImageLinkerCommandFileID

Description: Element ID of linkerCommandFile associated with given executable image.

- Input: executableImageID of type xsd:string.
- Returns: linkerCommandFileID of type xsd:string.

G.7.5.24 getExecutableImageLinkerFlags

Description: The flags of the current executable image linker command.

- Input: elementID of type xsd:string.
 - Legal value: executableImageID of type xsd:string.
 - Legal value: executableImageUID of type xsd:string.
- Returns: value of type *xsd:string*.

G.7.5.25 getExecutableImageType

Description: The type of the executable image if existent.

- Input: executableImageID of type xsd:string.
- Returns: value of type xsd:string.

G.7.5.26 getLinkerCommandFileEnable

Description: Indicates whether or not to generate and enable the linker command file.

- Input: elementID of type xsd:string.
 - Legal value: linkerCommandFileID of type xsd:string.
 - Legal value: linkerCommandFileUID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.5.27 getLinkerCommandFileLineSwitch

Description: The command line switch to specify with the linker command file.

- Input: elementID of type xsd:string.
 - Legal value: linkerCommandFileID of type xsd:string.
 - Legal value: linkerCommandFileUID of type xsd:string.
- Returns: value of type *xsd:string*.

G.7.5.28 getLinkerCommandFileName

Description: The name of the linker command file.

- Input: elementID of type xsd:string.
 - Legal value: linkerCommandFileID of type xsd:string.
 - Legal value: linkerCommandFileUID of type xsd:string.
- Returns: fileName of type *spirit:spiritURI*.

G.7.5.29 getLinkerCommandGeneratorIDs

Description: Reference IDs to the generator elements for generating the linker command file.

- Input: linkerCommandFileID of type xsd:string.
- Returns: generatorIDs of type spirit:soapStringArrayType.

G.7.5.30 getMemoryMapAddressUnitBits

Description: The number bits in an addressable unit for a memory map. If none exists, the default 8 bits is returned.

- Input: memoryMapID of type xsd:string.
- Returns: addressUnitBits of type xsd:positiveInteger.

G.7.5.31 getMemoryMapElementIDs

Description: List of element IDs (addressBlockID, bankID, subspaceMapID) within a memory map, memory remap, local memory map, or bank.

- Input: elementID of type xsd:string.
 - Legal value: localMemoryMapID of type xsd:string.
 - Legal value: bankID of type xsd:string. memoryMapID of type xsd:string.
 - Legal value: memoryRemapID of type xsd:string.
- Returns: memoryMapElementIDs of type spirit:soapStringArrayType.
 - Possible value(s): addressBlockID of type xsd:string.
 - Possible value(s): bankID of type xsd:string.
 - Possible value(s): subspaceMapID of type *xsd:string*.

G.7.5.32 getMemoryMapElementType

Description: Indicates type of memory map element: addressBlock, bank, or subspaceMap.

- Input: memoryMapElementID of type xsd:string.
 - Legal value: addressBlockID of type xsd:string.
 - Legal value: bankID of type xsd:string.
 - Legal value: subspaceMapID of type xsd:string.
- Returns: type of type xsd:string. The return value is one of addressBlock, bank, subspaceMap or "" for unknown.

G.7.5.33 getMemoryMapRemapElementIDs

Description: List of IDs for memory map remap elements of the given memory map.

- Input: memoryMapID of type xsd:string.
- Returns: memoryRemapIDs of type *spirit:soapStringArrayType*.

G.7.5.34 getMemoryRemapStateID

Description: Remap State ID for which this remap is applicable.

- Input: memoryRemapID of type xsd:string.
- Returns: remapStateID of type xsd:string.

G.7.5.35 getSegmentAddressOffset

Description: The address offset of an address space segment in an address space.

- Input: elementID of type xsd:string.
 - Legal value: segmentID of type xsd:string.
 - Legal value: segmentUID of type xsd:string.
- Returns: addressOffset of type spirit:spiritNumberType.

G.7.5.36 getSegmentRange

Description: The address range of an address space segment expressed as the number of accessable addressable units.

- Input: elementID of type xsd:string.
 - Legal value: segmentID of type xsd:string.
 - Legal value: segmentUID of type xsd:string.
- Returns: range of type spirit:spiritNumberType.

G.7.5.37 getSubspaceMapBaseAddress

Description: The base address of a memory subspace.

- Input: elementID of type xsd:string.
 - Legal value: subspaceMapID of type xsd:string.
 - Legal value: subspaceMapUID of type xsd:string.
- Returns: value of type spirit:spiritNumberType.

G.7.5.38 getSubspaceMapMasterID

Description: Master bus interface ID on the other side of a bus bridge.

- Input: subspaceMapID of type xsd:string.
- Returns: interfaceID of type xsd:string.

G.7.5.39 getSubspaceMapSegmentID

Description: Address space segment ID on the other side of a bus bridge.

- Input: subspaceMapID of type xsd:string.
- Returns: segmentID of type xsd:string.

G.7.5.40 getTypeIdentifier

Description: Indicates the type identifier of an addressBlock, registerFile, register, or field.

- Input: elementID of type xsd:string.
 - Legal value: addressBlockID of type xsd:string.
 - Legal value: registerFileID of type xsd:string.
 - Legal value: registerID of type xsd:string.
 - Legal value: alternateRegisterID of type xsd:string.
 - Legal value: regFieldID of type xsd:string.
- Returns: identifier of type xsd:string.

G.7.5.41 setAddressBlockBaseAddress

Description: Set the base address of an address block.

- Input: addressBlockID of type xsd:string.
- Input: baseAddress of type spirit:spiritNumberType.
- Returns: status of type xsd:integer.

G.7.5.42 setAddressBlockRange

Description: Set the address range of an address block expressed as the number of accessable and addressable units.

- Input: addressBlockID of type xsd:string.
- Input: spiritNumberTypeValue of type spirit:spiritNumberType.
- Returns: status of type xsd:integer.

G.7.5.43 setAddressBlockWidth

Description: Set the bit width of an address block.

- Input: addressBlockID of type xsd:string.
- Input: nonNegativeIntegerValue of type xsd:nonNegativeInteger.
- Returns: status of type xsd:integer.

G.7.5.44 setAddressSpaceRange

Description: Set the address range of an address block expressed as the number of accessable and addressable units.

- Input: addressSpaceID of type xsd:string.
- Input: range of type spirit:spiritNumberType.
- Returns: status of type xsd:integer.

G.7.5.45 setAddressSpaceWidth

Description: Set the bit width of an address block.

- Input: addressSpaceID of type xsd:string.
- Input: width of type xsd:nonNegativeInteger.
- Returns: status of type xsd:integer.

G.7.5.46 setBankBaseAddress

Description: Set the base address of an address bank.

- Input: bankID of type xsd:string.
- Input: baseAddress of type spirit:spiritNumberType.
- Returns: status of type xsd:integer.

G.7.5.47 setExecutableImageLinkerCommand

Description: Set the linker command for the current executable image.

- Input: executableImageID of type xsd:string.
- Input: value of type xsd:string.
- Returns: status of type xsd:integer.

G.7.5.48 setExecutableImageLinkerFlags

Description: Set the flags of the current executable image linker command.

- Input: executableImageID of type xsd:string.
- Input: value of type xsd:string.
- Returns: status of type xsd:integer.

G.7.5.49 setLinkerCommandFileEnable

Description: Set whether or not to generate and enable the linker command file.

- Input: linkerCommandFileID of type xsd:string.
- Input: value of type xsd:boolean.
- Returns: status of type xsd:integer.

G.7.5.50 setLinkerCommandFileLineSwitch

Description: Set the command line switch to specify with the linker command file.

- Input: linkerCommandFileID of type xsd:string.
- Input: value of type xsd:string.
- Returns: status of type xsd:integer.

G.7.5.51 setLinkerCommandFileName

Description: Set the name of the linker command file.

- Input: linkerCommandFileID of type xsd:string.
- Input: fileName of type spirit:spiritURI.
- Returns: status of type xsd:integer.

G.7.5.52 setSegmentAddressOffset

Description: Set the address offset of an address space segment expressed in the number addressable units.

- Input: segmentID of type xsd:string.
- Input: addressOffset of type spirit:spiritNumberType.
- Returns: status of type xsd:integer.

G.7.5.53 setSegmentRange

Description: Set the address range of an address space segment expressed as the number of accessable addressable units.

- Input: segmentID of type xsd:string.
- Input: range of type spirit:spiritNumberType.
- Returns: status of type xsd:integer.

G.7.5.54 setSubspaceMapBaseAddress

Description: Set the base address of a memory subspace.

- Input: subspaceMapID of type xsd:string.
- Input: spiritNumberTypeValue of type spirit:spiritNumberType.
- Returns: status of type xsd:integer.

G.7.6 Bus definition operations

G.7.6.1 getBusDefinitionDirectConnection

Description: Indicates whether or not the bus definition supports direct connections.

- Input: busdefID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.6.2 getBusDefinitionExtends

Description: VLNV of the bus definition being extended.

- Input: busdefID of type xsd:string.
- Returns: vlnvValue of type spirit:soapStringArrayType.

G.7.6.3 getBusDefinitionID

Description: ID for the bus definition with the given VLNV.

- Input: vlnvValue of type spirit:soapStringArrayType.
- Returns: busdefID of type xsd:string.

G.7.6.4 getBusDefinitionIsAddressable

Description: Indicates whether or not the bus definition is an addressable bus.

- Input: busdefID of type xsd:string.
- Returns: booleanValue of type *xsd:boolean*.

G.7.6.5 getBusDefinitionMaxMasters

Description: Maximum # of masters supported by this bus definition.

- Input: busdefID of type xsd:string.
- Returns: value of type xsd:integer. –1 indicates unbounded.

G.7.6.6 getBusDefinitionMaxSlaves

Description: Maximum # of slaves supported by this bus definition.

- Input: busdefID of type xsd:string.
- Returns: value of type xsd:integer. –1 indicates unbounded.

G.7.6.7 getBusDefinitionSystemGroupNames

Description: List of system group names for this bus definition.

- Input: busdefID of type xsd:string.
- Returns: groupNames of type *spirit:soapStringArrayType*.

G.7.6.8 getBusDefinitionVLNV

Description: VLNV of the bus definition.

- Input: busdefID of type xsd:string.
- Returns: vlnvValue of type *spirit:soapStringArrayType*.

G.7.7 Bus interface operations

G.7.7.1 getBridgelsOpaque

Description: Value of the opaque attribute.

- Input: bridgeID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.7.2 getBridgeMasterID

Description: The slave interface or master interface reference ID.

- Input: bridgeID of type xsd:string.
- Returns: interfaceID of type xsd:string.

G.7.7.3 getBusInterfaceBitSteering

Description: Bit steering description of the bus interface: on or off.

- Input: elementID of type xsd:string.
 - Legal value: interfaceID of type xsd:string.
 - Legal value: interfaceUID of type xsd:string.
- Returns: bitSteeringValue of type xsd:string.

G.7.7.4 getBusInterfaceBitsInLAU

Description: The number bits in the least addressable unit. If none exists, the default 8 bits is returned.

- Input: interfaceID of type xsd:string.
- Returns: bitsInLau of type xsd:positiveInteger.

G.7.7.5 getBusInterfaceConnectionRequired

Description: Connection required for this bus interface.

- Input: interfaceID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.7.6 getBusInterfaceEndianness

Description: The endianess of the bus interface, big or little. The default is little.

- Input: interfaceID of type xsd:string.
- Returns: spiritEndianessValue of type xsd:string.

G.7.7.7 getBusInterfaceGroupName

Description: Group name of a system, mirroredSystem, or monitor bus interface.

- Input: interfaceID of type xsd:string.
- Returns: value of type xsd:string.

G.7.7.8 getBusInterfaceMasterAddressSpaceID

Description: ID of the master addressSpace.

- Input: interfaceID of type xsd:string.
- Returns: addressSpaceID of type xsd:string.

G.7.7.9 getBusInterfaceMasterBaseAddress

Description: Base address of the master addressSpace.

- Input: elementID of type xsd:string.
 - Legal value: interfaceID of type xsd:string.
 - Legal value: interfaceUID of type xsd:string.
- Returns: spiritNumberTypeValue of type spirit:spiritNumberType.

G.7.7.10 getBusInterfaceMirroredSlaveRange

Description: The address range of the mirrored slave interface.

- Input: interfaceID of type xsd:string.
- Returns: spiritNumberTypeValue of type spirit:spiritNumberType.

G.7.7.11 getBusInterfaceMirroredSlaveRemapAddressIDs

Description: List of remap address IDs of the mirrored slave interface.

- Input: interfaceID of type xsd:string.
- Returns: remapAddressIDs of type spirit:soapStringArrayType.

G.7.7.12 getBusInterfaceMonitorInterfaceMode

Description: Indicates the mode of interface being monitored, slave, master, system, mirrorslave, mirrormaster, or mirrorslave.

- Input: interfaceID of type xsd:string.
- Returns: value of type xsd:string.

G.7.7.13 getBusInterfaceSlaveBridgeIDs

Description: List of slave bridge IDs.

- Input: interfaceID of type xsd:string.
- Returns: bridgeIDs of type spirit:soapStringArrayType.

G.7.7.14 getBusInterfaceSlaveFileSetGroupIDs

Description: List of fileSetGroup IDs.

- Input: interfaceID of type xsd:string.
- Returns: fileSetGroupIDs of type *spirit:soapStringArrayType*.

G.7.7.15 getBusInterfaceSlaveMemoryMapID

Description: ID of the memoryMap referenced from a slave interface.

- Input: interfaceID of type xsd:string.
- Returns: memoryMapID of type xsd:string.

G.7.7.16 getRemapAddressRemapStateID

Description: Remap state ID of the given remap address element.

- Input: remapAddressID of type xsd:string.
- Returns: remapStateID of type xsd:string.

G.7.7.17 getRemapAddressValue

Description: Remap address of the given remap address element.

- Input: remapAddressID of type xsd:string.
- Returns: spiritNumberTypeValue of type spirit:spiritNumberType.

G.7.7.18 setBusInterfaceBitSteering

Description: Set bus interface bit steering value.

- Input: interfaceID of type xsd:string.
- Input: bitSteeringValue of type xsd:string.
- Returns: status of type *xsd:boolean*.

G.7.7.19 setBusInterfaceMasterBaseAddress

Description: Set base address of the master bus interface.

- Input: interfaceID of type xsd:string.
- Input: baseAddressValue of type spirit:spiritNumberType.

— Returns: status of type xsd:boolean.

G.7.7.20 setBusInterfaceMirroredSlaveRange

Description: Set address range for the associated interface.

- Input: interfaceID of type xsd:string.
- Input: spiritNumberTypeValue of type *spirit:spiritNumberType*.
- Returns: status of type xsd:boolean.

G.7.7.21 setRemapAddressValue

Description: Set remap address value for the associated interface.

- Input: remapAddressID of type xsd:string.
- Input: spiritNumberTypeValue of type spirit:spiritNumberType.
- Returns: status of type xsd:boolean.

G.7.8 Component instance operations

G.7.8.1 getComponentInstanceComponentID

Description: ID for the component associated with given instance (crossing from design to component file).

- Input: componentInstanceID of type xsd:string.
- Returns: componentID of type xsd:string.

G.7.8.2 getComponentInstanceName

Description: Instance name of the component.

- Input: componentInstanceID of type xsd:string.
- Returns: value of type xsd:string.

G.7.8.3 getComponentInstanceVLNV

Description: VLNV of the component (from the design file).

- Input: componentInstanceID of type xsd:string.
- Returns: vlnvValue of type spirit:soapStringArrayType.

G.7.8.4 getComponentInstanceXML

Description: Return the component XML in text format. Schema version is DE dependent.

- Input: componentInstanceID of type xsd:string.
- Returns: xmlText of type xsd:string.

G.7.9 Component operations

G.7.9.1 getChannelBusInterfaceIDs

Description: List of busInterface IDs in this channel.

- Input: channelID of type xsd:string.
- Returns: interfaceIDs of type spirit:soapStringArrayType.

G.7.9.2 getComponentAddressSpaceIDs

Description: List of IDs for the logical address spaces in the component.

- Input: componentID of type xsd:string.
- Returns: addressSpaceIDs of type spirit:soapStringArrayType.

G.7.9.3 getComponentBusInterfaceIDs

Description: List of interface IDs.

- Input: componentID of type xsd:string.
- Returns: interfaceIDs of type spirit:soapStringArrayType.

G.7.9.4 getComponentChannelIDs

Description: A list of channel IDs.

- Input: componentID of type xsd:string.
- Returns: channelIDs of type spirit:soapStringArrayType.

G.7.9.5 getComponentChoiceIDs

Description: List of choices IDs.

- Input: componentID of type xsd:string.
- Returns: choiceIDs of type *spirit:soapStringArrayType*.

G.7.9.6 getComponentCpuIDs

Description: List of cpu IDs of the component.

- Input: componentID of type xsd:string.
- Returns: cpuIDs of type spirit:soapStringArrayType.

G.7.9.7 getComponentElementType

Description: Returns the *type* name of the XML element associated with the component (currently only *component*). This call is being provided to cover a future scenario where there can be different types of component elements instantiated in a design (e.g., macroComponent elements).

- Input: componentID of type xsd:string.
- Returns: componentElementType of type xsd:string.

G.7.9.8 getComponentFileSetIDs

Description: List of file set IDs.

- Input: componentID of type xsd:string.
- Returns: fileSetIDs of type spirit:soapStringArrayType.

G.7.9.9 getComponentGeneratorIDs

Description: List of generator IDs of the component.

- Input: componentID of type xsd:string.
- Returns: generatorIDs of type spirit:soapStringArrayType.

G.7.9.10 getComponentMemoryMapIDs

Description: List of IDs for memory map elements in the given component.

- Input: componentID of type xsd:string.
- Returns: memoryMapIDs of type spirit:soapStringArrayType.

G.7.9.11 getComponentModelParameterIDs

Description: A list of model parameter IDs.

- Input: componentID of type xsd:string.
- Input: usageType of type xsd:string. Restrict returned parameters to those that match the given usageType. nontyped or typed or userdefined or all if not specified.
- Returns: parameterIDs of type *spirit:soapStringArrayType*.

G.7.9.12 getComponentOtherClockDriverIDs

Description: List of clock driver IDs of the component.

- Input: componentID of type xsd:string.
- Returns: clockDriverIDs of type *spirit:soapStringArrayType*.

G.7.9.13 getComponentPortIDs

Description: A list of component model port IDs.

- Input: componentID of type xsd:string.
- Returns: portIDs of type spirit:soapStringArrayType.

G.7.9.14 getComponentRemapStateIDs

Description: A list of remap state IDs.

- Input: componentID of type xsd:string.
- Returns: remapStateIDs of type spirit:soapStringArrayType.

G.7.9.15 getComponentVLNV

Description: VLNV of the component (from the component file).

- Input: componentID of type xsd:string.
- Returns: vlnvValue of type *spirit:soapStringArrayType*.

G.7.9.16 getComponentViewIDs

Description: A list of model view IDs.

- Input: componentID of type xsd:string.
- Input: configured of type xsd:boolean. If true returns only the view configured by a designConfiguration or NULL if not configured. If false returns all views.
- Returns: viewIDs of type spirit:soapStringArrayType.

G.7.9.17 getComponentWhiteboxElementIDs

Description: List of white box element IDs of the component.

- Input: componentID of type xsd:string.
- Returns: whiteboxElementIDs of type spirit:soapStringArrayType.

G.7.9.18 getCpuAddressSpaceIDs

Description: List of address space reference IDs of the cpu.

- Input: cpuID of type xsd:string.
- Returns: addressSpaceIDs of type spirit:soapStringArrayType.

G.7.10 Constraint operations

G.7.10.1 getDriveConstraintType

Description: Indicates the type of drive constraint: function class.

- Input: driveConstraintID of type xsd:string.
- Returns: driveConstraintTypeValue of type spirit:soapStringArrayType.

G.7.10.2 getDriveConstraintValue

Description: Returns the drive constraint. Format depends on the constraint type.

- Input: driveConstraintID of type xsd:string.
- Returns: value of type xsd:string.

G.7.10.3 getLoadConstraintCount

Description: Returns the load constraint count, the number of loads.

- Input: loadConstraintID of type xsd:string.
- Returns: value of type xsd:integer.

G.7.10.4 getLoadConstraintType

Description: Indicates the type of load constraint: function class.

- Input: loadConstraintID of type xsd:string.
- Returns: loadConstraintTypeValue of type spirit:soapStringArrayType.

G.7.10.5 getLoadConstraintValue

Description: Returns the load constraint. Format is cell function and strength or cell class and strength.

- Input: loadConstraintID of type xsd:string.
- Returns: value of type spirit:soapStringArrayType.

G.7.10.6 getPortConstraintSetDriveConstraintIDs

Description: List of drive constraint IDs of the port.

- Input: portConstraintSetID of type xsd:string.
- Returns: driveConstraintIDs of type spirit:soapStringArrayType.

G.7.10.7 getPortConstraintSetLoadConstraintIDs

Description: List of load constraint IDs of the port.

- Input: portConstraintSetID of type xsd:string.
- Returns: loadConstraintIDs of type *spirit:soapStringArrayType*.

G.7.10.8 getPortConstraintSetRange

Description: List of the left and right range of a port referenced by this constraint set.

- Input: portConstraintSetID of type xsd:string.
- Returns: integerArrayValue of type spirit:integerArrayType.

G.7.10.9 getPortConstraintSetReferenceName

Description: Reference name of the given port constraint set.

- Input: portConstraintSetID of type xsd:string.
- Returns: value of type xsd:string.

G.7.10.10 getPortConstraintSetTimingConstraintIDs

Description: List of timing constraint IDs of the port.

- Input: portConstraintSetID of type xsd:string.
- Returns: timingConstraintIDs of type *spirit:soapStringArrayType*.

G.7.10.11 getTimingConstraintClockDetails

Description: Indicates the clock name, clock edge, and delay type.

- Input: timingConstraintID of type xsd:string.
- Returns: clockDetailsValue of type spirit:soapStringArrayType.

G.7.10.12 getTimingConstraintValue

Description: Returns the timing constraint value (cycle time percentage).

- Input: timingConstraintID of type xsd:string.
- Returns: floatValue of type xsd:float.

G.7.11 Design operations

G.7.11.1 addAdHocConnection

Description: Add new ad hoc connection.

- Input: designID of type xsd:string.
- Input: name of type xsd:string.
- Input: displayName of type xsd:string.
- Input: description of type xsd:string.
- Input: componentRef of type xsd:string.
- Input: portRef of type xsd:string.
- Input: left of type xsd:string.

- Input: right of type xsd:string.
- Input: tiedValue of type spirit:spiritNumberType. Tied value for this connection, if blank no tied value.
- Returns: adHocConnectionID of type xsd:string. Element ID of the newly added ad hoc connection.

G.7.11.2 addAdHocExternalPortReference

Description: Add an external port reference to an existing ad hoc connection.

- Input: designID of type xsd:string.
- Input: adHocConnectionID of type xsd:string.
- Input: portRef of type xsd:string.
- Input: left of type xsd:string.
- Input: right of type xsd:string.
- Returns: adHocExternalPortReferenceID of type xsd:string. Element ID of the newly added external port reference.

G.7.11.3 addAdHocInternalPortReference

Description: Add an internal port reference to an existing ad hoc connection. An identical port reference must not already exist in the ad hoc connection.

- Input: designID of type xsd:string.
- Input: adHocConnectionID of type xsd:string.
- Input: componentRef of type xsd:string.
- Input: portRef of type xsd:string.
- Input: left of type xsd:string.
- Input: right of type xsd:string.
- Returns: adHocInternalPortReferenceID of type xsd:string. Element ID of the newly added internal port reference.

G.7.11.4 addComponentInstance

Description: Add new component instance.

- Input: designID of type xsd:string.
- Input: vlnvValue of type spirit:soapStringArrayType.
- Input: instanceName of type xsd:string.
- Input: displayName of type xsd:string.
- Input: description of type xsd:string.
- Returns: componentInstanceID of type xsd:string. Element ID of the newly added component instance.

G.7.11.5 addHierConnection

Description: Add new hierarchical connection.

- Input: designID of type xsd:string.
- Input: interfaceRef of type xsd:string.
- Input: componentRef of type xsd:string.

- Input: busRef of type xsd:string.
- Returns: hierConnectionID of type xsd:string. Element ID of the newly added hierarchical connection.

G.7.11.6 addHierarchicalMonitorInterconnection

Description: Add new hierarchical interconnection between a component and monitor. If there is already a monitorInterconnection for the given componentRef/componentInterfaceRef, then the monitor connection is added to that element.

- Input: designID of type xsd:string. The design that contains the interconnection.
- Input: componentPath of type xsd:string. The instance name path to the design that contains the component instance.
- Input: componentRef of type xsd:string. The component instance name.
- Input: componentInterfaceRef of type xsd:string.
- Input: monitorPath of type xsd:string. The instance name path to the design that contains the monitor instance.
- Input: monitorRef of type *xsd:string*. The component instance name with the monitor interface.
- Input: monitorInterfaceRef of type xsd:string.
- Input: name of type xsd:string.
- Input: displayName of type xsd:string.
- Input: description of type xsd:string.
- Returns: interconnectionID of type xsd:string. Element ID of the new/modified monitor interconnection.

G.7.11.7 addInterconnection

Description: Add new interconnection between components.

- Input: designID of type xsd:string.
- Input: component1Ref of type *xsd:string*. The component instance name.
- Input: interface1Ref of type xsd:string.
- Input: component2Ref of type xsd:string. The component instance name.
- Input: interface2Ref of type xsd:string.
- Input: name of type xsd:string.
- Input: displayName of type xsd:string.
- Input: description of type xsd:string.
- Returns: interconnectionID of type xsd:string. Element ID of the newly added interconnection.

G.7.11.8 addMonitorInterconnection

Description: Add new interconnection between a component and monitor. If there is already a monitorInterconnection for the given componentRef/componentInterfaceRef, then the monitor connection is added to that element.

- Input: designID of type *xsd:string*. The design that contains the interconnection.
- Input: componentRef of type xsd:string. The component instance name.
- Input: componentInterfaceRef of type xsd:string.
- Input: monitorRef of type xsd:string. The component instance name with the monitor interface.

- Input: monitorInterfaceRef of type xsd:string.
- Input: name of type xsd:string.
- Input: displayName of type xsd:string.
- Input: description of type xsd:string.
- Returns: interconnectionID of type xsd:string. Element ID of the new/modified monitor interconnection.

G.7.11.9 appendAbstractorInstance

Description: Append a new abstractor instance to the interconnection.

- Input: designID of type xsd:string.
- Input: interconnectionID of type xsd:string.
- Input: vlnvValue of type spirit:soapStringArrayType.
- Input: instanceName of type xsd:string.
- Input: displayName of type xsd:string.
- Input: description of type xsd:string.
- Returns: abstractorInstanceID of type xsd:string. Element ID of the newly added abstractor instance.

G.7.11.10 getAdHocConnectionExternalPortDetails

Description: List for an external connection containing the portRef, left, and right attribute values.

- Input: adHocExternalPortReferenceID of type xsd:string.
- Returns: details of type spirit:soapStringArrayType.

G.7.11.11 getAdHocConnectionExternalPortReferenceIDs

Description: List of external ad hoc port reference element IDs.

- Input: adHocConnectionID of type xsd:string.
- Returns: adHocExternalPortReferenceIDs of type spirit:soapStringArrayType.

G.7.11.12 getAdHocConnectionInternalPortReferenceDetails

Description: List for an internal connection containing the componentRef, portRef, left, and right attribute values.

- Input: adHocInternalPortReferenceID of type xsd:string.
- Returns: details of type spirit:soapStringArrayType.

G.7.11.13 getAdHocConnectionInternalPortReferenceIDs

Description: List of internal ad hoc port reference element IDs.

- Input: adHocConnectionID of type xsd:string.
- Returns: adHocInternalPortReferenceIDs of type spirit:soapStringArrayType.

G.7.11.14 getAdHocConnectionTiedValue

Description: Get the tied value for an ad hoc connection.

— Input: adHocConnectionID of type xsd:string.

— Returns: value of type xsd:string.

G.7.11.15 getComponentInstanceID

Description: Return the component instance ID of the named component instance in the given design.

- Input: designID of type xsd:string.
- Input: instanceName of type xsd:string.
- Returns: componentInstanceID of type xsd:string.

G.7.11.16 getDesignAdHocConnectionIDs

Description: List of ad hoc connection element IDs.

- Input: designID of type xsd:string.
- Returns: adHocConnectionIDs of type spirit:soapStringArrayType.

G.7.11.17 getDesignComponentInstanceIDs

Description: Components instances IDs of the given design.

- Input: designID of type xsd:string.
- Returns: componentInstanceIDs of type spirit:soapStringArrayType.

G.7.11.18 getDesignHierConnectionIDs

Description: List of hierarchical connection element IDs.

- Input: designID of type xsd:string.
- Returns: hierConnectionIDs of type spirit:soapStringArrayType.

G.7.11.19 getDesignID

Description: Get ID of the current or top design.

- Input: top of type *xsd:boolean*.
- Returns: designID of type *xsd:string*. The ID of the current design or the top design if the *top* argument is true.

G.7.11.20 getDesignInterconnectionAbstractorInstanceIDs

Description: List of abstractor instances IDs for this interconnection.

- Input: interconnectName of type xsd:string.
- Input: designID of type xsd:string.
- Returns: abstractorInstanceIDs of type spirit:soapStringArrayType.

G.7.11.21 getDesignInterconnectionIDs

Description: List of interconnection element IDs.

- Input: designID of type xsd:string.
- Returns: interconnectionIDs of type spirit:soapStringArrayType.

G.7.11.22 getDesignMonitorInterconnectionIDs

Description: List of monitorInterconnection element IDs.

- Input: designID of type xsd:string.
- Returns: monitorInterconnectionIDs of type spirit:soapStringArrayType.

G.7.11.23 getDesignVLNV

Description: VLNV of the design.

- Input: designID of type xsd:string.
- Returns: vlnvValue of type spirit:soapStringArrayType.

G.7.11.24 getHierConnectionDetails

Description: List containing the interface name, component reference, and interface reference.

- Input: hierConnectionID of type xsd:string.
- Returns: values of type spirit:soapStringArrayType.

G.7.11.25 getInterconnectionActiveInterfaces

Description: Returns the active interfaces as a list: componentRef interfaceRef componentRef interfaceRef.

- Input: interconnectionID of type xsd:string.
- Returns: activeInterfaceValue of type spirit:soapStringArrayType.

G.7.11.26 getMonitorInterconnectionInterfaces

Description: Returns the active interface and monitor interfaces as a list in componentPathRef, componentInterface, monitorPathRef, monitorInterface format; the active interface comes first in the list.

- Input: monitorInterconnectionID of type xsd:string.
- Returns: interconnectInterfaceValue of type spirit:soapStringArrayType.

G.7.11.27 removeAbstractorInstance

Description: Remove specified abstractor instance.

- Input: abstractorInstanceID of type xsd:string.
- Returns: status of type xsd:boolean.

G.7.11.28 removeAdHocExternalPortReference

Description: Remove an external port reference from existing ad hoc connection.

- Input: designID of type xsd:string.
- Input: adHocConnectionID of type xsd:string.
- Input: portRef of type xsd:string.
- Returns: status of type xsd:boolean.

G.7.11.29 removeAdHocInternalPortReference

Description: Remove an internal port from existing ad hoc connection. The ad hoc connection is removed when the last port reference is removed.

- Input: designID of type xsd:string.
- Input: adHocConnectionID of type xsd:string.

- Input: componentRef of type xsd:string.
- Input: portRef of type xsd:string.
- Returns: status of type xsd:boolean.

G.7.11.30 removeComponentInstance

Description: Remove specified component instance.

- Input: componentInstanceID of type xsd:string.
- Returns: status of type xsd:boolean.

G.7.11.31 removeHierConnection

Description: Remove existing hierarchical connection.

- Input: designID of type xsd:string.
- Input: componentRef of type xsd:string.
- Input: busRef of type xsd:string.
- Returns: status of type xsd:boolean.

G.7.11.32 removeHierarchicalMonitorInterconnection

Description: Remove a hierarchical interconnection between a component and monitor. When the last monitor reference is removed, the entire monitorInterconnection element will be removed.

- Input: designID of type xsd:string.
- Input: componentPath of type xsd:string. The instance name path to the design that contains the component instance.
- Input: componentRef of type *xsd:string*. The component instance name.
- Input: componentInterfaceRef of type xsd:string.
- Input: monitorPath of type xsd:string. The instance name path to the design that contains the monitor instance.
- Input: monitorRef of type *xsd:string*. The component instance name with the monitor interface.
- Input: monitorInterfaceRef of type xsd:string.
- Returns: status of type xsd:boolean.

G.7.11.33 removeInterconnection

Description: Remove interconnection between components, and any abstractors if present.

- Input: designID of type xsd:string.
- Input: component1Ref of type *xsd:string*. The component instance name.
- Input: interface1Ref of type xsd:string.
- Input: component2Ref of type xsd:string. The component instance name.
- Input: interface2Ref of type xsd:string.
- Returns: status of type xsd:boolean.

G.7.11.34 removeMonitorInterconnection

Description: Remove interconnection between a component and monitor. When the last monitor reference is removed, the entire monitorInterconnection element will be removed.

— Input: designID of type xsd:string.

- Input: componentRef of type xsd:string. The component instance name.
- Input: componentInterfaceRef of type xsd:string.
- Input: monitorRef of type xsd:string. The component instance name with the monitor interface.
- Input: monitorInterfaceRef of type xsd:string.
- Returns: status of type xsd:boolean.

G.7.11.35 replaceAbstractorInstance

Description: Replace specified abstractor with new provided abstractor.

- Input: designID of type xsd:string.
- Input: abstractorInstanceID of type xsd:string.
- Input: vlnvValue of type spirit:soapStringArrayType.
- Returns: status of type xsd:boolean.

G.7.11.36 replaceComponentInstance

Description: Replace specified component with new provided component.

- Input: designID of type xsd:string.
- Input: componentInstanceID of type xsd:string.
- Input: vlnvValue of type spirit:soapStringArrayType.
- Returns: status of type xsd:boolean.

G.7.12 Field operations

G.7.12.1 getRegisterFieldAccess

Description: The accessibility of the data in the field.

- Input: regFieldID of type xsd:string.
- Returns: value of type xsd:string.

G.7.12.2 getRegisterFieldBitOffset

Description: Bit offset of the fields LSB inside the register.

- Input: regFieldID of type xsd:string.
- Returns: value of type xsd:integer.

G.7.12.3 getRegisterFieldBitWidth

Description: Width of the field in bits.

- Input: elementID of type xsd:string.
 - Legal value: regFieldID of type xsd:string.
 - Legal value: regFieldUID of type xsd:string.
- Returns: width of type xsd:positiveInteger.

G.7.12.4 getRegisterFieldModifiedWriteValue

Description: The modified write value for the field.

— Input: regFieldID of type xsd:string.

— Returns: type of type *xsd:string*. One of "", onetoClear, oneToSet, oneToToggle, zeroToClear, zeroToSet, zeroToToggle, clear, set, or modified.

G.7.12.5 getRegisterFieldReadAction

Description: The read action for the field.

- Input: regFieldID of type xsd:string.
- Returns: type of type *xsd:string*. One of "", clear, set, or modify.

G.7.12.6 getRegisterFieldTestConstraint

Description: The test constraint required if the field can be tested with a simple register test.

- Input: regFieldID of type xsd:string.
- Returns: value of type xsd:string.

G.7.12.7 getRegisterFieldTestable

Description: True if the field can be tested with a simple register test.

- Input: regFieldID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.12.8 getRegisterFieldValue

Description: Enumerated bit field value.

- Input: regFieldValueID of type xsd:string.
- Returns: value of type *spirit:spiritNumberType*.

G.7.12.9 getRegisterFieldValuelDs

Description: List of IDs for field values for the given register field.

- Input: regFieldID of type xsd:string.
- Returns: regFieldValueIDs of type spirit:soapStringArrayType.

G.7.12.10 getRegisterFieldValueName

Description: Enumerated name for this register field value. Deprecated—use getName.

- Input: regFieldValueID of type xsd:string.
- Returns: value of type xsd:string.

G.7.12.11 getRegisterFieldValueUsage

Description: Enumerated bit field usage.

- Input: regFieldValueID of type xsd:string.
- Returns: usage of type xsd:string.

G.7.12.12 getRegisterFieldVolatility

Description: Indicates whether or not the data is volatile. The presumed value is *false* if the element is not present.

— Input: registerID of type xsd:string.

Returns: value of type xsd:string. Returns true or false.

G.7.12.13 getRegisterFieldWriteValueConstraintMinMax

Description: The value of a write constraint.

- Input: regFieldID of type xsd:string.
- Returns: integerArrayValue of type spirit:integerArrayType. This is an array of minimum and maximum or a zero element array if not specified.

G.7.12.14 getRegisterFieldWriteValueConstraintUseEnumeratedValues

Description: The write value constraint shall use the enumerated values.

- Input: regFieldID of type xsd:string.
- Returns: boolean of type xsd:boolean.

G.7.12.15 getRegisterFieldWriteValueConstraintWriteAsRead

Description: The write value constraint is write as read.

- Input: regFieldID of type xsd:string.
- Returns: boolean of type xsd:boolean.

G.7.12.16 setRegisterFieldBitWidth

Description: Set the width of the field in bits.

- Input: regFieldID of type xsd:string.
- Input: width of type xsd:positiveInteger.
- Returns: status of type xsd:integer.

G.7.13 File and fileset operations

G.7.13.1 getFileBuildCommandFlags

Description: Flags of the file build command.

- Input: elementID of type xsd:string.
 - Legal value: fileID of type *xsd:string*.
 - Legal value: fileUID of type *xsd:string*.
- Returns: value of type xsd:string.

G.7.13.2 getFileBuildCommandFlagsIsAppend

Description: Value of append attribute on the flag element.

- Input: fileID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.13.3 getFileBuildCommandName

Description: Name of the build command of the file.

- Input: elementID of type xsd:string.
 - Legal value: fileID of type *xsd:string*.

- Legal value: fileUID of type xsd:string.
- Returns: value of type xsd:string.

G.7.13.4 getFileBuildCommandReplaceDefaultFlags

Description: Indicates whether or not to replace default flags.

- Input: elementID of type xsd:string.
 - Legal value: fileID of type *xsd:string*.
 - Legal value: fileUID of type *xsd:string*.
- Returns: booleanValue of type xsd:boolean.

G.7.13.5 getFileBuildCommandTargetName

Description: Target name of the file build command.

- Input: elementID of type xsd:string.
 - Legal value: fileID of type *xsd:string*.
 - Legal value: fileUID of type *xsd:string*.
- Returns: value of type *xsd:string*.

G.7.13.6 getFileBuilderCommand

Description: Command of the file builder.

- Input: elementID of type xsd:string.
 - Legal value: fileBuilderID of type xsd:string.
 - Legal value: fileBuilderUID of type xsd:string.
- Returns: value of type xsd:string.

G.7.13.7 getFileBuilderFileType

Description: FileType or userFileType of the file builder.

- Input: fileBuilderID of type xsd:string.
- Returns: value of type xsd:string.

G.7.13.8 getFileBuilderFlags

Description: Flags of the file builder.

- Input: elementID of type xsd:string.
 - Legal value: fileBuilderID of type xsd:string.
 - Legal value: fileBuilderUID of type xsd:string.
- Returns: value of type *xsd:string*.

G.7.13.9 getFileBuilderReplaceDefaultFlags

Description: Value of the replaceDefaultFlags element of the file builder.

- Input: elementID of type xsd:string.
 - Legal value: fileBuilderID of type xsd:string.
 - Legal value: fileBuilderUID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.13.10 getFileDefineSymbolIDs

Description: List of define symbol IDs used in the file.

- Input: fileID of type xsd:string.
- Returns: fileDefineIDs of type spirit:soapStringArrayType.

G.7.13.11 getFileDependencies

Description: List of dependent locations for the file, typically directories.

- Input: fileID of type xsd:string.
- Returns: fileDependencyValue of type spirit:soapStringArrayType.

G.7.13.12 getFileExportedNames

Description: List of exported names of the file.

- Input: fileID of type xsd:string.
- Returns: exportedNamesValue of type spirit:soapStringArrayType.

G.7.13.13 getFileHasExternalDeclarations

Description: Indicates that the file includes external declarations required by the top-level netlist file.

- Input: fileID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.13.14 getFileImageTypes

Description: List of image types of the file.

- Input: fileID of type xsd:string.
- Returns: fileImageTypesValue of type spirit:soapStringArrayType.

G.7.13.15 getFileIsIncludeFile

Description: Indicates that the given file is an include file.

- Input: fileID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.13.16 getFileLogicalName

Description: Logical name of the file.

- Input: fileID of type xsd:string.
- Returns: value of type xsd:string.

G.7.13.17 getFileLogicalNameDefault

Description: Default attribute of logical name of the file.

- Input: fileID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.13.18 getFileName

Description: Get name of the given fileID.

- Input: elementID of type xsd:string.
 - Legal value: fileID of type *xsd:string*.
 - Legal value: fileUID of type *xsd:string*.
- Input: resolve of type xsd:boolean. True = DE shall return an absolute file path, False = actual XML text returned.
- Returns: name of type xsd:string.

G.7.13.19 getFileSetDependencies

Description: List of dependent locations for the fileSet, typically directories.

- Input: fileSetID of type xsd:string.
- Returns: fileDependencyValue of type spirit:soapStringArrayType.

G.7.13.20 getFileSetFileBuilderIDs

Description: List of file builder IDs used for this fileSet.

- Input: fileSetID of type xsd:string.
- Returns: fileBuilderIDs of type *spirit:soapStringArrayType*.

G.7.13.21 getFileSetFileIDs

Description: List of file IDs of the fileSet.

- Input: fileSetID of type xsd:string.
- Returns: fileIDs of type spirit:soapStringArrayType.

G.7.13.22 getFileSetFunctionIDs

Description: List of function IDs.

- Input: fileSetID of type xsd:string.
- Returns: functionIDs of type spirit:soapStringArrayType.

G.7.13.23 getFileSetGroupFileSetIDs

Description: List of fileSet IDs in this file set group.

- Input: fileSetGroupID of type xsd:string.
- Returns: fileSetIDs of type spirit:soapStringArrayType.

G.7.13.24 getFileSetGroupName

Description: Name of fileSet group.

- Input: fileSetGroupID of type xsd:string.
- Returns: value of type xsd:string.

G.7.13.25 getFileSetGroups

Description: List of group names of the fileSet.

- Input: fileSetID of type xsd:string.
- Returns: fileSetGroupsValue of type spirit:soapStringArrayType.

G.7.13.26 getFileType

Description: FileType or userFileType of the file.

- Input: fileID of type xsd:string.
- Returns: value of type spirit:soapStringArrayType.

G.7.13.27 getFunctionArgumentDataType

Description: Data type of the argument.

- Input: argumentID of type xsd:string.
- Returns: value of type xsd:string.

G.7.13.28 getFunctionArgumentIDs

Description: List of argument IDs of the function of the fileSet.

- Input: functionID of type xsd:string.
- Returns: argumentIDs of type spirit:soapStringArrayType.

G.7.13.29 getFunctionDisabled

Description: Indicates whether or not the function is disabled.

- Input: elementID of type xsd:string.
 - Legal value: functionID of type *xsd:string*.
 - Legal value: functionUID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.13.30 getFunctionEntryPoint

Description: Entry point of the function.

- Input: functionID of type xsd:string.
- Returns: value of type xsd:string.

G.7.13.31 getFunctionFileID

Description: File ID containing the function entry point.

- Input: functionID of type xsd:string.
- Returns: fileID of type xsd:string.

G.7.13.32 getFunctionReplicate

Description: Value of replicate attribute on function element.

- Input: functionID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.13.33 getFunctionReturnType

Description: Return type of the function.

- Input: functionID of type xsd:string.
- Returns: value of type xsd:string.

G.7.13.34 getFunctionSourceFileIDs

Description: List of source file IDs of the function of the fileSet.

- Input: functionID of type xsd:string.
- Returns: functionSourceFileIDs of type spirit:soapStringArrayType.

G.7.13.35 getFunctionSourceFileName

Description: Name of the source file.

- Input: functionSourceFileID of type xsd:string.
- Returns: value of type xsd:string.

G.7.13.36 getFunctionSourceFileType

Description: FileType or userFileType of the source file.

- Input: functionSourceFileID of type xsd:string.
- Returns: value of type xsd:string.

G.7.13.37 setFileBuildCommandFlags

Description: Set command flags for the given file builder.

- Input: fileID of type xsd:string.
- Input: value of type xsd:string.
- Returns: status of type xsd:boolean.

G.7.13.38 setFileBuildCommandName

Description: Set command name for the given file builder.

- Input: fileID of type xsd:string.
- Input: value of type xsd:string.
- Returns: status of type xsd:boolean.

G.7.13.39 setFileBuildCommandReplaceDefaultFlags

Description: Set replace default flags for the given file builder.

- Input: fileID of type xsd:string.
- Input: booleanValue of type xsd:boolean.
- Returns: status of type *xsd:boolean*.

G.7.13.40 setFileBuildCommandTargetName

Description: Set target name for build command for the given file.

— Input: fileID of type xsd:string.

- Input: value of type xsd:string.
- Returns: status of type xsd:boolean.

G.7.13.41 setFileBuilderCommand

Description: Set command associated with file builder.

- Input: fileBuilderID of type xsd:string.
- Input: command of type xsd:string.
- Returns: status of type xsd:boolean.

G.7.13.42 setFileBuilderFlags

Description: Set flags associated with the given file builder.

- Input: fileBuilderID of type xsd:string.
- Input: flags of type xsd:string.
- Returns: status of type *xsd:boolean*.

G.7.13.43 setFileBuilderReplaceDefaultFlags

Description: Set value of replace default flags in file builder.

- Input: fileBuilderID of type xsd:string.
- Input: replaceDefaultFlags of type xsd:boolean.
- Returns: status of type xsd:boolean.

G.7.13.44 setFileName

Description: Set name of the given file.

- Input: fileID of type xsd:string.
- Input: value of type *xsd:string*. File name may be not be a relative path.
- Returns: status of type xsd:boolean.

G.7.13.45 setFunctionDisabled

Description: Set disable flag on function.

- Input: functionID of type xsd:string.
- Input: booleanValue of type xsd:boolean.
- Returns: status of type xsd:boolean.

G.7.14 Generator operations

G.7.14.1 getGeneratorApiType

Description: Api type of the generator.

- Input: generatorID of type xsd:string.
- Returns: value of type xsd:string.

G.7.14.2 getGeneratorExecutable

Description: Executable name associated with the generator.

- Input: generatorID of type xsd:string.
- Returns: value of type xsd:string.

G.7.14.3 getGeneratorGroups

Description: List of group names of the generator.

- Input: generatorID of type xsd:string.
- Returns: generatorGroupValue of type spirit:soapStringArrayType.

G.7.14.4 getGeneratorIsHidden

Description: Value of hidden attribute on the generator.

- Input: generatorID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.14.5 getGeneratorPhase

Description: Phase number of the generator.

- Input: generatorID of type xsd:string.
- Returns: floatValue of type xsd:float.

G.7.14.6 getGeneratorScope

Description: Scope of the generator.

- Input: generatorID of type xsd:string.
- Returns: value of type xsd:string.

G.7.14.7 getGeneratorTransportMethods

Description: List of transport methods of the generator.

- Input: generatorID of type xsd:string.
- Returns: transportValue of type spirit:soapStringArrayType.

G.7.15 Interface operations

G.7.15.1 getInterfaceAbstractionTypeVLNV

Description: List of VLNV of the abstraction definition.

- Input: interfaceID of type xsd:string.
- Returns: vlnvValue of type *spirit:soapStringArrayType*.

G.7.15.2 getInterfaceBusTypeVLNV

Description: List of VLNV of the bus definition.

- Input: interfaceID of type xsd:string.
- Returns: vlnvValue of type *spirit:soapStringArrayType*.

G.7.15.3 getInterfaceMode

Description: Mode of the interface: master, slave, system, mirroredMaster, mirroredSlave, mirroredSystem, or monitor.

- Input: interfaceID of type xsd:string.
- Returns: value of type xsd:string.

G.7.15.4 getInterfacePortMapIDs

Description: List of interface port map IDs.

- Input: interfaceID of type xsd:string.
- Returns: interfacePortMapIDs of type spirit:soapStringArrayType.

G.7.15.5 getLogicalPhysicalMapIDs

Description: List of the logical and physical port map IDs.

- Input: interfacePortMapID of type xsd:string.
- Returns: portMapIDs of type *spirit:soapStringArrayType*.

G.7.15.6 getPortMapRange

Description: List of left and right range of the port map.

- Input: elementID of type xsd:string.
 - Legal value: portMapID of type xsd:string.
 - Legal value: portMapUID of type xsd:string.
- Returns: nonNegativeIntegerArrayValue of type *spirit:nonNegativeIntegerArrayType*. The return array value is in the format of logical vector left, right, physical vector left, right.

G.7.15.7 setPortMapRange

Description: Set left/right range of an interface port map.

- Input: portMapID of type xsd:string.
- Input: nonNegativeIntegerArrayMessage of type spirit:nonNegativeIntegerArrayType.
- Returns: status of type *xsd:boolean*.

G.7.16 Miscellaneous operations

G.7.16.1 end

Description: Terminate connection to the DE.

- Input: gen_status of type xsd:integer. Status indicator from the generator. Non-zero implies an
 error.
- Input: message of type *xsd:string*. Message that the DE may display to the user.
- Returns: de status of type xsd:integer. Status indicator from the DE. Non-zero implies an error.

G.7.16.2 getChoiceEnumerationHelp

Description: Value of the enumeration help attribute.

— Input: choiceEnumerationID of type xsd:string.

— Returns: help of type xsd:string.

G.7.16.3 getChoiceEnumerationIDs

Description: List of choice enumeration IDs of the choice.

- Input: choiceID of type xsd:string.
- Returns: choiceEnumerationIDs of type spirit:soapStringArrayType.

G.7.16.4 getChoiceEnumerationText

Description: Value of the enumeration text attribute.

- Input: choiceEnumerationID of type xsd:string.
- Returns: text of type xsd:string.

G.7.16.5 getChoiceEnumerationValue

Description: Value of the enumeration element.

- Input: choiceEnumerationID of type xsd:string.
- Returns: value of type xsd:string.

G.7.16.6 getChoiceName

Description: Name of the choice.

- Input: choiceID of type xsd:string.
- Returns: value of type xsd:string.

G.7.16.7 getDescription

Description: Return the description of the specified element.

- Input: elementID of type xsd:string.
 - Legal value: abstractionDefID of type xsd:string.
 - Legal value: abstractorID of type xsd:string.
 - Legal value: abstractorInstanceID of type xsd:string.
 - Legal value: adHocConnectionID of type xsd:string.
 - Legal value: addressBlockID of type xsd:string.
 - Legal value: addressSpaceID of type xsd:string.
 - Legal value: alternateRegisterID of type xsd:string.
 - Legal value: argumentID of type xsd:string.
 - Legal value: bankID of type xsd:string.
 - Legal value: busdefID of type xsd:string.
 - Legal value: channelID of type xsd:string.
 - Legal value: componentID of type xsd:string.
 - Legal value: componentInstanceID of type xsd:string.
 - Legal value: cpuID of type xsd:string.
 - Legal value: designID of type xsd:string.
 - Legal value: executableImageID of type xsd:string.
 - Legal value: fileDefineID of type xsd:string.

- Legal value: fileID of type xsd:string.
- Legal value: fileSetID of type xsd:string.
- Legal value: generatorID of type xsd:string.
- Legal value: interconnectionID of type xsd:string.
- Legal value: interfaceID of type xsd:string.
- Legal value: localMemoryMapID of type xsd:string.
- Legal value: memoryMapID of type xsd:string.
- Legal value: memoryRemapID of type xsd:string.
- Legal value: monitorInterconnectionID of type xsd:string.
- Legal value: parameterID of type xsd:string.
- Legal value: portConstraintSetID of type xsd:string.
- Legal value: portID of type xsd:string.
- Legal value: regFieldID of type xsd:string.
- Legal value: regFieldValueID of type xsd:string.
- Legal value: registerID of type xsd:string.
- Legal value: registerFileID of type xsd:string.
- Legal value: remapStateID of type xsd:string.
- Legal value: segmentID of type xsd:string.
- Legal value: subspaceMapID of type xsd:string.
- Legal value: viewID of type xsd:string.
- Legal value: whiteboxElementID of type xsd:string.
- Returns: description of type xsd:string.

G.7.16.8 getDisplayName

Description: Return the displayName of the specified element.

- Input: elementID of type xsd:string.
 - Legal value: adHocConnectionID of type xsd:string.
 - Legal value: addressBlockID of type xsd:string.
 - Legal value: addressSpaceID of type xsd:string.
 - Legal value: alternateRegisterID of type xsd:string.
 - Legal value: argumentID of type xsd:string.
 - Legal value: bankID of type xsd:string.
 - Legal value: channelID of type xsd:string.
 - Legal value: cpuID of type xsd:string.
 - Legal value: fileDefineID of type xsd:string.
 - Legal value: fileSetID of type xsd:string.
 - Legal value: generatorID of type xsd:string.
 - Legal value: interconnectionID of type xsd:string.
 - Legal value: interfaceID of type xsd:string.
 - Legal value: localMemoryMapID of type xsd:string.
 - Legal value: memoryMapID of type xsd:string.
 - Legal value: memoryRemapID of type xsd:string.
 - Legal value: monitorInterconnectionID of type xsd:string.

- Legal value: parameterID of type xsd:string.
- Legal value: portConstraintSetID of type xsd:string.
- Legal value: portID of type xsd:string.
- Legal value: regFieldID of type xsd:string.
- Legal value: regFieldValueID of type xsd:string.
- Legal value: registerID of type xsd:string.
- Legal value: registerFileID of type xsd:string.
- Legal value: remapStateID of type xsd:string.
- Legal value: segmentID of type xsd:string.
- Legal value: subspaceMapID of type xsd:string.
- Legal value: viewID of type xsd:string.
- Legal value: whiteboxElementID of type xsd:string.
- Returns: displayName of type xsd:string.

G.7.16.9 getErrorMessage

Description: Get error message from prior callback.

- Input: callerIdent of type xsd:string. ID string for debugging calls to this command within the DE. Any value is okay.
- Returns: message of type xsd:string.

G.7.16.10 getGeneratorContextComponentInstanceID

Description: ID for the component instance associated with the currently invoked generator.

- Input: generatorName of type *xsd:string*. Generator name for use within DE in case of errors.
- Returns: componentInstanceID of type xsd:string.

G.7.16.11 getIdValue

Description: Return the value of the spirit:id attribute on a ID.

- Input: elementID of type xsd:string.
 - Legal value: addressBlockID of type xsd:string.
 - Legal value: alternateRegisterID of type xsd:string.
 - Legal value: localMemoryMapID of type xsd:string.
 - Legal value: memoryMapID of type xsd:string.
 - Legal value: memoryRemapID of type xsd:string.
 - Legal value: regFieldID of type xsd:string.
 - Legal value: registerID of type *xsd:string*.
 - Legal value: registerFileID of type xsd:string.
- Returns: id of type xsd:string.

G.7.16.12 getModelParameterDataType

Description: Data type of the model parameter.

- Input: parameterID of type xsd:string.
- Returns: value of type xsd:string.

G.7.16.13 getModelParameterUsageType

Description: Usage type of the model parameter.

- Input: parameterID of type xsd:string.
- Returns: value of type xsd:string. possible values are nontyped and typed.

G.7.16.14 getName

Description: Return the name of the specified element.

- Input: elementID of type xsd:string.
 - Legal value: adHocConnectionID of type xsd:string.
 - Legal value: addressBlockID of type xsd:string.
 - Legal value: addressSpaceID of type xsd:string.
 - Legal value: alternateRegisterID of type xsd:string.
 - Legal value: argumentID of type xsd:string.
 - Legal value: bankID of type xsd:string.
 - Legal value: channelID of type xsd:string.
 - Legal value: cpuID of type xsd:string.
 - Legal value: executable Image ID of type xsd:string.
 - Legal value: fileDefineID of type xsd:string.
 - Legal value: fileID of type xsd:string.
 - Legal value: fileSetID of type xsd:string.
 - Legal value: generatorID of type xsd:string.
 - Legal value: interconnectionID of type xsd:string.
 - Legal value: interfaceID of type xsd:string.
 - Legal value: linkerCommandFileID of type xsd:string.
 - Legal value: localMemoryMapID of type xsd:string.
 - Legal value: memoryMapID of type xsd:string.
 - Legal value: memoryRemapID of type xsd:string.
 - Legal value: monitorInterconnectionID of type xsd:string.
 - Legal value: parameterID of type xsd:string.
 - Legal value: portConstraintSetID of type xsd:string.
 - Legal value: portID of type xsd:string.
 - Legal value: portMapID of type xsd:string.
 - Legal value: regFieldID of type xsd:string.
 - Legal value: reqFieldValueID of type xsd:string.
 - Legal value: registerID of type xsd:string.
 - Legal value: registerFileID of type xsd:string.
 - Legal value: remapStateID of type xsd:string.
 - Legal value: segmentID of type xsd:string.
 - Legal value: subspaceMapID of type xsd:string.
 - Legal value: viewID of type xsd:string.
 - Legal value: whiteboxElementID of type xsd:string.
- Returns: name of type xsd:string.

G.7.16.15 getParameterIDs

Description: List of parameter IDs from the given element (any of which contains spirit:parameter elements).

- Input: elementID of type xsd:string.
 - Legal value: abstractorID of type xsd:string.
 - Legal value: addressBlockID of type xsd:string.
 - Legal value: addressSpaceID of type xsd:string.
 - Legal value: alternateRegisterID of type xsd:string.
 - Legal value: bankID of type xsd:string.
 - Legal value: cpuID of type *xsd:string*.
 - Legal value: componentID of type xsd:string.
 - Legal value: executable Image ID of type xsd:string.
 - Legal value: generatorID of type xsd:string.
 - Legal value: interfaceID of type xsd:string.
 - Legal value: linkerCommandFileID of type xsd:string.
 - Legal value: memoryMapID of type xsd:string.
 - Legal value: regFieldID of type xsd:string.
 - Legal value: registerID of type xsd:string.
 - Legal value: registerFileID of type xsd:string.
 - Legal value: subspaceMapID of type xsd:string.
 - Legal value: serviceTypeDefID of type xsd:string.
 - Legal value: viewID of type xsd:string.
 - Legal value: whiteboxElementID of type xsd:string.
- Returns: parameterIDs of type *spirit:soapStringArrayType*.

G.7.16.16 getUnconfiguredID

Description: Return the unconfigured ID from a configured ID.

- Input: elementID of type xsd:string.
 - Legal value: addressBlockID of type xsd:string.
 - Legal value: addressSpaceID of type xsd:string.
 - Legal value: alternateRegisterID of type xsd:string.
 - Legal value: argumentID of type xsd:string.
 - Legal value: bankID of type xsd:string.
 - Legal value: clockDriverID of type xsd:string.
 - Legal value: executableImageID of type xsd:string.
 - Legal value: fileDefineID of type xsd:string.
 - Legal value: fileBuilderID of type xsd:string.
 - Legal value: fileID of type xsd:string.
 - Legal value: functionID of type xsd:string.
 - Legal value: interfaceID of type xsd:string.
 - Legal value: linkerCommandFileID of type xsd:string.
 - Legal value: parameterID of type xsd:string.

- Legal value: portID of type *xsd:string*.
- Legal value: portMapID of type xsd:string.
- Legal value: regFieldID of type xsd:string.
- Legal value: registerID of type xsd:string.
- Legal value: registerFileID of type xsd:string.
- Legal value: segmentID of type xsd:string.
- Legal value: singleShotDriverID of type xsd:string.
- Legal value: subspaceMapID of type xsd:string.
- Returns: elementID of type xsd:string. Unconfigured ID.
 - Possible value(s): addressBlockUID of type xsd:string.
 - Possible value(s): addressSpaceUID of type xsd:string.
 - Possible value(s): alternateRegisterUID of type xsd:string.
 - Possible value(s): argumentUID of type xsd:string.
 - Possible value(s): bankUID of type xsd:string.
 - Possible value(s): clockDriverUID of type xsd:string.
 - Possible value(s): executableImageUID of type xsd:string.
 - Possible value(s): fileBuilderUID of type xsd:string.
 - Possible value(s): fileDefineUID of type xsd:string.
 - Possible value(s): fileUID of type xsd:string.
 - Possible value(s): functionUID of type *xsd:string*.
 - Possible value(s): interfaceUID of type xsd:string.
 - Possible value(s): linkerCommandFileUID of type xsd:string.
 - Possible value(s): parameterUID of type *xsd:string*.
 - Possible value(s): portUID of type *xsd:string*.
 - Possible value(s): portMapUID of type xsd:string.
 - Possible value(s): regFieldUID of type xsd:string.
 - Possible value(s): registerUID of type xsd:string.
 - Possible value(s): registerFileUID of type xsd:string.
 - Possible value(s): segmentUID of type xsd:string.
 - Possible value(s): singleShotDriverUID of type xsd:string.
 - Possible value(s): subspaceMapUID of type *xsd:string*.

G.7.16.17 getValue

Description: Get the value of a parameterID, fileDefineIDs, or argumentIDs.

- Input: elementID of type xsd:string.
 - Legal value: argumentID of type xsd:string.
 - Legal value: argumentUID of type xsd:string.
 - Legal value: fileDefineID of type xsd:string.
 - Legal value: fileDefineUID of type xsd:string.
 - Legal value: parameterID of type xsd:string.
 - Legal value: parameterUID of type xsd:string.
- Returns: value of type xsd:string.

G.7.16.18 getValueAttribute

Description: Returns the value of the given attribute name on the elementID/value element.

- Input: elementID of type xsd:string.
 - Legal value: argumentID of type xsd:string.
 - Legal value: fileDefineID of type xsd:string.
 - Legal value: parameterID of type xsd:string.
- Input: attrName of type *xsd:string*. This is a namespace qualified attribute.
- Returns: value of type *xsd:string*.

G.7.16.19 getVendorAttribute

Description: Get vendor-defined attribute from the given element.

- Input: elementID of type xsd:string.
 - Legal value: argumentID of type xsd:string.
 - Legal value: fileDefineID of type xsd:string.
 - Legal value: fileID of type xsd:string.
 - Legal value: interfaceID of type xsd:string.
 - Legal value: parameterID of type xsd:string.
- Input: attrName of type xsd:string.
- Returns: attrValue of type xsd:string.

G.7.16.20 getVendorExtensions

Description: Returns the complete XML text of the vendor extension element including the spirit:vendorExtension tag, as a well-formed XML document.

- Input: elementID of type xsd:string.
 - Legal value: abstractionDefID of type xsd:string.
 - Legal value: abstractionDefPortID of type xsd:string.
 - Legal value: abstractionServiceID of type xsd:string.
 - Legal value: abstractorID of type xsd:string.
 - Legal value: addressBlockID of type xsd:string.
 - Legal value: addressSpaceID of type xsd:string.
 - Legal value: alternateReqisterID of type xsd:string.
 - Legal value: argumentID of type xsd:string.
 - Legal value: bankID of type xsd:string.
 - Legal value: busdefID of type xsd:string.
 - Legal value: componentID of type xsd:string.
 - Legal value: componentInstanceID of type xsd:string.
 - Legal value: cpuID of type xsd:string.
 - Legal value: designID of type xsd:string.
 - Legal value: executableImageID of type xsd:string.
 - Legal value: fileBuilderID of type xsd:string.
 - Legal value: fileDefineID of type xsd:string.
 - Legal value: fileID of type *xsd:string*.

- Legal value: fileSetID of type xsd:string.
- Legal value: generatorID of type xsd:string.
- Legal value: hierConnectionID of type xsd:string.
- Legal value: interfaceID of type xsd:string.
- Legal value: linkerCommandFileID of type xsd:string.
- Legal value: memoryMapID of type xsd:string.
- Legal value: parameterID of type xsd:string.
- Legal value: portID of type xsd:string.
- Legal value: regFieldID of type xsd:string.
- Legal value: registerID of type xsd:string.
- Legal value: registerFileID of type *xsd:string*.
- Legal value: segmentID of type xsd:string.
- Legal value: subspaceMapID of type xsd:string.
- Legal value: serviceID of type xsd:string.
- Legal value: viewID of type xsd:string.
- Legal value: whiteboxElementID of type xsd:string.
- Returns: value of type xsd:string.

G.7.16.21 getWarningCount

Description: Return count of how many potentially incompatible API calls have been made.

- Input: callerIdent of type xsd:string. ID string for debugging calls to this command within the DE. Any value is okay.
- Returns: count of type xsd:integer.

G.7.16.22 getXMLForVLNV

Description: Return XML of the IP-XACT object identified by the given VLNV.

- Input: vlnvValue of type spirit:soapStringArrayType.
- Returns: xmlText of type xsd:string.

G.7.16.23 init

Description: API initialization function. Must be called before any other API call.

- Input: apiVersion of type xsd:string. Indicates the API version with which the generator is defined to work.
- Input: failureMode of type spirit:apiFailureMode. Compatability failure mode: fail—DE should return an error on the init call if its API version does not match the one passed to the init call; error—DE should return an error each time a potentially incompatible API call is made; warning—DE should increment a warning count each time a potentially incompatible API call is made.
- Input: message of type xsd:string. Message that the DE may display to the user.
- Returns: status of type xsd:boolean.

G.7.16.24 message

Description: Send message level and message text to DE.

— Input: severity of type xsd:string.

- Input: message of type xsd:string.
- Returns: status of type xsd:boolean.

G.7.16.25 registerVLNV

Description: Indicate to DE where the file resides for the IP-XACT element with the given VLNV.

- Input: fileName of type xsd:string.
- Input: replace of type xsd:boolean. True = always register, False = do not register if the VLNV already exists.
- Returns: status of type xsd:boolean. True = VLNV registered, False = VLNV not registered.

G.7.16.26 setValue

Description: Set the value of a parameterID, fileDefineIDs, or argumentIDs.

- Input: elementID of type xsd:string.
 - Legal value: argumentID of type xsd:string.
 - Legal value: fileDefineID of type xsd:string.
 - Legal value: parameterID of type xsd:string.
- Input: value of type xsd:string.
- Returns: status of type xsd:boolean.

G.7.16.27 setVendorAttribute

Description: Set vendor-defined attribute on the given element.

- Input: elementID of type xsd:string.
 - Legal value: argumentID of type xsd:string.
 - Legal value: fileDefineID of type xsd:string.
 - Legal value: fileID of type xsd:string.
 - Legal value: interfaceID of type xsd:string.
 - Legal value: parameterID of type xsd:string.
- Input: attrName of type xsd:string.
- Input: attrValue of type xsd:string.
- Returns: status of type *xsd:integer*.

G.7.16.28 setVendorExtensions

Description: Set vendor extensions. See NOTE.

NOTE—This call is only supported for elements within a spirit:design.

- Input: elementID of type xsd:string.
 - Legal value: componentInstanceID of type xsd:string.
 - Legal value: designID of type xsd:string.
 - Legal value: hierConnectionID of type xsd:string.
- Input: extensionText of type xsd:string. Complete vendor extension text as a well-formed XML document with top-level element of spirit:vendorExtensions.
- Returns: status of type xsd:boolean.

G.7.17 Port operations

G.7.17.1 getAllLogicalDirectionsAllowed

Description: Get the value of the allLogicalDirectionAllowed attribute.

- Input: portID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.17.2 getClockDriverName

Description: Name of the clock driver.

- Input: clockDriverID of type xsd:string.
- Returns: value of type xsd:string.

G.7.17.3 getClockDriverPeriod

Description: Clock period of the given clock.

- Input: elementID of type xsd:string.
 - Legal value: clockDriverID of type xsd:string.
 - Legal value: clockDriverUID of type xsd:string.
- Returns: floatValue of type xsd:float.

G.7.17.4 getClockDriverPeriodUnits

Description: Units of the clock period of the given clock.

- Input: clockDriverID of type xsd:string.
- Returns: units of type xsd:string.

G.7.17.5 getClockDriverPulseDuration

Description: Clock period of the given clock.

- Input: elementID of type xsd:string.
 - Legal value: clockDriverID of type xsd:string.
 - Legal value: clockDriverUID of type xsd:string.
- Returns: floatValue of type xsd:float.

G.7.17.6 getClockDriverPulseDurationUnits

Description: Units of the clock pulse duration of the given clock.

- Input: clockDriverID of type xsd:string.
- Returns: units of type xsd:string.

G.7.17.7 getClockDriverPulseOffset

Description: Clock pulse offset of the given clock.

- Input: elementID of type xsd:string.
 - Legal value: clockDriverID of type xsd:string.
 - Legal value: clockDriverUID of type xsd:string.
- Returns: floatValue of type xsd:float.

G.7.17.8 getClockDriverPulseOffsetUnits

Description: Units of the clock pulse offset of the given clock.

- Input: clockDriverID of type xsd:string.
- Returns: units of type xsd:string.

G.7.17.9 getClockDriverPulseValue

Description: Clock pulse value of the given clock.

- Input: elementID of type xsd:string.
 - Legal value: clockDriverID of type xsd:string.
 - Legal value: clockDriverUID of type xsd:string.
- Returns: spiritNumberTypeValue of type spirit:spiritNumberType.

G.7.17.10 getClockDriverSource

Description: Source name of the clock driver.

- Input: clockDriverID of type xsd:string.
- Returns: value of type xsd:string.

G.7.17.11 getPortAccessHandle

Description: Alternate name to be used when accessing this port.

- Input: portID of type xsd:string.
- Returns: accessHandle of type *xsd:string*.

G.7.17.12 getPortAccessType

Description: Indicates the access type for this port.

- Input: portID of type xsd:string.
- Returns: accessType of type xsd:string.

G.7.17.13 getPortClockDriverID

Description: Element ID of clock driver element, if present.

- Input: portID of type xsd:string.
- Returns: clockDriverID of type xsd:string.

G.7.17.14 getPortConstraintSetIDs

Description: List of constraint sets IDs of the port.

- Input: portID of type xsd:string.
- Returns: portConstraintSetIDs of type spirit:soapStringArrayType.

G.7.17.15 getPortDefaultValue

Description: Default value of the port, if not set returns "".

- Input: elementID of type xsd:string.
 - Legal value: portID of type *xsd:string*.

- Legal value: portUID of type *xsd:string*.
- Returns: value of type xsd:string.

G.7.17.16 getPortDirection

Description: Direction of the port.

- Input: portID of type xsd:string.
- Returns: value of type *xsd:string*.

G.7.17.17 getPortMaxAllowedConnections

Description: Maximum allowed connections for this transactional port.

- Input: portID of type xsd:string.
- Returns: value of type xsd:string.

G.7.17.18 getPortMinAllowedConnections

Description: Minimum allowed connections for this transactional port.

- Input: portID of type xsd:string.
- Returns: value of type xsd:string.

G.7.17.19 getPortRange

Description: List of the left and right range of the port.

- Input: portID of type xsd:string.
- Returns: integerArrayValue of type spirit:integerArrayType. array of left and right or zero element array if not specified.

G.7.17.20 getPortServiceID

Description: ID of element representing the service of a transactional port.

- Input: portID of type xsd:string.
- Returns: serviceID of type xsd:string.

G.7.17.21 getPortSingleShotDriverID

Description: Element ID of single shot driver element, if present.

- Input: portID of type xsd:string.
- Returns: singleShotDriverID of type xsd:string.

G.7.17.22 getPortSingleShotPulseDuration

Description: Clock period of the port.

- Input: elementID of type xsd:string.
 - Legal value: singleShotDriverID of type xsd:string.
 - Legal value: singleShotDriverUID of type xsd:string.
- Returns: floatValue of type xsd:float.

G.7.17.23 getPortSingleShotPulseOffset

Description: Clock pulse offset of the port.

- Input: singleShotDriverID of type xsd:string.
- Returns: floatValue of type xsd:float.

G.7.17.24 getPortSingleShotPulseValue

Description: Clock pulse value of the port.

- Input: singleShotDriverID of type xsd:string.
- Returns: spiritNumberTypeValue of type spirit:spiritNumberType.

G.7.17.25 getPortStyle

Description: Returns wire or transactional to indicate the port style.

- Input: portID of type xsd:string.
- Returns: value of type xsd:string.

G.7.17.26 getPortTransactionalTypeDefID

Description: The type definition for a transactional portID.

- Input: portID of type xsd:string.
- Returns: transactionalTypeDefID of type xsd:string.

G.7.17.27 getPortWireTypeDefIDs

Description: List of typeDefs for a wire portID.

- Input: portID of type xsd:string.
- Returns: wireTypeDefIDs of type *spirit:soapStringArrayType*.

G.7.17.28 setClockDriverPeriod

Description: Set period of the given clock port.

- Input: clockDriverID of type xsd:string.
- Input: floatValue of type xsd:float.
- Returns: status of type *xsd:boolean*.

G.7.17.29 setClockDriverPulseDuration

Description: Set pulse duration of the given clock port.

- Input: clockDriverID of type xsd:string.
- Input: floatValue of type xsd:float.
- Returns: status of type *xsd:boolean*.

G.7.17.30 setClockDriverPulseOffset

Description: Set pulse offset value of the given clock port.

- Input: clockDriverID of type xsd:string.
- Input: floatValue of type xsd:float.

— Returns: status of type xsd:boolean.

G.7.17.31 setClockDriverPulseValue

Description: Set pulse value of the given clock port.

- Input: clockDriverID of type xsd:string.
- Input: spiritNumberTypeValue of type spirit:spiritNumberType.
- Returns: status of type xsd:boolean.

G.7.17.32 setPortDefaultValue

Description: Set default value of the given port.

- Input: portID of type xsd:string.
- Input: value of type xsd:string.
- Returns: status of type xsd:boolean.

G.7.17.33 setPortRange

Description: Set left/right range for the given port.

- Input: portID of type xsd:string.
- Input: integerArrayMessage of type spirit:integerArrayType.
- Returns: status of type xsd:boolean.

G.7.17.34 setPortSingleShotPulseDuration

Description: Set pulse duration of given single shot port.

- Input: singleShotDriverID of type xsd:string.
- Input: floatValue of type xsd:float.
- Returns: status of type xsd:boolean.

G.7.17.35 setPortSingleShotPulseOffset

Description: Set pulse offset of given single shot port.

- Input: singleShotDriverID of type xsd:string.
- Input: floatValue of type xsd:float.
- Returns: status of type *xsd:boolean*.

G.7.17.36 setPortSingleShotPulseValue

Description: Set pulse value of given single shot port.

- Input: singleShotDriverID of type xsd:string.
- Input: spiritNumberTypeValue of type spirit:spiritNumberType.
- Returns: status of type xsd:boolean.

G.7.18 Register file operations

G.7.18.1 getRegisterFileAddressOffset

Description: The offset from the base address.

- Input: registerFileID of type xsd:string.
- Returns: offset of type spirit:spiritNumberType.

G.7.18.2 getRegisterFileDimensions

Description: Dimensions of a register file array.

- Input: registerFileID of type xsd:string.
- Returns: dimensions of type spirit:nonNegativeIntegerArrayType.

G.7.18.3 getRegisterFileRange

Description: The register file range in number of addressable units.

- Input: elementID of type xsd:string.
 - Legal value: registerFileID of type xsd:string.
 - Legal value: registerFileUID of type xsd:string.
- Returns: range of type *xsd:positiveInteger*.

G.7.18.4 getRegisterFileRegisterFileIDs

Description: List of IDs for the register files of the given register file.

- Input: registerFileID of type xsd:string.
- Returns: registerFileIDs of type spirit:soapStringArrayType.

G.7.18.5 getRegisterFileRegisterIDs

Description: List of IDs for the registers of the given register file.

- Input: registerFileID of type xsd:string.
- Returns: registerIDs of type spirit:soapStringArrayType.

G.7.18.6 setRegisterFileRange

Description: Set the register file range in addressable units.

- Input: registerFileID of type xsd:string.
- Input: range of type *xsd:positiveInteger*.
- Returns: status of type *xsd:boolean*.

G.7.19 Register operations

G.7.19.1 getRegisterAccess

Description: The accessibility of the data in the register.

- Input: elementID of type xsd:string.
 - Legal value: registerID of type xsd:string.
 - Legal value: alternateReqisterID of type xsd:string.
- Returns: value of type xsd:string.

G.7.19.2 getRegisterAddressOffset

Description: The offset from the base address.

- Input: registerID of type xsd:string.
- Returns: offset of type spirit:spiritNumberType.

G.7.19.3 getRegisterAlternateGroups

Description: Indicates the group names for an alternate register.

- Input: alternateRegisterID of type xsd:string.
- Returns: groupNames of type spirit:soapStringArrayType.

G.7.19.4 getRegisterAlternateRegisterIDs

Description: List of IDs for the alternate registers of the given register.

- Input: registerID of type xsd:string.
- Returns: alternateRegisterIDs of type spirit:soapStringArrayType.

G.7.19.5 getRegisterDimensions

Description: Dimensions of a register array.

- Input: registerID of type xsd:string.
- Returns: dimensions of type *spirit:nonNegativeIntegerArrayType*.

G.7.19.6 getRegisterFieldIDs

Description: List of IDs for the fields of the given register.

- Input: elementID of type xsd:string.
 - Legal value: registerID of type xsd:string.
 - Legal value: alternateRegisterID of type xsd:string.
- Input: registerID of type xsd:string.
- Returns: regFieldIDs of type spirit:soapStringArrayType.

G.7.19.7 getRegisterResetMask

Description: Mask to be ANDed with the value before comparing to reset value.

- Input: elementID of type xsd:string.
 - Legal value: registerID of type xsd:string.
 - Legal value: registerUID of type xsd:string.
 - Legal value: alternateRegisterID of type xsd:string.
 - Legal value: alternateRegisterUID of type xsd:string.
- Returns: mask of type *spirit:spiritNumberType*.

G.7.19.8 getRegisterResetValue

Description: Register value at reset.

- Input: elementID of type xsd:string.
 - Legal value: registerID of type xsd:string.
 - Legal value: registerUID of type xsd:string.
 - Legal value: alternateRegisterID of type xsd:string.
 - Legal value: alternateRegisterUID of type xsd:string.

— Returns: value of type *spirit:spiritNumberType*.

G.7.19.9 getRegisterSize

Description: The register size in bits.

- Input: elementID of type xsd:string.
 - Legal value: registerID of type xsd:string.
 - Legal value: registerUID of type *xsd:string*.
- Returns: size of type xsd:positiveInteger.

G.7.19.10 getRegisterVolatility

Description: Indicates whether or not the data is volatile.

- Input: elementID of type xsd:string.
 - Legal value: registerID of type xsd:string.
 - Legal value: alternateRegisterID of type xsd:string.
- Returns: value of type *xsd:string*. Returns *true*, *false*, or "".

G.7.19.11 setRegisterResetMask

Description: Set the mask to be ANDed with the value before comparing to reset value.

- Input: elementID of type xsd:string.
 - Legal value: registerID of type xsd:string.
 - Legal value: alternateRegisterID of type xsd:string.
- Input: mask of type spirit:spiritNumberType.
- Returns: status of type xsd:integer.

G.7.19.12 setRegisterResetValue

Description: Set register value at reset.

- Input: elementID of type xsd:string.
 - Legal value: registerID of type xsd:string.
 - Legal value: alternateRegisterID of type xsd:string.
- Input: value of type spirit:spiritNumberType.
- Returns: status of type xsd:integer.

G.7.19.13 setRegisterSize

Description: Set the register size in bits.

- Input: registerID of type xsd:string.
- Input: size of type xsd:positiveInteger.
- Returns: status of type xsd:boolean.

G.7.20 Remap operations

G.7.20.1 getRemapStatePortIDs

Description: List of remap port IDs of a remap state.

- Input: remapStateID of type xsd:string.
- Returns: remapStatePortIDs of type spirit:soapStringArrayType.

G.7.20.2 getRemapStatePortPortID

Description: Port ID for the remap state.

- Input: remapStatePortID of type xsd:string.
- Returns: portID of type xsd:string.

G.7.20.3 getRemapStatePortPortIndex

Description: Index of the port if a vector for the remap state.

- Input: remapStatePortID of type xsd:string.
- Returns: value of type xsd:string.

G.7.20.4 getRemapStatePortPortValue

Description: Value of the port for the remap state.

- Input: remapStatePortID of type xsd:string.
- Returns: spiritNumberTypeValue of type spirit:spiritNumberType.

G.7.21 Service operations

G.7.21.1 getAbstractionDefAbstractionServiceTypeDefIDs

Description: List of type definitions for an abstractionServiceID.

- Input: abstractionServiceID of type xsd:string.
- Returns: abstractionServiceTypeDefIDs of type spirit:soapStringArrayType.

G.7.21.2 getAbstractionDefServiceInitiative

Description: Port service initiative from the abstraction definition.

- Input: abstractionServiceID of type xsd:string.
- Returns: initiative of type xsd:string.

G.7.21.3 getServiceInitiative

Description: Initiative of the service.

- Input: serviceID of type xsd:string.
- Returns: initiative of type xsd:string.

G.7.21.4 getServiceTypeDeflDs

Description: List of typeDefs for a serviceID.

- Input: serviceID of type xsd:string.
- Returns: serviceTypeDefIDs of type spirit:soapStringArrayType.

G.7.22 Typedef operations

G.7.22.1 getTypeDefConstrained

Description: Is the type name constrained?

- Input: elementID of type xsd:string.
 - Legal value: wireTypeDefID of type xsd:string.
 - Legal value: transactional Type DefID of type xsd:string.
 - Legal value: serviceTypeDefID of type xsd:string.
- Returns: booleanValue of type *xsd:boolean*.

G.7.22.2 getTypeDefImplicit

Description: Is the type name implicit?

- Input: elementID of type xsd:string.
 - Legal value: serviceTypeDefID of type xsd:string.
 - Legal value: abstractionServiceTypeDefID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.22.3 getTypeDefTypeDefinitions

Description: List of type definition for the given type.

- Input: elementID of type xsd:string.
 - Legal value: wireTypeDefID of type xsd:string.
 - Legal value: transactional Type DefID of type xsd:string.
 - Legal value: serviceTypeDefID of type xsd:string.
- Returns: typeDefinitions of type *spirit:soapStringArrayType*.

G.7.22.4 getTypeDefTypeName

Description: Name of the type.

- Input: elementID of type xsd:string.
 - Legal value: wireTypeDefID of type xsd:string.
 - Legal value: transactional Type DefID of type xsd:string.
 - Legal value: serviceTypeDefID of type xsd:string.
 - Legal value: abstractionServiceTypeDefID of type xsd:string.
- Returns: value of type xsd:string.

G.7.22.5 getTypeDefTypeViewIDs

Description: List of type viewIDs for the given type.

- Input: wireTypeDefID of type xsd:string.
- Returns: viewIDs of type *spirit:soapStringArrayType*.

G.7.23 View operations

G.7.23.1 getViewDefaultFileBuilderIDs

Description: List of default file builder IDs of the view.

- Input: viewID of type xsd:string.
- Returns: fileBuilderIDs of type spirit:soapStringArrayType.

G.7.23.2 getViewDesignID

Description: ID of the design associated with a hierarchical view.

- Input: viewID of type xsd:string.
- Returns: designID of type xsd:string.

G.7.23.3 getViewEnvIdentifiers

Description: List of environment identifiers of the view.

- Input: viewID of type xsd:string.
- Returns: envIdentifiersValue of type spirit:soapStringArrayType.

G.7.23.4 getViewFileSetIDs

Description: List of fileSet IDs for fileSets referenced by the view.

- Input: viewID of type xsd:string.
- Returns: fileSetIDs of type *spirit:soapStringArrayType*.

G.7.23.5 getViewLanguage

Description: View Language.

- Input: viewID of type xsd:string.
- Returns: value of type *xsd:string*.

G.7.23.6 getViewLanguageIsStrict

Description: Value of *strict* attribute on view language element.

- Input: viewID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.23.7 getViewModelName

Description: Get the model name for this view.

- Input: viewID of type xsd:string.
- Returns: modelName of type xsd:string.

G.7.23.8 getViewPortConstraintSetIDs

Description: Constraint set ID for the port referenced by the view.

- Input: portID of type xsd:string.
- Input: viewID of type xsd:string.
- Returns: portConstraintSetIDs of type spirit:soapStringArrayType.

G.7.23.9 getViewWhiteboxElementRefIDs

Description: List of white box element reference IDs of the view.

- Input: viewID of type xsd:string.
- Returns: whiteboxRefIDs of type *spirit:soapStringArrayType*.

G.7.24 White box operations

G.7.24.1 getWhiteboxElementDrivable

Description: Indicates whether or not the white box element is drivable.

- Input: whiteboxElementID of type xsd:string.
- Returns: booleanValue of type xsd:boolean.

G.7.24.2 getWhiteboxElementRefID

Description: White box element reference ID.

- Input: whiteboxRefID of type xsd:string.
- Returns: whiteboxElementID of type xsd:string.

G.7.24.3 getWhiteboxElementRegisterIDs

Description: Register reference IDs of the white box element.

- Input: whiteboxElementID of type xsd:string.
- Returns: registerIDs of type *spirit:soapStringArrayType*.

G.7.24.4 getWhiteboxElementType

Description: Type of the white box element.

- Input: whiteboxElementID of type xsd:string.
- Returns: value of type xsd:string.

G.7.24.5 getWhiteboxRefPathIDs

Description: List of path IDs of the white box element reference.

- Input: whiteboxRefID of type xsd:string.
- Returns: whiteboxRefPathIDs of type spirit:soapStringArrayType.

G.7.24.6 getWhiteboxRefPathName

Description: Name of the white box reference path element.

- Input: whiteboxRefPathID of type xsd:string.
- Returns: value of type *xsd:string*.

G.7.24.7 getWhiteboxRefPathRange

Description: List of left and right range of the white box reference path element.

- Input: whiteboxRefPathID of type xsd:string.
- Returns: nonNegativeIntegerArrayValue of type spirit:nonNegativeIntegerArrayType.

G.7.25 TGI ID types

Summary of defined TGI ID types.

- abstractionDefID
- abstractionDefPortID
- abstractionDefPortModeConstraintID
- abstractionDefPortModeID
- abstractionServiceID
- abstractionServiceTypeDefID
- abstractorID
- abstractorInstanceID
- adHocConnectionID
- adHocExternalPortReferenceID
- adHocInternalPortReferenceID
- addressBlockID
- addressBlockUID
- addressSpaceID
- addressSpaceUID
- alternateRegisterID
- alternateRegisterUID
- argumentID
- argumentUID
- bankID
- bankUID
- bridgeID
- busdefID
- channelID
- choiceEnumerationID
- choiceID
- clockDriverID
- clockDriverUID
- componentID
- componentInstanceID
- cpuID
- designID
- driveConstraintID
- elementID
- executableImageID
- executableImageUID
- fileBuilderID
- fileBuilderUID
- fileDefineID
- fileDefineUID

- fileID
- fileSetGroupID
- fileSetID
- fileUID
- functionID
- functionSourceFileID
- functionUID
- generatorID
- hierConnectionID
- interconnectionID
- interfaceID
- interfacePortMapID
- interfaceUID
- linkerCommandFileID
- linkerCommandFileUID
- loadConstraintID
- localMemoryMapID
- memoryMapElementID
- memoryMapID
- memoryRemapID
- monitorInterconnectionID
- parameterID
- parameterUID
- portConstraintSetID
- portID
- portMapID
- portMapUID
- portUID
- regFieldID
- regFieldUID
- regFieldValueID
- registerFileID
- registerFileUID
- registerID
- registerUID
- remapAddressID
- remapStateID
- remapStatePortID
- segmentID
- segmentUID
- serviceID
- serviceTypeDefID
- singleShotDriverID

- singleShotDriverUID
- subspaceMapID
- subspaceMapUID
- timingConstraintID
- transactionalTypeDefID
- typeDefID
- viewID
- whiteboxElementID
- whiteboxRefID
- whiteboxRefPathID
- wireTypeDefID

Annex H

(informative)

Bridges and channels

This annex describes the basic address calculations of the two interconnect schemes contained inside an IP-XACT component: a **bridge** statement that describes an interconnect between a slave interface and a master interface, and a **channel** statement that describes an interconnect between a mirrored-master interface and a mirrored-slave interface. <u>Figure H.1</u> highlights bridge and channel components in IP-XACT. For precise details on the addressing equations, see <u>Clause 11</u>.

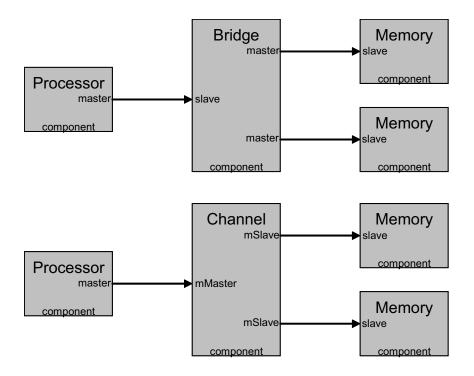


Figure H.1—Bridge and channel components

H.1 Transparent bridge

A transparent bridge locates the start of the master interface's address space at the start of the address space seen at the slave interface; thus, the address is not modified from the slave interface of the bridge into the **addressSpace** of the master interface. In <u>Figure H.2</u>, the master interface address space range 0×0000 to 0×0 FFF maps to the address range 0×0000 to 0×0 FFF as seen in the address space at the slave interface.

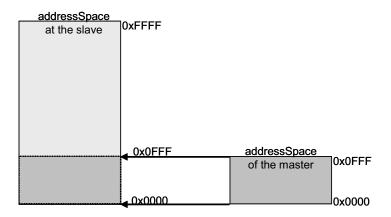


Figure H.2—Transparent bridge slave interface address range

An address block from another component connected to the bridge's master interface may appear in the master's address space. The base address of the connected address block is offset in the address space of the master interface by the **master/addressSpaceRef/baseAddress**. This also offsets the address block by the same amount in the address space at the slave interface. In <u>Figure H.3</u>, the **addressBlock** from the connected slave range 0×0000 to 0×07 FF maps to the address range 0×0600 to 0×00 FF (offset by **master/addressSpaceRef/baseAddress** = 0×0600) as seen in the address space of the master interface and to the address range 0×0600 to 0×00 FF as seen in the address space at the slave interface.

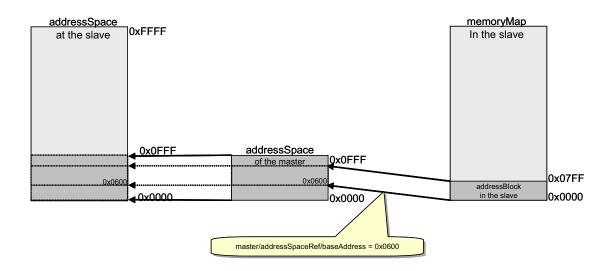


Figure H.3—Offsetting an address block in a transparent bridge

Figure H.4 shows it is also possible to offset the **addressBlock** from the connected slave in the negative direction. The **addressBlock** from the connected slave range 0×7000 to $0 \times 77FF$ maps to the address range 0×0000 to $0 \times 07FF$ (offset by **master/addressSpaceRef/baseAddress** = -0×7000) as seen in the address space of the master interface and to the address range 0×0000 to $0 \times 07FF$ as seen in the address space at the slave interface.

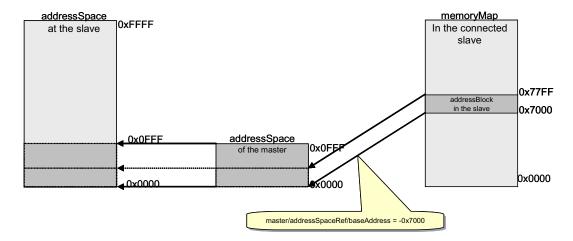


Figure H.4—Negative offsetting of an address block in a transparent bridge

<u>Figure H.5</u> shows the references between the various elements and attributes in a transparent bridge.

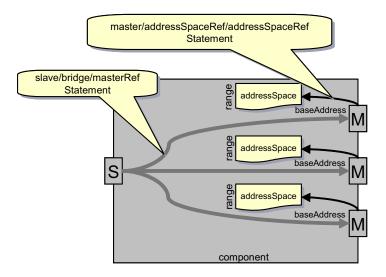


Figure H.5—Transparent bridge references

H.2 Opaque bridge

H.2.1 Without an address space segment reference

An opaque bridge that only references a master interface locates the start of the master interface's address space at the base address specified in the subspace map referenced by the slave interface; thus, the address is modified (offset by **subspaceMap/baseAddress**) from the slave interface into the **addressSpace** of the master interface. In <u>Figure H.6</u>, the slave interface address range 0×1000 to $0 \times 1 \text{FFF}$ maps to address range 0×0000 to $0 \times 0 \text{FFF}$ in the master interface's address space. The **range** of the addresses mapped is determined by the **range** of the **addressSpace**.

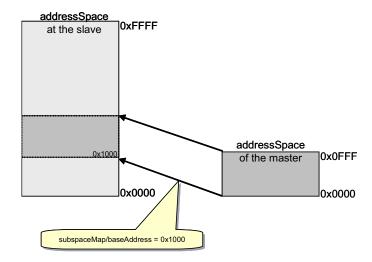


Figure H.6—Opaque bridge slave interface address range without segment reference

H.2.2 With an address space segment reference

An opaque bridge with an **addressSpace** segment reference locates the start of the master interface's address space segment at the base address specified in the subspace map referenced by the slave interface; thus, the address is modified (offset by **subspaceMap/baseAddress**) from the slave interface into the **addressSpace** of the master interface. In <u>Figure H.7</u>, the slave interface address range 0×1000 to $0 \times 17 \text{FF}$ maps to address range 0×2000 to $0 \times 27 \text{FF}$ in the master interface's address space. The **range** of the addresses mapped is determined by the **range** of the address space's segment.

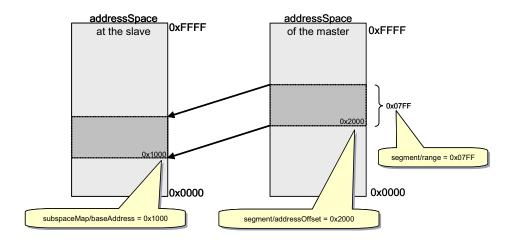


Figure H.7—Opaque bridge slave interface address range with segment reference

It is also possible to preserve the addressing across an opaque bridge. In <u>Figure H.8</u>, the slave interface address range 0×1000 to $0 \times 17 \text{FF}$ maps to address range 0×1000 to $0 \times 17 \text{FF}$ in the master interface's address space. The **range** of the addresses mapped is determined by the **range** of the address space's segment.

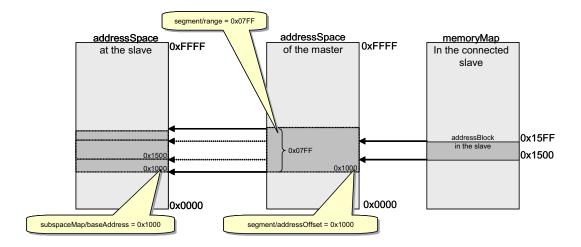


Figure H.8—Opaque bridge with transparent addressing

H.2.3 Effect of a master interface address space base address

The effect of the master interface address space base address applies with or without a segment reference. An address block from another component connected to the bridge's master interface may appear in the master's address space. The base address of the connected address block is offset in the address space of the master interface by the **master/addressSpaceRef/baseAddress**. This also offsets the address block by the same amount in the address space at the slave interface. In <u>Figure H.9</u>, the **addressBlock** from the connected slave range 0×0000 to $0 \times 07FF$ maps to the address range 0×0500 to $0 \times 0CFF$ (offset by **master/addressSpaceRef/baseAddress** = 0×0500) as seen in the address space of the master interface, and to the address range 0×1500 to $0 \times 1CFF$ (offset by **subspaceMap/baseAddress** = 0×1000) as seen in the address space at the slave interface.

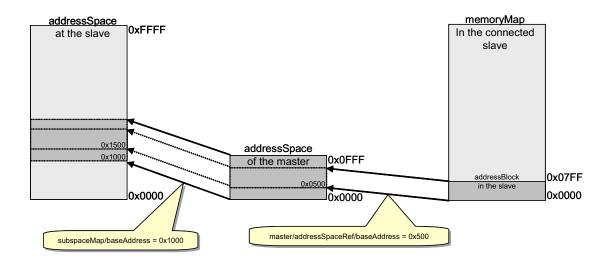


Figure H.9—Offsetting an address block in an opaque bridge

Figure H.10 shows it is also possible to offset the addressBlock from the connected slave in the negative direction. The addressBlock from the connected slave range 0×7000 to $0\times77FF$ maps to the address range 0×0500 to $0\times0CFF$ (offset by master/addressSpaceRef/baseAddress = $-0\times6B00$) as seen in the address space of the master interface, and to the address range 0×1500 to $0\times1CFF$ (offset by subspaceMap/baseAddress = 0×1000) as seen in the address space at the slave interface.

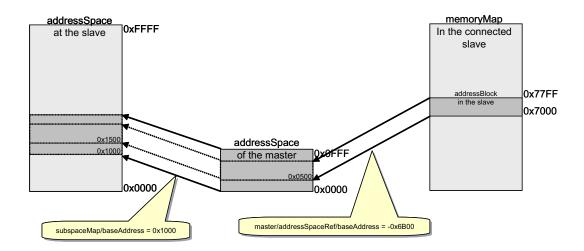


Figure H.10—Negative offsetting of an address block in an opaque bridge

Figure H.11 shows the references between the various elements and attributes in an opaque bridge.

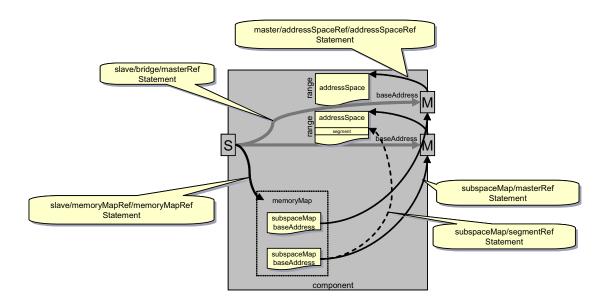


Figure H.11—Opaque bridge references

H.3 Channel with address remapping

A mirrored-slave interface that is part of a channel may provide a remap address for the connected slave interface. This remap address is an offset of the base address of the address block in the connected slave interface, as shown in <u>Figure H.12</u>. This offset is the addition the **remapAddress** element's value (see <u>6.9</u>) to the base address of the memory map from the slave. The **range** element also modifies (and potentially narrows) the range of the entire memory map of the connected slave. In <u>Figure H.12</u>, the slave interface address range 0×0000 to 0×0 FFF maps to the address range 0×1000 to 0×1 FFF (offset by **mirrorSlave/baseAddress/remapAddress** = 0×1000 and narrowed by **mirrorSlave/baseAddress/range** = 0×0800) in the address space as seen at the mirrored-slave interface.

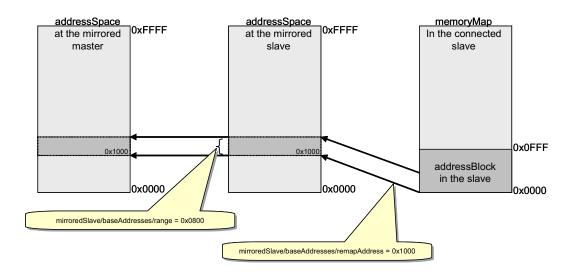


Figure H.12—Address remapping in a channel

<u>Figure H.13</u> shows the references between the various elements and attributes in a channel with address remapping.

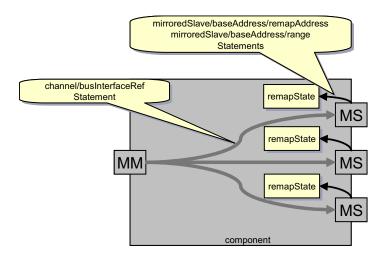


Figure H.13—Channel with remapping references

H.4 Channel with bit steering

A mirrored-slave interface that is part of a channel may have a **bitSteering** element. If the **bitSteering** element is **on**, the base address and range of an address block as seen across a channel is modified only by the ratio of the **bitsInLau** of the mirrored-slave and the mirrored-master interfaces. In <u>Figure H.14</u>, the slave interface address range 0×0000 to 0×07 FF maps to the address range 0×1000 to 0×17 FF (offset by **mirrorSlave/baseAddress/remapAddress** = 0×1000) in the address space as seen at the mirrored-slave interface, and maps to the address range 0×1000 to 0×17 FF (multiplied by the ratio of the mirrored-slave and mirrored-master **bitsInLau** 8/8 = 1, and independent of the width of the logical data ports) in the address space as seen at the mirrored-master interface.

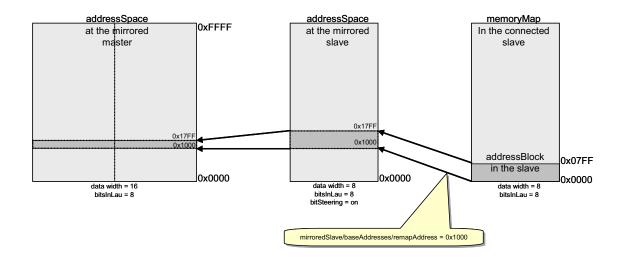


Figure H.14—Channel with equal bitsInLau and bitSteering = on

In Figure H.15, the bitSteering element is on and there are differing bitsInLau across the channel. The slave interface address range 0×0000 to 0×0 FFF maps to the address range 0×1000 to 0×1 FFF (offset by mirrorSlave/baseAddress/remapAddress = 0×1000) in the address space as seen at the mirrored-slave interface, and maps to the address range 0×0800 to 0×0 FFF (multiplied by the ratio of the mirrored-slave and mirrored-master bitsInLau 4/8 = 1/2, and independent of the width of the logical data ports) in the address space as seen at the mirrored-master interface.

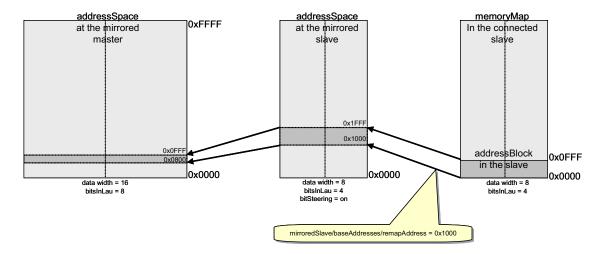


Figure H.15—Channel with non-equal bitsInLau and bitSteering = on

If **bitSteering** is **off**, the base address and range of an address block as seen across a channel is modified by the ratio of the **bitsInLau** and the logical data-width of the mirrored-slave and mirrored-master interfaces. In <u>Figure H.16</u>, the slave interface address range 0×0000 to 0×07 FF maps to the address range 0×1000 to 0×17 FF (offset by **mirrorSlave/baseAddress/remapAddress** = 0×1000) in the address space as seen at the mirrored-slave interface, and maps to the address range 0×2000 to 0×2 FFF (multiplied by the ratio of mirrored-slave and mirrored-master **bitsInLau** 8/8 = 1, and multiplied by the ratio mirrored-master logical data-width divided by the mirrored-slave logical data-width 16/8 = 2) in the address space as seen at the mirrored-master interface.

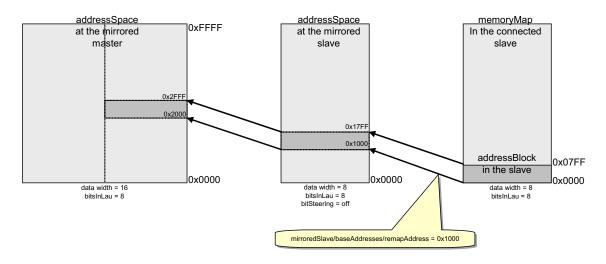


Figure H.16—Channel with bitSteering = off

<u>Figure H.17</u> shows the references between the various elements and attributes in a channel with **bitSteering** references.

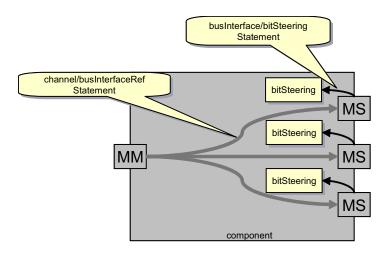


Figure H.17—Channel with bitSteering references