


Packet Tracer - Simulating IoT Devices

Topology

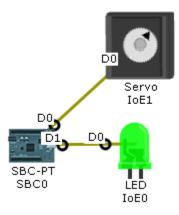

Objectives

Part 1: Build the Circuit

- Place the components in the Logical Workspace
- Connect the components

Part 2: Program the Single Board Computer (SBC)

- Run the default program
- Modify the default program

Background / Scenario

Packet Tracer has evolved to simulate IoT devices. This tutorial will guide you through the process of placing components in the Logical Workspace, connecting the components, and then programming the single-board computer (SBC) to control them.


Required Resources

PC with Packet Tracer 7.1 or newer installed


Part 1: Build the Circuit

Step 1: Place components in the logical workspace.


a. Open **Packet Tracer** 7.1 or newer, and choose the **Components** icon.

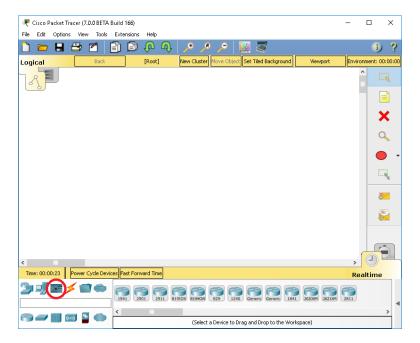

b. Place a **SBC Board** in the **Logical Workspace**.

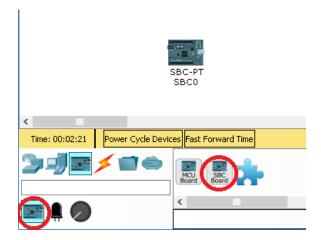


c. Place an LED and a Servo in the Logical Workspace.

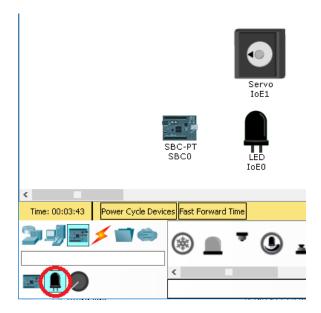

Step 2: Connecting the components.

- a. Click the Connections icon, select an IoT Custom Cable, and connect SBC0 D0 to Servo0 D0.
- b. Select another IoT Custom Cable and connect SBC0 D1 to LED D0.

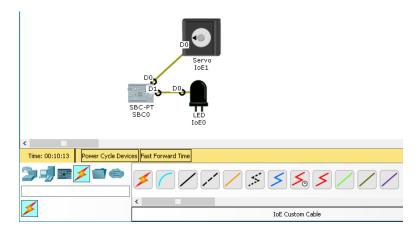


Part 2: Program the Single Board Computer (SBC)

Note: Python used in PT is an open source Python to JavaScript interpreter that is not updating to Python 3.0. For this reason there may be slight differences in the syntax between the code observed in PT and that in devices using Python 3.

Step 1: Run the default program.

- a. Double-click **SBC0** and select the **Programming** tab.
- b. Double-click Blink (Python) in the left pane to open it.
- c. Double-click **main.py** to reveal the default Python code.

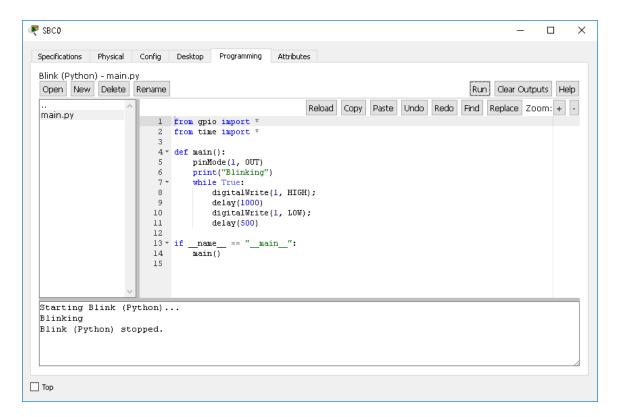

- d. Click the **Run** button to run the default code. Return to the Logical Workspace. The LED should be blinking.
- e. Return to the SBC0 Programming tab, and click the **Stop** button to stop the program execution.


Step 2: Modify the default program.

- a. Copy line 8 of the source code and paste it just below line 8. Do the same with line 11 (formerly line 10) and paste it immediately after the original line of code.
- b. Modify the new lines of code to read:

```
customWrite(0, 127);
and
customWrite(0, -127);
```

```
Reload
                                           Сору
    from gpio import *
 1
 2
    from time import *
 3
 4 * def main():
 5
        pinMode(1, OUT)
 6
        print("Blinking")
 7 *
         while True:
             digitalWrite() HIGH):
 8
 9
             customWrite(0, 127);
10
             αειαγίτ
11
             digitalWrite(1, LOW);
12
             customWrite(0, -127);
13
             delay(500)
14
15 * if
               == "__main__":
         name
16
        main()
17
```

c. Run the modified program. The servo should now move along with the blinking LED.

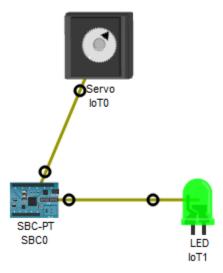

d.

Reflection

What could be changed to make the servo turn in the opposite direction while the LED is blinking? Modify the values in the Custom Write code. In the program, substitute -127 for 127.