

E-paper Display COG Driver Interface Timing for 1.44",1.9",2",2.6" and 2.7" EPD with G2 COG and Aurora Mb Film

Description	Detailed information to design a timing controller for 1.44", 1.9", 2", 2.6" and 2.7" EPD with G2 COG and Aurora Mb film
Date	2023/11/07
Doc. No.	4P018-00
Revision	04

Design Engineering			
Approval	Check	Design	
黄 2023.11.07 朝玄	黄 2023.11.07 朝玄	李 2023.11.07 威	

4F, No. 28, Chuangye Rd., Tainan Science Park, Tainan City 74144, Taiwan (R.O.C.)

Tel: +886-6-279-5399 Fax: +886-6-505-5300

Rev.: 04 Page: 1 of 37 Date: 2023/11/07



Copyright

Pervasive Displays Incorporated All rights reserved.

This document is the exclusive property of Pervasive Displays Inc. (PDI) and shall not be reproduced or copied or transformed to any other format without prior permission of PDI. (PDI Confidential)

本資料為龍亭新技股份有限公司專有之財產,非經許可,不得複製、翻印或轉變成其他形式使用。

龍亭新技股份有限公司 Pervasive Displays Inc.

4F, No. 28, Chuangye Rd., Tainan Science Park, Tainan City 74144, Taiwan (R.O.C.)

Tel: +886-6-279-5399

http://www.pervasivedisplays.com

Rev.: 04 Page: 2 of 37 Date: 2023/11/07



Table of Contents

1.	Gener	al Descript	ion	7					
	1.1	Overview		7					
	1.2	Input Terminal Pin Assignment							
	1.3	Reference	Circuit	10					
		1.3.1 1	.44 inch EPD Reference Circuit	10					
		1.3.2 2	inch EPD Reference Circuit	11					
		1.3.3 2	.7 inch EPD Reference Circuit	12					
		1.3.4 1	.9 inch EPD Reference Circuit	13					
		1.3.5 2	.6 inch EPD Reference Circuit	14					
	1.4		ng Flow Chart						
	1.5								
	1.6		g Format						
1.			nory						
2.			G Driver						
3.	Initial	ze G2 COG	Driver	24					
5	Write		the Memory to the EPD						
	5.1		cture						
	5.2	Overall Up	odate Flow	27					
	5.3	Store a Li	ne of Data in the Buffer	27					
	5.4	Writing to	the Display in Stages	33					
6	Power	Off G2 CO	G Driver	35					
Ар	pendix:	Use G1's I	PCBA to drive the EPD with G2 Driver IC	36					



I. Revision History

Version	Date	Page (New)	Section	Description		
Ver. 01	2014/11/20	All	All	First issued		
		8	1.2	Modify the description		
		11	1.3.3	Modify the pin description		
		14	1.3.6	Modify the description of Note number		
		15	1.3.6	Add description about hardware suggestion		
Ver. 02	2015/02/16	30 31 32 33 34	5.2	Add the description of "Turn on OE"		
		37	6	Modify the description BORDER -> /BORDER_CONTROL		
		25	4	Modify OE setting (0x02,0x40) -> (0x02,0x04)		
			6	Remove OE off flow (0x02,0x05)		
		All	All	Modify PDi company address		
		All	All	Revise some descriptions in document		
		7	1.2	Modify Pin.8 assignment		
	2015/07/27	17-19	1.6	Register Index -> Command Index Register Data -> Command Data Modify the delay time from 10us to 80ns between /CS high and low		
Ver. 03	2015/07/27	23	4	Modify delay time of power on sequence Modify OE setting (0x02,0x04) -> (0x02,0x06)		
		27-31	5.3	Remove checking BUSY when sending each data byte		
		32	5.4	Add notes		
		35	7	Section 1.3.6 move to Appendix		
		34	6	Modify delay time of VGL voltage		
Ver. 04	2023/11/02	9	1.2	BORDER update notes		

Rev.: 04 Page: 4 of 37 Date: 2023/11/07



	16	1.5	Waveforms and notes remove border_ control
	12	1.3.3	Circuit diagrams remove border_ control
	23	2 Flowchart remove border_ control	
	24	3 Flowchart remove breakage	
	30	5.3	Flowchart add border byte
	35	6	Flowchart remove size check and border_control
	36	Ар	Circuit diagrams and notes remove border_ control

Rev.: 04 Page: 5 of 37 Date: 2023/11/07



II. Glossary of Acronyms

EPD Electrophoretic Display (e-Paper Display)

EPD Panel EPD

Tcon Timing Controller

MCU Microcontroller Unit

FPL Front Plane Laminate (e-Paper Film)

SPI Serial Peripheral Interface

COG Chip On Glass, Driver IC. There are two models: Gen1 (G1) is

EOL and Gen2 (G2) which is used in this document

PDI, PDi Pervasive Displays Incorporated

Rev.: 04 Page: 6 of 37 Date: 2023/11/07



1. General Description

1.1 Overview

This document explains the interface to the G2 COG Driver to operate the EPD for a Timing Controller based solution using two pages of memory buffer. G2 COG Driver is the most recent EPD driving technology from PDi that offers new features such as breakage detection, lower inrush current, and a lower operation voltage.

The procedure to update display is

- 1. Store new pattern in memory buffer
- 2. Power on G2 COG Driver
- 3. Initialize G2 COG Driver
- 4. Update display stage by stage
- 5. Power off G2 COG Driver

Refer to the EPD controller in section 1.5 for the complete update cycle from Power On, Initialize, Update and Power off. To operate the EPDs for the best sharpness and performance, each update of the panel is divided into a series of stages before the display of the new image pattern is completed. During each stage, frame updates with intermediate image patterns are repeated for a specified period of time. The number of repeated frame updates during each stage is dependent on the Timing Controller speed. After the final stage, the new pattern is displayed.

Section 1 is an overview and contains supporting information such as the overall theory for updating an EPD, SPI timing for PDI's EPDs, as well as current profiles.

Section 2 describes a method to write to memory buffer. Previously updated and new patterns are stored in the memory buffer to compare the old and new image patterns during the update.

Section 3 describes how to power on the G2 COG Driver which consists of applying a voltage and generating the required signals for /CS and /RESET.

Section 4 describes the steps to initialize the G2 COG Driver.

Section 5 describes the details on how to update the EPD from the memory buffer, create a line of data, update in stages.

Section 6 describes how to power off the G2 COG Driver, and discharge voltage from EPD to ground, make sure there is no voltage remains in EPD.

Rev.: 04 Page: 7 of 37 Date: 2023/11/07



1.2 Input Terminal Pin Assignment

No	Signal	I/O	Connected to	Function		
1	/CS	I	TCon	Chip Select. Low enable		
2	BUSY	0	TCon	When BUSY = HIGH, EPD stays in busy state that EPD ignores any input data from SPI.		
3	ID	I	Ground	Set SPI interface		
4	SCLK	I	TCon	Clock for SPI		
5	SI	I	TCon	Serial input from host Timing Controller to EPD		
6	SO	0	TCon	Serial output from EPD to host Timing Controller		
7	/RESET	I	TCon	Reset signal. Low enable		
8	BORDER_DRIV ER or PWRON	-	BORDER or NC	For 1.44" & 2", connect to BORDER. For 1.9", 2.6" & 2.7", keep open.		
9	V _{CL}	С	Capacitor			
10	C42P	С	NC	Not connected. These two pins are used only with G1 COG Drive IC.		
11	C42M	С	NC			
12	C41P	С	Charge-Pump	-		
13	C41M	С	Capacitor	-		
14	C31M	С	Charge-Pump	-		
15	C31P	С	Capacitor	-		
16	C21M	С	Charge-Pump	-		
17	C21P	С	Capacitor	-		
18	C16M	С	Charge-Pump	-		
19	C16P	С	Capacitor	-		
20	C15M	С	Charge-Pump	-		
21	C15P	С	Capacitor	-		
22	C14M	С	Charge-Pump	-		
23	C14P	С	Capacitor	-		

Rev.: 04 Page: 8 of 37 Date: 2023/11/07



No	Signal	I/O	Connected to	Function
24	C13M	С	Charge-Pump	-
25	C13P	С	Capacitor	-
26	C12M	С	Charge-Pump	-
27	C12P	С	Capacitor	-
28	C11M	С	Charge-Pump	-
29	C11P	С	Capacitor	-
30	V _{COM_DRIVER}	RC	Resistor & Capacitor	The duty cycle of V _{COM_DRIVER} can adjust V _{COM} voltage from source driver IC
31	Vcc	Р	Vcc	Power supply for analog part of source driver
32	V _{DD}	Р	V_{DD}	Power supply for digital part of source driver
33	Vss	Р	Ground	-
34	V _{GH}	С	Capacitor	
35	V_{GL}	С	Capacitor	
36	V _{DH}	С	Capacitor	-
37	V_{DL}	С	Capacitor	-
38	BORDER	I	-	For 1.44" & 2", connect to BORDER_DRIVER For 1.9" & 2.6" & 2.7", not connected
39	V _{ST}	Р	VCOM_PANEL	-
40	V _{COM_PANEL}	С	Capacitor	V _{COM} to panel

Note:


- 1. I: Input, O: Output, C: Capacitor, RC: Resistor and Capacitor, P: Power, NC: Not connected (Do not SMT)
- 2. Recommend to use an independent SPI bus to control the EPD.
- 3. Around the active area of the EPD is a 0.5mm width blank area called the BORDER. It's connected to VDL ($-13V \sim -14V$) to keep the border white. After EPD updates with the constant voltage, the border color may degrade to a gray level that is not as white as the active area. Reset the Border per screen update to avoid this phenomenon.

Rev.: 04 Page: 9 of 37 Date: 2023/11/07




1.3 Reference Circuit

1.3.1 1.44 inch EPD Reference Circuit

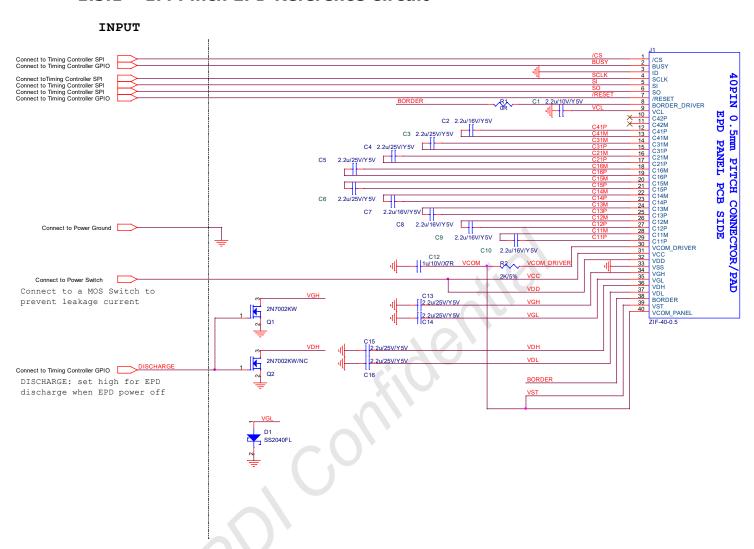

Note:

- 1. V_{DD} and V_{CC} must be discharged promptly after power off
- 2. 1.44" Pin.1 location

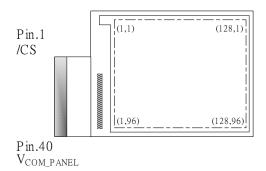


3. R1 is connected.

Rev.: 04 Page: 10 of 37 Date: 2023/11/07

This document is the exclusive The copyright belongs to PDIs Any unauthorized is prohibited form:




1.3.2 2 inch EPD Reference Circuit

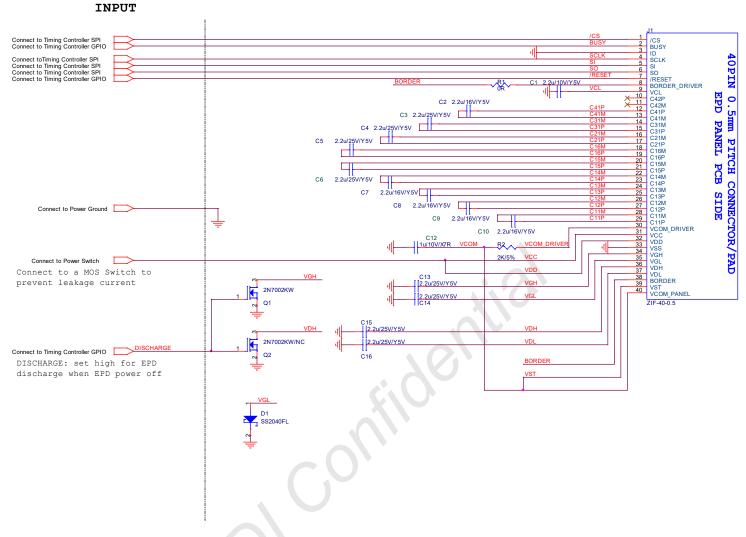

Note:

- 1. V_{DD} and V_{CC} must be discharged promptly after power off
- 2. 2" Pin.1 location

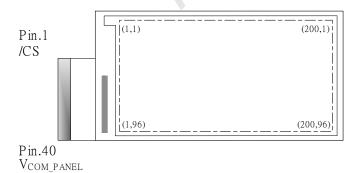


3. R1 is connected.

Rev.: 04 Page: 11 of 37 Date: 2023/11/07

This document is the exclusive Theocopy tight belongs to PDI Any unauthorized is prohibited form:




1.3.3 2.7 inch EPD Reference Circuit

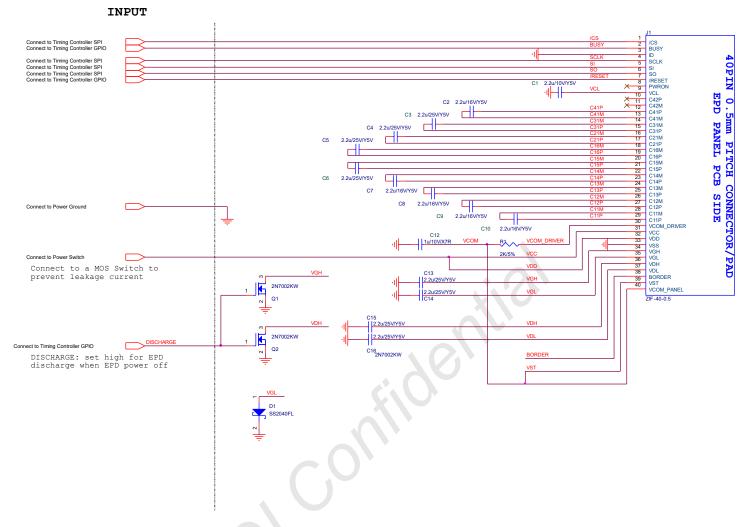

Note:


- 1. V_{DD} and V_{CC} must be discharged promptly after power off
- 2. 2.7" Pin.1 location

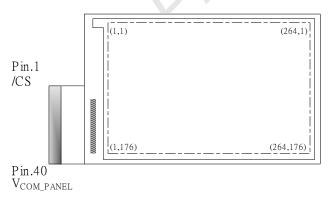

Rev.: 04 Page: 12 of 37 Date: 2023/11/07




1.3.4 1.9 inch EPD Reference Circuit

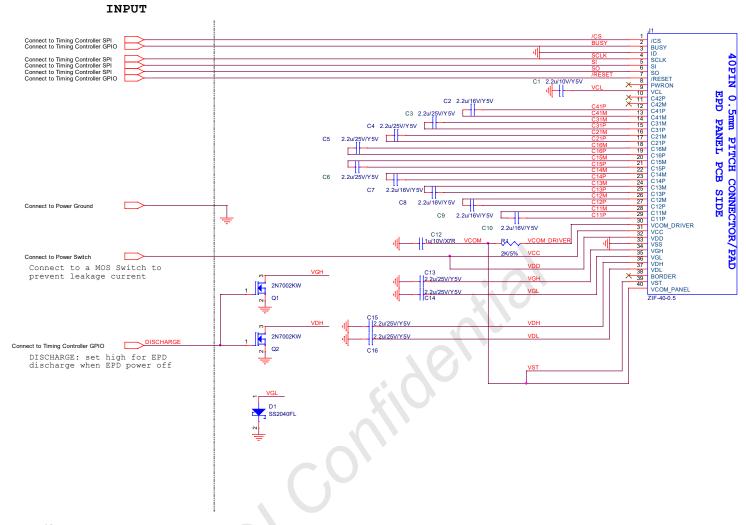

Note:


- 1. V_{DD} and V_{CC} must be discharged promptly after power off
- 2.1.9" Pin.1 location

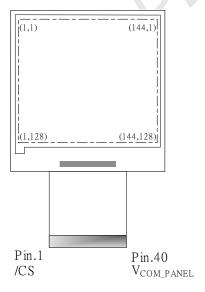

Rev.: 04 Page: 13 of 37 Date: 2023/11/07




1.3.5 2.6 inch EPD Reference Circuit

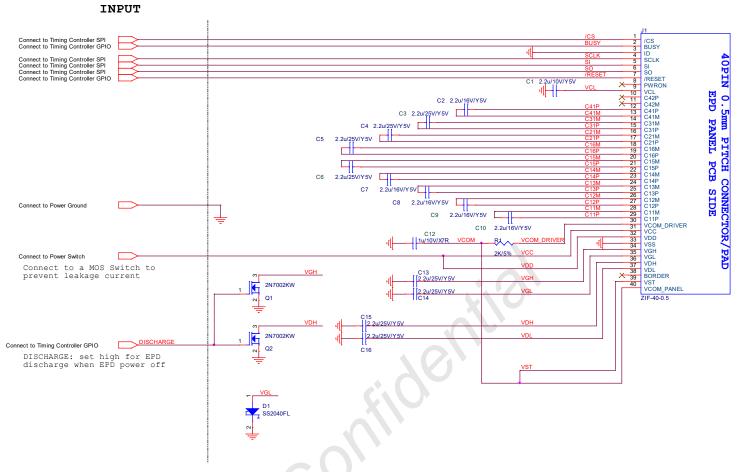

Note:

- 1. V_{DD} and V_{CC} must be discharged promptly after power off
- 2. 2.6" Pin.1 location

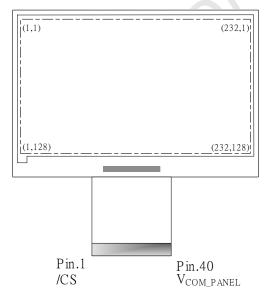

If you are still using our old COG driver G1 and previous circuit, please refer to the Appendix.


Rev.: 04 Page: 14 of 37 Date: 2023/11/07

This document is the exclusive The copyright belongs to PDh. Anyrunauthorized is prohibited forms



1.4 EPD Driving Flow Chart

The flowchart below provides an overview of the actions necessary to update the EPD. We call this is Global Update or Full Update. The steps below refer to the detailed descriptions in the respective sections.

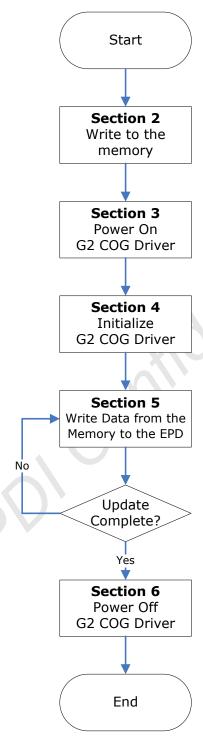

Rev.: 04 Page: 15 of 37 Date: 2023/11/07




1.5 Controller

The diagram below provides a signal control overview during an EPD update cycle.

The diagram is divided into

- "3. Power On G2 COG Driver",
- "4. Initialize G2 COG Driver",
- "5. Write Data from the Memory to the EPD",
- "6. Power Off G2 COG Driver",

The number and title matches a section title in this document.

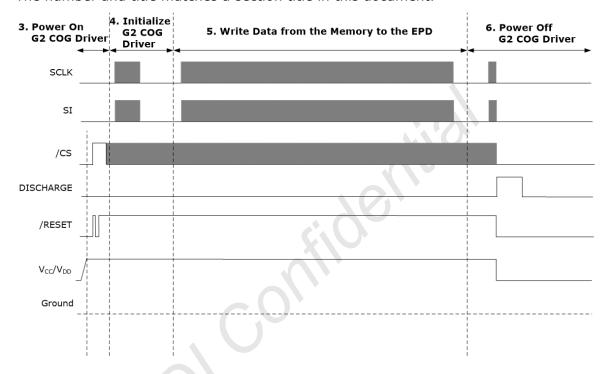

Rev.: 04 Page: 16 of 37 Date: 2023/11/07



1.6 SPI Timing Format

SPI commands are used to communicate between the Timing Controller and the G2 COG Driver. The SPI format differs from the standard in that two way communications, and /CS is pulled high then low between Command Index and Command Data. When setting up the SPI timing, please follow the SPI command format and timing in this section and verify the control signals in Section 1.5 then.

The maximum SPI clock speed for G2 COG Driver is 20MHz.

The SPI mode is 0.

Below is a description of the SPI Format:

SPI $(0xI, 0xD_1, 0xD_2, 0xD_3 ...)$

Where:

I is the Command Index and the length is 1 byte $D_{1\sim n}$ is the Command Data. The Command Data length is from 1 to 110 bytes depending on which Command Index is selected.


Command Index	Number Bytes of Command Data
0x01	8
0x02	1
0x03	1
0x04	1
0x05	1
0x07	1
0x08	1
0x09	1
0×0A	< 110
0x0B	1
0x0F	1

- Before sending the Command Index, the SPI (SI) must send a 0x70(header of Command Index).
- Likewise, the SPI (SI) must send a 0x72(header of Command Data) prior to the Command Data. The flow chart and detailed description can be found in the next page.
- Number Bytes of Command Index (0x0A) depends on which panel size is used.

Rev.: 04 Page: 17 of 37 Date: 2023/11/07




• SPI write command signals and flowchart(SPI):

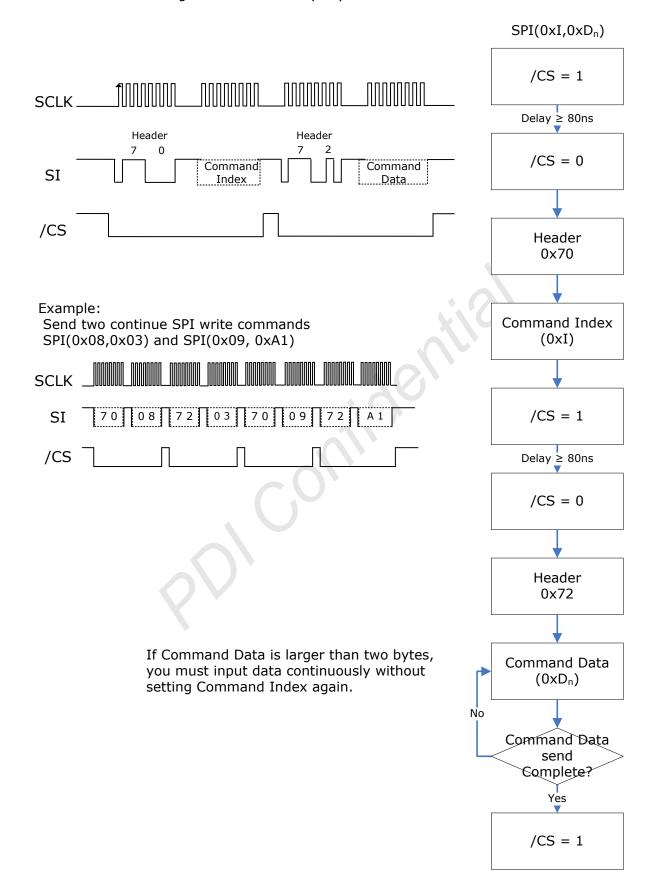

Rev.: 04 Page: 18 of 37 Date: 2023/11/07




• SPI read command signals and flowchart(SPI_R):

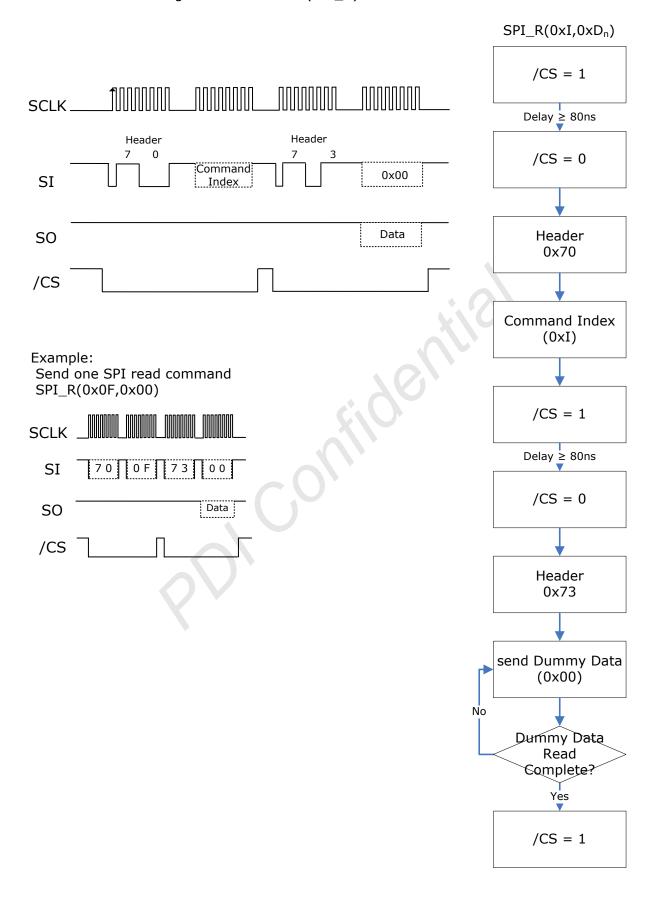


without prior permission of PDI. (PDI Confidential) 本資料為龍亭新技專有之財產,非經許可,不得複製、翻印或轉變成其他形式使用。




SPI read COG Driver ID and flowchart(SPI_RID):

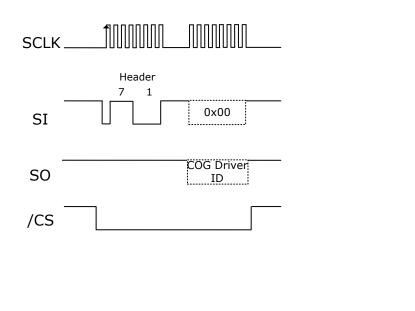

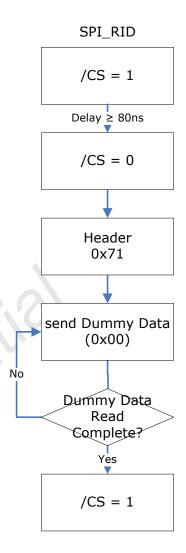



SPI command timing (mode 0)

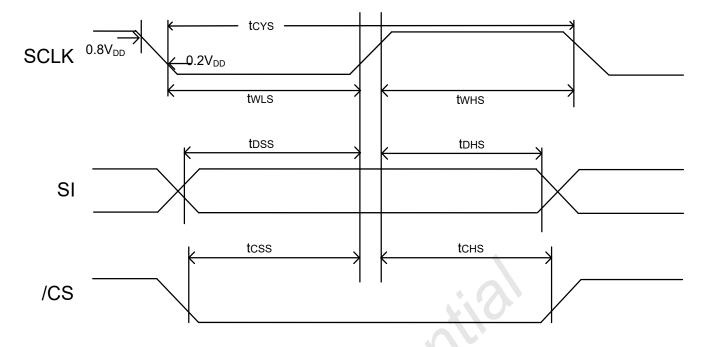

VCC = 2.3 to 3.6V	CC = 2.3 to 3.6V Temp = 0 to 50° C						
Item	Signal	Symbol	Min.	Тур.	Max.	Unit	Remark
Serial clock cycle	SCLK	tcys	50	-	-	ns	
SCLK high pulse width	SCLK	twns	25	-	-	ns	
SCLK low pulse width	SCLK	twLs	25	-	-	ns	
Data setup time	SI	toss	12	-	-	ns	
Data hold time	SI	tDHS	12	-	-	ns	
CSB setup time	/CS	tcss	12	-	-	ns	
CSB hold time	/CS	tchs	20	-	-	ns	

Rev.: 04 Page: 21 of 37 Date: 2023/11/07



1. Write to the Memory

Before powering on G2 COG Driver, developer should write the new pattern to image buffer, either SRAM or flash memory. The image pattern must be converted to a 1 bit bitmap format (Black/White) prior to writing.

Two buffer spaces should be allocated to store both previous and new patterns. The previous pattern is the currently displayed pattern. The new pattern will be written to the EPD. The G2 COG Driver will compare both patterns before updating the EPD. The table below lists the buffer space size required for each EPD size.

EPD size	Image resolution(pixels)	Previous image + New image Buffer (bytes)
1.44"	128 x 96	3,072
2"	200 x 96	4,800
2.7"	264 x 176	11,616
1.9"	144 x 128	4,608
2.6"	232 x 128	7,424

Rev.: 04 Page: 22 of 37 Date: 2023/11/07



2. Power On G2 COG Driver


This flowchart describes power on sequence for the G2 COG Driver .

1. Start:

Initial State:

$$V_{CC}/V_{DD} = 0$$


/RESET, /CS, SI, SCLK = 0

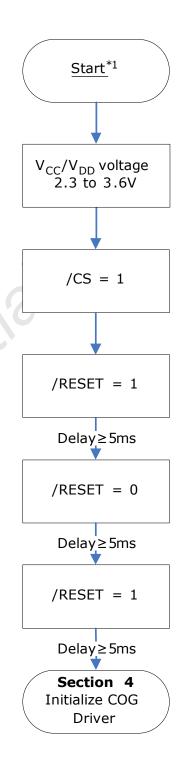

Rev.: 04 Page: 23 of 37 Date: 2023/11/07



3. Initialize G2 COG Driver

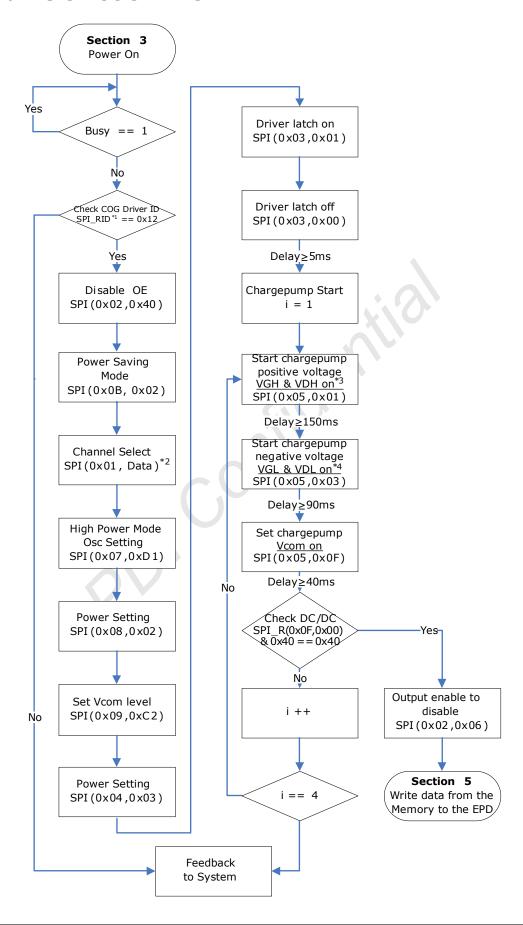

Rev.: 04 Page: 24 of 37 Date: 2023/11/07 This document is the exclusive The copy right belongs to Poliu Any runauthorized rise prohibited format



Note:

- 1 SPI timing format (Refer to "1.6 SPI Timing Format" for detail)
 - SPI read COG Driver ID command: SPI_RID
 - G1 COG Driver ID is 0x11
 - G2 COG Driver ID is 0x12
- 2 SPI(0x01, Data):
 - · Different by each size

■ 1.44": SPI(0x01, (0x0000,0000,000F,FF00))

■ 2": SPI(0x01, (0x0000,0000,01FF,E000))

■ 2.7": SPI(0x01, (0x0000,007F,FFFE,0000))

■ 1.9": SPI(0x01, (0x0000,0003,FC00,00FF))

■ 2.6": SPI(0x01, (0x0000,1FE0,0000,00FF))

- Take 2" for example, to send first byte protocol (0x70) before Command Index (0x01), and then send second byte protocol (0x72) before Command Data (0x0000,0000,01FF,E000).
- 3 Should measure VGH >12V and VDH >8V
- 4 Should measure VGL <-12V and VDL <-8V

Rev.: 04 Page: 25 of 37 Date: 2023/11/07




5 Write Data from the Memory to the EPD

5.1 Data Structure

This section describes how data should be sent to the G2 COG Driver which will update the display. The G2 COG Driver uses a buffer to store a line of data and then writes to the display.

EPD Resolutions

EPD size	Image resolution(pixels)	X	Y
1.44"	128 x 96	128	96
2"	200 x 96	200	96
2.7"	264 x 176	264	176
1.9"	144 x 128	144	128
2.6"	232 x 128	232	128

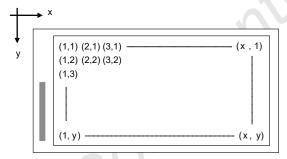

• Data components

- One Bit A bit can be W (White), B (Black) or N (Nothing) bit. Using the N bit to keep the pixel for the same color if new bit is same as previous one and also avoid overdriving the pixel to reduce ghosting phenomenon.
- One Dot/pixel is comprised of 2 bits.
- One Line is the number of dots in a line.

For example:

- The 1.44" uses 128 Dots to represent 1 Line.
- The 2" uses 200 Dots to represent 1 Line.
- The 2.7" uses 264 Dots to represent 1 Line.
- The 1.9" uses 144 Dots to represent 1 Line.
- The 2.6" uses 232 Dots to represent 1 Line.
- The G2 COG Driver uses a buffer to write one line of data (Mapping) interlaced. The table below is a Line data of 2" including Odd data bytes, Scan bytes and Even data bytes.

Rev.: 04 Page: 26 of 37 Date: 2023/11/07



Data Bytes	Scan bytes	Data Bytes
1 st - 25 th (Odd)	1 st - 24 th	26 th – 50 th (Even)
{D(199,y),D(197,y), D(195, y), D(193, y)}{D(7,y),D(5,y), D(3,y), D(1,y)}	{S(96),S(95), S(94),S(93)}{S(4),S(3), S(2), S(1)}	{D(2,y),D(4,y), D(6,y), D(8,y)}{D(194,y),D(196,y), D(198,y), D(200,y)}

- One frame of data is the number of lines * rows.

For example:

- 1.44": One frame of data is 96 lines * 128 dots.
- 2": One frame of data is 96 lines * 200 dots.
- 2.7": One frame of data is 176 lines * 264 dots.
- 1.9": One frame of data is 128 lines * 144 dots.
- 2.6": One frame of data is 128 lines * 232 dots.

5.2 Overall Update Flow

Stage 1 Stage 2 Stage 3 Stage 4

Previous Image (Compensate) White Inverse New Image A Previous Image (Compensate) A Previous

5.3 Store a Line of Data in the Buffer

This section describes the details of how to send data to the G2 COG Driver. The G2 COG Driver uses a buffer to update the display line by line.

The Nothing data byte can be either 0x00 or 0x01 where 0x00 is the default Nothing data for G2 driver.

Rev.: 04 Page: 27 of 37 Date: 2023/11/07



• 1.44" Input Data Order

Note:

1. Turn on OE : Output data from COG driver to panel.

2.

Data	bitl	bit0	Input	
D(v v)	1	1	Black	(B)
$D(x,y)$ $x = 1 \sim 128$ $y = 1 \sim 96$	1	0	White	(W)
y = 1~96	0	0	Nothing	(N)

Example:

D(127,y) = Black (B) = 11

D(125,y) = White (W) = 10

D(123,y) = Nothing(N) = 00D(121,y) = Black (B) = 11

 \rightarrow 1st Data Byte= 11,10,00,11

Scan	bit1	bit0	Input
S(1) ~S(96)	1 0		Scan on Scan off

Example:

When y = 2,

→ Only S(2) is Scan on (11) while others are Scan off (00). The image represented by Data Bytes will be displayed on 2^{nd} horizontal line (i.e. Dot(1,2) ~ Dot(128,2)).

S(1) = S can off = 00

S(2) = Scan on = 11


S(3) = Scan off = 00


S(4) = S can off = 00

S(96) = S can off = 00

 \rightarrow 1st ~ 23rd Scan Byte = 00,00,00,00

 \rightarrow 24th Scan Byte = 00,00,11,00

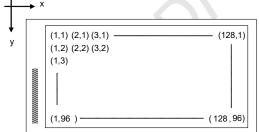

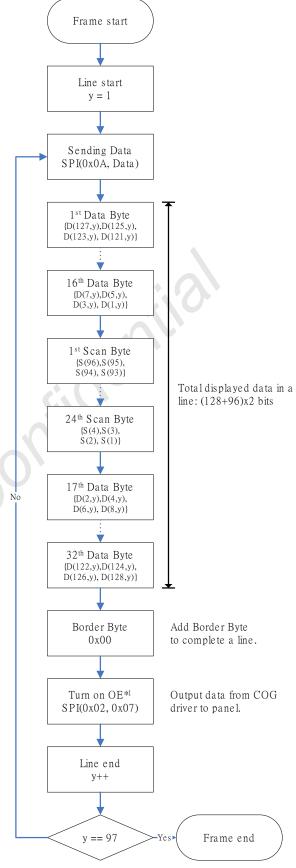

Rev.: 04 Page: 28 of 37 Date: 2023/11/07



2" Input Data Order

Note:

1. Turn on OE:

Output data from COG driver to panel.

2.

Data	bitl	bit0	Input	
D(x,y)	1	1	Black	(B)
$x = 1 \sim 200$	1	0	White	(W)
$y = 1 \sim 96$	0	0	Nothing	(N)

Example:

D(199,y) = Black (B) = 11

D(197,y) = White (W) = 10

D(195,y) = Nothing(N) = 00D(193,y) = Black(B) = 11

 \rightarrow 1st Data Byte= 11,10,00,11

	Scan	bit1	bit0	Input
0 (1)) ~S(96)	1	1	Scan on
3(1) ~3(90)	0	0	Scan off

Example:

When y = 2,

→ Only S(2) is Scan on (11) while others are Scan off (00). The image represented by Data Bytes will be displayed on 2^{nd} horizontal line (i.e. Dot(1,2) ~ Dot(200,2)).

S(1) = S can off = 00


S(2) = S can on = 11


S(3) = S can off = 00S(4) = S can off = 00

 $S(96) = S \operatorname{can} \operatorname{off} = 00$

 \rightarrow 1st ~ 23rd Scan Byte = 00,00,00,00

 \rightarrow 24th Scan Byte = 00,00,11,00

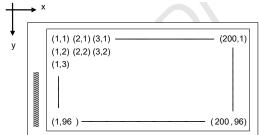


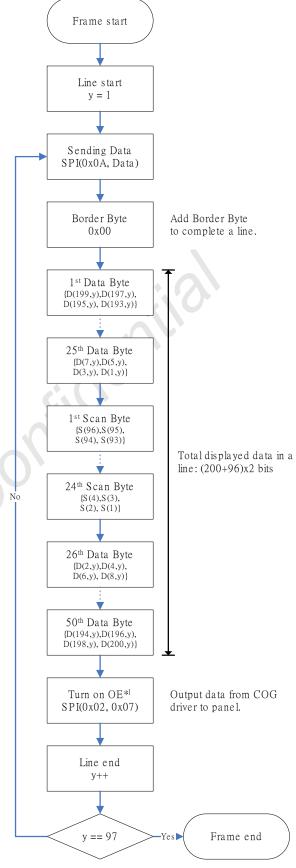

Rev.: 04 Page: 29 of 37 Date: 2023/11/07



2.7" Input Data Order

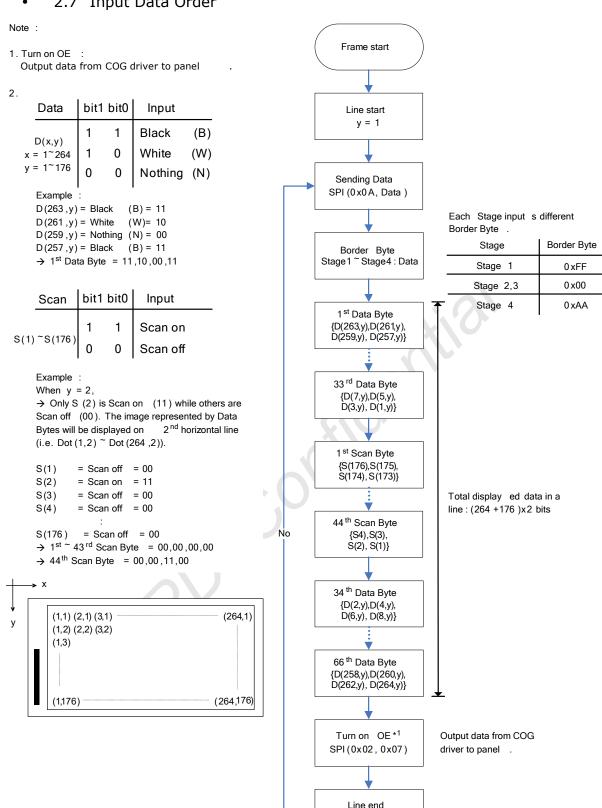

Rev.: 04 Page: 30 of 37 Date: 2023/11/07

y++

y == 177

Frame end



1.9" Input Data Order

Note:

1. Turn on OE: Output data from COG driver to panel.

	Data	bit1	bit0	Input	
	D(x,y)	1	1	Black	(B)
х =	D(x,y) = 1~144 = 1~128	1	0	White	(W)
у =	= 1~128	0	0	Nothing	(N)

Example:

D(1,y) = Black(B) = 11

D(2,y) = White(W) = 10D(3,y) = Nothing (N) = 00

D(4,y) = Black(B) = 11

→ 1^{st} Data Byte = 11,10,00,11

	Scan	bit1	bit0	Input
0 (1)	g (1.00)	1	1	Scan on
S(1)	~S(128)	0	0	Scan off

Example:

When y = 2,

 \rightarrow Only S(2) is Scan on (11) while others are Scan off (00). The image represented by Data Bytes will be displayed on 2nd horizontal line (i.e. $Dot(1,2) \sim Dot(144,2)$).

S(1) = S can off = 00

 $S(2) = S \operatorname{can} \operatorname{off} = 11$

= Scan off = 00 S(3)

S(4) = Scan off = 00

S(5)= Scan off = 00 = Scan off = 00 S(6)


= S can off = 00S(7)


 $S(8) = S \operatorname{can} \operatorname{off} = 00$

S(128) = S can off = 00

 \rightarrow 1st Scan Byte = 11,00,00,00

 \rightarrow 2nd ~ 32nd S can Byte = 00,00,00,00

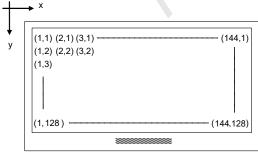

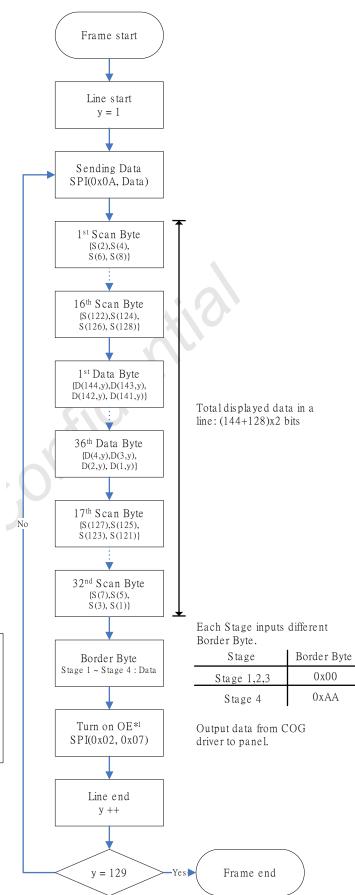

Rev.: 04 Page: 31 of 37 Date: 2023/11/07



2.6" Input Data Order

Note:

1. Turn on OE: Output data from COG driver to panel.

2.

Data	bit1	bit0	Input	
D(v v)	1	1	Black	(B)
D(x,y) $x = 1 \sim 232$ $y = 1 \sim 128$	1	0	White	(W)
$y = 1 \sim 128$	0	0	Nothing	(N)

Example:

D(1,y) = Black(B) = 11D(2,y) = White(W) = 10D(3,y) = Nothing(N) = 00

D(4,y) = Black(B) = 11

 \rightarrow 1st Data Byte= 11,10,00,11

	Scan	bit1	bit0	Input
\$(1)	~S(128)	1	1	Scan on
5(1)	5(120)	0	0	Scan off

Example:

When y = 2,

 \rightarrow Only S(2) is Scan on (11) while others are Scan off (00). The image represented by Data Bytes will be displayed on 2nd horizontal line (i.e. $Dot(1,2) \sim Dot(232,2)$).

S(1) = S can off = 00

= Scan off = 11 S(2)

S(3)= S can off = 00

= Scan off = 00 S(4) = S can off = 00S(5)


S(6)= S can off = 00= Scan off = 00 S(7)


= S can off = 00S(8)

 $S(128) = S \operatorname{can} \operatorname{off} = 00$

 \rightarrow 1st Scan Byte = 11,00,00,00

 \rightarrow 2nd ~ 32nd Scan Byte = 00,00,00,00

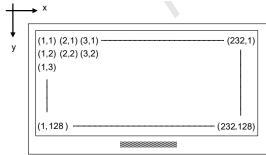

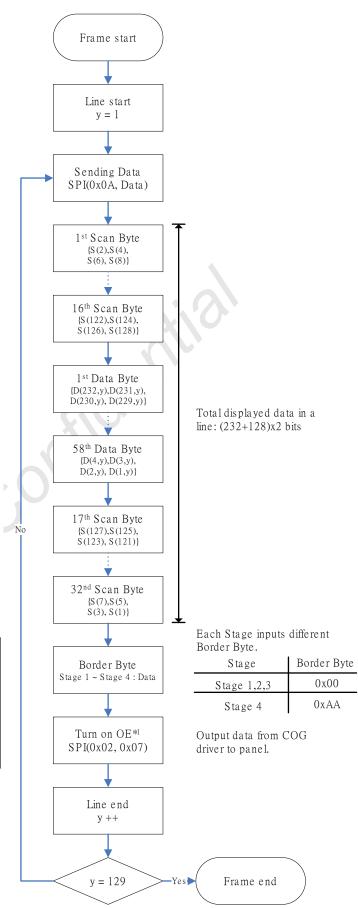


Rev.: 04 Page: 32 of 37 Date: 2023/11/07



5.4 Writing to the Display in Stages

This section contains the method to write to the display in stages. Each of the 4 stages should be the same use the same number of frames. Rewrite the frame during each stage.

The following flow chart describes how to update an image from a previous displayed image stored in memory buffer to a new image also stored in memory buffer. See the sample previous and new images below.

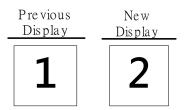

Panel Size	Stage Time (ms)*1	Frame Time of Timing Controller (ms)*2
1.44"	480	< 50ms
2"	480	< 50ms
1.9"	480	< 50ms
2.7"	630	< 80ms
2.6"	630	< 70ms

Note:

1 Stage Time is the number of frames used to write an intermediate pattern. This can vary based on the Frame Time of Timing Controller (or MCU).

Example: Use 2 inch for example

- If the Frame Time of Timing Controller is 40ms, it needs 12 frames at least of data per stage. (480/40 = 12)
- If the Frame Time of Timing Controller is 36ms, it cannot divisible the Stage Time, users can choose one of the two methods as below to determine the number of frames
 - (1) Frame Time = 36ms (480/36 = 13.33), users can drive 14 frames of data per stage at least.
 - (2) Frame Time = 36ms (480/36 = 13.33), users can drive 13 frames of data per stage. And use equal delay time in each frame to meets the Stage Time.

Example: 36ms * 13 + delay time= 480ms.


- 2 Frame Time is based on the MCU that PDi used to recommend a maximum limit value of Frame time.
- 3 This table is tested with PDi's jig.

Rev.: 04 Page: 33 of 37 Date: 2023/11/07



Temperature (°C)	TF*5
1 0	17
-5 □T > -10	12
5 □T > -5	8
10 □T > 5	4
15 □T > 10	3
20 □T > 15	2
40 □T > 20	1
> 40	0.7

- 1. The previous image stored in memory is used to determine how to write the data for both Stage 1 and Stage 2.
- 2. The new image stored in memory is used to determine how to write the data for both Stage 3 and Stage 4.
- 3. Optional: The optical performance is dependent on Stage Time. If the ghosting is at unacceptable level, the EPD can be rewritten and then Stage 4 repeated to write the New image.
- 4. It needs (Stage Time *TF) ms to finish a stage.
- The TF below 0°C is for reference only. PDI does not guarantee the performance and functionality below 0°C.
- If you use Flash memory for the Section 2, please erase the buffer when Stage 4 is completed.

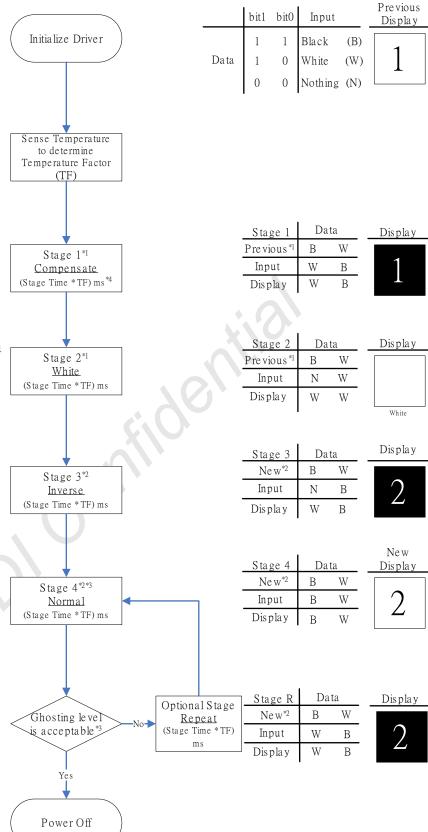

Rev.: 04 Page: 34 of 37 Date: 2023/11/07



6 Power Off G2 COG Driver

1. Nothing Frame : Write a frame data

Panel size	Scan Line
1.44"	96
2"	96
2.7"	176
1.9"	128
2.6"	128


Whose Data Bytes are 0x00. Scan Bytes operate normally .

Scan lines are still turned on sequentially . This frame will make the image more uniform . Turn on OE SPI (0x02, 0x07) at the end of each line . For 1.44", 1.9", 2", 2.7" & 2.6", need to set Border Byte to complete 1st Data Byte . Border Byte = 0x00 for 1.44" & 2"
0xAA for 1.9" & 2.6" & 2.7"

External Discharge :
 For implement this function , users need to use a DISCHARGE pin from microcontroller to control .(refer to the reference circuit)

This is important to avoid vertical lines

- If you use the flash memory for pattern store
 please recheck flash in this phase and verify the old
 image flash is erased .
- 4. BORDER Dummy Line :
 Set Border Byte = 0xAA and write to white . A line whose all Data Bytes are 0x00 and Scan Bytes are 0x00. Then must to set SPI (0x02,0x07) in the end of line for turn on output enable of COG Driver to control border and clear the register data before power off . Detail of data input is on page 27 ~ page 31.
- Delay time of VGL and VDL :
 Please ensure to place the accurate delay time here
 until VGL is discharged to GND by measured by
 oscilloscope .

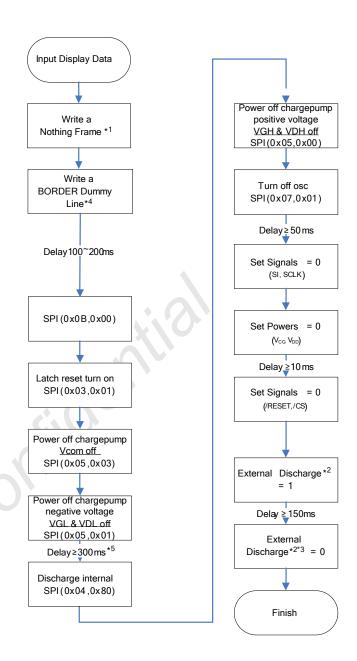


Rev.: 04 Page: 35 of 37 Date: 2023/11/07



Appendix: Use G1's PCBA to drive the EPD with G2 Driver IC

Below is the reference circuit if you have arranged the PCBA that drove the EPD with G1 Driver IC already.

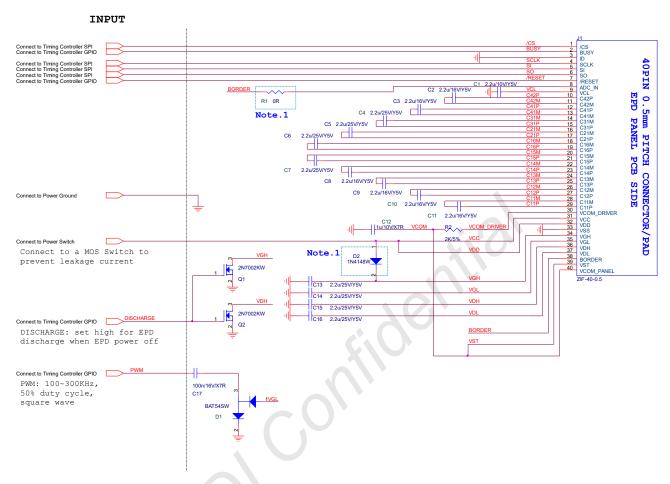

Note:

1. Hardware setting for different size:

	R1	D2
1.44 inch & 2 inch	Mounted	Mounted
1.9 inch & 2.6 inch & 2.7 inch	No Mounted	No Mounted

Rev.: 04 Page: 36 of 37 Date: 2023/11/07



If users want to drive the EPD with G2 Driver IC by the current PCBA (i.e. the reference circuit above). Below items are the steps needed to do.

- Keep hardware unchanged as above.
 - Keep Resistor R1 open.
- Modify SPI data as the following sections described.
- Disable the Timing Controller GPIO pin, PWM. Keep PWM signal as either 1 or 0.
- No matter what size EPD is, use same power off sequence of section 6.

Rev.: 04 Page: 37 of 37 Date: 2023/11/07