CH365 Chemical Engineering Thermodynamics

Lesson 4
Internal Energy, Energy Balances, and State Functions


Professor Andrew Biaglow

James P. Joule

24 December 1818 to 11 October 1889

Count Rumford (Sir Benjamin Thompson, 1752-1814) studied the manufacturing of canons and observed that the barrels heat up while being drilled. He designed an experiment to drill cannon barrels under water. The heat from the drilling caused the water to boil. Caloric theory requires heat flow from a hotter body to a colder one. Since the only thing communicated to the barrel was motion, his experiments appeared to violate the theory.

Referring to this experiment, Joule remarked that "the total quantity of ice-cold water which, with the heat actually generated by friction, and accumulated in 2h 30m, might have been heated 180°, or made to boil." J.P. Joule, "On the Mechanical Equivalent of Heat," *Philosophical Transactions of the Royal Society of London* 140 (1850): 61-82

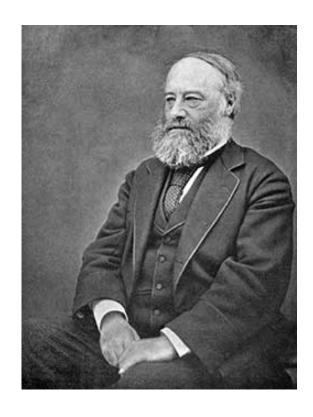

Resistive Heating: a.k.a. Joule's Law P=I²R

Joule-Thompson: Joule's 2nd Law Gas throttling

Influenced William Thomson a.k.a. Baron Kelvin

Home-schooled brewer's son. Tutored by John Dalton. Managed his brewery by day and experimented at night as a hobby.


Impressed by the famous cannon-boring experiments of Count Rumford, in which heat is created continuously by the mechanical work of boring a cannon, and which violated the caloric theory of heat.

Joule's Experiment

relationship between work and heat

determined "the mechanical equivalent of heat with exactness"

J.P. Joule, "On the Mechanical Equivalent of Heat," Philosophical Transactions of the Royal Society of London 140 (1850): 61-82

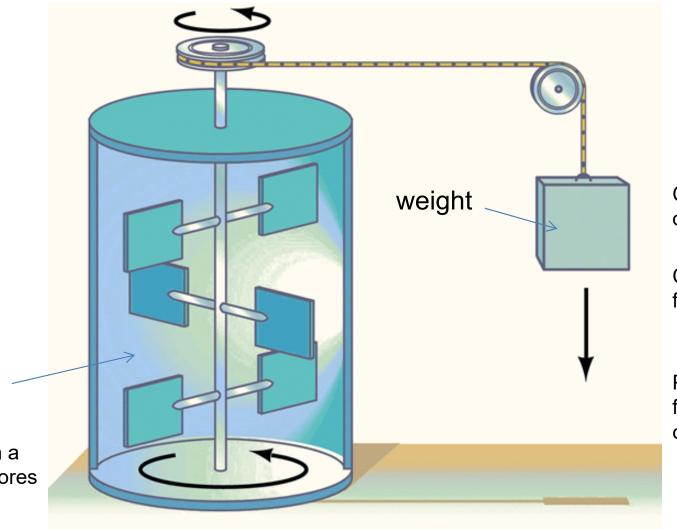

Change in potential E of weight = $\rho g \Delta h$.

Change in $mC\Delta T$ of fluid.

Potential energy of falling masses was converted to heat.


For each fluid, a fixed amount of work is required per unit mass for every degree of temperature rise.

water, oil, mercury

Later contact with a colder object restores temperature

Joule's Apparatus

J.P. Joule, "On the Mechanical Equivalent of Heat," Philosophical Transactions of the Royal Society of London 140 (1850): 61-82

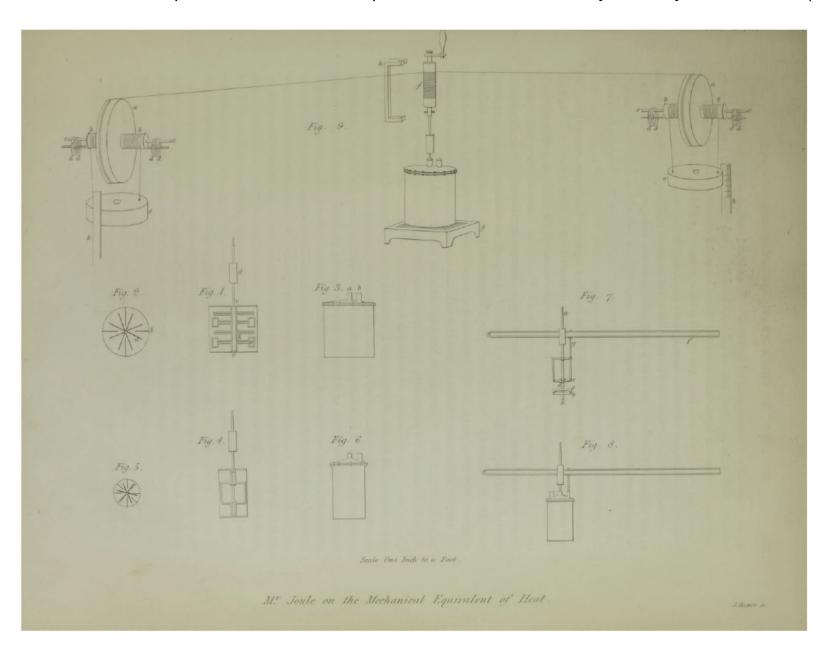

Joule's Data

J.P. Joule, "On the Mechanical Equivalent of Heat," Philosophical Transactions of the Royal Society of London 140 (1850): 61-82

No. of experiment and cause of change of temperature.	Total fall of weights in inches.	Mean temperature of air.	Difference be- tween mean of columns 5 and 6 and column 3.	Temperature of apparatus.		Gain or loss of
				Commencement of experiment.	Termination of experiment.	heat during experiment.
1 Friction	1256·96	57.698	2.252−	55.118	55.774	0.656 gain
1 Radiation	0	57.868	2.040−	55.774	55.882	0.108 gain
2 Friction	1255·16	58·085	1·875—	55·882	56·539	0.657 gain
2 Radiation	0	58·370	1·789—	56·539	56·624	0.085 gain
3 Friction	1253-66	60·788	1·596—	58*870	59·515	0.645 gain
3 Radiation		60·926	1·373—	59*515	59·592	0.077 gain
4 Friction	1252.74	61·001	1·110—	59·592	60·191	0.599 gain
4 Radiation		60·890	0·684—	60·191	60·222	0.031 gain
1	2	3	4	5	6	7

Internal Energy

Energy added as work can be removed later as heat. Where is this energy between its addition and transfer out?

First Law of Thermodynamics

Although energy assumes many forms, the total quantity of energy is constant, and when energy disappears in one form, it appears simultaneously in other forms.

$$\Delta$$
(Energy of System) + Δ (Energy of Surroundings) = 0

System: Region of space in which the process occurs

- •a system can be any size
- boundaries may be real or imaginary
- •can be a single substance or a component of a mixture

Surroundings: Everything with which the system interacts

Units:

J, ft·lb_f, or Btu

Energy Balance for Closed Systems

Closed System

vs. Open Systems (described later)

System boundary does not permit the transfer of matter between the system and surroundings

$$\Delta$$
(Energy of System) = Q + W

Q and W are positive for transfer into the system from surroundings, pages 26-27. Heat or work added to system increase internal energy.

Internal energy changes only:

Intensive U vs extensive U^t (L1 Slide 16)

$$\Delta U^{t} = Q + W$$

Differential form:

$$dU^{t} = dQ + dW$$

$$n\Delta U = Q + W$$
 eq 2.5

 $n\Delta U = \Delta U^{t}$ if n = 1 mol

$$ndU = dQ + dW$$
 eq 2.6

 $ndU = dU^{t}$ if n=1 mol

Axiom to First Law:

There exists a form of energy, known as the internal energy U, which is an intrinsic property of a system, functionally related to the "measureable coordinates" which characterize the system. For a closed system not in motion, changes in this property are given by equations 2.5 and 2.6.

Example 2.3(a)

A gas is contained in a cylinder by a piston. The initial pressure of the gas is 7 bar, and the volume is 0.10 m³. The piston is held in place by latches in the cylinder wall. The whole apparatus is placed in a total vacuum. What is the energy change of the apparatus if the restraining latches are removed so that the gas suddenly expands to double its initial volume, the piston striking other latches at the end of the process? (System: gas, piston, and cylinder)

Example 2.3(a)

A gas is contained in a cylinder by a piston. The initial pressure of the gas is 7 bar, and the volume is 0.10 m³. The piston is held in place by latches in the cylinder wall. The whole apparatus is placed in a total vacuum. What is the energy change of the apparatus if the restraining latches are removed so that the gas suddenly expands to double its initial volume, the piston striking other latches at the end of the process? (System: gas, piston, and cylinder)

Thermodynamic State and State Functions

State Functions

Depend only on present conditions, however reached. Calculated as a function of *intensive* variables, e.g.,

$$U = f(T,P)$$
 Postulate: fixing any two intensive properties fixes all others f is a function of "measurable coordinates" T and P

Is pressure a state function?

$$PV = RT \Rightarrow P = \frac{RT}{V} = f(T, V)$$

Yes, pressure can be written as a state function.

$$\int_{P_1}^{P_2} dP = P_2 - P_1 = \Delta P$$
 (Volume, too, as long as we use intensive V and not extensive V^t)
$$\int_{V_1}^{V_2} dV = V_2 - V_1 = \Delta V$$

Q and W are not state functions and depend on path.

$$\int dQ = Q \qquad \qquad \int dW = W$$

(These are path integrals – mathematically different.)

Example 2.4

Refer to the figure below. When a system is taken from state *a* to state *b* along path *acb*, 100 J of heat flows into the system and the system does 40 J of work.

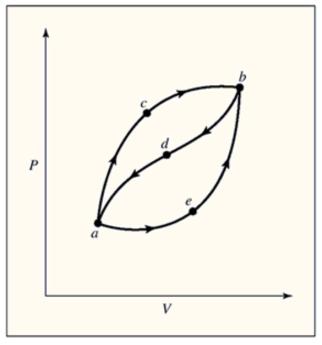



Diagram for Ex. 2.4.

Questions?

Lesson 4 Problems

Problem 2.4

An electric motor under steady load draws 9.7 amperes at 110 volts, delivering 1.25 hp of mechanical energy. What is the rate of heat transfer from the motor, in kW?

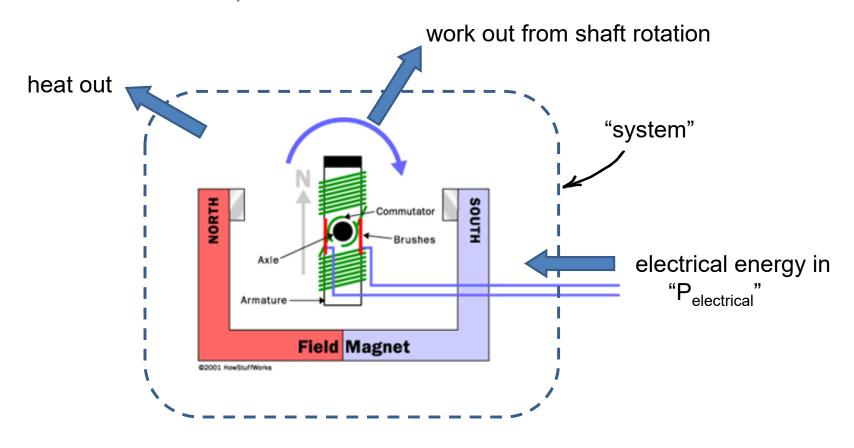

First Law: $\Delta U = Q + P_{electrical} + W$ At steady state, $\Delta U = 0$: $0 = Q + P_{electrical} + W$