1 Introduction

In this lab, you will learn the basis of interfacing with the UART controller of the ATMega328P. You will first implement a simple "LED blink" program in Part A. In Part B, you will implement a "hello world" program. Finally in Part C you will combine the two into an interactive console program to control the LED.

This project is split into three parts, which are graded separately. This is intended to ensure that you are making progress on the project throughout the allocated time, and to help get you feedback as quickly as possible. Additionally, you will write a brief reflection on this assignment by responding to several free-response questions.

You will turn in one single file at the end of part C, and another at part D, which will be generated by running the command make pack. This file will automatically include your code and your reflection responses. Incorrectly packed submissions will not be graded.

Note that make pack requires you to have modified the reflection.txt file, but the reflection will not be graded until after Part D is turned in. If you have not started it by the time you submit Part C, you can simply add one line of text indicating this.

| Part | Due Date |
|------------|----------|
| Part A | TBD |
| Part B | TBD |
| Part C | TBD |
| Part D | TBD |
| Reflection | TBD |

Figure 1: Table of due dates for each part.

Contents

| 1 | Introduction | 1 |
|---|---|------------------|
| 2 | Parts List | 2 |
| 3 | 3.2 Requirements | 2 2 4 4 |
| 4 | Part B: UART "hello world" 4.1 Requirements | 4 4 |
| 5 | Part C: UART Control Console 5.1 Requirements | |
| 6 | Part D: Software UART 6.1 Requirements | 5 |
| 7 | Reflection 7.1 Question 1 7.2 Question 2 7.3 Question 3 | 6 6 6 |
| 8 | Rubric | 6 |

2 Parts List

- one Arduino UNO¹
- one LED
- several male-male jumper wires
- one USB cable

- one breadboard
- one 330 Ω resistor (orange, orange, brown, gold)²
- AVRIce Programmer and cables

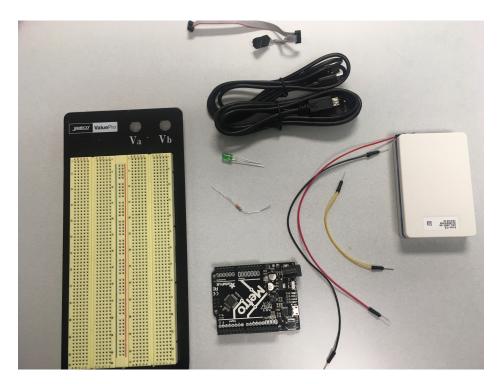


Figure 2: Photo showing parts for this project.

NOTE: this document is written assuming you are using PC0 to drive the LED. You can use a different pin, but you will also have to account for this when writing your code.

3 Part A: LED Blink

3.1 Wiring

Connect the LED to PC0 (marked as A0 on the Arduino). The anode (long leg) should connect to PC0. Connect the short leg of the LED (the cathode) to ground via the resistor.

TIP: If you can't tell which leg is longer (for example, if you have trimmed the legs on the LED), the side of the LED with the shorter leg (cathode) is also slightly flattened near the base of the LED.

¹Or compatible development board with an ATMega328P.

²Larger resistor may be substituted if needed.

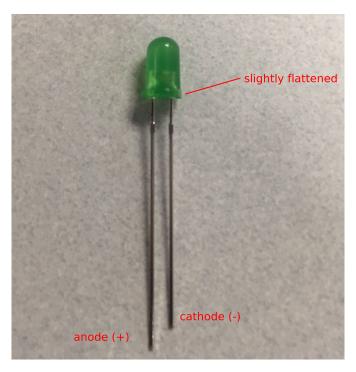


Figure 3: Photo showing the anode and cathode of an LED.

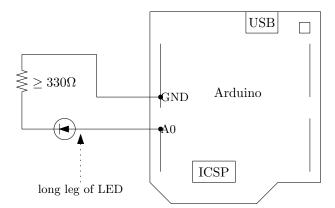


Figure 4: Wiring diagram for LED blink program.

You should also connect the USB cable from your Arduino to your workstation. This is how you will connect to the UART console.

Finally, connect the AVRIce programmer to your workstation, and the programming cable to the Arduino. Remember that the tab on the programming cable should be facing the interior of the Arduino board.

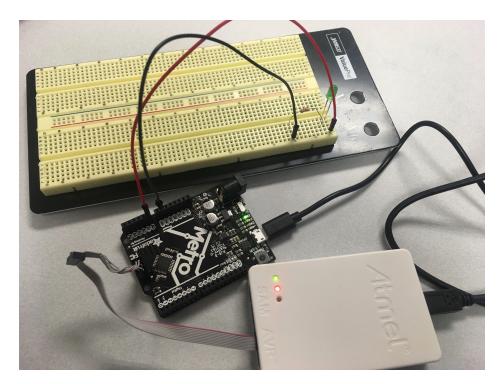


Figure 5: Photograph showing correctly wired project.

If you want to validate your wiring, you can use make reference which will flash the reference solution to the board. It should start in a non-blinking state, and will allow blinking to be toggled via the UART console as described in part C.

3.2 Requirements

• (A.1) LED blinks continuously, remaining lit for roughly $\frac{1}{2}$ second, and remaining off for roughly the same amount of time.

3.3 Grading

You do not need to submit any code for this portion. During lab, office hours, or by appointment, demonstrate your project to your TA or instructor.

4 Part B: UART "hello world"

4.1 Requirements

• (B.1) When the AVR is reset, the message "Hello World!" is displayed via an attached UART console. The UART configuration 57600 8N1 should be used.

4.2 Grading

You do not need to submit any code for this portion. During lab, office hours, or by appointment, demonstrate your project to your TA or instructor.

5 Part C: UART Control Console

5.1 Requirements

• (C.1) When the AVR is ready to accept input, a prompt of your choice (for example: ready>) should be displayed indicting the user may enter a command.

- (C.2) When the user enters the command on, the LED should begin blinking as in Part A, and should continue to do so until another command is entered or the AVR is reset.
- (C.3) When the user enters the command off, the LED should stop blinking, and remain unlit indefinitely until another command is entered or the AVR is reset.
- (C.4) If any other text string is entered, an informative error message should be displayed via the console. The state of the LED should remain unchanged (i.e. if the LED was blinking, it should continue to do so). You may assume no command will be entered which is more than 64 characters in length.
- (C.5) When the AVR is reset, the LED should be in the "off" state.

5.2 Grading

During lab, office hours, or by appointment, demonstrate your project to your TA or instructor. You will also submit your code for this portion of the assignment via Moodle. Please pack your code using the command make pack. Incorrectly packed project submissions will not be graded.

Note that the make pack script will not allow you to pack your code if the reflection.txt file is unmodified - if you want to submit part C without starting your reflection, then just modify it with a line that says "I will complete my reflection in Part D" (or something to that effect so that we know you have acknowledge you need to complete it).

5.3 Background

Part C differs from the first two parts of the lab, in that two separate concerns are present - blinking the LED and interacting with the UART. There are several ways that one might choose to address this, and no specific method is prescribed for the purposes of this lab. It is probably easiest to use the static scheduling approach, but the interrupt-driven approach will be used in future labs, so you may wish to get a head start by using that.

The first main general style of approaching this problem is **static scheduling**. You might simple have a single loop that runs forever. In each loop iteration, check if the LED needs to turn on, turn off, or stay the same and do so if necessary, then check if there is a character ready to read from UART and append it to a read buffer, then check if the read buffer has enough data to process and so on. This approach has several benefits: it is simple to understand and implement, it is easy to predict how long each loop iteration will take, and operation will always be fully deterministic.

A more advanced approach would be **interrupt driven**. This could be done by either utilizing the ISR³ which runs when UART data is ready and using this ISR for command processing, or by using one of the timer/counter interrupts to control the LED while polling the UART controller synchronously.

There are of course other ways of solving this problem. On a more powerful processor, one might use timedivision multiplexing to implement several threads of execution, each implementing synchronous polling. On devices with multiple processing cores, one could simply have two separate threads running in parallel with no special logic required.

6 Part D: Software UART

6.1 Requirements

- (D.1) from the perspective of the user, your project should work exactly the same as in part C.
- (D.2) the transmit functionality of your project (i.e. uart_putchar()) must be implemented using software, not the hardware UART controller.
- (D.3) said software transmit functionality should operate at a reasonable baud rate (at least 9.6k baud). The reference implementation runs at 57.6k baud.
- (D.4) your project should continue to use the hardware UART controller for receiving data from the console.

6.2 Grading

During lab, office hours, or by appointment, demonstrate your project to your TA or instructor. You will also submit your code for this portion of the assignment via Moodle. Please pack your code using the command

³Interrupt Service Routine

make pack. Incorrectly packed project submissions will not be graded.

6.3 Background

In this part of the assignment, you are asked to implement a "bit-banged" implementation of UART transmission. "bit-banging" is the practice of implementing a communications protocol by directly manipulating GPIO pins, rather than using a hardware controller. This can be a powerful and useful technique. We will use this method later in the course to interface with our WiFi adapter while still maintaining a separate debug output by using both the hardware controller and our bit-banged implementation simultaneously.

Note that you should use PD1 (Arduino digital Pin 1) as the TX pin for your software UART implementation (as you need only implement TX functionality, you need not allocate a TX pin). This is because it will allow you to take advantage of the UART to USB converter built into the Arduino.

You will want accurate delay functions in order to implement this functionality. You should consider using util/delay.h⁴. This provides functions for delaying by a number of milliseconds or microseconds.

7 Reflection

You should submit your answers by editing reflection.txt to include them before you run make pack. There is no specific requirement for word or page count, but roughly 1-3 paragraphs are expected in response to each question. Note that your reflection will be graded with your submission to part D.

7.1 Question 1

A fellow CSCE317 student says they are pretty sure they have implemented Part B correctly, but their terminal just shows random junk. Speculate on the cause of this problem.

7.2 Question 2

How did you choose to solve the problem in Part C of managing two separate tasks at the same time? Why did you select this approach?

7.3 Question 3

Suppose you were tasked with implementing a new feature in your project where a user could also enter a command set X with X being a number of milliseconds specifying the total period of the LED blink cycle. In other words, when the LED is blinking, it should stay on for $\frac{X}{2}$ ms, rather than a half second. Briefly describe how you would implement this feature.

8 Rubric

- 10 pts Part A demonstration
- 10 pts Part B demonstration
- 10 pts Part C demonstration
- 15 pts Part C code review
 - 5 pts Should interface with the UART controller (no third party libraries, no bit-banging).
 - 5 pts Set up stdin and stdout so that printf() works.
 - 5 pts Style.
- 10 pts Part D demonstration
- 15 pts Part D code review
 - 5 pts Should implement UART transmit using bit-banging, and UART receive using the hardware controller.
 - 5 pts All other aspects from part C should still work.

⁴https://www.nongnu.org/avr-libc/user-manual/group__util__delay.html

- 5 pts Style.
- 30 pts Reflection (10 pts per question)

Maximum number of points possible: 100.

Keep in mind that some items not listed on the rubric may cause you to loose points, including cheating, submitting code which is inconsistent with what you have demonstrating, plagiarizing code or reflection content, etc.