Course code: CSE 4104 Credit: 0.75
Course Name: Engineering Drawing Semester: Winter

Instructor: Muhammad Shihab Rashid

### Lab 1

## Name of Experiment: Introduction

### 1.1 Introduction

An engineering drawing is a controlled document used to convey information in a graphical way.

AutoCAD is a general purpose Computer Aided Design (CAD) program that can be used to prepare a variety of two Dimensional Drawings and three Dimensional Models.

### Objective:

Objective of this lab is to -

> Learn a faster and accurate method for creating drawings than other traditional method.

### Learning Outcomes:


Upon completion of this lab you will be able to-

- > Create, edit, and develop design alternatives using realistic solids and surfaces in an updated design environment.
- > Communicate your ideas with powerful sketch, shadow, and rendering tools.
- 1.2 Launching AutoCAD

Start AutoCAD by Windows Start button-Programs-AutoDesk-AutoCAD 2007-AutoCAD 2007. Once AutoCAD is loaded, move the mouse around until you see a crosshair cursor. The AutoCAD window has a number of important features:

- 1. The standard Windows drop-down menus.
- 2. The standard Windows toolbar below the menus, it includes: File-New, File-Open, File-Save, Print and "Find and Replace" (!!).
- 3. In addition to the standard toolbar there will be a number of AutoCAD specific toolbars: Object Properties, Draw and Modify (there may be

- 4. The graphics area that's the area where you draw note the scroll bars and the axis label.
- 5. View Tabs these 'tabs' give access to different view of the current drawing. The "model" tab should be selected at present.
- 6. The command area this small window (by default) has space for three

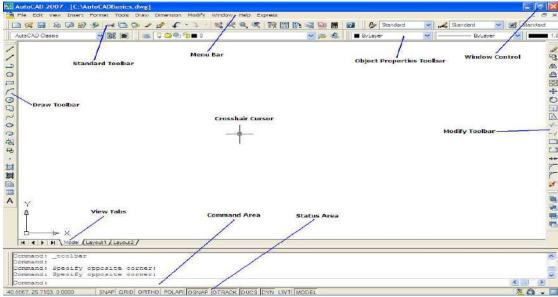

lines of text - this is where you type commands.

7. The status area, at the bottom of the AutoCAD window, this includes the current cursor position.

Typically there are three ways of giving a command:

- 1. Type the command using the keyboard the command is displayed in the command area.
- 2. Select the command from a menu.
- 3. Select the command's icon from a toolbar.


For example to draw a line, Type LINE-J. Then Move the crosshair near the bottom-left of the rectangle and click the left mouse button, then move the crosshair to the top-right of the rectangle and again click the left mouse button. Press -J to terminate the command, press -J again to re-start the command.

## 1.3 Cartesian coordinate system

AutoCAD provides the user with an infinite two dimensional area to work with. Any entities place on the working two dimensional planes can be defined relative to the Cartesian coordinate system.

The Cartesian coordinate system divides a two dimensional plane with two perpendicular axis. The X axis runs horizontal across the bottom of the screen. The Y axis runs vertically along the left side of the screen. These two axis intersect at the bottom left corner of the screen.

Each of these axis is further divided into segments. Each segment is given a value. The X axis segments increase in value to the right. The positive X values are to the right of the intersection of the two axis. The negative X values are to the left. The positive Y values are above the intersection and increase up. The negative Y values are below.

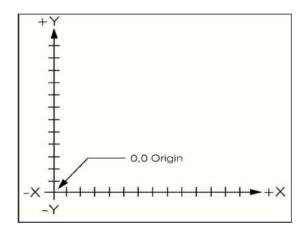


There are 3 coordinate systems used in any kind of drawing in AutoCAD. They are-

- 1) Absolute coordinates
- 2) Relative coordinates
- 3) Polar coordinates


### √ Absolute Coordinate-

- All input points specify in your drawing using standard Cartesian co-ordinates x,y.
- Actually in this method, calculation of any point is related with root point.

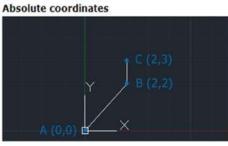


#### √ Relative coordinates

 After first points entered, next points can be entered by specifying the next co-ordinates compare/relative from the first points. • The relative coordinate started with symbol "@" tell AutoCAD it was a relative coordinates.

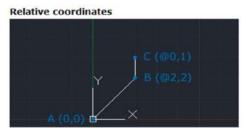

#### √ Polar coordinates

- Polar coordinates used when you need to draw the next points at specify angle. Polar coordinates system in AutoCAD specifies distance length at which angle.
- Using polar coordinate, points entered by typing @distance<angle</li>

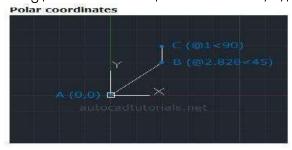

## 1.4 Lab Organization:

In the lab, at first we will discuss about the basic commands that you will need to perform this lab. Then you will be shown a demonstration on the commands discussed today using AutoCAD 2007. After that you will be given some assignments to practice these commands.

# 1.5 Acceptance and Evaluation

If you fail to submit the assignments within the lab time then you can submit it in the next lab (some marks deduction will be applicable then). The marks distribution is as follows:

Asssignment: 10 For Late submission: 10%-20% marks deduction

Note: Extra points will be awarded for any kind of creative features (if added) with the assignments.

Note:

> You will find all the necessary information about the commands and coordinate system in a ppt file-also given inside ftp://10.220.20.26/CSE-4104/Lab1 folder.

## Lab 2

## Name of Experiment: Draw Commands

### 2.1 Introduction

AutoCAD is a general purpose Computer Aided Design (CAD) program that can be used to prepare a variety of two Dimensional Drawings and three Dimensional Models.

## Learning Outcomes:

Upon completion of this lab you are expected to be able to-

> Draw basic 2D objects like-line, rectangle and circle using AutoCAD.

### 2.2 Line Command


- 1. Type LINE from the command prompt (Command:LINE or L)
- 2. Press ENTER
- 3. Pick From point: (point)
- 4. Pick Specify next point or [Close/Undo]:(point)
- 5. Pick Specify next point or [Close/Undo]:(point)
- 6. Press ENTER to end line sequence

or

Type U to undo the last segment

or

Type C to close the polygon

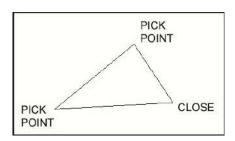

# 2.3 Drawing Rectangles using Line Command


Using Absolute Coordinate
Type x,y coordinate when
AutoCAD asks for a point. From point:
1,1

To point: 2, 1

To point: 2,2

To point: 1,2

To point: 1,1

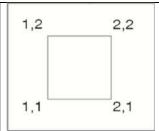

# Using Relative Coordinate


Type @deltax,deltay when AutoCAD asks for a point. From point pick point

To point: @1,0

To point: @0,1

To point: @-1,0

To point: @0,-1

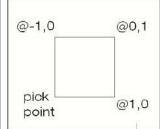

# Using Polar Coordinate


Type @distance<angle when AutoCAD asks for a point. From point: pick point

To point:@1<0

To point:@1<90

To point:@1<180

To point:@1<270

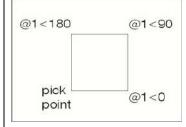

# 2.4 Rectangle Command

- 1. Type Rectangle from the command prompt (Command: Rectangle or REC)
- 2. Press ENTER
- 3. Pick first corner point: (point)
- 4. Pick Specify next corner point or [Close/Undo]:(point)
- 5. Press ENTER to end line sequence

or

Type U to undo the last segment

 $\bigcirc$ r

Type C to close the polygon

2.5 Circle Command

- 1. Type CIRCLE at the command prompt. (Command: CIRCLE or C)
- 2. Type One of the following options:

3P/2P/TTR/<center point>>:

or


Pick A center point.

3. Type A radius or diameter.


or

4. Pick A radius or diameter Diameter/<radius>

Circle, Center Radius

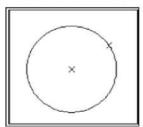

Circle, Center Diameter

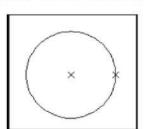

2.6 Summary:

Command	Keystroke
Line	Line / L
Circle	Circle / C
Erase	Erase / E
Rectangle	RECTANGLE /
	REC

2.7 Assignments:

Draw the given three pictures below using AutoCAD.

