

# **GPS 12-Channel Correlator**

August 2005

#### **Features**

- 12 Fully Independent Correlation Channels
- On-Chip Dual UART and Real Time Clock
- Compatible with most 16- and 32-bit Microprocessors
- Memory Control Logic for ARM60 Microprocessor
- · Low Voltage, Low Current Power-Down Mode
- Power Dissipation 150mW Typical
- Compatible with GP2015 and GP2010 RF Front Ends
- Battery Backup Voltage 2.2V (min)

# **Applications**

- GPS Navigation Systems
- · GPS Geodetic Receivers
- Time Transfer Receivers

# **Related Global Positioning Products**

Part	Description	Data ref.
GP2015	GPS receiver RF front end (48-lead TQFP package)	DS4374
GP2010	GPS receiver RF front end (44-lead PQFP package)	DS4056
P60ARM-B	32 bit RISC microprocessor	DS3553
App. Note	GPS ORION 12 Channel GPS Receiver Reference Design	AN4808
App. Note	GPS2000 GPS Receiver Hardware Design	AN4855

#### **Ordering Information**


GP2021/IG/GQ1N 80 Pin MQFP Trays, Bake & Drypack
GP2021/IG/GQ2Q 80 Pin MQFP\* Tape & Reel
GP2021/IG/GQ1Q 80 Pin MQFP Tape & Reel
GP2021/IG/GQ2N 80 Pin MQFP\* Trays, Bake & Drypack
\*Pb Free Matte Tin

# **Description**

The GP2021 is a 12-channel C/A code baseband correlator for use in NAVSTAR GPS satellite navigation receivers. The GP2021 complements the GP2015 and GP2010 C/A code RF downconverters available from Zarlink Semiconductor.

The GP2021 is compatible with most 16-bit and 32-bit microprocessors, especially those from Motorola and Intel, with additional on-chip support for the ARM60 32-bit RISC processor. When the ARM60 is used, the on-chip memory management functions allow implementation of a full GPS receiver with minimal external logic.

The GP2021 allows individual channel de-activation, for systems not requiring full 12-channel operation, to save power and processor loading. Receiver power may be further conserved by reducing the supply voltage to 2.2V under battery backup; all system functions are then disabled but the 32.768kHz oscillator and Real Time Clock are maintained for the microprocessor to estimate satellite visibility at power-on to reduce signal acquisition time.

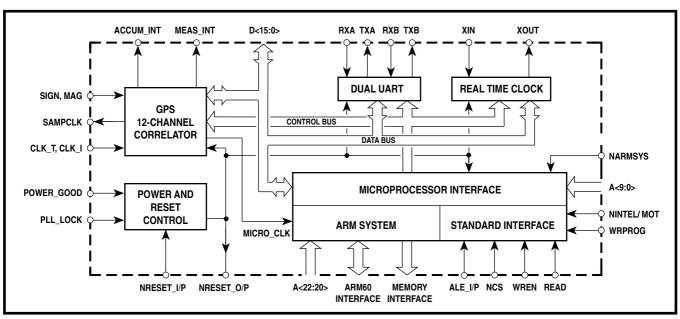

CONTENTS			
	Page		Page
TYPICAL GPS RECEIVER	3	CONTROLLING THE GP2021	24
PIN DESCRIPTION	4	DETAILED DESCRIPTION OF REGISTE	ERS 28
FUNCTIONAL DESCRIPTION	7	GP2021 Register Map	28
12-Channel Correlator	7	Correlator Registers	30
Tracking Modules	8	Tracking Channel Registers	30
PERIPHERAL FUNCTIONS	11	Peripheral Functions Registers	43
Dual UART	11	Real Time Clock and Watchdog	43
Real Time Clock (RTC) and Watchdog	12	DUART	43
Power and Reset Control	12	SYSTEM CONTROL	44
Discrete I/O	14	GENERAL CONTROL	45
Digital System Test Interface	15	ELECTRICAL CHARACTERISTICS	47
MICROPROCESSOR INTERFACE	15	TIMING CHARACTERISTICS	51
SOFTWARE REQUIREMENTS	21		

# **Absolute Maximum Ratings**

These are not the operating conditions, but are the absolute limits which if exceeded, even momentarily, may cause permanent damage. To ensure sustained correct operation the device should be used within the limits given under Electrical Characteristics. It is essential for both  $V_{\text{DD}}$  and  $V_{\text{SS}}$  to be present before input signals are applied.

Supply voltage ( $V_{DD}$ )  $V_{SS}$ -0·3V to +6V Input voltage (any input pin)  $V_{SS}$ -0·3V to  $V_{DD}$ +0·3V Output voltage (any output pin)  $V_{SS}$ -0·3V to  $V_{DD}$ +0·3V Storage temperature  $V_{SS}$ -0·3V to  $V_{DD}$ +0·3V

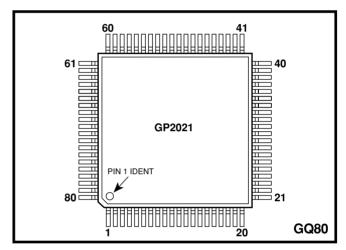


Figure 2 Pin connections - top view

Pin	Description	Pin	Description	Pin	Description	Pin	Description
1	MULTI FN IO	21	NRD/NC	41	A6	61	D11
2	POWER GOOD	22	ARM ALE/NC	42	A5	62	D12
3	NRESET OP	23	DBE/NC	43	A4	63	D13
4	NARMSYS	24	ACCUM INT	44	A3	64	D14
5	XIN	25	MEAS INT	45	A2	65	D15
6	XOUT	26	NBW/WRPROG	46	A1/ALE_IP	66	PLL_LOCK
7	TXA	27	NMREQ/DISCIP2	47	A0/NRESET_IP	67	$V_{DD}^{-}$
8	TXB	28	NOPC/NINTELMOT	48	D0	68	DISCOP
9	RXA	29	NRW/DISCIP3	49	D1	69	$V_{SS}$
10	RXB	30	MCLK/NC	50	D2	70	CLK_T
11	NROM/NC	31	ABORT MICRO_CLK	51	D3	71	CLK_I
12	NEEPROM/NC	32	DISCIO	52	D4	72	$V_{SS}$
13	NSPARE_CS/NC	33	A22/READ	53	D5	73	SAMPCLK
14	$V_{DD}$	34	$V_{DD}$	54	D6	74	$V_{DD}$
15	$V_{SS}$	35	$V_{SS}$	55	$V_{DD}$	75	NBRAM / DISCIP4
16	NRAM/NC	36	A21/NCS	56	$V_{SS}$	76	SIGN0
17	NW0/NC	37	A20/WREN	57	D7	77	MAG0
18	NW1/NC	38	A9	58	D8	78	SIGN1
19	NW2/NC	39	A8	59	D9	79	MAG1
20	NW3/NC	40	A7	60	D10	80	DISCIP1

Table 1 Pin assignments

#### **TYPICAL GPS RECEIVER**

Fig. 3 shows a typical GPS receiver employing a GP2010 or GP2015 RF front end, a GP2021 correlator and an ARM60 32-bit RISC microprocessor.

A single front end may be used, since all GPS satellites use the same L1 frequency of 1575·42 MHz. However, in order to achieve better sky coverage, it is sometimes desirable to use more than one antenna. In this case, separate front ends will be required.

The RF section, GP2010 or GP2015, performs down conversion of the L1 signal for digital baseband processing. The resultant signal is then correlated in the GP2021 with an internally generated replica of the satellite code to be received. Individual codes for each channel may be selected independently to enable acquisition and tracking of up to 12 different satellites simultaneously. The results of the correlations form the accumulated data and are

transferred to the microprocessor to give the broadcast satellite data (the Navigation Message) and to control the software signal tracking loops.

The GP2021 can be interfaced to one of two styles of front end. In Real\_Input mode, the front end supplies either a 1-bit (sign) or 2-bit (sign and magnitude) signal to either the SIGN0/MAG0 or SIGN1/MAG1 inputs of the GP2021. Alternatively, in Real\_Input mode, two separate front ends can be connected to a single GP2021 and selected under software control. The GP2015 and GP2010 are Real\_Input mode front ends.

In Complex\_Input mode, the front end is required to supply In-phase (I) and Quadrature (Q) signals to the SIGN0/MAG0 and SIGN1/MAG1 inputs respectively. Hence, only a single front end can be used with each GP2021 in Complex\_Input mode. See Table 3, page 6.

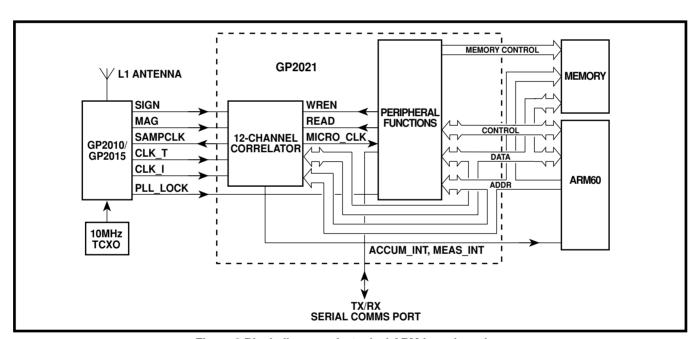


Figure 3 Block diagram of a typical ARM-based receiver

# **PIN DESCRIPTIONS**

All  $V_{SS}$  and  $V_{DD}$  pins must be connected to their respective supplies in order to ensure reliable operation. Any unused inputs must be tied high or low. Table 2 describes the pin functions in Real\_Input mode and assumes a master clock input frequency of 40MHz. Those pins whose functions differ in Complex\_Input mode are described in Table 3.

Note that those pin names containing a forward slash (/) have dual functionality between ARM System and Standard Interface modes. The pin mnemonic for ARM System mode always precedes the forward slash.

Pin	Cianal name	I T	Description		
	Signal name	Туре	ARM system mode	Standard interface mode	
	$V_{SS}$	_	Ground pins		
56,69 72					
14,34	$V_{DD}$	+	Power supply to device		
55,67 74					
	MULTI_FN_IO	I/O	Multi-function input / output. Its function is		
				System Test Enable input. It can also be	
			configured as a discrete output, or a disc		
			Can be configured as the TRIGGER input to the DEBUG block		
2 [	POWER _GOOD	ı	Power Monitor input. High for normal of	operation. Low forces the GP2021 into	
	_		Power Down mode.		
1 8	NRESET_OP	0		for 4 MICRO_CLK cycles after all reset	
4	N.A.D.A.O.Y.O.	<b>.</b>	conditions have cleared.		
4  1	NARMSYS		Processor Mode Selection input. When It		
	N/IN I		When high, standard Interface mode is		
	XIN		Crystal input connection to Real Time C		
	XOUT	0	Crystal output connection from Real Time Clock.		
	TXA	0	Transmit Data output from Channel A of the dual UART.		
	TXB	0	Transmit Data output from Channel B of the dual UART.		
9 [	RXA		Receive Data input to Channel A of the dual UART. This pin acts as a master clock input in Digital System Test mode.		
10 F	RXB			ual UART. This pin acts as the Real Time	
'   '	100	·	Clock reset in Digital System Test mode		
11	NROM/NC	0	ROM Chip Select output (active low).	Unused output (do not connect)	
12	NEEPROM/NC	0	EEPROM Chip Select output (active low)	Unused output (do not connect).	
13	NSPARE_CS/NC	0	Spare Chip Select output (active low).	Unused output (do not connect).	
16	NRAM/NC	0	RAM Chip Select output (active low).	Unused output (do not connect).	
17	NW0/NC	0	Byte 0 Write Strobe output (active low).	Unused output (do not connect.)	
18 1	NW1/NC	0	Byte 1 Write Strobe output (active low).	Unused output (do not connect).	
19 1	NW2/NC	0	Byte 2 Write Strobe output (active low).	Unused output (do not connect).	
	NW3/NC	0	Byte 3 Write Strobe output (active low).	Unused output (do not connect).	
	NRD/NC	0	Read Data Strobe output (active low).	Unused output (do not connect).	
22	ARM_ALE/NC	0	ALE output to the microprocessor (active	Unused output (do not connect).	
			high). Controls the transparent latches at		
			the microprocessor address outputs.		
23 [	DBE/NC	0	Data Bus Enable output to the	Unused output (do not connect).	
			microprocessor. When Low, places the		
			microprocessor data bus drivers in a high		
			impedance state.		

**Table 2 Pin descriptions** 

cont...

Din	Cianal name	Tyma	Desci	ription
Pin	Signal name	Туре	ARM system mode	Standard interface mode
24	ACCUM_INT	0	between the accumulators in the correlation	cessor. It allows control of data transfer ator and the microprocessor. It is active ode or Motorola mode and is active high
25	MEAS_INT	0		ws control of measurement data transfer cessor. It is active Low when configured e and is active High in Intel mode.
26	NBW/WRPROG	I		Write-Read Program input. In Intel mode, High selects 486 interface and low 186 style. Unused in Motorola mode
27	NMREQ/DISCIP2	I	Memory Request input from the microprocessor. Low indicates that the microprocessor requires a memory access during the following cycle.	Multi-purpose discrete input.
28	NOPC/NINTELMOT	I	Opcode fetch input from the microprocessor. Low indicates that an instruction is being fetched and igh that data is being transferred.	High selects Motorola mode and low Intel mode.
29	NRW/DISCIP3	- 0	Read/Write Select input from the microprocessor. Low indicates a read cycle and high a write cycle.	Multi-purpose discrete input.
30	MCLK/NC		Microprocessor Clock output (nominally 20MHz). Its phases can be stretched under control of the Microprocessor Interface.	Unused output (do not connect).
31	ABORT/MICRO_CLK	0	Abort output to the microprocessor. Generates a valid ARM Data Abort sequence, triggered by a rising edge at MULTI FN IO if this function is enabled.	20MHz Clock output. Provides a 20MHz clock with a 1:1 mark-to-space ratio.
32	DISCIO	I/O	Multi-purpose discrete input/output. Afte input.	er a GP2021 reset it is configured as an
33	A22/READ	I	Address input from the microprocessor. A<22:20> are decoded to select the address space partitioning.	Read input from the microprocessor. In Intel mode it is the active low read strobe. In Motorola mode it is the Read (high)/ Write (low) select line.
36	A21/NCS	I	Address input from the microprocessor. A<22:20> are decoded to select the address space partitioning.	GP2021 Chip Select input (active low).
37	A20/WREN	I	Address input from the microprocessor A<22:20> are decoded to select the address space partitioning.	Write-Read Strobe input from the microprocessor. In Intel mode it is the active low write strobe. In Motorola mode it is the active high Write-Read strobe.
38-45	A<9:2>		Address Inputs <9:2> from the micropro	
46	A1/ALE_IP	l	Address input 1 from the micro- processor. A<1:0> are decoded to provide individual byte write selection via NW<3:0>.	Address Latch Enable input from microprocessor (active high)
47	A0/NRESET_IP	I	Address input 0 from the micro- processor. A<1:0> are decoded to provide individual byte write selection via NW<3:0>.	Reset input (active low).

Table 2 Pin descriptions (continued)

cont...

Pin	Cianal name	Tyrna	Descr	iption
Pill	Signal name	Type	ARM system mode	Standard interface mode
48-54 57-65	D0<0:15>	I/O	Bidirectional data bus.	
66	PLL_LOCK	I	PLL Lock Indicator input from RF section the PLL within the RF section is in lock an	on. When High this signal indicates that d the master clock inputs have stabilised.
68	DISCOP	0	Multi-purpose discrete output.	
70	CLK_T	I	Master clock input (40MHz).	
71	CLK_I	I	Inverted Master clock input.	
73	SAMPCLK	0	Sample Clock output to the front end. mark-to-space ratio.	Provides a 5.71 4MHz clock with a 4:3
75	NBRAM / DISCIP4	I	Battery backed RAM select input. Defines the state of the NRAM output in Power Down mode.	Multi-purpose discrete input.
76	SIGN0	I	SIGN0 input from the RF section.	
77	MAG0	I	MAG0 input from the RF section.	
78	SIGN1	I	SIGN1 input from a second, optional, RF section.	
79	MAG1	I	MAG1 input from a second, optional, RF	section
80	DISCIP1	I	Multi-purpose discrete input.	

Table 2 Pin descriptions (continued)

# Difference between Real and Complex\_Input Mode

The input mode is selected by the FRONT\_END\_MODE bit in the SYSTEM\_SETUP register. It defaults to Real\_Input mode at power-up. The differences between Real and Complex input mode are summarised in Table 3.

Description	Real_Input mode	Complex_Input mode
Recommended Master clock frequency	40MHz	35MHz
GP2021 internal clocking (Note 1)	40MHz÷7	35MHz÷6
MICRO_CLK 2 output		
Frequency	20MHz	17∙5MHz
Mark: space	1:1	1:1
Pin No 76	SIGN0	SIGN_I
Pin No 77	MAG0	MAG_I
Pin No 78	SIGN 1	SIGN_Q
Pin No 79	MAG 1	MAG_Q
Input Signal Sampling Rate	5·714MHz	5·833MHz
SAMPCLK output		
Frequency	5·714MHz	Not available
Mark: space	4:3	(held Low)

# NOTES

- 1. The GP2021 interrupt and TIC timebase dividers are clocked by this resulting clock.
- 2. The MCLK output is derived from this signal. In ARM mode the phases of MCLK are stretched by the Microprocessor Interface block.

Table 3

#### **FUNCTIONAL DESCRIPTION**

The GP2021 incorporates a 12-Channel GPS Correlator, together with microprocessor support functions including a Dual UART, a Real Time Clock and Memory Control Logic for the ARM60 microprocessor. It can be configured for either ARM System mode or Standard Interface mode.

When in ARM System mode the Memory Control Logic allows an ARM60 microprocessor to interface with the Correlator, Real Time Clock, Dual UART and a variety of memory devices (i.e. SRAM, EPROM, Flash and EEPROM), without the need for external glue logic.

In Standard Interface mode the GP2021 allows most 16and 32-bit microprocessors to interface with the Correlator, Real Time Clock and Dual UART. More specifically, this mode allows the interface to be configured for either Intel or Motorola style microprocessor interfaces.

In the functional description which follows the correlator is described first, followed by the peripheral functions.

#### 12-Channel Correlator

Fig. 4 shows a block diagram of the correlator. It consists of the following blocks:

#### **Clock Generator**

The Clock Generator block divides the frequency of the master clock CLK\_T/CLK\_I by 6 or 7 to give the internal multi-phase set of clocks. When in Real\_Input mode CLK\_T/CLK\_I will normally be a 40MHz clock, which is divided by 7. When in Complex\_Input mode it will normally be at 35MHz which is divided by 6. The SAMPCLK pin is an output giving a 4:3 mark-to-space ratio clock at 40 MHz  $\div$ 7 (= 5·714MHz) in Real Input Mode.

The Clock Generator also produces the MICRO\_CLK signal at half the master clock frequency (20 MHz for Real\_Input mode, 17.5 MHz for Complex\_Input mode) with a 1:1 mark-to-space ratio. This signal is output on the MICRO\_CLK pin in Standard Interface mode. However, its main purpose is that of a synchronising clock to the memory control logic in ARM System Mode and it is from this that the processor clock output, MCLK, is derived.

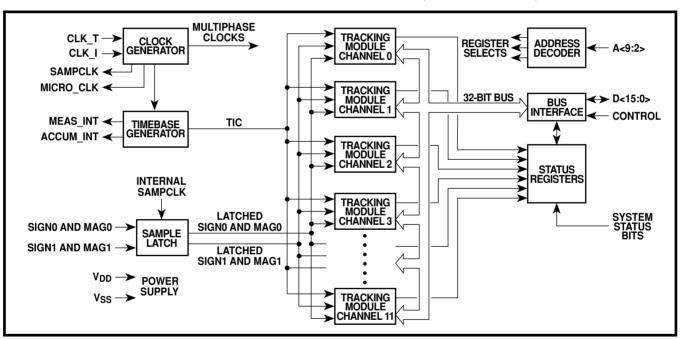


Figure 4 Correlator block diagram

#### **Timebase Generator**

The Timebase Generator produces four important timing signals: ACCUM\_INT, TIC, MEAS\_INT and TIMEMARK. ACCUM\_INT is an interrupt provided to control data transfer between the correlator accumulators and the microprocessor. It may be detected by means of the ACCUM\_INT output or by reading the ACCUM\_STATUS\_A register (where bit 15 is a flag indicating that ACCUM\_INT has occurred since the previous read of this register). ACCUM\_INT is cleared by reading ACCUM\_STATUS\_A.

After power-up this interrupt occurs every 505·05μs. Its period can subsequently be changed in one of 3 ways:

- **1.** By toggling the FRONT\_END\_MODE bit of the SYSTEM\_SETUP register,
- **2.** By toggling the INTERRUPT\_PERIOD bit of the SYSTEM\_SETUP register, or
- 3. By writing directly to the PROG\_ACCUM\_INT register.

See section Detailed Description of Registers on page 28 for more information.

TIC is an internal signal with a default period of 99999·90µs. It is used to latch measurement data (Epoch count, Code phase, Code DCO phase, Carrier DCO phase and Carrier cycle count) of all 12 channels at the same instant. Its period can subsequently be changed, by writing to the PROG\_TIC\_HIGH and PROG\_TIC\_LOW registers, or toggling the FRONT\_END\_MODE bit of the SYSTEM\_SETUP register.

MEAS\_INT is a signal derived from the TIC counter. It may be used by the microprocessor as a software module switching interrupt either by using the MEAS\_INT output or by reading the ACCUM\_STATUS\_B or MEAS\_STATUS\_A register. MEAS\_INT is activated at each TIC and 50ms before each TIC so long as the TIC period is greater than 50ms. If the TIC period is less than 50ms, MEAS\_INT is activated only at each TIC. It is cleared by reading either the ACCUM\_STATUS\_B or MEAS\_STATUS\_A register, depending upon the MEAS\_INT\_SOURCE bit of the SYSTEM\_SETUP register.

TIMEMARK is also derived from TIC and may be output on one of the discrete output pins. This signal is intended to be used as an accurate 1 pulse per second timing reference, aligned to UTC (Co-ordinated Universal Time), with a pulse width of 1ms. A true 1pps output needs extensive software algorithms to be produced; without this the TIMEMARK will not be aligned to UTC.

TIMEMARK has two methods of operation but in both cases TIMEMARK rising edges are generated coincident with the rising edges of TIC. Therefore, for TIMEMARK to be aligned with UTC, TIC must be aligned with UTC. This is done by modifying the TIC period for a single TIC cycle, then setting it back to its original value, thus slewing the phase of TIC. TIMEMARK may be generated by setting the TIMEMARK\_ARM bit in the TIMEMARK\_CONTROL register, in which case the next TIC will generate a rising edge at TIMEMARK and clear the TIMEMARK\_ARM bit. Alternatively TIMEMARK may be generated as a programmable integer number of TICs, again under the control of the TIMEMARK\_CONTROL register.

#### **Status Registers**

There are four status registers (ACCUM\_STATUS\_A, \_B, \_C and MEAS\_STATUS\_A). These contain flags associated with the accumulated and measurement data held on each of the 12 channels. Some system level status bits also appear in these registers.

#### Sample Latches

The Sample Latches synchronise data from the front end to the internal SAMPCLK. In Real\_Input mode the down converted satellite signal can be sampled at the output of

the front end by SAMPCLK. This data is then input to the GP2021 as 2-bit data on either the SIGN0, MAG0, or SIGN1, MAG1 inputs, where it is re-sampled at the next rising edge of SAMPCLK. These signals are then distributed to the 12 tracking modules.

When a GP2015 or GP2010 front end is used, the data represents a band-limited signal at an IF centered on  $4\cdot309$ MHz. Sampling at  $5\cdot714$ MHz aliases it to an IF of  $1\cdot405$ MHz.

In Complex\_Input mode, the down converted satellite signal is applied direct to the GP2021 at its SIGN0, MAG0, SIGN1 and MAG1 inputs, which act as In-Phase Sign, In-Phase Magnitude, Quadrature Sign and Quadrature Magnitude respectively. These signals are sampled at 5·833MHz within the correlator and then passed to the tracking modules.

#### **Address Decoder**

The Address Decoder performs address decoding for the correlator.

#### **Bus Interface**

The Bus Interface controls the transfer of data between the external 16-bit wide data bus and the internal 32-bit data bus.

Apart from the code and carrier DCO increment values, all data transfers are 16 bits wide. Write operations to the code and carrier DCOs are 32- bit data transfers, in which the high 16-bit word must be written immediately before the low 16-bit word. Note that the write cycle to write cycle delay of 300ns referred to in the Microprocessor Interface does not apply between the first and second write cycles for 32-bit DCO data transfers. For further information see the Microprocessor Interface section, page 15

# **Tracking Modules**

The Tracking Modules are 12 identical signal tracking channels numbered CH0 to CH11, each with the block diagram shown in Figure 5. These blocks generate the data used to track the satellite signals. There is no overwrite protection mechanism on this data. For further information see the section on Controlling the GP2021, page 24

Each Tracking Channel can be individually programmed to operate in either Update or Preset mode. Update mode is the normal mode of operation. Preset mode is a special mode of operation where writes to certain registers are delayed until the next TIC to allow synchronisation of registers and presetting of the code DCO phase. For further information see the Preset Mode section in the Detailed Operation of the GP2021, page 28.

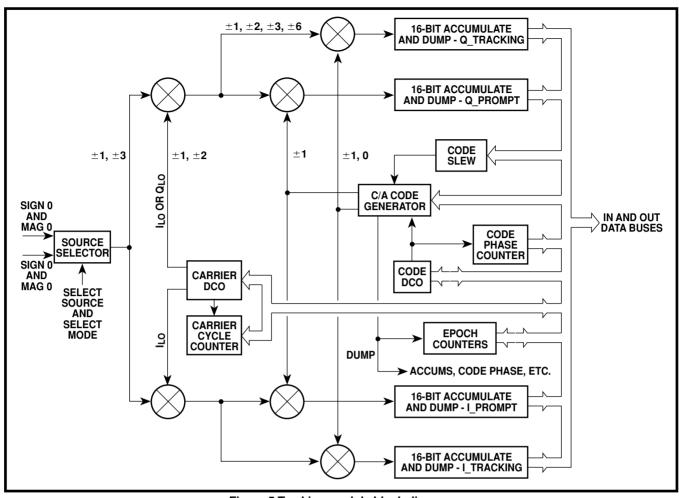


Figure 5 Tracking module block diagram

The indvidual sub-blocks in the tracking modules are:

#### Carrier DCO

The Carrier DCO, which is clocked at the SAMPCLK frequency, is used to synthesise the digital local oscillator signal required to bring the input signal to baseband in the mixer block, and must be adjusted away from its nominal value to allow for Doppler shift and reference frequency error.

When used with the GP2015/GP2010 the nominal frequency of this signal is 1·405396825 MHz (with a resolution of 42·57475mHz) and is set by loading the 26-bit register CHx\_CARRIER\_DCO\_INCR. This very fine resolution is required so that the DCO will stay in phase with the satellite signal for an adequate time. The Carrier DCO Phase cannot be directly set, but must be adjusted by altering the frequency.

The Carrier DCO outputs are 4-level, 8-phase sinusoids with the sequences over one cycle as shown in Table 4.

Destination Arm	Sequence
I <sub>LO</sub>	-1+1+2+2+1-1-2-2
$Q_{LO}$	+2+2+1-1-2-2-1+1

**Table 4 Carrier DCO outputs** 

As the clock to the DCO is normally less than 8 times the output frequency, not all phases are generated in every cycle. With a typical clock frequency of 5·714 MHz and an output frequency of 1·405 MHz there are only about 4 phases per cycle. These will slide through the cycle as time progresses to cover all values.

#### **Code DCO**

The Code DCO is similar to the Carrier DCO block. It is also clocked at the SAMPCLK frequency and synthesises the oscillator required to drive the code generator at twice the required chipping rate. The nominal frequency of the output is 2·046 MHz, to give a chip rate of 1·023 MHz and is set by loading the 25-bit register CHx CODE DCO INCR.

It is programmed with a resolution of 85·14949 mHz when used with a GP2015/GP2010 front end. Again, the very fine resolution is needed to keep the DCO in phase with the satellite signal. The Code DCO Phase can only be set to the exact satellite phase in Preset mode. In Update mode, it must be aligned with the satellite phase by adjusting its frequency.

#### **Carrier Cycle Counter**

The Carrier Cycle Counter is 20 bits long, and keeps a count of the number of cycles of the Carrier DCO between TlCs. This is not needed for a basic navigation system but may be used to measure the range change (delta-range) to each satellite between TlCs. The delta ranges can be used to smooth the code pseudo-ranges. For finer detail the Carrier DCO phase may also be read at each TlC to give the fractional part of the cycle count or delta-range.

#### C/A Code Generator

The C/A Code Generator generates the selected Gold code for a GPS satellite (1 to 32), a ground transmitter (pseudolite, 33 to 37), an INMARSAT-GIC satellite (201 to 211) or a GLONASS satellite. A Gold code is selected by writing a specific pattern of 10 bits, as listed in the Detailed Description of Registers section, to the CHx\_SATCNTL register, or by setting the GPS\_NGLON bit to Low for the GLONASS code. Two outputs are generated to give both a PROMPT and a TRACKING signal. The TRACKING signal can be set to one of four modes: EARLY (one half chip before the PROMPT signal), LATE (one half chip behind), DITHERED (toggled between EARLY and LATE every 20ms) or EARLY-MINUS-LATE (the signed difference).

The output code is a sequence of 1s and 1s for all code type sexcept EARLY-MINUS-LATE where the result can also be a 0. To avoid having an unused LSB in the accumulators, the values in EARLY-MINUS-LATE mode are halved from the 2, 0, 2 that results from the calculation (1 or 1) (1 or 1) to 1, 0, 1. This must be considered when choosing thresholds in the software, as the correlation results will be exactly half of the values otherwise expected.

At the end of every code sequence (1023 chips in GPS mode or 511 chips in GLONASS mode) a DUMP signal is generated to latch the accumulated data for use by the signal tracking software. Each channel is latched separately, because the satellite signals are not received in phase with each other.

The nature of GLONASS signals is that they are modulated with the same PRN Gold Code, but are separated in the frequency domain (1597MHz to 1617MHz). Navstar GPS signals are modulated with different PRN Gold Codes, but are transmitted on the same frequency (L1 = 1575.42MHz).

For the GP2021 to effectively demodulate GLONASS signals, it would ideally need to have a separate set of RF signal inputs for each correlator channel, in order for it to differentiate between the different frequencies used by each GLONASS satellite. Since this facility is not available, the GP2021 cannot be used effectively to decode a constellation of GLONASS signals.

Although the GP2021 contains a C/A code generator which can be used to demodulate GLONASS signals (selected by setting the GPS\_NGLON bit in CHx\_SATCNTL to 0), the GP2021 does not have a sufficiently wide Doppler-offset compensation range to allow it to be used effectively for GLONASS. The total frequency offset, which the carrier DCO can cope with, is 2.857MHz. This means that the GP2021 will not be able to deal with the complete range of GLONASS signals, unless they are mixed separately down to a digital IF of approximately 1.4MHz.

The GP1020, also available from Zarlink Semiconductor, has 10 separate sets of SIGN/MAG inputs from RF front end devices, which can be configured to connect independent to any of 6 correlator channels, making this device more suitable for GLONASS applications. Contact your regional Zarlink sales office for more information.

# **Source Selector**

In Real\_Input mode the Source Selector selects which input signal pair to use (SIGN0/MAG0 or SIGN1/MAG1). In Complex\_Input mode SIGN0/MAG0 are passed to the In-phase arm and SIGN1/MAG1 to the Quadrature arm. The data is treated as having the values shown in Table 5 (in both modes).

SIGN	MAG	Value
0	1	3
0	0	1
1	0	1
1	1	3

Table 5 SIGN/MAG values

#### **Carrier Mixers**

The Carrier Mixers multiply the digital input signal by the Carrier DCO digital local oscillator to generate a signal at baseband. In Real\_Input mode both I and Q Carrier DCO phases are directed to the appropriate mixers. In Complex\_Input mode a single In-Phase Carrier DCO output is used in both mixers since the input signal is already in I and Q form. The mixing of the Carrier DCO outputs with the input signal produces a baseband signal which can have the values 1, 2, 3 and 6.

#### **Code Mixers**

The Code Mixers multiply the I and Q baseband signals from the Carrier Mixers with both the PROMPT and TRACKING local replica codes to produce four separate correlation results. The correlation results are passed to the Accumulate and Dump blocks for integration.

# **Accumulate and Dump**

The Accumulate and Dump blocks integrate the Mixer outputs over a complete code period of nominally 1ms. There are 4 separate 16-bit accumulators for each channel.

These represent the correlation of the I and Q signals with the PROMPT and TRACKING codes, over the integration period. There is no overwrite protection mechanism on these registers so the data must be read before the next DUMP.

#### **Code Phase Counter**

The Code Phase Counter counts the number of half-chips of generated code and stores this value in the CHx CODE PHASE register on each TIC.

#### **Code Slew Counter**

The Code Slew Counter is used to slew the generated code by a number of half chips in the range 0 to 2047. In Update mode the slew occurs following the next DUMP. In preset mode it occurs at the next TIC. All slew operations are relative to the current code phase. The Code Slew counter must be written to each time a slew is required.

During the slewing process the accumulators for the channel being slewed are inhibited so that the first result is valid. If a slew is written while a channel is disabled it will occur as soon as the channel is enabled.

# **Epoch Counter**

The Epoch Counters keep track of the number of code periods over a 1 second interval. This is represented by a 5-bit word for the number of 1ms integration periods (0 to 19), plus a 6-bit word containing the number of 20ms counts (0 to 49). The Epoch Counters can be pre-loaded to synchronise them to the data stream coming from the satellite. This value will be transferred immediately to the

counter when in Update mode, or after the next TIC if in PRESET Mode.

The Epoch Counter values are latched on each TIC into the CHx\_EPOCH register. In addition the instantaneous values are available from the CHx\_EPOCH\_CHECK register.

#### PERIPHERAL FUNCTIONS

The following section describes the Dual UART, Real Time Clock and Watchdog, Power and Reset Control and Discrete I/O blocks.

#### **Dual UART**

A Dual UART is included for serial communications. It has two identical blocks, UART\_A and UART\_B, each containing separate transmit and receive channels. The parity and separate transmit and receive baud rate can be configured independently for each UART. Each uses a polled processor interface and each transmit and receive channel has an 8- byte deep FIFO.

For further information on UART registers refer to the Detailed Description of Registers and Figure 11 (page 28).

A typical serial data stream is shown in Fig. 6. The Parity bit is optional and if no parity is selected the time slot for it is removed from the data stream and the Stop bit follows immediately after the last data bit in both transmit and receive directions. Note that the LSB is always preceded by a Start bit. Table 6 shows possible UART configurations.




Figure 6 Serial data waveform

Parameter	Value
Start bits	1 bit low
Data bits	8 bits Logic 0 = low, Logic 1 = high
Stop bits	1 bit High
Parity	Odd/even/none
Flow control	None
Transmit FIFO depth	8 bytes
Receive FIFO depth	8 bytes
FIFO speed	Transmit FIFO write rate and Receive FIFO read rate maximum is one byte per 230ns.
	The maximum buffer through delay is 2 s.
Data rate	300, 600,1·2k, 2·4k, 4·8k, 9·6k, 19·2k, 38·4k and 76·8k baud. Transmit and Receive
	rates individually configured.

**Table 6 UART functionality** 

#### Reset

It is possible for the software to reset either UART independently via the RESET\_CHx registers. A hardware reset affects both UARTs. During a UART reset, the contents of all Control and Status registers will be cleared. In addition the Transmit and Receive FIFO's will be emptied and the TX outputs will be held low.

# **Channel Loopback**

For system test purposes, a loopback facility is provided for each channel, controlled by the Configuration registers. In loopback, the TX output is set high.

# Real Time Clock (RTC) and Watchdog

This block consists of a 32.768kHz crystal oscillator, a fixed divider, a 24-bit counter, a Watchdog function and three 8-bit data registers. XIN and XOUT are the crystal in and crystal out connections to the oscillator circuit. A recommended crystal oscillator circuit is shown in Fig. 7. When the Real Time Clock is not being used, XIN must be tied low

The first divider is a fixed divide-by-32768 giving a 1Hz output. The counter then counts seconds, giving a maximum time of 194 days. The time is output in three 8-bit registers with the data being latched when a read is performed to the LS register (the register holding the least significant byte of the clock data). On reaching its maximum count, the count is frozen (i.e. all ones), until being reset.

In Power Down mode the Real Time Clock continues to run, but the data registers cannot be accessed. When normal power is restored, the software can determine the elapsed time whilst in Power Down mode, thereby assisting in estimating the current position of GPS satellites and so reducing Time-To-First-Fix.

TheWatchdog generates a System Reset (see Powerand Reset Control) if the Watchdog Reset address has not been written to for a period of approximately 2 seconds. The watchdog function is inhibited whilst in Power Down mode and can be disabled via a bit in the System Configuration register. The software is able to reset the Real Time Clock and Watchdog via the Clock Reset and

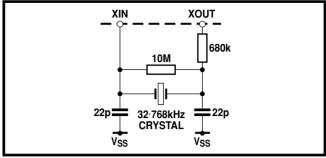


Figure 7 Recommended crystal oscillator circuit

Watchdog Reset registers respectively. In addition, the watchdog is reset during a System Reset.

For further information on the registers refer to the Detailed Description of Registers (page 28).

#### **Power and Reset Control**

This block performs two functions: Power Control and System Reset Generation

#### **Power Down Mode**

In order to allow power conservation within a battery backup system, the GP2021 provides a Power Down mode, in which the supply voltage may drop to a minimum of 2·2V, thereby minimising the supply current. In this mode all functions within the GP2021 are disabled except for the Real Time Clock.

The GP2021 is placed in Power Down mode by taking the POWER\_GOOD pin Low. In ARM System mode with the NBRAM pin held low, the initiation of Power Down mode is delayed until just after a falling edge of MICRO\_CLK so as not to corrupt battery backed RAM. Fig. 8 shows a suggested circuit implementation. Table 7 shows output logic levels in Power Down mode.

In Power Down mode all inputs and I/Os except POWER\_GOOD and XIN are internally switched to known logic levels to prevent extraneous switching from causing excessive power consumption, and may therefore be left floating. All the I/O pins (D<15:0>, MULTI\_FN\_IO and DISCIO) have their output drivers driven to the high impedance state.

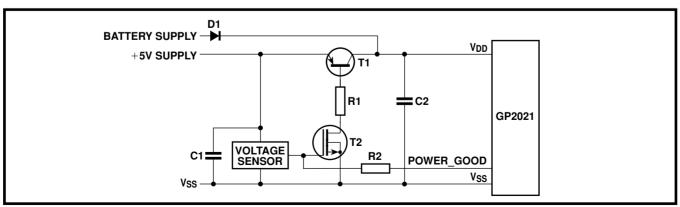


Figure 8 Suggested battery back up configuration

Pin Name	Logic Level
NW<3:0>/NC	Low
NRD/NC	Low
NRAM	Low
(standard interface mode)	
NRAM	NB RAM
(ARM system mode)	
NROM/NC	High impedance
NSPARE_CS/NC	High impedance
NEEPROM/NC	High impedance
TXATXB	Low
ACCUM_INT	High impedance
MEAS_INT	High impedance
ABORT_MICRO_CLK	Low
MCLK / NC	Low
ARM_ALE / NC	Low
DBE / NC	Low
NRESET_OP	Low
DISCOP	High Impedance
SAMPCLK	Low
XOUT	Active

Table 7 Output logic levels in Power Down mode

#### **Hardware Reset Generation**

The manner in which a hardware reset occurs depends on whether the GP2021 is in ARM System mode or Standard Interface mode. During a hardware reset, the NRESET\_OP pin is taken Low and the reset signal is applied within the GP2021 to all blocks except the Real Time Clock.

There are three sources of hardware resets common to both ARM System and Standard Interface modes, with an additional source in Standard Interface mode:

- 1. POWER\_GOOD. A hardware reset will occur if this pin is taken iow, as shown in Figure 9. The purpose of this input is to detect a power failure. If the NBRAM pin is held iow in ARM System mode, the internal Power Down mode is not entered until about 6ns after the falling edge of MICRO\_CLK, otherwise it is entered immediately. This allows for RAM write cycles to complete sensibly when battery backed-up RAM is used, with no corruption of RAM data.
- **2.** Watchdog. An expiry of the watchdog will result in a hardware reset as shown in Fig. 10. This reset will clear the watchdog whose time-out period is 2-3 seconds.
- **3.** PLL\_LOCK. The PLL\_LOCK pin is used to indicate (when high), that the phase locked loop in the RF front end, which generates the master clock, is in lock. This signal is filtered within the GP2021 and the reset state associated with it is only de-activated if the PLL\_LOCK input has been high for approximately 50 ms as shown in Figure 11.

In addition to the three reset sources described above, an active low NRESET\_IP pin is available in Standard Interface mode if the system resets are to be generated externally. Figure 12 shows a NRESET\_IP generated reset. Note that the NRESET\_OP pin will go high four MICRO\_CLK cycles after all hardware reset sources have cleared. This fulfills the reset requirements of the ARM60 microprocessor. For information on the state of the registers following a hardware reset refer to the Detailed Description of Registers on page 28.

#### **System Error Status Register**

This allows the software to determine whether the source of a hardware reset was from a power failure, a PLL\_LOCK failure, watchdog timeout or from an external reset in Standard Interface mode. For further information refer to the Detailed Description of Registers.

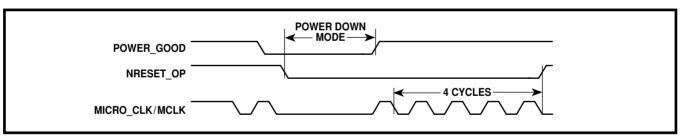


Figure 9 POWER GOOD hardware reset generation (NARMSYS = 0, NBRAM = 0)

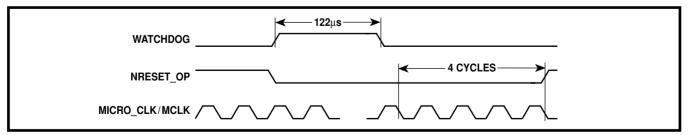


Figure 10 Watchdog hardware reset generation

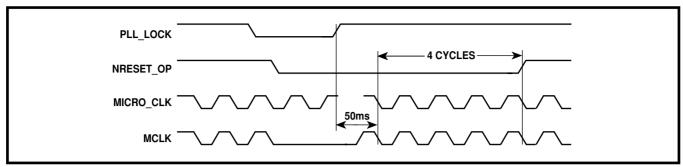


Figure 11 PLL\_LOCK hardware reset generation




Figure 12 NRESET\_IP hardware reset generation

# Discrete I/O

The GP2021 contains a number of pins which may be used as discrete inputs or discrete outputs for general purpose system monitoring and control applications. The actual pins which may be used for each function vary according to the application and the interface mode of the GP2021. Table 8 shows a list of possible discrete inputs and outputs and

the modes in which they may be used. The level on all discrete inputs can be read from the IO\_CONFIG register.

The status of the DISCIP pin may also be read from ACCUM\_STATUS\_B. The discrete outputs are controlled via either the SYSTEM\_SETUP or IO\_CONFIG registers.

Discrete inputs			
Pin name	Read location	Conditions for use as a discrete input	
NRW/DISCIP3	IO_CONFIG	Standard Interface mode.	
NOPC/NINTELMOT	IO_CONFIG	ARM System mode (debug disabled).	
NMREQ/DISCIP2	IO_CONFIG	Standard Interface mode.	
NBW/WRPROG	IO_CONFIG	Motorola mode only.	
DISCIO	IO_CONFIG	DISCIO configured as discrete Input.	
NBRAM/DISCIP4	IO_CONFIG	Standard Interface Mode.	
MULTI_FN_IO	IO_CONFIG	MULTI_FN_IO configured as discrete input.	
SIGN0, MAG0	IO_CONFIG	Single real input mode (GP2010 or GP2015) front end using SIGN0, MAG0	
SIGN1, MAG1	IO_CONFIG	Single real input mode (GP2010 or GP2015) front end using SIGN1, MAG1	
DISCIP1	IO_CONFIG	Always available - dedicated Discrete Input.	
	ACCU M_STATU S_B		
RXA	IO_CONFIG	UART Channel A not used.	
RXB	IO_CONFIG	UART Channel B not used.	
		Discrete outputs	
Pin name	Config. location	Possible outputs	
DISCOP	SYSTEM_SET_UP	High, low, CH0 dump, TIMEMARK, 100kHz Square Wave, scan out.	
DISCIO	IO_CON FIG	High, low, TIMEMARK, 100kHz Square Wave.	
MULTI_FN_IO	IO_CONFIG	High, low, TIMEMARK, 100kHz Square Wave.	

Table 8 Discrete input/output configuration

# **Digital System Test Interface**

The GP2021 contains a Digital System Test mode to allow testing of the digital section of the system board. Provided that the MULTI\_FN\_IO pin is high, this mode is enabled subsequent to a hardware reset or a write of specific data to the IO\_CONFIG register. The enabling of Digital System Test mode has three effects:

- 1. The master clock inputs, CLK\_T and CLK\_I, are replaced by the signal on the RXA pin. This allows the GP2021 to be clocked synchronously with the board tester which is relevant in ARM System mode where the GP2021 produces the main processor clock to the ARM60.
- 2. The RXB pin becomes the active high RTC Reset input. This is mainly intended for factory testing of the GP2021, allowing the RTC to be reset on power up, but may also be used to disable the RTC and Watchdog circuits in this mode.

**3.** The PLL\_LOCK input and its associated 50ms delay as a reset source is overridden. This removes the dependency on the presence of the front end circuit.

#### MICROPROCESSOR INTERFACE

The Microprocessor Interface of the GP2021 is compatible with most 16- and 32-bit microprocessors. It can be configured for either ARM System mode or Standard Interface mode by means of the NARMSYS pin.

In Standard Interface mode, two mode control pins, NINTELMOT and WRPROG, are provided. NINTELMOT selects between Intel and Motorola style interfaces, with WRPROG selecting either Intel i486 or 80186 style interfaces. See Table 9 for more details.

NARMSYS	NINTELMOT	ELMOT WRPROG Mode		Processor
0	Х	Х	ARM system	ARM60
1	1	Х	Standard interface	Motorola style
1	0	0	Standard interface	Intel 80186 style
1	0	1	Standard interface	Intel 486 style

Table 9 Microprocessor interface configuration

# **General Interface Timing**

In addition to the detailed timings associated with individual read and write cycles (see Electrical Characteristics), the internal architecture of the correlator also imposes limits on cycle to cycle timings (in particular write to write cycle and write to read cycle). For a simple microprocessor interface, it must be ensured that no attempts are made to access the correlator for the 300ns following the end of a correlator write cycle in Real\_Input mode, or 314ns in Complex\_Input mode. However, if the controlling software is to be allowed to write rapidly to the correlator (e.g. block writes), then a more complex bus interface (which inserts wait states) will be required. Note that this limitation only applies after correlator writes, not peripheral function writes and also does not apply to writes to the correlator X\_DCO\_INCR\_HIGH address.

The correlator section of the GP2021 uses a multi-phase clock internally, and the correlator registers load on specific clock phases. At the end of a write cycle, the falling edge of the internal write strobe latches both the relevant address and data bits. This data is then loaded from the internal data bus to the relevant register at some time during the following 300ns for Real\_Input mode or 314ns for Complex\_Input mode. A write cycle to the Correlator with no writes in the preceding 300ns (314ns) may be performed immediately, so long as the detailed signal timings are met. However, subsequent read or write cycles to the Correlator after this write cycle may need to be delayed if they would otherwisw modify the internal address or data lines. Correlator read cycles with no write cycles in the preceding 300ns (314ns) are self-contained, and do not delay

subsequent cycles. An isolated read cycle requires only sufficient wait states to meet the detailed signal timings.

#### Write Cycle To Read Cycle Timings

As described previously, the internal write cycle of the Correlator takes 300ns (314ns). Only once the write cycle is complete will the correlator address decoders switch to decoding the current address. The correlator uses a precharged internal data out bus and hence the decoded address lines must be stable before the internal bus drivers are enabled (when the read strobe goes high). Consequently, the read strobe must be held low until some time after the end of the 300ns (314ns) internal write cycle, to allow sufficient internal address setup time. For the exact timing requirements see the Timing Characteristics.

# Write Cycle To Write Cycle Timings

The internal write cycle of the correlator takes 300ns (314ns) after the falling edge of the write strobe. During this time the write internal address and data buses (latched by write) must not be modified. If a second write follows the first, the second write cycle must be delayed such that it ends no earlier than 300ns (314ns) after the end of the previous write, the 'end' being a falling edge on the internal write strobe. The specific interface signal timings must also be met.

#### **Notes about Interface Timing Constraints**

It should also be noted that these timings need only be met for correlator accesses, not support function accesses, since these use self-contained write cycles and are not clocked by the multi-phase clocks. In addition, writes to the Correlator register X\_DCO\_INCR\_HIGH need not incur subsequent delays since writes to this location do not instigate an internal write cycle. A write to this address must always be followed by a write to either a CHX\_CARRIER\_DCO\_INCR\_LOW register or a CHX\_CODE\_DCO\_INCR\_LOW register and it is this second associated write which instigates the internal write cycle.

In ARM System mode all these timing requirements are handled by the internal memory manager.

Note that the exact number of wait states which need to be inserted after a correlator write is not fixed. If the processor were to perform a correlator write then spend 400ns accessing a different peripheral, subsequent correlator reads and writes would incur no additional delay. It is anticipated that correlator wait states will be generated by either one or two external counters, preset on the falling edge of a correlator write, and which then count down to zero. Only once the counter has reached zero may the next correlator access either complete (write) or start (read) Aseries of correlator reads and writes are shown in Figure 13.

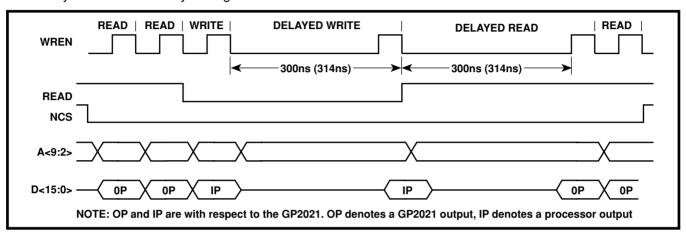


Figure 13 Correlator bus timing - write to write and write to read

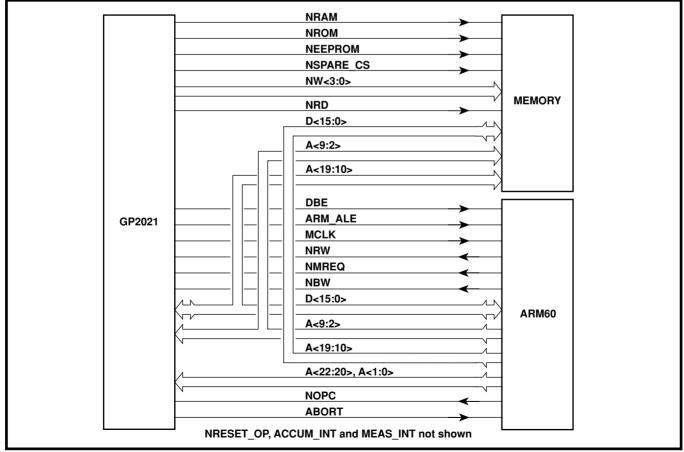


Figure 14 ARM system mode

#### **ARM System Mode**

ARM System Mode, as shown in Figure 14, allows the GP2021 to be interfaced with an ARM60 microprocessor and external memory devices (i.e RAM, ROM, EEPROM, EPROM, Flash) without the need for external glue logic.

#### **Address Map**

Both the GP2021 and external memory devices are memory mapped into 1Mbyte segments by A<22:20> as shown in Table 10.

A22	A21	A20	Device selected	Decoded output pin
0	0	0	ROM	NROM
0	0	1	RAM	NRAM
0	1	0	Correlator	
0	1	1	Support functions	
1	0	0	EEPROM	NEEPROM
1	0	1	User defined	NSPARE_CS
1	1	0	Not decoded	
1	1	1	Not decoded	

Table 10 ARM system address map

The ARM60 is able to perform either byte or word (4 bytes wide) writes to memory. All registers within the GP2021 are word aligned, with only write accesses to external RAM being either byte or word aligned. The signal NBW is used to indicate either a byte or word write request, with A<1:0> performing byte selection.

Decoding of NBW and A<1:0> is performed by the Microprocessor Interface, with NW<3:0> being the byte write select outputs to memory. During a word write all four of the outputs NW<3:0> will be active.

Note that the register addresses for the Correlator and Support Functions are as shown in the GP2021 Register Map.

# **Control Signals**

The GP2021 uses the ARM60 control signals NBW, NMREQ and NRW to generate the processor clock MCLK

and the control signals ARM\_ALE and DBE to match the timing requirements of the various memory devices .

The memory interface is via the memory chip select lines (NRAM, NEEPROM, NROM and NSPARE\_CS), the Read line (NRD) and the byte write select outputs (NW<3:0>).

#### **ARM System Timing**

The GP2021 timing diagrams for each of the memory interfaces (EEPROM, RAM, ROM, SPARE), and ARM60 are shown in the Electrical Characteristics.

#### Wait State Generation

To allow access to slow peripherals or memory, the clock (MCLK) to the ARM60 microprocessor may be stretched in either Phase 1 (low) or Phase 2 (high), thus allowing wait states to be introduced (where a wait state is defined as being one MCLK period).

The GP2021 introduces one wait state for accesses to the Real Time Clock, Dual UART and System Control registers, as shown in Figure 15. Correlator accesses as shown in Figure 19 incur one wait state; subsequent accesses being prevented from contravening the Correlator requirements (see Correlator Functional Description) by adding several wait states.

In order to ensure compatibility with a variety of memory devices, the ROM interface is programmable with between one to three wait states, while the EEPROM and SPARE interfaces can be programmed with between three to six wait states via the Wait State Register.

For further information on the Wait State Register, refer to Detailed Description of Registers. Read and write cycles for the RAM, EEPROM (or Spare) and ROM interfaces are shown in Figures 16 through18.

During a read cycle from Flash memory, the output disable to data bus release time, could be greater than 25ns. Hence in order to avoid bus contention, the nominal period of MCLK is stretched by 25ns during the following cycle.

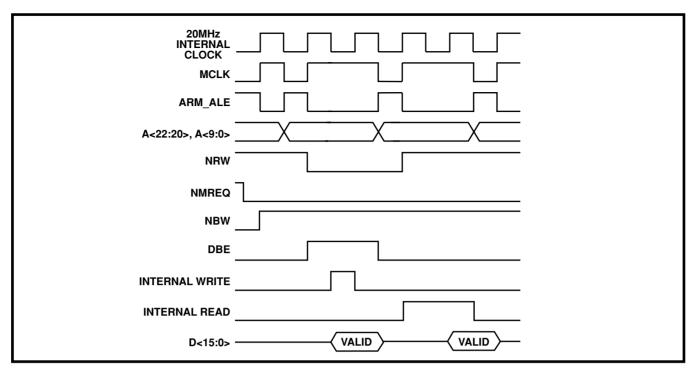


Figure 15 Peripheral functions write/read cycle

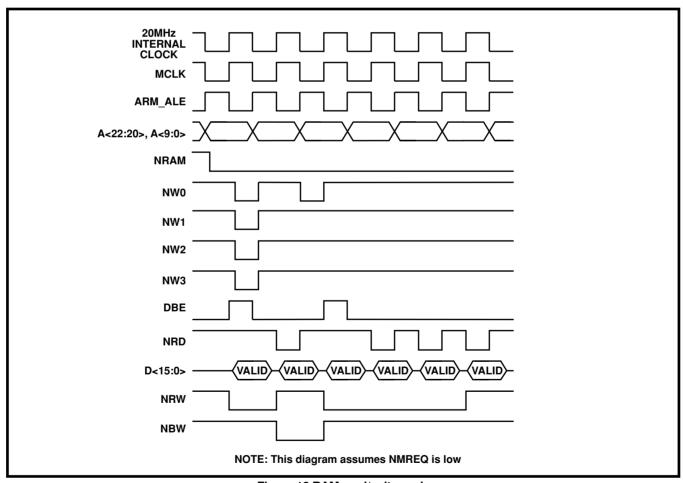


Figure 16 RAM read/write cycle

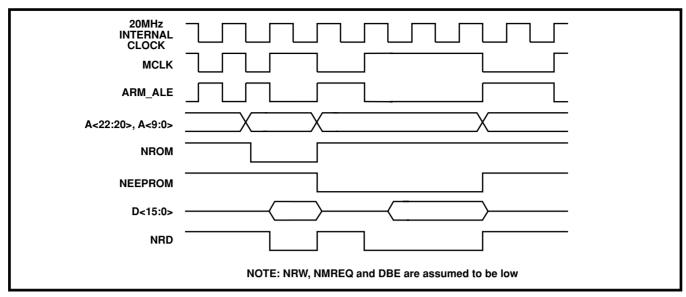


Figure 17 ROM (1 wait state) and EEPROM/spare (2+1 wait states) read cycles

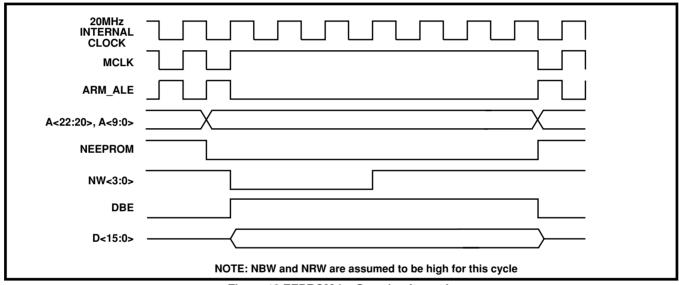


Figure 18 EEPROM (or Spare) write cycle

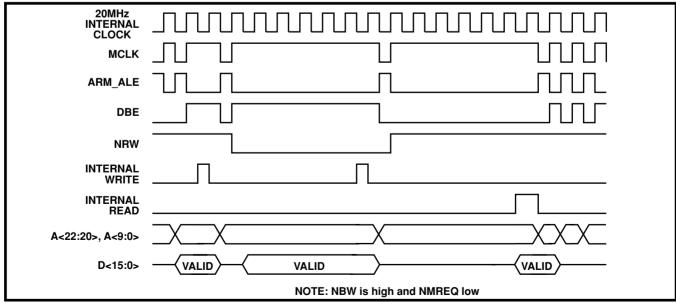


Figure 19 Correlator write and read cycles

#### **Debug (Abort) Function**

This is a feature designed to aid debugging and functions as follows: In ARM System Mode, the MULTI\_FN\_IO pin can be configured as a TRIGGER input to the Debug block via the IO\_CONFIG register (see Detailed Description of Registers). In this mode a rising edge at the MULTI\_FN\_IO pin will generate a valid ARM data Abort sequence at the ABORT pin as shown in Figure 20.

#### Standard Interface Mode

This mode allows the GP2021 to be interfaced to most standard 16- and 32-bit microprocessors as shown in Figure 21. No memory control is provided, so external glue logic may be required in order to interface the microprocessor to memory.

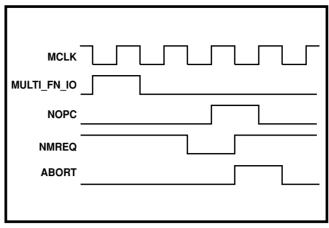


Figure 20 Debug (Abort) function timing

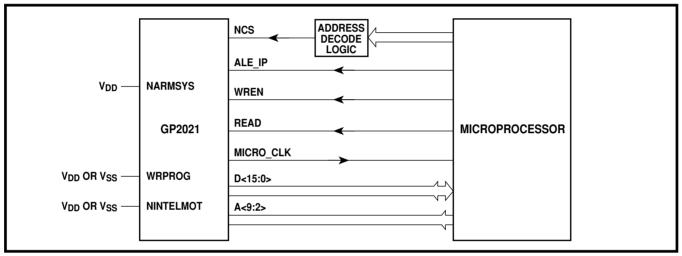


Figure 21 Standard interface mode

#### **Control Signals**

In Standard Interface Mode (NARMSYS held high), the microprocessor interface of the GP2021 consists of two mode control pins, NINTELMOT and WRPROG, and the control signals themselves, ALE\_IP, NCS, WREN and READ, the exact function of which is dependent upon the interface style selected.

# Motorola Style Interface (NINTELMOT = 1, WRPROG = X)

The WRPROG mode control pin is not used in Motorola Interface mode and should be tied high or low. The ALE\_IP (Address Latch Enable input) pin is used to transparently latch the address lines A<9:2> to the GP2021. If these address lines are already latched externally, this pin may be tied high. Note that the internal ALE signal is inhibited during a read or write strobe so the address lines may be changed once the read or write strobe has become active. The WREN pin acts as a WRITE/READ ENABLE strobe (active high) with the READ pin selecting either a READ strobe (READ = 1) or a WRITE strobe (READ = 0). In a similar way to the addresses being latched during a read or write strobe, the READ signal is also latched during a data strobe and may be changed towards the end of the cycle.

The NCS pin is an active low chip select used to gate out the internal read and write strobes. In Standard Interface Mode, the GP2021 can best be visualised in terms of three signals, ALE\_INT, WRSTROBE\_INT and RDSTROBE\_INT, the internal ALE, write strobe and read strobe signals. In Motorola Style Interface Mode these signals are derived as follows:

ALE\_INT= ALE\_IP • (WRSTROBE\_INT+RDSTROBE\_INT)
WRSTROBE\_INT = NCS • WREN • READ
RDSTROBE\_INT = NCS • WREN • READ

# INTEL 80186 Style Interface (NINTELMOT = 0, WRPROG = '0')

In the 80186 Style Interface mode the ALE\_IP acts as an Address Latch Enable input (as in Motorola mode), used to transparently latch the address lines A<9:2> to the GP2021. As with Motorola mode, if the addresses are latched externally this pin may be tied high. Whereas Motorola mode used a single strobe input and a Read/Write level to denote read and write strobes, both INTEL modes use a pair of strobe inputs, one for reads, and one for writes. In this mode, READ acts as the active low read strobe ( READ =  $\overline{\text{RDSTROBE}}$ ) and WREN the active low

write strobe (WREN =  $\overline{WRSTROBE}$ ). NCS is the active low chip select used to gate out internal data strobes.

ALE\_INT= ALE\_IP
WRSTROBE\_INT = NCS • WREN
RDSTROBE INT = NCS • READ

# INTEL 486 Style Interface (NINTELMOT = 0, WRPROG = 1)

The Intel 486 style interface is similar to the 80186 style interface, with similar separate read and write strobes. Some of the later Intel microprocessors (notably the i486) have a very short delay between the rising edge of ALE and the falling edge of the read or write strobes. Due to the pre-charged nature of the data out bus of the Correlator, the address inputs must remain stable throughout the read strobe, and the short delay from ALE to read strobe would produce insufficient address setup times for correct operation. The 486 style interface mode removes this problem by gating both the read and write strobes such that they are inhibited until the falling edge of ALE\_IP. The ALE\_IP pin must not be tied high in 486 style interface mode.

ALE\_INT= ALE\_IP
WRSTROBE\_INT = NCS •WREN • ALE\_IP
RDSTROBE\_INT = NCS • READ • ALE\_IP

#### Reset

The NRESET\_IP pin allows the GP2021 to be provided with an external system reset. For further information refer to System Reset in Standard Interface Mode.

#### **Register Addressing**

As shown in the GP2021 Register Map, Table 11, register addresses differ from those in ARM system mode. In particular in standard interface Mode the GP2021 address bus interface is via A<9:2>, with NCS acting as its chip select input. The address pins A0, A1 in ARM System Mode now become the NRESET\_IP and ALE\_IP inputs. Hence, depending upon the system configuration employed, A<9:2>, of the GP2021 could be connected to the microprocessor address pins A<7:0>.

# **SOFTWARE REQUIREMENTS**

The very wide variety of types of GPS receiver need to operate the correlator in different ways. So to accommodate this and also to allow dynamic adjustment of loop parameters, the GP2021 has been designed to use software for as many functions as possible. This flexibility means that the device cannot be used without a microprocessor closely linked to it, but as a processor is always needed to convert the output of the GP2021 into useful information this is not a significant limitation.

The software associated with the GP2021 can be divided into two separate modules:

- 1. Acquire and track satellite signals to give pseudo-ranges
- Process pseudo-ranges to give the navigation solution and format it in a form suitable for the user.

For the Navigation Solution to be possible all of the pseudoranges must have exactly the same clock error, which can then be removed iteratively to give real ranges if sufficient satellites are tracked (three if the height is known, otherwise four). This need for exact matching of timing errors explains the need for all of the complicated synchronisation between all 12 channels of the correlator.

The following relates only to the signal processing aspects of the software, to acquire and track signals from up to twelve satellites and to obtain the pseudo-ranges and the navigation message. The operation of the navigation software is not dependent on the details of the correlator, and so does not need to be included in this data sheet.

A pair of on-chip interrupt timebase signals are provided to help implement a data transfer protocol between the microprocessor and the 12-channel correlator at fixed time intervals; these signals are:

- 1. ACCUM\_INT used to interrupt the microprocessor to retrieve accumulated data (1.023ms worth) -period of interrupt normally less than 1ms.
- MEAS\_INT used to interrupt the microprocessor to retrieve Measurement data that occurs every TIC (approximately 100ms period).

These interrupts can be used to achieve instant response from the microprocessor via an Interrupt Service Routine. Otherwise a software based polling scheme will be needed; the choice is set by the application. If the ACCUM\_INT interrupt is used, and perhaps also if polling is used, the data transfer rate is about twice the correlation result rate for each channel, so many transfers will not give new data. Bus use can be reduced by examining the status registers before each transfer to see if new data is available and then only reading the data if it is useful.

It is important to note that the timing of each ot the correlator channels will be locked to its own incoming signal and not to each other or to the microprocessor interrupts, so new data is generated asynchronously. The sampling instant of measurement data of all channels however is common to give a consistent navigation solution.

In order to acquire lock to the satellites as quickly as possible, the data from the last fix should be stored as a starting point for the next fix. It is also useful to make use

of the embedded real-time clock on the chip to give a good estimate of GPS time for the next fix; the navigation solutioncan be used to measure clock drift and calculate a correction for the clock to overcome ageing. The user's location (or a good estimate of it) along with the Almanac and the correct time will indicate which satellites should be searched for. These may be used to find an estimate of Doppler effects, while the previous clock error is the best available estimate of the present clock error. If this information is not available then the receiver must scan a much wider range of values, which will greatly increase the time to lock. The satellite Clock Correction and Ephemeris are needed for the navigation solution, so if a recent set is held in memory the calculations may begin as soon as lock is achieved and not need to wait for the Satellite Navigation message re-transmission (18 to 36 seconds).

The 12-channel correlator on the GP2021 contains four different types of registers:

- Control Registers that are used to program functions of the device.
- Status Registers that provide a status indication of the process taking place in the device.
- Accumulated Data Registers that provide the results of correlation with the C/A code every millisecond. This is the raw data used to acquire and track satellite signals.
- Measurement Data Registers which latch the carrier DCO phase, carrier cycle count, code DCO phase, 1 millisecond epoch, and the 20 millisecond epoch count at every 9.09 or 100 milliseconds interval. This is the raw data used to compute pseudorange.

#### **Software Sequence For Acquisition**

The spectrum of each Navstar GPS satellite signal is spread-spectrum modulated using 1023 chip Gold codes. This causes the satellite signals seen by a GPS receiver to be so weak that they are buried in the noise and can only be detected by correlation. The GPS signal power at a GPS receiver antenna is typically approximately –130dBm, whereas the noise in the GPS signal band (2·046MHz wide) is approximately –111dBm at room temperature. To correlate the received signals therefore, a locally generated code must be chosen to precisely match the spreading code type, rate, and phase.

This pattern is then multiplied bit-by-bit with the incoming data stream and the results integrated over the code length to recover the signal.

The process of signal acquisition is simply the matching of receiver settings to the actual signal values. To make matters more complicated the satellite carrier frequency is shifted a little by the Doppler effect due to the motion of the satellite, the user clock will drift randomly, and (in most

situations) the signal-to-noise ratio (SNR) is poor for some satellites. As a result, the software must be 'wideband' to find the signal and also 'narrow band' to reduce noise, leading to very different programs in different applications. For all tracking channels, the signal processing software needs the following sequence of activities:

- 1. Program CHx\_SATCNTL register to select the desired GPS Gold code (PRN number) for the selected satellite and also select the code type for the mode of the correlator tracking arm. It is often best, when in acquisition mode, to fix the tracking arm to Dithering Mode (alternate 'Early' and 'Late') and do a search in two phases at once and then switch to a tracking mode once a satellite is found.
- 2. Program CHx\_CARR\_INCR\_LO and CHx\_CARR\_INCR\_HI registers. The values programmed into these two registers are concatenated and are used to set the local oscillator frequency for the digital mixing performed in the 12-channel correlator to bring the incoming 2-bit digitised signal from the RF front end down to baseband. The value to be programmed is equal to the nominal local oscillator frequency plus the estimated Doppler shift compensation plus the estimated user clock frequency drift compensation.
- 3. Program CHx\_CODE\_INCR\_LO and CHx\_CODE\_INCR\_HI The value to be programmed in these registers represents twice the nominal chipping rate of the C/A code (2·046 MHz) plus, if desired, a small compensation for the Doppler shift and user clock frequency drift.
- **4. Release the tracking channel reset** by programming the RESET\_CONTROL register with the proper value. This will cause the correlation process to start.
- **5. Obtain accumulated data** from Accumulated Data Register readings. Several consecutive readings on the same tracking channel can be added to increase, at will, the integration period of the correlation.
- 6. Decide if the GPS signal has been found by comparing the correlation result with a threshold. If found then jump to a signal pull-in algorithm. Note that both in-phase and quadrature phase accumulated data have to be considered since at this time, the carrier DCO local oscillator phase is not necessarily in phase with the incoming GPS signal.
- 7. If the GPS signal has not been found, a new trial has to be made with different carrier DCO, code DCO, or Gold code phase programming. Typically, both DCOs would be held constant while the Gold code phase is varied to try all of the 2046 half chip positions possible, then the carrier DCO would be programmed with slightly different values and the Gold code phase positions would again be scanned. The Gold code phase is varied by programming the CHx\_CODE\_SLEW register and can be varied by increments of half a code chip.

8. Once the GPS signal has been found, the code phase alignment, the carrier phase alignment and the Doppler and user clock bias compensations are still coarse. The code phase alignment is only within a half code chip, the carrier DCO is not in phase with the incoming signal and in frequency is still in error by up to the increment used for successive trials.

The signal processing software must next use a pull-in algorithm to refine these alignments. There are many suitable types of algorithm to choose from, such as successive small steps until the error is too small to matter, like an analog PLL, or by using more complicated signal processing to estimate the errors and jump to a much better set of values. The signal pull-in algorithm will then program CHx\_CARR\_INCR\_LO/HI registers with more accurate values for the Carrier DCO. Corrections to the Gold code phase smaller than a half chip cannot be done by programming CHx\_CODE\_SLEW registers in the Code Generator, but should set CHX\_CODE\_INCR\_LO/\_HI registers to steer the Code DCO and gradually bring the Gold code phase to the right value.

# Signal Tracking

The incoming GPS signal will exhibit a Doppler shift that varies with time due to the non-uniform motion of the satellite relative to the receiver, and the user clock bias is likely to also vary with time. The net result is that unless dynamic corrections are applied to the code and carrier DCOs, the GPS signal will be lost. This leads to two servo loops being required: one to maintain lock on the Gold code phase and a second to maintain lock on the carrier. This can be implemented with the following.

The raw data used to steer the two servo loops is the Accumulated Data, which is output by the tracking channel at the rate of once per millisecond. The tracking arm Accumulated Data is used for the Gold code loop; some approaches use an 'early minus late' Gold code to implement a null steering loop, others use a dithering code which alternates between a code one half-chip late and a code one half-chip early. In the GP2021, the dithering rate is 20ms (20 code epochs) each way, starting with Early after a reset, when this type of code is selected through the CHx\_CNTL register. The Gold code loop is closed by regularly updating the code DCO frequency using the CHx\_CODE\_INCR\_LO/\_HI registers.

The prompt arm Accumulated Data is used for the carrier phase loop (although the dithering mode in the tracking arm may also be used). One approach consists of varying the carrier DCO phase in order to maintain all the correlation energy in the in-phase correlator arm and none in the quadrature phase correlator arm. The carrier phase loop is closed by regularly updating the carrier DCO frequency using the CHx CARR INCR LO/ HI registers.

#### **Data Demodulation**

The C/A code is modulated with Space Vehicle (SV) data at 50 Baud to give the navigation message. This modulation is an exclusive-OR function of the C/A code with the SV data. This means that every 20 milliseconds (which is every 20 C/A code epochs), the C/A code phase will be reversed (shifted by 180 degrees) if the new data bit is different from the previous one. On the prompt arm, once the signal is being correctly tracked, such a data bit transition will change the sign of the accumulated data. Data demodulation can then be achieved in two stages:

- 1. Locate the instants of data bit transitions to identify which C/A code epoch corresponds to the beginning of a new data bit. This will allow initialisation of the GP2021 epoch counters by the signal processing software (through the CHx\_1MS\_EPOCH and CHx\_20MS\_EPOCH registers) to count code epochs from 0 to 19 in phase with data bits. At each new cycle of the 1ms epoch counter, the 20ms epoch counter will increment.
- 2. Record the sign of accumulated data on the prompt arm for each data bit period of 20ms, with filtering to reduce the effect of noise on the signal. Note that there is a sign ambiguity in the demodulation process in that it is not possible to tell which data bits are zeros and which are ones from the signal itself. This ambiguity will be resolved at a later stage when the full Navigation Message is interpreted.

#### **Pseudorange Measurement**

The measurement data registers provide the raw data necessary to compute the pseudorange. This raw data is a sample, at a given instant set by the TIC signal, of the 20ms and 1ms epoch counters, the C/A code phase counter and the code DCO phase. By definition, the pseudorange is expressed in time units and is equal to the satellite-to-receiver propagation delay plus the user clock bias. The user clock bias is first estimated (blind guessed is more likely with a cold start, but iteration then takes longer) and then obtained as a by-product of the navigation solution. The pseudorange is equal to the user's apparent local time of reception of the signal (t<sub>1</sub>) minus the GPS real time of transmission (t<sub>2</sub>).

With the demodulated data, the software has access to the Space Vehicle Navigation Message, which contains information on the GPS system time for the transmission of the current sub-frame; this is equal to term t<sub>2</sub>.

The time information in the navigation message allows the receiver time to be initialised with a resolution of 20 milliseconds (one data bit period) but with knowledge of the precision to much better than one C/A code chip - a little less than 1 microsecond. As the time-of-flight from the satellite to the receiver is in the region of 60 to 80 milliseconds an improved first guess for local time could

include an allowance for this delay to reduce the iteration time later.

By using the data to time-tag the TIC, along with the values of the Epoch counter, the Code generator phase, and the Code clock phase it is possible to measure the time of the SV signal in local apparent time. This gives the value of  $t_1$  needed for the pseudo-range measurement. The pseudorange can now be computed as  $t_1 - t_2$ .

The error present in the time setting is the initial value of the user clock bias, with an allowance for the various counter phases. Once a Navigation Solution has been found the clock error is precisely known and may be used for future pseudorange calculations. Because the receiver clock drifts with time, the clock bias changes with time and must be tracked by the Navigation software.

# **CONTROLLING THE GP2021**

The following section describes typical methods for controlling the GP2021. These include signal acquisition and tracking, carrier phase measurement and timemark generation.

# **Search Operation**

To perform signal acquistion, the carrier frequency and code phase space needs to be searched until the signal is detected. The maximum carrier frequency excursion from its nominal value is defined by the maximum carrier Doppler shift plus the maximum receiver clock error. The maximum code phase is defined by the (fixed) code length. Typically, all code phases will be searched at a given carrier frequency before advancing to the next carrier frequency bin and repeating the code phase search.

# **Carrier DCO Programming**

The following registers:

CHx\_CARRIER\_DCO\_INCR\_HIGH (or X\_DCO\_INCR\_HIGH) and CHx\_CARRIER\_DCO\_INCR\_LOW

are programmed in sequence with the relevant data according to the frequency bin being searched. It is always necessary to write to both the \_HIGH and \_LOW registers. Carrier DCO programming will become effective as soon as the channel is released (made active).

If the channel is already active, writes to CHx\_CARRIER\_DCO\_INCR\_LOW are effective immediately. (A short delay of up to 175ns will occur, to allow synchronisation of the processor write operation to the chip operation.)

# **Code DCO Programming**

The following registers:

The CHx\_CODE\_DCO\_INCR\_HIGH (or X\_DCO\_INCR\_HIGH) and CHx\_CODE\_DCO\_INCR\_LOW

are programmed in sequence with the relevant data according to the estimated code frequency offset. It is always necessary to write to both \_HIGH and \_LOW registers. Code DCO programming will become effective as soon as the channel is released (made active). If the channel is already active, writes to CHx\_CODE\_DCO\_INCR\_LOW are effective immediately. (A short delay of up to 175ns will occur to allow synchronisation of the processor write operation to the chip operation).

# **Code Generator Programming**

For each channel, the CHx\_SATCNTL register is programmed as follows:

- Set the SOURCESEL bit to select the input signal source.
- 2. Set the TRACK\_SEL bits to set the Tracking arm code to either early or late (with respect to the Prompt arm).
- 3. Set the G2 LOAD bits to select the required PRN code.
- 4. Program the CHx\_CODE\_SLEW register with the desired code phase offset. The slew operation will become effective upon CHx\_RSTB release. The first DUMP will generate accumulated data for the channel and set the associated CHx\_NEW\_ACCUM\_DATA status bit.
- 5. Release the relevant CHx\_RSTB bits of the RESET\_CONTROL register to make the channel active. When the code clock is inhibited (to slew the code phase) the Integrate and Dump module is held reset. It will start to accumulate correlation results only after the slew operation is completed.

A search for a satellite on more than one channel may be performed using the MULTI channel addresses and different code slew values as appropriate.

#### Reading the Accumulated Data

At each DUMP the corresponding CHx\_NEW\_ACCUM\_DATA status bit is set in the ACCUM\_STATUS\_A register. The status register, together with all accumulation registers (CHx\_I\_TRACK, CHx\_Q\_TRACK, CHx\_I\_PROMPT, CHx\_Q\_PROMPT) are mapped into consecutive addresses. These can be read as a consecutive block, if required, after every ACCUM\_INT interrupt. Alternatively, the Status Registers may be polled. The Accumulation registers are not

overwrite protected, therefore the system must respond quickly when new data becomes available. Whether or not it is necessary to process the accumulation at every DUMP is dependent upon the application. The order of reading them is optional, but ideally the CHx\_Q\_PROMPT register should be read last, because this resets the CHx NEW ACCUM DATA bit.

The CHx\_MISSED\_ACCUM bits in the ACCUM\_STATUS\_B register indicate that new accumulated data has been missed. These can only be cleared by a write to CHx\_ACCUM\_RESET or by deactivating the channel.

#### Search on Other Code Phases

When it is desired to correlate on the next code phase, such as one whole chip later, the CODE\_SLEW has to be programmed with a value of 2 (the units are half code chips). The slew will occur on the next DUMP. The effect of CODE\_SLEW is relative to the current code phase. To repeat a CODE\_SLEW, the register needs to be written to again even if the same size slew is required.

Once the signal has been detected (correlation threshold exceeded), the code and carrier tracking loops can be closed. The tracking loop parameters must be tailored in the software to suit the application.

# **Data Bit Synchronisation**

The data bit synchronisation algorithm should find the data bit transition instant. The processor calculates the present one millisecond epoch and programs this value into the 1MS\_EPOCH counter. Ideally, epoch counter accesses should occur following the reading of the accumulation register at each DUMP.

Alternatively, the epoch counters can be left free-running and the offset can be added by the software each time it reads the epoch registers. Note that if the integration is performed across bit boundaries, the integration result can be very small.

# **Reading the Measurement Data**

At each TIC, the measurement data is latched in the Measurement Data registers:

CHx\_EPOCH, CHx\_CODE\_PHASE, CHx\_CARRIER\_DCO\_PHASE, CHx\_CARRIER\_CYCLE\_HIGH, CHx\_CARRIER\_CYCLE\_LOW, CHx\_CODE\_DCO\_PHASE.

The ACCUM\_STATUS\_B or MEAS\_STATUS\_A register must be polled at a rate greater than the TIC rate (to see if a TIC has occurred), otherwise measurement data will be lost. The ACCUM\_INT or MEAS\_INT events can be used

to instigate this operation. The reading of measurement data can be either interrupt driven or polled. For the interrupt driven method the microprocessor reads the ACCUM\_STATUS\_B or MEAS\_STATUS\_A register after each MEAS\_INT, and if the TIC bit is set, subsequently reads the Measurement data. For the polled method the ACCUM\_STATUS\_A register is always read following every ACCUM\_INT. In addition the ACCUM\_STATUS\_B register is read on each ACCUM\_INT to ensure no Accumulated Data has been missed and to check the TIC bit (along with several other status bits). The software tests the TIC bit to determine if new Measurement Data is available to be read.

#### **Preset Mode**

Each channel can be programmed into PRESET mode by writing a High into the PRESET/UPDATEB bit of the CHx SATCNTL register.

When a TIC occurs, the satellite code, epoch value and slew numbers are loaded, and a new phase programmed into the Code DCO regardless of its previous value. Prior to the TIC the channel operates with its previous settings. Preset Mode has no effect on the Carrier DCO and Carrier Cycle Counter.

If Preset mode is initiated, it should be allowed to operate to completion. The required sequence of operations is as follows:

- 1. Write into CHx\_SATCNTL to select the PRESET mode, together with the appropriate new settings.
- Load the Code and Carrier DCO increment values. Note: These will take effect immediately thereby influencing the current measurements.
- 3. Load the following Registers:

  CHx\_CODE\_DCO\_PHASE, CHx\_CODE\_SLEW and
  CHx\_EPOCH\_COUNT\_LOAD. It is important that the
  CHx\_EPOCH\_COUNT\_LOAD occurs last, because it
  enables the preset operation on the next TIC.

#### Interrupts

There are 2 interrupt sources: ACCUM\_INT and MEAS\_INT. Their sense is dependent upon the selected microprocessor interface mode. The default ACCUM\_INT period is 505·.05µs. However, it can be reconfigured via the PROG\_ACCUM\_INT register or by changing the INTERRUPT\_PERIOD or FRONT\_END\_MODE bits in the SYSTEM\_SETUP register. The default MEAS\_INT period is 50ms. However, this can be reconfigured via the PROG\_TIC\_HIGH and PROG\_TIC\_LOW registers.

# Signal Path Delay Introduced by Hardware Signal Processing

When it is desired to generate an accurate time reference from GPS signals or to time-stamp position fixes the delays in the receiver must be allowed for. The signal path delay has two components, an analog path delay which varies with temperature and component tolerances and a Digital path delay which is constant if oscillator drift variations are neglected.

The digital delay is easier to estimate and is made up of the following:

#### In Real Input mode:

- The time from the sampling edge of the SIGN and MAG bits in the front end (SAMPCLK) to the re-sampling in the Sample Latch (175ns less the propagation delay of SAMPCLK to the Front-end).
- **2.** Plus the time for the correlation in the Correlator on these same SIGN and MAG bits (125 ns).
- **3.** Plus the delay in the accumulator to latch the sampled data (175 ns ).
- 4. Less the time between the correlation and the TIC clock phase which is before the accumulator latch phase (75 ns), Giving a total of 400 ns less the SAMPCLK delay.

#### In Complex Input mode:

- 1. The time for the correlation in the Correlator on the S IGN and MAG bits after sampling (114 ns).
- 2. Plus the delay in the accumulator to latch the sampled data (171ns).
- 3. Less the time between the correlation and the TIC clock phase which is before the accumulator latch phase (86ns), giving a total of 199ns.

The analog delay through the radio receiver is set by such parameters as group delay in filters, which for the bandwidths used for C/A code will be in the region of 1 to 2ms and so swamps the digital delay, but this can be measured and corrected for.

# **Integrated Carrier Phase Measurement**

The Correlator tracking channel hardware allows measurement of integrated carrier phase through the CHx\_CARRIER\_CYCLE\_HIGH and \_LOW and the CHx\_CARRIER\_DCO\_PHASE registers, which are part of the Measurement Data sampled at every TIC. The CHx\_CARRIER\_CYCLE\_HIGH and \_LOW registers contain the 20-bit number of positive-going zero crossings of the Carrier DCO; this will be one more than the number of full cycles elapsed (4 bits are in \_HIGH and 16 in \_LOW register). The CHx\_CARRIER\_DCO\_PHASE register contains the cycle fraction or phase, with 10-bit resolution to give  $2\pi/1024$  radian increments.

To get the Integrated Carrier Phase over several TIC periods all that is needed is to read the CHx\_CARRIER\_CYCLE\_HIGH and \_LOW registers at every TIC and sum the readings. This gives a number 1 higher than the number of complete carrier cycles, when a carrier cycle is measured from one positive-going zero crossing to the next.

To this number, the fractional carrier cycle at the end has to be added, and the fractional carrier cycle at the beginning has to be subtracted. Both numbers are read from the CHx\_CARR\_DCO\_PHASE register. The total phase change can be calculated as follows:

Integrated Carrier Phase =  $2\pi \times \Sigma$  Numbers in Carrier Cycle Counter

- +final Carrier DCO phase
- -Initial Carrier DCO phase

Fig. 22 shows how this equation is derived.

This Integrated Carrier Phase may be related to the deltarange (the change in distance to each satellite). When used with the orbital parameters of the satellites, the delta ranges give a measure of the receiver's movement between fixes, which is independent of those fixes and so can be used to smooth them. It can also give a velocity directly. The delta ranges will be noisy and most of the value is due to satellite movement so the determination of velocity must use data from adequately separated TICs. For position smoothing all delta ranges may be included in the input to the navigation filter, as that filter will perform a running average of the delta-ranges as well as the ranges.

#### **Timemark Generation**

The GP2021 is capable of generating an accurate TIMEMARK timing output on one of the discrete outputs if required. TIMEMARK is intended to be a UTC aligned timing output with an accurate 1 second period and a pulse width of 1 ms. The TIMEMARK output is always derived from a rising edge on TIC, and for UTC aligned operation the TIC counter must be brought into phase with UTC. This is done by modifying the division ratio of the TIC counter for a single TIC period by increasing or reducing the division ratio, thus slewing the phase of TIC. Since the TIC counter is incremented every 175ns which is not an exact sub-multiple of 1 second it is also necessary to continually monitor the relationship between TIC and UTC to keep TIC in phase with UTC. Once TIC is in phase with UTC, the TIMEMARK output can be derived from TIC using one of 2 methods both of which involves writing to TIMEMARK CONTROL:

- 1. The GP2021 can be armed to produce a TIMEMARK output at the next TIC only, or
- 2. It can be programmed to give a TIMEMARK output every n TICs starting at the next TIC.

A separate counter resets the TIMEMARK output giving a 1 ms pulse width. The TIC counter can be programmed with an accuracy of 175ns in Real\_Input mode or 171.4ns in Complex\_Input mode. This determines the accuracy of the TIMEMARK output. If the TIC is continually synchronised to keep the rising edge as close as possible

to UTC, the internal TIMEMARK will be within 100ns (4/7×175ns) of UTC in Real\_Input mode or 85·7ns (3/6×171.4ns) of UTC in Complex\_Input mode. In addition, there may be a delay of up to 50ns in getting the TIMEMARK output off chip, giving a maximum error of 150ns (Real\_Input) or 135·7ns (Complex\_Input) between TIMEMARK and UTC. It should be noted that due to the need to re-synchronise TIC, a jitter of up to 175ns may be

present on TIMEMARK, along with any jitter and drift present on the input clock. The pulse width of TIMEMARK (in seconds) is either  $(5714+2/7)\times(7/\text{ Master Clock Frequency})$  for Real\_Input mode giving  $1\cdot00000000$ ms (assuming an accurate 40MHz master clock input) or  $(5833+1/6)\times(6/\text{Master Clock Frequency})$  for Complex\_Input mode giving  $0\cdot9999714$ ms (assuming an accurate 35MHz master clock input).

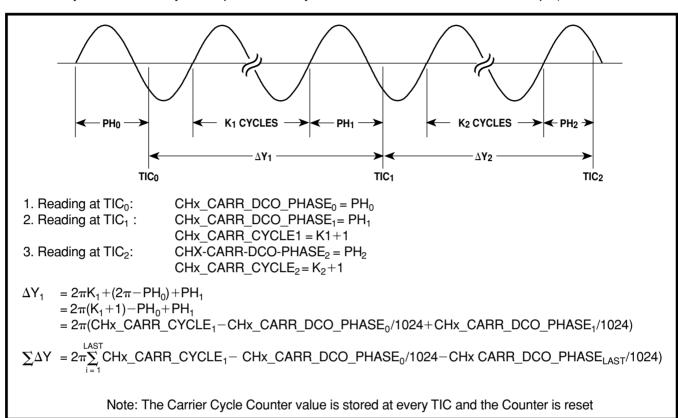


Figure 22 Integrated carrier phase

# **DETAILED DESCRIPTION OF REGISTERS**

# **GP2021 Register Map**

The register map of the GP2021 is shown in Table 11. The addresses are complete, and it should be noted that all the register addresses are word-aligned, i.e. A0 and A1 are not used. Adjacent register addresses thus increment by 4, in

ARM System Mode. However, in Standard Interface Mode, the GP2021 address lines A<9:2> could be connected to the processor address lines A<7:0>. Note that in this mode pins A0 and A1 are allocated other functions.

Ar syst mo A<22:20>	tem	Standard interface mode A<9:2>	Registers
2	A<9:0>	A<9:2>	
_	000 to 01C	00 to 07	CH0 Control
2	020 to 03C	08 to oF	CH1 Control
	040 to 05C	10 to 17	CH2 Control
	060 to 07C	18 to 1F	CH3 Control
	080 to 09C	20 to 27	CH4 Control
2	0A0 to 0BC	28 to 2F	CH5 Control
2	0C0 to 0DC	30 to 37	CH6 Control
2	0E0 to 0FC	38 to 3F	CH7 Control
2	100 to 11C	40 to 47	CH8 Control
2	120 to 13C	48 to 4F	CH9 Control
2	140 to 15C	50 to 57	CH10 Control
2	160 to 05C	58 to 5F	CH11 Control
2	180 to 19C	60 to 67	MULTI Control
2	1A4	69	X DCO INCR HIGH
2	1AC	6B	PROG ACCUM INT
2	1B4	6D	PROG TIC HIGH
2	1BC	6F	PROG TIC LOW
2	1C0 to 1DC	70 to 77	ALL Control
2	1EC	7B	TIMEMARK CONTROL
2	1F0	7C	TEST CONTROL
	1F4	7D	MULTI CHANNEL SELECT
	1F8	7E	SYSTEM SETUP
	1FC	7F	RESET CONTROL
	200 to 20C	80 to 83	Status Registers
2	210 to 21C	84 to 87	CH0 Accumulate
2	220 to 22C	88 to 8B	CH1 Accumulate
2	230 to 23C	8C to 8F	CH2 Accumulate
2	240 to 24C	90 to 93	CH3 Accumulate
2	260 to 26C	98 to 9B	CH5 Accumulate
			CH6 Accumulate
2			CH7 Accumulate
	290 to 29C		CH8 Accumulate
			CH9 Accumulate
			CH10 Accumulate
			CH11 Accumulate
			MULTI Accumulate
			ALL Accumulate
	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	2 040 to 05C 2 060 to 07C 2 080 to 09C 2 0A0 to 0BC 2 0C0 to 0DC 2 0E0 to 0FC 2 100 to 11C 2 120 to 13C 2 140 to 15C 2 160 to 05C 2 180 to 19C 2 1A4 2 1AC 2 1B4 2 1BC 2 1C0 to 1DC 2 1EC 2 1F0 2 1F4 2 1F8 2 1FC 2 2 1F0 2 1FC 2 2 200 to 20C 2 210 to 21C 2 220 to 22C 2 230 to 23C 2 240 to 24C 2 280 to 28C 2 290 to 29C 2 210 to 2BC 2 2 200 to 2DC	2 040 to 05C 10 to 17 2 060 to 07C 18 to 1F 2 080 to 09C 20 to 27 2 0A0 to 0BC 28 to 2F 2 0C0 to 0DC 30 to 37 2 0E0 to 0FC 38 to 3F 2 100 to 11C 40 to 47 2 120 to 13C 48 to 4F 2 140 to 15C 50 to 57 2 160 to 05C 58 to 5F 2 180 to 19C 60 to 67 2 1A4 69 2 1AC 6B 2 1AC 6B 2 1BA 6D 2 1BC 6F 2 1C0 to 1DC 70 to 77 2 1EC 7B 2 1F0 7C 2 1F4 7D 2 1F8 7E 2 1FC 7F 2 200 to 20C 80 to 83 2 210 to 21C 84 to 8F 2 240 to 24C 90 to 93 2 280 to 28C A0 to A3 2 290 to 29C A4 to A7 2 2C0 to BS to BS 2 200 to BS to BS 2 200 to 29C A4 to A7 2 280 to 28C AC to AF 2 2C0 to 2BC BO to BS

Table 11 Register map

Cont...

		Address (Hex)			
Register block	Arm system mode  A<22:20> A<9:0>		Standard interface mode	Registers	
			A<9:2>		
Real Time Clock					
	3	000	C0	RTC_LS	
	3	004	C1	RTC_2ND	
	3	800	C2	RTC_MS	
	3	00C	C3	CLOCK_RESET	
	3	010	C4	WATCHDOG_RESET	
DUART					
	3	040	D0	TX_DATA_A, RX_DATA_A	
	3	044	D1	TX_DATA_B, RX_DATA_B	
	3	048	D2	CONFIG_A, STATUS_A	
	3	04C	D3	CONFIG B, STATUS_B	
	3	050	D4	CH10 Control	
	3	054	D5	CH11 Control	
	3	058	D6	MULTI Control	
	3	05C	D7	X_DCO_INCR_HIGH	
System control					
	3	080	E0	WAIT_STATE	
	3	084	E1	SYSTEM_CONFIG	
	3	088	E2	Not Used	
	3	08C	E3	SYSTEM_ERROR_STATUS	
	3	090	E4	DATA_RETENT	
General control					
	3	0C0	F0	IO_CONFIG	
	3	0C4	F1	TEST_CONFIG	
	3 0C8		F2	DATA BUS TEST	

Table 11 Register map (continued)

Address (Hex)			Read function	
Arm Standard interface mode mode		Write function		
CNTL +00	CNTL +0	SATCNTL	CODE SLEW	
CNTL +04	CNTL +1	CODE PHASE COUNTER (1)	CODE PHASE	
CNTL +08	CNTL +2	CARRIER_CYCLE_COUNTER (1)	CARRIER_CYCLE_LOW	
CNTL +0C	CNTL +3	CARRIER_DCO_INCR_HIGH	CARRIER_DCO_PHASE	
CNTL +10	CNTL +4	CARRIER DCO_INCR_LOW	EPOCH (Latched 0)	
CNTL +14	CNTL +5	CODE_DCO_INCR_HIGH	CODE_DCO_PHASE	
CNTL +18	CNTL +6	CODE_DCO_INCR_LOW	CARRIER_CYCLE_HIGH	
CNTL +1C	CNTL +7	EPOCH_COU NT_LOAD	EPOCH_CHECK (Not latched)	
ACCUM +00	ACCUM+0	CODE_SLEW_COUNTER	I_TRACK	
ACCUM +04	ACCUM+1	ACCUM_RESET	Q_TRACK	
ACCUM +08	ACCUM+2	Not used	I_PROMPT	
ACCUM+0C ACCUM+3		CODE_DCO_PRESET_PHASE	Q_PROMPT	

#### **NOTES**

**Table 12 Tracking channel registers** 

Address (Hex)				
Arm system mode	Standard interface mode	Write function	Read function	
200	80	STATUS	ACCUM_STATUS_C	
204	81	Not used	MEAS_STATUS_A	
208	82	Not used	ACCUM_STATUS_A	
20C	83	Not used	ACCUM_STATUS_B	

Table 13

# **Correlator Registers**

Addresses for the Correlator Registers may be calculated from a base address with an increment for a particular register.

The base addresses for the CNTL and ACCUM register blocks for each channel in the Correlator are shown in Table 11, the increments being given in Table 2.

For example, in ARM System Write mode: CH3\_CODE\_DCO\_INCR\_LOW = 060H+018H = 078H.

In both the ACCUM and CNTL sections there are some addresses labelled ALL or MULTI in place of CHx. Writing to these addresses will write to all channels or to a selection set by MULTI\_CHANNEL\_SELECT in one operation and so may be used to initialise the system quickly or to load the next search settings with little bus use. This is a write-only function and the corresponding CHx read functions are not available at addresses labelled ALL or MULTI.

It can be seen that the addresses in CNTL are used to control the device in write mode but give the Measurement Data when in read mode.

Apart from the Code and Carrier DCO increment values all data transfers are only 16-bit wide. Writes to the Code and Carrier DCOs are 32-bit data transfers where the HIGH word should be written first and will be retained in the 16- to 32-bit interface until the LOW word is written, which must occur as the next write to the chip. All 32 bits will then be transferred into the DCO increment register. Data is written to an input buffer in the 16- to 32- bit interface and will be transferred to its destination register during the next full cycle of the 7 (or 6) phase clock. Write cycles should therefore have a period of at least 300 ns. The X DCO INCR HIGH may be used to write the high bits of the increment number to any or all DCO's as an alternative the CH<sub>x</sub> CODE to using CARRIER DCO INCR HIGH addresses. By using this

<sup>1.</sup> The CODE\_PHASE\_COUNTER and CARRIER\_CYCLE\_CONTROL registers can only be written to if Test mode has been selected by setting bit 3 of the TEST CONTROL register high.

address, there is no need to wait 300ns before writing the \_LOW part. For further information refer to General Interface Timing in Microprocessor Interface section.

The bit assignments for the Correlator registers are given below, but two write-only registers do not have any data bits, these are:

- 1. A write to the CHx\_ACCUM\_RESET register (irrespective of what data is written) will reset the ACCUM\_STATUS\_A, ACCUM\_STATUS\_B, and ACCUM\_STATUS C registers for that channel.
- 2. A write to the STATUS register (irrespective of what data is written) will latch the state of the various status flags into ACCUM\_STATUS\_A, ACCUM\_STATUS\_B and ACCUM\_STATUS\_C Registers for all channels. This allows a polling based rather than Interrupt driven tracking scheme.

The registers are listed in alphabetical order and not in address order to allow easy reference to each section. Unless otherwise stated the LSB is bit 0 and the MSB is bit 15 or as far up the register as there is data. Note that most registers do not have both read and write functions, and many addresses are shared between read-only and write-only registers having different functions.

# **ACCUM STATUS A (Read address)**

Bit	Bit name
15	ACCUM_INT
14	Not used-low
13	Not used-low
12	Not used-low
11	CH11_NEW_ACCUM_DATA
10	CH10_NEW_ACCUM_DATA
9	CH9_NEW_ACCUM_DATA
8	CH8_N EW_ACCU M_DATA
7	CH7_NEW ACCUM_DATA
6	CH6_NEW_ACCUM_DATA
5	CH5_NEW ACCUM_DATA
4	CH4_NEW_ACCUM_DATA
3	CH3_NEW_ACCUM_DATA
2	CH2_NEW_ACCUM_DATA
1	CH1_NEW_ACCUM_DATA
0	CH0_NEW_ACCUM_DATA

Table 14

ACCUM\_STATUS\_A is a register containing the state of twelve status bits sampled and latched on the active edge of every ACCUM\_INT. They can also be sampled and latched on request, by performing a write operation to STATUS. (This is safe only if the interrupts are stopped, by setting INTERRUPT\_ENABLE bit to low in the SYSTEM\_SETUP register.) The microprocessor must respond to each ACCUM\_INT and read the channel registers before the next DUMP is due in that channel.

The ACCUM\_INT bit is set high at every ACCUM\_INT and is reset by reading the ACCUM\_STATUS\_A register. This status bit is reset by a hardware master reset but not by a software reset (MRB).

The CHx\_NEW\_ACCUM\_DATA status bit indicates that a DUMP has occurred in that channel, and that new Accumulated Data is available to be read.

Each bit is cleared by the trailing edge of a read of the associated CHx\_Q\_PROMPT register or by a write to CHx\_ACCUM\_RESET. Note that the channel-specific bits of this register will not show their new value until after an active edge of ACCUM\_INT or a write to the STATUS register. Disabling a channel will however, clear the bit immediately.

# **ACCUM STATUS B (Read address)**

Bit	Bit name
15	DISCIP_GLITCH
14	DISCIP
13	TIC
12	MEAS_I NT
11	CH1 1_MISSED ACCUM
10	CH10_MISSED_ACCUM
9	CH9_MISSED_ACCUM
8	CH8_MISSED_ACCUM
7	CH7_MISSED_ACCUM
6	CH6_MISSED_ACCUM
5	CH5_MiSSED_ACCUM
4	CH4_MISSED_ACCUM
3	CH3_MISSED_ACCUM
2	CH2_MISSED_ACCUM
1	CH1_MISSED ACCUM
0	CH0_MISSED_ACCUM

Table 15

The lower 12 bits of ACCUM\_STATUS\_B bits are sampled and latched on the active edge of every ACCUM\_INT signal. They can be sampled and latched on request by performing a write operation to STATUS (as with ACCUM\_STATUS A).

The DISCIP\_GLITCH bit will be set high if a glitch-to-low has occurred on the DISCIP pin since the last read of this register. It is cleared by reading this ACCUM\_STATUS\_B register. This bit is reset by a hardware master reset (NRESET at low) but not by a software reset (MRB). The minimum reliably detectable glitch width is 25ns.

The DISCIP bit indicates the level on the DISCIP input pin at the time this read occurs and may be used to interface a hardware condition (such as a ready flag from a UART or the PLL LOCK signal from a front end) to the microprocessor without using an interrupt. This bit is not reset by a hardware master reset nor by an MRB.

**The TIC bit** is set High at every TIC and is cleared by reading this ACCUM\_STATUS\_B register. Its purpose is to tell the microprocessor that new Measurement Data is available. It is reset by a hardware master reset (NRESET at low) but not by an MRB in RESET CONTROL.

Provided that interrupts are enabled, the MEAS INT bit is set High at each TIC and 50ms before each TIC if the TIC period is greater then 50ms), and is cleared by reading this register. This bit can be used as a flag to the microprocessor, to time software module swapping. It is reset by a hardware master reset (NRESET at low), but not by a software reset. CHx MISSED ACCUM status bit indicates (when high) that there has been missed Accumulated Data due to a new DUMP in CHx before the previous data has been read. This bit is latched until the associated CHx ACCUM RESET is written to. If any data is missed due to the reading process being too slow this must be allowed for in the software, such as by checking the Navigation Message data bit transitions independently of the sets of Accumulated Data reads. If too much data is lost the system signal to noise ratio will be degraded. The primary purpose of these bits is as a check on how well the tracking routines are working - once the whole design is complete these bits should not become set.

Note that the channel-specific bits of this register will not show their new value until after an active edge of ACCUM\_INT or a write to the STATUS register. Disabling a channel will however, clear the bit immediately.

# ACCUM\_STATUS\_C (Read address)

Bit name
Not used - low
CH11_EARLY_LATEB
CH10_EARLY_LATEB
CH9_EARLY_LATEB
CH8_EARLY_LATEB
CH7_EARLY_LATEB
CH6_EARLY_LATEB
CH5_EARLY_LATEB
CH4_EARLY_LATEB
CH3_EARLY_LATEB
CH2_EARLY_LATEB
CH1_EARLY_LATEB
CH0_EARLY_LATEB

Table 16

**ACCUM\_STATUS\_C bits** are sampled and latched on the active edge of every ACCUM\_INT signal, or they can be sampled and latched on request by performing a write operation to STATUS (as with ACCUM\_STATUS A).

The CHx\_EARLY\_LATEB status bit indicates the code type for the Accumulated Data on the Tracking arm of channel CHx when that channel is in Dithering mode. A high indicates an EARLY code and a low indicates a LATE code. Each individual bit is determined on the DUMP that sets CHx\_NEW\_ACCUM\_DATA to high for that channel. In other modes the bit is of no use.

Note that the channel specific bits of this register will not show their new value until after an active edge of ACCUM\_INT or a write to the STATUS register. Disabling a channel will however, clear the bit immediately.

# CHx\_ACCUM\_RESET (Write Address) Bits 15 to 0: Not used.

These are write-only locations provided to allow resetting of the status bits ACCUM\_STATUS\_A, ACCUM\_STATUS\_B, and ACCUM\_STATUS\_C associated with a given channel or all channels. When these locations are written to, the data is irrelevant.

# CHx\_CARRIER\_CYCLE\_COUNTER, MULTI\_CARRIER\_CYCLE\_COUNTER, ALL\_CARRIER\_CYCLE\_COUNTER (Write Address)

A write to these registers only has effect when in test mode (bit 3 of TEST\_CONTROL set high). The value on the bus is loaded into the lower 16 bits of the CHx\_CARRIER\_CYCLE\_COUNTER along with zeros into the upper 4 bits.

# CHx\_CARRIER\_CYCLE\_HIGH, CHx\_CARRIER\_CYCLE\_LOW (Read Address)

\_HIGH bits 15 to 4: not used - low when read. \_HIGH bits 3 to 0: Carrier Cycle Count bits 19 to 16. \_LOW bits 15 to 0: Carrier Cycle Count bits 15 to 0.

The Correlator tracking channel hardware allows for measurement of integrated carrier phase through the CHx\_CARRIER\_CYCLE\_HIGH and \_LOW and the CHx\_CARRIER\_DCO\_PHASE registers, which are part of the Measurement Data sampled at every TIC. The CHx\_CARRIER\_CYCLE\_HIGH and \_LOW registers contain the 20- bit number of positive going zero crossings of the Carrier DCO (4 bits are in HIGH and 16 in LOW).

The cycle fraction can be read from the CHx Carrier DCO Phase register.

In the CHx\_CARRIER\_CYCLE counter, a TIC generates two consecutive actions. First it latches the 4 more significant bits of the cycle counter into CHx\_CARRIER\_CYCLE\_HIGH and the 16 less significant bits into CHx\_CARRIER\_CYCLE\_LOW. Then it resets the cycle counter.

After each TIC, every time the Carrier DCO accumulator generates an overflow as a result of a carrier cycle being completed, the cycle counter increments by one.

In Real\_Input mode the nominal CARRIER DCO frequency with no Doppler and no oscillator drift compensation is 1.405396825 MHz, so in 100ms, there will be about 140540 cycles.

In almost all applications the number of Carrier DCO cycles does not vary much from one TIC interval to another so it is possible to predict the Most Significant Bits of the value and then only read the CHx\_CARRIER\_CYCLE\_LOW register.

CHx\_CARRIER\_CYCLE\_HIGH and\_LOWcontents are not protected by an overwrite protection mechanism and so must be read before the next TIC.

For further information on the Carrier Cycle Counter refer to The Tracking Modules section on page 8.

CHx\_CARRIER\_DCO\_INCR\_HIGH,
X\_DCO\_INCR\_HIGH,
MULTI\_CARRIER\_DCO\_INCR\_HIGH,
ALL\_CARRIER\_DCO\_INCR\_HIGH,
CHx\_CARRIER\_DCO\_INCR\_LOW,
MULTI\_CARRIER\_DCO\_INCR\_LOW,
ALL\_CARRIER\_DCO\_INCR\_LOW
(Write Address)

\_INCR\_HIGH bits 15 to 10: Not used in this operation. \_INCR\_HIGH bits 9 to 0: More significant bits (25 to 16) of the Carrier DCO phase increment when used before a write to CARRIER DCO INCR LOW.

**\_INCR\_LOW bits 15 to 0:** Less significant bits (15 to 0) of the Carrier DCO (phase increment.

The contents of registers \_INCR\_HIGH and \_INCR\_LOW are combined to form the 26 bits of the CHx\_C,ARRIER\_DCO\_INCR register, the carrier DCO phase increment number. In order to write successfully, the top 10 bits must be written first, to any of the \_HIGH addresses. They will be stored in a buffer and only be transferred into the increment register of the DCO together with the \_LOW word. A 26-bit increment number is adequate for a 27-bit accumulator DCO, as the increment

to the MSB is always zero.

The LSB of the INCR register represents a step given by:

Min. step frequency, Real\_Input mode =  $(40MHz \div 7) \div 2^{27}$ =  $42 \cdot 57475mHz$ 

Min. step frequency, Complex\_Input mode =  $(35MHz \div 6) \div 2^{27}$ = 43.46172mHz

Output frequency = CHx\_CARRIER\_DCO\_INCR (min. step frequency).

With a GP2015/GP2010 style front end, the nominal value of the IF is 1·405396826 MHz before allowing for Doppler shift or crystal error. Writing 01F7B1B9H into the CHx\_CARRIER\_DCO\_INCR register will generate a local oscillator frequency of 1·405396845 MHz.

# CHx\_CARRIER\_DCO\_PHASE (Read Address)

Bits 15 to 10: Not used - low when read.

**Bits 9 to 0:** More significant bits (26 to 17) of CHx\_CARRIER\_DCO\_PHASE as sampled at the last TIC. The weight of the least significant bit is  $2\pi/1024$  radians of a Carrier DCO cycle. These bits form an unsigned integer valid from 0 to 1023. CHx\_CARRIER\_DCO\_PHASE provides sub-cycle phase measurement information and so complements the information given by CHx CARRIER CYCLE HIGH and LOW.

The register value is latched on each TIC and is not protected by any overwrite protection mechanism.

CHx\_CODE\_DCO\_INCR\_HIGH,
X\_DCO\_INCR\_HIGH,
MULTI\_CODE\_DCO\_INCR\_HIGH,
ALL\_CODE\_DCO\_INCR\_HIGH,
CHx\_CODE\_DCO\_INCR\_LOW,
MULTI\_CODE\_DCO\_INCR\_LOW,
ALL\_CODE\_DCO\_INCR\_LOW
(Write Address)

\_INCR\_HIGH bits 15 to 9: Not used in this operation.

\_INCR\_HIGH bits 8 to 0: More significant bits (24 to 16) of the Code DCO phase increment when used before a CODE\_DCO\_INCR\_LOW.

**\_INCR\_LOW bits 15 to 0:** Less significant bits (15 to 0) of the Code DCO phase increment.

The contents of registers \_INCR\_HIGH and \_INCR\_LOW are combined to form the 25 bits of the CHx\_CODE\_DCO\_INCR register, the Code DCO phase increment number. In order to write successfully, the top 9 bits must be written first, to any of the \_HIGH addresses. They will be stored in a buffer and only be transferred into the increment register of the DCO together with the \_LOW

word. A 25-bit increment number is adequate for a 26-bit accumulator DCO as the increment to the MSB is always zero.

The LSB of the INCR register represents a step given by:

Min. step frequency, Real\_Input mode =  $(40MHz \div 7) \div 2^{26}$ =  $85 \cdot 14949mHz$ 

Min. step frequency, Complex\_Input mode =  $(35MHz \div 6) \div 2^{26}$ = 86.92344mHz

Output frequency = CHx\_CARRIER\_DCO\_INCR (min. step frequency).

Note: The Code DCO drives the Code Generator to give half chip time steps and so must be programmed to twice the required chip rate. This means that the chip rate resolution is 42·57475mHz in Real\_Input mode or 43·46172mHz in Complex\_Input mode.

The nominal frequency is 1.023000000MHz before allowing for Doppler shift or crystal error. Writing 016EA4A8H into the CHx\_CODE\_DCO\_INCR register will generate a chip rate of 1.022999968MHz in Real\_Input mode. In Complex\_mode, 01672922H will generate a chip rate of 1.022999970 MHz.

# CHx\_CODE\_DCO\_PHASE (Read Address) Bits 15 to 10: Not used (low when read).

**Bits 9 to 0:** CHx\_CODE\_DCO\_PHASE: Contains the ten more significant bits (25 to 16) of the Code DCO phase accumulator sampled at a TIC event. It is an unsigned integer valid from 0 to 1023. The weight of the least significant bit is  $2\pi/1024$  radians,  $2\pi$  being half of a code chip, so the pseudorange resolution is 1/2048 of a chip, (equivalent to 0·15 metre or 0·5ns).

The CHx\_CODE\_DCO\_PHASE content is not protected by any overwrite protection mechanism.

CHx\_CODE\_DCO\_PRESET\_PHASE, MULTI\_CODE\_DCO\_PRESET\_PHASE, ALL\_CODE\_DCO\_PRESET\_PHASE (Write Address) Bits 15 to 8: Not used.

**Bits 7 to 0:** More significant bits (25 to 18) of the Code DCO phase which is to be loaded at the next TIC event in PRESET mode.

In PRESET mode, the 8 bits of the CHx\_CODE \_DCO\_PRESET\_PHASE register, with zeros filling the lower bits, are transferred to the CODE DCO accumulator on the next TIC. The previous accumulator phase is totally overwritten. The PRESET PHASE register is a write-only

register and it can be written to at any time in PRESET mode or in UPDATE mode, but only has effect when PRESET mode is entered. The weight of the least significant bit of PRESET phase is  $2\pi/256$  radians of a half chip cycle.

In UPDATE mode this register has no use other than as preparation for PRESET mode.

Refer to Detailed Operation of GP2021 for further information on PRESET mode, page 25.

CHx\_CODE\_PHASE (Read Address)
CHx\_CODE\_PHASE\_COUNTER,
MULTI\_6ODE\_PHASE\_COUNTER,
ALL\_CODE\_PHASE\_COUNTER
(Write Address)

Bits 15 to 11: Not used, Low when read.

Bits 10 to 0: CHx\_CODE\_PHASE (Read) This is the state of the Code Phase Counter, (an 11-bit binary up counter clocked by the Code Generator Clock), stored on TIC. The phase is expressed as a number of half code chips and ranges from 0 to 2046 half chips. A reading of 2046 is very rare and can only occur if the TIC captures the Code phase just after the counter reaches 2046 and before it is reset by a DUMP from the C/A Code Generator. DUMP also increments the Epoch counter, so the meaning of a phase value of 2046 + the previous Epoch value is the same as a phase value of 0 + the incremented Epoch value, and either is valid. If a TIC occurs during a Code Slew the reading will be 0, and that channel's Measurement Data is of no use.

**Bits 10 to 0: (Write)** loads the 11 bits of the CHx\_CODE\_PHASE\_COUNTER. A write to these registers is only possible in test mode, enabled by setting the TM TEST bit of TEST CONTROL to High.

CHx\_CODE\_SLEW (Read Address)
CHx\_CODE\_SLEW\_COUNTER,
MULTI\_CODE\_SLEW\_COUNTER,
ALL\_CODE\_SLEW\_COUNTER
(Write Address)
Bits 15 to 11: Not used.

**Bits 10 to 0:** An unsigned integer ranging from 0 to 2047 representing the number of code half chips to be slewed immediately after the next DUMP if in UPDATE mode orafter the next TIC, if in PRESET mode. Since there are only 2046 half chips in a GPS C/A code, a programmed value of 2047 is equivalent to a programmed value of 1, but the next DUMP event will take place 1ms later. In PRESET mode, the slew timing is set only by TIC, which will also reset the code generator, (no DUMP is needed). A non-zero slew must always be programmed when using PRESET mode.

The CHx\_CODE\_SLEW register can be written to at any time. If two accesses have taken place before a DUMP in U PDATE mode or before a TIC when in PRESET mode, the latest value will be used at the next slew operation. During the time a slew process is being executed, any further write access to the CHx\_CODE\_SLEW register will be stored until the following DUMP and then cause the transfer of this new value into the counter. This situation may be avoided by synchronising the access with the associated CHx\_NEW\_ACCUM\_DATA status bit.

If a channel is inactive, a non-zero slew value should be written into CHx CODE SLEW before the channel is

released. This write will be acted on immediately the reset is released.

If a TIC occurs during or soon after a slew the channel will not be locked to the satellite, so the Measurement Data for that channel will not be of use.

The ability to read the Slew counter is included only for testing hardware or software and has no other use. It will only give a non-zero result if the read occurs during the actual slew operation. An example of a slewing event is shown in Fig.23.

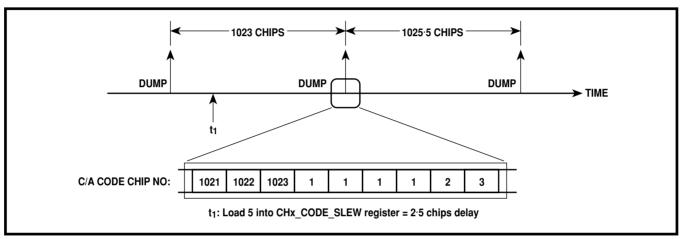


Figure 23 Slew timing in UPDATE mode

# CHx\_EPOCH\_CHECK (Read Address)

Bits 15 to 14: Not used.

Bits 13 to 8: Instantaneous value of CHx 20MS EPOCH.

Bits 7 to 5: Not used.

**Bits 4 to 0:** Instantaneous value of CHx\_1MS\_EPOCH.

Reading this address gives the instantaneous value of the CHx\_1MS\_EPOCH and the CHx\_20MS\_EPOCH counters. It can be used to verify if the Epoch counters have been properly initialised by the software. Its value is not latched and is incremented on each DUMP. To ensure the correct result, this register should be read only when there is no possibility of getting a DUMP during the read cycle, by synchronising the read to NEW\_ACCUM\_DATA. The ranges of these values are the same as those seen in the CHx\_EPOCH register.

# CHx EPOCH (Read Address)

Bits 15, 14, 7, 6 and 5: Not used. Read gives low.

**Bits 13 to 8: CHx\_20MS\_EPOCH** The 20ms epoch counter value that was sampled at the last TIC event, with a valid range from 0 to 49.

Bits4 to 0: CHx\_1 MS\_EPOCH The 1ms epoch counter

value that was sampled at the last TIC event, with a valid range from 0 to 19.

CHx\_EPOCH\_COUNT\_LOAD MULTI\_EPOCH\_COUNT\_LOAD ALL\_EPOCH\_COUNT\_LOAD (Write Address)

Bits 15, 14, 7, 6, and 5: Not used.

**Bits 13 to 8: CHx\_20MS\_EPOCH** The value to be loaded into the 20 millisecond epoch counter, with a valid range from 0 to 49.

Bits 4to 0: CHx\_1 MS\_EPOCH Thevalue to be loaded into the 1 millisecond epoch counter, with a valid range from 0 to 19. This operation is affected by the current channel mode, (PRESET or UPDATE). In UPDATE mode, the data written into these registers is immediately transferred to the 1ms and 20ms epoch counters. In PRESET mode however, the data is transferred only after the next TIC.

It is important to load the CHx\_EPOCH register last in the PRESET mode loading sequence because the trailing edge of a write to this register enables the whole PRESET operation on the next TIC.

Refer to Detailed Operation of the GP2021 for more details of the PRESET mode on page 25

CHx\_I\_TRACK, CHx\_Q\_TRACK, CHx\_I\_PROMPT, CHx\_Q\_PROMPT (Read Address)

**Bits 15 to 0:** Accumulated Data registers, which are used on each DUMP to store the 16-bit Integrate-and-Dump accumulator results. The values contained in the registers are 2's complement values with the valid range of the data from  $-2^{15}$  to  $+(2^{15}-1)$ 

These registers are read-only registers which can be read at any time. Their content is not protected by any overwrite protection mechanism, so the set of four registers must be read soon after an ACCUM\_INT to be sure that newer data will not cause an overwrite part way through the set. The CHx\_I\_PROMPT and CHx\_Q\_PROMPT contain the Accumulated Data from the Prompt arm. The CHx\_I\_TRACK and CHx\_Q\_TRACK contain the Accumulated Data from the Tracking arm.

To track satellites correctly, only data read with the CHx\_NEW\_ACCUM\_DATA bit set High should be used. An overflow or underflow condition cannot be reached.

# CHx\_SATCNTL, MULTI\_SATCNTL, ALL\_SATCNTL (Write Address)

Bit	Bit name
15	GPS_NGLON
14-13	TRACK_SEL
12	PRESET/UPDATEB
11	CODE_OFF/ONB
10	SOURCESEL
9-0	G2_LOAD (9 to 0)

Table 17

CHx\_SATCNTL is a write-only register that can be written into at any time. Any modification to the content is effective at the next DUMP in UPDATE mode or at the next TIC in PRESET mode for all bits, apart from PRESET/UPDATEB, which defines whether a channel is in PRESET or UPDATE mode. It is important to program this register first when starting the initialisation of a PRESET sequence to get the channe linto PRESET mode, or the other write operations will act too soon.

**G2\_LOAD** (9 to 0), bits 9 to 0: C/A CODE SELECTION FUNCTION: The CHx\_SATCNTL register programs the CODE GENERATOR by setting the G2 register to the appropriate starting pattern to generate the required GPS or INMARSAT-GIC codes. The G2\_LOAD register may be programmed at any time but the value is only used when the code sequence restarts, at the following DUMP in UPDATE mode, or at the following TIC in PRESET mode.

The pattern to load is the register state for the time of the second code chip. The followingtable shows the values required to select one of the 37 GPS or the 8 INMARSAT-GIC possible PRN (Pseudo Random Noise) patterns. In UPDATE mode, the C/A code generated by the CODE GENERATOR will be changed at the DUMP following the write to CHx\_SATCNTL and at this DUMP the Accumulated Data will be valid for the previous code selection. Later DUMPs will be valid for the new code.

If all zeros are loaded into the G2 register it will not clock out, and the G1 generator code will be seen on the output. This is an illegal state, which is only of use for chip testing.

#### Notes:

- PRN sequences 33 to 37 are reserved for non-satellite uses (e.g. Ground transmitters - 'Pseudo-Lites')
- C/A codes 34 and 37 are equivalent.
- PRN sequences 120 to 138 are selected for the Wide Area Augmentation System (WAAS).
- PRN sequences 201 to 211 are selected for INMARSAT GIC (GPS Integrity Channel) use.

Due to the initialisation of the Early-Prompt-Late shift register, all codes will always start with a '1' for the first bit of the sequence after a Code change or a Code Siew. Subsequent cycles of the PRN sequence will be correct for the chosen satellite.

GPS PRN signal no.	G2_LOAD [9:0] (hex)	GPS PRN signal no.	G2_LOAD [9:0] (hex)	GPS PRN signal no.	G2_LOAD [9:0] (hex)
1	3F6	24	338	127	1E7
2	3EC	25	270	128	2B5
3	3D8	26	0E0	129	22A
4	3B0	27	1C0	130	10E
5	04B	28	380	131	12D
6	096	29	22B	132	215
7	2CB	30	056	133	337
8	196	31	0AC	134	0C7
9	32C	32	158	135	0E2
10	3BA			136	20F
11	374	33	2B0	137	3C0
12	1D0	34	058	138	029
13	3A0	35	18B		
14	340	36	316	201GIC	2C4
15	280	37	058	202GIC	10A
16	100			205GIC	3E3
17	113	120	2C4	206GIC	0F8
18	226	121	30A	207GIC	25F
19	04C	122	1DA	208GIC	1E7
20	098	123	0B2	209GIC	2B5
21	130	124	3E3	211GIC	10E
22	260	125	0F8		
23	267	126	25F		

Table 18 G2 LOAD settings required for satellite reception

**SOURCESEL**, bit 10: Selects which input source to be used by the channel when in Real\_Input mode. Low selects SIGN0 and MAG0, high selects SIGN1 and MAG1.

**CODE\_OFF/ONB, bit 11:** When low, the code is output normally, but when high, the Prompt, Early and Late codes are held high (code mixer outputs exactly follow inputs) and the Early-minus-late code is held low. This is intended for test purposes only.

**PRESET/UPDATEB, bit 12:** When high sets the channel into Preset mode, or when low, sets the channel into Update mode. This bit is cleared to low after the Preset function has been performed, that is, after the first TIC following the loading of the Epoch counters.

**TRACK\_SEL** (1 and 0), bits 14 and 13: Select the appropriate code to be produced by the Tracking arm output of the code generator as shown in Table 19.

Bit		Code select	
14 13		Code select	
0	0	Early code	
0	1	Late code	
1	0	Dithering code (alternating early and late)	
1	1	Early-minus-late code	

Table 19 TRACK\_SEL bit settings for Tracking arm code selection

When the dithering code has been selected, the Tracking arm will use the Early code for 20 periods of the Gold code, the Late code for the next 20 periods and then this process of alternating between Early and Late code will be repeated indefinitely. The Tracking Arm will toggle between Early or Late codes on every increment of a 20ms Epoch Count. Its state can be determined by reading the ACCUM STATUS C register.

The output code is a sequence of +1s and -1s for all code types except EARLY-MINUS-LATE where the result can also be a 0. In EARLY-MINUS-LATE mode the values are not the +2, 0, -2 that result from the calculation (+1 or -1) - (+1 or -1), but are halved to +1, 0, -1. This must be considered when choosing thresholds in the software as the correlation results will be exactly half the values otherwise expected.

**GPS\_NGLON, bit 15:** Setting this bit to low changes the C/A code generator mode to GLONASS mode, to generate the fixed 511-bit sequence used by all GLONASS satellites.

After a master reset (NRESET low), GPS mode is selected, but with all zeros in the G2 generator, the G1 code is seen at the output of the C/A code generator.

**MEAS STATUS A (Read address)** 

Bit	Bit name
15 to 14	Not used
13	TIC
12	MEAS_INT
11	CH11_MISSED_MEAS_DATA
10	CH10_MISSED_MEAS_DATA
9	CH9_MISSED_MEAS_DATA
8	CH8_MISSED_MEAS_DATA
7	CH7_MISSED_MEAS_DATA
6	CH6_MISSED_MEAS_DATA
5	CH5_MISSED_MEAS_DATA
4	CH4_MISSED_MEAS_DATA
3	CH3_MISSED_MEAS_DATA
2	CH2_MISSED_MEAS_DATA
1	CH1_MISSED_MEAS_DATA
0	CH0_MISSED_MEAS_DATA

Table 20

CHx\_MISSED\_MEAS\_DATA status bit, when high, indicates that one or more sets of measurement data have been missed since the last read from this register. It is set high by a read from the Code Phase Counter of the same channel, when the previous value in the Code Phase Counter has not been read, and is reset by a read from the MEAS\_STATUS\_A register or by disabling the channel.

If this register is always read after the Code Phase Counter, it indicates whether measurement data has been missed before the last read of the Code Phase Counter. All CHx\_MISSED\_MEAS\_DATA bits are set low by a hardware (NRESET) or software (MRB reset.

**The MEAS\_INT bit** is set high at each TIC and 50ms before each TIC (if TIC period is greater then 50ms), and is cleared by reading this register. This bit is used as a flag to the microprocessor to time software module swapping and is reset by a hardware master reset (NRESET low) but not by an MRB software reset.

**The TIC bit** is set high at every TIC and is cleared by reading this register. The purpose of the bit is to tell the microprocessor that new Measurement Data is available. This bit is reset by a hardware master reset (NRESET at low) but not by an MRB in RESET\_CONTROL.

#### **MULTI CHANNEL SELECT (Write address)**

Bit	Bit name
15 to 12	Not used
11	CH11_SELECT
10	CH10_SELECT
9	CH9_SELECT
8	CH8_SELECT
7	CH7_SELECT
6	CH6_SELECT
5	CH5_SELECT
4	CH4_SELECT
3	CH3_SELECT
2	CH2_SELECT
1	CH1_SELECT
0	CH0_SELECT

Table 21

CHx\_SELECT, when set High, enables the Multi-channel write operations on CHx. This may be used to set several channels to mostly the same conditions. For a parallel search for one satellite, operations such as setting each Carrier DCO to the same frequency; or during that search, to adjust all selected channels by the same value (such as a Code Slew to shift the code phases together to a new search area) could use this feature.

All CHx\_SELECT are set low by a (hardware or software) master reset.

PROG\_ACCUM\_INT (Write address)

Bits 15 to 13: Not Used.

Bits 12 to 0: ACCUM INT Division Ratio.

The PROG\_ACCUM\_INT register location operates in conjunction with the INTERRUPT PERIOD bit of the

SYSTEM SETUP register to set the period of the ACCUM INT output. ACCUM INT is generated by a 13bit binary down counter which counts down to zero. producing an ACCUM INT output. It then loads to a preset value stored in its preset register and starts to count down again. If the preset value is P, the count sequence is P, P-1, P-2, ..., 1, 0, P, P-1. Hence, the counter divides by P+1, producing an output with a period of  $(P+1) \times clock$ period. Since the ACCUM INT counter is clocked by the multi-phase clock, the clock rate is either  $7 \times$  clock period (nominally 40MHz, i.e. 25ns) for Real Input mode, or  $6 \times$ clock period (nominally 35MHz, i.e. 28.571429ns) for Complex Input mode. The value stored in the PRESET register can be modified in one of two ways: either by toggling the INTERRUPT PERIOD or FRONT END MODE bits of the SYSTEM SETUP register, or by writing to the PROG ACCUM INT location. Either of these actions will overwrite the previous contents of the preset value and either one or both methods may be used. If the Interrupt Counter detects an edge on either the INTERRUPT\_PERIOD or FRONT\_END\_MODE bits it will load one of four values in to the PRESET register, depending upon the new value of both INTERRUPT PERIOD and FRONT END MODE. These four presets are as shown in Table 22.

The value for INTERRUPT\_PERIOD = low and FRONT\_END\_MODE = low is also that loaded on a Master Reset. Alternatively the ACCUM\_INT counter may be loaded by writing direct to the PROG\_ACCUM\_INT location. In this case the new ACCUM\_INT period is as follows:

ACCUM\_INT period (Real Input mode) = (PROG\_ACCUM\_INT+1)×7/40MHZ)

ACCUM\_INT period (Complex Input mode) =  $(PROG\_ACCUM\_INT + 1) \times 6/(35MHz)$ 

FRONT_END_MODE (in SYSTEM_SETUP)	INTERRUPT_PERIOD (in SYSTEM_SETUP)	Preset (hex)	ACCUM_INT period
Low (Real input mode)	Low	0B45	$(2885+1)\times(7/40MHz) = 505.0500\mu s$
Low (Real input mode)	High	1313	$(4883+1)\times(7/40MHz) = 854.70000\mu s$
High (Complex input mode)	Low	0B81	$(2945+1)\times(6/35MHz) = 505\cdot02857\mu s$
High (Complex input mode)	High	1379	$(4985+1)\times(6/35MHz) = 854.74286\mu s$

Table 22 ACCUM\_INT period settings

PROG\_TIC\_HIGH, PROG\_TIC\_LOW (Write Address)

**PROG\_TIC\_HIGH Bits 4 to 0:** More significant 5 bits of the TIC counter division ratio when programmed before a PROG\_TIC\_LOW.

**PROG\_TIC\_LOW Bits 15 to 0:** Least significant 16 bits of the TIC counter division ratio.

The PROG TIC HIGH and PROG TIC LOW register locations operate in conjunction with the FRONT END MODE bit of the SYSTEM SETUP register to set the period of TIC. TIC is generated by a 21-bit binary down counter when it reaches zero. It then loads to a preset value stored in its preset register and starts to count down again. If the preset value is P, the count sequence is P, P-1, P-2, ..., 1, 0, P, P-1. Hence, the counter divides by P+1, producing an output with a period of  $(P+1) \times clock$ period. Since the TIC counter is clocked by the multi-phase clock, the clock period is either  $7 \times$  clock period (nominally 25ns at 40MHz) for Real Input mode or 6 × clock period (nominally 28.571429ns at 35MHz) for Complex Input mode. The value stored in the preset register can be modified in one of two ways: either by toggling the FRONT END MODE bit of the SYSTEM SETUP register, switching into Complex Input mode, or by writing to the PROG TIC HIGH/ LOW locations. Either of these actions will overwrite the previous contents of the preset value. If TIC Counter detects an edge on the FRONT END MODE bit it will load one of two values into the preset register, depending upon its new value. These two presets are as shown in Table 23.

The value for FRONT\_END\_MODE = low is also that loaded on a master reset. Alternatively, the TIC counter may be loaded by writing directly to the PROG\_TIC locations. This may be achieved in one of two ways: either

the PROG TIC HIGH value can be written, followed by the PROG TIC LOW value, (at which point the full 21 bits are transferred to the preset register), or just the PROG TiC LOW value may be written to modify the lower 16 bits of the preset value. It should be noted that in the former case, the top 5 bits programmed as PROG TIC HIGH are stored locally to the TIC counter and even if a write to PROG TIC LOW does not directly follow the write to PROG TIC HIGH, the next PROG TIC LOW write will still transfer all 21 bits. It is also necessary to ensure that the write to PROG TIC HIGH precedes the write to PROG TIC LOW, rather than follows it. One further point to note is that the transfer of data to the TIC counter data latches occurs under control of the multi-phase clock write cycle and the write to the preset register happens subsequent to the main internal write. To ensure correct operation, a write to SYSTEM SETUP, toggling the FRONT END MODE bit should not be directly preceded or followed by a write to PROG TIC LOW. In addition to the 300ns delay normally required between write cycles. a further 100ns delay is required between these two types of writes. A write to SYSTEM SETUP toggling the FRONT END MODE bit followed directly by a PROG TIC HIGH/PROG TIC LOW sequence is permissible, since the write to PROG TIC HIGH does not instigate a change of the preset register contents within the TIC counter.

Using the PROG\_TIC write locations the TIC period is as follows:

TIC period (Real Input mode)
= ((PROG\_TIC\_HIGH×65536)+
PROG\_TIC\_LOW+1)×7/40MHZ)

ACCUM\_INT period (Complex Input mode)
= ((PROG\_TIC\_HIGH×65536) +
PROG\_TIC\_LOW+1)×6/35MHZ)

FRONT_END_MODE Preset loaded (hex)		TIC period	
Low (Real input mode)	08B823	(2885+1)×(7/40MHz) = 505·0500μs	
High (Complex input mode)	08E6A4	$(4985+1)\times(6/35MHz) = 854.74286\mu s$	

Table 23 TIC period setting

#### **RESET CONTROL (Write address)**

Bit	Bit name
15	Not used
14	Not used
13	Not used
12	CH11_RSTB
11	CH10_RSTB
10	CH9_RSTB
9	CH8_RSTB
8	CH7_RSTB
7	CH6_RSTB
6	CH5_RSTB
5	CH4_RSTB
4	CH3_RSTB
3	CH2_RSTB
2	CH1_RSTB
1	CH0_RSTB
0	MRB, active low software master reset

Table 24

MRB: When low (a software reset), the effect is similarly to a hardware reset except that the clock generator, the time base generators, measurement data and peripheral functions are not affected and the Status bits ACCUM\_INT, DISCIP, DISCIP\_GLITCH, MEAS\_INT, and TIC are not reset. MRB should be set high to allow access to all of the various registers. MRB is set high by a hardware reset.

CHx RSTB: When set active Low, the reset bit inhibits propagation of the clock phases to the CHx tracking channel and resets the Accumulated Data flags, Code DCO and Carrier DCO accumulators, the I and Q accumulators, and the Code Phase Counter. A CHx RSTB does not reset the Carrier Cycle, Code Slew or the Epoch counters. At the end of the reset, the channel enable resets the code generator to a previously programmed start phase. This is all required for the parallel search algorithm of one satellite signal using many channels in order to start from a known relative code phase on all the channels. All of the control registers in CHx can be programmed and read as usual during the reset state. To restart normal operation in several different channels at the same time, the corresponding CHx RSTB bits should be set high during the same write operation. All CHx RSTB are set low by a master reset, (both hardware and software), so a write low to bit 0 of this register will force a low onto bits 12 to 1 regardless of what was previously on the bus.

Power consumption can be kept to a minimum by setting CHx RSTB Low when a channel is not required.

#### **STATUS (Write Address)**

Bits 15 to 0: not used

A write operation to this location, regardless of the data on the bus, latches the state of all status bits contained in ACCUM STATUS A, ACCUM STATUS B, and ACCUM STATUS C registers. Performing a write to STATUS prior to reading the status registers ensures reading of stable status values. The latch takes effect within 300ns of the trailing edge of the write pulse. The active edge transition of the ACCUM INT signal will also latch the state of the status bits, thus it is not necessary to write to STATUS when the status registers are to be read as a response to the ACCUM INT signal in an interrupt handling routine. The write to STATUS is required only when the status registers are read at times that are not synchronised to the interrupts. These two mechanisms are mutually exclusive and should not be used together; if both are used. a write to STATUS soon after the occurrence of an ACCUM INT signal can result in confused readings. To avoid conflict the INTERRUPT ENABLE in the SYSTEM SETUP register should be set low if writes to STATUS are to be used.

If the INTERRUPT\_ENABLE bit in SYSTEM\_SETUP register is set low, the interrupt will not latch the status bits in the status registers, but a STATUS write access will do so

#### SYSTEM\_SETUP (Write address)

Bit	Bit name
15	Not used
14	Not used
13	Not used
12	Not used
11	Not used
10	MEAS_INT_SOURCE
9	OPS-DRIVE-SEL
8	IPS_3V_MODE
7	INTERRUPT_PERIOD
6	FRONT_END_MODE
5	INTERRUPT_ENABLE
4	DISCOP_SELECT_100KHZ
3	DISCOP_SELECT TIMEMARK
2	DISCOP_SELECT_CH0_DUMP
1	DISCOP
0	CARRIER_MIX_DISABLE

Table 25

**MEAS\_INT\_SOURCE:** When set high the MEAS\_INT output is cleared by a read of MEAS\_STATUS\_A, when low by a read of ACCUM\_STATUS\_B. A master reset forces the MEAS\_INT\_SOURCE bit low.

**OPS\_DRIVE\_SEL:** When set high this control bit increases the size of the output driver on ACCUM\_INT, MEAS\_INT, and D<15:0> pins so as to increase the drive of these pins if they are driving a large load. Master reset forces OPS\_DRIVE\_SEL low.

**IPS\_3V\_MODE:** When set high this control bit sets the input buffers on SIGN0, MAG0, SIGN1, and MAG1 for signals centred on mid-supply, for use with a front end running from a 3V supply. When low, it sets the thresholds to TTL levels for 5V operation. Master reset forces IPS\_3V to low.

INTERRUPT\_PERIOD: When low, the interrupt period is set to approximately 505µs and when high it is set to 854s. For more detail see the description of PROG\_ACCUM\_INT on page 38. Master reset forces INTERRUPT\_PERIOD bit to low.

**FRONT\_END\_MODE:** Selects either Real\_Input mode when low or Complex\_Input mode when high. Master reset forces FRONT\_END\_MODE to low.

**INTERRUPT\_ENABLE:** When set low the effect of the ACCUM\_INT and MEAS\_INT interrupts are disabled (masked) and when set high both are enabled. Master reset forces INTERRUPT\_ENABLE Low.

**Bits 4 to 1:** The signal provided on the DISCOP pin can be selected according to Table 26.

Bit				Signal on DISCOR output	
4	3	2	1	Signal on DISCOP output	
0	0	0	0	0 (Reset condition)	
0	0	0	1	1	
0	Х	1	Х	Ch0 DUMP	
0	1	0	Х	Timemark	
1	Х	Х	Х	100kHz square wave	

**Table 26 DISCOP selection** 

**CARRIER\_MIX\_DISABLE:** When high the Carrier mixers are all driven by a fixed '+1' level on the Carrier DCO input port, so that the input data is passed unaltered to the Code mixer. Master reset forces the CARRIER\_MIX\_DISABLE bit low.

#### TEST\_CONTROL (Write address)

Bit	Bit name
15 to 12	Not used
11 to 9	PATH_SEL<2:0>
8	EN_SCANPATH
7	Not used
6	TEST_CACODES
5	TEST_DATA
4	TEST_SOURCE
3	TM_TEST
2	FE_TEST
1	EN_DUMMYTICS
0	EN_DUMMYDUMP

Table 27

The function of the TEST\_CONTROL register is purely to enable various test modes. A master reset (NRESET low) will set all bits to low, giving normal operation.

EN\_DUMMYDUMP: When high, this bit changes the function of the NOPC/NINTELMOT input pin to be a DUMMYDUMP input, and if in Standard Interface Mode it also forces the microprocessor mode to Motorola. A DUMMYDUMP will operate in the same way as a normal DUMP (reset all of the code generators and transfer the contents of all integrators into the Accumulated Data registers). Each low to high transition of NOPC/NINTELMOT will cause a DUMMYDUMP and if NOPC/NINTELMOT is already high when EN\_DUMMYDUMP is set, one will also occur immediately. Selecting Dummy dump mode does not inhibit normal DUMP events. The NOPC/NINTELMOT pin must be held high for at least 200 ns for each DUMMYDUMP.

**EN\_DUMMYTICS:** When High this bit changes the function of the DISCIP input pin to a DUMMYTIC input. This replaces the TIC from the timebase generator so that a TIC effect will only occur when there is a low to high transition on DISCIP, to latch new Measurement Data. The DISCIP pin must be held high for at least 200ns for each DUMMYTIC.

**FE\_TEST:** When high this test control forces the SIGN input to channel 11 and the MAG input to channel 5 both to low. This allows the evaluation of the front end SIGN (on channel 5) and MAG (on channel 11) duty cycles. The front end to be tested is selected by the SOURCESEL bits in CH5\_SATCNTL and CH11\_SATCNTL. To get the SIGN and MAG count correctly into the accumulators, both the carrier and code mixers must be made transparent.

The carrier mixing may be disabled by either (1) Setting CARRIER\_MIX\_DISABLE (bit 0 in SYSTEM\_SETUP) to high to force a +1 on the Carrier DCO inputs to all channels or (2) if continued position finding is required from the other channels during the test, by setting CH5\_ and CH11\_CARRIER\_DCO\_INCR to all 0s, to give a constant level (zero frequency). This level should be set to a known value by putting channels 5 and 11 briefly into the reset state (by using RESET\_CONTROL register bits 6 and 12) during the time their Carrier DCOs are programmed to zero frequency. This reset forces the phase to all 0s and hence the drives to the Prompt in-phase mixer to a fixed +1 and not a randomly selected -2, -1, +1, or +2 that would result from just setting the frequency.

The C/A code mixing must be disabled by setting CODE\_OFF/ONB (bits 11 in both CH5\_ and CH11\_SATCNTL) to High. However, as the period of the count is set by the DUMPs from the Code Generator, the DCO clock to the Code Generator must be set to the

required frequency by programming the Code DCO even though the code output is disabled. A typical value is the frequency for the nominal code chipping rate, so that the SIGN and MAG counts are over a millisecond.

The results of monitoring the front end of the receiver may be used for fault diagnosis and also for tuning the parameters in the software for optimum satellite tracking with the particular front end or SIGN/MAG duty cycle.

To find the duty cycle of the SIGN signal, channel 5 is used. The In-phase accumulator CH5\_I\_PROMPT will add +1 for each SIGN sample at high and will add -1 for each SIGN sample at low, so if the duty cycle is correct at 50%, the sum will always be close to zero and only differ by the imbalance of sampling at the beginning and end of the integration period.

The duty cycle may be calculated as follows:

N = Total no. of samples in integration period

N<sub>SIGN1</sub> = Total no. of samples for which SIGN was high

N<sub>SIGN0</sub> = Total no. of samples for which SIGN was low

ACC5 = Total value in the CH5\_1\_PROMPT accumulator, as read after a DUMP.

 $N = N_{SIGN1} + N_{SIGN0}$ 

 $ACC5 = N_{SIGN1} - N_{SIGN0}$ 

SIGN duty cycle =  $R s = N_{SIGN1}/N = (N+ACC5)/2N$  (nominally 50%)

To find the duty cycle of the MAG signal, channel 11 is used. The In-phase accumulator CH11\_I\_PROMPT will add -3 for each MAG sample at high and will add -1 for each MAG sample at low. If the duty cycle is correct (30%), the sum will be  $-1.6\times$  (Number of samples) plus an allowance for the imbalance of sampling at the beginning and end of the integration period. The duty cycle may be calculated as follows:

N = Total No of samples in integration period

 $N_{MAG3}$  = Total number of samples for which MAG was high  $N_{MAG1}$  = Total number of samples for which MAG was low ACC11 = Total value in the CH11\_I\_PROMPT accumulator, as read after a DUMP.

 $N = N_{MAG3} + N_{MAG1}$ 

 $ACC11 = -3 \times (N_{MAG3}) - N_{MAG1}$ 

MAG duty cycle, Rm =  $N_{MAG3}/N = -(N+ACC11)/2N$  (nominally 30%).

**TM\_TEST:** When High this bit puts all the Tracking Modules into a test mode, where it is possible to write to all CHx\_CARRIER\_CYCLE\_COUNTERS and all CHx\_CODE\_PHASE\_COUNTERs.

**TEST\_SOURCE:** When high this bit enables a self-test generator formed from the CH0 Code Generator. The data replaces the SIGN0 and MAG0 inputs. It has a chip rate and phase set by the CH0\_CODE\_DCO and a carrier frequency set by the CH0\_CARRIER\_DCO. The code is set by writing the appropriate start value into the CH0\_SATCNTL register, and the CH0\_SLEW\_COUNTER can be programmed to delay the start of the code generation by a number of half code chips.

The three most significant bits of the Carrier DCO are decoded to give the SIGN with 50% of highs and the MAG with 25% of highs. The sign of the data pattern is set by TEST DATA, EXORed with the CH0 C/A code.

**TEST\_DATA:** This bit sets the sign of the modulation of the test data generated when TEST SOURCE is set.

**TEST\_CACODES:** When high, the inverted PROMPT codes for all channels, 0 to 11, are available for output on data bus bits 0 to 11 and can be seen in parallel by a read to any CH6 to CH11 read address.

**EN\_SCANPATH:** When high the chip is in scan test mode, whereby:

DISCIP 1	becomes	SCAN_IN
DISCOP	becomes	SCAN_OUT
MULTI_FN_IO	becomes	SCANCLK
NOPC/NINTELMOT	becomes	SCANSEL

It should be noted that the DISCOP = SCAN\_OUT function may be over-ridden by the DISCOP\_SELECT\_100KHZ function of SYSTEM\_SETUP. It should also be noted that for correct operation the MULTI\_FN\_IO pin should be configured as a Discrete or Scan Clock Input via the IO CONFIG register.

**PATH\_SEL<2:0>:** To allow for simple factory testing of the chip, the GP2021 contains six separate scan paths, one for each of the major counters in the chip. Only one of these paths may be enabled at any time and the scan path to be used is selected via the PATH\_SEL <2:0> bits as shown in Table 28.

PATH_SEL <2:0>	Scan path selected	
000	RTC counters	
001	ACCUM_INT counter	
010	TIC counter	
011	100kHz output counter	
100	Timemark pulse width counter	
101	PLL_LOCK filter counter	
11X	Not used	

Table 28

#### **TIMEMARK CONTROL (Write address)**

Bit	Bit name
15 to 7	Not used
6 to 2	FREE_RUN_RATIO
1	FREE_RUN_TIMEMARK
0	ARM_TIMEMARK

Table 29

The TIMEMARK generator operates in one of two ways. either in armed mode or in free run mode. (Note that the term 'armed' is not related to ARM). In armed mode setting the ARM TIMEMARK bit arms the TIMEMARK generator which subsequently produces a TIMEMARK output pulse coincident with the next rising edge of TIC. This then resets the ARM TIMEMARK bit ready for a new arming sequence in the future. Alternatively, the TIMEMARK generator can be used in free run mode, by setting the FREE RUN TIMEMARK bit high. This disables the ARM TIMEMARK bit. In free run mode a TIMEMARK pulse is produced coincident with the first rising edge of TIC after the FREE RUN TIMEMARK bit has been set, and then on an integer number of TICs determined by the FREE RUN RATIO bits. In free run mode the TIMEMARK period is:

TIMEMARK period = (FREE\_RUN\_RATIO+1 )×TIC Period (Free run mode)

All the bits of TIMEMARK\_CONTROL are cleared to low by NRESET.

#### X DCO INCR HIGH1: (Write Address)

This register may be used to write the high bits for any Carrier or Code DCO in any channel. A write to X\_DCO\_INCR\_HIGH must always be followed by a write to the appropriate CHx\_CARRIER\_DCO\_INCR\_LOW or CHx\_CODE\_DCO\_INCR\_LOW to define the destination and to complete the action.

Using X\_DCO\_INCR\_HIGH rather than CHx\_CARRIER \_DCO\_I NCR\_H IGH gives a quicker way of loading the whole DCOs values because the \_LOW write may follow the X\_DCO\_INCR HIGH write immediately (without incurring a 300ns delay)

#### **Peripheral Functions Registers**

The addresses for the Peripheral Functions Registers are shown in the GP2021 Register Map.

These registers may be either 8 or 16 bits wide. Registers which are byte wide are accessed via the top 8 bits of the data bus, D<15:8>. During a byte wide read D<7:0> are held low.

Each of the registers for the Real Time Clock, Dual UART, System and General Control functions are described below.

#### **Real Time Clock and Watchdog**

The registers in the Real Time Clock are all byte wide.

#### RTC LS, RTC 2ND, RTC MS, (Read Addresses)

The clock time is output in these three eight-bit read only registers. All three registers are latched when a read is performed of the LS Byte Register, so this should be read first. In Power Down mode the clock continues to run but access to these registers is not possible.

#### **CLOCK RESET (Write Address)**

A write to this address resets the clock divider and counter, regardless of the data word written.

#### **WATCHDOG RESET (Write Address)**

A write to this address resets the watchdog timer, regardless of the data word written.

#### **DUART**

All the registers within the DUART are byte wide.

#### **CONFIG A, CONFIG B (Write Address)**

These registers allow the UARTs to be configured for receive baud rate, parity and loopback. The configuration bit functions are shown in Table 30. Other binary combinations of bit settings (not shown in Table 30) are invalid and should not be used as the results would be indeterminate. Note that all bits are set Low by a UARTA/B or a System reset, thus causing UARTA/B to default to a receive baud rate of 300, no parity and no loopback.

В	it se	ettir	ng	Function			
11	10	9	8	Receiver Baud rate			
0	0	0	0	300			
0	0	0	1	600			
0	0	1	0	1200			
0	0	1	1	2400			
0	1	0	0	4800			
0	1	0	1	9600			
0	1	1	0	19.2k			
0	1	1	1	38.4k			
1	0	0	0	76.8k			
13	12			Parity			
0	0			No parity: bit not set or checked for			
1	1			Odd parity: parity added so that the			
				total number of '1's in the word is even			
1	0			Even parity: parity added so that the			
				total number of '1's in the word is even			
14				Loopback			
0				No loopback: normal operation			
1				Loopback: the Tx output drives the Rx			
				input and Tx pin is held HIGH			
15				Test mode			
0				Test mode bit in ChA used for chip			
				testing only. This bit must be set Low			
				for Normal operation			
1				Test mode			

**Table 30 Configuration of UARTs** 

#### STATUS A, STATUS B (Read Address)

Reading from these register addresses will give the current value of the channels status bits. The Status bit functions are as shown in Table 31. When reset, all bits are low.

Bit	Set (high) by	Clear (low) by	
8	RX valid data available	No RX data	
9	RX FIFO full	RX FIFO not full	
10	RX FIFO overflow	Read of UART	
		status register	
11	TX transmitting	TX register empty	
12	TX FIFO full	TX FIFO not full	
13	Parity error occurred	Read of UART	
		status register	
14	Framing error	Read of UART	
		status	
15	Not used (held high)		

Table 31 Status bits available when reading the STATUS A and STATUS B registers

RESET\_A, RESET\_B (Write Address)

Writing to this register will reset the UART A/B, regardless of the data word written.

TX\_DATA\_A,
TX\_DATA\_B,
RX\_DATA\_A,
RX\_DATA\_B

#### (Write / Read Address)

These are Read/Write addresses to UARTs A and B, which allow bytes to be written to the TX FIFOs or received from the RX FIFOs.

# TX\_RATE\_A, TX\_RATE\_B (Write Address)

These are write registers for UARTs A and B, which allow the Transmit baud rates to be set as shown in Table 32. Other binary combinations of bit settings (not shown in Table 32) are invalid and should not be used as the results would be indeterminate.

	Bit se	etting		Transmit Baud rate		
11	10	9	8	Transmit Dadd rate		
0	0	0	0	300		
0	0	0	1	600		
0	0	1	0	1200		
0	0	1	1	2400		
0	1	0	0	4800		
0	1	0	1	9600		
0	1	1	0	19·2k		
0	1	1	1	38·4k		
1	0	0	0	76·8k		

Table 32 Transmit Baud rate settings in the TX\_RATE\_A and TX\_RATE\_B registers

Bits 12 to 15 are not used and may be set high or low. Note that bits 8 to 11 are set low by a UART A/B or System reset, thus causing the Transmitter to default to a Baud rate of 300.

#### SYSTEM CONTROL

### WAIT\_STATE (Write/Read address)

This is a Read/Write register (8 bits wide), which allows the ROM (Read/Write) wait state and EEPROM and Spare (Read) wait states to be configured via bits 8 to 11. EEPROM and Spare read accesses consist of 2 to 5 wait states whilst MCLK is high, increasing the read access time, followed by 1 trailing wait state whilst MCLK is low to allow for a greater bus release time. The Chip revision number appears on bits 12 to 15 when read.

Bit 9	Bit 8	ROM (Read/Write) Wait states
0	0	1
0	1	2
1	0	3 (note1)
1	1	Unused (3)
Bit 10	Bit 11	EEPROM and Spare (Read) Wait states
0	0	2+1
0	1	3+1
1	0	4+1
1	1	5+1 (note 1)

Note 1. The conditions after a reset are ROM Wait states = 3, EEPROM and Spare Wait states = 5+1

Table 33 WAIT STATE register settings

### SYSTEM\_CONFIG (Write/Read Address)

This is a Read/Write register (8 bits wide), which allows the Watchdog Function to be enabled and disabled via bit 9. Note that following a system reset this bit is set low, thus enabling the watchdog.

Bit 9	Watchdog function			
0	Enabled			
1	Disabled			

Table 34 Enabling the Watchdog function through the SYSTEM CONFIG register

Bits 5 to 10 and 13 are not used and could be set high or low. The Chip revision number appears on bits 12 to 15 when read.

#### SYSTEM ERROR STATUS

This is an 8-bit wide read only register, and allows the source of a system reset to be determined via bits 11 to 8. All bits are reset low after being read. The Chip revision number appears on bits 12 to 15 when read.

- **Bit 8:** Set during a system reset, when the source of the reset is a PLL LOCK failure.
- **Bit 9:** Set during a system reset, when the source of the reset is the Watchdog.
- **Bit 10:** Set during a system reset, when the source of the reset is a POWER GOOD failure.
- **Bit 11:** Set during a system reset, when the source of the reset is the external NRESET\_IP. Note that this reset source is only available in Standard Interface mode.

# CHIP\_REVISION (Read Addresses)

The CHIP\_REVISION register is a read only register which exists as the high 4 data bits of the Wait state, System Configuration and System Error Status registers. A read of any of these three registers will output the CHIP\_REVISION information on bits 15 to 12. This register is intended to allow software discrimination of revisions of the GP2021, both pre-production revisions and possible customer-specific variants. The initial production version of the GP2021 will have a CHIP\_REVISION of 0011.

# DATA\_RETENT (Write/Read Address)

This is a byte wide Read/Write register which can be used to store a predetermined value, which can be interrogated in order to determine whether a total power loss (below the data retention level) has occurred.

#### **GENERAL CONTROL**

#### IO\_CONFIG (Write/Read Address)

The IO\_CONFIG register is a full 16-bit wide read/write register containing two separate elements: a 16-bit wide read location which allows the controlling microprocessor to view the input level on all the Discrete and Multi Function inputs, and a 16-bit wide write location for configuration of the Discrete and Multi Function I/O pins.

**IO\_CONFIG Read:** A read of the IO\_CONFIG address will latch the logic level of a number of input pins and output these levels to the microprocessor via the 16-bit data bus. This allows the microprocessor to read the input levels on all the discrete and multi-function Inputs from a single location. The bit allocations are as sown in Table 35.

It should be noted that the usefulness of a number of these inputs as discrete Inputs for System Control is dependent upon the Interface Mode of the GP2021. For instance, it is possible to use the NOPC/NINTELMOT pin as a discrete input in ARM System mode if the DEBUG function is disabled, whereas this pin could not be used as a discrete

input in Standard Interface mode. Similarly, NMREQ could be used as a discrete input in Standard Interface mode but not in ARM System mode.

Bit	Input pin			
15	RXB			
14	RXA			
13	DISCOP			
12	DISCIP			
11	MAG1			
10	SIGN1			
9	MAG0			
8	SIGN0			
7	MULTI_FN_IO			
6	NBRAM			
5	DISCIO			
4	NARMSYS			
3	NBW/WRPROG			
2	NMREQ			
1	NOPC/NINTELMOT			
0	NRW			

Table 35

IO\_CONFIG Write: The IO\_CONFIG write location allows the configuration of the multi-purpose I/O pins DISCIO and MULTI\_FN\_IO. The register bit assignments are as shown in Table 36

Bit	Bit name				
15 to 13	Not Used				
12	MULTI_FN_IO_SELECT_TIMEMARK				
11	MULTI_FN_IO_SELECT_1 00KHZ				
10	MULTI_FN_IO_LEVEL				
9 to 8	MULTI_FN_IO_CONFIG				
7 to 4	Not Used				
3	DISCIO_SELECT_TIMEMARK				
2	DISCIO_SELECT_1 00KHZ				
1	DISCIO_LEVEL				
0	DISCIO_CONFIG				

Table 36

**DISCIO\_CONFIG:** When set high this bit configures the DISCIO pin as a discrete output, when low the DISCIO pin is configured as a discrete input. NRESET low sets the DISCIO CONFIG bit low.

#### DISCIO\_SELECT TIMEMARK, DISCIO\_SELECT\_100KHZ, DISCIO\_LEVEL

When configured as an output, the DISCIO pin can be set up to give a signal as determined by Table 37.

At power on reset, the DISCIO output value = 0 setting is chosen. The 100kHz square wave is derived from the Master Clock and is useful for measuring its drift.

	Bit		DISCIO cutruit value			
3	2	1	- DISCIO output value			
0	0	0	0			
0	0	1	1			
0	1	Х	100kHz square wave			
0	Χ	Х	TIMEMARK			

**Table 37 DISCIO selection** 

#### MULTI\_FN\_IO\_SELECT TIMEMARK, MULTI\_FN\_IO\_SELECT\_100KHz, MULTI\_FN\_IO\_LEVEL:

When configured as an output, the MULTI\_FN\_IO pin can be setup to give a signal as shown in Table 38.

	Bit		MULTI EN IO output volue			
12	11	10	MULTI_FN_IO output value			
0	0	0	0			
0	0	1	1			
0	1	Χ	100kHz square wave			
0	Χ	Х	TIMEMARK			

Table 38 MULTI\_FN\_IO selection

**MULTI\_FN\_IO\_CONFIG:** These 2 bits configure the function of the MULTI FN IO input as shown in Table 39.

Bits <9:8>	MULTI_FN_IO_CONFIG function				
00	Digital system Test Enable signal				
01	TRIGGER input				
10	Discrete input (see description)				
11	Discrete output				

Table 39

NRESET low sets bits 9 and 8 to Low.

# MULTI\_FN\_IO as Digital System Test Enable Input: Allows testing of the digital section of the system board. In this mode, when MULTI\_FN\_IO is high, the RXA pin replaces the differential master clock Inputs and the RXB pin acts as an RTC Reset input. The PLL\_LOCK filter is also disabled. For more information see the digital system Test mode description.

**MULTI\_FN\_IO** as **TRIGGER Input:** The DEBUG function is enabled if in ARM System mode and the MULTI\_FN\_IO pin acts as the TRIGGER input to the DEBUG block. For more information see the DEBUG Block Description.

**MULTI\_FN\_IO** as **Discrete Input/Scan Clocks:** In this mode the pin has two functions: As a discrete input and as

the Scan Clocks input for chip scan path testing. It should be noted that the MULTI\_FN\_IO pin should only be used as a discrete input with caution. Since the Master Reset default is for MULTI\_FN\_IO to act as the Digital System Test Enable input it must be guaranteed that anything driving this pin as a discrete input must have a low output until the IO\_CONFIG register can be written to and Discrete Input Mode enabled.

# TEST\_CONFIG (Write Address)

The TEST\_CONFIG register is a 3-bit wide write only register which complements the TEST\_CONTROL register of the Correlator but contains chip test control bits for Peripheral Functions. The register bit assignments are shown in Table 40.

Bit	Bit name			
10	RTC_TEST_COUNT			
9	RTC_RESET ENABLE			
8	WDOG_RESET_DISABLE			

Table 40

RTC\_TEST\_COUNT: When set high this bit splits up the 24-bit counter of the RTC which counts seconds into a number of 4-bit counters to allow easier chip testing. The 24-bit RTC Counter is not Scan Path testable. A Master Reset sets the RTC TEST COUNT bit low.

RTC\_RESET\_ENABLE: When set high this bit enables the RXB pin to act as an RTC reset input, which then resets the RTC and Watchdog counters whenever RXB is taken high. This function is intended for factory testing of the GP2021. NRESET low forces the RTC\_RESET\_ENABLE bit low.

WDOG\_RESET\_DISABLE: When set high this bit inhibits the production of System resets from the Watchdog counter, without disabling the Watchdog counter itself. This function is intended for Scan Path Testing of the Watchdog and RTC Counters. NRESET low forces the WDOG\_RESET\_DISABLE bit low.

### DATA\_BUS\_TEST (Write / Read Address)

This is a 16-bit read/write register, whose function is to allow a simple test of the 16- bit wide data bus to be performed, by writing a 16-bit number and by checking that the same value can be read back.

#### **ELECTRICAL CHARACTERISTICS**

 $T_{AMB} = -40$  °C to +85 °C,  $V_{DD} = 5V \pm 10$ %. The input thresholds and output voltage limits for the logic signal pins are tested and guaranteed by production test. All other parameters are guaranteed by characterisation and design. They apply within the specified ambient temperature and supply voltage ranges unless otherwise stated.

	Value		•		
Symbol	Min.	Тур.	Max.	Units	Conditions
I <sub>DD</sub>					
		22		mA	
		27		mA	
		32		mA	
		38		mA	
		20	150	μΑ	$V_{DD} = 2.2V \text{ to } 3.3V \text{ (note 1)}$
		50	500	μA	V <sub>DD</sub> = 5·0V (note1)
$V_{BATT}$	2.2			·V	Power Down mode
	2.0			V	
	0.8			V	
$V_T+$		1.9	2.3	V	$V_{DD} = 3V$
V <sub>T</sub> -	0.8	1.2		V	$V_{DD} = 3V$
$V_{H}$	0.35	0.7		V	$V_{DD} = 3V$
$V_T+$		1.72	2.32	V	
$V_T-$	0.72	1.10		V	
$V_{H}$	0.3	0.62		V	
					Note 2
V <sub>IH</sub>	0.8V <sub>DD</sub>			V	DC coupled
	55		0.2V <sub>DD</sub>	V	DC coupled
	130			mVp-p	DC coupled
		4.3		V	•
	600			mVp-p	AC coupled
fosc		32	1000	kHz	
	220	550	2500	μ <b>A</b> /V	
	20	56	100	kΩ	
		32.768		kHz	
		50	100	kΩ	
		10		pF	
	V <sub>BATT</sub> V <sub>T</sub> + V <sub>T</sub> - V <sub>H</sub> V <sub>T</sub> + V <sub>T</sub> - V <sub>H</sub>	V <sub>BATT</sub> 2·2  2·0 0·8  V <sub>T</sub> + V <sub>T</sub> - 0·8 V <sub>H</sub> 0·35  V <sub>T</sub> + V <sub>T</sub> - 0·72 V <sub>H</sub> 0·8V <sub>DD</sub> 130 600  f <sub>OSC</sub> gm 220 Z <sub>O</sub> 20	Symbol         Min.         Typ.           I <sub>DD</sub> 22 27 32 32 38 20 50           V <sub>BATT</sub> 2·2           V <sub>T</sub> + V <sub>T</sub> - 0·8 1·2 0·35 0·7           V <sub>T</sub> + V <sub>T</sub> - 0·72 1·10 0·62           V <sub>I</sub> 0·8V <sub>DD</sub> 0·62           V <sub>I</sub> 130 4·3 600           f <sub>OSC</sub> gm Z <sub>O</sub> 220 550 20 56           32·768 50           50	Nin.   Typ.   Max.	Name

#### **Electrical Characteristics** (continued)

			Value	)	Units		
Characteristic	Symbol	Min.	Тур.	Гур. Мах.		Conditions	
Output types OP6 and OPT6							
Output voltage high	V <sub>OH</sub>	0.8V <sub>DD</sub>			V	$I_{OH} = -12mA$	
Output voltage low	$V_{OL}$			0.4	V	I <sub>OH</sub> = 12mA	
Output short circuit current	Ios		270		mA	$V_{DD} = max, V_O = V_{DD}$	
			150		mA	$V_{DD} = max, V_O = 0V$	
Tri-state output leakage current	l <sub>oz</sub>		<10		μΑ	$V_{OH} = GND \text{ or } V_{DD}$	
Output capacitance	C <sub>OUT</sub>		5		pF		
Output types OP3 and OPT3							
Output voltage high	V <sub>OH</sub>	0.8V <sub>DD</sub>			V	$I_{OH} = -6mA$	
Output voltage low	$V_{OL}$			0.4	V	I <sub>OH</sub> = 6mA	
Output short circuit current	Ios		135		mA	$V_{DD} = max, V_O = V_{DD}$	
			75		mA	$V_{DD} = max, V_O = 0V$	
Tri-state output leakage current	l <sub>oz</sub>		<10		μΑ	$V_{OH} = GND \text{ or } V_{DD}$	
Output capacitance	C <sub>OUT</sub>		5		pF		
Output types OP2 and OPT2							
Output voltage high	V <sub>OH</sub>	0.8V <sub>DD</sub>			V	$I_{OH} = -4mA$	
Output voltage low	$V_{OL}$			0·4	V	$I_{OH} = 4mA$	
Output short circuit current	Ios		90		mA	$V_{DD} = max, V_O = V_{DD}$	
			50		mA	$V_{DD} = max, V_O = 0V$	
Tri-state output leakage current	loz		<10		μΑ	$V_{OH} = GND \text{ or } V_{DD}$	
Output capacitance	C <sub>OUT</sub>		5		pF		
Output types OP1 and OPT1							
Output voltage high	V <sub>OH</sub>	0⋅8V <sub>DD</sub>			V	$I_{OH} = -2mA$	
Output voltage low	$V_{OL}$			0·4	V	$I_{OH} = 2mA$	
Output short circuit current	Ios		45		mA	$V_{DD} = max, V_O = V_{DD}$	
			25		mA	$V_{DD} = max, V_O = 0V$	
Tri-state output leakage current	loz		<10		μΑ	$V_{OH} = GND \text{ or } V_{DD}$	
Output capacitance	C <sub>OUT</sub>		5		pF		

- These values apply when the 32kHz oscillator circuit is not running.
   The input pair CLK\_T, CLK\_I may be driven by CMOS logic levels (DC coupled) or A. coupled or by a low amplitude differential sinewave (DC coupled e.g. GP2010). If a single logic level is to be used this should drive CLK\_T with the CLK\_I pin biased to mid supply. If a single sinewave clock is to be used this should drive CLK\_T through a capacitor, with both of the CLK\_T/CLK\_I pins biased to approximately two thirds supply. See Figure 24 for a suggested circuit.
- 3. Any unused inputs must be tied high or low.
- 4. The operation of the feature whereby input levels and output drive strengths can be modified is not guaranteed by the existing factory testing procedure.

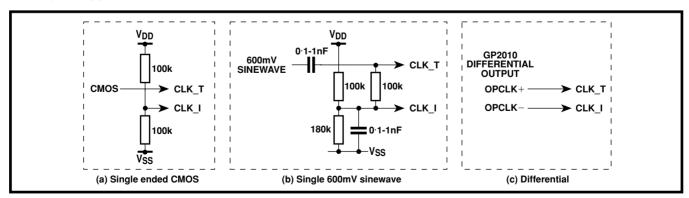


Figure 24 Clock interconnect options

#### Pin Types

Table 41 defines the type of each GP2021 pin and refers to additional notes relating to them.

1 2 3 4 5 6	MULTI_FN_IO POWER_GOOD NRESET_OP NARMSYS	I/O I	ST2	$75$ k $\Omega$ dn	OPT3	\( = 0	
3 4 5 6	NRESET_OP	I		/ UN24 UII	I OFIS I	YES	1
4 5 6			ST2	None	-	-	
5 6	NARMSYS	0	-	-	OP3	NO	
6		ST2	None	-	-	-	
6	XIN	I	XTLI	None	-	-	Xtal In
	XOUT	0	-	-	XTLO	NO	Xtal Out
	TXA	0	-	-	OP6	NO	1 1.0 0 0.1
8	TXB	0	-	-	OP6	NO	
9	RXA	i	ST2	None	-	-	
10	RXB	i	ST2	None	_		
11	NROM/NC	0	-	-	OPT6	YES	9
12	NEEPROM/NC	0	_	_	OPT6	YES	8
13	NSPARE CS/NC	0	_		OPT6	YES	9
14	_		-	-	OF 10	TES	9
	V <sub>DD</sub>	V <sub>DD</sub>	-		-	-	
15	V <sub>SS</sub>	V <sub>SS</sub>	-	-	1	- NO	10
16	NRAM/NC	0	-	-	OP6	NO	10
17	NW0/NCOP .	-	-	-	OP6	NO	11
18	NW1/NCOP	-	-	-	OP6	NO	10
19	NW2/NCOP	-	-	-	OP6	NO	10
20	NW3/NCOP	-	-	-	OP6	NO	10
21	NRD/NCOP	-	-	-	OP6	NO	11
22	ARM_ALE / NC	0	-	-	OP6	NO	8
23	DBE/NC	0	-	-	OP6	NO	8
24	ACCUM_INT	0	-	-	OPT1/OPT2	YES	2,6
25	MEAS_INTOP	-	-	-	OPT1/OPT2	YES	2,7
26	NBW/WRPROG	I	TTL	None	-	-	
27	NMREQ/DISCIP2	I	TTL	None	-	-	
28	NOPC/NINTELMOT	I	TTL	None	-	-	
29	NRW/DISCIP3	I	TTL	None	-	-	
30	MCLK/NC	0	-	-	OP6	NO	8
31	ABORT/MICRO CLK	0	-	-	OP3	NO	
32	DISCIO I/O	ST2	None	-	OPT3	YES	
33	A22/READ	ī	TTL/ST2	None	-	-	3
34	V <sub>DD</sub>	$V_{\mathrm{DD}}$	-	-	_	_	
35	V <sub>SS</sub>	Voc	_		_		
36	A21/NCS	V <sub>SS</sub> TTL/ST2	None		_		3
37	A20/WREN	112/012	TTL/ST2	None	_		3
38	A9	i	TTL	None	_		
39	A8	<u>'</u>	TTL	None	<del>  _  </del>		
40	A7	<u>'</u>	TTL	None	<del>                                     </del>	· ·	
41	A6	<u>'</u>	TTL	None	-	<u>-</u> -	
42	A5	<u> </u>	TTL	None	-	<u>-</u>	
	A3 A4	<u>'</u>	TTL			-	
43		I		None	-	-	
44	A3	<u> </u>	TTL	None	-	-	
45	A2	<u> </u>	TTL	None	-	-	
46	A1/ALE_IP	<u> </u>	TTL/ST2	None	-	-	
47	A0/NRESET_IP	l l	TTL/ST2	None	-	-	
48	D0	1/0	TTL	None	OPT3/OPT/6	YES	
49	D1	1/0	TTL	None	OPT3/OPT/6	YES	
50	D2	I/O	TTL	None	OPT3/OPT/6	YES	
51	D3	I/O	TTL	None	OPT3/OPT/6	YES	

Table 41 cont...

Pin no.	Pin name	Pin type	Input type	Pull Up/Dn	Output type	Tristate	Notes
52	D4	I/O	TTL	None	OPT3/OPT6	YES	4,12
53	D5	I/O	TTL	None	OPT3/OPT6	YES	4,12
54	D6	I/O	TTL	None	OPT3/OPT6	YES	4,12
55	$V_{DD}$	$V_{DD}$	-	-	-	-	
56	$V_{SS}$	$V_{SS}$	-	-	-	-	
57	D7	I/O	TTL	None	OPT3/OPT6	YES	4,12
58	D8	I/O	TTL	None	OPT3/OPT6	YES	4,12
59	D9	I/O	TTL	None	OPT3/OPT6	YES	4,12
60	D10	I/O	TTL	None	OPT3/OPT6	YES	4,12
61	D11	I/O	TTL	None	OPT3/OPT6	YES	4,12
62	D12	I/O	TTL	None	OPT3/OPT6	YES	4,12
63	D13	I/O	TTL	None	OPT3/OPT6	YES	4,12
64	D14	I/O	TTL	None	OPT3/OPT6	YES	4,12
65	D15	I/O	TTL	None	OPT3/OPT6	YES	4,12
66	PLL_LOCK	I	ST2	None	-	-	
67	$V_{DD}$	$V_{DD}$	-	-	-	-	
68	DISCOP	0	-	-	OPT3	YES	
69	$V_{SS}$	V <sub>SS</sub>	-	-	-	-	
70	CLK_T	I	Diff	None	-	-	
71	CLK_I	I	Diff	None	-	-	
72	$V_{SS}$	$V_{SS}$	-	-	-	-	
73	SAMPCLK	0	-	-	OP2	NO	13
74	$V_{DD}$	$V_{DD}$	-	-	-	-	
75	NBRAM / DISCIP4	I	ST2	None	-	-	
76	SIGN0		ST2/ST 1	None	-	-	5,13
77	MAG0		ST2/ST 1	None	-	-	5,13
78	SIGN1	I	ST2/ST1	None	-	-	5,13
79	MAG 1		ST2/ST1	None	-	-	5,13
80	DISCIP1	l	ST2	None	-	-	

#### Table 41 (continued)

- Although MULTI FN IO is capable of being used as a discrete input, this is not advised since if this pin is driven high at power up, Digital Test Mode will be selected and correct operation will not ensue.
- Output has power level 1 when OPS\_DRIVE\_SEL is low in the SYSTEM\_SETUP register. Output has power level 2 when OPS\_DRIVE\_SEL is high in the SYSTEM\_SETUP Register.
- 3. Input has TTL thresholds in ARM System mode, but has Schmitt trigger (type ST2) thresholds in Standard Interface mode.
- Output has power level 3 when OPS\_DRIVE\_SEL is low in the SYSTEM\_SETUP Register. Output has power level 6 when OPS\_DRIVE\_SEL is high in the SYSTEM SETUP register.
- Input has Schmitt trigger type ST2 thresholds when IPS\_3V\_MODE is low in the SYSTEM\_SETUP register. When high they have ST1 thresholds.
- Usually connected to NFIQ of the ARM60 processor.
- Usually connected to NIRQ of the ARM60 processor.
- Characterisation data for this pin is with  $C_L = 10pF$ .
- 9. Characterisation data for this pin is with  $C_L = 20$  pF. 10. Characterisation data for this pin is with  $C_L = 30$  pF
- 11. Characterisation data for this pin is with  $C_L = 50pF$ .
- 12. Characterisation data for this pin is with  $C_L = 55pF$ .
- 13. Setup and Hold times for the GPS data applied on pins SIGN0, MAG0, SIGN1 and MAG1 are with respect to the rising edge of SAMPCLK. Setup time = 15ns, Hold time = 1 ns (i.e. data should not change during the period between 15ns and1ns before the rising edge of SAMPCLK; where SAMPCLK is assumed to be unloaded. The SAMPCLK signal will tend to be further delayed by about 0.1 ns/pF of load capacitance).

#### **TIMING CHARACTERISTICS**

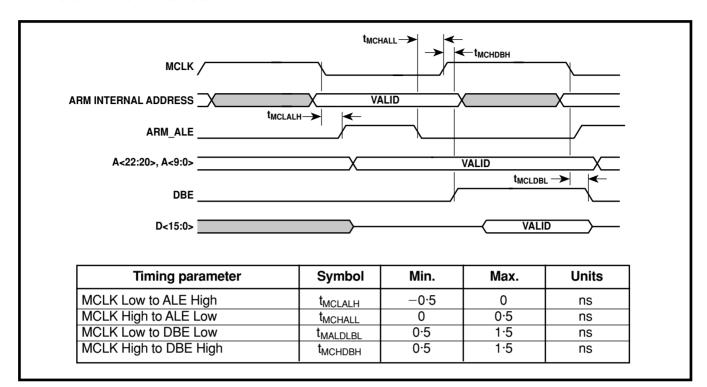


Figure 25 ARM60 interface timings

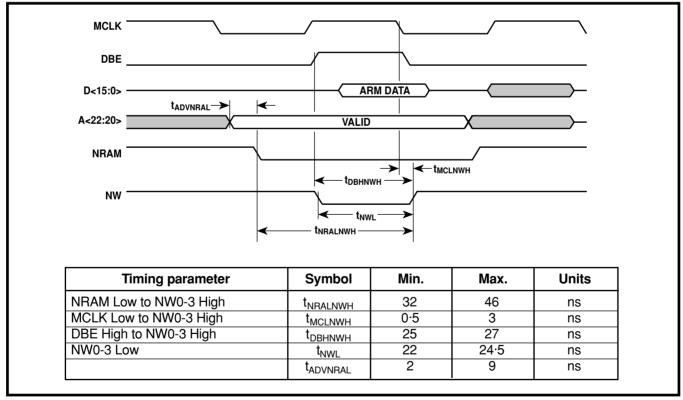


Figure 26 ARM mode RAM Write timings

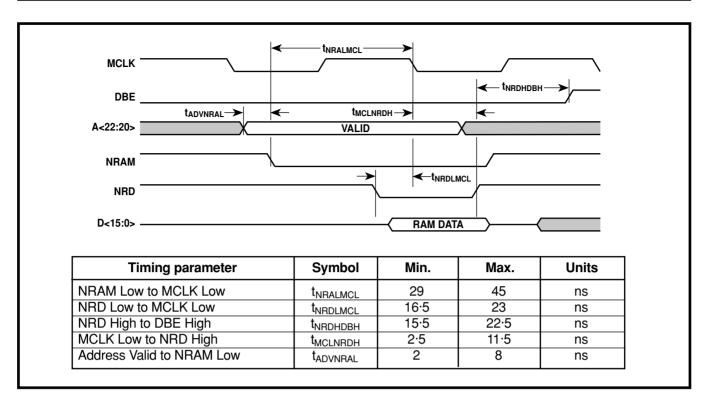


Figure 27 ARM mode RAM Read timings

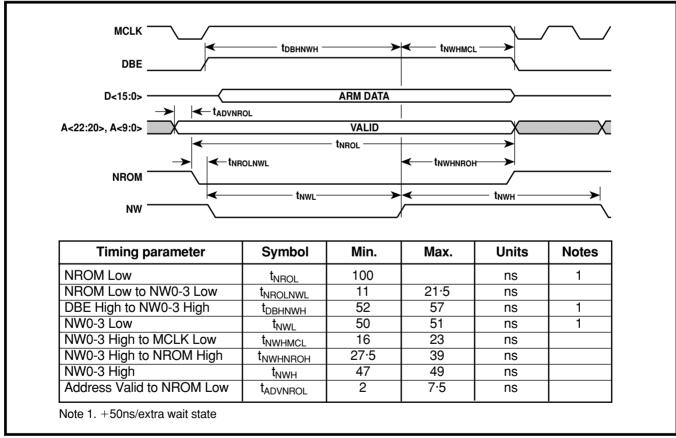


Figure 28 ARM mode ROM (Flash) Write timings

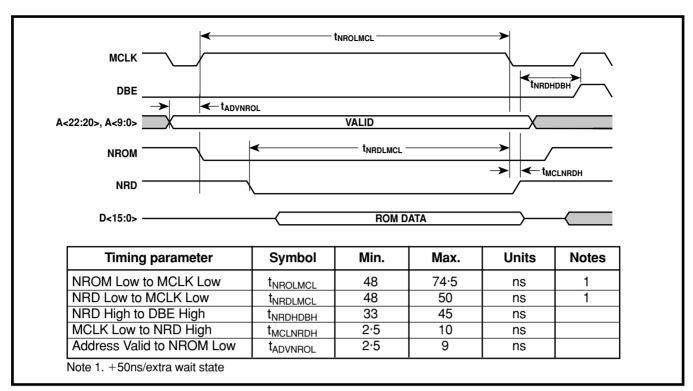


Figure 29 ARM mode ROM Read timings

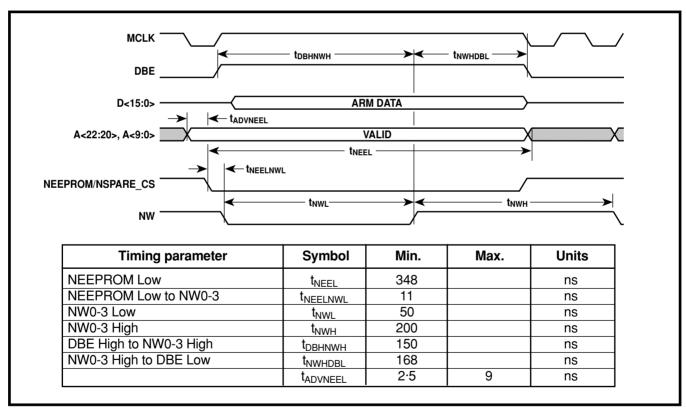


Figure 30 ARM mode EEPROM Write timings

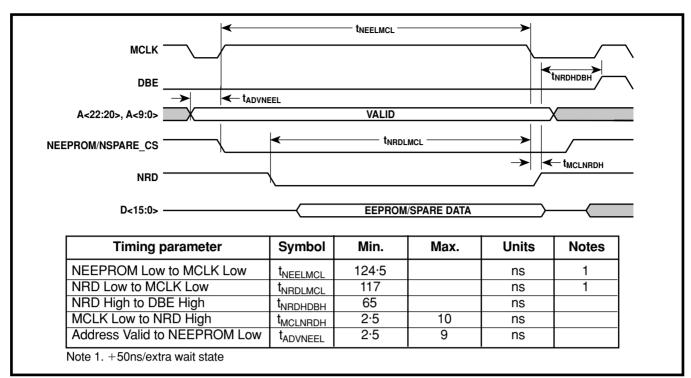


Figure 31 ARM mode EEPROM Read timings


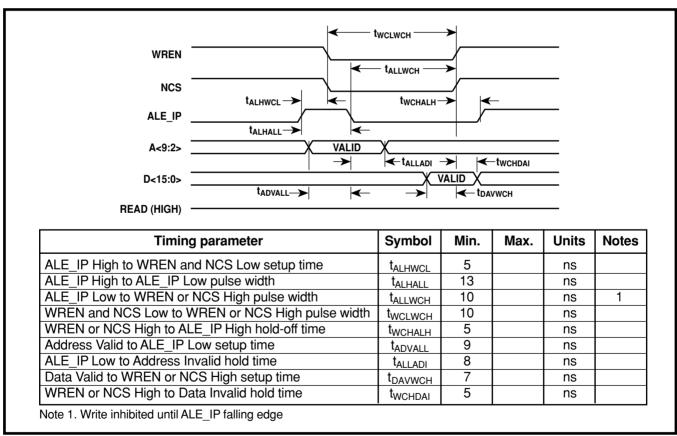


Figure 32 Intel 486 mode Write (NINTELMOT = 0, WPROG = 1)

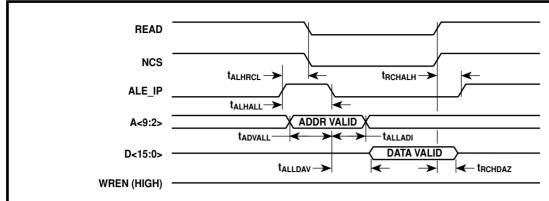

Timing parameter	Symbol	Min.	Max.	Units	Notes
ALE_IP High to READ and NCS Low setup time	t <sub>ALHRCL</sub>	5		ns	
ALE_IP High to ALE_IP Low pulse width	t <sub>ALHALL</sub>	13		ns	
READ or NCS High to ALE_IP High hold time	t <sub>RCHALH</sub>	5		ns	
Address Valid to ALE_IP Low setup time	t <sub>ADVALL</sub>	9		ns	
ALE_IP Low to Address Invalid hold time	t <sub>ALLADI</sub>	8		ns	
ALE_IP Low to Data Valid propagation delay	t <sub>RCLDAV</sub>		44	ns	1,2,3
READ or NCS High to Data High Impedance	t <sub>RCHDAZ</sub>	4	23	ns	

- 1. READ inhibited until ALE\_IP falling edge.
- 2. The ALE\_IP Low to Data Output Valid Delay assumes ALE\_IP is overlapping the READ and NCS Low time. If not, the tallDav parameter applies from the point at which both READ and NCS are Low.
- 3. The Data Out propagation delay is for a data bus load of 50pF.

Figure 33 Intel 486 mode Read (NARMSYS = 1, NINTELMOT = 0, WPROG = 1)

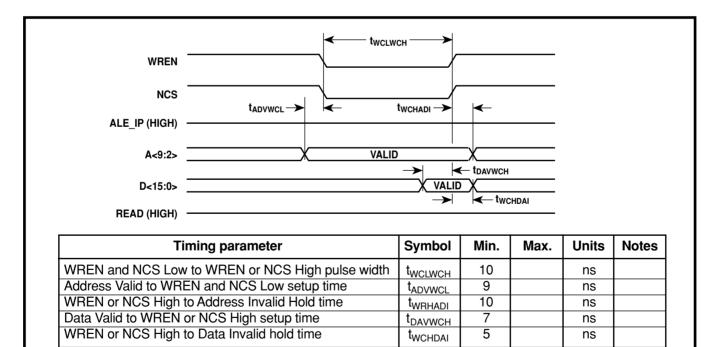


Figure 34 Intel 186 mode Write with ALE\_IP tied high (NARMSYS = 1, NINTELMOT = 0, WPROG = 0)

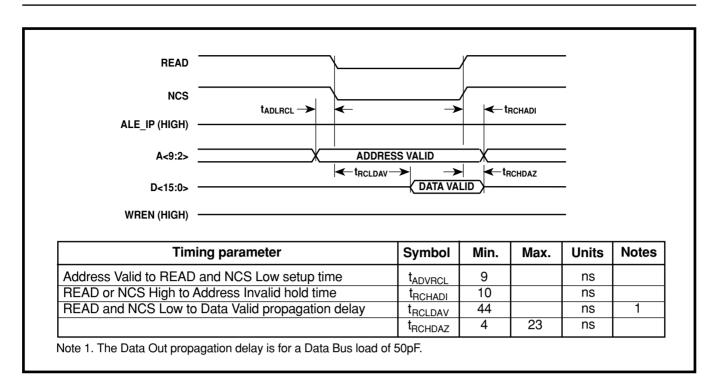


Figure 35 Intel 186 mode Read with ALE IP tied high (NARMSYS = 1, NINTELMOT = 0, WPROG = 0)

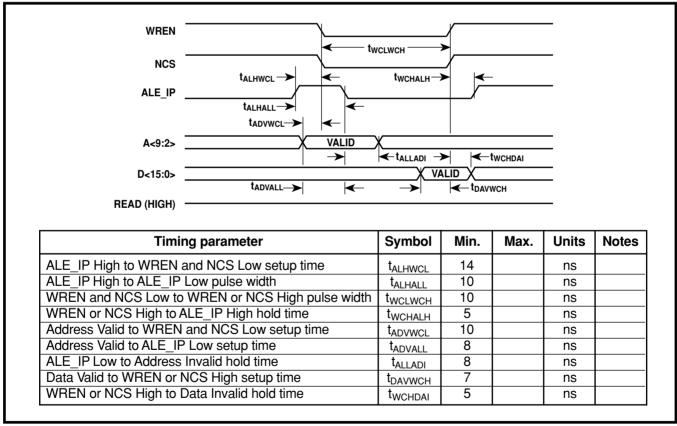


Figure 36 Intel 186 mode Write with ALE\_IP being pulsed (NARMSYS = 1, NINTELMOT = 0, WPROG = 0)


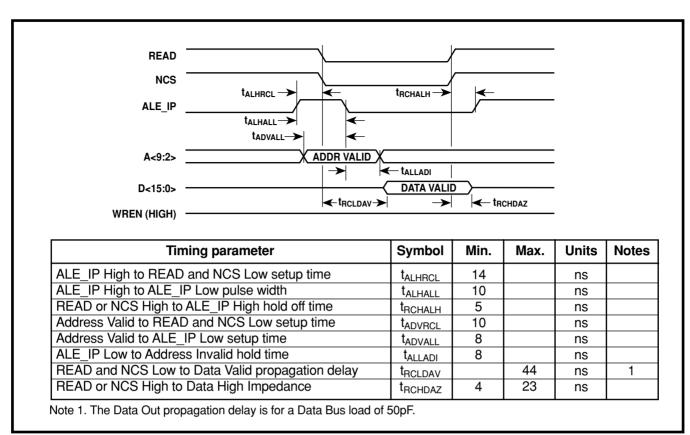



Figure 37 Intel 186 mode Read with ALE\_IP being pulsed (NARMSYS = 1, NINTELMOT = 0, WPROG = 0)

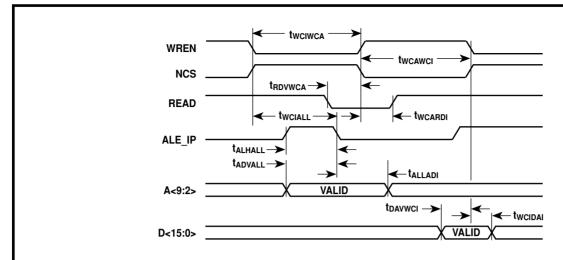

Timing parameter	Symbol	Min.	Max.	Units	Notes
WREN or NCS Inactive to WREN and NCS active	t <sub>WCIWCA</sub>	23		ns	1
WREN and NCS active to WREN or NCS inactive	t <sub>WCAWCI</sub>	10		ns	1
ALE_IP High to ALE_IP Low pulse width	t <sub>ALHALL</sub>	13		ns	
WREN or NCS Inactive to ALE_IP Low Hold off time	t <sub>WCIALL</sub>	23		ns	1
Address Valid to ALE_IP Low setup time	t <sub>ADVALL</sub>	9		ns	
ALE_IP Low to Address Invalid hold time	t <sub>ALLADI</sub>	8		ns	
READ Valid to WREN and NCS Active setup time	t <sub>RDVWCA</sub>	7		ns	1,2
WREN and NCS Active to READ Invalid hold time	t <sub>WCARDI</sub>	5		ns	1,2
DATA Valid to WREN or NCS Inactive setup time	t <sub>DAVWCI</sub>	7		ns	1
WREN or NCS Inactive to DATA Invalid hold time	t <sub>WCIDAI</sub>	5		ns	1

- WREN is active high, NCS is Active low.
   READ is transparently latched by WREN and NCS being active.
- 3. There is no parameter specified for WREN or NCS Inactive to ALE\_IP High, since the internal ALE signal is disabled until after the end of the internal Read or Write Strobe; hence the need for the t<sub>WCIALL</sub> parameter.


Figure 38 Motorola mode Write, ALE\_IP non-overlapping WREN and NCS (NARMSYS = 1, NINTELMOT = 1, WPROG = X)

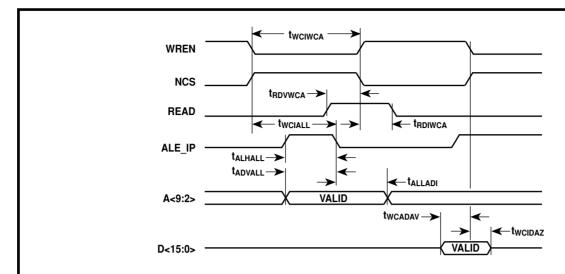

Timing parameter	Symbol	Min.	Max.	Units	Notes
WREN or NCS Inactive to WREN and NCS active	t <sub>WCIWCA</sub>	23		ns	1
ALE_IP High to ALE_IP Low pulse width	t <sub>ALHALL</sub>	13		ns	
WREN or NCS Inactive to ALE_IP Low Hold time	t <sub>WCILALL</sub>	23		ns	1
Address Valid to ALE_IP Low setup time	t <sub>ADVALL</sub>	9		ns	
ALE_IP Low to Address Invalid Hold time	t <sub>ALLADI</sub>	8		ns	
READ Valid to WREN and NCS Active setup time	t <sub>RDVWCA</sub>	7		ns	1,2
WREN and NCS Active to READ Invalid Hold time	t <sub>WCARDI</sub>	5		ns	1,2
WREN or NCS Active to DATA valid	t <sub>WCADAV</sub>		44	ns	1
WREN or NCS Inactive to DATA High impedance	t <sub>WCIDAZ</sub>	4	23	ns	1

- 1. WREN is active high, NCS is active low.
- 2. READ is transparently latched by WREN and NCS being active.
- 3. There is no parameter specified for WREN or NCS Inactive to ALE\_IP High, since the internal ALE signal is disabled until after the end of the internal Read or Write Strobe; hence the need for the t<sub>WCIALL</sub> parameter.


Figure 39 Motorola mode Read, ALE\_IP non-overlapping WREN and NCS (NARMSYS = 1, NINTELMOT = 1, WPROG = X)

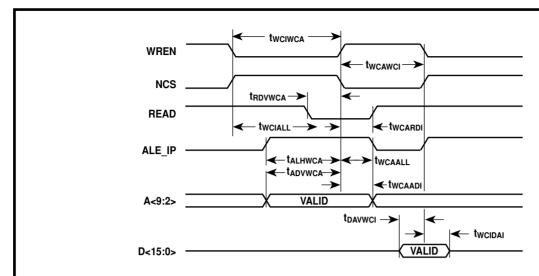

Timing parameter	Symbol	Min.	Max.	Units	Notes
WREN or NCS Inactive to WREN and NCS Active	t <sub>WCIWCA</sub>	23		ns	1
WREN and NCS Active to WREN or NCS Inactive	t <sub>WCAWCI</sub>	10		ns	1
ALE_IP High to WREN or NCS Active pulse width	t <sub>ALHWCA</sub>	13		ns	1
WREN and NCS Active to ALE_IP Low hold time	t <sub>WCAALL</sub>	6		ns	1,2
Address Valid to WREN and NCS Active setup time	t <sub>ADVWCA</sub>	9		ns	1
WREN and NCS Active to Address Invalid hold time	t <sub>WCAADI</sub>	11		ns	1
READ Valid to WREN and NCS Active setup time	t <sub>RDVWCA</sub>	7		ns	1,3
WREN and NCS Active to DATA Invalid hold time	t <sub>WCADAI</sub>	5		ns	1,3
DATA Valid to WREN or NCS Inactive setup time	t <sub>DAVWCI</sub>	7		ns	1
WREN or NCS Inactive to DATA Invalid hold time	t <sub>WCIDAI</sub>	5		ns	1

- 1. WREN is active high, NCS is active low.
- 2. If ALE\_IP does not overlap WREN and NCS active by two then the timings for ALE\_IP both overlapping and non-overlapping WREN and NCS active must be met.
- 3. READ is transparently latched by WREN and NCS being active.
- 4. There is no parameter specified for WREN or NCS Inactive to ALE\_IP High, since the internal ALE signal is disabled until after the end of the internal Read or Write Strobe; hence the need for the two Inactive to ALE\_IP High, since the internal ALE signal is disabled until after the end of the internal Read or Write Strobe; hence the need for the two Inactive to ALE\_IP High, since the internal ALE signal is disabled until after the end of the internal Read or Write Strobe; hence the need for the two Inactive to ALE\_IP High, since the internal ALE signal is disabled until after the end of the internal Read or Write Strobe; hence the need for the two Inactive to ALE\_IP High, since the internal ALE signal is disabled until after the end of the internal Read or Write Strobe; hence the need for the two Inactive to ALE\_IP High, since the internal ALE signal is disabled until after the end of the internal Read or Write Strobe; hence the need for the two Inactive to ALE\_IP High, since the internal ALE signal is disabled until after the end of the internal Read or Write Strobe; hence the need for the two Inactive the Inactive


Figure 40 Motorola mode Read, ALE\_IP overlapping WREN and NCS (NARMSYS = 1, NINTELMOT = 1, WPROG = X)

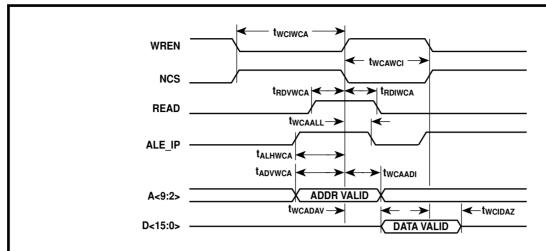

Timing parameter	Symbol	Min.	Max.	Units	Notes
WREN or NCS Inactive to WREN and NCS active	t <sub>WCIWCA</sub>	23		ns	1
WREN and NCS active to WREN or NCS inactive	twcawci	10		ns	1
ALE_IP High to WREN and NCS Active pulse width	t <sub>ALHWCA</sub>	13		ns	1
WREN and NCS Active to ALE_IP Low hold time	t <sub>WCAALL</sub>	6		ns	1,2
Address Valid to WREN and NCS Active setup time	t <sub>ADVWCA</sub>	9		ns	1
WREN and NCS Active to Address Invalid hold time	t <sub>WCAADI</sub>	11		ns	1
READ Valid to WREN and NCS Active setup time	t <sub>RDVWCA</sub>	7		ns	1,3
WREN and NCS Active to READ Invalid hold time	t <sub>WCARDI</sub>	5		ns	1,3
DATA Valid to WREN or NCS Inactive setup time	t <sub>DAVWCI</sub>	7		ns	1
WREN or NCS Inactive to DATA Invalid hold time	t <sub>WCIDAI</sub>	5		ns	1

- 1. WREN is active High, NCS is Active Low.
- 2. If ALE\_IP does not overlap WREN and NCS active by t<sub>WCAALL</sub> then the timings for ALE\_IP both overlapping and non-overlapping WREN and NCS active must be met.
- 3. READ is transparently latched by WREN and NCS being active.
- 4. There is no parameter specified for WREN or NCS Inactive to ALE\_IP High, since the internal ALE signal is disabled until after the end of the internal Read or Write Strobe; hence the need for the two parameter.

Figure 41 Motorola mode Read, ALE\_IP overlapping WREN and NCS (NARMSYS = 1, NINTELMOT = 1, WPROG = X)

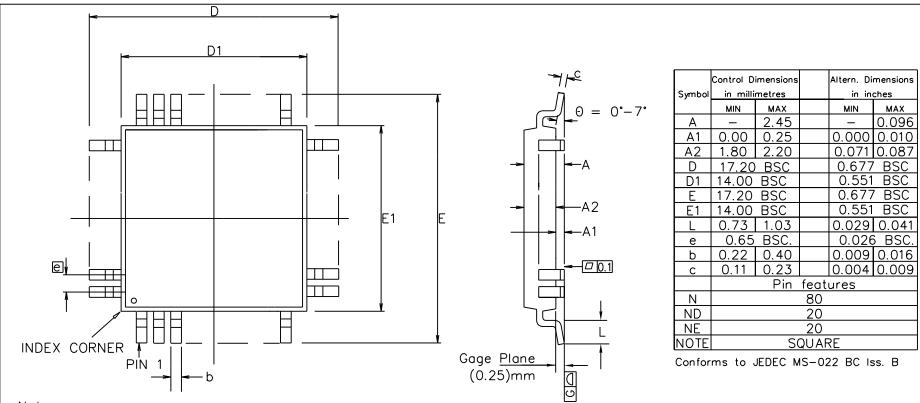

#### Notes:

- 1. Pin 1 indicator may be a corner chamfer, dot or both.
- 2. Controlling dimensions are in millimeters.
- 3. The top package body size may be smaller than the bottom package body size by a max. of 0.15 mm.
- 4. Dimension D1 and E1 do not include mould protusion.
- 5. Dimension b does not include dambar protusion.
- 6. Coplanarity, measured at seating plane G, to be 0.010 mm max.

This drawing supersedes 418/ED/51210/016 (Swindon)

© Zarlin	k Semiconduc	ctor 2002 All riç	ghts reserved.					Package Code QB
ISSUE	1	2	3	4	5		Previous package codes	Package Outline for 80 lead
ACN	202049	204612	205120	207056	212438	ZARLINK SEMICONDUCTOR	GP	MQFP (14 x 14 x 2.0mm) 3.2mm Footprint
DATE	20Feb97	22May98	10Sep98	30Jun99	25Mar02	SEMICONDUCTOR		<u>'</u>
APPRD.								GPD00232



# For more information about all Zarlink products visit our Web Site at www.zarlink.com

Information relating to products and services furnished herein by Zarlink Semiconductor Inc. or its subsidiaries (collectively "Zarlink") is believed to be reliable. However, Zarlink assumes no liability for errors that may appear in this publication, or for liability otherwise arising from the application or use of any such information, product or service or for any infringement of patents or other intellectual property rights owned by third parties which may result from such application or use. Neither the supply of such information or purchase of product or service conveys any license, either express or implied, under patents or other intellectual property rights owned by Zarlink or licensed from third parties by Zarlink, whatsoever. Purchasers of products are also hereby notified that the use of product in certain ways or in combination with Zarlink, or non-Zarlink furnished goods or services may infringe patents or other intellectual property rights owned by Zarlink.


This publication is issued to provide information only and (unless agreed by Zarlink in writing) may not be used, applied or reproduced for any purpose nor form part of any order or contract nor to be regarded as a representation relating to the products or services concerned. The products, their specifications, services and other information appearing in this publication are subject to change by Zarlink without notice. No warranty or guarantee express or implied is made regarding the capability, performance or suitability of any product or service. Information concerning possible methods of use is provided as a guide only and does not constitute any guarantee that such methods of use will be satisfactory in a specific piece of equipment. It is the user's responsibility to fully determine the performance and suitability of any equipment using such information and to ensure that any publication or data used is up to date and has not been superseded. Manufacturing does not necessarily include testing of all functions or parameters. These products are not suitable for use in any medical products whose failure to perform may result in significant injury or death to the user. All products and materials are sold and services provided subject to Zarlink's conditions of sale which are available on request.

Purchase of Zarlink's I<sup>2</sup>C components conveys a licence under the Philips I<sup>2</sup>C Patent rights to use these components in and I<sup>2</sup>C System, provided that the system conforms to the I<sup>2</sup>C Standard Specification as defined by Philips.

Zarlink, ZL and the Zarlink Semiconductor logo are trademarks of Zarlink Semiconductor Inc.

Copyright Zarlink Semiconductor Inc. All Rights Reserved.

TECHNICAL DOCUMENTATION - NOT FOR RESALE

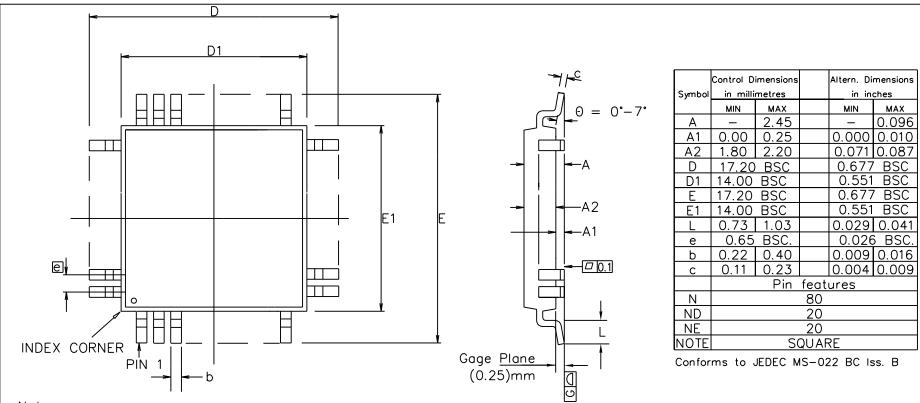

#### Notes:

- 1. Pin 1 indicator may be a corner chamfer, dot or both.
- 2. Controlling dimensions are in millimeters.
- 3. The top package body size may be smaller than the bottom package body size by a max. of 0.15 mm.
- 4. Dimension D1 and E1 do not include mould protusion.
- 5. Dimension b does not include dambar protusion.
- 6. Coplanarity, measured at seating plane G, to be 0.010 mm max.

This drawing supersedes 418/ED/51210/016 (Swindon)

© Zarlin	k Semiconduc	ctor 2002 All riç	ghts reserved.					Package Code QB
ISSUE	1	2	3	4	5		Previous package codes	Package Outline for 80 lead
ACN	202049	204612	205120	207056	212438	ZARLINK SEMICONDUCTOR	GP	MQFP (14 x 14 x 2.0mm) 3.2mm Footprint
DATE	20Feb97	22May98	10Sep98	30Jun99	25Mar02	SEMICONDUCTOR		<u>'</u>
APPRD.								GPD00232



# For more information about all Zarlink products visit our Web Site at www.zarlink.com

Information relating to products and services furnished herein by Zarlink Semiconductor Inc. or its subsidiaries (collectively "Zarlink") is believed to be reliable. However, Zarlink assumes no liability for errors that may appear in this publication, or for liability otherwise arising from the application or use of any such information, product or service or for any infringement of patents or other intellectual property rights owned by third parties which may result from such application or use. Neither the supply of such information or purchase of product or service conveys any license, either express or implied, under patents or other intellectual property rights owned by Zarlink or licensed from third parties by Zarlink, whatsoever. Purchasers of products are also hereby notified that the use of product in certain ways or in combination with Zarlink, or non-Zarlink furnished goods or services may infringe patents or other intellectual property rights owned by Zarlink.

This publication is issued to provide information only and (unless agreed by Zarlink in writing) may not be used, applied or reproduced for any purpose nor form part of any order or contract nor to be regarded as a representation relating to the products or services concerned. The products, their specifications, services and other information appearing in this publication are subject to change by Zarlink without notice. No warranty or guarantee express or implied is made regarding the capability, performance or suitability of any product or service. Information concerning possible methods of use is provided as a guide only and does not constitute any guarantee that such methods of use will be satisfactory in a specific piece of equipment. It is the user's responsibility to fully determine the performance and suitability of any equipment using such information and to ensure that any publication or data used is up to date and has not been superseded. Manufacturing does not necessarily include testing of all functions or parameters. These products are not suitable for use in any medical products whose failure to perform may result in significant injury or death to the user. All products and materials are sold and services provided subject to Zarlink's conditions of sale which are available on request.

Purchase of Zarlink's I<sup>2</sup>C components conveys a licence under the Philips I<sup>2</sup>C Patent rights to use these components in and I<sup>2</sup>C System, provided that the system conforms to the I<sup>2</sup>C Standard Specification as defined by Philips.

Zarlink, ZL and the Zarlink Semiconductor logo are trademarks of Zarlink Semiconductor Inc.

Copyright Zarlink Semiconductor Inc. All Rights Reserved.

TECHNICAL DOCUMENTATION - NOT FOR RESALE