MEGGITT

smart engineering for extreme environments

Understanding and Interpreting Datasheet Noise Specifications of IEPE Accelerometers

(A User's Perspective)

Scott Mayo, Applications Engineer

The information contained in this document is the property of Endevco Corporation and is confidential and/or copyright material. This information and this document may not be used without the express authorization of Endevco. Any unauthorized use or disclosure may be unlawful.



An Example Accelerometer Datasheet Noise Specification



What kind of noise are we talking about?

INTRINSIC noise: generated by the accelerometer's electrical, electronic and mechanical components themselves

NOT EXTRINSIC noise: originating from external sources to the accelerometer, such as:

60 Hz interference

Ground loops

EMI/RFI

Understanding intrinsic noise specifications will assist you in selecting the right accelerometer for your application, but you must still observe Best Practices in installing and using the sensor during your test.



What is the nature of this noise?

Random and unpredictable

Frequency content is very broadband

Varies over the frequency range of the accelerometer

There is nothing the user can do to reduce it

You can only manage it




An Example Accelerometer Datasheet Noise Specification

Resolution (typical):


Noise is specified in two parts: Broadband and Spectral




Noise Over Frequency

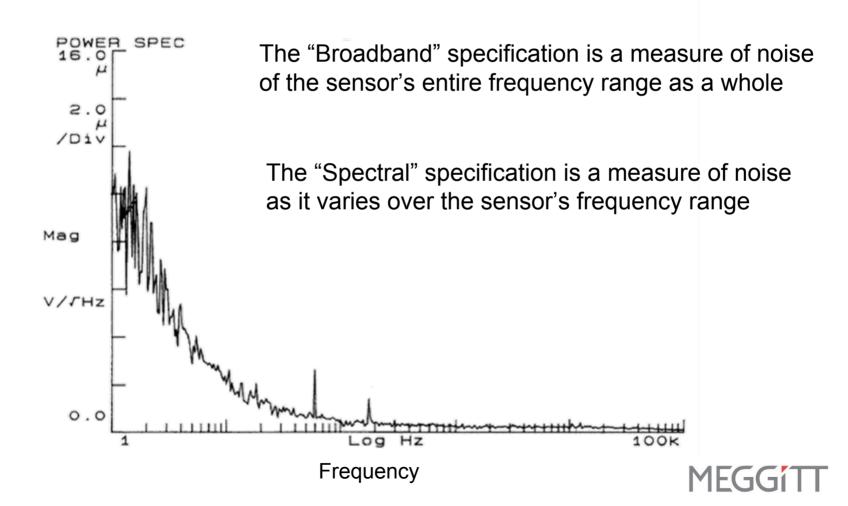

How do we analyze this noise?

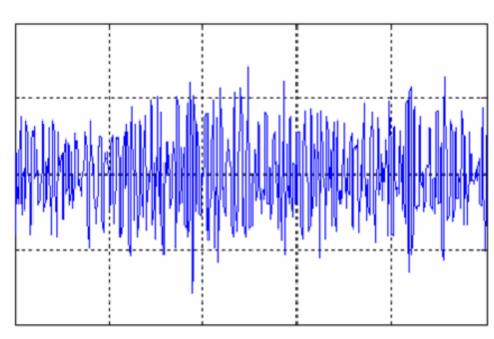

Noise waveform (time based)

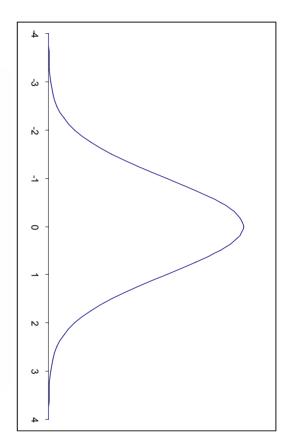

Statistical probability distribution



How do we analyze this noise (cont.)?

Since noise is random and unpredictable, we can employ statistical methods

By sampling a noise waveform, it can be shown to follow a statistical probability distribution (with the average value being zero)

It can also be shown that the first standard deviation from the average of this distribution is equivalent to the RMS value of the waveform

We now have some tools to estimate how much confidence we have in the measurements we make with our "noisy" accelerometers.



Recall the example accelerometer noise specification...

So, for a broadband (unfiltered) measurement, how close to the broadband noise floor can we get?

The answer lies in statistics...



Using statistical methods, we can calculate the probability a measurement is true, useful signal and not noise.

Or, looked at in reverse, we can determine how close we want to get to the noise floor with the desired amount of confidence we need.



For our example:

600 µg rms is the first standard deviation from the average noise

Recall from statistics that with a Gaussian distribution, the number of standard deviations away from the average determines the probability an event will happen:

Standard Deviation	Probability of Event	Probability an event won't occur
± 1σ	68.26%	31.74%
± 2σ	95.44%	4.56%
± 3σ	99.74%	0.26%
± 4σ	99.994%	0.006%



With our example accelerometer...

Making a measurement as low as 600 μ g (1 σ) would mean there is a 31.74% chance of what you measured is strictly noise

Making a measurement as low as 1200 μ g (2 σ) would mean there is a 4.56% chance of what you measured is strictly noise

Making a measurement as low as 1800 μ g (3 σ) would mean there is a 0.26% chance of what you measured is strictly noise

Making a measurement as low as 2400 μg (4 σ) would mean there is a 0.006% chance of what you measured is strictly noise



Rule of Thumb

Clearly, staying at least 3 times above the noise floor affords a more comfortable confidence margin in the measurement you are making

But what about the spectral noise?



Spectral Noise

Resolution (typical):

Broadband (2 Hz to 25 kHz) 600 μ g rms Spectral 10 Hz 8 μ g/ \sqrt{Hz} 100 Hz 5 μ g/ \sqrt{Hz}

1000 Hz 5 μg/√Hz

How did we come to use units of g/\sqrt{Hz} ?



Spectral Noise

Scientists speak of electronic noise in terms of power, with units of watts (W)

As we have seen, noise varies with frequency. So we can construct a power spectral density plot, with units of W per Hz


Voltage is more conveniently measured, and since watts are related to the square of volts, we can change W per Hz to V^2 per Hz or V/\sqrt{Hz}

Since we are working with accelerometers, we want to convert volts to gs, using the sensitivity of the sensor, thus:


$$\frac{W}{Hz} \implies \frac{V^2}{Hz} \implies \frac{V}{\sqrt{Hz}} \implies \frac{g}{\sqrt{Hz}}$$



Spectral Noise

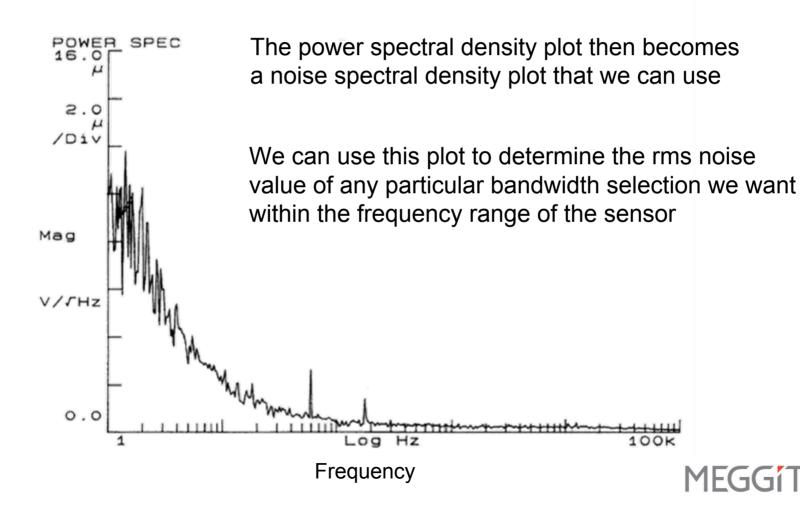

Noise Differences

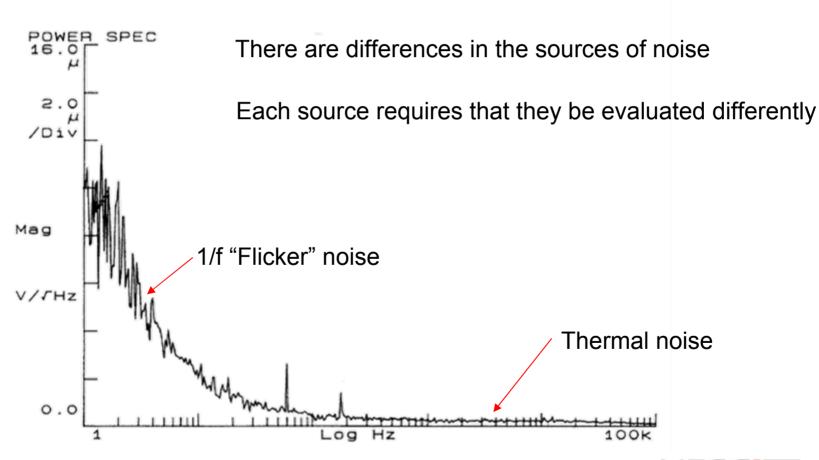



Spectral Noise

To determine rms noise within bandwidth f_L to f_H :

Thermal noise region:

$$g_n = g_s \sqrt{(f_H - f_L)}$$
 , units of g rms

where g_s is the specified spectral noise in the thermal noise region

Also assumes a "brick wall" filter



Spectral Noise

To determine rms noise within bandwidth f_L to f_H :

Flicker noise region:

$$g_n = g_1 \sqrt{\ln(f_H/f_L)}$$
 , units of g rms

where g₁ is the spectral noise at 1 Hz



MEGGITT

smart engineering for extreme environments