

Introduction to Microcontroller

Chapter 1 Introduction to Microcontrollers

Chien-Chung Ho (何建忠)

What is a Computer?

- A computer is made up of **hardware** and software.
 - Central processing unit (CPU): performing computational operations, coordination of resources
 - Input devices: used to enter the program to be executed and data to be processed
 - Output devices: for display or print
 - Memory: programs/data must be stored in memory devices so that the processor can readily access them



What is a Computer?

- A computer is made up of hardware and **software**.
 - Computer software consists of a collection of programs.
 - Programs contain instructions and data for performing a specific task.
 - All programs must be translated into binary prior to execution by a compiler or an assembler.

Assembly Language Program

- An instruction may include *immediate data* or the *address of data*.
- During instruction execution, the computer obtains immediate data from the "*program memory*" and obtain data with address from the "*data memory*".

Microcomputer

- Due to advances in semiconductor technology, it is possible to fabricate a CPU on a single chip. The result is a *microprocessor*.
- Along with the microprocessor chip, appropriate memory and I/O chips can be used to design a *microcomputer*.
- Single-chip microcomputers such as the Intel 8048 were used in a wide range of industrial and home applications.


Microcontroller

- *Microcontrollers* evolved from single-chip microcomputers.

 Microcontrollers are normally used for *dedicated applications* such as automotive systems, home appliances, and home entertainment systems.
- Typical microcontrollers include a CPU, memory, I/O, along with certain peripheral functions such as timers, and ADC (Analog-to-Digital Converter) all in a single chip.

Microcontroller

• A microcontroller-based temperature control system

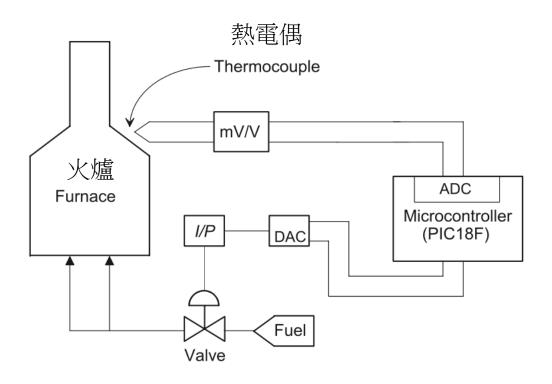




- *Address* is a pattern of 0's and 1's that represents a specific location in memory or a particular I/O device.
- *Arithmetic-logic unit* (ALU) is a digital circuit that performs arithmetic and logic operations on two *n*-bit numbers. The value of *n* for microcontrollers can be 8-bit or 16-bit or 32-bit.
 - Microship's PIC18F contains an 8-bit ALU



- Bit size refers to the number of bits that can be processed simultaneously by the basic arithmetic unit of a microcontroller.
 A number of bits taken as a group in this manner is called a word.
 For example, an 8-bit microcontroller can process an 8-bit word.
- *CPU* (Central Processing Unit) contains several registers (fast memory elements), an ALU, and a control unit.

- *Harvard architecture* is a type of CPU architecture which uses separate program and data memory units along with separate buses for program and data. This means that these processors can execute programs and access data simultaneously.
 - Several microcontrollers including the PIC18F are designed
 using the Harvard
 Von Neumann vs. Harvard architectures
 - Von Neumann architecture Input

architecture.

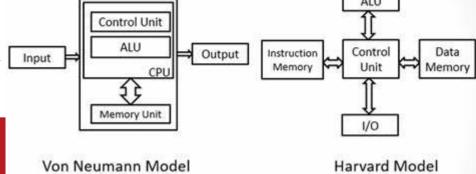



- *Big endian* convention is used to store a 16-bit number such as 16-bit data in two bytes of memory locations as follows: the low memory address stores the high byte while the high memory address stores the low byte.
- *Little endian*: the low memory address stores the low byte while the high memory address stores the high byte.

The PIC18F microcontroller follows the little-endian format.

0x12345678

Little Endian

78 56 34 12

Big Endian

12 34 56 78



- *Pipelining* is a technique that overlaps instruction fetch (instruction read) with execution. Pipelining is often used to fetch the microcontroller's next instruction while executing the current instruction. PIC18F (8-bit microcontroller) uses a two-stage instruction pipeline.
- Random-access memory (RAM) is a read/write memory.
- Read-only memory (ROM) is a storage device whose contents can only be read.

- Reduced Instruction Set Computer (RISC) contains a simple instruction set. The RISC microcontrollers need fewer transistors which enable a smaller die size of the integrated circuitry (IC).
 Thus, the RISC microcontrollers consume less power compared to CISC, and hence, are suitable for portable devices.
 Microchip's P IC18F is a RISC-based microcontroller.
- Complex Instruction Set Computer (CISC) contains a large instruction set. NXP/ Freescale/Motorola HC11 is a CISC-based microcontroller.



- An *unsigned binary number* is always positive. An 8-bit unsigned binary integer represents all numbers from 00_{16} through $FF_{16}(0_{16}$ through 255_{10}).
- A *signed binary number* includes both positive and negative numbers. The decimal number +15 is represented in 8-bit two's-complement form as 00001111 (binary) or 0F (hexadecimal). The decimal number -15 can be represented in 8-bit two's-complement form as 11110001 (binary) or F1 (hexadecimal).



- A signed binary number
 - The most significant bit (MSB) of a signed number represents the sign of the number.
 - A "0" at the MSB represents a positive number; a "1" at the MSB represents a negative number. Note that the 8-bit binary number 11111111 is 255₁₀ when represented as an unsigned number. On the other hand, 11111111₂ is -1₁₀ when represented as a signed number.

• One can convert an unsigned binary number from lower to higher length using zero extension. For example, an 8-bit unsigned number FF (hex) can be converted to a 16-bit unsigned number 00FF (hex) by extending 0's to the upper byte of 00FF (hex). Both FF (hex) and 00FF (hex) have the same decimal value of 255. This is called zero extension. Zero extension is useful for performing arithmetic operations between two unsigned binary numbers of different lengths.



• A signed binary number, on the other hand, can be converted from lower to higher length using *sign extension*. For example, an 8-bit signed number FF (hex) can be converted to a 16-bit signed number FFFF (hex) by extending the sign bit ('1' in this case) to the upper byte of FFFF (hex). Both FF (hex) and FFFF (hex) have the same decimal value of -1.



• Sign extension is useful when one wants to perform an arithmetic operation on two signed numbers of different lengths. For example, the 16-bit signed number 0020 (hex) can be added with the 8-bit signed number E1 (hex) by sign-extending E1 as follows:

- An error (indicated by overflow in a microcontroller) may occur while performing two's complement arithmetic.
- The microcontroller automatically sets an *overflow bit* to 1 if the result of an arithmetic operation is too big for the microcontroller's maximum word size; otherwise, it is cleared to 0.

• Consider two 8-bit signed numbers. Let C_f be the final carry (carry out of the most significant bit or sign bit) and C_p be the previous carry (carry out of bit 6 or seventh bit). We will show by means of numerical examples that as long as C_f and C_p are the same, the result is always correct. If C_f and C_p are different, the result is incorrect and sets the overflow bit to 1.




Case 1: C_f and C_p are the same.

$$\begin{array}{c} 000001110 \\ 00010100 \\ C_{f} = 0 \end{array} \begin{array}{c} 00011010 \\ -1416 \\ 1A_{16} \\ \hline \\ C_{p} = 0 \end{array} \\ \begin{array}{c} 01101000 \\ -11111010 \\ \hline \\ C_{f} = 1 \end{array} \begin{array}{c} 68_{16} \\ -06_{16} \\ \hline \\ C_{p} = 1 \end{array}$$

Therefore, when C_f and C_p are either both 0 or both 1, a correct answer is obtained.

Case 2: C_f and C_p are different.

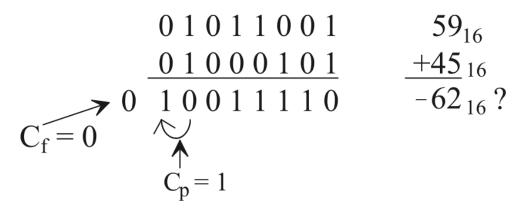

 $C_f = 0$ and Cp = 1 give an incorrect answer because the result shows that the addition of two positive numbers is negative.

• $C_f = 1$ and $C_p = 0$ provide an incorrect answer because the result indicates that the addition of two negative numbers is positive. Hence, the overflow bit (V) will be set to zero if the carries C_f and C_p are the same. On the other hand, the overflow bit (V) will be set to 1 if carries C_f and C_p are different. The relationship among C_f , C_p , and V can be summarized in a truth table as follows:

Inputs

Output

follows:	Inputs	Output
	$C_{\scriptscriptstyle{\mathrm{f}}}^{-} C_{\scriptscriptstyle{p}}^{-}$	V
	0 0	0
	0 1	1
	1 0	1
	1 1	0

• From the truth table, overflow, $V = C_f \oplus C_p$

• The PIC18F microcontroller includes unsigned multiplication instructions. However, the PIC18F does not provide any signed multiplication and division (both signed and unsigned) instructions.



ASCII and EBCDIC Codes

- A microcontroller must be capable of handling nonnumeric information. These codes are classified as alphanumeric or character codes. This totals to 87 characters. To represent 87 characters with some type of binary code would require at least 7 bits.
 - 26 lowercase letters
 - 26 uppercase letters
 - 0 numerical digits (0–9)
 - Approximately 25 special characters, which include +, /, #, %, and others.

ASCII and **EBCDIC** Codes

- The two most common alphanumerical codes are the American Standard Code for Information Interchange (ASCII) and the extended binary-coded-decimal interchange code (EBCDIC).
 ASCII is typically used with microprocessors; IBM uses EBCDIC code.
 - Alphanumeric codes (also known as character codes) are defined as binary codes used to represent alphanumeric data.

ASCII and EBCDIC Codes

- Note that decimal digits 0 through 9 are represented by 30_{16} through 39_{16} in ASCII.
- On the other hand, these decimal digits are represented by ${\rm F0}_{16}$ through ${\rm F9}_{16}$ in EBCDIC
 - EBCDIC code is obsolete
- A microcontroller program is usually written for code conversion when input/output devices of different codes are connected to the microcontroller.

- The 10 decimal digits 0 through 9 can be represented by their corresponding 4-bit binary numbers. The digits coded in this fashion are called *binary-coded-decimal digits* in 8421 code, or BCD digits.
- Two unpacked BCD bytes are usually packed into a byte to form packed BCD. For example, two unpacked BCD bytes 02_{16} and 05_{16} can be combined as a packed BCD byte 25_{16} .

• Let us consider entering data decimal 24 via an ASCII keyboard. Two keys (2 and 4) will be pushed. This will generate 32 and 34 (32 and 34 are ASCII codes in hexadecimal for 2 and 4, respectively) inside the microcontroller. A program can be written to convert these ASCII codes into unpacked BCD 02₁₆ and 04₁₆. This data can be converted to packed BCD 24 or to binary.



• Unpacked BCD 02₁₆ and 04₁₆ can be converted into packed BCD 24 (00100100₂) by logically shifting 02₁₆ to obtain 20₁₆, then logically ORing with 04₁₆. On the other hand, to convert unpacked BCD 02₁₆ and 04₁₆ into binary, one needs to multiply 02₁₆ by 10 and then add 04₁₆ to obtain 00011000₂ (the binary equivalent of 24).



- Note that BCD correction (adding 6) is necessary for the following:
 - i) If the binary sum is greater than or equal to decimal 16 (This will generate a carry of one).
 - ii) If the binary sum is 1010 through 1111.
- For example, consider adding packed BCD numbers 97 and 39:
 111←Intermediate Carries

97	1001	0111	BCD for 97
<u>+39</u>	0011	1001	BCD for 39
136	1101	0000	invalid sum
_	+0110	+0110	add 6 for correction
0001	0011	0110	← correct answer 136
i	3	6	

BCD碼的主要優點是在機器格式與人可讀的格式之間轉換容易,以及十進位數值的高精度表示。BCD碼的主要缺點是增加了實現算術運算的電路的複雜度,以及儲存效率低。

- Typical 32-bit microprocessors such as the NXP/Freescale/Motorola 68020 include PACK and UNPK instructions for converting an unpacked BCD number to its packed equivalent, and vice versa.
- The PIC18F microcontroller contains an instruction called DAW which provides the correct BCD result after binary addition of two packed BCD numbers.

- Intel Corporation is generally acknowledged as the company that introduced the first microprocessor successfully into the marketplace. Its first microprocessor, the 4004, was introduced in 1971.
- The 4004 microprocessor was the central component in the chip set, which was called the MCS-4. The other components in the set included a 4001 ROM, a 4002 RAM, and a 4003 shift register.

- Shortly after Intel 4004 appeared in the commercial marketplace, three other general-purpose microprocessors were introduced: Rockwell International 4-bit PPS-4, Intel 8-bit 8008, and National Semiconductor 16-bit IMP-16.
- Other companies, such as General Electric, RCA, and Viatron, also made contributions to the development of the microprocessor prior to 1971.

• In 1971 and 1972, the first-generation systems use PMOS technology. In 1973, second-generation microprocessors such as the Motorola 6800 and the Intel 8080 (8-bit microprocessors) use NMOS technology. This resulted in a significant increase in instruction execution speed and higher chip densities. NMOS microprocessors such as the Intel 8085, Zilog Z80, and Motorola 6800/6809 were introduced based on second-generation microprocessors.



- A third generation HMOS microprocessor, introduced in 1978, is typically represented by Intel 8086 and Motorola 68000; both of them are 16-bit microprocessors.
- During the 1980's, fourth-generation HCMOS and BICMOS (a combination of bipolar and HCMOS) 32-bit microprocessors evolved.

Intel introduced the first commercial 32-bit microprocessor and the problematic Intel 432, which was eventually discontinued.
 Since 1985, more 32-bit microprocessors have been introduced.
 These include Motorola's 68020, 68030, 68040, 68060, PowerPC, Intel's 80386, 80486, the Intel Pentium family, Core Duo, and Core2 Duo microprocessors.



- Intel and Motorola also introduced RISC microprocessors which had simplified instruction sets: the Intel 80960 and Motorola 88100/PowerPC. Note that the purpose of RISC microprocessors is to maximize speed by reducing clock cycles per instruction.
- In order to enhance performance significantly, Intel Pentium Pro and other succeeding members of the Pentium family and Motorola 68060 are designed using a combination of RISC and CISC.

- Single-chip microcomputers such as the Intel 8048 evolved during the 80's. Soon afterwards, based on the concept of single-chip microcomputers, Intel introduced the first 8-bit microcontroller: the Intel 8051 which uses Harvard architecture and is designed by using CISC.
- The 8051 contains a CPU, memory, I/O, ADC and DAC, timers, serial communication interface, all in a single chip. The microcontrollers became popular during the 80's.

• These microcontrollers are small enough for many embedded applications, but also powerful enough to allow a lot of complexity and flexibility in the design process of an embedded system. Several contemporary microcontroller manufacturers use RISC architecture, which provide a cost effective approach.



• Typical 8-bit microcontrollers such as PIC18F implemented several on-chip enhanced peripheral functions including PWM (Pulse-width modulation) and flash memories. PWM function is a very desirable feature for applications such as automotive and motor control.

- Some of the popular manufacturers of microcontrollers include Microchip Technology, Texas Instruments, Freescale, and Atmel.
- PIC18F uses Harvard architecture, program and data memories are separate. The PIC18F uses flash memory for program memory. SRAM, on the other hand, is used for data memory. Note that 'F' is included in the part number 'PIC18F' to indicate that the chip contains flash memory.

- Some of the different PIC models include the PIC18F family (8-bit microcontroller chips), and the PIC24F family (16-bit microcontroller chips).
- All members of the PIC18F family basically contain the same instruction set. However, certain features such as memory sizes, number of I/O ports, ADC channels, and PWM modules may vary from one version to another.

Microchip's PIC18F is inexpensive and offers a simple
instruction set with desirable on-chip features including ADC,
PWM, and timers. In addition, Microchip provides user-friendly
development support such as MPLAB and PICKit. This makes
the PIC18F an excellent educational tool for a thorough coverage
in a first course on microcontrollers.



TABLE 1.1 Comparison of basic features of typical microcontrollers.

	PIC18F	MSP 430	HC11	AVR model ATtiny
Manufacturer	Microchip	Texas Instruments	NXP/Freescale	Microchip/Atmel
	Technology		/Motorola	
Introduced	2000; the first PIC in 1989.	Late 1990s	1985	2003
Size	8-bit	16-bit	8-bit	8-bit
Architecture	Harvard	von Neumann	von Neumann	Modified Harvard
Design approach	RISC	RISC	CISC	RISC
On-chip flash memory	Yes	Yes	No	Yes. First to offer on-chip flash.
On-chip PWM	Yes	Yes	No	Yes
CPU Clock	40-MHz	16-MHz	4-MHz	20-MHz
	(Maximum)	(Maximum)	(Maximum)	(Maximum)
Total Instructions	75	27	153	136
Total addressing modes	6	7	6	7

