

# Replication topologies

NetApp Solutions

NetApp October 20, 2023

This PDF was generated from https://docs.netapp.com/us-en/netapp-solutions/virtualization/vsrm-ontap9\_replication\_topologies.html on October 20, 2023. Always check docs.netapp.com for the latest.

# **Table of Contents**

Replicati	on topologies
Suppo	rted SnapMirror layouts
Suppo	rted Array Manager layouts
Unsup	ported layouts
SnapN	firror cascade
SnapN	firror and SnapVault
Use of	Qtrees in Site Recovery Manager environments
Mixed	FC and iSCSI environments

# Replication topologies

In ONTAP 9, the physical components of a cluster are visible to cluster administrators, but they are not directly visible to the applications and hosts that use the cluster. The physical components provide a pool of shared resources from which the logical cluster resources are constructed. Applications and hosts access data only through SVMs that contain volumes and LIFs.

Each NetApp SVM is treated as an array in VMware vCenter Site Recovery Manager. SRM supports certain array-to-array (or SVM-to-SVM) replication layouts.

A single VM cannot own data—Virtual Machine Disk (VMDK) or RDM—on more than one SRM array for the following reasons:

- SRM sees only the SVM, not an individual physical controller.
- An SVM can control LUNs and volumes that span multiple nodes in a cluster.


## **Best Practice**

To determine supportability, keep this rule in mind: to protect a VM by using SRM and the NetApp SRA, all
parts of the VM must exist on only one SVM. This rule applies at both the protected site and the recovery
site.


## **Supported SnapMirror layouts**


The following figures show the SnapMirror relationship layout scenarios that SRM and SRA support. Each VM in the replicated volumes owns data on only one SRM array (SVM) at each site.


# SnapMirror Replication

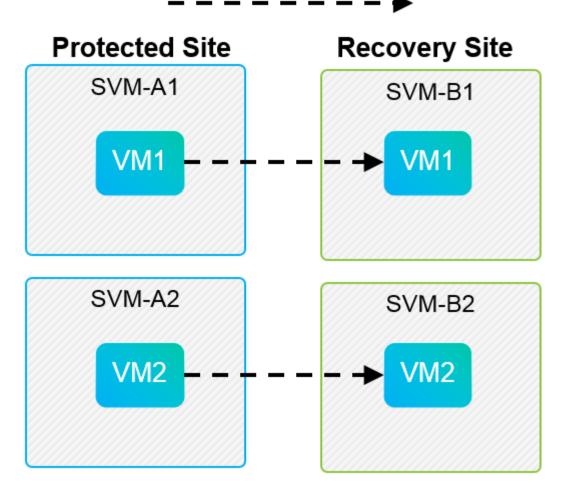

## SnapMirror Replication

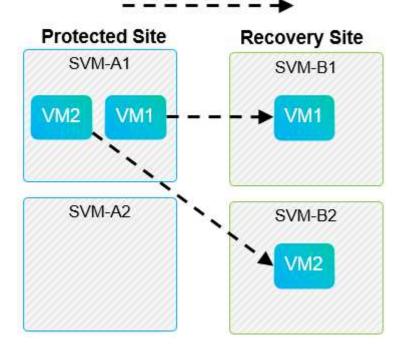


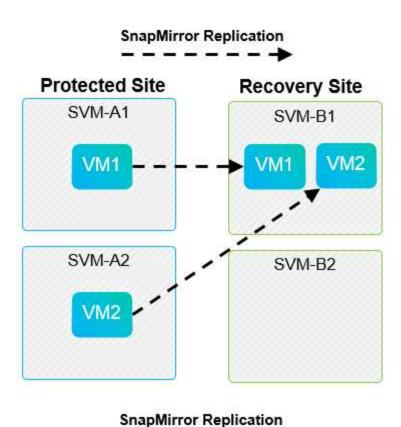

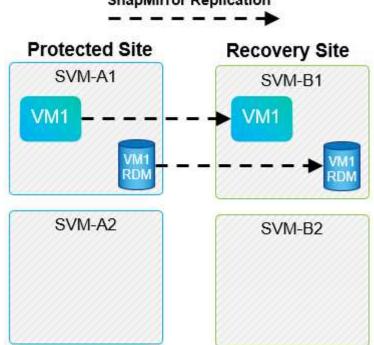


# **Supported Array Manager layouts**

When you use array-based replication (ABR) in SRM, protection groups are isolated to a single array pair, as shown in the following screenshot. In this scenario, SVM1 and SVM2 are peered with SVM3 and SVM4 at the recovery site. However, you can select only one of the two array pairs when you create a protection group.

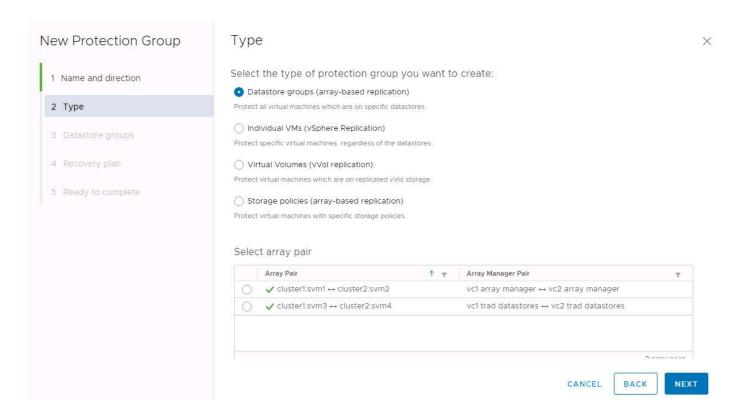

# **Unsupported layouts**

Unsupported configurations have data (VMDK or RDM) on multiple SVMs that is owned by an individual VM. In the examples shown in the following figures, VM1 cannot be configured for protection with SRM because VM1 has data on two SVMs.

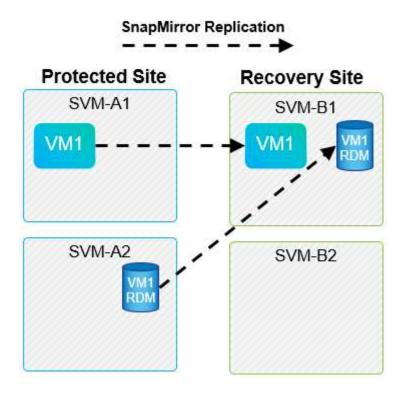

# Protected Site Recovery Site SVM-A1 SVM-B1 VM1 SVM-B2 VM1 SVM-B2


Any replication relationship in which an individual NetApp volume is replicated from one source SVM to multiple destinations in the same SVM or in different SVMs is referred to as SnapMirror fan-out. Fan-out is not supported with SRM. In the example shown in the following figure, VM1 cannot be configured for protection in SRM because it is replicated with SnapMirror to two different locations.



## **SnapMirror cascade**

SRM does not support cascading of SnapMirror relationships, in which a source volume is replicated to a destination volume and that destination volume is also replicated with SnapMirror to another destination

volume. In the scenario shown in the following figure, SRM cannot be used for failover between any sites.

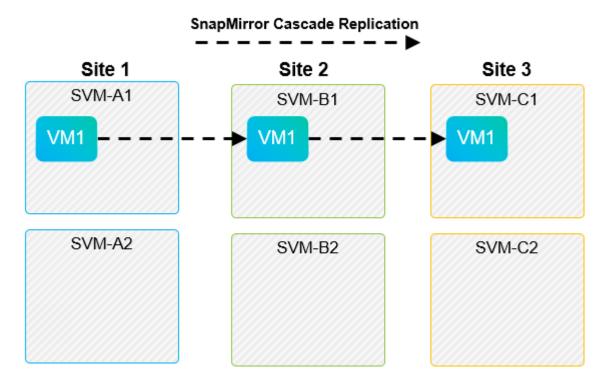

## SnapMirror and SnapVault

NetApp SnapVault software enables disk-based backup of enterprise data between NetApp storage systems. SnapVault and SnapMirror can coexist in the same environment; however, SRM supports the failover of only the SnapMirror relationships.



The NetApp SRA supports the mirror-vault policy type.

SnapVault was rebuilt from the ground up for ONTAP 8.2. Although former Data ONTAP 7-Mode users should find similarities, major enhancements have been made in this version of SnapVault. One major advance is the ability to preserve storage efficiencies on primary data during SnapVault transfers.

An important architectural change is that SnapVault in ONTAP 9 replicates at the volume level as opposed to at the qtree level, as is the case in 7-Mode SnapVault. This setup means that the source of a SnapVault relationship must be a volume, and that volume must replicate to its own volume on the SnapVault secondary system.

In an environment in which SnapVault is used, specifically named Snapshot copies are created on the primary storage system. Depending on the configuration implemented, the named Snapshot copies can be created on the primary system by a SnapVault schedule or by an application such as NetApp Active IQ Unified Manager. The named Snapshot copies that are created on the primary system are then replicated to the SnapMirror destination, and from there they are vaulted to the SnapVault destination.

A source volume can be created in a cascade configuration in which a volume is replicated to a SnapMirror destination in the DR site, and from there it is vaulted to a SnapVault destination. A source volume can also be created in a fan-out relationship in which one destination is a SnapMirror destination and the other destination is a SnapVault destination. However, SRA does not automatically reconfigure the SnapVault relationship to use the SnapMirror destination volume as the source for the vault when SRM failover or replication reversal occurs.


For the latest information about SnapMirror and SnapVault for ONTAP 9, see TR-4015 SnapMirror

## **Best Practice**


1. If SnapVault and SRM are used in the same environment, NetApp recommends using a SnapMirror to SnapVault cascade configuration in which SnapVault backups are normally performed from the SnapMirror destination at the DR site. In the event of a disaster, this configuration makes the primary site inaccessible. Keeping the SnapVault destination at the recovery site allows SnapVault backups to be reconfigured after failover so that SnapVault backups can continue while operating at the recovery site.

In a VMware environment, each datastore has a universal unique identifier (UUID), and each VM has a unique managed object ID (MOID). These IDs are not maintained by SRM during failover or failback. Because datastore UUIDs and VM MOIDs are not maintained during failover by SRM, any applications that depend on these IDs must be reconfigured after SRM failover. An example application is NetApp Active IQ Unified Manager, which coordinates SnapVault replication with the vSphere environment.

The following figure depicts a SnapMirror to SnapVault cascade configuration. If the SnapVault destination is at the DR site or at a tertiary site that is not affected by an outage at the primary site, the environment can be reconfigured to allow backups to continue after failover.

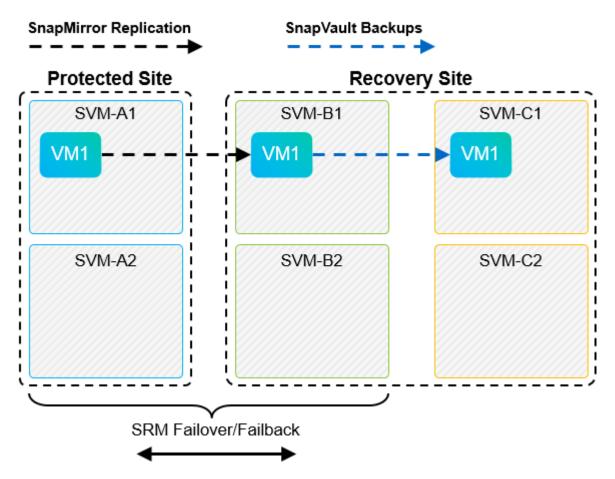

The following figure depicts the configuration after SRM has been used to reverse SnapMirror replication back to the primary site. The environment has also been reconfigured such that SnapVault backups are occurring from what is now the SnapMirror source. This setup is a SnapMirror SnapVault fan-out configuration.

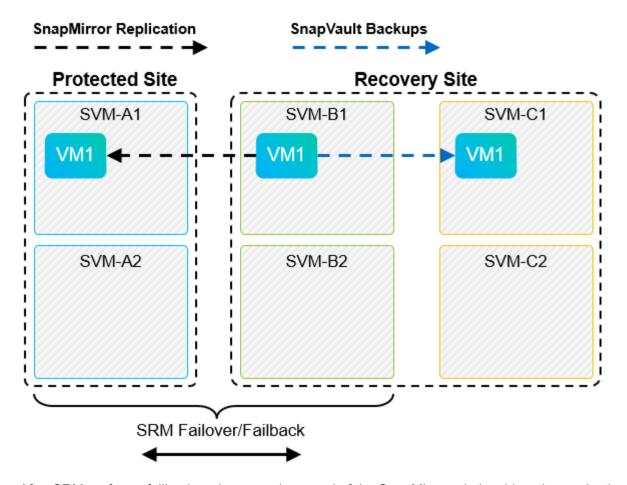

After SRM performs failback and a second reversal of the SnapMirror relationships, the production data is back at the primary site. This data is now protected in the same way that it was before the failover to the DR site—through SnapMirror and SnapVault backups.

## Use of Qtrees in Site Recovery Manager environments

Qtrees are special directories that allow the application of file system quotas for NAS. ONTAP 9 allows the creation of qtrees, and qtrees can exist in volumes that are replicated with SnapMirror. However, SnapMirror does not allow replication of individual qtrees or qtree-level replication. All SnapMirror replication is at the volume level only. For this reason, NetApp does not recommend the use of qtrees with SRM.

## Mixed FC and iSCSI environments

With the supported SAN protocols (FC, FCoE, and iSCSI), ONTAP 9 provides LUN services—that is, the ability to create and map LUNs to attached hosts. Because the cluster consists of multiple controllers, there are multiple logical paths that are managed by multipath I/O to any individual LUN. Asymmetric logical unit access (ALUA) is used on the hosts so that the optimized path to a LUN is selected and is made active for data transfer. If the optimized path to any LUN changes (for example, because the containing volume is moved), ONTAP 9 automatically recognizes and nondisruptively adjusts for this change. If the optimized path becomes unavailable, ONTAP can nondisruptively switch to any other available path.

VMware SRM and NetApp SRA support the use of the FC protocol at one site and the iSCSI protocol at the other site. It does not support having a mix of FC-attached datastores and iSCSI-attached datastores in the same ESXi host or in different hosts in the same cluster, however. This configuration is not supported with SRM because, during the SRM failover or test failover, SRM includes all FC and iSCSI initiators in the ESXi hosts in the request.

## **Best Practice**

1. SRM and SRA support mixed FC and iSCSI protocols between the protected and recovery sites. However, each site should be configured with only one protocol, either FC or iSCSI, not both protocols at the same site. If a requirement exists to have both FC and iSCSI protocols configured at the same site, NetApp recommends that some hosts use iSCSI and other hosts use FC. NetApp also recommends in this case that SRM resource mappings be set up so that the VMs are configured to fail over into one group of hosts or the other.

## Copyright information

Copyright © 2023 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

### **Trademark information**

NETAPP, the NETAPP logo, and the marks listed at <a href="http://www.netapp.com/TM">http://www.netapp.com/TM</a> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.