STC12C5620AD series MCU STC12LE5620AD series MCU Data Sheet

STC MCU Limited

Update date: 2011-7-15

CONTENTS

Chapter 1. Introduction	7
1.1 Features	7
1.2 Block diagram	
1.3 Pin Configurations	
1.4 STC12C5620AD series Selection Table	
1.5 STC12C5620AD series Minimum Application System	
1.6 STC12C5620AD series MCU Typical Application Circuit for ISP	
1.6.1 STC12C5620AD series MCU (28 pin) Typical Application Circuit for ISP	
1.6.2 STC12C5620AD series MCU (20 pin) Typical Application Circuit for ISP	
1.6.3 STC12C5620AD series MCU (32 pin) Typical Application Circuit for ISP	
1.7 Pin Descriptions	18
1.7 Pin Descriptions1.8 Package Dimension Drawings	20
1.9 STC12C5620AD series MCU naming rules	
1.10 Global Unique Identification Number (ID)	
Chapter 2. Clock, Power Management and Reset	
2.1 Clock	
2.1.1 On-Chip R/C Clock and External Crystal/Clcok are Optional in STC-ISP.exe	
2.1.2 Divider for System Clock	
2.1.3 How to Know Internal RC Oscillator frequency(Internal clock frequency)	
2.1.4 Programmable Clock Output	
2.1.4.1 Timer 0 Programmable Clock-out on P1.0	
2.1.4.2 Timer 1 Programmable Clock-out on P1.1	
2.2 Power Management Modes	
2.2.1 Slow Down Mode	
2.2.2 Idle Mode	
2.2.3 Stop / Power Down (PD) Mode and Demo Program (C and ASM)	
2.3 RESET Sources	
2.3.1 RESET Pin	
222 C C DECET	
2.3.2 Software RESET	
2.3.3 Power-On Reset (POR)	. 48
	. 48

2.3.6 Watch-Dog-Timer	52
2.3.7 Warm Boot and Cold Boot Reset	56
Chapter 3. Memory Organization	57
3.1 Program Memory	57
3.2 Data Memory(SRAM)	
3.2.1 On-chip Scratch-Pad RAM	58
3.2.2 Auxiliary RAM	
3.3 Special Function Registers	
3.3.1 Special Function Registers Address Map	
3.3.2 Special Function Registers Bits Description	
Chapter 4. Configurable I/O Ports of STC12C5620AD s	eries 71
4.1 I/O Ports Configurations 4.2 I/O ports Modes 4.2.1 Quasi-bidirectional I/O	71
4.2 I/O ports Modes	74
4.2.1 Quasi-bidirectional I/O	74
4.2.2 Push-pull Output	
4.2.3 Input-only (High-Impedance)Mode	
4.2.4 Open-drain Output	
4.4 Typical transistor control circuit	
4.5 Typical diode control circuit	
4.6 3V/5V hybrid system	
4.7 How to make I/O port low after MCU reset	
4.8 I/O status while PWM outputing	
4.9 I/O drive LED application circuit	
4.10 I/O immediately drive LCD application circuit	
4.11 Using A/D Conversion to scan key application circuit	
Chapter 5. Instruction System	
•	
5.1 Addressing Modes	
5.2 Instruction Set Summary	
5.3 Instruction Definitions	
Chapter 6. Interrupt System	
6.1 Interrupt Structure	
6.2 Interrupt Register	
6.3 Interrupt Priorities	139

	6.4 How Interrupts Are Handled	140
	6.5 External Interrupts	141
	6.6 Response Time	145
	6.7 Demo Programs about Interrupts (C and ASM)	146
	6.7.1 External Interrupt 0 (INTO) Demo Programs (C and ASM)	
	6.7.2 External Interrupt 1 (INT1) Demo Programs (C and ASM)	
	6.7.3 Programs of P3.4/T0 Interrupt(falling edge) used to wake up PD mode	154
	6.7.4 Programs of P3.5/T1 Interrupt(falling edge) used to wake up PD mode	156
	6.7.5 Program of P3.0/RxD Interrupt(falling edge) used to wake up PD mode	
	6.7.6 Program of PCA Interrupt used to wake up Power Down mode	
(Chapter 7. Timer/Counter 0/1	165
	Chapter 7. Timer/Counter 0/1	165
	7.2 Timer/Counter 0 Mode of Operation (Compatible with traditional 8051 MCU)	
	7.2.1 Mode 0 (13-bit Timer/Counter)	
	7.2.2 Mode 1 (16-bit Timer/Counter) and Demo Programs (C and ASM)	
	7.2.3 Mode 2 (8-bit Auto-Reload Mode) and Demo Programs (C and ASM)	174
	7.2.4 Mode 3 (Two 8-bit Timers/Couters)	177
	7.3 Timer/Counter 1 Mode of Operation	178
	7.3.1 Mode 0 (13-bit Timer/Counter)	178
	7.3.2 Mode 1 (16-bit Timer/Counter) and Demo Programs (C and ASM)	179
	7.3.3 Mode 2 (8-bit Auto-Reload Mode) and Demo Programs (C and ASM)	183
	7.4 Programmable Clock Output and Demo Programs (C and ASM)	186
	7.4.1 Timer 0 Programmable Clock-out on P1.0 and Demo Program	188
	7.4.2 Timer 1 Programmable Clock-out on P1.1 and Demo Program	191
	7.5 Application note for Timer in practice	194
(Chapter 8. UART with Enhanced Function	195
	8.1 Special Function Registers about UART	
	8.2 UART1 Operation Modes	
	8.2.1 Mode 0: 8-Bit Shift Register.	
	8.2.2 Mode 1: 8-Bit UART with Variable Baud Rate	
	8.2.3 Mode 2: 9-Bit UART with Fixed Baud Rate	
	8.2.4 Mode 3: 9-Bit UART with Variable Baud Rate	206
	8.3 Frame Error Detection	
	8.4 Multiprocessor Communications	
	8.5 Automatic Address Recognition	
		- 0 /

8.6 Buad Rates	211
8.7 Demo Programs about UART (C and ASM)	212
Chapter 9. Analog to Digital Converter	
9.1 A/D Converter Structure	
9.2 Registers for ADC	
9.3 Application Circuit of A/D Converter	
9.4 ADC Application Circuit for Key Scan	
9.5 A/D reference voltage source	
9.6 Program using interrupts to demostrate A/D Conversion	
9.7 Program using polling to demostrate A/D Conversion	232
9.7 Program using polling to demostrate A/D Conversion	238
10.1 SFRs related with PCA	238
10.1 SFRs related with PCA	245
10.3 PCA Modules Operation Mode	247
10.3.1 PCA Capture Mode	247
10.3.2 16-bit Software Timer Mode	248
10.3.3 High Speed Output Mode	
10.3.4 Pulse Width Modulator Mode (PWM mode)	250
10.4 Programs for PCA module extended external interrupt	251
10.5 Demo Programs for PCA module acted as 16-bit Timer	255
10.6 Programs for PCA module as 16-bit High Speed Output	259
10.7 Demo Programs for PCA module as PWM Output	263
10.8 Demo Program for PCA clock base on Timer 1 overflow rate	267
10.9 Using PWM achieve D/A Conversion function reference circuit	271
Chapter 11. Serial Peripheral Interface (SPI)	272
11.1 Special Function Registers related with SPI	272
11.2 SPI Structure	
11.3 SPI Data Communication	
11.3.1 SPI Configuration	
11.3.2 SPI Data Communication Modes	
11.3.3 SPI Data Modes	
11.4 SPI Function Demo Programs (Single Master — Single Slave)	281
11.4.1 SPI Function Demo Programs using Interrupts (C and ASM)	
11.4.2 SPI Function Demo Programs using Polling (C and ASM)	287

11.5 SPI Function Demo Programs (Each other as the Master-Slave)	293
11.5.1 SPI Function Demo Programs using Interrupts (C and ASM)	
11.5.2 SPI Function Demo Programs using Polling	
Chapter 12. IAP / EEPROM	.305
12.1 IAP / EEPROM Special Function Registers	. 306
12.2 STC12C5620AD series Internal EEPROM Allocation Table	
12.3 IAP/EEPROM Assembly Language Program Introduction	. 310
12.4 EEPROM Demo Program (C and ASM)	. 313
Chapter 13. STC12 series Development/Programming Tool	.321
13.1 In-System-Programming (ISP) principle	
13.2 STC12C5620AD series Typical Application Circuit for ISP	
13.3 PC side application usage	
13.4 Compiler / Assembler Programmer and Emulator	
13.5 Self-Defined ISP download Demo	
Appendix A: Assembly Language Programming	
Appendix B: 8051 C Programming	
Appendix C: STC12C5620AD series Electrical Characteris	
••••••	.362
Appendix D: Program for indirect addressing inner 256B R	AM
***************************************	.364
Annandiy F. Using Sovial nort aynand I/O interface	
Appendix E: Using Serial port expand I/O interface	
Appendix F: Use STC MCU common I/O driving LCD Dis	play
	play
Appendix F: Use STC MCU common I/O driving LCD Dis	play .367
Appendix F: Use STC MCU common I/O driving LCD Dis	play .367 .374
Appendix F: Use STC MCU common I/O driving LCD Dis Appendix G: LED driven by an I/O port and Key Scan Appendix H: How to reduce the Length of Code through Key	play .367 .374 eil C
Appendix F: Use STC MCU common I/O driving LCD Dis Appendix G: LED driven by an I/O port and Key Scan Appendix H: How to reduce the Length of Code through K	play .367 .374 eil C .375
Appendix F: Use STC MCU common I/O driving LCD Dis Appendix G: LED driven by an I/O port and Key Scan Appendix H: How to reduce the Length of Code through Key	play .367 .374 eil C .375
Appendix F: Use STC MCU common I/O driving LCD Dis Appendix G: LED driven by an I/O port and Key Scan Appendix H: How to reduce the Length of Code through K	play .367 .374 eil C .375

Chapter 1. Introduction


STC12C5620AD is a single-chip microcontroller based on a high performance 1T architecture 8051 CPU, which is produced by STC MCU Limited. With the enhanced kernel, STC12C5620AD executes instructions in 1~6 clock cycles (about 8~12 times the rate of a standard 8051 device), and has a fully compatible instruction set with industrial-standard 8051 series microcontroller. In-System-Programming (ISP) and In-Application-Programming (IAP) support the users to upgrade the program and data in system. ISP allows the user to download new code without removing the microcontroller from the actual end product; IAP means that the device can write non-valatile data in Flash memory while the application program is running. The STC12C5620AD retains all features of the standard 80C51. In addition, the STC12C5620AD has a 9-sources, 4-priority-level interrupt structure, 10-bit ADC(100 thousands times per second), on-chip crystal oscillator, MAX810 special reset circuit, 4-channel PCA and PWM, SPI, a one-time enabled Watchdog Timer and so on.

1.1 Features

- Enhanced 8051 Central Processing Unit, 1T per machine cycle, faster 8~12 times than the rate of a standard 8051.
- Operating voltage range: $5.5V \sim 3.5V$ or $2.2V \sim 3.6V$ (STC12LE5620AD).
- Operating frequency range: 0-35MHz, is equivalent to standard 8051:0~420MHz
- On-chip 30K/28K/24K/20K/16K/12K/8K/4K... FLASH program memory with flexible ISP/IAP capability
- · On-chip 768 byte RAM
- Power control: idle mode(can be waked up by any interrupt) and power-down mode(can be waked up by external interrupts).
- · Code protection for flash memory access
- · Excellent noise immunity, very low power consumption
- six 16-bit timer/counter, be compatible with Timer0/Timer1 of standard 8051, 4-channel PCA can be
 available as four timers.
- 9 vector-address, 4 level priority interrupt capability
- One enhanced UART with hardware address-recognition and frame-error detection function
- One 15 bits Watch-Dog-Timer with 8-bit pre-scaler (one-time-enabled)
- SPI Master/Slave communication interface
- Four channel Programmable Counter Array (PCA)
- 10-bit, 8-channel high-speed Analog-to-Digital Converter (ADC), up to 100 thousands times per second
- · Simple internal RC oscillator and external crystal clock
- Three power management modes: idle mode, slow down mode and power-down mode
- Power down mode can be woken-up by P3.2/INT0, P3.3/INT1, P3.4/T0, P3.5/T1, P3.0/RxD, P3.7/PCA0, and P3.5/PCA1, PCA2/P2.0, PCA3/P2.4
- Operation Temperature: $-40 \sim +85$ °C (industrial) $/ 0 \sim 75$ °C (Commercial)
- Common (27/23/15) programmable I/O ports are available
- Programmable clock output Function. T0 output the clock on P1.0, T1 output the clock on P1.1.
- Five package type: LQFP-32, SOP-32, SOP-28, SKDIP-28, SOP-20, DIP-20, LSSOP-20.

1.2 Block diagram

The CPU kernel of STC12C5620AD is fully compatible to the standard 8051 microcontroller, maintains all instruction mnemonics and binary compatibility. With some great architecture enhancements, STC12C5620AD executes the fastest instructions per clock cycle. Improvement of individual programs depends on the actual instructions used.

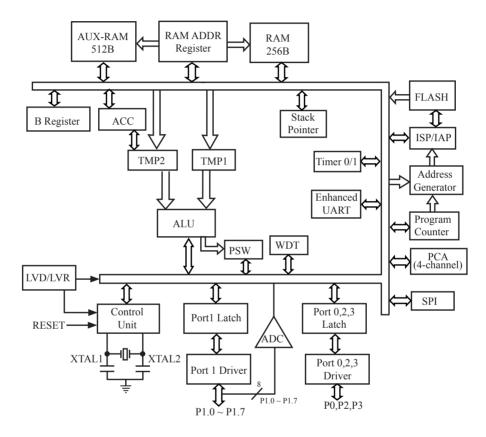


STC12C5620AD Block Diagram

1.3 Pin Configurations

All packages meet the European Union RoHS standards. LQFP-32 also conform to the Green standard.


Packages such as SOP-20/28/32 and LQFP-32 are strongly recommended though the traditional DIP packages are steady supplied.

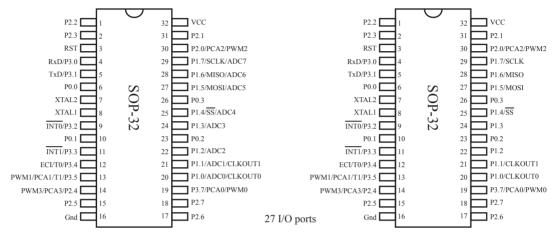

STC12C5620AD series (with A/D Converter), SOP-32


STC12C5620 series (without A/D Converter), SOP-32

LQFP-32 Package: length×width = 9mm×9mm, height < 1.6mm

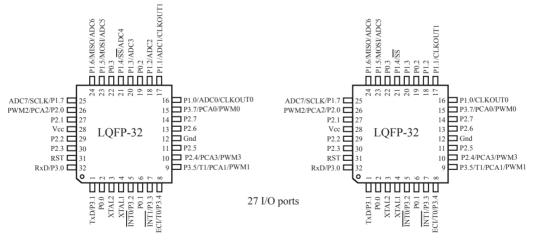

STC12C5620AD series (with A/D Converter), LQFP-32

STC12C5620 series (without A/D Converter), LQFP-32

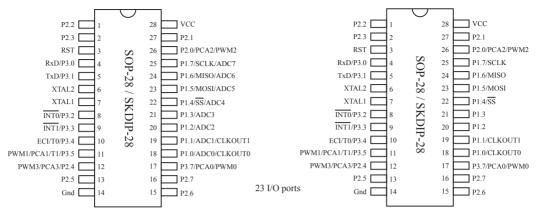

STC12C5620AD series (with A/D Converter), 28-Pin

STC12C5620 series (without A/D Converter), 28-Pin



Super small package: TSSOP-20, 6.4mm×6.4mm

1.4 STC12C5620AD series Selection Table


Type 1T 8051 MCU	Operation Voltage (V)	Flash (Byte)	SRAM (Byte)	Timer T0&T1	PCA Timer	Programmable Clock Output	U A R T	EEP ROM	16-bit PCA/ 8-bit PWM D/A	A/D 8-ch	W D T	Built-in Reset	SPI	Package of 20-Pin (15 I/O ports)	Package of 28-Pin (23 I/O ports)	Package of 32-Pin (27 I/O ports)
	STC12C5620AD series Selection Table															
STC12C5604	5.5-3.5	4K	768	Y	4	Y	Y	Y	2/4-ch		Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12C5604AD	5.5-3.5	4K	768	Y	4	Y	Y	Y	2/4-ch	10-bit	Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12C5608	5.5-3.5	8K	768	Y	4	Y	Y	Y	2/4-ch		Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12C5608AD	5.5-3.5	8K	768	Y	4	Y	Y	Y	2/4-ch	10-bit	Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12C5612	5.5-3.5	12K	768	Y	4	Y	Y	IAP	2/4-ch		Y	Y	Y	Application pro	gram can be n	nodified in
STC12C5612AD	5.5-3.5	12K	768	Y	4	Y	Y	IAP	2/4-ch	10-bit	Y	Y	Y	application pr	rogram area (A	AP area)
STC12C5616	5.5-3.5	16K	768	Y	4	Y	Y	Y	2/4-ch		Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12C5616AD	5.5-3.5	16K	768	Y	4	Y	Y	Y	2/4-ch	10-bit	Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12C5620	5.5-3.5	20K	768	Y	4	Y	Y	Y	2/4-ch		Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12C5620AD	5.5-3.5	20K	768	Y	4	Y	Y	Y	2/4-ch	10-bit	Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12C5624	5.5-3.5	24K	768	Y	4	Y	Y	Y	2/4-ch		Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12C5624AD	5.5-3.5	24K	768	Y	4	Y	Y	Y	2/4-ch	10-bit	Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12C5628	5.5-3.5	28K	768	Y	4	Y	Y	IAP	2/4-ch		Y	Y	Y	Application pro application pr		
STC12C5628AD	5.5-3.5	28K	768	Y	4	Y	Y	IAP	2/4-ch	10-bit	Y	Y	Y	Application pro application pr		
STC12C5630	5.5-3.5	30K	768	Y	4	Y	Y	IAP	2/4-ch		Y	Y	Y	Application pro application pr		
STC12C5630AD	5.5-3.5	30K	768	Y	4	Y	Y	IAP	2/4-ch	10-bit	Y	Y	Y	Application pro application pr		
				S	TC12	2LE5620AI) s	eries	Select	ion Ta	abl	e				
STC12LE5604	3.6-2.2	4K	768	Y	4	Y	Y	Y	2/4-ch		Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12LE5604AD	3.6-2.2	4K	768	Y	4	Y	Y	Y	2/4-ch	10-bit	Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12LE5608	3.6-2.2	8K	768	Y	4	Y	Y	Y	2/4-ch		Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12LE5608AD	3.6-2.2	8K	768	Y	4	Y	Y	Y	2/4-ch	10-bit	Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12LE5612	3.6-2.2	12K	768	Y	4	Y	Y	Y	2/4-ch		Y	Y	Y	Application pro		
STC12LE5612AD	3.6-2.2	12K	768	Y	4	Y	Y	Y	2/4-ch	10-bit	Y	Y	Y	application pr	rogram area (A	AP area)
STC12LE5616	3.6-2.2	16K	768	Y	4	Y	Y	Y	2/4-ch		Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12LE5616AD	3.6-2.2	16K	768	Y	4	Y	Y	Y	2/4-ch	10-bit	Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12LE5620	3.6-2.2	20K	768	Y	4	Y	Y	Y	2/4-ch		Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12LE5620AD	3.6-2.2	20K	768	Y	4	Y	Y	Y	2/4-ch	10-bit	Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12LE5624	3.6-2.2	24K	768	Y	4	Y	Y	Y	2/4-ch		Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12LE5624AD	3.6-2.2	24K	768	Y	4	Y	Y	Y	2/4-ch	10-bit	Y	Y	Y	SOP/LSSOP/DIP	SOP/SKDIP	SOP/LQFP
STC12LE5628	3.6-2.2	28K	768	Y	4	Y	Y	IAP	2/4-ch		Y	Y	Y	Application progapplication programme		
STC12LE5628AD	3.6-2.2	28K	768	Y	4	Y	Y	IAP	2/4-ch	10-bit	Y	Y	Y	Application pro application pr		
STC12LE5630	3.6-2.2	30K	768	Y	4	Y	Y	IAP	2/4-ch		Y	Y	Y	Application pro application pr		
STC12LE5630AD	3.6-2.2	30K	768	Y	4	Y	Y	IAP	2/4-ch	10-bit	Y	Y	Y	Application pro application pr		

1.5 STC12C5620AD series Minimum Application System

When the frequency of crystal oscillator is lower than 20MHz,

it is suggested not to use C1 and R1 replaced by 1K resistor connect to ground.

But R/C reset circuit is also suggest to reserve.

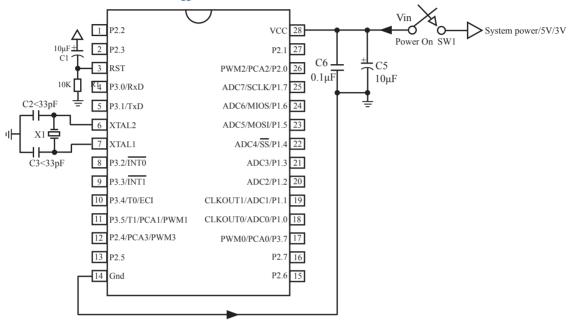

About crystals circuit:


If using internal R/C oscillator clock (4MHz \sim 8MHz, manufacturing error), XTAL1 and XTAL2 pin should be floated.

If External clock frequency is higher than 33MHz, it is recommended to directly use external active crystals which clock are input from XTAL1 pin and XTAL2 pin must be floated.

1.6 STC12C5620AD series MCU Typical Application Circuit for ISP

—— MCU should be connected to computer through RS-232 converter to download program


1.6.1 STC12C5620AD series MCU (28 pin) Typical Application Circuit for ISP

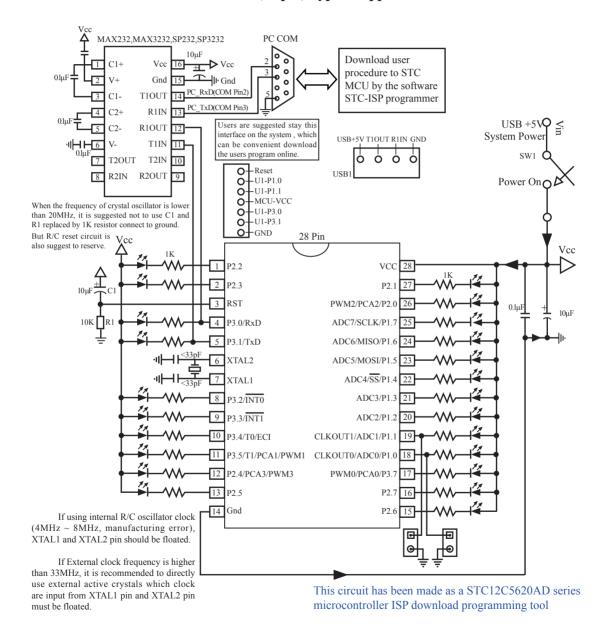

Users in their target system, such as the P3.0/P3.1 through the RS-232 level shifter connected to the computer after the conversion of ordinary RS-232 serial port to connect the system programming / upgrading client software. If the user panel recommended no RS-232 level converter, should lead to a socket, with Gnd/P3.1/P3.0/Vcc four signal lines, so that the user system can be programmed directly. Of course, if the six signal lines can lead to Gnd/P3.1/P3.0/Vcc/P1.1/P1.0 as well, because you can download the program by P1.0/P1.1 ISP ban. If you can Gnd/P3.1/P3.0/Vcc/P1.1/P1.0/Reset seven signal lines leads to better, so you can easily use "offline download board (no computer)" .

ISP programming on the Theory and Application Guide to see "STC12C5620AD Series MCU Development / Programming Tools Help"section. In addition, we have standardized programming download tool, the user can then program into the goal in the above systems, you can borrow on top of it RS-232 level shifter connected to the computer to download the program used to do. Programming a chip roughly be a few seconds, faster than the ordinary universal programmer much faster, there is no need to buy expensive third-party programmer? PC STC-ISP software downloaded from the website

1.6.2 STC12C5620AD series MCU (20 pin) Typical Application Circuit for ISP

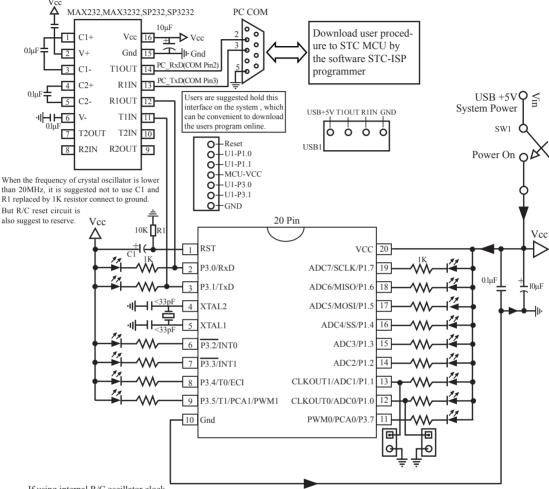

If using internal R/C oscillator clock (4MHz ~ 8MHz, manufacturing error), XTAL1 and XTAL2 pin should be floated.

If External clock frequency is higher than 33MHz, it is recommended to directly use external active crystals which clock are input from XTAL1 pin and XTAL2 pin must be floated.


This circuit has been made as a STC12C5620AD series microcontroller ISP download programming tool

Users in their target system, such as the P3.0/P3.1 through the RS-232 level shifter connected to the computer after the conversion of ordinary RS-232 serial port to connect the system programming / upgrading client software. If the user panel recommended no RS-232 level converter, should lead to a socket, with Gnd/P3.1/P3.0/Vcc four signal lines, so that the user system can be programmed directly. Of course, if the six signal lines can lead to Gnd/P3.1/P3.0/Vcc/P1.1/P1.0 as well, because you can download the program by P1.0/P1.1 ISP ban. If you can Gnd/P3.1/P3.0/Vcc/P1.1/P1.0/Reset seven signal lines leads to better, so you can easily use "offline download board (no computer)" .

ISP programming on the Theory and Application Guide to see "STC12C5620AD Series MCU Development / Programming Tools Help"section. In addition, we have standardized programming download tool, the user can then program into the goal in the above systems, you can borrow on top of it RS-232 level shifter connected to the computer to download the program used to do. Programming a chip roughly be a few seconds, faster than the ordinary universal programmer much faster, there is no need to buy expensive third-party programmer?

PC STC-ISP software downloaded from the website

1.6.3 STC12C5620AD series MCU (32 pin) Typical Application Circuit for ISP

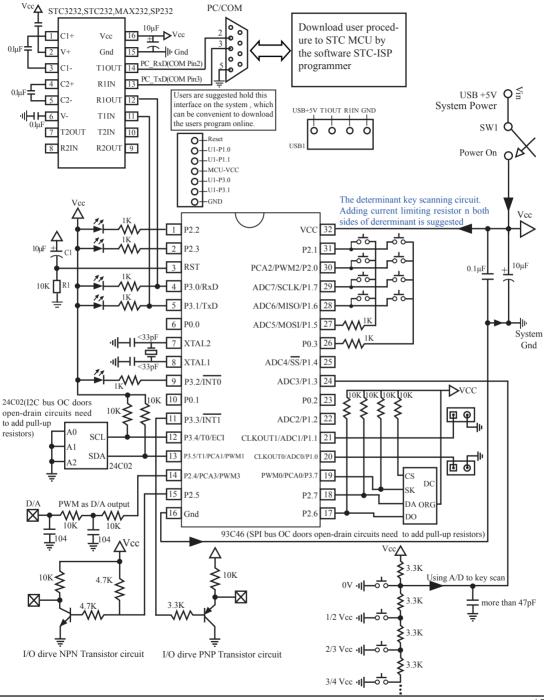


1.7 Pin Descriptions


		F	Pin Number				
MNEMONIC	LQFP-32	SOP-32	SOP-28/ SKDIP-28	SOP-20/DIP-20/ TSSOP-20		Description	
P0.0	2	6			common I/O port PORT0[0]		
P0.1	6	10			common I/0	O port PORT0[1]	
P0.2	19	23			common I/0	O port PORT0[2]	
P0.3	22	26			common I/0	O port PORT0[3]	
					P1.0	common I/O port PORT1[0]	
P1.0/ADC0/CLKOUT0	16	20	18	12	ADC0	Analog to Digital Converter Input channel 0	
					CLKOUT0	Programmable clock output of Timer/couter 0	
					P1.1	common I/O port PORT1[1]	
P1.1/ADC1/CLKOUT1	17	21	19	13	ADC1	Analog to Digital Converter Input channel 1	
					CLKOUT1	rogrammable clock output of Timer/counter 1	
					P1.2	common I/O port PORT1[2]	
P1.2/ADC2	18	22	20	14	ADC2	Analog to Digital Converter Input channel 2	
					P1.3	common I/O port PORT1[3]	
P1.3/ADC3	20	24	21	15	ADC3	Analog to Digital Converter Input channel 3	
					P1.4	common I/O port PORT1[4]	
P1.4/ADC4/ SS	21	25	22	16	ADC4	Analog to Digital Converter Input channel 4	
					SS	slave-select signal of serial peripheral interface, which is active low.	
					P1.5	common I/O port PORT1[5]	
P1.5/ADC5/MOSI	23	27	23	17	ADC5	Analog to Digital Converter Input channel 5	
					MOSI	Master Out, Slave In signal	
					P1.6	common I/O port PORT1[6]	
P1.6/ADC6/MISO	24	28	24	18	ADC5	Analog to Digital Converter Input channel 6	
					MISO	Master In, Slave Out signal	
					P1.7	common I/O port PORT1[7]	
P1.7/ADC7/SCLK	25	29	25	19	ADC7	Analog to Digital Converter Input channel 7	
					SCLK	The clock signal of serial peripheral interface	

		P	in Number					
MNEMONIC	LQFP-32	SOP-32	SOP-28/ SKDIP-28	SOP-20/DIP-20/ TSSOP-20		Description		
					P2.0	common I/O port PORT2[0]		
P2.0/PCA2/PWM2	26	30	26		PCA2	PCA module 2 Capture input		
					PWM2	PWM module 2 output		
P2.1	27	31	27		common I	/O port PORT2[1]		
P2.2	29	1	1		common I	/O port PORT2[2]		
P2.3	30	2	2		common I	/O port PORT2[3]		
					P2.4	common I/O port PORT2[4]		
P2.4/PCA3/PWM3	10	14	12		PCA3	PCA module 3 Capture input		
					PWM3	PWM module 3 output		
P2.5	11	15	13		common I	O port PORT2[5]		
P2.6	13	17	15		common I	/O port PORT2[6]		
P2.7	14	18	16		common I	/O port PORT2[7]		
D2.0/D. D	22		,		P3.0	common I/O port PORT3[0]		
P3.0/RxD	32	4	4	2	RxD	Serial recive port		
D2 1/E D	1	_	_	2	P3.1	common I/O port PORT3[1]		
P3.1/TxD	1	5	5	3	TxD	Serial transmit port		
			_	P3.2	common I/O port PORT3[2]			
P3.2/INT0	5	9	8	6	ĪNT0	External interrupt 0		
	_			_	P3.3	common I/O port PORT3[3]		
P3.3/INT1	7	11	9	7	ĪNT1	External interrupt 1		
					P3.4	common I/O port PORT3[4]		
P3.4/T0/ECI	8	12	10	8	Т0	Timer/counter 0 input		
					ECI	PCA count input		
					P3.5	common I/O port PORT3[5]		
D2 5 /T1 /DC 1 1 /DV 7 41		1.0	٠		T1	Timer/counter 1 input		
P3.5/T1/PCA1/PWM1	9	13	11	9	PCA1	PCA module 1 Capture input		
					PWM1	PWM module 1 output		
					P3.7	common I/O port PORT3[7]		
P3.7/PCA0/PWM0	15	19	17	11	PCA0	PCA module 0 Capture input		
					PWM0	PWM module 0 output		
RST	31	3	3	1	Reset inpu	ıt .		
XTAL1	4	8	7	5	the extern	Input to the inverting oscillator amplifier. Receives the external oscillator signal when an external oscillator is used.		
XTAL2	3	7	6	4	be floated	Output from the inverting amplifier. This pin should be floated when an external oscillator is used.		
VCC	28	32	28	20	Power	Power		
Gnd	12	16	14	10	circuit gro	ound potential		

1.8 Package Dimension Drawings

LQFP-32 OUTLINE PACKAGE

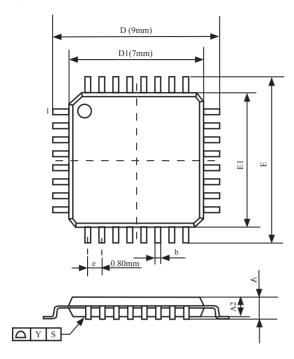

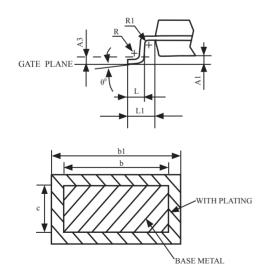

VARIATIONS (ALL DIMENSIONS SHOWN IN MM)

SYMBOLS	MIN.	NOM	MAX.
A	1.45	1.55	1.65
A1	0.01	-	0.21
A2	1.35	1.40	1.45
A3	-	0.254	-
D	8.80	9.00	9.20
D1	6.90	7.00	7.10
Е	8.80	9.00	9.20
E1	6.90	7.00	7.10
e		0.80	
b	0.3	0.35	0.4
bl	0.31	0.37	0.43
С	-	0.127	-
L	0.43	-	0.71
L1	0.90	1.00	1.10
R	0.1	-	0.25
R1	0.1	-	-
θ_0	00	-	10°


NOTES:


- 1. All dimensions are in mm
- 2. Dim D1 AND E1 does not include plastic


Flash:Plastic residual around body edge after de junk/singulation


- 3. Dim b does not include dambar protrusion/intrusion.
- 4. Plating thickness 0.05~0.015 mm.


32-Pin Small Outline Package (SOP-32)Dimensions in Millimeters

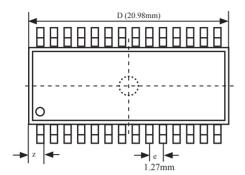





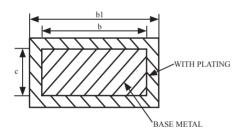






COMMON DIMENSIONS							
(UNITS OF MEASURE = MILLMETER)							
MIN	NOM	MAX					
2.465	2.515	2.565					
0.100	0.150	0.200					
2.100	2.300	2.500					
0.356	0.406	0.456					
0.366	0.426	0.486					
-	0.254	-					
20.88	20.98	21.08					
9.980	10.180	10.380					
7.390	7.500	7.600					
	1.27						
0.700	0.800	0.900					
1.303	1.403	1.503					
-	0.274	-					
-	0.200	-					
-	0.300	-					
00	-	100					
	0.745	-					
	MEASUR MIN 2.465 0.100 2.100 0.356 0.366 - 20.88 9.980 7.390 0.700 1.303	MEASURE = MILI MIN NOM 2.465 2.515 0.100 0.150 2.100 2.300 0.356 0.406 0.366 0.426 - 0.254 20.88 20.98 9.980 10.180 7.390 7.500 1.27 0.700 0.800 1.303 1.403 - 0.274 - 0.200 - 0.300 0° -					


28-Pin Small Outline Package (SOP-28)


Dimensions in Millimeters

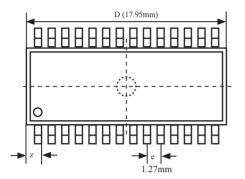





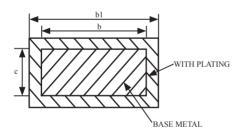





COMMON DIMENSIONS							
(UNITS OF MEASURE = MILLMETER)							
SYMBOL	MIN	NOM	MAX				
A	2.465	2.515	2.565				
A1	0.100	0.150	0.200				
A2	2.100	2.300	2.500				
b	0.356	0.406	0.456				
b1	0.366	0.426	0.486				
c	-	0.254	-				
D	17.750	17.950	18.150				
Е	10.100	10.300	10.500				
E1	7.424	7.500	7.624				
e		1.27					
L	0.764	0.864	0.964				
L1	1.303	1.403	1.503				
L2	-	0.274	-				
R	-	0.200	-				
R1	-	0.300	-				
Φ	00	-	10°				
Z	-	0.745	-				

28-Pin Plastic Dual-In-line Package (SKDIP-28)

Dimensions in Inches and Millmeters










COMMON DIMENSIONS								
(UNITS	(UNITS OF MEASURE = INCH)							
SYMBOL	MIN	NOM	MAX					
A	-	-	0.210					
A1	0.015	-	-					
A2	0.125	0.130	0.135					
b	-	0.018	-					
b1	-	0.060	-					
D	1.385	1.390	1.40					
Е	-	0.310	-					
E1	0.283	0.288	0.293					
e	-	0.100	-					
L	0.115	0.130	0.150					
θ_0	0	7	15					
eA	0.330	0.350	0.370					


UNIT: INCH 1inch = 1000mil


20-Pin Small Outline Package (SOP-20)Dimensions in Inches and (Millimeters)

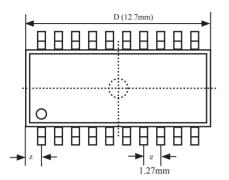






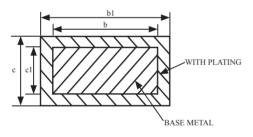




COMMON DIMENSIONS									
(UNITS OF MEASURE = MILLMETER)									
SYMBOL	MIN	NOM	MAX						
A	2.465	2.515	2.565						
A1	0.100	0.150	0.200						
A2	2.100	2.300	2.500						
b1	0.366	0.426	0.486						
b	0.356	0.406	0.456						
С	0.234	-	0.274						
c1	0.224	0.254	0.274						
D	12.500	12.700	12.900						
Е	10.206	10.306	10.406						
E1	7.450	7.500	7.550						
e		1.270							
L	0.800	0.864	0.900						
L1	1.303	1.403	1.503						
L2	-	0.274	-						
R	-	0.300	-						
R1	-	0.200	-						
Ф	00	-	100						
Z	-	0.660	-						

20-Pin Plastic Dual Inline Package (DIP-20)Dimensions in Inches

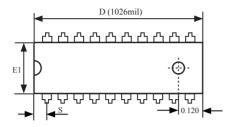






COMMON DIMENSIONS									
(UNITS OF MEASURE = INCH)									
SYMBOL	MIN	NOM	MAX						
A	-	-	0.175						
A1	0.015	-	-						
A2	0.125	0.13	0.135						
b	0.016	0.018	0.020						
b1	0.058	0.060	0.064						
С	0.008	0.010	0.11						
D	1.012	1.026	1.040						
Е	0.290	0.300	0.310						
E1	0.245	0.250	0.255						
e	0.090	0.100	0.110						
L	0.120	0.130	0.140						
θ_0	0	-	15						
eA	0.355	0.355	0.375						
S	-	-	0.075						

UNIT: INCH

1 inch = 1000 mil

1.9 STC12C5620AD series MCU naming rules

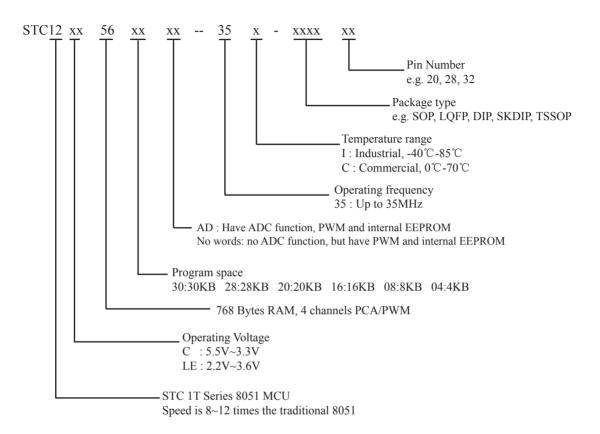

1.10 Global Unique Identification Number (ID)

STC 1T MCU 12C5620AD series, each MCU has a unique identification number (ID). User can use "MOV @Ri" instruction read RAM unit F1~F7 to get the ID number after power on. If users need to the unique identification number to encrypt their procedures, detecting the procedures not be illegally modified should be done first.

//The following example program written by C language is to read internal ID number

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* If you want to use the program or the program referenced in the --*/
/* article, please specify in which data and procedures from STC --*/
/*_____*/
#include<reg51.h>
#include<intrins.h>
sfr
       ISP CONTR
                      = 0xE7;
sbit
       MCU Start Led = P1^7;
               char
                       self command_array[4] = \{0x22,0x33,0x44,0x55\};
//unsigned
#define
       Self Define ISP Download Command
                                              0x22
       RELOAD COUNT
#define
                               0xfb
                                              //18.432MHz,12T,SMOD=0,9600bps
void
       serial port initial();
void
       send UART(unsigned char);
void
       UART Interrupt Receive(void);
       soft reset to ISP Monitor(void);
void
void
       delay(void);
void
       display MCU Start Led(void);
void main(void)
       unsigned char i = 0;
       unsigned char j = 0;
       unsigned char idata *idata point;
```

```
serial port initial();
                                                      //initialize serial port
//
         display MCU Start Led();
                                                      //MCU begin to run when LED is be lighted
//
         send UART(0x34);
//
         send UART(0xa7);
         idata point = 0xF1;
         for(j=0;j<=6; j++)
                  i = *idata point;
                  send UART(i);
                  idata point++;
         while(1);
}
void serial_port_initial()
                                                      //0101,0000 8-bit variable baud rate, No parity
         SCON
                  = 0x50;
         TMOD = 0x21;
                                                      //0011,0001 Timer1 as 8-bit auto-reload Timer
                                                      //Set the auto-reload parameter
         TH1
                  = RELOAD COUNT;
         TL1
                  = RELOAD COUNT;
         TR1
                  = 1;
         ES
                  = 1;
         EA
                  = 1;
}
void send_UART(unsigned char i)
         ES
                  = 0;
         ΤI
                  = 0;
         SBUF
                  = i;
         while(TI == 0);
         ΤI
                  = 0;
         ES
                  = 1;
}
void UART Interrupt Receive(void) interrupt 4
         unsigned char k = 0;
         if(RI==1)
         {
                  RI = 0;
                  k = SBUF;
```

```
if(k==Self Define ISP Download Command)
                                                                        //Self-define download command
                                                                        //just delay 1 second
                           delay();
                           delay();
                                                                        //Soft rese to ISP Monitor
                           soft reset to ISP Monitor();
                  send UART(k);
         else
                  TI = 0;
void soft reset to ISP Monitor(void)
        ISP CONTR = 0x60;
                                                               //0110,0000 Soft rese to ISP Monitor
void delay(void)
         unsigned int j = 0;
         unsigned int g = 0;
         for(j=0;j<5;j++)
                  for(g=0;g<60000;g++)
                           _nop_();
                           _nop_();
                           _nop_();
                           _nop_();
                           _nop_();
                  }
void display_MCU_Start_Led(void)
         unsigned char i = 0;
         for(i=0;i<3;i++)
                  MCU_Start_Led = 0;
                  delay();
                  MCU Start Led = 1;
                  delay();
                  MCU Start Led = 0;
```

Chapter 2. Clock, Power Management and Reset


2.1 Clock

2.1.1 On-Chip R/C Clock and External Crystal/Clcok are Optional in STC-ISP.exe

STC12C5620AD series is STC 1T MCU whose system clock is compatible with traditional 8051 MCU.

There are two clock sources available for STC12C5620AD. One is the clock from crystal oscillator and the other is from internal simple RC oscillator. The internal built-in RC oscillator can be used to replace the external crystal oscillator in the application which doesn't need an exact system clock. On-chip R/C clock is selected first in STC-ISP Writer/Programmer because the manufacturer's selection is on-chip R/C clock for STC12C5604AD, STC12C5608AD, STC12C5612AD, etc. But for STC12C5616AD, STC12C5620AD, STC12C5624AD, STC12C5628AD, STC12C5630AD and so on, External crystal/clock is selected first in STC-ISP Writer/Programmer because the manufacturer's selection is external crystal/clock.

To enable the built-in oscillator, user should enable the option "On-Chip R/C Clock" by STC-ISP Writer/Programmer for STC12C5616AD, STC12C5620AD, STC12C5624AD, STC12C5628AD, STC12C5630AD etc. To enable the external crystal oscillator, user should enable the option "External Crystal/Clock" by STC-ISP Writer/Programmer for STC12C5604AD, STC12C5608AD, STC12C5612AD, etc.

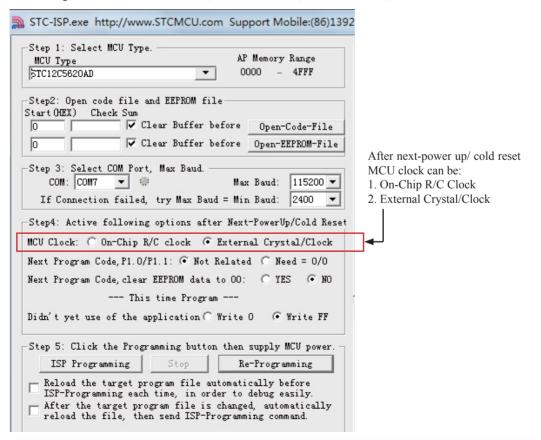

2.1.2 Divider for System Clock


A clock divider(CLK_DIV) is designed to slow down the operation speed of STC12C5620AD, to save the operating power dynamically. User can slow down the MCU by means of writing a non-zero value to the CLKS[2:0] bits in the CLK_DIV register. This feature is especially useful to save power consumption in idle mode as long as the user changes the CLKS[2:0] to a non-zero value before entering the idle mode.

CLK_DIV register (Clock Divider)

SFR Name	SFR Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
CLK_DIV	С7Н	name	-	-	-	-	-	CLKS2	CLKS1	CLKS0

B2-B0 (CLKS2-CLKS0):

- 000 External crystal/clock or On-Chip R/C clock is not divided (default state)
- 001 External crystal/clock or On-Chip R/C clock is divided by 2.
- 010 External crystal/clock or On-Chip R/C clock is divided by 4.
- 011 External crystal/clock or On-Chip R/C clock is divided by 8.
- 100 External crystal/clock or On-Chip R/C clock is divided by 16.
- 101 External crystal/clock or On-Chip R/C clock is divided by 32.
- 110 External crystal/clock or On-Chip R/C clock is divided by 64.
- 111 External crystal/clock or On-Chip R/C clock is divided by 128.

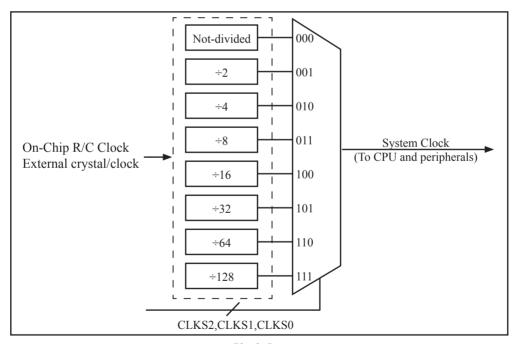

Clock Structure

2.1.3 How to Know Internal RC Oscillator frequency(Internal clock frequency)

STC 1T MCU 12C5620AD series in addition to traditional external clock, but also the option of using the internal RC oscillator clock source. If select internal RC oscillator, external crystal can be saved. XTAL1 and XTAL2 floating. Relatively large errors due to internal clock, so high requirements on the timing or circumstances have serial communication is not recommended to use the internal oscillator. User can use "MOV @Ri" instruction read RAM unit FC~FF to get the internal oscillator frequency of the factory and read RAM unit F8~FB to get internal oscillator frequency of last used to download programs within the internal oscillator after power on.

//The following example program written by C language is to read internal R/C clock frequency

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* If you want to use the program or the program referenced in the --*/
/* article, please specify in which data and procedures from STC --*/
/*_____*/
#include<reg51.h>
#include<intrins.h>
sfr
       ISP CONTR
                     = 0xE7:
       MCU Start Led = P1^7;
sbit
//unsigned
               char
                       self command array[4] = \{0x22,0x33,0x44,0x55\};
       Self Define ISP Download Command
                                              0x22
#define
#define RELOAD COUNT
                               0xfb
                                              //18.432MHz,12T,SMOD=0,9600bps
void
       serial port initial();
void
        send UART(unsigned char);
void
       UART Interrupt Receive(void);
void
        soft reset to ISP Monitor(void);
void
        delay(void):
void
        display MCU Start Led(void);
void main(void)
        unsigned char i = 0;
        unsigned char j = 0;
        unsigned char idata *idata point;
```

```
serial port initial();
                                                      //initialize serial port
//
         display MCU Start Led();
                                                      //MCU begin to run when LED is be lighted
//
         send UART(0x34);
//
         send UART(0xa7);
         idata point = 0xFC;
         for(j=0;j<=3;j++)
                  i = *idata point;
                  send UART(i);
                  idata point++;
         while(1);
void serial port initial()
         SCON
                  = 0x50;
                                                      //0101,0000 8-bit variable baud rate, No parity
                                                      //0011,0001 Timer1 as 8-bit auto-reload Timer
         TMOD = 0x21;
         TH1
                  = RELOAD_COUNT;
                                                      //Set the auto-reload parameter
         TL1
                  = RELOAD COUNT;
         TR1
                  = 1;
         ES
                  = 1;
         EΑ
                  = 1;
void send UART(unsigned char i)
         ES
                  = 0;
         ΤI
                  = 0;
         SBUF
                  = i;
         while(TI == 0);
         ΤI
                  = 0;
         ES
                  = 1;
}
void UART Interrupt Receive(void) interrupt 4
         unsigned char k = 0;
         if(RI==1)
         {
                  RI = 0;
```

k = SBUF;

```
if(k==Self Define ISP Download Command)
                                                                        //Self-define download command
                           delay();
                                                                        //just delay 1 second
                           delay();
                           soft reset to ISP Monitor();
                                                                        //Soft rese to ISP Monitor
                  send UART(k);
         else
                  TI = 0;
void soft reset to ISP Monitor(void)
        ISP CONTR = 0x60;
                                                               //0110,0000 Soft rese to ISP Monitor
void delay(void)
         unsigned int j = 0;
         unsigned int g = 0;
         for(j=0;j<5;j++)
                  for(g=0;g<60000;g++)
                           _nop_();
                           nop ();
                           _nop_();
                           nop ();
                           _nop_();
                  }
void display MCU Start Led(void)
        unsigned char i = 0;
         for(i=0;i<3;i++)
                  MCU Start Led = 0;
                  delay();
                  MCU Start_Led = 1;
                  delay();
                  MCU Start Led = 0;
```

2.1.4 Programmable Clock Output

STC12C5620AD series MCU have two channel programmable clock outputs, they are Timer 0 programmable clock output CLKOUT0(P1.0) and Timer 1 programmable clock output CLKOUT1(P1.1).

There are some SFRs about programmable clock output as shown below.

Symbol	Description	Address	Bit Address and Symbol MSB LSB	Value after Power-on or Reset
AUXR	Auxiliary register	8EH	T0x12 T1x12 UART_M0x6 EADCI ESPI ELVDI	0000 00xxB
WAKE_CLKO	CLK_Output Power down Wake-up control register	8FH	PCAWAKEUP RXD_PIN_IE II_PIN_IE II_PIN_IE - IICLKO IUCLKO	0000 xx00B

The satement (used in C language) of Special function registers AUXR/WAKE CLKO:

sfr AUXR = 0x8E; //The address statement of Special function register AUXR

sfr WAKE CLKO = 0x8F; //The address statement of SFR WAKE CLKO

The satement (used in Assembly language) of Special function registers AUXR/WAKE CLKO:

AUXR EQU 0x8E ;The address statement of Special function register AUXR

WAKE CLKO EQU 0x8F ;The address statement of SFR WAKE CLKO

1. AUXR: Auxiliary register (Non bit-addressable)

SFR name	Address	bit	B7	B6	B5	B4	B3	B2	B1	B0
AUXR	8EH	name	T0x12	T1x12	UART_M0x6	EADCI	ESPI	ELVDI	-	

T0x12: Timer 0 clock source bit.

- 0: The clock source of Timer 0 is SYSclk/12. It will compatible to the traditional 80C51 MCU
- 1 : The clock source of Timer 0 is SYSclk/1. It will drive the T0 faster than a traditional 80C51 MCU

T1x12: Timer 1 clock source bit.

- 0 : The clock source of Timer 1 is SYSclk/12. It will compatible to the traditional 80C51 MCU
- 1 : The clock source of Timer 1 is SYSclk/1. It will drive the T0 faster than a traditional 80C51 MCU

UART M0x6: Baud rate select bit of UART1 while it is working under Mode-0

- 0 : The baud-rate of UART in mode 0 is SYSclk/12.
- 1 : The baud-rate of UART in mode 0 is SYSclk/2.

UART M0x6: Baud rate select bit of UART1 while it is working under Mode-0

- 0: The baud-rate of UART in mode 0 is SYSclk/12.
- 1 : The baud-rate of UART in mode 0 is SYSclk/2.

EADCI: Enable/Disable interrupt from A/D converter

- 0: (default) Inhibit the ADC functional block to generate interrupt to the MCU
- 1 : Enable the ADC functional block to generate interrupt to the MCU

ESPI: Enable/Disable interrupt from Serial Peripheral Interface (SPI)

- 0 : (default)Inhibit the SPI functional block to generate interrupt to the MCU
- 1 : Enable the SPI functional block to generate interrupt to the MCU

ELVDI: Enable/Disable interrupt from low-voltage sensor

- 0 : (default)Inhibit the low-voltage sensor functional block to generate interrupt to the MCU
- $1\ :$ Enable the low-voltage sensor functional block to generate interrupt to the MCU

2. WAKE CLKO: CLK Output Power down Wake-up control register (Non bit-Addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	В2	В1	В0
WAKE_CLKO	8FH	name	PCAWAKEUP	RXD_PIN_IE	T1_PIN_IE	T0_PIN_IE	-	-	T1CLKO	T0CLKO

PCAWAKEUP: When set and the associated-PCA interrupt control registers is configured correctly, the CEXn pin of PCA function is enabled to wake up MCU from power-down state.

RXD_PIN_IE: When set and the associated-UART interrupt control registers is configured correctly, the RXD pin (P3.0) is enabled to wake up MCU from power-down state.


T1_PIN_IE: When set and the associated-Timer1 interrupt control registers is configured correctly, the T1 pin (P3.5) is enabled to wake up MCU from power-down state.

T0_PIN_IE: When set and the associated-Timer0 interrupt control registers is configured correctly, the T1 pin (P3.4) is enabled to wake up MCU from power-down state.

T1CKLO: When set, P1.1 is enabled to be the clock output of Timer 1. The clock rate is Timer 1 overflow rate divided by 2.

T0CKLO: When set, P1.0 is enabled to be the clock output of Timer 0. The clock rate is Timer 0 overflow rate divided by 2.

2.1.4.1 Timer 0 Programmable Clock-out on P1.0

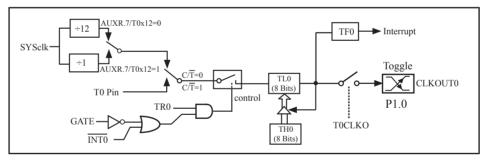

Timer/Counter 0 Mode 2: 8-Bit Auto-Reload

STC12C5620AD is able to generate a programmable clock output on P1.0. When T0CLKO/WAKE_CLKO.0 bit in WAKE_CLKO SFR is set, T0 timer overflow pulse will toggle P1.0 latch to generate a 50% duty clock. The frequency of clock-out = T0 overflow rate/2.


If $C/\overline{T}(TMOD.2) = 0$, Timer/Counter 0 is set for Timer operation (input from internal system clock), the Frequency of clock-out is as following:

(SYSclk) / (256 – TH0) / 2, when AUXR.7 / T0x12=1 or (SYSclk / 12) / (256 – TH0) / 2, when AUXR.7 / T0x12=0

If C/\overline{T} (TMOD.2) = 1, Timer/Counter 0 is set for Conter operation (input from external P3.4/T0 pin), the Frequency of clock-out is as following:

T0 Pin CLK / (256-TH0) / 2

2.1.4.2 Timer 1 Programmable Clock-out on P1.1

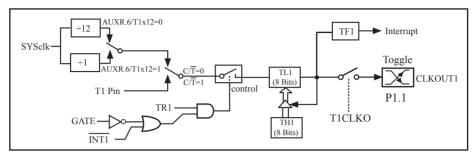

Timer/Counter 1 Mode 2: 8-Bit Auto-Reload

STC12C5620AD is able to generate a programmable clock output on P1.1. When T1CLKO/WAKE_CLKO.1 bit in WAKE_CLKO SFR is set, T1 timer overflow pulse will toggle P1.1 latch to generate a 50% duty clock. The frequency of clock-out = T1 overflow rate/2.

If $C/\overline{T}(TMOD.6) = 0$, Timer/Counter 1 is set for Timer operation (input from internal system clock), the Frequency of clock-out is as following:

```
(SYSclk) / (256 – TH1) / 2, when AUXR.6 / T0x12=1
or (SYSclk / 12) / (256 – TH1) / 2, when AUXR.6 / T0x12=0
```

If $C/\overline{T}(TMOD.6) = 1$, Timer/Counter 1 is set for Conter operation (input from external P3.5/T1 pin), the Frequency of clock-out is as following:

T1_Pin_CLK / (256-TH1) / 2

2.2 Power Management Modes

The STC12C5620AD core has three software programmable power management mode: slow-down, idle and stop/power-down mode. The power consumption of STC12C5620AD series is about 2.7mA~7mA in normal operation, while it is lower than 0.1uA in stop/power-down mode and 1.8mA in idle mode.

Slow-down mode is controlled by clock divider register(CLK_DIV). Idle and stop/power-down is managed by the corresponding bit in Power control (PCON) register which is shown in below.

PCON register (Power Control Register)

SFR name	Address	bit	В7	В6	B5	B4	В3	B2	B1	В0
PCON	87H	name	SMOD	SMOD0	LVDF	POF	GF1	GF0	PD	IDL

SMOD: Double baud rate of UART interface

6 Keep normal baud rate when the UART is used in mode 1,2 or 3.


1 Double baud rate bit when the UART is used in mode 1,2 or 3.

SMOD0: SM0/FE bit select for SCON.7; setting this bit will set SCON.7 as Frame Error function. Clearing it to set SCON.7 as one bit of UART mode selection bits.

LVDF : Pin Low-Voltage Flag. Once low voltage condition is detected (VCC power is lower than LVD voltage), it is set by hardware (and should be cleared by software).

POF : Power-On flag. It is set by power-off-on action and can only cleared by software.

Practical application: if it is wanted to know which reset the MCU is used, see the following figure.

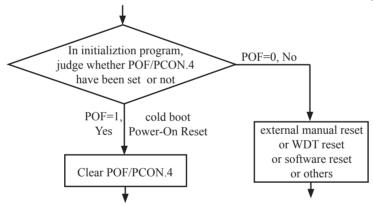

GF1,GF0: General-purposed flag 1 and 0

PD : Stop Mode/Power-Down Select bit..

Setting this bit will place the STC12C5620AD MCU in Stop/Power-Down mode. Stop/Power-Down mode can be waked up by external interrupt. Because the MCU's internal oscillator stopped in Stop/Power-Down mode, CPU, Timers, UARTs and so on stop to run, only external interrupt go on to work. The following pins can wake up MCU from Stop/Power-Down mode: INT0/P3.2, INT1/P3.3, T0/P3.4, T1/P3.5, RxD/P3.0, PCA0/PWM0/P3.7, PCA1/PWM1/P3.5, PCA2/PWM2/P2.0, PCA3/PWM3/P2.4.

IDL : Idle mode select bit.

Setting this bit will place the STC12C5620AD in Idle mode. only CPU goes into Idle mode. (Shuts off clock to CPU, but clock to Timers, Interrupts, Serial Ports, and Analog Peripherals are still active.) The following pins can wake up MCU from Idle mode: $\overline{\text{INT0}}/\text{P3.2}$, $\overline{\text{INT1}}/\text{P3.3}$, $\overline{\text{T0/P3.4}}$, $\overline{\text{T1/P3.5}}$, $\overline{\text{RxD/P3.0}}$. Besides, Timer0 and Timer1 and UARTs interrupt also can wake up MCU from idle mode

2.2.1 Slow Down Mode

A divider is designed to slow down the clock source prior to route to all logic circuit. The operating frequency of internal logic circuit can therefore be slowed down dynamically, and then save the power.


User can slow down the MCU by means of writing a non-zero value to the CLKS[2:0] bits in the CLK_DIV register. This feature is especially useful to save power consumption in idle mode as long as the user changes the CLKS[2:0] to a non-zero value before entering the idle mode.

CLK_DIV register (Clock Divider)

SFR Name	SFR Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
CLK_DIV	С7Н	name	-	-	-	-	-	CLKS2	CLKS1	CLKS0

B2-B0 (CLKS2-CLKS0):

- 000 External crystal/clock or On-Chip R/C clock is not divided (default state)
- 001 External crystal/clock or On-Chip R/C clock is divided by 2.
- 010 External crystal/clock or On-Chip R/C clock is divided by 4.
- 011 External crystal/clock or On-Chip R/C clock is divided by 8.
- 100 External crystal/clock or On-Chip R/C clock is divided by 16.
- 101 External crystal/clock or On-Chip R/C clock is divided by 32.
- 110 External crystal/clock or On-Chip R/C clock is divided by 64.
- 111 External crystal/clock or On-Chip R/C clock is divided by 128.

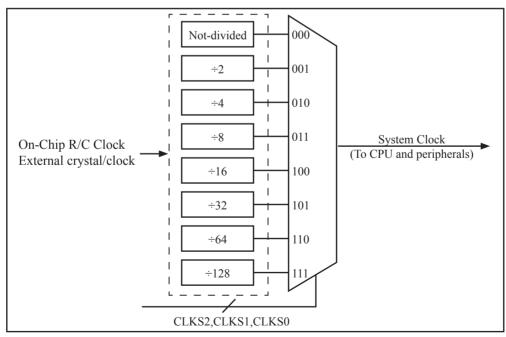

Clock Structure

2.2.2 Idle Mode

An instruction that sets IDL/PCON.0 causes that to be the last instruction executed before going into the idle mode, the internal clock is gated off to the CPU but not to the interrupt, timer, PCA, ADC, SPI, WDT and serial port functions. The PCA can be programmed either to pause or continue operating during Idle. The CPU status is preserved in its entirety: the RAM, Stack Pointer, Program Counter, Program Status Word, Accumulator, and all other registers maintain their data during Idle. The port pins hold the logical states they had at the time Idle was activated. Idle mode leaves the peripherals running in order to allow them to wake up the CPU when an interrupt is generated. Timer 0, Timer 1, PWM timer and UART will continue to function during Idle mode.

There are two ways to terminate the idle. Activation of any enabled interrupt will cause IDL/PCON.0 to be cleared by hardware, terminating the idle mode. The interrupt will be serviced, and following RETI, the next instruction to be executed will be the one following the instruction that put the device into idle.


The flag bits (GF0 and GF1) can be used to give art indication if an interrupt occurred during normal operation or during Idle. For example, an instruction that activates Idle can also set one or both flag bits. When Idle is terminated by an interrupt, the interrupt service routine can examine the flag bits.

The other way to wake-up from idle is to pull RESET high to generate internal hardware reset. Since the clock oscillator is still running, the hardware reset needs to be held active for only two machine cycles(24 oscillator periods) to complete the reset.

2.2.3 Stop / Power Down (PD) Mode and Demo Program (C and ASM)

An instruction that sets PD/PCON.1 cause that to be the last instruction executed before going into the Power-Down mode. In the Power-Down mode, the on-chip oscillator and the Flash memory are stopped in order to minimize power consumption. Only the power-on circuitry will continue to draw power during Power-Down. The contents of on-chip RAM and SFRs are maintained. The power-down mode can be woken-up by RESET pin, external interrupt INT0 ~ INT1, RXD pin, T0 pin, T1 pin and PCA input pins—PWM pins and PWM pins. When it is woken-up by RESET, the program will execute from the address 0x0000. Be carefully to keep RESET pin active for at least 10ms in order for a stable clock. If it is woken-up from I/O, the CPU will rework through jumping to related interrupt service routine. Before the CPU rework, the clock is blocked and counted until 32768 in order for denouncing the unstable clock. To use I/O wake-up, interrupt-related registers have to be enabled and programmed accurately before power-down is entered. Pay attention to have at least one "NOP" instruction subsequent to the power-down instruction if I/O wake-up is used. When terminating Power-down by an interrupt, the wake up period is internally timed. At the negative edge on the interrupt pin, Power-Down is exited, the oscillator is restarted, and an internal timer begins counting. The internal clock will be allowed to propagate and the CPU will not resume execution until after the timer has reached internal counter full. After the timeout period. the interrupt service routine will begin. To prevent the interrupt from re-triggering, the interrupt service routine should disable the interrupt before returning. The interrupt pin should be held low until the device has timed out and begun executing. The user should not attempt to enter (or re-enter) the power-down mode for a minimum of 4 us until after one of the following conditions has occured: Start of code execution(after any type of reset), or Exit from power-down mode.

The following circuit can timing wake up MCU from power down mode when external interrupt sources do not exist



Operation step:

- 1. I/O ports are first configured to push-pull output(strong pull-up) mode
- 2. Writen 1s into ports I/O ports
- 3. the above circuit will charge the capacitor C1
- 4. Writen 0s into ports I/O ports, MCU will go into power-down mode
- 5. The above circuit will discharge. When the electricity of capacitor C1 has been discharged less than 0.8V, external interrupt INTx pin will generate a falling edge and wake up MCU from power-down mode automatically.

The following example C program demostrates that power-down mode be woken-up by external interrupt.

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU wake up Power-Down mode Demo -----*/
/* If you want to use the program or the program referenced in the */
/* article, please specify in which data and procedures from STC */
/*_____*/
#include <reg51.h>
#include <intrins.h>
sbit
        Begin LED = P1^2;
                                                  //Begin-LED indicator indicates system start-up
unsigned char
                Is Power Down = 0;
                                                 //Set this bit before go into Power-down mode
sbit
        Is Power Down LED INTO
                                         = P1^7; //Power-Down wake-up LED indicator on INT0
sbit
        Not Power Down LED INTO
                                         = P1^6; //Not Power-Down wake-up LED indicator on INT0
sbit
        Is Power Down LED INT1
                                         = P1^5; //Power-Down wake-up LED indicator on INT1
sbit
        Not Power Down LED INT1
                                         = P1^4; //Not Power-Down wake-up LED indicator on INT1
sbit
        Power Down Wakeup Pin INT0
                                         = P3^2; //Power-Down wake-up pin on INT0
sbit
        Power Down Wakeup Pin INT1
                                         = P3^3; //Power-Down wake-up pin on INT1
sbit
                                         = P1^3; //Normal work LED indicator
        Normal Work Flashing LED
void Normal Work Flashing (void);
void INT System init (void);
void INTO Routine (void);
void INT1 Routine (void);
void main (void)
        unsigned char
                        i = 0;
        unsigned char
                         wakeup counter = 0;
                                         //clear interrupt wakeup counter variable wakeup counter
        Begin LED = 0;
                                         //system start-up LED
        INT System_init();
                                         //Interrupt system initialization
        while(1)
                P2 = wakeup counter;
                wakeup counter++;
                for(j=0; j<2; j++)
                 {
                         Normal Work Flashing(); //System normal work
                }
```

```
Is Power Down = 1;
                                                        //Set this bit before go into Power-down mode
                  PCON = 0x02:
                                               //after this instruction, MCU will be in power-down mode
                                               //external clock stop
                  nop ();
                  _nop_();
                  _nop_();
                  _nop_();
}
void INT System init (void)
                                               /* External interrupt 0, low electrical level triggered */
         IT0
                  = 0;
//
                                               /* External interrupt 0, negative edge triggered */
         IT0
                  = 1;
                                               /* Enable external interrupt 0
         EX0
                  = 1;
                                               /* External interrupt 1, low electrical level triggered */
         IT1
                  = 0;
//
         IT1
                  = 1;
                                               /* External interrupt 1, negative edge triggered */
                                               /* Enable external interrupt 1
         EX1
                  = 1;
         EA
                                               /* Set Global Enable bit
                  = 1;
void INTO Routine (void) interrupt 0
         if (Is Power Down)
                  //Is Power Down == 1;
                                              /* Power-Down wakeup on INTO */
                  Is Power Down = 0;
                  Is Power Down LED INT0 = 0;
                                     /*open external interrupt 0 Power-Down wake-up LED indicator */
                  while (Power Down Wakeup Pin INT0 == 0)
                            /* wait higher */
                  Is Power Down LED_INT0 = 1;
                                     /* close external interrupt 0 Power-Down wake-up LED indicator */
         }
         else
                                                        /* open external interrupt 0 normal work LED */
                  Not Power Down LED INT0 = 0;
                  while (Power Down Wakeup Pin INT0 ==0)
                  {
                            /* wait higher */
                  Not Power Down LED INT0 = 1; /* close external interrupt 0 normal work LED */
         }
```

```
void INT1 Routine (void) interrupt 2
        if (Is Power Down)
                 //Is Power Down == 1;
                                             /* Power-Down wakeup on INT1 */
                 Is Power Down = 0;
                 Is Power Down LED INT1=0;
                                    /*open external interrupt 1 Power-Down wake-up LED indicator */
                 while (Power Down Wakeup Pin INT1 == 0)
                           /* wait higher */
                  Is Power Down LED INT1 = 1;
                                    /* close external interrupt 1 Power-Down wake-up LED indicator */
         else
                 Not Power Down LED INT1 = 0; /* open external interrupt 1 normal work LED */
                  while (Power Down Wakeup Pin INT1 ==0)
                           /* wait higher */
                 Not Power Down LED INT1 = 1; /* close external interrupt 1 normal work LED */
void delay (void)
         unsigned int
                          i = 0x00;
         unsigned int
                          k = 0x00;
         for (k=0; k<2; ++k)
                 for (j=0; j \le 30000; ++j)
                           _nop_( );
                           nop ();
                           _nop_();
                           _nop_( );
                           _nop_( );
                           _nop_( );
                           _nop_( );
                           _nop_();
                  }
         }
```

```
void Normal_Work_Flashing (void)
{
          Normal_Work_Flashing_LED = 0;
          delay ( );
          Normal_Work_Flashing_LED = 1;
          delay ( );
}
```

The following program also demostrates that power-down mode or idle mode be woken-up by external interrupt, but is written in assembly language rather than C language.

```
/*____*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU wake up Power-Down mode Demo -----*/
/* If you want to use the program or the program referenced in the */
/* article, please specify in which data and procedures from STC */
/*_____*/
;Wake Up Idle and Wake Up Power Down
.*******************
             ORG
                    0000H
             AJMP
                    MAIN
             ORG
                    0003H
int0 interrupt:
                    P1.7
             CLR
                                        open P1.7 LED indicator
             ACALL delay
                                        ;delay in order to observe
                                        clear global enable bit, stop all interrupts
             CLR
                    EA
             RETI
             ORG
                    0013H
int1 interrupt:
             CLR
                    P1.6
                                        open P1.6 LED indicator
             ACALL delay
                                        ;;delay in order to observe
             CLR
                    EA
                                        ;clear global enable bit, stop all interrupts
             RETI
             ORG
                    0100H
delay:
             CLR
                    Α
             MOV
                    R0,
                           Α
             MOV
                    R1,
                           Α
             MOV
                    R2,
                           #02
```

```
delay loop:
                 DJNZ
                          R0.
                                   delay loop
                 DJNZ
                                   delay loop
                          R1,
                 DJNZ
                          R2,
                                   delay loop
                 RET
main:
                 MOV
                          R3,
                                   #0
                                                     ;P1 LED increment mode changed
                                                     start to run program
main loop:
                 MOV
                                   R3
                          A.
                 CPL
                          A
                 MOV
                          P1.
                                   Α
                 ACALL delay
                 INC
                          R3
                 MOV
                                   R3
                          A.
                 SUBB
                                   #18H
                          A,
                 JC
                          main loop
                 MOV
                          P1,
                                   #0FFH
                                                     ;close all LED, MCU go into power-down mode
                 CLR
                          IT0
                                                     ;low electrical level trigger external interrupt 0
                 SETB
                          IT0
                                                     ;negative edge trigger external interrupt 0
                                                     enable external interrupt 0
                 SETB
                          EX0
                 CLR
                          IT1
                                                     ;low electrical level trigger external interrupt 1
                 SETB
                          IT1
                                                     ;negative edge trigger external interrupt 1
                 SETB
                          EX1
                                                     enable external interrupt 1
                 SETB
                                                     ;set the global enable
                          EA
                                                     ;if don't so, power-down mode cannot be wake up
;MCU will go into idle mode or power-down mode after the following instructions
                                                     ;Set PD bit, power-down mode (PD = PCON.1)
                 MOV
                          PCON, #00000010B
                 NOP
                 NOP
                 NOP
                 MOV
                          PCON,
                                   #0000001B
                                                     ;Set IDL bit, idle mode (IDL = PCON.0)
                 MOV
                          P1,
                                   #0DFH
                                                     ;1101,1111
                 NOP
                 NOP
                 NOP
WAIT1:
                 SJMP
                          WAIT1
                                                     ;dynamically stop
                 END
```

2.3 RESET Sources

In STC12C5620AD, there are 5 sources to generate internal reset. They are RST pin reset, software reset, On-chip power-on-reset(if delay 200mS after power-on reset, the reset mode is On-chip MAX810 POR timing delay which actully add 200mS delay after power-on reset), internal low-voltage detection reset and Watch-Dog-Timer reset.

2.3.1 RESET Pin

External RST pin reset accomplishes the MCU reset by forcing a reset pulse to RST pin from external. Asserting an active-high signal and keeping at least 24 cycles plus 10us on the RST pin generates a reset. If the signal on RST pin changed active-low level, MCU will end the reset state and start to run from the 0000H of user procedures.

2.3.2 Software RESET

Writing an "1" to SWRST bit in ISP CONTR register will generate a internal reset.

ISP CONTR: ISP/IAP Control Register

SFR Name	SFR Address	bit	В7	В6	B5	B4	В3	B2	B1	В0
ISP_CONTR	E7H	name	ISPEN	SWBS	SWRST	CMD_FAIL	-	WT2	WT1	WT0

ISPEN: ISP/IAP operation enable.

0: Global disable all ISP/IAP program/erase/read function.

1 : Enable ISP/IAP program/erase/read function.

SWBS: software boot selection control bit

0: Boot from main-memory after reset.

1: Boot from ISP memory after reset.

SWRST: software reset trigger control.

0: No operation

1: Generate software system reset. It will be cleared by hardware automatically.

CMD FAIL: Command Fail indication for ISP/IAP operation.

0: The last ISP/IAP command has finished successfully.

1: The last ISP/IAP command fails. It could be caused since the access of flash memory was inhibited.

;Software reset from user appliction program area (AP area) and switch to AP area to run program

MOV ISP CONTR, #00100000B; SWBS = 0(Select AP area), SWRST = 1(Software reset)

;Software reset from system ISP monitor program area (ISP area) and switch to AP area to run program

MOV ISP CONTR, #00100000B; SWBS = 0(Select AP area), SWRST = 1(Software reset)

;Software reset from user appliction program area (AP area) and switch to ISP area to run program

MOV ISP CONTR, #01100000B :SWBS = 1(Select ISP area), SWRST = 1(Software reset)

;Software reset from system ISP monitor program area (ISP area) and switch to ISP area to run program

MOV ISP CONTR, #01100000B; SWBS = 1(Select ISP area), SWRST = 1(Software reset)

This reset is to reset the whole system, all special function registers and I/O prots will be reset to the initial value

2.3.3 Power-On Reset (POR)

When VCC drops below the detection threshold of POR circuit, all of the logic circuits are reset.

When VCC goes back up again, an internal reset is released automatically after a delay of 32768 clocks. The nominal POR detection threshold is around 1.9V for 3V device and 3.3V for 5V device.

The Power-On flag, POF/PCON.4, is set by hardware to denote the VCC power has ever been less than the POR voltage. And, it helps users to check if the start of running of the CPU is from power-on or from hardware reset (RST-pin reset), software reset or Watchdog Timer reset. The POF bit should be cleared by software.


2.3.4 MAX810 power-on-Reset delay

There is another on-chip POR delay circuit s integrated on STC12C5620AD. This circuit is MAX810—sepcial reset circuit and is controlled by configuring STC-ISP Writter/Programmer shown in the next figure. MAX810 special reset circuit just add 200mS extra reset-delay-time after power-up reset. So it is another power-on reset.


2.3.5 Internal Low Voltage Detection Reset

Besides the POR voltage, there is a higher threshold voltage: the Low Voltage Detection (LVD) voltage for STC12C5620AD series. When the VCC power drops down to the LVD voltage, the Low voltage Flag, LVDF bit (PCON.5), will be set by hardware. (Note that during power-up, this flag will also be set, and the user should clear it by software for the following Low Voltage detecting.) This flag can also generate an interrupt if the enable bit of LVD interrupt is set to 1.

The threshold voltage of STC12C5620AD built-in low voltage detection reset is optional in STC-ISP Writer/Programmer. The detection voltage of 5V MCU of STC12C5620AD series is optional between 3.7V and 3.3V as shown in following figure.

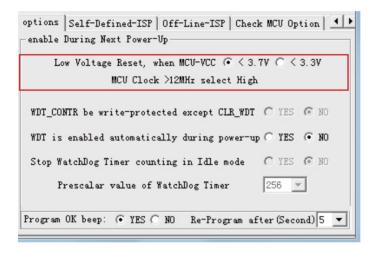

The detection voltage of 3V MCU of STC12LE5620AD series is optional between 2.4V and 2.0V as shown in following figure.

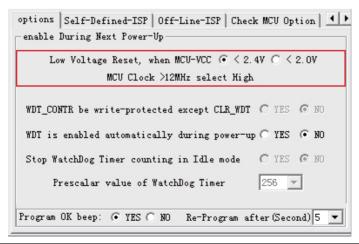

Some SFRs related to Low voltage detection as shown below.

Mnemonic	Add	Name	В7	В6	В5	В4	В3	В2	В1	В0	Reset Value
PCON	87H	Power Control	SMOD	SMOD0	LVDF	POF	GF1	GF0	PD	IDL	0011,0000
AUXR	8EH	Auxiliary Register	T0x12	T1x12	UART_M0x6	EADCI	ESPI	ELVDI	-	-	0000,00xx
IE	A8H	Interrupt Enable	EA	EPCA_LVD	EADC_SPI	ES	ET1	EX1	ET0	EX0	0000,0000
IP	В8Н	Interrupt Priority Low	-	PPCA_LVD	PADC_SPI	PS	PT1	PX1	PT0	PX0	x000,0000
IPH	В7Н	Interrupt Priority High	-	PPCA_LVDH	PADC_SPIH	PSH	PT1H	PX1H	РТ0Н	PX0H	x000,0000

PCON register (Power Control Register)

SFR name	Address	bit	В7	В6	B5	B4	В3	B2	B1	В0
PCON	87H	name	SMOD	SMOD0	LVDF	POF	GF1	GF0	PD	IDL

LVDF : Pin Low-Voltage Flag. Once low voltage condition is detected (VCC power is lower than LVD voltage), it is set by hardware (and should be cleared by software).

AUXR: Auxiliary register (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
AUXR	8EH	name	T0x12	T1x12	UART_M0x6	EADCI	ESPI	ELVDI	-	-

T0x12: Timer 0 clock source bit.

0 : The clock source of Timer 0 is SYSclk/12. It will compatible to the traditional 80C51 MCU

1 : The clock source of Timer 0 is SYSclk/1. It will drive the T0 faster than a traditional 80C51 MCU

T1x12: Timer 1 clock source bit.

0 : The clock source of Timer 1 is SYSclk/12. It will compatible to the traditional 80C51 MCU

1 : The clock source of Timer 1 is SYSclk/1. It will drive the T0 faster than a traditional 80C51 MCU

UART M0x6: Baud rate select bit of UART1 while it is working under Mode-0

0 : The baud-rate of UART in mode 0 is SYSclk/12.

1 : The baud-rate of UART in mode 0 is SYSclk/2.

EADCI: Enable/Disable interrupt from A/D converter

0 : (default) Inhibit the ADC functional block to generate interrupt to the MCU

1 : Enable the ADC functional block to generate interrupt to the MCU

ESPI: Enable/Disable interrupt from Serial Peripheral Interface (SPI)

0 : (default)Inhibit the SPI functional block to generate interrupt to the MCU

1 : Enable the SPI functional block to generate interrupt to the MCU

ELVDI: Enable/Disable interrupt from low-voltage sensor

0 : (default)Inhibit the low-voltage sensor functional block to generate interrupt to the MCU

1 : Enable the low-voltage sensor functional block to generate interrupt to the MCU

IE: Interrupt Enable Rsgister

SFR name	Address	bit	В7	В6	B5	B4	В3	В2	B1	В0
ΙE	A8H	name	EA	EPCA_LVD	EADC_SPI	ES	ET1	EX1	ET0	EX0

Enable Bit = 1 enables the interrupt.

Enable Bit = 0 disables it.

EA (IE.7): disables all interrupts. if EA = 0,no interrupt will be acknowledged. if EA = 1, each interrupt source is individually enabled or disabled by setting or clearing its enable bit.

EPCA LVD (IE.6): Interrupt controller of Programmable Counter Array (PCA) and Low-Voltage Detector

0: Disable theinterrupt of Programmable Counter Array (PCA) and Low-Voltage Detector

1: enable theinterrupt of Programmable Counter Array (PCA) and Low-Voltage Detector

IPH: Interrupt Priority High Register

SFR name	Address	bit	В7	В6	B5	B4	В3	В2	B1	В0
IPH	В7Н	name	-	PPCA_LVDH	PADC_SPIH	PSH	PT1H	PX1H	РТ0Н	PX0H

IP: Interrupt Priority Register

SFR name	Address	bit	В7	В6	В5	В4	В3	В2	В1	В0
IE	B8H	name	-	PPCA_LVD	PADC_SPI	PS	PT1	PX1	PT0	PX0

PPCA_LVDH, PPCA_LVD: Programmable Counter Array (PCA) and Low voltage detector interrupt priority control bits. if PPCA_LVDH=0 and PPCA_LVD=0, Programmable Counter Array (PCA) and Low voltage detector interrupt are assigned lowest priority(priority 0).


if PPCA_LVDH=0 and PPCA_LVD=1, Programmable Counter Array (PCA) and Low voltage detector interrupt are assigned lowest priority(priority 1).

if PPCA_LVDH=1 and PPCA_LVD=0, Programmable Counter Array (PCA) and Low voltage detector interrupt are assigned lowest priority(priority 2).

if PPCA_LVDH=1 and PPCA_LVD=1, Programmable Counter Array (PCA) and Low voltage detector interrupt are assigned lowest priority(priority 3).

2.3.6 Watch-Dog-Timer

The watch dog timer in STC12C5620AD consists of an 8-bit pre-scaler timer and an 15-bit timer. The timer is one-time enabled by setting EN_WDT(WDT_CONTR.5). Clearing EN_WDT can stop WDT counting. When the WDT is enabled, software should always reset the timer by writing 1 to CLR_WDT bit before the WDT overflows. If STC12C5620AD series MCU is out of control by any disturbance, that means the CPU can not run the software normally, then WDT may miss the "writting 1 to CLR_WDT" and overflow will come. An overflow of Watch-Dog-Timer will generate a internal reset.

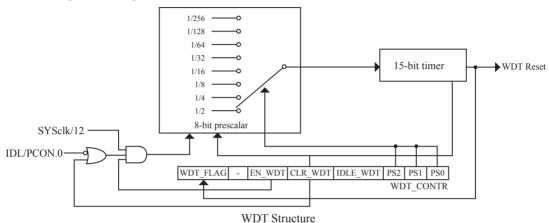

WDT CONTR: Watch-Dog-Timer Control Register

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
WDT_CONTR	0E1H	name	WDT_FLAG	-	EN_WDT	CLR_WDT	IDLE_WDT	PS2	PS1	PS0

WDT FLAG: WDT reset flag.

0 : This bit should be cleared by software.

1 : When WDT overflows, this bit is set by hardware to indicate a WDT reset happened.

EN_WDT : Enable WDT bit. When set, WDT is started.

CLR WDT: WDT clear bit. When set, WDT will recount. Hardware will automatically clear this bit.

IDLE_WDT : WDT IDLE mode bit. When set, WDT is enabled in IDLE mode. When clear, WDT is disabled in

IDLE.

PS2, PS1, PS0 : WDT Pre-scale value set bit.

Pre-scale value of Watchdog timer is shown as the bellowed table:

PS2	PS1	PS0	Pre-scale	WDT overflow Time @20MHz
0	0	0	2	39.3 mS
0	0	1	4	78.6 mS
0	1	0	8	157.3 mS
0	1	1	16	314.6 mS
1	0	0	32	629.1 mS
1	0	1	64	1.25 S
1	1	0	128	2.5 S
1	1	1	256	5 S

The WDT overflow time is determined by the following equation:

WDT overflow time = $(12 \times \text{Pre-scale} \times 32768) / \text{SYSclk}$

The SYSclk is 20MHz in the table above.

If SYSclk is 12MHz, The WDT overflow time is:

WDT overflow time = $(12 \times Pre-scale \times 32768) / 12000000 = Pre-scale \times 393216 / 12000000$


WDT overflow time is shown as the bellowed table when SYSclk is 12MHz:

PS2	PS1	PS0	Pre-scale	WDT overflow Time @12MHz
0	0	0	2	65.5 mS
0	0	1	4	131.0 mS
0	1	0	8	262.1 mS
0	1	1	16	524.2 mS
1	0	0	32	1.0485 S
1	0	1	64	2.0971 S
1	1	0	128	4.1943 S
1	1	1	256	8.3886 S

WDT overflow time is shown as the bellowed table when SYSclk is 11.0592MHz:

PS2	PS1	PS0	Pre-scale	WDT overflow Time @11.0592MHz
0	0	0	2	71.1 mS
0	0	1	4	142.2 mS
0	1	0	8	284.4 mS
0	1	1	16	568.8 mS
1	0	0	32	1.1377 S
1	0	1	64	2.2755 S
1	1	0	128	4.5511 S
1	1	1	256	9.1022 S

Options related with WDT in STC-ISP Writter/Programmer is shown in the following figure

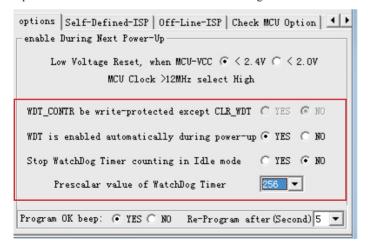

The following example is a assembly language program that demostrates STC 1T Series MCU WDT.

```
·/*_____*/
:/* --- STC MCU International Limited -----*/
:/* --- STC 1T Series MCU WDT Demo -----*/
;/* If you want to use the program or the program referenced in the */
:/* article, please specify in which data and procedures from STC */
·/*____*/
; WDT overflow time = (12 \times \text{Pre-scale} \times 32768) / \text{SYSclk}
WDT CONTR
                        EOU
                                0E1H
                                                :WDT address
                                                ;WDT overflow time LED on P1.5
WDT TIME LED
                        EOU
                                P1.5
                                ;The WDT overflow time may be measured by the LED light time
                                P1.7
WDT FLAG LED
                        EOU
                                                ;WDT overflow reset flag LED indicator on P1.7
                                EOU
                                        00H
Last WDT Time LED Status
                        ;bit variable used to save the last stauts of WDT overflow time LED indicator
;WDT reset time, the SYSclk is 18.432MHz
;Pre scale Word
               EQU
                       00111100B
                                        ;open WDT, Pre-scale value is 32, WDT overflow time=0.68S
;Pre scale Word
               EOU
                                        :open WDT. Pre-scale value is 64. WDT overflow time=1.36S
                        00111101B
:Pre scale Word
               EOU
                                        ;open WDT, Pre-scale value is 128, WDT overflow time=2.72S
                        00111110B
;Pre scale Word
               EOU
                        00111111 B
                                        open WDT. Pre-scale value is 256. WDT overflow time=5.44S
               ORG
                        0000H
                AJMP
                        MAIN
                ORG
                        0100H
MAIN:
                MOV
                        A,
                                WDT CONTR
                                                        ;detection if WDT reset
                ANL
                                #1000000B
                JNZ
                        WDT Reset
                        ;WDT CONTR.7=1, WDT reset, jump WDT reset subroutine
                        ;WDT CONTR.7=0, Power-On reset, cold start-up, the content of RAM is random
                SETB
                        Last WDT Time LED Status
                                                        :Power-On reset
                                                ;Power-On reset,open WDT overflow time LED
                CLR
                        WDT TIME LED
                                        #Pre scale Word
                MOV
                        WDT CONTR,
                                                                open WDT
```

WAIT1:

SJMP WAIT1

;wait WDT overflow reset

;WDT_CONTR.7=1, WDT reset, hot strart-up, the content of RAM is constant and just like before reset WDT Reset:

CLR WDT FLAG LED

;WDT reset,open WDT overflow reset flag LED indicator

JB Last_WDT_Time_LED_Status, Power_Off_WDT_TIME_LED ; when set Last_WDT_Time_LED_Status, close the corresponding LED indicator ; clear, open the corresponding LED indicator

;set WDT_TIME_LED according to the last status of WDT overflow time LED indicator CLR WDT TIME LED ;close the WDT overflow time LED indicator

CPL Last WDT Time LED Statu

reverse the last status of WDT overflow time LED indicator

WAIT2:

SJMP WAIT2

:wait WDT overflow reset

Power Off WDT TIME LED:

SETB WDT_TIME_LED ;close the WDT overflow time LED indicator

CPL Last WDT Time LED Status

reverse the last status of WDT overflow time LED indicator

WAIT3:

SJMP WAIT3

END

;wait WDT overflow reset

2.3.7 Warm Boot and Cold Boot Reset

Reset type	Reset source	Result			
	WatchDog	System will reset to AP address 0000H			
Warm boot	Reset Pin	and begin running user application			
Warm boot	20H → ISP_CONTR	program			
	60H → ISP_CONTR	System will reset to ISP address 0000H			
Cold boot	Power-on	and begin running ISP monitor program, if not detected legitimate ISP command, system will software reset to the user program area automatically.			

Chapter 3. Memory Organization

The STC12C5620AD series MCU has separate address space for Program Memory and Data Memory. The logical separation of program and data memory allows the data memory to be accessed by 8-bit addresses, which can be quickly stored and manipulated by the CPU.

Program memory (ROM) can only be read, not written to. In the STC12C5620AD series, all the program memory are on-chip Flash memory, and without the capability of accessing external program memory because of no External Access Enable (/EA) and Program Store Enable (/PSEN) signals designed.

Data memory occupies a separate address space from program memory. In the 12C5A60S2 series, there are 256 bytes internal scratch-pad RAM and 512 bytes of on-chip expanded RAM(XRAM). The high 128 bytes of 256 bytes internal scrach-pad RAM seemingly overlap with SFRs in address. Actually, they are distinguished by different addressing way. Similarly, STC12C5620AD series also have no the capability of accessing external data memory because of no the bus that access external data memory.

3.1 Program Memory

Program memory is the memory which stores the program codes for the CPU to execute. There is 4/8/12/16/20/2 4/28/30K-bytes of flash memory embedded for program and data storage. The design allows users to configure it as like there are three individual partition banks inside. They are called AP(application program) region, IAP (In-Application-Program) region and ISP (In-System-Program) boot region. AP region is the space that user program is resided. IAP(In-Application-Program) region is the nonvolatile data storage space that may be used to save important parameters by AP program. In other words, the IAP capability of STC12C5620AD provides the user to read/write the user-defined on-chip data flash region to save the needing in use of external EEPROM device. ISP boot region is the space that allows a specific program we calls "ISP program" is resided. Inside the ISP region, the user can also enable read/write access to a small memory space to store parameters for specific purposes. Generally, the purpose of ISP program is to fulfill AP program upgrade without the need to remove the device from system. STC12C5620AD hardware catches the configuration information since power-up duration and performs out-of-space hardware-protection depending on pre-determined criteria. The criteria is AP region can be accessed by ISP program only, IAP region can be accessed by ISP program and AP program, and ISP region is prohibited access from AP program and ISP program itself. But if the "ISP data flash is enabled", ISP program can read/write this space. When wrong settings on ISP-IAP SFRs are done, The "out-of-space" happens and STC12C5620AD follows the criteria above, ignore the trigger command.

After reset, the CPU begins execution from the location 0000H of Program Memory, where should be the starting of the user's application code. To service the interrupts, the interrupt service locations (called interrupt vectors) should be located in the program memory. Each interrupt is assigned a fixed location in the program memory. The interrupt causes the CPU to jump to that location, where it commences execution of the service routine. External Interrupt 0, for example, is assigned to location 0003H. If External Interrupt 0 is going to be used, its service routine must begin at location 0003H. If the interrupt is not going to be used, its service location is available as general purpose program memory.

The interrupt service locations are spaced at an interval of 8 bytes: 0003H for External Interrupt 0, 000BH for Timer 0, 0013H for External Interrupt 1, 001BH for Timer 1, etc. If an interrupt service routine is short enough (as is often the case in control applications), it can reside entirely within that 8-byte interval. Longer service routines can use a jump instruction to skip over subsequent interrupt locations, if other interrupts are in use.

20K Program Flash Memory (4~30K)


Туре	Program Memory
STC12C/LE5604AD	0000H~0FFFH (4K)
STC12C/LE5608AD	0000H~1FFFH (8K)
STC12C/LE5612AD	0000H~2FFFH (12K)
STC12C/LE5616AD	0000H~3FFFH (16K)
STC12C/LE5620AD	0000H~4FFFH (20K)
STC12C/LE5624AD	0000H~5FFFH (24K)
STC12C/LE5628AD	0000H~6FFFH (28K)
STC12C/LE5630AD	0000H~77FFH (30K)


3.2 Data Memory(SRAM)

3.2.1 On-chip Scratch-Pad RAM

Just the same as the conventional 8051 micro-controller, there are 256 bytes of SRAM data memory plus 128 bytes of SFR space available on the STC12C5620AD. The lower 128 bytes of data memory may be accessed through both direct and indirect addressing. The upper 128 bytes of data memory and the 128 bytes of SFR space share the same address space. The upper 128 bytes of data memory may only be accessed using indirect addressing. The 128 bytes of SFR can only be accessed through direct addressing. The lowest 32 bytes of data memory are grouped into 4 banks of 8 registers each. Program instructions call out these registers as R0 through R7. The RS0 and RS1 bits in PSW register select which register bank is in use. Instructions using register addressing will only access the currently specified bank. This allows more efficient use of code space, since register instructions are shorter than instructions that use direct addressing. The next 16 bytes (20H~2FH) above the register banks form a block of bit-addressable memory space. The 80C51 instruction set includes a wide selection of single-bit instructions, and the 128 bits in this area can be directly addressed by these instructions. The bit addresses in this area are 00H through 7FH.

All of the bytes in the Lower 128 can be accessed by either direct or indirect addressing while the Upper 128 can only be accessed by indirect addressing. SFRs include the Port latches, timers, peripheral controls, etc. These registers can only be accessed by direct addressing. Sixteen addresses in SFR space are both byte- and bit-addressable. The bit-addressable SFRs are those whose address ends in 0H or 8H.

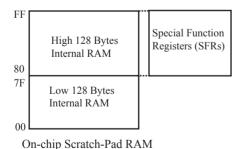

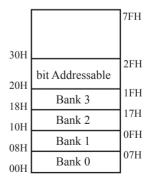

Lower 128 Bytes of internal SRAM

PSW register

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
PSW	D0H	name	CY	AC	F0	RS1	RS0	OV	F1	P

CY: Carry flag.

This bit is set when the last arithmetic operation resulted in a carry (addition) or a borrow (subtrac-tion). It is cleared to logic 0 by all other arithmetic operations.

AC: Auxilliary Carry Flag.(For BCD operations)

This bit is set when the last arithmetic operation resulted in a carry into (addition) or a borrow from (subtraction) the high order nibble. It is cleared to logic 0 by all other arithmetic operations

F0: Flag 0.(Available to the user for general purposes)

RS1: Register bank select control bit 1.

RS0: Register bank select control bit 0.

[RS1 RS0] select which register bank is used during register accesses

RS1	RS0	Working Register Bank(R0~R7) and Address
0	0	Bank 0(00H~07H)
0	1	Bank 1(08H~0FH)
1	0	Bank 2(10H~17H)
1	1	Bank 3(18H~1FH)

OV: Overflow flag.

This bit is set to 1 under the following circumstances:

- An ADD, ADDC, or SUBB instruction causes a sign-change overflow.
- A MUL instruction results in an overflow (result is greater than 255).
- A DIV instruction causes a divide-by-zero condition.

The OV bit is cleared to 0 by the ADD, ADDC, SUBB, MUL, and DIV instructions in all other cases.

F1: Flag 1. User-defined flag.

P : Parity flag.

This bit is set to logic 1 if the sum of the eight bits in the accumulator is odd and cleared if the sum is even

SP: Stack Pointer.

The Stsek Pointer Register is 8 bits wide. It is incremented before data is stored during PUSH and CALL executions. The stack may reside anywhere in on-chip RAM.On reset, the Stack Pointer is initialized to 07H causing the stack to begin at location 08H, which is also the first register (R0) of register bank 1. Thus, if more than one register bank is to be used, the SP should be initialized to a location in the data memory not being used for data storage. The stack depth can extend up to 256 bytes.


;Demo Program of internal common 256 bytes RAM

```
·/*_____*/
:/* --- STC MCU International Limited -----*/
;/* --- STC 1T Series MCU internal common 256 bytes RAM Demo ---*/
;/* If you want to use the program or the program referenced in the ----*/
;/* article, please specify in which data and procedures from STC ----*/
TEST CONST
              EQU
                      5AH
;TEST RAM
              EQU
                      03H
              0000H
       ORG
       LJMP
              INITIAL
       ORG
              0050H
INITIAL:
       MOV
              R0,
                      #253
       MOV
                      #3H
              R1,
TEST ALL RAM:
       MOV
              R2,
                      #0FFH
TEST ONE RAM:
       MOV
              A,
                      R2
       MOV
              @R1,
                      Α
       CLR
              Α
       MOV
                      @R1
              A,
       CJNE
              A,
                      2H,
                             ERROR DISPLAY
       DJNZ
                      TEST ONE RAM
              R2.
       INC
              R1
       DJNZ
              R0.
                      TEST ALL RAM
OK DISPLAY:
       MOV
              P1,
                      #11111110B
Wait1:
       SJMP
              Wait1
ERROR DISPLAY:
       MOV
              A,
                      R1
       MOV
              P1,
                      Α
Wait2:
       SJMP
              Wait2
       END
```

3.2.2 Auxiliary RAM

There are 512 bytes of additional data RAM available on STC12C5620AD. They may be accessed by the instructions MOVX @Ri or MOVX @DPTR. The auxiliary RAM is the default target for the address range from 0x0000 to 0x01FF and can be indirectly accessed by move external instruction, "MOVX @Ri" and "MOVX @DPTR".

For KEIL-C51 compiler, to assign the variables to be located at Auxiliary RAM, the "pdata" or "xdata" definition should be used. After being compiled, the variables declared by "pdata" and "xdata" will become the memories accessed by "MOVX @Ri" and "MOVX @DPTR", respectively. Thus the STC12C5620AD hardware can access them correctly.

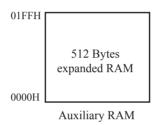

An example program for internal expanded RAM demo of STC12C5620AD:

```
·/*____*/
;/* --- STC MCU International Limited -----*/
:/* --- STC 1T Series MCU internal expanded RAM Demo -----*/
;/* If you want to use the program or the program referenced in the */
;/* article, please specify in which data and procedures from STC */
·/*_____*/
#include <reg52.h>
#include <intrins.h>
                 /* use nop () function */
sfr AUXR = 0x8e;
sfr IPH = 0xb7;
sfr WDT CONTR = 0xe1;
sfr ISP DATA
              = 0xe2:
sfr ISP ADDRH
              = 0xe3;
sfr ISP ADDRL
              = 0xe4;
sfr ISP CMD
              = 0xe5;
sfr ISP TRIG
              = 0xe6;
sfr ISP CONTR
              = 0xe7;
```

```
sbit ERROR LED = P1^5;
sbit OK LED = P1^7;
void main()
  unsigned int array point = 0;
  /* Test array one[256], Test array two[256]*/
  unsigned char xdata Test array one[256]
          0x00.
                  0x01,
                           0x02,
                                                             0x06,
                                                                      0x07,
                                   0x03,
                                            0x04,
                                                     0x05,
          0x08,
                  0x09,
                           0x0a
                                   0x0b,
                                            0x0c
                                                    0x0d
                                                             0x0e
                                                                     0x0f
          0x10,
                  0x11,
                           0x12,
                                   0x13,
                                            0x14,
                                                     0x15,
                                                             0x16,
                                                                      0x17,
          0x18,
                  0x19,
                           0x1a,
                                   0x1b,
                                            0x1c,
                                                    0x1d,
                                                             0x1e,
                                                                     0x1f,
          0x20,
                  0x21,
                           0x22,
                                   0x23,
                                            0x24,
                                                     0x25,
                                                             0x26,
                                                                      0x27,
          0x28,
                  0x29,
                           0x2a
                                   0x2b,
                                            0x2c,
                                                    0x2d
                                                             0x2e,
                                                                     0x2f
          0x30,
                  0x31,
                           0x32,
                                   0x33,
                                            0x34,
                                                     0x35,
                                                             0x36,
                                                                      0x37,
          0x38,
                  0x39,
                           0x3a,
                                   0x3b,
                                            0x3c,
                                                    0x3d
                                                             0x3e,
                                                                     0x3f
          0x40,
                  0x41,
                           0x42,
                                   0x43,
                                                     0x45,
                                                             0x46,
                                            0x44,
                                                                      0x47,
          0x48,
                  0x49,
                           0x4a,
                                   0x4b,
                                            0x4c,
                                                    0x4d,
                                                             0x4e,
                                                                     0x4f
          0x50,
                  0x51,
                           0x52,
                                                     0x55,
                                                             0x56,
                                   0x53,
                                            0x54,
                                                                      0x57,
          0x58,
                  0x59.
                           0x5a,
                                   0x5b,
                                            0x5c,
                                                    0x5d
                                                             0x5e,
                                                                     0x5f
          0x60,
                  0x61,
                           0x62,
                                   0x63,
                                            0x64,
                                                     0x65,
                                                             0x66,
                                                                      0x67,
          0x68,
                  0x69,
                                   0x6b,
                           0x6a,
                                            0x6c,
                                                    0x6d,
                                                             0x6e,
                                                                     0x6f,
          0x70,
                  0x71,
                           0x72,
                                   0x73,
                                            0x74,
                                                     0x75,
                                                             0x76,
                                                                      0x77,
                  0x79,
          0x78,
                           0x7a,
                                   0x7b,
                                            0x7c,
                                                    0x7d
                                                             0x7e,
                                                                     0x7f,
          0x80,
                  0x81,
                           0x82,
                                   0x83,
                                            0x84,
                                                     0x85,
                                                             0x86,
                                                                      0x87,
          0x88,
                  0x89,
                           0x8a,
                                   0x8b,
                                            0x8c,
                                                    0x8d,
                                                             0x8e,
                                                                     0x8f,
          0x90,
                  0x91,
                           0x92,
                                   0x93,
                                            0x94,
                                                     0x95,
                                                             0x96,
                                                                      0x97,
          0x98,
                  0x99,
                           0x9a,
                                   0x9b,
                                            0x9c.
                                                    0x9d.
                                                             0x9e,
                                                                     0x9f,
          0xa0,
                  0xa1,
                          0xa2
                                   0xa3,
                                           0xa4,
                                                     0xa5,
                                                              0xa6,
                                                                      0xa7,
          0xa8,
                  0xa9.
                          0xaa,
                                   0xab,
                                           0xac,
                                                    0xad,
                                                             0xae,
                                                                      0xaf,
          0xb0,
                  0xb1,
                           0xb2,
                                   0xb3,
                                            0xb4
                                                     0xb5,
                                                             0xb6,
                                                                      0xb7,
          0xb8,
                  0xb9,
                           0xba,
                                   0xbb,
                                            0xbc,
                                                    0xbd,
                                                             0xbe,
                                                                     0xbf,
          0xc0,
                          0xc2,
                  0xc1
                                   0xc3,
                                           0xc4
                                                    0xc5,
                                                             0xc6,
                                                                     0xc7,
          0xc8,
                  0xc9.
                          0xca,
                                   0xcb,
                                            0xcc.
                                                    0xcd.
                                                             0xce,
                                                                      0xcf,
         0xd0,
                  0xd1,
                           0xd2,
                                   0xd3,
                                            0xd4
                                                     0xd5,
                                                             0xd6,
                                                                      0xd7,
          0xd8,
                  0xd9,
                           0xda,
                                   0xdb,
                                            0xdc,
                                                     0xdd,
                                                              0xde,
                                                                      0xdf,
          0xe0,
                  0xe1,
                          0xe2,
                                   0xe3,
                                            0xe4,
                                                     0xe5,
                                                             0xe6,
                                                                     0xe7,
          0xe8,
                  0xe9,
                          0xea,
                                   0xeb,
                                            0xec,
                                                    0xed,
                                                             0xee,
                                                                     0xef,
          0xf0,
                  0xf1,
                          0xf2,
                                   0xf3,
                                           0xf4,
                                                    0xf5,
                                                             0xf6,
                                                                     0xf7,
          0xf8,
                  0xf9,
                          0xfa,
                                   0xfb,
                                           0xfc,
                                                   0xfd,
                                                            0xfe,
                                                                    0xff,
  };
```

```
unsigned char xdata Test array two[256]
                                            =
  {
         0x00.
                 0x01.
                         0x02.
                                  0x03.
                                          0x04.
                                                   0x05.
                                                           0x06.
                                                                    0x07.
         0x08,
                 0x09,
                          0x0a,
                                  0x0b,
                                          0x0c
                                                   0x0d
                                                           0x0e
                                                                   0x0f
                         0x12.
         0x10.
                 0x11,
                                  0x13.
                                          0x14.
                                                   0x15.
                                                           0x16,
                                                                   0x17.
         0x18,
                 0x19,
                         0x1a,
                                  0x1b,
                                          0x1c,
                                                   0x1d,
                                                           0x1e,
                                                                   0x1f,
         0x20,
                 0x21,
                          0x22,
                                  0x23,
                                          0x24,
                                                   0x25,
                                                           0x26,
                                                                    0x27,
         0x28,
                 0x29,
                          0x2a,
                                  0x2b
                                          0x2c
                                                   0x2d
                                                           0x2e,
                                                                   0x2f
                                                           0x36,
         0x30,
                 0x31,
                          0x32,
                                  0x33,
                                          0x34,
                                                   0x35,
                                                                   0x37,
         0x38,
                 0x39,
                          0x3a,
                                  0x3b
                                          0x3c,
                                                   0x3d
                                                           0x3e,
                                                                   0x3f
         0x40,
                 0x41,
                          0x42,
                                  0x43,
                                          0x44,
                                                   0x45,
                                                           0x46,
                                                                    0x47,
         0x48.
                 0x49.
                          0x4a.
                                  0x4b.
                                                   0x4d.
                                                           0x4e.
                                          0x4c,
                                                                   0x4f.
         0x50,
                 0x51,
                          0x52,
                                  0x53,
                                          0x54,
                                                           0x56,
                                                   0x55,
                                                                    0x57,
         0x58,
                 0x59.
                          0x5a,
                                  0x5b,
                                                           0x5e,
                                          0x5c,
                                                   0x5d.
                                                                   0x5f.
         0x60,
                 0x61,
                          0x62,
                                  0x63,
                                          0x64,
                                                   0x65,
                                                           0x66,
                                                                    0x67,
                          0x6a,
                                  0x6b,
                                                           0x6e,
         0x68,
                 0x69,
                                          0x6c,
                                                   0x6d,
                                                                   0x6f,
         0x70,
                 0x71,
                          0x72,
                                  0x73,
                                          0x74,
                                                   0x75,
                                                           0x76,
                                                                    0x77,
         0x78.
                 0x79,
                          0x7a,
                                  0x7b.
                                          0x7c.
                                                   0x7d.
                                                           0x7e,
                                                                   0x7f.
         0x80,
                 0x81,
                          0x82,
                                  0x83,
                                          0x84,
                                                   0x85,
                                                           0x86,
                                                                    0x87,
         0x88,
                 0x89,
                          0x8a,
                                  0x8b,
                                          0x8c,
                                                   0x8d,
                                                           0x8e,
                                                                   0x8f.
                          0x92.
                                                           0x96.
         0x90.
                 0x91.
                                  0x93.
                                          0x94.
                                                   0x95.
                                                                   0x97.
         0x98,
                 0x99,
                          0x9a,
                                  0x9b,
                                          0x9c,
                                                   0x9d,
                                                           0x9e,
                                                                   0x9f,
         0xa0.
                 0xa1,
                         0xa2
                                 0xa3,
                                          0xa4
                                                  0xa5,
                                                          0xa6,
                                                                   0xa7,
                 0xa9,
                         0xaa,
                                 0xab,
                                                                  0xaf,
         0xa8,
                                          0xac,
                                                  0xad,
                                                          0xae,
         0xb0,
                         0xb2,
                                  0xb3,
                                          0xb4
                                                           0xb6,
                                                                    0xb7,
                 0xb1,
                                                   0xb5,
         0xb8,
                          0xba,
                 0xb9,
                                  0xbb,
                                          0xbc,
                                                   0xbd,
                                                           0xbe,
                                                                   0xbf,
         0xc0,
                 0xc1,
                         0xc2
                                 0xc3,
                                          0xc4
                                                  0xc5,
                                                          0xc6
                                                                   0xc7,
         0xc8,
                 0xc9,
                         0xca,
                                 0xcb,
                                          0xcc,
                                                                  0xcf,
                                                  0xcd,
                                                          0xce.
         0xd0,
                 0xd1,
                         0xd2
                                  0xd3,
                                          0xd4
                                                   0xd5,
                                                           0xd6,
                                                                    0xd7,
         0xd8,
                 0xd9,
                          0xda,
                                  0xdb,
                                          0xdc,
                                                   0xdd,
                                                           0xde,
                                                                   0xdf,
         0xe0,
                         0xe2,
                                 0xe3,
                                          0xe4,
                                                  0xe5,
                                                          0xe6,
                 0xe1,
                                                                   0xe7,
         0xe8,
                 0xe9,
                         0xea,
                                 0xeb,
                                          0xec,
                                                                  0xef,
                                                  0xed,
                                                          0xee,
         0xf0,
                 0xf1,
                         0xf2
                                 0xf3,
                                         0xf4,
                                                 0xf5,
                                                         0xf6,
                                                                 0xf7,
         0xf8,
                 0xf9,
                         0xfa,
                                 0xfb,
                                        0xfc,
                                                 0xfd,
                                                         0xfe,
                                                                0xff,
 };
         ERROR LED = 1;
         OK LED = 1:
         for(array point=0; array point<256; array point++)
                  if(Test array one[array point]!=Test array two [array point])
                            ERROR LED = 0;
                            OK LED = 1;
                            break;
                  }
```

3.3 Special Function Registers

3.3.1 Special Function Registers Address Map

	0/8	1/9	2/A	3/B	4/C	5/D	6/E	7/F	
0F8H		СН	CCAP0H	CCAP1H	CCAP2H	CCAP3H			0FFH
		0000,0000	0000,0000	0000,0000	0000,0000	0000,0000			
0F0H	В		PCA_PWM0	PCA_PWM1	PCA_PWM2	PCA_PWM3			0F7H
	0000,0000		xxxx,xx00	xxxx,xx00	xxxx,xx00	xxxx,xx00			
0E8H		CL	CCAP0L	CCAP1L	CCAP2L	CCAP3L			0EFH
		0000,0000	0000,0000	0000,0000	0000,0000	0000,0000			
0E0H	ACC	WDT_CONR	ISP_DATA	ISP_ADDRH	ISP_ADDRL	ISP_CMD	ISP_TRIG	ISP_CONTR	0E7H
	0000,0000	0x00,0000	1111,1111	0000,0000	0000,0000	xxxx,xx00	xxxx,xxxx	0000,1000	
0D8H	CCON	CMOD	CCAPM0	CCAPM1	CCAPM2	CCAPM3			0DFH
	00xx,0000	0xxx,x000	x000,0000	x000,0000	x000,0000	x000,0000			
0D0H	PSW								0D7H
	0000,0000								ļ
0C8H									0CFH
									. ~
0C0H						ADC_CONTR	ADC_DATA	CLK_DIV	0C7H
						0000,0000	0000,0000	xxxx,x000	
0B8H	IP	SADEN					ADC_LOW2		0BFH
05077	x000,0000						0000,0000		0
0B0H	P3	P3M0	P3M1					IPH	0B7H
0.4.011	1x11,1111	0000,0000	0000,0000					x000,0000	0.4.511
0A8H	IE	SADDR							0AFH
0.4.011	0000,0000								0 4 777
0A0H	P2							Don't use	0A7H
00011	1111,1111	CDLIE							OOFII
098H	SCON	SBUF							09FH
00011	0000,0000 P1	XXXX,XXXX	D13/(1	DOM (0	DOM (1	D21 (0	D2) (1		00711
090H	1111,1111	P1M0 0000,0000	P1M1 0000,0000	P0M0 0000,0000	P0M1 0000,0000	P2M0 0000,0000	P2M1 0000,0000		097H
088H	TCON	TMOD	TL0	TL1	TH0	TH1	AUXR	WAKE_CLKO	08FH
00011	0000,0000	0000,0000	0000,0000	0000,0000	0000,0000	0000,0000	0000,00xx	0000,xx00	00111
080H	P0	SP	DPL	DPH	SPSTAT	SPCTL	SPDAT	PCON	087H
08011	1111,1111	0000,0111	0000,0000	0000,0000	00xx,xxxx	0000,0100	0000,0000	0011,0000	08/11
	0/8	1/9	2/A	3/B	4/C	5/D	6/E	7/F]
	U/ 0	1/9	2/A	3/ D	4/0	3/10	U/E	//F	
	Ť								
	Non Bit Addressable								
Bit	Addressab	ole							

3.3.2 Special Function Registers Bits Description

Symbol	Description	Address	Bit Ad MSB	Value after Power-on or Reset	
P0	Port 0	80H	0.7 P0.6 P0.5	P0.4 P0.3 P0.2 P0.1 P0.0	1111 1111B
SP	Stack Pointer	81H			0000 0111B
DPTR DPL	Data Pointer Low	82H			0000 0000B
DPH	Data Pointer High	83H			0000 0000B
SPSTAT	SPI Status register	84H	PIF WCOL -	- - - - -	00xx xxxxB
SPCTL	SPI control register	85H	SIG SPEN DORD N	MSTR CPOL CPHA SPR1 SPR0	0000 0100B
SPDAT	SPI Data register	86H			0000 0000B
PCON	Power Control	87H	OD SMODO LVDF	POF GF1 GF0 PD IDL	0011 0000B
TCON	Timer Control	88H	TF1 TR1 TF0	TRO IE1 IT1 IE0 IT0	0000 0000B
TMOD	Timer Mode	89H	ATE C/T M1	M0 GATE C/T M1 M0	0000 0000B
TL0	Timer Low 0	8AH			0000 0000B
TL1	Timer Low 1	8BH			0000 0000B
TH0	Timer High 0	8CH			0000 0000B
TH1	Timer High 1	8DH			0000 0000B
AUXR	Auxiliary register	8EH	0x12 T1x12 UART_M0x	6 EADCI ESPI ELVDI	0000 00xxB
WAKE_CLKO	CLK_Output Power down Wake-up control register	8FH	WAKEUP RXD_PIN_IE T1_PIN_IE	E TO_PIN_IE TICLKO TOCLKO	0000 xx00B
P1	Port 1	90H	P1.7 P1.6 P1.5	P1.4 P1.3 P1.2 P1.1 P1.0	1111 1111B
P1M0	P1 configuration 0	91H			0000 0000B
P1M1	P1 configuration 1	92H			0000 0000B
P0M0	P0 configuration 0	93H			0000 0000B
P0M1	P0 configuration 1	94H			0000 0000B
P2M0	P2 configuration 0	95H			0000 0000B
P2M1	P2 configuration 1	96H			0000 0000B
SCON	Serial Control	98H	10/FE SM1 SM2	REN TB8 RB8 TI RI	0000 0000B
SBUF	Serial Buffer	99H			xxxx xxxxB
P2	Port 2	A0H	2.7 P2.6 P2.5	P2.4 P2.3 P2.2 P2.1 P2.0	1111 1111B
IE	Interrupt Enable	A8H	A EPCA_LVD EADO	C_SPI ES ET1 EX1 ET0 EX0	0000 0000B
SADDR	Slave Address	A9H			0000 0000B
Р3	Port 3	ВОН	3.7 - P3.5	P3.4 P3.3 P3.2 P3.1 P3.0	1x11 1111B
P3M0	P2 configuration 0	B1H			0000 0000B
P3M1	P3 configuration 1	В2Н			0000 0000B
IPH	Interrupt Priority High	В7Н	' '	_SPIH PSH PT1H PX1H PT0H PX0H	x000 0000B
IP	Interrupt Priority Low	В8Н	PPCA_LVD PADC_	SPI PS PT1 PX1 PT0 PX0	x000 0000B

Symbol	Description	Address	Bit Address and Symbol MSB LSB	Value after Power-on or
SADEN	Slave Address Mask	В9Н	MSB LSB	Reset 0000 0000B
ADC CONTR	ADC Control	C5H	ADC_POWER SPEEDI SPEED0 ADC_FLAG ADC_START CHS2 CHS1 CHIS0	0000 0000B
ADC DATA	ADC Result High	С6Н		0000 0000B
ADC_LOW2	ADC Result Low	BEH		0000 0000B
CLK_DIV	Clock Divder	C7h	- - - - CLKS2 CLKS1 CLKS0	xxxx x000B
PSW	Program Status Word	D0H	CY AC F0 RS1 RS0 OV F1 P	0000 0000B
CCON	PCA Control Register	D8H	CF CR CCF3 CCF2 CCF1 CCF0	00xx 0000B
CMOD	PCA Mode Register	D9H	CIDL CPS1 CPS0 ECF	00xx 0000B
CCAPM0	PCA Module 0 Mode Register	DAH	- ECOM0 CAPPO CAPNO MATO TOGO PWM0 ECCFO	x000 0000B
CCAPM1	PCA Module 1 Mode Register	DBH	- ECOMI CAPPI CAPNI MATI TOGI PWMI ECCFI	x000 0000B
CCAPM2	PCA Module 2 Mode Register	DCH	- ECOM2 CAPP2 CAPN2 MAT2 TOG2 PWM2 ECCF2	x000 0000B
CCAPM3	PCA Module 3 Mode Register	DDH	- ECOM3 CAPP3 CAPN3 MAT3 TOG3 PWM3 ECCF3	x000 0000B
ACC	Accumulator	E0H		0000 0000B
WDT_CONTR	Watch-Dog-Timer Control Register	E1H	WDT_FLAG - EN_WDT CLR_WDT IDLE_WDT PS2 PS1 PS0	xx00 0000B
ISP_DATA	ISP/IAP Flash Data Register	Е2Н		1111 1111B
ISP_ADDRH	ISP/IAP Flash Address High	ЕЗН		0000 0000B
ISP_ADDRL	ISP/IAP Flash Address Low	Е4Н		0000 0000B
ISP_CMD	ISP/IAP Flash Command Register	E5H	MS1 MS0	xxxx x000B
ISP_TRIG	ISP/IAP Flash Command Trigger	Е6Н		xxxx xxxxB
ISP_CONTR	ISP/IAP Control Register	Е7Н	IAPEN SWBS SWRST CMD_FAIL - WT2 WT1 WT0	0000 x000B
CL	PCA Base Timer Low	Е9Н		0000 0000B
CCAP0L	PCA module 0 capture register low	ЕАН		0000 0000B
CCAP1L	PCA module 1 capture register low	ЕВН		0000 0000B
CCAP2L	PCA Module-2 capture register Low	ЕСН		0000 0000B

Symbol	Description	Address	Bit Address and Symbol MSB LSB	Value after Power-on or Reset
CCAP3L	PCA Module-3 capture register Low	EDH		0000 0000B
В	B Register	F0H		0000 0000B
PCA_PWM0	PCA PWM mode auxiliary register 1	F2H	EPCOH EPCOL	xxxx xx00B
PCA_PWM1	PCA PWM mode auxiliary register 1	F3H	EPC1H EPC1L	xxxx xx00B
PCA_PWM2	PCA PWM Mode Auxiliary Register 2	F4H	EPC2H EPC2L	xxxx xx00B
PCA_PWM3	PCA PWM Mode Auxiliary Register 3	F5H	- - - - - EPC3H EPC3L	xxxx xx00B
СН	PCA Base Timer High	F9H		0000 0000B
ССАР0Н	PCA module 0 capture register high	FAH		0000 0000B
ССАР1Н	PCA module 1 capture register high	FBH		0000 0000B
ССАР2Н	PCA Module-2 C capture register High	FCH		0000 0000B
ССАР3Н	PCA Module-3 capture register High	FDH		0000 0000B

Some common SFRs of standard 8051 are shown as below

Accumulator

ACC is the Accumulator register. The mnemonics for accumulator-specific instructions, however, refer to the accumulator simply as A.

B-Register

The B register is used during multiply and divide operations. For other instructions it can be treated as another scratch pad register.

Stack Pointer

The Stack Pointer register is 8 bits wide. It is incremented before data is stored during PUSH and CALL executions. While the stack may reside anywhee in on-chip RAM, the Stack Pointer is initialized to 07H after a reset. Therefore, the first value pushed on the stack is placed at location 0x08, which is also the first register (R0) of register bank 1. Thus, if more than one register bank is to be used, the SP should be initialized to a location in the data memory not being used for data storage. The stack depth can extend up to 256 bytes.

Data Pointer Register (DPTR)

The Data Pointer (DPTR) consists of a high byte (DPH) and a low byte (DPL). Its intended function is to hold a 16-bit address. It may be manipulated as a 16-bit register or as two independent 8-bit registers.

Program Status Word(PSW)

The program status word(PSW) contains several status bits that reflect the current state of the CPU. The PSW, shown below, resides in the SFR space. It contains the Carry bit, the Auxiliary Carry(for BCD operation), the two register bank select bits, the Overflow flag, a Parity bit and two user-definable status flags.

The Carry bit, other than serving the function of a Carry bit in arithmetic operations, also serves as the "Accumulator" for a number of Boolean operations.

The bits RS0 and RS1 are used to select one of the four register banks shown in the previous page. A number of instructions refer to these RAM locations as R0 through R7.

The Parity bit reflects the number of 1s in the Accumulator. P=1 if the Accumulator contains an odd number of 1s and otherwise P=0.

PSW register

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
PSW	D0H	name	CY	AC	F0	RS1	RS0	OV	F1	P

CY: Carry flag.

This bit is set when the last arithmetic operation resulted in a carry (addition) or a borrow (subtrac-tion). It is cleared to logic 0 by all other arithmetic operations.

AC: Auxilliary Carry Flag.(For BCD operations)

This bit is set when the last arithmetic operation resulted in a carry into (addition) or a borrow from (subtraction) the high order nibble. It is cleared to logic 0 by all other arithmetic operations

F0: Flag 0.(Available to the user for general purposes)

RS1: Register bank select control bit 1.

RS0: Register bank select control bit 0.

[RS1 RS0] select which register bank is used during register accesses

RS1	RS0	Working Register Bank(R0~R7) and Address
0	0	Bank 0(00H~07H)
0	1	Bank 1(08H~0FH)
1	0	Bank 2(10H~17H)
1	1	Bank 3(18H~1FH)

OV: Overflow flag.

This bit is set to 1 under the following circumstances:

- An ADD, ADDC, or SUBB instruction causes a sign-change overflow.
- A MUL instruction results in an overflow (result is greater than 255).
- A DIV instruction causes a divide-by-zero condition.

The OV bit is cleared to 0 by the ADD, ADDC, SUBB, MUL, and DIV instructions in all other cases.

F1: Flag 1. User-defined flag.

P : Parity flag.

This bit is set to logic 1 if the sum of the eight bits in the accumulator is odd and cleared if the sum is even.

Chapter 4. Configurable I/O Ports of STC12C5620AD series

4.1 I/O Ports Configurations

All I/O ports of STC12C5620AD may be independently configured to one of four modes by setting the corresponding bit in two mode registers PxMn ($x=0\sim3$, n=0, 1). The four modes are quasi-bidirectional (standard 8051 port output), push-pull output, input-only or open-drain output. All port pins default to quasi-bidirectional after reset. Each one has a Schmitt-triggered input for improved input noise rejection. Any port can drive 20mA current, but the whole chip had better drive lower than 90mA current.

Configure I/O ports mode

P3 Configure <P3.7, P3.6, P3.5, P3.4, P3.3, P3.2, P3.1, P3.0 port> (P3 address: B0H)

P3M0[7 : 0]	P3M1 [7:0]	I/O ports Mode
0	0	quasi_bidirectional(standard 8051 I/O port output) , Sink Current up to 20mA , pull-up Current is 230µA , Because of manufactured error, the actual pull-up current is 250uA ~ 150uA
0	1	push-pull output(strong pull-up output, current can be up to 20mA, resistors need to be added to restrict current
1	0	input-only (high-impedance)
1	1	Open Drain, internal pull-up resistors should be disabled and external pull-up resistors need to join.

Example: MOV P3M0, #10100000B MOV P3M1, #10010000B

;P3.7 in Open Drain mode, P3.5 in high-impedance input, P3.4 in strong push-pull output, P3.3/P3.2/P3.1/P3.0 in quasi_bidirectional/weak pull-up

P2 Configure < P2.7, P2.6, P2.5, P2.4, P2.3, P2.2, P2.1, P2.0 port> (P2 address: A0H)

P2M0[7 : 0]	P2M1 [7:0]	I/O ports Mode
0	0	quasi_bidirectional(standard 8051 I/O port output) , Sink Current up to 20mA , pull-up Current is $230\mu A$, Because of manufactured error, the actual pull-up current is $250uA \sim 150uA$
0	1	push-pull output(strong pull-up output, current can be up to 20mA, resistors need to be added to restrict current
1	0	input-only (high-impedance)
1	1	Open Drain, internal pull-up resistors should be disabled and external pull-up resistors need to join.

Example: MOV P2M0, #10100000B MOV P2M1, #11000000B

;P2.7 in Open Drain mode, P2.6 in strong push-pull output, P2.5 in high-impedance input, P2.4/P2.3/P2.2/P2.1/P2.0 in quasi_bidirectional/weak pull-up

P1 Configure <P1.7, P1.6, P1.5, P1.4, P1.3, P1.2, P1.1, P1.0 port> (P1 address: 90H)

P1M0[7:0]	P1M1 [7:0]	I/O ports Mode
		quasi_bidirectional(standard 8051 I/O port output) ,
0	0	Sink Current up to 20mA, pull-up Current is 230μA,
		Because of manufactured error, the actual pull-up current is 250uA ~ 150uA
0	1	push-pull output(strong pull-up output, current can be up to 20mA, resistors
0	1	need to be added to restrict current
1	0	input-only (high-impedance)
1	1	Open Drain, internal pull-up resistors should be disabled and external
1	1	pull-up resistors need to join.

Example: MOV P1M0, #10100000B MOV P1M1, #11000000B

;P1.7 in Open Drain mode, P1.6 in strong push-pull output, P1.5 in high-impedance input, P1.4/P1.3/P1.2/P1.1/P1.0 in quasi bidirectional/weak pull-up

P0 Configure < P0.7, P0.6, P0.5, P0.4, P0.3, P0.2, P0.1, P0.0 port> (P0 address: 80H)

P0M0[7 : 0]	P0M1 [7:0]	I/O ports Mode
0	0	quasi_bidirectional (standard 8051 I/O port output) , Sink Current up to 20mA , pull-up Current is 230µA , Because of manufactured error, the actual pull-up current is 250uA ~ 150uA
0	1	push-pull output(strong pull-up output, current can be up to 20mA, resistors need to be added to restrict current
1	0	input-only (high-impedance)
1	1	Open Drain, internal pull-up resistors should be disabled and external pull-up resistors need to join.

Example: MOV P0M0, #00001010B MOV P0M1, #00001100B

;P0.3 in Open Drain mode, P0.2 in strong push-pull output, P0.1 in high-impedance input, P0.0 in quasi bidirectional/weak pull-up

Some SFRs related with I/O ports are listed below.

P3 register (bit addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
Р3	ВОН	name	P3.7	P3.6	P3.5	P3.4	P3.3	P3.2	P3.1	P3.0

P3 register could be bit-addressable and set/cleared by CPU. And P3.7~P3.0 coulde be set/cleared by CPU.

P3M0 register (non bit addressable)

SFR name	Address	bit	В7	В6	B5	B4	В3	B2	B1	В0
P3M0	B1H	name	P3M0.7	P3M0.6	P3M0.5	P3M0.4	P3M0.3	P3M0.2	P3M0.1	P3M0.0

P3M1 register (non bit addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
P3M1	В2Н	name	P3M1.7	P3M1.6	P3M1.5	P3M1.4	P3M1.3	P3M1.2	P3M1.1	P3M1.0

P2 register (bit addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
P2	A0H	name	P2.7	P2.6	P2.5	P2.4	P2.3	P2.2	P2.1	P2.0

P2 register could be bit-addressable and set/cleared by CPU. And P2.7~P2.0 coulde be set/cleared by CPU.

P2M0 register (non bit addressable)

SFR name	Address	bit	В7	В6	B5	B4	В3	B2	B1	В0
P2M0	95H	name	P2M0.7	P2M0.6	P2M0.5	P2M0.4	P2M0.3	P2M0.2	P2M0.1	P2M0.0

P2M1 register (non bit addressable)

SF	R name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
F	P2M1	96H	name	P2M1.7	P2M1.6	P2M1.5	P2M1.4	P2M1.3	P2M1.2	P2M1.1	P2M1.0

P1 register (bit addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
P1	90H	name	P1.7	P1.6	P1.5	P1.4	P1.3	P1.2	P1.1	P1.0

P1 register could be bit-addressable and set/cleared by CPU. And P1.7~P1.0 coulde be set/cleared by CPU.

P1M0 register (non bit addressable)

SFR name	Address	bit	В7	В6	B5	В4	В3	B2	B1	В0
P1M0	91H	name	P1M0.7	P1M0.6	P1M0.5	P1M0.4	P1M0.3	P1M0.2	P1M0.1	P1M0.0

P1M1 register (non bit addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
P1M1	92H	name	P1M1.7	P1M1.6	P1M1.5	P1M0.4	P1M1.3	P1M1.2	P1M1.1	P1M1.0

P0 register (bit addressable)

SFR name	Address	bit	B7	В6	В5	B4	В3	B2	B1	В0
P0	80H	name	P0.7	P0.6	P0.5	P0.4	P0.3	P0.2	P0.1	P0.0

P0 register could be bit-addressable. And P0.3~P0.0 coulde be set/cleared by CPU.

P0M0 register (non bit addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
P0M0	93H	name	P0M0.7	P0M0.6	P0M0.5	P0M0.4	P0M0.3	P0M0.2	P0M0.1	P0M0.0

P0M1 register (non bit addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
P0M1	94H	name	P0M1.7	P0M1.6	P0M1.5	P0M1.4	P0M1.3	P0M1.2	P0M1.1	P0M1.0

4.2 I/O ports Modes


4.2.1 Quasi-bidirectional I/O

Port pins in quasi-bidirectional output mode function similar to the standard 8051 port pins. A quasi-bidirectional port can be used as an input and output without the need to reconfigure the port. This is possible because when the port outputs a logic high, it is weakly driven, allowing an external device to pull the pin low. When the pin outputs low, it is driven strongly and able to sink a large current. There are three pull-up transistors in the quasi-bidirectional output that serve different purposes.

One of these pull-ups, called the "very weak" pull-up, is turned on whenever the port register for the pin contains a logic "1". This very weak pull-up sources a very small current that will pull the pin high if it is left floating.

A second pull-up, called the "weak" pull-up, is turned on when the port register for the pin contains a logic "1" and the pin itself is also at a logic "1" level. This pull-up provides the primary source current for a quasi-bidirectional pin that is outputting a 1. If this pin is pulled low by the external device, this weak pull-up turns off, and only the very weak pull-up remains on. In order to pull the pin low under these conditions, the external device has to sink enough current to over-power the weak pull-up and pull the port pin below its input threshold voltage.


The third pull-up is referred to as the "strong" pull-up. This pull-up is used to speed up low-to-high transitions on a quasi-bidirectional port pin when the port register changes from a logic "0" to a logic "1". When this occurs, the strong pull-up turns on for two CPU clocks, quickly pulling the port pin high.

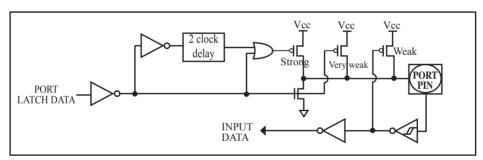

Quasi-bidirectional output

4.2.2 Push-pull Output


The push-pull output configuration has the same pull-down structure as both the open-drain and the quasi-bidirectional output modes, but provides a continuous strong pull-up when the port register conatins a logic "1". The push-pull mode may be used when more source current is needed from a port output. In addition, input path of the port pin in this configuration is also the same as quasi-bidirectional mode.

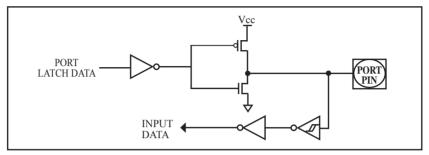

Push-pull output

4.2.3 Input-only (High-Impedance) Mode


The input-only configuration is a Schmitt-triggered input without any pull-up resistors on the pin.



Input-only Mode

4.2.4 Open-drain Output

The open-drain output configuration turns off all pull-ups and only drives the pull-down transistor of the port pin when the port register contains a logic "0". To use this configuration in application, a port pin must have an external pull-up, typically tied to VCC. The input path of the port pin in this configuration is the same as quasi-bidirection mode.

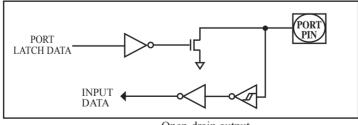

Open-drain output

4.3 I/O port application notes


Traditional 8051 access I/O (signal transition or read status) timing is 12 clocks, STC12C5620AD series MCU is 4 clocks. When you need to read an external signal, if internal output a rising edge signal, for the traditional 8051, this process is 12 clocks, you can read at once, but for STC12C5620AD series MCU, this process is 4 clocks, when internal instructions is complete but external signal is not ready, so you must delay 1~2 nop operation.

When MCU is connected to a SPI or I2C or other open-drain peripherals circuit, you need add a 10K pull-up resistor.

Some IO port connected to a PNP transistor, but no pul-up resistor. The correct access method is IO port pull-up resistor and transistor base resistor should be consistent, or IO port is set to a strongly push-pull output mode.


Using IO port drive LED directly or matrix key scan, needs add a 470ohm to 1Kohm resistor to limit current.

4.4 Typical transistor control circuit

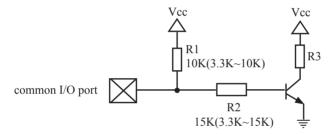

If I/O is configed as "weak" pull-up, you should add a external pull-up resistor R1(3.3K~10K ohm). If no pull-up resistor R1, proposal to add a 15K ohm series resistor R2 at least or config I/O as "push-pull" mode.

4.5 Typical diode control circuit




For weak pull-up / quasi-bidirectional I/O, use sink current drive LED, current limiting resistor as greater than 1K ohm, minimum not less than 470 ohm.



For push-pull / strong pull-up I/O, use drive current drive LED.

4.6 3V/5V hybrid system


When STC12C5620AD series 5V MCU connect to 3.3V peripherals. To prevent the 3.3V device can not afford to 5V voltage, the 5V MCU corresponding I/O should first add a 330 ohm current limiting resistor to 3.3 device I/O ports. And in intialization of procedures the 5V MCU corresponding I/O is set to open drain mode, disconnect the internal pull-up resistor, the corresponding 3.3V device I/O port add 10K ohm external pull-up resistor to the 3.3V device VCC, so high level to 3.3V and low to 0V, which can proper functioning



When STC12LE5620AD series 3V MCU connect to 5V peripherals. To prevent the 3V MCU can not afford to 5V voltage, if the corresponding I/O port as input port, the port may be in an isolation diode in series, isolated high-voltage part. When the external signal is higher than MCU operating voltage, the diode cut-off, I/O have been pulled high by the internal pull-up resistor; when the external signal is low, the diode conduction, I/O port voltage is limited to 0.7V, it's low signal to MCU.




When STC12LE5620AD series 3V MCU connect to 5V peripherals. To prevent the 3V MCU can not afford to 5V voltage, if the corresponding I/O port as output port, the port may be connect a NPN transistor to isolate high-voltage part. The circuit is shown as below.

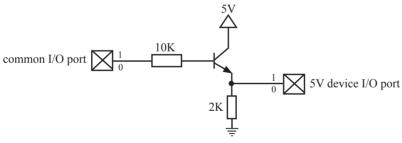

4.7 How to make I/O port low after MCU reset


Traditional 8051 MCU power-on reset, the general IO port are weak pull-high output, while many practical applications require IO port remain low level after power-on reset, otherwise the system malfunction would be generated. For STC12C5620AD series MCU, IO port can add a pull-down resistor (1K/2K/3K), so that when power-on reset, although a weak internal pull-up to make MCU output high, but because of the limited capacity of the internal pull-up, it can not pull-high the pad, so this IO port is low level after power-on reset. If the I/O port need to drive high, you can set the IO model as the push-pull output mode, while the push-pull mode the drive current can be up to 20mA, so it can drive this I/O high.




4.8 I/O status while PWM outputing


When I/O is used as PWM port, it's status as bellow:

Before PWM output	While PWM outputing
Quasi-bidirectional	Push-Pull (Strong pull-high need 1K~10K limiting resistor)
Push-Pull	Push-Pull (Strong pull-high need 1K~10K limiting resistor)
Input ony (Floating)	PWM Invalid
Open-drain	Open-drain




4.9 I/O drive LED application circuit

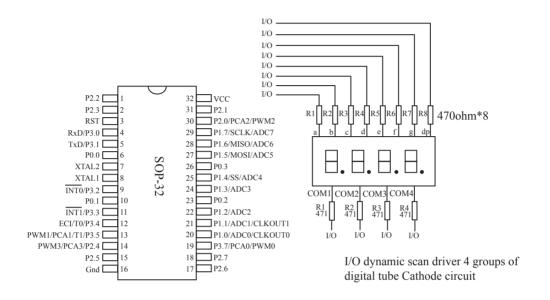

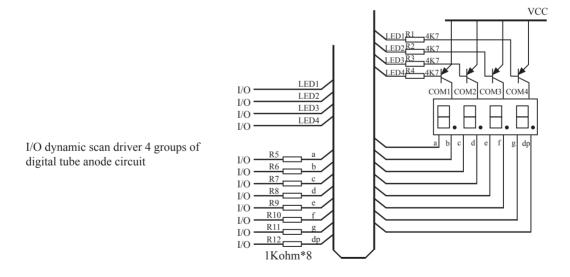

4.10 I/O immediately drive LCD application circuit

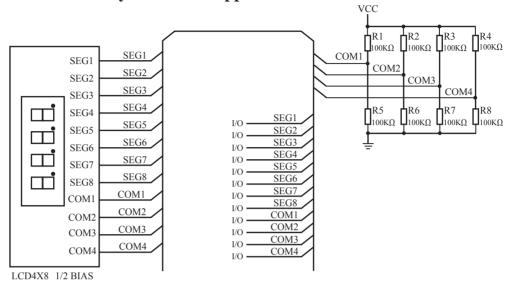

How to light on the LCD pixels:


When the pixels corresponding COM-side and SEG-side voltage difference is greater than 1/2VCC, this pixel is lit, otherwise off

Contrl SEG-side (Segment):


 $I/O\ direct\ drive\ Segment\ lines,\ control\ Segment\ output\ high-level\ (VCC)\ or\ low-level\ (0V).$


Contrl COM-side (Common):

I/O port and two 100K dividing resistors jointly controlled Common line, when the IO output "0", the Common-line is low level (0V), when the IO push-pull output "1", the Common line is high level (VCC), when IO as high-impedance input, the Common line is 1/2VCC.

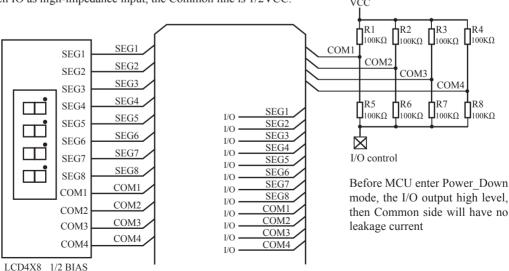

4.11 Using A/D Conversion to scan key application circuit

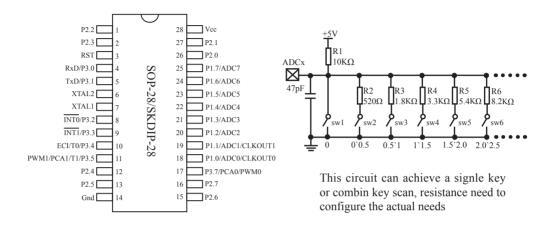

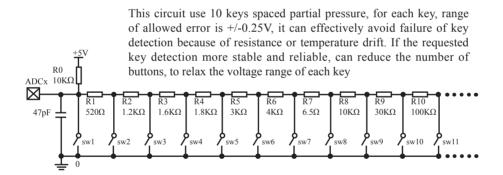

Chapter 5. Instruction System

5.1 Addressing Modes

Addressing modes are an integral part of each computer's instruction set. They allow specifying the source or destination of data in different ways, depending on the programming situation. There are five modes available:

- Immediate
- Direct
- Indirect
- · Register
- Indexed

Immediate Constant(IMM)

The value of a constant can follow the opcode in the program memory. For example,

MOV A. #70H

loads the Accumulator with the hex digits 70. The same number could be specified in decimal number as 112.

Direct Addressing(DIR)

In direct addressing the operand is specified by an 8-bit address field in the instruction. Only 128 lowest bytes of internal data RAM and SFRs can be direct addressed.

Indirect Addressing(IND)

In indirect addressing the instruction specified a register which contains the address of the operand. Both internal and external RAM can be indirectly addressed.

The address register for 8-bit addresses can be R0 or R1 of the selected bank, or the Stack Pointer.

The address register for 16-bit addresses can only be the 16-bit data pointer register – DPTR.

Register Instruction(REG)

The register banks, containing registers R0 through R7, can be accessed by certain instructions which carry a 3-bit register specification within the opcode of the instruction. Instructions that access the registers this way are code efficient because this mode eliminates the need of an extra address byte. When such instruction is executed, one of the eight registers in the selected bank is accessed.

Register-Specific Instruction

Some instructions are specific to a certain register. For example, some instructions always operate on the accumulator or data pointer, etc. No address byte is needed for such instructions. The opcode itself does it.

Index Addressing

Only program memory can be accessed with indexed addressing and it can only be read. This addressing mode is intended for reading look-up tables in program memory. A 16-bit base register(either DPTR or PC) points to the base of the table, and the accumulator is set up with the table entry number. Another type of indexed addressing is used in the conditional jump instruction.


In conditional jump, the destination address is computed as the sum of the base pointer and the accumulator.

5.2 Instruction Set Summary

The STC MCU instructions are fully compatible with the standard 8051's, which are divided among five functional groups:

- Arithmetic
- Logical
- Data transfer
- · Boolean variable
- · Program branching

The following tables provides a quick reference chart showing all the 8051 and STC 1T MCU instructions. Once you are familiar with the instruction set, this chart should prove a handy and quick source of reference.



					V	
Mn	emonic	Description	Byte	Execution clocks of 12T MCU	Execution clocks of STC 1T MCU	Efficiency improved
ARITH	METIC (OPERATIONS				
ADD	A, Rn	Add register to Accumulator	1	12	2	6x
ADD	A, direct	Add ditect byte to Accumulator	2	12	3	4x
ADD	A, @Ri	Add indirect RAM to Accumulator	1	12	3	4x
ADD	A, #data	Add immediate data to Accumulator	2	12	2	6x
ADDC	A, Rn	Add register to Accumulator with Carry	1	12	2	6x
ADDC	A, direct	Add direct byte to Accumulator with Carry	2	12	3	4x
ADDC	A, @Ri	Add indirect RAM to Accumulator with Carry	1	12	3	4x
ADDC	A, #data	Add immediate data to Acc with Carry	2	12	2	6x
SUBB	A, Rn	Subtract Register from Acc wih borrow	1	12	2	6x
SUBB	A, direct	Subtract direct byte from Acc with borrow	2	12	3	4x
SUBB	A, @Ri	Subtract indirect RAM from ACC with borrow	1	12	3	4x
SUBB	A, #data	Substract immediate data from ACC with borrow	2	12	2	6x
INC	A	Increment Accumulator	1	12	2	6x
INC	Rn	Increment register	1	12	3	4x
INC	direct	Increment direct byte	2	12	4	3x
INC	@Ri	Increment direct RAM	1	12	4	3x
DEC	A	Decrement Accumulator	1	12	2	6x
DEC	Rn	Decrement Register	1	12	3	4x
DEC	direct	Decrement direct byte	2	12	4	3x
DEC	@Ri	Decrement indirect RAM	1	12	4	3x
INC	DPTR	Increment Data Pointer	1	24	1	24x
MUL	AB	Multiply A & B	1	48	4	12x
DIV	AB	Divde A by B	1	48	5	9.6x
DA	A	Decimal Adjust Accumulator	1	12	4	3x

N	Inemonic	Description	Byte	Execution clocks of 12T MCU	Execution clocks of STC 1T MCU	
LOGIC	AL OPERATION	DNS		1		
ANL	A, Rn	AND Register to Accumulator	1	12	2	6x
ANL	A, direct	AND direct btye to Accumulator	2	12	3	4x
ANL	A, @Ri	AND indirect RAM to Accumulator	1	12	3	4x
ANL	A, #data	AND immediate data to Accumulator	2	12	2	6x
ANL	direct, A	AND Accumulator to direct byte	2	12	4	3x
ANL	direct, #data	AND immediate data to direct byte	3	24	4	6x
ORL	A, Rn	OR register to Accumulator	1	12	2	6x
ORL	A,direct	OR direct byte to Accumulator	2	12	3	4x
ORL	A,@Ri	OR indirect RAM to Accumulator	1	12	3	4x
ORL	A, #data	OR immediate data to Accumulator	2	12	2	6x
ORL	direct, A	OR Accumulator to direct byte	2	12	4	3x
ORL	direct,#data	OR immediate data to direct byte	3	24	4	6x
XRL	A, Rn	Exclusive-OR register to Accumulator	1	12	2	6x
XRL	A, direct	Exclusive-OR direct byte to Accumulator	2	12	3	4x
XRL	A, @Ri	Exclusive-OR indirect RAM to Accumulator	1	12	3	4x
XRL	A, #data	Exclusive-OR immediate data to Accumulator	2	12	2	6x
XRL	direct, A	Exclusive-OR Accumulator to direct byte	2	12	4	3x
XRL	direct,#data	Exclusive-OR immediate data to direct byte	3	24	4	6x
CLR	A	Clear Accumulator	1	12	1	12x
CPL	A	Complement Accumulator	1	12	2	6x
RL	A	Rotate Accumulator Left	1	12	1	12x
RLC	A	Rotate Accumulator Left through the Carry	1	12	1	12x
RR	A	Rotate Accumulator Right	1	12	1	12x
RRC	A	Rotate Accumulator Right through the Carry	1	12	1	12x
SWAP	A	Swap nibbles within the Accumulator	1	12	1	12x

	Mnemonic	Description	Byte	Execution clocks of 12T MCU	Execution clocks of STC 1T MCU	Efficiency improved
DATA TRANSFER						
MOV	A, Rn	Move register to Accumulator	1	12	1	12x
MOV	A, direct	Move direct byte to Accumulator	2	12	2	6x
MOV	A,@Ri	Move indirect RAM to	1	12	2	6x
MOV	A, #data	Move immediate data to Accumulator	2	12	2	6x
MOV	Rn, A	Move Accumulator to register	1	12	2	6x
MOV	Rn, direct	Move direct byte to register	2	24	4	6x
MOV	Rn, #data	Move immediate data to register	2	12	2	6x
MOV	direct, A	Move Accumulator to direct byte	2	12	3	4x
MOV	direct, Rn	Move register to direct byte	2	24	3	8x
MOV	direct,direct	Move direct byte to direct	3	24	4	6x
MOV	direct, @Ri	Move indirect RAM to direct byte	2	24	4	6x
MOV	direct, #data	Move immediate data to direct byte	3	24	3	8x
MOV	@Ri, A	Move Accumulator to indirect RAM	1	12	3	4x
MOV	@Ri, direct	Move direct byte to indirect RAM	2	24	4	6x
MOV	@Ri, #data	Move immediate data to indirect RAM	2	12	3	4x
MOV	DPTR, #data16	Move immdiate data to indirect RAM	2	24	3	8x
MOVO	A, @A+DPTR	Move Code byte relative to DPTR to Acc	1	24	4	6x
MOVO	A, @A+PC	Move Code byte relative to PC to Acc	1	24	4	6x
MOVX	A, @Ri	Move External RAM(8-bit addr) to Acc	1	24	3	8x
MOVX	aRi, A	Move Acc to External RAM(8-bit addr)	1	24	4	6x
MOVX	A, @DPTR	Move External RAM(16-bit addr) to Acc	1	24	3	8x
MOVX	@DPTR, A	Move Acc to External RAM (16-bit addr)	1	24	3	8x
PUSH	direct	Push direct byte onto stack	2	24	4	6x
POP	direct	POP direct byte from stack	2	24	3	8x
XCH	A, Rn	Exchange register with Accumulator	1	12	3	4x
XCH	A, direct	Exchange direct byte with Accumulator	2	12	4	3x
XCH	A, @Ri	Exchange indirect RAM with Accumulator	1	12	4	3x
XCHD	A, @Ri	Exchange low-order Digit indirect RAM with Acc	1	12	4	3x

N	Inemonic	Description	Byte	Execution clocks of 12T MCU	Execution clocks of STC 1T MCU	
BOOLE	AN VARIABLE	MANIPULATION				
CLR	С	Clear Carry	1	12	1	12x
CLR	bit	Clear direct bit	2	12	4	3x
SETB	С	Set Carry	1	12	1	12x
SETB	bit	Set direct bit	2	12	4	3x
CPL	С	Complement Carry	1	12	1	12x
CPL	bit	Complement direct bit	2	12	4	3x
ANL	C, bit	AND direct bit to Carry	2	24	3	8x
ANL	C, /bit	AND complement of direct bit to Carry	2	24	3	8x
ORL	C, bit	OR direct bit to Carry	2	24	3	8x
ORL	C, /bit	OR complement of direct bit to Carry	2	24	3	8x
MOV	C, bit	Move direct bit to Carry	2	12	3	4x
MOV	bit, C	Move Carry to direct bit	2	24	4	6x
JC	rel	Jump if Carry is set	2	24	3	8x
JNC	rel	Jump if Carry not set	2	24	3	8x
ЈВ	bit, rel	Jump if direct bit is set	3	24	4	6x
JNB	bit,rel	Jump if direct bit is not set	3	24	4	6x
JBC	bit, rel	Jump if direct bit is set & clear bit	3	24	5	4.8x
PROGR	AM BRANCHIN	IG				
ACALL	addr11	Absolute Subroutine Call	2	24	6	4x
LCALL	addr16	Long Subroutine Call	3	24	6	4x
RET		Return from Subroutine	1	24	4	6x
RETI		Return from interrupt	1	24	4	6x
AJMP	addr11	Absolute Jump	2	24	3	8x
LJMP	addr16	Long Jump	3	24	4	6x
SJMP	rel	Short Jump (relative addr)	2	24	3	8x
JMP	@A+DPTR	Jump indirect relative to the DPTR	1	24	3	8x
JZ	rel	Jump if Accumulator is Zero	2	24	3	8x
JNZ	rel	Jump if Accumulator is not Zero	2	24	3	8x
CJNE	A,direct,rel	Compare direct byte to Acc and jump if not equal	3	24	5	4.8x
CJNE	A,#data,rel	Compare immediate to Acc and Jump if not equal	3	24	4	6x
CJNE	Rn,#data,rel	Compare immediate to register and Jump if not equal	3	24	4	6x
CJNE	@Ri,#data,rel	Compare immediate to indirect and jump if not equal	3	24	5	4.8x
DJNZ	Rn, rel	Decrement register and jump if not Zero	2	24	4	6x
DJNZ	direct, rel	Decrement direct byte and Jump if not Zero	3	24	5	4.8x
NOP		No Operation	1	12	1	12x

Instruction execution speed boost sum	mary:
24 times faster execution speed	1
12 times faster execution speed	12
9.6 times faster execution speed	1
8 times faster execution speed	20
6 times faster execution speed	39
4.8 times faster execution speed	4
4 times faster execution speed	20
3 times faster execution speed	14
24 times faster execution speed	1

Based on the analysis of frequency of use order statistics, STC 1T series MCU instruction execution speed is faster than the traditional 8051 MCU $8 \sim 12$ times in the same working environment.

Instruction execution clock count:

- 1 clock instruction 12
- 2 clock instruction 20
- 3 clock instruction 38
- 4 clock instruction 34
- 5 clock instruction 5
- 6 clock instruction 2

5.3 Instruction Definitions

ACALL addr 11

Function: A

Absolute Call

Description:

ACALL unconditionally calls a subroutine located at the indicated address. The instruction increments the PC twice to obtain the address of the following instruction, then pushes the 16-bit result onto the stack (low-order byte first) and increments the Stack Pointer twice. The destination address is obtained by successively concatenating the five high-order bits of the incremented PC opcode bits 7-5, and the second byte of the instruction. The subroutine called must therefore start within the same 2K block of the program memory as the first byte of the instruction following ACALL. No flags are affected.

Example:

Initially SP equals 07H. The label "SUBRTN" is at program memory location 0345H. After

executingthe instruction,

ACALL SUBRTN

at location 0123H, SP will contain 09H, internal RAM locations 08H and 09H will contain 25H and 01H, respectively, and the PC will contain 0345H.

Bytes: 2 Cycles: 2

Encoding:

a10 a9 a8 1 0 0 1 0

a7 a6 a5 a4 | a3 a2 a1 a0

Operation: ACALL

 $(PC)\leftarrow (PC)+2$ $(SP)\leftarrow (SP)+1$ $((SP))\leftarrow (PC_{7-0})$ $(SP)\leftarrow (SP)+1$ $((SP))\leftarrow (PC_{15-8})$ $(PC_{10-0})\leftarrow page address$

ADD A,<src-byte>

Function: Add

Description:

ADD adds the byte variable indicated to the Accumulator, leaving the result in the Accumulator. The carry and auxiliary-carry flags are set, respectively, if there is a carry-out from bit 7 or bit 3, and cleared otherwise. When adding unsigned integers, the carry flag indicates an overflow occurred.

OV is set if there is a carry-out of bit 6 but not out of bit 7, or a carry-out of bit 7 but not bit 6; otherwise OV is cleared. When adding signed integers, OV indicates a negative number produced as the sum of two positive operands, or a positive sum from two negative operands.

Four source operand addressing modes are allowed: register, direct register-indirect, or

immediate.

Example: The Accumulator holds 0C3H(11000011B) and register 0 holds 0AAH (10101010B). The

instruction,

ADD A,R0

will leave 6DH (01101101B) in the Accumulator with the AC flag cleared and both the carry

flag and OV set to 1.

ADD A,Rn

Bytes: 1 Cycles: 1

Encoding: 0 0 1 0 1 r r r

Operation: ADD

 $(A)\leftarrow(A)+(Rn)$

ADD A.direct

Bytes: 2 Cycles: 1

Encoding: 0 0 1 0 0 1 0 1 direct address

Operation: ADD

 $(A)\leftarrow(A)+(direct)$

ADD A,@Ri

Bytes: 1 Cycles: 1

Encoding: 0 0 1 0 0 1 1 i

Operation: ADD

 $(A)\leftarrow(A)+((Ri))$

ADD A,#data

Bytes: 2 Cycles: 1

Encoding: 0 0 1 0 0 1 0 0 immediate data

Operation: ADD

 $(A)\leftarrow(A) + \#data$

ADDC A, < src-byte>

Function: Add with Carry

Description: ADDC simultaneously adds the byte variable indicated, the Carry flag and the Accumulator,

leaving the result in the Accumulator. The carry and auxiliary-carry flags are set, respectively, if there is a carry-out from bit 7 or bit 3, and cleared otherwise. When adding unsigned

integers, the carry flag indicates an overflow occured.

OV is set if there is a carry-out of bit 6 but not out of bit 7, or a carry-out of bit 7 but not out of bit 6; otherwise OV is cleared. When adding signed integers, OV indicates a negative number produced as the sum of two positive operands or a positive sum from two negative operands.

Four source operand addressing modes are allowed: register, direct, register-indirect, or

Example: The Accumulator holds 0C3H(11000011B) and register 0 holds 0AAH (10101010B) with the

Carry. The instruction,

ADDC A,R0

will leave 6EH (01101101B) in the Accumulator with the AC flag cleared and both the carry

flag and OV set to 1.

ADDC A,Rn

Bytes: 1 Cycles: 1

Encoding: 0 0 1 1 1 1 r r r

Operation: ADDC

 $(A)\leftarrow(A)+(C)+(Rn)$

ADDC A, direct

Bytes: 2
Cycles: 1

Encoding: 0 0 1 1 0 1 0 1 direct address

Operation: ADDC

 $(A)\leftarrow(A)+(C)+(direct)$

ADDC A,@Ri

Bytes: 1
Cycles: 1

Encoding: 0 0 1 1 0 1 1 i

Operation: ADDC

 $(A)\leftarrow(A)+(C)+((Ri))$

ADDC A,#data

Bytes: 2 Cycles: 1

Encoding: 0 0 1 1 0 1 0 0 immediate data

Operation: ADDC

 $(A)\leftarrow(A)+(C)+\#data$

AJMP addr 11

Function: Absolute Jump

Description: AJMP transfers program execution to the indicated address, which is formed at run-time by

concatenating the high-order five bits of the PC (after incrementing the PC twice), opcode bits 7-5, and the second byte of the instruction. The destination must therefore be within the same 2K block of program memory as the first byte of the instruction following AJMP.

Example: The label "JMPADR" is at program memory location 0123H. The instruction,

AJMP JMPADR

is at location 0345H and will load the PC with 0123H.

Bytes: 2 Cycles: 2

Encoding: a10 a9 a8 0 0 0 0 1 a7 a6 a5 a4 a3 a2 a1 a0

Operation: AJMP

 $(PC)\leftarrow (PC)+2$ $(PC_{10-0})\leftarrow$ page address

ANL <dest-byte>, <src-byte>

Logical-AND for byte variables **Function:**

ANL performs the bitwise logical-AND operation between the variables indicated and stores **Description:**

the results in the destination variable. No flags are affected.

The two operands allow six addressing mode combinations. When the destination is the Accumulator, the source can use register, direct, register-indirect, or immediate addressing; when the destination is a direct address, the source can be the Accumulator or immediate data.

Note: When this instruction is used to modify an output port, the value used as the original port data will be read from the output data latch not the input pins.

Example: If the Accumulator holds 0C3H(11000011B) and register 0 holds 55H (01010101B) then the

instruction.

ANL A,R0

will leave 41H (01000001B) in the Accumulator.

When the destination is a directly addressed byte, this instruction will clear combinations of bits in any RAM location or hardware register. The mask byte determining the pattern of bits to be cleared would either be a constant contained in the instruction or a value computed in the Accumulator at run-time. The instruction.

ANL Pl. #01110011B

will clear bits 7, 3, and 2 of output port 1.

ANL A,Rn

Bytes:

Cycles:

Encoding: 0 1 0 1 r r r 1

Operation: ANL

 $(A)\leftarrow(A) \land (Rn)$

ANL A, direct

Bytes: 2

Cycles:

Encoding:

0 1 0 1 0 1 0 1 direct address

ANL **Operation:**

 $(A)\leftarrow(A) \land (direct)$

ANL A,@Ri

Bytes:

Cycles:

Encoding: 0 1 0 0 1 1 i 1

Operation: ANL

 $(A)\leftarrow (A) \land ((Ri))$

ANL A,#data **Bytes: Cycles: Encoding:** 1 0 1 0 1 0 0 immediate data ANL **Operation:** (A)←(A) / #data ANL direct,A **Bytes:** 2 **Cycles: Encoding:** 1 0 1 0 0 1 0 direct address **Operation:** ANL $(direct) \leftarrow (direct) \land (A)$ ANL direct,#data **Bytes: Cycles: Encoding:** 0 1 0 1 0 0 1 immediate data direct address ANL **Operation:** (direct)←(direct) ∧ #data ANL C, <src-bit> Function: Logical-AND for bit variables **Description:** If the Boolean value of the source bit is a logical 0 then clear the carry flag; otherwise leave the carry flag in its current state. A slash ("/") preceding the operand in the assembly language indicates that the logical complement of the addressed bit is used as the source value, but the source bit itself is not affected. No other flsgs are affected. Only direct addressing is allowed for the source operand. Example: Set the carry flag if, and only if, P1.0 = 1, ACC. 7 = 1, and OV = 0: MOV C, P1.0 ;LOAD CARRY WITH INPUT PIN STATE ANL C, ACC.7 ;AND CARRY WITH ACCUM. BIT.7 ANL C, /OV :AND WITH INVERSE OF OVERFLOW FLAG ANL C,bit **Bytes:** 2 **Cycles:** 2 **Encoding:** 0 0 0 bit address 0 0 1 0 **Operation:** ANL

 $(C) \leftarrow (C) \land (bit)$

ANL C./bit

Bytes: Cycles:

Encoding: 0 1 $0 \ 0 \ 0 \ 0$ bit address 1

ADD **Operation:**

 $(C)\leftarrow(C) \wedge (\overline{bit})$

CJNE <dest-byte>, <src-byte>, rel

Function: Compare and Jump if Not Equal

Description:

CJNE compares the magnitudes of the first two operands, and branches if their values are not equal. The branch destination is computed by adding the signed relative-displacement in the last instruction byte to the PC, after incrementing the PC to the start of the next instruction. The carry flag is set if the unsigned integer value of <dest-byte> is less than the unsigned integer value of <src-byte>; otherwise, the carry is cleared. Neither operand is affected.

The first two operands allow four addressing mode combinations: the Accumulator may be compared with any directly addressed byte or immediate data, and any indirect RAM location or working register can be compared with an immediate constant.

Example:

The Accumulator contains 34H. Register 7 contains 56H. The first instruction in the sequence

```
CJNE
                    R7,#60H, NOT-EQ
                                         : R7 = 60H.
NOT EQ:
            JC
                    REQ LOW
                                         ; IF R7 < 60H.
                                         ; R7 > 60H.
```

sets the carry flag and branches to the instruction at label NOT-EO. By testing the carry flag, this instruction determines whether R7 is greater or less than 60H.

If the data being presented to Port 1 is also 34H, then the instruction,

clears the carry flag and continues with the next instruction in sequence, since the Accumulator does equal the data read from P1. (If some other value was being input on Pl, the program will loop at this point until the P1 data changes to 34H.)

CJNE A, direct, rel

Bytes: Cycles:

Encoding: 1 0 1 1 0 1 0 1 direct address

rel. address

Operation: $(PC) \leftarrow (PC) + 3$ IF (A) <> (direct)

THEN

 $(PC) \leftarrow (PC) + relative offset$

IF(A) < (direct)

THEN

 $(C) \leftarrow 1$

ELSE

 $(C) \leftarrow 0$

```
CJNE A,#data,rel
          Bytes: 3
         Cycles:
                    2
      Encoding:
                       1 0 1 1
                                      0 1 0 1
                                                          immediata data
                                                                                   rel. address
     Operation:
                    (PC) \leftarrow (PC) + 3
                    IF (A) <> (data)
                    THEN
                            (PC) \leftarrow (PC) + relative offset
                    IF (A) < (data)
                    THEN
                             (C) \leftarrow 1
                    ELSE
                             (C) \leftarrow 0
CJNE Rn,#data,rel
          Bytes: 3
                    2
         Cycles:
      Encoding:
                        1 0 1 1
                                                          immediata data
                                                                                   rel. address
                                       1 r r r
     Operation:
                    (PC) \leftarrow (PC) + 3
                    IF (Rn) <> (data)
                    THEN
                            (PC) \leftarrow (PC) + relative offset
                    IF (Rn) < (data)
                     THEN
                             (C) \leftarrow 1
                    ELSE
                             (C) \leftarrow 0
CJNE @Ri,#data,rel
          Bytes:
                    3
         Cycles:
                    2
      Encoding:
                        1 0 1 1
                                       0 1 1 i
                                                         immediate data
                                                                                  rel. address
     Operation:
                    (PC) \leftarrow (PC) + 3
                    IF ((Ri)) <> (data)
                     THEN
                            (PC) \leftarrow (PC) + relative offset
                    IF((Ri)) \le (data)
                    THEN
                             (C) \leftarrow 1
                    ELSE
                             (C) \leftarrow 0
```

CLR A

Function: Clear Accumulator

Description: The Aecunmlator is cleared (all bits set on zero). No flags are affected.

Example: The Accumulator contains 5CH (01011100B). The instruction,

CLR A

will leave the Accumulator set to 00H (00000000B).

Bytes: 1 Cycles: 1

Encoding: 1 1 1 0 0 1 0 0

Operation: CLR

 $(A)\leftarrow 0$

CLR bit

Function: Clear bit

Description: The indicated bit is cleared (reset to zero). No other flags are affected. CLR can operate on

the carry flag or any directly addressable bit.

Example: Port 1 has previously been written with 5DH (01011101B). The instruction,

CLR P1.2

will leave the port set to 59H (01011001B).

CLR C

Bytes: 1
Cycles: 1

Encoding: 1 1 0 0 0 0 1 1

Operation: CLR

 $(C) \leftarrow 0$

CLR bit

Bytes: 2 Cycles: 1

Encoding: 1 1 0 0 0 0 1 0 bit address

Operation: CLR

(bit) \leftarrow 0

CPL A

Function: Complement Accumulator

Description: Each bit of the Accumulator is logically complemented (one's complement). Bits which

previously contained a one are changed to a zero and vice-versa. No flags are affected.

Example: The Accumulator contains 5CH(01011100B). The instruction,

CPL A

will leave the Accumulator set to 0A3H (101000011B).

Bytes: 1 Cycles: 1

Encoding: 1 1 1 1 0 1 0 0

Operation: CPL

 $(A)\leftarrow (A)$

CPL bit

Function: Complement bit

Description: The bit variable specified is complemented. A bit which had been a one is changed to zero

and vice-versa. No other flags are affected. CLR can operate on the carry or any directly

addressable bit.

Note: When this instruction is used to modify an output pin, the value used as the original

data will be read from the output data latch, not the input pin.

Example: Port 1 has previously been written with 5DH (01011101B). The instruction,

CLR P1.1

CLR P1.2

will leave the port set to 59H (01011001B).

CPL C

Bytes: 1

Cycles: 1

Encoding: 1 0 1 1 0 0 1 1

Operation: CPL

 $(C) \leftarrow (C)$

CPL bit

Bytes: 2 Cycles: 1

Encoding: 1 0 1 1 0 0 1 0 bit address

Operation: CPL

 $(bit) \leftarrow (bit)$

DA A

Function: Description:

Decimal-adjust Accumulator for Addition

DA A adjusts the eight-bit value in the Accumulator resulting from the earlier addition of two variables (each in packed-BCD format), producing two four-bit digits. Any ADD or ADDC instruction may have been used to perform the addition.

If Accumulator bits 3-0 are greater than nine (xxxx1010-xxxx1111), or if the AC flag is one, six is added to the Accumulator producing the proper BCD digit in the low-order nibble. This internal addition would set the carry flag if a carry-out of the low-order four-bit field propagated through all high-order bits, but it would not clear the carry flag otherwise.

If the carry flag is now set or if the four high-order bits now exceed nine(1010xxxx-111xxxx), these high-order bits are incremented by six, producing the proper BCD digit in the high-order nibble. Again, this would set the carry flag if there was a carry-out of the high-order bits, but wouldn't clear the carry. The carry flag thus indicates if the sum of the original two BCD variables is greater than 100, allowing multiple precision decimal addition. OV is not affected.

All of this occurs during the one instruction cycle. Essentially, this instruction performs the decimal conversion by adding 00H, 06H, 60H, or 66H to the Accumulator, depending on initial Accumulator and PSW conditions.

Note: DA A cannot simply convert a hexadecimal number in the Accumulator to BCD notation, nor does DA A apply to decimal subtraction.

Example:

The Accumulator holds the value 56H(01010110B) representing the packed BCD digits of the decimal number 56. Register 3 contains the value 67H (01100111B) representing the packed BCD digits of the decimal number 67. The carry flag is set. The instruction sequence.

ADDC A,R3 DA A

will first perform a standard twos-complement binary addition, resulting in the value 0BEH (10111110) in the Accumulator. The carry and auxiliary carry flags will be cleared.

The Decimal Adjust instruction will then alter the Accumulator to the value 24H (00100100B), indicating the packed BCD digits of the decimal number 24, the low-order two digits of the decimal sum of 56,67, and the carry-in. The carry flag will be set by the Decimal Adjust instruction, indicating that a decimal overflow occurred. The true sum 56, 67, and 1 is 124.

BCD variables can be incremented or decremented by adding 01H or 99H. If the Accumulator initially holds 30H (representing the digits of 30 decimal), then the instruction sequence,

ADD A,#99H DA A

will leave the carry set and 29H in the Accumulator, since 30+99=129. The low-order byte of the sum can be interpreted to mean 30-1=29.

Bytes: 1

Cycles: 1

Encoding: 1 1 0 1 0 1 0 0

Operation: DA

-contents of Accumulator are BCD IF $[[(A_{3-0}) > 9] V [(AC) = 1]]$ THEN $(A_{3-0}) \leftarrow (A_{3-0}) + 6$

AND

IF $[[(A_{7-4}) > 9] V [(C) = 1]]$ THEN $(A_{7-4}) \leftarrow (A_{7-4}) + 6$

DEC byte

Function: Decrement

Description: The variable indicated is decremented by 1. An original value of 00H will underflow to

0FFH.

No flags are affected. Four operand addressing modes are allowed: accumulator, register, direct, or register-indirect.

direct, of register-indirect.

Note: When this instruction is used to modify an output port, the value used as the original

port data will be read from the output data latch, not the input pins.

Example: Register 0 contains 7FH (011111111B). Internal RAM locations 7EH and 7FH contain 00H

and 40H, respectively. The instruction sequence,

DEC @R0

DEC R0

DEC @R0

will leave register 0 set to 7EH and internal RAM locations 7EH and 7FH set to 0FFH and

3FH.

DEC A

Bytes: 1 Cycles: 1

Encoding: 0 0 0 1 0 1 0 0

Operation: DEC

(A)←(A) -1

DEC Rn

Bytes: 1 Cycles: 1

Encoding: 0 0 0 1 1 r r r

Operation: DEC

 $(Rn)\leftarrow (Rn) - 1$

DEC direct

Bytes: 2 **Cycles:** 1

Encoding: 0 0 0 1

0 1 0 1

DEC **Operation:**

 $(direct) \leftarrow (direct) -1$

DEC @Ri

> **Bytes:** 1 **Cycles:** 1

Encoding: 0 0 0 1 0 1 1 i

Operation: DEC

 $((Ri))\leftarrow((Ri))-1$

DIV AB

Function: Divide

Description: DIV AB divides the unsigned eight-bit integer in the Accumulator by the unsigned eight-bit

direct address

integer in register B. The Accumulator receives the integer part of the quotient; register B

receives the integer remainder. The carry and OV flags will be cleared.

Exception: if B had originally contained 00H, the values returned in the Accumulator and B-register will be undefined and the overflow flag will be set. The carry flag is cleared in any

case.

Example: The Accumulator contains 251(OFBH or 11111011B) and B contains 18(12H or 00010010B).

The instruction,

DIV AB

will leave 13 in the Accumulator (0DH or 00001101B) and the value 17 (11H or 00010010B)

in B, since $251 = (13 \times 18) + 17$. Carry and OV will both be cleared.

Bytes:

Cycles:

Encoding: 1 0 0 0 0 1 0 0

Operation:

 $^{(A)_{15-8}}_{(B)_{7-0}} \leftarrow (A)/(B)$

DJNZ <byte>, <rel-addr>

Function: Decrement and Jump if Not Zero

Description: DJNZ decrements the location indicated by 1, and branches to the address indicated by the

second operand if the resulting value is not zero. An original value of 00H will underflow to 0FFH. No flags are afected. The branch destination would be computed by adding the signed relative-displacement value in the last instruction byte to the PC, after incrementing the PC

to the first byte of the following instruction.

The location decremented may be a register or directly addressed byte.

Note: When this instruction is used to modify an output port, the value used as the original port data will be read from the output data latch, not the input pins.

Example: Internal RAM locations 40H, 50H, and 60H contain the values 01H, 70H, and 15H, respectively. The instruction sequence,

DJNZ 40H, LABEL_1 DJNZ 50H, LABEL_2 DJNZ 60H, LABEL 3

will cause a jump to the instruction at label LABEL_2 with the values 00H, 6FH, and 15H in the three RAM locations. The first jump was not taken because the result was zero.

This instruction provides a simple way of executing a program loop a given number of times, or for adding a moderate time delay (from 2 to 512 machine cycles) with a single instruction The instruction sequence.

MOV R2,#8
TOOOLE: CPL P1.7
DJNZ R2, TOOGLE

will toggle P1.7 eight times, causing four output pulses to appear at bit 7 of output Port 1. Each pulse will last three machine cycles; two for DJNZ and one to alter the pin.

DJNZ Rn,rel

Bytes: 2 Cycles: 2

Encoding: 1 1 0 1 1 r r r r rel. address

Operation: DJNZ

 $\begin{aligned} & (PC) \leftarrow (PC) + 2 \\ & (Rn) \leftarrow (Rn) - 1 \\ & \text{IF } (Rn) > 0 \text{ or } (Rn) < 0 \\ & \text{THEN} \end{aligned}$

 $(PC) \leftarrow (PC) + rel$

DJNZ direct, rel

Bytes: 3 Cycles: 2

Encoding: 1 1 0 1 0 1 0 1 direct address rel. address

Operation: DJNZ

 $(PC) \leftarrow (PC) + 2$ $(direct) \leftarrow (direct) - 1$

IF (direct) > 0 or (direct) < 0

THEN

 $(PC) \leftarrow (PC) + rel$

INC <byte>

Function: Increment

Description: INC increments the indicated variable by 1. An original value of 0FFH will overflow to

00H.No flags are affected. Three addressing modes are allowed: register, direct, or register-

indirect.

Note: When this instruction is used to modify an output port, the value used as the original

port data will be read from the output data latch, not the input pins.

Example: Register 0 contains 7EH (011111110B). Internal RAM locations 7EH and 7FH contain 0FFH

and 40H, respectively. The instruction sequence,

INC @R0

INC R0

INC @R0

will leave register 0 set to 7FH and internal RAM locations 7EH and 7FH holding (respectively) 00H and 41H.

INC A

Bytes: 1

Cycles: 1

Encoding: 0 0 0 0 0 1 0 0

Operation: INC

 $(A) \leftarrow (A)+1$

INC Rn

Bytes:

Cycles:

Encoding: 0 0 0 0 1 r r r

Operation: INC

 $(Rn) \leftarrow (Rn)+1$

INC direct

Bytes: 2

Cycles:

Cycles.

Encoding: 0 0 0 0 0 1 0 1 direct address

Operation: INC

 $(direct) \leftarrow (direct) + 1$

INC

@Ri

Bytes: 1 **Cycles:** 1

Encoding: 0 0 0 0 0 1 1 i

Operation: INC

 $((Ri))\leftarrow((Ri))+1$

INC DPTR

Function: Increment Data Pointer

Description: Increment the 16-bit data pointer by 1. A 16-bit increment (modulo 2¹⁶) is performed; an

overflow of the low-order byte of the data pointer (DPL) from 0FFH to 00H will increment

the high-order-byte (DPH). No flags are affected.

This is the only 16-bit register which can be incremented.

Example: Register DPH and DPL contains 12H and 0FEH, respectively. The instruction sequence,

INC DPTR INC DPTR INC DPTR

will change DPH and DPL to 13H and 01H.

Bytes: 1 Cycles: 2

Encoding: 1 0 1 0 0 0 1 1

Operation: INC

 $(DPTR) \leftarrow (DPTR)+1$

JB bit, rel

Function: Jump if Bit set

Description: If the indicated bit is a one, jump to the address indicated; otherwise proceed with the next

instruction. The branch destination is computed by adding the signed relative-displacement in the third instruction byte to the PC, after incrementing the PC to the first byte of the next

instruction. The bit tested is not modified. No flags are affected.

Example: The data present at input port 1 is 11001010B. The Accumulator holds 56 (01010110B). The

instruction sequence, JB P1.2, LABEL1 JB ACC.2, LABEL2

will cause program execution to branch to the instruction at label LABEL2.

Bytes: 3 Cycles: 2

Encoding: 0 0 1 0 0 0 0 0 bit address rel. address

Operation: JB

 $(PC) \leftarrow (PC) + 3$ IF (bit) = 1THEN

 $(PC) \leftarrow (PC) + rel$

JBC bit, rel

Function: Jump if Bit is set and Clear bit

Description: If the indicated bit is one branch to the address indicated; otherwise proceed with the next

instruction. The bit wili not be cleared if it is already a zero. The branch destination is computed by adding the signed relative-displacement in the third instruction byte to the PC, after incrementing the PC to the first byte of the next instruction. No flags are affected.

Note: When this instruction is used to test an output pin, the value used as the original data will be read from the output data latch, not the input pin.

Example: The Accumulator holds 56H (01010110B). The instruction sequence.

JBC ACC.3, LABEL1 JBC ACC.2, LABEL2

will cause program execution to continue at the instruction identified by the label LABEL2, with the Accumulator modified to 52H (01010010B).

Bytes: 3 Cycles: 2

Encoding: 0 0 0 1 0 0 0 0 bit address rel. address

Operation: JBC

 $(PC) \leftarrow (PC) + 3$ IF (bit) = 1THEN $(bit) \leftarrow 0$ $(PC) \leftarrow (PC) + rel$

JC rel

Function: Jump if Carry is set

Description: If the carry flag is set, branch to the address indicated; otherwise proceed with the next

instruction. The branch destination is computed by adding the signed relative-displacement in the second instruction byte to the PC, after incrementing the PC twice. No flags are affected.

Example: The carry flag is cleared. The instruction sequence,

JC LABEL1 CPL C JC LABEL2s

will set the carry and cause program execution to continue at the instruction identified by the label LABEL2.

Bytes: 2 Cycles: 2

Encoding: 0 1 0 0 0 0 0 0 0 rel. address

Operation: JC

 $(PC) \leftarrow (PC) + 2$ IF (C) = 1THEN $(PC) \leftarrow (PC) + rel$

JMP @A+DPTR

Function: Jump indirect

Description: Add the eight-bit unsigned contents of the Accumulator with the sixteen-bit data pointer,

and load the resulting sum to the program counter. This will be the address for subsequent instruction fetches. Sixteen-bit addition is performed (modulo 2^{16}): a carry-out from the low-order eight bits propagates through the higher-order bits. Neither the Accumulator nor the

Data Pointer is altered. No flags are affected.

Example: An even number from 0 to 6 is in the Accumulator. The following sequence of instructions

will branch to one of four AJMP instructions in a jump table starting at JMP TBL:

MOV DPTR, #JMP_TBL

JMP @A+DPTR

JMP-TBL: AJMP LABEL0

AJMP LABEL1 AJMP LABEL2 AJMP LABEL3

If the Accumulator equals 04H when starting this sequence, execution will jump to label LABEL2. Remember that AJMP is a two-byte instruction, so the jump instructions start at every other address.

Bytes: 1

Cycles:

Encoding: 0 1 1 1 0 0 1 1

Operation: JMP

 $(PC) \leftarrow (A) + (DPTR)$

JNB bit, rel

Function: Jump if Bit is not set

Description: If the indicated bit is a zero, branch to the indicated address; otherwise proceed with the next

instruction. The branch destination is computed by adding the signed relative-displacement in the third instruction byte to the PC, after incrementing the PC to the first byte of the next

instruction. The bit tested is not modified. No flags are affected.

Example: The data present at input port 1 is 11001010B. The Accumulator holds 56H (01010110B).

The instruction sequence,

JNB P1.3, LABEL1 JNB ACC.3, LABEL2

will cause program execution to continue at the instruction at label LABEL2

Bytes: 3 Cycles: 2

Encoding: 0 0 1 1 0 0 0 0 bit address rel. address

Operation: JNB

 $(PC) \leftarrow (PC) + 3$ IF (bit) = 0

THEN $(PC) \leftarrow (PC) + rel$

JNC rel

Function: Jump if Carry not set

Description: If the carry flag is a zero, branch to the address indicated; otherwise proceed with the next

instruction. The branch destination is computed by adding the signed relative-displacement in the second instruction byte to the PC, after incrementing the PC twice to point to the next

instruction. The carry flag is not modified

Example: The carry flag is set. The instruction sequence,

JNC LABEL1 CPL C JNC LABEL2

will clear the carry and cause program execution to continue at the instruction identified by the label LABEL2.

Bytes: 2 Cycles: 2

Encoding: 0 1 0 1 0 0 0 0 rel. address

Operation: JNC

 $(PC) \leftarrow (PC) + 2$ IF (C) = 0

THEN $(PC) \leftarrow (PC) + rel$

JNZ rel

Function: Jump if Accumulator Not Zero

Description: If any bit of the Accumulator is a one, branch to the indicated address; otherwise proceed

with the next instruction. The branch destination is computed by adding the signed relativedisplacement in the second instruction byte to the PC, after incrementing the PC twice. The

Accumulator is not modified. No flags are affected.

Example: The Accumulator originally holds 00H. The instruction sequence,

JNZ LABEL1 INC A JNZ LAEEL2

will set the Accumulator to 01H and continue at label LABEL2.

Bytes: 2 Cycles: 2

Encoding: 0 1 1 1 0 0 0 0 rel. address

Operation: JNZ

 $(PC) \leftarrow (PC) + 2$ IF $(A) \neq 0$

THEN $(PC) \leftarrow (PC) + rel$

JZ rel

Function: Jump if Accumulator Zero

Description: If all bits of the Accumulator are zero, branch to the address indicated; otherwise proceed

with the next instruction. The branch destination is computed by adding the signed relativedisplacement in the second instruction byte to the PC, after incrementing the PC twice. The

Accumulator is not modified. No flags are affected.

Example: The Accumulator originally contains 01H. The instruction sequence,

JZ LABEL1 DEC A JZ LAEEL2

will change the Accumulator to 00H and cause program execution to continue at the

instruction identified by the label LABEL2.

Bytes: 2 Cycles: 2

Encoding: 0 1 1 0 0 0 0 0

rel. address ited.

Operation: JZ

 $(PC) \leftarrow (PC) + 2$ IF (A) = 0

THEN $(PC) \leftarrow (PC) + rel$

LCALL addr16

Function: Long call

Description: LCALL calls a subroutine loated at the indicated address. The instruction adds three to the

program counter to generate the address of the next instruction and then pushes the 16-bit result onto the stack (low byte first), incrementing the Stack Pointer by two. The high-order and low-order bytes of the PC are then loaded, respectively, with the second and third bytes of the LCALL instruction. Program execution continues with the instruction at this address. The subroutine may therefore begin anywhere in the full 64K-byte program memory address

space. No flags are affected.

Example: Initially the Stack Pointer equals 07H. The label "SUBRTN" is assigned to program memory

location 1234H. After executing the instruction,

LCALL SUBRTN

at location 0123H, the Stack Pointer will contain 09H, internal RAM locations 08H and 09H $\,$

will contain 26H and 01H, and the PC will contain 1234H.

Bytes: 3 Cycles: 2

Encoding: 0 0 0 1 0 0 1 0 addr15-addr8 addr7-addr0

Operation: LCALL

 $(PC) \leftarrow (PC) + 3$ $(SP) \leftarrow (SP) + 1$ $((SP)) \leftarrow (PC_{7-0})$ $(SP) \leftarrow (SP) + 1$ $((SP)) \leftarrow (PC_{15-8})$ $(PC) \leftarrow addr_{15-0}$

LJMP addr16

Function: Long Jump

Description: LJMP causes an unconditional branch to the indicated address, by loading the high-order

and low-order bytes of the PC (respectively) with the second and third instruction bytes. The destination may therefore be anywhere in the full 64K program memory address space. No

flags are affected.

Example: The label "JMPADR" is assigned to the instruction at program memory location 1234H. The

instruction,

LJMP JMPADR

at location 0123H will load the program counter with 1234H.

Bytes: 3 Cycles: 2

Encoding: 0 0 0 0 0 0 1 0 addr15

addr15-addr8 addr7-addr0

Operation: LJMP

 $(PC) \leftarrow addr_{15-0}$

MOV <dest-byte>, <src-byte>

Function: Move byte variable

Description: The byte variable indicated by the second operand is copied into the location specified by the

first operand. The source byte is not affected. No other register or flag is affected.

This is by far the most flexible operation. Fifteen combinations of source and destination

addressing modes are allowed.

Example: Internal RAM location 30H holds 40H. The value of RAM location 40H is 10H. The data

present at input port 1 is 11001010B (0CAH).

MOV R0, #30H ;R0< = 30H MOV A, @R0 ;A <= 40H MOV R1, A ;R1 <= 40H MOV B, @Rl ;B <= 10H

MOV @RI, PI ; RAM (40H) <= 0CAH

MOV P2, P1 ;P2 #0CAH

leaves the value 30H in register 0,40H in both the Accumulator and register 1,10H in register

B, and 0CAH(11001010B) both in RAM location 40H and output on port 2.

MOV A,Rn


Bytes: 1 Cycles: 1

Encoding: 1 1 1 0 1 r r r

Operation: MOV

 $(A) \leftarrow (Rn)$

*MOV A,direct	
Bytes:	2
Cycles:	1
Encoding:	1 1 1 0 0 1 0 1 direct address
Operation:	MOV
	$(A)\leftarrow$ (direct)
	is not a valid instruction
MOV A,@Ri	1
Bytes: Cycles:	
Encoding:	
Operation:	MOV
Operation.	$(A) \leftarrow ((Ri))$
MOV A,#data	
Bytes:	2
Cycles:	1
Encoding:	0 1 1 1 0 1 0 0 immediate data
Operation:	MOV (A)← #data
MOV Rn, A	
Bytes:	1
Cycles:	1
Encoding:	1111 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
Operation:	MOV $(Rn)\leftarrow (A)$
MOV Rn,direct	
Bytes:	2
Cycles:	2
Encoding:	1 0 1 0 1 r r r direct addr.
Operation:	MOV (Rn)←(direct)
MOV Rn,#data	
Bytes:	2
Cycles:	1
Encoding:	0 1 1 1 1 r r r immediate data
Operation:	MOV
	(Rn) ← #data

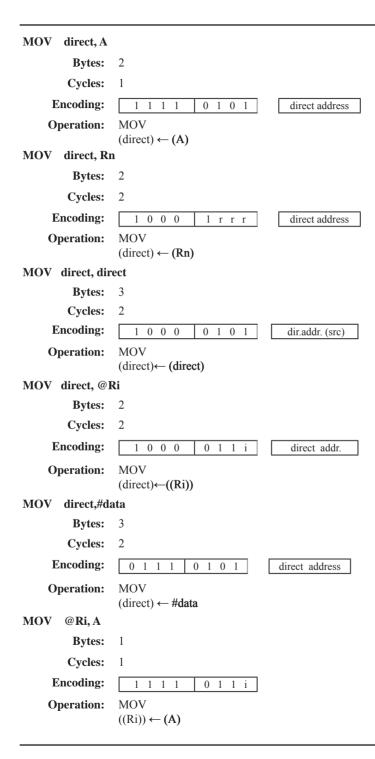

MOV @Ri, direct **Bytes: Cycles:** 2 **Encoding:** 1 0 1 0 $0 \ 1 \ 1 \ i$ direct addr. MOV **Operation:** $((Ri)) \leftarrow (direct)$ MOV @Ri, #data **Bytes: Cycles:** 1 **Encoding:** 0 1 1 0 1 immediate data 1 1 i MOV **Operation:** $((Ri)) \leftarrow \#data$ MOV <dest-bit>, <src-bit> **Function:** Move bit data **Description:** The Boolean variable indicated by the second operand is copied into the location specified by the first operand. One of the operands must be the carry flag; the other may be any directly addressable bit. No other register or flag is affected. **Example:** The carry flag is originally set. The data present at input Port 3 is 11000101B. The data previously written to output Port 1 is 35H (00110101B). MOV P1.3. C C, P3.3 MOV MOV P1.2, C will leave the carry cleared and change Port 1 to 39H (00111001B). MOV C,bit **Bytes:** 2 **Cycles: Encoding:** 1 0 1 0 0 0 1 1 bit address MOV **Operation:** $(C) \leftarrow (bit)$ MOV bit,C **Bytes:** 2 **Cycles:** 2 **Encoding:** 1 0 0 0 0 0 bit address 1 **Operation:** MOV

 $(bit) \leftarrow (C)$

MOV DPTR, #data 16

Function: Load Data Pointer with a 16-bit constant

Description: The Data Pointer is loaded with the 16-bit constant indicated. The 16-bit constant is loaded

into the second and third bytes of the instruction. The second byte (DPH) is the high-order

byte, while the third byte (DPL) holds the low-order byte. No flags are affected.

This is the only instruction which moves 16 bits of data at once.

Example: The instruction,

MOV DPTR, #1234H

will load the value 1234H into the Data Pointer: DPH will hold 12H and DPL will hold 34H.

Bytes: 3 Cycles: 2

Encoding: 1 0 0 1 0 0 0 0 immediate data 15-8

Operation: MOV

 $(DPTR) \leftarrow \#data_{15-0}$

DPH DPL \leftarrow #data₁₅₋₈ #data₇₋₀

MOVC A, @A+ <base-reg>

Function: Move Code byte

Description: The MOVC instructions load the Accumulator with a code byte, or constant from program

memory. The address of the byte fetched is the sum of the original unsigned eight-bit. Accumulator contents and the contents of a sixteen-bit base register, which may be either the Data Pointer or the PC. In the latter case, the PC is incremented to the address of the following instruction before being added with the Accumulator; otherwise the base register is not altered. Sixteen-bit addition is performed so a carry-out from the low-order eight bits

may propagate through higher-order bits. No flags are affected.

Example: A value between 0 and 3 is in the Accumulator. The following instructions will translate the

value in the Accumulator to one of four values defimed by the DB (define byte) directive.

REL-PC: INC A

MOVC A, @A+PC

RET

DB 66H

DB 77H

DB 88H

DB 99H

If the subroutine is called with the Accumulator equal to 01H, it will return with 77H in the Accumulator. The INC A before the MOVC instruction is needed to "get around" the RET instruction above the table. If several bytes of code separated the MOVC from the table, the corresponding number would be added to the Accumulator instead.

MOVC A,@A+DPTR

Bytes: 1 Cycles: 2

Encoding: 1 0 0 1 0 0 1 1

Operation: MOVC

 $(A) \leftarrow ((A)+(DPTR))$

MOVC A,@A+PC

Bytes: 1 Cycles: 2

Encoding: 1 0 0 0 0 0 1 1

Operation: MOVC

 $(PC) \leftarrow (PC)+1$ $(A) \leftarrow ((A)+(PC))$

MOVX <dest-byte>, <src-byte>

Function: Move External

Description: The MOVX instructions transfer data between the Accumulator and a byte of external data memory, hence the "X" appended to MOV. There are two types of instructions, differing in

whether they provide an eight-bit or sixteen-bit indirect address to the external data RAM.

In the first type, the contents of R0 or R1 in the current register bank provide an eight-bit address multiplexed with data on P0. Eight bits are sufficient for external I/O expansion decoding or for a relatively small RAM array. For somewhat larger arrays, any output port pins can be used to output higher-order address bits. These pins would be controlled by an output instruction preceding the MOVX.

In the second type of MOVX instruction, the Data Pointer generates a sixteen-bit address. P2 outputs the high-order eight address bits (the contents of DPH) while P0 multiplexes the low-order eight bits (DPL) with data. The P2 Special Function Register retains its previous contents while the P2 output buffers are emitting the contents of DPH. This form is faster and more efficient when accessing very large data arrays (up to 64K bytes), since no additional instructions are needed to set up the output ports.

It is possible in some situations to mix the two MOVX types. A large RAM array with its high-order address lines driven by P2 can be addressed via the Data Pointer, or with code to output high-order address bits to P2 followed by a MOVX instruction using R0 or R1.

Example: An external 256 byte RAM using multiplexed address/data lines (e.g., an Intel 8155 RAM/

I/O/Timer) is connected to the 8051 Port 0. Port 3 provides control lines for the external RAM. Ports 1 and 2 are used for normal I/O. Registers 0 and 1 contain 12H and 34H. Location 34H of the external RAM holds the value 56H. The instruction sequence,

MOVX A, @R1 MOVX @R0, A

copies the value 56H into both the Accumulator and external RAM location 12H.

MOVX A,@Ri

Bytes: 1 Cycles: 2

Encoding: 1 1 1 0 0 0 1 i

Operation: MOVX

 $(A) \leftarrow ((Ri))$

MOVX A,@DPTR

Bytes: 1 Cycles: 2

Encoding: 1 1 1 0 0 0 0 0

Operation: MOVX

 $(A) \leftarrow ((DPTR))$

MOVX @Ri, A

Bytes: 1 Cycles: 2

Encoding: 1 1 1 1 0 0 1 i

Operation: MOVX

 $((Ri))\leftarrow (A)$

MOVX @DPTR, A

Bytes: 1 Cycles: 2

Encoding: 1 1 1 1 0 0 0 0

Operation: MOVX

 $(DPTR)\leftarrow (A)$

MUL AB

Function: Multiply

Description: MUL AB multiplies the unsigned eight-bit integers in the Accumulator and register B. The

low-order byte of the sixteen-bit product is left in the Accumulator, and the high-order byte in B. If the product is greater than 255 (0FFH) the overflow flag is set; otherwise it is cleared.

The carry flag is always cleared

Example: Originally the Accumulator holds the value 80 (50H). Register B holds the value 160

(0A0H). The instruction,

MUL AB

will give the product 12,800 (3200H), so B is changed to 32H (00110010B) and the

Accumulator is cleared. The overflow flag is set, carry is cleared.

Bytes: 1 Cycles: 4

Encoding: 1 0 1 0 0 1 0 0

Operation: MUL

 $(A)_{7-0} \leftarrow (A) \times (B)$

 $(B)_{15-8}$

NOP

Function: No Operation

Description: Execution continues at the following instruction. Other than the PC, no registers or flags are

affected.

Example: It is desired to produce a low-going output pulse on bit 7 of Port 2 lasting exactly 5 cycles. A

simple SETB/CLR sequence would generate a one-cycle pulse, so four additional cycles must be inserted. This may be done (assuming no interrupts are enabled) with the instruction

sequence.

CLR P2.7

NOP

NOP

NOP

NOP

SETB P2.7

Bytes:

Cycles:

Encoding: 0 0 0 0 0 0 0 0

Operation: NOP

 $(PC) \leftarrow (PC)+1$

ORL <dest-byte>, <src-byte>

Function: Logical-OR for byte variables

Description: ORL performs the bitwise logical-OR operation between the indicated variables, storing the

results in the destination byte. No flags are affected.

The two operands allow six addressing mode combinations. When the destination is the Accumulator, the source can use register, direct, register-indirect, or immediate addressing; when the destination is a direct address, the source can be the Accumulator or immediate data.

Note: When this instruction is used to modify an output port, the value used as the original port data will be read from the output data latch, not the input pins.

 $\textbf{Example:} \quad \text{If the Accumulator holds 0C3H (11000011B) and R0 holds 55H (01010101B) then the} \\$

instruction,


ORL A, R0

will leave the Accumulator holding the value 0D7H (11010111B).

When the destination is a directly addressed byte, the instruction can set combinations of bits in any RAM location or hardware register. The pattern of bits to be set is determined by a mask byte, which may be either a constant data value in the instruction or a variable computed in the Accumulator at run-time. The instruction,

ORL P1, #00110010B

will set bits 5,4, and 1 of output Port 1.

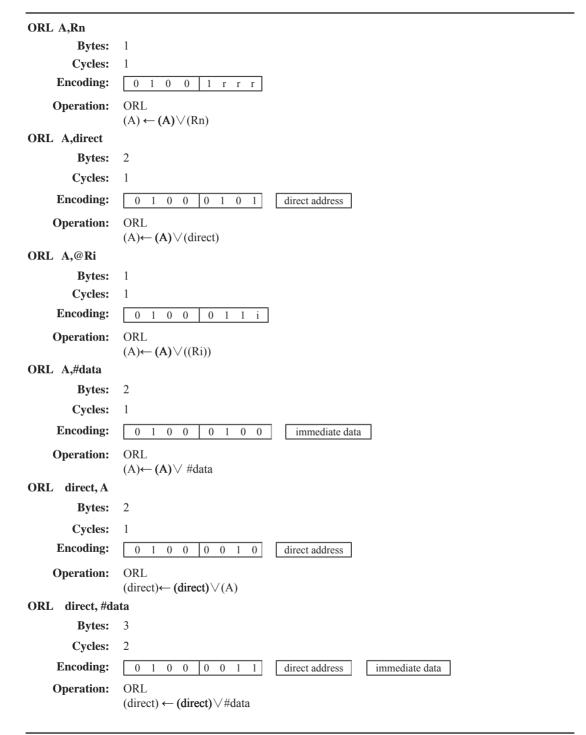

ORL C, <src-bit>

Function: Logical-OR for bit variables

Description: Set the carry flag if the Boolean value is a logical 1; leave the carry in its current state

otherwise. A slash ("/") preceding the operand in the assembly language indicates that the logical complement of the addressed bit is used as the source value, but the source bit itself is

not affected. No other flags are affected.

Example: Set the carry flag if and only if P1.0 = 1, ACC. 7 = 1, or OV = 0:

MOV C, P1.0 ;LOAD CARRY WITH INPUT PIN P10
ORL C, ACC.7 ;OR CARRY WITH THE ACC.BIT 7
ORL C, /OV ;OR CARRY WITH THE INVERSE OF OV

ORL C, bit

Bytes: 2 Cycles: 2

Encoding: 0 1 1 1 0 0 1 0 bit address

Operation: ORL

 $(C) \leftarrow (C) \lor (bit)$

ORL C, /bit

Bytes: 2 Cycles: 2

Encoding: 1 0 1 0 0 0 0 0 bit address

Operation: ORL

 $(C) \leftarrow (C) \lor (bit)$

POP direct

Function: Pop from stack

Description: The contents of the internal RAM location addressed by the Stack Pointer is read, and the

Stack Pointer is decremented by one. The value read is then transferred to the directly

addressed byte indicated. No flags are affected.

Example: The Stack Pointer originally contains the value 32H, and internal RAM locations 30H

through 32H contain the values 20H, 23H, and 01H, respectively. The instruction sequence,

POP DPH POP DPL

will leave the Stack Pointer equal to the value 30H and the Data Pointer set to 0123H. At this

point the instruction,

POP SP

will leave the Stack Pointer set to 20H. Note that in this special case the Stack Pointer was

decremented to 2FH before being loaded with the value popped (20H).

Bytes: 2 Cycles: 2

Encoding: 1 1 0 1 0 0 0 0 direct address

Operation: POP

 $(diect) \leftarrow ((SP))$ $(SP) \leftarrow (SP) - 1$

PUSH direct

Function: Push onto stack

Description: The Stack Pointer is incremented by one. The contents of the indicated variableis then copied

into the internal RAM location addressed by the Stack Pointer. Otherwise no flags are

affected.

Example: On entering interrupt routine the Stack Pointer contains 09H. The Data Pointer holds the

value 0123H. The instruction sequence,

PUSH DPL PUSH DPH

will leave the Stack Pointer set to 0BH and store 23H and 01H in internal RAM locations

0AH and 0BH, respectively.

Bytes: 2 Cycles: 2

Encoding: 1 1 0 0 0 0 0 0 direct address

Operation: PUSH

 $(SP) \leftarrow (SP) + 1$ $((SP)) \leftarrow (direct)$

RET

Function: Return from subroutine

Description: RET pops the high-and low-order bytes of the PC successively from the stack, decrementing

the Stack Pointer by two. Program execution continues at the resulting address, generally the

instruction immediately following an ACALL or LCALL. No flags are affected.

Example: The Stack Pointer originally contains the value 0BH. Internal RAM locations 0AH and 0BH

contain the values 23H and 01H, respectively. The instruction,

RET

will leave the Stack Pointer equal to the value 09H. Program execution will continue at

location 0123H.

Bytes: 1 Cycles: 2

Encoding: 0 0 1 0 0 0 1 0

Operation: RET

 $(PC_{15-8}) \leftarrow ((SP))$ $(SP) \leftarrow (SP) - 1$ $(PC_{7-0}) \leftarrow ((SP))$ $(SP) \leftarrow (SP) - 1$

RETI

Function: Return from interrupt

Description: RETI pops the high- and low-order bytes of the PC successively from the stack, and restores

the interrupt logic to accept additional interrupts at the same priority level as the one just processed. The Stack Pointer is left decremented by two. No other registers are affected; the PSW is not automatically restored to its pre-interrupt status. Program execution continues at the resulting address, which is generally the instruction immediately after the point at which the interrupt request was detected. If a lower- or same-level interrupt had been pending when the RETI instruction is executed, that one instruction will be executed before the pending

interrupt is processed.

Example: The Stack Pointer originally contains the value 0BH. An interrupt was detected during the

instruction ending at location 0122H. Internal RAM locations 0AH and 0BH contain the

values 23H and 01H, respectively. The instruction,

RETI

will leave the Stack Pointer equal to 09H and return program execution to location 0123H.

Bytes: 1
Cycles: 2

Encoding: 0 0 1 1 0 0 1 0

Operation: RETI

 $(PC_{15-8}) \leftarrow ((SP))$ $(SP) \leftarrow (SP) - 1$ $(PC_{7-0}) \leftarrow ((SP))$ $(SP) \leftarrow (SP) - 1$

RL A

Function: Rotate Accumulator Left

Description: The eight bits in the Accumulator are rotated one bit to the left. Bit 7 is rotated into the bit 0

position. No flags are affected.

Example: The Accumulator holds the value 0C5H (11000101B). The instruction,

RL A

leaves the Accumulator holding the value 8BH (10001011B) with the carry unaffected.

Bytes: 1 Cycles: 1

Encoding: 0 0 1 0 0 0 1 1

Operation: RL

 $(An+1) \leftarrow (An)$ n = 0-6

 $(A0) \leftarrow (A7)$

RLC A

Function: Rotate Accumulator Left through the Carry flag

Description: The eight bits in the Accumulator and the carry flag are together rotated one bit to the left. Bit

7 moves into the carry flag; the original state of the carry flag moves into the bit 0 position.

No other flags are affected.

Example: The Accumulator holds the value 0C5H (11000101B), and the carry is zero. The instruction,

RLC A

leaves the Accumulator holding the value 8BH (10001011B) with the carry set.

Bytes: 1 Cycles: 1

Encoding: 0 0 1 1 0 0 1 1

Operation: RLC

 $(An+1) \leftarrow (An)$ n = 0-6

 $(A0) \leftarrow (C)$ $(C) \leftarrow (A7)$

RR A

Function: Rotate Accumulator Right

Description: The eight bits in the Accumulator are rotated one bit to the right. Bit 0 is rotated into the bit 7

position. No flags are affected.

Example: The Accumulator holds the value 0C5H (11000101B). The instruction,

RR A

leaves the Accumulator holding the value 0E2H (11100010B) with the carry unaffected.

Bytes: 1 Cycles: 1

Encoding: 0 0 0 0 0 0 1 1

Operation: RR

 $(An) \leftarrow (An+1) \quad n = 0 - 6$

 $(A7) \leftarrow (A0)$

RRC A

Function: Rotate Accumulator Right through the Carry flag

Description: The eight bits in the Accumulator and the carry flag are together rotated one bit to the right.

Bit 0 moves into the carry flag; the original value of the carry flag moves into the bit 7

position. No other flags are affected.

Example: The Accumulator holds the value 0C5H (11000101B), and the carry is zero. The instruction,

RRC A

leaves the Accumulator holding the value 62H (01100010B) with the carry set.

Bytes: 1 Cycles: 1

Encoding: 0 0 0 1 0 0 1 1

Operation: RRC

 $(A_n+1) \leftarrow (A_n)$ n = 0-6

 $(A7) \leftarrow (C)$

SETB
 sets

Function: Set bit

Description: SETB sets the indicated bit to one. SETB can operate on the carry flag or any directly

addressable bit. No other flags are affected

Example: The carry flag is cleared. Output Port 1 has been written with the value 34H (00110100B).

The instructions, SETB C SETB P1.0

will leave the carry flag set to 1 and change the data output on Port 1 to 35H (00110101B).

SETB C

Bytes: 1 Cycles: 1

Encoding: 1 1 0 1 0 0 1 1

Operation: SETB $(C) \leftarrow 1$

SETB bit

Bytes: 2 Cycles: 1

Encoding: 1 1 0 1 0 0 1 0 bit address

Operation: SETB

 $(bit) \leftarrow 1$

SJMP rel

Function: Short Jump

Description: Program control branches unconditionally to the address indicated. The branch destination is

computed by adding the signed displacement in the second instruction byte to the PC, after incrementing the PC twice. Therefore, the range of destinations allowed is from 128bytes

preceding this instruction to 127 bytes following it.

Example: The label "RELADR" is assigned to an instruction at program memory location 0123H. The

instruction,

SJMP RELADR

will assemble into location 0100H. After the instruction is executed, the PC will contain the

value 0123H.

(*Note:* Under the above conditions the instruction following SJMP will be at 102H. Therefore, the displacement byte of the instruction will be the relative offset (0123H - 0102H) = 21H. Put another way, an SJMP with a displacement of 0FEH would be an one-instruction infinite

loop).

Bytes: 2 Cycles: 2

Encoding: 1 0 0 0 0 0 0 0 0 rel. address

Operation: SJMP

 $(PC) \leftarrow (PC)+2$ $(PC) \leftarrow (PC)+rel$

SUBB A, <src-byte>

Function: Subtract with borrow

Description: SUBB subtracts the indicated variable and the carry flag together from the Accumulator,

leaving the result in the Accumulator. SUBB sets the carry (borrow)flag if a borrow is needed for bit 7, and clears C otherwise.(If C was set before executing a SUBB instruction, this indicates that a borrow was needed for the previous step in a multiple precision subtraction, so the carry is subtracted from the Accumulator along with the source operand). AC is set if a borrow is needed for bit 3, and cleared otherwise. OV is set if a borrow is needed into bit 6, but not into bit 7, or into bit 7, but not bit 6.

When subtracting signed integers OV indicates a negative number produced when a negative value is subtracted from a positive value, or a positive result when a positive number is subtracted from a negative number.

The source operand allows four addressing modes: register, direct, register-indirect, or immediate.

Example: The Accumulator holds 0C9H (11001001B), register 2 holds 54H (01010100B), and the

carry flag is set. The instruction,

SUBB A, R2

will leave the value 74H (01110100B) in the accumulator, with the carry flag and AC cleared but OV set.

Notice that 0C9H minus 54H is 75H. The difference between this and the above result is due to the carry (borrow) flag being set before the operation. If the state of the carry is not known before starting a single or multiple-precision subtraction, it should be explicitly cleared by a CLR C instruction.

SUBB A. Rn

Bytes: 1

Cycles: 1
Encoding: 1 0 0 1

Operation: SUBB

 $(A) \leftarrow (A) - (C) - (Rn)$

SUBB A, direct

Bytes: 2 Cycles: 1

Encoding: 1 0 0 1 0 1 0 1 direct address

1 r r r

Operation: SUBB

 $(A) \leftarrow (A) - (C) - (direct)$

SUBB A, @Ri

Bytes: 1 Cycles: 1

Encoding: 1 0 0 1 0 1 1 i

Operation: SUBB

 $(A) \leftarrow (A) - (C) - ((Ri))$

SUBB A, #data

Bytes: 2 Cycles: 1

Encoding: 1 0 0 1 0 1 0 0 i

immediate data

Operation: SUBB

 $(A) \leftarrow (A) - (C) - \#data$

SWAP A

Function: Swap nibbles within the Accumulator

Description: SWAP A interchanges the low- and high-order nibbles (four-bit fields) of the Accumulator

(bits 3-0 and bits 7-4). The operation can also be thought of as a four-bit rotate instruction.

No flags are affected.

Example: The Accumulator holds the value 0C5H (11000101B). The instruction,

SWAP A

leaves the Accumulator holding the value 5CH (01011100B).

Bytes: 1 Cycles: 1

Encoding: 1 1 0 0 0 1 0 0

Operation: SWAP

 $(A_{3-0}) \rightleftharpoons (A_{7-4})$

XCH A, <byte>

Function: Exchange Accumulator with byte variable

Description: XCH loads the Accumulator with the contents of the indicated variable, at the same time

writing the original Accumulator contents to the indicated variable. The source/destination

operand can use register, direct, or register-indirect addressing.

Example: R0 contains the address 20H. The Accumulator holds the value 3FH (00111111B). Internal

RAM location 20H holds the value 75H (01110101B). The instruction,

XCH A, @R0

will leave RAM location 20H holding the values 3FH (00111111B) and 75H (01110101B) in

the accumulator.

XCH A, Rn

Bytes: 1 Cycles: 1

Encoding: 1 1 0 0 1 r r r

Operation: XCH

(A) **→** (Rn)

XCH A, direct

Bytes: 2 Cycles: 1

Encoding: 1 1 0 0 0 1 0 1 direct address

Operation: XCH

 $(A) \rightleftharpoons (direct)$

XCH A, @Ri

Bytes: 1 Cycles: 1

Encoding: 1 1 0 0 0 1 1 i

Operation: XCH

 $(A) \rightleftharpoons ((Ri))$

XCHD A, @Ri

Function: Exchange Digit

Description: XCHD exchanges the low-order nibble of the Accumulator (bits 3-0), generally representing

a hexadecimal or BCD digit, with that of the internal RAM location indirectly addressed by the specified register. The high-order nibbles (bits 7-4) of each register are not affected. No

flags are affected.

Example: R0 contains the address 20H. The Accumulator holds the value 36H (00110110B). Internal

RAM location 20H holds the value 75H (01110101B). The instruction,

XCHD A, @R0

will leave RAM location 20H holding the value 76H (01110110B) and 35H (00110101B) in the accumulator.

Bytes: 1 Cycles: 1

Encoding: 1 1 0 1 0 1 1 i

Operation: XCHD

 $(A_{3-0}) \rightleftharpoons (Ri_{3-0})$

XRL <dest-byte>, <src-byte>

Function: Logical Exclusive-OR for byte variables

Description: XRL performs the bitwise logical Exclusive-OR operation between the indicated variables,

storing the results in the destination. No flags are affected.

The two operands allow six addressing mode combinations. When the destination is the Accumulator, the source can use register, direct, register-indirect, or immediate addressing; when the destination is a direct address, the source can be the Accumulator or immediate data.

(*Note*: When this instruction is used to modify an output port, the value used as the original port data will be read from the output data latch, not the input pins.)

Example: If the Accumulator holds 0C3H (11000011B) and register 0 holds 0AAH (10101010B) then

the instruction, XRL A. R0

will leave the Accumulator holding the vatue 69H (01101001B).

When the destination is a directly addressed byte, this instruction can complement combinnation of bits in any RAM location or hardware register. The pattern of bits to be complemented is then determined by a mask byte, either a constant contained in the instruction or a variable computed in the Accumulator at run-time. The instruction,

XRL P1, #00110001B

will complement bits 5,4 and 0 of outpue Port 1.

XRL A, Rn **Bytes:** 1 **Cycles: Encoding:** 0 1 1 0 1 r r r **Operation: XRL** $(A) \leftarrow (A) \wedge (Rn)$ XRL A, direct **Bytes:** 2 Cycles: **Encoding:** 0 1 0 0 1 0 1 direct address **Operation:** XRL $(A) \leftarrow (A) \land (direct)$ XRL A, @Ri **Bytes:** 1 Cycles: **Encoding:** 0 1 1 0 $0 \ 1 \ 1 \ i$ **Operation:** XRL $(A) \leftarrow (A) \wedge ((Ri))$ XRL A, #data 2 **Bytes:** Cycles: 1 **Encoding:** 0 immediate data 0 0 1 0 0 **Operation: XRL** $(A) \leftarrow (A) + \# data$ XRL direct, A 2 **Bytes:** Cycles: 1 **Encoding:** 0 0 0 0 1 0 direct address **Operation:** XRL $(direct) \leftarrow (direct) \land (A)$ XRL direct, #dataw **Bytes:** 2 **Cycles: Encoding:** 0 1 1 0 0 0 1 1 direct address immediate data **Operation:** XRL $(direct) \leftarrow (direct) \wedge \# data$

Chapter 6. Interrupt System

STC12C5620AD series support 9 interrupt sources with four priority levels. The 9 interrupt sources are external interrupt $0(\overline{\text{INT0}})$, Timer 0 interrupt, external interrupt $1(\overline{\text{INT1}})$, Timer 1 interrupt, serial port 1(UART) interrupt, ADC and SPI interrupt, low voltage detector (LVD) and PCA interrupt. Each interrupt source has one or more associated interrupt-request flag(s) in SFRs. Associating with each interrupt vector, the interrupt sources can be individually enabled or disabled by setting or clearing a bit (interrupt enable control bit) in the SFRs IE, CCON. However, interrupts must first be globally enabled by setting the EA bit (IE.7) to logic 1 before the individual interrupt enables are recognized. Setting the EA bit to logic 0 disables all interrupt sources regardless of the individual interrupt-enable settings.

If interrupts are enabled for the source, an interrupt request is generated when the interrupt-request flag is set. As soon as execution of the current instruction is complete, the CPU generates an LCALL to a predetermined address to begin execution of an interrupt service routine (ISR). Each ISR must end with an RETI instruction, which returns program execution to the next instruction that would have been executed if the interrupt request had not occurred. If interrupts are not enabled, the interrupt-pending flag is ignored by the hardware and program execution continues as normal. (The interrupt-pending flag is set to logic 1 regardless of the interrupt's enable/disable state.)

Each interrupt source has two corresponding bits to represent its priority. One is located in SFR named IPH and other in IP register. Higher-priority interrupt will be not interrupted by lower-priority interrupt request. If two interrupt requests of different priority levels are received simultaneously, the request of higher priority is serviced. If interrupt requests of the same priority level are received simultaneously, an internal polling sequence determine which request is serviced. The following table shows the internal polling sequence in the same priority level and the interrupt vector address.

Interrupt Sources, vector address, priority and polling sequence Table

Interrupt Source	Interrupt Vector address	Priority within level	Interrupt Priority setting(IPH, IP)	Priority 0 (lowest)	Priority 1	Priority 2	Priority 3 (highest)	Interrupt Request	Interrupt Enable Control Bit
External interrupt 0 (INT0)	0003Н	0(highest)	PX0H,PX0	0,0	0,1	1,0	1,1	IE0	EX0/EA
Timer 0	000BH	1	РТОН,РТО	0,0	0,1	1,0	1,1	TF0	ET0/EA
External interrupt 1 (INT1)	0013H	2	PX1H,PX1	0,0	0,1	1,0	1,1	IE1	EX1/EA
Timer1	001BH	3	PT1H, PT1	0, 0	0, 1	1, 0	1, 1	TF1	ET1/EA
UART	0023H	4	PSH, PS	0, 0	0, 1	1, 0	1, 1	RI+TI	ES/EA
ADC/SPI	002BH	5	PADC_SPIH, PADC_SPI	0, 0	0, 1	1, 0	1, 1	ADC_FLAG+SPIF	(EADCI+ESPI) / EADC_SPI / EA
PCA/ LVD	0033Н	6 (lowest)	PPCA_LVDH, PPCA_LVD	0, 0	0, 1	1, 0	1, 1	CF+CCF0+CCF1+ CCF2+CCF3+LVDF	(ECF+ECCF0+E CCF1+ECCF2+ ECCF3+ELVD)/ EPCA_LVD/EA

In C language program. the interrupt polling sequence number is equal to interrupt number, for example,

void	Int0_Routine(void)	interrupt 0;
void	Timer0_Rountine(void)	interrupt 1;
void	Int1_Routine(void)	interrupt 2;
void	Timer1_Rountine(void)	interrupt 3;
void	UART_Routine(void)	interrupt 4;
void	ADC_SPI_Routine(void)	interrupt 5;
void	PCA_LVD_Routine(void)	interrupt 6;

6.1 Interrupt Structure

The interrupt structure of STC12C5620AD series is shown as below.

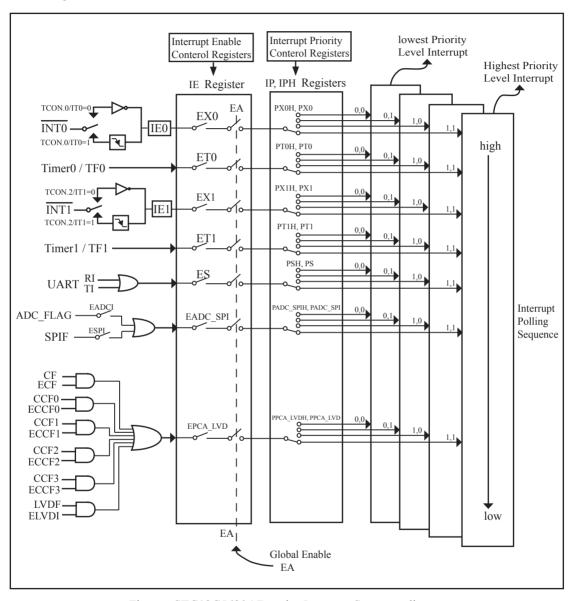


Figure STC12C5620AD series Interrupt Structure diagram

The External Interrupts $\overline{\text{INT0}}$ and $\overline{\text{INT1}}$ can each be either level-activated or transition-activated, depending on bits IT0 and IT1 in Register TCON. The flags that actually generate these interrupts are bits IE0 and IE1 in TCON. When an external interrupt is generated, the flag that generated it is cleared by the hardware when the service routine is vectored to if and only if the interrupt was transition –activated, otherwise the external requesting source is what controls the request flag, rather than the on-chip hardware.

The Timer 0 and Timer1 Interrupts are generated by TF0 and TF1, which are set by a rollover in their respective Timer/Counter registers in most cases. When a timer interrupt is generated, the flag that generated it is cleared by the on-chip hardware when the service routine is vectored to.

The Serial Port Interrupt is generated by the logical OR of RI and TI. Neither of these flags is cleared by hardware when the service routine is vectored to. In fact, the service routine will normally have to determine whether it was RI and TI that generated the interrupt, and the bit will have to be cleared by software.

The 2BH interrupt is shared by the logical "1" of SPI interrupt and ADC interrupt. Neither of these flags is cleared by hardware when the service routine is vectored to. The service routine should poll them to determine which one to request service and it will be cleared by software.

The 33H interrupt is shared by the logical "1" of PCA interrupt and LVD (Low-Voltage Detector) interrupt. Neither of these flags is cleared by hardware when the service routine is vectored to. The service routine should poll them to determine which one to request service and it will be cleared by software.

All of the bits that generate interrupts can be set or cleared by software, with the same result as though it had been set or cleared by hardware. In other words, interrupts can be generated or pending interrupts can be canceled in software.

6.2 Interrupt Register

Symbol	Description	Address	M	SB		Bit	Address	and S	Symbo	ol		LSB	Value after Power-on or Reset
IE	Interrupt Enable	A8H	EA	EPCA	_LV	D EA	ADC_SPI	ES	ET1	EX1	ET0	EX0	0000 0000B
IP	Interrupt Priority Low	В8Н	-	PPCA	_LV	D PA	ADC_SP	I PS	PT1	PX1	PT	0 PX0	x000 0000B
IPH	Interrupt Priority High	В7Н	-	PPCA_	LVD	H PAI	DC_SPIH	PSH	PT1H	PX1H	PT0F	Н РХОН	x000 0000B
TCON	Timer Control	88H	TF	1 TI	R1	TF0	TR0	IE1	IT	1	IE0	IT0	0000 0000B
SCON	Serial Control	98H	SM0	FE S	М1	SM2	2 REN	TB8	RE RE	88	TI	RI	0000 0000B
AUXR	Auxiliary register	8EH	T0x	12 T1x	12 U	UART_	_M0x6 H	EADCI	ESPI	ELV	DI -	- -	0000 00xxB
PCON	Power Control	87H	SMC	DD SM	OD0	LVI	OF POF	GF	1 G	F0	PD	IDL	0011 0000B
ADC_CONTR	ADC Control	C5H	ADC_	POWER	SPEEL	D1 SPEI	ED0 ADC_F	LAG	C_STAR	TCHS	S2 CHS	S1 CHS0	0000 0000B
CCON	PCA Control Register	D8H	CI	F C	R	-	-	CCF:	3 CCI	F2 C	CF1	CCF0	00xx 0000B
CMOD	PCA Mode Register	D9H	CIE	L ·	.	-	-	-	CPS	S1 C	PS0	ECF	00xx 0000B
CCAPM0	PCA Module 0 Mode Register	DAH	-	ECOM	10 C	APP0	CAPN0	MAT0	TOG	0 PV	VM0	ECCF0	x000 0000B
CCAPM1	PCA Module 1 Mode Register	DBH	-	ECOM	11 C	APP1	CAPN1	MAT1	TOG	1 PV	VM1	ECCF1	x000 0000B
CCAPM2	PCA Module 2 Mode Register	DCH	-	ECOM	12 C	APP2	CAPN2	MAT2	TOG	2 PV	VM2	ECCF2	x000 0000B
ССАРМ3	PCA Module 3 Mode Register	DDH	-	ECOM	13 C	APP3	CAPN3	MAT3	TOG	3 PV	VM3	ECCF3	x000 0000B
SPSTAT	SPI Status register	84H	SPI	F WC	OL	-	-	-	-		- [-	

1. Interrupt Enable control Register IE and AUXR

IE: Interrupt Enable Rsgister (Bit-addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
IE	A8H	name	EA	EPCA_LVD	EADC_SPI	ES	ET1	EX1	ET0	EX0

Enable Bit = 1 enables the interrupt.

Enable Bit = 0 disables it.

EA (IE.7): disables all interrupts. If EA = 0,no interrupt will be acknowledged. If EA = 1, each interrupt source is individually enabled or disabled by setting or clearing its enable bit.

EPCA LVD (IE.6): Interrupt controller of Programmable Counter Array (PCA) and Low-Voltage Detector.

0: Disable the interrupt of Programmable Counter Array (PCA) and Low-Voltage Detector

1 : Enable the interrupt of Programmable Counter Array (PCA) and Low-Voltage Detector

EADC SPI (IE.5): Interrupt controller of Serial Peripheral Interface (SPI) and A/D Converter (ADC).

0: Disable the interrupt of Serial Peripheral Interface (SPI) and A/D Converter (ADC).

1: Enable the interrupt of Serial Peripheral Interface (SPI) and A/D Converter (ADC).

ES (IE.4): Serial Port 1 (UART1) interrupt enable bit. If ES = 0, UART1 interrupt will be diabled. If ES = 1, UART1 interrupt is enabled.

ET1 (IE.3): Timer 1 interrupt enable bit. If ET1 = 0, Timer 1 interrupt will be diabled. If ET1 = 1, Timer 1 interrupt is enabled.

EX1 (IE.2): External interrupt 1 enable bit. If EX1 = 0, external interrupt 1 will be diabled. If EX1 = 1, external interrupt 1 is enabled.

ET0 (IE.1): Timer 0 interrupt enable bit. If ET0 = 0, Timer 0 interrupt will be diabled. If ET0 = 1, Timer 0 interrupt is enabled.

EX0 (IE.0): External interrupt 0 enable bit. If EX0 = 0, external interrupt 0 will be diabled. If EX0 = 1, external interrupt 0 is enabled.

AUXR: Auxiliary register (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
AUXR	8EH	name	T0x12	T1x12	UART_M0x6	EADCI	ESPI	ELVDI	-	-

ELVDI: Enable/Disable interrupt from low-voltage sensor

0 : (default)Inhibit the low-voltage sensor functional block to generate interrupt to the MCU

1 : Enable the low-voltage sensor functional block to generate interrupt to the MCU

ESPI: Enable/Disable interrupt from Serial Peripheral Interface (SPI)

0 : (default)Inhibit the SPI functional block to generate interrupt to the MCU

1 : Enable the SPI functional block to generate interrupt to the MCU

EADCI: Enable/Disable interrupt from A/D converter

0 : (default) Inhibit the ADC functional block to generate interrupt to the MCU

1 : Enable the ADC functional block to generate interrupt to the MCU

UART M0x6: Baud rate select bit of UART1 while it is working under Mode-0

0 : The baud-rate of UART in mode 0 is SYSclk/12.

1 : The baud-rate of UART in mode 0 is SYSclk/2.

T1x12: Timer 1 clock source bit.

0 : The clock source of Timer 1 is SYSclk/12. It will compatible to the traditional 80C51 MCU

1 : The clock source of Timer 1 is SYSclk/1. It will drive the T0 faster than a traditional 80C51 MCU

T0x12: Timer 0 clock source bit.

0 : The clock source of Timer 0 is SYSclk/12. It will compatible to the traditional 80C51 MCU

1 : The clock source of Timer 0 is SYSclk/1. It will drive the T0 faster than a traditional 80C51 MCU

2. Interrupt Priority control Registers IP and IPH

Each interrupt source of STC12C5620AD all can be individually programmed to one of four priority levels by setting or clearing the bits in Special Function Registers IP and IPH. A low-priority interrupt can itself be interrupted by a high-pority interrupt, but not by another low-priority interrupt. A high-priority interrupt can't be interrupted by any other interrupt source.

IPH: Interrupt Priority High Register (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
IPH	В7Н	name	-	PPCA_LVDH	PADC_SPIH	PSH	PT1H	PX1H	РТ0Н	PX0H

IP: Interrupt Priority Register (Bit-addressable)

SFR name	Address	bit	В7	В6	B5	B4	В3	В2	B1	В0
IP	B8H	name	-	PPCA_LVD	PADC_SPI	PS	PT1	PX1	PT0	PX0

PPCA_LVDH, PPCA_LVD: Programmable Counter Array (PCA) and Low voltage detector interrupt priority control bits. if PPCA_LVDH=0 and PPCA_LVD=0, Programmable Counter Array (PCA) and Low voltage detector

interrupt are assigned lowest priority(priority 0). if PPCA_LVDH=0 and PPCA_LVD=1, Programmable Counter Array (PCA) and Low voltage detector

interrupt are assigned lowest priority(priority 1).

if PPCA_LVDH=1 and PPCA_LVD=0, Programmable Counter Array (PCA) and Low voltage detector interrupt are assigned lowest priority(priority 2).

if PPCA_LVDH=1 and PPCA_LVD=1, Programmable Counter Array (PCA) and Low voltage .detector interrupt are assigned lowest priority(priority 3).

PADC SPIH, PADC SPI: Serial Peripheral Interface (SPI) and A/D Converter (ADC) interrupt priority control bits.

if PADC_SPIH=0 and PADC_SPI=0, Serial Peripheral Interface (SPI) and A/D Converter (ADC) interrupt are assigned lowest priority(priority 0).

if PADC_SPIH=0 and PADC_SPI=1, Serial Peripheral Interface (SPI) and A/D Converter (ADC) interrupt are assigned lowest priority(priority 1).

if PADC_SPIH=1 and PADC_SPI=0, Serial Peripheral Interface (SPI) and A/D Converter (ADC) interrupt are assigned lowest priority(priority 2).

if PADC_SPIH=1 and PADC_SPI=1, Serial Peripheral Interface (SPI) and A/D Converter (ADC) interrupt are assigned lowest priority(priority 3).

```
PSH, PS: Serial Port 1 (UART1) interrupt priority control bits.
          if PSH=0 and PS=0, UART1 interrupt is assigned lowest priority (priority 0).
          if PSH=0 and PS=1, UART1 interrupt is assigned lower priority (priority 1).
          if PSH=1 and PS=0, UART1 interrupt is assigned higher priority (priority 2).
          if PSH=1 and PS=1, UART1 interrupt is assigned highest priority (priority 3).
PT1H, PT1: Timer 1 interrupt priority control bits.
             if PT1H=0 and PT1=0, Timer 1 interrupt is assigned lowest priority (priority 0).
             if PT1H=0 and PT1=1, Timer 1 interrupt is assigned lower priority (priority 1).
             if PT1H=1 and PT1=0. Timer 1 interrupt is assigned higher priority (priority 2).
             if PT1H=1 and PT1=1, Timer 1 interrupt is assigned highest priority (priority 3).
PX1H, PX1: External interrupt 1 priority control bits.
             if PX1H=0 and PX1=0. External interrupt 1 is assigned lowest priority (priority 0).
             if PX1H=0 and PX1=1, External interrupt 1 is assigned lower priority (priority 1).
             if PX1H=1 and PX1=0. External interrupt 1 is assigned higher priority (priority 2).
             if PX1H=1 and PX1=1, External interrupt 1 is assigned highest priority (priority 3).
PT0H. PT0: Timer 0 interrupt priority control bits.
             if PT0H=0 and PT0=0, Timer 0 interrupt is assigned lowest priority (priority 0).
             if PT0H=0 and PT0=1, Timer 0 interrupt is assigned lower priority (priority 1).
             if PT0H=1 and PT0=0, Timer 0 interrupt is assigned higher priority (priority 2).
             if PT0H=1 and PT0=1, Timer 0 interrupt is assigned highest priority (priority 3).
PX0H, PX0: External interrupt 0 priority control bits.
             if PX0H=0 and PX0=0. External interrupt 0 is assigned lowest priority (priority 0).
             if PX0H=0 and PX0=1, External interrupt 0 is assigned lower priority (priority 1).
```

if PX0H=1 and PX0=0, External interrupt 0 is assigned higher priority (priority 2). if PX0H=1 and PX0=1, External interrupt 0 is assigned highest priority (priority 3).

3. TCON register: Timer/Counter Control Register (Bit-Addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	В1	В0
TCON	88H	name	TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

TF1: Timer/Counter 1 Overflow Flag. Set by hardware on Timer/Counter 1 overflow. The flag can be cleared by software but is automatically cleared by hardware when processor vectors to the Timer 1 interrupt routine.

If TF1 = 0, No Timer 1 overflow detected.

If TF1 = 1, Timer 1 has overflowed.

TR1: Timer/Counter 1 Run Control bit. Set/cleared by software to turn Timer/Counter on/off.

If TR1 = 0, Timer 1 disabled.

If TR1 = 1, Timer 1 enabled.

TF0: Timer/Counter 0 Overflow Flag. Set by hardware on Timer/Counter 0 overflow. The flag can be cleared by software but is automatically cleared by hardware when processor vectors to the Timer 0 interrupt routine.

If TF0 = 0, No Timer 0 overflow detected.

If TF0 = 1, Timer 0 has overflowed.

TR0: Timer/Counter 0 Run Control bit. Set/cleared by software to turn Timer/Counter on/off.

If TR0 = 0, Timer 0 disabled.

If TR0 = 1, Timer 0 enabled.

IE1: External Interrupt 1 Edge flag. Set by hardware when external interrupt edge/level defined by IT1 is detected. The flag can be cleared by software but is automatically cleared when the external interrupt 1 service routine has been processed.

IT1: External Intenupt 1 Type Select bit. Set/cleared by software to specify falling edge/low level triggered external interrupt 1.

If IT1 = 0, $\overline{INT1}$ is low level triggered.

If IT1 = 1, $\overline{INT1}$ is edge triggered.

IEO: External Interrupt 0 Edge flag. Set by hardware when external interrupt edge/level defined by ITO is detected. The flag can be cleared by software but is automatically cleared when the external interrupt 0 service routine has been processed.

ITO: External Intenupt 0 Type Select bit. Set/cleared by software to specify falling edge/low level triggered external interrupt 0.

If IT0 = 0, $\overline{INT0}$ is low level triggered.

If IT0 = 1, $\overline{INT0}$ is edge triggered.

4. SCON register: Serial Port 1 (UART1) Control Register (Bit-Addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
SCON	98H	name	SM0/FE	SM1	SM2	REN	TB8	RB8	TI	RI

FE: Framing Error bit. The SMOD0 bit must be set to enable access to the FE bit

0: The FE bit is not cleared by valid frames but should be cleared by software.

1: This bit set by the receiver when an invalid stop bit id detected.

SM0.SM1: Serial Port Mode Bit 0/1.

SM0	SM1	Description	Baud rate
0	0	8-bit shift register	SYSclk/12
0	1	8-bit UART	variable
1	0	9-bit UART	SYSclk/64 or SYSclk/32(SMOD=1)
1	1	9-bit UART	variable

SM2: Enable the automatic address recognition feature in mode 2 and 3. If SM2=1, RI will not be set unless the received 9th data bit is 1, indicating an address, and the received byte is a Given or Broadcast address. In mode1, if SM2=1 then RI will not be set unless a valid stop Bit was received, and the received byte is a Given or Broadcast address. In mode 0, SM2 should be 0.

REN: When set enables serial reception.

TB8: The 9th data bit which will be transmitted in mode 2 and 3.

RB8: In mode 2 and 3, the received 9th data bit will go into this bit.

TI: Transmit interrupt flag. Set by hardware when a byte of data has been transmitted by UART0 (after the 8th bit in 8-bit UART Mode, or at the beginning of the STOP bit in 9-bit UART Mode). When the UART0 interrupt is enabled, setting this bit causes the CPU to vector to the UART0 interrupt service routine. This bit must be cleared manually by software.

RI: Receive interrupt flag. Set to '1' by hardware when a byte of data has been received by UART0 (set at the STOP bit sam-pling time). When the UART0 interrupt is enabled, setting this bit to '1' causes the CPU to vector to the UART0 interrupt service routine. This bit must be cleared manually by software.

5. Register related with LVD interrupt: Power Control register PCON (Non bit-Addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
PCON	87H	name	SMOD	SMOD0	LVDF	POF	GF1	GF0	PD	IDL

SMOD: double Baud rate control bit.

0: Disable double Baud rate of the UART.

1 : Enable double Baud rate of the UART in mode 1,2,or 3.

SMOD0: Frame Error select.

0: SCON.7 is SM0 function.

1: SCON.7 is FE function. Note that FE will be set after a frame error regardless of the state of SMOD0.

LVDF : Pin Low-Voltage Flag. Once low voltage condition is detected (VCC power is lower than LVD

voltage), it is set by hardware (and should be cleared by software).

POF : Power-On flag. It is set by power-off-on action and can only cleared by software.

GF1 : General-purposed flag 1 GF0 : General-purposed flag 0 PD : Power-Down bit.

IDL : Idle mode bit.

IE: Interrupt Enable Rsgister (Bit-addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	В2	B1	В0
IE	A8H	name	EA	EPCA_LVD	EADC_SPI	ES	ET1	EX1	ET0	EX0

EA: disables all interrupts.

If EA = 0,no interrupt will be acknowledged.

If EA = 1, each interrupt source is individually enabled or disabled by setting or clearing its enable bit.

EPCA LVD: Interrupt controller of Programmable Counter Array (PCA) and Low-Voltage Detector.

If EPCA_LVD = 0, Disable the interrupt of Programmable Counter Array (PCA) and Low-Voltage Detector. If EPCA_LVD = 1, Enable the interrupt of Programmable Counter Array (PCA) and Low-Voltage Detector

6. ADC CONTR: AD Control register (Non bit-Addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	В1	В0
ADC_CONTR	C5H	name	ADC_POWER	SPEED1	SPEED0	ADC_FLAG	ADC_START	CHS2	CHS1	CHS0

ADC POWER: When clear, shut down the power of ADC bolck. When set, turn on the power of ADC block.

ADC_FLAG: ADC interrupt flag.It will be set by the device after the device has finished a conversion, and should be cleared by the user's software.

ADC_STRAT: ADC start bit, which enable ADC conversion. It will automatically cleared by the device after the device has finished the conversion

IE: Interrupt Enable Rsgister (Bit-addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
IE	A8H	name	EA	EPCA LVD	EADC SPI	ES	ET1	EX1	ET0	EX0

EA: disables all interrupts.

If EA = 0,no interrupt will be acknowledged.

If EA = 1, each interrupt source is individually enabled or disabled by setting or clearing its enable bit.

EADC SPI: Interrupt controller of Serial Peripheral Interface (SPI) and A/D Converter (ADC).

If EADC SPI = 0, Disable the interrupt of Serial Peripheral Interface (SPI) and A/D Converter (ADC).

If EADC SPI = 1, Enable the interrupt of Serial Peripheral Interface (SPI) and A/D Converter (ADC).

7. Register related with PCA interrupt

CCON: PCA Control Register (bit-Addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
CCON	D8H	name	CF	CR	-	-	CCF3	CCF2	CCF1	CCF0

CF: PCA Counter Overflow flag. Set by hardware when the counter rolls over. CF flags an interrupt if bit ECF in CMOD is set. CF may be set by either hardware or software but can only be cleared by software.

CR: PCA Counter Run control bit. Set by software to turn the PCA counter on. Must be cleared by software to turn the PCA counter off.

CCF3: PCA Module 3 interrupt flag. Set by hardware when a match or capture occurs. Must be cleared by software.

CCF2: PCA Module 2 interrupt flag. Set by hardware when a match or capture occurs. Must be cleared by software.

CCF1: PCA Module 1 interrupt flag. Set by hardware when a match or capture occurs. Must be cleared by software.

CCF0: PCA Module 0 interrupt flag. Set by hardware when a match or capture occurs. Must be cleared by software.

CMOD: PCA Mode Register (Non bit-Addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
CMOD	D9H	name	CIDL	-	-	-	-	CPS1	CPS0	ECF

CIDL: Counter Idle control. CIDL=0 programs the PCA Counter to continue functioning during idle mode. CIDL=1 programs it to be gated off during idle.

CPS1~ CPS0: PCA Counter Pulse Select bits.

0 0 Internal clock, fosc/12

0 1 Internal clock, fosc/2

0 0 Timer 0 overflow

0 1 External clock at ECI/P3.4 pin

ECF: PCA Enable Counter Overflow interrupt. ECF=1 enables CF bit in CCON to generate an interrupt.

CCAPMn register (Non bit-Addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	В2	B1	В0
CCAPM0	DAH	name	-	ECOM0	CAPP0	CAPN0	MAT0	TOG0	PWM0	ECCF0
CCAPM1	DBH	name	-	ECOM1	CAPP1	CAPN1	MAT1	TOG1	PWM1	ECCF1
CCAPM2	DCH	name	-	ECOM2	CAPP2	CAPN2	MAT2	TOG2	PWM2	ECCF2
CCAPM3	DDH	name	-	ECOM3	CAPP3	CAPN3	MAT3	TOG3	PWM3	ECCF3

ECOMn: Enable Comparator. ECOMn=1 enables the comparator function.

CAPPn: Capture Positive, CAPPn=1 enables positive edge capture.

CAPNn: Capture Negative, CAPNn=1 enables negative edge capture.

 $MATn: \quad Match. \ When \ MATn=1, a \ match \ of the \ PCA \ counter \ with \ this \ module's \ compare/capture \ register$

causes the CCFn bit in CCON to be set.

 $TOGn\ :\ Toggle.\ When\ TOGn=1, a\ match\ of\ the\ PCA\ counter\ with\ this\ module's\ compare/capture\ register\ causes$

the CEXn pin to toggle.

PWMn: Pulse Width Modulation. PWMn=1 enables the CEXn pin to be used as a pulse width modulated output.

ECCFn: Enable CCF interrupt. Enables compare/capture flag CCFn in the CCON register to generate

IE: Interrupt Enable Rsgister (Bit-addressable)

SFR name	Address	bit	В7	В6	B5	В4	В3	В2	B1	В0
IE	A8H	name	EA	EPCA_LVD	EADC_SPI	ES	ET1	EX1	ET0	EX0

EA: disables all interrupts.

If EA = 0, no interrupt will be acknowledged.

If EA = 1, each interrupt source is individually enabled or disabled by setting or clearing its enable bit.

EPCA LVD: Interrupt controller of Programmable Counter Array (PCA) and Low-Voltage Detector.

If EPCA LVD = 0, Disable the interrupt of Programmable Counter Array (PCA) and Low-Voltage Detector.

If EPCA LVD = 1, Enable the interrupt of Programmable Counter Array (PCA) and Low-Voltage Detector

8. Register related with SPI interrupt: SPSTAT

SPI State register: SPSTAT (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
SPSTAT	CDH	name	SPIF	WCOL	-	-	-	-	-	-

SPIF: SPI transfer completion flag.

When a serial transfer finishes, the SPIF bit is set and an interrupt is generated if all the EADC_SPI (IE.6) bit, ESPI bit (AUXR.3) and the EA (IE.7) bit are set. If SS is an input and is driven low when SPI is in master mode with SSIG = 0, SPIF will also be set to signal the "mode change". The SPIF is cleared in software by "writing 1 to this bit".

WCOL: SPI write collision flag.

The WCOL bit is set if the SPI data register, SPDAT, is written during a data transfer. The WCOL flag is cleared in software by "writing 1 to this bit".

IE: Interrupt Enable Rsgister (Bit-addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	В2	B1	В0
IE	A8H	name	EA	EPCA_LVD	EADC_SPI	ES	ET1	EX1	ET0	EX0

EA: disables all interrupts.

If EA = 0,no interrupt will be acknowledged.

If EA = 1, each interrupt source is individually enabled or disabled by setting or clearing its enable bit.

EADC SPI: Interrupt controller of Serial Peripheral Interface (SPI) and A/D Converter (ADC).

If EADC SPI = 0, Disable the interrupt of Serial Peripheral Interface (SPI) and A/D Converter (ADC).

If EADC SPI = 1, Enable the interrupt of Serial Peripheral Interface (SPI) and A/D Converter (ADC).

9. Interrupt register related with Power down wake-up: WAKE CLKO (Non bit-Addressable)

SFR name	Address	bit	В7	В6	B5	B4	В3	B2	B1	В0
WAKE CLKO	8FH	name	PCAWAKEUP	RXD_PIN_IE	T1_PIN_IE	T0_PIN_IE	-	-	T1CKLO	T0CKLO

PCAWAKEUP: When set and the associated-PCA interrupt control registers is configured correctly, the CEXn pin of PCA function is enabled to wake up MCU from power-down state.

RXD_PIN_IE: When set and the associated-UART interrupt control registers is configured correctly, the RXD pin (P3.0) is enabled to wake up MCU from power-down state.

T1_PIN_IE: When set and the associated-Timer1 interrupt control registers is configured correctly, the T1 pin (P3.5) is enabled to wake up MCU from power-down state.

T0_PIN_IE: When set and the associated-Timer0 interrupt control registers is configured correctly, the T1 pin (P3.4) is enabled to wake up MCU from power-down state.


T1CKLO: When set, P3.5 is enabled to be the clock output of Timer 1. The clock rate is Timer 1 overflow rate divided by 2.

T0CKLO: When set, P3.4 is enabled to be the clock output of Timer 0. The clock rate is Timer 0 overflow rate divided by 2.

6.3 Interrupt Priorities

Each interrupt source can also be individually programmed to one of four priority levels by setting or clearing the bits in Special Function Registers IP and IPH. A low-priority interrupt can itself be interrupted by a high-pority interrupt, but not by another low-priority interrupt. A high-priority interrupt can't be interrupted by any other interrupt source.

If two requests of different priority levels are received simultaneously, the request of higher priority level is serviced. If requests of the same priority level are received simultaneously, an internal polling sequence determines which request is serviced. Thus within each priority level there is a second priority structure determined by the polling sequence, as follows:

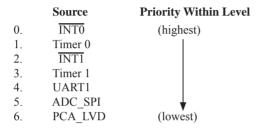

Note that the "priority within level" structure is only used to resolve simultaneous requests of the same priority level.

In C language program, the interrupt polling sequence number is equal to interrupt number, for example,

void	Int0_Routine(void)	interrupt 0;
void	Timer0_Rountine(void)	interrupt 1;
void	Int1_Routine(void)	interrupt 2;
void	Timer1_Rountine(void)	interrupt 3;
void	UART_Rountine(void)	interrupt 4;
void	ADC_SPI_Routine(void)	interrupt 5;
void	PCA_LVD_Routine(void)	interrupt 6;

6.4 How Interrupts Are Handled

External interrupt pins and other interrupt sources are sampled at the rising edge of each instruction *OPcode fetch cycle*. The samples are polled during the next instruction *OPcode fetch cycle*. If one of the flags was in a set condition of the first cycle, the second cycle of polling cycles will find it and the interrupt system will generate an hardware LCALL to the appropriate service routine as long as it is not blocked by any of the following conditions.

Block conditions:

- An interrupt of equal or higher priority level is already in progress.
- The current cycle(polling cycle) is not the final cycle in the execution of the instruction in progress.
- The instruction in progress is RETI or any write to the IE, IP and IPH registers.
- The ISP/IAP activity is in progress.

Any of these four conditions will block the generation of the hardware LCALL to the interrupt service routine. Condition 2 ensures that the instruction in progress will be completed before vectoring into any service routine. Condition 3 ensures that if the instruction in progress is RETI or any access to IE, IP or IPH, then at least one or more instruction will be executed before any interrupt is vectored to.

The polling cycle is repeated with the last clock cycle of each instruction cycle. Note that if an interrupt flag is active but not being responded to for one of the above conditions, if the flag is not still active when the blocking condition is removed, the denied interrupt will not be serviced. In other words, the fact that the interrupt flag was once active but not being responded to for one of the above conditions, if the flag is not still active when the blocking condition is removed, the denied interrupt will not be serviced. The interrupt flag was once active but not serviced is not kept in memory. Every polling cycle is new.

Note that if an interrupt of higher priority level goes active prior to the rising edge of the third machine cycle, then in accordance with the above rules it will be vectored to during fifth and sixth machine cycle, without any instruction of the lower priority routine having been executed.

Thus the processor acknowledges an interrupt request by executing a hardware-generated LCALL to the appropriate servicing routine. In some cases it also clears the flag that generated the interrupt, and in other cases it doesn't. It never clears the Serial Port flags. This has to be done in the user's software. It clears an external interrupt flag (IE0 or IE1) only if it was transition-activated. The hardware-generated LCALL pushes the contents of the Program Counter onto the stack (but it does not save the PSW) and reloads the PC with an address that depends on the source of the interrupt being vectored to, as shown be low.

Source	Vector Address
External Interrupt 0	0003H
Timer 0	000BH
External Interrupt 1	0013H
Timer 1	001BH
UART	0023H
ADC/SPI	002BH
PCA/LVD	0033H

Execution proceeds from that location until the RETI instruction is encountered. The RETI instruction informs the processor that this interrupt routine is no longer in progress, then pops the top two bytes from the stack and reloads the Program Counter. Execution of the interrupted program continues from where it left off.

Note that a simple RET instruction would also have returned execution to the interrupted program, but it would have left the interrupt control system thinking an interrupt was still in progress.

6.5 External Interrupts

The external sources can be programmed to be level-activated or transition-activated by clearing or setting bit IT1 or IT0 in Register TCON. If ITx = 0, external interrupt x is triggered by a detected low at the \overline{INTx} pin. If ITx=1, external interrupt x is edge-triggered. In this mode if successive samples of the \overline{INTx} pin show a high in one cycle and a low in the next cycle, interrupt request flag IEx in TCON is set. Flag bit IEx then requests the interrupt.

Since the external interrupt pins are sampled once each machine cycle, an input high or low should hold for at least 12 system clocks to ensure sampling. If the external interrupt is transition-activated, the external source has to hold the request pin high for at least one machine cycle, and then hold it low for at least one machine cycle to ensure that the transition is seen so that interrupt request flag IEx will be set. IEx will be automatically cleared by the CPU when the service routine is called.

If the external interrupt is level-activated, the external source has to hold the request active until the requested interrupt is actually generated. Then it has to deactivate the request before the interrupt service routine is completed, or else another interrupt will be generated.

Example: Design an intrusion warning system using interrupts that sounds a 400Hz tone for 1 second (using a loudspeaker connected to P1.7) whenever a door sensor connected to $\overline{\text{INT0}}$ makes a high-to-low transition.

Assembly Language Solution

```
ORG
                 0
        LJMP
                 MAIN
                                            ;3-byte instruction
        LJMP
                 INT0INT
                                            ;EXT 0 vector address
        ORG
                 000BH
                                            :Timer 0 vector
        LJMP
                 T0INT
        ORG
                 001BH
                                            ;Timer 1 vector
        LJMP
                 T1INT
        ORG
                 0030H
MAIN:
                                            ;negative edge activated
        SETB
                 IT0
         MOV
                 TMOD, #11H
                                            ;16-bit timer mode
        MOV
                 IE.
                          #81H
                                            ;enable EXT 0 only
        SJMP
                 $
                                            ;now relax
INT0INT:
        MOV
                          #20
                 R7.
                                            :20'5000 \text{ us} = 1 \text{ second}
        SETB
                 TF0
                                            ;force timer 0 interrupt
        SETB
                 TF1
                                            ;force timer 1 interrupt
        SETB
                 ET0
                                            ;begin tone for 1 second
        SETB
                 ET1
                                            enable timer interrupts
        RETI
T0INT:
        CLR
                 TR0
                                            :stop timer
        DJNZ
                 R7,
                          SKIP
                                            ; if not 20th time, exit
        CLR
                 ET0
                                            ;if 20th, disable tone
                                            :disable itself
        CLR
                 ET1
        LJMP
                 EXIT
SKIP:
        MOV
                 TH0,
                          #HIGH (-50000)
                                            ;0.05sec. delay
                           #LOW (-5000)
        MOV
                 TL0,
        SETB
                 TR0
EXIT:
        RETI
T1INT:
        CLR
                 TR1
        MOV
                 TH1,
                          #HIGH (-1250)
                                            ;count for 400Hz
        MOV
                 TL1,
                          #LOW (-1250)
                 P1.7
        CPL
                                            ;music maestro!
        SETB
                 TR1
         RETI
        END
```

C Language Solution

```
/* SFR declarations */
#include <REG51.H>
                                                  /* use variable outbit to refer to P1.7 */
sbit
         outbit = P1^7;
                                                  /* use 8-bit variable to represent R7 */
unsigned char
                    R7:
main()
         IT0 = 1;
                                                  /* negative edge activated */
         TMOD = 0x11;
                                                  /* 16-bit timer mode */
                                                  /* enable EXT 0 only */
         IE = 0x81;
         while(1);
void INT0INT(void)
                                interrupt 0
         R7 = 20;
                                                  /* 20 \times 5000 \text{us} = 1 \text{ second } */
         TF0 = 1;
                                                  /* force timer 0 interrupt */
                                                  /* force timer 1 interrupt */
         TF1 = 1;
                                                  /* begin tone for 1 second */
         ET0 = 1;
                                                  /* enable timer 1 interrupts */
         ET1 = 1;
                                                  /* timer interrupts will do the work */
void T0INT(void) interrupt 1
         TR0 = 0:
                                                  /* stop timer */
                                                  /* decrement R7 */
          R7 = R7-1;
                                                  /* if 20<sup>th</sup> time, */
          if (R7 == 0)
                    ET0 = 0;
                                                  /* disable itself */
                    ET1 = 0;
         else
                    TH0 = 0x3C;
                                                  /* 0.05 sec. delay */
                    TL0 = 0xB0;
          }
void T1INT (void) interrupt 3
         TR0 = 0;
                                                  /* count for 400Hz */
         TH1 = 0xFB;
         TL1 = 0x1E;
                                                   /* music maestro! */
         outbit = !outbit;
         TR1 = 1;
```

In the above assembly language solution, five distinct sections are the interrupt vector loactions, the main program, and the three interrupt service routines. All vector loacations contain LJMP instructions to the respective routines. The main program, starting at code address 0030H, contains only four instructions. SETB ITO configures the door sensing interrupt input as negative-edge triggered. MOV TMOD, #11H configures both timers for mode 1, 16-bit timer mode. Only the external 0 interrupt is enabled initially (MOV IE,#81H), so a "door-open" condition is needed before any interrupt is accepted. Finally, SJMP \$ puts the main program in a do-nothing loop.

When a door-open condition is sensed (by a high-to-low transition of INT0), an external 0 interrupt is generated, INT0INT begins by putting the constant 20 in R7, then sets the overflow flags for both timers to force timer interrupts to occur.

Timer interrupt will only occur, however, if the respective bits are enabled in the IE register. The next two instructions (SETB ET0 and SETB ET1) enable timer interrupts. Finally, INT0INT terminates with a RETI to the main program.

Timer 0 creates the 1 second timeout, and Timer 1 creates the 400Hz tone. After INT0INT returns to the main program, timer interrupt are immediately generated (and accepted after one excution of SJMP \$). Because of the fixed polling sequence, the Timer 0 interrupt is serviced first. A 1 second timeout is created by programming 20 repetitions of a 50,000 us timeout. R7 serves as the counter. Nineteen times out of 20, T0INT operates as follows. First, Timer 0 is turned off and R7 is decremented. Then, TH0/TL is reload with -50,000, the timer is turned back on, and the interrupt is terminated. On the 20th Timer 0 interrupt, R7 is decremented to 0 (1 second has elapsed). Both timer interrupts are disabled(CLR ET0, CLR ET1)and the interrupt is terminated. No further timer interrupts will be generated until the next "door-open" condition is sensed.

The 400Hz tone is programmed using Timer 1 interrupts, 400Hz requires a period of 1/400 = 2,500 us or 1,250 high-time and 1,250 us low-time. Each timer 1 ISR simply puts -1250 in TH1/TL1, complements the port bit driving the loudspeaker, then terminates.

6.6 Response Time

The INT0 and INT1 levels are inverted and latched into the interrupt flags IE0 and IE1 at rising edge of every system clock cycle.

The Timer 0 and Timer 1 flags, TF0 and TF1, are set after which the timers overflow. The values are then polled by the circuitry at rising edge of the next system clock cycle.

If a request is active and conditions are right for it to be acknowledged, a hardware subroutine call to the requested service routine will be the next instruction to be executed. The call itself takes six system clock cycles. Thus, a minimum of seven complete system clock cycles elapse between activation of an external interrupt request and the beginning of execution of the first instruction of the service routine.

A longer response time would result if the request is blocked by one of the four previously listed conditions. If an interrupt of equal or higher priority level is already in progress, the additional wait time obviously depends on the nature of the other interrupt's service routine. If the instruction in progress is not in its final cycle, the additional wait time cannot be more than 3 cycles, since the longest instructions (LCALL) are only 6 cycles long, and if the instruction in progress is RETI or an access to IE or IP, the additional wait time cannot be more than 5 cycles (a maximum of one more cycle to complete the instruction in progress, plus 6 cycles to complete the next instruction if the instruction is LCALL).

Thus, in a single-interrupt system, the response time is always more than 7 cycles and less than 12 cycles.

6.7 Demo Programs about Interrupts (C and ASM)

6.7.1 External Interrupt 0 (INTO) Demo Programs (C and ASM)

1. Demostrate External Interrupt 0 triggered by Falling Edge

C program

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU Ext0 (Falling edge) Demo -----*/
/* If you want to use the program or the program referenced in the */
/* article, please specify in which data and procedures from STC */
/*_____*/
#include "reg51.h"
//External interrupt0 service routine
void exint0() interrupt 0
                                      //INT0, interrupt 0 (location at 0003H)
void main()
       IT0 = 1;
                                      //set INT0 interrupt type (1:Falling 0:Low level)
       EX0 = 1;
                                      //enable INT0 interrupt
       EA = 1;
                                      //open global interrupt switch
       while (1);
```

Assembly program

*/**/	
;/* STC MCU International Limited*/	
;/* STC 1T Series MCU Ext0(Falling edge) Demo*/	
;/* If you want to use the program or the program referenced in the */	
;/* article, please specify in which data and procedures from STC */	
:/**/	
, '	
j	
;interrupt vector table	
, merupt vector more	
ORG 0000H	
LJMP MAIN	
ESIVII IVITII V	
ORG 0003H ;INT0, interrupt 0 (location at 0003H)	
LJMP EXINTO	
Egiti Ezilito	
,	
ORG 0100H	
MAIN:	
MOV SP, #7FH ;initial SP	
SETB ITO ;set INT0 interrupt type (1:Falling 0:L	ow level)
SETB EX0 ;enable INT0 interrupt	011 10101)
SETB EA ;open global interrupt switch	
SJMP \$	
551411	
·	
;External interrupt0 service routine	
,External interrupto service rounie	
EXINT0:	
RETI	
KL11	
,	
END	

2. Demostrate the Power-Down Mode waked up by Falling Edge of External Interrupt 0 C program

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU Power-Down wakeup by INT0 Demo -----*/
/* article, please specify in which data and procedures from STC -----*/
/*_____*/
#include "reg51.h"
#include "intrins.h"
//External interrupt0 service routine
void exint0( )
               interrupt 0
                                      //INT0, interrupt 0 (location at 0003H)
void main()
       IT0 = 1;
                                      //set INT0 interrupt type (1:Falling 0:Low level)
                                      //enable INT0 interrupt
       EX0 = 1:
                                      //open global interrupt switch
       EA = 1;
       while (1)
               INT0 = 1;
                                      //ready read INT0 port
                                      //check INT0
               while (!INT0);
               nop ();
               nop ();
               PCON = 0x02;
                                      //MCU power down
               nop ();
               _nop_();
               P1++;
```

Assembly program

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU Power-Down wakeup by INT0 Demo -----*/
/* If you want to use the program or the program referenced in the -----*/
/* article, please specify in which data and procedures from STC -----*/
/*____*/
[-----
;interrupt vector table
       ORG
              0000H
      LJMP
              MAIN
       ORG
              0003H
                                   ;INT0, interrupt 0 (location at 0003H)
       LJMP
              EXINT0
       ORG
              0100H
MAIN:
      MOV
              SP,
                     #7FH
                                   ;initial SP
       SETB
              IT0
                                   ;set INT0 interrupt type (1:Falling 0:Low level)
      SETB
              EX0
                                   ;enable INT0 interrupt
                                   ;open global interrupt switch
       SETB
              EA
LOOP:
      SETB
              INT0
                                   ;ready read INT0 port
      JNB
              INTO,
                     $
                                   ;check INT0
       NOP
       NOP
       MOV
              PCON, #02H
                                   ;MCU power down
       NOP
       NOP
       CPL
              P1.0
       SJMP
              LOOP
;-----
;External interrupt0 service routine
EXINT0:
       RETI
      END
```

6.7.2 External Interrupt 1 (INT1) Demo Programs (C and ASM)

1. Demostrate External Interrupt 1 triggered by Falling Edge C program

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU Ext1(Falling edge) Demo -----*/
/* If you want to use the program or the program referenced in the */
/* article, please specify in which data and procedures from STC */
/*_____*/
#include "reg51.h"
//External interrupt1 service routine
void exint1() interrupt 2
                              //INT1, interrupt 2 (location at 0013H)
void main()
                              //set INT1 interrupt type (1:Falling only 0:Low level)
       IT1 = 1;
       EX1 = 1;
                              //enable INT1 interrupt
       EA = 1;
                              //open global interrupt switch
       while (1);
```

Assembly program

-/*				*/	
				·*/	
				edge) Demo*/	
				nd procedures from STC */	
				*/	
;					
;interrup	ot vector t	able			
	ORG	0000Н			
	LJMP	MAIN			
	ORG	0013H		;INT1, interrupt 2 (location at 0013H)	
	LJMP	EXINT1			
;					
	ORG	0100H			
MAIN:	OKG	010011			
1111 11111.	MOV	SP.	#7FH	;initial SP	
	SETB	IT1	.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	;set INT1 interrupt type (1:Falling 0:Low le	evel)
	SETB	EX1		;enable INT1 interrupt	,
	SETB	EA		open global interrupt switch	
	SJMP	\$			
,		41			
,EXICINA	ıı mterrup	t1 service	loutine		
EXINT:	1 ·				
Little 1	RETI				
;					
	END				

2. Demostrate the Power-Down Mode waked up by Falling Edge of External Interrupt 1 C program

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU Power-Down wakeup by INT1 Demo -----*/
/* If you want to use the program or the program referenced in the -----*/
/* article, please specify in which data and procedures from STC -----*/
/*_____*/
#include "reg51.h"
#include "intrins.h"
//External interrupt0 service routine
void exint1() interrupt 2
                                       //INT1, interrupt 2 (location at 0013H)
}
void main()
                                       //set INT1 interrupt type (1:Falling 0:Low level)
        IT1 = 1;
       EX1 = 1:
                                       //enable INT1 interrupt
       EA = 1;
                                       //open global interrupt switch
        while (1)
               INT1 = 1;
                                       //ready read INT1 port
                                       //check INT1
               while (!INT1);
               _nop_();
                nop ();
               PCON = 0x02;
                                       //MCU power down
                _nop_();
                _nop_();
               P1++;
```

Assembly program

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU Power-Down wakeup by INT1 Demo -----*/
/* If you want to use the program or the program referenced in the -----*/
/* article, please specify in which data and procedures from STC -----*/
/*____*/
;interrupt vector table
       ORG
              0000H
       LJMP
              MAIN
       ORG
              0013H
                             ;INT1, interrupt 2 (location at 0013H)
       LJMP
              EXINT1
       ORG
              0100H
MAIN:
       MOV
              SP.#7FH
                             :initial SP
                             ;set INT1 interrupt type (1:Falling 0:Low level)
       SETB
              IT1
       SETB
                             ;enable INT1 interrupt
              EX1
       SETB
              EA
                             open global interrupt switch
LOOP:
                            ;ready read INT1 port
       SETB
              INT1
       JNB
              INT1,$
                            ;check INT1
       NOP
       NOP
       MOV
              PCON,#02H
                               ;MCU power down
       NOP
       NOP
       CPL
              P1.0
       SJMP
              LOOP
;External interrupt1 service routine
EXINT1:
       RETI
       END
```

6.7.3 Programs of P3.4/T0 Interrupt(falling edge) used to wake up PD mode

1. C program

```
/*_____*/
/* --- STC MCU International Limited -----*
/* --- STC 1T Series MCU Power-Down wakeup by T0 Demo -----*/
/* --- This Interrupt will borrow Timer 0 interrupt request bit TF0 and Timer 0 interrupt vector address ----*/
/* ---So Timer 0 function should be disabled when this Interrupt is enabled -----*/
/* --- The enable bit of this Interrupt is TO PIN IE / WAKE CLKO.4 in WAKE CLKO register -----*/
/* If you want to use the program or the program referenced in the -----*/
/* article, please specify in which data and procedures from STC -----*/
/*______*/
#include "reg51.h"
#include "intrins.h"
sfr WAKE CLKO = 0x8f;
//External interrupt0 service routine
void t0int() interrupt 1
                                   //T0 interrupt, interrupt 1 (location at 000BH)
void main()
                                   //enable P3.4/T0/INT falling edge wakeup MCU
       WAKE CLKO = 0x10;
                                   //from power-down mode
                                   //T0 PIN IE (WAKE CLKO.4) = 1
      //ET0 = 1:
                                   //enable T0 interrupt
                                   //open global interrupt switch
       EA = 1;
       while (1)
              T0 = 1;
                                   //ready read T0 port
                                   //check T0
              while (!T0);
              nop ();
              nop ();
                                   //MCU power down
              PCON = 0x02;
              nop ();
              _nop_();
              P1++;
       }
```

2. Assembly program

				-	by T0 Demo	
					t request bit TF0 and Timer 0 interrupt vector address	
					en this Interrupt is enabled	
					IE / WAKE_CLKO.4 in WAKE_CLKO register	
					n referenced in the	
					edures from STC	
						*/
		EQU 8FH				
,	t vector t					
	ORG	0000H				
	LJMP	MAIN				
	ORG	000BH			;T0 interrupt, interrupt 1 (location at 000BH)	
					, To interrupt, interrupt I (location at 000BH)	
;						
	ORG	0100H				
MAIN:						
	MOV	,			;initial SP	
	MOV	WAKE_	_CLKO,	#10H	;enable P3.4/T0/INT falling edge wakeup MCU	
		LJMP T0INT ORG 0100H MOV SP,#7FH MOV WAKE_CLKO, ;SETB ET0 SETB EA SETB T0			;from power-down mode	
	·SETR	ET0			;T0_PIN_IE (WAKE_CLKO.4) = 1 ;enable T0 interrupt	
					;open global interrupt switch	
LOOP:					, , , , , , , , , , , , , , , , , , ,	
	SETB	T0			;ready read T0 port	
	JNB	T0	,\$;check T0	
	NOP					
	NOP	DOOM	//00TT		NOV.	
	MOV	PCON,	#02H		;MCU power down	
	NOP NOP					
	CPL	P1.0				
	SJMP	LOOP				
;						
;T0 inter	rrupt serv	ice routine	e			
T0INT:						
	RETI					
,	END					

6.7.4 Programs of P3.5/T1 Interrupt(falling edge) used to wake up PD mode

1. C program

```
/*______*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU Power-Down wakeup by T1 Demo -----*/
/* ---This Interrupt will borrow Timer 1 interrupt request bit TF1 and Timer 1 interrupt vector address ----*/
/* ---So Timer 1 function should be disabled when this Interrupt is enabled -----*/
/* ---The enable bit of this Interrupt is T1 PIN IE / WAKE CLKO.5 in WAKE CLKO register ----*/
/* If you want to use the program or the program referenced in the -----*/
/* article, please specify in which data and procedures from STC -----*/
/*______*/
#include "reg51.h"
#include "intrins.h"
sfr
       WAKE CLKO = 0x8f;
//External interrupt0 service routine
void t1int() interrupt 3
                                   //T1 interrupt, interrupt 3 (location at 001BH)
void main()
       WAKE CLKO = 0x20;
                                   //enable P3.5/T1/INT falling edge wakeup MCU
                                   //from power-down mode
                                   //T1 PIN IE / WAKE CLKO.5 = 1
                                   //enable T1 interrupt
      //ET1 = 1;
                                   //open global interrupt switch
       EA = 1;
       while (1)
              T1 = 1;
                                   //ready read T1 port
                                   //check T1
              while (!T1);
              nop ();
              nop ();
              PCON = 0x02;
                                   //MCU power down
              nop ();
              nop ();
              P1++;
```

2. Assembly program

	STC MCU International Limited*/ STC 1T Series MCU Power-Down wakeup by T1 Demo*/												
					t request bit TF1 and Timer 1 interrupt vector address								
	/*So Timer 1 function should be disabled when this Interrupt is enabled*/ /*The enable bit of this Interrupt is T1_PIN_IE / WAKE_CLKO.5 in WAKE_CLKO register*/												
/*The	enable b	it of this In	terrupt is	T1_PIN_I	IE / WAKE_CLKO.5 in WAKE_CLKO register n referenced in the	*/ */							
/* II you	want to t	ise the prog	gram or t	ne program	edures from STC	*/ */							
					equies from STC								
,		EQU 8FH				/							
,	t vector ta	ible											
	ORG	0000Н											
	LJMP	MAIN											
	ORG	001BH			;T1 interrupt, interrupt 3 (location at 001BH)								
	LJMP	TIINT			, 11 merrupt, merrupt 3 (tocation at 001BH)								
;		010011											
MAIN:	ORG	0100H											
WIZ KITA.	MOV	SP,	#7FH		;initial SP								
	MOV	WAKE_	CLKO,	#20H	;enable P3.5/T1/INT falling edge wakeup MCU ;from power-down mode ;T1 PIN IE / WAKE CLKO.5 = 1								
	;SETB	ET1			;enable T1 interrupt								
	SETB	EA			open global interrupt switch								
LOOP:													
	SETB	T1	¢.		;ready read T1 port								
	JNB NOP	T1,	\$;check T1								
	NOP												
	MOV	PCON,	#02H		;MCU power down								
	NOP				-								
	NOP	D4 *											
	CPL	P1.0											
	SJMP	LOOP											
,		ce routine											
T1INT:	D.E.E.I												
•	RETI												
,	END												

6.7.5 Program of P3.0/RxD Interrupt(falling edge) used to wake up PD mode

1. C program

```
/*_______*/
/* --- STC MCU International Limited -----*
/* --- STC 1T Series MCU Power-Down wakeup by RxD Demo -----*/
/* ---This Interrupt will borrow RxD interrupt request bit RI and its interrupt vector address -----*/
/* ---So UART function should be disabled when this Interrupt is enabled -----*/
/* --- The enable bit of this Interrupt is RXD PIN IE / WAKE CLKO.6 in WAKE CLKO register -----*/
/* If you want to use the program or the program referenced in the -----*/
/* article, please specify in which data and procedures from STC -----*/
/*______*/
#include "reg51.h"
#include "intrins.h"
typedef unsigned char BYTE;
typedef unsigned int WORD;
/*Declare SFR associated with the RxD */
sfr WAKE CLKO = 0x8F;
void uart isr() interrupt 4 using 1
      if (RI)
             RI = 0;
void main()
                          //enable P3.0/RxD/INT falling edge wakeup MCU
       WAKE CLKO = 0x40;
                           //from power-down mode
                           //RxD PIN IE (WAKE CLKO.6) = 1
      ES = 1;
      EA = 1;
```

2. Assembly program

```
/*_______*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU Power-Down wakeup by RxD Demo -----*/
/* ---This Interrupt will borrow RxD interrupt request bit RI and its interrupt vector address -----*/
/* ---So UART function should be disabled when this Interrupt is enabled -----*/
/* --- The enable bit of this Interrupt is RXD PIN IE / WAKE CLKO.6 in WAKE CLKO register -----*/
/* If you want to use the program or the program referenced in the -----*/
/* article, please specify in which data and procedures from STC -----*/
/*_____*/
;/*Declare SFR associated with the RxD */
WAKE CLKO
            EOU
      ORG
            0000H
      LJMP
            MAIN
      ORG
            0023H
UART ISR:
      JBC
                                    ;clear RI flag
            RI,
                  EXIT
EXIT:
      RETI
```

MAIN:	ORG	0100H		
MAIN.	MOV	WAKE_CLKO,	#40H	;enable P3.0/RxD falling edge wakeup MCU ;from power-down mode ;RxD_PIN_IE (WAKE_CLKO.6) = 1
	SETB SETB	ES EA		, KAD_TIN_IE (WIKE_CERC.O)
LOOP:				
	SETB	RXD		;ready read RXD port
	JNB NOP	RXD, \$;check RXD
	NOP			
	MOV	PCON, #02H		;MCU power down
	NOP			
	NOP CPL	P1.0		
	SJMP	LOOP		
;				
	END			

6.7.6 Program of PCA Interrupt used to wake up Power Down mode

1. C program

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU Power-Down wakeup by PCA Demo -----*/
/* If you want to use the program or the program referenced in the -----*/
/* article, please specify in which data and procedures from STC -----*/
/*_____*/
#include "reg51.h"
#include "intrins.h"
typedef unsigned char BYTE;
typedef unsigned int WORD;
/*Declare SFR associated with the PCA */
        WAKE CLKO = 0x8F;
sfr
sfr
        CCON = 0xD8;
                                               //PCA control register
        CCF0
                                               //PCA module-0 interrupt flag
sbit
               = CCON^0:
shit
       CCF1
               = CCON^1:
                                               //PCA module-1 interrupt flag
       CR
               = CCON^6:
                                               //PCA timer run control bit
sbit
sbit
       CF
               = CCON^7;
                                               //PCA timer overflow flag
                                               //PCA mode register
sfr
        CMOD = 0xD9:
sfr
       CL
               = 0xE9;
                                               //PCA base timer LOW
sfr
        CH
               = 0xF9:
                                               //PCA base timer HIGH
sfr
       CCAPM0 = 0xDA:
                                               //PCA module-0 mode register
sfr
        CCAP0L = 0xEA;
                                               //PCA module-0 capture register LOW
                                               //PCA module-0 capture register HIGH
sfr
       CCAPOH = 0xFA:
sfr
                                               //PCA module-1 mode register
        CCAPM1 = 0xDB;
sfr
        CCAP1L = 0xEB;
                                               //PCA module-1 capture register LOW
sfr
                                               //PCA module-1 capture register HIGH
       CCAP1H = 0xFB;
                                               //PCA module-2 mode register
sfr
       CCAPM2= 0xDC:
                                               //PCA module-2 capture register LOW
sfr
        CCAP2L = 0xEC;
                                               //PCA module-2 capture register HIGH
sfr
       CCAP2H = 0xFC:
                                               //PCA module-3 mode register
sfr
       CCAPM3= 0xDD:
        CCAP3L = 0xED;
                                               //PCA module-3 capture register LOW
sfr
                                               //PCA module-3 capture register HIGH
sfr
        CCAP3H = 0xFD:
sfr
       PCAPWM0 = 0xF2:
sfr
        PCAPWM1 = 0xF3;
sfr
       PCAPWM2 = 0xF4;
sfr
       PCAPWM3 = 0xF5:
```

```
//PCA test LED
sbit
         PCA LED = P1^0;
         CCP0
sbit
                   = P3^7;
void PCA isr() interrupt 7 using 1
         CCF0 = 0;
                                              //Clear interrupt flag
         PCA LED = !PCA LED;
                                              //toggle the test pin while CCP0(P3.7) have a falling edge
void main()
         CCON = 0;
                                              //Initial PCA control register
                                              //PCA timer stop running
                                              //Clear CF flag
                                              //Clear all module interrupt flag
                                              //Reset PCA base timer
         CL = 0;
         CH = 0;
                                              //Set PCA timer clock source as Fosc/12
         CMOD = 0x00;
                                              //Disable PCA timer overflow interrupt
                                              //PCA module-0 capture by a negative tigger on CCP0(P3.7)
         CCAPM0 = 0x11;
                                              //and enable PCA interrupt
//
         CCAPM0 = 0x21;
                                              //PCA module-0 capture by a rising edge on CCP0(P3.7) and
                                              //enable PCA interrupt
//
         CCAPM0 = 0x31;
                                              //PCA module-0 capture by a transition (falling/rising edge)
                                              //on CCP0(P3.7) and enable PCA interrupt
         WAKE CLKO = 0x80;
                                              //enable PCA falling/raising edge wakeup MCU
                                              //from power-down mode
                                              //PCA timer start run
         CR = 1;
         EA = 1;
         while (1)
                  CCP0 = 1;
                                              //ready read CCP0 port
                  while (!CCP0);
                                              //check CCP0
                  nop ();
                  _nop_();
                  PCON = 0x02;
                                              //MCU power down
                  _nop_();
                  _nop_();
                  P2++;
         }
}
```

2 Assembly program

```
*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU Power-Down wakeup by PCA Demo -----*/
/* If you want to use the program or the program referenced in the -----*/
/* article, please specify in which data and procedures from STC -----*/
/*______*/
:/*Declare SFR associated with the PCA */
WAKE CLKO
               EOU
                      8FH
CCON
       EOU
               0D8H
                                      ;PCA control register
CCF0
       BIT
               CCON.0
                                     ;PCA module-0 interrupt flag
CCF1
       BIT
                                     ;PCA module-1 interrupt flag
               CCON.1
CR
       BIT
               CCON.6
                                     ;PCA timer run control bit
CF
       BIT
               CCON.7
                                     ;PCA timer overflow flag
CMOD EQU
               0D9H
                                     ;PCA mode register
CL
       EQU
               0E9H
                                     :PCA base timer LOW
                                     ;PCA base timer HIGH
СН
       EQU
               0F9H
CCAPM0
               EOU
                                     ;PCA module-0 mode register
                      0DAH
CCAP0L
               EOU
                      0EAH
                                      ;PCA module-0 capture register LOW
CCAP0H
               EQU
                      0FAH
                                      ;PCA module-0 capture register HIGH
CCAPM1
               EQU
                      0DBH
                                      ;PCA module-1 mode register
                                     ;PCA module-1 capture register LOW
CCAP1L
               EQU
                      0EBH
CCAP1H
               EQU
                      0FBH
                                      ;PCA module-1 capture register HIGH
                                     ;PCA module-2 mode register
CCAPM2
               EQU
                      0DCH
CCAP2L
               EQU
                      0ECH
                                     ;PCA module-2 capture register LOW
                                     ;PCA module-2 capture register HIGH
CCAP2H
               EQU
                      0FCH
                                      ;PCA module-3 mode register
CCAPM3
               EQU
                      0DDH
                                      ;PCA module-3 capture register LOW
CCAP3L
               EQU
                      0EDH
                                      ;PCA module-3 capture register HIGH
CCAP3H
               EQU
                      0FDH
PCA LED
               BIT
                      P1.1
                                      ;PCA test LED
CCP0
               BIT
                      P1.3
```

,	ORG LJMP	0000H MAIN		
	ORG	003BH		
PCA_IS	R:			
	CLR	CCF0		;Clear interrupt flag
	CPL	PCA_LED		;toggle the test pin while CCP0(P3.7) have a falling edge
	RETI			
;	ORG	0100H		
MAIN:	Ono	010011		
	MOV	CCON, #0		;Initial PCA control register
				;PCA timer stop running
				;Clear CF flag
				;Clear all module interrupt flag
	CLR	A		;
	MOV	CL, A		;Reset PCA base timer
	MOV	CH, A		;
	MOV	CMOD, #00H		;Set PCA timer clock source as Fosc/12
				;Disable PCA timer overflow interrupt
	MOV	CCAPM0,	#11H	;PCA module-0 capture by a falling edge on CCP0(P1.3)
				;and enable PCA interrupt
;	MOV	CCAPM0,	#21H	;PCA module-0 capture by a rising edge on CCP0(P1.3)
	MOM	CCAPMO	//2.111	;and enable PCA interrupt
,	MOV	CCAPM0,	#31H	;PCA module-0 capture by a transition (falling/rising edge)
				;on CCP0(P1.3) and enable PCA interrupt
	MOV	WAKE_CLKO,	#80H	;enable PCA falling/raising edge wakeup MCU from
		_ ,		;power-down mode
	SETB	CR		;PCA timer start run
	SETB	EA		
LOOP:				
LOOI.	SETB	CCP0		;ready read CCP0 port
	JNB	CCP0, \$;check CCP0
	NOP	СС1 0, Ф		, check CCI o
	NOP			
	MOV	PCON, #02H		;MCU power down
	NOP	· · · · · · · · · · · · · · · · ·		, <u>k</u>
	NOP			
	CPL	P1.0		
	SJMP	LOOP		
;				
	END			

Chapter 7. Timer/Counter 0/1

Timer 0 and timer 1 are like the ones in the conventional 8051, both of them can be individually configured as timers or event counters.

In the "Timer" function, the register is incremented every 12 system clocks or every system clock depending on AUXR.7(T0x12) bit and AUXR.6(T1x12). In the default state, it is fully the same as the conventional 8051. In the x12 mode, the count rate equals to the system clock.

In the "Counter" function, the register is incremented in response to a 1-to-0 transition at its corresponding external input pin, T0 or T1. In this function, the external input is sampled once at the positive edge of every clock cycle. When the samples show a high in one cycle and a low in the next cycle, the count is incremented. The new count value appears in the register during at the end of the cycle following the one in which the transition was detected. Since it takes 2 machine cycles (24 system clocks) to recognize a 1-to-0 transition, the maximum count rate is 1/24 of the system clock. There are no restrictions on the duty cycle of the external input signal, but to ensure that a given level is sampled at least once before it changes, it should be held for at least one full machine cycle.

In addition to the "Timer" or "Counter" selection, Timer 0 and Timer 1 have four operating modes from which to select. The "Timer" or "Counter" function is selected by control bits C/T in the Special Function Register TMOD. These two Timer/Counter have four operating modes, which are selected by bit-pairs (M1, M0) in TMOD. Modes 0, 1, and 2 are the same for both Timer/Counters. Mode 3 is different. The four operating modes are described in the following text.

7.1 Special Function Registers about Timer/Counter

Symbol	Description	Address	Bit Address and Symbol MSB LSB	Value after Power-on or Reset
TCON	Timer Control	88H	TF1 TR1 TF0 TR0 IE1 IT1 IE0 IT0	0000 0000B
TMOD	Timer Mode	89H	GATE C/T M1 M0 GATE C/T M1 M0	0000 0000B
TL0	Timer Low 0	8AH		0000 0000B
TL1	Timer Low 1	8BH		0000 0000B
TH0	Timer High 0	8CH		0000 0000B
TH1	Timer High 1	8DH		0000 0000B
AUXR	Auxiliary register	8EH	T0x12 T1x12 UART_M0x6 EADCI ESPI ELVDI	0000 00xxB
WAKE_CLKO	CLK_Output Power down Wake-up control register	8FH	PCAWAKEUP RXD_PIN_IE T1_PIN_IE T0_PIN_IE TICLKO T0CLKO	0000 xx00B

1. TCON register: Timer/Counter Control Register (Bit-Addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	В1	В0	
TCON	88H	name	TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0	

TF1: Timer/Counter 1 Overflow Flag. Set by hardware on Timer/Counter 1 overflow. The flag can be cleared by software but is automatically cleared by hardware when processor vectors to the Timer 1 interrupt routine.

If TF1 = 0, No Timer 1 overflow detected.

If TF1 = 1, Timer 1 has overflowed.

TR1: Timer/Counter 1 Run Control bit. Set/cleared by software to turn Timer/Counter on/off.

If TR1 = 0, Timer 1 disabled.

If TR1 = 1, Timer 1 enabled.

TF0: Timer/Counter 0 Overflow Flag. Set by hardware on Timer/Counter 0 overflow. The flag can be cleared by software but is automatically cleared by hardware when processor vectors to the Timer 0 interrupt routine.

If TF0 = 0, No Timer 0 overflow detected.

If TF0 = 1, Timer 0 has overflowed.

TR0: Timer/Counter 0 Run Control bit. Set/cleared by software to turn Timer/Counter on/off.

If TR0 = 0, Timer 0 disabled.

If TR0 = 1, Timer 0 enabled.

IE1: External Interrupt 1 Edge flag. Set by hardware when external interrupt edge/level defined by IT1 is detected. The flag can be cleared by software but is automatically cleared when the external interrupt 1 service routine has been processed.

IT1: External Intenupt 1 Type Select bit. Set/cleared by software to specify falling edge/low level triggered external interrupt 1.

If IT1 = 0, $\overline{INT1}$ is low level triggered.

If IT1 = 1, $\overline{INT1}$ is edge triggered.

IEO: External Interrupt 0 Edge flag. Set by hardware when external interrupt edge/level defined by ITO is detected. The flag can be cleared by software but is automatically cleared when the external interrupt 0 service routine has been processed.


ITO: External Intenupt 0 Type Select bit. Set/cleared by software to specify falling edge/low level triggered external interrupt 0.

If IT0 = 0, $\overline{INT0}$ is low level triggered.

If IT0 = 1, $\overline{INT0}$ is edge triggered.

2. TMOD register: Timer/Counter Mode Register

TMOD address: 89H (Non bit-addressable)



GATR/TMOD.7: Timer/Counter Gate Control.

If GATE/TMOD.7=0, Timer/Counter 1 enabled when TR1 is set irrespective of INT1 logic level; If GATE/TMOD.7=1, Timer/Counter 1 enabled only when TR1 is set AND INT1 pin is high.

C/T/TMOD.6: Timer/Counter 1 Select bit.

If $C/\overline{T}/TMOD.6=0$, Timer/Counter 1 is set for Timer operation (input from internal system clock); If $C/\overline{T}/TMOD.6=0$, Timer/Counter 1 is set for Counter operation (input from external T1 pin).

M1/TMOD.5 ~ M0/TMOD.4: Timer 1 Mode Select bits.

M1	M0	Operating Mode
0	0	Mode 0: 13-bit Timer/Counter for Timer 1
0	1	Mode 1: 16-bit Timer/Counter. TH1and TL1 are cascaded; there is no prescaler.
1	0	Mode 2: 8-bit auto-reload Timer/Counter. TH1 holds a value which is to be reloaded into TL1 each time it overflows.
1	1	Timer/Counter 1 stopped

GATR/TMOD.3: Timer/Counter Gate Control.

If GATE/TMOD.3=0,Timer/Counter 0 enabled when TR0 is set irrespective of INT0 logic level; If GATE/TMOD.3=1, Timer/Counter 0 enabled only when TR0 is set AND INT0 pin is high.

C/T/TMOD.2: Timer/Counter 0 Select bit.

If $C/\overline{T}/TMOD.2=0$, Timer/Counter 0 is set for Timer operation (input from internal system clock); If $C/\overline{T}/TMOD.2=0$, Timer/Counter 0 is set for Counter operation (input from external T0 pin).

M1/TMOD.1 ~ M0/TMOD.0: Timer 0 Mode Select bits.

M1	M0	Operating Mode
0	0	Mode 0: 13-bit Timer/Counter for Timer 0
0	1	Mode 1: 16-bit Timer/Counter. TH0 and TL0 are cascaded; there is no prescaler.
1	0	Mode 2: 8-bit auto-reload Timer/Counter. TH0 holds a value which is to be reloaded into TL0 each time it overflows.
1	1	Mode3: TL0 is an 8-bit Timer/Counter controlled by the standard Timer 0 control bits TH0 is an 8-bit timer only controlled by Timer 1 control bits.

3. AUXR: Auxiliary register (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
AUXR	8EH	name	T0x12	T1x12	UART_M0x6	EADCI	ESPI	ELVDI	-	-

T0x12: Timer 0 clock source bit.

0: The clock source of Timer 0 is SYSclk/12. It will compatible to the traditional 80C51 MCU

1 : The clock source of Timer 0 is SYSclk/1. It will drive the T0 faster than a traditional 80C51 MCU

T1x12: Timer 1 clock source bit

0 : The clock source of Timer 1 is SYSclk/12. It will compatible to the traditional 80C51 MCU

1 : The clock source of Timer 1 is SYSclk/1. It will drive the T0 faster than a traditional 80C51 MCU

UART M0x6: Baud rate select bit of UART1 while it is working under Mode-0

0 : The baud-rate of UART in mode 0 is SYSclk/12.

1 : The baud-rate of UART in mode 0 is SYSclk/2.

EADCI: Enable/Disable interrupt from A/D converter

0 : (default) Inhibit the ADC functional block to generate interrupt to the MCU

1 : Enable the ADC functional block to generate interrupt to the MCU

ESPI: Enable/Disable interrupt from Serial Peripheral Interface (SPI)

0 : (default)Inhibit the SPI functional block to generate interrupt to the MCU

1 : Enable the SPI functional block to generate interrupt to the MCU

ELVDI: Enable/Disable interrupt from low-voltage sensor

0 : (default)Inhibit the low-voltage sensor functional block to generate interrupt to the MCU

1 : Enable the low-voltage sensor functional block to generate interrupt to the MCU

4. WAKE CLKO: CLK Output Power down Wake-up control register (Non bit-Addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	В2	B1	В0
WAKE_CLKO	8FH	name	PCAWAKEUP	RXD_PIN_IE	T1_PIN_IE	T0_PIN_IE	-	-	T1CLKO	T0CLKO

PCAWAKEUP: When set and the associated-PCA interrupt control registers is configured correctly, the CEXn pin of PCA function is enabled to wake up MCU from power-down state.

RXD_PIN_IE: When set and the associated-UART interrupt control registers is configured correctly, the RXD pin (P3.0) is enabled to wake up MCU from power-down state.

T1_PIN_IE: When set and the associated-Timer1 interrupt control registers is configured correctly, the T1 pin (P3.5) is enabled to wake up MCU from power-down state.

T0_PIN_IE: When set and the associated-Timer0 interrupt control registers is configured correctly, the T1 pin (P3.4) is enabled to wake up MCU from power-down state.

T1CKLO: When set, P3.5 is enabled to be the clock output of Timer 1. The clock rate is Timer 1 overflow rate divided by 2.

T0CKLO: When set, P3.4 is enabled to be the clock output of Timer 0. The clock rate is Timer 0 overflow rate divided by 2.

7.2 Timer/Counter 0 Mode of Operation (Compatible with traditional 8051 MCU)

Timer/Counter 0 can be configured for four modes by setting M1(TMOD.1) and M0(TMOD.0) in sepcial function register TMOD.


7.2.1 Mode 0 (13-bit Timer/Counter)

Mode 0

In this mode, the timer 0 is configured as a 13-bit timer/counter. As the count rolls over from all 1s to all 0s, it sets the timer interrupt flag TF0. The counted input is enabled to the timer when TR0 = 1 and either GATE=0 or $\overline{INT0} = 1$. (Setting GATE = 1 allows the Timer to be controlled by external input $\overline{INT0}$, to facilitate pulse width measurements.) TR0 is a control bit in the Special Function Register TCON. GATE is in TMOD.

The 13-Bit register consists of all 8 bits of TH0 and the lower 5 bits of TL0. The upper 3 bits of TL0 are indeterminate and should be ignored. Setting the run flag (TR0) does not clear the registers.

There are two different GATE bits, one for Timer 1 (TMOD.7) and one for Timer 0 (TMOD.3).

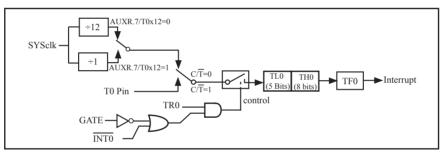


Timer/Counter 0 Mode 0: 13-Bit Timer/Counter

7.2.2 Mode 1 (16-bit Timer/Counter) and Demo Programs (C and ASM)

In this mode, the timer register is configured as a 16-bit register. As the count rolls over from all 1s to all 0s, it sets the timer interrupt flag TF0. The counted input is enabled to the timer when TR0 = 1 and either GATE=0 or $\overline{\text{INT0}} = 1$. (Setting GATE = 1 allows the Timer to be controlled by external input $\overline{\text{INT0}}$, to facilitate pulse width measurements.) TR0 is a control bit in the Special Function Register TCON. GATE is in TMOD.

The 16-Bit register consists of all 8 bits of TH0 and the lower 8 bits of TL0. Setting the run flag (TR0) does not clear the registers.

Mode 1 is the same as Mode 0, except that the timer register is being run with all 16 bits.

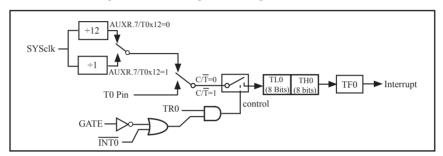

Timer/Counter 0 Mode 1: 16-Bit Timer/Counter

There are two simple programs that demostrates Timer 0 as 16-bit Timer/Counter, one written in C language while other in Assembly language.

C Program:

```
#ifdef MODE1T
#define T1MS
                                                         //1ms timer calculation method in 1T mode
                  (65536-FOSC/1000)
#else
#define T1MS
                                                         //1ms timer calculation method in 12T mode
                  (65536-FOSC/12/1000)
#endif
/* define SFR */
      AUXR
                                                         //Auxiliary register
sfr
                            0x8e;
                            P0^0;
                                                         //work LED, flash once per second
sbit
      TEST LED =
/* define variables */
WORD count:
                                                         //1000 times counter
/* Timer0 interrupt routine */
void tm0 isr() interrupt 1 using 1
         TL0 = T1MS;
                                                         //reload timer0 low byte
         TH0 = T1MS >> 8;
                                                         //reload timer0 high byte
         if (count--=0)
                                                         //1 \text{ms} * 1000 \rightarrow 1 \text{s}
         {
                  count = 1000;
                                                         //reset counter
                  TEST LED = ! TEST LED;
                                                         //work LED flash
}
/* main program */
void main()
#ifdef MODE1T
                                                         //timer0 work in 1T mode
         AUXR = 0x80;
#endif
                                                         //set timer0 as mode1 (16-bit)
         TMOD = 0x01;
                                                         //initial timer0 low byte
         TL0 = T1MS;
         TH0 = T1MS >> 8;
                                                         //initial timer0 high byte
                                                         //timer0 start running
         TR0 = 1;
         ET0 = 1;
                                                         //enable timer0 interrupt
                                                         //open global interrupt switch
         EA = 1;
         count = 0;
                                                         //initial counter
         while (1);
                                                         //loop
```

Assembly Program:


```
·/*_____*/
;/* --- STC MCU International Limited -----*/
:/* --- STC 1T Series 16-bit Timer Demo -----*/
:/* If you want to use the program or the program referenced in the */
:/* article, please specify in which data and procedures from STC */
•/*____*/
:/* define constants */
#define MODE1T
                           Timer clock mode, comment this line is 12T mode, uncomment is 1T mode
#ifdef MODE1T
T1MS
        EOU 0B800H
                             :1ms timer calculation method in 1T mode is (65536-18432000/1000)
#else
T1MS
        EQU 0FA00H
                             ;1ms timer calculation method in 12T mode is (65536-18432000/12/1000)
#endif
:/* define SFR */
        AUXR
                       DATA
                               8EH
                                               :Auxiliary register
                                               ;work LED, flash once per second
                               P1.0
        TEST LED
                       BIT
:/* define variables */
       COUNT
                       DATA
                                                ;1000 times counter (2 bytes)
                               20H
       ORG
               0000H
       LJMP
               MAIN
       ORG
               000BH
       LJMP
               TM0 ISR
;/* main program */
MAIN:
#ifdef MODE1T
       MOV
               AUXR, #80H
                                               ;timer0 work in 1T mode
#endif
       MOV
               TMOD, #01H
                                               ;set timer0 as mode1 (16-bit)
        MOV
               TL0,
                       #LOW T1MS
                                               ;initial timer0 low byte
       MOV
                       #HIGH T1MS
                                               ;initial timer0 high byte
               TH0,
       SETB
               TR0
                                               ;timer0 start running
                                               ;enable timer0 interrupt
       SETB
               ET0
       SETB
               EA
                                               open global interrupt switch
       CLR
               Α
        MOV
               COUNT, A
       MOV
               COUNT+1, A
                                                :initial counter
        SJMP
```

```
;/* Timer0 interrupt routine */
TM0 ISR:
        PUSH
                ACC
        PUSH
                PSW
        MOV
                TLO,
                                                        ;reload timer0 low byte
                        #LOW T1MS
        MOV
                                                        ;reload timer0 high byte
                TH0,
                        #HIGH T1MS
        MOV
                        COUNT
                A,
        ORL
                                                        ;check whether count(2byte) is equal to 0
                A,
                        COUNT+1
        JNZ
                SKIP
        MOV
                                                        ;1ms * 1000 -> 1s
                COUNT, #LOW 1000
        MOV
                COUNT+1,#HIGH 1000
        CPL
                TEST LED
                                                        ;work LED flash
SKIP:
        CLR
                \mathbf{C}
        MOV
                A,
                        COUNT
                                                        ;count--
        SUBB
                        #1
                A,
        MOV
                COUNT, A
        MOV
                        COUNT+1
                A,
        SUBB
                A,
                        #0
        MOV
                COUNT+1,A
        POP
                PSW
        POP
                ACC
        RETI
```

END

7.2.3 Mode 2 (8-bit Auto-Reload Mode) and Demo Programs (C and ASM)

Mode 2 configures the timer register as an 8-bit counter(TL0) with automatic reload. Overflow from TL0 not only set TF0, but also reload TL0 with the content of TH0, which is preset by software. The reload leaves TH0 unchanged.

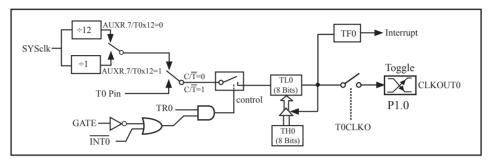

Timer/Counter 0 Mode 2: 8-Bit Auto-Reload

STC12C5620AD is able to generate a programmable clock output on P1.0. When T0CLKO/WAKE_CLKO.0 bit in WAKE_CLKO SFR is set, T0 timer overflow pulse will toggle P1.0 latch to generate a 50% duty clock. The frequency of clock-out = T0 overflow rate/2.

If $C/\overline{T}(TMOD.2) = 0$, Timer/Counter 0 is set for Timer operation (input from internal system clock), the Frequency of clock-out is as following:

If $C/\overline{T}(TMOD.2) = 1$, Timer/Counter 0 is set for Conter operation (input from external P3.4/T0 pin), the Frequency of clock-out is as following:

T0_Pin_CLK / (256-TH0) / 2

;T0 Interrupt (falling edge) Demo programs, where T0 operated in Mode 2 (8-bit auto-relaod mode) ; The Timer Interrupt can not wake up MCU from Power-Down mode in the following programs

1. C program

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU T0 (Falling edge) Demo -----*/
/* If you want to use the program or the program referenced in the --*/
/* article, please specify in which data and procedures from STC ---*/
/*____*/
#include "reg51.h"
sfr
       AUXR = 0x8e;
                                       //Auxiliary register
//T0 interrupt service routine
void t0int( ) interrupt 1
                                       //T0 interrupt (location at 000BH)
}
void main()
                                       //timer0 work in 1T mode
       AUXR = 0x80;
       TMOD = 0x06;
                                       //set timer0 as counter mode2 (8-bit auto-reload)
       TL0 = TH0 = 0xff;
                                       //fill with 0xff to count one time
       TR0 = 1;
                                       //timer0 start run
       ET0 = 1;
                                       //enable T0 interrupt
                                       //open global interrupt switch
       EA = 1;
       while (1);
```


2. Assembly program

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU T0(Falling edge) Demo -----*/
/* If you want to use the program or the program referenced in the */
/* article, please specify in which data and procedures from STC */
AUXR DATA 08EH
                                               ;Auxiliary register
•-----
;interrupt vector table
        ORG
               0000H
        LJMP
               MAIN
        ORG
                                               ;T0 interrupt (location at 000BH)
               000BH
       LJMP
               T0INT
        ORG
               0100H
MAIN:
        MOV
               SP,
                       #7FH
                                               ;initial SP
        MOV
               AUXR. #80H
                                               :timer0 work in 1T mode
        MOV
               TMOD, #06H
                                               ;set timer0 as counter mode2 (8-bit auto-reload)
        MOV
                       #0FFH
               A.
        MOV
                                               ;fill with 0xff to count one time
               TL0,
                       Α
        MOV
               TH0,
                       Α
        SETB
                                               ;timer0 start run
               TR0
        SETB
               ET0
                                               enable T0 interrupt
        SETB
               EA
                                               open global interrupt switch
        SJMP
               $
;T0 interrupt service routine
T0INT:
       RETI
       END
```

7.2.4 Mode 3 (Two 8-bit Timers/Couters)

Timer 1 in Mode 3 simply holds its count, the effect is the same as setting TR1 = 0. Timer 0 in Mode 3 established TL0 and TH0 as two separate 8-bit counters. TL0 use the Timer 0 control bits: C/\overline{T} , GATE, TR0, $\overline{INT0}$ and TF0. TH0 is locked into a timer function (counting machine cycles) and takes over the use of TR1 from Tmer 1. Thus, TH0 now controls the "Timer 1" interrupt.

Mode 3 is provided for applications requiring an extra 8-bit timer or counter. When Timer 0 is in Mode 3, Timer 1 can be turned on and off by switching it out of and into its own Mode 3, or can still be used by the serial port as a baud rate generator, or in fact, in any application not requiring an interrupt.

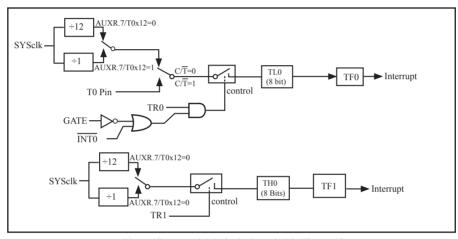

Timer/Counter 0 Mode 3: Two 8-Bit Timers/Counters


7.3 Timer/Counter 1 Mode of Operation

Timer/Counter 1 can be configured for three modes by setting M1(TMOD.5) and M0(TMOD.4) in sepcial function register TMOD.

7.3.1 Mode 0 (13-bit Timer/Counter)

In this mode, the timer register is configured as a 13-bit register. As the count rolls over from all 1s to all 0s, it sets the timer interrupt flag TF1. The counted input is enabled to the timer when TR1 = 1 and either GATE=0 or $\overline{INT1} = 1$. (Setting GATE = 1 allows the Timer to be controlled by external input $\overline{INT1}$, to facilitate pulse width measurements.) TR0 is a control bit in the Special Function Register TCON. GATE is in TMOD.

The 13-Bit register consists of all 8 bits of TH1 and the lower 5 bits of TL1. The upper 3 bits of TL1 are indeterminate and should be ignored. Setting the run flag (TR1) does not clear the registers.

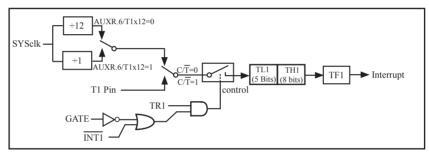


Timer/Counter 1 Mode 0: 13-Bit Timer/Counter

7.3.2 Mode 1 (16-bit Timer/Counter) and Demo Programs (C and ASM)

In this mode, the timer register is configured as a 16-bit register. As the count rolls over from all 1s to all 0s, it sets the timer interrupt flag TF1. The counted input is enabled to the timer when $\overline{TR1} = 1$ and either GATE=0 or $\overline{INT1} = 1$. (Setting GATE = 1 allows the Timer to be controlled by external input $\overline{INT1}$, to facilitate pulse width measurements.) TR1 is a control bit in the Special Function Register TCON. GATE is in TMOD.

The 16-Bit register consists of all 8 bits of THI and the lower 8 bits of TL1. Setting the run flag (TR1) does not clear the registers.

Mode 1 is the same as Mode 0, except that the timer register is being run with all 16 bits.

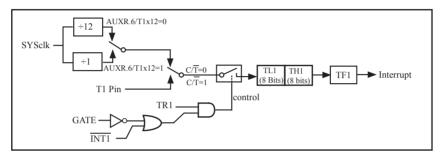

Timer/Counter 1 Mode 1: 16-Bit Timer/Counter

There are another two simple programs that demostrates Timer 1 as 16-bit Timer/Counter, one written in C language while other in Assembly language.

1. C Program

typedef unsigned int WORD;

```
/* define constants */
#define FOSC 18432000L
#define MODE1T
                            //Timer clock mode, comment this line is 12T mode, uncomment is 1T mode
#ifdef MODE1T
#define T1MS (65536-FOSC/1000)
                                            //1ms timer calculation method in 1T mode
#else
#define T1MS (65536-FOSC/12/1000)
                                           //1ms timer calculation method in 12T mode
#endif
/* define SFR */
      AUXR
                 = 0x8e:
                                            //Auxiliary register
sfr
     TEST LED = P0^0;
                                            //work LED, flash once per second
sbit
/* define variables */
WORD count;
                                            //1000 times counter
//-----
/* Timer0 interrupt routine */
void tm1 isr() interrupt 3 using 1
{
        TL1 = T1MS;
                                            //reload timer1 low byte
        TH1 = T1MS >> 8:
                                            //reload timer1 high byte
                                            //1ms * 1000 -> 1s
        if (count -- == 0)
                 count = 1000;
                                                    //reset counter
                 TEST LED = ! TEST LED;
                                                    //work LED flash
         }
}
//-----
/* main program */
void main()
#ifdef MODE1T
                                                     //timer1 work in 1T mode
        AUXR = 0x40;
#endif
        TMOD = 0x10;
                                                     //set timer1 as mode1 (16-bit)
                                                    //initial timer1 low byte
        TL1 = T1MS;
        TH1 = T1MS >> 8;
                                                     //initial timer1 high byte
                                                     //timer1 start running
        TR1 = 1;
        ET1 = 1;
                                                     //enable timer1 interrupt
                                                     //open global interrupt switch
        EA = 1;
        count = 0;
                                                     //initial counter
        while (1);
                                                     //loop
```

2. Assembly Program

```
:/*-----*/
:/* --- STC MCU International Limited -----*/
;/* --- STC 1T Series 16-bit Timer Demo -----*/
;/* If you want to use the program or the program referenced in the */
;/* article, please specify in which data and procedures from STC */
:/* define constants */
#define MODE1T
                             Timer clock mode, comment this line is 12T mode, uncomment is 1T mode
#ifdef MODE1T
T1MS
                0B800H
                                :1ms timer calculation method in 1T mode is (65536-18432000/1000)
       EOU
#else
T1MS
       EQU
                0FA00H
                                ;1ms timer calculation method in 12T mode is (65536-18432000/12/1000)
#endif
:/* define SFR */
AUXR
           DATA
                        8EH
                                                 ;Auxiliary register
                        P1.0
                                                 ;work LED, flash once per second
TEST LED BIT
:/* define variables */
COUNT
          DATA
                        20H
                                                 ;1000 times counter (2 bytes)
        ORG
                0000H
        LJMP
                MAIN
        ORG
                001BH
        LJMP
                TM1 ISR
;/* main program */
MAIN:
#ifdef MODE1T
                                                 ;timer1 work in 1T mode
        MOV
                AUXR, #40H
#endif
        MOV
                TMOD, #10H
                                                 ;set timer1 as mode1 (16-bit)
        MOV
                TL1,
                        #LOW T1MS
                                                 ;initial timer1 low byte
        MOV
                TH1.
                        #HIGH T1MS
                                                 ;initial timer1 high byte
        SETB
                TR1
                                                 :timer1 start running
        SETB
                                                 ;enable timer1 interrupt
                ET1
                                                 open global interrupt switch
        SETB
                EA
        CLR
        MOV
                COUNT, A
                COUNT+1,A
                                                 initial counter:
        MOV
        SJMP
                $
```


;/* Timer1 interrupt routine */ TM1 ISR: **PUSH** ACC **PUSH PSW** MOV TL1, #LOW T1MS ;reload timer1 low byte MOV TH1, ;reload timer1 high byte #HIGH T1MS MOV **COUNT** A, ORL ;check whether count(2byte) is equal to 0 COUNT+1 A, JNZ SKIP MOV ;1ms * 1000 -> 1s COUNT, #LOW 1000 MOV COUNT+1,#HIGH 1000 CPL TEST_LED ;work LED flash SKIP: CLR C MOV A, **COUNT** ;count--**SUBB** #1 MOV COUNT, A MOV COUNT+1 A, **SUBB** #0 A, MOV COUNT+1,A POP **PSW** POP ACC **RETI**

182

END

7.3.3 Mode 2 (8-bit Auto-Reload Mode) and Demo Programs (C and ASM)

Mode 2 configures the timer register as an 8-bit counter(TL1) with automatic reload. Overflow from TL1 not only set TFx, but also reload TL1 with the content of TH1, which is preset by software. The reload leaves TH1 unchanged.

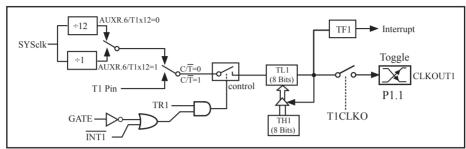

Timer/Counter 1 Mode 2: 8-Bit Auto-Reload

STC12C5620AD is able to generate a programmable clock output on P1.1. When T1CLKO/WAKE_CLKO.1 bit in WAKE_CLKO SFR is set, T1 timer overflow pulse will toggle P1.1 latch to generate a 50% duty clock. The frequency of clock-out = T1 overflow rate/2.

If $C/\overline{T}(TMOD.6) = 0$, Timer/Counter 1 is set for Timer operation (input from internal system clock), the Frequency of clock-out is as following:

If $C/\overline{T}(TMOD.6) = 1$, Timer/Counter 1 is set for Conter operation (input from external P3.5/T1 pin), the Frequency of clock-out is as following:

T1 Pin CLK / (256-TH1) / 2

;T1 Interrupt (falling edge) Demo programs, where T1 operated in Mode 2 (8-bit auto-relaod mode) ; The Timer Interrupt can not wake up MCU from Power-Down mode in the following programs

1. C program

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU T1(Falling edge) Demo -----*/
/* If you want to use the program or the program referenced in the */
/* article, please specify in which data and procedures from STC */
/*____*/
#include "reg51.h"
sfr AUXR = 0x8e;
                                               //Auxiliary register
//T1 interrupt service routine
void t1int( ) interrupt 3
                                                //T1 interrupt (location at 001BH)
}
void main()
        AUXR = 0x40;
                                        //timer1 work in 1T mode
                                       //set timer1 as counter mode2 (8-bit auto-reload)
       TMOD = 0x60;
       TL1 = TH1 = 0xff;
                                        //fill with 0xff to count one time
                                        //timer1 start run
       TR1 = 1;
        ET1 = 1;
                                       //enable T1 interrupt
        EA = 1;
                                        //open global interrupt switch
        while (1);
```

2. Assembly program

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU T1(Falling edge) Demo -----*/
/* If you want to use the program or the program referenced in the */
/* article, please specify in which data and procedures from STC */
/*____*/
AUXR DATA 08EH
                                     ;Auxiliary register
;interrupt vector table
       ORG
               0000H
       LJMP
               MAIN
       ORG
               001BH
                                      ;T1 interrupt (location at 001BH)
       LJMP
               T1INT
       ORG
               0100H
MAIN:
       MOV
               SP,
                      #7FH
                                      ;initial SP
       MOV
               AUXR. #40H
                                      ;timer1 work in 1T mode
       MOV
               TMOD, #60H
                                      ;set timer1 as counter mode2 (8-bit auto-reload)
       MOV
                      #0FFH
               A,
       MOV
               TL1,
                      Α
                                      ;fill with 0xff to count one time
       MOV
               TH1,
       SETB
               TR1
                                      ;timer1 start run
       SETB
               ET1
                                      ;enable T1 interrupt
                                      ;open global interrupt switch
       SETB
               EA
       SJMP
               $
;T1 interrupt service routine
T1INT:
       RETI
       END
```

7.4 Programmable Clock Output and Demo Programs (C and ASM)

STC12C5620AD series MCU have two channel programmable clock outputs, they are Timer 0 programmable clock output CLKOUT0(P1.0) and Timer 1 programmable clock output CLKOUT1(P1.1).

There are some SFRs about programmable clock output as shown below.

Symbol	Description	Address	Bit Address and Symbol	Value after Power-on or
			MSB LSB	Reset
AUXR	Auxiliary register	8EH	T0x12 T1x12 UART_M0x6 EADCI ESPI ELVDI	0000 00xxB
WAKE_CLKO	CLK_Output Power down Wake-up control register	8FH	PCAWAKEUP RXD_PIN_IE T1_PIN_IE T0_PIN_IE T1CLKO T0CLKO	0000 xx00B

The satement (used in C language) of Special function registers AUXR/WAKE CLKO:

sfr AUXR = 0x8E; //The address statement of Special function register AUXR

sfr WAKE CLKO = 0x8F; //The address statement of SFR WAKE CLKO

The satement (used in Assembly language) of Special function registers AUXR/WAKE CLKO:

AUXR EQU 0x8E ;The address statement of Special function register AUXR

WAKE CLKO EQU 0x8F ;The address statement of SFR WAKE CLKO

1. AUXR: Auxiliary register (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
AUXR	8EH	name	T0x12	T1x12	UART M0x6	EADCI	ESPI	ELVDI	-	-

T0x12: Timer 0 clock source bit.

0 : The clock source of Timer 0 is SYSclk/12. It will compatible to the traditional 80C51 MCU

1 : The clock source of Timer 0 is SYSclk/1. It will drive the T0 faster than a traditional 80C51 MCU

T1x12: Timer 1 clock source bit

0: The clock source of Timer 1 is SYSclk/12. It will compatible to the traditional 80C51 MCU

1 : The clock source of Timer 1 is SYSclk/1. It will drive the T0 faster than a traditional 80C51 MCU

UART M0x6: Baud rate select bit of UART1 while it is working under Mode-0

0 : The baud-rate of UART in mode 0 is SYSclk/12.

1 : The baud-rate of UART in mode 0 is SYSclk/2.

UART M0x6: Baud rate select bit of UART1 while it is working under Mode-0

0 : The baud-rate of UART in mode 0 is SYSclk/12.

1 : The baud-rate of UART in mode 0 is SYSclk/2.

EADCI: Enable/Disable interrupt from A/D converter

0 : (default) Inhibit the ADC functional block to generate interrupt to the MCU

1 : Enable the ADC functional block to generate interrupt to the MCU

ESPI: Enable/Disable interrupt from Serial Peripheral Interface (SPI)

0 : (default)Inhibit the SPI functional block to generate interrupt to the MCU

1 : Enable the SPI functional block to generate interrupt to the MCU

ELVDI: Enable/Disable interrupt from low-voltage sensor

0 : (default)Inhibit the low-voltage sensor functional block to generate interrupt to the MCU


 $1\ :$ Enable the low-voltage sensor functional block to generate interrupt to the MCU

2. WAKE_CLKO: CLK_Output Power down Wake-up control register (Non bit-Addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
WAKE_CLKO	8FH	name	PCAWAKEUP	RXD_PIN_IE	T1_PIN_IE	T0_PIN_IE	-	-	T1CLKO	T0CLKO

- PCAWAKEUP: When set and the associated-PCA interrupt control registers is configured correctly, the CEXn pin of PCA function is enabled to wake up MCU from power-down state.
- RXD_PIN_IE: When set and the associated-UART interrupt control registers is configured correctly, the RXD pin (P3.0) is enabled to wake up MCU from power-down state.
- T1_PIN_IE: When set and the associated-Timer1 interrupt control registers is configured correctly, the T1 pin (P3.5) is enabled to wake up MCU from power-down state.
- T0_PIN_IE: When set and the associated-Timer0 interrupt control registers is configured correctly, the T1 pin (P3.4) is enabled to wake up MCU from power-down state.
- LVD_WAKE: When set and the associated-LVD interrupt control registers is configured correctly, the CMPIN pin is enabled to wake up MCU from power-down state.
- T1CKLO: When set, P3.5 is enabled to be the clock output of Timer 1. The clock rate is Timer 1 overflow rate divided by 2.
- T0CKLO: When set, P3.4 is enabled to be the clock output of Timer 0. The clock rate is Timer 0 overflow rate divided by 2.

7.4.1 Timer 0 Programmable Clock-out on P1.0 and Demo Program(C and ASM)

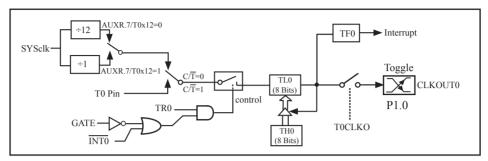

Timer/Counter 0 Mode 2: 8-Bit Auto-Reload

STC12C5620AD is able to generate a programmable clock output on P1.0. When T0CLKO/WAKE_CLKO.0 bit in WAKE_CLKO SFR is set, T0 timer overflow pulse will toggle P1.0 latch to generate a 50% duty clock. The frequency of clock-out = T0 overflow rate/2.

If $C/\overline{T}(TMOD.2) = 0$, Timer/Counter 0 is set for Timer operation (input from internal system clock), the Frequency of clock-out is as following:

```
(SYSclk) / (256 – TH0) / 2, when AUXR.7 / T0x12=1
or (SYSclk / 12) / (256 – TH0) / 2, when AUXR.7 / T0x12=0
```

If C/\overline{T} (TMOD.2) = 1, Timer/Counter 0 is set for Conter operation (input from external P3.4/T0 pin), the Frequency of clock-out is as following:

```
T0 Pin CLK / (256-TH0) / 2
```

The following programs demostrate Program Clock Output on P1.0 pin when Timer 0 operates as 8-bit autoreload Timer/Counter.

1. C Program:

```
#ifdef
        MODE 1T
#define
        F38 4KHz
                          (256-FOSC/2/38400)
                                                    //38.4KHz frequency calculation method of 1T mode
#else
#define
       F38 4KHz
                          (256-FOSC/2/12/38400)
                                                    //38.4KHz frequency calculation method of 12T mode
#endif
/* define SFR */
sfr
        AUXR
                          = 0x8e:
                                           //Auxiliary register
sfr
                                           //wakeup and clock output control register
         WAKE CLKO
                         = 0x8f:
        T0CLKO
                          = P1^0:
                                           //timer0 clock output pin
sbit
//-----
/* main program */
void main()
#ifdef MODE1T
        AUXR
                 = 0x80;
                                           //timer0 work in 1T mode
#endif
        TMOD = 0x02;
                                           //set timer0 as mode2 (8-bit auto-reload)
                 = F38 4KHz;
                                           //initial timer0
        TL0
        TH0
                 = F38 4KHz;
                                           //initial timer0
        TR0
                 = 1;
                                           //timer0 start running
         WAKE CLKO = 0x01;
                                           //enable timer0 clock output
         while (1);
                                           //loop
```

2. Assembly Program:


```
;/* --- STC MCU International Limited ------*/
;/* --- STC 1T Series Programmable Clock Output Demo -----*/
;/* If you want to use the program or the program referenced in the */
;/* article, please specify in which data and procedures from STC */
;/*------*/
;/* define constants */
#define MODE 1T :Timer clock mode, comment this line is 12T mode, uncomment is 1T mode
```

·/*____*/

```
#ifdef
        MODE 1T
                           ;38.4KHz frequency calculation method of 1T mode is (256-18432000/2/38400)
F38 4KHz EQU
                010H
#else
F38 4KHz EOU 0ECH
                           ;38.4KHz frequency calculation method of 12T mode (256-18432000/2/12/38400)
#endif
:/* define SFR */
AUXR
                DATA
                         08EH
                                                  ;Auxiliary register
WAKE CLKO
                DATA
                         08FH
                                                  ;wakeup and clock output control register
                                                  ;timer0 clock output pin
T0CLKO
                BIT
                         P1.0
        ORG
                0000H
        LJMP
                MAIN
;/* main program */
MAIN:
#ifdef MODE1T
        MOV
                AUXR, #80H
                                                  ;timer0 work in 1T mode
#endif
        MOV
                                                  ;set timer0 as mode2 (8-bit auto-reload)
                TMOD, #02H
        MOV
                         #F38 4KHz
                                                  ;initial timer0
                TL0,
        MOV
                         #F38 4KHz
                                                  ;initial timer0
                TH0,
        SETB
                TR0
        MOV
                WAKE_CLKO,
                                 #01H
                                                  ;enable timer0 clock output
        SJMP
        END
```

190

7.4.2 Timer 1 Programmable Clock-out on P1.1 and Demo Program(C and ASM)

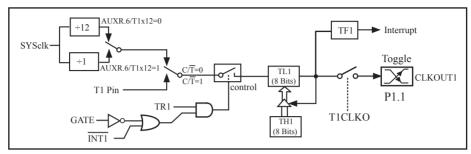

Timer/Counter 1 Mode 2: 8-Bit Auto-Reload

STC12C5620AD is able to generate a programmable clock output on P1.1. When T1CLKO/WAKE_CLKO.1 bit in WAKE_CLKO SFR is set, T1 timer overflow pulse will toggle P1.1 latch to generate a 50% duty clock. The frequency of clock-out = T1 overflow rate/2.

If $C/\overline{T}(TMOD.6) = 0$, Timer/Counter 1 is set for Timer operation (input from internal system clock), the Frequency of clock-out is as following:

```
(SYSclk) / (256 - TH1) / 2, when AUXR.6 / T0x12=1 or (SYSclk / 12) / (256 - TH1) / 2, when AUXR.6 / T0x12=0
```

If $C/\overline{T}(TMOD.6) = 1$, Timer/Counter 1 is set for Conter operation (input from external P3.5/T1 pin), the Frequency of clock-out is as following:

The following programs demostrate Program Clock Output on Timer 1 pin when Timer 1 operates as 8-bit auto-reload Timer/Counter.

1. C Program:

/*	-*/
/* STC MCU International Limited	-*/
/* STC 1T Series Programmable Clock Output Demo	.*/
/* If you want to use the program or the program referenced in the	*
/* article, please specify in which data and procedures from STC	*/
/*	-*/
#include "reg51.h"	
//	

```
/* define constants */
#define FOSC
                  18432000L
//#define MODE
                 1T
                                //Timer clock mode, comment this line is 12T mode, uncomment is 1T mode
#ifdef
        MODE 1T
                                                     //38.4KHz frequency calculation method of 1T mode
#define F38 4KHz
                           (256-FOSC/2/38400)
#else
#define
        F38 4KHz
                           (256-FOSC/2/12/38400)
                                                     //38.4KHz frequency calculation method of 12T mode
#endif
/* define SFR */
sfr AUXR
                   = 0x8e;
                                   //Auxiliary register
sfr WAKE CLKO = 0x8f;
                                   //wakeup and clock output control register
sbit T1CLKO
                  = P1^1;
                                   //timer1 clock output pin
/* main program */
void main()
#ifdef MODE1T
        AUXR =
                           0x40;
                                                               //timer1 work in 1T mode
#endif
        TMOD =
                           0x20:
                                                               //set timer1 as mode2 (8-bit auto-reload)
        TL1
                 =
                           F38 4KHz;
                                                               //initial timer1
        TH1
                           F38 4KHz;
                                                               //initial timer1
         TR1
                                                               //timer1 start running
                           1;
         WAKE CLKO =
                          0x02;
                                                               //enable timer1 clock output
         while (1);
                                                              //loop
```

2. Assembly Program:

```
·/*____*/
;/* --- STC MCU International Limited -----*/
:/* --- STC 1T Series Programmable Clock Output Demo -----*/
;/* If you want to use the program or the program referenced in the */
;/* article, please specify in which data and procedures from STC */
:/*_____*/
:/* define constants */
#define MODE 1T
                          Timer clock mode, comment this line is 12T mode, uncomment is 1T mode
#ifdef
       MODE 1T
F38 4KHz EQU 010H
                       ;38.4KHz frequency calculation method of 1T mode is (256-18432000/2/38400)
#else
                       ;38.4KHz frequency calculation method of 12T mode (256-18432000/2/12/38400)
F38 4KHz EQU 0ECH
#endif
:/* define SFR */
AUXR
              DATA
                      08EH
                                     ;Auxiliary register
WAKE CLKO
              DATA
                      08FH
                                     ;wakeup and clock output control register
                                     ;timer1 clock output pin
T1CLKO
              BIT
                      P1.1
·-----
       ORG
              0000H
       LJMP MAIN
:-----
;/* main program */
MAIN:
#ifdef MODE1T
       MOV
              AUXR, #40H
                                            :timer1 work in 1T mode
#endif
       MOV
              TMOD, #20H
                                            ;set timer1 as mode2 (8-bit auto-reload)
       MOV
                      #F38 4KHz
                                            ;initial timer1
              TL1,
       MOV
              TH1.
                      #F38 4KHz
                                            :initial timer1
       SETB
              TR1
       MOV
               WAKE CLKO,
                             #02H
                                            ;enable timer1 clock output
       SJMP
              $
       END
```

7.5 Application note for Timer in practice

(1) Real-time Timer

Timer/Counter start running, When the Timer/Counter is overflow, the interrupt request generated, this action handle by the hardware automatically, however, the process which from propose interrupt request to respond interrupt request requires a certain amount of time, and that the delay interrupt request on-site with the environment varies, it normally takes three machine cycles of delay, which will bring real-time processing bias. In most occasions, this error can be ignored, but for some real-time processing applications, which require compensation.

Such as the interrupt response delay, for timer mode 0 and mode 1, there are two meanings: the first, because of the interrupt response time delay of real-time processing error; the second, if you require multiple consecutive timing, due to interruption response delay, resulting in the interrupt service program once again sets the count value is delayed by several count cycle.

If you choose to use Timer/Counter mode 1 to set the system clock, these reasons will produce real-time error for this situation, you should use dynamic compensation approach to reducing error in the system clock, compensation method can refer to the following example program.

CLR	EA		;disable interrupt
MOV	A,	TLx	;read TLx
ADD	A,	#LOW	;LOW is low byte of compensation value
MOV	TLx,	A	;update TLx
MOV	A,	THx	;read THx
ADDC	A,	#HIGH	;HIGH is high byte of compensation value
MOV	THx,	A	;update THx
SETB	EA		;enable interrupt

(2) Dynamic read counts

When dynamic read running timer count value, if you do not pay attention to could be wrong, this is because it is not possible at the same time read the value of the TLx and THx. For example the first reading TLx then THx, because the timer is running, after reading TLx, TLx carry on the THx produced, resulting in error; Similarly, after the first reading of THx then TLx, also have the same problems.

A kind of way avoid reading wrong is first reading THx then TLx and read THx once more, if the THx twice to read the same value, then the read value is correct, otherwise repeat the above process. Realization method reference to the following example code.

```
RDTM: MOV
                                                   save THx to ACC
                         THx
                 A,
        MOV
                 R0.
                         TLx
                                                   ;save TLx to R0
        CINE
                 A,
                         THx.
                                  RDTM
                                                   ;read THx again and compare with the previous value
        MOV
                R1,
                                                   :save THx to R1
                         Α
```

Chapter 8. UART with Enhanced Function

The serial port is full duplex, meaning it can transmit and receive simultaneously. It is also receive-buffered, meaning it can commence reception of a second byte before a previously received byte has been read from the receive register. (However, if the first byte still hasn't been read by the time reception of the second byte is complete, one of the bytes will be lost). The serial port receive and transmit share the same SFR – SBUF, but actually there is two SBUF in the chip, one is for transmit and the other is for receive.

The serial port(UART) can be operated in 4 different modes: Mode 0 provides synchronous communication while Modes 1, 2, and 3 provide asynchronous communication. The asynchronous communication operates as a full-duplex Universal Asynchronous Receiver and Transmitter (UART), which can transmit and receive simultaneously and at different baud rates.

Serial communication involves the transimission of bits of data through only one communication line. The data are transimitted bit by bit in either synchronous or asynchronous format. Synchronous serial communication transmits ont whole block of characters in syschronization with a reference clock while asynchronous serial communication randomly transmits one character at any time, independent of any clock.

8.1 Special Function Registers about UART

Symbol	Description	Address	Bit Address and Symbol MSB LSB	Value after Power-on or Reset
AUXR	Auxiliary register	8EH	T0x12 T1x12 UART_M0x6 EADCI ESPI ELVDI - -	0000 00xxB
SCON	Serial Control	98H	SM0/FE SM1 SM2 REN TB8 RB8 TI RI	0000 0000B
SBUF	Serial Buffer	99H		xxxx xxxxB
PCON	Power Control	87H	SMOD SMODO LVDF POF GF1 GF0 PD IDL	0011 0000B
IE	Interrupt Enable	A8H	EA EPCA_LVD EADC_SPI ES ET1 EX1 ET0 EX0	0000 0000B
IP	Interrupt Priority Low	В8Н	- PPCA_LVD PADC_LVD PS PT1 PX1 PT0 PX0	x000 0000B
IPH	Interrupt Priority High	В7Н	- PPCA_LVDH PADC_LVDH PSH PT1H PX1H PT0H PX0H	x000 0000B
SADEN	Slave Address Mask	В9Н		0000 0000B
SADDR	Slave Address	А9Н		0000 0000B
WAKE_CLKO	CLK_Output Power down Wake-up control register	8FH	PCAWAKEUP RXD_PIN_IE T1_PIN_IE T0_PIN_IE - T1CLKO T0CLKO	0000 xx00B

1. Serial Port 1 (UART1) Control Register: SCON and PCON

Serial port 1 of STC12C5620AD series has two control registers: Serial port control register (SCON) and PCON which used to select Baud-Rate

SCON: Serial port Control Register (Bit-Addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	В1	В0
SCON	98H	name	SM0/FE	SM1	SM2	REN	TB8	RB8	TI	RI

FE: Framing Error bit. The SMOD0 bit must be set to enable access to the FE bit

0: The FE bit is not cleared by valid frames but should be cleared by software.

1: This bit set by the receiver when an invalid stop bit id detected.

SM0,SM1: Serial Port Mode Bit 0/1.

SM0	SM1	Description	Baud rate
0	0	8-bit shift register	SYSclk/12
0	1	8-bit UART	variable
1	0	9-bit UART	SYSclk/64 or SYSclk/32(SMOD=1)
1	1	9-bit UART	variable

SM2: Enable the automatic address recognition feature in mode 2 and 3. If SM2=1, RI will not be set unless the received 9th data bit is 1, indicating an address, and the received byte is a Given or Broadcast address. In mode1, if SM2=1 then RI will not be set unless a valid stop Bit was received, and the received byte is a Given or Broadcast address. In mode 0, SM2 should be 0.

REN: When set enables serial reception.

TB8: The 9th data bit which will be transmitted in mode 2 and 3.

RB8: In mode 2 and 3, the received 9th data bit will go into this bit.

TI: Transmit interrupt flag. Set by hardware when a byte of data has been transmitted by UART0 (after the 8th bit in 8-bit UART Mode, or at the beginning of the STOP bit in 9-bit UART Mode). When the UART0 interrupt is enabled, setting this bit causes the CPU to vector to the UART0 interrupt service routine. This bit must be cleared manually by software.

RI: Receive interrupt flag. Set to '1' by hardware when a byte of data has been received by UART0 (set at the STOP bit sam-pling time). When the UART0 interrupt is enabled, setting this bit to '1' causes the CPU to vector to the UART0 interrupt service routine. This bit must be cleared manually by software.

SMOD/PCON.7 in PCON register can be used to set whether the baud rates of mode 1, mode2 and mode 3 are doubled or not.

PCON: Power Control register (Non bit-addressable)

SFR name	Address	bit	В7	В6	B5	B4	В3	B2	B1	В0
PCON	87H	name	SMOD	SMOD0	LVDF	POF	GF1	GF0	PD	IDL

SMOD: double Baud rate control bit.

0: Disable double Baud rate of the UART.

1 : Enable double Baud rate of the UART in mode 1,2,or 3.

SMOD0: Frame Error select.

0 · SCON 7 is SM0 function

1: SCON.7 is FE function. Note that FE will be set after a frame error regardless of the state of SMOD0.

2. SBUF: Serial port 1 Data Buffer register (Non bit-addressable)

SFR name	Address	bit	В7	В6	B5	B4	В3	B2	B1	В0
SBUF	99H	name								

It is used as the buffer register in transmission and reception. The serial port buffer register (SBUF) is really two buffers. Writing to SBUF loads data to be transmitted, and reading SBUF accesses received data. These are two separate and distinct registers, the transimit write-only register, and the receive read-only register.

3. AUXR: Auxiliary register (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
AUXR	8EH	name	T0x12	T1x12	UART_M0x6	EADCI	ESPI	ELVDI	-	-

T0x12: Timer 0 clock source bit.

0 : The clock source of Timer 0 is SYSclk/12. It will compatible to the traditional 80C51 MCU

1 : The clock source of Timer 0 is SYSclk/1. It will drive the T0 faster than a traditional 80C51 MCU

T1x12: Timer 1 clock source bit.

0 : The clock source of Timer 1 is SYSclk/12. It will compatible to the traditional 80C51 MCU

1 : The clock source of Timer 1 is SYSclk/1. It will drive the T0 faster than a traditional 80C51 MCU

UART M0x6: Baud rate select bit of UART1 while it is working under Mode-0

0 : The baud-rate of UART in mode 0 is SYSclk/12.

1 : The baud-rate of UART in mode 0 is SYSclk/2.

EADCI: Enable/Disable interrupt from A/D converter

0 : (default) Inhibit the ADC functional block to generate interrupt to the MCU

1 : Enable the ADC functional block to generate interrupt to the MCU

ESPI: Enable/Disable interrupt from Serial Peripheral Interface (SPI)

0 : (default)Inhibit the SPI functional block to generate interrupt to the MCU

1 : Enable the SPI functional block to generate interrupt to the MCU

ELVDI: Enable/Disable interrupt from low-voltage sensor

0 : (default)Inhibit the low-voltage sensor functional block to generate interrupt to the MCU

1 : Enable the low-voltage sensor functional block to generate interrupt to the MCU

4. Slave Address Control registers SADEN and SADDR

SADEN: Slave Address Mask register

SADDR: Slave Address register

SADDR register is combined with SADEN register to form Given/Broadcast Address for automatic address recognition. In fact, SADEN function as the "mask" register for SADDR register. The following is the example for it

SADDR = 1100 0000
SADEN = 1111 1101

Given = 1100 00x0

The Given slave address will be checked except bit 1 is treated as "don't care".

The Broadcast Address for each slave is created by taking the logical OR of SADDR and SADEN. Zero in this result is considered as "don't care" and a Broad cast Address of all " don't care". This disables the automatic address detection feature.

5. Power down wake-up register: WAKE CLKO (Non bit-Addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
WAKE_CLKO	8FH	name	PCAWAKEUP	RXD_PIN_IE	T1_PIN_IE	T0_PIN_IE	-	-	T1CKLO	T0CKLO

PCAWAKEUP: When set and the associated-PCA interrupt control registers is configured correctly, the CEXn pin of PCA function is enabled to wake up MCU from power-down state.

RXD_PIN_IE: When set and the associated-UART interrupt control registers is configured correctly, the RXD pin (P3.0) is enabled to wake up MCU from power-down state.

T1_PIN_IE: When set and the associated-Timer1 interrupt control registers is configured correctly, the T1 pin (P3.5) is enabled to wake up MCU from power-down state.

T0_PIN_IE: When set and the associated-Timer0 interrupt control registers is configured correctly, the T1 pin (P3.4) is enabled to wake up MCU from power-down state.

T1CKLO: When set, P3.5 is enabled to be the clock output of Timer 1. The clock rate is Timer 1 overflow rate divided by 2.

T0CKLO: When set, P3.4 is enabled to be the clock output of Timer 0. The clock rate is Timer 0 overflow rate divided by 2.

6. Registers related with UART1 interrupt: IE, IP and IPH

IE: Interrupt Enable Rsgister (Bit-addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
IE	A8H	name	EA	EPCA LVD	EADC SPI	ES	ET1	EX1	ET0	EX0

EA: disables all interrupts.

If EA = 0,no interrupt will be acknowledged.

If EA = 1, each interrupt source is individually enabled or disabled by setting or clearing its enable bit.

ES: Serial port 1(UART1) interrupt enable bit.

If ES = 0, Serial port (UART) interrupt will be diabled.

If ES = 1, Serial port (UART) interrupt is enabled.0

IPH: Interrupt Priority High Register (Non bit-addressable)

S	FR name	Address	bit	В7	В6	В5	B4	В3	В2	В1	В0
	IPH	В7Н	name	-	PPCA_LVDH	PADC_SPIH	PSH	PT1H	PX1H	РТ0Н	PX0H

IP: Interrupt Priority Register (Bit-addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
IP	B8H	name	-	PPCA_LVD	PADC_SPI	PS	PT1	PX1	PT0	PX0

PSH, PS: Serial Port (UART) interrupt priority control bits.

if PSH=0 and PS=0, UART interrupt is assigned lowest priority (priority 0).

if PSH=0 and PS=1, UART interrupt is assigned lower priority (priority 1).

if PSH=1 and PS=0, UART interrupt is assigned higher priority (priority 2).

if PSH=1 and PS=1, UART interrupt is assigned highest priority (priority 3).

8.2 UART1 Operation Modes

The serial port 1 (UART) can be operated in 4 different modes which are configured by setting SM0 and SM1 in SFR SCON. Mode 1, Mode 2 and Mode 3 are asynchronous communication. In Mode 0, UART1 is used as a simple shift register.

8.2.1 Mode 0: 8-Bit Shift Register

Mode 0, selected by writing 0s into bits SM1 and SM0 of SCON, puts the serial port into 8-bit shift register mode. Serial data enters and exits through RXD. TXD outputs the shift clock. Eight data bits are transmitted/received with the least-significant (LSB) first. The baud rate is fixed at 1/12 the System clock cycle in the default state. If AUXR.5(UART M0x6) is set, the baud rate is 1/2 System clock cycle.


Transmission is initiated by any instruction that uses SBUF as a destination register. The "write to SBUF" signal also loads a "1" into the 9th position of the transmit shift register and tells the TX Control block to commence a transmission. The internal timing is such that one full system clock cycle will elapse between "write to SBUF," and activation of SEND.


SEND transfers the output of the shift register to the alternate output function line of P3.0, and also transfers Shift Clock to the alternate output function line of P3.1. At the falling edge of the Shift Clock, the contents of the shift register are shifted one position to the right.

As data bits shift out to the right, "0" come in from the left. When the MSB of the data byte is at the output position of the shift register, then the "1" that was initially loaded into the 9th position is just to the left of the MSB, and all positions to the left of that contains zeroes. This condition flags the TX Control block to do one last shift and then deactivate SEND and set TI. Both of these actions occur after "write to SBUF".

Reception is initiated by the condition REN=1 and RI=0. After that, the RX Control unit writes the bits 11111110 to the receive shift register, and in the next clock phase activates RECEIVE. RECEIVE enables SHIFT CLOCK to the alternate output function line of P3.1.At RECEIVE is active, the contents of the receive shift register are shifted to the left one position. The value that comes in from the right is the value that was sampled at the P3.0 pin the rising edge of Shift clock.

As data bits come in from the right, "1"s shift out to the left. When the "0" that was initially loaded into the right-most position arrives at the left-most position in the shift register, it flags the RX Control block to do one last shift and load SBUF. Then RECEIVE is cleared and RI is set.

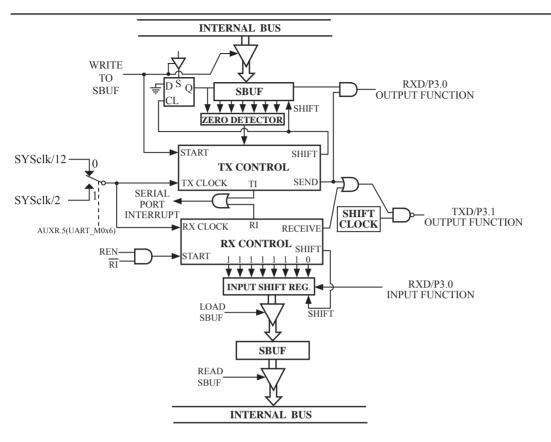

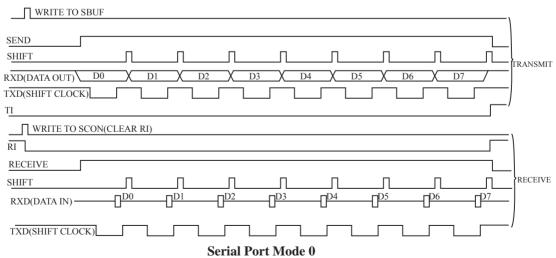

8.2.2 Mode 1: 8-Bit UART with Variable Baud Rate

10 bits are transmitted through TXD or received through RXD. The frame data includes a start bit(0), 8 data bits and a stop bit(1). One receive, the stop bit goes into RB8 in SFR – SCON. The baud rate is determined by the Timer 1 or BRT overflow rate.

```
Baud rate in mode 1 = (2^{SMOD}/32) x Timer 1 overflow rate
When T1x12=0, Timer 1 overflow rate = SYSclk/12/(256-TH1);
When T1x12=1, Timer 1 overflow rate = SYSclk / (256-TH1);
```

Transmission is initiated by any instruction that uses SBUF as a destination register. The "write to SBUF" signal also loads a "1" into the 9th bit position of the transmit shift register and flags the TX Control unit that a transmission is requested. Transmission actually happens at the next rollover of divided-by-16 counter. Thus the bit times are synchronized to the divided-by-16 counter, not to the "write to SBUF" signal.

The transmission begins with activation of \overline{SEND} , which puts the start bit at TXD. One bit time later, DATA is activated, which enables the output bit of the transmit shift register to TXD. The first shift pulse occurs one bit time after that.

As data bits shift out to the right, zeroes are clocked in from the left. When the MSB of the data byte is at the output position of the shift register, then the 1 that was initially loaded into the 9th position is just to the left of the MSB, and all positions to the left of that contain zeroes. This condition flags the TX Control unit to do one last shift and then deactivate SEND and set TI. This occurs at the 10th divide-by-16 rollover after "write to SBUF."


Reception is initiated by a 1-to-0 transition detected at RXD. For this purpose, RXD is sampled at a rate of 16 times the established baud rate. When a transition is detected, the divided-by-16 counter is immediately reset, and 1FFH is written into the input shift register. Resetting the divided-by-16 counter aligns its roll-overs with the boundaries of the incoming bit times.

The 16 states of the counter divide each bit time into 16ths. At the 7th, 8th and 9th counter states of each bit time, the bit detector samples the value of RXD. The value accepted is the value that was seen in at least 2 of the 3 samples. This is done to reject noise. In order to reject false bits, if the value accepted during the first bit time is not a 0, the receive circuits are reset and the unit continues looking for another 1-to-0 transition. This is to provide rejection of false start bits. If the start bit is valid, it is shifted into the input shift register, and reception of the rest of the frame proceeds.

As data bits come in from the right, "1"s shift out to the left. When the start bit arrives at the left most position in the shift register, (which is a 9-bit register in Mode 1), it flags the RX Control block to do one last shift, load SBUF and RB8, and set RI. The signal to load SBUF and RB8 and to set RI is generated if, and only if, the following conditions are met at the time the final shift pulse is generated.

- 1) RI=0 and
- 2) Either SM2=0, or the received stop bit = 1

If either of these two conditions is not met, the received frame is irretrievably lost. If both conditions are met, the stop bit goes into RB8, the 8 data bits go into SBUF, and RI is activated. At this time, whether or not the above conditions are met, the unit continues looking for a 1-to-0 transition in RXD.

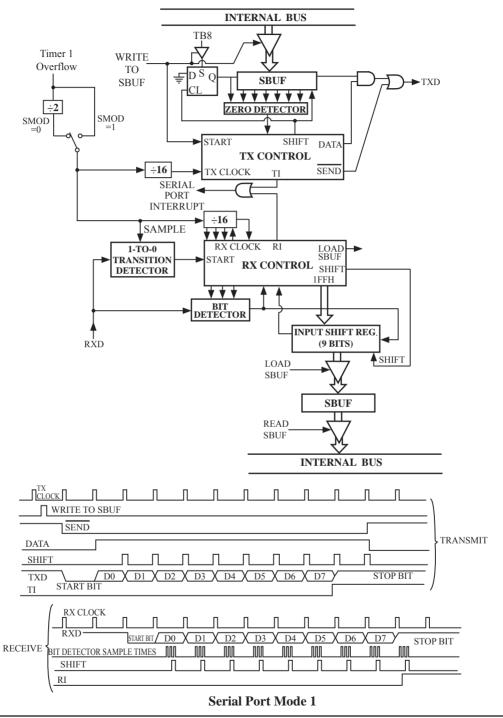

8.2.3 Mode 2: 9-Bit UART with Fixed Baud Rate

11 bits are transmitted through TXD or received through RXD. The frame data includes a start bit(0), 8 data bits, a programmable 9th data bit and a stop bit(1). On transmit, the 9th data bit comes from TB8 in SCON. On receive, the 9th data bit goes into RB8 in SCON. The baud rate is programmable to either 1/32 or 1/64 the System clock cycle.

Baud rate in mode $2 = (2^{SMOD}/64) \times SYSclk$

Transmission is initiated by any instruction that uses SBUF as a destination register. The "write to SBUF" signal also loads TB8 into the 9th bit position of the transmit shift register and flags the TX Control unit that a transmission is requested. Transmission actually happens at the next rollover of divided-by-16 counter. Thus the bit times are synchronized to the divided-by-16 counter, not to the "write to SBUF" signal.

The transmission begins when /SEND is activated, which puts the start bit at TXD. One bit time later, DATA is activated, which enables the output bit of the transmit shift register to TXD. The first shift pulse occurs one bit time after that. The first shift clocks a "1"(the stop bit) into the 9th bit position on the shift register. Thereafter, only "0"s are clocked in. As data bits shift out to the right, "0"s are clocked in from the left. When TB8 of the data byte is at the output position of the shift register, then the stop bit is just to the left of TB8, and all positions to the left of that contains "0"s. This condition flags the TX Control unit to do one last shift, then deactivate /SEND and set TI. This occurs at the 11th divided-by-16 rollover after "write to SBUF".

Reception is initiated by a 1-to-0 transition detected at RXD. For this purpose, RXD is sampled at a rate of 16 times whatever baud rate has been established. When a transition is detected, the divided-by-16 counter is immediately reset, and 1FFH is written into the input shift register.


At the 7th, 8th and 9th counter states of each bit time, the bit detector samples the value of RXD. The value accepted is the value that was seen in at least 2 of the 3 samples. This is done to reject noise. In order to reject false bits, if the value accepted during the first bit time is not a 0, the receive circuits are reset and the unit continues looking for another 1-to-0 transition. If the start bit is valid, it is shifted into the input shift register, and reception of the rest of the frame proceeds.

As data bits come in from the right, "1"s shift out to the left. When the start bit arrives at the leftmost position in the shift register, (which is a 9-bit register in Mode-2 and 3), it flags the RX Control block to do one last shift, load SBUF and RB8, and set RI. The signal to load SBUF and RB8 and to set RI is generated if, and only if, the following conditions are met at the time the final shift pulse is generated.:

- 1) RI=0 and
- 2) Either SM2=0, or the received 9^{th} data bit = 1

If either of these two conditions is not met, the received frame is irretrievably lost. If both conditions are met, the stop bit goes into RB8, the first 8 data bits go into SBUF, and RI is activated. At this time, whether or not the above conditions are met, the unit continues looking for a 1-to-0 transition at the RXD input.

Note that the value of received stop bit is irrelevant to SBUF, RB8 or RI.

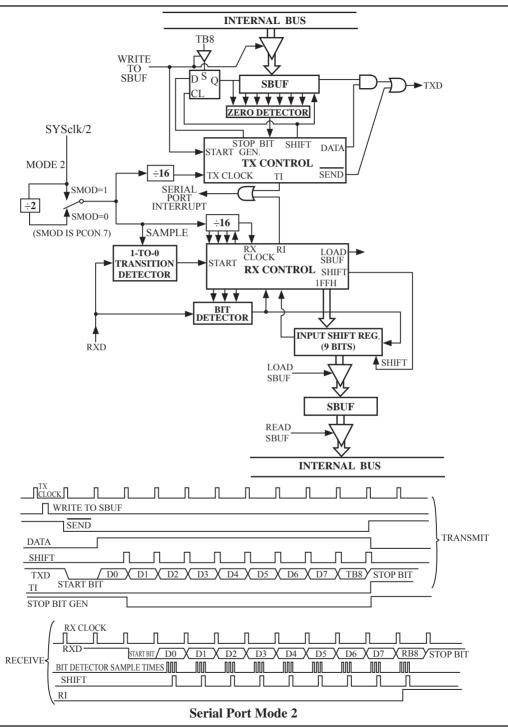


8.2.4 Mode 3: 9-Bit UART with Variable Baud Rate

Mode 3 is the same as mode 2 except the baud rate is variable.


```
Baud rate in mode 3 = (2^{SMOD}/32) x Timer 1 overflow rate
When T1x12=0, Timer 1 overflow rate = SYSclk/12/(256-TH1);
When T1x12=1, Timer 1 overflow rate = SYSclk / (256-TH1);
```

In all four modes, transmission is initiated by any instruction that use SBUF as a destination register. Reception is initiated in mode 0 by the condition RI = 0 and REN = 1. Reception is initiated in the other modes by the incoming start bit with 1-to-0 transition if REN=1.

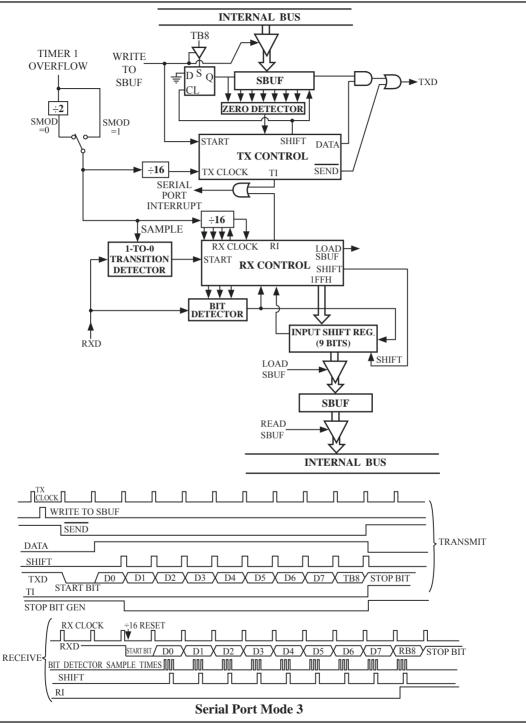

8.3 Frame Error Detection

When used for frame error detect, the UART looks for missing stop bits in the communication. A missing bit will set the FE bit in the SCON register. The FE bit shares the SCON.7 bit with SM0 and the function of SCON.7 is determined by PCON.6(SMOD0). If SMOD0 is set then SCON.7 functions as FE. SCON.7 functions as SM0 when SMOD0 is cleared. When used as FE. SCON.7 can only be cleared by software. Refer to the following figure.

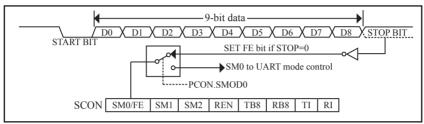

UART Frame Error Detection

8.4 Multiprocessor Communications

Modes 2 and 3 have a special provision for multiproceasor communications. In these modes 9 data bits are received. The 9th one goes into RB8. Then comes a stop bit. The port can be programmed such that when the stop bit is received, the serial port interrupt will be activated only if RB8 = 1. This feature is enabled by setting bit SM2 in SCON. A way to use this feature in multiprocessor systems is as follows.

When the master processor wants to transmit a block of data to one of several slaves, it first sends out an address byte which identifies the target slave. An address byte differs from a data byte in that the 9th bit is 1 in an address byte and 0 in a data byte. With SM2 = 1, no slave will be interrupted by a data byte. An address byte, however, will interrupt all slaves, so that each slave can examine the received byte and see if it is being addressed. The addressed slave will clear its SM2 bit and prepare to receive the data bytes that will be coming. The slaves that weren't being addressed leave their SM2s set and go on about their business, ignoring the coming data bytes.

SM2 has no effect in Mode 0, and in Mode 1 can be used to check the validity of the stop bit. In a Mode 1 reception, if SM2 = 1, the receive interrupt will not be activated unless a vatid stop bit is received.

8.5 Automatic Address Recognition

Automatic Address Recognition is a future which allows the UART to recognize certain addresses in the serial bit stream by using hardware to make the comparisons. This feature saves a great deal of software overhead by eliminating the need for the software to examine every serial address which passes by the serial port. This feature is enabled by setting the SM2 bit in SCON. In the 9-bit UART modes, Mode 2 and Mode 3, the Receive interrupt flag(RI) will be automatically set when the received byte contains either the "Given" address or the "Broadcast" address. The 9-bit mode requires that the 9th information bit is a "1" to indicate that the received information is an address and not data.

The 8-bit mode is called Mode 1. In this mode the RI flag will be set if SM2 is enabled and the information received has a valid stop bit following the 8 address bits and the information is either a Given or Broadcast address.

Mode 0 is the Shift Register mode and SM2 is ignored.

Using the Automatic Address Recognition feature allows a master to selectively communicate with one or more slaves by invoking the given slave address or addresses. All of the slaves may be contacted by using the broadcast address. Two special function registers are used to define the slave's address, SADDR, and the address mask, SADEN. SADEN is used to define which bits in the SADDR are to be used and which bits are "don't care". The SADEN mask can be logically ANDed with the SADDR to create the "Given" address which the master will use for addressing each of the slaves. Use of the Given address allows multiple slaves to be recognized which excluding others. The following examples will help to show the versatility of this scheme:

Slave 0	SADDR = 1100 0000 SADEN = 1111 1101 GIVEN = 1100 00x0
Slave 1	SADDR = 1100 0000 SADEN = 1111 1110 GIVEN = 1100 000x

In the previous example SADDR is the same and the SADEN data is used to differentiate between the two slaves. Slave 0 requires a "0" in bit 0 and it ignores bit 1. Slave 1 requires a "0" in bit 1 and bit 0 is ignored. A unique address for slave 0 would be 11000010 since slave 1 requires a "0" in bit 1. A unique address for slave 1 would be 11000001 since a "1" in bit 0 will exclude slave 0. Both slaves can be selected at the same time by an address which has bit 0=0 (for slave 0) and bit 1=0 (for salve 1). Thus, both could be addressed with 11000000.

In a more complex system the following could be used to select slaves 1 and 2 while excluding slave 0:

Slave 0	SADDR = 1100 0000 SADEN = 1111 1001 GIVEN = 1100 0xx0
Slave 1	SADDR = 1110 0000 SADEN = 1111 1010 GIVEN = 1110 0x0x
Slave 2	SADDR = 1110 0000 SADEN = 1111 1100 GIVEN = 1110 00xx

In the above example the differentiation among the 3 slaves is in the lower 3 address bits. Slave 0 requires that bit 0 = 0 and it can be uniquely addressed by 11100110. Slave 1 requires that bit 1=0 and it can be uniquely addressed by 11100101. Slave 2 requires that bit 2=0 and its unique address is 11100011. To select Salve 0 and 1 and exclude Slave 2, use address 11100100, since it is necessary to make bit2=1 to exclude Slave 2.

The Broadcast Address for each slave is created by taking the logic OR of SADDR and SADEN. Zeros in this result are trended as don't cares. In most cares, interpreting the don't cares as ones, the broadcast address will be FF hexadecimal.

Upon reset SADDR and SADEN are loaded with "0"s. This produces a given address of all "don't cares as well as a Broadcast address of all "don't cares". This effectively disables the Automatic Addressing mode and allows the microcontroller to use standard 80C51-type UART drivers which do not make use of this feature.

Example: write an program that continually transmits characters from a transmit buffer. If incoming characters are detected on the serial port, store them in the receive buffer starting at internal RAM location 50H. Assume that the STC12C5620AD series MCU serial port has already been initialized in mode 1. *Solution:*

OPG

0030H

	ORG	0030H		
	MOV	R0,	#30H	;pointer for tx buffer
	MOV	R1,	#50H	;pointer for rx buffer
LOOP:	JB	RI,	RECEIVE	;character received?
				;yes: process it
	JB	TI,	TX	;previous character transmitted?
				;yes: process it
	SJMP	LOOP		;no: continue checking
TX:	MOV	A,	@R0	get character from tx buffer
	MOV	C,	P	;put parity bit in C
	CPL	C		;change to odd parity
	MOV	ACC.7,	C	;add to character code
	CLR	TI		;clear transmit flag
	MOV	SBUF,	A	;send character
	CLR	ACC.7		strip off parity bit;
	INC	R0		;point to next character in buffer
	CJNE	R0,	#50H, LOOP	;end of buffer?
				;no: continue
	MOV	R0,	#30H	;yes: recycle
	SJMP	LOOP		;continue checking
RX:	CLR	RI		;clear receive flag
	MOV	A,	SBUF	;read character into A
	MOV	C,	P	;for odd parity in A, P should be set
	CPL	C		;complementing correctly indicates "error"
	CLR	ACC.7		strip off parity
	MOV	@R1,	A	;store received character in buffer
	INC	R1		;point to next location in buffer
	SJMP	LOOP		;continue checking
	END			

8.6 Buad Rates

The baud rate in Mode 0 is fixed:

Mode 0 Baud Rate =
$$\frac{\text{SYSclk}}{12} \quad \text{when AUXR.5/UART_M0x6 = 0}$$
or =
$$\frac{\text{SYSclk}}{2} \quad \text{when AUXR.5/UART_M0x6 = 1}$$

The baud rate in Mode 2 depends on the value of bit SMOD in Special Function Register PCON. If SMOD =0 (which is the value on reset), the baud rate $^{1}/_{64}$ the System clock cycle. If SMOD = 1, the baud rate is $^{1}/_{32}$ the System clock cycle.

Mode 2 Baud Rate =
$$\frac{2^{\text{SMOD}}}{64} \times (\text{SYSclk})$$

In the STC12C5620AD, the baud rates in Modes 1 and 3 are determined by Timer 1 overflow rate. The baud rate in Mode 1 and 3 are fixed:

Mode 1,3 Baud rate =
$$(2^{\text{SMOD}}/32)$$
 x timer 1 overflow rate

Timer 1 overflow rate = (SYSclk/12)/(256 - TH1);

When Timer 1 is used as the baud rate generator, the Timer 1 interrupt should be disabled in this application. The Timer itself can be configured for either "timer" or "cormter" operation, and in any of its 3 running modes. In the most typical applications, it is configured for "timer" operation, in the auto-reload mode (high nibble of TMOD = 0010B).

One can achieve very low baud rate with Timer 1 by leaving the Timer 1 interrupt enabled, and configuring the Timer to run as a 16-bit timer (high nibble of TMOD = 0001B), and using the Timer 1 interrupt to do a 16-bit software reload.

The following figure lists various commonly used baud rates and how they can be obtained from Timer 1.

			Timer 1			
Baud Rate	$\mathbf{f}_{\mathrm{OSC}}$	SMOD	C/T	Mode	Reload Value	
Mode 0 MAX:1MHZ	12MHZ	X	X	X	X	
Mode 2 MAX:375K	12MHZ	1	X	X	X	
Mode 1,3:62.5K	12MHZ	1	0	2	FFH	
19.2K	11.059MHZ	1	0	2	FDH	
9.6K	11.059MHZ	0	0	2	FDH	
4.8K	11.059MHZ	0	0	2	FAH	
2.4K	11.059MHZ	0	0	2	F4H	
1.2K	11.059MHZ	0	0	2	E8H	
137.5	11.986MHZ	0	0	2	1DH	
110	6MHZ	0	0	2	72H	
110	12MHZ	0	0	1	FEEBH	

Timer 1 Generated Commonly Used Baud Rates

8.7 Demo Programs about UART (C and ASM)

1. C program:

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC12C5Axx Series MCU UART (8-bit/9-bit)Demo -----*/
/* If you want to use the program or the program referenced in the */
/* article, please specify in which data and procedures from STC */
#include "reg51.h"
#include "intrins.h"
typedef unsigned char
                         BYTE;
typedef unsigned int
                         WORD;
#define FOSC
                18432000L
                                                 //System frequency
#define BAUD
                9600
                                                  //UART baudrate
/*Define UART parity mode*/
#define NONE PARITY
                                                 //None parity
#define ODD PARITY
                                                 //Odd parity
#define EVEN PARITY
                                                  //Even parity
#define MARK PARITY
                        3
                                                 //Mark parity
#define SPACE PARITY
                                                 //Space parity
#define PARITYBIT
                         EVEN PARITY
                                                 //Testing even parity
sbit
        bit9 = P2^2;
                                                 //P2.2 show UART data bit9
bit
        busy;
void SendData(BYTE dat);
void SendString(char *s);
void main()
#if (PARITYBIT == NONE PARITY)
        SCON = 0x50;
                                                 //8-bit variable UART
#elif (PARITYBIT == ODD PARITY) || (PARITYBIT == EVEN PARITY) || (PARITYBIT == MARK PARITY)
                                                 //9-bit variable UART, parity bit initial to 1
        SCON = 0xda;
#elif (PARITYBIT == SPACE PARITY)
                                                 //9-bit variable UART, parity bit initial to 0
        SCON = 0xd2;
#endif
```

```
//Set Timer1 as 8-bit auto reload mode
         TMOD = 0x20:
         TH1
                  = TL1 = -(FOSC/12/32/BAUD);
                                                      //Set auto-reload vaule
         TR1
                                                      //Timer1 start run
         ES
                                                      //Enable UART interrupt
                  = 1;
                                                      //Open master interrupt switch
         EΑ
                  = 1;
         SendString("STC12C5620AD\r\nUart Test !\r\n");
         while(1);
UART interrupt service routine
*/
void Uart Isr() interrupt 4 using 1
         if (RI)
                                                      //Clear receive interrupt flag
                  RI = 0;
                  P0 = SBUF;
                                                      //P0 show UART data
                  bit9 = RB8;
                                                      //P2.2 show parity bit
         if (TI)
                  TI = 0;
                                                      //Clear transmit interrupt flag
                  busy = 0;
                                                      //Clear transmit busy flag
Send a byte data to UART
Input: dat (data to be sent)
Output:None
*/
void SendData(BYTE dat)
         while (busy);
                                                      //Wait for the completion of the previous data is sent
         ACC = dat;
                                                      //Calculate the even parity bit P (PSW.0)
         if (P)
                                                      //Set the parity bit according to P
         #if(PARITYBIT == ODD PARITY)
                  TB8 = 0;
                                                      //Set parity bit to 0
         #elif (PARITYBIT == EVEN PARITY)
                  TB8 = 1;
                                                      //Set parity bit to 1
         #endif
```

```
else
         #if (PARITYBIT == ODD_PARITY)
                 TB8 = 1;
                                                             //Set parity bit to 1
         #elif (PARITYBIT == EVEN_PARITY)
                 TB8 = 0;
                                                             //Set parity bit to 0
         #endif
                 busy = 1;
                 SBUF = ACC;
                                                             //Send data to UART buffer
Send a string to UART
Input: s (address of string)
Output:None
*/
void SendString(char *s)
                                                             //Check the end of the string
         while (*s)
                 SendData(*s++);
                                                             //Send current char and increment string ptr
```

2. Assembly program:

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC12C5Axx Series MCU UART (8-bit/9-bit)Demo -----*/
/* If you want to use the program or the program referenced in the */
/* article, please specify in which data and procedures from STC */
/*_____*/
;/*Define UART parity mode*/
#define NONE PARITY 0
                                            //None parity
#define ODD PARITY
                                            //Odd parity
#define EVEN PARITY
                                            //Even parity
#define MARK PARITY
                                            //Mark parity
#define SPACE PARITY 4
                                            //Space parity
#define PARITYBIT
                      EVEN PARITY
                                            //Testing even parity
BUSY
                                            transmit busy flag
              20H.0
       BIT
       ORG
              H0000
       LJMP
              MAIN
       ORG
              0023H
       LJMP
              UART ISR
       ORG
              0100H
MAIN:
       CLR
              BUSY
       CLR
              EA
       MOV
              SP,
                      #3FH
#if (PARITYBIT == NONE PARITY)
              SCON, #50H
       MOV
                                            ;8-bit variable UART
#elif (PARITYBIT == ODD PARITY) || (PARITYBIT == EVEN PARITY) || (PARITYBIT == MARK PARITY)
                                            ;9-bit variable UART, parity bit initial to 1
       MOV
              SCON, #0DAH
#elif (PARITYBIT == SPACE PARITY)
       MOV
              SCON, #0D2H
                                            ;9-bit variable UART, parity bit initial to 0
#endif
```

	MOM	TMOD	//2011	0.477 1 0174 1 1 1
	MOV	TMOD,		;Set Timer1 as 8-bit auto reload mode
	MOV	A,	#0FBH	;256-18432000/12/32/9600
	MOV	TH1,	A	;Set auto-reload vaule
	MOV	TL1,	A	T. 1
	SETB	TR1		;Timer1 start run
	SETB	ES		Enable UART interrupt
·	SETB			Open master interrupt switch
,			#TESTSTR	;Load string address to DPTR
	LCALL	SENDST	TRING	;Send string
;	SJMP			
,	`R:			
163131			;Test string C5620AD Uart Test !",	004 044 0
			C3020AD Cart Test!,	0DH,0AH,0
*	interrupt		ıtine	
			atme	
UART_I	SR:			
	PUSH	ACC		
	PUSH	PSW		
	JNB	RI,	CHECKTI	;Check RI bit
	CLR	RI		;Clear RI bit
	MOV	P0,	SBUF	;P0 show UART data
	MOV	C,	RB8	
	MOV	P2.2,	C	;P2.2 show parity bit
CHECK	TI:			
	JNB	TI,	ISR_EXIT	;Check S2TI bit
	CLR	TI		;Clear S2TI bit
	CLR	BUSY		;Clear transmit busy flag
ISR EX	IT:			
	POP	PSW		
	POP	ACC		
	RETI			
;/*				
;Send a b	oyte data t	o UART		
;Input: A	CC (data	to be sent))	
;Output:	None			
		*/		
SENDD.	ATA:			
	JB	BUSY,	\$;Wait for the completion of the previous data is sent
	MOV	ACC,	A	;Calculate the even parity bit P (PSW.0)
	JNB	P,	EVEN1INACC	;Set the parity bit according to P


ODD1INACC		
	$IT == ODD_PARITY$	
	TB8	;Set parity bit to 0
	BIT == EVEN_PARITY)	~
SET	B TB8	;Set parity bit to 1
#endif		
	P PARITYBITOK	
EVEN1INACO		
	$IT == ODD_PARITY)$	
	B TB8	;Set parity bit to 1
	BIT == EVEN_PARITY)	
CLR	TB8	;Set parity bit to 0
#endif		
PARITYBITO	K:	;Parity bit set completed
SET	B BUSY	
MO	V SBUF, A	;Send data to UART buffer
RET	•	
;/*		
;Send a string	to UART	
;Send a string ;Input: DPTR		
;Send a string ;Input: DPTR ;Output:None	to UART (address of string)	
;Send a string ; ;Input: DPTR ; ;Output:None ;	to UART (address of string)	
;Send a string ;Input: DPTR (;Output:None ;	to UART (address of string)*/ G:	
;Send a string ; ;Input: DPTR (;Output:None ;	to UART (address of string)*/ G: A	
;Send a string ;;Input: DPTR (;Output:None ;SENDSTRING CLR MOV	to UART (address of string) */ G: A VC A, @A+DPTR	;Get current char
;Send a string ;;Input: DPTR (;Output:None ;	to UART (address of string) G: A VC A, @A+DPTR STRINGEND	;Check the end of the string
;Send a string ;;Input: DPTR (;Output:None ;	to UART (address of string) */ G: A VC A, @A+DPTR	;Check the end of the string ;increment string ptr
;Send a string ; ;Input: DPTR (;Output:None ;	to UART (address of string) G: A VC A, @A+DPTR STRINGEND	;Check the end of the string ;increment string ptr ;Send current char
;Send a string ; ;Input: DPTR (;Output:None ;	to UART (address of string) G: A VC A, @A+DPTR STRINGEND DPTR	;Check the end of the string ;increment string ptr
;Send a string ; ;Input: DPTR (;Output:None ;	to UART (address of string) G: A VC A, @A+DPTR STRINGEND DPTR LLL SENDDATA P SENDSTRING	;Check the end of the string ;increment string ptr ;Send current char
;Send a string ;Input: DPTR (;Output:None ;	to UART (address of string) G: A VC A, @A+DPTR STRINGEND DPTR ALL SENDDATA P SENDSTRING	;Check the end of the string ;increment string ptr ;Send current char
;Send a string ; ;Input: DPTR (;Output:None ;	to UART (address of string) G: A VC A, @A+DPTR STRINGEND DPTR ALL SENDDATA P SENDSTRING	;Check the end of the string ;increment string ptr ;Send current char

Chapter 9. Analog to Digital Converter

9.1 A/D Converter Structure

STC12C5620AD series MCU with A/D conversion function have 8-channel and 10-bit high-speed A/D converter whose speed is up to 100KHz (100 thousand times per second). the 8-channel ADC, which are on P1 port (P1.0-P1.7), can be used as temperature detection, battery voltage detection, key scan, spectrum detection, etc. After power on reset, P1 ports are in weak pull-up mode. Users can set any one of 8 channels as A/D conversion through software. And those I/O ports not as ADC function can continue to be used as I/O ports.

STC12C5620AD series MCU ADC (A/D converter) structure is shown below.

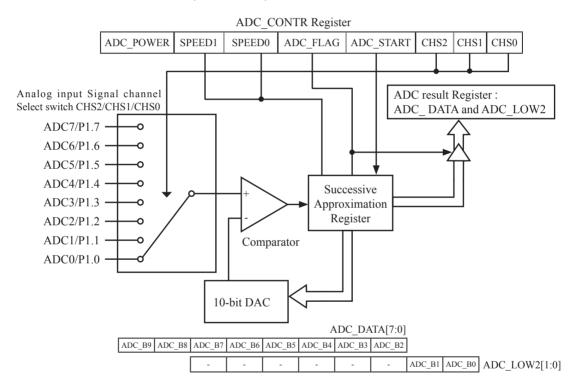

The ADC on STC12C5620AD is an 8-bit resolution, successive-approximation approach, medium-speed A/D converter. V_{REFP}/V_{REFM} is the positive/negative reference voltage input for internal voltage-scaling DAC use, the typical sink current on it is 600uA ~ 1mA. For STC12C5620AD, these two references are internally tied to VCC and GND separately.

Conversion is invoked since ADC_STRAT(ADC_CONTR.3) bit is set. Before invoking conversion, ADC_POWER/ADC_CONTR.7 bit should be set first in order to turn on the power of analog front-end in ADC circuitry. Prior to ADC conversion, the desired I/O ports for analog inputs should be configured as input-only or open-drain mode first. The converter takes around a fourth cycles to sample analog input data and other three fourths cycles in successive-approximation steps. Total conversion time is controlled by two register bits – SPEED1 and SPEED0. Eight analog channels are available on P1 and only one of them is connected to to the comparator depending on the selection bits {CHS2,CHS1,CHS0}. When conversion is completed, the result will be saved onto ADC_DATA and ADC_LOW2 registerS. After the result are completed and saved, ADC_FLAG is also set. ADC_FLAG should be cleared in software. The ADC interrupt service routine vectors to 2Bh. When the chip enters idle mode or power-down mode, the power of ADC is gated off by hardware.

If user need 10-bit conversion result, calculating the result according to the following formula:

10-bit A/D Conversion Result:(ADC_DATA[7:0], ADC_LOW2[1:0]) =
$$1024 \times \frac{\text{Vin}}{\text{Vcc}}$$

If user need 8-bit conversion result, calculating the result according to the following formula:

8-bit A/D Conversion Result:(ADC_DATA[7:0]) = 256 x
$$\frac{\text{Vin}}{\text{Vcc}}$$

In the above formula, Vin stand for analog input channel voltage, Vcc stand for actual operation voltage

9.2 Registers for ADC

Mnemonic	Description	Address	bit address and Symbol MSB LSB	Reset value
P1M0	P1 Configuration 0	91H		0000 0000B
P1M1	P1 Configuration 1	92H		0000 0000B
ADC_CONTR	ADC Control Register	С5Н	ADC_POWER SPEED1 SPEED0 ADC_FLAG ADC_START CHS2 CHS1 CHS0	0000 0000B
ADC_DATA	ADC Result high	С6Н		0000 0000B
ADC_LOW2	ADC Result low	BEH		
IE	Interrupt Enable	A8H	EA EPCA_LVD EADC_SPI ES ET1 EX1 ET0 EX0	0000 0000B
IP	Interrupt Priority Low	В8Н	- PPCA_LVD PADC_SPI PS PT1 PX1 PT0 PX0	x000 0000B
IPH	Interrupt Priority High	В7Н	- PPCA_LVDH PADC_SPIH PSH PT1H PX1H PT0H PX0H	x000 0000B
AUXR	Auxiliary register	A2H	T0x12 T1x12 UART_M0x12 EADCI ESPI ELVDI - -	0000 00xxB

1. P1 Analog Function Configure register: P1M0 and P1M1

Those P1 ports which need to be used as A/D converter should be first set in open-drain or high-impedance (input-only) mode through registers P1M0 and P1M1.

P1 Configure <P1.7, P1.6, P1.5, P1.4, P1.3, P1.2, P1.1, P1.0 port> (P1 address: 90H)

P1M0[7 : 0]	P1M1 [7:0]	I/O ports Mode
0	0	quasi_bidirectional(standard 8051 I/O port output) , Sink Current up to 20mA , pull-up Current is $230\mu A$, Because of manufactured error, the actual pull-up current is $250uA \sim 150uA$
0	1	push-pull output(strong pull-up output, current can be up to 20mA, resistors need to be added to restrict current
1	0	input-only (high-impedance). If any P1 port need to be used as ADC, its mode is optional between input-only (high-impedance) and open-drain mode.
1	1	Open Drain, internal pull-up resistors should be disabled and external pull-up resistors need to join. If any P1 port need to be used as ADC, its mode is optional between input-only (high-impedance) and open-drain mode.

Example: MOV P1M0, #10100000B MOV P1M1, #11000000B

;P1.7 in Open Drain mode, P1.6 in strong push-pull output, P1.5 in high-impedance input, P1.4/P1.3/P1.2/P1.1/P1.0 in quasi_bidirectional/weak pull-up

2. ADC control register: ADC CONTR (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
ADC_CONTR	С5Н	name	ADC_POWER	SPEED1	SPEED0	ADC_FLAG	ADC_START	CHS2	CHS1	CHS0

When operating to ADC_CONTR register, "MOV" should be used, while "AND" and "OR" don not be recommended to use

ADC_POWER: When clear shut down the power of ADC block. When set turn on the power of ADC block. SPEED1, SPEED0: Conversion speed selection.

SPEED1	SPEED0	Times needed by an A/D Coversion
0	0	1080 clock cycles are needed for a conversion.
0	1	810 clock cycles are needed for a conversion.
1	0	540 clock cycles are needed for a conversion.
1	1	270 clock cycles are needed for a conversion. When the CPU operation frequency is 27MHz, the speed of ADC is about 100KHz.

The clock source used by ADC block of STC12C5620AD series MCU is On-chip R/C clock which is not divided by Clock divider register CLK DIV.

ADC_FLAG: ADC interrupt flag.It will be set by the device after the device has finished a conversion, and should be cleared by the user's software.

ADC_STRAT : ADC start bit, which enable ADC conversion. It will automatically cleared by the device after the device has finished the conversion.

CHS2 ~ CHS0: Used to select one analog input source from 8 channels.

CHS2	CHS1	CHS0	Source
0	0	0	P1.0 (default) as the A/D channel input
0	0	1	P1.1 as the A/D channel input
0	1	0	P1.2 as the A/D channel input
0	1	1	P1.3 as the A/D channel input
1	0	0	P1.4 as the A/D channel input
1	0	1	P1.5 as the A/D channel input
1	1	0	P1.6 as the A/D channel input
1	1	1	P1.7 as the A/D channel input

Note: The corresponding bits in P1ASF should be configured correctly before starting A/D conversion. The sepecific P1ASF bits should be set corresponding with the desired channels.

Because it will by delayed 4 CPU clocks after the instruction which set ADC_CONTR register has been executed, Four "NOP" instructions should be added after setting ADC_CONTR register. See the following code:

MOV	ADC_{0}	CONTR,	#DATA
NOP			
MOV	A,	ADC C	ONTR
		_	Only delayed 4 clocks can the ADC CONTR be read correctly

3. ADC result register: ADC_DATA and ADC_LOW2

ADC DATA and ADC LOW2 are used to save the ADC result, their format as shown below:

Mnemonic	Add	Name	В7	В6	В5	B4	В3	B2	В1	В0
ADC_DATA	C6h	ADC result register high								
ADC_LOW2	BEh	ADC result register low	Х	Х	Х	Х	X	X		

If user need 10-bit conversion result, calculating the result according to the following formula:

10-bit A/D Conversion Result:(ADC_DATA[7:0], ADC_LOW2[1:0]) =
$$1024 \times \frac{\text{Vin}}{\text{Vcc}}$$

If user need 8-bit conversion result, calculating the result according to the following formula:

8-bit A/D Conversion Result:(ADC_DATA[7:0]) = 256 x
$$\frac{\text{Vin}}{\text{Vcc}}$$

In the above formula, Vin stand for analog input channel voltage, Vcc stand for actual operation voltage

4. Registers related with UART1 interrupt: IE, AUXR, IP and IPH

IE: Interrupt Enable Rsgister (Bit-addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
IE	A8H	name	EA	EPCA_LVD	EADC_SPI	ES	ET1	EX1	ET0	EX0

EA: disables all interrupts.

If EA = 0, no interrupt will be acknowledged.

If EA = 1, each interrupt source is individually enabled or disabled by setting or clearing its enable bit.

EADC SPI: Interrupt controller of Serial Peripheral Interface (SPI) and A/D Converter (ADC).

If EADC SPI = 0, Disable the interrupt of Serial Peripheral Interface (SPI) and A/D Converter (ADC).

If EADC SPI = 1, Enable the interrupt of Serial Peripheral Interface (SPI) and A/D Converter (ADC).

AUXR: Auxiliary register (Non bit-addressable)

SFR name	Address	bit	В7	В6	B5	B4	В3	B2	B1	В0
AUXR	8EH	name	T0x12	T1x12	UART_M0x6	EADCI	ESPI	ELVDI	-	-

EADCI: Enable/Disable interrupt from A/D converter

0 : (default) Inhibit the ADC functional block to generate interrupt to the MCU

1 : Enable the ADC functional block to generate interrupt to the MCU

IPH: Interrupt Priority High Register (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	В2	B1	В0
IPH	В7Н	name	-	PPCA_LVDH	PADC_SPIH	PSH	PT1H	PX1H	PT0H	PX0H

IP: Interrupt Priority Register (Bit-addressable)

SFR name	Address	bit	В7	В6	B5	B4	В3	В2	B1	В0
IP	B8H	name	-	PPCA_LVD	PADC_SPI	PS	PT1	PX1	PT0	PX0

PADC_SPIH, PADC_SPI : Serial Peripheral Interface (SPI) and A/D Converter (ADC) interrupt priority control bits.


if PADC_SPIH=0 and PADC_SPI=0, Serial Peripheral Interface (SPI) and A/D Converter (ADC) interrupt are assigned lowest priority(priority 0).

if PADC_SPIH=0 and PADC_SPI=1, Serial Peripheral Interface (SPI) and A/D Converter (ADC) interrupt are assigned lowest priority(priority 1).

if PADC_SPIH=1 and PADC_SPI=0, Serial Peripheral Interface (SPI) and A/D Converter (ADC) interrupt are assigned lowest priority(priority 2).


if PADC_SPIH=1 and PADC_SPI=1, Serial Peripheral Interface (SPI) and A/D Converter (ADC) interrupt are assigned lowest priority(priority 3).

9.3 Application Circuit of A/D Converter

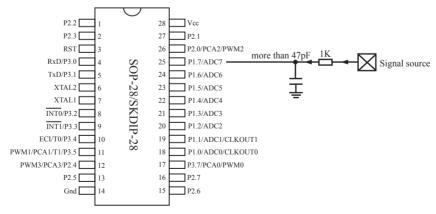



ADC function in P1 port, P1.0 - P1.7 in all 8 channels

9.4 ADC Application Circuit for Key Scan

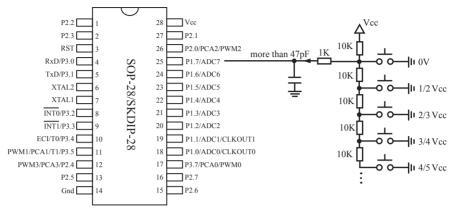

ADC function in P1 port, P1.0 - P1.7 in all 8 channels

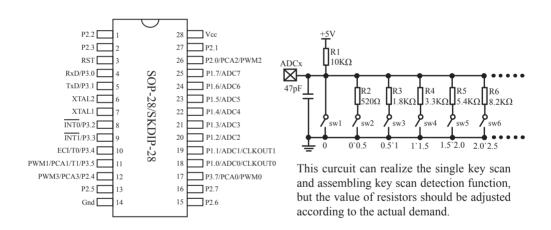

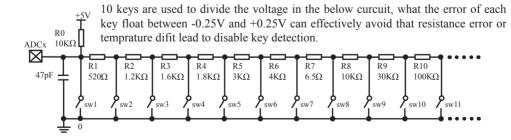

9.5 A/D reference voltage source

STC12C5620AD series ADC reference voltage is from MCU power supply voltage directly, so it can work without an external reference voltage source. If the required precision is relatively high, then you maybe using a stable reference voltage source, in order to calculate the operating voltage VCC, then calculate the ADC exact value. For example, you can connect a 1.25V(or 1.00V, ect. ...) to ADC channel 7, according to the conversion result, you can get the actual VCC voltage, thus you can calculate other 7 channels ADC results. (Vcc is constant in short time)

9.6 Program using interrupts to demostrate A/D Conversion

There are two example procedures using interrupts to demostrate A/D conversion, one written in C language and the other in assembly language.

1. C language code listing:

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU A/D Conversion Demo -----*/
/* If you want to use the program or the program referenced in the */
/* article, please specify in which data and procedures from STC */
/*_____*/
#include "reg51.h"
#include "intrins.h"
#define FOSC
             18432000L
#define BAUD 9600
typedef unsigned char
                       BYTE:
typedef unsigned int
                       WORD:
/*Declare SFR associated with the ADC */
               = 0x8e:
sfr AUXR
sfr ADC CONTR = 0xC5;
                                       //ADC control register
sfr ADC DATA
               = 0xC6:
                                       //ADC high 8-bit result register
sfr ADC LOW2
                                      //ADC low 2-bit result register
               = 0xBE:
sfr P1M0
               = 0x91:
                                      //P1 mode control register0
sfr P1M1
               = 0x92;
                                      //P1 mode control register1
/*Define ADC operation const for ADC CONTR*/
#define ADC POWER
                       0x80
                                      //ADC power control bit
#define ADC FLAG
                                      //ADC complete flag
                       0x10
#define ADC START
                       0x08
                                      //ADC start control bit
#define ADC SPEEDLL
                       0x00
                                       //1080 clocks
#define ADC SPEEDL
                       0x20
                                      //810 clocks
#define ADC SPEEDH
                                      //540 clocks
                       0x40
#define ADC SPEEDHH 0x60
                                      //270 clocks
void InitUart();
void SendData(BYTE dat);
void Delay(WORD n);
void InitADC();
```

```
BYTE ch = 0;
                                 //ADC channel NO.
void main()
        InitUart():
                                 //Init UART, use to show ADC result
        InitADC();
                                 //Init ADC sfr
        AUXR = 0x10;
                                 //set EADCI
        IE = 0xa0;
                                 //Enable ADC interrupt and Open master interrupt switch
                                 //Start A/D conversion
        while (1);
/*_____
ADC interrupt service routine
*/
void adc isr() interrupt 5 using 1
        ADC CONTR &= !ADC_FLAG;
                                                 //Clear ADC interrupt flag
        SendData(ch);
                                                 //Show Channel NO.
        SendData(ADC DATA);
                                                 //Get ADC high 8-bit result and Send to UART
        //if you want show 10-bit result, uncomment next line
                                                 //Show ADC low 2-bit result
        // SendData(ADC LOW2);
        if (++ch > 7) ch = 0;
                                                 //switch to next channel
        ADC CONTR = ADC POWER | ADC SPEEDLL | ADC START | ch;
Initial ADC sfr
*/
void InitADC()
        P1 = P1M0 = P1M1 = 0xff;
                                                 //Set all P1 as Open-Drain mode
        ADC_DATA = 0;
                                                 //Clear previous result
        ADC CONTR = ADC POWER | ADC SPEEDLL | ADC START | ch;
                                                 //ADC power-on delay and Start A/D conversion
        Delay(2);
Initial UART
*/
```

```
void InitUart()
         SCON = 0x5a;
                                                      //8 bit data ,no parity bit
                                                      //T1 as 8-bit auto reload
         TMOD = 0x20;
         TH1 = TL1 = -(FOSC/12/32/BAUD);
                                                      //Set Uart baudrate
         TR1 = 1;
                                                      //T1 start running
Send one byte data to PC
Input: dat (UART data)
Output:-
*/
void SendData(BYTE dat)
                                                      //Wait for the previous data is sent
         while (!TI);
         TI = 0;
                                                      //Clear TI flag
         SBUF = dat;
                                                      //Send current data
Software delay function
void Delay(WORD n)
         WORD x;
         while (n--)
                  x = 5000;
                  while (x--);
```

2. Assembly language code listing:

```
·/*____*/
;/* --- STC MCU International Limited -----*/
:/* --- STC 1T Series MCU A/D Conversion Demo -----*/
;/* If you want to use the program or the program referenced in the */
:/* article, please specify in which data and procedures from STC */
·/*____*/
:/*Declare SFR associated with the ADC */
AUXR
              EOU
                      8EH
ADC CONTR
               EOU
                      0C5H
                                     ;ADC control register
                                     ;ADC high 8-bit result register
ADC DATA
               EOU
                      0C6H
ADC LOW2
               EQU
                      0BEH
                                     ;ADC low 2-bit result register
P1M0
               EQU
                      091H
                                     ;P1 mode control register0
P1M1
               EQU
                      092H
                                     ;P1 mode control register1
;/*Define ADC operation const for ADC CONTR*/
ADC POWER
               EQU
                      80H
                                     ;ADC power control bit
ADC FLAG
               EOU
                      10H
                                     ;ADC complete flag
ADC START
               EQU
                      08H
                                     :ADC start control bit
ADC SPEEDLL
              EOU
                      00H
                                     :1080 clocks
ADC SPEEDL
               EQU
                       20H
                                     ;810 clocks
ADC SPEEDH
                      40H
               EOU
                                     :540 clocks
ADC SPEEDHH EQU
                      60H
                                     ;270 clocks
                                     ;ADC channel NO.
ADCCH
              DATA
                      20H
       ORG
              0000H
       LJMP
              MAIN
       ORG
              002BH
       LJMP
              ADC ISR
       ORG
              0100H
MAIN:
       MOV
               SP.
                              #3FH
       MOV
               ADCCH, #0
       LCALL INIT UART
                                             ;Init UART, use to show ADC result
       LCALL INIT ADC
                                             ;Init ADC sfr
       ORL
               AUXR, #10H
                                             :set EADCI
       MOV
              IE,
                      #0A0H
                                     ;Enable ADC interrupt and Open master interrupt switch
       SJMP
```

```
:/*_____
;ADC interrupt service routine
;____*/
ADC ISR:
       PUSH
              ACC
       PUSH
              PSW
                                                    ;Clear ADC interrupt flag
       ANL
              ADC CONTR,
                             #NOT ADC FLAG
       MOV
              Α.
                      ADCCH
       LCALL SEND DATA
                                                    :Send channel NO.
       MOV
                                                    ;Get ADC high 8-bit result
              A,
                      ADC DATA
       LCALL SEND DATA
                                                    :Send to UART
;//if you want show 10-bit result, uncomment next 2 lines
       MOV
              A.
                     ADC LOW2
                                                    :Get ADC low 2-bit result
       LCALL SEND DATA
                                                    ;Send to UART
       INC
              ADCCH
       MOV
                      ADCCH
              A,
                      #07H
       ANL
              A,
       MOV
              ADCCH, A
       ORL
                      #ADC_POWER | ADC_SPEEDLL | ADC_START
              A,
       MOV
              ADC_CONTR,A
                                            ;ADC power-on delay and re-start A/D conversion
       POP
              PSW
       POP
              ACC
       RETI
·/*_____
;Initial ADC sfr
;____*/
INIT ADC:
       MOV
                      #0FFH
              A,
       MOV
              P1,
                      Α
       MOV
              P1M0,
                                                    ;Set all P1 as Open-Drain mode
       MOV
              P1M1, A
       MOV
              ADC DATA,
                                                    ;Clear previous result
                             #0
       MOV
                      ADCCH
              A,
       ORL
              A,
                      #ADC_POWER | ADC_SPEEDLL | ADC_START
       MOV
              ADC_CONTR, A
                                            ;ADC power-on delay and Start A/D conversion
       MOV
              A,#2
       LCALL DELAY
       RET
```

```
:/*_____
;Initial UART
:----*/
INIT UART:
       MOV
               SCON,
                      #5AH
                                              ;8 bit data ,no parity bit
       MOV
                                              ;T1 as 8-bit auto reload
               TMOD, #20H
       MOV
                       #-5
                                              ;Set Uart baudrate -(18432000/12/32/9600)
               A,
       MOV
                                              :Set T1 reload value
               TH1,
                       Α
       MOV
               TL1,
                       A
       SETB
               TR1
                                              ;T1 start running
       RET
·/*_____
;Send one byte data to PC
;Input: ACC (UART data)
;Output:-
;----*/
SEND_DATA:
       JNB
               TI,
                       $
                                              ;Wait for the previous data is sent
       CLR
               ΤI
                                              ;Clear TI flag
       MOV
               SBUF,
                                              ;Send current data
                       Α
       RET
:/*_____
;Software delay function
DELAY:
       MOV
               R2,
                       Α
       CLR
               Α
       MOV
               R0,
                       Α
       MOV
               R1,
                       A
DELAY1:
       DJNZ
               R0,
                       DELAY1
       DJNZ
               R1,
                       DELAY1
       DJNZ
               R2,
                       DELAY1
       RET
       END
```

9.7 Program using polling to demostrate A/D Conversion

There are two example procedures using inquiry to demostrate A/D conversion, one written in C language and the other in assembly language.

1. C language code listing:

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU A/D Conversion Demo -----*/
/* If you want to use the program or the program referenced in the */
/* article, please specify in which data and procedures from STC */
#include "reg51.h"
#include "intrins.h"
#define FOSC
                18432000L
#define
       BAUD
                9600
typedef unsigned char
                        BYTE;
typedef unsigned int
                        WORD;
/*Declare SFR associated with the ADC */
sfr
        ADC CONTR
                        = 0xC5;
                                                 //ADC control register
        ADC DATA
sfr
                        = 0xC6;
                                                 //ADC high 8-bit result register
        ADC LOW2
sfr
                        = 0xBE;
                                                 //ADC low 2-bit result register
        P1M0
sfr
                        = 0x91;
                                                 //P1 mode control register0
sfr
        P1M1
                        = 0x92:
                                                 //P1 mode control register1
/*Define ADC operation const for ADC CONTR*/
       ADC POWER
#define
                        0x80
                                                 //ADC power control bit
#define
       ADC FLAG
                        0x10
                                                 //ADC complete flag
#define
       ADC START
                                                 //ADC start control bit
                        0x08
#define ADC SPEEDLL
                        0x00
                                                 //1080 clocks
#define
       ADC SPEEDL
                        0x20
                                                 //810 clocks
                                                 //540 clocks
#define
       ADC SPEEDH
                        0x40
#define
       ADC SPEEDHH 0x60
                                                 //270 clocks
void InitUart();
void InitADC();
void SendData(BYTE dat);
BYTE GetADCResult(BYTE ch);
void Delay(WORD n);
void ShowResult(BYTE ch);
```

```
void main()
        InitUart();
                                                  //Init UART, use to show ADC result
        InitADC();
                                                   //Init ADC sfr
        while (1)
                                                   //Show Channel0
                ShowResult(0):
                                                   //Show Channel1
                ShowResult(1);
                ShowResult(2):
                                                  //Show Channel2
                                                   //Show Channel3
                ShowResult(3);
                ShowResult(4);
                                                   //Show Channel4
                ShowResult(5);
                                                   //Show Channel5
                ShowResult(6);
                                                   //Show Channel6
                ShowResult(7);
                                                  //Show Channel7
Send ADC result to UART
*/
void ShowResult(BYTE ch)
                                                   //Show Channel NO.
        SendData(ch);
        SendData(GetADCResult(ch));
                                                  //Show ADC high 8-bit result
//if you want show 10-bit result, uncomment next line
        SendData(ADC LOW2);
                                                  //Show ADC low 2-bit result
}
Get ADC result
*/
BYTE GetADCResult(BYTE ch)
{
        ADC_CONTR = ADC_POWER | ADC_SPEEDLL | ch | ADC_START;
                                                  //Must wait before inquiry
        _nop_();
        _nop_();
        _nop_();
        _nop_();
        while (!(ADC CONTR & ADC FLAG));
                                                  //Wait complete flag
        ADC CONTR &= ~ADC FLAG;
                                                  //Close ADC
        return ADC_DATA;
                                                           //Return ADC result
```

```
Initial UART
*/
void InitUart()
       SCON = 0x5a:
                                                //8 bit data ,no parity bit
       TMOD = 0x20;
                                                //T1 as 8-bit auto reload
       TH1 = TL1 = -(FOSC/12/32/BAUD);
                                                //Set Uart baudrate
       TR1 = 1;
                                                //T1 start running
Initial ADC sfr
*/
void InitADC()
        P1 = P1M0 = P1M1 = 0xff;
                                                //Set all P1 as Open-Drain mode
       ADC DATA = 0;
                                                //Clear previous result
        ADC CONTR = ADC POWER | ADC SPEEDLL;
        Delay(2);
                                                //ADC power-on and delay
/*_____
Send one byte data to PC
Input: dat (UART data)
Output:-
*/
void SendData(BYTE dat)
{
        while (!TI);
                                                //Wait for the previous data is sent
                                                //Clear TI flag
       TI = 0;
       SBUF = dat;
                                                //Send current data
Software delay function
*/
void Delay(WORD n)
        WORD x;
        while (n--)
                x = 5000:
                while (x--);
```

2. Assembly language code listing:

```
:/*-----*/
;/* --- STC MCU International Limited -----*/
:/* --- STC 1T Series MCU A/D Conversion Demo -----*/
;/* If you want to use the program or the program referenced in the */
;/* article, please specify in which data and procedures from STC */
·/*____*/
:/*Declare SFR associated with the ADC */
ADC CONTR
               EOU
                      0C5H
                                             ;ADC control register
ADC DATA
               EOU
                      0C6H
                                             ;ADC high 8-bit result register
ADC LOW2
               EOU
                      0BEH
                                             ;ADC low 2-bit result register
P1M0
               EOU
                      091H
                                             ;P1 mode control register0
P1M1
               EOU
                      092H
                                             ;P1 mode control register1
;/*Define ADC operation const for ADC CONTR*/
ADC POWER
               EOU
                      80H
                                             ;ADC power control bit
ADC FLAG
               EOU
                      10H
                                             ;ADC complete flag
ADC START
               EOU
                      08H
                                             ;ADC start control bit
ADC SPEEDLL
               EOU
                      00H
                                             ;1080 clocks
ADC SPEEDL
               EOU
                      20H
                                             ;810 clocks
ADC SPEEDH
               EOU
                      40H
                                             :540 clocks
ADC SPEEDHH EQU
                      60H
                                             :270 clocks
       ORG
               0000H
       LJMP
               MAIN
       ORG
               0100H
MAIN:
       LCALL INIT UART
                                             ;Init UART, use to show ADC result
       LCALL INIT ADC
                                             :Init ADC sfr
NEXT:
       MOV
               A,
                      #0
       LCALL SHOW RESULT
                                             ;Show channel0 result
       MOV
               A,
                      #1
       LCALL SHOW RESULT
                                             ;Show channel1 result
       MOV
               A,
                      #2
                                             ;Show channel2 result
       LCALL SHOW RESULT
```

```
MOV
                      #3
               A.
       LCALL SHOW RESULT
                                             ;Show channel3 result
       MOV
               A.
                      #4
       LCALL SHOW RESULT
                                             ;Show channel4 result
       MOV
               A.
                      #5
       LCALL SHOW RESULT
                                             ;Show channel5 result
       MOV
               Α.
                      #6
                                             ;Show channel6 result
       LCALL SHOW RESULT
       MOV
                      #7
               A.
                                             ;Show channel7 result
       LCALL SHOW RESULT
       SJMP
              NEXT
·/*_____
;Send ADC result to UART
;Input: ACC (ADC channel NO.)
:Output:-
*/
SHOW RESULT:
       LCALL SEND DATA
                                             ;Show Channel NO.
       LCALL GET ADC RESULT
                                             ;Get high 8-bit ADC result
       LCALL SEND DATA
                                             :Show result
;//if you want show 10-bit result, uncomment next 2 lines
       MOV
              A,
                      ADC LOW2
                                             :Get low 2-bit ADC result
       LCALL SEND DATA
                                             ;Show result
       RET
·/*_____
;Read ADC conversion result
;Input: ACC (ADC channel NO.)
;Output:ACC (ADC result)
;----*/
GET_ADC_RESULT:
                      #ADC POWER | ADC SPEEDLL | ADC START
       ORL
                                             ;Start A/D conversion
       MOV
              ADC CONTR, A
       NOP
                                             ;Must wait before inquiry
       NOP
       NOP
       NOP
WAIT:
       MOV
                      ADC CONTR
                                                            ;Wait complete flag
               A,
       JNB
               ACC.4, WAIT
                                 ;ADC FLAG(ADC CONTR.4)
               ADC CONTR
                              ,#NOT ADC FLAG
                                                            ;Clear ADC FLAG
       ANL
                      ADC DATA
       MOV
                                                                    ;Return ADC result
               A,
       RET
```

```
;Initial ADC sfr
;----*/
INIT ADC:
       MOV
                       #0FFH
               A,
       MOV
               P1.
                       Α
       MOV
               P1M0,
                       Α
       MOV
               P1M1,
                      Α
                                                      ;Set all P1 as Open-Drain mode
       MOV
               ADC DATA,#0
                                                      ;Clear previous result
       MOV
               ADC CONTR,
                              #ADC POWER | ADC SPEEDLL
       MOV
                                                     ;ADC power-on and delay
               A,
                       #2
       LCALL DELAY
       RET
·/*_____
;Initial UART
:----*/
INIT UART:
       MOV
               SCON,
                      #5AH
                                                     ;8 bit data ,no parity bit
       MOV
               TMOD, #20H
                                                      ;T1 as 8-bit auto reload
       MOV
                       #-5
                                                      ;Set Uart baudrate -(18432000/12/32/9600)
               A,
       MOV
               TH1,
                                                     ;Set T1 reload value
                       Α
       MOV
               TL1,
                       Α
       SETB
               TR1
                                                     ;T1 start running
       RET
·/*_____
;Send one byte data to PC
;Input: ACC (UART data)
;Output:-
;----*/
SEND_DATA:
       JNB
               TI,$
                                                     ;Wait for the previous data is sent
       CLR
               ΤI
                                                      :Clear TI flag
       MOV
               SBUF,
                                                      ;Send current data
       RET
·/*_____
;Software delay function
DELAY:
       MOV
               R2,
                       Α
       CLR
               Α
       MOV
               R0.
                       Α
       MOV
               R1,
                       Α
DELAY1:
       DJNZ
               R0.
                       DELAY1
       DJNZ
               R1,
                       DELAY1
       DJNZ
               R2,
                       DELAY1
       RET
       END
```

Chapter 10. Programmable Counter Array(PCA)

The Programmable Counter Array is a special 16-bit Timer that has four 16-bit capture/compare modules associated with it. Each of the modules can be programmed to operate in one of four modes: rising and/or falling edge capture (calculator of duty length for high/low pulse), software timer, high-speed output, or pulse width modulator. Module 0 is connected to pin P3.7, module 1 to pin P3.5, module 2 to pin P2.0, module 3 to pin P2.4 in STC12C5620AD series.

The PCA timer is a common time base for all four modules and can be programmed to run at 1/12 the system clock, 1/2 the system clock, the Timer 0 overflow or the input on ECI pin(P3.4). The timer count source is determined from CPS1 and CPS0 bits in the CMOD SFR.

10.1 SFRs related with PCA

PCA/PWM SFRs table

Mnemonic	Description	Add			Bit a	ıddress a	ınd Syr	nbol			Reset
Minemonic	Description	Add	В7	В6	В5	В4	В3	В2	B1	В0	Value
CCON	PCA Control Register	D8H	CF	CR	-	-	CCF3	CCF2	CCF1	CCF0	00xx,0000
CMOD	PCA Mode Register	D9H	CIDL	-	-	-	-	CPS1	CPS0	ECF	0xxx,x000
CCAPM0	PCA Module 0 Mode Register	DAH	-	ECOM0	CAPP0	CAPN0	MAT0	TOG0	PWM0	ECCF0	x000,0000
CCAPM1	PCA Module 1 Mode Register	DBH	-	ECOM1	CAPP1	CAPN1	MAT1	TOG1	PWM1	ECCF1	x000,0000
CCAPM2	PCA Module 2 Mode Register	DCH	-	ECOM2	CAPP2	CAPN2	MAT2	TOG2	PWM2	ECCF2	x000,0000
CCAPM3	PCA Module 3 Mode Register	DDH	-	ECOM3	CAPP3	CAPN3	MAT3	TOG3	PWM3	ECCF3	x000,0000
CL	PCA Base Timer Low	Е9Н									0000,0000
СН	PCA Base Timer High	F9H									0000,0000
CCAP0L	PCA Module-0 Capture Register Low	ЕАН									0000,0000
ССАР0Н	PCA Module-0 Capture Register High	FAH									0000,0000
CCAP1L	PCA Module-1 Capture Register Low	ЕВН									0000,0000
ССАР1Н	PCA Module-1 Capture Register High	FBH									0000,0000
CCAP2L	PCA Module-2 Capture Register Low	ЕСН									0000,0000
ССАР2Н	PCA Module-2 Capture Register High	FCH									0000,0000
CCAP3L	PCA Module-3 Capture Register Low	EDH									0000,0000
ССАР3Н	PCA Module-3 Capture Register High	FDH									0000,0000

Mnemonic	Description	Add			Bit a	ddress a	ınd Syr	nbol			Reset
Minemonic	Description	Add	В7	В6	В5	В4	В3	В2	B1	В0	Value
TECA PW/MO	PCA PWM Mode Auxiliary Register 0	F2H	-		-	-	-	-	ЕРС0Н	EPC0L	xxxx,xx00
PCA_PWM1	PCA PWM Mode Auxiliary Register 1	F3H	1	-	ı	-	-	-	EPC1H	EPC1L	xxxx,xx00
PCA_PWM2	PCA PWM Mode Auxiliary Register 2	F4H		-	-	-	-	-	ЕРС2Н	EPC2L	xxxx,xx00
PCA_PWM3	PCA PWM Mode Auxiliary Register 3	F5H	-	-	-	-	-	-	ЕРС3Н	EPC3L	xxxx,xx00

1. PCA operation mode register: CMOD (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
CMOD	D9H	name	CIDL	-	-	-	-	CPS1	CPS0	ECF

CIDL: PCA Counter control bit in Idle mode.

If CIDL=0, the PCA counter will continue functioning during idle mode.

If CIDL=1, the PCA counter will be gated off during idle mode.

CPS1, CPS0: PCA Counter Pulse source Select bits.

CPS1	CPS0	Select PCA/PWM clock source
0	0	0, System clock/12, SYSclk/12
0	1	1, System clock/2, SYSclk/2
1	0	2, Timer 0 overflow. PCA/PWM clock can up to SYSclk because Timer 0 can operate in 1T mode. Frequency-adjustable PWM output can be achieved by changing the Timer 0 overflow.
1	1	3, Exrenal clock from ECI/P3.4 pin (max speed = SYSclk/2)

For example, If CPS1/CPS0=0/0, PCA/PWM clock source is SYSclk/12.

If users need to select SYSclk/3 as PCA clock source, Timer 0 should be set to operate in 1T mode and generate an overflow every 3 counting pulse.

ECF: PCA Counter Overflow interrupt Enable bit.

ECF=0 disables CF bit in CCON to generate an interrupt.

ECF=1 enables CF bit in CCON to generate an interrupt.

2. PCA control register : CCON (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
CCON	D8H	name	CF	CR	-	-	CCF3	CCF2	CCF1	CCF0

- CF: PCA Counter overflow flag. Set by hardware when the counter rolls over. CF flags an interrupt if bit ECF in CMOD is set. CF may be set by either hardware or software but can only be cleared by software.
- CR: PCA Counter Run control bit. Set by software to turn the PCA counter on. Must be cleared by software to turn the PCA counter off.
- CCF3: PCA Module 3 interrupt flag. Set by hardware when a match or capture from module 3 occurs. Must be cleared by software. A match means the value of the PCA counter equals the value of the Capture/Compare register in module 3. A capture means a specific edge from PCA3 happens, so the Capture/Compare register latches the value of the PCA counter, and the CCF3 is set.
- CCF2: PCA Module 2 interrupt flag. Set by hardware when a match or capture from module 2 occurs. Must be cleared by software. A match means the value of the PCA counter equals the value of the Capture/Compare register in module 2. A capture means a specific edge from PCA2 happens, so the Capture/Compare register latches the value of the PCA counter, and the CCF2 is set.
- CCF1: PCA Module 1 interrupt flag. Set by hardware when a match or capture from module 1 occurs. Must be cleared by software. A match means the value of the PCA counter equals the value of the Capture/Compare register in module 1. A capture means a specific edge from PCA1 happens, so the Capture/Compare register latches the value of the PCA counter, and the CCF1 is set.
- CCF0: PCA Module 0 interrupt flag. Set by hardware when a match or capture from module 0 occurs. Must be cleared by software. A match means the value of the PCA counter equals the value of the Capture/Compare register in module 0. A capture means a specific edge from PCA0 happens, so the Capture/Compare register latches the value of the PCA counter, and the CCF0 is set.

3. PCA capture/campare register CCAPM0, CCAPM1, CCAPM2 and CCAPM3

Each module in the PCA has a special function register associated with it. These registers are CCAPMn, n=0 ~3. CCAPM0 for module 0, CCAPM1 for module 1, CCAPM2 for module 2 and CCAPM3 for module 3. The register contains the bits that control the mode in which each module will operate. The ECCFn bit enables the CCFn flag in the CCON SFR to generate an interrupt when a match or compare occurs in the associated module. PWMn enables the pulse width modulation mode. The TOGn bit when set causes the CCPn output associated with the module to toggle when there is a match between the PCA counter and the module's capture/compare register. The match bit(MATn) when set will cause the CCFn bit in the CCON register to be set when there is a match between the PCA counter and the module's capture/compare register.

The next two bits CAPNn and CAPPn determine the edge that a capture input will be active on. The CAPNn bit enables the negative edge, and the CAPPn bit enables the positive edge. If both bits are set, both edges will be enabled and a capture will occur for either transition. The bit ECOMn when set enables the comparator function.

Capture/Compare register of PCA module 0 : CCAPM0 (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
CCAPM0	DAH	name	-	ECOM0	CAPP0	CAPN0	MAT0	TOG0	PWM0	ECCF0

ECOM0: Comparator Enable bit.

ECOM0=0 disables the comparator function; ECOM0=1 enables the comparator function.

CAPPO: Capture Positive control bit.

CAPP0=1 enables positive edge capture.

CAPN0: Capture Negative control bit.

CAPN0=1 enables negative edge capture.

MAT0 · Match control bit.

> When MAT0 = 1, a match of the PCA counter with this module's compare/capture register causes the CCF0 bit in CCON to be set.

 $TOG0 \cdot$ Toggle control bit.

> When TOG0=1, a match of the PCA counter with this module's compare/capture register causes the CCP0 pin to toggle.

(PCA0/PWM0/P3.7)

PWM0: Pulse Width Modulation.

PWM0=1 enables the CCP0 pin to be used as a pulse width modulated output.

(PCA0/PWM0/P3.7)

ECCF0: Enable CCF0 interrupt.

Enables compare/capture flag CCF0 in the CCON register to generate an interrupt.

Capture/Compare register of PCA module 1: CCAPM1 (Non bit-addressable)

SFR name	Address	bit	В7	В6	B5	B4	В3	B2	B1	В0
CCAPM1	DBH	name	-	ECOM1	CAPP1	CAPN1	MAT1	TOG1	PWM1	ECCF1

ECOM1: Comparator Enable bit.

ECOM1=0 disables the comparator function; ECOM1=1 enables the comparator function.

CAPP1: Capture Positive control bit.

CAPP1=1 enables positive edge capture.

CAPN1: Capture Negative control bit.

CAPN1=1 enables negative edge capture.

MAT1: Match control bit.

When MAT1 = 1, a match of the PCA counter with this module's compare/capture register causes the CCF1 bit in CCON to be set.

TOG1: Toggle control bit.

When TOG1=1, a match of the PCA counter with this module's compare/capture register causes the CCP1 pin to toggle.

(PCA1/PWM1/P3.5)

PWM1: Pulse Width Modulation.

PWM1=1 enables the CEX1 pin to be used as a pulse width modulated output.

(PCA1/PWM1/P3.5)

ECCF1: Enable CCF1 interrupt.

Enables compare/capture flag CCF1 in the CCON register to generate an interrupt.

Capture/Compare register of PCA module 2: CCAPM2 (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
CCAPM2	DCH	name	-	ECOM2	CAPP2	CAPN2	MAT2	TOG2	PWM2	ECCF2

ECOM2: Comparator Enable bit.

ECOM2=0 disables the comparator function;

ECOM2=1 enables the comparator function.

CAPP2: Capture Positive control bit.

CAPP2=1 enables positive edge capture.

CAPN2: Capture Negative control bit.

CAPN2=1 enables negative edge capture.

MAT2: Match control bit.

When MAT2 = 1, a match of the PCA counter with this module's compare/capture register causes the CCF2 bit in CCON to be set.

TOG2: Toggle control bit.

When TOG2=1, a match of the PCA counter =with this module's compare/capture register causes the CCP2 pin to toggle. (PCA2/PWM2/P2.0)

PWM2: Pulse Width Modulation.

PWM2=1 enables the CEX2 pin to be used as a pulse width modulated output.

(PCA2/PWM2/P2.0)

ECCF2: Enable CCF2 interrupt.

Enables compare/capture flag CCF2 in the CCON register to generate an interrupt.

Capture/Compare register of PCA module 3: CCAPM3 (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
CCAPM3	DDH	name	-	ECOM3	CAPP3	CAPN3	MAT3	TOG3	PWM3	ECCF3

ECOM3: Comparator Enable bit.

ECOM3=0 disables the comparator function; ECOM3=1 enables the comparator function.

CAPP3: Capture Positive control bit.

CAPP3=1 enables positive edge capture.

CAPN3: Capture Negative control bit.

CAPN3=1 enables negative edge capture.

MAT3: Match control bit.

When MAT3 = 1, a match of the PCA counter with this module's compare/capture register causes the CCF3 bit in CCON to be set.

TOG3: Toggle control bit.

When TOG3=1, a match of the PCA counter =with this module's compare/capture register causes the CCP3 pin to toggle. (PCA3/PWM3/P2.4)

PWM3: Pulse Width Modulation.

PWM3=1 enables the CEX3 pin to be used as a pulse width modulated output.

(PCA3/PWM3/P2.4)

ECCF3: Enable CCF3 interrupt.

Enables compare/capture flag CCF3 in the CCON register to generate an interrupt.

The operation mode of PCA modules set as shown in the below table.

Setting the operation mode of PCA modules (CCAPMn register, n = 0,1,2,3)

-	ECOMn	CAPPn	CAPNn	MATn	TOGn	PWMn	ECCFn	Function of PCA modules
	0	0	0	0	0	0	0	No operation
	1	0	0	0	0	1	0	8-bit PWM, no interrupt
	1	1	0	0	0	1	1	8-bit PWM output, interrupt can be generated on rising edge.
	1	0	1	0	0	1	1	8-bit PWM output, interrupt can be generated on falling edge.
	1	1	1	0	0	1	1	8-bit PWM output, interrupt can be generated on both rising and falling edges.
	X	1	0	0	0	0	X	16-bit Capture Mode, caputre triggered by the rising edge on CCPn/PCAn pin
	X	0	1	0	0	0	X	16-bit Capture Mode, capture triggered by the falling edge on CCPn/PCAn pin
	X	1	1	0	0	0	X	16-bit Capture Mode, capture triggered by the transition on CCPn/PCAn pin
	1	0	0	1	0	0	X	16-bit software timer
	1	0	0	1	1	0	X	16-bit high-speed output

4. PCA 16-bit Counter — low 8-bit CL and high 8-bit CH

The addresses of CL and CH respectively are E9H and F9H, and their reset value both are 00H. CL and CH are used to save the PCA load value.

5. PCA Capture/Compare register — CCAPnL and CCAPnH

When PCA is used to capture/compare, CCAPnL and CCAPnH are used to save the 16-bit capture value in corresponding block. When PCA is operated in PWM mode, CCAPnL and CCAPnH are used to control the duty cycle of PWM output signal. "n=0 or 1 or 2 or 3" respectively stand for module 0, 1, 2 and 3. Reset value of regsiters CCAPnL and CCAPnH are both 00H. Their addresses respectively are:

CCAPOL — EAH, CCAPOH — FAH: Capture / Compare register of module 0

CCAP1L — EBH, CCAP1H — FBH: Capture / Compare register of module 1

CCAP2L — ECH, CCAP2H — FCH: Capture / Compare register of module 2

CCAP3L — EDH, CCAP3H — FDH: Capture / Compare register of module 3

6. PWM registers of PCA modules: PCA_PWM0 and PCA_PWM1

PCA PWM0: PWM register of PCA module 0

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
PCA_PWM0	F2H	name	-	-	-	-	-	-	EPC0H	EPC0L

 $B7 \sim B2$: Reserved

EPC0H : Associated with CCAP0H, it is used in PCA PWM mode. EPC0L : Associated with CCAP0L, it is used in PCA PWM mode.

PCA PWM1: PWM register of PCA module 1

SFR name	Address	bit	В7	В6	В5	В4	В3	В2	B1	В0
PCA_PWM1	F3H	name	-	-	-	-	-	-	EPC1H	EPC1L

B7 ~ B2 : Reserved

EPC1H : Associated with CCAP1H, it is used in PCA PWM mode. EPC1L : Associated with CCAP1L, it is used in PCA PWM mode.

PCA PWM2: PWM register of PCA module 2

SFR name	Address	bit	В7	В6	В5	В4	В3	В2	B1	В0
PCA_PWM2	F4H	name	-	-	-	-	-	-	EPC2H	EPC2L

 $B7 \sim B2$: Reserved

EPC2H : Associated with CCAP2H, it is used in PCA PWM mode. EPC2L : Associated with CCAP2L, it is used in PCA PWM mode.

PCA PWM3: PWM register of PCA module 3


SFR name	Address	bit	В7	В6	В5	В4	В3	В2	B1	В0
PCA_PWM3	F5H	name	-	-	-	-	-	-	ЕРС3Н	EPC3L

 $B7 \sim B2$: Reserved

EPC3H : Associated with CCAP3H, it is used in PCA PWM mode. EPC3L : Associated with CCAP3L, it is used in PCA PWM mode.

10.2 PCA/PWM Structure

There are 2 channels Programmable Counter Arrary PCA/PWM in STC12C5620AD series MCU.

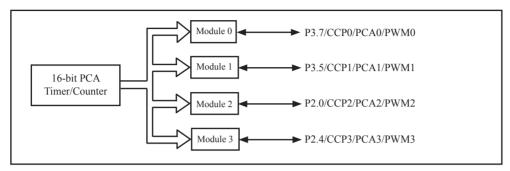

Programmable Counter Arrary Structure


Each PCA/PWM module can be operated in 4 modes: rising / falling capture mode, software timer, high-speed output mode and adjustable pulse output mode.

STC12C5620AD series: module 0 connect to P3.7/PCA0/PWM0,

module 1 connect to P3.5/PCA1/PWM1.

module 2 connect to P2.0/PCA2/PWM2.

module 3 connect to P2.4/PCA3/PWM3.

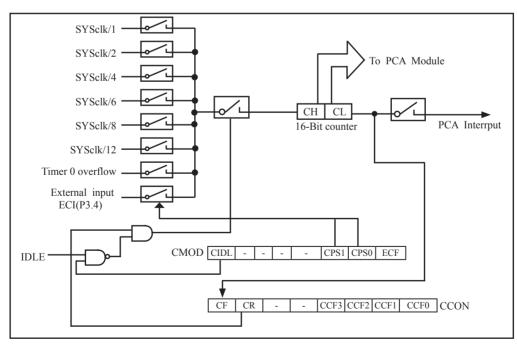

PCA Timer/Counter

In the CMOD SFR, there are two additional bits associated with the PCA. They are CIDL which allows the PCA to stop during idle mode, and ECF which when set causes an interrupt and the PCA overflow flag CF(in the CCON SFR) to be set when the PCA timer overflows.

The CCON SFR contains the run control bit for PCA and the flags for the PCA timer and each module. To run the PCA the CR bit(CCON.6) must be set by software; oppositely clearing bit CR will shut off PCA is shut off PCA. The CF bit(CCON.7) is set when the PCA counter overflows and an interrupt will be generated if the ECF (CMOD.0) bit in the CMOD register is set. The CF bit can only be cleared by software. There are two bits named CCF0 and CCF1 in SFR CCON. The CCF0 and CCF1 are the flags for module 0 and module 1 respectively. They are set by hardware when either a match or a capture occurs. These flags also can only be cleared by software.

Each module in the PCA has a special function register associated with it, CCAPM0 for module-0, CCAPM1 for module-1, CCAPM2 for module-2 and CCAPM3 for module-3. The register contains the bits that control the mode in which each module will operate. The ECCFn bit controls if to pass the interrupt from CCFn flag in the CCON SFR to the MCU when a match or compare occurs in the associated module. PWMn enables the pulse width modulation mode. The TOGn bit when set causes the pin CCPn output associated with the module to toggle when there is a match between the PCA counter and the module's Capture/Compare register. The match bit (MATn) when set will cause the CCFn bit in the CCON register to be set when there is a match between the PCA counter and the module's Capture/Compare register.

The next two bits CAPNn and CAPPn determine the edge type that a capture input will be active on. The CAPNn bit enables the negative edge, and the CAPPn bit enables the positive edge. If both bits are set, both edges will be enabled and a capture will occur for either transition. The bit ECOMn when set enables the comparator function.

10.3 PCA Modules Operation Mode


The operation mode of PCA modules set as shown in the below table.

Setting the operation mode of PCA modules (CCAPMn register, $n = 0.1$)	Setting the o	peration mod	le of PCA module	es (CCAPMn	register.	n = 0.1
---	---------------	--------------	------------------	------------	-----------	---------

-	ECOMn	CAPPn	CAPNn	MATn	TOGn	PWMn	ECCFn	Function of PCA modules
	0	0	0	0	0	0	0	No operation
	1	0	0	0	0	1	0	8-bit PWM, no interrupt
	1	1	0	0	0	1	1	8-bit PWM output, interrupt can be generated on rising edge.
	1	0	1	0	0	1	1	8-bit PWM output, interrupt can be generated on falling edge.
	1	1	1	0	0	1	1	8-bit PWM output, interrupt can be generated on both rising and falling edges.
	X	1	0	0	0	0	X	16-bit Capture Mode, caputre triggered by the rising edge on CCPn/PCAn pin
	X	0	1	0	0	0	X	16-bit Capture Mode, capture triggered by the falling edge on CCPn/PCAn pin
	X	1	1	0	0	0	X	16-bit Capture Mode, capture triggered by the transition on CCPn/PCAn pin
	1	0	0	1	0	0	X	16-bit software timer
	1	0	0	1	1	0	X	16-bit high-speed output

10.3.1 PCA Capture Mode


To use one of the PCA modules in the capture mode either one or both of the CCAPM bits – CAPPn and CAPNn, for the module must be set. The external CCPn input (CCP0/P3.7, CCP1/P3.5) for the module is sampled for a transition. When a valid transition occurs, the PCA hardware loads the value of the PCA counter register(CH and CL) into the module's capture registers(CCAPnH and CCAPnL). If the CCFn bit for the module in the CCON SFR and the ECCFn bit in the CCAPMn SFR are set then an interrupt will be generated.

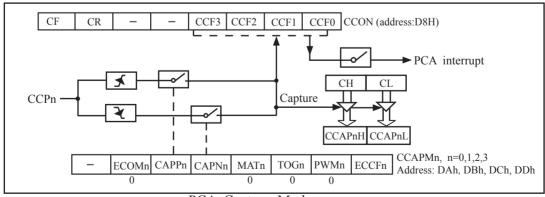

PCA Capture Mode

10.3.2 16-bit Software Timer Mode


The PCA modules can be used as software timers by setting both the ECOMn and MATn bits in the modules CCAPMn register. The PCA timer will be compared to the module's capture registers and when a match occurs an interrupt will be generated if the CCFn and ECCFn bits for the module are both set.

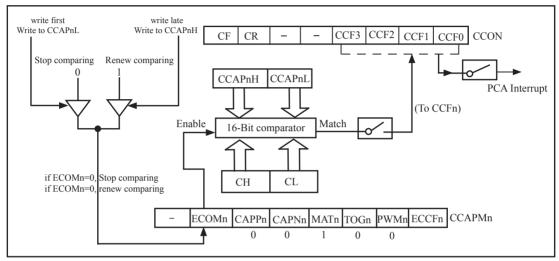

PCA Software Timer Mode

10.3.3 High Speed Output Mode


In this mode the CCPn output (port latch) associated with the PCA module will toggle each time a match occurs between the PCA counter and the module's capture registers. To activate this mode the TOGn,MATn,and ECOMn bits in the module's CCAPMn SFR must be set.

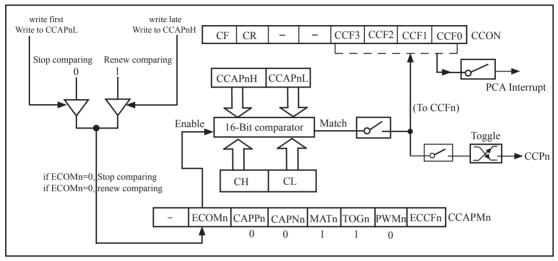

PCA High-Speed Output Mode

10.3.4 Pulse Width Modulator Mode (PWM mode)

All of the PCA modules can be used as PWM outputs. The frequency of the output depends on the source for the PCA timer. All of the modules will have the same frequency of output because they all share the same PCA timer. The duty cycle of each module is independently variable using the module's capture register CCAPnL and EPCnL bit in PCAPWMn register. When the value of the PCA CL SFR is less than the value in the module's {EPCnL,CCAPnL} SFR, the output will be low. When it is equal to or greater than , the output will be high. When CL overflows from FFH to 00H, {EPCnL,CCAPnL} is reloaded with the value in {EPCnH,CCAPnH}. That allows updating the PWM without glitches. The PWMn and ECOMn bits in the module's CCAPMn register must be set to enable the PWM mode.

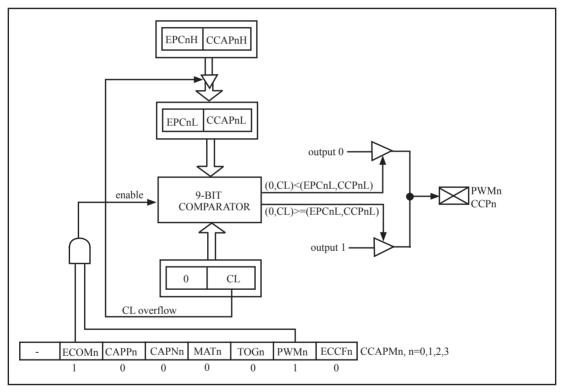

PCA PWM mode

10.4 Programs for PCA module extended external interrupt (C and ASM)

There are two programs for PCA module extended external interrupt demo, one wrriten in C language and the other in assembly language.

1. C code listing:

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU PCA module Extended external interrupt ----*/
/* If you want to use the program or the program referenced in the */
/* article, please specify in which data and procedures from STC */
/*_____*/
#include "reg51.h"
#include "intrins.h"
typedef unsigned char BYTE:
typedef unsigned int WORD;
/*Declare SFR associated with the PCA */
        EPCAI
                        = IE^6:
sbit
sfr
        CCON
                        = 0xD8;
                                                         //PCA control register
        CCF0
                                                         //PCA module-0 interrupt flag
sbit
                        = CCON^0:
sbit
        CCF1
                        = CCON^1;
                                                         //PCA module-1 interrupt flag
sbit
        CR
                        = CCON^6;
                                                         //PCA timer run control bit
shit
        CF
                        = CCON^7;
                                                         //PCA timer overflow flag
sfr
        CMOD
                          0xD9:
                                                         //PCA mode register
sfr
        CL
                        = 0xE9:
                                                         //PCA base timer LOW
sfr
        CH
                        = 0xF9;
                                                         //PCA base timer HIGH
                                                         //PCA module-0 mode register
sfr
        CCAPM0
                        = 0xDA;
                                                         //PCA module-0 capture register LOW
sfr
        CCAP0L
                        = 0xEA:
                                                         //PCA module-0 capture register HIGH
sfr
        CCAP0H
                        = 0xFA;
sfr
        CCAPM1
                        = 0xDB;
                                                         //PCA module-1 mode register
sfr
        CCAP1L
                        = 0xEB;
                                                         //PCA module-1 capture register LOW
sfr
        CCAP1H
                        = 0xFB;
                                                         //PCA module-1 capture register HIGH
                                                         //PCA module-2 mode register
sfr
        CCAPM2
                        = 0xDC:
sfr
        CCAP2L
                        = 0xEC;
                                                         //PCA module-2 capture register LOW
                                                         //PCA module-2 capture register HIGH
sfr
        CCAP2H
                        = 0xFC:
sfr
        CCAPM3
                        = 0xDD;
                                                         //PCA module-3 mode register
                                                         //PCA module-3 capture register LOW
sfr
        CCAP3L
                        = 0xED;
sfr
        CCAP3H
                        = 0xFD:
                                                         //PCA module-3 capture register HIGH
sfr
        PCAPWM0
                        = 0xF2;
sfr
        PCAPWM1
                        = 0xF3:
                        = 0xF4;
sfr
        PCAPWM2
sfr
        PCAPWM3
                        = 0xF5;
```

```
sbit
         PCA LED
                            = P1^0;
                                                                  //PCA test LED
void PCA isr() interrupt 7 using 1
         CCF0 = 0;
                                               //Clear interrupt flag
         PCA LED = !PCA LED;
                                               //toggle the test pin while CEX0(P1.3) have a falling edge
void main()
         CCON = 0;
                                     //Initial PCA control register
                                     //PCA timer stop running
                                     //Clear CF flag
                                     //Clear all module interrupt flag
         CL = 0;
                                     //Reset PCA base timer
         CH = 0;
                                     //Set PCA timer clock source as Fosc/12
         CMOD = 0x00;
                                     //Disable PCA timer overflow interrupt
                                     //PCA module-0 capture by a negative tigger on CEX0(P1.3)
         CCAPM0 = 0x11;
                                     //and enable PCA interrupt
//
         CCAPM0 = 0x21;
                                     //PCA module-0 capture by a rising edge on CEX0(P1.3)
                                     //and enable PCA interrupt
//
                                     //PCA module-0 capture by a transition (falling/rising edge)
         CCAPM0 = 0x31;
                                     //on CEX0(P1.3) and enable PCA interrupt
         CR = 1;
                                     //PCA timer start run
         EPCAI = 1;
         EA = 1;
         while (1);
```

;/*				*/
;/* STC	C MCU	Internatio	nal Limited	*/
				atended external interrupt*/
;/* If you v	want to	use the pr	ogram or the pro	ogram referenced in the */
				procedures from STC */
;/*				*/
;/*Declare	SFR as	sociated v	with the PCA */	
EPCAI		BIT	IE.6	
CCON		EQU	0D8H	;PCA control register
CCF0		BIT	CCON.0	;PCA module-0 interrupt flag
CCF1		BIT	CCON.1	;PCA module-1 interrupt flag
CR		BIT	CCON.6	;PCA timer run control bit
CF		BIT	CCON.7	;PCA timer overflow flag
CMOD		EQU	0D9H	;PCA mode register
CL		EQU	0E9H	;PCA base timer LOW
CH		EQU	0F9H	;PCA base timer HIGH
CCAPM0		EQU	0DAH	;PCA module-0 mode register
CCAP0L		EQU	0EAH	;PCA module-0 capture register LOW
CCAP0H		EQU	0FAH	;PCA module-0 capture register HIGH
CCAPM1		EQU	0DBH	;PCA module-1 mode register
CCAP1L		EQU	0EBH	;PCA module-1 capture register LOW
CCAP1H		EQU	0FBH	;PCA module-1 capture register HIGH
CCAPM2		EQU	0DCH	;PCA module-2 mode register
CCAP2L		EQU	0ECH	;PCA module-2 capture register LOW
CCAP2H		EQU	0FCH	;PCA module-2 capture register HIGH
CCAPM3		EQU	0DDH	;PCA module-3 mode register
CCAP3L		EQU	0EDH	;PCA module-3 capture register LOW
CCAP3H		EQU	0FDH	;PCA module-3 capture register HIGH
PCA_LED		BIT	P1.0	;PCA test LED
;				
	ORG	H0000		
L	JMP	MAIN		

	ORG	0033Н	
PCA_IS			
	CLR	CCF0	;Clear interrupt flag
	CPL	PCA_LED	;toggle the test pin while CEX0(P1.3) have a falling edge
	RETI		
;	ORG	0100H	
MATNI.	OKU	010011	
MAIN:	MOV	CCON #0	Juitial DCA control manister
	MOV	CCON, #0	;Initial PCA control register
			;PCA timer stop running
			;Clear CF flag
			;Clear all module interrupt flag
	CLR	A	;
	MOV	CL, A	;Reset PCA base timer
	MOV	CH, A	•
	MOV	CMOD, #00H	;Set PCA timer clock source as Fosc/12
			;Disable PCA timer overflow interrupt
	MOV	CCAPM0,#11H	;PCA module-0 capture by a falling edge on CEX0(P1.3)
			;and enable PCA interrupt
•	MOV	CCAPM0,#21H	;PCA module-0 capture by a rising edge on CEX0(P1.3)
,	WIOV	CC/11 1V10,#2111	;and enable PCA interrupt
	MOV	CCAPM0,#31H	;PCA module-0 capture by a transition (falling/rising edge)
,	IVIO V	CCAI WIO,#3111	;on CEX0(P1.3) and enable PCA interrupt
			,oii CEXO(F1.3) and enable FCA interrupt
,	SETB	CR	;PCA timer start run
	SETB	EPCAI	,
	SETB	EA	
	SEID	1./11	
	SJMP	\$	
;			
,	END		

10.5 Demo Programs for PCA module acted as 16-bit Timer (C and ASM)

There are two programs for PCA module acted as 16-bit Timer demo, one wrriten in C language and the other in assembly language.

```
:/*-----*/
;/* --- STC MCU International Limited -----*/
:/* --- STC 1T Series MCU PCA module acted as 16-bit Timer Demo -----*/
;/* If you want to use the program or the program referenced in the */
:/* article, please specify in which data and procedures from STC */
·/*____*/
#include "reg51.h"
#include "intrins.h"
#define FOSC
                18432000L
#define T100Hz (FOSC / 12 / 100)
typedef
       unsigned char
                        BYTE:
typedef unsigned int
                        WORD;
/*Declare SFR associated with the PCA */
sbit
                        = IE^6:
        EPCAI
sfr
        CCON
                        = 0xD8:
                                                        //PCA control register
shit
        CCF0
                        = CCON^0;
                                                        //PCA module-0 interrupt flag
sbit
        CCF1
                        = CCON^1:
                                                        //PCA module-1 interrupt flag
sbit
        CR
                        = CCON^6;
                                                        //PCA timer run control bit
sbit
        CF
                        = CCON^7;
                                                        //PCA timer overflow flag
        CMOD
                        = 0xD9;
                                                        //PCA mode register
sfr
sfr
        CL
                        = 0xE9;
                                                        //PCA base timer LOW
sfr
        CH
                        = 0xF9;
                                                        //PCA base timer HIGH
        CCAPM0
sfr
                        = 0xDA;
                                                        //PCA module-0 mode register
sfr
        CCAP0L
                        = 0xEA:
                                                        //PCA module-0 capture register LOW
                                                        //PCA module-0 capture register HIGH
sfr
        CCAP0H
                        = 0xFA;
sfr
        CCAPM1
                        = 0xDB;
                                                        //PCA module-1 mode register
                                                        //PCA module-1 capture register LOW
sfr
        CCAP1L
                        = 0xEB:
sfr
                                                        //PCA module-1 capture register HIGH
        CCAP1H
                        = 0xFB:
sfr
        CCAPM2
                        = 0xDC:
                                                        //PCA module-2 mode register
sfr
        CCAP2L
                        = 0xEC:
                                                        //PCA module-2 capture register LOW
sfr
        CCAP2H
                        = 0xFC;
                                                        //PCA module-2 capture register HIGH
sfr
        CCAPM3
                        = 0xDD;
                                                        //PCA module-3 mode register
sfr
        CCAP3L
                        = 0xED;
                                                        //PCA module-3 capture register LOW
sfr
        CCAP3H
                        = 0xFD;
                                                        //PCA module-3 capture register HIGH
```

```
PCA LED
                           = P1^0;
                                                                //PCA test LED
sbit
BYTE
         cnt;
WORD value;
void PCA isr() interrupt 7 using 1
         CCF0 = 0;
                                                       //Clear interrupt flag
         CCAPOL = value;
         CCAP0H = value >> 8;
                                                       //Update compare value
         value += T100Hz;
         if (cnt--=0)
                                                       //Count 100 times
                  cnt = 100;
                  PCA LED = !PCA LED;
                                                       //Flash once per second
}
void main()
         CCON = 0;
                                                       //Initial PCA control register
                                                       //PCA timer stop running
                                                       //Clear CF flag
                                                       //Clear all module interrupt flag
                                                       //Reset PCA base timer
         CL = 0;
         CH = 0;
                                                       //Set PCA timer clock source as Fosc/12
         CMOD = 0x00;
                                                       //Disable PCA timer overflow interrupt
         value = T100Hz;
         CCAP0L = value;
                                                       //Initial PCA module-0
         CCAP0H = value >> 8;
         value += T100Hz;
         CCAPM0 = 0x49;
                                                       //PCA module-0 work in 16-bit timer mode
                                                       //and enable PCA interrupt
         CR = 1;
                                                       //PCA timer start run
         EPCAI = 1;
         EA = 1;
         cnt = 0;
         while (1);
```

;/* S	TC MCU	Internation	nal Limited	*/
;/* S	TC 1T Se	ries MCU	PCA module acted as 16-bit 7	Γimer Demo*/
;/* If yo	u want to	use the pr	ogram or the program referen	ced in the */
;/* artic	le, please	specify in	which data and procedures from	om STC */
;/*				*/
T100Hz		EQU	3C00H	;(18432000 / 12 / 100)
	re SFR as		vith the PCA */	
EPCAI		BIT	IE.6	
CCON		EQU	0D8H	;PCA control register
CCF0		BIT	CCON.0	;PCA module-0 interrupt flag
CCF1		BIT	CCON.1	;PCA module-1 interrupt flag
CR		BIT	CCON.6	;PCA timer run control bit
CF		BIT	CCON.7	;PCA timer overflow flag
CMOD		EQU	0D9H	;PCA mode register
CL		EQU	0E9H	;PCA base timer LOW
CH		EQU	0F9H	;PCA base timer HIGH
CCAPM	[0	EQU	0DAH	;PCA module-0 mode register
CCAP0I	_	EQU	0EAH	;PCA module-0 capture register LOW
CCAP0I	H	EQU	0FAH	;PCA module-0 capture register HIGH
CCAPM	1	EQU	0DBH	;PCA module-1 mode register
CCAP11	_	EQU	0EBH	;PCA module-1 capture register LOW
CCAP11	Н	EQU	0FBH	;PCA module-1 capture register HIGH
CCAPM	[2	EQU	0DCH	;PCA module-2 mode register
CCAP2I	_	EQU	0ECH	;PCA module-2 capture register LOW
CCAP2I		EQU	0FCH	;PCA module-2 capture register HIGH
CCAPM		EQU	0DDH	;PCA module-3 mode register
CCAP31		EQU	0EDH	;PCA module-3 capture register LOW
CCAP31	Η	EQU	0FDH	;PCA module-3 capture register HIGH
PCA_LI	ED	BIT	P1.0	;PCA test LED
CNT		EQU	20H	
;	ORG LJMP	0000H MAIN		

	ORG LJMP	0033H PCA_IS		
;	ORG	0100H		
MAIN:				
	MOV	SP,	#3FH	;Initial stack point
	MOV	CCON,	#0	;Initial PCA control register
				;PCA timer stop running
				;Clear CF flag
				;Clear all module interrupt flag
	CLR	A		;
	MOV	CL,	A	;Reset PCA base timer
	MOV		A	;
	MOV	CMOD,	#00H	;Set PCA timer clock source as Fosc/12
				;Disable PCA timer overflow interrupt
,			L,#LOW T100Hz	
			H,#HIGH T100Hz	;Initial PCA module-0
	MOV) work in 16-bit timer mode and enable PCA interrupt
;			,- ,- ,- ,-	
	SETB	CR		;PCA timer start run
	SETB	EPCAI		
	SETB	EA		
	MOV	CNT,	#100	
	SJMP	\$		
;PCA IS				
1 071_15	PUSH	PSW		
	PUSH	ACC		
	CLR	CCF0		;Clear interrupt flag
	MOV		CCAP0L	,
	ADD			;Update compare value
	MOV			
	MOV		ССАР0Н	
	ADDC	A,	#HIGH T100Hz	
	MOV	CCAP0I	H,A	
	DJNZ	CNT,	PCA_ISR_EXIT	;count 100 times
	MOV	CNT,	#100	
	CPL	PCA_LI	ED	;Flash once per second
PCA_IS	R_EXIT:			
	POP	ACC		
	POP	PSW		
	RETI			
;	END			
	END			

10.6 Programs for PCA module as 16-bit High Speed Output(C and ASM)

There are two programs for PCA module as 16-bit High Speed Output, one wrriten in C language and the other in assembly language.

```
·/*_____*/
;/* --- STC MCU International Limited -----*/
;/* --- STC 1T Series MCU PCA module as 16-bit High Speed Output ----*/
;/* If you want to use the program or the program referenced in the */
;/* article, please specify in which data and procedures from STC */
·/*_____*/
#include "reg51.h"
#include "intrins.h"
#define FOSC
                18432000L
#define
       T100KHz (FOSC / 4 / 100000)
typedef
       unsigned char
                        BYTE:
typedef unsigned int
                        WORD;
/*Declare SFR associated with the PCA */
shit
        EPCAI
                        = IE^6.
sfr
        CCON
                        = 0xD8;
                                                        //PCA control register
        CCF0
shit
                        = CCON^0:
                                                        //PCA module-0 interrupt flag
sbit
        CCF1
                        = CCON^1:
                                                        //PCA module-1 interrupt flag
sbit
        CR
                        = CCON^6;
                                                        //PCA timer run control bit
sbit
        CF
                        = CCON^7;
                                                        //PCA timer overflow flag
        CMOD
sfr
                        = 0xD9;
                                                        //PCA mode register
sfr
        CL
                        = 0xE9;
                                                        //PCA base timer LOW
                        = 0xF9;
                                                        //PCA base timer HIGH
sfr
        CH
sfr
        CCAPM0
                        = 0xDA;
                                                        //PCA module-0 mode register
                                                        //PCA module-0 capture register LOW
sfr
        CCAP0L
                        = 0xEA:
                                                        //PCA module-0 capture register HIGH
sfr
        CCAP0H
                        = 0xFA;
                                                        //PCA module-1 mode register
sfr
        CCAPM1
                        = 0xDB:
                                                        //PCA module-1 capture register LOW
sfr
        CCAP1L
                        = 0xEB;
                                                        //PCA module-1 capture register HIGH
sfr
        CCAP1H
                        = 0xFB:
sfr
        CCAPM2
                        = 0xDC:
                                                        //PCA module-2 mode register
sfr
        CCAP2L
                        = 0xEC;
                                                        //PCA module-2 capture register LOW
sfr
        CCAP2H
                        = 0xFC:
                                                        //PCA module-2 capture register HIGH
sfr
        CCAPM3
                        = 0xDD;
                                                        //PCA module-3 mode register
sfr
        CCAP3L
                        = 0xED;
                                                        //PCA module-3 capture register LOW
sfr
        CCAP3H
                        = 0xFD;
                                                        //PCA module-3 capture register HIGH
```

```
= P1^0;
                                                                //PCA test LED
sbit
         PCA LED
BYTE
         cnt;
WORD value;
void PCA isr() interrupt 7 using 1
         CCF0 = 0;
                                              //Clear interrupt flag
         CCAP0L = value;
         CCAP0H = value >> 8;
                                              //Update compare value
         value += T100KHz;
}
void main()
{
         CCON = 0;
                                              //Initial PCA control register
                                              //PCA timer stop running
                                              //Clear CF flag
                                              //Clear all module interrupt flag
         CL = 0;
                                              //Reset PCA base timer
         CH = 0;
         CMOD = 0x02;
                                              //Set PCA timer clock source as Fosc/2
                                              //Disable PCA timer overflow interrupt
         value = T100KHz;
         CCAPOL = value;
                                              //P1.3 output 100KHz square wave
         CCAP0H = value >> 8;
                                              //Initial PCA module-0
         value += T100KHz;
         CCAPM0 = 0x4d;
                                              //PCA module-0 work in 16-bit timer mode
                                              //and enable PCA interrupt, toggle the output pin CEX0(P1.3)
         CR = 1;
                                              //PCA timer start run
         EPCAI = 1;
         EA = 1;
         cnt = 0;
         while (1);
```

·/*				*/
			nal Limited	
			PCA module as 16-bit High S	
			which data and procedures from	
•′				,
T100KF	łz	EQU	2EH	;(18432000 / 4 / 100000)
;/*Decla	re SFR as	sociated v	vith the PCA */	
CCON		EQU	0D8H	;PCA control register
CCF0		BIT	CCON.0	;PCA module-0 interrupt flag
CCF1		BIT	CCON.1	;PCA module-1 interrupt flag
CR		BIT	CCON.6	;PCA timer run control bit
CF		BIT	CCON.7	;PCA timer overflow flag
CMOD		EQU	0D9H	;PCA mode register
CL		EQU	0E9H	;PCA base timer LOW
CH		EQU	0F9H	;PCA base timer HIGH
CCAPM	10	EQU	0DAH	;PCA module-0 mode register
CCAP0	L	EQU	0EAH	;PCA module-0 capture register LOW
CCAP0	Н	EQU	0FAH	;PCA module-0 capture register HIGH
CCAPM	11	EQU	0DBH	;PCA module-1 mode register
CCAP1	L	EQU	0EBH	;PCA module-1 capture register LOW
CCAP1	Н	EQU	0FBH	;PCA module-1 capture register HIGH
CCAPM	12	EQU	0DCH	;PCA module-2 mode register
CCAP2	L	EQU	0ECH	;PCA module-2 capture register LOW
CCAP2	Н	EQU	0FCH	;PCA module-2 capture register HIGH
CCAPM	13	EQU	0DDH	;PCA module-3 mode register
CCAP3	L	EQU	0EDH	;PCA module-3 capture register LOW
CCAP3		EQU	0FDH	;PCA module-3 capture register HIGH
;				
	ORG	0000H		
	LJMP	MAIN		
	ORG	0033H		
PCA_IS				
	PUSH	PSW		
	PUSH	ACC		
	CLR	CCF0		;Clear interrupt flag

	MOV ADD MOV CLR ADDC MOV	A, #T100KHz CCAP0L,A A A, CCAP0H	;Update compare value
	R_EXIT: POP POP RETI	ACC PSW	
,	ORG	0100H	
MAIN:	MOV	CCON, #0	;Initial PCA control register ;PCA timer stop running ;Clear CF flag ;Clear all module interrupt flag
	CLR MOV MOV MOV	A CL, A CH, A CMOD, #02H	;;Reset PCA base timer ;;Set PCA timer clock source as Fosc/2 ;Disable PCA timer overflow interrupt
;		CCAP0L,#T100KHz CCAP0H,#0 CCAPM0,#4dH	;P1.3 output 100KHz square wave ;Initial PCA module-0 ;PCA module-0 work in 16-bit timer mode ;and enable PCA interrupt, toggle the output pin CEX0(P1.3)
,	SETB SETB	CR EA	;PCA timer start run
	SJMP	\$	
;	END		

10.7 Demo Programs for PCA module as PWM Output (C and ASM)

```
*_____*/
:/* --- STC MCU International Limited -----*/
:/* --- STC 1T Series MCU PCA module output PWM wave Demo -----*/
:/* If you want to use the program or the program referenced in the */
:/* article, please specify in which data and procedures from STC */
·/*_____*/
#include "reg51.h"
#include "intrins.h"
#define FOSC
                18432000L
typedef
       unsigned char
                        BYTE:
typedef unsigned int
                        WORD:
/*Declare SFR associated with the PCA */
                       = 0xD8;
sfr
        CCON
                                                        //PCA control register
                        = CCON^0;
        CCF0
                                                        //PCA module-0 interrupt flag
sbit
sbit
        CCF1
                        = CCON^1:
                                                        //PCA module-1 interrupt flag
                                                        //PCA timer run control bit
sbit
        CR
                        = CCON^6:
shit
        CF
                        = CCON^7;
                                                        //PCA timer overflow flag
        CMOD
                          0xD9;
                                                        //PCA mode register
sfr
sfr
        CL
                        = 0xE9;
                                                        //PCA base timer LOW
sfr
        CH
                        = 0xF9:
                                                        //PCA base timer HIGH
sfr
        CCAPM0
                       = 0xDA;
                                                        //PCA module-0 mode register
sfr
        CCAP0L
                       = 0xEA;
                                                        //PCA module-0 capture register LOW
sfr
                                                        //PCA module-0 capture register HIGH
        CCAP0H
                        = 0xFA:
sfr
        CCAPM1
                        = 0xDB;
                                                        //PCA module-1 mode register
                                                        //PCA module-1 capture register LOW
sfr
        CCAP1L
                       = 0xEB:
                                                        //PCA module-1 capture register HIGH
sfr
        CCAP1H
                        = 0xFB:
                                                        //PCA module-2 mode register
sfr
        CCAPM2
                        = 0xDC;
                                                        //PCA module-2 capture register LOW
sfr
        CCAP2L
                        = 0xEC;
sfr
        CCAP2H
                        = 0xFC:
                                                        //PCA module-2 capture register HIGH
                        = 0xDD;
                                                        //PCA module-3 mode register
sfr
        CCAPM3
sfr
        CCAP3L
                        = 0xED:
                                                        //PCA module-3 capture register LOW
sfr
        CCAP3H
                        = 0xFD:
                                                        //PCA module-3 capture register HIGH
sfr
        PCAPWM0
                        = 0xF2;
                        = 0xF3:
sfr
        PCAPWM1
sfr
        PCAPWM2
                        = 0xF4;
sfr
        PCAPWM3
                        = 0xF5;
```

```
void main()
         CCON = 0;
                                             //Initial PCA control register
                                             //PCA timer stop running
                                             //Clear CF flag
                                             //Clear all module interrupt flag
                                             //Reset PCA base timer
         CL = 0;
         CH = 0;
         CMOD = 0x02;
                                             //Set PCA timer clock source as Fosc/2
                                             //Disable PCA timer overflow interrupt
                                             //PWM0 port output 50% duty cycle square wave
         CCAP0H = CCAP0L = 0x80;
                                             //PCA module-0 work in 8-bit PWM mode
         CCAPM0 = 0x42;
                                             //and no PCA interrupt
         CCAP1H = CCAP1L = 0xff;
                                             //PWM1 port output 0% duty cycle square wave
         PCAPWM1 = 0x03;
                                             //PCA module-1 work in 8-bit PWM mode
         CCAPM1 = 0x42;
                                             //and no PCA interrupt
         CR = 1;
                                             //PCA timer start run
         while (1);
```

*				*/
;/* S7	C MCU I	Internation	nal Limited	*/
;/* S7	C 1T Ser	ies MCU I	PCA module output PWM way	/e Demo*/
			ogram or the program reference	
;/* articl	e, please s	specify in	which data and procedures from	m STC */
;/*				*/
;/*Decla	re SFR as	sociated w	vith the PCA */	
CCON		EQU	0D8H	;PCA control register
CCF0		BIT	CCON.0	;PCA module-0 interrupt flag
CCF1		BIT	CCON.1	;PCA module-1 interrupt flag
CR		BIT	CCON.6	;PCA timer run control bit
CF		BIT	CCON.7	;PCA timer overflow flag
CMOD		EQU	0D9H	;PCA mode register
CL		EQU	0E9H	;PCA base timer LOW
CH		EQU	0F9H	;PCA base timer HIGH
CCAPM	0	EQU	0DAH	;PCA module-0 mode register
CCAP0I	_	EQU	0EAH	;PCA module-0 capture register LOW
CCAP0I	I	EQU	0FAH	;PCA module-0 capture register HIGH
CCAPM	1	EQU	0DBH	;PCA module-1 mode register
CCAP1I		EQU	0EBH	;PCA module-1 capture register LOW
CCAP1I	I	EQU	0FBH	;PCA module-1 capture register HIGH
CCAPM	2	EQU	0DCH	;PCA module-2 mode register
CCAP2I		EQU	0ECH	;PCA module-2 capture register LOW
CCAP2I	I	EQU	0FCH	;PCA module-2 capture register HIGH
CCAPM	3	EQU	0DDH	;PCA module-3 mode register
CCAP3I		EQU	0EDH	;PCA module-3 capture register LOW
CCAP3I	I	EQU	0FDH	;PCA module-3 capture register HIGH
;				
	ORG	0000H		
	LJMP	MAIN		
;				
16157	ORG	0100H		
MAIN:	MOV	CCON	40	Juitial DCA control accietan
	MOV	CCON,	#0	;Initial PCA control register
				;PCA timer stop running
				;Clear CF flag
				;Clear all module interrupt flag

	CLR MOV MOV MOV	A CL, A CH, A CMOD, #02H	;;Reset PCA base timer ;;Set PCA timer clock source as Fosc/2 ;Disable PCA timer overflow interrupt
,	MOV	A, #080H	÷
	MOV	CCAP0H,A	;PWM0 port output 50% duty cycle square wave
	MOV	CCAP0L,A	;
	MOV	CCAPM0,#42H	;PCA module-0 work in 8-bit PWM mode and no PCA interrupt
;			
	MOV	A, #0C0H	;
	MOV	CCAP1H,A	;PWM1 port output 25% duty cycle square wave
	MOV	CCAP1L,A	;
	MOV	CCAPM1,#42H	;PCA module-1 work in 8-bit PWM mode and no PCA interrupt
;			
	SETB	CR	;PCA timer start run
	SJMP	\$	
;	END		

10.8 Demo Program for PCA clock base on Timer 1 overflow rate


```
·/*_____*/
;/* --- STC MCU International Limited -----*/
:/* --- STC 1T Series achieve adjustable frequency PWM output----*/
;/* If you want to use the program or the program referenced in the */
;/* article, please specify in which data and procedures from STC */
·/*_____*/
;/*Declare SFR associated with the ADC */
IPH
        EQU 0B7H
                        ;Interrupt priority control register high byte
CCON
                        ;PCA control register
        EQU 0D8H
CCF0
        BIT CCON.0
                        ;PCA module-0 interrupt flag
CCF1
        BIT CCON.1
                        :PCA module-1 interrupt flag
CR
                        :PCA timer run control bit
        BIT CCON.6
CF
                        ;PCA timer overflow flag
        BIT CCON.7
                        ;PCA mode register
CMOD EQU 0D9H
CL
                        :PCA base timer LOW
        EQU 0E9H
CH
        EOU 0F9H
                        ·PCA base timer HIGH
CCAPM0
                EOU 0DAH
                                ;PCA module-0 mode register
                        ;PCA module-0 capture register LOW
CCAP0L EQU 0EAH
                        ;PCA module-0 capture register HIGH
CCAP0H EQU 0FAH
                EQU 0DBH
CCAPM1
                                ;PCA module-1 mode register
CCAP1L EQU 0EBH
                        ;PCA module-1 capture register LOW
CCAP1H EQU 0FBH
                        ;PCA module-1 capture register HIGH
;/*Define working LED */
LED MCU START
                        EOU P1.7
LED 5ms Flashing
                        EQU P1.6
LED 1S Flashing EQU P1.5
Channel 5mS H EQU 01H
                                ;PCA module-1 5ms counter high byte @ 18.432MHz
Channel 5mS L
                                ;PCA module-1 5ms counter low byte @ 18.432MHz
                EQU 00H
Timer0 Reload 1 EQU 0F6H
                                ;Timer0 auto reload value (-10)
Timer0 Reload 2 EQU 0ECH
                                ;Timer0 auto reload value (-20)
PWM WIDTH
                EQU 0FFH
                                ;low duty
Counter EQU 030H
                        :counter value
```

```
ORG
               0000H
       LJMP
               MAIN
        ORG
               003BH
       LJMP
               PCA interrupt
        ORG
               0050H
MAIN:
        CLR
               LED_MCU_START
                                        :Turn on MCU working LED
        MOV
               SP,#7FH
        MOV
               Counter,#0
                                        ;initial Counter var
        ACALL PAC Initial
                                        ;initial PCA
        ACALL Timer0 Initial
                                        ;Initial Timer0
MAIN_Loop:
               TH0,#Timer0 Reload 1
                                       ;Set Timer0 overload rate 1
        MOV
               TL0,#Timer0 Reload 1
        MOV
        MOV
               A,#PWM WIDTH ;setting duty
        MOV
               CCAP0H,A
        ACALL delay
        MOV
               TH0,#Timer0 Reload 2
                                       ;Set Timer0 overload rate 2
        MOV
               TL0,#Timer0 Reload 2
        ACALL delay
        MOV
               TH0,#Timer0 Reload 1
                                       ;Set Timer0 overload rate 1
               TL0,#Timer0 Reload 1
        MOV
        MOV
               A,#PWM WIDTH
        ACALL RL A
                       ;change duty
        ACALL RL A
        MOV
               CCAP0H,A
        ACALL delay
        MOV
               TH0,#Timer0 Reload 2
                                       ;Set Timer0 overload rate 2
        MOV
               TL0,#Timer0 Reload 2
        ACALL delay
        MOV
               TH0,#Timer0 Reload 1
                                       ;Set Timer0 overload rate 1
        MOV
               TL0,#Timer0 Reload 1
               A,#PWM WIDTH
       MOV
        ACALL RL_A ;change duty
```

```
ACALL RL A
        ACALL RL A
        ACALL RL A
        MOV
               CCAP0H,A
        ACALL delay
        MOV
               TH0,#Timer0 Reload 2
                                        ;Set Timer0 overload rate 2
        MOV
               TL0,#Timer0 Reload 2
        ACALL delay
       SJMP
               MAIN Loop
RL A:
        CLR
               C
        RRC
               Α
       RET
Timer0 Initial:
        MOV
               TMOD,#02H
                                :8-bit auto-reload
        MOV
               TH0,#Timer0 Reload 1
               TL0,#Timer0 Reload 1
        MOV
        SETB
               TR0
                        ;strat run
       RET
PCA Initial:
        MOV
               CMOD,#10000100B
                                        ;PCA timer base on Timer0
                                ;PCA stop count
        MOV
               CCON,#00H
        MOV
               CL,#0
                        ;initial PCA counter
        MOV
               CH,#0
        MOV
               CCAPM0,#42H
                               ;PCA module-0 as 8-bit PWM
               PCA PWM0,#0 ;PWM mode 9<sup>th</sup> bit
        MOV
        MOV
               PCA PWM0,#03H;PWM will keep low level
               CCAP1L,#Channel_5mS_L ;initial PCA module-1
        MOV
        MOV
               CCAP1H,#Channel 5mS H
        MOV
               CCAPM1,#49H
                               ;PCA module-1 as 16-bit timer
        SETB
               EA
        SETB
               CR
                        ;PCA counter start running
        RET
```

```
PCA Interrupt:
        PUSH
               ACC
       PUSH
               PSW
        CPL
               LED 5mS Flashing
                                       ;Flashing once per 5ms
        MOV
               A,#Channel 5mS L
        ADD
               A,CCAP1L
        MOV
               CCAP1L,A
        MOV
               A,#Channel 5mS H
        ADDC
               A,CCAP1H
        MOV
               CCAP1H,A
        CLR
               CCF1 ;Clear PCA module-1 flag
       INC
               Counter
        MOV
               A,Counter
        CLR
               C
        SUBB
               A,#100 ;Count 100 times
        JC
               PCA Interrupt Exit
        MOV
               Counter,#0
        CPL
               LED 1S,Flash
PCA Interrupt Exit:
        POP
               PSW
        POP
               ACC
       RETI
delay:
        CLR
               Α
        MOV
               R1,A
       MOV
               R2,A
       MOV
               R3,#80H
delay loop:
       NOP
       NOP
       NOP
       DJNZ
               R1, delay loop
               R2,delay loop
       DJNZ
       DJNZ
               R3,delay loop
       RET
       END
```

10.9 Using PWM achieve D/A Conversion function reference circuit

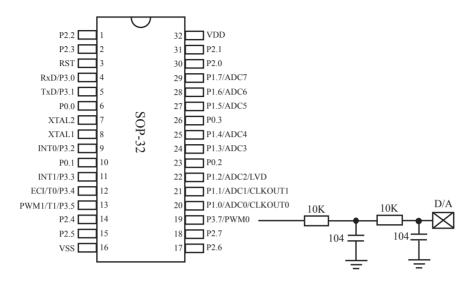

Chapter 11. Serial Peripheral Interface (SPI)

STC12C5620AD provides another high-speed serial communication interface, the SPI interface. SPI is a full-duplex, high-speed, synchronous communication bus with two operation modes: Master mode and Slave mode. Up to 3Mbit/s can be supported in either Master or Slave mode under the SYSclk=12MHz. Two status flags are provided to signal the transfer completion and write-collision occurrence.

11.1 Special Function Registers related with SPI

SPI Management SFRs

Mnemonic	Description	Address	Bit address and Symbol							Reset	
	Description	Address	В7	В6	В5	В4	В3	В2	В1	В0	Value
SPCTL	SPI Control Register	85H	SSIG	SPEN	DORD	MSTR	CPOL	СРНА	SPR1	SPR0	0000,0100
SPSTAT	SPI Status Register	84H	SPIF	WCOL	-	-	-	-	-	-	00xx,xxxx
SPDAT	SPI Data Register	86H									0000,0000

1. SPI Control register: SPCTL (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
SPCTL	85H	name	SSIG	SPEN	DORD	MSTR	CPOL	СРНА	SPR1	SPR0

SSIG: Control whether SS pin is ignored or not.

If SSIG=1, MSTR(SPCTL.4) decides whether the device is a master or slave.

If SSIG=0, the SS pin decides whether the device is a master or slave. SS pin can be used as I/O port.

SPEN: SPI enable bit.

If SPEN=0, the SPI interface is disabled and all SPI pins will be general-purpose I/O ports.

If SPEN=1, the SPI is enabled.

DORD: Set the transmitted or received SPI data order.

If DORD=1, The LSB of the data word is transmitted first.

If DORD=0, The MSB of the data word is transmitted first.

MSTR: Master/Slave mode select bit.

If MSTR=0, set the SPI to play as Slave part.

If MSTR=1, set the SPI to play as Master part.

CPOL: SPI clock polarity select bit.

If CPOL=1, SPICLK is high level when in idle mode. The leading edge of SPICLK is the falling edge and the trailing edge is the rising edge.

If CPOL=0, SPICLK is low when idle. The leading edge of SPICLK is the rising edge and the trailing edge is the falling edge.

CPHA: SPI clock phase select bit.

If CPHA=1, Data is driven on the leading edge of SPICLK, and is sampled on the trailing edge.

If CPHA=0, Data is driven when SS pin is low (SSIG=0) and changes on the trailing edge of SPICLK.

Data is sampled on the leading edge of SPICLK. (Note: If SSIG=1, CPHA must not be 0, otherwise the operation is undefined)

SPR1-SPR0: SPI clock rate select bit (when in master mode)

SPI clock frequency select bit

SPR1	SPR0	SPI clock (SCLK)
0	0	CPU_CLK/4
0	1	CPU_CLK/16
1	0	CPU_CLK/64
1	1	CPU_CLK/128

CPU CLK is CPU clock.

When CPHA equals 0, SSIG must be 0 and SS pin must be negated and reasserted between each successive serial byte transfer. If the SPDAT register is written while SS is active(0), a write collision error results and WCOL is set.

When CPHA equals 1, SSIG may be 0 or 1. If SSIG=0, the SS pin may remain active low between successive transfers(can be tied low at any times). This format is sometimes preferred for use in systems having a signle fixed master and a single slave configuration.

2. SPI State register: SPSTAT (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	В1	В0
SPSTAT	CDH	name	SPIF	WCOL	-	-	-	-	-	-

SPIF: SPI transfer completion flag.

When a serial transfer finishes, the SPIF bit is set and an interrupt is generated if all the EADC_SPI (IE.6) bit, ESPI bit (AUXR.3) and the EA (IE.7) bit are set. If SS is an input and is driven low when SPI is in master mode with SSIG = 0, SPIF will also be set to signal the "mode change". The SPIF is cleared in software by "writing 1 to this bit".

WCOL: SPI write collision flag.

The WCOL bit is set if the SPI data register, SPDAT, is written during a data transfer. The WCOL flag is cleared in software by "writing 1 to this bit".

3. SPI Data register : SPDAT (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	В1	В0
SPDAT	CFH	name								

The SFR SPDAT holds the data to be transmitted or the data received.

5. Registers related with SPI interrupt: IE, AUXR, IP and IPH

IE: Interrupt Enable Rsgister (Bit-addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	В2	B1	В0
IE	A8H	name	EA	EPCA_LVD	EADC_SPI	ES	ET1	EX1	ET0	EX0

EA: disables all interrupts.

If EA = 0, no interrupt will be acknowledged.

If EA = 1, each interrupt source is individually enabled or disabled by setting or clearing its enable bit.

EADC SPI: Interrupt controller of Serial Peripheral Interface (SPI) and A/D Converter (ADC).

If EADC SPI = 0, Disable the interrupt of Serial Peripheral Interface (SPI) and A/D Converter (ADC).

If EADC SPI = 1, Enable the interrupt of Serial Peripheral Interface (SPI) and A/D Converter (ADC).

AUXR: Auxiliary register (Non bit-addressable)

SFR name	Address	bit	В7	В6	B5	B4	В3	B2	B1	В0
AUXR	8EH	name	T0x12	T1x12	UART_M0x6	EADCI	ESPI	ELVDI	-	-

ELVDI: Enable/Disable interrupt from low-voltage sensor

0 : (default)Inhibit the low-voltage sensor functional block to generate interrupt to the MCU

1 : Enable the low-voltage sensor functional block to generate interrupt to the MCU

ESPI: Enable/Disable interrupt from Serial Peripheral Interface (SPI)

0 : (default)Inhibit the SPI functional block to generate interrupt to the MCU

1 : Enable the SPI functional block to generate interrupt to the MCU

EADCI: Enable/Disable interrupt from A/D converter

0 : (default) Inhibit the ADC functional block to generate interrupt to the MCU

1 : Enable the ADC functional block to generate interrupt to the MCU

IPH: Interrupt Priority High Register (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
IPH	В7Н	name	-	PPCA_LVDH	PADC_SPIH	PSH	PT1H	PX1H	РТ0Н	PX0H

IP: Interrupt Priority Register (Bit-addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	В2	B1	В0
IP	B8H	name	-	PPCA_LVD	PADC_SPI	PS	PT1	PX1	PT0	PX0

PADC SPIH, PADC SPI: Serial Peripheral Interface (SPI) and A/D Converter (ADC) interrupt priority control bits.


if PADC_SPIH=0 and PADC_SPI=0, Serial Peripheral Interface (SPI) and A/D Converter (ADC) interrupt are assigned lowest priority(priority 0).

if PADC_SPIH=0 and PADC_SPI=1, Serial Peripheral Interface (SPI) and A/D Converter (ADC) interrupt are assigned lowest priority(priority 1).

if PADC_SPIH=1 and PADC_SPI=0, Serial Peripheral Interface (SPI) and A/D Converter (ADC) interrupt are assigned lowest priority(priority 2).

if PADC_SPIH=1 and PADC_SPI=1, Serial Peripheral Interface (SPI) and A/D Converter (ADC) interrupt are assigned lowest priority(priority 3).

11.2 SPI Structure

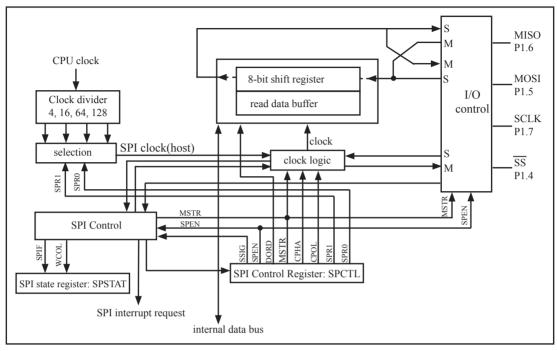

SPI block diagram

The SPI interface has three pins implementing the SPI functionality: SCLK(P1.7), MISO(P1.6), MOSI(P1.5). An extra pin SS(P1.4) is designed to configure the SPI to run under Master or Slave mode. SCLK, MOSI and MISO are typically tied together between two or more SPI devices. Data flows from master to slave on MOSI(Master Out Slave In) pin and flows from slave to master on MISO(Master In Slave Out) pin. The SCLK signal is output in the master mode and is input in the slave mode. If the SPI system is disabled, i.e, SPEN(SPCTL.6)=0, these pins are configured as general-purposed I/O port($P1.4 \sim P1.7$).

SS is thel slave select pin. In a typical configuration, an SPI master asserts one of its port pins to select one SPI device as the current slave. An SPI slave device uses its SS pin to determine whether it is selected. But if SPEN=0 or SSIG(SPCTL.7) bit is 1, the SS pin is ignored. Note that even if the SPI is configured as a master(MSTR/SPCTL.4=1), it can still be converted to a slave by driving the SS pin low. When the conversion happened, the SPIF bit(SPSTAT.7) will be set.

Two devices with SPI interface communicate with each other via one synchronous clock signal, one input data signal, and one output data signal. There are two concerns the user should take care, one of them is latching data on the negative edge or positive edge of the clock signal which named polarity, the other is keeping the clock signal low or high while the device idle which named phase. Permuting those states from polarity and phase, there could be four modes formed, they are SPI-MODE-0, SPI-MODE-1, SPI-MODE-2, SPI-MODE-3. Many device declares that they meet SPI machanism, but few of them are adaptive to all four modes. The STC12C5A60S2 series are flexible to be configured to communicate to another device with MODE-0, MODE-1, MODE-2 or MODE-3 SPI, and play part of Master and Slave.

11.3 SPI Data Communication

11.3.1 SPI Configuration


When SPI data communication, SPEN, SSIG, SS(P1.4) and MSTR jointly control the selection of master and slave.

Table: SPI master and slave selection


SPEN	SSIG	SS (P1.4)	MSTR	Mode	MISO (P1.6)	MOSI (P1.5)	SPICLK (P1.7)	Remark
0	X	P1.4	X	SPI disable	GPI/O P1.6	GPI/O P1.5	GPI/O P1.7	SPI is disabled. P1.4/P1.5/P1.6/P1.7 as GPIO.
1	0	0	0	Selected salve	output	input	input	Selected as slave
1	0	1	0	Unselected slave	Hi-Z	input	input	Not selected.
1	0	0	1->0	slave	output	input	input	Convert from Master to Slave
1	0	1	1	Master (idle)	input	high- impedance	high- impedance	MOSI and SCLK are in high- impedance state in order to avoid bus clash when master is idle. Whether is SCLK pulled up or pulled down depends on CPOL/SPCTL.3. But it do not be allowed that SCLK is suspended.
				Master (active)		output	output	MOSI and SCLK is strong pushpull output.
1	1	P1.4	0	slave	output	input	input	Slave
1	1	P1.4	1	Master	input	output	output	Master

11.3.2 SPI Data Communication Modes


There are 3 SPI data communication modes: single master — single slave, dual devices configuration (both can be a master or slave) and single master — multiple slaves.

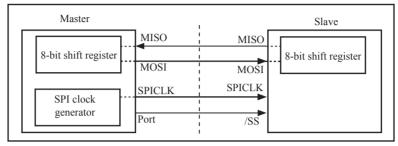

SPI single master — single slave configuration

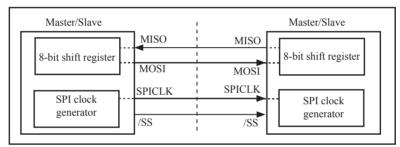

SPI dual device configuration, both can be a master or slave

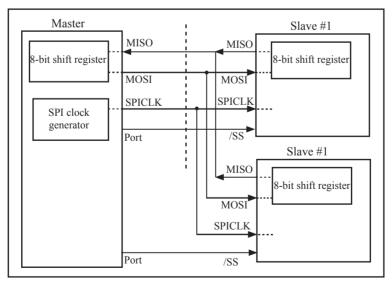

SPI single master multiple slaves configuration

In SPI, transfers are always initiated by the master. If the SPI is enabled(SPEN=1) and selected as master, any instruction that use SPI data register SPDAT as the destination will starts the SPI clock generator and a data transfer. The data will start to appear on MOSI about one half SPI bit-time to one SPI bit-time after it. Before starting the transfer, the master may select a slave by driving the SS pin of the corresponding device low. Data written to the SPDAT register of the master shifted out of MOSI pin of the master to the MOSI pin of the slave. And at the same time the data in SPDAT register of the selected slave is shifted out of MISO pin to the MISO pin of the master. During one byte transfer, data in the master and in the slave is interchanged. After shifting one byte, the transfer completion flag(SPIF) is set and an interrupt will be created if the SPI interrupt is enabled.


If SPEN=1, SSIG=0, SS pin=1 and MSTR=1, the SPI is enabled in master mode. Before the instruction that use SPDAT as the destination register, the master is in idle state and can be selected as slave device by any other master drives the idle master SS pin low. Once this happened, MSTR bit of the idle master is cleared by hardware and changes its state a selected slave. User software should always check the MSTR bit. If this bit is cleared by the mode change of SS pin and the user wants to continue to use the SPI as a master later, the user must set the MSTR bit again, otherwise it will always stay in slave mode.

The SPI is single buffered in transmit direction and double buffered in receive direction. New data for transmission can not be written to the shift register until the previous transaction is complete. The WCOL bit is set to signal data collision when the data register is written during transaction. In this case, the data currently being transmitted will continue to be transmitted, but the new data which causing the collision will be lost. For receiving data, received data is transferred into a internal parallel read data buffer so that the shift register is free to accept a second byte. However, the received byte must be read from the data register(SPDAT) before the next byte has been completely transferred. Otherwise the previous byte is lost. WCOL can be cleared in software by "writing 1 to the bit".


11.3.3 SPI Data Modes

CPHA/SPCTL.2 is SPI clock phase select bit which is used to setting the clock edge of Data sample and change. CPOL/SPCTL.3 is used to select SPI clock polarity.


The following are some typical timing diagrams which depend on the value of CPHA/SPCTL.2

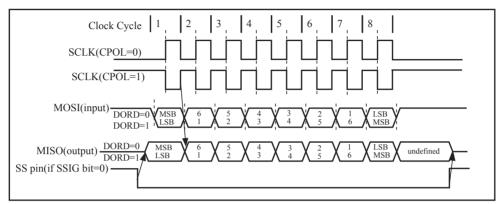


SPI slave transfer format with CPHA=0

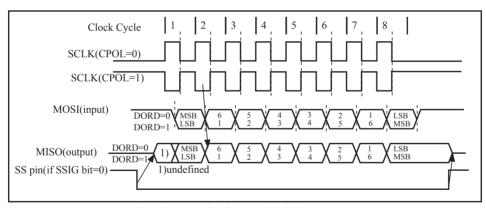

SPI slave transfer format with CPHA=1

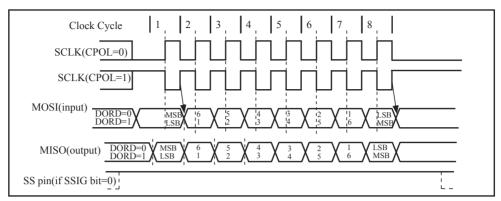

SPI master transfer format with CPHA=0

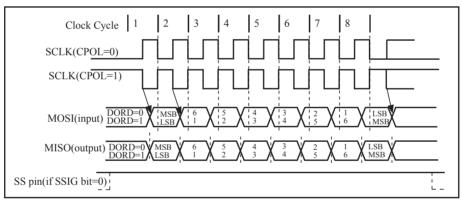

SPI master transfer format with CPHA=1

^{*}When P4SPI bit in AUXR1 register is set, the function of SPI is redirected from P3[7:4] to P4[7:4] pin by pin.

11.4 SPI Function Demo Programs (Single Master — Single Slave)

11.4.1 SPI Function Demo Programs using Interrupts (C and ASM)

The following program, written in C language and assembly language, tests SPI function and applys to SPI single master single slave configuration.

```
·/*_____*/
:/* --- STC MCU International Limited -----*/
:/* --- STC 1T Series MCU SPI Demo (1 master and 1 slave) -----*/
;/* If you want to use the program or the program referenced in the ----*/
;/* article, please specify in which data and procedures from STC ----*/
·/*____*/
#include "reg51.h"
#define MASTER
                                               //define:master undefine:slave
#define FOSC
               18432000L
#define BAUD
               (256 - FOSC / 32 / 115200)
typedef unsigned char
                       BYTE:
typedef unsigned int
                       WORD;
typedef unsigned long
                       DWORD;
sfr
       AUXR = 0x8e;
                                              //Auxiliary register
sfr
       SPSTAT = 0x84;
                                               //SPI status register
#define
       SPIF
               0x80
                                               //SPSTAT.7
#define WCOL
                                               //SPSTAT.6
               0x40
       SPCTL = 0x85;
sfr
                                              //SPI control register
#define SSIG
               0x80
                                               //SPCTL.7
#define SPEN
               0x40
                                               //SPCTL.6
#define DORD
               0x20
                                               //SPCTL.5
#define MSTR
               0x10
                                               //SPCTL.4
#define CPOL
               0x08
                                               //SPCTL.3
#define CPHA
               0x04
                                               //SPCTL.2
#define SPDHH 0x00
                                              //CPU CLK/4
#define SPDH
               0x01
                                              //CPU CLK/16
#define SPDL
               0x02
                                              //CPU CLK/64
#define SPDLL
               0x03
                                              //CPU CLK/128
sfr
       SPDAT = 0x86;
                                              //SPI data register
       SPISS
                                              //SPI slave select, connect to slave' SS(P1.4) pin
sbit
               = P1^3;
sbit
       EADC SPI = IE^5;
#define ESPI
               0x08;
                                               //AUXR.3
```

```
void InitUart();
void InitSPI();
void SendUart(BYTE dat);
                                           //send data to PC
                                           //receive data from PC
BYTE RecvUart();
void main()
        InitUart();
                                           //initial UART
        InitSPI();
                                           //initial SPI
        AUXR = ESPI;
        EADC SPI = 1;
        EA = 1;
        while (1)
        #ifdef
                 MASTER
                                           //for master (receive UART data from PC and send it to slave,
                                           //in the meantime receive SPI data from slave and send it to PC)
                 ACC = RecvUart();
                 SPISS = 0;
                                           //pull low slave SS
                                           //trigger SPI send
                 SPDAT = ACC;
        #endif
                 interrupt 5 using 1
                                           //SPI interrupt routine 5 (002BH)
void spi isr()
{
        SPSTAT = SPIF \mid WCOL;
                                           //clear SPI status
#ifdef MASTER
        SPISS = 1:
                                           //push high slave SS
        SendUart(SPDAT);
                                           //return received SPI data
#else
                                           //for salve (receive SPI data from master and
        SPDAT = SPDAT;
                                                     send previous SPI data to master)
#endif
```

```
void InitUart()
       SCON = 0x5a;
                                       //set UART mode as 8-bit variable baudrate
                                       //timer1 as 8-bit auto reload mode
       TMOD = 0x20;
                                       //timer1 work at 1T mode
       AUXR = 0x40;
       TH1 = TL1 = BAUD;
                                       //115200 bps
       TR1 = 1;
}
void InitSPI()
{
       SPDAT = 0;
                                       //initial SPI data
       SPSTAT = SPIF | WCOL;
                                       //clear SPI status
#ifdef MASTER
       SPCTL = SPEN | MSTR;
                                       //master mode
#else
       SPCTL = SPEN;
                                       //slave mode
#endif
}
void SendUart(BYTE dat)
       while (!TI);
                                       //wait pre-data sent
                                       //clear TI flag
       TI = 0;
       SBUF = dat;
                                       //send current data
}
BYTE RecvUart()
       while (!RI);
                                       //wait receive complete
       RI = 0;
                                       //clear RI flag
       return SBUF;
                                       //return receive data
```

```
·/*____*/
:/* --- STC MCU International Limited -----*/
:/* --- STC 1T Series MCU SPI Demo (1 master and 1 slave) -----*/
;/* If you want to use the program or the program referenced in the ----*/
:/* article, please specify in which data and procedures from STC ----*/
·/*_____*/
                                    //define:master undefine:slave
//#define MASTER
AUXR DATA
              08EH
                                    ;Auxiliary register
SPSTAT DATA
              084H
                                    ;SPI status register
SPIF
       EQU
                                    ;SPSTAT.7
              080H
WCOL EQU
              040H
                                    ;SPSTAT.6
SPCTL DATA
              085H
                                    ;SPI control register
SSIG
       EOU
              080H
                                    ;SPCTL.7
SPEN
       EOU
              040H
                                    ;SPCTL.6
DORD EQU
              020H
                                    ;SPCTL.5
MSTR
      EOU
              010H
                                    ;SPCTL.4
CPOL
      EQU
              008H
                                    ;SPCTL.3
CPHA
      EOU
              004H
                                    ;SPCTL.2
SPDHH EQU
              000H
                                    ;CPU CLK/4
SPDH
      EOU
              001H
                                    ;CPU CLK/16
SPDL
       EQU
              002H
                                    ;CPU CLK/64
SPDLL EQU
              003H
                                    ;CPU CLK/128
SPDAT DATA
              086H
                                    ;SPI data register
SPISS
       BIT
              P1.3
                                    ;SPI slave select, connect to slave' SS(P1.4) pin
EADC SPI
              BIT
                     IE.5
ESPI
              EQU
                     08H
                                    ;AUXR.3
ORG
              0000H
       LJMP
              RESET
       ORG
              002BH
                                    ;SPI interrupt routine 5(2BH)
SPI ISR:
       PUSH
              ACC
       PUSH
              PSW
              SPSTAT, #SPIF | WCOL
       MOV
                                    ;clear SPI status
```

#ifdef #else #endif	MASTE SETB MOV LCALL MOV POP POP RETI	SPISS A, SPDAT	;push high slave SS ;return received SPI data //for salve (receive SPI data from master and ; send previous SPI data to master)						
;/////////	///////////////////////////////////////	///////////////////////////////////////							
RESET:	ORG	0100H							
		INIT_UART INIT_SPI AUXR, #ESPI EADC_SPI EA	;initial UART ;initial SPI ;enable SPI interrupt						
MAIN:									
#ifdef M	IASTER LCALL CLR MOV	RECV_UART SPISS SPDAT, A	//for master (receive UART data from PC and send it to slave, ; in the meantimereceive SPI data from slave and send it to PC) ;pull low slave SS ;trigger SPI send						
#endif	SJMP	MAIN							
;/////////	///////////////////////////////////////	///////////////////////////////////////							
INIT_U	ART:								
	MOV MOV MOV MOV SETB RET	SCON, #5AH TMOD, #20H AUXR, #40H TL1, #0FBH TH1, #0FBH TR1	;set UART mode as 8-bit variable baudrate ;timer1 as 8-bit auto reload mode ;timer1 work at 1T mode ;115200 bps(256 - 18432000 / 32 / 115200)						
;/////////	;!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!								

```
INIT_SPI:
      MOV
            SPDAT,
                    #0
                                        ;initial SPI data
      MOV
            SPSTAT, #SPIF | WCOL
                                        ;clear SPI status
#ifdef MASTER
      MOV
            SPCTL,
                    #SPEN | MSTR
                                        ;master mode
#else
                                        ;slave mode
      MOV
            SPCTL,
                   #SPEN
#endif
      RET
SEND_UART:
      JNB
             TI,
                    $
                                        ;wait pre-data sent
             ΤI
      CLR
                                        ;clear TI flag
      MOV
             SBUF,
                                        ;send current data
                    Α
      RET
RECV_UART:
      JNB
                                        ;wait receive complete
             RI,$
      CLR
             RI
                                        ;clear RI flag
      MOV
                    SBUF
                                        ;return receive data
             A,
      RET
      RET
END
```

11.4.2 SPI Function Demo Programs using Polling (C and ASM)

```
·/*_____*/
:/* --- STC MCU International Limited -----*/
:/* --- STC 1T Series MCU SPI Demo (1 master and 1 slave) -----*/
;/* If you want to use the program or the program referenced in the ----*/
:/* article, please specify in which data and procedures from STC ----*/
·/*_____*/
#include "reg51.h"
//#define MASTER
                                                //define:master undefine:slave
#define FOSC
                        18432000L
#define BAUD
                        (256 - FOSC / 32 / 115200)
typedef unsigned char
                        BYTE:
typedef unsigned int
                        WORD;
typedef unsigned long
                        DWORD;
sfr
        AUXR = 0x8e;
                                                //Auxiliary register
sfr
        SPSTAT = 0x84:
                                                //SPI status register
#define
       SPIF
                0x80
                                                //SPSTAT.7
#define WCOL
                0x40
                                                //SPSTAT.6
sfr
        SPCTL = 0x85;
                                                //SPI control register
#define SSIG
                                                //SPCTL.7
                0x80
#define SPEN
                0x40
                                                //SPCTL.6
#define DORD
                0x20
                                                //SPCTL.5
#define MSTR
                0x10
                                                //SPCTL.4
#define CPOL
                0x08
                                                //SPCTL.3
#define CPHA
                0x04
                                                //SPCTL.2
#define SPDHH 0x00
                                                //CPU CLK/4
#define SPDH
                                                //CPU CLK/16
                0x01
#define SPDL
                                                //CPU CLK/64
                0x02
#define SPDLL 0x03
                                                //CPU CLK/128
sfr
        SPDAT = 0x86:
                                                //SPI data register
sbit
        SPISS
                = P1^3;
                                                //SPI slave select, connect to slave' SS(P1.4) pin
void
        InitUart();
void
        InitSPI();
        SendUart(BYTE dat);
                                                //send data to PC
void
        RecvUart();
                                                //receive data from PC
BYTE
BYTE
        SPISwap(BYTE dat);
                                                //swap SPI data between master and slave
```

```
void main()
        InitUart();
                                           //initial UART
        InitSPI();
                                           //initial SPI
        while (1)
        #ifdef MASTER
                                  //for master (receive UART data from PC and send it to slave,
                                   // in the meantime receive SPI data from slave and send it to PC)
                 SendUart(SPISwap(RecvUart()));
        #else
                                           //for salve (receive SPI data from master and
                 ACC = SPISwap(ACC);
                                           //
                                                   send previous SPI data to master)
        #endif
void InitUart()
        SCON = 0x5a;
                                                    //set UART mode as 8-bit variable baudrate
        TMOD = 0x20;
                                                    //timer1 as 8-bit auto reload mode
                                                    //timer1 work at 1T mode
        AUXR = 0x40;
                                                    //115200 bps
        TH1 = TL1 = BAUD;
        TR1 = 1;
}
void InitSPI()
        SPDAT = 0;
                                                    //initial SPI data
                                                    //clear SPI status
        SPSTAT = SPIF | WCOL;
#ifdef MASTER
        SPCTL = SPEN | MSTR;
                                                    //master mode
#else
        SPCTL = SPEN;
                                                    //slave mode
#endif
```

```
void SendUart(BYTE dat)
                                         //wait pre-data sent
        while (!TI);
        TI = 0;
                                         //clear TI flag
                                         //send current data
        SBUF = dat;
BYTE RecvUart()
        while (!RI);
                                         //wait receive complete
        RI = 0;
                                         //clear RI flag
                                         //return receive data
        return SBUF;
}
BYTE SPISwap(BYTE dat)
#ifdef MASTER
        SPISS = 0;
                                         //pull low slave SS
#endif
                                         //trigger SPI send
        SPDAT = dat;
        while (!(SPSTAT & SPIF));
                                         //wait send complete
        SPSTAT = SPIF \mid WCOL;
                                         //clear SPI status
#ifdef MASTER
        SPISS = 1;
                                         //push high slave SS
#endif
                                         //return received SPI data
        return SPDAT;
```

2. Assemly code listing:

```
·/*_____*/
;/* --- STC MCU International Limited -----*/
:/* --- STC 1T Series MCU SPI Demo (1 master and 1 slave) -----*/
;/* If you want to use the program or the program referenced in the ----*/
:/* article, please specify in which data and procedures from STC ----*/
:/*_____*/
//#define MASTER
                                    //define:master undefine:slave
AUXR DATA
                                    ;Auxiliary register
              08EH
SPSTAT DATA
              084H
                                    ;SPI status register
SPIF
       EOU
              080H
                                    ;SPSTAT.7
WCOL EOU
              040H
                                    ;SPSTAT.6
SPCTL DATA
              085H
                                    ;SPI control register
SSIG
       EOU
              080H
                                    ;SPCTL.7
SPEN
       EOU
              040H
                                    ;SPCTL.6
      EOU
DORD
              020H
                                    ;SPCTL.5
MSTR
      EOU
              010H
                                    ;SPCTL.4
CPOL
       EOU
              008H
                                    ;SPCTL.3
CPHA
      EOU
              004H
                                    ;SPCTL.2
SPDHH EQU
              000H
                                    ;CPU CLK/4
SPDH
       EOU
                                    ;CPU_CLK/16
              001H
SPDL
       EOU
              002H
                                    ;CPU CLK/64
SPDLL EQU
              003H
                                    ;CPU_CLK/128
SPDAT DATA
              086H
                                    ;SPI data register
SPISS
       BIT
              P1.3
                                    ;SPI slave select, connect to slave' SS(P1.4) pin
ORG
              0000H
       LJMP
              RESET
       ORG
              0100H
RESET:
       LCALL INIT UART
                                    ;initial UART
       LCALL INIT SPI
                                    ;initial SPI
```

MAIN: #ifdef MASTE //for master (receive UART data from PC and send it to slave, in the meantime LCALL RECV UART receive SPI data from slave and send it to PC) LCALL SPI SWAP LCALL SEND UART //for salve (receive SPI data from master and #else LCALL SPI SWAP send previous SPI data to master) #endif **SJMP** MAIN INIT UART: :set UART mode as 8-bit variable baudrate MOV SCON. #5AH MOV TMOD. #20H :timer1 as 8-bit auto reload mode MOV AUXR, #40H ;timer1 work at 1T mode MOV TL1, #0FBH ;115200 bps(256 - 18432000 / 32 / 115200) MOV TH1. #0FBH **SETB** TR1 RET INIT SPI: MOV SPDAT, #0 ;initial SPI data MOV SPSTAT, #SPIF | WCOL ;clear SPI status #ifdef MASTER MOV SPCTL, #SPEN | MSTR ;master mode #else SPCTL, #SPEN MOV ;slave mode #endif RET SEND UART: JNB TI, ;wait pre-data sent \$ CLR ;clear TI flag ΤI MOV SBUF, send current data RET

RECV_UART: ;wait receive complete JNB RI, \$ CLR RI ;clear RI flag MOV A, **SBUF** return receive data RET RET SPI SWAP: #ifdef MASTER CLR **SPISS** ;pull low slave SS #endif ;trigger SPI send MOV SPDAT, A WAIT: MOV **SPSTAT** A, ;wait send complete JNB ACC.7, WAIT MOV SPSTAT, #SPIF | WCOL ;clear SPI status #ifdef MASTER **SETB SPISS** ;push high slave SS #endif MOV A, **SPDAT** ;return received SPI data RET

END

11.5 SPI Function Demo Programs (Each other as the Master-Slave)

11.5.1 SPI Function Demo Programs using Interrupts (C and ASM)

1. C code listing:

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC12C5Axx Series MCU SPI Demo(Each other as the master-slave) --*/
/* If you want to use the program or the program referenced in the -----*/
/* article, please specify in which data and procedures from STC -----*/
/*______*/
#include "reg51.h"
#define FOSC
               18432000L
#define BAUD
               (256 - FOSC / 32 / 115200)
typedef unsigned char
                       BYTE;
typedef unsigned int
                       WORD;
typedef unsigned long
                       DWORD;
sfr
       AUXR = 0x8e;
                                              //Auxiliary register
sfr
       SPSTAT = 0x84;
                                              //SPI status register
#define
       SPIF
                0x80
                                              //SPSTAT.7
#define
       WCOL
                 0x40
                                              //SPSTAT.6
sfr
       SPCTL = 0x85;
                                              //SPI control register
#define SSIG
               0x80
                                              //SPCTL.7
#define SPEN
               0x40
                                              //SPCTL.6
#define DORD
               0x20
                                              //SPCTL.5
#define MSTR
                                              //SPCTL.4
               0x10
#define CPOL
               0x08
                                              //SPCTL.3
#define CPHA
                                              //SPCTL.2
               0x04
#define SPDHH 0x00
                                              //CPU CLK/4
#define SPDH
                                              //CPU CLK/16
               0x01
#define SPDL
               0x02
                                              //CPU CLK/64
#define SPDLL
               0x03
                                              //CPU CLK/128
       SPDAT
sfr
                       0x86;
                                                     //SPI data register
sbit
       SPISS
                       P1^3;
                                      //SPI slave select, connect to other MCU's SS(P1.4) pin
sbit
       EADC SPI = IE^5;
#define ESPI
               0x08;
                                      //AUXR.3
```

```
void InitUart();
void InitSPI();
void SendUart(BYTE dat);
                                                 //send data to PC
BYTE RecvUart();
                                                 //receive data from PC
bit MSSEL;
                                                 //1: master 0:slave
void main()
        InitUart();
                         //initial UART
        InitSPI():
                         //initial SPI
        AUXR = ESPI;
        EADC SPI = 1;
        EA = 1;
        while (1)
                if (RI)
                        SPCTL = SPEN | MSTR;
                                                         //set as master
                        MSSEL = 1;
                        ACC = RecvUart();
                        SPISS = 0;
                                                         //pull low slave SS
                        SPDAT = ACC;
                                                         //trigger SPI send
void spi isr() interrupt 5 using 1
                                                         //SPI interrupt routine 5 (002BH)
                                                         //clear SPI status
        SPSTAT = SPIF \mid WCOL;
        if (MSSEL)
                SPCTL = SPEN;
                                                         //reset as slave
                MSSEL = 0;
                SPISS = 1;
                                                         //push high slave SS
                SendUart(SPDAT);
                                                         //return received SPI data
        else
                                                 //for salve (receive SPI data from master and
                SPDAT = SPDAT;
                                                        send previous SPI data to master)
```

```
void InitUart()
       SCON = 0x5a;
                                      //set UART mode as 8-bit variable baudrate
                                      //timer1 as 8-bit auto reload mode
       TMOD = 0x20;
                                      //timer1 work at 1T mode
       AUXR = 0x40;
       TH1 = TL1 = BAUD;
                                      //115200 bps
       TR1 = 1;
void InitSPI()
       SPDAT = 0;
                                      //initial SPI data
       SPSTAT = SPIF \mid WCOL;
                                      //clear SPI status
       SPCTL = SPEN;
                                      //slave mode
}
void SendUart(BYTE dat)
                                      //wait pre-data sent
       while (!TI);
                                      //clear TI flag
       TI = 0;
       SBUF = dat;
                                      //send current data
}
BYTE RecvUart()
                                      //wait receive complete
       while (!RI);
       RI = 0;
                                      //clear RI flag
                                      //return receive data
       return SBUF;
```

2. Assembly code listing:

```
/*______*/
/* --- STC MCU International Limited -----*/
/* --- STC12C5Axx Series MCU SPI Demo(Each other as the master-slave) --*/
/* article, please specify in which data and procedures from STC -----*/
/*_____*/
AUXR DATA
             08EH
                                   ;Auxiliary register
SPSTAT DATA
             084H
                                   :SPI status register
SPIF
      EOU
             080H
                                   ;SPSTAT.7
WCOL EQU
              040H
                                   ;SPSTAT.6
SPCTL DATA
             085H
                                   ;SPI control register
SSIG
      EOU
             080H
                                   ;SPCTL.7
SPEN
      EQU
             040H
                                   ;SPCTL.6
      EQU
DORD
             020H
                                   ;SPCTL.5
MSTR
      EOU
             010H
                                   ;SPCTL.4
CPOL
      EOU
             008H
                                   ;SPCTL.3
CPHA
      EOU
             004H
                                   ;SPCTL.2
SPDHH EQU
             000H
                                   ;CPU CLK/4
SPDH
      EOU
             001H
                                   :CPU CLK/16
SPDL
      EOU
             002H
                                   ;CPU CLK/64
                                   ;CPU CLK/128
SPDLL EQU
             003H
SPDAT DATA
             086H
                                   ;SPI data register
SPISS
             P1.3
      BIT
                                   ;SPI slave select, connect to other MCU's SS(P1.4) pin
EADC_SPI
              BIT
                     IE.5
ESPI
              EQU
                     08H
                                   ;AUXR.3
MSSEL BIT
           20H.0
                                   :1: master 0:slave
ORG
             0000H
       LJMP
             RESET
       ORG
             002BH
                                   ;SPI interrupt routine
SPI ISR:
       PUSH
             ACC
       PUSH
             PSW
       MOV
             SPSTAT, #SPIF | WCOL
                                   ;clear SPI status
       JBC
              MSSEL, MASTER SEND
```

SLAVE RECV: //for salve (receive SPI data from master and MOV SPDAT, SPDAT send previous SPI data to master) JMP SPI EXIT MASTER SEND: **SETB SPISS** ;push high slave SS MOV SPCTL, #SPEN reset as slave ;return received SPI data MOV A, SPDAT LCALL SEND_UART SPI EXIT: **PSW** POP POP ACC RETI ORG 0100H RESET: MOV SP,#3FH LCALL INIT UART ;initial UART LCALL INIT SPI ;initial SPI ORL AUXR, #ESPI **SETB** EADC SPI **SETB** EA MAIN: JNB RI. ;wait UART data MOV SPCTL, #SPEN | MSTR ; ;set as master SETB MSSEL LCALL RECV UART :receive UART data from PC CLR **SPISS** ;pull low slave SS MOV SPDAT. A ;trigger SPI send **SJMP** MAIN INIT UART: MOV SCON, #5AH ;set UART mode as 8-bit variable baudrate MOV TMOD, #20H ;timer1 as 8-bit auto reload mode MOV ;timer1 work at 1T mode AUXR ,#40H MOV TL1, #0FBH ;115200 bps(256 - 18432000 / 32 / 115200) MOV TH1, #0FBH **SETB** TR1 RET

INIT SPI: MOV SPDAT, #0 ;initial SPI data MOV SPSTAT, #SPIF | WCOL ;clear SPI status MOV SPCTL, #SPEN ;slave mode RET SEND UART: JNB TI, \$;wait pre-data sent ;clear TI flag CLR ΤI ;send current data MOV SBUF, Α RET RECV UART: JNB RI, \$;wait receive complete CLR ;clear RI flag RI MOV ;return receive data A, **SBUF** RET RET **END**

11.5.2 SPI Function Demo Programs using Polling

1. C code listing:

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC12C5Axx Series MCU SPI Demo(Each other as the master-slave) --*/
/* If you want to use the program or the program referenced in the -----*/
/* article, please specify in which data and procedures from STC -----*/
#include "reg51.h"
#define FOSC
                        18432000L
#define
       BAUD
                        (256 - FOSC / 32 / 115200)
typedef
       unsigned char
                        BYTE;
typedef
       unsigned int
                        WORD:
       unsigned long
typedef
                        DWORD;
sfr
        AUXR =
                        0x8e;
                                                 //Auxiliary register
sfr
        SPSTAT =
                        0x84:
                                                         //SPI status register
#define
       SPIF
                                                 //SPSTAT.7
                        0x80
#define
        WCOL
                        0x40
                                                 //SPSTAT.6
sfr
        SPCTL =
                                                         //SPI control register
                        0x85:
#define SSIG
                                                 //SPCTL.7
                        0x80
#define SPEN
                                                 //SPCTL.6
                        0x40
#define DORD
                        0x20
                                                 //SPCTL.5
#define MSTR
                        0x10
                                                 //SPCTL.4
#define CPOL
                        0x08
                                                 //SPCTL.3
#define CPHA
                        0x04
                                                 //SPCTL.2
#define SPDHH
                                                 //CPU CLK/4
                        0x00
#define SPDH
                        0x01
                                                 //CPU CLK/16
#define SPDL
                                                 //CPU CLK/64
                        0x02
#define SPDLL
                        0x03
                                                 //CPU CLK/128
sfr
        SPDAT =
                        0x86;
                                                         //SPI data register
sbit
        SPISS
                        P1^3;
                                                 //SPI slave select, connect to slave' SS(P1.4) pin
void
        InitUart();
void
        InitSPI();
                                                 //send data to PC
void
        SendUart(BYTE dat);
BYTE
        RecvUart();
                                                 //receive data from PC
                                                 //swap SPI data between master
BYTE
        SPISwap(BYTE dat);
```

```
void main()
                                         //initial UART
        InitUart();
        InitSPI();
                                         //initial SPI
        while (1)
                if (RI)
                         SPCTL = SPEN | MSTR;
                                                          //set as master
                         SendUart(SPISwap(RecvUart()));
                         SPCTL = SPEN;
                                                          //reset as slave
                if (SPSTAT & SPIF)
                         SPSTAT = SPIF | WCOL; //clear SPI status
                                                 //mov data from receive buffer to send buffer
                         SPDAT = SPDAT;
        }
void InitUart()
        SCON = 0x5a;
                                                 //set UART mode as 8-bit variable baudrate
        TMOD = 0x20;
                                                  //timer1 as 8-bit auto reload mode
                                                 //timer1 work at 1T mode
        AUXR = 0x40;
        TH1 = TL1 = BAUD;
                                                 //115200 bps
        TR1 = 1;
void InitSPI()
                                                 //initial SPI data
        SPDAT = 0;
        SPSTAT = SPIF \mid WCOL;
                                                 //clear SPI status
        SPCTL = SPEN;
                                                 //slave mode
```

```
void SendUart(BYTE dat)
       while (!TI);
                                      //wait pre-data sent
       TI = 0;
                                      //clear TI flag
                                      //send current data
       SBUF = dat;
BYTE RecvUart()
       while (!RI);
                                      //wait receive complete
       RI = 0;
                                      //clear RI flag
       return SBUF;
                                      //return receive data
BYTE SPISwap(BYTE dat)
       SPISS = 0;
                                      //pull low slave SS
       SPDAT = dat;
                                      //trigger SPI send
       while (!(SPSTAT & SPIF));
                                      //wait send complete
       SPSTAT = SPIF \mid WCOL;
                                      //clear SPI status
                                      //push high slave SS
       SPISS = 1;
       return SPDAT;
                                      //return received SPI data
```

2. Assemly code listing:

```
/*____*/
/* --- STC MCU International Limited -----*/
/* --- STC12C5Axx Series MCU SPI Demo(Each other as the master-slave) --*/
/* If you want to use the program or the program referenced in the -----*/
/* article, please specify in which data and procedures from STC -----*/
/*_____*/
             08EH
AUXR DATA
                                  ;Auxiliary register
SPSTAT DATA
             084H
                                  ;SPI status register
SPIF
       EOU
             080H
                                  :SPSTAT.7
WCOL EOU
             040H
                                  ;SPSTAT.6
SPCTL DATA
             085H
                                  ;SPI control register
SSIG
      EQU
             080H
                                  ;SPCTL.7
SPEN
      EOU
             040H
                                  ;SPCTL.6
DORD
      EQU
             020H
                                  ;SPCTL.5
MSTR
      EQU
             010H
                                  ;SPCTL.4
CPOL
      EQU
             008H
                                  ;SPCTL.3
CPHA
      EQU
             004H
                                  ;SPCTL.2
SPDHH EQU
             000H
                                  ;CPU CLK/4
SPDH
      EQU
             001H
                                  ;CPU CLK/16
SPDL
      EQU
             002H
                                  ;CPU CLK/64
SPDLL EOU
                                  ;CPU CLK/128
             003H
SPDAT DATA
             086H
                                  ;SPI data register
SPISS
       BIT
             P1.3
                                  ;SPI slave select, connect to slave' SS(P1.4) pin
ORG
             0000H
       LJMP
             RESET
       ORG
             0100H
RESET:
       LCALL INIT UART
                                  ;initial UART
       LCALL INIT SPI
                                  ;initial SPI
MAIN:
      JΒ
             RI,
                    MASTER MODE
```

```
SLAVE MODE:
       MOV
                      SPSTAT
              A,
              ACC.7, MAIN
       JNB
       MOV
              SPSTAT, #SPIF | WCOL
                                                   ;clear SPI status
       MOV
              SPDAT, SPDAT
                                                   ;return received SPI data
       SJMP
              MAIN
MASTER MODE:
       MOV
              SPCTL, #SPEN | MSTR
                                                   :set as master
       LCALL RECV UART
                                                   ;receive UART data from PC
       LCALL SPI SWAP
                                    ;send it to slave, in the meantime, receive SPI data from slave
       LCALL SEND UART
                                    :send SPI data to PC
              SPCTL. #SPEN
       MOV
                                            :reset as slave
       SJMP
              MAIN
INIT UART:
              SCON, #5AH
                                    :set UART mode as 8-bit variable baudrate
       MOV
       MOV
              TMOD, #20H
                                    ;timer1 as 8-bit auto reload mode
       MOV
              AUXR, #40H
                                    ;timer1 work at 1T mode
       MOV
              TL1,
                                    ;115200 bps(256 - 18432000 / 32 / 115200)
                      #0FBH
       MOV
              TH1.
                      #0FBH
       SETB
              TR1
       RET
INIT SPI:
       MOV
              SPDAT, #0
                                                   ;initial SPI data
              SPSTAT, #SPIF | WCOL
       MOV
                                                   ;clear SPI status
       MOV
              SPCTL, #SPEN
                                                   ;slave mode
       RET
SEND UART:
                                                   ;wait pre-data sent
       JNB
              TI,
                      $
       CLR
              ΤI
                                                   ;clear TI flag
       MOV
              SBUF, A
                                                   ;send current data
       RET
```

RECV UART: JNB \$;wait receive complete RI, CLR ;clear RI flag RI MOV ;return receive data A, **SBUF** RET RET SPI_SWAP: CLR **SPISS** ;pull low slave SS ;trigger SPI send MOV SPDAT, A WAIT: MOV A, **SPSTAT** ;wait send complete JNB ACC.7, WAIT MOV SPSTAT, #SPIF | WCOL ;clear SPI status SETB **SPISS** ;push high slave SS ;return received SPI data MOV A, **SPDAT** RET

END

Chapter 12. IAP/EEPROM

The ISP in STC12C5620AD series makes it possible to update the user's application program and non-volatile application data (in IAP-memory) without removing the MCU chip from the actual end product. This useful capability makes a wide range of field-update applications possible. (Note ISP needs the loader program preprogrammed in the ISP-memory.) In general, the user needn't know how ISP operates because STC has provided the standard ISP tool and embedded ISP code in STC shipped samples.But, to develop a good program for ISP function, the user has to understand the architecture of the embedded flash.

The embedded flash consists of 8~60 pages. Each page contains 512 bytes. Dealing with flash, the user must erase it in page unit before writing (programming) data into it. Erasing flash means setting the content of that flash as FFh. Two erase modes are available in this chip. One is mass mode and the other is page mode. The mass mode gets more performance, but it erases the entire flash. The page mode is something performance less, but it is flexible since it erases flash in page unit. Unlike RAM's real-time operation, to erase flash or to write (program) flash often takes long time so to wait finish.

Furthermore, it is a quite complex timing procedure to erase/program flash. Fortunately, the STC12C5620AD series carried with convenient mechanism to help the user read/change the flash content. Just filling the target address and data into several SFR, and triggering the built-in ISP automation, the user can easily erase, read, and program the embedded flash.

The In-Application Program feature is designed for user to Read/Write nonvolatile data flash. It may bring great help to store parameters those should be independent of power-up and power-done action. In other words, the user can store data in data flash memory, and after he shutting down the MCU and rebooting the MCU, he can get the original value, which he had stored in.

The user can program the data flash according to the same way as ISP program, so he should get deeper understanding related to SFR ISP_DATA, ISP_ADDRL, ISP_ADDRH, ISP_CMD, ISP_TRIG, and ISP_CONTR.

12.1 IAP/EEPROM Special Function Registers

The following special function registers are related to the IAP/ISP/EEPROM operation. All these registers can be accessed by software in the user's application program.

Symbol	Description	Address	Bit Address and Symbol MSB LSB	Value after Power-on or Reset
ISP_DATA	ISP/IAP Flash Data Register	Е2Н		1111 1111B
ISP_ADDRH	ISP/IAP Flash Address High	ЕЗН		0000 0000B
ISP_ADDRL	ISP/IAP Flash Address Low	Е4Н		0000 0000B
ISP_CMD	ISP/IAP Flash Command Register	Е5Н	MS1 MS0	xxxx x000B
ISP_TRIG	ISP/IAP Flash Command Trigger	Е6Н		xxxx xxxxB
ISP_CONTR	ISP/IAP Control Register	Е7Н	ISPEN SWBS SWRST CMD_FAIL - WT2 WT1 WT0	0000 1000B

1. ISP/IAP Flash Data Register: ISP_DATA (Address: E2H, Non bit-addressable)

ISP_DATA is the data port register for ISP/IAP operation. The data in ISP_DATA will be written into the desired address in operating ISP/IAP write and it is the data window of readout in operating ISP/IAP read.

2. ISP/IAP Flash Address Registers: ISP_ADDRH and ISP_ADDRL

ISP_ADDRH (address:E3H) is the high-byte address port for all ISP/IAP modes.

ISP_ADDRH[7:5] must be cleared to 000, if one bit of ISP_ADDRH[7:5] is set, the IAP/ISP write function must fail.

ISP_ADDRL (address:E4H) is the low port for all ISP/IAP modes. In page erase operation, it is ignored.

3. ISP/IAP Flash Command Register: ISP CMD (Non bit -addressable)

SFR name	Address	bit	В7	В6	В5	B4	В3	B2	B1	В0
ISP_CMD	E5H	name	1	1	-	-	-	1	MS1	MS0

B7~B2: Reserved.

MS1, MS0: ISP/IAP operating mode selection. IAP_CMD is used to select the flash mode for performing numerous ISP/IAP function or used to access protected SFRs.

0, 0: Standby

0, 1: Data Flash/EEPROM read.

1, 0 : Data Flash/EEPROM program.

1, 1: Data Flash/EEPROM page erase.

4. ISP/IAP Flash Command Trigger Register: ISP_TRIG (Address: E6H, Non bit -addressable)

ISP_TRIG is the command port for triggering ISP/IAP activity and protected SFRs access. If ISP_TRIG is filled with sequential 0x46h, 0xB9h and if ISPEN(ISP_CONTR.7) = 1, ISP/IAP activity or protected SFRs access will triggered.

5. ISP/IAP Control Register : ISP_CONTR (Non bit-addressable)

SFR name	Address	bit	В7	В6	В5	В4	В3	B2	B1	В0
ISP_CONTR	Е7Н	name	ISPEN	SWBS	SWRST	CMD_FAIL	-	WT2	WT2	WT0

ISPEN: ISP/IAP operation enable.

0 : Global disable all ISP/IAP program/erase/read function.

1 : Enable ISP/IAP program/erase/read function.

SWBS: software boot selection control.

0: Boot from main-memory after reset.

1: Boot from ISP memory after reset.

SWRST: software reset trigger control.

0: No operation

1: Generate software system reset. It will be cleared by hardware automatically.

CMD FAIL: Command Fail indication for ISP/IAP operation.

0: The last ISP/IAP command has finished successfully.

1: The last ISP/IAP command fails. It could be caused since the access of flash memory was inhibited.

B3: Reserved. Software must write "0" on this bit when ISP CONTR is written.

WT2~WT0: Waiting time selection while flash is busy.

Settin	g wait	times		(CPU wait times	
WT2	WT1	WT0	Read (2 System clocks)	Program (=55uS)	Sector Erase (=21mS)	Recommended System Clock Frequency (MHz)
1	1	1	2 SYSclks	55 SYSclks	21012 SYSclks	≤1MHz
1	1	0	2 SYSclks	110 SYSclks	42024 SYSclks	≤ 2MHz
1	0	1	2 SYSclks	165 SYSclks	63036 SYSclks	≤ 3MHz
1	0	0	2 SYSclks	330 SYSclks	126072 SYSclks	≤ 6MHz
0	1	1	2 SYSclks	660 SYSclks	252144 SYSclks	≤ 12MHz
0	1	0	2 SYSclks	1100 SYSclks	420240 SYSclks	≤ 20MHz
0	0	1	2 SYSclks	1320 SYSclks	504288 SYSclks	≤ 24MHz
0	0	0	2 SYSclks	1760 SYSclks	672384 SYSclks	≤ 30MHz

Note: Software reset actions could reset other SFR,but it never influences bits ISPEN and SWBS. The ISPEN and SWBS only will be reset by power-up action, while not software reset.

6. When the operation voltage is too low, EEPROM / IAP function should be disabled

SFR name	Address	bit	В7	В6	В5	В4	В3	В2	В1	В0
PCON	87H	name	SMOD	SMOD0	LVDF	POF	GF1	GF0	PD	IDL

LVDF : Pin Low-Voltage Flag. Once low voltage condition is detected (VCC power is lower than LVD voltage), it is set by hardware (and should be cleared by software).

12.2 STC12C5620AD series Internal EEPROM Allocation Table

STC12C5620AD series microcontroller's Data Flash (internal available EEPROM) address (and program space is separate): if the application area of IAP write Data/erase sector of the action, the statements will be ignore and continue to the next one. Program in user application area (AP area), only operate IAP/ISP on Data Flash (EEPROM)

STC12C5612AD / STC12C5628AD / STC12C5630AD and STC12LE5612AD / STC12LE5628AD / STC12C5630AD are excepted, this several types in the application area can modify the application

			al EEPROM Selection Tall EEPROM Selection T	
Туре	EEPROM (Byte)	Sector Numbers	Begin_Sector Begin_Address	End_Sector End_Address
STC12C5604AD/ STC12LE5604AD	4K	8	0000h	0FFFh
STC12C5608AD/ STC12LE5608AD	4K	8	0000h	0FFFh
STC12C5616AD/ STC12LE5616AD	4K	8	0000h	0FFFh
STC12C5620AD/ STC12LE5620AD	4K	8	0000h	0FFFh
User can modify the appli		lowing series dication area,		dified as EEPROM
STC12C5612AD/ STC12LE5612AD	-	24	0000h	2FFFh
STC12C5628AD/ STC12LE5628AD	-	56	0000h	6FFFh
STC12C5630AD/ STC12LE5630AD	-	60	0000h	77FFh

				address refer address refe			, ,	· /
Sect		Sect		Sect		`	tor 4	Each sector 512 byte
Start	End	Start	End	Start	End	Start	End	
0000Н	01FFH	0200H	03FFH	0400H	05FFH	0600H	07FFH	Suggest the same
Sect	or 5	Sect	tor 6	Sect	tor7	Sec	tor 8	times modified data
Start	End	Start	End	Start	End	Start	End	in the same sector,
0800Н	09FFH	0А00Н	0BFFH	0С00Н	0DFFH	0Е00Н	0FFFH	data in different sectors, don't have to use full, of course, it was all to use

12.3 IAP/EEPROM Assembly Language Program Introduction

; /*It is decided by the assembler/compiler used by users that whether the SFRs addresses are declared by the DATA or the EOU directive*/

ISP_DATA	DATA	0E2H	or	ISP_DATA	EQU	0E2H
ISP_ADDRH	DATA	0E3H	or	ISP_ADDRH	EQU	0E3H
ISP_ADDRL	DATA	0E4H	or	ISP_ADDRL	EQU	0E4H
ISP_CMD	DATA	0E5H	or	ISP_CMD	EQU	0E5H
ISP_TRIG	DATA	0E6H	or	ISP_TRIG	EQU	0E6H
ISP CONTR	DATA	0E7H	or	ISP CONTR	EQU	0E7H

:/*Define ISP/IAP/EEPROM command and wait time*/

```
ISP_IAP_BYTE_READ EQU 1 ;Byte-Read ISP_IAP_BYTE_PROGRAM EQU 2 ;Byte-Program ISP_IAP_SECTOR_ERASE EQU 3 ;Sector-Erase WAIT TIME EQU 0 ;Set wait time
```

;/*Byte-Read*/

```
MOV
        ISP ADDRH,
                        #BYTE ADDR HIGH
                                                 ;Set ISP/IAP/EEPROM address high
        ISP ADDRL,
                        #BYTE ADDR LOW
                                                 ;Set ISP/IAP/EEPROM address low
MOV
MOV
        ISP CONTR,
                        #WAIT TIME
                                                 :Set wait time
ORL
        ISP CONTR,
                        #1000000B
                                                 Open ISP/IAP function
MOV
        ISP CMD,
                        #ISP IAP BYTE READ
                                                 ;Set ISP/IAP Byte-Read command
        ISP TRIG,
                                                 ;Send trigger command1 (0x46)
MOV
                        #46H
        ISP TRIG,
                                                 ;Send trigger command2 (0xB9)
MOV
                        #0B9H
                        :CPU will hold here until ISP/IAP/EEPROM operation complete
NOP
                                ;Read ISP/IAP/EEPROM data
MOV
                ISP DATA
```

;/*Disable ISP/IAP/EEPROM function, make MCU in a safe state*/

MOV	ISP_CONTR,	#0000000B	;Close ISP/IAP/EEPROM function
MOV	ISP_CMD,	#0000000B	;Clear ISP/IAP/EEPROM command
;MOV	ISP_TRIG,	#00000000B	;Clear trigger register to prevent mistrigger
;MOV	ISP_ADDRH,	#0FFH	;Move 00 into address high-byte unit,
			;Data ptr point to non-EEPROM area
;MOV	ISP_ADDRL,	#0FFH	;Move 00 into address low-byte unit,
			;prevent misuse

;/*Byte-Program, if the byte is null(0FFH), it can be programmed; else, MCU must operate Sector-Erase firstly, and then can operate Byte-Program.*/

```
MOV
       ISP DATA,
                        #ONE DATA
                                                ;Write ISP/IAP/EEPROM data
       ISP_ADDRH,
MOV
                        #BYTE ADDR HIGH
                                                ;Set ISP/IAP/EEPROM address high
                                                ;Set ISP/IAP/EEPROM address low
        ISP ADDRL,
                        #BYTE ADDR LOW
MOV
MOV
        ISP CONTR,
                        #WAIT TIME
                                                ;Set wait time
        ISP CONTR,
                        #1000000B
                                                ;Open ISP/IAP function
ORL
MOV
       ISP CMD,
                        #ISP IAP BYTE READ
                                                ;Set ISP/IAP Byte-Read command
        ISP TRIG,
                                                ;Send trigger command1 (0x46)
MOV
                        #46H
                                                ;Send trigger command2 (0xb9)
MOV
        ISP TRIG,
                        #0B9H
NOP
                        ;CPU will hold here until ISP/IAP/EEPROM operation complete
```

;/*Disah	ole ISP/IA	P/EEPROM function	n, make MCU in a safe state*/	
, , , , , , ,	MOV	ISP CONTR,	#0000000B	;Close ISP/IAP/EEPROM function
	MOV	ISP CMD,	#0000000B	;Clear ISP/IAP/EEPROM command
	;MOV	ISP TRIG,	#0000000B	;Clear trigger register to prevent mistrigger
	;MOV	ISP ADDRH,	#FFH	;Move 00H into address high-byte unit,
	,	_ ′		;Data ptr point to non-EEPROM area
	;MOV	ISP ADDRL,	#0FFH	;Move 00H into address low-byte unit,
	,	_ ′		;prevent misuse
				4
;/*Erase bytes*/	e one sect	or area, there is on	ly Sector-Erase instead of By	rte-Erase, every sector area account for 512
,	MOV	ISP ADDRH,	#SECTOT FIRST BYTE	ADDR HIGH
		_ ′		;Set the sector area starting address high
	MOV	ISP ADDRL,	#SECTOT FIRST BYTE	
		_ ′		;Set the sector area starting address low
	MOV	ISP CONTR,	#WAIT TIME	;Set wait time
	ORL	ISP CONTR,	#10000 0 00B	Open ISP/IAP function
	MOV	ISP CMD,	#ISP IAP SECTOR ERAS	E ;Set Sectot-Erase command
	MOV	ISP TRIG,	#46H	;Send trigger command1 (0x46)
	MOV	ISP TRIG,	#0B9H	;Send trigger command2 (0xb9)
	NOP		;CPU will hold here until IS	P/IAP/EEPROM operation complete
:/*Disab	ole ISP/IA	P/EEPROM function	n, make MCU in a safe state*/	
,	MOV	ISP CONTR,	#0000000B	:Close ISP/IAP/EEPROM function
	MOV	ISP CMD,	#0000000B	;Clear ISP/IAP/EEPROM command
	;MOV	ISP TRIG,	#0000000B	;Clear trigger register to prevent mistrigger
	;MOV	ISP ADDRH,	#0FFH	;Move 00H into address high-byte unit,
		_ ′		; Data ptr point to non-EEPROM area
	;MOV	ISP ADDRL,	#0FFH	;Move 00H into address low-byte unit,
		_ ′		;prevent misuse
				•

Little common sense: (STC MCU Data Flash use as EEPROM function)

Three basic commands -- bytes read, byte programming, the sector erased

Byte programming: "1" write "1" or "0", will "0" write "0". Just FFH can byte programming. If the byte not FFH, you must erase the sector, because only the "sectors erased" to put "0" into "1".

Sector erased: only "sector erased" will also be a "0" erased for "1".

Big proposal:

- 1. The same times modified data in the same sector, not the same times modified data in other sectors, won't have to read protection.
- 2. If a sector with only one byte, that's real EEPROM, STC MCU Data Flash faster than external EEPROM, read a byte/many one byte programming is about 2 clock / 55uS.
- 3. If in a sector of storing a large amounts of data, a only need to modify one part of a byte, or when the other byte don't need to modify data must first read on STC MCU, then erased RAM the whole sector, again will need to keep data and need to amend data in bytes written back to this sector section literally only bytes written orders (without continuous bytes, write command). Then each sector use bytes are using the less the convenient (not need read a lot of maintained data).

Frequently asked questions:

- IAP instructions after finishing, address is automatically "add 1" or "minus 1"?
 Answer: not
- Send 46 and B9 after IAP ordered the trigger whether to have sent 46 and B9 trigger?
 Answer: yes

12.4 EEPROM Demo Program (C and ASM)

1. C Code Listing

```
/*_____*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU ISP/IAP/EEPROM Demo -----*/
/* If you want to use the program or the program referenced in the */
/* article, please specify in which data and procedures from STC */
/*____*/
#include "reg51.h"
#include "intrins.h"
typedef unsigned char BYTE;
typedef unsigned int WORD;
/*Declare SFR associated with the IAP */
sfr
       IAP DATA
                       = 0xE2;
                                       //Flash data register
sfr
       IAP ADDRH
                       = 0xE3:
                                       //Flash address HIGH
sfr
       IAP ADDRL
                       = 0xE4;
                                       //Flash address LOW
sfr
       IAP CMD
                                       //Flash command register
                       = 0xE5:
sfr
       IAP TRIG
                       = 0xE6;
                                       //Flash command trigger
sfr
       IAP CONTR
                                       //Flash control register
                       = 0xE7;
/*Define ISP/IAP/EEPROM command*/
#define CMD IDLE
                                       //Stand-By
#define CMD READ
                       1
                                       //Byte-Read
#define CMD PROGRAM 2
                                       //Byte-Program
#define CMD ERASE
                                       //Sector-Erase
/*Define ISP/IAP/EEPROM operation const for IAP CONTR*/
//#define ENABLE IAP
                       0x80
                                       //if SYSCLK<30MHz
//#define ENABLE IAP
                       0x81
                                       //if SYSCLK<24MHz
#define ENABLE IAP
                       0x82
                                       //if SYSCLK<20MHz
//#define ENABLE IAP
                       0x83
                                       //if SYSCLK<12MHz
//#define ENABLE IAP
                       0x84
                                       //if SYSCLK<6MHz
//#define ENABLE IAP
                       0x85
                                       //if SYSCLK<3MHz
//#define ENABLE IAP
                       0x86
                                       //if SYSCLK<2MHz
//#define ENABLE IAP
                       0x87
                                       //if SYSCLK<1MHz
//Start address for STC12C5620AD series EEPROM
#define IAP ADDRESS
                       0x0400
void Delay(BYTE n);
void IapIdle();
BYTE IapReadByte(WORD addr);
```

```
void IapProgramByte(WORD addr, BYTE dat);
void IapEraseSector(WORD addr);
void main()
         WORD i;
         P1 = 0xfe:
                                                       //1111,1110 System Reset OK
         Delay(10);
                                                       //Delay
         IapEraseSector(IAP ADDRESS);
                                                       //Erase current sector
         for (i=0; i<512; i++)
                                                       //Check whether all sector data is FF
                  if (IapReadByte(IAP ADDRESS+i) != 0xff)
                  goto Error;
                                                       //If error, break
         P1 = 0xfc:
                                                       //1111,1100 Erase successful
         Delay(10);
                                                       //Delay
         for (i=0; i<512; i++)
                                                       //Program 512 bytes data into data flash
                  IapProgramByte(IAP ADDRESS+i, (BYTE)i);
         P1 = 0xf8;
                                                       //1111,1000 Program successful
         Delay(10);
                                                       //Delay
         for (i=0; i<512; i++)
                                                       //Verify 512 bytes data
                  if (IapReadByte(IAP ADDRESS+i) != (BYTE)i)
                  goto Error;
                                                       //If error, break
         P1 = 0xf0;
                                                       //1111,0000 Verify successful
         while (1);
Error:
         P1 &= 0x7f;
                                                       //0xxx,xxxx IAP operation fail
         while (1);
Software delay function
*/
void Delay(BYTE n)
{
         WORD x;
         while (n--)
                  x = 0;
                  while (++x);
```

```
/*_____
Disable ISP/IAP/EEPROM function
Make MCU in a safe state
*/
void IapIdle()
        IAP CONTR = 0;
                                         //Close IAP function
        IAP CMD = 0;
                                         //Clear command to standby
        IAP TRIG = 0;
                                         //Clear trigger register
        IAP ADDRH = 0x80;
                                         //Data ptr point to non-EEPROM area
                                         //Clear IAP address to prevent misuse
        IAP ADDRL = 0;
Read one byte from ISP/IAP/EEPROM area
Input: addr (ISP/IAP/EEPROM address)
Output:Flash data
*/
BYTE IapReadByte(WORD addr)
{
                                         //Data buffer
        BYTE dat;
        IAP CONTR = ENABLE IAP;
                                         //Open IAP function, and set wait time
        IAP CMD = CMD READ;
                                         //Set ISP/IAP/EEPROM READ command
        IAP ADDRL = addr;
                                         //Set ISP/IAP/EEPROM address low
        IAP ADDRH = addr >> 8;
                                         //Set ISP/IAP/EEPROM address high
        IAP TRIG = 0x46;
                                         //Send trigger command1 (0x46)
        IAP TRIG = 0xb9;
                                         //Send trigger command2 (0xb9)
                                         //MCU will hold here until ISP/IAP/EEPROM
        nop ();
                                         //operation complete
        dat = IAP DATA;
                                         //Read ISP/IAP/EEPROM data
                                         //Close ISP/IAP/EEPROM function
        IapIdle();
                                         //Return Flash data
        return dat;
Program one byte to ISP/IAP/EEPROM area
Input: addr (ISP/IAP/EEPROM address)
   dat (ISP/IAP/EEPROM data)
Output:-
*/
```

```
void IapProgramByte(WORD addr, BYTE dat)
                                           //Open IAP function, and set wait time
        IAP CONTR = ENABLE IAP;
        IAP_CMD = CMD_PROGRAM;
                                           //Set ISP/IAP/EEPROM PROGRAM command
        IAP ADDRL = addr;
                                           //Set ISP/IAP/EEPROM address low
        IAP ADDRH = addr >> 8;
                                           //Set ISP/IAP/EEPROM address high
        IAP DATA = dat;
                                           //Write ISP/IAP/EEPROM data
        IAP TRIG = 0x46;
                                           //Send trigger command1 (0x46)
        IAP\_TRIG = 0xb9;
                                           //Send trigger command2 (0xb9)
        nop ();
                                           //MCU will hold here until ISP/IAP/EEPROM
                                           //operation complete
        IapIdle();
Erase one sector area
Input: addr (ISP/IAP/EEPROM address)
Output:-
void IapEraseSector(WORD addr)
                                           //Open IAP function, and set wait time
        IAP CONTR = ENABLE IAP;
        IAP CMD = CMD ERASE;
                                           //Set ISP/IAP/EEPROM ERASE command
        IAP ADDRL = addr;
                                           //Set ISP/IAP/EEPROM address low
        IAP ADDRH = addr >> 8;
                                           //Set ISP/IAP/EEPROM address high
        IAP TRIG = 0x46;
                                           //Send trigger command1 (0x46)
        IAP TRIG = 0xb9;
                                           //Send trigger command2 (0xb9)
                                           //MCU will hold here until ISP/IAP/EEPROM
        nop ();
                                           //operation complete
        IapIdle();
```

2. Assembly Code Listing

```
·/*____*/
:/* --- STC MCU International Limited -----*/
:/* --- STC 1T Series MCU ISP/IAP/EEPROM Demo -----*/
;/* If you want to use the program or the program referenced in the */
;/* article, please specify in which data and procedures from STC */
·/*_____*/
:/*Declare SFRs associated with the IAP */
                                  :Flash data register
IAP DATA
              EOU
                      0E2H
IAP ADDRH
              EQU
                      0E3H
                                  :Flash address HIGH
IAP ADDRL
              EOU
                      0E4H
                                  :Flash address LOW
IAP CMD
              EQU
                      0E5H
                                  ;Flash command register
                                  ;Flash command trigger
IAP TRIG
              EOU
                      0E6H
IAP CONTR
              EQU
                      0E7H
                                  ;Flash control register
;/*Define ISP/IAP/EEPROM command*/
CMD IDLE
              EOU
                                  ;Stand-By
CMD READ
              EOU
                      1
                                  :Byte-Read
CMD PROGRAM EOU
                      2
                                  :Byte-Program
CMD ERASE
              EQU
                      3
                                  ;Sector-Erase
;/*Define ISP/IAP/EEPROM operation const for IAP CONTR*/
;ENABLE IAP
              EOU
                      80H
                                 ;if SYSCLK<30MHz
                      81H
;ENABLE IAP
              EQU
                                 ;if SYSCLK<24MHz
ENABLE IAP
              EQU
                      82H
                                 ;if SYSCLK<20MHz
;ENABLE IAP
              EOU
                      83H
                                 ;if SYSCLK<12MHz
;ENABLE IAP
              EQU
                      84H
                                 ;if SYSCLK<6MHz
;ENABLE IAP
              EOU
                      85H
                                 ;if SYSCLK<3MHz
;ENABLE IAP
              EQU
                      86H
                                 ;if SYSCLK<2MHz
;ENABLE IAP
              EOU
                      87H
                                 ;if SYSCLK<1MHz
://Start address for STC12C5620AD series EEPROM
IAP ADDRESS EQU 0000H
       ORG
              0000H
       LJMP
              MAIN
       ORG
              0100H
MAIN:
       MOV
              P1,
                      #0FEH
                                     ;1111,1110 System Reset OK
       LCALL DELAY
                                     ;Delay
```


	LCALL	IAP_ER	#IAP_ADDRESS ASE	;Set ISP/IAP/EEPROM address ;Erase current sector
	MOV MOV	DPTR, R0,	#IAP_ADDRESS #0	;Set ISP/IAP/EEPROM address ;Set counter (512)
CHECK	MOV	R1,	#2	:Check whether all sector data is FF
TECK		IAP RE	AD	Read Flash
	CJNE	A,	#0FFH, ERROR	;If error, break
	INC	DPTR	, -	;Inc Flash address
	DJNZ	R0,	CHECK1	;Check next
	DJNZ	R1,	CHECK1	;Check next
	MOV	P1,	#0FCH	;1111,1100 Erase successful
	LCALL	DELAY		;Delay
			#IAP_ADDRESS	;Set ISP/IAP/EEPROM address
	MOV	R0,	#0	;Set counter (512)
	MOV	R1,	#2	* *** * * .
NEXT:	MOV	R2,	#0	;Initial test data
	MOV	A,	R2	;Program 512 bytes data into data flash ;Ready IAP data
		IAP PRO		;Program flash
	INC	DPTR	OGRAM	;Inc Flash address
	INC	R2		;Modify test data
			NEXT	;Program next
	DJNZ	R1,	NEXT	;Program next
	MOV		#0F8H	;1111,1000 Program successful
		DELAY		;Delay
	MOV		#IAP ADDRESS	;Set ISP/IAP/EEPROM address
	MOV	R0,	#0	;Set counter (512)
	MOV	R1,	#2	
	MOV	R2,	#0	
CHECK				;Verify 512 bytes data
		IAP_RE		;Read Flash
	CJNE	A, 2,	ERROR	;If error, break ;Inc Flash address
	INC INC	DPTR R2		;Inc Flash address ;Modify verify data
	DJNZ	R2 R0,	CHECK2	Check next
	DJNZ	R1,	CHECK2	;Check next
	MOV		#0F0H	;1111,0000 Verify successful

```
ERROR:
        MOV
                P0,
                        R0
        MOV
                P2.
                        R1
        MOV
               P3,
                        R2
               P1.7
        CLR
                                        :0xxx,xxxx IAP operation fail
        SJMP
                $
·/*_____
:Software delay function
·____*/
DELAY:
        CLR
               Α
        MOV
                R0.
                        Α
        MOV
                R1,
                        Α
                R2.
                        #20H
        MOV
DELAY1:
        DJNZ
                R0,
                        DELAY1
        DJNZ
                R1.
                        DELAY1
        DJNZ
                R2,
                        DELAY1
        RET
;Disable ISP/IAP/EEPROM function
:Make MCU in a safe state
IAP IDLE:
                                #0
                                                :Close IAP function
        MOV
               IAP CONTR,
        MOV
               IAP CMD,
                                #0
                                                ;Clear command to standby
               IAP TRIG,
                                #0
                                                ;Clear trigger register
        MOV
        MOV
                IAP ADDRH,
                                #80H
                                                ;Data ptr point to non-EEPROM area
                IAP ADDRL,
                                                ;Clear IAP address to prevent misuse
        MOV
                                #0
        RET
;Read one byte from ISP/IAP/EEPROM area
;Input: DPTR(ISP/IAP/EEPROM address)
;Output:ACC (Flash data)
:----*/
IAP READ:
        MOV
               IAP CONTR,
                                #ENABLE IAP
                                                Open IAP function, and set wait time
        MOV
               IAP CMD,
                                #CMD READ
                                                ;Set ISP/IAP/EEPROM READ command
               IAP ADDRL,
        MOV
                                DPL
                                                ;Set ISP/IAP/EEPROM address low
               IAP ADDRH,
                                                ;Set ISP/IAP/EEPROM address high
        MOV
                                DPH
               IAP TRIG,
                                                ;Send trigger command1 (0x46)
        MOV
                                #46H
        MOV
               IAP TRIG,
                                                ;Send trigger command2 (0xb9)
                                #0B9H
        NOP
                                ;MCU will hold here until ISP/IAP/EEPROM operation complete
        MOV
                        IAP DATA
                                                ;Read ISP/IAP/EEPROM data
                Α,
        LCALL IAP IDLE
                                                ;Close ISP/IAP/EEPROM function
        RET
```


```
;Program one byte to ISP/IAP/EEPROM area
;Input: DPAT(ISP/IAP/EEPROM address)
;ACC (ISP/IAP/EEPROM data)
:Output:-
IAP PROGRAM:
               IAP CONTR,
        MOV
                                                   Open IAP function, and set wait time
                                #ENABLE IAP
        MOV
               IAP CMD,
                                #CMD PROGRAM
                                                  ;Set ISP/IAP/EEPROM PROGRAM command
        MOV
               IAP ADDRL,
                                DPL
                                                   ;Set ISP/IAP/EEPROM address low
        MOV
               IAP ADDRH,
                                DPH
                                                  ;Set ISP/IAP/EEPROM address high
        MOV
               IAP DATA,
                                                  ;Write ISP/IAP/EEPROM data
                                Α
               IAP TRIG,
        MOV
                                #46H
                                                  ;Send trigger command1 (0x46)
        MOV
               IAP TRIG,
                                #0B9H
                                                  ;Send trigger command2 (0xb9)
        NOP
                                ;MCU will hold here until ISP/IAP/EEPROM operation complete
        LCALL IAP IDLE
                                                  ;Close ISP/IAP/EEPROM function
        RET
·/*_____
;Erase one sector area
;Input: DPTR(ISP/IAP/EEPROM address)
;Output:-
IAP ERASE:
        MOV
               IAP CONTR,
                                #ENABLE IAP
                                                Open IAP function, and set wait time
        MOV
               IAP CMD,
                                #CMD ERASE
                                                ;Set ISP/IAP/EEPROM ERASE command
        MOV
               IAP ADDRL,
                                DPL
                                                ;Set ISP/IAP/EEPROM address low
        MOV
               IAP ADDRH,
                                DPH
                                                ;Set ISP/IAP/EEPROM address high
        MOV IAP TRIG,#46H
                                                ;Send trigger command1 (0x46)
                                                ;Send trigger command2 (0xb9)
        MOV IAP TRIG,#0B9H
        NOP
                                ;MCU will hold here until ISP/IAP/EEPROM operation complete
                                                ;Close ISP/IAP/EEPROM function
        LCALL IAP_IDLE
        RET
        END
```

Chapter 13. STC12 series Development/Programming Tool

13.1 In-System-Programming (ISP) principle

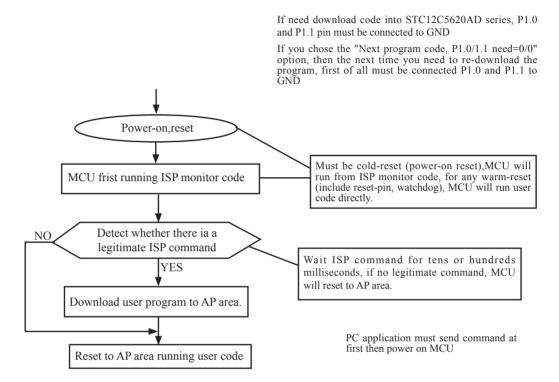

13.2 STC12C5620AD series Typical Application Circuit for ISP

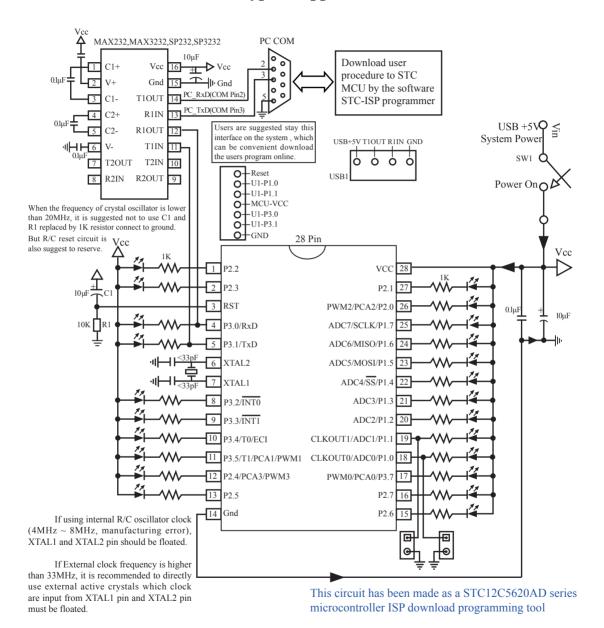


Users in their target system, such as the P3.0/P3.1 through the RS-232 level shifter connected to the computer after the conversion of ordinary RS-232 serial port to connect the system programming / upgrading client software. If the user panel recommended no RS-232 level converter, should lead to a socket, with Gnd/P3.1/P3.0/Vcc four signal lines, so that the user system can be programmed directly. Of course, if the six signal lines can lead to Gnd/P3.1/P3.0/Vcc/P1.1/P1.0 as well, because you can download the program by P1.0/P1.1 ISP ban. If you can Gnd/P3.1/P3.0/Vcc/P1.1/P1.0/Reset seven signal lines leads to better, so you can easily use "offline download board (no computer)" .

ISP programming on the Theory and Application Guide to see "STC12C5620AD Series MCU Development / Programming Tools Help"section. In addition, we have standardized programming download tool, the user can then program into the goal in the above systems, you can borrow on top of it RS-232 level shifter connected to the computer to download the program used to do. Programming a chip roughly be a few seconds, faster than the ordinary universal programmer much faster, there is no need to buy expensive third-party programmer?.

PC STC-ISP software downloaded from the website

13.3 PC side application usage

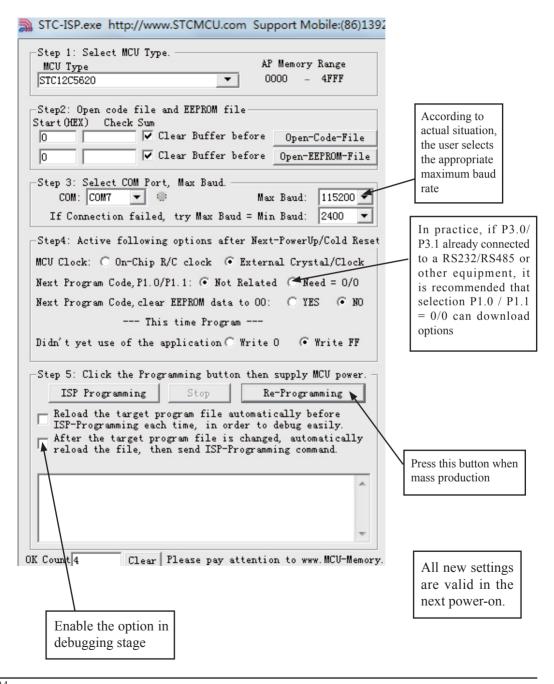

Step1: Select MCU type (E.g. STC12C5620AD)

Step2: Load user program code (*.bin or *.hex)

Setp3: Select the serial port you are using

Setp4: Config the hardware option

Step5: Press "ISP programming" or "Re-Programming" button to download user program

NOTE: Must press "ISP programming" or "Re-Programming" button first, then power on MCU, otherwise will cannot download.

About hardware connection

- 1. MCU RXD (P3.0) ---- RS232 ---- PC COM port TXD (Pin3)
- 2. MCU TXD (P3.1) ---- RS232 ---- PC COM port RXD (Pin2)
- 3. MCU GNG-----PC COM port GND (Pin5)
- 4. RS232 : You can select STC232 / STC3232 / MAX232 / MAX3232 / ...

Using a demo board as a programmer

STC-ISP ver3.0A PCB can be welded into three kinds of circuits, respectively, support the STC's 16/20/28/32 pins MCU, the back plate of the download boards are affixed with labels, users need to pay special attention to. All the download board is welded 40-pin socket, the socket's 20-pin is ground line, all types of MCU should be put on the socket according to the way of alignment with the ground. The method of programming user code using download board as follow:

- 1. According to the type of MCU choose supply voltage,
 - A. For 5V MCU, using jumper JP1 to connect MCU-VCC to +5V pin
 - B. For 3V MCU, using jumper JP1 to connect MCU-VCC to +3.3V pin
- 2. Download cable (Provide by STC)
 - A. Connect DB9 serial connector to the computer's RS-232 serial interface
 - B. Plug the USB interface at the same side into your computer's USB port for power supply
 - C. Connect the USB interface at the other side into STC download board
- 3. Other interfaces do not need to connect.
- 4. In a non-pressed state to SW1, and MCU-VCC power LED off.
- 5. For SW3
 - P1.0/P1.1 = 1/1 when SW3 is non-pressed
 - P1.0/P1.1 = 0/0 when SW3 is pressed

If you have select the "Next program code, P1.0/P1.1 Need = 0/0" option, then SW3 must be in a pressed state

- 6. Put target MCU into the U1 socket, and locking socket
- 7. Press the "Download" button in the PC side application
- 8. Press SW1 switch in the download board
- 9. Close the demo board power supply and remove the MCU after download successfully.

13.4 Compiler / Assembler Programmer and Emulator

About Compiler/Assembler

Any traditional compiler / assembler and the popular Keil are suitable for STC MCU. For selection MCU body, the traditional compiler / assembler, you can choose Intel's 8052 / 87C52 / 87C52 / 87C58 or Philips's P87C52 / P87C54/P87C58 in the traditional environment, in Keil environment, you can choose the types in front of the proposed or download the STC chips database file (STC.CDB) from the STC official website.

About Programmer

You can use the STC specific ISP programmer. (Can be purchased from the STC or apply for free sample). Programmer can be used as demo board

About Emulator

We do not provite specific emulator now. If you have a traditional 8051 emulator, you can use it to simulate STC MCU's some 8052 basic functions.


13.5 Self-Defined ISP download Demo

```
/*______*/
/* --- STC MCU International Limited -----*/
/* --- STC 1T Series MCU using software to custom download code Demo----*/
/* If you want to use the program or the program referenced in the -----*/
/* article, please specify in which data and procedures from STC -----*/
/*______*/
#include <reg51.h>
#include <instrins h>
sfr IAP CONTR = 0xe7;
sbit MCU Start Led = P1^7;
#define Self Define ISP Download Command 0x22
#define RELOAD COUNT 0xfb
                           //18.432MHz,12T,SMOD=0,9600bps
//#define RELOAD COUNT 0xf6
                           //18.432MHz,12T,SMOD=0,4800bps
//#define RELOAD COUNT 0xec
                           //18.432MHz,12T,SMOD=0,2400bps
//#define RELOAD COUNT 0xd8
                           //18.432MHz,12T,SMOD=0,1200bps
void serial port initial(void);
void send UART(unsigned char);
void UART Interrupt Receive(void);
void soft reset to ISP Monitor(void);
void delay(void);
void display MCU Start Led(void);
```


```
void main(void)
         unsigned char i = 0;
         serial port initial();
                                     //Initial UART
         display MCU Start Led(); //Turn on the work LED
         send UART(0x34);//Send UART test data
         send UART(0xa7);// Send UART test data
         while (1):
}
void send UART(unsigned char i)
         ES = 0; //Disable serial interrupt
         TI = 0; //Clear TI flag
                            //send this data
         SBUF = i:
                            //wait for the data is sent
         while (!TI);
         TI = 0; //clear TI flag
         ES = 1; //enable serial interrupt
void UART Interrupt)Receive(void) interrupt 4 using 1
         unsigned char k = 0;
         if (RI)
         {
                  RI = 0;
                  k = SBUF;
                  if (k == Self Define ISP Command) //check the serial data
                            delay(); //delay 1s
                            delay(); //delay 1s
                            soft_reset_to_ISP_Monitor();
                   }
         if (TI)
                  TI = 0;
}
void soft_reset_to_ISP_Monitor(void)
{
                                      //0110,0000 soft reset system to run ISP monitor
         IAP CONTR = 0x60;
```

```
void delay(void)
         unsigned int j = 0;
         unsigned int g = 0;
         for (j=0; j<5; j++)
                  for (g=0; g<60000; g++)
                            _nop_();
                            _nop_();
                            _nop_();
                            _nop_();
                            _nop_();
                   }
         }
void display_MCU_Start_Led(void)
         unsigned char i = 0;
         for (i=0; i<3; i++)
                  MCU Start Led = 0;
                                               //Turn on work LED
                  dejay();
                                               //Turn off work LED
                  MCU_Start_Led = 1;
                  dejay();
                  MCU_Start_Led = 0;
                                               //Turn on work LED
```

In addition, the PC-side application also need to make the following settings

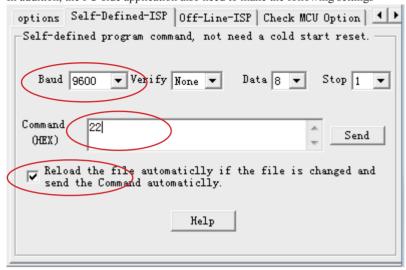

Clicking the "Help" button as show in above figure, we can see the detail explaination as below.

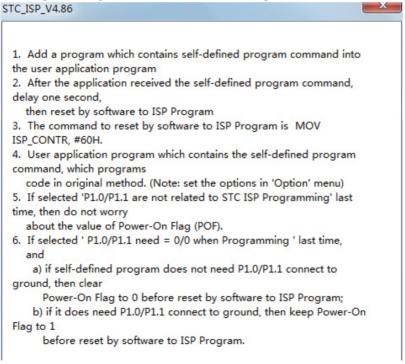

Appendix A: Assembly Language Programming

INTRODUCTION

Assembly language is a computer language lying between the extremes of machine language and high-level language like Pascal or C use words and statements that are easily understood by humans, although still a long way from "natural" language. Machine language is the binary language of computers. A machine language program is a series of binary bytes representing instructions the computer can execute.

Assembly language replaces the binary codes of machine language with easy to remember "mnemonics" that facilitate programming. For example, an addition instruction in machine language might be represented by the code "10110011". It might be represented in assembly language by the mnemonic "ADD". Programming with mnemonics is obviously preferable to programming with binary codes.

Of course, this is not the whole story. Instructions operate on data, and the location of the data is specified by various "addressing modes" emmbeded in the binary code of the machine language instruction. So, there may be several variations of the ADD instruction, depending on what is added. The rules for specifying these variations are central to the theme of assembly language programming.

An assembly language program is not executable by a computer. Once written, the program must undergo translation to machine language. In the example above, the mnemonic "ADD" must be translated to the binary code "10110011". Depending on the complexity of the programming environment, this translation may involve one or more steps before an executable machine language program results. As a minimum, a program called an "assembler" is required to translate the instruction mnemonics to machine language binary codes. Afurther step may require a "linker" to combine portions of program from separate files and to set the address in memory at which th program may execute. We begin with a few definitions.

An assembly language program i a program written using labels, mnemonics, and so on, in which each statement corresponds to a machine instruction. Assembly language programs, often called source code or symbolic code, cannot be executed by a computer.

A machine language program is a program containing binary codes that represent instructions to a computer. Machine language programs, often called object code, are executable by a computer.

A assembler is a program that translate an assembly language program into a machine language program. The machine language program (object code) may be in "absolute" form or in "relocatable" form. In the latter case, "linking" is required to set the absolute address for execution.

A linker is a program that combines relocatable object programs (modules) and produces an absolute object program that is executable by a computer. A linker is sometimes called a "linker/locator" to reflect its separate functions of combining relocatable modules (linking) and setting the address for execution (locating).

A segment is a unit of code or data memory. A segment may be relocatable or absolute. A relocatable segment has a name, type, and other attributes that allow the linker to combine it with other paritial segments, if required, and to correctly locate the segment. An absolute segment has no name and cannot be combined with other segments.

A module contains one or more segments or partial segments. A module has a name assigned by the user. The module definitions determine the scope of local symbols. An object file contains one or more modules. A module may be thought of as a "file" in many instances.

A program consists of a single absolute module, merging all absolute and relocatable segments from all input modules. A program contains only the binary codes for instructions (with address and data constants) that are understood by a computer.

ASSEMBLER OPERATION

There are many assembler programs and other support programs available to facilitate the development of applications for the 8051 microcontroller. Intel's original MCS-51 family assembler, ASM51, is no longer available commercially. However, it set the standard to which the others are compared.

ASM51 is a powerful assembler with all the bells and whistles. It is available on Intel development systems and on the IBM PC family of microcomputers. Since these "host" computers contain a CPU chip other than the 8051, ASM51 is called a cross assembler. An 8051 source program may be written on the host computer (using any text editor) and may be assembled to an object file and listing file (using ASM51), but the program may not be executed. Since the host system's CPU chip is not an 8051, it does not understand the binary instruction in the object file. Execution on the host computer requires either hardware emulation or software simulation of the target CPU. A third possibility is to download the object program to an 8051-based target system for execution.

ASM51 is invoked from the system prompt by

ASM51 source file [assembler controls]

The source file is assembled and any assembler controls specified take effect. The assembler receives a source file as input (e.g., PROGRAM.SRC) and generates an object file (PROGRAM.OBJ) and listing file (PROGRAM. LST) as output. This is illustrated in Figure 1.

Since most assemblers scan the source program twice in performing the translation to machine language, they are described as two-pass assemblers. The assembler uses a location counter as the address of instructions and the values for labels. The action of each pass is described below.

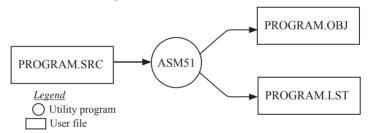


Figure 1 Assembling a source program

Pass one

During the first pass, the source file is scanned line-by-line and a symbol table is built. The location counter defaults to 0 or is set by the ORG (set origin) directive. As the file is scanned, the location counter is incremented by the length of each instruction. Define data directives (DBs or DWs) increment the location counter by the number of bytes defined. Reserve memory directives (DSs) increment the location counter by the number of bytes reserved.

Each time a label is found at the beginning of a line, it is placed in the symbol table along with the current value of the location counter. Symbols that are defined using equate directives (EQUs) are placed in the symbol table along with the "equated" value. The symbol table is saved and then used during pass two.

Pass two

During pass two, the object and listing files are created. Mnemonics are converted to opcodes and placed in the output files. Operands are evaluated and placed after the instruction opcodes. Where symbols appear in the operand field, their values are retrieved from the symbol table (created during pass one) and used in calculating the correct data or addresses for the instructions.

Since two passes are performed, the source program may use "forward references", that is, use a symbol before it is defined. This would occur, for example, in branching ahead in a program.

The object file, if it is absolute, contains only the binary bytes (00H-0FH) of the machine language program. A relocatable object file will also contain a sysmbol table and other information required for linking and locating. The listing file contains ASCII text codes (02H-7EH) for both the source program and the hexadecimal bytes in the machine language program.

A good demonstration of the distinction between an object file and a listing file is to display each on the host computer's CRT display (using, for example, the TYPE command on MS-DOS systems). The listing file clearly displays, with each line of output containing an address, opcode, and perhaps data, followed by the program statement from the source file. The listing file displays properly because it contains only ASCII text codes. Displaying the object file is a problem, however. The output will appear as "garbage", since the object file contains binary codes of an 8051 machine language program, rather than ASCII text codes.

ASSEMBLY LANGUAGE PROGRAM FORMAT

Assembly language programs contain the following:

- · Machine instructions
- · Assembler directives
- · Assembler controls
- Comments

Machine instructions are the familiar mnemonics of executable instructions (e.g., ANL). Assembler directives are instructions to the assembler program that define program structure, symbols, data, constants, and so on (e.g., ORG). Assembler controls set assembler modes and direct assembly flow (e.g., \$TITLE). Comments enhance the readability of programs by explaining the purpose and operation of instruction sequences.

Those lines containing machine instructions or assembler directives must be written following specific rules understood by the assembler. Each line is divided into "fields" separated by space or tab characters. The general format for each line is as follows:

[label:] mnemonic [operand] [, operand] [...] [;commernt]

Only the mnemonic field is mandatory. Many assemblers require the label field, if present, to begin on the left in column 1, and subsequent fields to be separated by space or tab charecters. With ASM51, the label field needn't begin in column 1 and the mnemonic field needn't be on the same line as the label field. The operand field must, however, begin on the same line as the mnemonic field. The fields are described below.

Label Field

A label represents the address of the instruction (or data) that follows. When branching to this instruction, this label is usded in the operand field of the branch or jump instruction (e.g., SJMP SKIP).

Whereas the term "label" always represents an address, the term "symbol" is more general. Labels are one type of symbol and are identified by the requirement that they must terminate with a colon(:). Symbols are assigned values or attributes, using directives such as EQU, SEGMENT, BIT, DATA, etc. Symbols may be addresses, data constants, names of segments, or other constructs conceived by the programmer. Symbols do not terminate with a colon. In the example below, PAR is a symbol and START is a label (which is a type of symbol).

PAR EQU 500 ;"PAR" IS A SYMBOL WHICH ;REPRESENTS THE VALUE 500 START: MOV A,#0FFH ;"START" IS A LABEL WHICH ;REPRESENTS THE ADDRESS OF ;THE MOV INSTRUCTION

A symbol (or label) must begin with a letter, question mark, or underscore (_); must be followed by letters, digit, "?", or "_"; and can contain up to 31 characters. Symbols may use upper- or lowercase characters, but they are treated the same. Reserved words (mnemonics, operators, predefined symbols, and directives) may not be used.

Mnemonic Field

Intruction mnemonics or assembler directives go into mnemonic field, which follows the label field. Examples of instruction mnemonics are ADD, MOV, DIV, or INC. Examples of assembler directives are ORG, EOU, or DB.

Operand Field

The operand field follows the mnemonic field. This field contains the address or data used by the instruction. A label may be used to represent the address of the data, or a symbol may be used to represent a data constant. The possibilities for the operand field are largely dependent on the operation. Some operations have no operand (e.g., the RET instruction), while others allow for multiple operands separated by commas. Indeed, the possibilities for the operand field are numberous, and we shall elaborate on these at length. But first, the comment field.

Comment Field

Remarks to clarify the program go into comment field at the end of each line. Comments must begin with a semicolon (;). Each lines may be comment lines by beginning them with a semicolon. Subroutines and large sections of a program generally begin with a comment block—serveral lines of comments that explain the general properties of the section of software that follows.

Special Assembler Symbols

Special assembler symbols are used for the register-specific addressing modes. These include A, R0 through R7, DPTR, PC, C and AB. In addition, a dollar sign (\$) can be used to refer to the current value of the location counter. Some examples follow.

SETB C
INC DPTR
JNB TI,\$

The last instruction above makes effective use of ASM51's location counter to avoid using a label. It could also be written as

HERE: JNB TI, HERE

Indirect Address

For certain instructions, the operand field may specify a register that contains the address of the data. The commercial "at" sign (@) indicates address indirection and may only be used with R0, R1, the DPTR, or the PC, depending on the instruction. For example,

ADD A, @R0 MOVC A, @A+PC

The first instruction above retrieves a byte of data from internal RAM at the address specified in R0. The second instruction retrieves a byte of data from external code memory at the address formed by adding the contents of the accumulator to the program counter. Note that the value of the program counter, when the add takes place, is the address of the instruction following MOVC. For both instruction above, the value retrieved is placed into the accumulator.

Immediate Data

Instructions using immediate addressing provide data in the operand field that become part of the instruction. Immediate data are preceded with a pound sign (#). For example,

CONSTANT	EQU	100
	MOV	A,#0FEH
	ORL	40H. #CONSTANT

All immediate data operations (except MOV DPTR,#data) require eight bits of data. The immediate data are evaluated as a 16-bit constant, and then the low-byte is used. All bits in the high-byte must be the same (00H or FFH) or the error message "value will not fit in a byte" is generated. For example, the following instructions are syntactically correct:

```
MOV A, #0FF00H
MOV A, #00FFH
```

But the following two instructions generate error messages:

```
MOV A, #0FE00H
MOV A, #01FFH
```

If signed decimal notation is used, constants from -256 to +255 may also be used. For example, the following two instructions are equivalent (and syntactically correct):

```
MOV A, #-256
MOV A, #0FF00H
```

Both instructions above put 00H into accumulator A.

Data Address

Many instructions access memory locations using direct addressing and require an on-chip data memory address (00H to 7FH) or an SFR address (80H to 0FFH) in the operand field. Predefined symbols may be used for the SFR addresses. For example,

```
MOV A, 45H
MOV A, SBUF ;SAME AS MOV A, 99H
```

Bit Address

One of the most powerful features of the 8051 is the ability to access individual bits without the need for masking operations on bytes. Instructions accessing bit-addressable locations must provide a bit address in internal data memory (00h to 7FH) or a bit address in the SFRs (80H to 0FFH).

There are three ways to specify a bit address in an instruction: (a) explicitly by giving the address, (b) using the dot operator between the byte address and the bit position, and (c) using a predefined assembler symbol. Some examples follow.

```
SETB 0E7H ;EXPLICIT BIT ADDRESS
SETB ACC.7 ;DOT OPERATOR (SAME AS ABOVE)
JNB TI , $ ;"TI" IS A PRE-DEFINED SYMBOL
JNB 99H , $ ;(SAME AS ABOVE)
```

Code Address

A code address is used in the operand field for jump instructions, including relative jumps (SJMP and conditional jumps), absolute jumps and calls (ACALL, AJMP), and long jumps and calls (LJMP, LCALL).

The code address is usually given in the form of a label.

ASM51 will determine the correct code address and insert into the instruction the correct 8-bit signed offset, 11-bit page address, or 16-bit long address, as appropriate.

Generic Jumps and Calls

ASM51 allows programmers to use a generic JMP or CALL mnemonic. "JMP" can be used instead of SJMP, AJMP or LJMP; and "CALL" can be used instead of ACALL or LCALL. The assembler converts the generic mnemonic to a "real" instruction following a few simple rules. The generic mnemonic converts to the short form (for JMP only) if no forward references are used and the jump destination is within -128 locations, or to the absolute form if no forward references are used and the instruction following the JMP or CALL instruction is in the same 2K block as the destination instruction. If short or absolute forms cannot be used, the conversion is to the long form.

The conversion is not necessarily the best programming choice. For example, if branching ahead a few instructions, the generic JMP will always convert to LJMP even though an SJMP is probably better. Consider the following assembled instructions sequence using three generic jumps.

LOC	OBJ	LINE	SOURCE			
1234		1		ORG	1234H	
1234	04	2	START:	INC	A	
1235	80FD	3		JMP	START	;ASSEMBLES AS SJMP
12FC		4		ORG	START + 200	
12FC	4134	5		JMP	START	;ASSEMBLES AS AJMP
12FE	021301	6		JMP	FINISH	;ASSEMBLES AS LJMP
1301	04	7	FINISH:	INC	A	
		8		END		

The first jump (line 3) assembles as SJMP because the destination is before the jump (i.e., no forward reference) and the offset is less than -128. The ORG directive in line 4 creates a gap of 200 locations between the label START and the second jump, so the conversion on line 5 is to AJMP because the offset is too great for SJMP. Note also that the address following the second jump (12FEH) and the address of START (1234H) are within the same 2K page, which, for this instruction sequence, is bounded by 1000H and 17FFH. This criterion must be met for absolute addressing. The third jump assembles as LJMP because the destination (FINISH) is not yet defined when the jump is assembled (i.e., a forward reference is used). The reader can verify that the conversion is as stated by examining the object field for each jump instruction.

ASSEMBLE-TIME EXPRESSION EVALUATION

Values and constants in the operand field may be expressed three ways: (a) explicitly (e.g.,0EFH), (b) with a predefined symbol (e.g., ACC), or (c) with an expression (e.g.,2 + 3). The use of expressions provides a powerful technique for making assembly language programs more readable and more flexible. When an expression is used, the assembler calculates a value and inserts it into the instruction.

All expression calculations are performed using 16-bit arithmetic; however, either 8 or 16 bits are inserted into the instruction as needed. For example, the following two instructions are the same:

MOV	DPTR,	#04FFH + 3	
MOV	DPTR,	#0502H	;ENTIRE 16-BIT RESULT USED

If the same expression is used in a "MOV A,#data" instruction, however, the error message "value will not fit in a byte" is generated by ASM51. An overview of the rules for evaluating expressions follows.

Number Bases

The base for numeric constants is indicated in the usual way for Intel microprocessors. Constants must be followed with "B" for binary, "O" or "Q" for octal, "D" or nothing for decimal, or "H" for hexadecimal. For example, the following instructions are the same:

MOV A,#15H MOV A,#1111B MOV A,#0FH MOV A,#17Q MOV A,#15D

Note that a digit must be the first character for hexadecimal constants in order to differentiate them from labels (i.e., "0A5H" not "A5H").

Charater Strings

Strings using one or two characters may be used as operands in expressions. The ASCII codes are converted to the binary equivalent by the assembler. Character constants are enclosed in single quotes ('). Some examples follow.

CJNE A, #'Q', AGAIN
SUBB A, #'0' ;CONVERT ASCII DIGIT TO BINARY DIGIT
MOV DPTR, #'AB'
MOV DPTR, #4142H ;SAME AS ABOVE

Arithmetic Operators

The arithmetic operators are

+ addition
- subtraction
* multiplication
/ division

MOD modulo (remainder after division)

For example, the following two instructions are same:

MOV A, 10 +10H MOV A, #1AH

The following two instructions are also the same:

MOV A, #25 MOD 7

MOV A, #4

Since the MOD operator could be confused with a symbol, it must be seperated from its operands by at least one space or tab character, or the operands must be enclosed in parentheses. The same applies for the other operators composed of letters.

Logical Operators

The logical operators are

OR logical OR
AND logical AND
XOR logical Exclusive OR
NOT logical NOT (complement)

The operation is applied on the corresponding bits in each operand. The operator must be separated from the operands by space or tab characters. For example, the following two instructions are the same:

```
MOV A, # '9' AND 0FH
MOV A. #9
```

The NOT operator only takes one operand. The following three MOV instructions are the same:

THREE EQU 3 MINUS_THREE EQU -3 MOV A,

MOV A, # (NOT THREE) + 1 MOV A, #MINUS_THREE MOV A, #11111101B

Special Operators

The sepcial operators are

SHR shift right
SHL shift left
HIGH high-byte
LOW low-byte
() evaluate first

For example, the following two instructions are the same:

MOV A, #8 SHL 1 MOV A, #10H

The following two instructions are also the same:

MOV A, #HIGH 1234H MOV A, #12H

Relational Operators

When a relational operator is used between two operands, the result is alwalys false (0000H) or true (FFFFH). The operators are

EQ = equals
NE <> not equals
LT < less than
LE <= less than or equal to

GT > greater than

GE >= greater than or equal to

Note that for each operator, two forms are acceptable (e.g., "EQ" or "="). In the following examples, all relational tests are "true":

MOV A, #5 = 5 MOV A,#5 NE 4 MOV A,# 'X' LT 'Z' MOV A,# 'X' >= 'X' MOV A,#\$ > 0 MOV A,#100 GE 50 So, the assembled instructions are equal to

```
MOV A. #0FFH
```

Even though expressions evaluate to 16-bit results (i.e., 0FFFFH), in the examples above only the low-order eight bits are used, since the instruction is a move byte operation. The result is not considered too big in this case, because as signed numbers the 16-bit value FFFH and the 8-bit value FFH are the same (-1).

Expression Examples

The following are examples of expressions and the values that result:

Expression	Result
'B' - 'A'	0001H
8/3	0002H
155 MOD 2	0001H
4 * 4	0010H
8 AND 7	H0000
NOT 1	FFFEH
'A' SHL 8	4100H
LOW 65535	00FFH
(8+1)*2	0012H
5 EQ 4	H0000
'A' LT 'B'	FFFFH
3 <= 3	FFFFHss

A practical example that illustrates a common operation for timer initialization follows: Put -500 into Timer 1 registers TH1 and TL1. In using the HIGH and LOW operators, a good approach is

```
VALUE EQU -500

MOV TH1, #HIGH VALUE

MOV TL1, #LOW VALUE
```

The assembler converts -500 to the corresponding 16-bit value (FE0CH); then the HIGH and LOW operators extract the high (FEH) and low (0CH) bytes. as appropriate for each MOV instruction.

Operator Precedence

The precedence of expression operators from highest to lowest is

```
()
HIGH LOW
* / MOD SHL SHR
+-
EQ NE LT LE GT GE = <> < <= >>=
NOT
AND
OR XOR
```

When operators of the same precedence are used, they are evaluated left to right. Examples:

Expression	Value
HIGH ('A' SHL 8)	0041H
HIGH 'A' SHL 8	0000H
NOT 'A' - 1	FFBFH
'A' OR 'A' SHL 8	4141H

ASSEMBLER DIRECTIVES

Assembler directives are instructions to the assembler program. They are not assembly language instructions executable by the target microprocessor. However, they are placed in the mnemonic field of the program. With the exception of DB and DW, they have no direct effect on the contents of memory.

ASM51 provides several catagories of directives:

- Assembler state control (ORG, END, USING)
- Symbol definition (SEGMENT, EQU, SET, DATA, IDATA, XDATA, BIT, CODE)
- Storage initialization/reservation (DS, DBIT, DB, DW)
- Program linkage (PUBLIC, EXTRN, NAME)
- Segment selection (RSEG, CSEG, DSEG, ISEG, ESEG, XSEG)

Each assembler directive is presented below, ordered by catagory.

Assembler State Control

```
ORG (Set Origin) The format for the ORG (set origin) directive is ORG expression
```

The ORG directive alters the location counter to set a new program origin for statements that follow. A label is not permitted. Two examples follow.

```
ORG 100H ;SET LOCATION COUNTER TO 100H ORG ($ + 1000H) AND 0F00H ;SET TO NEXT 4K BOUNDARY
```

The ORG directive can be used in any segment type. If the current segment is absolute, the value will be an absolute address in the current segment. If a relocatable segment is active, the value of the ORG expression is treated as an offset from the base address of the current instance of the segment.

```
End The format of the END directive is END
```

END should be the last statement in the source file. No label is permitted and nothing beyond the END statement is processed by the assembler.

```
Using The format of the END directive is USING expression
```

This directive informs ASM51 of the currently active register bank. Subsequent uses of the predefined symbolic register addresses AR0 to AR7 will convert to the appropriate direct address for the active register bank. Consider the following sequence:

```
USING 3
PUSH AR7
USING 1
PUSH AR7
```

The first push above assembles to PUSH 1FH (R7 in bank 3), whereas the second push assembles to PUSH 0FH (R7 in bank 1).

Note that USING does not actually switch register banks; it only informs ASM51 of the active bank. Executing 8051 instructions is the only way to switch register banks. This is illustrated by modifying the example above as follows:

MOV PSW, #00011000B ;SELECT REGISTER BANK 3 USING 3 PUSH AR7 ;ASSEMBLE TO PUSH 1FH ;SELECT REGISTER BANK 1 MOV PSW. #00001000B USING 1

PUSH AR7 :ASSEMBLE TO PUSH 0FH

Symbol Definition

The symbol definition directives create symbols that represent segment, registers, numbers, and addresses. None of these directives may be preceded by a label. Symbols defined by these directives may not have been previously defined and may not be redefined by any means. The SET directive is the only exception. Symbol definiton directives are described below.

The format for the SEGMENT directive is shown below. Segment

symbol **SEGMENT** segment type

The symbol is the name of a relocatable segment. In the use of segments, ASM51 is more complex than conventional assemblers, which generally support only "code" and "data" segment types. However, ASM51 defines additional segment types to accommodate the diverse memory spaces in the 8051. The following are the defined 8051 segment types (memory spaces):

- CODE (the code segment)
- XDATA (the external data space)
- DATA (the internal data space accessible by direct addressing, 00H–07H)
- IDATA (the entire internal data space accessible by indirect addressing, 00H–07H)
- BIT (the bit space; overlapping byte locations 20H–2FH of the internal data space)

For example, the statement

CODE EPROM SEGMENT

declares the symbol EPROM to be a SEGMENT of type CODE. Note that this statement simply declares what EPROM is. To actually begin using this segment, the RSEG directive is used (see below).

The format for the EOU directive is **EOU** (Equate)

Symbol **EOU** expression

The EQU directive assigns a numeric value to a specified symbol name. The symbol must be a valid symbol name, and the expression must conform to the rules described earlier.

The following are examples of the EQU directive:

N2.7 **EOU** 27 ;SET N27 TO THE VALUE 27 **HERE EOU** \$;SET "HERE" TO THE VALUE OF THE LOCATION COUNTER

CR EOU 0DH ;SET CR (CARRIAGE RETURN) TO 0DH

MESSAGE: DB 'This is a message'

LENGTH **EOU** \$ - MESSAGE ;"LENGTH" EQUALS LENGTH OF "MESSAGE"

Other Symbol Definition Directives The SET directive is similar to the EQU directive except the symbol may be redefined later, using another SET directive.

The DATA, IDATA, XDATA, BIT, and CODE directives assign addresses of the corresponding segment type to a symbol. These directives are not essential. A similar effect can be achieved using the EQU directive; if used, however, they evoke powerful type-checking by ASM51. Consider the following two directives and four instructions:

FLAG1	EQU	05H
FLAG2	BIT	05H
	SETB	FLAG1
	SETB	FLAG2
	MOV	FLAG1, #0
	MOV	FLAG2, #0

The use of FLAG2 in the last instruction in this sequence will generate a "data segment address expected" error message from ASM51. Since FLAG2 is defined as a bit address (using the BIT directive), it can be used in a set bit instruction, but it cannot be used in a move byte instruction. Hence, the error. Even though FLAG1 represents the same value (05H), it was defined using EQU and does not have an associated address space. This is not an advantage of EQU, but rather, a disadvantage. By properly defining address symbols for use in a specific memory space (using the directives BIT, DATA, XDATA, ect.), the programmer takes advantage of ASM51's powerful type-checking and avoids bugs from the misuse of symbols.

Storage Initialization/Reservation

The storage initialization and reservation directives initialize and reserve space in either word, byte, or bit units. The space reserved starts at the location indicated by the current value of the location counter in the currently active segment. These directives may be preceded by a label. The storage initialization/reservation directives are described below.

```
DS (Define Storage) The format for the DS (define storage) directive is [label:] DS expression
```

The DS directive reserves space in byte units. It can be used in any segment type except BIT. The expression must be a valid assemble-time expression with no forward references and no relocatable or external references. When a DS statement is encountered in a program, the location counter of the current segment is incremented by the value of the expression. The sum of the location counter and the specified expression should not exceed the limitations of the current address space.

The following statement create a 40-byte buffer in the internal data segment:

```
DSEG AT 30H ;PUT IN DATA SEGMENT (ABSOLUTE, INTERNAL)
LENGTH EQU 40
BUFFER: DS LENGRH ;40 BYTES RESERVED
```

The label BUFFER represents the address of the first location of reserved memory. For this example, the buffer begins at address 30H because "AT 30H" is specified with DSEG. The buffer could be cleared using the following instruction sequence:

```
MOV R7, #LENGTH
MOV R0, #BUFFER
LOOP: MOV @R0, #0
DJNZ R7, LOOP
(continue)
```

To create a 1000-byte buffer in external RAM starting at 4000H, the following directives could be used:

XSTART EQU 4000H XLENGTH EQU 1000

XSEG AT XSTART

XBUFFER: DS XLENGTH

This buffer could be cleared with the following instruction sequence:

 $\begin{array}{ccc} & \text{MOV} & \text{DPTR}, \# X \text{BUFFER} \\ \text{LOOP:} & \text{CLR} & A \\ & \text{MOVX} & @ \text{DPTR}, A \end{array}$

INC DPTR MOV A, DPL

CJNE A, #LOW (XBUFFER + XLENGTH + 1), LOOP

MOV A, DPH

CJNE A, #HIGH (XBUFFER + XLENGTH + 1), LOOP

(continue)

This is an excellent example of a powerful use of ASM51's operators and assemble-time expressions. Since an instruction does not exist to compare the data pointer with an immediate value, the operation must be fabricated from available instructions. Two compares are required, one each for the high- and low-bytes of the DPTR. Furthermore, the compare-and-jump-if-not-equal instruction works only with the accumulator or a register, so the data pointer bytes must be moved into the accumulator before the CJNE instruction. The loop terminates only when the data pointer has reached XBUFFER + LENGTH + 1. (The "+1" is needed because the data pointer is incremented after the last MOVX instruction.)

DBIT The format for the DBIT (define bit) directive is,

[label:] DBIT expression

The DBIT directive reserves space in bit units. It can be used only in a BIT segment. The expression must be a valid assemble-time expression with no forward references. When the DBIT statement is encountered in a program, the location counter of the current (BIT) segment is incremented by the value of the expression. Note that in a BIT segment, the basic unit of the location counter is bits rather than bytes. The following directives creat three flags in a absolute bit segment:

BSEG ;BIT SEGMENT (ABSOLUTE)
KEFLAG: DBIT 1 ;KEYBOARD STATUS
PRFLAG: DBIT 1 ;PRINTER STATUS
DKFLAG: DBIT 1 ;DISK STATUS

Since an address is not specified with BSEG in the example above, the address of the flags defined by DBIT could be determined (if one wishes to to so) by examining the symbol table in the .LST or .M51 files. If the definitions above were the first use of BSEG, then KBFLAG would be at bit address 00H (bit 0 of byte address 20H). If other bits were defined previously using BSEG, then the definitions above would follow the last bit defined.

DB (**Define Byte**) The format for the DB (define byte) directive is, [label:] DB expression [, expression] [...]

The DB directive initializes code memory with byte values. Since it is used to actually place data constants in code memory, a CODE segment must be active. The expression list is a series of one or more byte values (each of which may be an expression) separated by commas.

The DB directive permits character strings (enclosed in single quotes) longer than two characters as long as they are not part of an expression. Each character in the string is converted to the corresponding ASCII code. If a label is used, it is assigned the address of th first byte. For example, the following statements

	CSEG	AT	0100H	
SQUARES:	DB	0, 1, 4, 9	, 16, 25	;SQUARES OF NUMBERS 0-5
MESSAGE:	DB	'Login:',	0	;NULL-TERMINATED CHARACTER STRING

When assembled, result in the following hexadecimal memory assignments for external code memory:

Address	Contents
0100	00
0101	01
0102	04
0103	09
0104	10
0105	19
0106	4C
0107	6F
0108	67
0109	69
010A	6E
010B	3A
010C	00

DW (**Define Word**) The format for the DW (define word) directive is [label:] DW expression [, expression] [...]

The DW directive is the same as the DB directive except two memory locations (16 bits) are assigned for each data item. For example, the statements

CSEG AT 200H DW \$, 'A', 1234H, 2, 'BC'

result in the following hexadecimal memory assignments:

Address	Contents
0200	02
0201	00
0202	00
0203	41
0204	12
0205	34
0206	00
0207	02
0208	42
0209	43

Program Linkage

Program linkage directives allow the separately assembled modules (files) to communicate by permitting intermodule references and the naming of modules. In the following discussion, a "module" can be considered a "file." (In fact, a module may encompass more than one file.)

Public The format for the PUBLIC (public symbol) directive is

PUBLIC symbol [, symbol] [...]

The PUBLIC directive allows the list of specified symbols to known and used outside the currently assembled module. A symbol declared PUBLIC must be defined in the current module. Declaring it PUBLIC allows it to be referenced in another module. For example.

PUBLIC INCHAR, OUTCHR, INLINE, OUTSTR

Extrn The format for the EXTRN (external symbol) directive is

EXTRN segment type (symbol [, symbol] [...], ...)

The EXTRN directive lists symbols to be referenced in the current module that are defined in other modules. The list of external symbols must have a segment type associated with each symbol in the list. (The segment types are CODE, XDATA, DATA, IDATA, BIT, and NUMBER. NUMBER is a type-less symbol defined by EQU.) The segment type indicates the way a symbol may be used. The information is important at link-time to ensure symbols are used properly in different modules.

The PUBLIC and EXTRN directives work together. Consider the two files, MAIN.SRC and MESSAGES. SRC. The subroutines HELLO and GOOD_BYE are defined in the module MESSAGES but are made available to other modules using the PUBLIC directive. The subroutines are called in the module MAIN even though they are not defined there. The EXTRN directive declares that these symbols are defined in another module.

MAIN.SRC:

EXTRN CODE (HELLO, GOOD_BYE)

. . .

CALL HELLO

. . .

CALL GOOD BYE

END

MESSAGES.SRC:

PUBLIC HELLO, GOOD BYE

HELLO: (begin subroutine)

RET

GOOD BYE: (begin subroutine)

RET

END

Neither MAIN.SRC nor MESSAGES.SRC is a complete program; they must be assembled separately and linked together to form an executable program. During linking, the external references are resolved with correct addresses inserted as the destination for the CALL instructions.

Name The format for the NAME directive is

NAME module name

All the usual rules for symbol names apply to module names. If a name is not provided, the module takes on the file name (without a drive or subdirectory specifier and without an extension). In the absence of any use of the NAME directive, a program will contain one module for each file. The concept of "modules," therefore, is somewhat cumbersome, at least for relatively small programming problems. Even programs of moderate size (encompassing, for example, several files complete with relocatable segments) needn't use the NAME directive and needn't pay any special attention to the concept of "modules." For this reason, it was mentioned in the definition that a module may be considered a "file," to simplify learning ASM51. However, for very large programs (several thousand lines of code, or more), it makes sense to partition the problem into modules, where, for example, each module may encompass several files containing routines having a common purpose.

Segment Selection Directives

When the assembler encounters a segment selection directive, it diverts the following code or data into the selected segment until another segment is selected by a segment selection directive. The directive may select may select a previously defined relocatable segment or optionally create and select absolute segments.

```
RSEG (Relocatable Segment) The format for the RSEG (relocatable segment) directive is RSEG segment name
```

Where "segment_name" is the name of a relocatable segment previously defined with the SEGMENT directive. RSEG is a "segment selection" directive that diverts subsequent code or data into the named segment until another segment selection directive is encountered.

Selecting Absolute Segments RSEG selects a relocatable segment. An "absolute" segment, on the other hand, is selected using one of the directives:

```
CSEG (AT address)
DSEG (AT address)
ISEG (AT address)
BSEG (AT address)
XSEG (AT address)
```

These directives select an absolute segment within the code, internal data, indirect internal data, bit, or external data address spaces, respectively. If an absolute address is provided (by indicating "AT address"), the assembler terminates the last absolute address segment, if any, of the specified segment type and creates a new absolute segment starting at that address. If an absolute address is not specified, the last absolute segment of the specified type is continuted. If no absolute segment of this type was previously selected and the absolute address is omitted, a new segment is created starting at location 0. Forward references are not allowed and start addresses must be absolute.

Each segment has its own location counter, which is always set to 0 initially. The default segment is an absolute code segment; therefore, the initial state of the assembler is location 0000H in the absolute code segment. When another segment is chosen for the first time, the location counter of the former segment retains the last active value. When that former segment is reselected, the location counter picks up at the last active value. The ORG directive may be used to change the location counter within the currently selected segment.

ASSEMBLER CONTROLS


Assembler controls establish the format of the listing and object files by regulating the actions of ASM51. For the most part, assembler controls affect the look of the listing file, without having any affect on the program itself. They can be entered on the invocation line when a program is assembled, or they can be placed in the source file. Assembler controls appearing in the source file must be preceded with a dollor sign and must begin in column 1.

There are two categories of assembler controls: primary and general. Primary controls can be placed in the invocation line or at the beginning of the source program. Only other primary controls may precede a primary control. General controls may be placed anywhere in the source program.

LINKER OPERATION

In developing large application programs, it is common to divide tasks into subprograms or modules containing sections of code (usually subroutines) that can be written separately from the overall program. The term "modular programming" refers to this programming strategy. Generally, modules are relocatable, meaning they are not intended for a specific address in the code or data space. A linking and locating program is needed to combine the modules into one absolute object module that can be executed.

Intel's RL51 is a typical linker/locator. It processes a series of relocatable object modules as input and creates an executable machine language program (PROGRAM, perhaps) and a listing file containing a memory map and symbol table (PROGRAM.M51). This is illustrated in following figure.

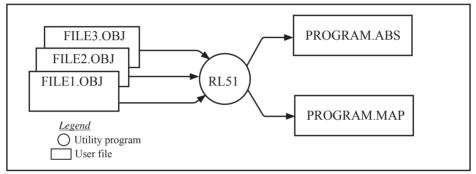

Linker operation

As relocatable modules are combined, all values for external symbols are resolved with values inserted into the output file. The linker is invoked from the system prompt by

The input_list is a list of relocatable object modules (files) separated by commas. The output_list is the name of the output absolute object module. If none is supplied, it defaults to the name of the first input file without any suffix. The location controls set start addresses for the named segments.

For example, suppose three modules or files (MAIN.OBJ, MESSAGES.OBJ, and SUBROUTINES.OBJ) are to be combined into an executable program (EXAMPLE), and that these modules each contain two relocatable segments, one called EPROM of type CODE, and the other called ONCHIP of type DATA. Suppose further that the code segment is to be executable at address 4000H and the data segment is to reside starting at address 30H (in internal RAM). The following linker invocation could be used:

RS51 MAIN.OBJ, MESSAGES.OBJ, SUBROUTINES.OBJ TO EXAMPLE & CODE (EPROM (4000H) DATA (ONCHIP (30H))

Note that the ampersand character "&" is used as the line continuaton character.

If the program begins at the label START, and this is the first instruction in the MAIN module, then execution begins at address 4000H. If the MAIN module was not linked first, or if the label START is not at the beginning of MAIN, then the program's entry point can be determined by examining the symbol table in the listing file EXAMPLE.M51 created by RL51. By default, EXAMPLE.M51 will contain only the link map. If a symbol table is desired, then each source program must have used the SDEBUG control. The following table shows the assembler controls supported by ASM51.

	PRIMARY/ GENERAL			V
	TENERAL I	DEFAIRT	A DDDET	MEANING
DATE (date)		DEFAULT	ABBREV.	MEANING Place string in header (9 char. max.)
DEDITO	P P	DATE()	DA DB	
DEBUG		NODEBUG		Outputs debug symbol information to object file
EJECT	G P	not applicable	EJ	Continue listing on next page
ERRORPRINT (file)	Р	NOERRORPRINT	EP	Designates a file to receive error messages in addition to the listing file (defauts to console)
NOERRORPRINT	P	NOERRORPRINT	NOEP	Designates that error messages will be printed in listing file only
GEN	G	GENONLY	GO	List only the fully expanded source as if all lines generated by a macro call were already in the source file
GENONLY	G	GENONLY	NOGE	List only the original source text in the listing file
INCLUED(file)	G	not applicable	IC	Designates a file to be included as part of the program
LIST	G	LIST	LI	Print subsequent lines of source code in listing file
NOLIST	G	LIST	NOLI	Do not print subsequent lines of source code in lisiting file
MACRO	P	MACRO(50)	MR	Evaluate and expand all macro calls. Allocate percentage of
(men_precent)		, ,		free memory for macro processing
NOMACRO	P	MACRO(50)	NOMR	Do not evalutate macro calls
MOD51	Р	MOD51	MO	Recognize the 8051-specific predefined special function registers
NOMOD51	P	MOD51	NOMO	Do not recognize the 8051-specific predefined special function registers
OBJECT(file)	P	OBJECT(source.OBJ)	OJ	Designates file to receive object code
NOOBJECT	P	OBJECT(source.OBJ)	NOOJ	Designates that no object file will be created
PAGING	P	PAGING	PI	Designates that listing file be broken into pages and each will have a header
NOPAGING	P	PAGING	NOPI	Designates that listing file will contain no page breaks
PAGELENGTH (N)	P	PAGELENGT(60)	PL	Sets maximun number of lines in each page of listing file (range=10 to 65536)
PAGE WIDTH (N)	P	PAGEWIDTH(120)	PW	Set maximum number of characters in each line of listing file (range = 72 to 132)
PRINT(file)	Р	PRINT(source.LST)	PR	Designates file to receive source listing
NOPRINT	P	PRINT(source.LST)	NOPR	Designates that no listing file will be created
SAVE	G	not applicable	SA	Stores current control settings from SAVE stack
RESTORE	G	not applicable	RS	Restores control settings from SAVE stack
REGISTERBANK	P	REGISTERBANK(0)	RB	Indicates one or more banks used in program module
(rb,)				
NOREGISTER- BANK	P	REGISTERBANK(0)	NORB	Indicates that no register banks are used
SYMBOLS	P	SYMBOLS	SB	Creates a formatted table of all symbols used in program
NOSYMBOLS	P	SYMBOLS	NOSB	Designates that no symbol table is created
TITLE(string)	G	TITLE()	TT	Places a string in all subsequent page headers (max.60 characters)
WORKFILES (path)	Р	same as source	WF	Designates alternate path for temporay workfiles
XREF	P	NOXREF	XR	Creates a cross reference listing of all symbols used in program
NOXREF	P	NOXREF	NOXR	Designates that no cross reference list is created

MACROS

The macro processing facility (MPL) of ASM51 is a "string replacement" facility. Macros allow frequently used sections of code be defined once using a simple mnemonic and used anywhere in the program by inserting the mnemonic. Programming using macros is a powerful extension of the techniques described thus far. Macros can be defined anywhere in a source program and subsequently used like any other instruction. The syntax for macro definition is

```
%*DEFINE (call pattern) (macro body)
```

Once defined, the call pattern is like a mnemonic; it may be used like any assembly language instruction by placing it in the mnemonic field of a program. Macros are made distinct from "real" instructions by preceding them with a percent sign, "%". When the source program is assembled, everything within the macro-body, on a character-by-character basis, is substituted for the call-pattern. The mystique of macros is largely unfounded. They provide a simple means for replacing cumbersome instruction patterns with primitive, easy-to-remember mnemonics. The substitution, we reiterate, is on a character-by-character basis—nothing more, nothing less.

For example, if the following macro definition appears at the beginning of a source file,

```
%*DEFINE (PUSH_DPTR)
(PUSH DPH
PUSH DPL
)
```

then the statement

```
%PUSH DPTR
```

will appear in the .LST file as

```
PUSH DPH
PUSH DPL
```

The example above is a typical macro. Since the 8051 stack instructions operate only on direct addresses, pushing the data pointer requires two PUSH instructions. A similar macro can be created to POP the data pointer. There are several distinct advantages in using macros:

- A source program using macros is more readable, since the macro mnemonic is generally more indicative of the intended operation than the equivalent assembler instructions.
- The source program is shorter and requires less typing.
- · Using macros reduces bugs
- Using macros frees the programmer from dealing with low-level details.

The last two points above are related. Once a macro is written and debugged, it is used freely without the worry of bugs. In the PUSH_DPTR example above, if PUSH and POP instructions are used rather than push and pop macros, the programmer may inadvertently reverse the order of the pushes or pops. (Was it the high-byte or low-byte that was pushed first?) This would create a bug. Using macros, however, the details are worked out once—when the macro is written—and the macro is used freely thereafter, without the worry of bugs.

Since the replacement is on a character-by-character basis, the macro definition should be carefully constructed with carriage returns, tabs, ect., to ensure proper alignment of the macro statements with the rest of the assembly language program. Some trial and error is required.

There are advanced features of ASM51's macro-processing facility that allow for parameter passing, local labels, repeat operations, assembly flow control, and so on. These are discussed below.

Parameter Passing

A macro with parameters passed from the main program has the following modified format:

```
%*DEFINE (macro name (parameter list)) (macro body)
```

For example, if the following macro is defined,

```
%*DEFINE (CMPA# (VALUE))
(CJNE A, #%VALUE, $ + 3
```

then the macro call

```
%CMPA# (20H)
```

will expand to the following instruction in the .LST file:

```
CJNE A, \#20H, \$ + 3
```

Although the 8051 does not have a "compare accumulator" instruction, one is easily created using the CJNE instruction with "\$+3" (the next instruction) as the destination for the conditional jump. The CMPA# mnemonic may be easier to remember for many programmers. Besides, use of the macro unburdens the programmer from remembering notational details, such as "\$+3."

Let's develop another example. It would be nice if the 8051 had instructions such as

```
JUMP IF ACCUMULATOR GREATER THAN X
JUMP IF ACCUMULATOR GREATER THAN OR EQUAL TO X
JUMP IF ACCUMULATOR LESS THAN X
JUMP IF ACCUMULATOR LESS THAN OR EOUAL TO X
```

but it does not. These operations can be created using CJNE followed by JC or JNC, but the details are tricky. Suppose, for example, it is desired to jump to the label GREATER_THAN if the accumulator contains an ASCII code greater than "Z" (5AH). The following instruction sequence would work:

```
CJNE A, #5BH, $÷3
JNC GREATER THAN
```

The CJNE instruction subtracts 5BH (i.e., "Z" + 1) from the content of A and sets or clears the carry flag accordingly. CJNE leaves C=1 for accumulator values 00H up to and including 5AH. (Note: 5AH-5BH<0, therefore C=1; but 5BH-5BH=0, therefore C=0.) Jumping to GREATER_THAN on the condition "not carry" correctly jumps for accumulator values 5BH, 5CH, 5DH, and so on, up to FFH. Once details such as these are worked out, they can be simplified by inventing an appropriate mnemonic, defining a macro, and using the macro instead of the corresponding instruction sequence. Here's the definition for a "jump if greater than" macro:

```
%*DEFINE (JGT (VALUE, LABEL))
(CJNE A, #%VALUE+1, $+3 ;JGT
JNC %LABEL
)
```

To test if the accumulator contains an ASCII code greater than "Z," as just discussed, the macro would be called as

```
%JGT ('Z', GREATER THAN)
```

ASM51 would expand this into

```
CJNE A, #5BH, $+3 ;JGT JNC GREATER_THAN
```

The JGT macro is an excellent example of a relevant and powerful use of macros. By using macros, the programmer benefits by using a meaningful mnemonic and avoiding messy and potentially bug-ridden details.

Local Labels

%*DEFINE

Local labels may be used within a macro using the following format:

```
[LOCAL list of local labels] (macro body)
For example, the following macro definition
       %*DEFINE
                    (DEC DPTR) LOCAL SKIP
                       (DEC
                               DPL
                                               :DECREMENT DATA POINTER
                        MOV
                               A. DPL
                        CJNE
                               A. #0FFH. %SKIP
                        DEC
                               DPL
        %SKIP:
would be called as
       %DEC DPTR
and would be expanded by ASM51 into
               DEC
                       DPL
                                       ;DECREMENT DATA POINTER
               MOV
                       A. DPL
               CJNE
                       A, #0FFH, SKIP00
               DEC
                       DPH
       SKIP00:
```

(macro name [(parameter list)])

Note that a local label generally will not conflict with the same label used elsewhere in the source program, since ASM51 appends a numeric code to the local label when the macro is expanded. Furthermore, the next use of the same local label receives the next numeric code, and so on.

The macro above has a potential "side effect." The accumulator is used as a temporary holding place for DPL. If the macro is used within a section of code that uses A for another purpose, the value in A would be lost. This side effect probably represents a bug in the program. The macro definition could guard against this by saving A on the stack. Here's an alternate definition for the DEC DPTR macro:

```
%*DEFINE
              (DEC DPTR)
                            LOCAL SKIP
               (PUSHACC
               DEC
                     DPL
                                    ;DECREMENT DATA POINTER
              MOV
                     A. DPL
              CJNE
                     A, #0FFH, %SKIP
              DEC
                     DPH
%SKIP:
              POP
                     ACC
```

(text)

Repeat Operations

%REPEAT

```
This is one of several built-in (predefined) macros. The format is
```

```
(expression)
For example, to fill a block of memory with 100 NOP instructions,
```

```
%REPEAT (100)
(NOP
```

Control Flow Operations

The conditional assembly of section of code is provided by ASM51's control flow macro definition. The format is

```
%IF (expression) THEN (balanced_text) [ELSE (balanced_text)] FI
```

For example,

```
INTRENAL EQU 1 ;1 = 8051 SERIAL I/O DRIVERS ;0 = 8251 SERIAL I/O DRIVERS
```

٠

%IF (INTERNAL) THEN

(INCHAR: , ;8051 DRIVERS

OUTCHR:

) ELSE

(INCHAR: , ;8251 DRIVERS

OUTCHR:

In this example, the symbol INTERNAL is given the value 1 to select I/O subroutines for the 8051's serial port, or the value 0 to select I/O subroutines for an external UART, in this case the 8251. The IF macro causes ASM51 to assemble one set of drivers and skip over the other. Elsewhere in the program, the INCHAR and OUTCHR subroutines are used without consideration for the particular hardware configuration. As long as the program as assembled with the correct value for INTERNAL, the correct subroutine is executed.

Appendix B: 8051 C Programming

ADVANTAGES AND DISADVANTAGES OF 8051 C

The advantages of programming the 8051 in C as compared to assembly are:

- Offers all the benefits of high-level, structured programming languages such as C, including the ease of writing subroutines
- Often relieves the programmer of the hardware details that the complier handles on behalf of the programmer
- Easier to write, especially for large and complex programs
- Produces more readable program source codes

Nevertheless, 8051 C, being very similar to the conventional C language, also suffers from the following disadvantages:

- Processes the disadvantages of high-level, structured programming languages.
- Generally generates larger machine codes
- Programmer has less control and less ability to directly interact with hardware

To compare between 8051 C and assembly language, consider the solutions to the Example—Write a program using Timer 0 to create a 1KHz square wave on P1.0.

A solution written below in 8051 C language:

```
sbit portbit = P1^0; /*Use variable portbit to refer to P1.0*/
main ( )


{
    TMOD = 1;
    while (1)
        {
             TH0 = 0xFE;
            TL0 = 0xC;
            TR0 = 1;
            while (TF0 !=1);
            TR0 = 0;
            TF0 = 0;
            portbit = !(P1.^0);
        }
}
```

A solution written below in assembly language:

```
ORG
                 8100H
                                  :16-bit timer mode
        MOV
                 TMOD, #01H
LOOP:
        MOV
                 THO, #0FEH
                                  ;-500 (high byte)
        MOV
                 TL0, #0CH
                                  ;-500 (low byte)
        SETB
                 TR0
                                  :start timer
WAIT:
        JNB
                 TF0, WAIT
                                  :wait for overflow
        CLR
                 TR0
                                  ;stop timer
        CLR
                                  ;clear timer overflow flag
                 TF0
        CPL
                 P1.0
                                  toggle port bit
        SJMP
                 LOOP
                                  ;repeat
        END
```

Notice that both the assembly and C language solutions for the above example require almost the same number of lines. However, the difference lies in the readability of these programs. The C version seems more human than assembly, and is hence more readable. This often helps facilitate the human programmer's efforts to write even very complex programs. The assembly language version is more closely related to the machine code, and though less readable, often results in more compact machine code. As with this example, the resultant machine code from the assembly version takes 83 bytes while that of the C version requires 149 bytes, an increase of 79.5%!

The human programmer's choice of either high-level C language or assembly language for talking to the 8051, whose language is machine language, presents an interesting picture, as shown in following figure.

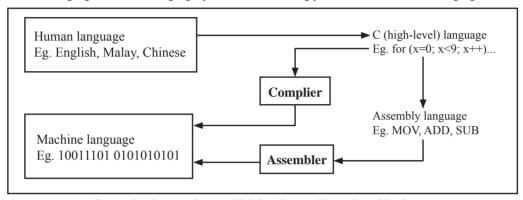

Conversion between human, high-level, assembly, and machine language

8051 C COMPILERS

We saw in the above figure that a complier is needed to convert programs written in 8051 C language into machine language, just as an assembler is needed in the case of programs written in assembly language. A complier basically acts just like an assembler, except that it is more complex since the difference between C and machine language is far greater than that between assembly and machine language. Hence the complier faces a greater task to bridge that difference.

Currently, there exist various 8051 C complier, which offer almost similar functions. All our examples and programs have been compiled and tested with Keil's μ Vision 2 IDE by Keil Software, an integrated 8051 program development environment that includes its C51 cross compiler for C. A cross compiler is a compiler that normally runs on a platform such as IBM compatible PCs but is meant to compile programs into codes to be run on other platforms such as the 8051.

DATA TYPES

8051 C is very much like the conventional C language, except that several extensions and adaptations have been made to make it suitable for the 8051 programming environment. The first concern for the 8051 C programmer is the data types. Recall that a data type is something we use to store data. Readers will be familiar with the basic C data types such as int, char, and float, which are used to create variables to store integers, characters, or floating-points. In 8051 C, all the basic C data types are supported, plus a few additional data types meant to be used specifically with the 8051.

The following table gives a list of the common data types used in 8051 C. The ones in bold are the specific 8051 extensions. The data type **bit** can be used to declare variables that reside in the 8051's bit-addressable locations (namely byte locations 20H to 2FH or bit locations 00H to 7FH). Obviously, these bit variables can only store bit values of either 0 or 1. As an example, the following C statement:

bit flag = 0:

declares a bit variable called flag and initializes it to 0.

Data types used in 8051 C language

Data Type	Bits	Bytes	Value Range
bit	1		0 to 1
signed char	8	1	-128 to +127
unsigned char	8	1	0 to 255
enum	16	2	-32768 to +32767
signed short	16	2	-32768 to +32767
unsigned short	16	2	0 to 65535
signed int	16	2	-32768 to +32767
unsigned int	16	2	0 to 65535
signed long	32	4	-2,147,483,648 to +2,147,483,647
unsigned long	32	4	0 to 4,294,967,295
float	32	4	±1.175494E-38 to ±3.402823E+38
sbit	1		0 to 1
sfr	8	1	0 to 255
sfr16	16	2	0 to 65535

The data type **sbit** is somewhat similar to the bit data type, except that it is normally used to declare 1-bit variables that reside in special function registes (SFRs). For example:

sbit
$$P = 0xD0$$
:

declares the **sbit** variable P and specifies that it refers to bit address D0H, which is really the LSB of the PSW SFR. Notice the difference here in the usage of the assignment ("=") operator. In the context of **sbit** declarations, it indicates what address the **sbit** variable resides in, while in **bit** declarations, it is used to specify the initial value of the **bit** variable.

Besides directly assigning a bit address to an **sbit** variable, we could also use a previously defined **sfr** variable as the base address and assign our **sbit** variable to refer to a certain bit within that **sfr**. For example:

sfr
$$PSW = 0xD0$$
;
sbit $P = PSW^0$:

This declares an **sfr** variable called PSW that refers to the byte address D0H and then uses it as the base address to refer to its LSB (bit 0). This is then assigned to an **sbit** variable, P. For this purpose, the carat symbol (^) is used to specify bit position 0 of the PSW.

A third alternative uses a constant byte address as the base address within which a certain bit is referred. As an illustration, the previous two statements can be replaced with the following:

sbit
$$P = 0 \times D0 \wedge 0$$
;

Meanwhile, the **sfr** data type is used to declare byte (8-bit) variables that are associated with SFRs. The statement:

sfr
$$IE = 0xA8$$
:

declares an **sfr** variable IE that resides at byte address A8H. Recall that this address is where the Interrupt Enable (IE) SFR is located; therefore, the sfr data type is just a means to enable us to assign names for SFRs so that it is easier to remember.

The **sfr16** data type is very similar to **sfr** but, while the **sfr** data type is used for 8-bit SFRs, **sfr16** is used for 16-bit SFRs. For example, the following statement:

sfr16 DPTR =
$$0x82$$
;

declares a 16-bit variable DPTR whose lower-byte address is at 82H. Checking through the 8051 architecture, we find that this is the address of the DPL SFR, so again, the **sfr16** data type makes it easier for us to refer to the SFRs by name rather than address. There's just one thing left to mention. When declaring **sbit**, **sfr**, or **sfr16** variables, remember to do so outside main, otherwise you will get an error.

In actual fact though, all the SFRs in the 8051, including the individual flag, status, and control bits in the bit-addressable SFRs have already been declared in an include file, called reg51.h, which comes packaged with most 8051 C compilers. By using reg51.h, we can refer for instance to the interrupt enable register as simply IE rather than having to specify the address A8H, and to the data pointer as DPTR rather than 82H. All this makes 8051 C programs more human-readable and manageable. The contents of reg51.h are listed below.

/*_____

REG51.H Header file for generic 8051 microcontroller.

						*/
/* BYTE	Register	*/	 	sbit	IE1	= 0x8B;
sfr	P0	= 0x80;		sbit	IT1	= 0x8A;
sfr	P1	= 0x90;		sbit	IE0	= 0x89;
sfr	P2	= 0xA0;		sbit	IT0	= 0x88;
sfr	P3	= 0xB0;		/* IE */		
sfr	PSW	= 0xD0;		sbit	EA	= 0xAF;
sfr	ACC	= 0xE0;		sbit	ES	= 0xAC;
sfr	В	= 0xF0;		sbit	ET1	= 0xAB;
sfr	SP	= 0x81;		sbit	EX1	= 0xAA;
sfr	DPL	= 0x82;		sbit	ET0	= 0xA9;
sfr	DPH	= 0x83;		sbit	EX0	= 0xA8;
sfr	PCON	= 0x87;		/* IP */		
sfr	TCON	= 0x88;		sbit	PS	= 0xBC;
sfr	TMOD	= 0x89;		sbit	PT1	= 0xBB;
sfr	TL0	= 0x8A;		sbit	PX1	= 0xBA;
sfr	TL1	= 0x8B;		sbit	PT0	= 0xB9;
sfr	TH0	= 0x8C;		sbit	PX0	= 0xB8;
sfr	TH1	= 0x8D;		/* P3 */		
sfr	ΙE	= 0xA8;		sbit	RD	= 0xB7;
sfr	IP	= 0xB8;		sbit	WR	= 0xB6;
sfr	SCON	= 0x98;		sbit	T1	= 0xB5;
sfr	SBUF	= 0x99;		sbit	T0	= 0xB4;
	egister */			sbit	INT1	= 0xB3;
/* PSW *				sbit	INT0	= 0xB2;
sbit	CY	= 0xD7;		sbit	TXD	= 0xB1;
sbit	AC	= 0xD6;		sbit	RXD	= 0xB0;
sbit	F0	= 0xD5;		/* SCON		
sbit	RS1	= 0xD4;		sbit	SM0	= 0x9F;
sbit	RS0	= 0xD3;		sbit	SM1	= 0x9E;
sbit	OV	= 0xD2;		sbit	SM2	= 0x9D;
sbit	P	= 0xD0;		sbit	REN	= 0x9C;
/* TCON				sbit	TB8	= 0x9B;
sbit	TF1	= 0x8F;		sbit	RB8	= 0x9A;
sbit	TR1	= 0x8E;		sbit	TI	= 0x99;
sbit	TF0	= 0x8D;		sbit	RI	= 0x98;
sbit	TR0	= 0x8C;				

MEMORY TYPES AND MODELS

The 8051 has various types of memory space, including internal and external code and data memory. When declaring variables, it is hence reasonable to wonder in which type of memory those variables would reside. For this purpose, several memory type specifiers are available for use, as shown in following table.

Memory types used in 8051 C language		
Memory Type	Description (Size)	
code	Code memory (64 Kbytes)	
data	Directly addressable internal data memory (128 bytes)	
idata	Indirectly addressable internal data memory (256 bytes)	
bdata	Bit-addressable internal data memory (16 bytes)	
xdata	External data memory (64 Kbytes)	
pdata	Paged external data memory (256 bytes)	

The first memory type specifier given in above table is **code**. This is used to specify that a variable is to reside in code memory, which has a range of up to 64 Kbytes. For example:

```
char code errormsg[] = "An error occurred";
```

declares a char array called errormsg that resides in code memory.

If you want to put a variable into data memory, then use either of the remaining five data memory specifiers in above table. Though the choice rests on you, bear in mind that each type of data memory affect the speed of access and the size of available data memory. For instance, consider the following declarations:

```
signed int data num1;
bit bdata numbit;
unsigned int xdata num2;
```

The first statement creates a signed int variable num1 that resides in inernal **data** memory (00H to 7FH). The next line declares a bit variable numbit that is to reside in the bit-addressable memory locations (byte addresses 20H to 2FH), also known as **bdata**. Finally, the last line declares an unsigned int variable called num2 that resides in external data memory, **xdata**. Having a variable located in the directly addressable internal data memory speeds up access considerably; hence, for programs that are time-critical, the variables should be of type **data**. For other variants such as 8052 with internal data memory up to 256 bytes, the **idata** specifier may be used. Note however that this is slower than data since it must use indirect addressing. Meanwhile, if you would rather have your variables reside in external memory, you have the choice of declaring them as **pdata** or **xdata**. A variable declared to be in **pdata** resides in the first 256 bytes (a page) of external memory, while if more storage is required, **xdata** should be used, which allows for accessing up to 64 Kbytes of external data memory.

What if when declaring a variable you forget to explicitly specify what type of memory it should reside in, or you wish that all variables are assigned a default memory type without having to specify them one by one? In this case, we make use of **memory models**. The following table lists the various memory models that you can use.

Memory models used in 8051 C language		
Memory Model	Description	
Small	Variables default to the internal data memory (data)	
Compact	Variables default to the first 256 bytes of external data memory (pdata)	
Large	Variables default to external data memory (xdata)	

A program is explicitly selected to be in a certain memory model by using the C directive, #pragma. Otherwise, the default memory model is **small**. It is recommended that programs use the small memory model as it allows for the fastest possible access by defaulting all variables to reside in internal data memory.

The **compact** memory model causes all variables to default to the first page of external data memory while the **large** memory model causes all variables to default to the full external data memory range of up to 64 Kbytes.

ARRAYS

Often, a group of variables used to store data of the same type need to be grouped together for better readability. For example, the ASCII table for decimal digits would be as shown below.

ASCII table for decimal digits		
Decimal Digit	ASCII Code In Hex	
0	30H	
1	31H	
2	32H	
3	33H	
4	34H	
5	35H	
6	36H	
7	37H	
8	38H	
9	39Н	

To store such a table in an 8051 C program, an array could be used. An array is a group of variables of the same data type, all of which could be accessed by using the name of the arrary along with an appropriate index.

The array to store the decimal ASCII table is:

```
int table [10] = \{0x30, 0x31, 0x32, 0x33, 0x34, 0x35, 0x36, 0x37, 0x38, 0x39\};
```

Notice that all the elements of an array are separated by commas. To access an individul element, an index starting from 0 is used. For instance, table[0] refers to the first element while table[9] refers to the last element in this ASCII table.

STRUCTURES

Sometime it is also desired that variables of different data types but which are related to each other in some way be grouped together. For example, the name, age, and date of birth of a person would be stored in different types of variables, but all refer to the person's personal details. In such a case, a structure can be declared. A structure is a group of related variables that could be of different data types. Such a structure is declared by:

Once such a structure has been declared, it can be used like a data type specifier to create structure variables that have the member's name, age, and DOB. For example:

```
struct person grace = {"Grace", 22, 01311980};
```

would create a structure variable grace to store the name, age, and data of birth of a person called Grace. Then in order to access the specific members within the person structure variable, use the variable name followed by the dot operator (.) and the member name. Therefore, grace.name, grace.age, grace.DOB would refer to Grace's name, age, and data of birth, respectively.

POINTERS

When programming the 8051 in assembly, sometimes register such as R0, R1, and DPTR are used to store the addresses of some data in a certain memory location. When data is accessed via these registers, indirect addressing is used. In this case, we say that R0, R1, or DPTR are used to point to the data, so they are essentially pointers.

Correspondingly in C, indirect access of data can be done through specially defined pointer variables. Pointers are simply just special types of variables, but whereas normal variables are used to directly store data, pointer variables are used to store the addresses of the data. Just bear in mind that whether you use normal variables or pointer variables, you still get to access the data in the end. It is just whether you go directly to where it is stored and get the data, as in the case of normal variables, or first consult a directory to check the location of that data before going there to get it, as in the case of pointer variables.

Declaring a pointer follows the format:

```
data_type *pointer_name;
where

data_type refers to which type of data that the pointer is pointing to
 denotes that this is a pointer variable
pointer_name is the name of the pointer
```

As an example, the following declarations:

```
int * numPtr
int num;
numPtr = #
```

first declares a pointer variable called numPtr that will be used to point to data of type int. The second declaration declares a normal variable and is put there for comparison. The third line assigns the address of the num variable to the numPtr pointer. The address of any variable can be obtained by using the address operator, &, as is used in this example. Bear in mind that once assigned, the numPtr pointer contains the address of the num variable, not the value of its data.

The above example could also be rewritten such that the pointer is straightaway initialized with an address when it is first declared:

```
int num;
int * numPtr = #
```

In order to further illustrate the difference between normal variables and pointer variables, consider the following, which is not a full C program but simply a fragment to illustrate our point:

```
int num = 7;
int * numPtr = #
printf ("%d\n", num);
printf ("%d\n", numPtr);
printf ("%d\n", &numPtr);
printf ("%d\n", *numPtr);
```

The first line declare a normal variable, num, which is initialized to contain the data 7. Next, a pointer variable, numPtr, is declared, which is initialized to point to the address of num. The next four lines use the printf() function, which causes some data to be printed to some display terminal connected to the serial port. The first such line displays the contents of the num variable, which is in this case the value 7. The next displays the contents of the numPtr pointer, which is really some weird-looking number that is the address of the num variable. The third such line also displays the addresss of the num variable because the address operator is used to obtain num's address. The last line displays the actual data to which the numPtr pointer is pointing, which is 7. The * symbol is called the indirection operator, and when used with a pointer, indirectly obtains the data whose address is pointed to by the pointer. Therefore, the output display on the terminal would show:

```
7
13452 (or some other weird-looking number)
13452 (or some other weird-looking number)
7
```

A Pointer's Memory Type

Recall that pointers are also variables, so the question arises where they should be stored. When declaring pointers, we can specify different types of memory areas that these pointers should be in, for example:

```
int * xdata numPtr = & num:
```

This is the same as our previous pointer examples. We declare a pointer numPtr, which points to data of type int stored in the num variable. The difference here is the use of the memory type specifier **xdata** after the *. This is specifies that pointer numPtr should reside in external data memory (**xdata**), and we say that the pointer's memory type is **xdata**.

Typed Pointers

We can go even further when declaring pointers. Consider the example:

```
int data * xdata numPtr = &num:
```

The above statement declares the same pointer numPtr to reside in external data memory (xdata), and this pointer points to data of type int that is itself stored in the variable num in internal data memory (data). The memory type specifier, data, before the * specifies the data memory type while the memory type specifier, xdata, after the * specifies the pointer memory type.

Pointer declarations where the data memory types are explicitly specified are called typed pointers. Typed pointers have the property that you specify in your code where the data pointed by pointers should reside. The size of typed pointers depends on the data memory type and could be one or two bytes.

Untyped Pointers

When we do not explicitly state the data memory type when declaring pointers, we get untyped pointers, which are generic pointers that can point to data residing in any type of memory. Untyped pointers have the advantage that they can be used to point to any data independent of the type of memory in which the data is stored. All untyped pointers consist of 3 bytes, and are hence larger than typed pointers. Untyped pointers are also generally slower because the data memory type is not determined or known until the complied program is run at runtime. The first byte of untyped pointers refers to the data memory type, which is simply a number according to the following table. The second and third bytes are, respectively, the higher-order and lower-order bytes of the address being pointed to.

An untyped pointer is declared just like normal C, where:

```
int * xdata numPtr = #
```

does not explicitly specify the memory type of the data pointed to by the pointer. In this case, we are using untyped pointers.

Data memory type values stored in first byte of untyped pointers		
Value	Data Memory Type	
1	idata	
2	xdata	
3	pdata	
4	data/bdata	
5	code	

FUNCTIONS

In programming the 8051 in assembly, we learnt the advantages of using subroutines to group together common and frequently used instructions. The same concept appears in 8051 C, but instead of calling them subroutines, we call them functions. As in conventional C, a function must be declared and defined. A function definition includes a list of the number and types of inputs, and the type of the output (return type), puls a description of the internal contents, or what is to be done within that function.

The format of a typical function definition is as follows:

```
return type function name (arguments) [memory] [reentrant] [interrupt] [using]
where
         return type
                             refers to the data type of the return (output) value
          function name
                             is any name that you wish to call the function as
                             is the list of the type and number of input (argument) values
          arguments
                             refers to an explicit memory model (small, compact or large)
         memory
                             refers to whether the function is reentrant (recursive)
          reentrant
                             indicates that the function is acctually an ISR
          interrupt
         using
                             explicitly specifies which register bank to use
Consider a typical example, a function to calculate the sum of two numbers:
```

```
int sum (int a, int b)
          return a + b:
```

This function is called sum and takes in two arguments, both of type int. The return type is also int, meaning that the output (return value) would be an int. Within the body of the function, delimited by braces, we see that the return value is basically the sum of the two agruments. In our example above, we omitted explicitly specifying the options: memory, reentrant, interrupt, and using. This means that the arguments passed to the function would be using the default small memory model, meaning that they would be stored in internal data memory. This function is also by default non-recursive and a normal function, not an ISR. Meanwhile, the default register bank is bank 0.

Parameter Passing

In 8051 C, parameters are passed to and from functions and used as function arguments (inputs). Nevertheless, the technical details of where and how these parameters are stored are transparent to the programmer, who does not need to worry about these techinalities. In 8051 C, parameters are passed through the register or through memory. Passing parameters through registers is faster and is the default way in which things are done. The registers used and their purpose are described in more detail below.

Registers used in parameter passing									
Number of Argument Char / 1-Byte Pointer INT / 2-Byte Pointer Long/Float Generic Pointer									
1	R7	R6 & R7	R4-R7	R1-R3					
2	R5	R4 &R5	R4–R7						
3	R3	R2 & R3							

Since there are only eight registers in the 8051, there may be situations where we do not have enough registers for parameter passing. When this happens, the remaining parameters can be passed through fixed memory loacations. To specify that all parameters will be passed via memory, the NOREGPARMs control directive is used. To specify the reverse, use the REGPARMs control directive.

Return Values

Unlike parameters, which can be passed by using either registers or memory locations, output values must be returned from functions via registers. The following table shows the registers used in returning different types of values from functions.

Registers used in returning values from functions								
Return Type	Register	Description						
bit	Carry Flag (C)							
char/unsigned char/1-byte pointer	R7							
int/unsigned int/2-byte pointer	R6 & R7	MSB in R6, LSB in R7						
long/unsigned long	R4-R7	MSB in R4, LSB in R7						
float	R4–R7	32-bit IEEE format						
generic pointer	R1-R3	Memory type in R3, MSB in R2, LSB in R1						

Appendix C: STC12C5620AD series Electrical Characteristics

Absolute Maximum Ratings

Parameter	Symbol	Min	Max	Unit
Srotage temperature	TST	-55	+125	$^{\circ}$ C
Operating temperature (I)	TA	-40	+85	$^{\circ}$
Operating temperature (C)	TA	0	+70	$^{\circ}$
DC power supply (5V)	VDD - VSS	-0.3	+6.0	V
DC power supply (3V)	VDD - VSS	-0.3	+4.0	V
Voltage on any pin	-	-0.5	5.5	V

DC Specification (5V MCU)

C	Parameter		cation	Test Condition		
Sym			Тур	Max.	Unit	Test Condition
V_{DD}	Operating Voltage	3.5	5.0	5.5	V	
I_{PD}	Power Down Current	-	< 0.1	-	uA	5V
I_{IDL}	Idle Current	-	3.0	-	mA	5V
I_{cc}	Operating Current	-	4	20	mA	5V
V_{IL1}	Input Low Voltage(P0,P1,P2,P3)	-	-	0.8	V	5V
V_{IL2}	Input Low Voltage (RESET, XTAL1)			1.5	V	5V
V _{IH1}	Input High Voltage (P0,P1,P2,P3)	2.0	-	-	V	5V
V _{IH2}	Input High Voltage (RESET)	3.0	-	-	V	5V
I _{OL1}	Sink Current for output low (P0,P1,P2,P3)	-	20	-	mA	5V
I_{OH1}	Sourcing Current for output high (P0,P1,P2,P3) (Quasi-output)	150	230	-	uA	5V
I_{OH2}	Sourcing Current for output high (P0,P1,P2,P3) (Push-Pull, Strong-output)		20	-	mA	5V
$I_{\rm IL}$	Logic 0 input current (P0,P1,P2,P3)	-	18	50	uA	Vpin=0V
I_{TL}	Logic 1 to 0 transition current (P0,P1,P2,P3)	-	270	600	uA	Vpin=2.0V

DC Specification (3V MCU)

Crima	Parameter		ication		Test Condition	
Sym			Тур	Max.	Unit	Test Condition
$V_{\scriptscriptstyle DD}$	Operating Voltage	2.2	3.3	3.8	V	
I_{PD}	Power Down Current	-	< 0.1	-	uA	3.3V
I_{IDL}	Idle Current	-	2.0	-	mA	3.3V
I_{CC}	Operating Current	-	4	10	mA	3.3V
V _{IL1}	Input Low (P0,P1,P2,P3)	-	-	0.8	V	3.3V
V_{IL2}	Input low voltage (RESET,XTAL1)	-	-	1.5	V	3.3V
V_{IH1}	Input High (P0,P1,P2,P3)	2.0	-	-	V	3.3V
V_{IH2}	Input High (RESET)	3.0	-	-	V	3.3V
I_{OL1}	Sink Current for output low (P0,P1,P2,P3)	-	20	-	mA	3.3V@Vpin=0.45V
I_{OH1}	Sourcing Current for output high (P0,P1,P2,P3) (Quasi-output)	40	70	-	uA	3.3V
I_{OH2}	Sourcing Current for output high (P0,P1,P2,P3) (Push-Pull)	-	20	-	mA	3.3V
$I_{\rm IL}$	Logic 0 input current (P0,P1,P2,P3)	-	8	50	uA	Vpin=0V
I _{TL}	Logic 1 to 0 transition current (P0,P1,P2,P3)	-	110	600	uA	Vpin=2.0V

Appendix D: Program for indirect addressing inner 256B RAM


```
:/* --- STC MCU International Limited -----*/
:/* --- STC 1T Series MCU the inner 256B normal RAM (indirect addressing) Demo -----*
;/* If you want to use the program or the program referenced in the -----*/
:/* article, please specify in which data and procedures from STC -----*/
·/*______*/
TEST CONST
            EQU
                  5AH
;TEST RAM
            EQU
                  03H
      ORG
            0000H
            INITIAL
      LJMP
      ORG
            0050H
INITIAL:
      MOV
            R0,
                  #253
      MOV
            R1,
                  #3H
TEST ALL RAM:
      MOV
            R2,
                  #0FFH
TEST_ONE_RAM:
      MOV
                  R2
            A,
      MOV
            @R1,
                  Α
      CLR
            Α
      MOV
            A,
                  @R1
      CJNE
            A,
                  2H,
                        ERROR DISPLAY
      DJNZ
            R2,
                  TEST ONE RAM
      INC
            R1
      DJNZ
            R0,
                  TEST_ALL_RAM
OK DISPLAY:
      MOV
            P1,
                  #11111110B
Wait1:
      SJMP
            Wait1
ERROR DISPLAY:
      MOV
                  R1
      MOV
            P1,
                  Α
Wait2:
      SJMP
            Wait2
      END
```

Appendix E: Using Serial port expand I/O interface

STC12C5620AD series MCU serial port mode0 can be used for expand IO if UART is free in your application. UART Mode0 is a synchronous shift register, the baudrate is fixed at fosc/12, RXD pin (P3.0) is the data I/O port, and TXD pin (P3.1) is clock output port, data width is 8 bits, always sent / received the lowest bit at first.

(1) Using 74HC165 expand parallel input ports

Please refer to the following circuit which using 2 pcs 74HC165 to expand 16 input I/Os

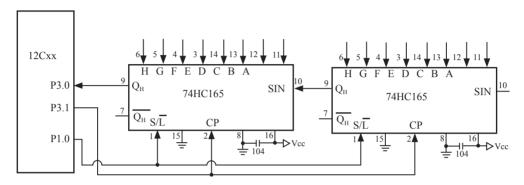

74HC165 is a 8-bit parallel input shift register, when S/L (Shift/Load) pin is falling to low level, the parallel port data is read into internal register, and now, if S/L is raising to high and ClockDisable pin (15 pin) is low level, then clock signal from CP pin is enable. At this time register data will be output from the Dh pin (9 pin) with the clock input.

. . .

MOV R7,#05H ;read 5 groups data MOV R0,#20H ;set buffer address START: CLR P1.0 ;S/L = 0, load port data

7. CERT 1.0 ,5/E = 0, load port data

SETB P1.0 ;S/L = 1, lock data and enable clock

MOV R1,#02H ;2 bytes per group

RXDAT:MOV SCON,#00010000B ;set serial as mode 0 and enable receive data


WAIT: JNB RI,WAIT ;wait for receive complete CLR RI ;clear receive complete flag

MOV A,SBUF ;read data to ACC MOV @R0,A ;save data to buffer INC R0 ;modify buffer ptr DJNZ R1,RXDAT ;read next byte DJNZ R7,START ;read next group

. . .

(2) Using 74HC164 expand parallel output ports

Please refer to the following circuit which using 2 pcs 74HC164 to expand 16 output I/Os

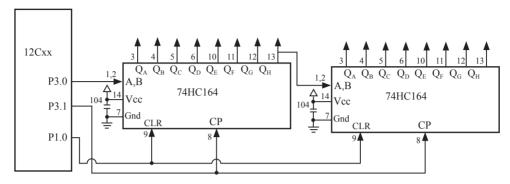

When serial port is working in MODE0, the serial data is input/output from RXD(P3.0) pin and serial clock is output from TXD(P3.1). Serial data is always starting transmission from the lowest bit.

. . .

START: MOV R7,#02H ;output 2 bytes data

MOV R0,#30H ;set buffer address MOV SCON,#0000000B ;set serial as mode 0

SEND: MOV A,@R0 ; read data from buffer


MOV SBUF,A ;start send data

WAIT: JNB TI,WAIT ;wait for send complete CLR TI ;clear send complete flag

INC R0 ;modify buffer ptr DJNZ R7,SEND ;send next data

. .

Appendix F: Use STC MCU common I/O driving LCD Display

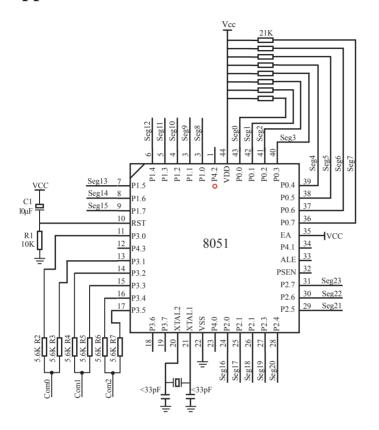

	U2
Com0 0	Com0
Com1 1	Com1
Seg0 2	Seg0
Seg1 3	Seg0 Seg1
Seg1 3 Seg2 4	Seg1 Seg2
Seg3 5	Seg2 Seg3
Seg4 6	Seg3 Seg4
Seg5 7	Seg5
Seg6 8	Seg6
Seg7 9	Seg7
Seg8 10	Seg8
Seg9 11	Seg9
Seg10 12	Seg10
Seg11 13	Seg11
Seg12 14	Seg12
Seg13 15	Seg13
Seg14 16	Seg14
Seg15 17	Seg15
Seg16 18	Seg16
Seg17 19	Seg17
Seg18 20	Seg18
Seg19 21	Seg19
Seg20 22	Seg20
Seg21 23	Seg21
Seg22 24	Seg22
Seg23 25	Seg23
Com2 26	Com2

```
NAME LcdDriver
#include<reg52.h>
                    ************************
the LCD is 1/3 duty and 1/3 bias; 3Com*24Seg; 9 display RAM;
                      Bit7
                             Bit6
                                    Bit5
                                            Bit4
                                                   Bit3
                                                          Bit2
                                                                  Bit1
                                                                         Bit0
:Com0: Com0Data0:
                      Seg7
                             Seg6
                                    Seg5
                                            Seg4
                                                   Seg3
                                                           Seg2
                                                                  Seg1
                                                                         Seg0
       Com0Data1:
                                                                  Seg9
                      Seg15
                             Seg14
                                    Seg13
                                            Seg12
                                                   Seg11
                                                          Seg10
                                                                         Seg8
       Com0Data2:
                      Seg23
                             Seg22
                                    Seg21
                                            Seg20
                                                   Seg19
                                                          Seg18
                                                                  Seg17
                                                                         Seg16
:Com1: Com1Data0:
                      Seg7
                             Seg6
                                    Seg5
                                            Seg4
                                                   Seg3
                                                          Seg2
                                                                  Seg1
                                                                         Seg0
       Com1Data1:
                      Seg15
                             Seg14
                                    Seg13
                                            Seg12
                                                   Seg11
                                                          Seg10
                                                                  Seg9
                                                                         Seg8
       Com1Data2:
                      Seg23
                             Seg22
                                    Seg21
                                            Seg20
                                                   Seg19
                                                          Seg18
                                                                  Seg17
                                                                         Seg16
;Com2: Com2Data0:
                      Seg7
                             Seg6
                                    Seg5
                                                   Seg3
                                                          Seg2
                                                                  Seg1
                                            Seg4
                                                                         Seg0
       Com2Data1:
                                                                  Seg9
                      Seg15
                             Seg14
                                    Seg13
                                            Seg12
                                                   Seg11
                                                          Seg10
                                                                         Seg8
       Com2Data2:
                      Seg23
                             Seg22
                                    Seg21
                                            Seg20
                                                   Seg19
                                                          Seg18
                                                                  Seg17
                                                                         Seg16
·******************
;Com0: P3^0,P3^1 when P3^0 = P3^1 = 1
                                            then Com0=VCC(=5V);
                      P3^0 = P3^1 = 0
                                            then Com0=GND(=0V);
                      P3^0 = 1. P3^1 = 0
                                            then Com0=1/2 VCC;
;Com1: P3^2,P3^3 the same as the Com0
;Com2: P3^4,P3^5 the same as the Com0
sbit
       SEG0 =P0^0
sbit
       SEG1 =P0^1
sbit
       SEG2 = P0^2
sbit
       SEG3 =P0^3
sbit
       SEG4 = P0^4
sbit
       SEG5 = P0^5
sbit
       SEG6 = P0^6
sbit
       SEG7 = P0^7
sbit
       SEG8 = P1^0
sbit
       SEG9 =P1^1
sbit
       SEG10 =P1^2
```

```
sbit
       SEG11 =P1^3
sbit
       SEG12 =P1^4
sbit
       SEG13 =P1^5
sbit
       SEG14 =P1^6
sbit
       SEG15 =P1^7
sbit
       SEG16 =P2^0
sbit
       SEG17 =P2^1
sbit
       SEG18 =P2^2
sbit
       SEG19 =P2^3
sbit
       SEG20 =P2^4
sbit
       SEG21 =P2^5
sbit
       SEG22 = P2^6
sbit
       SEG23 =P2^7
      ==Interrupt=
   CSEG
               AT
                      0000H
   LJMP
               start
   CSEG
               AT
                      000BH
   LJMP
               int t0
;====register===
lcdd bit SEGMENT BIT
   RSEG lcdd bit
   OutFlag:
              DBIT 1
                          ;the output display reverse flag
lcdd data SEGMENT DATA
   RSEG lcdd_data
   Com0Data0:
                DS 1
   Com0Data1:
                DS 1
   Com0Data2:
               DS 1
   Com1Data0:
               DS 1
   Com1Data1:
               DS 1
   Com1Data2:
               DS 1
   Com2Data0:
                DS 1
   Com2Data1:
               DS 1
   Com2Data2:
                DS 1
   TimeS:
                DS 1
```

```
=Interrupt Code=
t0 int
     SEGMENT
                 CODE
     RSEG
           t0 int
     USING 1
;Time0 interrupt
;ths system crystalloid is 22.1184MHz
;the time to get the Time0 interrupr is 2.5mS
the whole duty is 2.5mS*6=15mS, including reverse
int t0:
     ORL
           TL0,#00H
     MOV
           TH0,#0EEH
     PUSH
           ACC
     PUSH
           PSW
     MOV
           PSW,#08H
     ACALL OutData
     POP
           PSW
     POP
           ACC
     RETI
    =SUB CODE=
uart sub SEGMENT CODE
     RSEG uart sub
     USING 0
initial the display RAM data
;if want to display other, then you may add other data to this RAM
;Com0: Com0Data0,Com0Data1,Com0Data2
;Com1: Com1Data0,Com1Data1,Com1Data2
;Com2: Com2Data0,Com0Data1,Com0Data2
;it will display "11111111"
InitComData:
     MOV
           Com0Data0,
                       #24H
     MOV
           Com0Data1,
                       #49H
     MOV
           Com0Data2,
                       #92H
```

```
MOV
            Com1Data0,
                         #92H
      MOV
            Com1Data1,
                         #24H
      MOV
            Com1Data2,
                         #49H
      MOV
            Com2Data0.
                         #00H
      MOV
            Com2Data1,
                         #00H
      MOV
            Com2Data2,
                         #00H
      RET
reverse the display data
RetComData:
      MOV
            R0.
                   #Com0Data0
                                   get the first data address
      MOV
            R7.
                   #9
RetCom 0:
      MOV
                   @R0
            A,
      CPL
            Α
      MOV
            @R0,
                   Α
      INC
            R0
      DJNZ
            R7,
                   RetCom 0
      RET
   ****************
;get the display Data and send to Output register
OutData:
      INC
            TimeS
      MOV
                   TimeS
            A,
      MOV
            P3.
                   #11010101B
                                      ;clear display,all Com are 1/2VCC and invalidate
      CJNE
                                      ;judge the duty
            A,
                   #01H, OutData 1
      MOV
            P0,
                   Com0Data0
      MOV
            P1,
                   Com0Data1
      MOV
            P2,
                   Com0Data2
      JNB
            OutFlag,OutData 00
      MOV
            P3,
                   #11010111B
                                      ;Com0 is work and is VCC
      RET
```

```
OutData 00:
       MOV
              P3,
                     #11010100B
                                        ;Com0 is work and is GND
       RET
OutData 1:
       CJNE
              A.
                     #02H,OutData 2
       MOV
              P0.
                     Com1Data0
       MOV
              P1,
                     Com1Data1
       MOV
              P2,
                     Com1Data2
       JNB
              OutFlag,OutData 10
       MOV
              P3,
                     #11011101B
                                       ;Com1 is work and is VCC
       RET
OutData 10:
       MOV
              P3,
                                        ;Com1 is work and is GND
                     #11010001B
       RET
OutData 2:
       MOV
              P0,
                     Com2Data0
       MOV
              P1,
                     Com2Data1
       MOV
              P2.
                     Com2Data2
       JNB
              OutFlag,OutData 20
       MOV
              P3,
                     #11110101B
                                       ;Com2 is work and is VCC
       SJMP
              OutData 21
OutData 20:
       MOV P3,#11000101B
                                 ;Com2 is work and is GND
OutData 21:
              TimeS, #00H
       MOV
       ACALL RetComData
       CPL
              OutFlag
       RET
;=====Main Code====
uart main SEGMENT CODE
       RSEG uart main
       USING 0
```

start:

MOV SP,#40H

CLR OutFlag

MOV TimeS,#00H

MOV TL0,#00H

MOV TH0,#0EEH

MOV TMOD,#01H

MOV IE,#82H

ACALL InitComData

SETB TR0


Main:


NOP

SJMP Main

END

Appendix G: LED driven by an I/O port and Key Scan





It can save a lot of I/O ports that STC12C5620AD MCU I/O ports can used as the LED drivers and key detection concurrently because of their feature which they can be set to the weak pull, the strong pull (push-pull) output, only input (high impedance), open drain four modes.


When driving the LED, the I/O port should be set as strongly push-pull output, and the LED will be lighted when the output is high.

When testing the keys, the I/O port should be set as weak pull input, and then reading the status of external ports can test the keys.

Appendix H: How to reduce the Length of Code through Keil C

Setting as shown below in Keil C can maximum reduce about 10K to the length of original code

- 1. Choose the "Options for Target" in "Project" menu
- 2. Choose the option "C51" in "Options for Target"

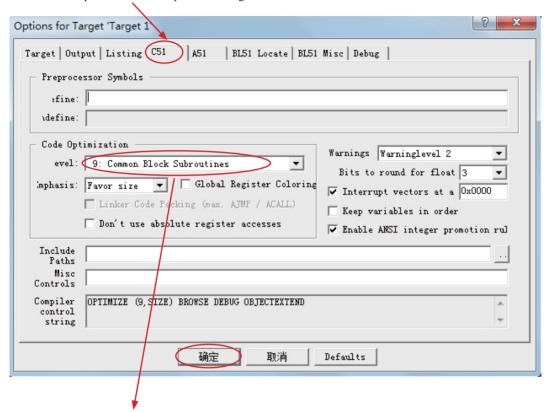

- 3. Code Optimization, 9 common block subroutines
- 4. Click "OK", compile the program once again.

Appendix I: Notes of STC12C5620AD series Application

About reset circuit

If the system frequency is below 12MHz, the external reset circuit is not required. Reset pin can be connected to ground through the 1K resistor or can be connected directly to ground. The proposal to create PCB to retain RC reset circuit

About Clock oscillator

If you need to use internal RC oscillator (4MHz ~ 8MHz because of manufacturing error and temperature drift), XTAL1 pin and XTAL2 pin must be floating. If you use a external active crystal oscillator, clock signal input from XTAL1 pin and XTAL2 pin floating.

About power

Power at both ends need to add a 47uF electrolytic capacitor and a 0.1uF capacitor, to remove the coupling and filtering.

Appendix J: Notes of STC12 series Replaced Traditional 8051

STC12C5620AD series MCU Timer0/Timer1/UART is fully compatible with the traditional 8051 MCU. After power on reset, the default input clock source is the divider 12 of system clock frequency, and UART baudrate generator is Timer 1. MCU instruction execution speed is faster than the traditional 8051 MCU $8 \sim 12$ times in the same working environment, so software delay programs need to be adjusted.

ALE

Traditional 8051's ALE pin output signal on divide 6 the system clock frequency can be externally provided clock, if disable ALE output in STC12C5620AD series system, you can get clock source from CLKOUT0/P1.0, CLKOUT1/P1.1 or XTAL2 clock output. (Recommended a 200ohm series resistor to the XTAL2 pin). ALE pin is an disturbance source when traditional 8051's system clock frequency is too high. STC89xx series MCU add ALEOFFF bit in AUXR register. While STC12C5620AD series MCU directly disable ALE pin dividing 6 the system clock output, and can remove ALE disturbance thoroughly. Please compare the following two registers.

AUXR register of STC89xx series

Mnemoni	Add	Name	Bit7	Bit6	Bit5	Bit4	Bir3	Bit2	Bit1	Bit0	Reset Value
AUXR	8EH	Auxiliary register 0	-	-	-	-	-	-	EXTRAM	ALEOFF	xxxx,xx00

AUXR register of STC12C5620AD series

Mnemoni	c Add	Name	Bit7	Bit6	Bit5	Bit4	Bir3	Bit2	Bit1	Bit0	Reset Value
AUXR	8EH	Auxiliary register	T0x12	T1x12	UART_M0x6	EADCI	ESPI	ELVDI	-	-	000x,xxxx

PSEN

Traditional 8051 execute external program through the PSEN signal, STC12C5620AD series is system MCU concept, integrated high-capacity internal program memory, do not need external program memory expansion generally, so have no PSEN signal, PSEN pin can be used as GPIO.

General Ousi-Bidirectional I/O

Traditional 8051 access I/O (signal transition or read status) timing is 12 clocks, STC12C5620AD series MCU is 4 clocks. When you need to read an external signal, if internal output a rising edge signal, for the traditional 8051, this process is 12 clocks, you can read at once, but for STC12C5620AD series MCU, this process is 4 clocks, when internal instructions is complete but external signal is not ready, so you must delay 1~2 nop operation.

I/O drive capability

STC12C5620AD series I/O port sink drive current is 20mA, has a strong drive capability, the port is not burn out when drive high current generally. STC89 series I/O port sink drive current is only 6mA, is not enough to drive high current. For the high current drive applications, it is strongly recommended to use STC12C5620AD series MCU.

Power consumption

Power consumption consists of two parts: crystal oscillator amplifier circuits and digital circuits. For crystal oscillator amplifier circuits, STC12C5620AD series is lower then STC89 series. For digital circuits, the higher clock frequency, the greater the power consumption. STC12C5620AD series MCU instruction execution speed is faster than theSTC89 series MCU 3~24 times in the same working environment, so if you need to achieve the same efficiency, STC12C5620AD series required frequency is lower than STC89 series MCU.