
17. Virtualizing the Processor

6.004x Computation Structures
Part 3 – Computer Organization

Copyright © 2016 MIT EECS

Recap: Virtual Memory


Review: Virtual Memory

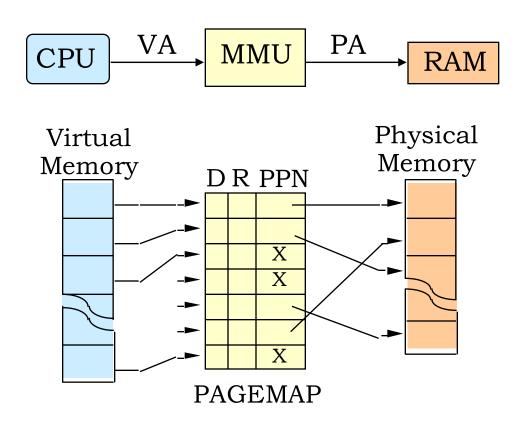

Goal: create illusion of large virtual address space

- divide address into (VPN,offset), map to (PPN,offset) or page fault
- use high address bits to select page: keep related data on same page
- use cache (TLB) to speed up mapping mechanism—works well
- long disk latencies: keep working set in physical memory, use write-back

MMU Address Translation

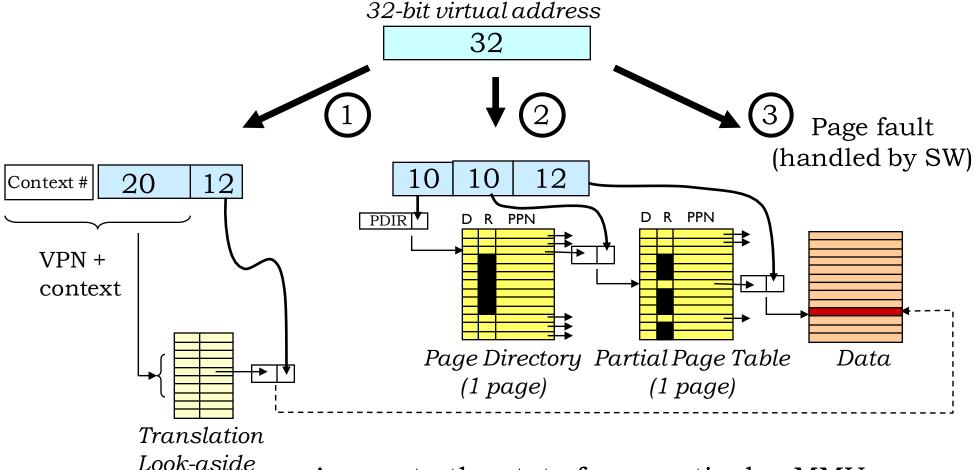

Access to the state for a particular MMU context is controlled by two registers:

- 1. Context #, used by TLB
- 2. PDIR, used by multi-level page map

Buffer

Contexts


A <u>context</u> is an entire set of mappings from VIRTUAL to PHYSICAL page numbers as specified by the contents of the page map:

Virtual Memory

Physical Memory




We would like to support multiple VIRTUAL to PHYSICAL Mappings and, thus, multiple Contexts.

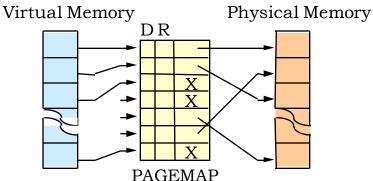

THE BIG IDEA: Several programs, each with their own context, may be simultaneously loaded into main memory!


"Context switch": reload the page map!



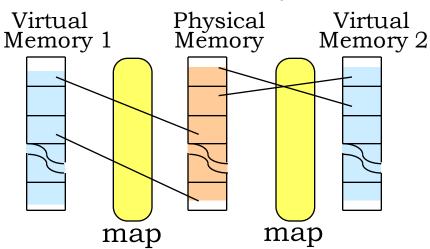

Processes

Building a Virtual Machine (VM)

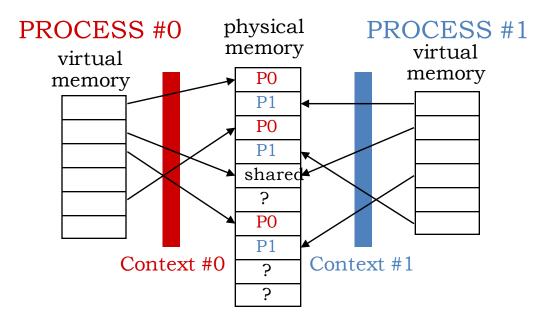

Goal: give each program its own "VIRTUAL MACHINE"; programs don't "know" about each other...


New abstraction: a process which has its own

- machine state: R0, ..., R30
 program (w/ shared code)
- context (virtual address space)
 virtual I/O devices


• PC, stack

"OS Kernel" is a special, privileged process running in its own context. It manages the execution of other processes and handles real I/O devices, emulating virtual I/O devices for each process.

One VM For Each Process

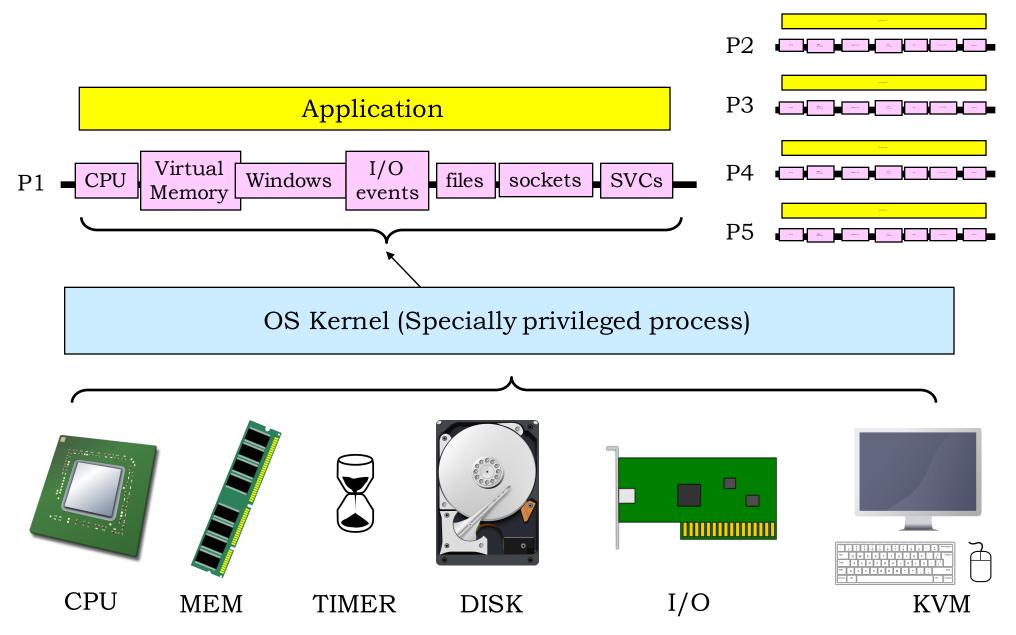


Processes: Multiplexing the CPU

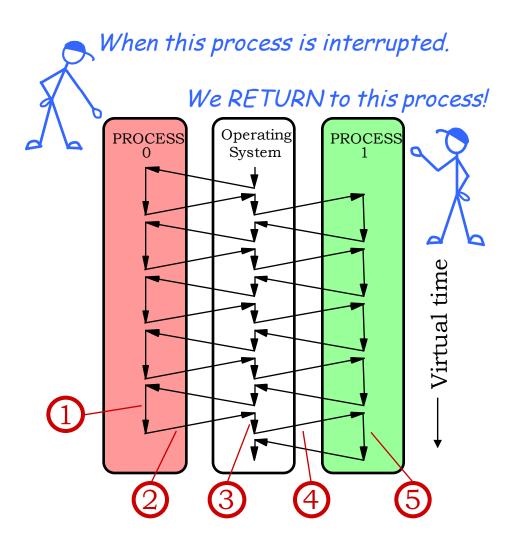

- 1. Running in process #0
- 2. Stop execution of process #0 either because of explicit *yield* or some sort of timer *interrupt*; trap to handler code, saving current PC+4 in XP
- 3. First: save process #0 state (regs, context) Then: load process #1 state (regs, context)
- 4. "Return" to process #1: just like return from other trap handlers (ie., use address in XP) but we're returning from a *different* trap than happened in step 2!
- 5. Running in process #1

Timesharing

Key Technology: Timer Interrupts

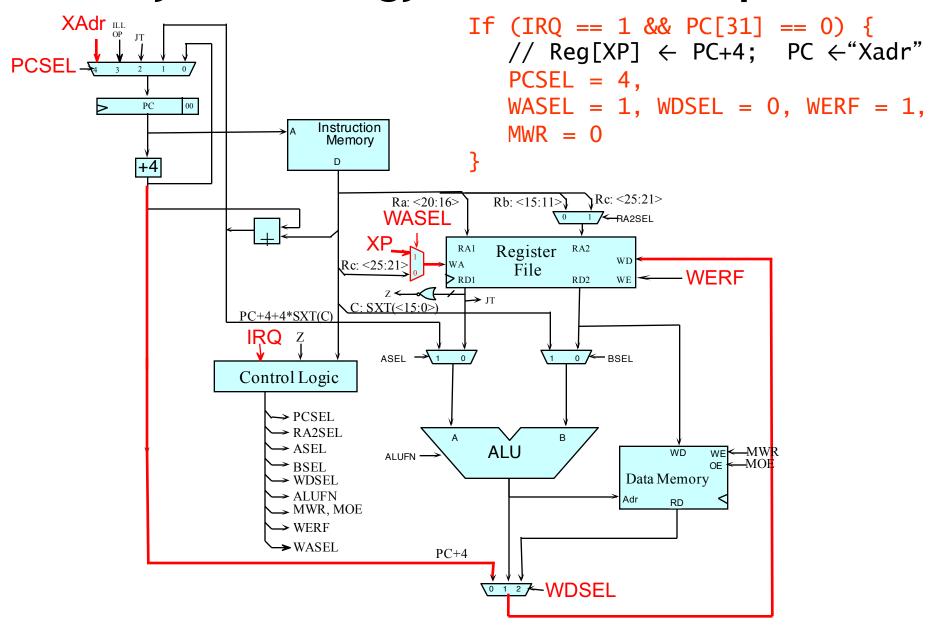

Beta Interrupt Handling

Minimal Hardware Implementation:

- Check for Interrupt Requests (IRQs) before each instruction fetch.
- ILLOP → 0x80000004:

RESET $\rightarrow 0x800000000$:

BR(...)

BR(...)

• On IRQ j:

- $X_{ADR} \rightarrow 0x800000004$:
- BR(...)

BR(...)

SAVED STATE

12:

UserMState:

SP -

- copy PC+4 into Reg[XP];
- INSTALL j*4 as new PC.

Handler Coding:

- Save state in "UserMState" structure
- Call C procedure to handle the exception
- re-install saved state from UserMState
- Return to Reg[XP]-4

TRANSPARENT to interrupted program!

WHERE to find handlers?

- BETA Scheme: WIRE IN a low-memory address for each exception handler entry point
- Common alternative: WIRE IN the address of a TABLE of handler addresses ("interrupt vectors")

Example: Timer Interrupt Handler

Example:

Operating System maintains current time of day (TOD) count. But...this value must be updated periodically in response to clock EVENTs, i.e. signal triggered by 60 Hz timer hardware.

Program A (Application)

- Executes instructions of the user program.
- Doesn't want to know about clock hardware, interrupts, etc!!
- Can incorporate TOD into results by "asking" OS.

Clock Handler

- GUTS: Sequence of instructions that increments TOD. Written in C.
- Entry/Exit sequences save & restore interrupted state, call the C handler. Written as assembler "stubs".

Interrupt Handler Coding


```
long TimeOfDay;
struct MState { int Regs[31];} UserMState;
/* Executed 60 times/sec */
                                                    Handler
Clock_Handler(){
                                                    (written in C)
  TimeOfDay = TimeOfDay+1;
  if (TimeOfDay % QUANTUM == 0) Scheduler();
Clock h:
   ST(r0. UserMState) // Save state of
   ST(r1, UserMState+4)
                          // interrupted
                             // app pgm...
   ST(r30, UserMState+30*4)
   LD(KStack, SP)
                            // Use KERNEL SP
                                                    "Interrupt stub"
   BR(Clock_Handler,lp) // call handler
                                                    (written in assy.)
   LD(UserMState, r0) // Restore saved
   LD(UserMState+4, r1) // state.
   LD(UserMState+30*4, r30)
   SUBC(XP, 4, XP)
                            // execute interrupted inst
   JMP(XP)
                             // Return to app.
```

Simple Timesharing Scheduler

```
struct MState { int Regs[31]; } UserMState;
```

```
Scheduler() {
    ProcTbl[Cur].State = UserMState; // Save Cur state
    Cur = (Cur+1)%N; // Incr mod N
    UserMState = ProcTbl[Cur].State; // Install state for next User
    LoadUserContext(ProcTbl[Cur].PageMap); // Install context
}
```

OS Organization: Processes

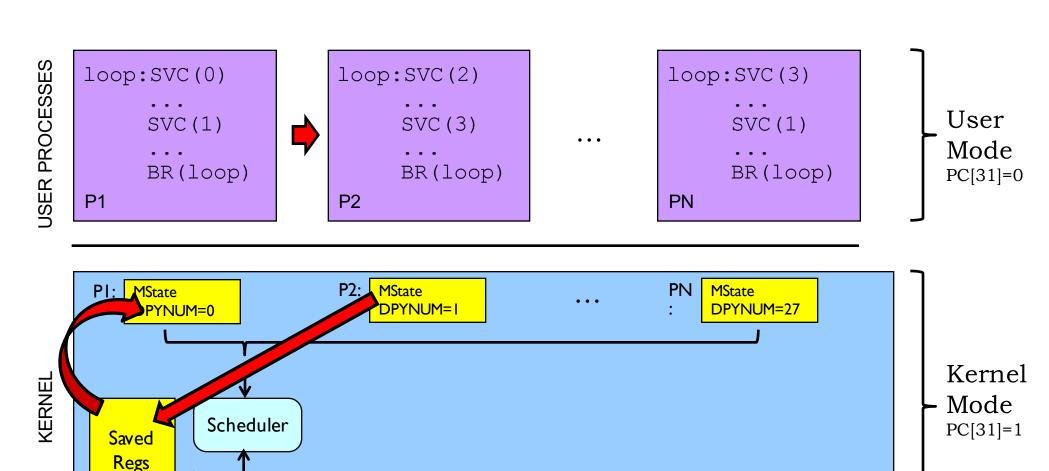

(MState

Clock Handler


One Interrupt at a Time!


Interrupts allowed!

100p:SVC(0)
...
SVC(1)
...
BR(100p)
P1


```
loop:SVC(2)
...
SVC(3)
...
BR(loop)
P2
```

loop:SVC(3)
...
SVC(1)
...
BR(loop)
PN

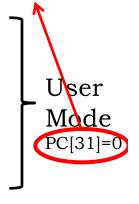

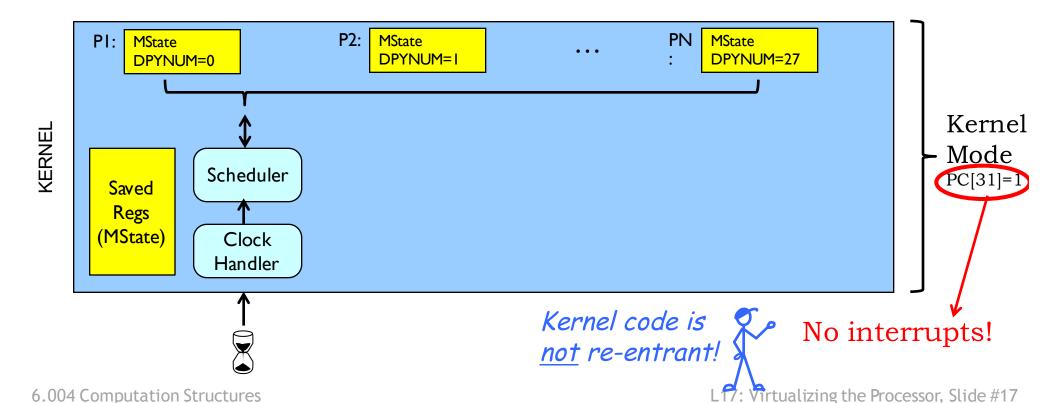

Handling Illegal Instructions

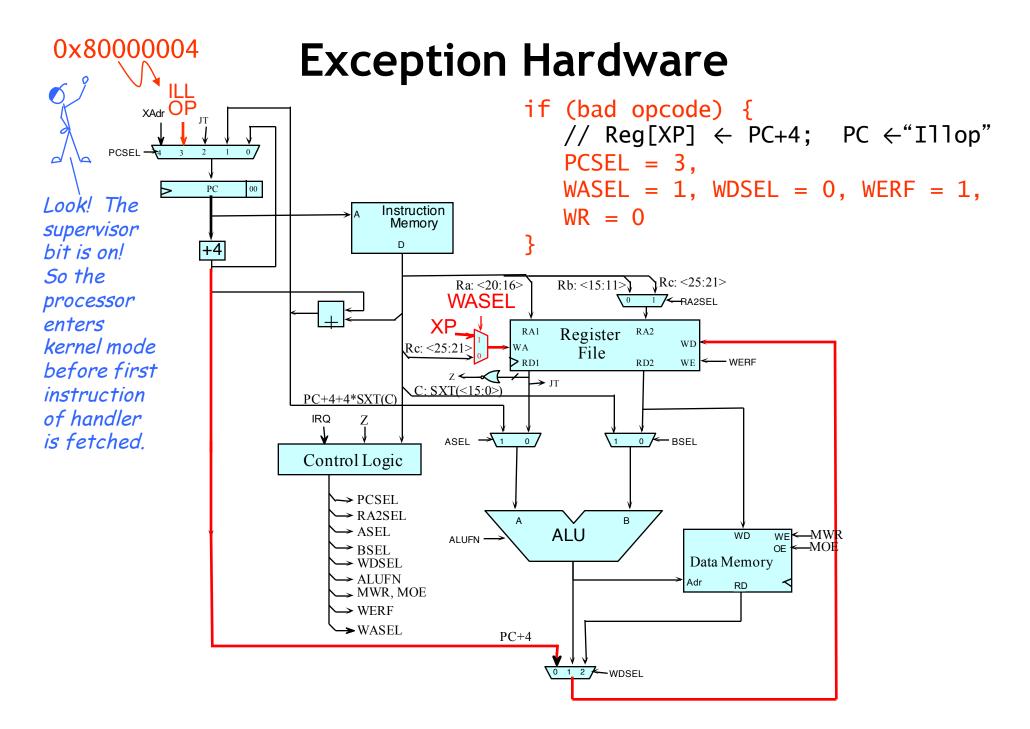

Exception Handling

```
// hardware interrupt vectors are in low memory
                                                          This is where the HW
= 0
                                                         sets the PC during an
    BR(I_Reset) // when Beta first starts
                                                          illegal opcode exception
    BR(I_I110p) // on Illegal Instruction (eg SVC)
    BR(I_Clk) // on timer interrupt
    BR(I_Kbd) // on keyboard interrupt, use RDCHAR() to get character
    BR(I_Mouse) // on mouse interrupt, use CLICK() to get coords
// start of kernel-mode storage
KStack:
   LONG(.+4) // Pointer to ...
    STORAGE(256) // ... the kernel stack.
// Here's the SAVED STATE of the interrupted user-mode process
// filled by interrupt handlers
UserMState:
    STORAGE(32) // RO-R30... (PC is in XP/R30!)
N = 16
                // max number of processes
Cur:
   LONG(0) // index (0 to N-1) into ProcTbl for current process
ProcTbl:
    STORAGE(N*PCB_Size) // PCB_Size = # bytes to hold complete state
```

Useful Macros

```
// Macro to extract and right-adjust a bit field from RA, and leave it
// in RB. The bit field M:N, where M >= N.
.macro extract_field (RA, M, N, RB) {
     SHLC(RA, 31-M, RB) // Shift left, to mask out high bits
     SHRC(RB, 31-(M-N), RB) // Shift right, to mask out low bits.
}
.macro save_all_regs(WHERE) save_all_regs(WHERE, r31)
.macro save_all_regs(WHERE, base_reg) {
    ST(r0,WHERE,base_reg)
    ST(r30,WHERE+120,base_reg)
.macro restore_all_regs(WHERE) restore_all_regs(WHERE, r31)
.macro restore_all_regs(WHERE, base_reg) {
    LD(base_reg,WHERE,r0)
                                                         Macros can be used
                                                         like an in-lined
    LD(base_reg,WHERE+120,r30)
                                                         procedure call
```

Illop Handler

```
/// Handler for Illegal Instructions
                                                                  So kernel code can
I_I110p:
                                                                  make subroutine
    save_all_regs(UserMState) // Save the machine state.
                                                                  calls!
    LD(KStack, SP) // Install kernel stack pointer. • 👈
    ADDC(XP, -4, r0) // Fetch the illegal instruction
    BR(ReadUserMem, LP) // interpret addr in user context
    SHRC(r0, 26, r1) // Extract the 6-bit OPCODE
   MULC(r1, 4, r1) // Make it a WORD (4-byte) index
   LD(r1, UUOTbl, r1) // Fetch UUOTbl[OPCODE]
                        // and dispatch to the UUO handler.
    JMP(r1)
.macro UUO(ADR) LONG(ADR+0x80000000) // Auxiliary Macros
.macro BAD() UUO(UUOError)
                                 supervisor bit...
                                                                 This is a
                                                                64-entry
UUOTb1: BAD()
                 UUO(SVC_UUO)
                                   UUO(swapreg) BAD()
                                                                dispatch
        BAD()
                 BAD()
                                   BAD()
                                                BAD()
                                                                table.
        BAD()
                 BAD()
                                   BAD()
                                                BAD()
                                                                Each entry
    ... more table follows ...
                                                                is an
                                                                address of
                                                                a "handler"
```

Accessing User Locations

We'll need to use the VtoP routine from the previous lecture to translate a user-mode virtual address into the appropriate physical address. VtoP will have to be modified slightly to find the correct context now that we have multiple processes.

```
// expects user-mode virtual address in RO,
// returns contents of that location in user's virtual memory
ReadUserMem:
    PUSH(LP)
                        // save registers we use below
    PUSH(r1)
   ANDC(r0,0xFFF,r1) // extract page offset
    PUSH(r1)
    SHRC(r0,12,r1) // extract virtual page number
    PUSH(r1)
    BR(VtoP,LP)
                        // returns physical address in RO
    DEALLOCATE(2)
                        // load the contents
    LD(r0.0,r0)
    POP(r1)
                        // restore regs, return to caller
    POP(LP)
    JMP(LP)
```

Handler for Actual Illops

```
// Here's the handler for truly unused opcodes (not SVCs or swapreg):
// Illegal instruction is in RO, it's address is Reg[XP]-4
UUOError:
    CALL(KWrMsg)
                           // Type out an error msg,
     .text "Illegal instruction "
    ADDC(XP, -4, r0) // Fetch the illegal instruction
    BR(ReadUserMem, LP) // interpret addr in user context
    CALL(KHexPrt)
    CALL(KWrMsg)
                                          These kernel utility routines (Kxxx) don't
    CALL(KWrMsg)
.text " at location 0x"
                                          follow our usual calling convention - they
                                          take their args in registers or from words
    MOVE(xp,r0)
                                          immediately following the procedure call!
                                          They adjust LP to skip past any args
    CALL(KHexPrt)
    CALL(KWrMsg)
                                          before returning.
    .text "! ....."
    HALT()
                            // Then crash system.
```

Emulated Instruction: swapreg(Ra,Rc)

```
// swapreg(RA,RC) swaps the contents of the two named registers.
.macro swapreg(RA,RC) betaopc(0x02,RA,0,RC)

// swapreg instruction is in RO, it's address is Reg[XP]-4
swapreg:
    extract_field(r0, 25, 21, r1) // extract rc field
    MULC(r1, 4, r1) // convert to byte offset into regs array
    extract_field(r0, 20, 16, r2) // extract ra field
    MULC(r2, 4, r2) // convert to byte offset into regs array
    LD(r1, UserMState, r3) // r3 <- regs[rc]
    LD(r2, UserMState, r4) // r4 <- regs[ra]
    ST(r4, UserMState, r1) // regs[rc] <- old regs[ra]
    ST(r3, UserMState, r2) // regs[ra] <- old regs[rc]

// all done! Resume execution of user-mode program
    BR(I_Rtn) // defined in the next section!</pre>
```

Supervisor Calls

Communicating with the OS

User-mode programs need to communicate with OS code:
Access virtual I/O devices
Communicate with other processes

. . .



But if OS Kernel is in another context (ie, not in user-mode address space) how do we get to it?


Solution:

Abstraction: a supervisor call (SVC) with args in registers – result in R0 or maybe user-mode memory *Implementation*:

use *illegal instructions* to cause an exception -- OS code will recognize these particular illegal instructions as a user-mode SVCs



OS Organization: Supervisor Calls

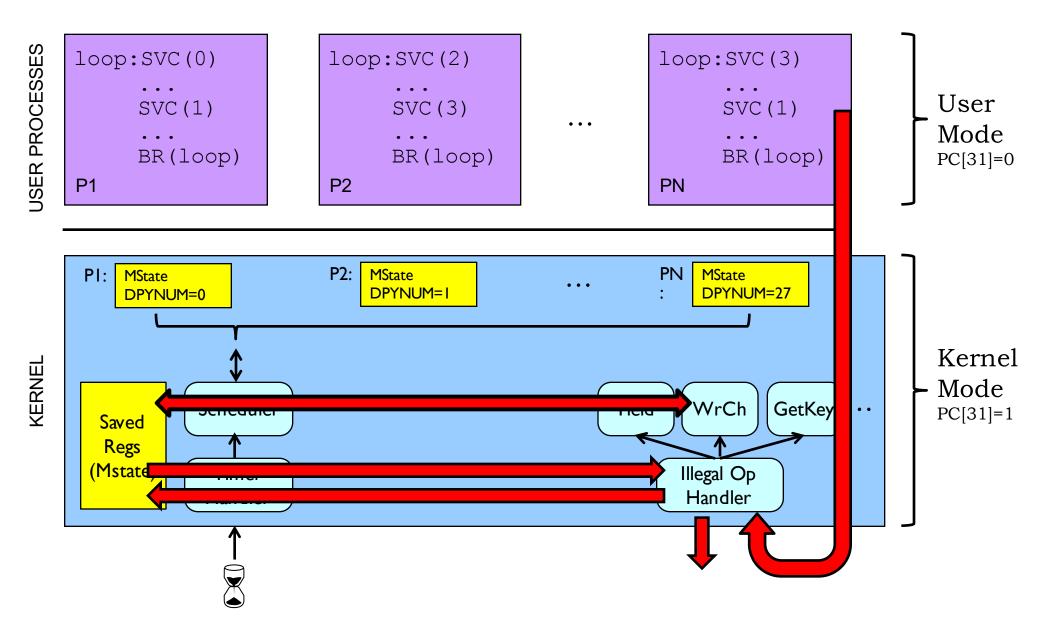

Handler for SVCs

SVC Instruction format

```
000001-
                                                  XXX
                                               SVC index
               SVC opcode
  // Sub-handler for SVCs, called from I_IllOp on SVC opcode:
  // SVC instruction is in RO, it's address is Reg[XP]-4
  SVC UUO:
      ANDC(r0,0x7,r1) // Pick out low bits,
      SHLC(r1,2,r1) // make a word index,
      LD(r1,SVCTb1,r1) // and fetch the table entry.
      JMP(r1)
  SVCTb1: UUO(HaltH) // SVC(0): User-mode HALT instruction
          UUO(WrMsgH) // SVC(1): Write message
          UUO(WrChH) // SVC(2): Write Character
Another
          UUO(GetKevH) // SVC(3): Get Key
          UUO(HexPrtH) // SVC(4): Hex Print
dispatch
          UUO(WaitH) // SVC(5): Wait(S), S in R3
table!
          UUO(SignalH) // SVC(6): Signal(S), S in R3
          UUO(YieldH) // SVC(7): Yield()
```


Returning to User-mode

```
// Alternate return from interrupt handler which BACKS UP PC,
// and calls the scheduler prior to returning. This causes
// the trapped SVC to be re-executed when the process is
// eventually rescheduled...
HaltH:
I Wait:
    LD(UserMState+(4*XP), r0) // Grab XP from saved MState,
   SUBC(r0, 4, r0) // back it up to point to
    ST(r0, UserMState+(4*XP)) // SVC instruction
YieldH:
   CALL(Scheduler) // Switch current process,
   BR(I_Rtn)
// Here's the common exit sequence from Kernel interrupt handlers:
// Restore registers, and jump back to the interrupted user-mode
// program.
I Rtn:
    restore_all_regs(UserMState)
    JMP(XP)
                              // Good place for debugging breakpoint!
```

Adding New SVCs

```
.macro GetTOD() SVC(8) // return time of today in RO
.macro SetTOD() SVC(9) // set time of day to value in RO
// Sub-handler for SVCs, called from I_IllOp on SVC opcode:
// SVC instruction is in RO, it's address is Reg[XP]-4
SVC UUO:
   ANDC(r0,0xF,r1) // Pick out low bits,
   SHLC(r1,2,r1) // make a word index,
   LD(r1,SVCTb1,r1)
                       // and fetch the table entry.
   JMP(r1)
SVCTb1: UUO(HaltH)
                       // SVC(0): User-mode HALT instruction
        UUO(WrMsgH)
                        // SVC(1): Write message
        UUO(WrChH)
                        // SVC(2): Write Character
                        // SVC(3): Get Key
        UUO(GetKevH)
                        // SVC(4): Hex Print
        UUO(HexPrtH)
        UUO(WaitH)
                        // SVC(5): Wait(S), S in R3
                        // SVC(6): Signal(S), S in R3
        UUO(SignalH)
                        // SVC(7): Yield()
        UUO(YieldH)
        UUO(GetTOD)
                        // SVC(8): return time of day
        UUO(SetTOD)
                        // SVC(9): set time of day
```

New SVC Handlers

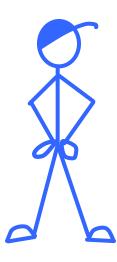

SVCs provide controlled access to OS services and data values and offer "atomic" (uninterrupted) execution of instruction sequences.