


(i) As a buffer amplifier. A buffer amplifier is a stage of amplification that isolates the preceding stage from the following stage. Because of the high input impedance and low output impedance, a *JFET* can act as an excellent buffer amplifier (See Fig. 19.41). The high input impedance of *JFET* means light loading of the preceding stage. This permits almost the entire output from first stage to appear at the buffer input. The low output impedance of *JFET* can drive heavy loads (or small load resistances). This ensures that all the output from the buffer reaches the input of the second stage.

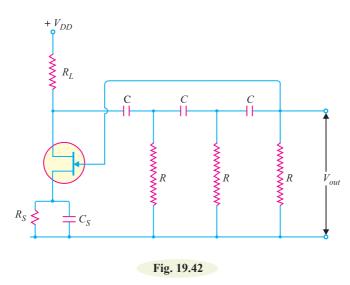

- (ii) Phase-shift oscillators. The oscillators discussed in chapter 14 will also work with *JFETs*. However, the high input impedance of *JFET* is especially valuable in phase-shift oscillators to minimise the loading effect. Fig. 19.42 shows the phase-shift oscillator using *n*-channel *JFET*.
- (iii) As RF amplifier. In communication electronics, we have to use *JFET RF* amplifier in a receiver instead of *BJT* amplifier for the following reasons:
- (a) The noise level of *JFET* is very low. The *JFET* will not generate significant amount of noise and is thus useful as an *RF* amplifier.
- (b) The antenna of the receiver receives a very weak signal that has an extremely low amount of current. Since *JFET* is a voltage controlled device, it will well respond to low current signal provided by the antenna.

19.27 Metal Oxide Semiconductor FET (MOSFET)

The main drawback of JFET is that its gate must be reverse biased for proper operation of the device i.e. it can only have negative gate operation for n-channel and positive gate operation for p-channel. This means that we can *only* decrease the width of the channel (i.e. decrease the *conductivity of the channel) from its zero-bias size. This type of operation is referred to as **depletion-mode operation. Therefore, a JFET can only be operated in the depletion-mode. However, there is a field effect transistor (FET) that can be operated to enhance (or increase) the width of the channel (with consequent increase in conductivity of the channel) i.e. it can have enhancement-mode operation. Such a FET is called MOSFET.

A field effect transistor (FET) that can be operated in the enhancement-mode is called a MOSFET.

A MOSFET is an important semiconductor device and can be used in any of the circuits covered for JFET. However, a MOSFET has several advantages over JFET including high input impedance and low cost of production.

19.28 Types of MOSFETs


There are two basic types of MOSFETs viz.

- 1. Depletion-type MOSFET or **D-MOSFET**. The D-MOSFET can be operated in both the depletion-mode and the enhancement-mode. For this reason, a *D-MOSFET* is sometimes called depletion/enhancement MOSFET.
- 2. Enhancement-type MOSFET or E-MOSFET. The E-MOSFET can be operated only in enhancement-mode.

The manner in which a MOSFET is constructed determines whether it is D-MOSFET or E-MOSFET.

- 1. **D-MOSFET.** Fig. 19.43 shows the constructional details of *n*-channel *D-MOSFET*. It is similar to *n*-channel *JFET* except with the following modifications/remarks:
- (i) The n-channel D-MOSFET is a piece of n-type material with a p-type region (called substrate) on the right and an insulated gate on the left as shown in Fig. 19.43. The free electrons (O it is n-channel) flowing from source to drain must pass through the narrow channel between the gate and the p-type region (i.e. substrate).
- (ii) Note carefully the gate construction of *D-MOSFET*. A thin layer of metal oxide (usually silicon dioxide, SiO₂) is deposited over a small portion of the channel. A metallic gate is deposited over the oxide layer. As SiO₂ is an insulator, therefore, gate is insulated from the channel. Note that the arrangement forms a capacitor. One plate of this capacitor is the gate and the other plate is the channel with SiO₂ as the dielectric. Recall that we have a gate diode in a *JFET*.
- (iii) It is a usual practice to connect the substrate to the source (S) internally so that a MOSFET has three terminals viz source (S), gate (G) and drain (D).
- (iv) Since the gate is insulated from the channel, we can apply either negative or positive voltage to the gate. Therefore, *D-MOSFET* can be operated in both depletion-mode and enhancement-mode. However, *JFET* can be operated only in depletion-mode.
- With the decrease in channel width, the X-sectional area of the channel decreases and hence its resistance increases. This means that conductivity of the channel will decrease. Reverse happens if channel width
- With gate reverse biased, the channel is depleted (i.e. emptied) of charge carriers (free electrons for n-channel and holes for p-channel) and hence the name depletion-mode. Note that depletion means decrease. In this mode of operation, conductivity decreases from the zero-bias level.

536 ■ Principles of Electronics

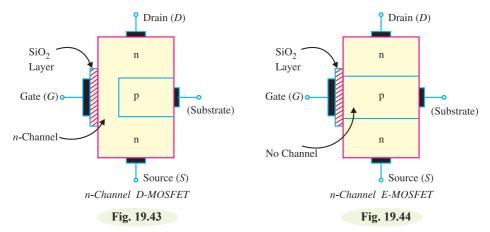

2. E-MOSFET. Fig. 19.44 shows the constructional details of *n*-channel *E-MOSFET*. Its gate construction is similar to that of *D-MOSFET*. The *E-MOSFET* has no channel between source and drain unlike the *D-MOSFET*. Note that the substrate extends completely to the SiO₂ layer so that no channel exists. The *E-MOSFET* requires a proper gate voltage to *form* a channel (called induced channel). It is reminded that *E-MOSFET* can be operated *only* in enhancement mode. In short, the construction of *E-MOSFET* is quite similar to that of the *D-MOSFET* except for the absence of a channel between the drain and source terminals.

Why the name MOSFET? The reader may wonder why is the device called MOSFET? The answer is simple. The SiO₂ layer is an insulator. The gate terminal is made of a metal conductor. Thus, going from gate to substrate, you have a metal oxide semiconductor and hence the name MOSFET. Since the gate is insulated from the channel, the MOSFET is sometimes called insulated-gate FET (IGFET). However, this term is rarely used in place of the term MOSFET.

19.29 Symbols for D-MOSFET

There are two types of *D-MOSFETs viz* (i) *n*-channel *D-MOSFET* and (ii) *p*-channel *D-MOSFET*.

(i) **n-channel D-MOSFET.** Fig. 19.45 (i) shows the various parts of *n*-channel *D-MOSFET*. The *p*-type substrate constricts the channel between the source and drain so that only a small passage


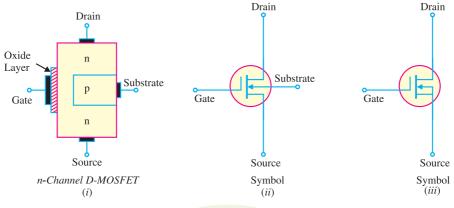


Fig. 19.45

remains at the left side. Electrons flowing from source (when drain is positive w.r.t. source) must pass through this narrow channel. The symbol for *n*-channel *D-MOSFET* is shown in Fig. 19.45 (ii). The gate appears like a capacitor plate. Just to the right of the gate is a thick vertical line representing the channel. The drain lead comes out of the top of the channel and the source lead connects to the bottom. The arrow is on the substrate and points to the *n*-material, therefore we have *n*-channel *D*-MOSFET. It is a usual practice to connect the substrate to source internally as shown in Fig. 19.45 (iii). This gives rise to a three-terminal device.

(ii) p-channel D-MOSFET. Fig. 19.46 (i) shows the various parts of p-channel D-MOSFET. The n-type substrate constricts the channel between the source and drain so that only a small passage remains at the left side. The conduction takes place by the flow of holes from source to drain through this narrow channel. The symbol for p-channel D-MOSFET is shown in Fig. 19.46 (ii). It is a usual practice to connect the substrate to source internally. This results in a three-terminal device whose schematic symbol is shown in Fig. 19.46 (iii).

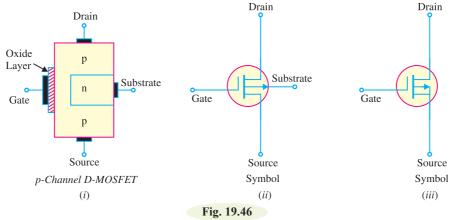

19.30 Circuit Operation of D-MOSFET


Fig. 19.47 (i) shows the circuit of n-channel D-MOSFET. The gate forms a small capacitor. One plate of this capacitor is the gate and the other plate is the channel with metal oxide layer as the dielectric. When gate voltage is changed, the electric field of the capacitor changes which in turn changes the resistance of the n-channel. Since the gate is insulated from the channel, we can apply either negative or positive voltage to the gate. The negative-gate operation is called *depletion mode* whereas positive-gate operation is known as enhancement mode.

(i) Depletion mode. Fig. 19.47 (i) shows depletion-mode operation of *n*-channel *D-MOSFET*. Since gate is negative, it means electrons are on the gate as shown is Fig. 19.47 (ii). These electrons *repel the free electrons in the n-channel, leaving a layer of positive ions in a part of the channel as shown in Fig. 19.47 (ii). In other words, we have depleted (i.e. emptied) the n-channel of some of its free electrons. Therefore, lesser number of free electrons are made available for current conduction through the n-channel. This is the same thing as if the resistance of the channel is increased. The greater the negative voltage on the gate, the lesser is the current from source to drain.

Thus by changing the negative voltage on the gate, we can vary the resistance of the *n*-channel and hence the current from source to drain. Note that with negative voltage to the gate, the action of D-MOSFET is similar to JFET. Because the action with negative gate depends upon depleting (i.e. emptying) the channel of free electrons, the negative-gate operation is called depletion mode.


If one plate of the capacitor is negatively charged, it induces positive charge on the other plate.

538 ■ Principles of Electronics

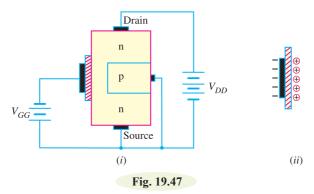

(ii) Enhancement mode. Fig. 19.48 (i) shows enhancement-mode operation of *n*-channel *D-MOSFET*. Again, the gate acts like a capacitor. Since the gate is positive, it induces negative charges in the *n*-channel as shown in Fig. 19.48 (ii). These negative charges are the free electrons drawn into the channel. Because these free electrons are added to those already in the channel, the total number of free electrons in the channel is increased. Thus a positive gate voltage *enhances* or *increases* the conductivity of the channel. The greater the positive voltage on the gate, greater the conduction from source to drain.

Thus by changing the positive voltage on the gate, we can change the conductivity of the channel. The main difference between *D-MOSFET* and *JFET* is that we can apply positive gate voltage to *D-MOSFET* and still have essentially *zero current. Because the action with a positive gate depends upon *enhancing* the conductivity of the channel, the positive gate operation is called *enhancement mode*.

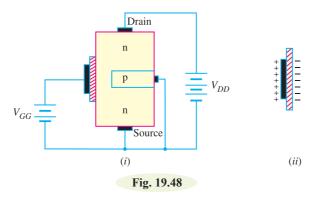

The following points may be noted about *D-MOSFET* operation :

- (i) In a *D-MOSFET*, the source to drain current is controlled by the electric field of capacitor formed at the gate.
- (ii) The gate of *JFET* behaves as a reverse-biased diode whereas the gate of a *D-MOSFET* acts like a capacitor. For this reason, it is possible to operate *D-MOSFET* with positive or negative gate voltage.
 - (iii) As the gate of *D-MOSFET* forms a capacitor, therefore, negligible gate current flows whether
- Note that gate of *JFET* is always reverse biased for proper operation. However, in a *MOSFET*, because of the insulating layer, a negligible gate current flows whether we apply negative or positive voltage to gate.