

RINCON ULLOA YAZMIN ELIZABETH Lab – RESTCONF with Postman

Objectives

Part 1: Setup HTTP Headers in Postman

Background / Scenario

RESTCONF is a RESTful API interface that provides a programmatic interface for accessing data defined in YANG device models.

In this lab, you will learn how to interact with the RESTCONF interface using the Postman application to retrieve the device's configuration, update and create new interfaces and retrieve operation data.

Required Resources

- Postman
- Access to a router with the IOS XE operating system version 16.6 or higher.

Instructions

Part 1: Setup HTTP headers and Authentication in Postman

In this part, you will setup the HTTP Headers in Postman to work with RESTCONF REST API interfaces.

Step 1: Configure Postman.

Configure a Postman setting.

- a. Open Postman and create a new tab if necessary.
- b. Click File > Settings.
- c. Under the **General** tab, set the **SSL certificate verification** to **OFF**. Close the **Settings** dialog box.

Step 2: Select the method and enter the required URL.


- a. Next to the URL box, select the request method to be GET.
- b. Enter the URL for API endpoint: https://192.168.56.101/restconf/ (adjust the IP address to match the router's current address)

Step 3: Enter the authentication header information.

- a. Below the URL input field, select Authorization.
- b. Select the type **Basic Auth** and enter the username and password for authenticating to the RESTCONF API service:

```
cisco
cisco123!
```


c. Click on the **Preview Request** to add the Authentication header to the Headers.

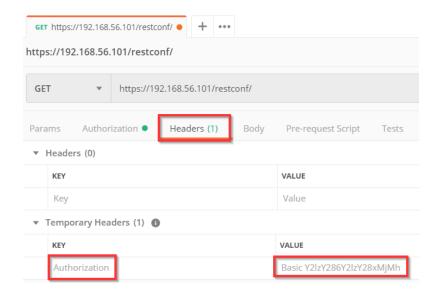

Step 4: Enter the additional Headers.

- a. Next, below the URL input field, select **Headers**.
- b. Under **Headers**, click the **New key** field under the **Key** column and enter **Content-Type** to define what is the encoding of data that are sent with Postman in the REST API request.
- c. Next again under **Headers**, click the **New key** field under the **Key** column and enter **Accept** to define in what encoding you wish to receive back the data replies from the REST API request.


d. In the value columns, enter application/yang-data+json when sending or receiving data that are in JSON encoding. When sending or receiving data in XML encoding (default), use application/yang-data+xml.

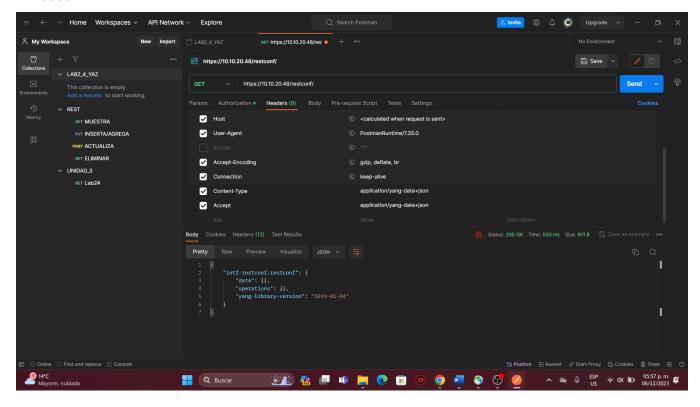

Step 5: Send the request.

- a. Click Send.
- b. After a brief delay, you should see the response appear below the request information. Scroll down, if necessary to view the response data.
- c. When the Accept header was set to application/yang-data+json the response consists of JSON encoded data.
- d. Uncheck the Accept header, or change it to application/yang-data+xml (default behavior when no Accept header is defined) and click on **Send**. Now the response consists of XML encoded data:

Note: If there is an error, check the Status of the request. Check the meaning of the status code. 200 means success. A 404 error may mean that the URL was entered incorrectly. A 401 or 403 error could indicate a problem with the authentication, so check that the credentials are entered correctly.

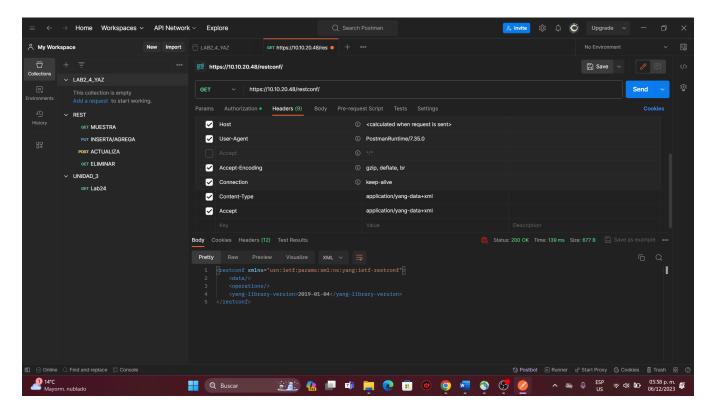


Part 2: Retrieve Interface Configuration

Step 1: Retrieve YANG data in XML.


- a. Duplicate the existing REST API request in Postman by right clicking on the request and selecting Duplicate Tab to create a new request with prefilled existing Headers:
- b. In the URL for the API endpoint, enter after the host and port portion:

 /restconf/data/ietf-interfaces:interfaces to retrieve data defined in the ietf-interfaces

 YANG model in the interfaces container.
- c. Click **Send** to send the RESTCONF API request. With unchecked **Accept** header or the **Accept** header set to application/yang-data+xml, the result YANG data are returned in XML encoding.

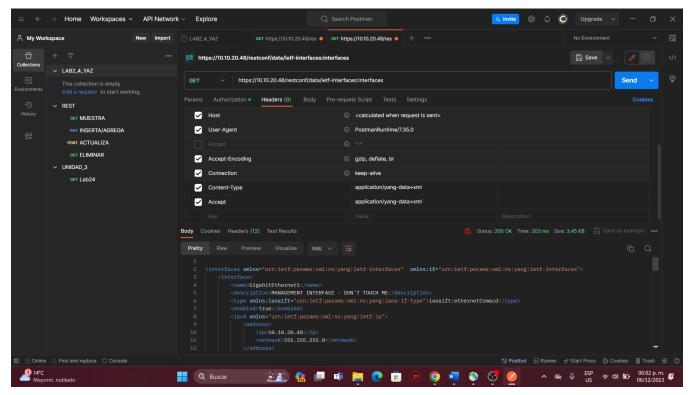


d. Check the Accept header and set it to application/yang-data+json to receive YANG data formatted in JSON encoding.

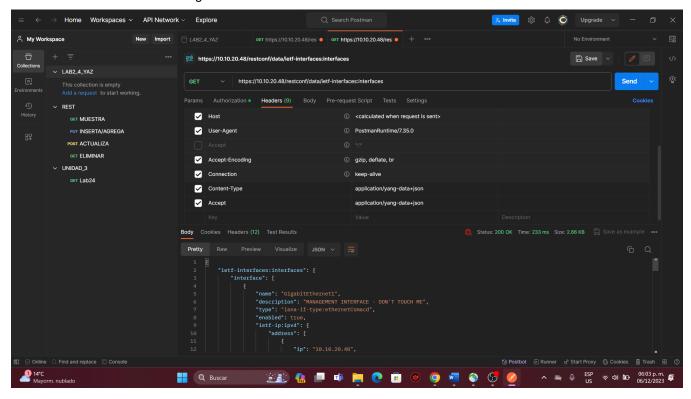


Step 2: Retrieve information about a single interface

- a. In the URL for the API endpoint, enter after the host and port portion: /restconf/data/ietf-interfaces:interfaces/interface=Loopback1 to retrieve data for the Loopback1 interface only.
- b. Click Send ...

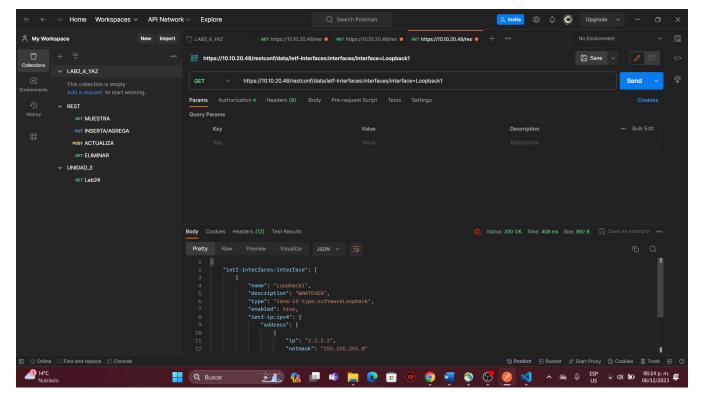

Step 3: Retrieve operation data

a. Change the RESTCONF API Endpoint to retrieve operation and statistical data about the interfaces. You can use the "pyang" tool to discover what container in the **ietf-interfaces** YANG model includes the operational and stats data.

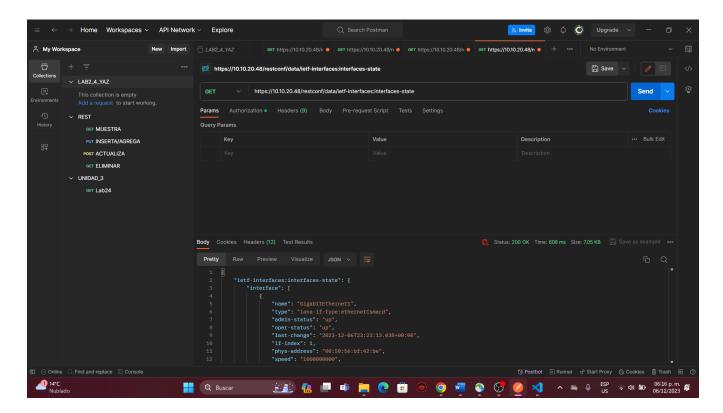


b. What is the new URL?


https://10.10.20.48/restconf/data/ietf-interfaces:interfaces-state

Part 3: Update Interface Configuration


- a. Duplicate the existing REST API request in Postman by right clicking on the request and selecting Duplicate Tab to create a new request with prefilled existing Headers.
- b. In the URL for the API endpoint, change the method from **GET** to **PUT** and enter after the host and port portion: /restconf/data/ietf-interfaces:interfaces/interface=Loopback99 to create a new interface **Loopback99**.

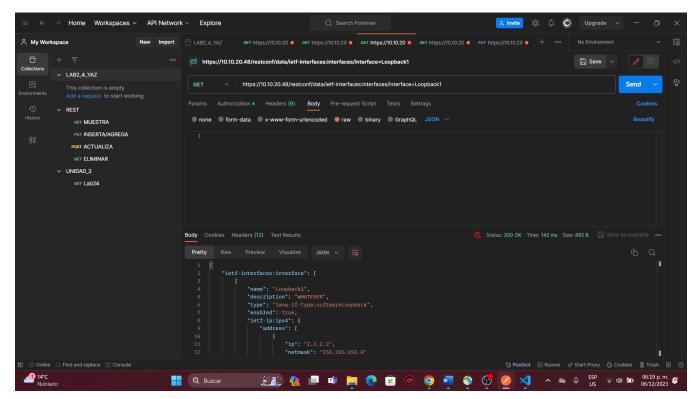


c. In the Body part of the request, enter the YANG data you want to apply to the device's configuration (copy, paste and customize the JSON data from the previous GET request on Loopback1 – change the interface name and IP address).

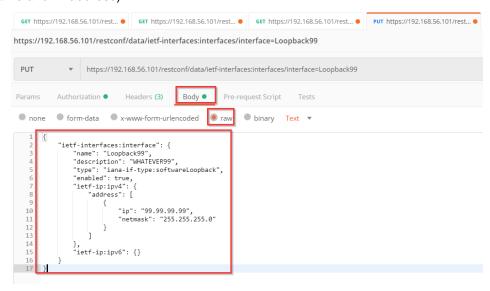

d. Click **Send** to create a new interface Loopback99 with the IP address 99.99.99.99/24.

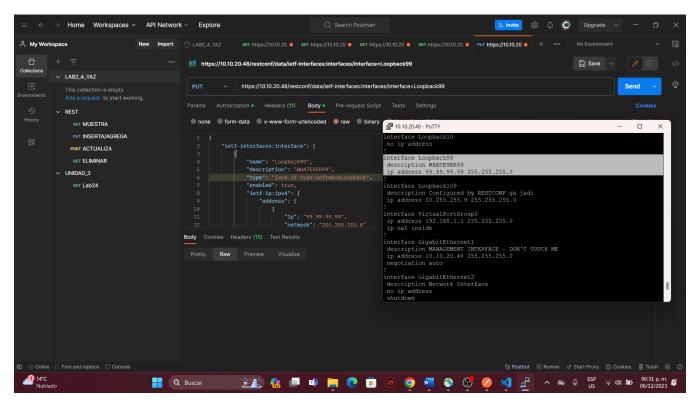

- e. In the Output (scroll down), you should see the HTTP Error code 201 Created indicating that the new interface has been created:
- f. Verify using the IOS CLI that the new Loopback99 interface has been created (sh ip int brief).
- Update the RESTCONF API request to delete the interface Loopback99.

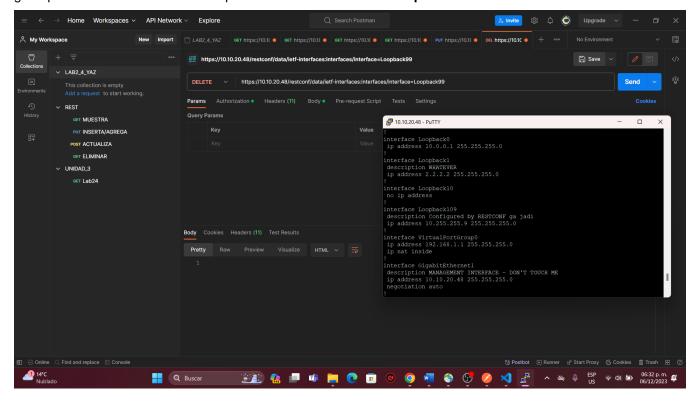

h. What changes were needed to be made in the RESTCONF request to delete the interface?

Duplique el archive que genera la Loopback99 y cambie el PUT por un DELETE para que en está ocación eliminara la loopback.