

Redundancy in Fault Tolerant Computing

Redundancy in fault tolerant computing

HARDWARE REDUNDANCY

Physical replication of hw (the most common form of redundancy)

The cost of replicating hw within a system is decreasing because the costs of hw is decreasing

INFORMATION REDUNDANCY

Addition of redundant information to data in order to allow fault detection and fault masking

TIME REDUNDANCY

Attempt to reduce the amount of extra hw at the expense of using additional time

SOFTWARE REDUNDANCY

Tolerating faults in software

D. P. Siewiorek R.S. Swarz, Reliable Computer Systems, Prentice Hall, 1998

(INTERNET ARCHIVE - https://archive.org/details/reliablecomputer00siew)

HARDWARE REDUNDANCY

Hardware redundancy

Passive fault tolerance techniques

- use **fault masking** to hide the occurrence of faults
- rely upon voting mechanisms to mask the occurrence of faults
- do not require any action on the part of the system / operator
- generally do not provide for the detection of faults

Active fault tolerance techniques


- use redundancy in a dynamic way: fault detection, location and recovery
- detect the existence of faults and perform some actions to remove the faulty hw from the system
- require the system to perform reconfiguration in response to failures (most of the cases disconnect the faulty component)
- common in applications where temporary, erroneous results are acceptable while the system reconfigures (e.g, satellite systems)

Hybrid approach

- fault masking is used as part of the dynamic redundancy scheme
- often used in critical computations in which fault masking is required to prevent momentary errors and high reliability must be achieved
- very expensive

Passive fault tolerance technique:TMR

1. Triple Modular Redundancy (TMR) – fault masking

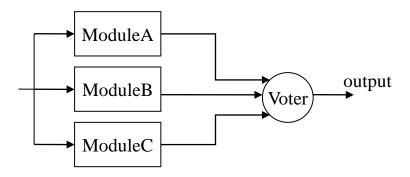

TMR: tolerates 1 faulty module

Triplicate the hw (processors, memories, ..) and perform a majority vote to determine the output

- 2/3 of the modules must deliver the correct results
- effects of faults neutralised without notification of their occurrence
- masking of a failure in any one of the three copies


Good for transient faults

For permanent faults, since the faulty module is not isolated, the fault tolerance decreases

Some compensating failures tolerated

e.g. memory location 127@ModuleA, memory location 153@ModuleB

Cascading TMR with triplicated voters

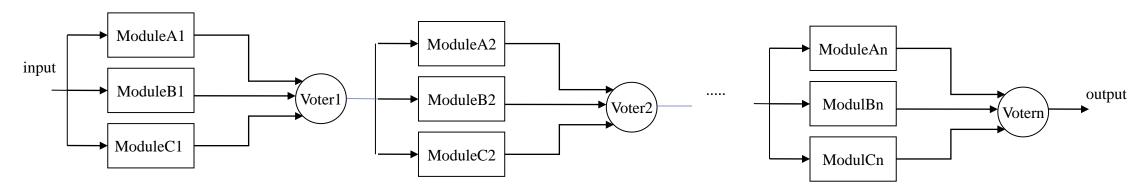

Cascading series of TMR modules

The effect of partitioning of modules (A, B, C) is that the design can withstand more failures than the solution with only one large triplicated module

The partition cannot be extended to arbitrarily small modules, because reliability improvement is bounded by the reliability of the voter

Voter is a single point of failure

Make the Voter more reliable through fault avoidance and fault tolerant techniques

TMR: the Voter

Majority voting is normally performed on a bit-by-bit basis

Digital voters are bit voters that compute the majority on n input bits.

Optimal designs of hardware voters with respect to circuit complexity, number of logic levels, fan-in and fan-out and power dissipation


Difficulties

Delay in signal propagation (decrease in performance):

- due to the voter
- due to multiple copies synchronisation

Trade-off: achieved fault tolerance vs hw required

1 bit Voter on 3 input bits

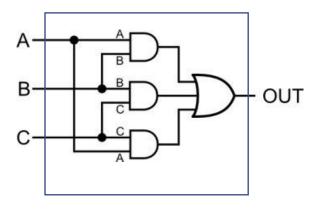

$$OUT = AB + BC + AC$$

Problems with voting procedure on analog signals

performing bit-by-bit voting on the digital output of multiple analog to digital converters is not satisfactory

The three results from the analog to digital converters may not completely agree, for example, they could produce a result which differs for the least-significant bit even if the exact signal is passed through the same converter

perform voting in the analog domain:

```
> average the three signals (mean instantaneous value)
```

- -> choose the mean of the two most similar signals
- → choose the median of the three signals (pseudo voting)

N-Modular Redundancy

2. NMR – extension of the TMR concept to N Modules

N is made an odd number


Coverage:

m faulty modules, with N = 2m + 1

5MR: tolerates 2 faulty modules

7MR: tolerates 3 faulty modules

•••••

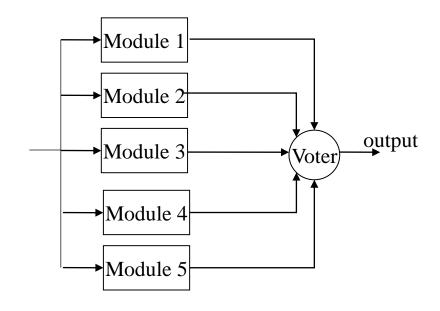


Active hw redundancy

1. Duplication with comparison scheme (Error detection)

Two identical pieces of hw (Module1 and Module 2) are employed

- they perform the same computation in parallel
- when a failure occurs, the two outputs are no more identical and a simple comparison detects the fault
- Error signal

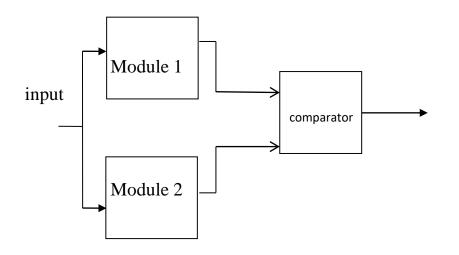

Only disagreement can be determined in the presence of a fault and an error is reported

Assumption:

the two copies must be unlikely to be corrupted together in the same way

Active hw redundancy: the comparator

Problems

- need to check if the output is valid. The comparator may not be able to perform an exact comparison, depending on the application area (control applications)
- faults in the comparator may cause an error indication when no error exists (false postive) or possible faults in duplicated modules are never detected (false negative)

Coverage

detects all single faults except those of the comparator

Advantages

 simplicity, low cost, low performance impact of the comparison technique, applicable to all levels and areas


Active hw redundancy

2. Reconfigurable Duplication

(Error detection, fault identification, disconnet the faulty module and disable the comparison)

Two identical pieces of hw (Module1 and Module 2) are employed

- they perform the same computation in parallel
- when a failure occurs, the two outputs are no more identical and a simple comparison detects the fault
- then the comparator (hw component) selects the correct output

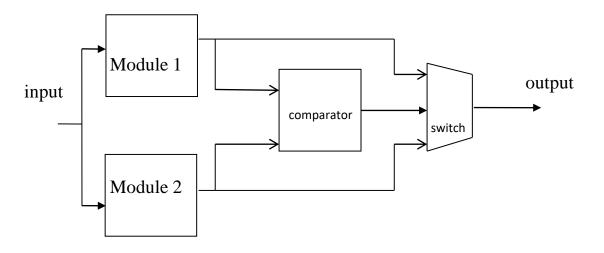

Dual-modular redundancy (also Duplex system)

the comparator must select the correct value if a disagreement is detected

Active hw redundancy: the comparator

The comparator applies checks to select the correct output

Types of checks

- -Coding
- -Self-checking components
- -Reversal Checks
- -Reasonableness Checks
- -Specification checks

-....

Ability to determine which of the two modules is faulty

Ability to disconnect the faulty module and disable of the comparator

Active hw redundancy: the comparator

Problems

- need to check if the output is valid. The comparator may not be able to perform an exact comparison, depending on the application area (control applications)
- faults in the comparator may cause an error indication when no error exists (false postive) or possible faults in duplicated modules are never detected (false negative)

Coverage

detects all single faults except those of the comparator

Advantages

 simplicity, low cost, low performance impact of the comparison technique, applicable to all levels and areas

Active redundancy


3. Stand-by sparing

(error detection, identification of the faulty module, reconfiguration)

Part of the modules are operational, part of the modules are spares modules (used as replacement modules)
The switch can decide no longer use the value of a module (fault detection and localization). The faulty module is removed and replaced with one of the spares.

- hot spares
 the spares operate in synchrony with the on line modules,
 and they are prepared to take over
- warm spares the spares are running but receive inputs only after switching
- cold spares
 the spares are unpowered until needed to replace a faulty module


As long as the outputs agree, the spares are not used

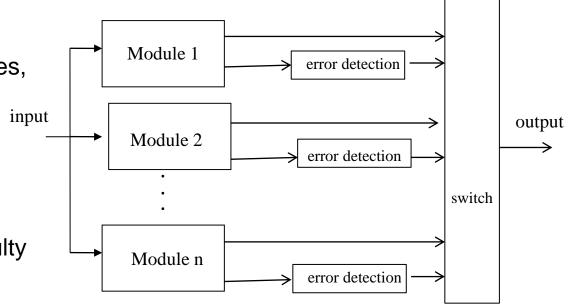

Different schemes can be implemented

Pair-and-spare approach

- A module is a duplex system, pairs connected by a comparator
- Duplex systems are connected to spares by a switch
- As long as the two outputs agree, or the comparator can detect the right value, the spare is not used.
- Otherwise, the comparator signals the switch that it is not able to compute the right value and the switch operates a replacemnet using the spare.

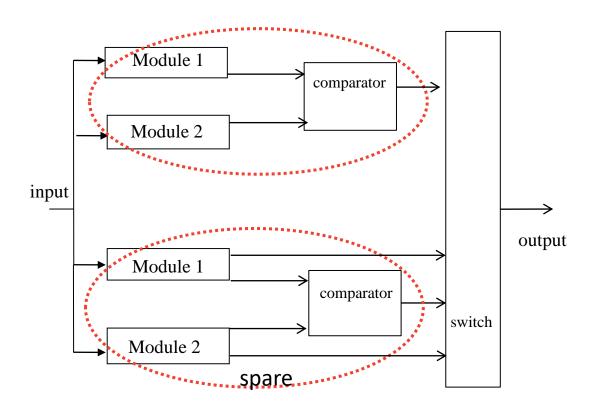

Pair results are used in a spare arrangment. Spare components at coarser granularity. Not all four copies must be synchronised (only the two pairs)

Hybrid approaches

Combine both the active and passive approaches

Very expensive in terms of the amount of hw required to implement a system

Applied in commercial systems, safety critical system (aviation, railways, ...)

NMR disadvantage: fault masking ability deteriorates as more copies fail - Replace failed copies with unused spares (hybrid redundancy)

Reconfigurable NMR

Modules arranged in a voting configuration

- spares to replace faulty units
- rely on detection of disagreements and determine the module(s) not agreeing with the majority

Reconfigurable NMR


- N redundant modules configuration (active modules)
- Voter (votes on the output of active modules)
- The Fault detection units
 - 1) compares the output of the Voter with the output of the active modules
 - 2) replaces modules whose output disagree with the output of the voter with spares

Reliablity

as long as the spare pool is not empty

Coverage

TMR with one spare can tolerate 2 faulty modules (mask the first faulty module; replace the module; mask the second faulty module)

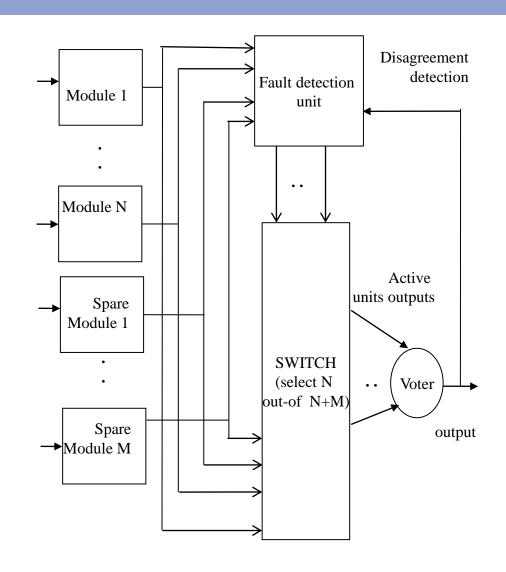

Hw redundancy techniques: summary

Key differences

Passive: rely on fault masking

Active: rely on error detection, fault location and recovery

Hybrid: emply both masking and recovery

- **Passive** provides fault masking but requires investment in hw (5MR can tolerate 2 faulty modules)
- Active has the disadvantage of additional hw for error detection and recovery, sometimes it can produce momentary erroneous outputs
- **Hybrid** techniques have the highest reliability but are the most costly (3MR with one spare can tolerate 2 faulty modules)

INFORMATION REDUNDANCY

Coding

Coding: application of redundancy to information

Information is represented with more bits that strictly necessary: says, an n-bit information chunk is represented by


n+c= m bits

Among all the possible 2^m configurations of the m bits, only 2ⁿ represent acceptable values (code words)

if a non-code word appears, it indicates an error in transmitting, or storing, or retrieving ...

Parity code – odd parity

for each unit of data, e.g. 8 bits, add a parity bit so that the total number of 1's in the resulting 9 bits is odd

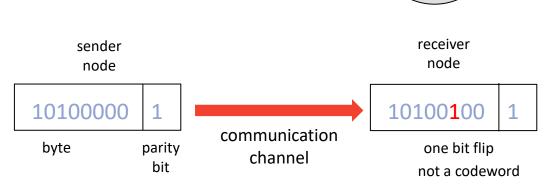

Set of all

possible words

Set of

code words

Invalid

 $2^{m} - 2^{n}$

representations:

2^m

Two bit flips are not detected

Coding

Codes

encoding: the process of determining the c bit configuration for a n bit data item

decoding: the process of recovering the original n bit data from the m total bit

Separable code: a code in which the original information is appended with new information to form the code word. The decoding process consists of simply removing the additional information and keeping the original data


Nonseparable code: requires more complicated decoding procedures

Parity code is a separable code

Additional information can be used for error detection and for error correction


Examples of codes

Parity-code (odd parity)

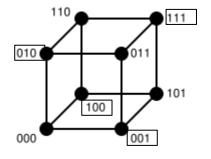

- 3-bit words
- 8 possible words
- 4 code words

boxed words are code words in the figures

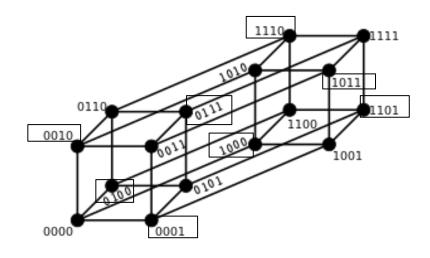


- 4-bit words
- 16 possible words
- 8 code words

Examples of codes


CD - complemented duplication

join n bit value with its complement complment(n) the second half is the complemented duplication of the first half

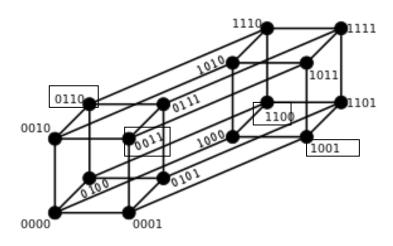

4-bit words
16 possible words
4 code words:
{0011, 0110, 1001, 1100}

m/n code - m bit equal to 1 2/4 code

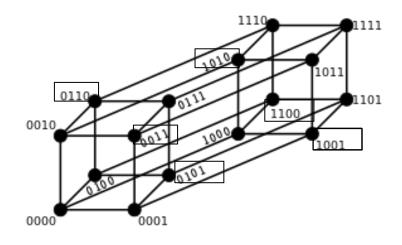

4-bit words
16 possible words
6 code words:
{1001, 1010, 1100, 0110, 0011, 0101}

Hamming distance

Hamming distance

- the number of bit positions on which two code words differ

Minimum Hamming distance found between any two code words is the number of independent single bit errors that the code can detect

A code such that the Hamming distance between two code words is > k will detect all errors up to k bits


Memories of computer systems.

Parity bit added before writing the memory. Parity bit is checked when reading.

Useful distance measures depend on type of data and faults

Bank account numbers should be such that mistyping a digit does not credit the wrong account.

each edge of the cube represents a distance-1 transition

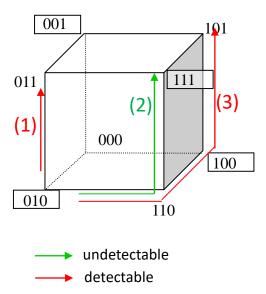

Parity-code Hamming distance 2

Codes for error correction

Minimum Hamming distance:
minimum distance between two code words


A code with the minimum Hamming distance is k

- detect up to k-1 single bit errors
- correct up to d errors, where k = 2d + 1

Hamming distance 3:

detects 1 or 2 bits errors

correct 1 bit error

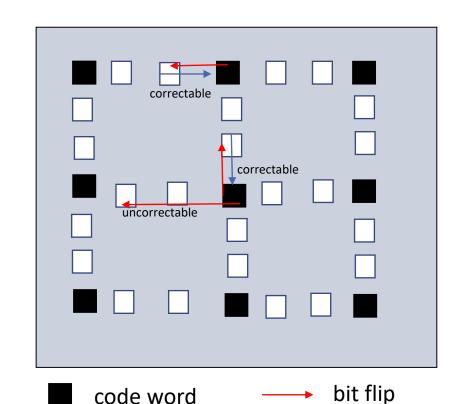


The corrupted data is closer to the correct data than to any other code word

Checksumming

- applied to large block of data in memories
- coverage: single fault

checksum for a block of n words is formed by adding together all of the words in the block modulo-k, where k is arbitrary (one of the least expensive method)

- the checksum is stored with the data block
- when blocks of data are transferred (e.g. data transfer between mass-storage device) the sum is recalculated and compared with the checksum
- checksum is basically the sum of the original data

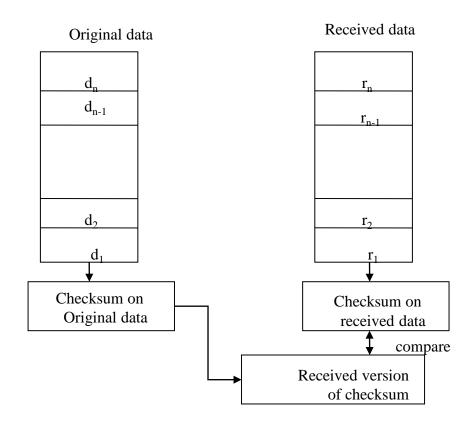

Code word = block + checksum

Checksumming


Disadvantages

- if any word in the block is changed, the checksum must also be modified at the same time
- allow error detection, no error location: the detected fault could be in the block of s words, the stored checksum or the checking circuitry
- single point of failures for the comparison and encoder/detector element
- Different methods differ for how summation is executed

Arithmetic codes

An arithmetic code guarantees that

if inputs are code words and the operation is performed correctly results are code words too

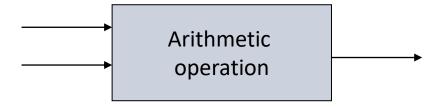

Implementation of the arithmetic operation (hardware or software) must be modified to operate on the code

The set of code words of an arithmetic code A is closed with respect to a specific set of operations.

$$A(b*c) = A(b) * A(c)$$
 where * is one of a set of operations


3N codes

Multiply the data by 3 (this add 2 bits of redundancy)

Error checking is performed by confirming that the received word is divisible by 3

Error correcting codes -ECC

Two-dimensional parity

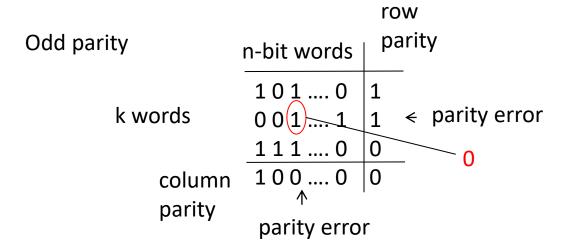

Error location is possible for single-bit error: one error in the row parity vector, one error in the column parity vector

A single-bit error in the parity column or parity row column is detected

Single-error correcting code (SEC): detect and correct 1-bit error

Hamming Code (I)

Parity bits spread through all the data word

Bit position		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
Encoded dat	a bits	p1	p2	d1	p4	d2	d3	d4	p8	d5	d6	d7	d8	d9	d10	d11	p16	d12	d13	d14	d15	
	p1	X		X		X		X		X		X		X		X		X		X		
Parity	p2		X	X			X	X			X	X			X	X			X	X		
bit coverage	p4				X	X	X	X					X	X	X	X					X	
	р8								X	X	X	X	X	X	X	X						
	p16																X	X	X	X	X	

Taken from: http://en.wikipedia.org/wiki/Hamming_code#Hamming_codes

Parity bits

all bit positions that are powers of two: 1, 2, 4, 8, etc.

Data bits


all other bit positions

(number the bit positions starting from 1: bit 1, 2, 3, etc..)

Parity bit pj covers all bits whose position has the j least significant bit equal to 1

Each data bit is included in a unique set of 2 or more parity bits, as determined by the binary form of its bit position

Hamming code (II)

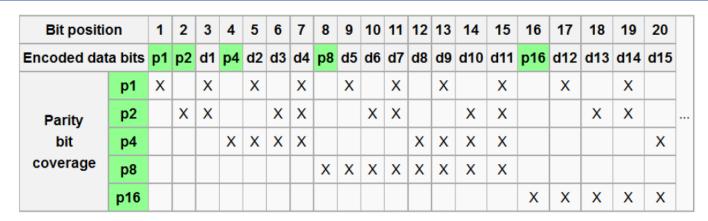

Taken from: http://en.wikipedia.org/wiki/Hamming_code#Hamming_codes

Parity bit p1 covers all bit positions which have the least significant bit set:

bit 1 (the parity bit itself), 3, 5, 7, 9, etc.

Parity bit p2 covers all bit positions which have the second least significant bit set:

bit 2 (the parity bit itself), 3, 6, 7, 10, 11, etc.

Parity bit 4 covers all bit positions which have the third least significant bit set:

bits 4-7, 12-15, 20-23, etc.

Parity bit 8 covers all bit positions which have the fourth least significant bit set:

bits 8–15, 24–31, 40–47, etc.

Hamming code (III)

Parity bits	Total bits Data bits		Name	Rate				
2	3	1	Hamming(3,1) (Triple repetition code)	1/3 ≈ 0.333				
3	7	4	Hamming(7,4)	4/7 ≈ 0. 571				
4	15	11	Hamming(15,11)	11/15 ≈ 0.733				
5	31	26	Hamming(31,26)	26/31 ≈ 0.839				
	-		***					
m	$2^{m}-1$	$2^{m} - m -$	1 Hamming $(2^m-1,2^m-m-1)$	$(2^m - m - 1)/(2^m - 1)$				

Taken from: http://en.wikipedia.org/wiki/Hamming_code#Hamming_codes

Overlap of control bit: a data bit is controlled by more than one parity bits

Minimum Hamming distance: 3

Double-error detection code Single-error correction code

⇒ SEC-DED code

Self checking circuitry

Necessity of reliance on the correct operation of **comparators** and **code checkers** that are used as hard-core for fault tolerant systems

Self-checking circuit

given a set of faults, a circuit that has the ability to automatically detect the existence of the fault and the detection occurs during the normal course of its operations

Typically obtained using coding techniques: circuit inputs and outputs are encoded (also different codes can be used)

Basic idea:

- fault free + code input -> output: correct code word
- fault + code input -> output: (correct code word) or (non code word)

Self checking circuitry

- Self-testing circuit: if, for every fault from the set, the circuit produces a noncode output for at least one code input (each single fault is detectable)
- Fault-secure circuit: if, for every fault from the set, the circuit never produces a incorrect code output for a code input (i.e. correct code output or noncode output)
- Totally self-checking (TSC): if the circuit is self-testing and faultsecure


two-input TSC comparator

two signal input comparator (A, B) output equal to 0 if inputs are equal; 1 otherwise

Fault assumption:

- single fault
- stuck-at-1/stuck-at-0 of each line in the circuit

Coding: 1/2 (dual-rail signal: coded signal whose two bits are always complementary)

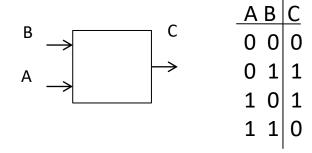


A: A1 A2

0: 0 1 1:10

output 0 if inputs are equal; 1 otherwise

Fault free
A =0, B =1 different input
m=1, n =1, q=0
o = 0, p=1, r= 1
c2=0
c1=1
c1c2: code word
Output = c1 = 1 correct

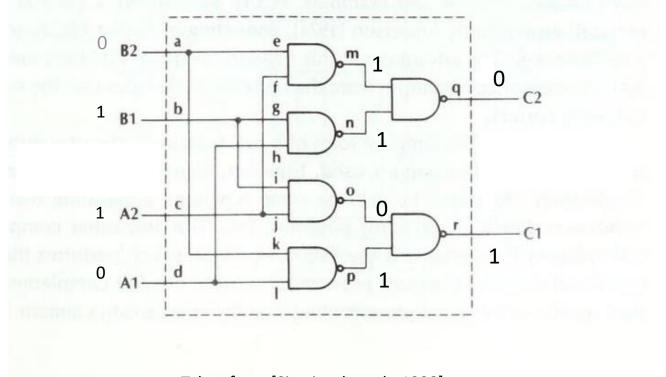

Taken from:[Siewiorek et al., 1998]

output 0 if inputs are equal; 1 otherwise

Faulty:

A=0, B=1 different input


m: stuck-at-0

c2 = 1

c1 = 1

c1c2: non code word

Output = error

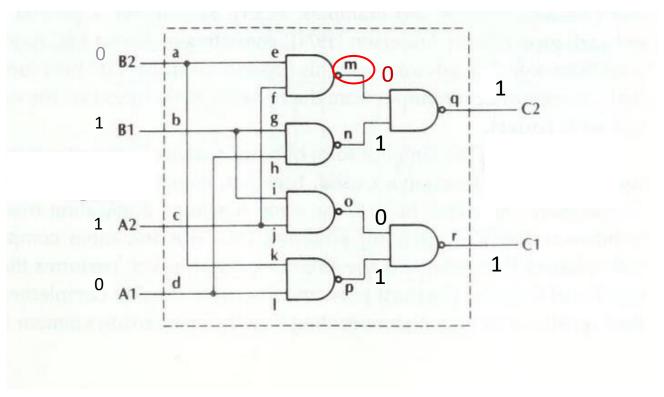

Taken from:[Siewiorek et al., 1998]

output 0 if inputs are equal; 1 otherwise

Faulty:

A=0, B=1 different input


m: stuck-at-1

c2=0


c1=1

c1c2: code word

output = c1 = 1 correct

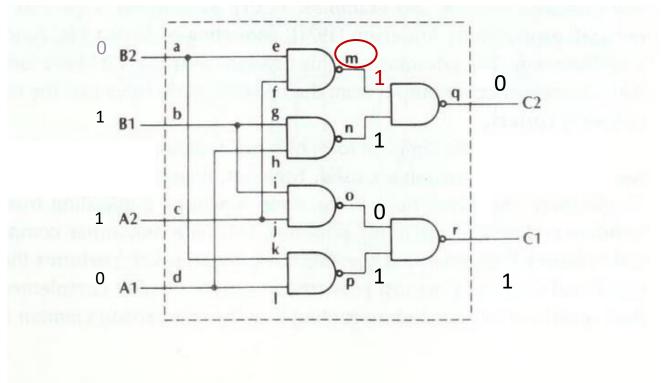


Taken from:[Siewiorek et al., 1998]

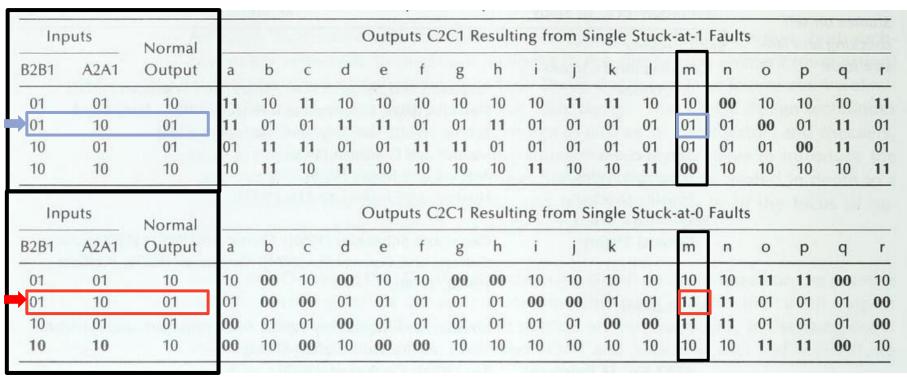

Taken from: [Siewiorek et al., 1998]

- For each fault, there exists at least one input configuration such that the output is a non code word
- If the output is a code word, the output is correct

n-input TSC comparator:
 tree of two input self checking comparators

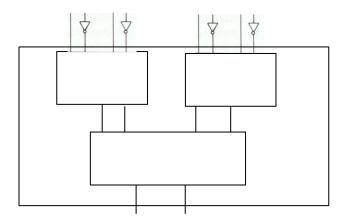


TIME REDUNDANCY

Time redundancy techniques (I)

Attempt to reduce the amount of extra hw at the expense of using additional time

- Repetition of computations
 - compare the results to detect faults
 - re-execute computations (disagreement disappears or remains)
 good for transient faults
 no protection against permanent fault
 - problem of guaranteeing the same data when a computation is executed

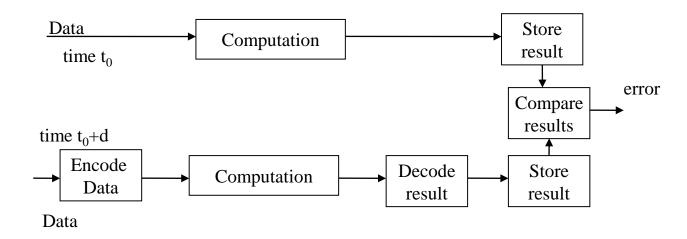

Time redundancy techniques (II)

Use a minimum of extra hw to detect also permanent faults
 encode data before executing the second computation

Example: data transmitted over a parallel bus

- stuck at of a line of the bus

t0: transmit original data

t0+d: transmit complement data

When a fault occurs: received data not complements of each other

Transmission error free, each bit line alternate between a logic 1 and a logic 0 (alternating logic)

SOFTWARE REDUNDANCY

Faults in the software

Software is subject to



design flaws:

- mistakes in the **interpretation of the specification** that the software is supposed to satisfy (ambiguities)
- mistakes in the **implementation of the specification**: carelessness or incompetence in writing code, inadequate testing

operational faults:

incorrect or unexpected usage faults (operational profile)

Faults in the software

Design flaws:

hard to visualize, classify, detect, and correct.

closely related to human factors and the design process, of which we don't have a solid understanding

only some type of inputs will exercise that fault to cause failures. Number of failures depend on how often these inputs exercise the sw flaw

apparent reliability of a piece of software is correlated to how frequently design faults are exercised as opposed to number of design faults present

Software redundancy

Due to the large cost of developing software, most of the software dependability effort has focused on fault prevention techniques and testing strategies

Multi-version approaches

replicate the software mainly used in safety-critical systems (due to cost)

Multi-version approaches

Software diversity

a simple duplication and comparison procedure will not detect software faults if the duplicated software modules are identical

Independent generation of $N \ge 2$ functionally equivalent programs, called *versions*, **from the same initial specification**.

Upon disagreement among the versions?


- retry or restart (fault containment)
- trasition to a predefined safe state
- reliance on one of the versions

N-version programming (I)

independently developed versions of **design** and **code**

Technique: independent design teams using different design methodologies, algorithms, compilers, run-time systems and hardware components

- vote on the N results produced

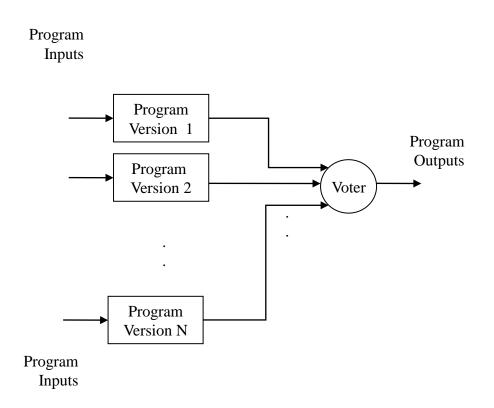

N-version programming (II)

Disadvantages

- -cost of software development
- -cost of concurrent executions
- -potential source of correlated errors, such as the original specification.

Specification mistakes: not tolerated

Practical problem

in implementing the software Voter for comparing the results generated by the copies because of the differences in compilers, numerical techniques and format conversions.

N-version programming (II)

Software voter (single point of failure)

- not replicated: must be simple and verifiable
- must assure that the input data vector to each of the versions is identical
- must receive data from each version in identical formats or make efficient conversions must implement some sort of communication protocol to wait until all versions complete their processing or recognize the versions that do not complete

N-self-checking programming


based on acceptance tests rather than comparison with equivalent versions

N versions of the program are written

- each version is running simultaneously and includes its acceptance tests

The selection logic chooses the results from one of the programs that passes the acceptance tests

Tolerates N-1 faults (independent faults)

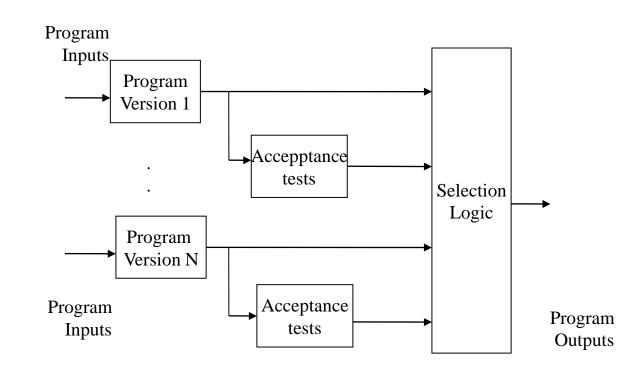

Design diversity

Design diversity

- 1. Cannot adopt the hardware analogy and assume versions fail independently
- Empirical evidence that there will be common faults
 There is evidence that diversity delivers some improvement over single versions
- 3. Related faults may result from dependencies in the separate designs and implementations (example: specification mistakes)

Design diversity

Functional diversity

Assign to independent software versions diverse functions that compute the same task

For example, in a plant, diverse measurement signals, actuators and functions exists to monitoring the same phenomenon

Diverse functions

for example, functions that ensure independently that the plant safety targets are met.

Recovery-block technique

test

based on an one acceptance test and a single alternate is run at a time

Basic structure:

By P

else by Q

else error

Acceptance

Accettability of the result is decided by an acceptance test T. Primary alternate P, secondary alternates Q

- 1. variables global to the block automatically checkpointed if they are altered within the block
- 2. the primary alternate is executed and subjected to an acceptance test to detect any error in the result.


 If the test is passed, the block is exited; otherwise the content of the recovery cache pertinent to the block is reinstated, and the second alternate is executed.
- 3. This cycle is executed until either an alternative is successful or no more alternatives exist. In this last case an error is reported.

Recovery-block technique

Combines elements of checkpointing and backup

- checkpoint: a copy of the current state for possible use in fault tolerant techniques
- releases the programmer from determining which variables should be checkpointed and when

- linguistic structure for recovery blocks requires a suitable mechanism for providing automatic backward error recovery.

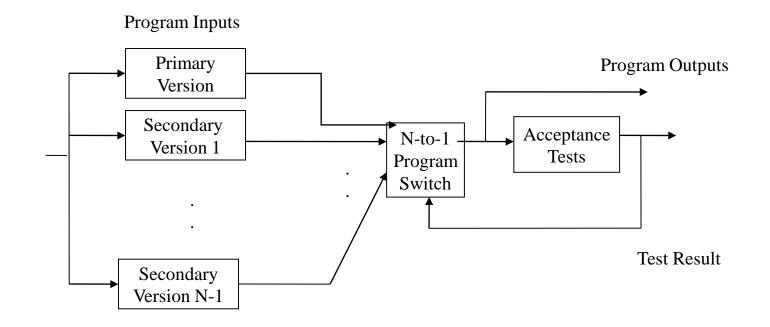

Effectiveness of fault tolerance

Example: Stable storage

RAID (Redundant Arrays of Independent Disks) technology disk organization techniques that manage a large numbers of disks, providing a view of a single disk of high capacity and high speed by using multiple disks in parallel, and high reliability by storing data redundantly

Magnetic disk

Read failure

To deal with read failure, computes and attaches **checksums** to each sector to verify that data is read back correctly If data is corrupted, with very high probability stored checksum won't match recomputed checksum


Write failure

Ensure successful writing by reading back sector after writing it

RAID

Redundant information stored on multiple disks to recover from failures


Mirroring

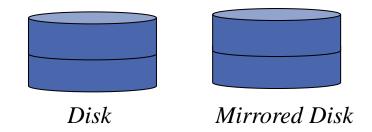

Coding: Block-Interleaved Parity


Block-level striping

Parity block on a diferent disk for toleranting disk failure

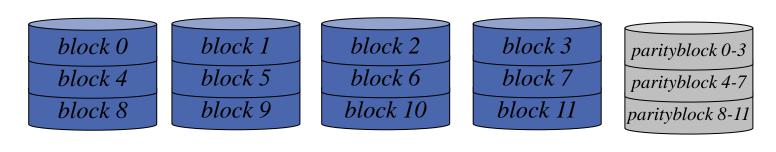


RAID

Coding: Block-Interleaved Distributed Parity

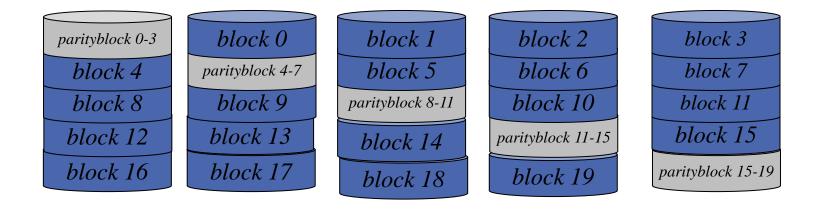

RAID

Coding: Hamming code

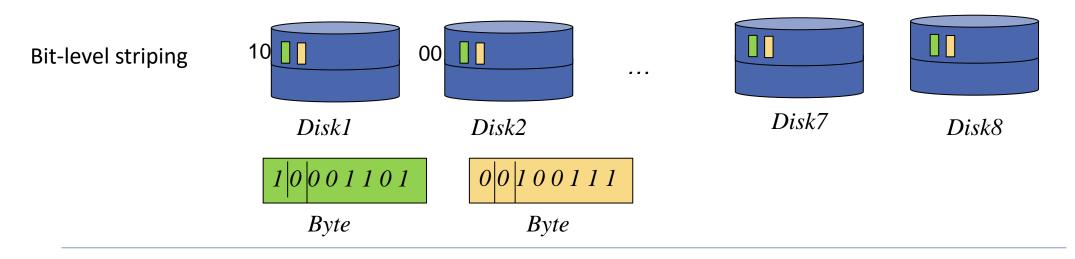

Conclusions

- Fault tolerance uses replication for error detection and system recovery
- Fault tolerance relies on the **independency of redundancies** with respect to the process of fault creation and activations
- Fault masking will conceal a possibly progressive and eventually fatal loss of protective redundancy
- Practical implementations of masking generally involve error detection (and possibly fault handling), leading to masking and error detection and recovery

Conclusions

 When tolerance to physical faults is foreseen, the channels may be identical, based on the assumption that hardware components fail independently

 When tolerance to design faults is foreseen, channels have to provide identical service through separate designs and implementation (through design diversity)