# **Low Power Smart IoT Labs**

# with CubeCell – ARS601 (Psoc+LoRa)

### **Table of Contents**

0. Introduction	
0.1 Hardware Architecture - main board (CubeCell)	2
Software installation with the use Arduino board manager	
Software installation via Git	4
0.2 Power consumption test with Power Profiler Kit II	5
0.2.1 PPK2 software installation	6
Lab 1 – Testing CubeCell HTCC-AB01 main board	
1.1 Board chip identifier	
1.2 Integrated RGB LED	
1.3 Integrated USR button	
1.4 User flash memory	8
1.5 Sleep modes: timer and user interruption	
1.5.1 Timer mode	
1.5.2 User interrupt mode	
1.6 System time	
1.6.1 System time in active - high power mode	
1.6.2 System time in deep_sleep - low power mode	
1.7 WatchDog timer	
10 do	10
Lab 2 - External components and low power operation	14
2.1 SSD1306 OLED	
2.2 I2C device scan	
2.3 SHT21 sensor module (I2C)	
Test the above examples	
Experiment with:	
2.4 BH1750 – Ambient Light sensor	18
To do	
2.5 Air (CO2/TVOC) sensor CCS811 (SGP30)	18
To do	19
2.6 "Time of Flight" distance sensors – VL53L0X and VL53L1X	20
2.6.1 VL53L03	20
2.6.2 VL53L1X	
To do	
2.7 SoftwareSerial - GPS - NEO-6MV2	
2.7.1 Simple – direct UART stream	22
2.7.2 Simple – direct UART stream and OLED display	22
2.7.3 UART stream decoded by TinyGPS++ library	23
To do	25
2.8 Low power operation period with lowPowerHandler()	26
2.8.1 Low power operation with SHT21 sensor	
To do2.8.2 Direct GPS - UART stream and OLED display with low_power mode	29 20
· · · —	
Lab 3 - LoRa modem - basics and low power operation	
3.1.1 Sending data packet (battery voltage)	ري روسينين
3.1.2 Sending data packet (battery voltage)	
3.2 LoRa - receiving the packets with battery state	
3.3 Sending LoRa packets with external sensor data	
3.3.1Terminal and the gateway codes	41
To do:	

Lab 4 – LoRa WiFi gateways for CubeCell terminals	45
4.1 Simple UART connection to WiFi gateway with ESP32	
4.1.1 Sending data from CubeCell via an UART link	
4.1.2 Receiving data on ESP32 via UART from CubeCell	
4.1.3 Receiving data from CubeCell via an UART link and sending them to ThingSpeak	46
4.2 LoRa sender and receiver on CubeCell and WiFi gateway with ESP32	
4.2.1 CubeCell low power LoRa sender	
4.2.2 CubeCell LoRa receiver and UART bridge	
4.3 ESP32 LoRa receiver and WiFi gateway to ThingSpeak	
To do:	
5. Assignment – terminal's scheduler in gateway node	55

## 0. Introduction

The following labs are prepared to teach the low power technologies for IoT architectures and to experiment with CubeCell boards and LoRaWan IoT DevKit from SmartComputerLab.

The main objective of the labs is to show how to implement a very low power consumption applications with the terminal nodes integrating small LiPo batteries and miniature solar panels. The proposed IoT configurations should operate over very long time periods (months-years).

Our IoT DevKit uses ARM-Cortex M0 and LoRa SX1262 modem combined into ASR6501 SoM (System on Module). The ASR6501 module is integrated into the CubeCell board.

Low power operation of the terminal nodes is based on several mechanism that allows us to put the MCU in **low\_power** mode, to put the LoRa radio in sleep mode, and to cut the current flow use by the sensors. Having all of these three conditions fulfilled we can downscale the overall current to 10-20 µA with 3.3V voltage.

This dormant state can be interrupted by the timeout signal starting the wake period with high\_power consumption period. The **high\_power** consumption period may be decomposed in several phases including sensing phase, transmission phase, reception phase with response data storage.

The energy consumption during the sensing phase depends on the characteristics of the sensor(s) including the sensing time and the current.

The energy consumption during the transmission phase depends on the transmission power and the duration of the transmission operation. These in turn depend on the size of the data packet and the LoRa radio parameters used for the transmission such as signal bandwidth, spreading factor and code-rate.

The duration of the **low\_power** period may be fixed or provided dynamically by the gateway node through the time-out parameter sent in the response packet. This mechanism called **Target Wake Time** (TWT) is very efficient and also may be used to build the scheduled operation of a bigger number of terminal nodes. TWT based scheduling allows us to avoid the collisions between the transmitted packets.

The response also may carry the delta parameter informing the Terminal node about the variation of the sensor values to be taken into account for the transmission. For example we can imagine 3 different delta values for (1 for 0.1%, 10 for 1%, and 100 for 10%) the variation of the sensing values.

The following diagram shows the operational line of a terminal.

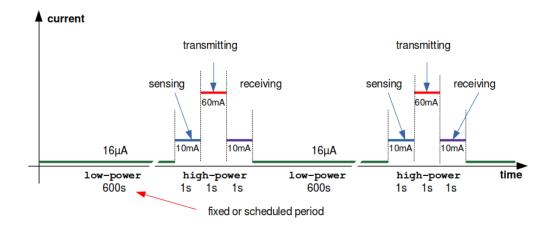


Figure 0.1 Low\_power and high\_power periods of operational cycle

## 0.1 Hardware Architecture - main board (CubeCell)

Heltec CubeCell board (HTCC-AB01) uses the ASR6501 module. The ASR6501 is SiP's (system-in-package) that combines a Cypress PSoC 4000 ARM Cortex-M0+ 32 bits 48MHz MCU (with 16kB SRAM and 128kB flash) together with a Semtech SX1262 LoRa transceiver in a single package.

The CubeCell products have an integrated LoRaWAN stack based on Semtech's LoRaMac-node.

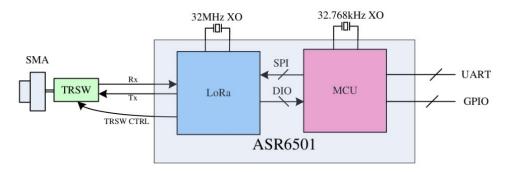


Figure 0.2 ASR6501 architectural scheme with MCU and Lora modem connected via SPI bus

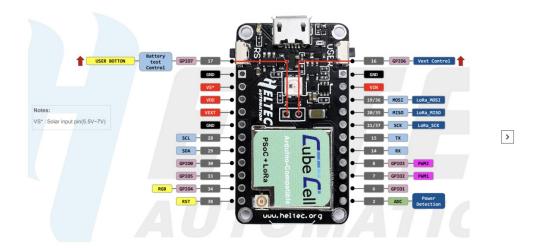


Figure 0.3 CellCube board and its pinout

for the implementation of the IoT terminals is mainly driven by the very low power consumption and the communication capabilities including LoRaWAN protocol.

The following are the power consumption characteristics:

- Supply current in Sleep mode: 10-20 μA
- Supply current in Receiver mode: 10-20 mA
- Supply current in Transmitter mode: 80-100 mA

Imagine a terminal sending the data frames of 16 bytes once every 10 minutes (10\*60\*1000 ms). With the spreading factor of 8 and the bandwidth of 125kHz, the calculated airtime is: 123.4 ms (~ 125 ms) It means that the average current consumption in mA is:

 $(125*100\ 000+10*60*1000)/60*1000=(125*100+10*60)/60=(12500+60)/60=210\ \mu\text{A}=0.21\ \text{mA}$ 

A small battery with the capacity of 1000 mAh has the possibility of power supply during: 1000/0.21=4761 hours that is almost 200 days.

Even if we divide this result by 2 we still have 3 months of power supply.


CellCube integrates the solar panel interface (6-7V) for small panels with 100mv to 1W power output. These solar components provide much longer operation periods.

The CubeCell products support development with the Arduino framework. Sketches are uploaded via the serial port. The development boards have a USB port with USB-to-serial so sketches can be easily uploaded via USB. Uploading sketches to the sensor capsules requires a special adapter from Heltec.

In June 2020 supported for PlatformIO was added. Heltec uses a custom CubeCell bootloader for ASR650x. Serial number and a license that enables Arduino support are stored in flash memory.

### Software installation with the use Arduino board manager

Open Arduino IDE, and click File-Peferences-Settings

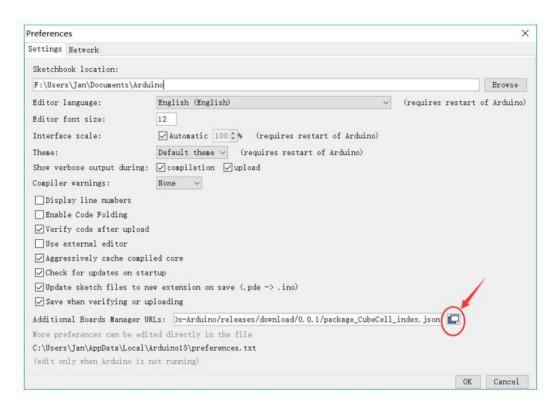

https://github.com/HelTecAutomation/CubeCell-Arduino/releases/download/V1.3.0/package\_CubeCell\_index.json

#### Software installation via Git

- For Windows:
  - $\verb|https://github.com/HelTecAutomation/ASR650x-Arduino/blob/master/InstallGuide/windows.md| \\$
- For MacOS:
  - https://github.com/HelTecAutomation/ASR650x-Arduino/blob/master/InstallGuide/mac.md
- For Linux(Ubuntu/Debian): https://github.com/HelTecAutomation/ASR650x-Arduino/blob/master/InstallGuide/debian\_ubuntu.md

### Principal link for software resources:

https://github.com/leroyle/ASR650x-Arduino

## 0.2 Power consumption test with Power Profiler Kit II

The Power Profiler Kit II (PPK2) from NORDIC Semiconductor is a standalone unit, which can measure and optionally supply currents all the way from sub-uA and as high as 1A on all SmartIoT boards from Smartcomputerlab.

The PPK2 is powered via a standard 5V USB cable, which can supply up to 500mA of current. In order to supply up to 1A of current, two USB cables are required.



Fig 0.4 Power Profiler Kit II

An ampere meter only mode, as well as a source mode (shown as AMP and source measure unit (SMU) respectively on the PCB) are supported. For the ampere meter mode, an external power supply must source VCC levels between 0.8 and 5V to the device under test (DUT). For the source mode, the PPK2 supplies VCC levels between 0.8 and 5V and the on-board regulator supplies up to 1A of current to external applications. It is possible to measure **low sleep** currents, the **higher active currents**, as well as **short current peaks**.

The PPK2 has an advanced analog measurement unit with a high dynamic measurement range. This allows accurate power consumption measurements for the entire range typically seen in low-power embedded applications, all the way from single  $\mu$ As to 1A. The resolution varies between 100nA and 1mA depending on the measurement range and is high enough to detect small spikes as often seen in low power optimized systems.

The PPK2 can also use digital inputs as a low-end logic analyzer, enabling code-synchronized measurements. This can be achieved by connecting the digital inputs to an I/O pin on the external device under test (DUT). In order to use this functionality, the DUT must be powered by a VCC voltage of 1.6-5.5V. The digital input can then show what code is executed in the DUT at different points in time.

10x quicker sampling (i.e. 100ksps) compared with the long term window of the previous generation enables maximum continuous resolution at all times. This enables a user to gather average acquisition data and zoom in for high resolution data using the same window.

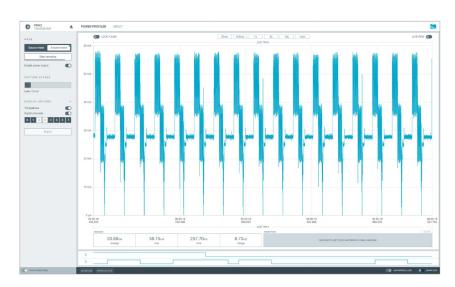


Fig 0.5 Screenshot of the Power Profiler app running in ampere meter mode.

The following figure shows the connection of the IoT DevKit with CubeCell board to the Power Profiler Kit II (PPK2). Note the use of JMP connector to provide Vin/Vout signal to the PPK2.

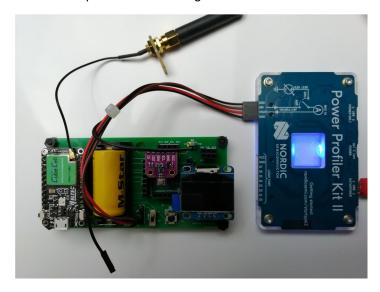


Fig 0.6 IoT DevKit connected (on battery) connected to PPK2.

#### 0.2.1 PPK2 software installation

The PPK2 software may be installed on Windows, MacOS and Linux OS. In our case we are using Ubuntu 20.04LTS.

In order to install PPK2 software on Ubuntu we need 3 software components.

1. The **application** in executable mode:

nrfconnect-3.11.0-x86\_64.appimage

To be found in:

2. The Jlink driver to be installed by:

sudo dpkg -i Jlink\_Linux\_V758b\_x86\_64.deb

To be found in: (look for **V758b** version):

https://www.segger.com/downloads/jlink/

3. The **nrf-udev** package to be installed by:

sudo dpkg -i nrf-udev\_1.0.1-all.deb

To be found in:

https://github.com/NordicSemiconductor/nrf-udev/releases

# Lab 1 - Testing CubeCell HTCC-AB01 main board

In this initial labs we are going to test a number of essential **features** of the **HTCC-AB01** board. The knowledge of these features is necessary for the understanding of the following laboratories.

#### 1.1 Board chip identifier

```
#include "Arduino.h"
void setup() {
    Serial.begin(9600);
    delay(100);
}

void loop() {
    Serial.println("in the loop");
    uint64_t chipID=getID(); delay(100);
    Serial.println(); Serial.println();
    Serial.printf("ChipID:%04X%08X\r\n", (uint32_t) (chipID>>32), (uint32_t) chipID);
delay(1000);
}
```

## 1.2 Integrated RGB LED

The following is the basic code to test the integrated **RGB LED**.

```
#include "CubeCell NeoPixel.h"
CubeCell_NeoPixel pixels(1, RGB, NEO_GRB + NEO_KHZ800);
void setup() {
  pinMode(Vext,OUTPUT);
  digitalWrite(Vext,LOW); //SET POWER
  pixels.begin(); // INITIALIZE NeoPixel strip object (REQUIRED)
  pixels.clear(); // Set all pixel colors to 'off
uint8_t i=0;
void loop() {
    pixels.setPixelColor(0, pixels.Color(i, 0, 0));
    pixels.show(); // Send the updated pixel colors to the hardware.
    delay(200); // Pause before next pass through loop
    pixels.setPixelColor(0, pixels.Color(0, i, 0));
    pixels.show(); // Send the updated pixel colors to the hardware.
    delay(200); // Pause before next pass through loop
    pixels.setPixelColor(0, pixels.Color(0, 0, i));
    pixels.show();  // Send the updated pixel colors to the hardware.
delay(200); // Pause before next pass through loop
    i+=10;
```

## 1.3 Integrated USR button

The following is the basic code to test the integrated **USR button**.

```
#include "Arduino.h"
#define USR GPIO7  // user button
uint32_t cnt = 0;

void cntIncrease()
{
    cnt++;
    Serial.println(cnt);
}

void setup() {
    Serial.begin(9600);
    PINMODE_INPUT_PULLUP(USR);
    attachInterrupt(USR,cntIncrease,FALLING);
}

void loop() {}
```

## 1.4 User flash memory.

The chip has 1K user flash:

- the size of user flash row is 256;
- user flash row 0-2 can be edited;
- user flash row 3 is reserved, must not be edited;

```
#include "Arduino.h"
#define ROW 0
#define ROW_OFFSET 100
//CY FLASH SIZEOF ROW is 256 , CY SFLASH USERBASE is 0x0fffff400
#define addr CY_SFLASH_USERBASE+CY_FLASH_SIZEOF_ROW*ROW + ROW_OFFSET
uint8_t data1[512];
uint8_t data2[512];
uint8 t data3;
uint8_t data4;
void setup() {
 Serial.begin(9600); delay(100);
  Serial.println(); Serial.println();
  for(int i=0;i<512;i++){
   data1[i]=(uint8 t)i;
  //write data1 to flash at addr
  FLASH_update(addr,data1,sizeof(data1));
  //read flash at addr to data2
  FLASH_read_at(addr,data2,sizeof(data2));
  uint16_t error=0;
  for(int i=0;i<512;i++){
   if (data1[i]!=data2[i])
      Serial.printf("error:data1[%d] %d , data2[%d] %d \r\n",i,data1[i],i,data2[i]);
      error++;
   }
  Serial.printf("error:%d\r\n",error);
  //read a byte at addr to data4
  FLASH_read_at(addr, &data4, 1);
  Serial.printf("data4:%d\r\n", data4);
  data3=100;
  //write a byte at addr
  FLASH_update(addr,&data3,1);
  //read a byte at addr to data4
  FLASH_read_at(addr, &data4, 1);
  {\tt Serial.printf("data4:\$d\r\n",data4);}
void loop() {
  // put your main code here, to run repeatedly:
The terminal printout:
error:0
data4:0
data4:100
```

## 1.5 Sleep modes: timer and user interruption

#### 1.5.1 Timer mode

```
#include "Arduino.h"
#include "LoRaWan_APP.h"
#define timetillsleep 5000
#define timetillwakeup 15000
static TimerEvent_t sleep;
static TimerEvent_t wakeUp;
uint8 t lowpower=1;
void onSleep()
  Serial.printf("Going into lowpower mode, %d ms later wake up.\r\n",timetillwakeup);
  lowpower=1;
  //timetillwakeup ms later wake up;
  TimerSetValue( &wakeUp, timetillwakeup );
  TimerStart( &wakeUp );
void onWakeUp()
  Serial.printf("Woke up, %d ms later into lowpower mode.\r\n",timetillsleep);
  lowpower=0;
  //timetillsleep ms later into lowpower mode;
  TimerSetValue( &sleep, timetillsleep );
  TimerStart( &sleep );
void setup() {
  Serial.begin(9600);
  Radio.Sleep( ); // LoRa modem sleep mode
  TimerInit( &sleep, onSleep );
  TimerInit( &wakeUp, onWakeUp );
  onSleep();
int i=0;
void loop() {
  if(lowpower){
    lowPowerHandler();
  Serial.print('.');i++;
  if(i==40) { i=0; Serial.println();}
  delay(400);
```



Fig 1.1 PPK2 display for deep-sleep mode: max 13.04 mA (high-power), min 12.06 μA (low-power)

#### 1.5.2 User interrupt mode

```
#include "Arduino.h"
#include "LoRa_APP.h"
#define INT_GPIO USER_KEY
#define timetillsleep 5000
static TimerEvent_t sleep;
uint8_t lowpower=1;
void onSleep()
  Serial.printf("Going into lowpower mode. Press user key to wake up\r\n");
  delay(5);
  lowpower=1;
void onWakeUp()
  delay(10);
  if(digitalRead(INT_GPIO) == 0)
  {
         Serial.printf("Woke up by GPIO, %d ms later into lowpower mode.\r\n",timetillsleep);
         lowpower=0;
         //timetillsleep ms later into lowpower mode;
         TimerSetValue( &sleep, timetillsleep );
         TimerStart( &sleep );
  }
void setup() {
  Serial.begin(9600);
  pinMode(INT_GPIO, INPUT);
  attachInterrupt(INT_GPIO, onWakeUp, FALLING);
  TimerInit( &sleep, onSleep );
  Serial.printf("Going into lowpower mode. Press user key to wake up\r\n");
  delay(5);
int i=0;
void loop() {
  if(lowpower){
    lowPowerHandler();
  Serial.print('.');i++;
  if(i==40) { i=0; Serial.println();}
  delay(400);
```



Fig 1.2 PPK2 display for deep-sleep mode with user (USER button) interruption

#### 1.6 System time

System time is base on internal timer counter that operates at milliseconds level (seconds/subseconds).

```
typedef struct TimerSysTime_s
{
  uint32_t Seconds;
  int16_t SubSeconds;
  }
TimerSysTime_t;
```

The timer is operating also during the deep sleep mode.

### 1.6.1 System time in active - high power mode

```
TimerSysTime_t sysTimeCurrent;
void setup()
  Serial.begin(9600);
  sysTimeCurrent = TimerGetSysTime();
  Serial.printf("sys time:%u.%d\r\n", (unsigned int)sysTimeCurrent.Seconds,
sysTimeCurrent.SubSeconds);
 TimerSysTime_t newSysTime ;
  newSysTime.Seconds = 1000;
  newSysTime.SubSeconds = 50;
  TimerSetSysTime( newSysTime );
  sysTimeCurrent = TimerGetSysTime();
  Serial.printf("sys time:%u.%d\r\n", (unsigned int)sysTimeCurrent.Seconds,
sysTimeCurrent.SubSeconds);
}
void loop() {
  delay(1000);
  sysTimeCurrent = TimerGetSysTime();
  Serial.printf("sys time:%u.%d\r\n", (unsigned int)sysTimeCurrent.Seconds,
sysTimeCurrent.SubSeconds);
```

#### 1.6.2 System time in deep\_sleep - low power mode

```
#include "Arduino.h"
#include "LoRa_APP.h"
#define INT_GPIO USER_KEY
#define timetillsleep 5000
static TimerEvent_t sleep;
uint8_t lowpower=1;
void onSleep()
  Serial.printf("Going into lowpower mode. Press user key to wake up\r\n");
  delay(5);
  lowpower=1;
void onWakeUp()
  delay(10):
  if(digitalRead(INT_GPIO) == 0)
    Serial.printf("Woke up by GPIO, %d ms later into lowpower mode.\r\n",timetillsleep);
    lowpower=0;
    //timetillsleep ms later into lowpower mode;
    TimerSetValue( &sleep, timetillsleep );
    TimerStart( &sleep );
  }
}
TimerSysTime_t sysTimeCurrent;
void setup() {
```

```
Serial.begin(9600);
  pinMode(INT_GPIO, INPUT_PULLUP);
  attachInterrupt(INT_GPIO, onWakeUp, FALLING);
  TimerInit( &sleep, onSleep );
  Serial.printf("Going into lowpower mode. Press user key to wake up\r\n");
  delay(5);
int i=0;
void loop() {
  if(lowpower){
    lowPowerHandler();
  sysTimeCurrent = TimerGetSysTime();
  Serial.printf("sys time:%u.%d\r\n", (unsigned int)sysTimeCurrent.Seconds,
sysTimeCurrent.SubSeconds);
  Serial.print('.');i++;
  if(i==40) { i=0; Serial.println();}
  delay(1000);
Execution example:
.Going into lowpower mode. Press user key to wake up
Woke up by GPIO, 5000 ms later into lowpower mode.
sys time:25.951
.sys time:26.991
.sys time:28.12
.sys time:29.32
.sys time:30.53
.Going into lowpower mode. Press user key to wake up
Woke up by GPIO, 5000 ms later into lowpower mode.
sys time: 40.201
.sys time:41.231
.sys time:42.252
.sys time:43.273
.sys time:44.295
.Going into lowpower mode. Press user key to wake up
```

### 1.7 WatchDog timer

Watchdog timers are commonly found in <u>embedded systems</u> and other computer-controlled equipment where humans cannot easily access the equipment or would be unable to react to faults in a timely manner. In such systems, the computer cannot depend on a human to invoke a reboot if it hangs; it must be self-reliant.

For example, remote embedded systems such as <u>space probes</u> are not physically accessible to human operators; these could become permanently disabled if they were unable to autonomously recover from faults. In <u>robots</u> and other automated machines, a fault in the control computer could cause equipment damage or injuries before a human could react, even if the computer is easily accessed. A watchdog timer is usually employed in cases like these.

Watchdog timers are also used to monitor and limit software execution time on a normally functioning computer.

For example, a watchdog timer may be used when running untrusted code in a <u>sandbox</u>, to limit the CPU time available to the code and thus prevent some types of <u>denial-of-service attacks</u>.[1] In <u>real-time operating</u> <u>systems</u>, a watchdog timer may be used to monitor a time-critical task to ensure it completes within its maximum allotted time and, if it fails to do so, to terminate the task and report the failure.

```
#include "Arduino.h"
#include "innerWdt.h"

// For asr650x, the max feed time is 2.8 seconds.

#define MAX_FEEDTIME 2000 // default is 2800 ms

bool autoFeed = false;

void setup() {
   // put your setup code here, to run once:
   Serial.begin(9600);
   Serial.println();
```

```
Serial.println("Start");
  /* Enable the WDT.
  * autoFeed = false: do not auto feed wdt.
  * autoFeed = true : it auto feed the wdt in every watchdog interrupt.
 innerWdtEnable(autoFeed);
int feedCnt = 0;
void loop() {
  // put your main code here, to run repeatedly:
  Serial.println("running");
 delay(MAX_FEEDTIME - 100);
  if(autoFeed == false)
    //feed the wdt
    if(feedCnt < 3)</pre>
      Serial.println("feed wdt");
      feedInnerWdt();
     feedCnt++;
    }
    else
     Serial.println("stop feed wdt");
    }
```

#### To do

- Install the required software
- Test the above examples

## Lab 2 - External components and low power operation

In this lab we are building complete nodes using external components such as sensors, GPS modems, displays and relays. All these components are connected to the main board via I2C, UART bus or via simple logic lines. We start SSD1306 OLED display connected via I2C bus.

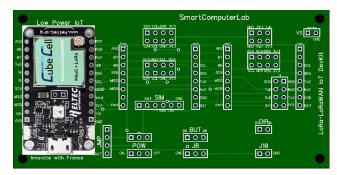


Fig 2.1 Low Power IoT DevKit from SmartComputerLab with CubeCell board

#### 2.1 SSD1306 OLED


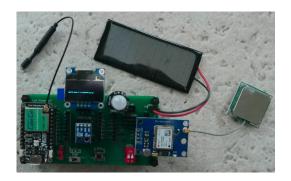


Fig 2.2 IoT DevKit with OLED screen connected via I2C bus

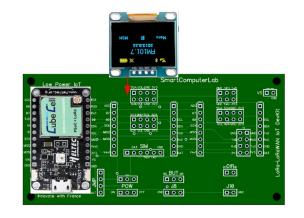

Note that the 3V3 pin is programmed via:

```
pinMode(Vext, OUTPUT);
digitalWrite(Vext, LOW)
```

**LOW** state means that the outopt (3.3V) is active.

```
#include "LoRaWan_APP.h"
#include "Arduino.h"
#include "HT_SSD1306Wire.h"
#include "Wire.h"
SSD1306Wire display(0x3c, 500000, SDA, SCL, GEOMETRY_128_64, -1);

void displayOLED(char *line1, char *line2, char *line3)
{
    display.init();
    display.flipScreenVertically();display.clear();
    display.drawString(20, 50, "SmartComputerLab");
    display.drawString(0, 0, line1);
    display.drawString(0, 15, line2);
    display.drawString(0, 30, line3);
    display.display();
}
```

```
void setup() {
    Serial.begin(9600);
    pinMode(Vext, OUTPUT);
    digitalWrite(Vext, LOW);
    delay(100);
    Wire.begin(29,28);
    display.init();
    display.flipScreenVertically();
}
int c1=0,c2=0,c3=0;

void loop()
{
    char 11[32],12[32],13[32];
    sprintf(11,"Count1=%d",c1); sprintf(12,"Count2=%d",c2);
    sprintf(13,"Count3=%d",c3);
    c1+=1;c2+=2;c3+=3;
    displayOLED(11,12,13);
    delay(2000);
}
```

#### 2.2 I2C device scan

The following code may be used to scan the I2C bus to find the connected devices (sensors, displays,..).

```
#include "Arduino.h"
#include "Wire.h"
void setup()
 Serial.begin(9600);
 pinMode (Vext,OUTPUT);
  digitalWrite(Vext,LOW);//set vext to high
  Wire.begin(); //(29,28);
void loop()
  byte error, address;
  int nDevices;
  Serial.println("Scanning...");
  nDevices = 0:
  for(address = 1; address < 127; address++ )</pre>
    Wire.beginTransmission(address);
    error = Wire.endTransmission();
    if (error == 0)
      Serial.print("I2C device found at address 0x");
      if (address<16)
      Serial.print("0");
      Serial.print(address, HEX);
      Serial.println(" !");
      nDevices++;
    else if (error==4)
      Serial.print("Unknown error at address 0x");
      if (address<16)
        Serial.print("0");
      Serial.println(address, HEX);
    }
  if (nDevices == 0)
  Serial.println("No I2C devices found\n");
  Serial.println("done\n");
  delay(5000);
```

The terminal display for SSD1306 OLED on I2C bus (address - 0x3c)

Scanning...
I2C device found at address 0x3C ! done

Scanning...
I2C device found at address 0x3C ! done

Scanning...
I2C device found at address 0x3C !


## 2.3 SHT21 sensor module (I2C)

Fig 2.3 IoT DevKit with OLED screen and SHT21 sensor connected via I2C bus

https://github.com/e-radionicacom/
SHT21-Arduino-Library

An example sketch that reads the sensor and prints the relative humidity to the serial port

```
#include <Wire.h>
#include "SHT21.h"
SHT21 SHT21;
float t,h;
void setup()
  Serial.begin(9600);
  pinMode(Vext,OUTPUT);
int dt, dh;
void loop()
  char buff[32];
  digitalWrite(Vext,LOW); // start power before activating Wire
  Wire.begin(29,28);
  SHT21.begin();
  delay(200);
  t=SHT21.getTemperature();
  h=SHT21.getHumidity();
  Serial.print("Humidity(%RH): ");
  Serial.print(h);
  Serial.print("
                     Temperature(C): ");
  Serial.println(t);
  dt=(int)((t-(int)t)*100.0); dh=(int)((h-(int)h)*100.0);
  sprintf(buff, "T:%d.%d, H:%d.%d\n", (int)t, dt, (int)h, dh);
  Serial.println(buff);
  Wire.end(); // end Wire before disconnecting power
  digitalWrite(Vext, HIGH);
  delay(3000);
```

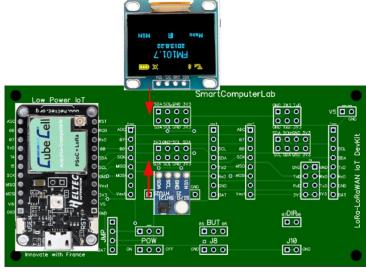

#### Reading SHT21 sensor and display on OLED

```
#include <Wire.h>
#include "SHT21.h"
#include "HT_SSD1306Wire.h"
SHT21 SHT21;
SSD1306Wire display(0x3c, 100000, SDA, SCL, GEOMETRY_128_64, -1);
void displayOLED(char *line1, char *line2, char *line3)
    Serial.println("in oled");
    display.init();
    display.flipScreenVertically();display.clear();
display.drawString(20, 50, "SmartComputerLab");
    display.drawString(0, 0, line1);
display.drawString(0, 15, line2);
display.drawString(0, 30, line3);
    display.display();
    delay(1000);
float t,h;
void setup()
  Serial.begin(9600);
  pinMode (Vext, OUTPUT);
int dt, dh;
void loop()
  char buff[32],bufft[32],buffh[32];
  digitalWrite(Vext,LOW); //3V3 voltage output activated - Vext ON
  Wire.begin(29,28);
  SHT21.begin();
  delay(200);
  t=SHT21.getTemperature();
  h=SHT21.getHumidity();
  Serial.print("Humidity(%RH): ");
  Serial.print(h);
  Serial.print("
                        Temperature(C): ");
  Serial.println(t);
  dt=(int)((t-(int)t)*100.0); dh=(int)((h-(int)h)*100.0);
  sprintf(buff, "T: %d. %d, H: %d. %d \n", (int) t, dt, (int) h, dh);\\
  sprintf(bufft, "T:%d.%d", (int)t, dt);
  sprintf(buffh, "H:%d.%d", (int)h,dh);
  Serial.println(buff); Serial.println(bufft); Serial.println(buffh);
  displayOLED(bufft, buffh, " ");
  Wire.end();
  digitalWrite(Vext, HIGH);
  delay(5000);
```

#### To do:

Test the above examples

#### **Experiment with:**

```
pinMode(Vext, OUTPUT);
digitalWrite(Vext, LOW); delay(100);
and
digitalWrite(Vext, HIGH); delay(100);
```

Use **PPK2** to analyze the power consumption.

## 2.4 BH1750 – Ambient Light sensor

The BH1750 provides 16-bit light measurements in **lux**, the **SI** unit for measuring light making it easy to compare against other values like references and measurements from other sensors. The BH1750 is able to measure from 0 to **65K+** lux.

```
#include <Wire.h>
#include <BH1750.h>
BH1750 lightMeter;
void setup()
  Serial.begin(9600);
  pinMode(Vext,OUTPUT);
float lux;
void loop()
  digitalWrite(Vext,LOW); // start power before activating Wire
  Wire.begin(29,28);
  delay(200);
  lightMeter.begin();
  delay(200);
  lux = lightMeter.readLightLevel();
  Serial.print("Light: ");
  Serial.print(lux);
  Serial.println(" lux");
  Wire.end(); // end Wire before disconnecting power
  digitalWrite(Vext, HIGH);
  delay(3000);
```

#### To do


- 1. Test the above example
- 2. Add the display on the OLED screen to show the luminosity value
- 3. Use PPK2 to analyze the power consumption.

## 2.5 Air (CO2/TVOC) sensor CCS811 (SGP30)

CCS811 based sensor(I2C) VOC/eCO2 is an air quality monitoring sensor. This sensor is a gas sensor that can detect a wide range of Volatile Organic Compounds (VOCs) and is intended for indoor air quality monitoring. When connected to your micro-controller such as ARS6501 and running corresponding library code it will return a Total Volatile Organic Compound (TVOC) reading and an equivalent carbon dioxide reading (eCO2) over I2C.

The CCS811 has a 'standard' hot-plate MOX sensor, as well as a small micro-controller that controls power to the plate, reads the analog voltage, and provides an I2C interface to read from.

This part will measure eCO2 (equivalent calculated carbondioxide) concentration within a range of 400 to



SGP30
SGP30
NIN
10mm

According to the fact sheet it can detect Alcohols, Aldehydes, Ketones, Organic Acids, Amines, Aliphatic and Aromatic Hydrocarbons.

Please note, this sensor, like all VOC/gas sensors, has variability and to get precise measurements you will want to calibrate it against known sources! That said, for general environmental sensors, it will give you a good idea of trends and comparisons.

Also, it is recommended that you run this sensor for 48 hours when you first receive it to "burn it in", and then 20 minutes in the desired mode every time the sensor is in use.

This is because the sensitivity levels of the sensor will change during early use.

The CCS811 has a configurable interrupt pin that can fire when a conversion is ready and/or when a reading crosses a user-settable threshold.

The CCS811 supports multiple drive modes to take a measurement every 1 second, every 10 seconds, every 60 seconds, or every 250 milliseconds.

The device's I2C address is 0x5A.

```
#include <Wire.h>
#include "Adafruit_SGP30.h"
Adafruit_SGP30 sgp;
uint32_t getAbsoluteHumidity(float temperature, float humidity) {
    // approximation formula from Sensirion SGP30 Driver Integration chapter 3.15
    const float absoluteHumidity = 216.7f * ((humidity / 100.0f) * 6.112f * exp((17.62f *
temperature) / (243.12f + temperature)) / (273.15f + temperature)); // [g/m^3]
    const uint32_t absoluteHumidityScaled = static_cast<uint32_t>(1000.0f * absoluteHumidity);
    return absoluteHumidityScaled;
void setup()
  Serial.begin(9600);
  pinMode(Vext, OUTPUT);
  digitalWrite(Vext, LOW); //set vext to high
  delay(100);
  Wire.begin(29,28);
  Serial.println("SGP30 test");
  while (!sgp.begin()){
    Serial.print(".");
    delay(500);
  Serial.print("Found SGP30 serial #");
  Serial.print(sgp.serialnumber[0], HEX);
  Serial.print(sgp.serialnumber[1], HEX);
  Serial.println(sgp.serialnumber[2], HEX);
  // If you have a baseline measurement from before you can assign it to start, to 'self-calibrate'
  //sgp.setIAQBaseline(0x8E68, 0x8F41); // Will vary for each sensor!
int counter = 0;
void loop() {
  if (! sgp.IAQmeasure()) {
   Serial.println("Measurement failed");
  Serial.print("TVOC "); Serial.print(sgp.TVOC); Serial.print(" ppb\t");
  Serial.print("eCO2 "); Serial.print(sgp.eCO2); Serial.println(" ppm");
  if (! sgp.IAQmeasureRaw()) {
    Serial.println("Raw Measurement failed");
    return:
}
```

#### To do

- Test the above example
- Add the display on the OLED screen to show the TVOC and CO2 values
- use digitalWrite (Vext, LOW); and digitalWrite (Vext, HIGH); to set on and off the power line Vext in the loop() function (notice the problem!)

## 2.6 "Time of Flight" distance sensors – VL53L0X and VL53L1X

#### 2.6.1 VL53L03

The **VL53L0X** is a *Time of Flight* distance sensor like no other you've used! The sensor contains a very tiny invisible laser source, and a matching sensor. The **VL53L0X** can detect the "time of flight", or how long the light has taken to bounce back to the sensor. Since it uses a very narrow light source, it is good for determining distance of only the surface directly in front of it. Unlike sonars that bounce ultrasonic waves, the 'cone' of sensing is very narrow. Unlike IR distance sensors that try to measure the amount of light bounced, the VL53L0x is much more precise and doesn't have linearity problems or 'double imaging' where you can't tell if an object is very far or very close.

```
#include "Adafruit_VL53L0X.h"
Adafruit_VL53L0X lox = Adafruit_VL53L0X();
void setup() {
 pinMode(Vext, OUTPUT);
  Serial.begin(9600);
  Serial.println("Adafruit VL53L0X test");
  Serial.println(F("VL53L0X API Simple Ranging example\n\n"));
void loop() {
  digitalWrite(Vext, LOW);
  delay(50);
  Wire.begin(29,28);
  if (!lox.begin()) {
    Serial.println(F("Failed to boot VL53L0X"));
    digitalWrite(Vext, HIGH);
    delay(1000);
    return;
  Serial.print("Reading a measurement... ");
  VL53L0X_RangingMeasurementData_t measure;
  lox.rangingTest(&measure, false); // pass in 'true' to get debug data printout!
  Wire.end();
  digitalWrite(Vext, HIGH);
  if (measure.RangeStatus != 4) { // phase failures have incorrect data
    Serial.print("Distance (mm): ");
    Serial.println(measure.RangeMilliMeter);
  } else {
    Serial.println(" out of range ");
  delay(1000);
```

#### 2.6.2 VL53L1X

This example demonstrates how to read and average distance, the measurement status, and the signal rate. Use long distance mode and allow up to 50000 us (50 ms) for a measurement.

You can change these settings to adjust the performance of the sensor, but the minimum timing budget is 20 ms for short distance mode and 33 ms for medium and long distance modes.

```
sensor.setDistanceMode(VL53L1X::Long);
sensor.setMeasurementTimingBudget(50000);
```

Start continuous readings at a rate of one measurement every 50 ms (the inter-measurement period). This period should be at least as long as the timing budget.

```
sensor.startContinuous(50);
```

The complete code:

#include "Arduino.h"

#include <Wire.h>
#include "VL53L1X.h"

```
VL53L1X sensor;
void setup(void)
  pinMode(Vext, OUTPUT);
  digitalWrite(Vext, LOW);
  delay(500);
  Serial.begin(9600);
  Serial.println(); Serial.println(); delay(100);
  Wire.begin(29,28);
  Wire.setClock(400000); // use 400 kHz I2C
  sensor.setTimeout(500);
  Serial.println("before init");
  if (!sensor.init())
    Serial.println("Failed to detect and initialize sensor!");
    while (1);
  sensor.setDistanceMode(VL53L1X::Long);
  sensor.setMeasurementTimingBudget(50000);
  sensor.startContinuous(50);
void loop()
  Serial.print(sensor.read());
  if (sensor.timeoutOccurred()) { Serial.print(" TIMEOUT"); }
  Serial.println();
```

### To do

- Test the above examples of VL53LXX sensors
- · Add the display on the OLED screen to show the distance value

### 2.7 SoftwareSerial - GPS - NEO-6MV2

This sample code demonstrates the normal use of a **TinyGPS++** (TinyGPSPlus) object. It requires the use of **SoftwareSerial**, and assumes that you have a 9600-baud serial GPS device hooked up on pins **GPIO3** - (rx) and **GPIO5** - (tx).

#### 2.7.1 Simple – direct UART stream

```
#include <Arduino.h>
#include <softSerial.h>
softSerial softwareSerial(GPIO5 /*TX pin*/, GPIO3 /*RX pin*/); // GPIO5 (33) , GPIO3 (8)
void setup()
pinMode(Vext, OUTPUT);
digitalWrite(Vext, LOW);
delay(500);
Serial.begin(9600);
softwareSerial.begin(9600);
delay(1000);
Serial.println("Normal serial init");
char *ptr, gmt[12],clarg[12], clong[12];
void loop()
  if(softwareSerial.available())
  char serialbuffer[256] = {0};
  int i = 0:
  while (softwareSerial.available() && i<256)
    serialbuffer[i] = (char) softwareSerial.read();
    i++;
  serialbuffer[i] = '\0';
  if(serialbuffer[0])
    Serial.println(serialbuffer);
    ptr=strstr(serialbuffer, "RMC, ");
    strncpy(gmt,ptr+4,6); Serial.print("GMT:");Serial.println(gmt);
   ptr=strstr(serialbuffer, ", A, ");
    strncpy(clarg,ptr+3,10); Serial.print("Larg:");Serial.println(clarg);
   ptr=strstr(serialbuffer,",N,");
    strncpy(clong,ptr+3,10); Serial.print("Long:");Serial.println(clong);
    Serial.println();
    }
  }
delay(200);
```

#### 2.7.2 Simple – direct UART stream and OLED display

```
#include "LoRaWan_APP.h"
#include "Arduino.h"
#include "HT_SSD1306Wire.h"
#include "Wire.h"
#include <softSerial.h>

// The serial connection to the GPS device
softSerial softwareSerial(GPIO5 /*TX pin*/, GPIO3 /*RX pin*/); // GPIO5 (33) , GPIO3 (8)

SSD1306Wire display(0x3c, 500000, SDA, SCL, GEOMETRY_128_64, -1); // addr , freq , i2c group ,
resolution , rst

void displayOLED(char *line1, char *line2, char *line3)
{
    display.init();
    display.flipScreenVertically();display.clear();
    display.drawString(20, 50, "SmartComputerLab");
    display.drawString(0, 0, line1);
```

```
display.drawString(0, 15, line2);
    display.drawString(0, 30, line3);
    display.display();
void setup()
pinMode(Vext, OUTPUT);
digitalWrite(Vext, LOW);
delay(500);
Serial.begin(9600);
Wire.begin(29,28);
softwareSerial.begin(9600);
delay(1000);
Serial.println("Normal serial init");
char *ptr, gmt[12],clarg[12], clong[12],dgmt[24],dclarg[24], dclong[24];
void loop()
if(softwareSerial.available())
char serialbuffer[256] = {0};
int i = 0;
while (softwareSerial.available() && i<256)
serialbuffer[i] = (char)softwareSerial.read();
i++;
serialbuffer[i] = '\0';
if(serialbuffer[0])
//Serial.print("Received data from software Serial:");
Serial.println(serialbuffer);
ptr=strstr(serialbuffer, "RMC, ");
strncpy(gmt,ptr+4,6); Serial.print("GMT:");Serial.println(gmt);
ptr=strstr(serialbuffer, ", A, ");
strncpy(clarg,ptr+3,10); Serial.print("Larg:"); Serial.println(clarg);
ptr=strstr(serialbuffer, ", N, ");
strncpy(clong,ptr+3,10); Serial.print("Long:");Serial.println(clong);
Serial.println();
sprintf(dgmt, "GMT:%s", gmt); sprintf(dclarg, "LAT:%s", clarg); sprintf(dclong, "LNG:%s" (W) ", clong);
displayOLED(dgmt, dclarg, dclong);
delay(600);
```

#### 2.7.3 UART stream decoded by TinyGPS++ library

```
#include <TinyGPS++.h>
#include <softSerial.h>
static const uint32_t GPSBaud = 9600;
TinyGPSPlus qps;
softSerial ss(GPIO5 /*TX pin*/, GPIO3 /*RX pin*/); // GPIO5 (33) , GPIO3 (8)
static void smartDelay(unsigned long ms)
 unsigned long start = millis();
 do
 {
    while (ss.available())
     gps.encode(ss.read());
 } while (millis() - start < ms);</pre>
static void printFloat(float val, bool valid, int len, int prec)
 if (!valid)
   while (len-- > 1) Serial.print('*'); Serial.print(' ');
 }
 else
```

```
Serial.print(val, prec);
    int vi = abs((int)val);
    int flen = prec + (val < 0.0 ? 2 : 1); // . and -
    flen += vi >= 1000 ? 4 : vi >= 100 ? 3 : vi >= 10 ? 2 : 1;
   for (int i=flen; i<len; ++i) Serial.print(' ');</pre>
  }
  smartDelay(0);
static void printInt(unsigned long val, bool valid, int len)
  char sz[32] = "************;
  if (valid) sprintf(sz, "%ld", val);
  sz[len] = 0;
  for (int i=strlen(sz); i<len; ++i) sz[i] = ' ';</pre>
  if (len > 0) sz[len-1] = ' ';
  Serial.print(sz);
  smartDelay(0);
static void printDateTime(TinyGPSDate &d, TinyGPSTime &t)
  if (!d.isValid()) { Serial.print(F("******** ")); }
  else
  {
    sprintf(sz, "%02d/%02d/%02d ", d.month(), d.day(), d.year());
   Serial.print(sz);
  if (!t.isValid())
     Serial.print(F("****** ")); }
  {
  else
  {
    char sz[32];
    sprintf(sz, "%02d:%02d:%02d", t.hour(), t.minute(), t.second());
    Serial.print(sz);
 printInt(d.age(), d.isValid(), 5);
  smartDelay(0);
static void printStr(const char *str, int len)
  int slen = strlen(str);
  for (int i=0; i<len; ++i)</pre>
   Serial.print(i<slen ? str[i] : ' ');</pre>
  smartDelay(0);
void setup()
  pinMode(Vext, OUTPUT);
  digitalWrite(Vext, LOW);
  delay(500);
  Serial.begin(9600);
  ss.begin(GPSBaud);
  Serial.println(F("FullExample.ino"));
  Serial.println(F("An extensive example of many interesting TinyGPS++ features"));
  Serial.print(F("Testing TinyGPS++ library v. ")); Serial.println(TinyGPSPlus::libraryVersion());
  Serial.println(F("by Mikal Hart"));
  Serial.println();
  Serial.println(F("Sats HDOP Latitude Longitude Fix Date
                                                                      Time
                                                                               Date Alt
                                                                                           Course
Speed Card Distance Course Card Chars Sentences Checksum"));
Serial.println(F(" (deg) (deg) Age GPS ---- to London ---- RX RX Fail"));
                                                                                           --- from
                                                                               Age (m)
                                               Fail"));
Serial.println(F("------
}
```

```
void loop()
  static const double LONDON_LAT = 51.508131, LONDON_LON = -0.128002;
  printInt(gps.satellites.value(), gps.satellites.isValid(), 5);
  printFloat(gps.hdop.hdop(), gps.hdop.isValid(), 6, 1);
  printFloat(gps.location.lat(), gps.location.isValid(), 11, 6);
  printFloat(gps.location.lng(), gps.location.isValid(), 12, 6);
  printInt(gps.location.age(), gps.location.isValid(), 5);
  printDateTime(gps.date, gps.time);
  \verb|printFloat(gps.altitude.meters(), gps.altitude.isValid(), 7, 2);|\\
  printFloat(gps.course.deg(), gps.course.isValid(), 7, 2);
  printFloat(gps.speed.kmph(), gps.speed.isValid(), 6, 2);
  printStr(gps.course.isValid() ? TinyGPSPlus::cardinal(gps.course.deg()) : "*** ", 6);
  unsigned long distanceKmToLondon =
     (unsigned long) TinyGPSPlus::distanceBetween(
       gps.location.lat().
       gps.location.lng(),
       LONDON_LAT,
       LONDON_LON) / 1000;
  printInt(distanceKmToLondon, gps.location.isValid(), 9);
  double courseToLondon =
     TinyGPSPlus::courseTo(
       gps.location.lat(),
       gps.location.lng(),
       LONDON_LAT,
       LONDON LON) :
  printFloat(courseToLondon, gps.location.isValid(), 7, 2);
  const char *cardinalToLondon = TinyGPSPlus::cardinal(courseToLondon);
  printStr(gps.location.isValid() ? cardinalToLondon : "*** ", 6);
  printInt(gps.charsProcessed(), true, 6);
  printInt(gps.sentencesWithFix(), true, 10);
  printInt(gps.failedChecksum(), true, 9);
  Serial.println();
  smartDelay(1000);
  if (millis() > 5000 && gps.charsProcessed() < 10)</pre>
     Serial.println(F("No GPS data received: check wiring"));
Terminal output fragment:
          47.216858
                                    07/04/2021 16:49:28 d
                                                           34.90
    1.0
                                   07/04/2021 16:49:29 d
07/04/2021 16:49:30 d
                                                          34.40
34.40
                                                                 0.50
0.50
          47.216862
                    -1.693527
                                                                       0.57
                                                                                           12.77
                                                                                                 NNE
          47.216862
                    -1.693528
А
    1 0
          47 216858
                    -1 693528
                                    07/04/2021 16:49:31 d
                                                           34 00
                                                                 0 50
                                                                       0 33
                                                                                           12 77
                                                                                                 NNF.
                                   07/04/2021 16:49:31 d
07/04/2021 16:49:32 d
07/04/2021 16:49:34 d
          47.216858
                    -1.693529
    1.0
          47.216862
                                                           33.90
                                                                 0.38
                                                                        0.24
                                                                                           12.77
                                                                                                 NNE
                                                                                                            d
          47.216866
                    -1.693530
-1.693527
                                   07/04/2021 16:49:35 d
07/04/2021 16:49:36 d
                                                                       0.74
                                                                                           12.77
12.77
                                                           32.90
          47.216866
    1.0
                                                           32.50
                                                                 0.38
                                                                                                 NNE
          47.216866
47.216862
                    -1.693526
-1.693525
                                   07/04/2021 16:49:37 d
07/04/2021 16:49:38 d
                                                           31.80
32.30
                                                                       0.61
                                                                                           12.77
12.77
                                                                                                 NNE
                                                                                                                      d
d
    1.0
                                                                 0.38
                                                                                                            d
                                                                                                 NNE
                                   07/04/2021 16:49:39 d
07/04/2021 16:49:41 d
                                                                                           12.77
12.77
    1 0
          47.216862
                    -1.693527
                                                           32.00
                                                                 0 38
                                                                        0.13
                                                                             N
                                                                                                 NNF.
                                                                                                             d
                    -1.693526
          47.216862
                                                           32.40
                                                                 0.38
                                                                        0.61
                                                                                                 NNE
    1.0
          47.216862
                    -1.693528
                                    07/04/2021 16:49:42 d
                                                           32.20
                                                                 0.38
                                                                        0.07
                                                                                           12.77
                                                                                                 NNE
                   -1.693526
-1.693527
                                    07/04/2021 16:49:43 d
                                                                 0.38
                                                                        0.69
                                                                                                 NNE
          47.216858
                                   07/04/2021 16:49:44 d
    1.0
                                                           32.40
                                                                 0.38
                                                                        0.22
                                                                                           12.77
                                                                                                 NNE
```

#### To do

- Test the above examples of GPS receivers
- Add the display on the OLED screen to show the value of time, longitude, and latitude for the second example code

## 2.8 Low power operation period with lowPowerHandler()

In this lab we have already introduced low power technique to read and display the data on sensors and OLED screen with cutting off the power line during the idle period.

Now we add the **low\_power** periods for the operation of the processor (MCU) itself.

To start lets us study the following example.

#### 2.8.1 Low power operation with SHT21 sensor

The first part of the code adds the necessary libraries and the declaration of the sensor (SHT21).

```
#include "Arduino.h"
#include <Wire.h>
#include "SHT21.h"
SHT21 SHT21;
```

The second fragment contains the definition and the declaration of the constants and variables used to configure the events required for low and high power operation (periods).

```
#define timetillsleep 5000
#define timetillwakeup 10000
static TimerEvent_t sleep;
static TimerEvent_t wakeUp;
uint8 t lowpower=1, highpower=0;
```

timetosleep and timetillwakeup define the periods of high and low power operation. In this case the board will be set for low power period of 10 secs and high power period of 5 secs.

The corresponding timer events are sleep for the high-to-low power period and wakeUp for the low-to-high power period.

lowpower and highpower variables keep the actual state of the operation.

The next section of the code defines the **ISR functions** activated by the time on **sleep** and on **wakeUp** events. They are:

```
void onSleep()
{
    Serial.printf("Go to lowpower mode,%d ms later wake up.\r\n",timetillwakeup);
    lowpower=1;highpower=0; //
    //timetillwakeup ms later wake up;
    TimerSetValue(&wakeUp,timetillwakeup);
    TimerStart(&wakeUp);
}

void onWakeUp()
{
    Serial.printf("Woke up, %d ms later into lowpower mode.\r\n",timetillsleep);
    lowpower=0;highpower=1;
    //timetillsleep ms later into lowpower mode;
    TimerSetValue(&sleep,timetillsleep);
    TimerStart(&sleep);
}
```

The setup section of the code initializes the pointers to onSleep and on WakeUp functions. The radio modem (LoRa) is set into sleep mode by Radio.Sleep().

The execution of the program starts by onSleep() function in order to set the application into initial low power mode.

```
void setup()
  Serial.begin(9600);
  Radio.Sleep();
  TimerInit( &sleep, onSleep );
  TimerInit( &wakeUp, onWakeUp );
  onSleep();
}
The main loop() of the program oscillates between the low-power and high-power modes.
During the high-power period the getSHT21 () function is called - only once.
void loop() {
  if(lowpower){
     lowPowerHandler();
  if (highpower)
      { getSHT21();highpower=0; }
The last part of the code contains the getSHT21() function.
The execution of this function starts by the initialization of the power (3V3) line - Vext and by the activation of
the I2C bus by Wire.begin (29, 28); then we activate the sensor to read the temperature and humidity data.
After the data readings the I2C bus is deactivated - Wire.end() and the power line is cutoff-
digitalWrite(Vext, HIGH).
float t,h;
int dt, dh;
char buff[32];
void getSHT21()
    pinMode(Vext, OUTPUT);
    digitalWrite(Vext, LOW);
    delay(50);
    Wire.begin(29,28);
    SHT21.begin();
    t=SHT21.getTemperature();
   h=SHT21.getHumidity();
    Serial.print("Humidity(%RH): ");
    Serial.print(h);
    Serial.print("
                       Temperature(C): ");
    Serial.println(t);
    dt=(int)((t-(int)t)*100.0); dh=(int)((h-(int)h)*100.0);
    sprintf(buff, "T:%d.%d, H:%d.%d\n", (int)t, dt, (int)h, dh);
    Serial.println(buff);
```

The complete code is given below:

digitalWrite(Vext, HIGH);

Wire.end();

}

```
#include "Arduino.h"
#include <Wire.h>
#include "SHT21.h"
SHT21 SHT21;
#define timetillsleep 5000
#define timetillwakeup 10000
static TimerEvent_t sleep;
static TimerEvent_t wakeUp;
uint8_t lowpower=1, highpower=0;
float t,h;
int dt,dh;
char buff[32];
```

```
void getSHT21()
{
    pinMode(Vext, OUTPUT); digitalWrite(Vext, LOW); delay(50);
    Wire.begin(29,28); SHT21.begin();
    t=SHT21.getTemperature();
    h=SHT21.getHumidity();
    Serial.print("Humidity(%RH): ");Serial.print(h);
    Serial.print("
                       Temperature(C): "); Serial.println(t);
    dt=(int)((t-(int)t)*100.0); dh=(int)((h-(int)h)*100.0);
    sprintf(buff, "T: %d. %d, H: %d. %d \n", (int)t, dt, (int)h, dh);
    Serial.println(buff);
    Wire.end();
    digitalWrite(Vext, HIGH);
}
void onSleep()
{
  Serial.printf("Going into lowpower mode, %d ms later wake up.\r\n",timetillwakeup);
  lowpower=1;highpower=0;
  TimerSetValue( &wakeUp, timetillwakeup ); //timetillwakeup ms later wake up;
  TimerStart( &wakeUp );
void onWakeUp()
  Serial.printf("Woke up, %d ms later into lowpower mode.\r\n",timetillsleep);
  lowpower=0;highpower=1;
  //timetillsleep ms later into lowpower mode;
  TimerSetValue( &sleep, timetillsleep );
  TimerStart( &sleep );
void setup() {
  Serial.begin(9600);
  Radio.Sleep();
  TimerInit( &sleep, onSleep ); TimerInit( &wakeUp, onWakeUp );
  onSleep();
void loop() {
  if(lowpower){
    lowPowerHandler();
  if (highpower)
     { getSHT21();highpower=0; }
}
               LOCK Y-AXIS
                                   10ms 100ms 1s 3s 10s 1min
                                                   Δ7.000s
           60 mA
                                                                943.453
```



The resulting current consumption values from the integrated LiPo battery are:

- 11 mA for high power operations, except the sensor capture (50 mA)
- 79.7 μA for low power state


#### To do

- 1. Apply the same low/high power operational mode for other sensors.
- Try to use more than one sensor and the OLED display.

### 2.8.2 Direct GPS - UART stream and OLED display with low\_power mode

```
#include "LoRaWan_APP.h"
#include "Arduino.h"
#include "HT_SSD1306Wire.h"
#include "Wire.h"
#include <softSerial.h>
softSerial softwareSerial(GPIO5 /*TX pin*/, GPIO3 /*RX pin*/); // GPIO5 (33) , GPIO3 (8)
SSD1306Wire display(0x3c, 500000, SDA, SCL, GEOMETRY_128_64, -1);
// addr , freq , i2c group , resolution , rst
#define timetillsleep 5000
#define timetillwakeup 10000
static TimerEvent_t sleep;
static TimerEvent_t wakeUp;
uint8_t lowpower=1, highpower=0;
void displayOLED(char *line1, char *line2, char *line3)
    display.init();
    display.flipScreenVertically(); display.clear();
    display.drawString(20, 50, "SmartComputerLab");
    display.drawString(0, 0, line1);
    display.drawString(0, 15, line2);
    display.drawString(0, 30, line3);
    display.display();
void onSleep()
  Serial.printf("Going into lowpower mode, %d ms later wake up.\r\n",timetillwakeup);
  lowpower=1;highpower=0;
  //timetillwakeup ms later wake up;
  TimerSetValue( &wakeUp, timetillwakeup );
  TimerStart( &wakeUp );
void onWakeUp()
  Serial.printf("Woke up, %d ms later into lowpower mode.\r\n",timetillsleep);
  lowpower=0;highpower=1;
  pinMode(Vext, OUTPUT);
  digitalWrite(Vext, LOW);
  softwareSerial.begin(9600);
  //timetillsleep ms later into lowpower mode;
  TimerSetValue( &sleep, timetillsleep );
  TimerStart( &sleep );
void setup()
pinMode(Vext, OUTPUT);
digitalWrite(Vext, LOW);
delay(500);
Serial.begin(9600);
Wire.begin(29,28);
softwareSerial.begin(9600);
delay(1000);
Serial.println("Normal serial init");
TimerInit( &sleep, onSleep );
TimerInit( &wakeUp, onWakeUp );
onSleep();
char *ptr, gmt[12],clarg[12], clong[12],dgmt[24],dclarg[24], dclong[24];
void loop()
  if(lowpower){
    lowPowerHandler();
```

```
if(highpower)
   {
   if(softwareSerial.available())
      char serialbuffer[256] = {0};
      int i = 0;
      while (softwareSerial.available() && i<256)
        serialbuffer[i] = (char)softwareSerial.read();
        i++;
      serialbuffer[i] = '\0';
      if(serialbuffer[0])
        //Serial.print("Received data from software Serial:");
        Serial.println(serialbuffer);
        ptr=strstr(serialbuffer, "RMC, ");
        strncpy(gmt,ptr+4,6); Serial.print("GMT:");Serial.println(gmt);
       ptr=strstr(serialbuffer, ", A, ");
       strncpy(clarg,ptr+3,10); Serial.print("Larg:");Serial.println(clarg);
ptr=strstr(serialbuffer,",N,");
        strncpy(clong,ptr+3,10); Serial.print("Long:"); Serial.println(clong);
        Serial.println();
        sprintf(dgmt, "GMT:%s", gmt); sprintf(dclarg, "LAT:%s", clarg); sprintf(dclong, "LNG:%s
(W) ", clong);
        displayOLED(dgmt, dclarg, dclong);
      Wire.end();
      digitalWrite(Vext, HIGH);
      }
  //digitalWrite(Vext, HIGH);
 delay(4000);
```

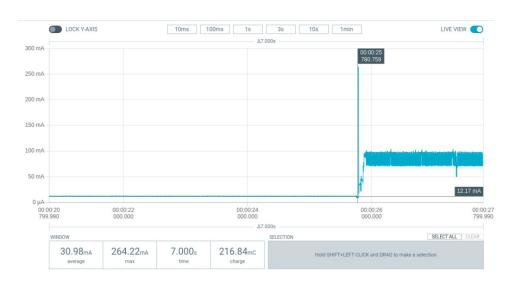

## Lab 3 - LoRa modem - basics and low power operation

The following examples show how to use the integrated LoRa modem (**SX1262**) in basic mode (pure LoRa). These examples take into account low power requirements including implemented through MCU **low\_power** state **radio sleep** and the **power cutoff** for the external components (sensors, modems, displays, ..)

## 3.1 LoRa send with battery state value

In this first example of LoRa based communication we **send simple LoRa packets** using the functions provided in **LoRaWan\_APP.h** library. The packets contain the **value of the battery state** provided in **mV**.

LoRa radio channel is configured with several parameters including:

```
#define RF FREOUENCY
                                                  868000000 // Hz
#define TX_OUTPUT_POWER
                                                  14
                                                           // dBm - max 21 dBm
#define LORA_BANDWIDTH
                                                  0
                                                           // [0: 125 kHz,
                                                              1: 250 kHz,
                                                           // 2: 500 kHz,
                                                               3: Reserved]
                                                           // [SF7..SF12]
#define LORA_SPREADING_FACTOR
#define LORA CODINGRATE
                                                           // [1: 4/5,
                                                              2: 4/6,
                                                           //
                                                           // 3: 4/7,
                                                           // 4: 4/8]
                                                           // Same for Tx and Rx
#define LORA_PREAMBLE_LENGTH
                                                  8
#define LORA_SYMBOL_TIMEOUT
                                                  Λ
                                                           // Symbols
#define LORA_FIX_LENGTH_PAYLOAD_ON
                                                  false
#define LORA_IQ_INVERSION_ON
                                                  false
The LoRawan APP.h library includes:
       Radio.Send( (uint8 t *)txPacket, strlen(txPacket) );
to send a packet
and
    RadioEvents.RxDone = OnRxDone;
    Radio.Init( &RadioEvents );
   void OnRxDone(uint8_t *payload,uint16_t size,int16_t rssi,int8_t snr ) { }
to receive Lora packets.
```

Puts the LoRa modem into deep sleep state. The activated modem requires at least 10 mA to stay awake.

Our first code example starts with the configuration of the radio parameters including: the frequency, the signal bandwidth, the spreading factor, the coding rate, etc.

At the receiving side we need to use the same parameters.

The integrated RGB LED needs about 5 mA to be active, if you may deactivate the LED with:

```
turnOffRGB();
```

Radio.Sleep();

To activate the LED you may use:

```
turnOnRGB(COLOR_SEND,0); - red
turnOnRGB(COLOR_RECEIVED,0); - green
```

In order to keep the power consumption during the passive periods as low as possible you have to use these 3 functions:

- lowPowerHandler();Radio.Sleep();
- turnOffRGB();

## 3.1.1 Sending data packet (battery voltage)

This first example of LoRa sender implements only some low power features , the code just sends the value of the battery voltage.

```
#include "LoRaWan_APP.h"
#include "Arduino.h"
#ifndef LoraWan_RGB
#define LoraWan_RGB 0
#endif
                                                     868500000 // Hz
#define RF_FREQUENCY
#define TX_OUTPUT_POWER
                                                     14
                                                           // dBm
                                                               // [0: 125 kHz,
#define LORA_BANDWIDTH
                                                     0
                                                               // 1: 250 kHz,
                                                               // 2: 500 kHz,
                                                               // 3: Reserved]
// [SF7..SF12]
#define LORA_SPREADING_FACTOR
                                                     9
#define LORA_CODINGRATE
                                                     1
                                                               // [1: 4/5,
                                                               // 2: 4/6,
                                                               // 3: 4/7,
                                                               // 4: 4/8]
#define LORA_PREAMBLE_LENGTH
                                                     8
                                                               // Same for Tx and Rx
#define LORA_SYMBOL_TIMEOUT
                                                               // Symbols
                                                     0
#define LORA_FIX_LENGTH_PAYLOAD_ON
                                                     false
#define LORA_IQ_INVERSION_ON
                                                     false
#define RX_TIMEOUT_VALUE
                                                     1000
#define BUFFER_SIZE
                                                     30 // Define the payload size here
char txPacket[BUFFER_SIZE];
static RadioEvents_t RadioEvents;
void OnTxDone( void );
void OnTxTimeout( void );
typedef enum
    LOWPOWER, ReadVoltage, TX // 3 states (1,2,3)
} States_t;
States_t state;
bool sleepMode = false;
int16 t rssi, rxSize;
uint16_t voltage;
void setup()
    Serial.begin(9600);
    voltage = 0:
    rssi=0;
    RadioEvents.TxDone = OnTxDone;
    RadioEvents.TxTimeout = OnTxTimeout;
    Radio.Init( &RadioEvents );
    Radio.SetChannel( RF FREQUENCY );
    Radio.SetTxConfig( MODEM_LORA, TX_OUTPUT_POWER, 0, LORA_BANDWIDTH,
                                    LORA_SPREADING_FACTOR, LORA_CODINGRATE,
                                    LORA_PREAMBLE_LENGTH, LORA_FIX_LENGTH_PAYLOAD_ON,
                                    true, 0, 0, LORA_IQ_INVERSION_ON, 3000);
    state=ReadVoltage;
}
void loop()
  switch(state)
  {
    case TX:
      sprintf(txPacket, "%s", "ADC battery (mV): ");
```

```
sprintf(txPacket+strlen(txPacket), "%d", voltage);
      if(voltage<(uint16_t)3680)turnOnRGB(COLOR_SEND,0);</pre>
      else turnOnRGB(COLOR_RECEIVED, 200);
      Serial.printf("\r\nsending packet \"\s\" , length \sd\r\n", txPacket, strlen(txPacket));
      Radio.Send( (uint8_t *)txPacket, strlen(txPacket) );
      state=LOWPOWER;
      break:
    }
    case LOWPOWER:
    {
      lowPowerHandler();delay(100);
      turnOffRGB();
      delay(2000); //LowPower time
      state = ReadVoltage;
      break;
    case ReadVoltage:
      pinMode(VBAT_ADC_CTL,OUTPUT);
      digitalWrite(VBAT_ADC_CTL,LOW);
      voltage=analogRead(ADC)+550; //*2;
      pinMode(VBAT_ADC_CTL, INPUT);
      state = TX;
      break;
    }
     default:
          break;
  Radio.IrqProcess();
void OnTxDone( void )
  Serial.print("TX done!");
  turnOnRGB(0,0);
}
void OnTxTimeout( void )
{
    Radio.Sleep( );
    Serial.print("TX Timeout....");
    state=ReadVoltage;
    Serial.print(state);
```



Fig 3.1 Sending three LoRa packets

## 3.1.2 Sending data packet with low power management

In the following example we introduce the element of power management. During the **passive period** we downgrade the activity of the MCU with **lowPowerHandler()**, we suspend the activity of the LoRa modem with **Radio.Sleep()**, and we deactive integrated LED with **turnOffRGB()**.

These preparations allow us to reduce the power consumption (current) to about **20 µA** during the passive periods defined as - timetillwakeup 15000.

During the active period defined by - timetillsleep 1000, the voltage capture and the LoRa packet transmission, power consumption goes up to 60 mA or more depending on the transmission power TX OUTPUT POWER parameter.

```
#include "LoRaWan_APP.h"
#include "Arduino.h"
#define timetillsleep 1000
#define timetillwakeup 15000
static TimerEvent_t sleep;
static TimerEvent_t wakeUp;
uint8_t lowpower=1;
#ifndef LoraWan_RGB
#define LoraWan_RGB 0
#endif
                                                     868500000 // Hz
#define RF_FREQUENCY
#define TX_OUTPUT_POWER
                                                     14
                                                               // dBm
#define LORA BANDWIDTH
                                                     0
                                                               // [0: 125 kHz,
                                                               // 1: 250 kHz.
                                                               // 2: 500 kHz,
                                                               // 3: Reserved]
// [SF7..SF12]
#define LORA_SPREADING_FACTOR
#define LORA_CODINGRATE
                                                     1
                                                               // [1: 4/5,
                                                                // 2: 4/6,
                                                               // 3: 4/7,
                                                               // 4: 4/8]
                                                                // Same for Tx and Rx
#define LORA_PREAMBLE_LENGTH
                                                     8
#define LORA_SYMBOL_TIMEOUT
                                                                // Symbols
#define LORA_FIX_LENGTH_PAYLOAD_ON
                                                     false
#define LORA_IQ_INVERSION_ON
                                                     false
#define RX_TIMEOUT_VALUE
                                                     1000
#define BUFFER_SIZE
                                                     30 // Define the payload size here
char txPacket[BUFFER_SIZE];
static RadioEvents_t RadioEvents;
void OnTxDone( void );
void OnTxTimeout( void );
typedef enum {LOWPOWER, ReadVoltage, TX} States_t;
States_t state;
bool sleepMode = false;
int16 t rssi, rxSize;
uint16_t voltage;
void onSleep()
  Serial.printf("Going into lowpower mode, %d ms later wake up.\r\n",timetillwakeup);
  lowpower=1; turnOffRGB(); //Radio.Sleep();
  //timetillwakeup ms later wake up;
  TimerSetValue( &wakeUp, timetillwakeup );
  TimerStart( &wakeUp );
void onWakeUp()
  Serial.printf("Woke up, %d ms later into lowpower mode.\r\n",timetillsleep);
  lowpower=0;
  //timetillsleep ms later into lowpower mode;
  TimerSetValue( &sleep, timetillsleep );
  TimerStart( &sleep );
}
```

```
void setup() {
    Serial.begin(9600);
    voltage = 0;
    rssi=0:
    RadioEvents.TxDone = OnTxDone;
    RadioEvents.TxTimeout = OnTxTimeout;
    Radio.Init( &RadioEvents );
    Radio.SetChannel( RF_FREQUENCY );
    Radio.SetTxConfig( MODEM_LORA, TX_OUTPUT_POWER, 0, LORA_BANDWIDTH,
                                    LORA_SPREADING_FACTOR, LORA_CODINGRATE,
                                    LORA_PREAMBLE_LENGTH, LORA_FIX_LENGTH_PAYLOAD_ON,
                                    true, 0, 0, LORA_IQ_INVERSION_ON, 3000 );
    state=ReadVoltage;
    Radio.Sleep(); // LoRa modem sleep mode
    TimerInit( &sleep, onSleep );
    TimerInit( &wakeUp, onWakeUp );
    onSleep();
}
void loop()
if(lowpower) { lowPowerHandler();
else
  {
  switch(state)
  {
    case TX:
      sprintf(txPacket,"%s","ADC_battery (mV): ");
      sprintf(txPacket+strlen(txPacket), "%d", voltage);
      if (voltage<(uint16_t)3680)turnOnRGB(COLOR_SEND,0);</pre>
      else turnOnRGB(COLOR_RECEIVED, 0);
      Serial.printf("\r\nsending packet \"%s\" , length %d\r\n",txPacket, strlen(txPacket));
      Radio.Send( (uint8_t *)txPacket, strlen(txPacket) );
      state=LOWPOWER; delay (100);
     break:
    case LOWPOWER:
      Serial.println("going to low power mode");
      delay(100);
      turnOffRGB();
      delay(100);
                   //LowPower time
      state = ReadVoltage;
      break;
    }
    case ReadVoltage:
      Serial.println("reading battery voltage");
      pinMode(VBAT_ADC_CTL,OUTPUT);
      digitalWrite(VBAT_ADC_CTL,LOW);
      voltage=analogRead(ADC) *2;
      pinMode(VBAT_ADC_CTL, INPUT);
      state = TX:
      break;
     default: break;
  Radio.IrqProcess();
 }
void OnTxDone( void )
  Serial.println("TX done!");
  turnOffRGB();Radio.Sleep();
void OnTxTimeout( void )
    Radio.Sleep( );
    Serial.println("TX Timeout....");
    state=ReadVoltage;
    Serial.println(state);
```





Fig 3.2 Sending three LoRa packets in high\_power window (1000 ms).

Power/current consumption during the **high\_power** (up to 200 mA) and **low\_power** (19.93 μA) states.

## 3.2 LoRa - receiving the packets with battery state

At the reception side we use the same headers as in the sender code to keep the identical parameters. The receiver is always active but it stays in sleep mode awaiting the new packet that is signaled by the associated interruption captured by Radio.IrgProcess();

```
#include "LoRaWan_APP.h"
#include "Arduino.h"
#ifndef LoraWan RGB
#define LoraWan_RGB 0
#endif
#define RF FREQUENCY
                                                     868000000 // Hz
                                                     868500000 // Hz
#define RF_FREQUENCY
#define TX_OUTPUT_POWER
                                                               // dBm
                                                     14
                                                                // [0: 125 kHz,
#define LORA_BANDWIDTH
                                                                // 1: 250 kHz,
                                                                // 2: 500 kHz,
                                                                // 3: Reserved]
                                                                // [SF7..SF12]
#define LORA_SPREADING_FACTOR
#define LORA_CODINGRATE
                                                     1
                                                                // [1: 4/5,
                                                                // 2: 4/6,
                                                                // 3: 4/7,
                                                                // 4: 4/81
                                                                // Same for Tx and Rx
#define LORA_PREAMBLE_LENGTH
                                                     8
#define LORA_SYMBOL_TIMEOUT
                                                                // Symbols
                                                     0
#define LORA_FIX_LENGTH_PAYLOAD_ON
                                                     false
#define LORA_IQ_INVERSION_ON
                                                     false
#define RX_TIMEOUT_VALUE
                                                     1000
#define BUFFER_SIZE
                                                     30 // Define the payload size here
char txpacket[BUFFER_SIZE];
char rxpacket[BUFFER_SIZE];
static RadioEvents_t RadioEvents;
int16_t txNumber;
int16_t rssi,rxSize;
void setup() {
    Serial.begin(9600);
    txNumber=0:
    rssi=0;
    RadioEvents.RxDone = OnRxDone;
    Radio.Init( &RadioEvents );
    Radio.SetChannel( RF_FREQUENCY );
  Radio.SetRxConfig( MODEM_LORA, LORA_BANDWIDTH, LORA_SPREADING_FACTOR,
                                    LORA_CODINGRATE, 0, LORA_PREAMBLE_LENGTH,
                                    LORA_SYMBOL_TIMEOUT, LORA_FIX_LENGTH_PAYLOAD_ON,
                                    0, true, 0, 0, LORA_IQ_INVERSION_ON, true );
   turnOnRGB(COLOR_SEND,0); //change rgb color
   Serial.println("into RX mode");
void loop()
  Radio.Rx(0);
  delay(500);
  Radio.IrqProcess();
void OnRxDone( uint8_t *payload, uint16_t size, int16_t rssi, int8_t snr )
    rssi=rssi;
    rxSize=size:
    memcpy(rxpacket, payload, size);
rxpacket[size]='\0';
    turnOnRGB(COLOR_RECEIVED, 0);
    Radio.Sleep( );
    Serial.printf("\r\nreceived packet \"%s\" with rssi %d , length %d\r\n",rxpacket,rssi,rxSize);
}
```

#### The IDE terminal output (fragment):


received packet "ADC\_battery (mV): 3886" with rssi -41 , length 22 received packet "ADC\_battery (mV): 3886" with rssi -40 , length 22 received packet "ADC\_battery (mV): 3886" with rssi -41 , length 22 received packet "ADC\_battery (mV): 3886" with rssi -39 , length 22 received packet "ADC\_battery (mV): 3886" with rssi -39 , length 22 received packet "ADC\_battery (mV): 3886" with rssi -40 , length 22 received packet "ADC\_battery (mV): 3886" with rssi -41 , length 22 received packet "ADC\_battery (mV): 3886" with rssi -39 , length 22 received packet "ADC\_battery (mV): 3886" with rssi -39 , length 22 received packet "ADC\_battery (mV): 3886" with rssi -40 , length 22



Fig 3.3 Reception of 2 LoRa packets

### 3.3 Sending LoRa packets with external sensor data

In this section we are going to add an external sensor connected via I2C bus. This sensor (SHT21) will provide us with two data values: temperature and humidity. In this context you can use any other sensor to provide luminosity, CO2, atmospheric pressure, etc.

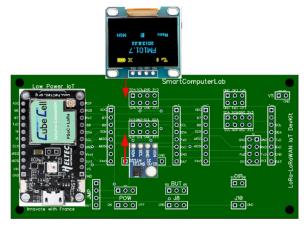

**Fig 3.1** IoT DevKit for Low Power IoT design with main board and SHT21 sensor.

The following **power consumption diagram** for the terminal node shows the current values required for different period and phases of the operational cycle.

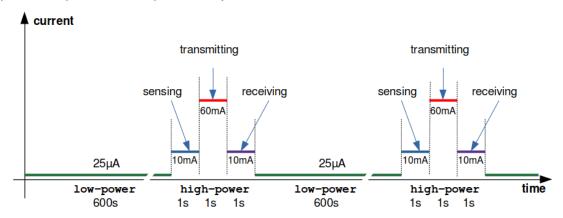


Fig 3.2 Power consumption diagram (current for 3.3V) with low and high power periods and high-power operational phases.

SF	Chirps / Symbol	SNR	Airtime <sup>a</sup>	Bitrate
7	128	-7.5	56.5 ms	5469 bps
8	256	-10	-103  ms	3125 bps
9	512	-12.5	185.3 ms	1758 bps
10	1024	-15	371 ms	977 bps
11	2048	-17.5	741 ms	537 bps
12	4096	-20	1318.9 ms	293 bps

<sup>&</sup>lt;sup>a</sup> 20 bytes per packet and Code Rate = 4/5.

Fig 3.3 Transmission – airtime during high power period for 20-byte payload and 4/5 coderate

Example of power consumption evaluation in µA for SF=8, CR=4/8, and 16 byte payload:

• airtime = 103\*(16/20)\*(8/5) ms = 103\*128/100 = 132 ms (less than 200 ms)

transmission current for 14 dBm (25 mW radio) we need about 40 mA with 3.3V

Let us calculate the average current consumption for :

- 600 sec low\_power period
- 2.2 sec high\_power period with 3 phases

 $(600^{*}25 + 1^{*}10000 + 0.2^{*}60000 + 1^{*}10000)/603 = 157,545605307 => 80 \mu A$ 

For a battery with the capacity of 1000 mAh.

1000\*1000/80 =6410,25 => 12500 hours or 12500/750 => 16 months

That is more than a year of operation.

In general the transmitting current depends on TX power set to:

- for 14 dBm (25 mW radio) we need about 40 mA (3.3V)
- for 17 dBm (50 mW radio) we need about 60 mA (3.3V)
- for 20 dBm (100 mW radio) we need about 100 mA (3.3V)

The following figure shows the transmission time as a function of payload size and the spreading factor value.

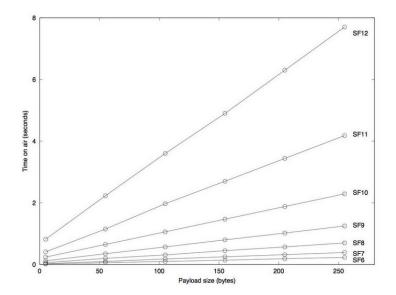


Fig 3.4 Time on Air for different spreading factors and payload size for 125 kHz band and 4/5 coding rate.

If we use different coding rate such as 4/8 we need to modify the obtained value with the 8/5 factor.

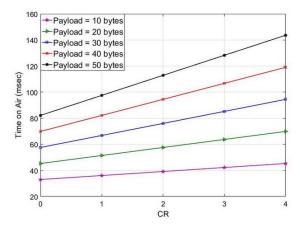


Fig 3.5 Time on Air for different payload size and coding rate (CR=1:5/4 to CR=4:8/4).

In the proposed example code we send 20-byte payload frame.

Note that our DevKit may be completed with a small solar providing max 100 mA (6V) cell such as:

As we need about 200  $\mu A$  of continuous power supply only 2% of the cell efficiency is enough to keep our terminal node running.



### 3.3.1Terminal and the gateway codes

The terminal part of this code contains a number of timing parameters. The initial values for time to sleep and time to wake up. Consequently, the time to wake up value is modified with the received timeout value provide by the gateway. The time till sleep is fixed and is related to the timing of the sensor capture and the time necessary to wait for the ACK packet. ACK packet contains new time to wake up value (if not equal to 0).

```
uint32_t timetillsleep=5000;uint32_t timetillwakeup=12000;
```

The following sequence of instructions determines the reception phase during the **high-power period** (time to sleep).

```
long debut, del=2000;
// the receiver must respond in this waiting period - reception window
.

turnOnRGB(COLOR_SEND,0);
debut=millis(); delay(300); turnOffRGB(); Radio.Rx(0);
while(millis()<(debut+del))
{
   Radio.IrqProcess(); delay(100);
}</pre>
```

#### 3.3.1.1 The code of terminal node

```
#include "Arduino.h"
#define LoraWan_RGB 5
#include "LoRaWan_APP.h"
#include <Wire.h>
#include "SHT21.h"
SHT21 SHT21;
#define RF_FREQUENCY
                                                     868500000 // Hz
#define TX OUTPUT POWER
                                                                // dBm - 25mW, 17-50mW, 20 - 100mW
                                                     14
                                                                // [0: 125 kHz,
#define LORA_BANDWIDTH
                                                     0
                                                                // 1: 250 kHz,
                                                                // 2: 500 kHz,
                                                                // 3: Reserved]
// 3: Reserved]
#define LORA_SPREADING_FACTOR
                                                                // [SF7..SF12]
#define LORA CODINGRATE
                                                                // [1: 4/5,
                                                                // 2: 4/6,
                                                                   3: 4/7,
                                                                   4: 4/8]
#define LORA_PREAMBLE_LENGTH
                                                     8
                                                                // Same for Tx and Rx
#define LORA_SYMBOL_TIMEOUT
                                                     Λ
                                                                // Symbols
#define LORA_FIX_LENGTH_PAYLOAD_ON
                                                     false
#define LORA IQ INVERSION ON
                                                     false
#define RX_TIMEOUT_VALUE
                                                     1000
#define BUFFER_SIZE
                                                     30 // Define the payload size here
char txPacket[BUFFER SIZE];
static RadioEvents_t RadioEvents;
```

```
void OnTxDone( void );
void OnTxTimeout( void );
uint32_t timetillsleep=5000;
uint32_t timetillwakeup=12000;
static TimerEvent_t sleepGo;
static TimerEvent_t wakeUp;
uint8_t lowpower=1, highpower=0;
int16_t txNumber;
bool sleepMode = false;
int16_t rssi,rxSize;
uint16_t voltage;
float t,h;
int dt, dh;
char buff[32];
union
{
uint8_t frame[16];
float sensor[4];
} sdp; // send data packet
void getSHT21()
{
    pinMode(Vext, OUTPUT);
    digitalWrite(Vext, LOW); delay(200);
    Wire.begin(29,28);
    SHT21.begin();
    sdp.sensor[0]=SHT21.getTemperature();
    sdp.sensor[1]=SHT21.getHumidity();
    delay(100);
    Wire.end();
    Serial.println(sdp.sensor[0]); Serial.println(sdp.sensor[1]);
    digitalWrite(Vext, HIGH);
}
void onSleep()
  Serial.printf("Going into lowpower mode, %d ms later wake up.\r\n",timetillwakeup);
  lowpower=1;highpower=0;
  //timetillwakeup ms later wake up;
  TimerSetValue( &wakeUp, timetillwakeup );
  TimerStart( &wakeUp );
void onWakeUp()
  Serial.printf("Woke up, %d ms later into lowpower mode.\r\n",timetillsleep);
  lowpower=0;highpower=1; //turnOnRGB(0,0);
  //timetillsleep ms later into lowpower mode;
  TimerSetValue( &sleepGo, timetillsleep );
  TimerStart( &sleepGo );
void OnTxDone( void )
  Serial.println("TX done!");Radio.Sleep();
void OnTxTimeout( void )
    Radio.Sleep(); Serial.println("TX Timeout.....");
void setup() {
    Serial.begin(9600);
    pinMode (Vext, OUTPUT);
    digitalWrite(Vext,LOW); //SET POWER
    voltage = 0;
    rssi=0;
    RadioEvents.TxDone = OnTxDone;
    RadioEvents.TxTimeout = OnTxTimeout;
    Radio.Init( &RadioEvents );
    Radio.SetChannel( RF_FREQUENCY );
    Radio.SetTxConfig( MODEM_LORA, TX_OUTPUT_POWER, 0, LORA_BANDWIDTH,
                                    LORA_SPREADING_FACTOR, LORA_CODINGRATE,
```

```
LORA_PREAMBLE_LENGTH, LORA_FIX_LENGTH_PAYLOAD_ON,
                                        true, 0, 0, LORA_IQ_INVERSION_ON, 3000 );
  //state=ReadVoltage;
  Radio.Sleep();
  TimerInit(&sleepGo, onSleep);
                                        // activate on event
  TimerInit( &wakeUp, onWakeUp );
  onSleep();
long debut, del=2000; // the receiver must respond in this waiting period
void loop() {
  if(lowpower){
    lowPowerHandler();
  if(highpower)
       Serial.println("in highpower");
       getSHT21();
      pinMode(VBAT_ADC_CTL,OUTPUT);
       digitalWrite(VBAT_ADC_CTL, LOW);
       voltage=analogRead(ADC)+400;
      pinMode(VBAT_ADC_CTL, INPUT);
       sprintf(txPacket, "V:%d,T:%d,H:%d",voltage,(int)sdp.sensor[0],(int)sdp.sensor[1]);
       Serial.printf("sending packet [%s], length: %d\n",txPacket,strlen(txPacket));
       delay(100);
      Radio.Send( (uint8_t *)txPacket, strlen(txPacket) );
      highpower=0;lowpower=1;
 Radio.IrqProcess();
                             100ms 1s 3s 10s 1min 10min
                                                                          LIVE VIEW
          LOCK Y-AXIS
       30 μA
                                                   00:00:02
131.647
       25 µA
       20 μA
       10 µA
       5 µА
            9.28<sub>UA</sub>
                     25.68µA
                              7.000s
                                      64.97μο
                                                     Hold SHIFT+LEFT CLICK and DRAG to make a
                                                100ms 1s 3s 10s 1min 10min
                                                                                                 LIVE VIEW
                           LOCK Y-AXIS
                       60 mA
                                                                                                    10.71 mA
                                         00:00:06
                                                                Δ7.000s
                                       99.99mA
                             3 25mA
                                                 7.000s
                                                          22 78mc
                                                                           Hold SHIFT+LEFT CLICK and DRAG to make a
```

Fig 3.4 (a) (b) Low\_power and high\_power sensing periods



Fig 3.4 (c) high\_power transmission period

```
in highpower
21.23
35.37
sending packet [V:4028, T:21, H:35], length: 16
TX Going into lowpower mode, 12000 ms later w?Woke up, 5000 ms later into lowpower mode.
in highpower
21.20
35.44
sending packet [V:4046, T:21, H:35], length: 16
TX Going into lowpower mode, 12000 ms later w?Woke up, 5000 ms later into lowpower mode.
in highpower
21.17
35.37
sending packet [V:4046, T:21, H:35], length: 16
TX Going into lowpower mode, 12000 ms later w?Woke up, 5000 ms later into lowpower mode.
in highpower
21.18
37.14
sending packet [V:4046,T:21,H:37], length: 16
TX Going into lowpower mode, 12000 ms later w?Woke up, 5000 ms later into lowpower mode.
in highpower
```

#### To do:

- · Test the above codes
- Modify the radio parameters such as spreading factor, signal bandwidth and the transmission power and observe the current consumption

# Lab 4 – LoRa\_WiFi gateways for CubeCell terminals

In this lab we are going to introduce the complete IoT architectures including terminal nodes and the gateway nodes allowing us to communicate with the IoT servers.

The simplest way to extend the capacity of the receiver node is to add a WiFi modem. This can be done by adding an ESP32 board to our kit and connect both MCUs via an UART link.

## 4.1 Simple UART connection to WiFi gateway with ESP32

Let us show how to connect a CubeCell board with an **ESP32** board using software serial. The following code example runs on CubCell board. It generates four numbers and outputs them on a **softSerial** link.

#### 4.1.1 Sending data from CubeCell via an UART link

```
#include "softSerial.h"
softSerial ss(GPIO5 /*TX pin*/, GPIO3 /*RX pin*/);
void setup()
  Serial.begin (9600); delay (200);
  Serial.println();
  Serial.println("softSerial init");
  ss.begin(9600); delay(200);
float s1=0.1, s2=0.2, s3=0.3, s4=0.4;
union
uint8_t frame[16];
float sensor[4];
} sdp; // send data packet
void loop()
  Serial.println("send...");
  s1+=1.0;s2+=1.0;s3+=1.0;s4+=1.0;
  sdp.sensor[0]=s1; sdp.sensor[1]=s2; sdp.sensor[2]=s3; sdp.sensor[3]=s4;
  for(int i=0;i<16;i++) ss.sendByte(sdp.frame[i]);</pre>
  delay(1000);
```

4 800mAh Tanamananan Tanamananan Tanamananan Tanamanan Tanaman Tana

Fig 4.1 Extended CubeCell DevKit with an ESP32 board

## 4.1.2 Receiving data on ESP32 via UART from CubeCell

```
#include <Arduino.h>
HardwareSerial uart(2); // 16 -RX, 17-TX
union
{
uint8_t frame[16];
float sensor[4];
} rdp; // send data packet
```

```
void setup() {
  // Open serial communications and wait for port to open:
  Serial.begin(9600);
  delav(200);
  Serial.println();
  Serial.println("Goodnight moon!");
 // set the data rate for the SoftwareSerial port
  uart.begin(9600); delay(2000);
char recv;
long lasttime=0:
int i=0;
void loop()
if (uart.available())
  recv=uart.read(); rdp.frame[i]=(uint8_t) recv; i++;
  if(i>15)
    Serial.println(rdp.sensor[0]);Serial.println(rdp.sensor[1]);
    Serial.println(rdp.sensor[2]); Serial.println(rdp.sensor[3]);
    Serial.println();i=0;
    if(millis()-lasttime>10000) //the data may be sent every 20 seconds
      Serial.println("ThingSpeak begin");
      Serial.println("Fields update");
      lasttime=millis():
    }
  }
  else
    delay(1000);
    i=0:
  }
```

# 4.1.3 Receiving data from CubeCell via an UART link and sending them to ThingSpeak

On the ESP32 board side we use HardwareSerial. The board receives the data on the HardwareSerial link and sends them to the ThingSpeak server. The ESP32 board is connected to ThingSpeak server via a WiFi link. The received (via uart) data are sent to the ThingSpeak server every 20 seconds.

```
#include <Arduino.h>
#include <ThingSpeak.h>
#include <WiFi.h>
HardwareSerial uart(2); // 16 -RX, 17-TX
char* ssid
              = "PhoneAP";
char* pass = "smartcomputerlab";
WiFiClient client:
unsigned long myChannelNumber = 114; // Thinspeak channel
const char *myWriteAPIKey="E8KYBCRD2Z59LVWJ" ; // write code
union
{
uint8_t frame[16];
float sensor[4];
} rdp; // send data packet
void setup() {
  // Open serial communications and wait for port to open:
  Serial.begin(9600);
  delay(2000);
  Serial.println();
  Serial.println("Goodnight moon!");
  // set the data rate for the SoftwareSerial port
  uart.begin(9600); delay(2000);
  WiFi.disconnect(true);
```

```
WiFi.mode(WIFI_STA);
  WiFi.begin(ssid, pass);
  while (WiFi.status() != WL_CONNECTED) {
    delay(500); Serial.print(".");
IPAddress ip = WiFi.localIP();
Serial.print("IP Address: ");Serial.println(ip);
ThingSpeak.begin(client);
char recv;
long lasttime=0;
int i=0;
void loop()
if (uart.available())
  recv=uart.read(); rdp.frame[i]=(uint8_t) recv; i++;
  if(i>15)
    Serial.println(rdp.sensor[0]); Serial.println(rdp.sensor[1]);
    Serial.println(rdp.sensor[2]);Serial.println(rdp.sensor[3]);
    Serial.println(); i=0;
    if(millis()-lasttime>20000) //the data may be sent every 20 seconds
      Serial.println("ThingSpeak begin");
      Serial.println("Fields update");
      ThingSpeak.setField(1, rdp.sensor[0]);
      ThingSpeak.setField(2, rdp.sensor[1]);
ThingSpeak.setField(3, rdp.sensor[2]);
ThingSpeak.writeFields(myChannelNumber, myWriteAPIKey);
      lasttime=millis();
    }
  }
  else
    delay(1000);
    i=0;
  }
```

# 4.2 LoRa sender and receiver on CubeCell and WiFi gateway with ESP32

In the following example we show a complete IoT architecture with one terminal node (CellCube) and one gateway board with CellCube receiver and a **UART bridge to ESP32**.

#### 4.2.1 CubeCell low power LoRa sender

```
#include "Arduino.h"
#include "LoRaWan_APP.h"
#include <Wire.h>
#include "SHT21.h"
SHT21 SHT21;
//#define timetillsleep 5000
//#define timetillwakeup 12000
uint32_t timetillsleep=5000;
uint32_t timetillwakeup=12000;
static TimerEvent_t sleep;
static TimerEvent_t wakeUp;
uint8_t lowpower=1, highpower=0;
#ifndef LoraWan_RGB
#define LoraWan_RGB 0
#endif
#define RF_FREQUENCY
                                                       868500000 // Hz
#define TX_OUTPUT_POWER
                                                       14
                                                                 // dBm
#define LORA_BANDWIDTH
                                                                 // [0: 125 kHz,
                                                                 // 1: 250 kHz,
// 2: 500 kHz,
// 3: Reserved]
                                                                 // [SF7..SF12]
// [1: 4/5,
#define LORA_SPREADING_FACTOR
#define LORA_CODINGRATE
                                                       1
                                                                 // 2: 4/6,
                                                                  // 3: 4/7,
                                                                 // 4: 4/8]
                                                                  // Same for Tx and Rx
#define LORA_PREAMBLE_LENGTH
                                                       8
#define LORA SYMBOL TIMEOUT
                                                       0
                                                                  // Symbols
#define LORA_FIX_LENGTH_PAYLOAD_ON
                                                       false
#define LORA_IQ_INVERSION_ON
                                                       false
#define RX_TIMEOUT_VALUE
                                                       1000
#define BUFFER_SIZE
                                                       30 // Define the payload size here
char txPacket[BUFFER_SIZE];
char rxpacket[BUFFER_SIZE];
static RadioEvents_t RadioEvents;
void OnTxDone( void );
void OnTxTimeout( void );
int16_t txNumber;
int16_t rssi,rxSize;
union
uint8_t frame[16];
float sensor[4];
} sdp; // send data packet
void getSHT21()
    pinMode(Vext, OUTPUT);
```

```
digitalWrite(Vext, LOW);
    delay(50);
    Wire.begin(29,28);
    SHT21.begin();
    sdp.sensor[0]=SHT21.getTemperature();
    sdp.sensor[1]=SHT21.getHumidity();
    Wire.end();
    digitalWrite(Vext, HIGH);
void onSleep()
  Serial.printf("Going into lowpower mode, %d ms later wake up.\r\n",timetillwakeup);
  lowpower=1;highpower=0;
  //timetillwakeup ms later wake up;
  TimerSetValue( &wakeUp, timetillwakeup );
  TimerStart( &wakeUp );
void onWakeUp()
{
  Serial.printf("Woke up, %d ms later into lowpower mode.\r\n",timetillsleep);
  lowpower=0; highpower=1;
  //timetillsleep ms later into lowpower mode;
  TimerSetValue( &sleep, timetillsleep );
  TimerStart( &sleep );
void setup() {
  // put your setup code here, to run once:
  Serial.begin(9600);
  RadioEvents.RxDone = OnRxDone;
  RadioEvents.TxDone = OnTxDone;
  RadioEvents.TxTimeout = OnTxTimeout;
  Radio.Init( &RadioEvents );
  Radio.SetChannel( RF_FREQUENCY );
  Radio.SetTxConfig( MODEM_LORA, TX_OUTPUT_POWER, 0, LORA_BANDWIDTH,
                                    LORA_SPREADING_FACTOR, LORA_CODINGRATE,
                                    LORA_PREAMBLE_LENGTH, LORA_FIX_LENGTH_PAYLOAD_ON,
                                    true, 0, 0, LORA_IQ_INVERSION_ON, 3000 );
  Radio.Sleep( );
  TimerInit( &sleep, onSleep );
  TimerInit( &wakeUp, onWakeUp );
  onSleep();
long debut, del=2000; // the receiver must respond in this waiting period
uint16_t voltage;
void loop() {
  if(lowpower){
    lowPowerHandler();
  if (highpower)
     {
      char buffp[32];
      turnOnRGB(COLOR_SEND, 0);
      getSHT21(); //strcpy(buff, "hello");
      voltage=getBatteryVoltage();
      sdp.sensor[2]=(float)((int)voltage);
      Serial.println(voltage); Serial.println(sdp.sensor[2]);
      Radio.Send( sdp.frame, 16);
      debut=millis(); delay(300); turnOffRGB(); Radio.Rx(0);
      while (millis() < (debut+del))
        Radio.IrqProcess(); delay(100);
       highpower=0;
    }
}
uint32_t tout;
void OnRxDone( uint8_t *payload, uint16_t size, int16_t rssi, int8_t snr )
```

```
{
    rssi=rssi;
    rxSize=size;
   memcpy(rxpacket, payload, size );
    rxpacket[size]='\0';
    tout=atoi(rxpacket);
    turnOnRGB(COLOR_RECEIVED, 0);
    timetillwakeup=tout;
    Radio.Sleep();
    Serial.printf("\r\nreceived packet: %d rssi: %d , length: %d\n",tout,rssi,rxSize);delay(100);
    turnOffRGB();
}
void OnTxDone( void )
  Serial.println("TX done!");
  turnOffRGB();
void OnTxTimeout( void )
    Radio.Sleep( );
    Serial.println("TX Timeout.....");
}
```

#### 4.2.2 CubeCell LoRa receiver and UART bridge

```
#include "LoRaWan_APP.h"
#include "Arduino.h"
#include "softSerial.h"
softSerial ss(GPIO1 /*TX pin*/, GPIO2 /*RX pin*/);
 * set LoraWan_RGB to 1, the RGB active in loraWan
 * RGB red means sending;
 * RGB green means received done;
#ifndef LoraWan RGB
#define LoraWan_RGB 0
#endif
#define RF_FREQUENCY
                                                      868500000 // Hz
#define TX_OUTPUT_POWER
                                                               // dBm
// [0: 125 kHz,
                                                      14
#define LORA_BANDWIDTH
                                                      n
                                                                // 1: 250 kHz,
                                                                // 2: 500 kHz,
// 3: Reserved]
                                                                // [SF7..SF12]
#define LORA_SPREADING_FACTOR
                                                      9
                                                                // [1: 4/5,
#define LORA_CODINGRATE
                                                      1
                                                                // 2: 4/6,
                                                                // 3: 4/7,
                                                                // 4: 4/8]
#define LORA_PREAMBLE_LENGTH
                                                                // Same for Tx and Rx
#define LORA_SYMBOL_TIMEOUT
                                                      0
                                                                // Symbols
#define LORA_FIX_LENGTH_PAYLOAD_ON
                                                      false
#define LORA_IQ_INVERSION_ON
                                                      false
#define RX TIMEOUT VALUE
                                                      1000
#define BUFFER_SIZE
                                                      30 // Define the payload size here
char txpacket[BUFFER_SIZE];
char rxpacket[BUFFER_SIZE];
static RadioEvents_t RadioEvents;
void OnTxDone( void );
void OnTxTimeout( void );
void OnRxDone( uint8_t *payload, uint16_t size, int16_t rssi, int8_t snr );
typedef enum
    LOWPOWER.
    RX,
    ТX
} States_t;
int16_t txNumber;
States t state;
bool sleepMode = false;
int16_t Rssi,rxSize;
```

```
union
uint8_t frame[16];
float sensor[4];
} rdp; // send data packet
void setup() {
    Serial.begin(9600);
    ss.begin(9600);
    txNumber=0;
    Rssi=0;
    RadioEvents.TxDone = OnTxDone;
    RadioEvents.TxTimeout = OnTxTimeout;
    RadioEvents.RxDone = OnRxDone;
    Radio.Init( &RadioEvents );
    Radio.SetChannel( RF_FREQUENCY );
    Radio.SetTxConfig( MODEM_LORA, TX_OUTPUT_POWER, 0, LORA_BANDWIDTH,
                                    LORA_SPREADING_FACTOR, LORA_CODINGRATE,
                                    LORA_PREAMBLE_LENGTH, LORA_FIX_LENGTH_PAYLOAD_ON,
                                    true, 0, 0, LORA_IQ_INVERSION_ON, 3000 );
    Radio.SetRxConfig( MODEM_LORA, LORA_BANDWIDTH, LORA_SPREADING_FACTOR,
                                    LORA_CODINGRATE, 0, LORA_PREAMBLE_LENGTH,
                                    LORA_SYMBOL_TIMEOUT, LORA_FIX_LENGTH_PAYLOAD_ON,
                                    0, true, 0, 0, LORA_IQ_INVERSION_ON, true );
    state=TX;
}
long tout;
void loop()
  switch(state)
  {
    case TX:
      delay(100);
      txNumber++:
      tout=10000 + random(10000);
                                    // send random timeout
      sprintf(txpacket, "%d", tout);
      turnOnRGB(COLOR_SEND,0); // red
      Serial.printf("\r\nsending packet \"%s\" , length %d\r\n",txpacket, strlen(txpacket));
      Radio.Send( (uint8_t *)txpacket, strlen(txpacket) );
      state=LOWPOWER;
      break:
    case RX:
      Serial.println("into RX mode");
      Radio.Rx(0);
      state=LOWPOWER;
      break;
    case LOWPOWER:
      lowPowerHandler();
      break;
    default:
     break;
    Radio.IrqProcess( );
void OnTxDone( void )
  Serial.print("TX done....");
  turnOnRGB(0,0);
  state=RX;
void OnTxTimeout( void )
{
    Radio.Sleep( );
    Serial.print("TX Timeout....");
    state=TX;
void OnRxDone( uint8_t *payload, uint16_t size, int16_t rssi, int8_t snr )
{
    Rssi=rssi;
```

```
rxSize=size;
memcpy(rdp.frame, payload, size );
//rxpacket[size]='\0';
turnOnRGB(COLOR_RECEIVED,0); // green
for(int i=0;i<size;i++) ss.sendByte(rdp.frame[i]);
Radio.Sleep();
Serial.printf("\r\nreceived packet with Rssi %d , length %d\r\n",Rssi,rxSize);
Serial.println("wait to send next packet");
state=TX;</pre>
```

The UART data are received by the ESP32 and sent to the ThingSpeak server (see 4.1.2)

## 4.3 ESP32 LoRa receiver and WiFi gateway to ThingSpeak

In the following example we use a complete **ESP32 IoT DevKit** with ESP32 and LoRa modem to receive/send the Lora packets and to relay them to ThingSpeak server.

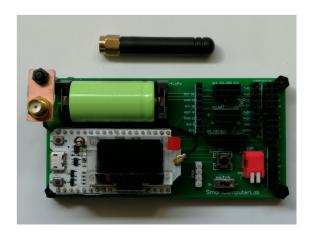


Fig 4.2 An ESP32 board with LoRa modem

This is the code running on ESP32:

```
#include <SPI.h>
#include <LoRa.h>
#include <WiFi.h>
#include "ThingSpeak.h"
char* ssid
                 = "PhoneAP";
char* pass = "smartcomputerlab";
WiFiClient client;
unsigned long myChannelNumber = 114; // Thinspeak channel
const char *myWriteAPIKey="E8KYBCRD2Z59LVWJ" ; // write code
#define SCK 18 // GPIO18 -- SX127x's SCK
#define MISO 19 // GPIO19 -- SX127x's MISO
#define MOSI 23 // GPIO23 -- SX127x's MOSI
#define SS 5 // GPIO25
                  ,, GF1023 -- SX127x's MOSI
5 // GP1005 -- SX127x's CS
15 // GP1015 -- SX127x's RESET
26 // GP1026 -- SY1272'
#define SS
#define RST
#define DI0
                         // GPIO26 -- SX127x's IRQ(Interrupt Request)
#define freq
                  8685E5
#define sf
#define sb
                  125E3
typedef union
  uint8_t frame[16]; // trames avec octets
                        // 4 valeurs en virgule flottante
  float data[4];
} pack_t ; // paquet d'émission
QueueHandle_t dqueue; // queues for data packets
void onReceive(int packetSize)
pack t rdp; int i=0;
if (packetSize == 0) return; // if there's no packet, return
if (packetSize==16)
  while (LoRa.available()) { rdp.frame[i]=LoRa.read();i++; }
  xQueueReset(dqueue); // to keep only the last element
```

```
xQueueSend(dqueue, &rdp, portMAX_DELAY);
  }
}
void setup()
  Serial.begin(9600);
  WiFi.disconnect(true); WiFi.mode(WIFI_STA);
  WiFi.begin(ssid, pass);
  while (WiFi.status() != WL_CONNECTED) {
    delay(500);Serial.print(".");
IPAddress ip = WiFi.localIP();
Serial.print("IP Address: "); Serial.println(ip);
ThingSpeak.begin(client); delay(1000);
  Serial.println("ThingSpeak begin");
  Serial.println("Start Lora");
  SPI.begin(SCK, MISO, MOSI, SS);
  LoRa.setPins(SS,RST,DI0);
  Serial.println(); delay(100); Serial.println();
  if (!LoRa.begin(freq)) {
    Serial.println("Starting LoRa failed!");
    while (1);
Serial.println("Starting LoRa OK!");
LoRa.setSpreadingFactor(sf);
LoRa.setSignalBandwidth(sb);
LoRa.setCodingRate4(5);
LoRa.setPreambleLength(8);
dqueue = xQueueCreate(4,16); // queue for 4 data packets
LoRa.onReceive(onReceive); // pour indiquer la fonction ISR
                            // pour activer l'interruption (une fois)
LoRa.receive();
uint32_t mindel=10000; // 10 seconds
union
  char cbuff[32];
  uint8_t bbuff[32];
} sdp;
int count=20000;
void loop()
pack_t rp;
             // packet elements to send
  xQueueReceive(dqueue,rp.frame,portMAX_DELAY); // 6s,default:portMAX_DELAY
  ThingSpeak.setField(1,rp.data[0]);
  ThingSpeak.setField(2,rp.data[1]);
  ThingSpeak.setField(3,rp.data[2]);
  ThingSpeak.setField(4,rp.data[3]);
  Serial.printf("d1=%2.2f,d2=%2.2f,d3=%2.2f,d4=%2.2f\n",rp.data[0],rp.data[1],rp.data[2],
                 rp.data[3]);
  while (WiFi.status() != WL_CONNECTED) { delay(500);
  ThingSpeak.writeFields(myChannelNumber, myWriteAPIKey);
  count=10000 + random(10000); sprintf(sdp.cbuff, "%d", count);
  delay(400);
  LoRa.beginPacket();
  LoRa.write(sdp.bbuff, strlen(sdp.cbuff));
  LoRa.endPacket();
  delay(mindel); // mindel is the minimum waiting time before sending to ThingSpeak
  LoRa.receive();
```

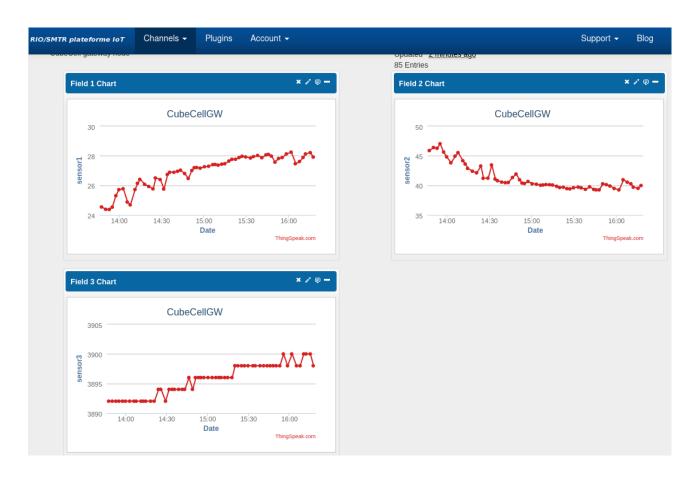


Fig 4.1 ThingSpeak charts - Temperature, humidity and battery level (node with solar cell).

Note that the battery level is going up during the day-light period.

#### To do:

- Add an external EEPROM to prepare the LoRa parameters. Write a program to store LoRa parameters on the EEPROM module. Modify the CubeCell sender in order to read the LoRa parameters form the external EEPROM if it is available.
- Modify the data packet by adding the Chip-ID value (6-bytes) node address. The gateway node sends the ACK packet with the terminal node address. The terminal node ignores the packets with the address not corresponding to its Chip-ID value.
- Build a gateway sending the data messages to an MQTT broker (instead of ThingSpeak server).

# 5. Assignment – terminal's scheduler in gateway node

In this assignment you have to implement a scheduler that will organize the emission (high\_power) periods in the network of the co-operating terminals. Each terminal identified by its Chip\_ID and accepted by the gateway has a simple number (order of arrival). To this number is allocated time slot for the next transmission.

The time-slot is a part of the gateway cycle (e.g. 600 seconds). For example if we have 10 active terminals each terminal obtains a slot of 60 seconds. The beginning of the slot (time) is sent to the terminal each times it sends the new data packet. The arrival of a new terminal and its random transmission (if received and accepted) modifies the scheduler table adding a new slot. Next cycle all terminals (e.g.11 terminals) are dispatched in equal slots of 600/11 seconds each.

Implement the above algorithm and test the whole IoT architecture with more than 2 terminals.

The terminal node may receive an additional parameter called delta. The delta parameter provides the degree of precision for the sensor values expressed in %. The terminal compares the previous sensor value(s) with the actual one and in the case when the difference between the previous\_value and the new\_value is smaller than previous\_value \* delta , there is no need to send the new LoRa package.

This may done once or twice with the calculation of the new timeout value by adding one or two operational cycles.

# **Table of Contents**

0. Introduction	
0.1 Hardware Architecture - main board (CubeCell)	2
Software installation with the use Arduino board manager	4
Software installation via Git	
0.2 Power consumption test with Power Profiler Kit II	5
0.2.1 PPK2 software installation	
Lab 1 - Testing CubeCell HTCC-AB01 main board	
1.1 Board chip identifier	
1.2 Integrated RGB LED	
1.3 Integrated USR button	
1.4 User flash memory	
1.5 Sleep modes: timer and user interruption	
1.5.1 Timer mode	
1.5.2 User interrupt mode	
1.6 System time	
1.6.1 System time in active - high power mode	
1.6.2 System time in deep_sleep - low power mode	
1.7 WatchDog timer	
Lab 2 - External components and low power operation	14
2.1 SSD1306 OLED	
2.2 I2C device scan	
2.3 SHT21 sensor module (I2C)	
To do:	
Test the above examples	
Experiment with:	1/
2.4 BH1750 - Ambient Light sensor	18
To do	18
2.5 Air (CO2/TVOC) sensor CCS811 (SGP30)	18
To do	19
2.6 "Time of Flight" distance sensors – VL53L0X and VL53L1X	20
2.6.1 VL53L03	
2.6.2 VL53L1X	
To do	
2.7 SoftwareSerial – GPS - NEO-6MV2	
2.7.1 Simple – direct UART stream	
2.7.2 Simple - direct UART stream and OLED display	22
2.7.3 UART stream decoded by TinyGPS++ library	23
To do	
2.8 Low power operation period with lowPowerHandler()	26
2.8.1 Low power operation with SHT21 sensor	26
To do	
2.8.2 Direct GPS - UART stream and OLED display with low_power mode	29
Lab 3 - LoRa modem - basics and low power operation	31
3.1 LoRa send with battery state value	31
3.1.1 Sending data packet (battery voltage)	
3.1.2 Sending data packet with low_power management	
3.2 LoRa - receiving the packets with battery state	37
3.3 Sending LoRa packets with external sensor data	39
3.3.1Terminal and the gateway codes	41
To do:	
Lab 4 – LoRa_WiFi gateways for CubeCell terminals	ΔF
4.1 Simple UART connection to WiFi gateway with ESP32	
4.1.1 Sending data from CubeCell via an UART link	
4.1.2 Receiving data non ESP32 via UART from CubeCell	
4.1.3 Receiving data from CubeCell via an UART link and sending them to ThingSpeak	
4.2 LoRa sender and receiver on CubeCell and WiFi gateway with ESP32	۸۲
4.2.1 CubeCell low power LoRa sender	
4.2.2 CubeCell LoRa receiver and UART bridge	4C
4.3 ESP32 LoRa receiver and WiFi gateway to ThingSpeak	
4.3 LOI 32 LUMA IECEIVEI AIIU VVIFI YALEWAY LU TIIITUODEAN	∂∠

	To do:	54
5.	Assignment – terminal's scheduler in gateway node	55