# EECS 361 Computer Architecture Lecture 3 - Instruction Set Architecture

Prof. Gokhan Memik

memik@eecs.northwestern.edu

Course slides developed in part by Profs. Hardavellas, Hoe, Falsafi, Martin, Roth, Lipasti, Goldstein, Mowry

#### **Today's Lecture**

Quick Review of Last Week

Classification of Instruction Set Architectures

Instruction Set Architecture Design Decisions

- Operands
- Operations
- Memory Addressing
- Instruction Formats

**Instruction Sequencing** 

Language and Compiler Driven Decisions

## Summary of Lecture 2

#### Two Notions of "Performance"

Plane	DC to Paris	Speed	Passengers	Throughput (pmph)
Boeing 747	6.5 hours	610 mph	470	286,700
Concorde	3 hours	1350 mph	132	178,200

#### Which has higher performance?

Execution time (response time, latency, ...)

Time to do a task

Throughput (bandwidth, ...)

• Tasks per unit of time

Response time and throughput often are in opposition EECS 361

#### **Definitions**

#### Performance is typically in units-per-second


• bigger is better

If we are primarily concerned with response time

" X is n times faster than Y" means

$$\frac{ExecutionTime_y}{ExecutionTime_x} = \frac{Performance_x}{Performance_y} = n$$

#### Organizational Trade-offs

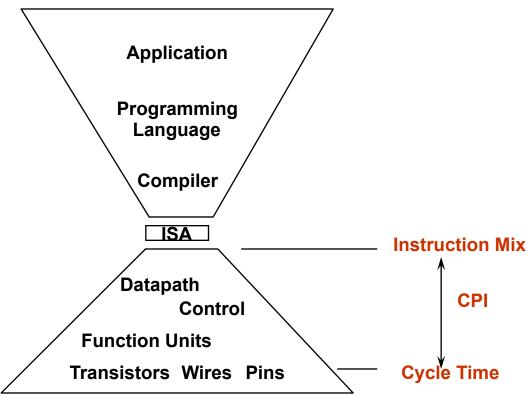

CPI is a useful design measure relating the Instruction Set Architecture with the Implementation of that architecture, and the program measured

#### Principal Design Metrics: CPI and Cycle Time


$$Performance = \frac{1}{ExecutionTime}$$

$$Performance = \frac{1}{CPI \times CycleTime}$$

$$Performance = \frac{1}{\frac{Cycles}{Instruction}} \times \frac{Seconds}{Cycle} = \frac{Instructions}{Seconds}$$

#### Amdahl's "Law": Make the Common Case Fast

Speedup due to enhancement X:

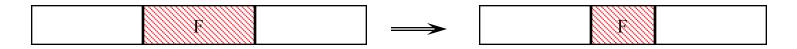

Suppose that enhancement X accelerates a fraction F of the task by a factor S and the remainder of the task is unaffected then,

ExecTime(with X) = 
$$\left((1-F) + \frac{F}{S}\right)$$
 × ExecTime(without X) improvement is limited by how much the

Speedup(with X) = 
$$\frac{\text{ExecTime(without X)}}{\left((1-F) + \frac{F}{S}\right) \times \text{ExecTime(without X)}}$$

Performance improved feature is used




Invest resources where time is spent.

$$Speedup = \frac{ExecTime_{old}}{ExecTime_{new}} = \frac{1}{\frac{Fraction_{enhanced}}{Speedup_{enhanced}} + (1 - Fraction_{enhanced})}$$
EECS 361

### Classification of Instruction Set Architectures

#### **Instruction Set Design**

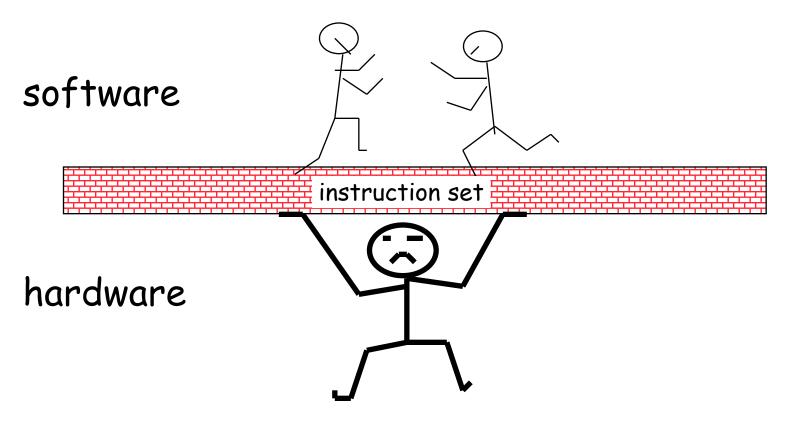


Multiple Implementations: 8086 → Pentium 4

ISAs evolve: MIPS-I, MIPS-II, MIPS-III, MIPS-IV,


MIPS, MDMX, MIPS-32, MIPS-64

#### **Typical Processor Execution Cycle**

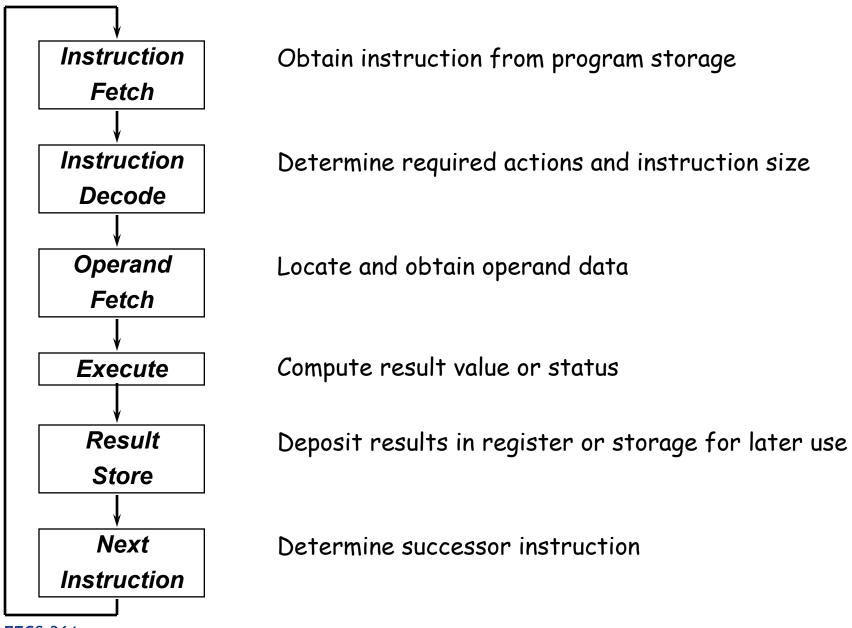

**EECS 361** 

#### Instruction and Data Memory: Unified or Separate

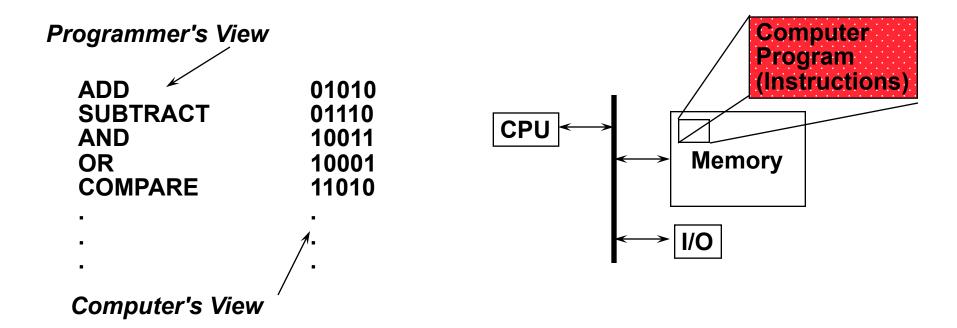

#### **Princeton (Von Neumann) Architecture**


- --- Data and Instructions mixed in same unified memory
- --- Program as data
- --- Storage utilization
- --- Single memory interface

#### **Harvard Architecture**

- Data & Instructions in separate memories
- --- Has advantages in certain high performance implementations
- --- Can optimize each memory

**EECS 361** 

#### **Basic Addressing Classes**

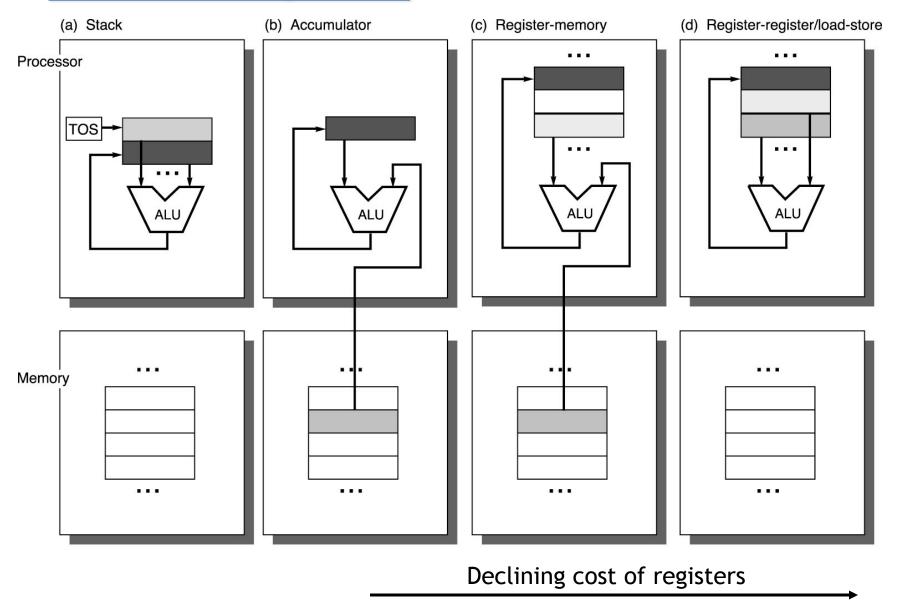


#### **Stack Architectures**

• Stack: First-In Last-Out data structure (FILO)


• Instruction operands

- None for ALU operations
- One for push/pop
- Advantages:
  - Short instructions
  - Compiler is easy to write
- Disadvantages
  - Code is inefficient
    - Fix: random access to stacked values
  - Stack size & access latency
    - Fix : register file or cache for top entries
- Examples
  - 60s: Burroughs B5500/6500, HP 3000/70
  - Today: Java VM

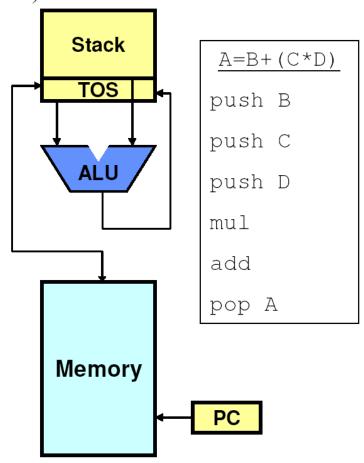


#### **Accumulator Architectures**


- Single register (accumulator)
- Instructions
  - ALU (Acc  $\leftarrow$  Acc + \*M)
  - Load to accumulator (Acc  $\leftarrow$  \*M)
  - Store from accumulator (\* $M \leftarrow Acc$ )
- Instruction operands
  - One explicit (memory address)
  - One implicit (accumulator)
- Attributes:
  - Short instructions
  - Minimal internal state; simple design
  - Many loads and stores
- Examples:
  - Early machines: IBM 7090, DEC PDP-8
  - Today: DSP architectures

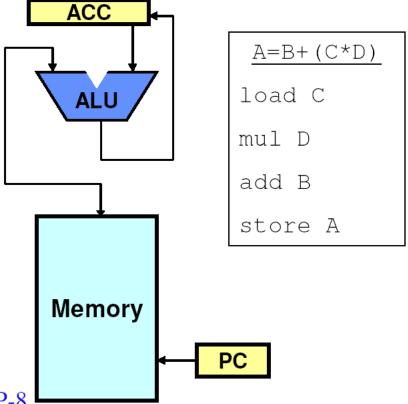

#### **Register-Set Architectures**


- General Purpose Registers (GPRs)
- Registers:
  - Explicitly managed memory for holding recently used values
- The dominant architecture: CDC 6600, IBM 360/370, PDP-11, 68000, RISC
- Advantages:
  - Allows fast access to temporary values
  - Permits clever compiler optimization
  - Reduced traffic to memory
- Disadvantages:
  - Longer instructions (than accumulator designs)

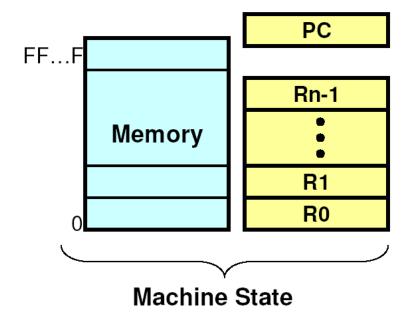

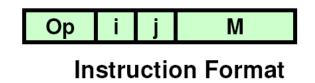


#### Register-to-Register: Load-Store Architectures

- No memory addresses in ALU ops
- Typically 3-operand ALU ops
  - Bigger encoding, but simplifies register allocation
- Advantages
  - Simple fixed-length instructions
  - Easily pipelined
- Disadvantages
  - Higher instruction count
- Examples
  - CDC6600, CRAY-1, most RISCs

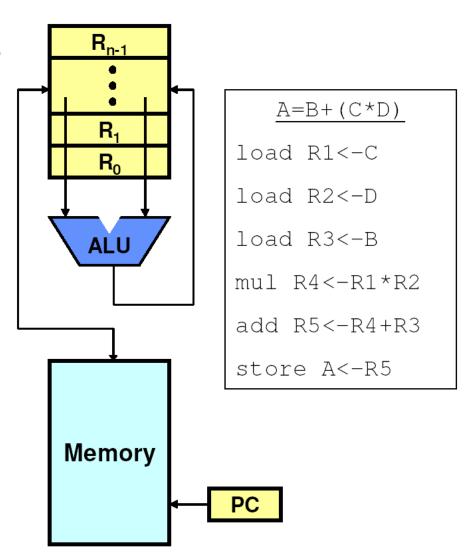

#### **Register-to-Memory Architectures**

- One memory address in ALU ops
- Typically 2-operand ALU ops
- Advantages
  - Small instruction count
  - Dense encoding
- Disadvantages
  - Result destroys an operand
  - Instruction length varies
  - Clocks per instruction varies
  - Harder to pipeline
- Examples
  - IBM 360/370, VAX

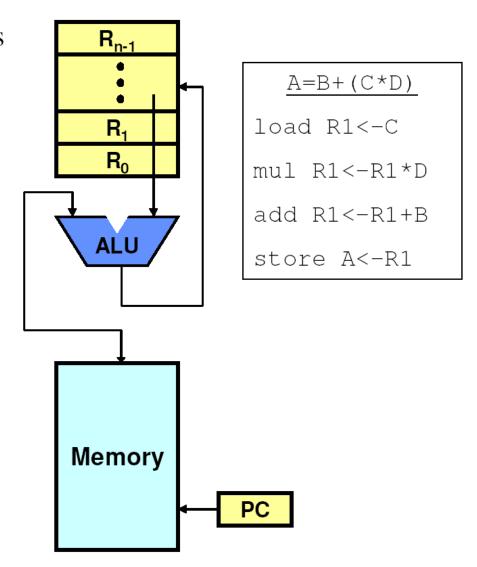

#### **Memory-to-Memory Architectures**

- All ALU operands from memory addresses
- Advantages
  - No register wastage
  - Lowest instruction count
- Disadvantages
  - Large variation in instruction length
  - Large variation in clocks per instructions
  - Huge memory traffic
- Examples
  - VAX

$$\frac{D=B+(C*D)}{\text{mul }D <- C*D}$$

## Instruction Set Architecture Design Decisions

#### **Basic Issues in Instruction Set Design**

What data types are supported. What size.

#### What operations (and how many) should be provided

- LD/ST/INC/BRN sufficient to encode any computation, or just Sub and Branch!
- But not useful because programs too long!

#### How (and how many) operands are specified

#### Most operations are dyadic (eg, A <- B + C)

• Some are monadic (eg, A <- ~B)

#### Location of operands and result

- where other than memory?
- how many explicit operands?
- how are memory operands located?
- which can or cannot be in memory?
- How are they addressed

#### Typical instruction set:

- •32/64 bit word
- •basic operand addresses are 32/64 bits long
- •basic operands, like integers, are 32/64 bits long
- •in general case, instruction could reference 3 operands (A := B + C)

#### Typical challenge:

encode operations in a small number of bits

#### How to encode these into consistent instruction formats

- Instructions should be multiples of basic data/address widths
- Encoding

Driven by static measurement and dynamic tracing of selected benchmarks and workloads.

## **Operands**

#### **Comparing Number of Instructions**


Code sequence for (C = A + B) for four classes of instruction sets:

Stack	Accumulator	Register (register-memory)	Register (load-store)
Push A	Load A	Load R1,A	Load R1,A
Push B	Add B	Add R1,B	Load R2,B
Add	Store C	Store C, R1	Add R3,R1,R2
Pop C			Store C,R3

$$ExecutionTime = \frac{1}{Performance} = Instructions \times \frac{Cycles}{Instruction} \times \frac{Seconds}{Cycle}$$

#### **Examples of Register Usage**

Number of memory addresses per typical ALU instruction

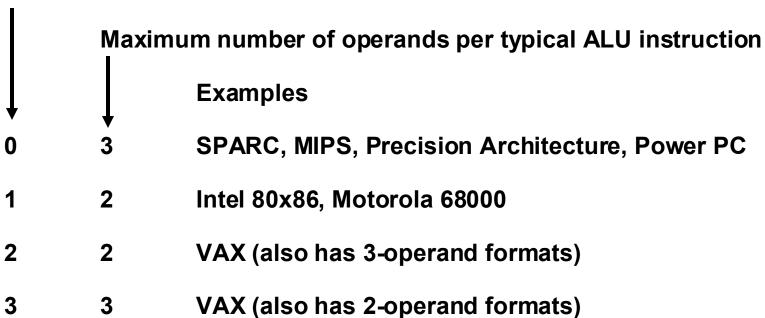

**EECS 361** 


#### General Purpose Registers Dominate

#### 1975-present: all machines use general purpose registers

#### Advantages of registers

- Registers are faster than memory
- Compiler technology has evolved to efficiently generate code for register files
  - E.g., (A\*B) (C\*D) (E\*F) can do multiplies in any order vs. stack
- Registers can hold variables
  - Memory traffic is reduced, so program is sped up (since registers are faster than memory)
- Code density improves (since register named with fewer bits than memory location)
- Registers imply operand locality

#### Operand Size Usage

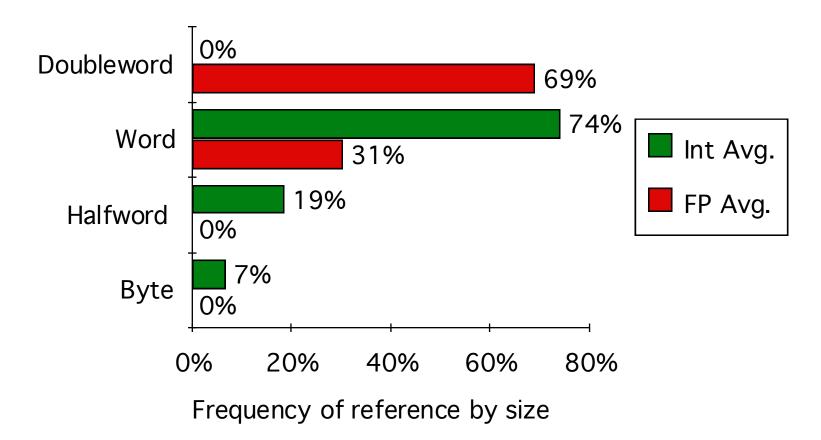

Support for these data sizes and types:
 8-bit, 16-bit, 32-bit integers and
 32-bit and 64-bit IEEE 754 floating point numbers

#### **Announcements**

#### Next lecture

• MIPS Instruction Set

## **Operations**


Typical Operations (little change since 1960)

Data Movement Load (from memory)

Store (to memory)

memory-to-memory move register-to-register move input (from I/O device) output (to I/O device)

push, pop (to/from stack)

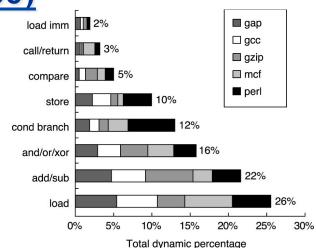

Arithmetic integer (binary + decimal) or FP

Add, Subtract, Multiply, Divide

Shift shift left/right, rotate left/right 2%

Logical not, and, or, set, clear

Control (Jump/Branch) unconditional, conditional


Subroutine Linkage call, return

Interrupt trap, return

Synchronization test & set (atomic r-m-w)

String search, translate

Graphics (MMX) parallel subword ops (4 16bit add)

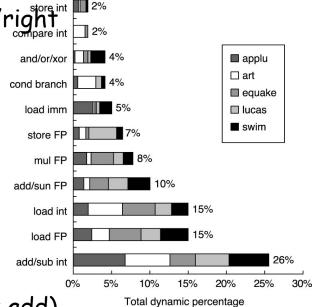

#### Top 10 80x86 Instructions

° Rank	instruction	Integer Average Percent total executed
1	load	22%
2	conditional bran	ch 20%
3	compare	16%
4	store	12%
5	add	8%
6	and	6%
7	sub	5%
8	move register-re	gister 4%
9	call	1%
10	return	1%
	Total	96%

 $<sup>^{\</sup>circ}\,$  Simple instructions dominate instruction frequency

## **Memory Addressing**

#### **Memory Addressing**


Since 1980, almost every machine uses addresses at the granularity of 8-bits (1 byte)

#### Two questions for design of ISA:

- Since a core could read a 32-bit word as four loads of one byte each from sequential byte addresses, or as one load of one word from a single byte address, how do byte addresses map onto words?
- Can a word be placed on any byte boundary?


**EECS 361** 

#### <u>Mapping Word Data onto a Byte Addressable Memory:</u> Endianness

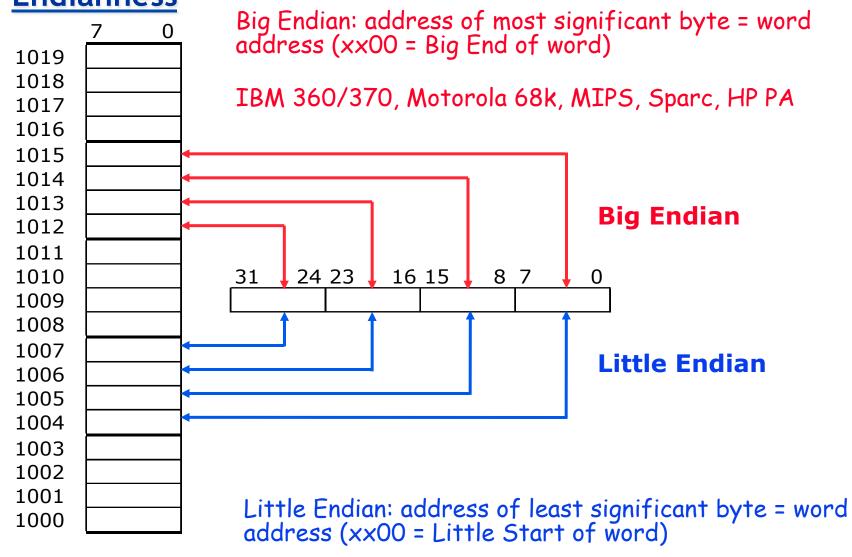

Intel 80x86, DEC Vax, DEC Alpha (Windows NT)

## Mapping Word Data into a Byte Addressable Memory: Alignment

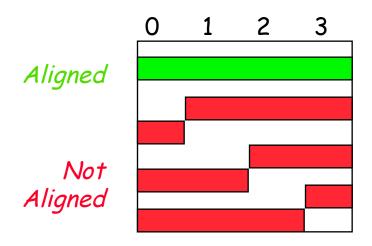

Alignment: require that objects fall on address that is a multiple of their size.

#### **Addressing Modes**

• Addressing modes specify a constant, a register, or a location in memory

```
Register
         add r1, r2 r1 < - r1 + r2

    Immediate

         Direct
         add r1, (0x200) r1 <- r1+M[0x200]
- Register indirect add r1, (r2) r1 <- r1+M[r2]</pre>
Indexed
         Scaled
         add r1, (r2+r3*4) r1 <- r1+M[r2+r3*4]


    Memory indirect

    Auto-increment

         add r1, (r2)+ r1 < -r1 + M[r2], r2 + +
```

Complicated modes reduce instruction count at the cost of complex implementations

#### **Common Memory Addressing Modes**

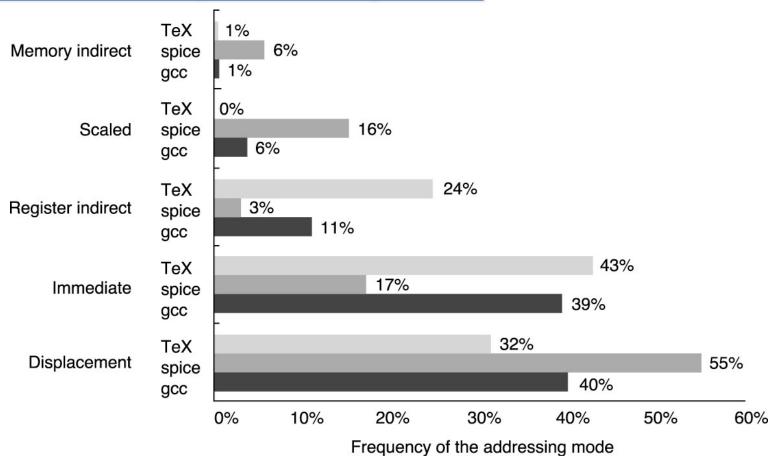


Measured on the VAX-11

Register operations account for 51% of all references

- ~75% displacement and immediate
- ~85% displacement, immediate and register indirect

## **Displacement Address Size**

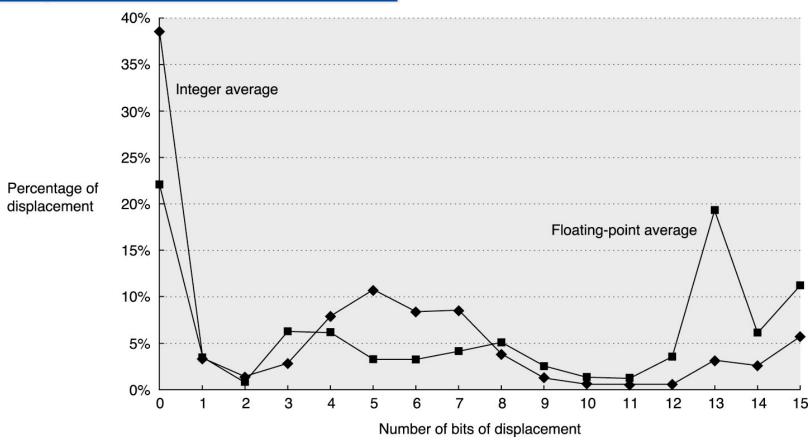


Average of 5 SPECint92 and 5 SPECfp92 programs

~1% of addresses > 16-bits

12 ~ 16 bits of displacement cover most usage (+ and -)


#### **Frequency of Immediates (Instruction Literals)**

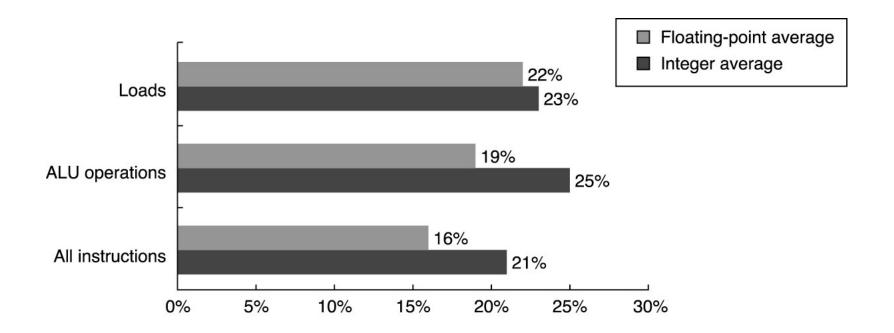

~25% of all loads and ALU operations use immediates

15~20% of all instructions use immediates

## **Size of Immediates**

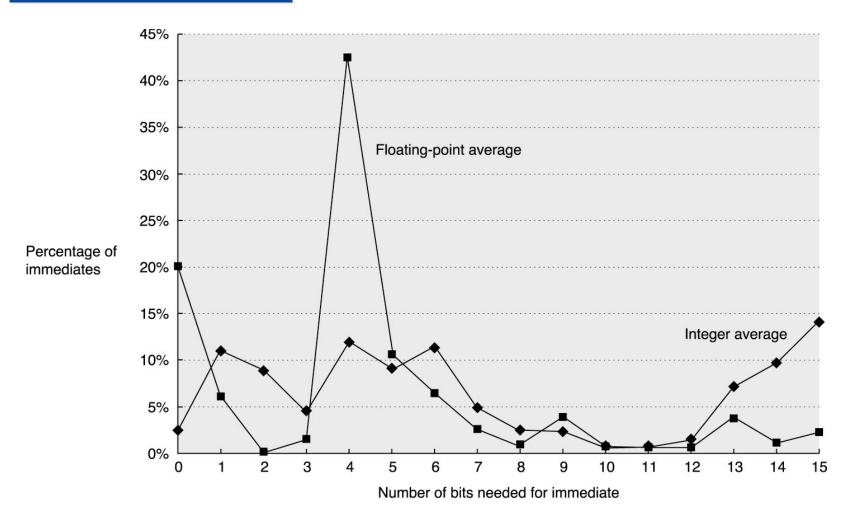

50% to 60% fit within 8 bits

75% to 80% fit within 16 bits

## **Addressing Summary**

Data Addressing modes that are important:

• Displacement, Immediate, Register Indirect

Displacement size should be 12 to 16 bits

Immediate size should be 8 to 16 bits

## **Instruction Formats**

#### **Instruction Format**

#### Specify

- Operation / Data Type
- Operands

Stack and Accumulator architectures have implied operand addressing

If many memory operands per instruction and/or many addressing modes:

Need one address specifier per operand

If load-store machine with 1 address per instruction and one or two addressing modes:


Can encode addressing mode in the opcode

# Encoding Variable: ...

Fixed:	



Hybrid:	

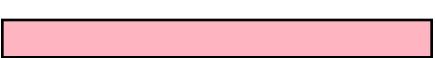

If code size is most important, use variable length instructions

If performance is most important, use fixed length instructions

Recent embedded machines (ARM, MIPS) added optional mode to execute subset of 16-bit wide instructions (Thumb, MIPS16); per procedure decide performance or density

Some architectures actually exploring on-the-fly decompression for more density.

**EECS 361** 

## **Operation Summary**


Support these simple instructions, since they will dominate the number of instructions executed:

```
load,
store,
add,
subtract,
move register-register,
and,
shift,
compare equal, compare not equal,
branch,
jump,
call,
return;
```

**EECS 361** 

#### **Example: MIPS Instruction Formats and Addressing Modes**

· All instructions 32 bits wide

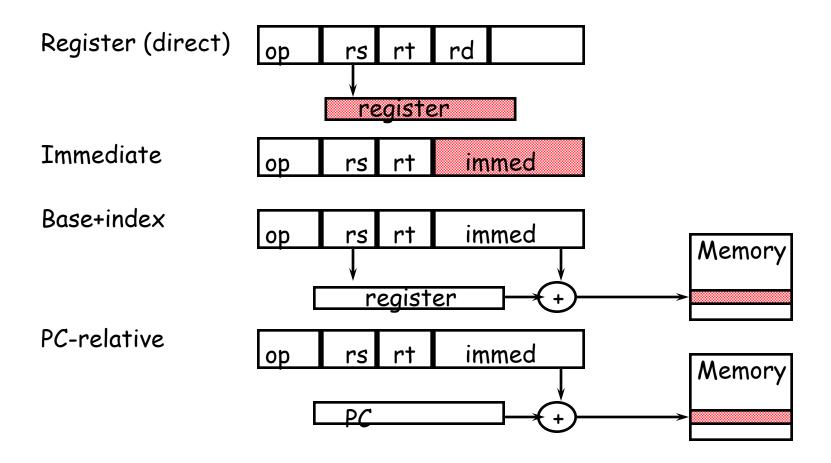

#### **Instruction Set Design Metrics**

#### **Static Metrics**

How many bytes does the program occupy in memory?

#### **Dynamic Metrics**

- How many instructions are executed?
- How many bytes does the processor fetch to execute the program?
- How many clocks are required per instruction?

$$ExecutionTime = \frac{1}{Performance} = Instructions \times \frac{Cycles}{Instruction} \times \frac{Seconds}{Cycle}$$

$$Instruction Count Cycle Time$$

CPI


## Instruction Sequencing

#### **Instruction Sequencing**

**EECS 361** 


#### The next instruction to be executed is typically implied

- Instructions execute sequentially
- Instruction sequencing increments a Program Counter

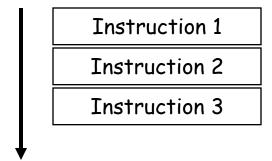


#### Sequencing flow is disrupted conditionally and unconditionally

• The ability of computers to test results and conditionally instructions is one of the reasons computers have become so useful

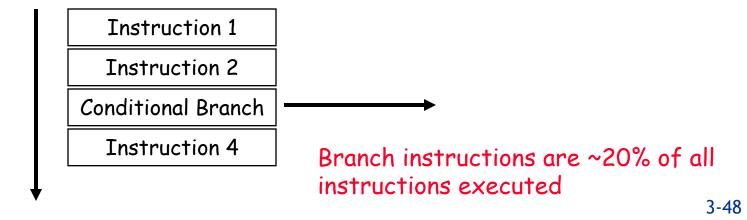

## **Dynamic Frequency**

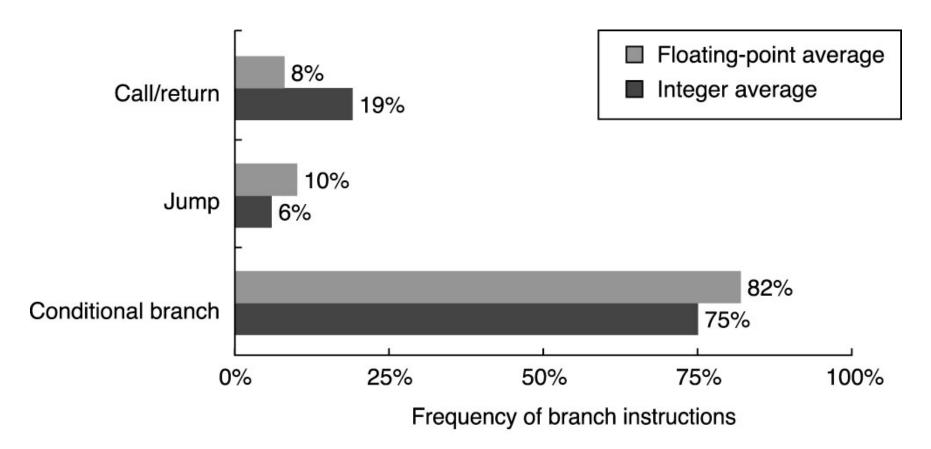

## **Condition Testing**

° Condition Codes

Processor status bits are set as a side-effect of arithmetic instructions (possibly on Moves) or explicitly by compare or test instructions.

ex: add r1, r2, r3 bz label

° Condition Register

Ex: cmp r1, r2, r3 bgt r1, label

° Compare and Branch


Ex: bgt r1, r2, label

#### **Condition Codes**

Setting CC as side effect can reduce the # of instructions

But also has disadvantages:

- --- not all instructions set the condition codes which do and which do not often confusing! e.g., shift instruction sets the carry bit
- --- dependency between the instruction that sets the CC and the one that tests it

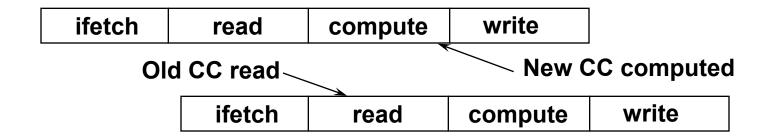

## **Branches**

#### --- Conditional control transfers

```
Four basic conditions:


N -- negative
Z -- zero

V -- overflow
C -- carry
```

#### Sixteen combinations of the basic four conditions:

Always	Unconditional
Never	NOP
Not Equal	~ <b>Z</b>
Equal	Z
Greater	~[Z + (N ⊕ V)]
Less or Equal	Z + (N ⊕ V)
Greater or Equal	~(N ⊕ V)
Less	N ⊕ V
Greater Unsigned	~(C + Z)
Less or Equal Unsigned	C + Z
Carry Clear	~C
Carry Set	C
Positive	~N
Negative	N
Overflow Clear	~V
Overflow Set	V

#### **Conditional Branch Distance**

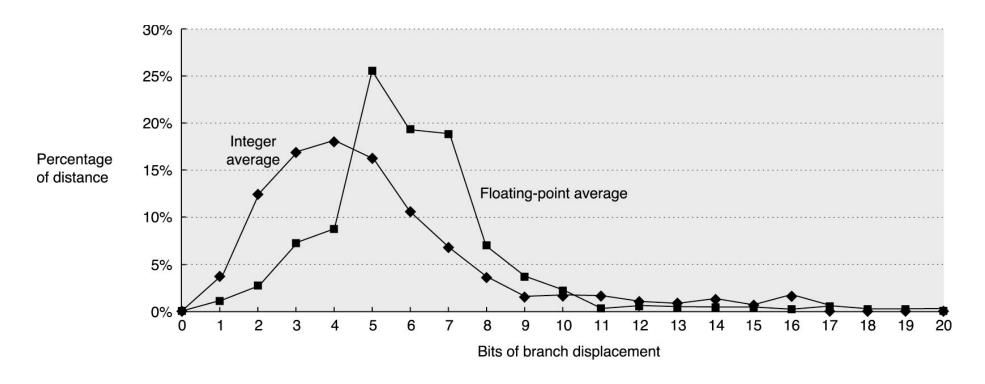

PC-relative (+-)


25% of integer branches are 2 to 4 instructions

At least 8 bits suggested (± 128 instructions)

## Language and Compiler Driven Facilities

#### Calls: Why Are Stacks So Great?


Stacking of Subroutine Calls & Returns and Environments:

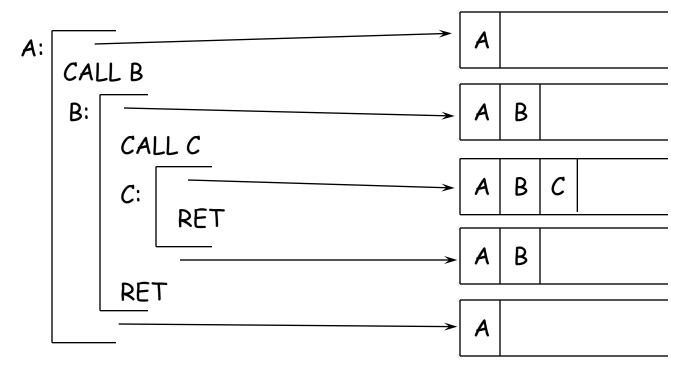

Some machines provide a memory stack as part of the architecture (e.g., VAX)

Sometimes stacks are implemented via software convention (e.g., MIPS)

#### Call-Return Linkage: Stack Frames

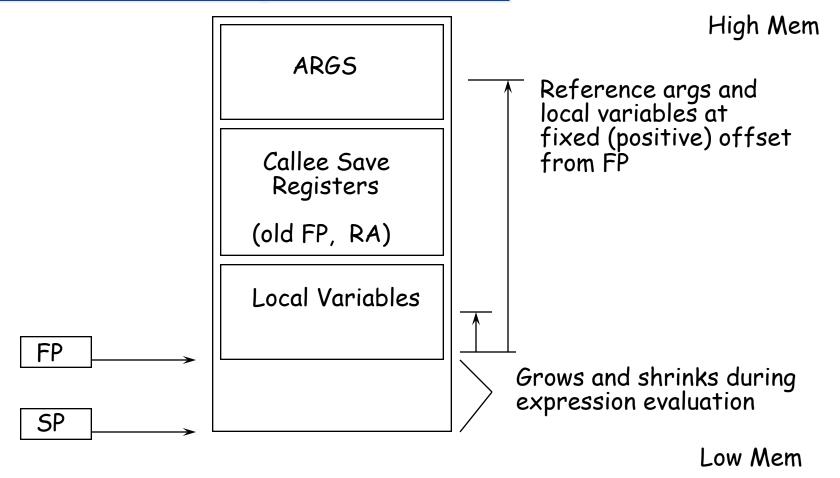


Many variations on stacks possible

Compilers normally keep scalar variables in registers, not memory!

## **Memory Stacks**

Useful for stacked environments/subroutine call & return even if operand stack not part of architecture

Stacks that Grow Up vs. Stacks that Grow Down:

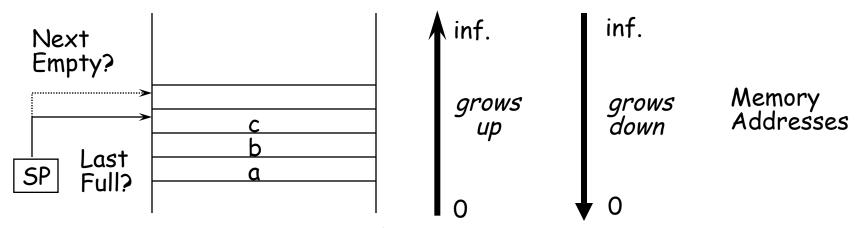

How is empty stack represented?

Grows-Up / Last Full

POP: Read from Mem(SP)

Decrement SP

PUSH: Increment SP

Write to Mem(SP)

Grows-Up / Next Empty

POP: Decrement SP

Read from Mem(SP)

PUSH: Write to Mem(SP)

Increment SP

#### **Compilers and Instruction Set Architectures**

#### Ease of compilation

- Orthogonality: no special registers, few special cases, all operand modes available with any data type or instruction type
- Completeness: support for a wide range of operations and target applications
- Regularity: no overloading for the meanings of instruction fields
- Streamlined: resource needs easily determined

#### Register Assignment is critical too

Easier if lots of registers

Provide at least 16 general purpose registers plus separate floating-point registers

Be sure all addressing modes apply to all data transfer instructions

Aim for a minimalist instruction set

## **Summary**

Quick Review of Last Week

Classification of Instruction Set Architectures

Instruction Set Architecture Design Decisions

- Operands
- Operations
- Memory Addressing
- Instruction Formats

**Instruction Sequencing** 

Language and Compiler Driven Decisions