HD7770 Standard Operation Procedure Revision: 1.15

Doc. No:

Date: Apr. 9. 2014

Page: 10

Grade:

Rev.	Modified Chapters	Modification Description	Issued Dept.	Issued by	Revised Date
1.00		First Release	GRMA	Jory_yuan	July.25.2013
1.01		Add new PCBA(YV02I1-A28)	GRMA	Jory_yuan	July.25.2013
1.02		Add new PCBA(YV02Y0-A13)	GRMA	Jory_yuan	July.25.2013
1.03		Add new PCBA(YV0410-U04)	GRMA	Jory_yuan	Aug.21.2013
1.04		Add new PCBA(YV02Y0-A24)	GRMA	Jory_yuan	Sep.22.2013
1.05		Add new PCBA(YV02I1-A38)	GRMA	Jory_yuan	Sep.25.2013
1.06		Add new PCBA(YV02I1-A19)	GRMA	jory_yuan	Sep.25.2013
1.07		Add new PCBA(YV02I0-A3A)	GRMA	Jory_yuan	Sep.25.2013
1.08		Add new PCBA(YV02I0-A2A)	GRMA	Jory_yuan	Sep.25.2013
1.09		Add new PCBA(YV02I0-A1A)	GRMA	Jory_yuan	Sep.25.2013
1.10		Add new PCBA(YV02J0-A28)	GRMA	Jory_yuan	Sep.25.2013
1.11		Add new PCBA(YV0410-A14)	GRMA	Jory_yuan	Oct.30.2013
1.12		Add new PCBA(YV0410-A25)	GRMA	Jory_yuan	Dec.18.2013
1.13		Add new PCBA(YV0410-Q14)	GRMA	Jory_yuan	Jan.15.2014
1.14		Add new P/N(YV02I3-A01)	GRMA	Jory_yuan	Apr.2.2014
1.15		Add new P/N(YV05Z0-A03)	GRMA	Jory_yuan	Apr.9.2014

Authorize by		Review by		Originator By	Jory
-----------------	--	--------------	--	------------------	------

Form No: T2-009-01 Rev.01

HD7770 Standard Operation Procedure

Doc. No:

Date: Apr. 9. 2014 Rev.: 1.15 Page: 1

1.Objectives

Create test procedure.

2.Scope

Model: HD7770

PN:

YV02I1(A19&A28&A38)YV02J0(A28&A37)YV02Y0(A13&A24)YV0410(U04 &A14&A25&Q14)YV02I0(A1A&A2A&A3A)YV02I3(A01)YV05Z0(A03)

3.Test Item

- 3.1 Diagnostic test in 12_04_64-bit Linux
- 3.2 3DMark06(contain HDMI test)
- 3.3 Temperature test
- 3.4 Fan Test

4.Relevant Document

None.

5.Definition: 1. If the model name contains P, please test HDCP function.

Ex: EAH***/HTDP/512M/A

- 2. If you test HDMI already, it's unnecessary to test HDCP. The HDMI contains HDCP function.
- 3. System Memory: 1GB for a single GPU test station; please add an additional 512MB of system memory for each additional GPU used for the test configuration
- 4. HD7770 Test Program in 64-bit Linux system.

ASUSTAK	COMPUTER	INC
ASUSTER	COMPUTER	TINC

HD7770 Standard Operation Procedure

Doc. No:
Date: Apr. 9. 2014
Rev.: 1.15 Page: 2

6. Operation Procedures:

6.1 Attention

- 6.1.1 To avoid damaging devices or M/B, please turn off A/C power then unplug VGA card.
- 6.1.2 While unplugging the card, do it in upright direction to avoid damaging slot & golden finger.
- 6.1.3 If any problem happens, please inform test supervisor. Base on ATX power specification, +5V standby voltage is existed while AC power is connecting. For safety reason, please turn off main power during break time or idling test.
- 6.1.4 Some test items should be tested under Windows environment. (Please install windows test environment by yourself).

HD7770 Standard Operation Procedure Doc. No:

Date: Apr. 9. 2014 Rev.: 1.15 Page: 3

6.2 Fixture connect

- 6.2.1 Install Intel P7 CPU & CPU Fan.
- 6.2.2 Install DDR3 Memory to DIMM1~4. (a minimum memory of 2GB for Linux test)
- 6.2.3 Plug USB Mouse and PS/2 Keyboard into MB.
- 6.2.4 Plug VGA Card HD7770 into PCIEX16_1.
- 6.2.5 If this card has 6 PIN or 8 PIN of Power supply, please connect power con of VGA card & Power supply via bundled power cable.
 - (6 PIN of Power supply to 6 PIN of VGA card)
 - (8 PIN of Power supply to 8 PIN of VGA card)
- 6.2.6 Connect SATA HDD & SATA con via SATA cable



- 6.2.7 Plug 4PIN 12V power(a minimum power of 1200W) cable into CON12V.
- 6.2.8 Plug ATX Power on Power(a minimum power of 1200W) Connector.



6.3 Certain test.

6.3.1 Diagnostic test in 64-bit LINUX system

6.3.1.1 Please connect LCD monitor & card's DVI CON via a DVI cable.



- 6.3.1.2 Press Power Switch then turn on power button.
- 6.3.1.3 Press "Del" to enter CMOS setup menu while boot screen is displaying.

HD7770 Standard Operation Procedure

Doc. No:

Date: Apr. 9. 2014 Rev.: 1.15 Page: 4

EXIT -> Load Setup Defaults.



6.3.1.4 Run test program in 64-bit linux system.

Path:hd7770\yv02j0a3.sh \yv0410u0.sh \YV02j0a2.sh\yv0410a1.sh or yv0410a2.sh Path:hd77701\ yv02y0a1.sh\yv02y0a2.sh

 $Path:hd77702\yv02i0a1.sh\yv02i0a2.sh\yv02i0a3.sh\yv02i1a1.sh\yv02i1a2.sh\yv02i1a3.sh$

Path:hd77703\yv0410q1.sh

Path:hd77704\yv02i3a0.sh

Path:hd77705\yv05z0a0.sh

6.3.1.5 Memory test

If you want to test memory, please run ./tserver -test=memfa or ./memtest.sh

Path:hd7770\

Path:hd77701\

Path:hd77703\

Path:hd77704\

Path:hd77705\

6.3.1.6 BIOS Version

If you want to see the version of bios, please run ./atiflash -ai 0 or ./biosinfo.

Path:hd7770

6.3.1.7 BIOS flash

Please use the following command to flash bios and notice the size of character.

Path:hd7770\

Command:./atiflash -p -f 0 xxx.rom

Notice:

If you can not flash bios because of the bios locked, please use ./atiflash –unlockrom 0 to unlock bios. And then, please use ./atiflash –lockrom 0 to lock bios after updating latest bios.

6.3.1.8 FAN Test

If you want to test FAN, please run ./aft11si.

Path: Path:hd7770\AFT

6.3.1.9 After finishing 64-bit Linux testing, please enter Windows environment to test 3DMark.

HD7770 Standard Operation Procedure Doc. No:


Date: Apr. 9. 2014 Rev.: 1.15 Page: 5

6.3.2 3DMark test(contain HDMI test)


- 6.3.2.1 Please install 3DMark program by yourself.
- 6.3.2.2 Please connect VGA card to LCD via HDMI cable or MINI Display Port or Display Port to HDMI cable or Display Port cable or D-SUB cable.



MINI Display Port CON(*2)

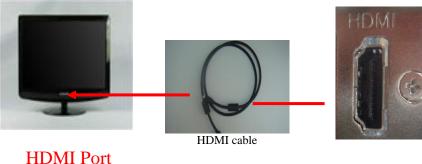



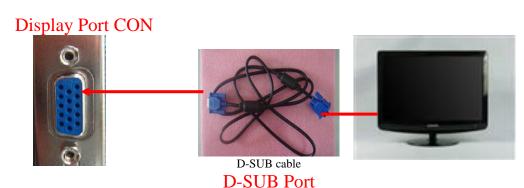


- 6.3.2.3 Please install VGA card driver in Windows(You must use individual driver of this card).
- 6.3.2.4 Please run 3DMark06 base on this card (please test 1 cycle).
- 6.3.2.5 Press "Select" to enter Select test menu. You can choose "HDR1" for default setting.


HD7770 Standard Operation Procedure

Doc. No:

Date: Apr. 9. 2014 Rev.: 1.15 Page: 6

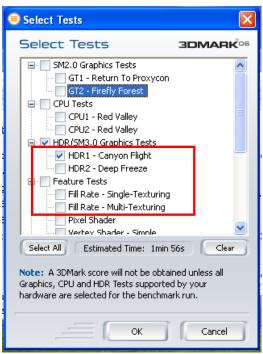

6.3.2.6 Press "Demo" to enter Demo menu. You can choose "Sounds" for default setting.

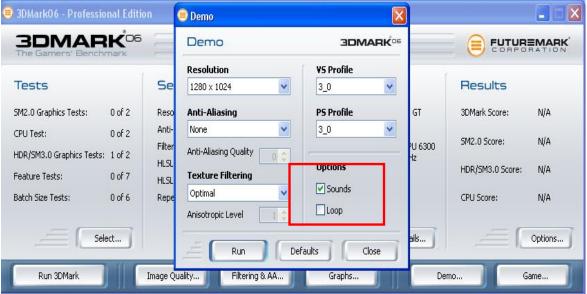

- 6.3.2.7 Please pay attention to check if there is flickering, discolor, crash and so on. If there's no problem, it can be judged OK!
- 6.3.2.8 Please listen to voice carefully to check whether it outputs sounds. If not, HDMI test fail.

HD7770 Standard Operation Procedure

Doc. No:

Date: Apr. 9. 2014 Rev.: 1.15 Page: 7



6. 3.2.9 If test OK, please test temperature test.

HD7770 Standard Operation Procedure


Doc. No:
Date: Apr. 9. 2014
Rev.: 1.15 Page: 8

6.4 Temperature test

- 6.4.1 Please copy Thermaltool(1.0.05) to Windows by yourself.
- 6.4.2 Please run ThermalTest.exe.



6.4.3 If test ok, show pass.

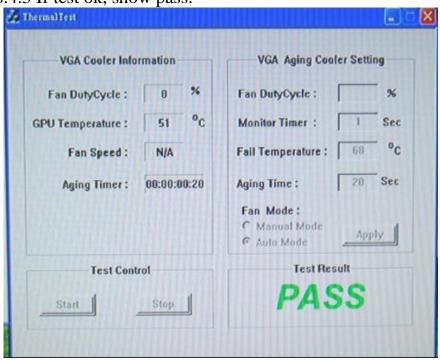

6.4.4 If test fail, show fail.



6.4.5 If test OK, please NTF test.

HD7770 Standard Operation Procedure

Doc. No:

Date: Apr. 9. 2014 Rev.: 1.15 Page: 9

7.Appendix

			1	1	
NO#	Equipment Description	ASUS Part#	Supplier	Quantity	Remarks
1	Dell 30 inches (3008WFP) (Buying a local LCD by yourself)			1	
2	USB MOUSE			1	
3	PS/2 KEYBOARD			1	
4	ATX POWER SUPPLY(a minimum power of 500W)			1	
5	Intel CPU Intel(R) Core(TM)2 CPU		local	1	E1100
6	Heat sink + FAN	22-240000160		1	
7	DDR3 1333 2G	20-TT2605618	local	4	
8	TEST HDD			1	
9	SATA HDD Cable	14-000107070	ASUS	1	
10	PCIEX16 VGA CARD			1	
11	Dual link DVI cable (Buying a local DVI cable by yourself)			1	
12	HDMI extend cable (Buying a local HDMI cable by yourself)			1	
13	P7H55-M/USB3 MB	80- MIBBKA-*		1	
14	Display port cable (Buying a local Display port cable by yourself)			1	
15	Mini Display port to HDMI cable (Buying a local Mini Display port to HDMI cable by yourself)			1	
16	D-SUB extend cable (Buying a local D-SUB cable by yourself)			1	