

About this document

Scope and purpose

This application note describes trigger multiplexer for TRAVEO™ T2G family and explains how to route trigger signals from the source peripherals to the destinations.

Associated Part Family

TRAVEO™ T2G family

Table of contents

	About this document	1
	Table of contents	1
1	Introduction	2
2	Trigger multiplexer overview	3
2.1	Group trigger	6
2.2	One-to-one trigger	. 11
2.3	Software trigger	13
3	Application	15
3.1	Triggering P-DMA transfer by TCPWM timer	15
3.1.1	Use case description of triggering P-DMA transfer by TCPWM timer	15
3.1.2	Example program for triggering P-DMA transfer by TCPWM timer	
3.2	Simultaneous ADC conversion on three SARs by single TCPWM timer	21
3.2.1	Use case description of simultaneous ADC conversion on three SARs by single TCPWM time	r.21
3.2.2	Example program for simultaneous ADC conversion on three SARs by single TCPWM timer .	25
3.3	Triggering ADC conversion by TCPWM timer	30
3.3.1	Use case description of triggering ADC conversion by TCPWM timer	. 30
3.3.2	Example program for triggering ADC conversion by TCPWM timer	. 32
3.4	Simultaneous starting of TCPWM timer by SW trigger	36
3.4.1	Use case description of simultaneous starting of TCPWM timer by SW trigger	37
3.4.2	Example program for simultaneous TCPWM timer start by SW trigger	40
4	Glossary	44
5	Related Documents	. 45
6	Other References	46
	Revision history	47
	Disclaimer	48



1 Introduction

1 Introduction

Every peripheral in the TRAVEO™ T2G device is interconnected using trigger signals. Trigger signals are means by which peripherals inform the occurrence of an event or transition to a different state. Trigger signals are used to initiate an action in other peripherals. For example, triggers can initiate data transfer over DMA (see section Triggering P-DMA transfer by TCPWM timer), conversion on SAR ADC (see sections Simultaneous ADC conversion on three SARs by single TCPWM timer and Triggering ADC conversion by TCPWM timer, or start a timer (see section Simultaneous starting of TCPWM timer by SW trigger. Trigger multiplexers are simple multiplexers that are designed to route these trigger signals from the source peripherals to the desired destinations. In this application note, you will learn how to set up trigger routes from the source peripherals to the desired

destinations.

To know more about the functionality and terminology used in this application note, see the "Trigger Multiplexer" chapter of the architecture technical reference manual (TRM).



2 Trigger multiplexer overview

2 Trigger multiplexer overview

The trigger inputs are output signals from the source peripheral. The trigger outputs are typically input signals to the destination peripheral. The trigger multiplexer multiplexes trigger input and trigger output.

Trigger multiplexer has two group types:

- Multiplexer-based group type (Group trigger)
 - Connects a peripheral input trigger to multiple peripheral output triggers
- One-to-one-based group type (One-to-one trigger)
 - Connects a peripheral input trigger to a specific output trigger

Each group type consists of multiple trigger groups (up to 16). Each group type is associated with the trigger inputs of a specific peripheral. Figure 1 shows the trigger multiplexer block diagram.

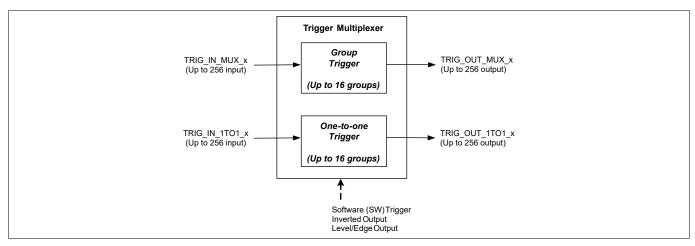


Figure 1 Trigger multiplexer block diagram

Trigger multiplexer has the following input and output signals:

- TRIG_IN_MUX_x is the input trigger of group trigger. It has up to 256 input signals.
- TRIG_IN_1TO1_x is the input trigger of one-to-one trigger. It has up to 256 input signals.
- TRIG_OUT_MUX_x is the output trigger of group trigger. It has up to 256 output signals.
- TRIG_OUT_1TO1_x is the output trigger of one-to-one trigger. It has up to 256 output signals.

Trigger multiplexer features SW trigger, inverted output trigger, and level or edge sensitive trigger.

SW trigger is initiated by SW and can trigger any signal in the trigger multiplexer. Inverted output specifies the polarity of output signals. Level or edge trigger specifies if the output trigger is treated as a level sensitive or edge sensitive trigger.

The suffix "x" represents the name of the peripheral block. Table 1 shows the output triggers and the input triggers of a group trigger that can be routed to each other, and the availability of routing in TRAVEO™ T2G device series. However, some combinations cannot be routed to some unit and channel numbers. For details on the units and channels of each peripheral, see the datasheets.

Table 1 Routing between output trigger and input trigger of group trigger by series

TRIG_OUT_MUX_x	TRIG_IN_MUX_x	CYT2B7	CYT2B9	CYT4BF	CYT4DN
PDMA	PDMA	✓	✓	✓	✓
	MDMA	✓	✓	✓	✓
	FAULT	✓	✓	✓	✓
	СТІ	✓	√	√	√

(table continues...)



2 Trigger multiplexer overview

Table 1 (continued) Routing between output trigger and input trigger of group trigger by

TRIG_OUT_MUX_x	TRIG_IN_MUX_x	СҮТ2В7	СҮТ2В9	CYT4BF	CYT4DN
	EVTGEN	√	√	√	√
	HSIOM	✓	√	✓	✓
	TCPWM	✓	√	✓	√
	CAN0_TT	✓	✓	✓	
	CAN1_TT	✓	✓	✓	
	PASS_GEN	✓	✓	✓	✓
	FLEXRAY_TT			✓	
MDMA	MDMA	✓	✓		
	TCPWM			✓	✓
ГСРWМ	TCPWM	✓	✓	✓	✓
	CAN_TT	✓	✓		✓
	PDMA	✓	✓	✓	✓
	MDMA	✓	✓	✓	✓
	СТІ	✓	✓	✓	✓
	FAULT	✓	✓	✓	✓
	PASS_GEN	✓	✓	✓	✓
	HSIOM	✓	✓	✓	✓
	SCB	✓	✓	✓	✓
	SCB_I2C_SCL	✓	✓	✓	✓
	CAN_DBG	✓	✓	✓	✓
	CAN_FIFO	✓	✓	✓	✓
	СХРІ		✓		✓
	EVTGEN	✓	✓	✓	✓
	SMIF			✓	✓
	I2S			✓	✓
	TDM				✓
	SG				✓
	PWM				✓
	MIXER				✓
	AUDIODAC				✓
	FLEXRAY_TT			✓	
	FLEXRAY_IBUF			✓	
	FLEXRAY_OBUF			√	



2 Trigger multiplexer overview

Table 1 (continued) Routing between output trigger and input trigger of group trigger by series

TRIG_OUT_MUX_x	TRIG_IN_MUX_x	CYT2B7	CYT2B9	CYT4BF	CYT4DN
PASS_GEN	PDMA	√	✓	√	√
	СТІ	✓	✓		
	FAULT	✓	✓		
	EVTGEN	√	✓	√	✓
	PASS_GEN	√	✓		
	HSIOM	✓	✓	✓	✓
	TCPWM	√	✓	√	√
CAN_TT	CAN_TT	√	✓	√	√
	FLEXRAY_TT			√	
FLEXRAY_TT	CAN_TT			√	
	FLEXRAY_TT			√	
HSIOM PERI_DEBUG_FREEZE PASS_DEBUG_FREEZE SRSS_WDT_DEBUG_ FREEZE SRSS_MCWDT_DEBUG_FRE EZE TCPWM_DEBUG_ FREEZE IZS_DEBUG_FREEZE TDM_DEBUG_FREEZE SG_DEBUG_FREEZE PWM_DEBUG_FREEZE PWM_DEBUG_FREEZE	TR_GROUP[i]_OUT PUT TR_GROUP[i]_OUT PUT				✓
AUDIODAC_DEBUG_ FREEZE TR_GROUP[i]_INPUT	PDMA	√	√	√	✓
	SCB	✓	√	√	√
	SCB_I2C_SCL	✓	√	√	√
	CAN_DBG	√	√	√	√
	CAN_FIFO	✓	√	√	√
	CAN_TT	✓	√	√	√
	СТІ	√	√	√	√

(table continues...)



2 Trigger multiplexer overview

Table 1 (continued) Routing between output trigger and input trigger of group trigger by series

TRIG_OUT_MUX_x	TRIG_IN_MUX_x	CYT2B7	CYT2B9	CYT4BF	CYT4DN
	FAULT	✓	✓	✓	✓
	TCPWM	✓	✓	✓	✓
	MDMA	✓	✓	✓	✓
	PASS_GEN	✓	✓	✓	✓
	EVTGEN	✓	✓	✓	✓
	СХРІ		✓		✓
	SMIF			✓	✓
	FLEXRAY_TT			✓	
	FLEXRAY_IBUF			✓	
	FLEXRAY_OBUF			✓	
	12S			✓	✓
	HSIOM			✓	✓
	TDM				✓
	SG				✓
	PWM				✓
	AUDIODAC				✓
	MIXER				✓

In one-to-one group trigger, one input trigger is directly connected to a specific output trigger. For the routing of one-to-one trigger, see the datasheets.

Group trigger 2.1

For a group trigger, an input trigger, TRIG_IN_MUX_x, is selected for each output trigger TRIG_OUT_MUX_x. Note that all output triggers in a group "I" share the same input triggers. Figure 2 shows the group trigger block diagram.

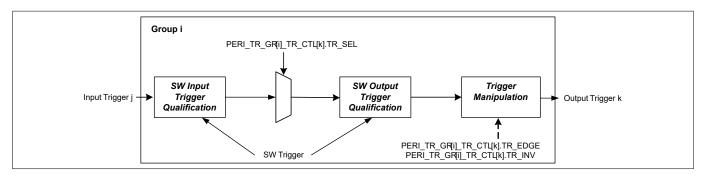


Figure 2 **Group trigger**

One among the multiple output signals from the source peripheral is selected. For a specific output trigger in the trigger group, the input trigger can be specified via the PERI_TR_GR[i]_TR_CTL[k] register. Here, suffices "I" and "k" indicate the trigger group number and the output trigger number, respectively. Input trigger number



2 Trigger multiplexer overview

can be specified by PERI_TR_GR[i]_TR_CTL[k].TR_SEL=j. This section describes a few examples of group triggers.

Example 1:

This example demonstrates the trigger of 16-bit TCPWM counter start upon receiving SCB RX pulse. This trigger routing is included in Multiplexer (MUX) Group 5. This example extracted from the CYT2B7 series datasheet that provides trigger group, input trigger, and output trigger. Table 2 and Table 3 show trigger outputs and trigger inputs of MUX Group 5 extracted from CYT2B7 series datasheet, respectively.

Table 2 Trigger outputs of MUX Group 5 of CYT2B7 series

MUX Group 5: TCPWM_IN (TCPWM0 Trigger Multiplexer)					
_					

rable 5 irigger inputs of MOA Group 5 of Cf12b7 series	Table 3	Trigger inputs of MUX Group 5 of CYT2B7 series
--	---------	--

Input ("j")	Trigger label	Description
MUX Group 5:	TCPWM_IN (TCPWM0 Trigger Multiplexe	r)
1:16	PDMA0_TR_OUT[0:15]	General purpose P-DMA0 triggers
17:24	PDMA1_TR_OUT[0:7]	General purpose P-DMA1 triggers
25:28	MDMA_TR_OUT[0:3]	M-DMA0 triggers
29:30	CTI_TR_OUT[0:1]	Trace events
31:34	FAULT_TR_OUT[0:3]	Fault events
35:40	PASS_GEN_TR_OUT[0:5]	PASS SAR events
41:72	HSIOM_IO_INPUT[0:31]	I/O inputs
73	SCB_TX_TR_OUT[0]	SCB0 TX trigger
74	SCB_RX_TR_OUT[0]	SCB0 RX trigger
75	SCB_I2C_SCL_TR_OUT[0]	SCB0 I2C trigger
76	SCB_TX_TR_OUT[1]	SCB1 TX trigger
77	SCB_RX_TR_OUT[1]	SCB1 RX trigger
78	SCB_I2C_SCL_TR_OUT[1]	SCB1 I2C trigger
79	SCB_TX_TR_OUT[2]	SCB2 TX trigger
30	SCB_RX_TR_OUT[2]	SCB2 RX trigger
81	SCB_I2C_SCL_TR_OUT[2]	SCB2 I2C trigger
82	SCB_TX_TR_OUT[3]	SCB3 TX trigger
83	SCB_RX_TR_OUT[3]	SCB3 RX trigger
84	SCB_I2C_SCL_TR_OUT[3]	SCB3 I2C trigger
85	SCB_TX_TR_OUT[4]	SCB4 TX trigger
86	SCB_RX_TR_OUT[4]	SCB4 RX trigger
37	SCB_I2C_SCL_TR_OUT[4]	SCB4 I2C trigger
88	SCB_TX_TR_OUT[5]	SCB5 TX trigger

(table continues...)



2 Trigger multiplexer overview

Table 3 (continued) Trigger inputs of MUX Group 5 of CYT2B7 series

Input ("j")	Trigger label	Description	
89	SCB_RX_TR_OUT[5]	SCB5 RX trigger	
90	SCB_I2C_SCL_TR_OUT[5]	SCB5 I2C trigger	
91	SCB_TX_TR_OUT[6]	SCB6 TX trigger	
92	SCB_RX_TR_OUT[6]	SCB6 RX trigger	
93	SCB_I2C_SCL_TR_OUT[6]	SCB6 I2C trigger	
94	SCB_TX_TR_OUT[7]	SCB7 TX trigger	
95	SCB_RX_TR_OUT[7]	SCB7 RX trigger	
96	SCB_I2C_SCL_TR_OUT[7]	SCB7 I2C trigger	
97:99	CAN0_DBG_TR_OUT[0:2]	CAN0 M-DMA0 events	
100:102	CAN0_FIFO0_TR_OUT[0:2]	CAN0 FIFO0 events	
103:105	CAN0_FIFO1_TR_OUT[0:2]	CAN0 FIFO1 events	
106:108	CAN1_DBG_TR_OUT[0:2]	CAN1 M-DMA0 events	
109:111	CAN1_FIFO0_TR_OUT[0:2]	CAN1 FIFO0 events	
112:114	CAN1_FIFO1_TR_OUT[0:2]	CAN1 FIFO1 events	
115:122	EVTGEN_TR_OUT[3:10]	EVTGEN triggers	

Figure 3 shows the input trigger and output trigger structure.



2 Trigger multiplexer overview

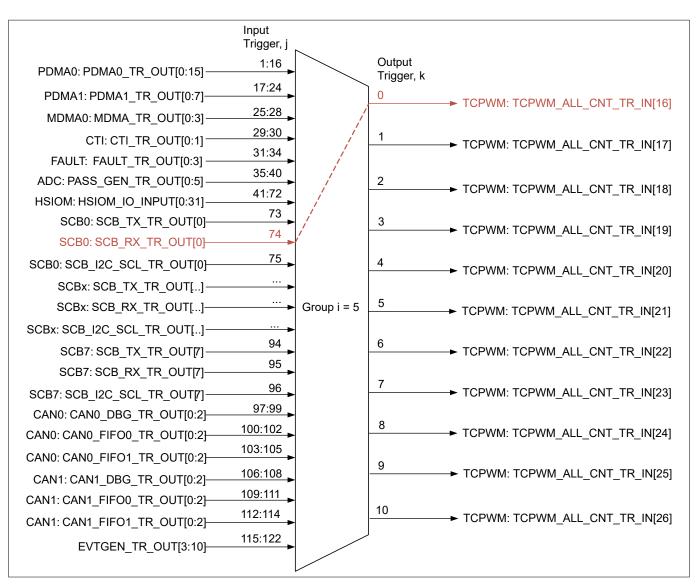


Figure 3 Trigger routing between 16-bit TCPWM and P-DMA0 of CYT2B7 series

The following explains how to connect P-DMA0 channel 9 and 16-bit TCPWM channel 0:

1. Configuration register selection:

MUX Group 5 (i=5)

Output trigger TCPWM ALL CNT TR IN[16] (k=0)

Therefore, the register is specified as PERI_TR_GR5_TR_CTL0.

2. Input trigger selection:

Input trigger SCB_RX_TR_OUT[0] (j=74)

The configuration will be PERI_TR_GR5_TR_CTL0.TR_SEL = 74.

Example 2:

Activation of SAR ADC unit, on ADC channel, can be triggered by Event Generator. Generic trigger inputs are shared between ADC channels. One of the five generic triggers can be routed to any ADC channel. Group trigger for SAR ADC typically specializes in trigger control of multiple SAR ADC units. One-to-one trigger for SAR ADC is typically useful for trigger control of ADC logical channels within a SAR ADC unit. For more details on SAR ADC generic trigger inputs, see the "SAR ADC" chapter of the Architecture TRM



2 Trigger multiplexer overview

For example, in CYT2B7 series, the input trigger Event Generator 0 is routed to a generic trigger 0 of SAR. This trigger routing is included in MUX Group 6. This example is based on Table 4 and Table 5 extracted from CYT2B7 series datasheet that provides trigger group, input trigger, and output trigger.


Table 4 Trigger outputs of MUX Group 6 of CYT2B7 series

Output ("k") Trigger label Description					
MUX Group 6: PASS (PASS SAR trigger multiplexer)					
0:11	PASS_GEN_TR_IN[0:11]	Generic triggers to SAR ADCs			

Table 5 Trigger inputs of MUX Group 6 of CYT2B7 series

Input ("j")	Trigger label	Description	
MUX Group 6:	PASS (PASS SAR trigger multiplexer)	·	
1:16	PDMA0_TR_OUT[0:15]	General purpose P-DMA0 triggers	
17:18	CTI_TR_OUT[0:1]	Trace events	
19:22	FAULT_TR_OUT[0:3]	Fault events	
23:25	EVTGEN_TR_OUT[0:2]	EVTGEN triggers	
26:31	PASS_GEN_TR_OUT[0:5]	PASS SAR done signals	
32:63	HSIOM_IO_INPUT[0:31]	I/O inputs	
64:67	TCPWM_32_TR_OUT1[0:3]	32-bit TCPWM0 counters	
68:79	TCPWM_16M_TR_OUT1[0:11]	16-bit Motor enhanced TCPWM0 counters	

For the Trigger Group Inputs and Trigger Group Outputs tables of each series, see the device datasheets. Figure 4 shows the input trigger and output trigger structure.

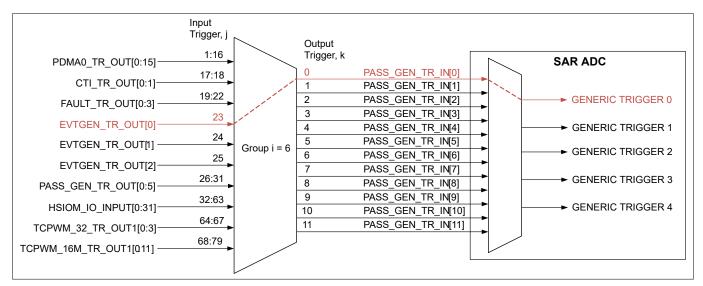

Trigger routing between TCPWM 16-bit Motor and Generic Trigger 2 in ADC of CYT2B7 Figure 4 series

The following explains how the trigger source Event Generator 0 is routed to a generic trigger 0 of SAR0:

1. Configuration register selection:

MUX Group 6 (i=6)

Output trigger PASS_GEN_TR_IN[0] (k=0)

Therefore, the register is specified as PERI_TR_GR6_TR_CTL0.



2 Trigger multiplexer overview

2. Input trigger selection:

Input trigger EVTGEN_TR_OUT[0] (j=23)

The configuration will be PERI TR GR6 TR CTLO.TR SEL = 23.

3. Generic trigger selection:

Generic trigger SAR_TR_IN_SEL0.IN0_SEL = 0.

Table 6 shows the bit registers for a group trigger that explains the inverted output trigger and the level or edge sensitive trigger. For more details, see the registers TRM.

Table 6 Group trigger control bit registers

Bit register	Description
PERI_TR_GR[i]_TR_CTL[k].TR_INV	Specifies if the output trigger is inverted. '0': Not inverted '1': Inverted
PERI_TR_GR[i]_TR_CTL[k].TR_EDGE	Specifies if the (inverted) output trigger is treated as a level sensitive or edge sensitive trigger. '0': Level sensitive
	'1': Edge sensitive trigger

2.2 One-to-one trigger

For a one-to-one trigger, an input trigger, TRIG_IN_1TO1_x, is connected to the output trigger TRIG_OUT_1TO1_x. A one-to-one group has AND gate functionality to disable an input trigger. Figure 5 shows the one-to-one trigger block diagram.

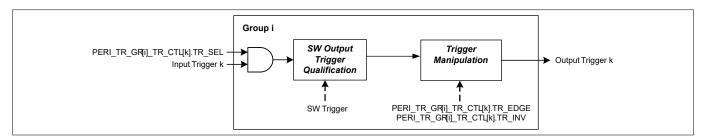


Figure 5 One-to-one trigger

One-to-one group trigger can be specified by the PERI_TR_1TO1_GR[i]_TR_CTL[k] register. Here, suffices "I" and "k" indicate the trigger group number and the output trigger number, respectively.

PERI_TR_1TO1_GR[i]_TR_CTL[k].TR_SEL is used to control the enabling/disabling of input trigger. If set to '1', the input trigger is enabled. If set to '0', the input trigger is disabled and set to constant signal level '0'.

This section describes an example of one-to-one trigger.

Example:

This is an example to trigger data transmission on P-DMA1 channel 15 by SCB UART channel 3. This trigger routing is included in MUX Group 8. The example is based on Table 7 extracted from the CYT2B7 series datasheet that provides trigger group and input trigger.

Table 7 Trigger one-to-one MUX Group 8 of CYT2B7 series

Input trigger ("k")	Trigger inputs	Trigger outputs	
MUX Group 8: SCB to P-DMA1 Triggers			
(table continues)			



2 Trigger multiplexer overview

Table 7 (continued) Trigger one-to-one MUX Group 8 of CYT2B7 series

Input trigger ("k")	Trigger inputs	Trigger outputs
0	SCB0_TX_TR_OUT	PDMA1_TR_IN[8]
1	SCB0_RX_TR_OUT	PDMA1_TR_IN[9]
2	SCB1_TX_TR_OUT	PDMA1_TR_IN[10]
3	SCB1_RX_TR_OUT	PDMA1_TR_IN[11]
4	SCB2_TX_TR_OUT	PDMA1_TR_IN[12]
5	SCB2_RX_TR_OUT	PDMA1_TR_IN13]
6	SCB3_TX_TR_OUT	PDMA1_TR_IN[14]
7	SCB3_RX_TR_OUT	PDMA1_TR_IN[15]
8	SCB4_TX_TR_OUT	PDMA1_TR_IN[16]
9	SCB4_RX_TR_OUT	PDMA1_TR_IN[17]
10	SCB5_TX_TR_OUT	PDMA1_TR_IN[18]
11	SCB5_RX_TR_OUT	PDMA1_TR_IN[19]
12	SCB6_TX_TR_OUT	PDMA1_TR_IN[20]
13	SCB6_RX_TR_OUT	PDMA1_TR_IN[21]
14	SCB7_TX_TR_OUT	PDMA1_TR_IN[22]
15	SCB7_RX_TR_OUT	PDMA1_TR_IN[23]

For the Trigger One-to-One table of each series, see the device datasheets.

The following describes how to connect SCB channel 3 to P-DMA1 channel 15. Note that in a one-to-one group trigger, one input trigger is directly connected to a specific output trigger. Thus, specifying only the input trigger number is sufficient to indicate its output trigger.

- Configuration register selection: 1.
 - MUX Group 8 (i=8)
 - Input trigger SCB3_RX_TR_OUT, which directly connects to output trigger PDMA1_TR_IN[15] (k=7) Therefore, the register is specified as PERI_TR_1TO1_GR8_TR_CTL7.
- 2. Input trigger configuration: Typically, input trigger of one-to-one trigger is enabled. The configuration will be PERI_TR_1TO1_GR8_TR_CTL7.TR_SEL = 1.

Table 8 shows the bit registers for one-to-one trigger that explains the inverted output trigger and the level or edge sensitive trigger. For more details, see the registers TRM.

Table 8 **Group trigger control bit registers**

Bit register	Description
PERI_TR_1TO1_GR[i]_TR_CTL[k].TR_INV	Specifies if the output trigger is inverted.
	'0': Not inverted
	'1': Inverted
PERI_TR_1TO1_GR[i]_TR_CTL[k].TR_EDGE	Specifies if the (inverted) output trigger is treated as a level sensitive or edge sensitive trigger.
	'0': Level sensitive
	'1': Edge sensitive trigger



2 Trigger multiplexer overview

2.3 Software trigger

Each group supports a software trigger. For a group trigger, either an input trigger or output trigger can be selected for SW trigger. For one-to-one trigger, an output trigger can be selected for SW trigger. Figure 6 shows the group trigger with SW trigger block diagram. Figure 7 shows the one-to-one trigger with SW trigger block diagram.

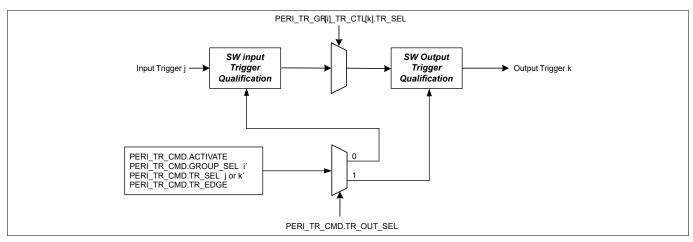


Figure 6 SW trigger in group trigger

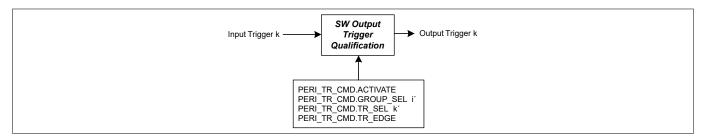


Figure 7 SW trigger in one-to-one trigger

The activation of a trigger through software can be made via PERI_TR_CMD. This register is useful for SW initiated triggers or for debugging purposes. For group trigger, to specify an activated trigger as input trigger (=j) or output trigger (=k), configure PERI_TR_CMD.OUT_SEL. If set to '0', input trigger is selected. If set to '1', output trigger is selected. Note that this configuration is not used for one-to-one trigger. The activated trigger number can be specified by PERI_TR_CMD.TR_SEL=j or k. The trigger group number can be specified by PERI_TR_CMD.GROUP_SEL=i. The level or edge sensitive trigger of the activated trigger can be specified by PERI_TR_CMD.TR_EDGE. PERI_TR_CMD.ACTIVATE can be set to '1' to activate a trigger. PERI_TR_CMD.ACTIVATE cannot be set together with the other PERI_TR_CMD field. This section describes an example of software trigger.

Example:

This is an example to trigger data transfer on P-DMA0 channel 0. This trigger routing is included in MUX Group 0 of group trigger and specifies the output trigger as the activated trigger. Table 9 lists the values that need to be set for PERI_TR_CMD.GROUP_SEL (=i) and PERI_TR_CMD.TR_SEL (=k). Table 9, extracted from the CYT2B7 series datasheet, provides trigger group and output trigger.

Table 9 Trigger outputs of MUX Group 0 of CYT2B7 series

Output ("k")	Trigger label	Description	
MUX Group 0: PDMA0_TR (P-DMA0 trigger multiplexer)			
0:7	PDMA0_TR_IN[0:7]	Triggers to P-DMA0[0:7]	

For the Trigger Group Outputs table of each series, see the device datasheets.



2 Trigger multiplexer overview

Figure 8 shows the trigger of data transfer on P-DMA0 by SW.

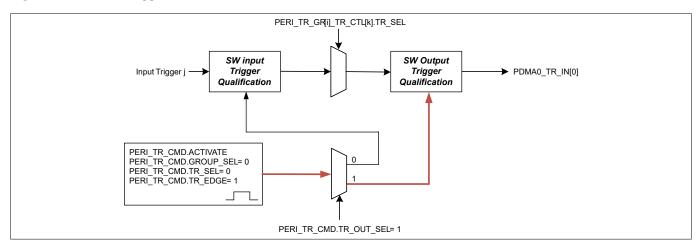


Figure 8 P-DMA0 data transfer start by SW

The following describes how to initiate data transfer on P-DMA0:

1. Activated trigger selection:

PERI_TR_CMD.TR_SEL = **0**: Output trigger PDMA0_TR_IN[0] (k=0)

PERI_TR_CMD.GROUP_SEL = 0: MUX Group 0 of group trigger (i=0)

PERI_TR_CMD.TR_EDGE = 1: Edge sensitive trigger

2. Specifying activated trigger:

PERI_TR_CMD.OUT_SEL = 1: Output trigger

3. Activate SW trigger:

PERI_TR_CMD.ACTIVATE = 1

For details on Trigger Group Inputs and Trigger Group Outputs of each series, see the device datasheets.



3 Application

3 Application

This section describes the following use cases for group trigger, one-to-one trigger, and SW trigger:

- Triggering P-DMA transfer by TCPWM timer: Group trigger use case
- Simultaneous ADC conversion on three SARs by single TCPWM timer: Group trigger use case
- Triggering ADC conversion by TCPWM timer: One-to-one trigger use case
- Simultaneous starting of TCPWM timer by SW trigger: SW trigger use case

3.1 Triggering P-DMA transfer by TCPWM timer

This section explains how an input trigger in a group trigger initiates data transfer of a P-DMA0 channel.

3.1.1 Use case description of triggering P-DMA transfer by TCPWM timer

Figure 9 shows an example application for group trigger in CYT2B7 series. Data transfer of P-DMA0 channel 9 is triggered by TCPWM 16-bit channel 0 on group trigger Multiplexer Group 3. TCPWM counter overflow event triggers P-DMA0 channel 9 to start its data transfer from the SRAM source buffer to the SRAM destination buffer. Figure 10 demonstrates the operation. For more details on TCPWM and DMA Components, see the "TCPWM" and "Direct Memory Access" chapters of the architecture TRM

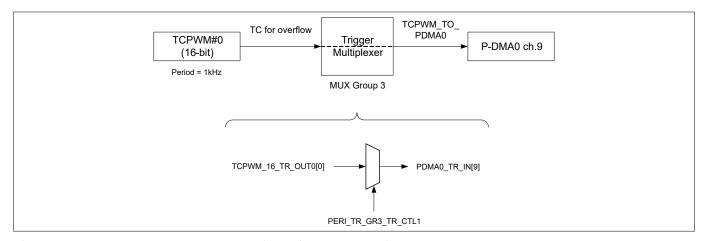


Figure 9 Example of group trigger in CYT2B7 series

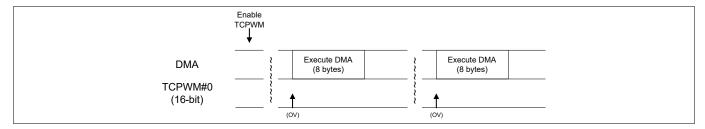


Figure 10 Example operation: Triggering P-DMA transfer by TCPWM counter overflow

Triggers must be set to implement this application. Figure 11 describes the procedure for setting the trigger. Figure 11 also provides the setting for TCPWM counter and P-DMA0 channel.



3 Application

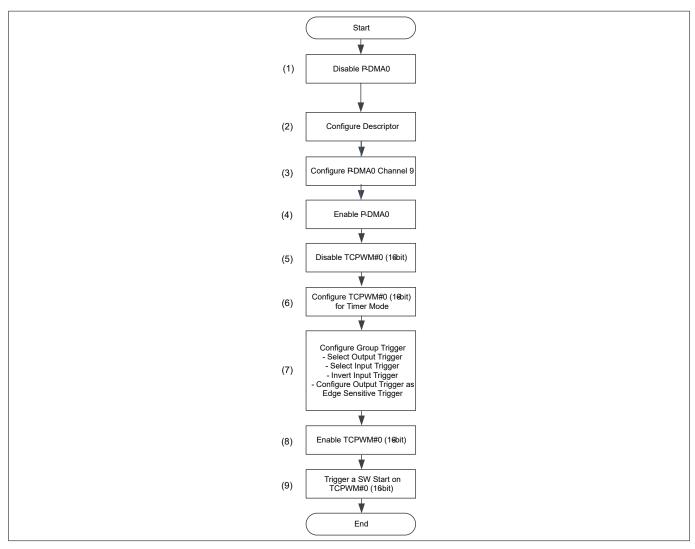


Figure 11 Example of setting for group trigger in CYT2B7 series

The configuration for output trigger and input trigger for group trigger in Step (7) are described as follows.

Trigger Multiplexer Setting

Table 10 and Table 11 list the values to be set. These tables are extracted from the CYT2B7 series datasheet that provides trigger group, input trigger, and output trigger.

Table 10 Trigger outputs of MUX Group 3 of CYT2B7 series

Output ("k")	Trigger label	Description	
MUX Group 3: TCPWM_TO_PDMA0 (TCPWM0 to P-DMA0 trigger multiplexer)			
0:7	PDMA0_TR_IN[8:15]	Triggers to P-DMA0[8:15]	

Table 11 Trigger inputs of MUX Group 3 of CYT2B7 series

Input ("j")	Trigger label	Description	
MUX Group 3: TCPWM_TO_PDMA0 (TCPWM0 to P-DMA0 trigger multiplexer)			
1:4	TCPWM_32_TR_OUT0[0:3]	32-bit TCPWM0 counters	
5:16	TCPWM_16M_TR_OUT0[0:11]	16-bit Motor enhanced TCPWM0 counters	

(table continues...)




3 Application

Table 11 (continued) Trigger inputs of MUX Group 3 of CYT2B7 series

Input ("j")	Trigger label	Description
17:79	TCPWM_16_TR_OUT0[0:62]	16-bit TCPWM0 counters
80:82	CAN0_TT_TR_OUT[0:2]	CAN0 TT Sync Outputs
83:85	CAN1_TT_TR_OUT[0:2]	CAN1 TT Sync Outputs

Figure 12 shows the input trigger and output trigger structure.

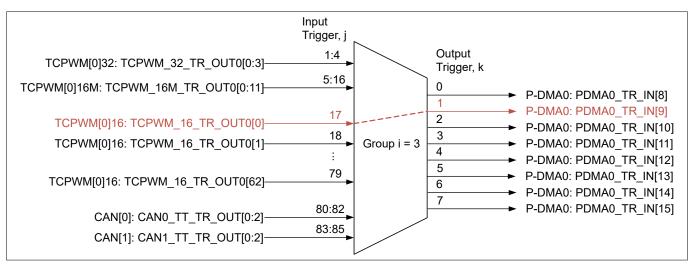

Trigger routing between 16-bit TCPWM and P-DMA0 of CYT2B7 series Figure 12

The following explains how to connect P-DMA0 channel 9 and 16-bit TCPWM channel 0:

Configuration register selection:

MUX Group 3 (i=3)

Output trigger PDMA0 TR IN[9] (k=1)

Therefore, the register is specified as PERI_TR_GR3_TR_CTL1.

Input trigger selection: 2.

Input trigger TCPWM_16_TR_OUT0[0] (j=17)

The configuration will be PERI_TR_GR3_TR_CTL1.TR_SEL = 17. It is necessary to refer to Trigger Multiplexer diagram of each series to make sure the correct multiplexer group and accurate input and output trigger are selected. To find the trigger setting of group trigger of another MUX group and another series, see the device datasheets.

Example program for triggering P-DMA transfer by TCPWM timer 3.1.2

Code Listing 1 shows the example program for Figure 11. The code snippets in this application note are part of the Sample Driver Library (SDL). See Other References for the SDL.



3 Application

Code Listing 1 Example for triggering P-DMA transfer by TCPWM timer

```
void Cy_PDMA_Disable(volatile stc_DW_t *pstcPDMA)
 pstcPDMA->unCTL.stcField.u1ENABLED = 0; //(1) Disable P-DMA0
cy_en_pdma_status_t Cy_PDMA_Descr_Init(cy_stc_pdma_descr_t* descriptor, const
cy_stc_pdma_descr_config_t* config)
 cy_en_pdma_status_t retVal = CY_PDMA_ERR_UNC; //(2) Configure Descriptor
 if ((descriptor != NULL) && (config != NULL))
   descriptor->unPDMA_DESCR_CTL.stcField.u2WAIT_FOR_DEACT
                                                                           config-
>deact;
    descriptor->unPDMA_DESCR_CTL.stcField.u2INTR_TYPE
                                                                           config-
>intrType;
   descriptor->unPDMA_DESCR_CTL.stcField.u2TR_OUT_TYPE
                                                                           config-
>trigoutType;
   descriptor->unPDMA_DESCR_CTL.stcField.u2TR_IN_TYPE
                                                                           config-
>triginType;
   descriptor->unPDMA_DESCR_CTL.stcField.u1SRC_TRANSFER_SIZE
                                                                           config-
>srcTxfrSize;
    descriptor->unPDMA_DESCR_CTL.stcField.u1DST_TRANSFER_SIZE
                                                                           config-
>destTxfrSize;
    descriptor->unPDMA_DESCR_CTL.stcField.u1CH_DISABLE
                                                                           config-
>chStateAtCmplt;
   descriptor->unPDMA_DESCR_CTL.stcField.u2DATA_SIZE
                                                                           config-
>dataSize;
   descriptor->unPDMA_DESCR_CTL.stcField.u2DESCR_TYPE
                                                                           config-
>descrType;
   descriptor->u32PDMA_DESCR_SRC
                                                                           (uint32_t)config-
>srcAddr;
    descriptor->u32PDMA_DESCR_DST
                                                                           (uint32_t)config-
>destAddr;
    switch(config->descrType)
      case (uint32_t)CY_PDMA_1D_TRANSFER:
       descriptor->unPDMA_DESCR_X_CTL.stcField.u12SRC_X_INCR =
                                                                       (uint32_t)config-
       descriptor->unPDMA_DESCR_X_CTL.stcField.u12DST_X_INCR =
                                                                       (uint32_t)config-
>destXincr;
       descriptor->unPDMA_DESCR_X_CTL.stcField.u8X_COUNT =
                                                                       (uint32_t)((config-
>xCount) - 1u);
       descriptor->unPDMA_DESCR_Y_CTL.u32Register
                                                                       (uint32_t)config-
>descrNext;
       break;
     }
    }
```



```
retVal = CY_PDMA_SUCCESS;
 return retVal;
}
cy_en_pdma_status_t Cy_PDMA_Chnl_Init(volatile stc_DW_t *pstcPDMA, uint32_t chNum, const
cy_stc_pdma_chnl_config_t* chnlConfig)
 cy_en_pdma_status_t retVal = CY_PDMA_ERR_UNC;
 if ((pstcPDMA != NULL) && (chnlConfig != NULL)) //(3) Configure P-DMAO Channel 9
   /* Set current descriptor */
   pstcPDMA->CH_STRUCT[chNum].unCH_CURR_PTR.u32Register
                                                                   = (uint32_t)chnlConfig-
>PDMA_Descriptor;
   /* Set if the channel is preemtable */
   pstcPDMA->CH_STRUCT[chNum].unCH_CTL.stcField.u1PREEMPTABLE
                                                                  = chnlConfig->preemptable;
    /* Set channel priority */
   pstcPDMA->CH_STRUCT[chNum].unCH_CTL.stcField.u2PRIO
                                                                 = chnlConfig->priority;
   /* Set enabled status */
   pstcPDMA->CH_STRUCT[chNum].unCH_CTL.stcField.u1ENABLED = chnlConfig->enable;
   retVal = CY_PDMA_SUCCESS;
 }
 return (retVal);
}
void Cy_PDMA_Enable(volatile stc_DW_t *pstcPDMA)
 pstcPDMA->unCTL.stcField.u1ENABLED = 1; //(4) Enable P-DMA0
void Cy_Tcpwm_Counter_Disable(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM)
 ptscTCPWM->unCTRL.stcField.u1ENABLED = 0x00; //(5) Disable TCPWM#0 (16-bit)
uint32_t Cy_Tcpwm_Counter_Init(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM,
cy_stc_tcpwm_counter_config_t const *config)
 uint32_t status = CY_RET_BAD_PARAM;
 if ((NULL != ptscTCPWM) && (NULL != config))
   ptscTCPWM->unCTRL.stcField.u1ONE_SHOT = config->runMode; //(6) Configure TCPWM#0 (16-
bit) for Timer Mode
    ptscTCPWM->unCTRL.stcField.u2UP_DOWN_MODE = config-> countDirection;
    ptscTCPWM->unCTRL.stcField.u3MODE = config->CompareOrCapture;
    ptscTCPWM->unCTRL.stcField.u1DBG_FREEZE_EN = config->debug_pause;
   ptscTCPWM->unCTRL.stcField.u1AUTO_RELOAD_CC0 = config->enableCompare0Swap;
   ptscTCPWM->unDT.stcField.u8DT_LINE_OUT_L = config->clockPrescaler;
    if (CY_TCPWM_COUNTER_COUNT_UP == config->runMode)
```



```
{
     ptscTCPWM->unCOUNTER.u32Register = CY_TCPWM_CNT_UP_INIT_VAL;
    ptscTCPWM->unCC0.u32Register = config->compare0;
    ptscTCPWM->unCC0_BUFF.u32Register = config->compare0_buff;
    ptscTCPWM->unPERIOD.u32Register = config->period;
    ptscTCPWM->unTR_IN_SEL0.stcField.u8CAPTURE0_SEL = config->capture0Input;
    ptscTCPWM->unTR_IN_SEL0.stcField.u8RELOAD_SEL = config->reloadInput;
    ptscTCPWM->unTR_IN_SEL0.stcField.u8STOP_SEL = config->stopInput;
    ptscTCPWM->unTR_IN_SEL0.stcField.u8COUNT_SEL = config->countInput;
    ptscTCPWM->unTR_IN_SEL1.stcField.u8START_SEL = config->startInput;
    ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2CAPTURE0_EDGE = config->capture0InputMode;
    ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2RELOAD_EDGE = config->reloadInputMode;
    ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2START_EDGE = config->startInputMode;
    ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2STOP_EDGE = config->stopInputMode;
    ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2COUNT_EDGE = config->countInputMode;
    ptscTCPWM->unTR_OUT_SEL.stcField.u30UT0 = config->trigger1;
    ptscTCPWM->unTR_OUT_SEL.stcField.u3OUT1 = config->trigger2;
    ptscTCPWM->unINTR_MASK.u32Register = config->interruptSources;
    ptscTCPWM->unCTRL.stcField.u1AUTO_RELOAD_CC1 = config->enableCompare1Swap;
    ptscTCPWM->unCC1.u32Register = config->compare1;
    ptscTCPWM->unCC1_BUFF.u32Register = config->compare1_buff;
    ptscTCPWM->unTR_IN_SEL1.stcField.u8CAPTURE1_SEL = config->capture1Input;
    ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2CAPTURE1_EDGE = config->capture1InputMode;
    status = CY_RET_SUCCESS;
 }
 return(status);
cy_en_trigmux_status_t Cy_TrigMux_Connect(uint32_t inTrig, uint32_t outTrig, uint32_t invert,
en_trig_type_t trigType, uint32_t dbg_frz_en)
{
             stc_PERI_TR_GR_TR_CTL_field_t* pTR_CTL; //(7) Configure Group Trigger
 volatile
                                             retVal = CY_TRIGMUX_BAD_PARAM;
             cy_en_trigmux_status_t
 if ((inTrig & CY_TR_GROUP_MASK) == (outTrig & CY_TR_GROUP_MASK))
                       = &(PERI->TR_GR[(outTrig & CY_TR_GROUP_MASK) >>
    pTR_CTL
CY_TR_GROUP_SHIFT].unTR_CTL[outTrig & CY_TR_MASK].stcField); //Select output trigger
TRIG_OUT_MUX_3_PDMA0_TR_IN9
   pTR_CTL->u8TR_SEL = inTrig; //Select input trigger TRIG_IN_MUX_3_TCPWM_16_TR_OUT00
    pTR_CTL->u1TR_INV = invert; //Invert input trigger
   pTR_CTL->u1TR_EDGE = trigType; //Select edge sensitive trigger as output trigger type
                      = CY_TRIGMUX_SUCCESS;
   retVal
 return retVal;
void Cy_Tcpwm_Counter_Enable(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM)
 ptscTCPWM->unCTRL.stcField.u1ENABLED = 0x1; //(8) Enable TCPWM#0 (16-bit)
}
```



3 Application

```
void Cy_Tcpwm_TriggerStart(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM)
{
   ptscTCPWM->unTR_CMD.stcField.u1START = 0x01; //(9) Trigger a SW Start on TCPWM#0 (16-bit)
}
```

Note:

The highlighted sections in bold of the code snippet are not explained in this application note. For details, see the architecture TRM.

3.2 Simultaneous ADC conversion on three SARs by single TCPWM timer

This section explains how an input trigger in a group trigger initiates ADC channel conversion on three SAR units.

3.2.1 Use case description of simultaneous ADC conversion on three SARs by single TCPWM timer

Activation of multiple SAR ADC units, on ADC channel, can be triggered simultaneously by a single TCPWM timer. Generic trigger inputs are shared between ADC channels. One of the five generic triggers can be routed to any ADC channel. Figure 13 shows an example application in which ADC channel conversion of SAR0, SAR1, and SAR2 are triggered by TCPWM 16-bit Motor Control counter on group trigger Multiplexer Group 6. Compare match 0 on TCPWM counter generates a trigger to SAR ADC, which is connected to the generic triggers. The generic triggers are routed to ADC channel 3 of SAR0, SAR1, and SAR2, which initiates the simultaneous conversion.

Figure 14 demonstrates the operation. For more details on TCPWM and SAR ADC, see the "TCPWM" and "SAR ADC" chapters of the architecture TRM.

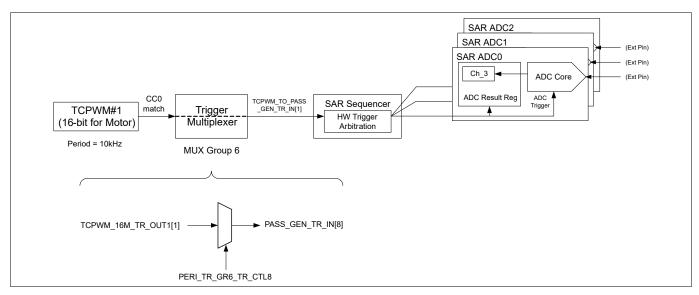


Figure 13 Example of group trigger and ADC generic trigger input in CYT2B7 series



3 Application

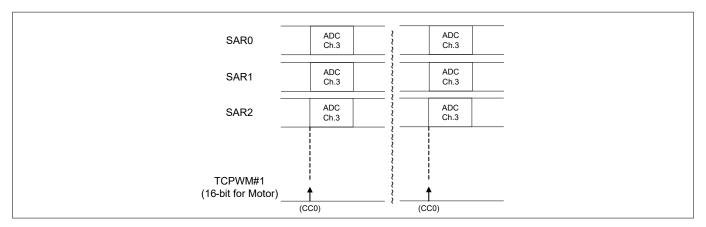


Figure 14 Example operation: Simultaneous ADC conversion on three SARs by single TCPWM timer

Triggers must be set to implement this application. Figure 15 demonstrates the procedure for setting the trigger.



3 Application

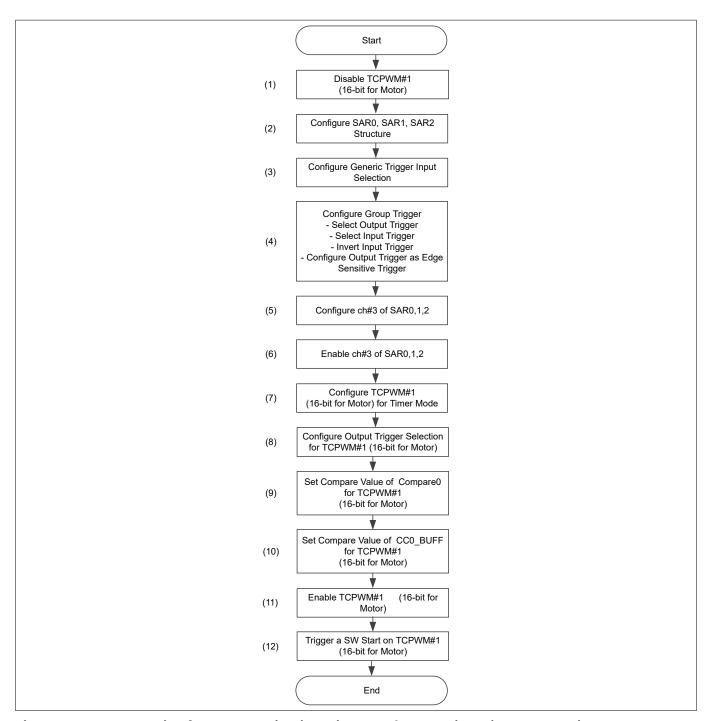


Figure 15 Setting for ADC generic trigger input and group trigger in CYT2B7 series

The configuration for the output trigger and input trigger for a group trigger in Step (4) are described as follows.

Trigger Multiplexer Setting

Table 12 and Table 13 list the values to be set. These tables are extracted from the CYT2B7 series datasheet that provides trigger group, input trigger, and output trigger.

Table 12 Trigger outputs of MUX Group 6 of CYT2B7 series

Output ("k")	Trigger label	Description	
MUX Group 6: PASS (PASS SAR trigger multiplexer)			
0:11	PASS_GEN_TR_IN[0:11]	Generic triggers to SAR ADCs	




3 Application

Table 13 Trigger inputs of MUX Group 6 of CYT2B7 series

Input ("j")	Trigger label	Description
MUX Group 6: PAS	SS (PASS SAR trigger multiplexer)	
1:16	PDMA0_TR_OUT[0:15]	General purpose P-DMA0 triggers
17:18	CTI_TR_OUT[0:1]	Trace events
19:22	FAULT_TR_OUT[0:3]	Fault events
23:25	EVTGEN_TR_OUT[0:2]	EVTGEN triggers
26:31	PASS_GEN_TR_OUT[0:5]	PASS SAR done signals
32:63	HSIOM_IO_INPUT[0:31]	I/O inputs
64:67	TCPWM_32_TR_OUT1[0:3]	32-bit TCPWM0 counters
68:79	TCPWM_16M_TR_OUT1[0:11]	16-bit Motor enhanced TCPWM0 counters

For Trigger Group Inputs and Trigger Group Outputs tables of each series, see the device datasheets. Figure 16 shows the input trigger and output trigger structure.

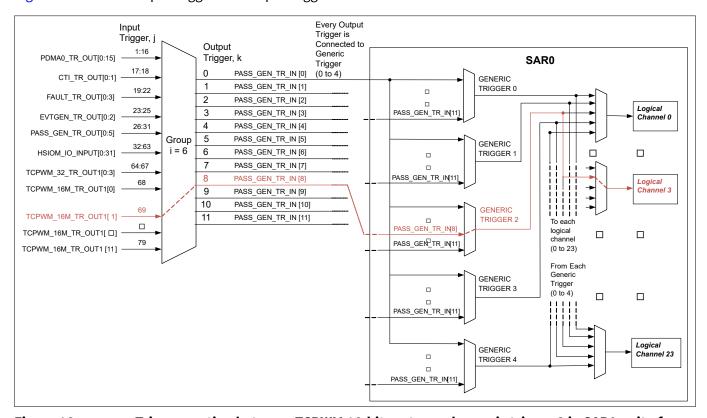

Trigger routing between TCPWM 16-bit motor and generic trigger 2 in SAR0 unit of Figure 16 **CYT2B7** series

The following explains how the trigger source TCPWM 16-bit Motor Control counter is routed to a generic trigger 2 of each SAR:

1. Configuration register selection:

MUX Group 6 (i=6)

Output trigger, generic trigger 8 or PASS_GEN_TR_IN[8] (k=8)

Therefore, the register is specified as PERI_TR_GR6_TR_CTL8.



3 Application

2. Input trigger selection:

Input trigger TCPWM_16M_TR_OUT1[1] (j=69)

The configuration will be PERI TR GR6 TR CTL8.TR SEL = 69.

- Generic trigger 8 is forwarded to SAR generic trigger input 2, IN2 of the corresponding SAR unit: 3.
 - For SAR0, the configuration will be
 - SAR TR IN SELO.IN2 SEL = 8
 - For SAR1, the configuration will be
 - SAR_TR_IN_SEL1.IN2_SEL = 8
 - For SAR2, the configuration will be
 - SAR TR IN SEL2.IN2 SEL = 8
- IN2 triggers channel 3 of the corresponding SAR unit: 4.
 - For SARO, the configuration for SAR trigger select will be
 - PASSO_SARO_CH3_TR_CTL.SEL = 4 (This value represents SAR Generic trigger input 2)
 - For SAR1, the configuration for SAR trigger select will be
 - PASSO_SAR1_CH3_TR_CTL.SEL = 4
 - For SAR2, the configuration for SAR trigger select will be
 - PASSO_SAR2_CH3_TR_CTL.SEL = 4

To find the trigger setting of the group trigger, see the device datasheets.

3.2.2 **Example program for simultaneous ADC conversion on three SARs** by single TCPWM timer

Code Listing 2 shows the example program for Figure 15.



3 Application

Code Listing 2 Example of simultaneous ADC conversion on three SARs by single TCPWM timer

```
void Cy_Tcpwm_Counter_Disable(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM)
 ptscTCPWM->unCTRL.stcField.u1ENABLED = 0x00; //(1) Disable TCPWM#1 (16-bit for Motor)
cy_en_adc_status_t Cy_Adc_Init(volatile stc_PASS_SAR_t * base, const cy_stc_adc_config_t *
 cy_en_adc_status_t ret = CY_ADC_SUCCESS;
 un_PASS_SAR_CTL_t unSarCt1 = { 0 };
 if (NULL != config)
    /* CTL register setting */
   //(2) Configure SAR0, SAR1, SAR2 Structure
   base->unPRECOND_CTL.stcField.u4PRECOND_TIME = config->preconditionTime;
    /* CTL register setting */
   unSarCtl.stcField.u8PWRUP_TIME = config->powerupTime;
    unSarCtl.stcField.u1IDLE_PWRDWN = config->enableIdlePowerDown ? 1u : 0;
    unSarCtl.stcField.u1MSB_STRETCH = config->msbStretchMode;
   unSarCtl.stcField.u1HALF_LSB = config->enableHalfLsbConv ? 1u : 0;
   unSarCtl.stcField.u1SARMUX_EN = config->sarMuxEnable ? 1u : 0;
    unSarCtl.stcField.u1ADC_EN = config->adcEnable ? 1u : 0;
   unSarCtl.stcField.u1ENABLED = config->sarIpEnable ? 1u : 0;
   base->unCTL.u32Register = unSarCtl.u32Register;
 }
 else
 {
    ret = CY_ADC_BAD_PARAM;
 }
 return ret;
}
cy en adc status t Cy Adc SetGenericTriggerInput(volatile stc PASS EPASS MMIO t * base, uint8 t
numOfAdc, uint8_t triggerInputNumber, uint8_t genericTriggerValue)
 cy_en_adc_status_t ret = CY_ADC_SUCCESS;
   switch(triggerInputNumber) //(3) Configure Generic Trigger Input Selection
     case 2:
     base->unSAR_TR_IN_SEL[numOfAdc].stcField.u4IN2_SEL = genericTriggerValue; //Select
GENERIC TRIGGER 2
      break;
    }
 return ret;
}
cy_en_trigmux_status_t Cy_TrigMux_Connect(uint32_t inTrig, uint32_t outTrig, uint32_t invert,
en_trig_type_t trigType, uint32_t dbg_frz_en)
```



```
volatile
             stc_PERI_TR_GR_TR_CTL_field_t* pTR_CTL;
                                                           //(4) Configure Group Trigger
                                             retVal = CY_TRIGMUX_BAD_PARAM;
             cy_en_trigmux_status_t
 if ((inTrig & CY_TR_GROUP_MASK) == (outTrig & CY_TR_GROUP_MASK))
   pTR_CTL
                       = &(PERI->TR_GR[(outTrig & CY_TR_GROUP_MASK) >>
CY_TR_GROUP_SHIFT].unTR_CTL[outTrig & CY_TR_MASK].stcField); //Select output trigger
TRIG_OUT_MUX_6_PASS_GEN_TR_IN8
    pTR_CTL->u8TR_SEL = inTrig; //Select input trigger TRIG_IN_MUX_6_TCPWM_16M_TR_OUT11
   pTR_CTL->u1TR_INV = invert; //Invert input trigger
   pTR_CTL->u1TR_EDGE = trigType; // Select edge sensitive trigger as output trigger type
                       = CY_TRIGMUX_SUCCESS;
   retVal
 return retVal;
}
cy_en_adc_status_t Cy_Adc_Channel_Init(volatile stc_PASS_SAR_CH_t * base, const
cy_stc_adc_channel_config_t * config)
 cy_en_adc_status_t ret = CY_ADC_SUCCESS;
 un_PASS_SAR_CH_TR_CTL_t unTrCtl = { 0 };  //(5) Configure ch#3 of SAR0,1,2
 un_PASS_SAR_CH_SAMPLE_CTL_t unSampleCtl = { 0 };
 un_PASS_SAR_CH_POST_CTL_t unPostCtl = { 0 };
 un_PASS_SAR_CH_RANGE_CTL_t unRangeCtl = { 0 };
 un_PASS_SAR_CH_INTR_t unIntr = { 0 };
 if (NULL != config)
 {
    /* At first disable the channel */
     base->unENABLE.stcField.u1CHAN_EN = Ou;
    /* Clear whole interrupt flags */
   unIntr.stcField.u1CH_OVERFLOW = 1u;
    unIntr.stcField.u1CH_PULSE = 1u;
   unIntr.stcField.u1CH_RANGE = 1u;
    unIntr.stcField.u1GRP_CANCELLED = 1u;
    unIntr.stcField.u1GRP_DONE = 1u;
    unIntr.stcField.u1GRP_OVERFLOW = 1u;
    base->unINTR.u32Register = unIntr.u32Register;
   unTrCtl.stcField.u3SEL = config->triggerSelection;
    unTrCtl.stcField.u3PRIO = config->channelPriority;
    unTrCtl.stcField.u2PREEMPT_TYPE = config->preenptionType;
    unTrCtl.stcField.u1GROUP_END = config->isGroupEnd ? 1u : 0u;
    unTrCtl.stcField.u1DONE_LEVEL = config->doneLevel ? 1u : 0u;
    base->unTR_CTL.u32Register = unTrCtl.u32Register;
    unSampleCtl.stcField.u6PIN_ADDR = config->pinAddress;
    unSampleCtl.stcField.u2PORT_ADDR = config->portAddress;
    unSampleCtl.stcField.u3EXT_MUX_SEL = config->extMuxSelect;
    unSampleCtl.stcField.u1EXT_MUX_EN = config->extMuxEnable ? 1u : 0u;
    unSampleCtl.stcField.u2PRECOND_MODE = config->preconditionMode;
```



```
unSampleCtl.stcField.u2OVERLAP_DIAG = config->overlapDiagMode;
    unSampleCtl.stcField.u12SAMPLE_TIME = config->sampleTime;
    unSampleCtl.stcField.u1ALT_CAL = config->calibrationValueSelect;
    base->unSAMPLE_CTL.u32Register = unSampleCtl.u32Register;
    unPostCtl.stcField.u3POST_PROC = config->postProcessingMode;
    unPostCtl.stcField.u1LEFT_ALIGN = config->resultAlignment;
    unPostCtl.stcField.u1SIGN_EXT = config->signExtention;
    unPostCtl.stcField.u8AVG_CNT = config->averageCount;
    unPostCtl.stcField.u5SHIFT_R = config->rightShift;
    unPostCtl.stcField.u2RANGE_MODE = config->rangeDetectionMode;
    base->unPOST_CTL.u32Register = unPostCtl.u32Register;
    unRangeCtl.stcField.u16RANGE_LO = config->rangeDetectionLoThreshold;
    unRangeCtl.stcField.u16RANGE_HI = config->rangeDetectionHiThreshold;
    base->unRANGE_CTL.u32Register = unRangeCtl.u32Register;
    {
    cy_en_adc_status_t ret = CY_ADC_SUCCESS;
    un_PASS_SAR_CH_INTR_MASK_t unMask = { 0 };
    if (NULL != mask)
      unMask.stcField.u1CH_OVERFLOW_MASK = mask->chOverflow ? 1u : 0u;
      unMask.stcField.u1CH PULSE MASK = mask->chPulse ? 1u : 0u;
      unMask.stcField.u1CH_RANGE_MASK = mask->chRange ? 1u : 0u;
      unMask.stcField.u1GRP_CANCELLED_MASK = mask->grpCancelled ? 1u : 0u;
      unMask.stcField.u1GRP_DONE_MASK = mask->grpDone ? 1u : 0u;
     unMask.stcField.u1GRP_OVERFLOW_MASK = mask->grpOverflow ? 1u : 0u;
      base->unINTR_MASK.u32Register = unMask.u32Register;
   return ret;
 return ret;
void Cy_Adc_Channel_Enable(volatile stc_PASS_SAR_CH_t * base)
 base->unENABLE.stcField.u1CHAN_EN = 1u; //(6) Enable ch#3 of SAR0,1,2
uint32_t Cy_Tcpwm_Counter_Init(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM,
cy_stc_tcpwm_counter_config_t const *config)
 uint32_t status = CY_RET_BAD_PARAM;
                                        //(7) Configure TCPWM#1 (16-bit for Motor) for Timer
Mode
 if (config->trigger1 > 0x04 || config->trigger2 > 0x04)
 {
   return status;
 }
 if ((NULL != ptscTCPWM) && (NULL != config))
```



```
{
    ptscTCPWM->unCTRL.stcField.u1ONE_SHOT = config->runMode;
    ptscTCPWM->unCTRL.stcField.u2UP_DOWN_MODE = config-> countDirection;
   ptscTCPWM->unCTRL.stcField.u3MODE = config->CompareOrCapture;
    ptscTCPWM->unCTRL.stcField.u1DBG_FREEZE_EN = config->debug_pause;
    ptscTCPWM->unCTRL.stcField.u1AUTO_RELOAD_CC0 = config->enableCompare0Swap;
    ptscTCPWM->unDT.stcField.u8DT_LINE_OUT_L = config->clockPrescaler;
    if (CY_TCPWM_COUNTER_COUNT_UP == config->runMode)
     ptscTCPWM->unCOUNTER.u32Register = CY_TCPWM_CNT_UP_INIT_VAL;
    else if (CY_TCPWM_COUNTER_COUNT_DOWN == config->runMode)
     ptscTCPWM->unCOUNTER.u32Register = config->period;
    }
    else
     ptscTCPWM->unCOUNTER.u32Register = CY_TCPWM_CNT_UP_DOWN_INIT_VAL;
    ptscTCPWM->unCC0.u32Register = config->compare0;
    ptscTCPWM->unCC0_BUFF.u32Register = config->compare0_buff;
    ptscTCPWM->unPERIOD.u32Register = config->period;
    ptscTCPWM->unTR_IN_SEL0.stcField.u8CAPTURE0_SEL = config->capture0Input;
    ptscTCPWM->unTR_IN_SEL0.stcField.u8RELOAD_SEL = config->reloadInput;
    ptscTCPWM->unTR_IN_SEL0.stcField.u8STOP_SEL = config->stopInput;
    ptscTCPWM->unTR_IN_SEL0.stcField.u8COUNT_SEL = config->countInput;
    ptscTCPWM->unTR_IN_SEL1.stcField.u8START_SEL = config->startInput;
    ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2CAPTURE0_EDGE = config->capture0InputMode;
    ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2RELOAD_EDGE = config->reloadInputMode;
    ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2START_EDGE = config->startInputMode;
    ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2STOP_EDGE = config->stopInputMode;
    ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2COUNT_EDGE = config->countInputMode;
    ptscTCPWM->unTR_OUT_SEL.stcField.u30UT0 = config->trigger1;
    ptscTCPWM->unTR_OUT_SEL.stcField.u3OUT1 = config->trigger2;
    ptscTCPWM->unINTR_MASK.u32Register = config->interruptSources;
    ptscTCPWM->unCTRL.stcField.u1AUTO_RELOAD_CC1 = config->enableCompare1Swap;
    ptscTCPWM->unCC1.u32Register = config->compare1;
    ptscTCPWM->unCC1_BUFF.u32Register = config->compare1_buff;
    ptscTCPWM->unTR_IN_SEL1.stcField.u8CAPTURE1_SEL = config->capture1Input;
   ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2CAPTURE1_EDGE = config->capture1InputMode;
    status = CY_RET_SUCCESS;
 }
 return(status);
}
 TCPWM0_GRP1_CNT1->unTR_OUT_SEL.stcField.u3OUT1 = CY_TCPWM_COUNTER_CC0_MATCH;
                                                                                   //(8)
Configure Output Trigger Selection for TCPWM#1 (16-bit for Motor)
void Cy_Tcpwm_Counter_SetCompare0(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM, uint32_t compare0)
```



3 Application

```
ptscTCPWM->unCC0.u32Register = compare0;
                                             //(9) Set Compare Value of Compare0 for TCPWM#1
(16-bit for Motor)
}
void Cy_Tcpwm_Counter_SetCompare0_Buff(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM,
                                                                                 uint32_t
compare1)
 ptscTCPWM->unCC0_BUFF.u32Register = compare1;
                                                   //(10) Set Compare Value of CCO_BUFF for
TCPWM#1 (16-bit for Motor)
void Cy_Tcpwm_Counter_Enable(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM)
 ptscTCPWM->unCTRL.stcField.u1ENABLED = 0x1;
                                                 //(11) Enable TCPWM#1 (16-bit for Motor)
}
void Cy_Tcpwm_TriggerStart(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM)
 ptscTCPWM->unTR_CMD.stcField.u1START = 0x01; //(12) Trigger a SW Start on TCPWM#1 (16-bit
for Motor)
}
```

Note:

The highlighted sections in bold of the code snippet are not explained in this application note. For details, see the architecture TRM.

3.3 Triggering ADC conversion by TCPWM timer

This section explains how an input trigger in a one-to-one group trigger initiates ADC conversion.

3.3.1 Use case description of triggering ADC conversion by TCPWM timer

Figure 17 shows an example application of one-to-one trigger in CYT2B7 series. ADC conversion of SAR0 is triggered by TCPWM 16-bit counter on one-to-one trigger Multiplexer Group 1. Compare match of TCPWM counter channel 0 and channel 1 trigger the conversion on channel 4 and 5 of SAR0, respectively. Figure 18 demonstrates the operation. For more details on TCPWM and SAR ADC, see the "TCPWM" and "SAR ADC" chapters of the architecture TRM.

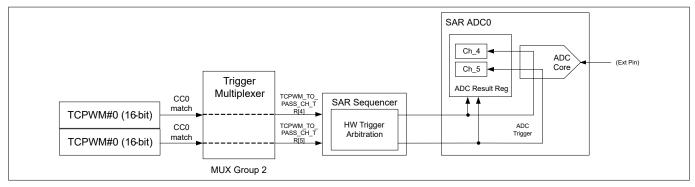


Figure 17 Example of one-to-one trigger in CYT2B7 series



3 Application

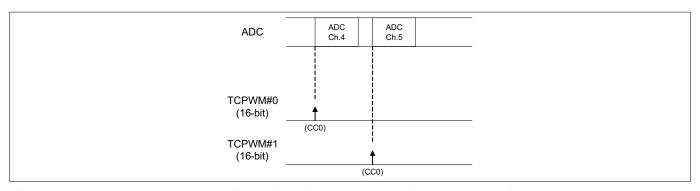


Figure 18 Example operation: Triggering ADC conversion by TCPWM timer

Triggers must be set to implement this application. Figure 19 describes the procedure for setting the trigger. Figure 19 also provides the setting for TCPWM counter and SAR0 structure.

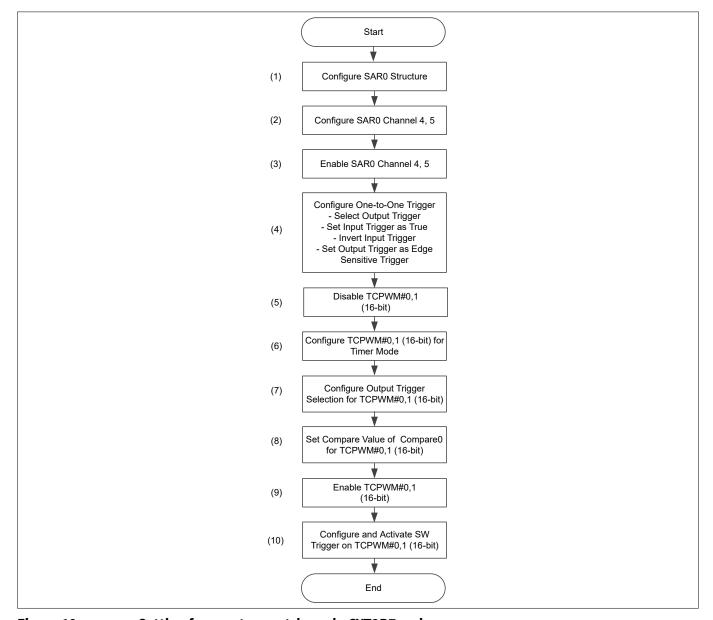


Figure 19 Setting for one-to-one trigger in CYT2B7 series

The configuration for the output trigger and input trigger of a one-to-one trigger in Step (4) are described as follows.



3 Application

Trigger Multiplexer Setting

Table 14 lists the values to be set. These tables are extracted from CYT2B7 series datasheet that provides the trigger group and input trigger.

Table 14 Trigger one-to-one MUX Group 1 of CYT2B7 series

Input trigger k	Trigger inputs	Trigger outputs
MUX Group 1: TCPWI	M0 to PASS SARx direct connect	
0	TCPWM0_16M_TR_OUT1[0]	PASS0_CH_TR_IN[0]
1	TCPWM0_16M_TR_OUT1[1]	PASS0_CH_TR_IN[1]
2	TCPWM0_16M_TR_OUT1[2]	PASS0_CH_TR_IN[2]
3	TCPWM0_16M_TR_OUT1[3]	PASS0_CH_TR_IN[3]
4:23	TCPWM0_16_TR_OUT1[0:19]	PASS0_CH_TR_IN[4:23]
24	TCPWM0_16M_TR_OUT1[4]	PASS0_CH_TR_IN[32]
25	TCPWM0_16M_TR_OUT1[5]	PASS0_CH_TR_IN[33]
26	TCPWM0_16M_TR_OUT1[6]	PASS0_CH_TR_IN[34]
27	TCPWM0_16M_TR_OUT1[7]	PASS0_CH_TR_IN[35]
28:55	TCPWM0_16_TR_OUT1[20:47]	PASS0_CH_TR_IN[36:63]
56	TCPWM0_16M_TR_OUT1[8]	PASS0_CH_TR_IN[64]
57	TCPWM0_16M_TR_OUT1[9]	PASS0_CH_TR_IN[65]
58	TCPWM0_16M_TR_OUT1[10]	PASS0_CH_TR_IN[66]
59	TCPWM0_16M_TR_OUT1[11]	PASS0_CH_TR_IN[67]
60:63	TCPWM0_16_TR_OUT1[48:51]	PASS0_CH_TR_IN[68:71]

The following describes how to connect SAR0 channel 4 and channel 5 to 16-bit TCPWM channel 0. Note that in a one-to-one group trigger, one input trigger is directly connected to a specific output trigger. Thus, specifying only the input trigger number is sufficient to indicate its output trigger.

1. Configuration register selection:

MUX Group 1 (i=1)

Input trigger TCPWM0_16_TR_OUT1[0], directly connects to output trigger PASS0_CH_TR_IN[4] (k=4) Input trigger TCPWM0_16_TR_OUT1[1], directly connects to output trigger PASS0_CH_TR_IN[5] (k=5) Therefore, the registers are specified as PERI TR 1TO1 GR1 TR CTL4, and PERI_TR_1TO1_GR1_TR_CTL5, respectively.

2. Input trigger configuration:

Typically, input trigger of one-to-one trigger is enabled.

The configurations are PERI_TR_1TO1_GR1_TR_CTL4.TR_SEL = 1, and PERI_TR_1TO1_GR1_TR_CTL5.TR_SEL = 1.

For more details on Trigger Input and Trigger Output, see the device datasheets.

3.3.2 Example program for triggering ADC conversion by TCPWM timer

Code Listing 3 demonstrates the example program for Figure 19.



3 Application

Code Listing 3 Example of triggering ADC conversion by TCPWM timer

```
cy_en_adc_status_t Cy_Adc_Init(volatile stc_PASS_SAR_t * base, const cy_stc_adc_config_t *
config)
{
 cy_en_adc_status_t ret = CY_ADC_SUCCESS; //(1) Configure SAR0 Structure
 un_PASS_SAR_CTL_t unSarCtl = { 0 };
 if (NULL != config)
    /* CTL register setting */
   base->unPRECOND_CTL.stcField.u4PRECOND_TIME = config->preconditionTime;
    /* CTL register setting */
   unSarCtl.stcField.u8PWRUP TIME = config->powerupTime;
   unSarCtl.stcField.u1IDLE_PWRDWN = config->enableIdlePowerDown ? 1u : 0;
    unSarCtl.stcField.u1MSB_STRETCH = config->msbStretchMode;
    unSarCtl.stcField.u1HALF_LSB = config->enableHalfLsbConv ? 1u : 0;
   unSarCtl.stcField.u1SARMUX_EN = config->sarMuxEnable ? 1u : 0;
    unSarCtl.stcField.u1ADC_EN = config->adcEnable ? 1u : 0;
    unSarCtl.stcField.u1ENABLED = config->sarIpEnable ? 1u : 0;
   base->unCTL.u32Register = unSarCtl.u32Register;
 return ret;
}
cy_en_adc_status_t Cy_Adc_Channel_Init(volatile stc_PASS_SAR_CH_t * base, const
cy_stc_adc_channel_config_t * config)
 cy_en_adc_status_t ret = CY_ADC_SUCCESS;
                                              //(2) Configure SAR0 Channel 4, 5
 un_PASS_SAR_CH_TR_CTL_t unTrCt1 = { 0 };
 un_PASS_SAR_CH_SAMPLE_CTL_t unSampleCt1 = { 0 };
 un_PASS_SAR_CH_POST_CTL_t unPostCtl = { 0 };
 un_PASS_SAR_CH_RANGE_CTL_t unRangeCt1 = { 0 };
 un_PASS_SAR_CH_INTR_t unIntr = { 0 };
 if (NULL != config)
 {
    /* At first disable the channel */
   base->unENABLE.stcField.u1CHAN_EN = 0u;
    /* Clear whole interrupt flags */
   unIntr.stcField.u1CH_OVERFLOW = 1u;
    unIntr.stcField.u1CH_PULSE = 1u;
   unIntr.stcField.u1CH_RANGE = 1u;
    unIntr.stcField.u1GRP_CANCELLED = 1u;
    unIntr.stcField.u1GRP_DONE = 1u;
    unIntr.stcField.u1GRP_OVERFLOW = 1u;
    base->unINTR.u32Register = unIntr.u32Register;
    unTrCtl.stcField.u3SEL = config->triggerSelection;
    unTrCtl.stcField.u3PRIO = config->channelPriority;
    unTrCtl.stcField.u2PREEMPT TYPE = config->preenptionType;
    unTrCtl.stcField.u1GROUP_END = config->isGroupEnd ? 1u : 0u;
```



```
unTrCtl.stcField.u1DONE_LEVEL = config->doneLevel ? 1u : 0u;
    base->unTR_CTL.u32Register = unTrCtl.u32Register;
    unSampleCtl.stcField.u6PIN_ADDR = config->pinAddress;
    unSampleCtl.stcField.u2PORT_ADDR = config->portAddress;
    unSampleCtl.stcField.u3EXT_MUX_SEL = config->extMuxSelect;
    unSampleCtl.stcField.u1EXT_MUX_EN = config->extMuxEnable ? 1u : 0u;
    unSampleCtl.stcField.u2PRECOND_MODE = config->preconditionMode;
    unSampleCtl.stcField.u2OVERLAP_DIAG = config->overlapDiagMode;
    unSampleCtl.stcField.u12SAMPLE_TIME = config->sampleTime;
    unSampleCtl.stcField.u1ALT_CAL = config->calibrationValueSelect;
    base->unSAMPLE_CTL.u32Register = unSampleCtl.u32Register;
    unPostCtl.stcField.u3POST_PROC = config->postProcessingMode;
    unPostCtl.stcField.u1LEFT_ALIGN = config->resultAlignment;
    unPostCtl.stcField.u1SIGN_EXT = config->signExtention;
    unPostCtl.stcField.u8AVG_CNT = config->averageCount;
    unPostCtl.stcField.u5SHIFT_R = config->rightShift;
    unPostCtl.stcField.u2RANGE_MODE = config->rangeDetectionMode;
    base->unPOST_CTL.u32Register = unPostCtl.u32Register;
    unRangeCtl.stcField.u16RANGE_LO = config->rangeDetectionLoThreshold;
    unRangeCtl.stcField.u16RANGE_HI = config->rangeDetectionHiThreshold;
    base->unRANGE_CTL.u32Register = unRangeCtl.u32Register;
    cy_en_adc_status_t ret = CY_ADC_SUCCESS;
    un_PASS_SAR_CH_INTR_MASK_t unMask = { 0 };
    if (NULL != mask)
     unMask.stcField.u1CH_OVERFLOW_MASK = mask->chOverflow ? 1u : 0u;
      unMask.stcField.u1CH_PULSE_MASK = mask->chPulse ? 1u : 0u;
      unMask.stcField.u1CH RANGE MASK = mask->chRange ? 1u : 0u;
      unMask.stcField.u1GRP_CANCELLED_MASK = mask->grpCancelled ? 1u : 0u;
      unMask.stcField.u1GRP_DONE_MASK = mask->grpDone ? 1u : 0u;
      unMask.stcField.u1GRP_OVERFLOW_MASK = mask->grpOverflow ? 1u : 0u;
      base->unINTR_MASK.u32Register = unMask.u32Register;
    return ret;
 return ret;
void Cy_Adc_Channel_Enable(volatile stc_PASS_SAR_CH_t * base)
 base->unENABLE.stcField.u1CHAN_EN = 1u; //(3) Enable SAR0 Channel 4, 5
}
void Cy_TrigMux_Connect1To1T(uint32_t outTrig, uint32_t invert, en_trig_type_t trigType,
uint32_t dbg_frz_en)
 volatile
              stc_PERI_TR_1T01_GR_TR_CTL_field_t* pTR_CTL;
 pTR_CTL
                          &(PERI->TR_1T01_GR[(outTrig & CY_TR_GROUP_MASK) >>
```



```
CY_TR_GROUP_SHIFT].unTR_CTL[outTrig & CY_TR_MASK].stcField); //Select output trigger
TRIG_OUT_1TO1_1_TCPWM_TO_PASS_CH_TR4
                                       //(4) Configure One-to-One Trigger
 pTR_CTL->u1TR_SEL = 1; //Set input trigger as true
 pTR_CTL->u1TR_INV = invert; //Invert input trigger
 pTR_CTL->u1TR_EDGE = trigType; //Select edge sensitive as trigger type
}
void Cy_Tcpwm_Counter_Disable(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM)
                                                  //(5) Disable TCPWM#0,1 (16-bit)
 ptscTCPWM->unCTRL.stcField.u1ENABLED = 0x00;
uint32_t Cy_Tcpwm_Counter_Init(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM,
cy_stc_tcpwm_counter_config_t const *config)
 uint32_t status = CY_RET_BAD_PARAM;
 if ((NULL != ptscTCPWM) && (NULL != config)) //(6) Configure TCPWM#0,1 (16-bit) for Timer
Mode
    ptscTCPWM->unCTRL.stcField.u1ONE_SHOT = config->runMode;
    ptscTCPWM->unCTRL.stcField.u2UP_DOWN_MODE = config-> countDirection;
   ptscTCPWM->unCTRL.stcField.u3MODE = config->CompareOrCapture;
    ptscTCPWM->unCTRL.stcField.u1DBG FREEZE EN = config->debug pause;
    ptscTCPWM->unCTRL.stcField.u1AUTO_RELOAD_CC0 = config->enableCompare0Swap;
    ptscTCPWM->unDT.stcField.u8DT_LINE_OUT_L = config->clockPrescaler;
    if (CY_TCPWM_COUNTER_COUNT_UP == config->runMode)
     ptscTCPWM->unCOUNTER.u32Register = CY_TCPWM_CNT_UP_INIT_VAL;
    }
    ptscTCPWM->unCC0.u32Register = config->compare0;
    ptscTCPWM->unCC0_BUFF.u32Register = config->compare0_buff;
    ptscTCPWM->unPERIOD.u32Register = config->period;
    ptscTCPWM->unTR_IN_SEL0.stcField.u8CAPTURE0_SEL = config->capture0Input;
    ptscTCPWM->unTR_IN_SEL0.stcField.u8RELOAD_SEL = config->reloadInput;
    ptscTCPWM->unTR_IN_SEL0.stcField.u8STOP_SEL = config->stopInput;
    ptscTCPWM->unTR_IN_SEL0.stcField.u8COUNT_SEL = config->countInput;
    ptscTCPWM->unTR_IN_SEL1.stcField.u8START_SEL = config->startInput;
    ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2CAPTURE0_EDGE = config->capture0InputMode;
   ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2RELOAD_EDGE = config->reloadInputMode;
    ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2START_EDGE = config->startInputMode;
    ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2STOP_EDGE = config->stopInputMode;
    ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2COUNT_EDGE = config->countInputMode;
    ptscTCPWM->unTR_OUT_SEL.stcField.u30UT0 = config->trigger1;
    ptscTCPWM->unTR_OUT_SEL.stcField.u3OUT1 = config->trigger2;
    ptscTCPWM->unINTR_MASK.u32Register = config->interruptSources;
    ptscTCPWM->unCTRL.stcField.u1AUTO_RELOAD_CC1 = config->enableCompare1Swap;
    ptscTCPWM->unCC1.u32Register = config->compare1;
    ptscTCPWM->unCC1_BUFF.u32Register = config->compare1_buff;
    ptscTCPWM->unTR_IN_SEL1.stcField.u8CAPTURE1_SEL = config->capture1Input;
    ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2CAPTURE1_EDGE = config->capture1InputMode;
```



3 Application

```
status = CY_RET_SUCCESS;
 }
 return(status);
}
void Cy_Tcpwm_Counter_SetTROUT(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM)
 TCPWM#0,1 (16-bit)
 ptscTCPWM->unTR_OUT_SEL.stcField.u3OUT1 = 3;
}
void Cy_Tcpwm_Counter_SetCompare0(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM, uint32_t compare0)
 ptscTCPWM->unCC0.u32Register = compare0;
//(8) Set Compare Value of Compare0 for TCPWM#0,1 (16-bit)
void Cy_Tcpwm_Counter_Enable(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM)
 ptscTCPWM->unCTRL.stcField.u1ENABLED = 0x1; //(9) Enable TCPWM#0,1 (16-bit)
cy_en_trigmux_status_t Cy_TrigMux_SwTrigger(uint32_t trigLine, en_trig_type_t trigType,
uint32_t outSel)
 cy_en_trigmux_status_t retVal = CY_TRIGMUX_INVALID_STATE;
 if (PERI->unTR CMD.stcField.u1ACTIVATE == 0)
   PERI->unTR_CMD.stcField.u8TR_SEL = (trigLine & CY_TR_MASK) >> CY_TR_SHIFT; // Select
activated trigger (0)
   PERI->unTR_CMD.stcField.u5GROUP_SEL = (trigLine & CY_TR_GROUP_MASK) >> CY_TR_GROUP_SHIFT;
// Select trigger
   group (4)
   PERI->unTR_CMD.stcField.u1TR_EDGE = trigType; // Select edge sensitive trigger as
trigger type
   PERI->unTR CMD.stcField.u10UT SEL = outSel; // Select activated trigger as output
   PERI->unTR CMD.stcField.u1ACTIVATE = 1; // Activate trigger //(10) Configure and
Activate SW Trigger on TCPWM#0,1 (16-bit)
   retVal = CY_TRIGMUX_SUCCESS;
 return retVal;
}
```

The highlighted sections in bold of the code snippet are not explained in this application note. For Note: details, see the architecture TRM.

Simultaneous starting of TCPWM timer by SW trigger 3.4

This section explains how a SW trigger simultaneously starts multiple TCPWM counters.



3 Application

3.4.1 Use case description of simultaneous starting of TCPWM timer by SW trigger

Figure 20 shows an example application of SW trigger in CYT2B7 series. In 120-degree commutation control, three TCPWM 16-bit Motor Control counter ccchannel 0, 1, and 2 are triggered simultaneously by SW. In this case, channel 0, channel 1, and channel 2 represent U-phase, V-phase, and W-phase, respectively. Figure 21 demonstrates the operation. The connection between trigger MUX Group 4 and TCPWM 16-bit motor control counter is illustrated in Figure 22. For more details on TCPWM, see the "TCPWM" chapter of the architecture TRM.

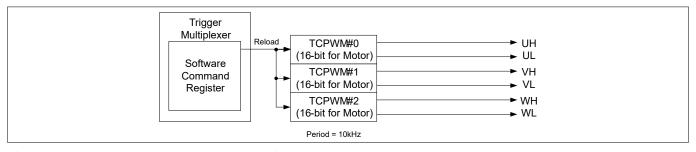


Figure 20 Example of SW trigger in CYT2B7 series

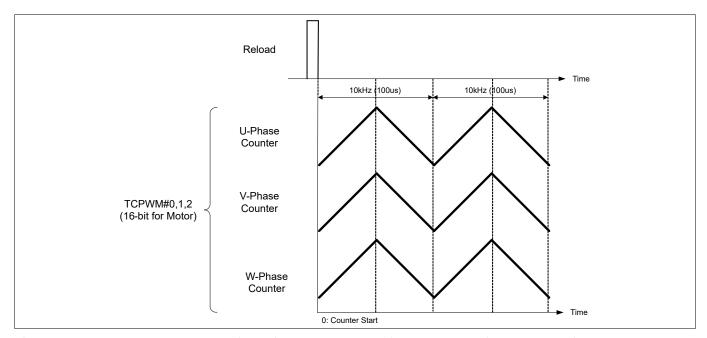


Figure 21 Example operation: Simultaneous starting of TCPWM timer by SW trigger



3 Application

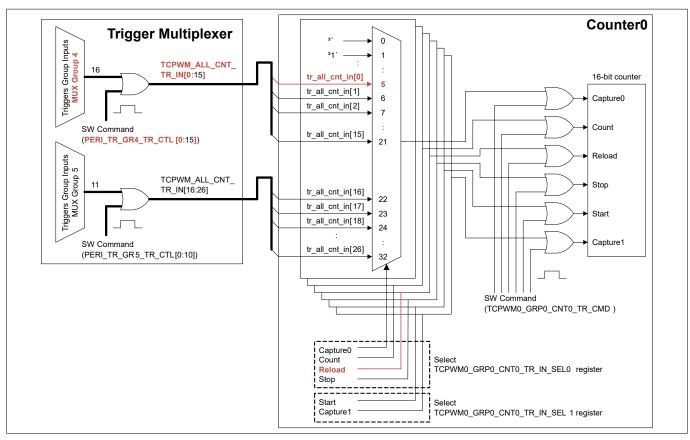


Figure 22 Connection between MUX Group 4 and TCPWM 16-bit motor control counter

Triggers must be set to implement this application. Figure 23 lists the procedure for setting the trigger.



3 Application

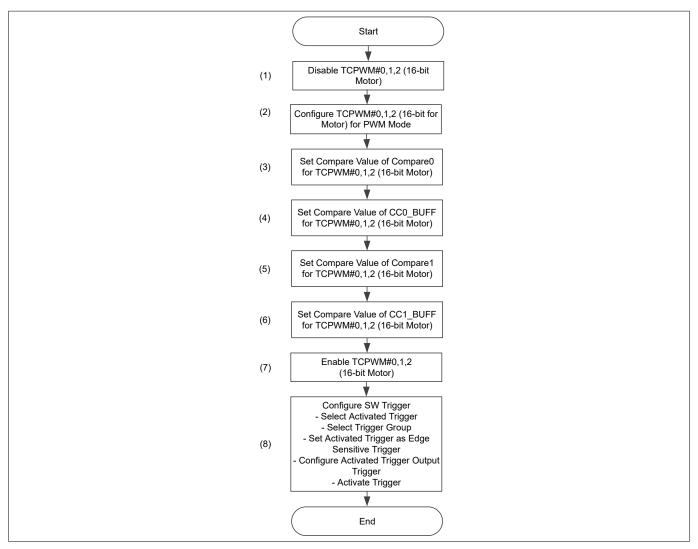


Figure 23 Setting for one-to-one trigger in CYT2B7 series

The configuration for SW trigger in Step (8) are described as follows.

Trigger Multiplexer Setting

Table 15 lists the values to be set for PERI_TR_CMD.GROUP_SEL (=i) and PERI_TR_CMD.TR_SEL (=k) can be found in. This table is extracted from CYT2B7 series datasheet that provides trigger group and output trigger.

Trigger outputs of MUX Group 4 of CYT2B7 series Table 15

Output ("k")	Trigger label	Description		
MUX Group 4: TCPWM_OUT (TCPWM0 to P-DMA0 trigger multiplexer)				
0:15	TCPWM_ALL_CNT_TR_IN[0:15]	All counters trigger input		

For Trigger Group Outputs table of each series, see the device datasheets.

Figure 24 shows SW triggering the TCPWM counter.



3 Application

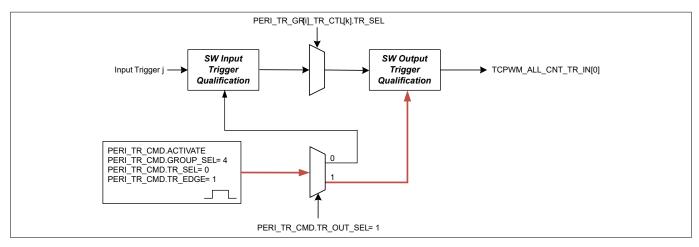


Figure 24 SW triggering TCPWM counter

The following describes how to initiate the timer of TCPWM counter.

1. Activated trigger selection:

PERI_TR_CMD.TR_SEL = 0: Output trigger TCPWM_ALL_CNT_TR_IN[0] (k=0)

PERI_TR_CMD.GROUP_SEL = 4: MUX Group 4 of group trigger (i=4)

PERI_TR_CMD.TR_EDGE = 1: Edge sensitive trigger

2. Specifying activated trigger:

PERI_TR_CMD.OUT_SEL = 1: Output trigger

3. Activate SW trigger:

PERI_TR_CMD.ACTIVATE = 1

3.4.2 Example program for simultaneous TCPWM timer start by SW trigger

Code Listing 4 shows the example program for Figure 23.



3 Application

Code Listing 4 Example of starting TCPWM timer simultaneous by SW trigger

```
void Cy_Tcpwm_Counter_Disable(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM)
 ptscTCPWM->unCTRL.stcField.u1ENABLED = 0x00; //(1) Disable TCPWM#0,1,2 (16-bit for Motor)
uint32_t Cy_Tcpwm_Pwm_Init(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM, cy_stc_tcpwm_pwm_config_t
const *config)
 uint32_t status = CY_RET_BAD_PARAM;
 if ((NULL != ptscTCPWM) && (NULL != config))
      ptscTCPWM->unCTRL.stcField.u1ONE_SHOT = config->runMode; //(2) Configure TCPWM#0,1,2
(16-bit for Motor) for PWM Mode
      ptscTCPWM->unCTRL.stcField.u2UP_DOWN_MODE = config-> countDirection;
      ptscTCPWM->unCTRL.stcField.u3MODE = config->pwmMode;
      ptscTCPWM->unCTRL.stcField.u1DBG_FREEZE_EN = config->debug_pause;
      ptscTCPWM->unCTRL.stcField.u1AUTO_RELOAD_CC0 = config->enableCompare0Swap;
      ptscTCPWM->unCTRL.stcField.u1AUTO_RELOAD_PERIOD = config->enablePeriodSwap;
      ptscTCPWM->unCTRL.stcField.u1AUTO_RELOAD_LINE_SEL = config->enableLineSelSwap;
      ptscTCPWM->unCTRL.stcField.u1PWM_SYNC_KILL = config->killMode;
     ptscTCPWM->unCTRL.stcField.u1PWM_STOP_ON_KILL = (config->killMode >> 1);
    if(config->pwmMode == CY_TCPWM_PWM_MODE_DEADTIME)
      ptscTCPWM->unDT.stcField.u8DT_LINE_OUT_L = config->deadTime;
    if (CY_TCPWM_COUNTER_COUNT_UP == config->runMode)
     ptscTCPWM->unCOUNTER.u32Register = CY_TCPWM_CNT_UP_INIT_VAL;
    ptscTCPWM->unCC0.u32Register = config->compare0;
    ptscTCPWM->unCC0_BUFF.u32Register = config->compare0_buff;
    ptscTCPWM->unPERIOD.u32Register = config->period;
    ptscTCPWM->unPERIOD_BUFF.u32Register = config->period_buff;
      ptscTCPWM->unTR IN SEL0.stcField.u8CAPTURE0 SEL = config->switchInput;
      ptscTCPWM->unTR_IN_SEL0.stcField.u8RELOAD_SEL = config->reloadInput;
      ptscTCPWM->unTR_IN_SEL0.stcField.u8STOP_SEL = config->kill0Input;
      ptscTCPWM->unTR_IN_SEL0.stcField.u8COUNT_SEL = config->countInput;
    ptscTCPWM->unTR_IN_SEL1.stcField.u8START_SEL = config->startInput;
      ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2CAPTURE0_EDGE = config->switchInputMode;
      ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2RELOAD_EDGE = config->reloadInputMode;
      ptscTCPWM->unTR IN EDGE SEL.stcField.u2START EDGE = config->startInputMode;
      ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2STOP_EDGE = config->kill0InputMode;
```



3 Application

```
ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2COUNT_EDGE = config->countInputMode;
    }
   ptscTCPWM->unINTR_MASK.u32Register = config->interruptSources;
    ptscTCPWM->unTR_PWM_CTRL.stcField.u2CCO_MATCH_MODE = config->CcOMatchMode;
    ptscTCPWM->unTR_PWM_CTRL.stcField.u20VERFLOW_MODE = config->OverflowMode;
    ptscTCPWM->unTR_PWM_CTRL.stcField.u2UNDERFLOW_MODE = config->UnderflowMode;
    #if defined (tviibe1m) | defined (tviibe2m) | defined (tviibh4m)
    if( (ptscTCPWM == TCPWM0_GRP1_CNT0) || (ptscTCPWM == TCPWM0_GRP1_CNT1) || (ptscTCPWM ==
TCPWM0_GRP1_CNT2)
    (ptscTCPWM == TCPWM0_GRP1_CNT3) || (ptscTCPWM == TCPWM0_GRP1_CNT4) || (ptscTCPWM ==
TCPWM0_GRP1_CNT5)
    (ptscTCPWM == TCPWM0_GRP1_CNT6) || (ptscTCPWM == TCPWM0_GRP1_CNT7) || (ptscTCPWM ==
TCPWM0_GRP1_CNT8)
    (ptscTCPWM == TCPWM0_GRP1_CNT9) || (ptscTCPWM == TCPWM0_GRP1_CNT10) || (ptscTCPWM ==
TCPWM0_GRP1_CNT11) )
     ptscTCPWM->unCTRL.stcField.u1AUTO_RELOAD_CC1 = config->enableCompare1Swap;
      ptscTCPWM->unTR_IN_SEL1.stcField.u8CAPTURE1_SEL = config->kill1Input;
      ptscTCPWM->unTR_IN_EDGE_SEL.stcField.u2CAPTURE1_EDGE = config->kill1InputMode;
      ptscTCPWM->unTR_PWM_CTRL.stcField.u2CC1_MATCH_MODE = config->Cc1MatchMode;
     ptscTCPWM->unDT.stcField.u16DT_LINE_COMPL_OUT = config->deadTimeComp;
      ptscTCPWM->unDT.stcField.u8DT_LINE_OUT_H = (config->deadTime >> 8);
   status = CY_RET_SUCCESS;
 return(status);
void Cy_Tcpwm_Counter_SetCompareO(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM, uint32_t
             //(3) Set Compare Value of Compare0 for TCPWM#0,1,2 (16-bit for Motor)
compare0)
 ptscTCPWM->unCC0.u32Register = compare0;
void Cy_Tcpwm_Counter_SetCompare0_Buff(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM, uint32_t
            //(4) Set Compare Value of CCO_BUFF for TCPWM#0,1,2 (16-bit for Motor)
 ptscTCPWM->unCC0_BUFF.u32Register = compare1;
}
void Cy_Tcpwm_Counter_SetCompare1(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM, uint32_t
compare0)
            //(5) Set Compare Value of Compare1 for TCPWM#0,1,2 (16-bit for Motor)
 ptscTCPWM->unCC1.u32Register = compare0;
}
void Cy_Tcpwm_Counter_SetCompare1_Buff(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM, uint32_t
```



3 Application

```
compare1)
             //(6) Set Compare Value of CC1_BUFF for TCPWM#0,1,2 (16-bit for Motor)
{
 ptscTCPWM->unCC1_BUFF.u32Register = compare1;
}
void Cy_Tcpwm_Pwm_Enable(volatile stc_TCPWM_GRP_CNT_t *ptscTCPWM) //(7) Enable TCPWM#0,1,2
(16-bit for Motor)
 ptscTCPWM->unCTRL.stcField.u1ENABLED = 0x1;
cy_en_trigmux_status_t Cy_TrigMux_SwTrigger(uint32_t trigLine, en_trig_type_t trigType,
uint32 t outSel)
 cy_en_trigmux_status_t retVal = CY_TRIGMUX_INVALID_STATE;
 if (PERI->unTR CMD.stcField.u1ACTIVATE == 0)
   PERI->unTR_CMD.stcField.u8TR_SEL = (trigLine & CY_TR_MASK) >> CY_TR_SHIFT; // Select
activated trigger (0)
   PERI->unTR_CMD.stcField.u5GROUP_SEL = (trigLine & CY_TR_GROUP_MASK) >> CY_TR_GROUP_SHIFT;
// Select trigger group (4)
   PERI->unTR_CMD.stcField.u1TR_EDGE
                                       = trigType; // Select edge sensitive trigger as
trigger type
   PERI->unTR_CMD.stcField.u10UT_SEL
                                      = outSel; // Select activated trigger as output
trigger
   PERI->unTR_CMD.stcField.u1ACTIVATE = 1; // Activate trigger //(8) Configure SW Trigger
   retVal = CY_TRIGMUX_SUCCESS;
 return retVal;
}
```

Note: The highlighted sections in bold of the code snippet are not explained in this application note. For details, see the architecture TRM.



4 Glossary

4 Glossary

Table 16 Glossary

Terms	Description	
MUX	Multiplexer	
OV	Overflow	
P-DMA	Peripheral Direct Memory Access	
SAR ADC	Successive Approximation Register Analog-to-Digital Converter	
SCB	Serial Communications Block	
SW	Software	
TCPWM	Timer, Counter, and Pulse Width Modulator	
UH	U-phase PWM waveform output	
UL	U-phase PWM complementary waveform output	
VH	V-phase PWM waveform output	
VL	V-phase PWM complementary waveform output	
WH	W-phase PWM waveform output	
WL	W-phase PWM complementary waveform output	



5 Related Documents

5 Related Documents

The following are the TRAVEO™ T2G family series datasheets and technical reference manuals. Contact Technical Support to obtain these documents.

Device datasheet

- CYT2B7 datasheet 32-bit Arm® Cortex®-M4F microcontroller TRAVEO™ T2G family
- CYT2B9 datasheet 32-bit Arm® Cortex®-M4F microcontroller TRAVEO™ T2G family
- CYT4BF datasheet 32-bit Arm® Cortex®-M7 microcontroller TRAVEO™ T2G family
- CYT6BJ datasheet 32-bit Arm[®] Cortex[®]-M7 microcontroller TRAVEO[™] T2G family (Doc No. 002-33466)
- CYT4DN datasheet 32-bit Arm[®] Cortex[®]-M7 microcontroller TRAVEO[™] T2G family (Doc No. 002-24601)
- CYT3BB/4BB datasheet 32-bit Arm® Cortex®-M7 microcontroller TRAVEO™ T2G family
- CYT3DL datasheet 32-bit Arm[®] Cortex[®]-M7 microcontroller TRAVEO[™] T2G family (Doc No. 002-27763)
- CYT4EN datasheet 32-bit Arm[®] Cortex[®]-M7 microcontroller TRAVEO[™] T2G family (Doc No. 002-30842)
- CYT2CL datasheet 32-bit Arm® Cortex®-M4F microcontroller TRAVEO™ T2G family (Doc No. 002- 32508)

Body controller entry family

- TRAVEO™ T2G automotive body controller entry family architecture technical reference manual (TRM)
- TRAVEO™ T2G automotive body controller entry registers technical reference manual (TRM) for CYT2B7
- TRAVEO™ T2G automotive body controller entry registers technical reference manual (TRM) for CYT2B9

Body controller high family

- TRAVEO™ T2G automotive body controller high family architecture technical reference manual (TRM)
- TRAVEO™ T2G Automotive body controller high registers technical reference manual (TRM) for CYT4BF
- TRAVEO™ T2G automotive body controller high registers technical reference manual (TRM) for CYT3BB/4BB
- TRAVEO™ T2G automotive body controller high registers technical reference manual (TRM) for CYT6BJ (Doc No. 002-36068)

Cluster 2D family

- TRAVEO™ T2G automotive cluster 2D family architecture technical reference manual (TRM) (Doc No. 002-25800)
- TRAVEO™ T2G automotive cluster 2D registers technical reference manual (TRM) for CYT4DN (Doc No. 002-25923)
- TRAVEO™ T2G automotive cluster 2D registers technical reference manual (TRM) for CYT3DL (Doc No. 002-29584)

Cluster entry family

- TRAVEO™ T2G automotive cluster entry family architecture technical reference manual (TRM) (Doc No. 002-33175)
- TRAVEO™ T2G automotive cluster entry registers technical reference manual (TRM) (Doc No. 002-33404)



6 Other References

Other References 6

Cypress provides the Sample Driver Library (SDL) including startup as sample software to access various peripherals. SDL also serves as a reference to customers, for drivers that are not covered by the official AUTOSAR products. SDL cannot be used for production purposes as it has not been developed using any automotive SW development process. The code snippets in this application note are part of the SDL. Contact Technical Support to obtain the SDL.



Revision history

Revision history

Document version	Date of release	Description of changes
**	2020-03-27	New application note.
*A	2021-06-07	Updated to Infineon template.
*B	2023-04-12	Fixed trigger input to SCB0 RX.
*C	2023-05-15	Fixed footer.
*D	2023-11-13	Template update; no content updated.

Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

Edition 2023-11-13 Published by Infineon Technologies AG 81726 Munich, Germany

© 2023 Infineon Technologies AG All Rights Reserved.

Do you have a question about any aspect of this document?

 ${\bf Email: erratum@infineon.com}$

Document reference IFX-nds1681443925270

Important notice

The information contained in this application note is given as a hint for the implementation of the product only and shall in no event be regarded as a description or warranty of a certain functionality, condition or quality of the product. Before implementation of the product, the recipient of this application note must verify any function and other technical information given herein in the real application. Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind (including without limitation warranties of non-infringement of intellectual property rights of any third party) with respect to any and all information given in this application note.

The data contained in this document is exclusively intended for technically trained staff. It is the responsibility of customer's technical departments to evaluate the suitability of the product for the intended application and the completeness of the product information given in this document with respect to such application.

Warnings

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.