Writing a Testbench in Verilog & Using Modelsim to Test

1. Synopsis:

In this lab we are going through various techniques of writing testbenches. Writing efficient testbenches to help verify the functionality of the circuit is non-trivial, and it is very helpful later on with more complicated designs. The purpose of this lab is to get you familiarized with testbench writing techniques, which ultimately help you verify your final project design efficiently and effectively. You will also learn scripting DO files to control simulation in modelsim and to facilitate quick repeated simulations during debugging.

2. Importance of Testing:


Most of the exercises that you have done in this course so far are to design the core system. Whether it is a state machine or some combinational logic, this is the most challenging part. In real life, however, testing a system is often equally as challenging and important as building the core design. This is because in hardware design, the cost of making a mistake can be extremely high. Since (non-FPGA-based) hardware cannot be "updated" like software can be, often times, the only way to fix an error in the hardware is to replace the part, and replacement can be a very expensive proposition.

Consider, for example, the case of the infamous *FDIV bug* that was found in Intel Pentium processors in the mid-90s. In late 1994, a mathematics professor at Lynchburg College in Virginia found that the Intel Pentium processor in his computer was consistently producing wrong result when certain two numbers were divided. The bug was so hard to find that, if you randomly tried to divide two numbers, there was only one in a 9 billion chance that you will encounter the case for which the division operation produced a wrong result. Yet, the story about this bug became a marketing nightmare for Intel, and despite all efforts, Intel had to recall all the defective processors. It has been reported that the final cost of the recall was \$475 million!! Don't you think Intel wished it could just release a "security update" that Tuesday and get it over with?

Testing a design comprehensively and efficiently is a major challenge in a complex design. In this lab you are learning the Verilog syntaxes and coding techniques that can assist in writing efficient testbenches. Furthermore, in this lab Modelsim simulator will be used in standalone mode. That is, instead of creating our project in Xilinx ISE and launching Modelsim from the Project Navigator, you will use Modelsim's graphical user interface (GUI) to simulate the code. Since the focus of this lab is on writing testbenches, we will re-use the GCD design from previous lab and write a new, advanced testbench for it. Notice that this is a simulation-only exercise.

3. GCD Review:

The GCD state machine takes two 8-bit unsigned numbers as inputs, Ain and Bin. The values of Ain and Bin are accepted by the state machine when start goes high. Once start is received by the state machine, using the simple four-state mealy state machine, as shown below, the GCD of these numbers is computed. Upon the completion of the computation, the state machine enters the DONE state and stays there until the acknowledgement signal (ack) is asserted. When ack is received, the state machine enters the INITIAL state again and waits for the start to go active.

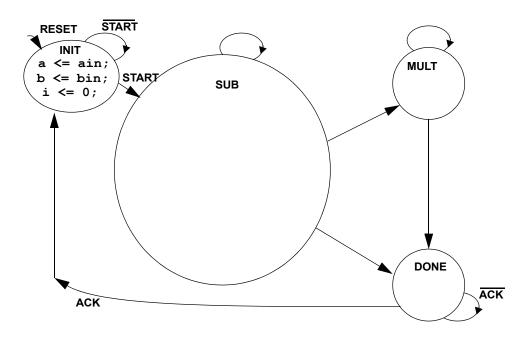

4. Using Modelsim Only (without Xilinx ISE) for simulation and verification

Unlike Xilinx ISE, Modelsim cannot synthesize/implement the design into real hardware, but it can compile and simulate HDL-based design, and display graphical and text information to facilitate debugging. The main advantages of using Modelsim standalone are convenience and speed. That is, instead of editing your code in the Project Navigator editor and re-invoking Modelsim every time a small change is made (like we have been doing so far), by using Modelsim standalone you can edit the code, re-compile it and re-simulate it -- all without closing the applications. The procedure to simulate a design in Modelsim is simple:

- 1. Create a new Modelsim project.
- 2. Add existing source files to the project or create new Verilog source files.
- 3. Compile all source files.
- 4. Start simulation.
- 5. Run the simulation for the desired length of time.

If you find some errors, whether they are compilation errors (syntax errors that are reported during compilation), or functional errors (you notice after simulating and observing waveforms), you can edit the code and repeat steps 3-5 to re-simulate the design. More details on each of the five steps are give in the Procedure section. Steps 3 to 5 can be automated using a DO file (with .do extension).

5. Writing Testbench

The function of a testbench is to apply stimulus (inputs) to the design under test (DUT), sometimes called the unit under test (UUT), and report the outputs in a readable and user-friendly format. In this section, we discuss how an efficient testbench can be written. Procedure steps requiring you to write the testbench for the GCD design directly refer to elements of the testbench discussed in this section. Note: Many of the coding techniques used in testbenches (such as file I/O, the *initial* block, etc) are not suitable for synthesis.

5.1 **Defining the timescale**

Before the module definition of the testbench module begins, Modelsim requires a compiler directive that defines the time unit and the precision level at which the simulation runs. Defining the time unit is necessary so that the simulator knows whether, say, #10; means wait for 10ns or 10ps or 10us. The syntax for this directive and a typical/recommended example is given below:


Syntax Example
'timescale <unit>/<precision> 'timescale 1ns/1ns

All compiler directives begin with the '(accent grave character). Recall the 'define directive that we used in our state machine designs to create a macro for substituting the text with the macro name.


5.2 Instantiating the Design Under Test (DUT)


Every testbench must instantiate the design that it is expected to test. This design is usually referred to as the "design under test" (DUT) or "unit under test" (UUT). Before the DUT is instantiated, each of its inputs and outputs must be declared in the testbench. Inputs to the DUT are declared as reg and outputs are declared as wire. Note that the outputs of the DUT are inputs to the testbench. Remember that any input must be a wire. The inputs to DUT are the stimuli generated in testbench. Stimuli are usually generated in an initial or an always procedural block in the testbench. As you know, any object assigned inside an initial or an always procedural block shall be a register type object, reg or integer or real or time. (Note: We know that the register type object does not mean a hardware register unless it is assigned in a clocked always statement sensitive to posedge clk or negedge clk. The Verilog 2001 replaces the term "register" with the more intuitive term "variable" to avoid this common confusion among learners. Refer http://www.sutherland-hdl.com/papers/2000-HDLCon-paper_Verilog-2000.pdf). We are not using register types real or time in this course. We use reg in synthesizable designs (though we can use integer or real also in synthesizable designs) and use mostly reg and occasionally integer in testbenches.

Example: integer clk_cnt, start_Clk_cnt, clocks_taken;

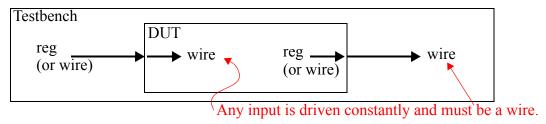

Notice that there are usually no ports for the testbench itself. Ex: module ee201_GCD_tb_Part1; There are usually two methods for the testbench to interact with the DUT as shown below. We use the first method where the testbench *contains* the DUT and does not require any ports. In the second method, a higher module needs to instantiate the testbench and the DUT to tie them together, and the testbench module has ports.





Instantiation of the DUT can be made using 'positional' association or 'named' association. In positional (or implicit) association the order in which signals are listed in the instantiation determines how they are connected to the ports of the DUT. In named (or explicit) association, each DUT port signal is explicitly associated to a testbench signal. Named association is the preferred method of instantiating a DUT. The syntax for the two types of associations is shown below.

Named Instantiation

Positional Instantiation

Given below is the example code for instantiating the GCD design using both named and positional associations. For readability, it is preferred that the signal names in the testbench are simply the port names with the suffix "_tb". For example, the port "clk" has its corresponding signal in the testbench with the name "clk tb".

```
Named Instantiation
                                                               Positional Instantiation
module ee201 GCD tb Part1;
                                                 module ee201 GCD tb Part1;
// Declaring inputs
reg Clk_tb;
         reset tb;
reg
                                                           110 declarations are the same
reg start_t;
reg ack_tb;
         start tb;
reg [7:0] Ain_tb;
reg [7:0] Bin tb;
// Declaring outputs
wire [7:0] AB_GCD tb;
        q_I_tb;
wire
wire
          q Sub tb;
          q Mult tb;
wire
wire
          q_Done_tb;
// Instantiating the DUT
                                                 // Instantiating the DUT
ee201 GCD dut (
                                                 ee201 GCD dut (
.Clk(Clk_tb),
                                                  Clk_tb,
                                                  reset_tb,
.reset(reset_tb),
.start(start tb),
                                                  start tb,
.ack(ack tb),
                                                  ack tb,
.Ain(Ain tb),
                                                  Ain tb,
.Bin(Bin_tb),
                                                  Bin_tb,
                                                  AB GCD_tb,
.AB GCD (AB GCD tb),
.q_I(q_I_tb),
                                                  q_I_tb,
.q Sub(q Sub tb),
                                                  q Sub tb,
.q_Mult(q_Mult_tb),
                                                  q Mult tb,
.q_Done(q_Done_tb)
                                                  q_Done_tb
);
```

5.3 Generating Clock

All sequential DUTs require a clock signal. To generate a clock signal, many different Verilog constructs can be used. Given below are two example constructs. Method 1 is preferred because the entire clock generation code is neatly encapsulated in one initial block.

Clock Generation Method # 1	Clock Generation Method # 2
initial	initial
begin: CLOCK_GENERATOR	begin: CLOCK_INITIALIZATION
Clk_tb=0;	$Clk_tb = 0;$
forever	end
begin	always
#5 Clk_tb = ~ Clk_tb;	begin: CLOCK_GENERATOR
end	$#5 Clk_tb = \sim Clk_tb;$
end	end

5.4 Applying Stimulus and Timing Control

In addition to the clock, the testbench has to produce various other signals that are used as inputs to the DUT. These signals, also called "stimulus", have to be applied with specific values at specific times. For instance, reset has to be asserted at the start of the simulation. Only after reset has been de-asserted, should other inputs be applied.

Before discussing the various ways to control the timing of a signal in the testbench, two rules for stimulus timing are worth noting:

- **Rule** # 1: All inputs should be applied with a small delay consequent to the clock edge. For example, the start signal should be asserted a little (say, 1 time unit) after the clock edge. **Note** that a little after the current clock edge means long before the next edge. The "little after" is to satisfy the hold-time requirements of the flip-flops and the "long before" is for satisfying the setup time of the flip-flops and any next state logic.
- **Rule # 2**: All outputs should be read somewhere in the middle of the clock (or in the later half of the clock or towards the end of the clock) at which time they are expected to be valid and stable

Verilog provides three ways to control timing of signals in the testbench.

Delay Control (#): The simplest way to control the timing of a signal is to use the delay control operator "#" followed by the time for which the value is held. This simple method was used in all of our testbenches up to this point. The disadvantage of using delay control, however, is that the timing cannot be defined relative to other activity in the system. Therefore, the exact timing of each stimulus signal has to be determined *a priori*. In a design like the GCD, the length of time spent on computing the results is dependent upon the input data values. In this case, tedious manual calculations of timing of the acknowledgment signal are required for each set of inputs. Therefore, in this (and subsequent) testbenches, it is highly recommended that delay control be used only for trivial timing control or where it is the only option (such as in the clock and reset signal generation).

Level Sensitive Control (wait): If a signal has to be asserted consequent to a DUT output going active, level sensitive timing control "wait" can be used. Consider the example of the ack signal in the GCD design. ack goes active consequent to the state machine entering the DONE state which is indicated by q done going high.

Code	Explanation
<pre>wait (q_done);</pre>	wait for q_done to be high
# 1;	after a small delay
ack = 1;	assert ack

Since ack has to be asserted only after q_done has gone high, instead of computing the time when q_done goes high, the above code implements a simple wait for the signal q_done to go high and assert ack consequent to it with a small delay (in accordance with Rule # 1 mentioned above).

Event Control (@): Level sensitive control can be used to wait for signals to go high or low. However, certain inputs have to be applied consequent to a specific edge (the two may be interchangeable in some instances). To do so, event control operator "@" has to be used.

Consider the example of the start signal in the GCD design. Suppose, it was required that start be asserted two clock cycles after the state machine enters the INITIAL state. Following code can be used to accomplish this. Note: The level-sensitive wait statements <code>wait(Clk_tb)</code> in the wrong code below do not help here, as right after the <code>q_I</code> is a "1", <code>clk_tb</code> is already high and the two <code>wait</code> statements pass without any waiting.

Code	wrong code	Explanation
wait (q_I);	wait (q_I);	wait for q_I to be high
<pre>@ (posedge Clk_tb);</pre>	<pre>wait(Clk_tb);</pre>	wait for one clock (after q_I goes high)
<pre>@ (posedge Clk_tb);</pre>	<pre>wait(Clk_tb);</pre>	wait for another clock
# 1;	#1;	after a small delay
start = 1;	start = 1;	assert start

5.5 String variable display in the waveform

The state vector displayed in binary (in the modelsim waveforms) perhaps does not let us quickly understand the sequence of states our design went through. We end up looking up the state coding and state assignments. It is easy to display the state as an ascii string variable in the modelsim waveforms.

5.6 Displaying Outputs as Text

Reading the value of signals using the waveform is often times extremely useful in debugging the design. The waveforms allow designers to observe not only the values of the signals but also their relative timing (e.g., values "before" the clock edge and "after" the clock edge). However, once the designer has reasonable confidence in the correct timing of the design, it may be desirable to observe the value of a few signals in text form. For example, in a rigorous test of the GCD design where several sets of inputs are applied, it may be easier to read the final GCD values for each input set in a text form than to trace the final output values in a very long waveform.

Verilog provides several system tasks to display values of a signal. The simplest of them is the **\$display** task, which can be used to print the values of signals in various formats. In Modelsim, these values are printed in the Transcript window (they appear as blue-color text). The syntax and an example of \$display usage is given below.

Syntax	Example	
\$display (\$display (
"formatted_string",	"Ain=%d, Bin=%d",	
signal list	Ain, Bin	
););	

5.7 Useful system tasks

• \$display, \$strobe, \$monitor: share the same syntax, and display values as text on the screen during simulation. However, \$display and \$strobe display once every time they are executed, whereas \$monitor displays every time one of its parameters changes. The difference between \$display and \$strobe is that \$strobe displays the parameters at the very end of the current simulation time unit (after all the delta_Ts are over for the current simulation time). The format string is like that in C/C++, and may contain format characters. Format characters include %d (decimal), %h (hexadecimal), %b (binary), %c (character), %s (string) and %t (time). Append b, h, o to the task name to change default format to binary, octal or hexadecimal.

```
Example: $\( \frac{1}{2} \) $\( \text{var} \) $\
```

- **Swrite**: the difference between \$write (, \$writeb, \$writeo, \$writeh) and the \$display (, \$displayb, \$displayo, \$displayb) is the absence (for \$write) or presence (for \$display) of the carriage-return and new-line characters at the end of the current line. If you want to "compose" a long line, whose segments depend on variables in the testbench, then you can use \$write for all segments except for the las segment for which you would use \$display.
- **\$time**, **\$stime**, **\$realtime**: these system functions return the current simulation time as a 64-bit integer, a 32-bit integer, and a real number, respectively. Note: these are called *functions* and not *tasks* as they return values.

- **\$reset, \$stop, \$finish**: **\$reset** resets the simulation back to time 0; **\$stop** halts the simulator and puts it in the interactive mode where the user can enter commands; **\$finish** exits the simulator back to the operating system.
- **\$deposit**: sets a net to a particular value.

```
Syntax: $deposit (net name, value);
```

• **\$random**: this function generates (and returns) a random integer every time it is called. If the random sequence is to be *repeatable*, the first time one invokes random give it a numerical argument (a seed). Otherwise the seed is derived from the computer clock.

```
Syntax: var = $random[(integer seed)]; // integer seed is an optional argument
```

5.8 Using Tasks

Very often in testbenches, the same piece of code is repeated several times. This is often the case when different sets of inputs are applied. In the GCD design, for example, for every pair of Ain and Bin values, the same piece of code is repeated for applying start and ack. To simplify the coding of the testbench, such re-usable code can be put in a user-defined "task" which can be called with an appropriate set of input arguments. Task can contain any type of timing control statement (#, wait or @) and system tasks (e.g. \$display). In effect, virtually any piece of code that can be written in-line (meaning without containing it in a task) can be put in a task for reusability. A task can have zero or more input and/or output (and/or inout) arguments but it does not return values like a function. The body of the task must be enclosed in begin-end. Tasks are defined outside procedural blocks (i.e., outside initial and always blocks) but can be called from within a procedural block. Finally, while in this exercise tasks are proposed only for testbenches, they can be used in synthesizable code provided they do not contain non-synthesizable constructs (such as timing controls) in them. An example task that asserts acknowledge signal (ack) in the GCD design at an appropriate time is shown below (Note that this task does not specify any arguments). Note that variables such as Ack tb, which are visible at the line of the task call, are also visible to the task.

5.9 FOR loop

When using a FOR loop in Verilog, the loop index must be declared as an integer. **FOR** loops can be used inside an always or initial block. An example of a for loop (in a testbench) is:

```
integer i;
initial
  for (i=0; i<10; i = i+1)
    begin
    @(posedge Clk)
    #1;
    A_reg = i;
    end</pre>
```

5.10 File I/O in Verilog

Thorough testbenches need to process significant amounts of relevant data to ensure the correctness of a design. Often that data may be complex to produce and/or to analyze. In such cases, the use of domain-specific or otherwise appropriate tools assists the designer in producing useful test data and analyzing the output of a system. In order to incorporate other tools into a testing strategy, we need a way of transferring the necessary data. File I/O operations allow us to use standard files to do this. Other software tools used within specific domains can be useful for creating test stimulus (i.e. Matlab). Verilog-2001 provides extensive file I/O capability directly in the Verilog language. The following operations are supported:

- C or C++ type file operations (example c = fgetc (fd) returns a -1 in c if end of file is encountered).
- Reading characters from file from a fixed location.
- Reading a formatted lines in file.
- Writing a formatted lines into file.

To open a file:

```
file_descriptor_ID = $fopen("filename","r"); // r = For reading
file_descriptor_ID = $fopen("filename","w"); // w = For writing
```

Note: file_descriptor_ID is the logical name (example: my_gcd_file) you use in your code in the system tasks such as \$fdisplay and \$fwrite whereas the filename is the physical name of the file on your hard-disc (example: ee201_gcd_Part3_output.txt).

To close a file

```
$fclose(file_descriptor_ID);
```

To read variables from a file

```
$fscanf(file descriptor ID, "formatted string", [arguments]);
```

To write to a file

```
$fdisplay(file_descriptor_ID, "formatted_string"[, arguments]);
$fwrite(file_descriptor_ID, "formatted_string"[, arguments]);
```

\$fdisplay includes a carriage-return and a new-line character at the end of the current line where as \$fwrite does not.

Verilog 2001 has several tasks to operate on strings: \$sscanf, \$swrite, ... (similar to \$fscanf, \$fwrite, ...).

Please check the manuals or online help for more details on file I/O operations in Verilog. Also please read the testbenches with file I/O provided to you for other labs/exercises.

An extract from the copy array to array tb.v

```
reg signed [3:0] signed_Ns_of_J; // To display elements of N as signed numbers
initial
  begin
   output file = $fopen ("output.txt", "w");
task display M and N arrays;
  begin
     $display("\n The M and the N arrays \n");
    $fdisplay(output file, "\n The M and the N arrays \n");
    for (II JJ=0; II JJ<=II JJ max; II JJ=II JJ+1) // for all the rows in the matrices
         begin // for each row (there are p items in a row)
             signed Ns of J = Ns of J = array[II JJ];
             string = "\n";
             sformat(string, "%s t d", string, II JJ); // Print index II JJ in the string
            ► $sformat(string, "%s\t%d", string, Ms_of_I_array[II_JJ]); // M[I] in decimal
             shormat(string, "%s\t%b", string, Ms\_of_I\_array[II\_JJ]); // M[I] in binary
             $sformat(string, "%s\t%b", string, Ns of J array[II JJ]); // N[J] in binary
             $sformat(string, "%s\t%d", string, signed Ns of J);
                                                                        // N[J] in decimal
             $display("%s", string);
             $fwrite(output_file, "%s\n", string);
     $display ("\n Clocks taken = %d . \n", Clocks taken);
     $fdisplay (output_file, "\n Clocks_taken = %d . \n", Clocks_taken);
     $fclose(output_file);
```

The above task produced display on the side: "Growing" a string as shown in the line marked with an arrow above:

```
// the previous value of the "string" is
// concatenated with the the array item
// (represented in decimal format)
// to form the new string
```


```
# The M and the N arrays
         0
                           0010
                                    1001
                                             -7
                  5
                           0101
                                    1010
                                             -6
         1
         9
                  15
                           1111
                                    0111
                                              7
  Clocks taken =
                      13.
/SIM 18>
```

endtask


6. Procedure

Before you can start writing the testbench, you must create a new Modelsim project and include the GCD design and the testbench file to it.


6.1 Create a project directory "ee2011_gcd_testbench" under C:\ModelSim_projects.



- 6.2 Copy the GCD design file (ee201_gcd.v) from previous lab to this directory. Your TA may provide you with a complete working GCD design if you could not finish your previous lab.
- 6.3 Open Modelsim and create a new project by clicking: File -> New -> Project. In the Create Project dialogue box, type the Project Name: ee2011_gcd_testbench and choose the project directory that you created above
- (C:\ModelSim_projects\ee2011_gcd_testben ch) as the Project Location . Leave the other options unchanged. Click OK to continue.
- 6.4 Click on Add Existing File

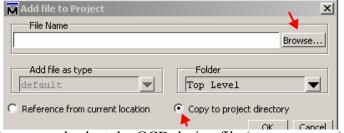


Browse and select the GCD design file (ee201_gcd.v). This adds our GCD design file to the project with a

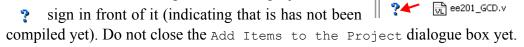

6.5 Next, select Create New File in the MAdditems to the Project dialogue box. When prompted, give it the name ee201_gcd_tb_part1.v and choose the type as Verilog. This new (blank) testbench file gets




6.6 Double click on the ee201_gcd_tb_part1.v file in the Workspace to open it. This will open the file in a text editor (the file is blank, of course). Now, its time to



Create Project File

ee201 GCD tb Partl.v

File Name

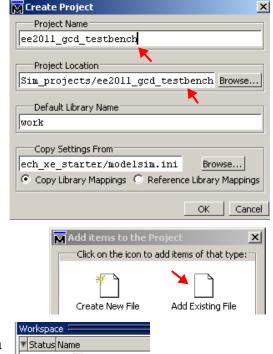

write the testbench code!

If you prefer you may use Notepad++





for editing Verilog files.

Part 1: Writing a simple testbench

In this first part of the lab, you will write a simple testbench that applies two sets of inputs to the GCD core design. Use the example code snippets provided in this handout for help.


- 6.7 In the blank testbench file (ee201_gcd_tb_part1.v) add the code for: (1) defining the time units and precision, (2) module definition of the testbench module (along with the corresponding endmodule), and (3) instantiation of the GCD design. Use the sample code segments provided in Section 5 of this handout.
- 6.8 Using the recommended methods for coding the clock generator, write the code that generates <code>clk_tb</code>.
- 6.9 Using #, wait and @ to control the timing of signals, write the code that applies the stimulus to the GCD design. Use two sets of values for Ain and Bin: (24 & 36) and (5 & 15). The code you write must generate reset_tb, Ain_tb, Bin_tb, start_tb and ack_tb with the timing shown in the waveform (Part I, attached). Make sure that the timing of each signal is defined relative to the activity in the system. Use delay control only to add a small delay after a signal goes high or after the clock edge.
- 6.10 Add code to print the values of Ain, Bin and GCD when the computation of GCD for each set of inputs is completed. # It took # It
- 6.11 Finally, write code for a free-running clock counter. This counter helps in computing the number of clocks it takes the state machine to compute the GCD of a given input set. Look at the following waveform for more ideas about when to record <code>start_clk_count</code> and how to compute <code>clocks_taken</code>. You may want to declare three data objects of integer data type as shown below:

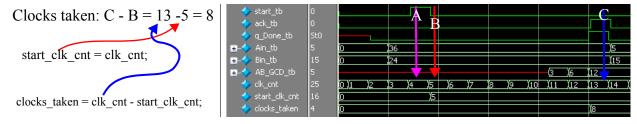





6.13 To begin simulating the design, select Simulate -> Start Simulation. Click the "+" next to "work" in the Start Simulation dialog. This will reveal your compiled designs. Select "ee201_GCD_tb_Part1" and click "OK".



6.14 Add all top-level signals to the waveform window. To do this, right click on any object, select Add to Wave Signals in Region . —

If the waveform window is not available, select View -> Wave to make it viewable.



6.15 Type "log -r *" [VSIM3> log-r* to tell ModelSim to log all signals whether they are currently added to the wave display or not. To run simulations for a fixed length of (simulation) time (250ns in this example), type "run 250ns" at the VSIM> prompt in the Transcript window. Simulation data will appear as waveform and values of Ain, Bin, and GCD should appear as text in the transcript window. The transcript window should show the following:



6.16 In the waveform, you may want to change the radix of signals, Ain_tb, Bin_tb, and AB_GCD_tb, to unsigned. Practice using the zoom and cursor controls shown on the side.



Note: steps 6.12 through 6.16 should be repeated every time a change is made to the code. You need to end the current simulation by Simulate -> End Simulation. Or do step 6.12 as needed and type "restart -f" to restart the simulation. This will avoid the repetition of 6.13 to 6.16.

6.17 .do files in ModelSim: While "restart -f" helps multiple runs in the same "sitting", if we want to repeat the tests after a couple of days, we need a method to automate steps 6.12 to 6.15. The modelsim .do file is a "batch" file to execute a series of commands one after another. Basically, we want to compile the verilog codes, start simulation, add the desired signals to the waveform, change some signal display radices, simulate for certain length of time.

```
Some explanation of commands:
# ee201 gcd tb Part1.do
                                            vlib : Specifies a project directory
vlib work
vlog +acc "ee201 gcd.v"
                                            vlog : verilog compiler invocation
vlog +acc "ee201 gcd tb Part1.v"
                                            (vcom for VHDL compilation)
vsim -t 1ps -lib work ee201_gcd_tb_Part1
                                           vsim : simulator invocation
                                            view : specifies a tool window for view
view objects
                                            do : executes a .do file such as wave.do
view wave
                                            log -r * : logs all signal activity
do {ee201_gcd_tb_Part1_wave.do}
log -r *
                                                        whether you added or not
run 300ns
                                                          some signals
                                           run 300ns
```

"quit -sim" lets you quit from simulation mode (and receive vsim> prompt), where as "quit" will quit from ModelSim altogether. So after you revise some of your design or test-bench, you should "quit -sim" to ModelSim> prompt, and then run the DO file you just composed. The goal is to avoid bring up and down the ModelSim.


Go to the waveform window display (displaying the needed signals in the desired order and radices), and save file: File => Save. Accept the default name wave.do (or choose to name it something like ee2011_gcd_tb_Part1_wave.do). It creates C:/ModelSim_projects/ee2011_gcd_testbench/ee2011_gcd_tb_Part1_wave.do Then create a text file, with name, say, ee2011_gcd_tb_Part1.do using word pad or note pad to include the commands shown in the inset. Make sure that the extension is not changed to .txt. If needed, you can rename the file. Next time, you want to simulate, you double-click on ee2011_gcd_testbench.mpf and at the vsim> prompt, you type do {ee2011_gcd_tb_Part1.do} or just do ee2011_gcd_tb_Part1.do

(8)9 (10)11 (12)13 (14)15 /ee201_GCD_tb_Part1/clk_cnt 0 (1)2 (3)4 (5 /ee201_GCD_tb_Part1/reset_tb_l /ee201_GCD_tb_Part1/start_tb _ /ee201_GCD_tb_Part1/ack_tb L (36 /ee201 GCD tb Part1/Ain tb 0 15 24 15 /ee201 GCD tb Part1/Bin tb 0 /ee201_GCD_tb_Part1/AB_GCD_tb (6) (12 /ee201_GCD_tb_Part1/q_I_tb /ee201 GCD tb Part1/g Sub tb /ee201_GCD_tb_Part1/q_Mult_tb /ee201 GCD tb Part1/q Done tb /ee201_GCD_tb_Part1/start_clk_cnt 0 (5 (16 /ee201 GCD tb Part1/clocks taken 0 **V**4 7/8

Waveform for Part 1

In the above waveform, you see signal names shown (in the left-most pane) with complete hierarchical path names. This is the default behavior. If you want simple signal name with no hierarchical path, then go to **Tools** menu on the waveform window and open **Window preferences**.

Change the default 0 to 1 to get simple names for signals.

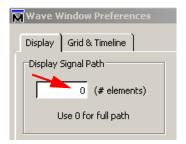

Part 2: User-defined Tasks in Testbenches

In this second part of the lab, you will use a user-defined task to re-use the code that applies the stimulus. Furthermore, you will write the testbench code necessary to test the GCD state machine exhaustively for all values of Ain and Bin between 2 and 63. Like in Part 1, your testbench should report the two inputs and the number of cycles it took the state machine to compute the GCD for each input pair.

- 6.18 Make a copy of the testbench file ee201_GCD_tb_Part1.v and name it as ee201 GCD tb Part2.v. Change the module name to ee201 GCD tb Part2.
- 6.19 Start coding a task APPLY STIMULUS.

```
task APPLY_STIMULUS;
  input [7:0] Ain_value;
  input [7:0] Bin_value;
  begin
```

Move the replicated code for applying the stimulus to this task. The two inputs of the task will be the values of the formal parameters Ain_value and Bin_value and the task will apply these stimulus along with start and ack signals with necessary timing control.

6.20 First test your task by invoking the task for fixed pairs of values.

```
APPLY_STIMULUS (36,24);
APPLY_STIMULUS (5,15);
```

After making sure that the task works properly for the above pair, write the code to apply the inputs Ain and Bin over the range of 2...63. A nested for-loop (a for-loop within another for-loop) is one of the simplest ways to accomplish this. An example of a nested for loop is given below:


6.22 The output (in the transcript window) of your testbench should look like this:

Attached is the waveform view of the first 1 us of simulation.

Part 3: File Output

In this third part of the lab, you are required to output the results (for Ain and Bin over the range of 2...63) to a text file named "ee201_gcd_Part3_output.txt" instead of the Transcript window. The format of the text is similar to Part 2. Make a copy of the testbench file ee201_gcD_tb_Part2.v and name it as ee201_gcD_tb_Part3.v. Change the module name to ee201_gcD_tb_Part3.

Waveform Part 2

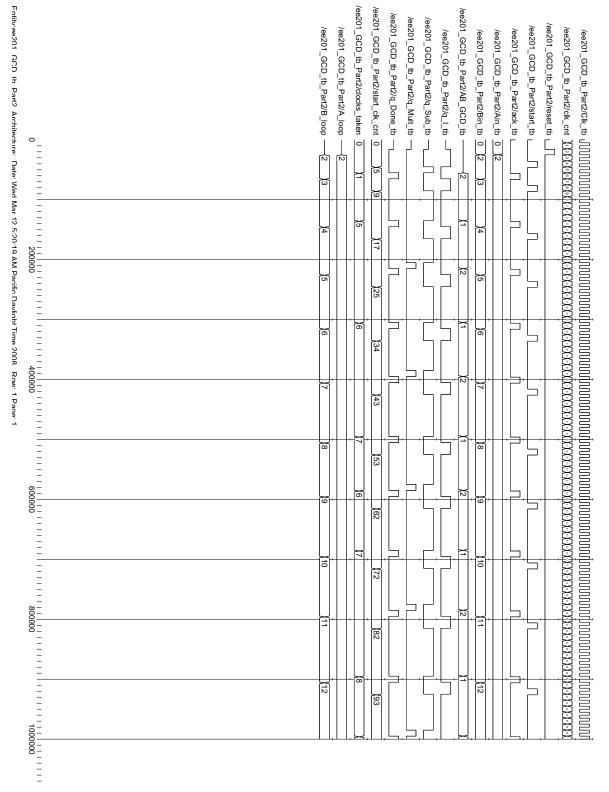

7.	Lab	Rep	ort:
----	-----	-----	------

Name:	Date:
Lab Session:	TA's Signature:

For TAs: 3-part Implementation (15+20+15): ____ Report (out of 50): ___ Comments:

- Q 7. 1: Submit online the following 4 Verilog testbench files and one text output file.

 ee201_gcd_tb_Part1.v, ee201_gcd_tb_Part2.v,

 ee201_gcd_tb_Part3.v, ee201_gcd_Part3_output.txt, names.txt

 Submit hardcopy (paper) for waveform from part 1.
- Q 7. 2: (5 pts) What should the signals that connect to the inputs and outputs of the DUT be declared as in the testbench (check one or more):
 - a. Inputs to DUT as wire, outputs as reg
- b. Inputs as reg, output as wires

c. Both as wires

- d. Both as reg
- Q 7. 3: (2 pts) Which of the two methods of instantiating the DUT is preferred?

positional association

named association

- Q 7. 4: (5 pts) What is the frequency of the clock defined in the clock generator example codes in sec. 5.3) in this handout? Use the time scale definition from Sec. 5.1
- Q 7. 5: (10 pts) Suppose that you are asked to generate a clock of period 30ns but the duty cycle is 33.33% (one-third). Write the corresponding Verilog code.

- Q 7. 6: (3 pts) Do you instantiate the DUT (or UUT) in the initial procedural block or in the always procedural block? Miss Bruin says that it shall be in the initial procedural block as it should be instantiated only once.
 - (a) initial procedural block
- (b) always procedural block
- (c) neither

- Q 7. 7: (4 + 6 = 10 pts) Compare the following codes. The intent is to keep the start signal active for 1 clock, wait for two clocks, activate the **ack** for 1 clock. Which of the following work? (4 pts) Select *one* or *more* as appropriate.
 - a. Code A b. Code B c. Code C

Hint: One of the following is level-sensitive and the other is edge-sensitive.


@(posedge clk); wait (clk);

If you're not sure, just simulate the codes and see what happens!

Code A	Code B	Code C
<pre>@(posedge clk); #1; start <= 1;</pre>	wait (clk); #1; start <= 1;	<pre>wait (~clk); wait (clk); #1; start <= 1;</pre>
<pre>@(posedge clk); #1; start <= 0;</pre>	<pre>wait (clk); #1; start <= 0;</pre>	<pre>wait (~clk); wait (clk); #1; start <= 0;</pre>
<pre>@(posedge clk); @(posedge clk); #1; ack <= 1;</pre>	<pre>wait (clk); wait (clk); #1; ack <= 1;</pre>	<pre>wait (~clk); wait (clk); wait (~clk); wait (clk); #1; ack <= 1;</pre>
@(posedge clk); #1; ack <= 0;	<pre>wait (clk); #1; ack <= 0;</pre>	<pre>wait (~clk); wait (clk); #1; ack <= 0;</pre>

Explain your reasoning/analysis of the above 3 code segments. (6 pts)		

Q 7. 8: (15 pts) Suppose the core design (some other core design other than the GCD) has two sub-systems each having their own state machines. However, they share the same **START** and **ACK** signals. They both start when **START** is given (by the testbench or the top design). Each can take different number of clocks and the number of clocks is data dependent like in GCD. So sometimes SS1 (sub-system #1) can finish first and sometimes SS2. Or sometimes both may finish in the same clock! When a sub-system finishes, it produces a done signal just for 1 clock. SS1 produces a one-clock wide **DONE 1** and SS2 produces one-clock wide **DONE 2**.

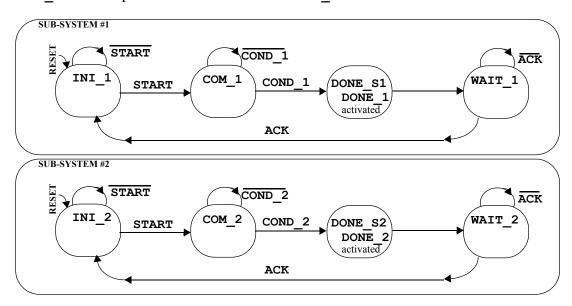

Your job in the testbench, so far as sending ACK is concerned, is to

- -- wait for both DONE_1 and DONE_2 to arrive
- -- wait for one clock and then
- -- issue a one-clock wide acknowledge ACK and
- -- of course get ready for the next test iteration.

Write a code segment to do the above to send ACK correctly Include declarations of any new variables (objects). Pay attention to *blocking* and *non blocking* assignments.