Advanced computer architecture fiche

Pierre Colson

June 2022

Contents

General Purpose Architectures								2
Exploiting ILP Dynamically		 	 		 			2
Pipelining		 			 			2
Dynamic Scheduling								2
Renaming registers		 			 			4
Predictions and Speculation		 			 			Į.
Simultaneous multithreading		 	 		 			8
Exploiting ILP Statically		 	 		 			Ć
VLIW Architecures and Compilers		 			 			Ć
Dynamic Binary Translation	•	 			 			11
Application-Specific Computing							1	13
Instruction Set Extensions and High-Level Synthesis		 	 		 			13
Automatic Processor Customization - Instruction Set Extensions		 	 		 			13
Statically Scheduled High Level Synthesis		 			 			14
Dynamically Scheduled High Level Synthesis		 	 		 			15
Challenges of High-Level Synthesis		 	 		 			16
Digital Signal Processors		 	 		 			17
Compilers and DSPs								19
Hardware Security							2	21
Microarchitectural Side-Channel Attacks		 	 		 		. :	21
Trusted Execution Environments								
Physical Side-Channel attack								

 ${\bf Markdown} \ {\bf version} \ {\bf on} \ {\it github}$

Compiled using pandoc and gpdf script

General Purpose Architectures

Exploiting ILP Dynamically

Pipelining

- ILP : Instruction Level Parallelism
- Pipelining is a simple form of ILP: Several instructions are being executed at once
 - The *latency* is unmodified
 - The throughput is higher
 - Adding resgisters to cut combinatorial logic
 - Each new register add a bit of latency and increase de power consumption
 - **Dependencies** slow down the possibility of pipelining
 - * To detect dependencies we can simply have a look to the destination registers of intermediaire registers and verify that they are not needed by the instructions that have been fetch
 - * Either add logic to detect dependencies (hardware) and stall the pipeline or requires the right number of nop between instructions to avoid issues (compiler)
 - Several instructions are run in parallel
 - Control hazards limit the usability of the pipeline
 - * Must squash fetched and decoded instruction following a branch
 - **Data hazards** limit the usability of the pipeline
 - * Whenever the next instruction cannot be executed, the pipeline is stalled and no new useful work is done until the problem is solved
 - * Can be solved by forwarding newer values (bypass the register file)
 - Rigid sequencing
 - * Special "slots" for everything even if sometimes useless (e.g. MEM before WB)
 - * Every instruction must be coerced to the same framework
 - * Structural hazards avoided "by construction"
- Dynamic Scheduling: solve dependencies in hardware

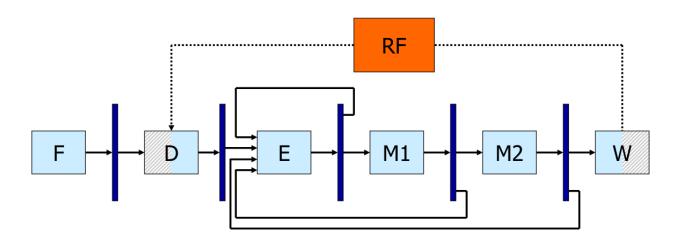


Figure 1: Simple Pipeline with Forwarding

Dynamic Scheduling

• While waiting for a dependency to be resolved, schedule other instruction

- Instructions can be executed out of program order (but the result must still be correct)
- Dynamic scheduling allow **Binary compatibility**, the same code will work for different processors, Parallelism is handle in hardware on not by the compiler

Structural hazars

- Are the required resources available
- Previously handled by rigid pipeline

• Data hazards

- RAW: Are the operands ready to start execution
- WAR and WAW: The new data overwrite something which is still required
- RAW : Read after write
- WAR : Write after read
- WAW : Write after write
- Dynamic pipelines may create WAW hazards
- Register after the decode state is bigger since it must be abble to store several instructions. A **reservation** station checks that the operands are available (RAW) and that the execution Unit is free (Structural Hazard), then starts execution
 - Unavailable operands are identified by the name of the reservation station in charge of thr originating instruction
 - Tag keeps track of which instruction will generate the result I am waiting for. Tag here are the name of an entry of the reservation station
 - * Tag cannot be register name since they are not unique
 - * Tag cannot be the PC (even tough it looks) since we can have a branch in a loop for example
 - Can find dependencies using the reoder buffer (see later)
 - * Reorder buffer keeps track of all instructions that have not been committed yet
 - * Reorder buffer can be used to bypass the register file
- Implicit register renaming removes WAR and WAW hazards
- New results are seen at their inputs through special results bus(es)
- Writeback into the registers can be done in order or out of order
- Architectural states are known by the programer
- Microarchitectural states are know not by the programer, only used by the processor
- Exception handler should now exactly where a problem has occured, especially for **non terminating exceptions** (e.g., page fault) so that they handle the event and resume exactly where the exception occured
 - Precise exceptions: Reordering at commit; user view is that of a fully in-order processor
 - Imprecise exceptions: No reordering; out-of-order completion visible to the user
- A processor can do whatever it wants provided that it gives the appearance of sequential execution
- Reorder buffer (ROB): redorders instructions in the commit unit
 - Pointer to the head and to the tail
 - Every time I decode an instruction, I add it to the Reorder buffer with the corresponding tag and the destination register
 - During execution tag are replaced by actual values/results; more precisely the only instruction with the given tag will be updated
 - When the head pointer is ready (results has been computed) we can commit; Otherwise we wait and do not commit any instructions
 - PC is also stored in the Reoder buffer to remember where was an eventual exception. This way
 wen can rejump to this instruction once the exception have been handled (or not, for terminating
 exception)
 - There is an address destination slot as well as a register destination slot. Either the register or the address slot is used, because the results has to be written either to memory or to a register
- Informations/results bypass the register file in order to be reuse faster, however in register file results are in order
- When a synchronus exception happens, we do not report it but we **mark the entry** corresponding to the instruction which caused the exception in the ROB
 - When we would be ready to **commit** the instruction, we **raise the exception** instead

- We also **squash** the content of the ROB and of all RSs
- The way to detect and resolve dependencies through memory is the same as for registers; For every load, check the ROB
 - If there is **no store to the same address** in the ROB, get the value from memory
 - If ther is a **store to the same address** in the ROB either get the value (if ready) or the tag
 - If there is a store to an unknown address in the ROB or if the address of the load in unknown,
 wait
- Additional memory dependencies can be solved via a **Load Queue** and a **Store Queue** (mimic the ROB). They would replace the memory reservation station
 - Load queue entries have a pointer to an entry in the store queue to know every store that where before the load
- Last improvement is Superscalar, having several fetch and decode unit as well as several alu and memory unit.

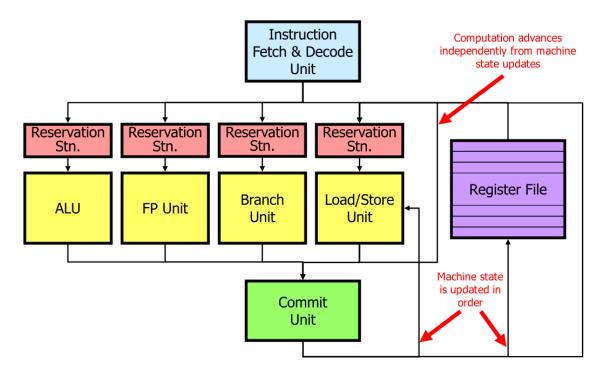


Figure 2: Dynamically Scheduled Processor

Renaming registers

- Register renaming is used to get rid of WAR and WAW
- Location for rename registers
 - Merged rename and architectural RF
 - Slpit rename and architectural RFs
 - Renamed values in the reorder buffer
 - Renamed values in the reservation stations (a.k.a. shelving buffers)
- Tracking the mapping table: Where is Physically an Architectural Register
 - Mapping in a Mapping table
 - Renaming in the **Rename buffer**
- State Transition in a Merged file + Information flow
 - Initialization : First N registers are 'AR', others are 'Available'
 - Available \rightarrow Renamed Invalid: Instruction enter the Reservations Stations and/or the ROB:

register allocated for the result (i.e., register uninitialised)

- * Read new PhR from top of Free Register Table
- * Create new mapping $LogDest \rightarrow Dst$ in the mapping table
- * Set corresponding Busy-Bit (=invalid) in the Status Table
- Renamed Invalid \rightarrow Renamed Valid: Instruction completes (i.e., register initialised)
 - * Write PhR Dest indicated in the I-Queue
 - * Reset corresponding Busy-bit (=valid) in the Status Table
 - * Mark as Done in the corresponding entry in the ROB
- Renamed Valid → Architectural Register: Instruction commits (i.e., register "exists")
 - * Implicit (removal of historical mapping $LogDest \rightarrow Dest$)
- Architectural Register \rightarrow Available : Another instruction commit to the same AR (i.e., register is dead)
 - * Free PhR indicated by OldDest in the entry removed for the ROB
- Renamed Invalid and Renamed Valid \rightarrow Available: Squashing
 - * Restore mapping from all squashed ROB entries (from tail to head) as $LogDest \rightarrow Dest$
 - * Reset corresponding Busy-Bit (=valid) in the Status Table

• State Transition Replaced by Copying in Stand-aloone RFF

- Initialization : All Rename registers are "Available"
- Available → Renamed Invalid: Instruction enter the Reservation Stations and/or the ROB: register allocated for the results (i.e., register uninitialised)
- Renamed Invalid \rightarrow Renamed Valid: Instruction completes (i.e., register initialised)
- Renamed Valid \rightarrow Available : Instruction commits (i.e., register "exists") \Rightarrow Value is copied in the Architectural RF
- Renamed Invalid and Renamed Valid \rightarrow Available: Squashing (no copy to the Architectural RF)

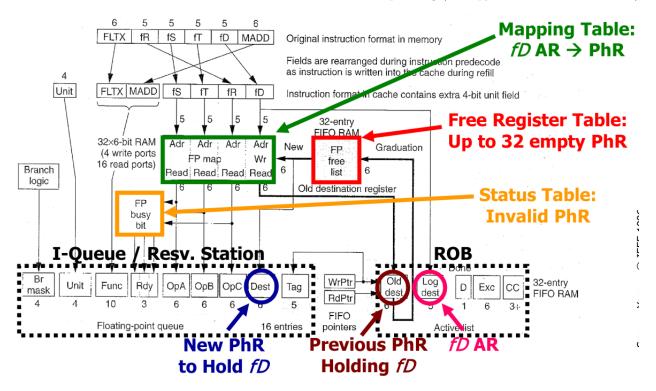


Figure 3: Merged Register File

Predictions and Speculation

- How do I make a good guess?
 - Either one outcome is typical and far more frequent: Static prediction

- Or I need to remember some history: Dynamic prediction
- What do I do if the guess was wrong?
 - Undo speculatively eccuted instructions ("squash")
 - * May or may not cost something

• Exceptions

- **Prediction** For every instruction, we have guessed that there will be no exception (static prediction)
- Speculation In case of exception we have used the ROB to squash all instructions after the faulty one raising exception
- General Idea (our ROB does just that):
 - After a prediction, hold every potential change in state of the processor (e.g., register values, memory writes) in a buffer
 - If the prediction turn out to be correct, let the content of the buffer affect the state (= commit)
 - Tf the prediction rusn out to be wrong, simply trash the content of the buffer

• Branch Preciction

- Static: Maybe we can assume that every backward branch is part of a loop and thus usually taken
- Dynamic Maybe we can observe what happens during execution and learn

• Branch Speculation

- In a simple pipeline we may simply fetch and decode instructions \rightarrow easy, no state changes
- In a complex out-of-order superscalar we may really execute instructions speculatively \rightarrow ROB
- Predicted branches are inserted in the ROB with predicted target
 - * A predicted branch whose outcome is unknown cannot be committed
 - * If outcome = address then we can commit (= correct prediction) (in reality we do not commit the instruction, it is simply moving the head)
 - * If $outcome \neq address$ then we do not commit and squash everything
- Branch target Buffer : Map between Branch Addresses (PC of the branch) and Target Addresses (fully associative)
 - To make this cheaper we can split the PC in an index entry (7 last bits for example) and a TAG (other bits). An entry could contains several TAGs.
- Branch history table: Part of the branch PC correspond to the index of the table and one bit prediction is stored at this location. However this table does not store the address of the branch. This allow collision but is cheaper. The prediction can also be over two bits.
 - One bit predictor: do the same as last time
 - Two bit predictor (saturing counter): adding some "inertia" or "take some time to change your mind"
 - Modified two bit saturating counter : Two mispredictions \rightarrow stong reversal (instead of weak for default two bit predictor)
- Exploit correlation: (m, n) Branch Predictor Buffer A global m-bit predictor uses the outcome of the last four different predictors
- gshare: replace concatenation with a better hash function
- Return address stack stores return address in the processor and use them for jump predictor without having to deal with the stack
 - Mispreduction has high cost

• Memory dependencies

- Prediction

- * We can optimistically assumen that ther is *no dependence* (it is the only assumption that makes us gain time and the opposite assumption never leads to a functional mistake ...)
- * One could certainly do better than simply assuming that any potential RAW through memory is not a RAW (= simple static dependence prediction)
- * The goal is to reduce the probability of squashing and replaying (if squashing costed nothing, the prediction would be ok, but squashing almost invariably has a cost and definitively in terms of energy)
- * Essentially one could build **dynamical predictprs** similar in spririt to branch predictors (the intuition is that dependences are program specific but often **stable** during program execution) → learn from history and remember what happens on previous visits of a load

* In fact, one could even predict a specific dependence (alias prediction-that is, in which strore a given load depends) and use it to bypass memory before addresses are known

- Speculation

- * If there was a dependence every data dependent instruction should be squashed; independent instructions were actually correctly executed
- * If we accept to squash all following instructions, this situation is not qualitatively different from what we have seen for other cases \rightarrow ROB

• Predicting the next miss

- Fetch data into the cache ahead of processor demanding it

- Predition

- * What and when to get from memory
- * As usual, exploit typical behavior (e.g., programs are sequences of instructions) and learn from (execution history)

- Speculation

- * Since we are putting data in the cache (which is not architecturally visible), nothing to do to rollback
- * Still, prefetching has a *cost* (besides energy, it consumes memory bandwidth) and could be damaging (leads to eveciton os useful stuff)

Prefectching

- Coverage How many misses prefetching removes
- Accuracy How many prefetched cache lines are useful over all prefetched lines
- Sort of a trade-off:
 - * prefetching very agressively improves coverage but reduces accuracy \rightarrow pullutes the cache
 - * prefetching conservatively may improve accuracy but reduces coverage \rightarrow little benefit
- Simple idea
 - * If the cache line X is a miss, load X but also X + 1
 - * Do not load X + 1 immediately but wait until the processor asks for an instructions some fetch-ahead-distance from the end of the line
 - * Could also load X+N instead. If N is too small \rightarrow poor coverage and if N is too large \rightarrow poor accuracy

- Stride prefetching

- * On a request for X, prefetch X + S, X + 2S, ...
- * Ussually takes a few misses to detect and build confidence in a constant stride

• Stream buffer

- There may be various streams mixing
- Aggressive prefetching of multiple streams lead ot cache pollution
- Implements multiple Next-N-Line or Stream prefetchers
- Place the prefetched lines in FIFO buffer instead of the cache
- Speculation is not necessarily a Run-Time Concept
 - Dynamic: in hardware, no interaction whatsoever from the compiler
 - * Binary code in unmodified
 - Static : in software, planned beforehand by the compiler
 - * Binary code is written in such a was as to do speculation (with or withour some harware support in the ISA)

• Predicated (= guarded) execution

- A special form of static control speculation, "I cannot make a good prediction? I will avoid gambling and will do both"
- A bit more than that : removes control flow change altogether
- Not always a good idea : compiler tradeoff
 - * (Almost) free if one uses execution units which where not used otherwise
 - * Not free at all in the general case: more than needed is always executed

	Dynamic (by the hardware)	Static (by the compiler)
Exceptions	Out of order and reorderingImprecise exceptions in DBT	
Control	• Branch prediction	Trace SchedulingHyperblocksPrediction
Data Availability Data Dependence Data Value	 Virtual memory Load/Store Queues	 Prediction Advanced Loads Dynamic compilers

Simultaneous multithreading

- Multithreading: pick other program instructions to fill empty slots
 - Fetch from mutltiple threads
- Processor must be aware of several independent states, one per each thread
 - Program counter
 - Register File
 - Memory
- Either mutltiple resources in the processor or a fast way to switch across states
- Vertical waste Complete idle cycle
- Horizontal waste Partially filled cycle
- Cycle by Cycle interleaving multithreading (or Fine-Grain multithreading)
 - Round robin selection between a set of threads
 - Requires several Pragram counter and register file
 - Would allow to remove some forwardind path (since two instructions does not belong to the same thread, they cannot depends on each other)
 - The single thread latency is increase by a factor N
 - * It is no acceptable that single thread performance goes significantly down or at all
 - Null time to switch context
 - * Multiple Register Files
 - No need for forwarding paths if threads supported are more than pipeline depth
 - * Simpler hardware
 - Fills wee short vertical waste (other threads hode latencies)
 - Fills much less will long vertical waste (the thread is rescheduled no matter what)
 - Does not reduced significantly horizontal waste (per thread, the instruction window is not much different)
 - Significant deterioration of single thread job
 - \Rightarrow never really used
- Block interleaving multithreading (or Coarse-Grain multithreading)
 - Keep executing a thread until something happens
 - * Long latency instructions found
 - * Some indication of scheduling difficulties
 - * Maximum number of cycles per thread executed
 - Scheduling of threads not self-evident
 - * What happends of thread #2 if thread #1 executes perfectly will and leaves no gap
 - * Explicit techniques require ISA modifications
 - More time allowable for context switch
 - Fills very well long waste (other threads come in)
 - Fills poorly shoirt vertical waste (if not sufficient to switch context)
 - Does not reduce almost at all horizontal waste
- Simultaneous multithreading (SMT)
 - Prioritised scheduling
 - * Thread #0 schedules freely

- * Thread #1 is allowed to use #0 empty slots
- * Thread #2 is allowed to use #0 and #1 empty slots
- * etc.
- Fair Scheduling
 - * All threads complete for resources
 - * If several threads want the same resource, round-robin assignment
- Multiple program counters (= threads) and a policy for the instruction fetch units to decide which threads to fetch (Fetch and decode stage)
- Multiple or larger register files with a least as many registers as logical registers for all threads (Commit stage)
- Multiple instructions retirement (e.g., per thread squashing)
 - * No change needed in the execution path
- Thread aware branch prediction
- Per thread Return Address Stacks
- Need to add a thread field in the ROB, to commit to the register of the right thread
 - * No need to add this field in the reservation stations
- Very good performance
- Where to fetch
 - Static solutions : Round-Robin
 - **Dynamic** solution: Check execution queues
 - * Favour threads with minimal number of in flight branches
 - * Favour threads with minimal number of outstanding misses
 - * Favour threads with minimal number if in flight instruction
 - * Favour threads with instructions for from queue head
 - Does not matter to much

Exploiting ILP Statically

VLIW Architecures and Compilers

- VLIW Very Long Instruction Word
- Schedule is to decide WHEN and WHERE each instrction is executed
- Scheduling happens at run time in superscalars and it happens exclusively at compile time in VLIWs
- Run time scheduling in superscalars requires considerable resources in the processor hardware
 - Reservation stations and reorder buffer
 - Renaming registers and various sorts of mapping tables
- Static scheduling: What each unit does in each cycle is decided at compile time in software
- Superscalar processor
 - Hardware detects parallelism among instructions
 - Scheduling is first performed at compile time, but with very loose information on the architecture the program will be run on
 - Final scheduling is performed at **run time**
- VLIW (or EPIC) Processor
 - **Software** detects parallelism among instructions
 - Scheduling is performed at compile time
- In traditional processor (superscalar) $cycles \neq instructions$
 - Latency-independent semantics
- IN VLIW processor cycles = instructions
 - Latency-dependent semantics
- Area Advantage: no need for the harware use in superscalar for dynamic dependence analysis →
 More execution units
- Timing Advantage: no need for complex dependence analysis every cycle → Clock frequency can be higher
- Challenges of VLIW
 - Compiler Technology

- * Compiler now responsible for scheduling
- * Most severe limitation until recently

- Binary Incompatibility

* Consequence of the larger exposure of the microarchitecture (= implementation choices) in the architecture

Code Bloating

- * All those NOPs occupy memory space and thus cost
- * But there are also other reasons ...

• Code Bloating problem

- Larger code is a serious problem
- In a first approximation, the problem is due to the explicit NOPs
- Not just a DRAM cost issue (main memory is cheap) but has weird impacts on cache performance (size, cache pollution, associativity, etc.)
- Code compression : Differentiate Fetch Packet and Execute Packet
- Instrucions are encoded in a less straightforward way
 - * Separator bit = 0: next operation is in parallel
 - * Separator bit = 1: next operations is sequential
 - * Unit number : specifies where to execute operation
- Price to pay for shorter code
 - * Fetch/Decode logic more complex
 - * Crossbar for shipping operations to the rights FU, complexity proportional to n^2
- Hardware was supposed to be trivial and $\mathcal{O}(n)$...
- A trivial but significant reason for bloating is removed
- More fundamental and difficult to overcome reasons exist which still increase significantly the code size

• The binary compatibility problem

- More information is now visible in the code
 - * Instruction latencies used to enforece correct handling of data dependencies
 - * Available hardware parallelism units scheduled on each cycle
- More subtle sources of incompatibility
 - * change in instructions latencies
- No fully satisfactory solution exists today
- Partial or research solutions
 - * Recompile
 - * Special VLIW coding/restrictions
 - * Dynamic binary Translation is emerging
- Latency cannot increase
 - Trivially, higher latendcy may violate data dependencies

• Compiler Technology problem

- Parallel exectution is limited byt the need to find independent instructions
- We need to deal with both data and control dependencies

• Control dependencies

- If
 - * We have abundant resources (machine parallelism) and
 - * We do not care about power dissipation, etc. bu just look for performance
- We can execute all paths in parallel without making a choice
- Instructions can be executed in parallel, but they are committed only if the relative predicate is true
- Predicate Execution needs architectural support, we need :
 - * An instruction to set the predicate
 - * Predicate registers
 - * An additional field in the instruction word
 - * A way to check and delay exceptions
 - * Full: all instructions can be executed conditionally

- * Partial: typically a single conditional instruction
- Loop tranformations
 - * Loops are often the most important part of the code (in terms of fraction of total code)
 - * Loops bodies can be exloited that more parallelism can be exloited
 - * Loop peeling remove some iterations of the loops and add them after (change the total number of iterations)
 - * Loop fusion : merge two loops in one (might need loop peeling)
 - * **Loop unrolling** : Creating larger loop bodies \rightarrow bigger basic block leeds to more chance for parallelism
- VLIW code fundamentally larger than standard code: not only NOPs are explicit, but aggressive unrolling multiples real instructions
- Software pipelining, goal: restructured the loop, so that ILP can be exploited
 - Prologue, Body and Epilogue
 - **Iterations** advancing in parallel
- Dependences: Trace Scheduling
 - Optimise the **most probable path** by increasing the size of basic blocks
 - Add compensation code in less probable paths
- Compile time speculation
 - Register renaming to ensure that correction code source operands are preserved
 - Because of **exceptions**, you only need to either:
 - * **Avoid errors**: Speculate only instructions which cannot raise exceptions (but one wants to speculates loads)
 - * Resolve errors: Add a special field in the opcode (Poison bit, ...) that says when an instructions has been speculated
- Elimination WAW and WAR at compile time
 - Rename: Eliminate dependencies by using more registers at compile time
 - * Need more architecturally visible registers
- RAW is the only important one: moving a load above a store
 - At runtime we have more information on memory addresses
 - But a **compile time** we have **more time available**: we can make much more complex analysis which depend on a wider knowledge og the code
- Conclusion on VLIW compilers
 - Many different decisions
 - * Which type of region is right? Trace, superblocks, hyperblocks, treeregions
 - * Which regions to optimise
 - * To unroll or not to runroll? How many times?
 - * To predicate or not to predicate?
 - * When to allocate resgisters
 - * \rightarrow powerful compiler backends for VLIWs are **very hard** to build

Dynamic Binary Translation

- Single worst obstacle to processor evolution
- Translate/Optimize a binary file (Source architecture) to physical hardware (Target architecture)
- Emulation: terrible in term of performance
- ullet Static translation : change the binary to fit the target architecture, should have good performance
 - Code identification: all code must be discovered statically and separated from embedded data
 - Self modifying code: what to do with it? Additional hardware to allow support of source architecture?
 - Precise Exceptios: no 1-to-1 relation between target instructions and source ones
 - **OS**: support of shared librairies and system calls
- Dynamic Binary Translation : merge emulation and translation to get the best of both worlds, see image below

- Optimization to Translated Code: ILP Scheduling, Loop unrolling, Alias analysis, Load store telescoping, Copy propagation, Combining, Unification, Limited dead code elimination
 - These optimizations are now simpler since we saw the code behaviour several time
- Now inside the porcessor we have a DBT (Dynamic Binary Translation) engine, located between the OS
 and the VLIW Processor

• Difficult Problems for DBT

- Code discovery: Not a problem anymore, wince we are in the middle of the emulator
- Self modifying code: injected code is not translated thus would lead to issues
 - * If we detect the injected code, we can simply jump back to the emulator part (in blue in the image)
 - * Use the TLB to detect when one writes to the code and thus detect seft modifying code

- Asynchronous exception

- * Can be delayed, no big deal
- * Wait until end of group
- * Translate exception handler
- * Invoke translated exception handler

Synchronous exceptions

- * During emulation, no issue
- * If synchronous exception during the execution of a translated and optimized group of VLIW instructions, unclear instructions and state w.r.t. source architecture
- * Revert status to begenning of current translated group (needs some architectural support: Set of *shadow registers* (which get the value of the main registers at at the end of a group) and gated *store buffer* (which holds pending stores for commit at the end of a group)
- * Re-emulate source architecture to find the exact point of the execution and to leave the processor in the architecturally correct state
- * Invoke translated exception handler
- Additional Optimization in BDT
 - Block Reordering: Make target image execution as sequential as possible
 - Memory Colouring: Improve mapping of translated code to fit target memory hierarchy
 - Code Specialization: Clone procedures based on constant parameter values

• Benefits of DBT

- Compatibility
 - * With native implementation
 - * Across different VLIWs sizes and generations
- Reliability and possibilities to upgrade
 - * Software patches for bugs in translator
 - * Software patches for optimizer enhancements
 - * Translator can be used to hide hardware bugs
- Low hardware cost
 - * SW scheduler: smaller chip with higher yield
 - * Fast in-order implementation
- Higher instruction-level parallelism
 - * Dynamic groups can be made arbitrary large
- Low-power consumption
 - * Memory consumes less than logic: Schedule once and then fetch from memory (?)

• Issues of DBT

- Reduced resources from the user
 - * Cycles: lost performance for translation
 - * Memory
- Slow at start (emulation) and real times difficulties
- Debugging difficulties
 - * Target machine code far removed from source code
 - * Non-deterministic behavious or real systems
- Static optimization in compiler backend is limited

- Tranlate with the same source and target architecture : **dynamic optimisations**
 - * Identify long instruction groups (traces)
 - * Extends traces over
 - st Optimize traces: classic ILP optimizations remove unconditional branches, . . .

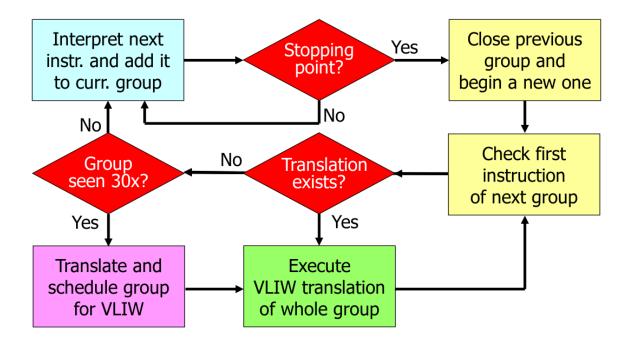


Figure 4: Dynamic Binary Translation Typical Execution Flow

Application-Specific Computing

Instruction Set Extensions and High-Level Synthesis

• Increasing the efficiency of implementations (from C programs to more efficient programmable solution)

Automatic Processor Customization - Instruction Set Extensions

- Collapse a subset of the Direct Acyclic Graph node into a single Functional Unit (AFU)
 - Exploit cheaply the parallelism within the basic block
 - Simplify operations with constant operands
 - Optimize sequences of instructions
 - Exploit limited precision
- Using hardware for special functional unit
- Why hardware is better?
 - Spatial computation
 - * Cheap ILP without true ILP support
 - No quantization of time in clock for each operation/instruction
 - * Operation chaining
 - Hardware is a different
 - * Constant may be propagated
 - * Precision can be tuned (bitwidth analysis)
 - * Arithmetic components can be optimized
 - * Arithmetic operations often appeat in groups

- * A literal/sequential implementation may not make the best of the potential available
- * A different number representation can be game-changer

• Automatic ISE Discovery

- Formulate it a an optimization problem
- "Give me your application in C, let me zoom in and let me try to find the biggest part that I can take so that I convert this into hardware, I put them as a functional unit of my processor and whenever you give me that program, instead of going and resortign to the normal functional unit, I do it on this special functional unit"
- Find subgraph
 - * having a user-defined maximum number of inputs
 - * convex
 - * possibility including disconnected components and
 - * that maximise the overall speedup

• Processor customisation

- Arguably the most widespread method of designing embedded hardware: selection one of very many existing processor or configuring the parameters of a family of precessors amounts to customization for a set of applications
- Little automation, thought: still most a manual design-space exploration; glimpses of automation in the 2000s seem lot
- Autimatic ISE discovery could be a more promising automatic custimization opportunity, but also disapeared in the late 2000s
 - * Pros: Focus on autimatic design of datapath and leave control to manually optimized processors (prediction, speculation, etc.)
 - * Cons: Limited scopte of exploitable parallelism (datapath parallelism and convertible control, predication, unrolling)

Statically Scheduled High Level Synthesis

- Somehow, ISE is confined to dataflow or convertible control flow, and this limits exploitable parallelism
- Traditional **HLS** gets rid of the processor altogether and uses th C/C++ specification to build hardware
- It represents an attempt to raison the abstraction level of hardware design above the classic RTL level (i.e., synthesizable VHDL and Verilog)
- Same as VLIW scheduling?
 - Very similar problem but with some notable differences
 - * Exact resources are not fixed; maybe there is a constraint on their total cost
 - * Clock cycle may be constrained but is in general not fixed; pipelining is not fixed
 - * No register file (which allows connecting everything to everything) but had-hoc connectivity

• Manual Code Refactoring

- Direct results are very often highly suboptimal
 - * Naive FIR
- users should have a sense of what curcuit they want to produce and suggest it to HLS tools by restructuring the code
- HLS tools today are *not* really meant to abstract away hardware design issue from software programmers; in practice, they are more like productivity tools to help hardware designers explore quickly the space of hardware designs they may wish to produce
- Loop peeling
- Loop Fission
- Loop unrolling

• Pipelining

- Perfect pipelining cannot be achieved easly by rewriting the code
- We need to schedule differently the operations within a loop so that operations of different iterations take place simultaneously
- Remember "software pipelining" How we need it so that a software program reprrepresents a hardware pipeline

- HLS needs to implement some form of modulo scheduling
- Classic HLW and VLIW Compilation
 - Striking resemblance of the two undertakings
 - * Both try to produce a **static schedule** of operations
 - * Both try tp reduce to a minimum control decisions
 - Both suffer from similar limitations: they cope poorly with variability including varibale latency operations, uncertain events, such as memory dependencies, unpredictable control flowd
 - Both impose burdens onto the user: decisions on how where to apply optimizations are not self
 evident, depend on the particular combination of the user constraints (note that the solution space
 is much wider for HLS), and thus are often left to user through code restructuring or pragmas

Dynamically Scheduled High Level Synthesis

- Limitation of Static Scheduling : When an operation depends on a load, we need the laod to finish to check for dependencies
- Asynchronous circuits: operators triggered when inputs are available
- Dataflow, latency-insensitive, elastic: the **synchronous** version of it
- Every components communicates via a pair of handshake signals
- The data is propagated from component to component as soon as memory and control dependencies are resolved
- Functional units, the only difference, they wait for the operands to be true
- Fork: takes a token and slipt the token to a number of users
- Join: wait for all token to arrive at his input and let them pass
- \bullet Branch: represents decisions
- Synthesizing Dataflow Circuits
 - C to intermediate graph representation
 - Constructing the datapath
 - Implementing control flow
 - Adding buffers
 - * Buffer insertion does not affect circuit functionality
 - * Each combinatorial loop in the circuit needs to contain at least one buffer
- Backpressure from slow paths prevents pipelining
 - Insert FIFO into slow paths
- Dataflow circuits have no notion of program order
 - Which is need for a Load Store Queue and handle memory dependencies
- An LSQ for dataflow circuits whose only difference is in the allocation policy:
 - Static knowledge of memory accesses program order inside each basic block
 - Dynamic knowledge of the sequence of basic blocks from the dataflow circuit
- Long control flow decision prevents pipelining
- Speculation in dataflow circuits
 - Contain speculation in a region of the circuit delimited by special components
 - * Issue speculative token (pieces of data which might or might not be correct)o
 - * Squash and replay in case of misspeculation
 - * New components : Speculator, Save units, Commit units
 - Extending dataflow components with a speculative flag
 - * An additional bit propagated with the data or OR'ed from all inputs
 - To increase performance we can merge the Save and Commit unit on cyclic paths
- What to expect from Dynamic HLS
 - Two hopes derived from the VLIW vs OoO analogy
 - * Significant better performance in control dominated applications with poorly predictable memory accesses
 - * Better out of the box performance
 - The former is almost certain, the second less so
 - A major issue is the **hardware overhead** of supporting dynamic schedules

- Probably statically scheduled HLS remains the best choice for classic DSP-like applications

Challenges of High-Level Synthesis

- Variable latencies in computation, memory accesses, or loop execution time
 - Floating point units, cache hit/miss, viriable loop bounds, early-exit execution
 - Prevent good pipelining using standard HLS techniques
- Static HLS: assume the worst case latency
 - Reserve additional pipeline stages for variable latency operations
 - Hardware overhead in area (power timing) \rightarrow may not be feasible for larger latencies
 - High throughput in particular case (e.g., no loop carried dependencies on variable latency op)
- Static HLS: stall **entire pipeline** in case of a variable event
 - Schedule each operation on its minimum latency
 - If an operation does no complete within min. latency block operations and stall pipeline
- Dynamic HLS naturally handles variable latencies
 - Handshaking mechanism stalls long-latency operations
 - Other computations can advance during stall
 - Howerver, in an in order system, pipeline usage and parallelism may still be limited
- Separate vairble-latency memory accesses and computation
 - Data is loaded from memory, stored in FIFOs, and sent to execution datapath as soon as ready
 - Requires nontrivial **code restructuring** (by user or compiler)
 - Some schemes support **out-of-order** execution
- Out-of-order multithread pipelines
 - Loop iterations are tagged iterations which can execute out-of-order
 - Suspended thread occupied resources, subsequent threads can continue without stalling
 - Qualitatively the same results as A/E decoupling but can be applied to many variable latency op
- In addition to operation, the number of loop iterations can also be variable
 - E.g., loop bounds computed at runtime, early exit condition
 - As in the case of variable-latency operations, not trivial to handle with standard HLS
- Static HLS: start a new inner loop only when previous one completes
 - When all loop bounds are known, loops can be analysed statically and flattened
 - In general case: exit inner loop, compute new loop bounds, enter inner loop
- Access/Execute decoupling works here, but the transformation is even more complex
 - Compute loop bounds and enqueue into FIFO
 - Dequeue bounds, compute loop loads, and enqueue into FIFO
 - Dequeue accessed data, execute loop operations
- Dynamic scheduling naturally starts a new loop as soon as pipeline is ready
 - No special mechanism or transformation required
- Loop Carried Dependencies
 - In order pipelines
 - * Different operations execute **out of order** with respect to each other, but each operation processes its own data **in order**
 - * Limited throughput in case of long latency loop-carried dependencies
- Out fo order execution to increase throughput
 - Issue multiple inned loops in parallel
 - Multithreaded execution
- Spacial Parallelism
 - Instruction-level parallelism within a single datapath
 - Replicate datapath/kernel to increase parallelism
 - Challenges:
 - * How to express the parallelism to the computer
 - * How to maximize utilisation of each datapath
- Loop Unrolling
 - Standard unrolling: replicate computations within a loop

- * Achieves spacial parallelism in regular loops
- * Not suitable for irregular code
- Task parallelism (loop replication)
 - Replicate loop and execute multiple loop instance in parellel
 - * Difficult to express using a C based HLS tool
 - * Increase parallelism, but datapath not fully used if inner loop latencies differ
- Load balancing to maximize parallelims and kernel utilization
 - Dispatch computation to processing units based on availability
- Summary
 - Access/execute decoupling, multithreading, dynamic scheduling
 - * Dealing with variable-latency events
 - * In-order: adapt the schedule to particular outcomes
 - * Out-of-order: fill gaps ins schdule to particular outcomes
 - Loop replication for spatial parallelism
 - * Unrolling irregular loops and loops nets
 - * load balancign to maximise datapath utilization

Digital Signal Processors

- Embedded Systems
 - Application specific:
 - * Application fixed in advance
 - * Not or very moderately programmable by the user
 - Reactive
 - * Reacts on events coming from the environment
 - * Has real time constraints
 - Efficient:
 - * Cost reduction must profit from specialisation
 - * Low power, small size, ...
- Specificities of Embedded procesors
 - Cost usde to be the only concern; now performance/cost is at premium and still not performance alone as in PCs; Performance is often a constraints
 - Binary compatibility is less of an issue for embedded systems
 - System-on-chip make processor volume irrelevant (moderate motication toward single processor for all product)
- Cost in performance
 - Performance is a design constraints
 - * General purpose: new high-end processor must be tangibly faster than best in class
 - * Embedded: adequately programmed, must just satisfy some minimal performance constraints
 - Cost is the optimisation criteria
 - * General purpose: must be within sime typical range \rightarrow profit margin can be as high as some factor
 - * Embedded: must be **minimal** \rightarrow economic margin on the whole product can be as low as a few percent points
- Typical features of DSPs
 - Arithmetic and datapath
 - * Fixed-point arithmetic support
 - * MAC = multi-accumulate instruction
 - * Special registers, not directly accessible
 - Memory Architecture
 - * Harvard architecture
 - * Mulatiple data memories
 - Addressing modes
 - * Special address generators

- * Bit reversal addressing
- * Circular buffers
- Optimized Control
 - * Zero overhead loops
- Special purpose peripherical

Fixed point

- In principle, if one adds a fractional point in a fixed position, hardware for integers works just as well and there are no additional ISA needs
 - * It is just a matter or representation
- Multiplication typically intriduces the ned of arithmetic rescaling with shifts to the right (multiplicative constant cannot be implicit anymore) → Choice of accuracy depending on how many bits one can keep
- Different approximation choices
 - * Truncate: Discard bits $\rightarrow Large\ bias$
 - * Round: < .5 round down, $\geq .5$ round up $\rightarrow Small\ bias$
 - * Convergent Round: < .5 round down, > .5 round up, = .5 round to the nearest even \rightarrow no bias

• DSP Arithmetic needs

- Rather than having full floating point support (expensive and slow), one wants in a DSP sime simple and fast ad-hoc operations
 - * MUL + ADD in a single cycle (MAC)
 - * Accumulation register fater MAC
 - * Approximation mechanism
- Nouniform precision in the whole architecture
- MAC operations tend to dominate DSP code (maybe 50% of critical code) \rightarrow highly optimised MAC instruction
- DSPs habe multiple memory ports
- DSP do not have caches
 - Importance of real time constraints: no data caches
 - Sometimes caches on the instruction memory but determinism is key ins DSPs
 - * Caches under programmer control to lock-in some critical instructions
 - * Turn caches into fast program memory
 - Once again, one is not after highest performance but just guaranteed minimal performance one needs

• Addressing modes

- To keep MAC busy all the time, with new data from memory, one need to generate memory addresses
- Forget about Load/Store queue architecture
- Complex addressing is now fully welcome if
 - * Allows automatic next address calculation
 - * Does not require usage of the datapath (MAC is busy...)
- Dedicated simple datapaths to generate meaningful sequences of addresses, ususally 2-4 per DSP
- AR can be loaded with
 - * Immediate laod: constant from the instrucion field into the pointed AR
 - * Immediate modify: constant from the instruction field added to the pointed AR
 - * Autoincrement: small constant added to the pointed AR
 - * Automodify: value of the pointed MR added to the pointed AR
 - * Bit reversing: value of the pointed AR bit-reversed and loaded into the pointed AR
 - * Modulo/circular: autoincrement/automodify with modulo
 - * Also decrement/substract
 - * Sometimes pre- and/or post-modification

Compilers and DSPs

- Classic compiler Flow/Phases
 - Front-end
 - * Mostly dependent on programming language
 - * Largely or fully independent of target machine
 - * Source code \rightarrow Source-level optimisations \rightarrow Source-code Analysis
 - Back-end
 - * Mostly dependent on target machine
 - * Largely of fully independent of programming language
 - * IR optimisation \to Code selection \to Instruction scheduling \to Register allocation \to Assembly code
- Standard code generation techniques Standard Code Generation layering: Three fully independent phases
 - Code selection: which instruction to implement DFG node
 - **Instructions Scheduling**: *When* instructions will be executed at runtime (or considered for execution in dynamically scheduled processors)
 - Register allocation: where results should be stored
- Code selection problem
 - Find minimal cost cover of the DFG with instructions of the ISA
 - Tree parsing
 - * Break DFGs in Data Flow Trees (DFTs)
 - * Define a tree grammar
 - * Tree is parsed from a leaves to root, patterns are matched to apply rules (= instantiate instructions) and labeled with possible costs, and cheapest solution is found by dynamic programming by traversing the tree again from root to leaves
 - * Optimal results in $\mathcal{O}(n)$ time (for DFTs not DFGs)

• Instruction Scheduling problem

- Find a sequence S of instructions which *minimises* the total schedule length L(S) under the following conditions
 - * Dependencies: each instruction cannot be scheduled before the time the predecossors are scheduled plus their respective latencies
 - * Resources: an instruction can be scheduled only if there are available resources to execute it
- NP-hard problem
- Exact solutions are usually not practical for instruction scheduling
- Greedy heuristic algorithm
 - * At each step, maintain a ready list containing all the unscheduled instructions that can be scheduled respecting dependencies and resources availability
 - * Use a priority function to decide which instrunction from the ready list to start next
- Priority function is the key and tries to maximise advantage
 - * Pick instruction with the largest number of succesords, that is maximise size of future ready list
 - * Pick instructions on the critical path or with minimal slack
 - * Pick long latencies instructions

• Register allocation

- Intermediate code uses infinite number of virtual registers
- Virtual registers should be mapped to a limited number of physical registers
- Graph colouring
 - * Interference Graph edges represent the fact that two VRs cannot be mapped to the same PR
 - * PR are "colors"
 - * Nodes should be colored with at most k colours and no adjacent nodes get the same colour
 - * NP-complete problem
 - * Several heuristics to find an approximation solution
- Memory layout (aka, offset assignment)

- How to arrange data in memory in such a way that the typical access sequence can be done with only automatic address updates
- Create an edge-weighted graph
- An assignment is an Hamiltionian Path (= Path touching all node once)
- The maximum weighted Hamiltionian Path is the best assignment (largest numbe of free accesses)
- NP-hard problem
- Not one, but a set of k ARs which can be used
- General problem is much more complex
- Several ARs and MRs available, autoincrement range large than 1
- Goal is to find partition the variables among the ARs and define a set of values in the MRs such that the access cost a minimal
- Access cost is null if
 - * Distance of new variable from last variable accessed with the used AR is within the autoincrement range
 - * Distance of new variable from last variable accessed with the used AR is a value stored in a MR
- Very complex nonlinear optimisation problem \rightarrow nonoptimal optimisation algorithms

• Address Register allocation

- How to make all accesses with a minimal number of registers and with only automatic address updates
- With array accesses, no offset assignment possible
- Use of pointers make code unreadable but forces many DSP compilers to allocate ARs and use autoincrement
- How to allocate ARs automatically from readable code
- Create a single graph with accesses being nodes and edges from i-th to j-th accesses if
 - * j-th access follows i-th access and
 - * the two accesses are within range r
- An assignment is a set of disjoint paths (each path = one register) covering the distance graph
- An assignment with a minimal set of paths is the optimal solution
- Exploit resgisters in of pipelined datapath
 - Chained operations
 - * Pipelined MAC
 - Many special registers
 - * Dedicated pipelining
 - * Reduced pressure on general-purpose register file
 - * Shorter instruction length (implicit operand addressing)
 - Architecturally visible pipeline
 - Each DFT mapped independently and intertree values passed via registers
 - Since registers are not orthogonal, choice of registers may be highly suboptimal for DSPs
- \Rightarrow Coupling of three phases needed
 - Code selection
 - Register Allocation
 - Scheduling
- Scheduling and Partioning
 - Major difficulty is that one simultaneously looks for a partition P and a schedule S
 - Scheduling problem with limited redources is already NP-hard and need heuristics
 - Classic scheduling algorithms need either partitioning before or after, cannot do it together
- Summary
 - Irregularity can be used to make processors more effective in very specific situations (e.g., DSPs)
 - Resulting complexity in compilation is often the need of phase coupling: leyered back-end complilation phases fail to exploit the specific features
 - * Special Registers \rightarrow Register allocation, Code selection, and Scheduling
 - * Multiple Clusters \rightarrow Partitioning and Scheduling
 - * SIMD Isntructions \rightarrow Register allocation and Code selection

Regularity of a processor essentially means creating an architecure where the usefulness of missing information acress phases is minimal (e.g., all registers are equally usable for all instructions)

Hardware Security

- Software complexity
 - OSes and hypervisors are too complex to be trusted bo te bug free
 - Who can trust OSes and hypervisors, Secure processor architecture
- Microarchitectural side-channel attacks
 - Sharing with other users gives them the ability to discover our secrets
 - * Shared caches, shared processors (branch predictor, pieplines, etc.)
- Pysical monitoring attacks and physical side-channel attacks
 - User cannot physically protect and their computing hardware
 - * Hardware if often in the cloud
 - * Hardware is embedded and remote (Internet-of-Things, IoT)

Microarchitectural Side-Channel Attacks

- A set of **extremely powerful attacks** which intimately depend on the microarchitectural features of our processor
- Treat model, specification of the threats that a system is protected against
 - Trusted Computing Base: what is the set of trusted hardware and software components
 - Security properties: what the trusted computing base is supposed to guarantee
 - Attacker assumtions: what a potential attacker is assumed capable of
 - Potential vulnerabilities: what an attacker might be able to gain
- Confidentiality: prevent the disclosure of secret information
- Integrity: prevent the modification of protected information
- Availability: guarantee the availability of services and systems
- **Isolation**: the possibility to prevent any interaction between users and processes, often to guarantee confidentiality and integrity
- Dynamic random-access memory (DRAM)
 - DRAMs are the densest (and the cheapest) form of random-access semiconductor memory
 - DRAMs store information as charge in small capacitors part of the memory cell
 - Charge leaks off the capacitor due to parasitic resitances \rightarrow every DRAMs cell need a **periodeic** refresh lest it forgets information
- To increase density (i.e, reduce cost) memory cells have becime incredibely small (\rightarrow small storage capacitance, smaller noise margin) and extremely close to each other (\rightarrow small crosstalk capacitance)
- Frequent activation of word lines neighbouring particular cells between refreshes may flip the cell states
- **Disturbances erros** have been a know design of DRAMs since even, but failure in commercial DDR3 chips was demonstrated in 2014 : **Rowhammer**

- Rowhammer effectively **violates memory protection** ("if I can read, I can also write") which is a ley ingredient to privilege separation across processes
- By accessing locations in neighbouring rows one could gain unrestricted memory access and privilege escalation
 - Allocate large chunks of memory, try many addresses, learn weak cells

- Release memory to the OS
- Repeatedly map a file with RW permissions to fill memory with page table entries (PTEs)
- Use Rowhammer to flip (semirandomly) a bit in one of these PTEs it will point to the wrong physical page
- Chances are that this physical page contains PTEs too, so now accessing that particular mapping of the file (RW) actually modifies the PTEs not the file
- Attacker can arbitrary change PTEs and memory protection is gone
- Mitigations
 - * Error correcting codes may fail to detect multiple flips
 - * Shortering the refresh intervals mitigates but does not solve problem; implemented in firmware by some vendors
 - * Hard or impossible to avoid altogether without changes in the DRAMs
 - * Increase electrical nois margins (costly)
 - * Count indise the DRAM the number of row activations within a time window, identify potential victims, and refresh
- An aside on DRAMs: Data Remanence
 - A completely different problem with storing data on capacitors: cells may leak information quickly in the worst case but very many do not leak much in typical conditions
 - Lowering significantly the device temperature (e.g., use spray refrigerants) makes **most cells** retain charge for long time (seconds to miniutes)
 - Coldboot attacks:
 - * Cool a working DRAM device
 - * Switch off
 - * Move the device to another computer or reboot a malicious OS
 - * Read content (password, secret keys, etc.)
- A covert channel is an intentional communication between a sender and a receiver via a medium not designed to be communication channel
 - If we isolate critical process inside a virtual machine, a covert cahnnel may allow a rogue programme insidde of the isolated process (a *Trojean horse*) to leak secret to some malicious receiver without anyone to notice (no conventional communication channel visible)
- Attacks where the sender is the usnsuspecting **victim** of the attack, who is **unknowingly transmitting information through a covert channel**, and the receiver is the attacker
- Sending (or leaking) information is a **side effect fo the normal operation of the victim**, either because of the hardware implementation of the system or because of the software implementation of the victim, or both
- Covert and Side channel are either :
 - Microarchitectural
 - * Based on the *existence* of microarchitectural state, that is state not (normally) visible to the programmer, because architectural state is know and thus, apart from bugs, inherently protected
 - * based on the sharing of the hardware components featuring such microarchitectural state
 - * Physical replication and isolation may solve the problem
 - Physical
 - * Based on the physical nature fo the computing system
 - * Potentially more difficult to flight, but also harder to exploit
- Timing side channel attack
 - Execution time reveals something on data
 - Blinding through constant time
 - * May need to fight compiler optimizations
 - * Variability may arise from microarchitectural phenoma
- Cache Side channel attacks
 - Oldest and perhaps most powerful example of microarchitectural side chanel
 - Attacker can differentiate hits and misses using some high resolution timing measurment (e.g., processor cycles)

- Victim memory accesses (= where the victim loads or store) reveal secrets
 - * Accesses to an AES sbox() depend on the secret key
- Attacker can run victim code
- Evict+Time Does the victim access location X (in set Y)
 - Run the victim
 - Run the victim and time it
 - * Fast because data are in the cache
 - Evict contetn from set Y
 - * By replacing with attacker content
 - * Making sure to pollute all ways
 - Run the victim and time it
 - * If this run is longer then the previous one, the victim accessed something is set Y
 - Problem
 - * Relies on measuring the precise execution time of the victim
 - * Repeats the same execution, so no variability in the executed code
 - * Yet, timing may be affected by environmental issues (system call, branch prediction, etc.)
 - * It is a small noise but may be comparable to the quantity being measure
 - * Repeat many times
- Prime+Probe What locatin (set) does the victim access
 - Fill all sets with the attacker content (prime)
 - Read all pieces of data for all sets and time each set
 - * Fast because dara are in the cache
 - Run the victim
 - Read all pieces of data for all sets and time each set (probe)
 - * If step 4 takes longer than 2 for set Y then victim accessed something in set Y
 - Key advantage now the attacker times their own code and not the victim's code, arguably allowing better control of measurment noise
 - Multiple level
 - 1. Fill set in LLC (prime)
 - 2. Fill set (= evict) in L1 (reprime) (do not evict from LLC), *Reprime* with element in the same set in L1 but in a different set in LLC
 - 3. Run the victim
 - 4. Find misses
- Many attacks to cryptographic algorithms involve trying multiple plaintexts and/or key hypotheses and ditinguishing between most likely and least likely over many attempts
- The attacker and the victim may be on different cores
 - different core does not share first caches

• Inclusion property

- Whatever is in L1D is certainy in L2; whatever is in L2 is certainly in L3, etc.
- Useful to maintain coherance
- It is interesting for an attack to try to attacker last layer caches, since there is more info
- Take advanteages of the hardware support for larges pages
 - Large pages \rightarrow More memory waste but *more efficient managment* in applications with larger data footprint
 - Attacker needs administrator rights to set larger pages
 - * Not a problem because they have them in their guest OS

• Meltdown

- Catastrophci attack making possible **read all memory of a process** (included protected data)
- By product of the way sime microarchitectural features are implemented
- Exploits **race condition** between memory access and protection checks
 - st Ultimately exploits the microarchitectural nature of coaches (something is left in the cache upon exception because the cache is not part of the architectural state)
- The attacker executes a *forbidden access* and speculatively uses the result to obtain *non architectural* side effect that reveal the secrets before the forbidden access is squashed

- 1. Execute a forbiden access
- 2. and speculatively use the result
- 3. with nonarchitectural side effect that reveal the secrets
- Use the secret to access a location in memory, the access will be done speculatively, then check what data have been accessed (via the cache) and find back the index
- Possible mitigations for meltdown
 - The obvious solution is to change the processor design
 - * Test privilege level before making the result of a speculative access available
 - The other line of mitigation os to better isolate user space and kernel space memory

• Spectre

- Another catastrophic attack making it possible to read all memory
- Addresses another shared resources: branch predictors
 - * For simplicity, branch predictor are not thread specific
- Exploits side effect of mispredicted speculative exectution
 - * Mispeculation does not affect the architectural
 - * but it may affect microarchitectural structures
- 2. Speculatively execute
- 3. leaky code
- 4. with non architectural side-effect that raveal secrets
- Possible mitigation for spectre
 - hardware
 - * Disable speculative execution
 - * Seperate branch predictor per process/thread
 - General software approaches
 - * Run only an application per processor
 - Partial and application-specific software appraoches
 - * Add serialization instruction between branches and loads

Trusted Execution Environments

- First attempt to develop architectural features to mitigate some of the most severe threats to isolation and confidentiality
- **Isolation** = Confidentiality and Integrity
- The key to the ability of limiting the possible translation depends on the existnece of **processor** privilege levels
 - Some instructions can be executed only in some privilege levels
 - Instruction lowering the privilege level do not need to be restricted to a particular level: there is no harm in deciding that one can do less
 - Critical is the mechanism to raisse the privilege level, of course
 - * Link raising the privilege level to a predefined change in control flow (i.e., some form of jump): if the privilege level raises, only some specific code can be executed
 - * Usually in the form of a software exception instruction: raise the privilege and then raise the exception to execute the exception handler
 - * If the virtual memory mechanism has been used well to protect the exception handler code, there is confidence that when the privilege level is high, only the OS can be executing

• Classic privilege level

- Traditionaly multiple privilege levels with varying capabilities tuned to some particular purposes
- Lower levels add the capabilities of levles above
- In practive, most processor evolved to have only two privilege levels: user mode and kernel mode

• Virtual Machines

- **Full virtualization**: run the very same OS and applications in the virtual machine that one would run on the bare hardware
- Many reasons:

- * Consolidation of multiple small machines in a powerful one (lower cost and energy)
- * Flexible deployment (no need to buy a mahcine upfront)
- * Lower dependence from the hardware details (easy to move across servers)
- * Better isolation (not processes of the same OS but different OSes)

• Software-base virtualization

- Mostly the ingredient for process virtualisation enable also full virtualization:
 - * Memory is accessed via TLBsn violations results exception being raised, etc.
- Achieving full virtualization on a CPU no meant for it is challenging
 - * If guest OS needs to be isolatedd, they cannor run all in kernel mode
 - * But if guest OSes run a user mode, how can they do thier job
- The classic approach is called **trap-and-emulate**
 - * Guest OS will create exceptions when trying to do its normal job (loading TLB)
 - * Hypervisor will check the pertinence and, aif appropriate, emulate
 - * May key data structures will be replicated (shadow page tables)
- But some instructions simply behvae differently in user and kernel mode
 - * Dynamic Binary Translation to rewrite the functionality with user mode instruction

• Hardware-Assisted virtualisation

- Introduce ISA extensions and ahardware support for full virtualization and progressively extend it
 - * More privilege levels (Ring-1 Hyoervisor)
 - * Another level of address translation (nested paging) supported by the hardware page walker
 - * Interrupt virtualisation
 - * IOMMU virtualisation

• More high privilege levels

- System managment mode (ring-2)
 - * Guarantee some managment functionality in firmware even if the OS or the hypervisor anr compromised accessible by dedicated interupts
 - * Mastly used for power and thermal management or handling hardware errors
- Platform Security Engine (ring-3)
 - * Physical isolation through a piece of hardware independent from the processor
- Not just more level but dedicated hardware and physical isolation
- Largely implement security by obscurity
- Symmetric key Cryptography
- Public key cryptography
- One way hash functions
 - Typically used for integrity: it should be impossible to create a new message or modify one such that it results in the same hash at the original

Hash trees

- recursive application of one-way hashes on a dataset split in blocks
- Useful to keep hashes up to data in case of local changes: one need to recompute the hash of the block where the change took place and of the parents

• Random Number Generators

- Main distinction
 - * Pseudo-random number Generators are algorithm to produce from a few initial bits (a seed) a deterministic long string of random-looking numbers
 - * True random number generators are typically hardware components which exploit physical phenomena (electrical of thermal noise, temperature vairations, etc.) to generate truly random numbers
- TRNGs are slown thus often TRNGs generate seeds and PRNG generate strings of random numbers for practical use
- TRNG can be sensitive to tampering or may provide backdoors

• Physical Unclonable Functions (PUFs)

- Circuit exploiting intrinsic randim physical features to produce a fingerprint uniquely identifying each chip

• Freshness and Nonces

- In **replay attacks**, an adversary intercepts a piece of data and resends it at a later time
- The authentication and integrity of the message is guaranteed by the fact that the message was a genuine one once first sent what is misses is **freshnes**
- The typical solution is to introduce **nonces**, that is number used only once during the lifetime of the system: if a message contains a previously used nonce, it is not fresh
- Nonces can be produced by *monotonic counters* for instance

• Homomorphic encryption

- Form of encryption which allows computing over encrypted data without to the secret key
- Ultimate solution to secure remote computation: user ships encrypted data, they get processed by an untrusted party who does never see data in clear, and user receives back encrypted results
- Extremely intellectually appening idea, but, in practive, today there is no general solution except for limited families of computation and with impractiacal performance overheads

• Trusted Computing Base (TCB)

- The set of **trusted hardware and software components** which can be object of an attack
- Important: what is trusted is no necessarily trustworthy
- The purpose is to separated clearly what is *supposed to be trustworthy* and simply may not be sich because of *bugs or conceptual oversights* from what is *clearly untrustworthy* and against which the system has been designed with explicitly defenses
- The TCB should be as small as possible
- Cloud users trust their own apps, thei own guest OSes, and the processor manufacturer, but not the cloud operator

• Trusted Processor Chip

 The fact that the cloud operator is not considered trusted means also that not the whole computer hardware is trusted

• Trusted Execution Environments

- Create environment where only protected softxare resides and executes supported by a minimal TCB
- The main challenge is to protect the software state of the TEE given the fact that its state in inavoidably dispersed all over the system and specifically outside of the TCB and inside untrusted software and hardware components

- Confidentiality through encryption

* This usually implies hardware encryption/decryption modules at the edge locally stored keys

- Confidentiality through isolation

- \ast Isolation ca heppen through useal means but memory managment cannor be under the control of untrused entities
- * TEE and their TCB hardware should be in charge of their own page management

- Confidentiality through State flushing

- * Architectural and microarchitectural state across all parts of the system need to be *flushed* before untrusted entities control the system
- * The challenge is to identify all places where there is confidential state

- Integrity through Cryptographic hashing

- * One way hasing ensures integrity of everything stored outside of the processor
- * Again, this implies hardware modules as the edge and locally stored nonces and root hashes
- Attestation: provide a proof that the software running inide the protected environment is genuine and untampered

• Intel SGX

- Data owner trusts the hardware running in a remote operated by an untrusted infrastructure owner
- The trusted hardware establishes a secure containers (enclave) and supplies the user with a proof that they are accessing a specific piece of software running into the enclave
- The data owner *uploads* encrypted data that the software in the enclave decrypts and processes
- The enclave software encrypts the resuls and sends them back to the data owner
- The system software of the infrastructure owner is in charge of managing resources and devices as in ordinary systems, but has no access to the code and data enclave

- **EPC**: Enclave Page Cache = pages allocated by SGX for enclaves
 - Allocated by kernel or hypervisor, encrypted in hardware with keys generated a boot time

· Root of trust

- Security requires many different cryptographic keys for multiple purposes
 - * Private and public keys for authentication
 - * Secret keys for confidentiality
 - * Keys for integrity checks
- Some can be random and ephemeral (generated at boot)
- Most need to depend on a something unique and persistent: a root of trust key stored in the processor and accessible only the the TCB
 - * Root provisionning key (RPK), sroted by intel
 - * Root sealing key (RSK) that intel declares to erase after manufacturing
- Classic security issues: Public key infrastructure, Certificate authority, revocation etc.

• ARM TrusZone

- The basic buisiness model and market is very different: ARM does not build chips but lincenses intellectual property, many customer only license the architecture and build the processor themselves (e.g., Apple)
- TrustZone is a collection of hardware mechanisms which conceptually partition a system and its resources in a secure and a nonsecure world
- Mainly about isolation

Physical Side-Channel attack

- Possibly the most elusive class of attacks
- So far of moderate concern for general purpose computing but extremely critical for embedded applications (e.g., smart cards) and devices not physically located with the owner/user
- Most worrying for embedded devices where physical access is possible
 - Smartcard
 - IoT is nuturally a growing concern
- In the case of untrusted datacenters, physical access is to be assumed possible also there
- And finally, physical presence is not even always needed
- Invasive attacks
 - Typically VLSI devices are unpackaged, layers removed or tampered with, new connections made
 - Anything is possible
 - Extremely expensive and thus farily rare; a serious threat only in extreme cases
- Noinvasive attacks
 - Device attacked only through existing interferaces; usually inexpensive equipment
 - (Almost) no trace left of the attack
 - Very serious threat

• Passive attacks

- Device operating as usual
- Attacker only observes legitimate input/output and physical emmanations

Active attacks

- Device, inputs, and environment are manipulated
- Device operating outside specification and abnormally
- Attacker learns from this abnormal behavior
- Timing, one could perhaps see the Evict+TIme cache attack as an unconventional timing side-channel
- Power consumption, Supply the device through a resistor (1-50 Ω) and measure voltage drop
- Electromagnetic, measure the RM field with a small, often hand-made coil
- Acouistic, capture the noise of a keyboard or of a laptop (usually through capacitors and coils)
- Hardware trojans
 - Malicious stealthy circuit, unintented part of an otherwise genuine computer
 - Typicallu inactive most of the time, until it receives some activation signal and then performs some rogue action

• Passive side-channel attacks

- CMOS Power consumption is data dependent
- Electromagnetic attacks are fundamentally similar to power consumption attacks
- Leakage Models
 - * To perform an attack, one must reason about how data flowing into the circuit influence the measured emanation
 - * One needs mathematical approximation and stull allow successfull attacks
 - * Yet, the more accurate is the model, the more efficient (e.g., shorter time, smaller number of runs) is the attack

Simple power attack

- Usually visual inspection of a few power traces or simple template-based analyses
- Typically tells something about operation performed but not directly on the data
- Sort of naïve but effective

Differential power attack

- Statistical analysis of larger numbers of power traces
- Tells directly something about the data being porcessed
- Extremely powerful
- Instead of looking visually for a difference and interpreting ad-hoc what the difference light tell on the secret, find out statistical correlation between hypotheses on the secret and actual measurement
 - * (Almost) only one essetial assumtion: what is the cryptographic algorithm being run
 - * Other assumption are only mildly influencial on the tresult
- Use many measurements to cancel noise
- Records traces with very many different plaintexts
 - * It is assumed wa can trigger or obaserve many encryptions with know plaintext, for instance
 - * Traces will be very different and will tell nothing individually
- Make an hypothesis on the key (or part of it) and *compute sime internal signal* (decision or selection function) as a function of the plaintext and of the guess
 - * Divide-and-conquer: choose a decision fucntion which depends only on a few bits of the key, so that we have less guesses to make
- Split the measurements into two groups base on the decision function
 - * If the guess in wrong, the decision function computed is uncorrelated with the real internal signal and thus with any point of the power traces \rightarrow the average of the twos sets will be identical \rightarrow the difference approximately null
 - * If the guess is right, the decision function is equal to a real internal signal and thus correlate to something in the power traces \rightarrow the average of the two sets will be different in those instants \rightarrow the difference will correspong to the effect of the internal signal and thus nonnull

• Selection of relevant samples

- Processing a complete trace is very coslty
- Use only relevant information easily extracted with simple power analysis or some statistical processing

• Correlation power attacks

- Use a linear correlation foctor instead of differences
- DPA splits measurments in bins based on the decision function and checks if the average of the measurments in the bins differ significantly
- CPA measures the lineat correlation factor between the leakage model (applied to the bits of the decision function) one the measurments

• Fault injection Attacks

- Semi invasive attacks which use some mean of creating a disturbance on a device of get ir to reveal secrets
- Secrets are often reavealed by comparing runs with and without faults

• Fault injection methods

- Vary the **supply voltage**
 - * Lower the supply voltage \rightarrow critical path delay exceeds the clock period
 - * Generate a voltage spike

- Vary the clock frequency

- * Increase the frequency \rightarrow clock period too short for the critical path
- * Generate a glitch \rightarrow critical path violated in a specific instance
- Heat the device
 - * Again, affect the critical path
- Open the VLSI circuit and shine light on it
 - * Flash \rightarrow errors all over the place
 - * Laser beams \rightarrow flip individual bits
- Countermeasures
 - * Fairly hard to protect, for creating faults is relatively easy
 - * Countermeasures not fundamentally different from technique developed for fault-tolerant computing (the only difference is whether the fault is malicious or not)

• Remote side channel attacks

How can an attacker measure power? attacker needs only to measure delay

• Ring oscillator Sensors

- Create a ring oscillator (odd number of inverters in a ring) and measures the frequency by counting and comparing to the transitions in a reference clock
- Again, plenty of practical issues to handle properly, nut essentially one gets on a chip digital "oscilloscope"

· Countermeasures to physical side channel attack

- Physical hiding ← en engineering approach
 - * Perform the same computation an unprotected device would do
 - * Recude the correlation between physical emanations and the secret
- Algorithmic masking \leftarrow a mathematical approach
 - * Randomized the intermediate values computed in the device
 - * Thus, make it harder to correlate physical emanations with secret key hypotheses through intermediate algorithmic values because the latter are now random

· Physical hiding

- Make the **power** consumption **random**
- Make the **power** consumption **constant**
- Increase the noise
- They can be applied at many levels (software, hardware)

• Instruction shuffler

- Prepare the code to know which instructions can be safely shuffled
- Have a shuffler unit supply instruction in random order to the processor
- Architecture independent
 - * The processor has no clue that instruction are being shuffled
 - * The shuffler know nothing of the semantic of the instruction it is shuffling
- Shuffling is an effective countermeasure

• Data independent Power consumption

- Switch from single rail (x) to communication to dualt rail $(x \text{ and } \bar{x})$
 - * Every transition comsume the same
- Add precharge to 0 or 1
 - * Constatu number of switching events, even when no logic transition

Masking idea

- Attacks based on the correlation between an attacker hypotheseis and the corresponding value of an internal signal
- Change the computation of the cryptographic algorithm to make all internal signals random
 - * The final result of the computation must be the same
 - * Apply a masl to the inputs $p'_i = f(p, m_i)$ where m_i is a random variable generated internally, f an appropriate function, and p may represent the plaintext and/or the key
 - * Internal signlas are now $s' = g(s, m_0, ..., m_n)$ and, due to the random mask $m_0, ..., m_n$, cannot be computed, for a given hypothesis, by the attacker
 - * Remove masks from the outputs $c_j = h(c'_j, m_0, \dots, m_n)$ where h is an appropriate function

- The challenge is to keep track of how the masks propagate through the algorithm and to be able to "remove" them from the final result
- For linear cryptographic algorithm we could implement boolean masking
 - * Mask the input with a random mask $m: x' = x \oplus m$
 - * Compute F(x',k) which cannot be attacked because x' is unknown (random)
 - * Compute F(m,k) which cannot be attacked because m is unknown (random)
 - * Produce the output F(x,k) as $F(x',k) \oplus F(m,k)$
- A lot of cryptographic algorithm are *linear* but not all (e.g., Subbytes in AES)
- For linear operations, it is just a question of keeping efficiently track of the masks and $making\ sure$ they do not cancel out
- Theorical security of masking against first-order DPA attack
- But one can perform second-order DPA attack

Conclusion

- Physical side channel attacks are probably the most elusive form of security threat for cryptographic devices
- There is a variety of countermeasures (both from a mathematical and from an engineering perspectives)
- Countermeasures are all quite expensive and non removes the possibility of an attack, they only
 mitigate the security threats
- It look like in practice what works best is the implementation of many simple countermeasures at once
- Today, side-channel attacks are key threat to some particular embedded products (e.g., smart card) and not yet of classic computing systems (e.g., datacenters, laptops, smartphone), but this may change