



Lab Procedure for Simulink

Inverse Kinematics

Setup

- 1. It is recommended that you review Lab 2 Application Guide before starting this lab.
- 2. Turn on the QBot Platform by pressing the power button once. To ensure the robot is ready for the lab, check the following conditions.
 - a. The LEDs on the robot base should be solid red.
 - b. The LCD should display the battery level. It is recommended that the battery level is over 12.5V.
 - c. The Logitech F710 joystick's wireless receiver is connected to the QBot Platform. Before use, always make sure the switch on top is in the X position and that the LED next to the Mode button is off.
 - d. Make sure your computer is connected to the same network that the QBot Platform is on. If using the provided router, the network should be Quanser_UVS-5G.
 - e. Test connectivity to the QBot, using the IP displayed in the robot's LCD display, enter the following command in your local computer terminal and hit enter: ping 192.168.2.x
- 3. Deploy and run gbot_platform_driver_physical on QBot Platform:
 - a. Right click on qbot_platform_driver_physical.rt-linux_qbot_platform, select "Show more options", then select "Run on target".
 - b. Change Target URI to: tcpip://192.168.2.x:17000
 - c. Change Model Arguments to -d /tmp -uri tcpip://192.168.2.x:17099
 - d. Click Run.
 - e. The QBot Platform LEDs should pulse white if the driver is deployed and running successfully.
- 4. Open the Simulink Model inv_kin.slx, as shown in Figure 1. Configure the model so that it can be deployed to the QBot Platform:
 - a. Open Hardware Settings under the Hardware ribbon in your model.
 - b. Expand and browse to Code Generation > Interface.
 - c. Change the MEX-file arguments to the following string including single quotes,

```
'-w -d /tmp -uri %u', 'tcpip://192.168.2.x:17001'
```

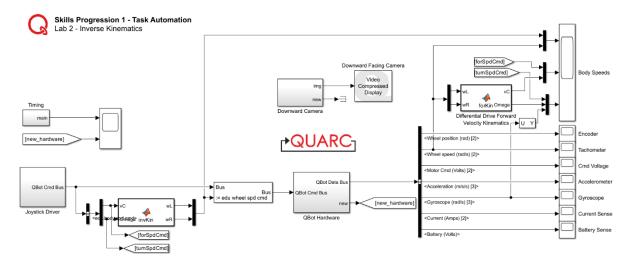


Figure 1. Inverse Kinematics Simulink Model

Inverse Kinematics Formulation

- Double click MATLAB Function block labeled forKin and verify that it is completed for you. If not, copy over the completed forward kinematics function from the previous lab.
- 2. When considering a pure forward velocity for a differential drive robot, what do you expect each wheel to do? How about when turning?
- 3. When commanding a positive turn velocity for the QBot (counterclockwise), which wheel should spin faster?
- 4. Open the **MATLAB Function** block labeled *invKin*. This function is incomplete and must be compete before use. This function should take body speeds as input and output QBot wheel speeds in rad/s.
- 5. Based on the completed forward kinematics equations, derive the inverse kinematics equations, and complete *invKin*.
- 6. Close the function, run your Simulink model, and drive the QBot around. Using the **Body speeds** scope, verify that the output from your inverse kinematics function (commanded wheel velocities) closely match those from the tachometer. Revise your function if needed.
- 7. Open the Body speeds scope. How closely do the commanded body velocities match the measured velocities through forward kinematics?
- 8. When you're satisfied with the output of your function, take a screenshot of the scope windows.
- 9. What is the key difference between this application and the drive mode in the Play lab?

- 10. What is the maximum forward or turn speed of the robot you can command? What wheel velocity command does this correspond to?
- 11. Stop the Simulink model when complete. Ensure that you save a copy of your completed files for review later.
- 12. Turn OFF the robot by single pressing the power button (do not keep it pressed until it turns off). Post shutdown, all the LEDs should be completely OFF.