

A P P E N D I X

Assemblers, Linkers, and the SPIM Simulator

James R. Larus
Computer Sciences Department
University of Wisconsin–Madison

Fear of serious injury cannot alone justify suppression of free speech and assembly.

Louis Brandeis

Whitney v. California, 1927

- **A.1** Introduction A-3
- A.2 Assemblers A-10
- A.3 Linkers A-17
- A.4 Loading A-19
- A.5 Memory Usage A-20
- **A.6** Procedure Call Convention A-22
- A.7 Exceptions and Interrupts A-32
- A.8 Input and Output A-36
- **A.9 SPIM** A-38
- A.10 MIPS R2000 Assembly Language A-49
- **A.11** Concluding Remarks A-75
- **A.12 Key Terms** A-76
- A.13 Exercises A-76

A.1

Introduction

Encoding instructions as binary numbers is natural and efficient for computers. Humans, however, have a great deal of difficulty understanding and manipulating these numbers. People read and write symbols (words) much better than long sequences of digits. Chapter 3 showed that we need not choose between numbers and words because computer instructions can be represented in many ways. Humans can write and read symbols, and computers can execute the equivalent binary numbers. This appendix describes the process by which a human-readable program is translated into a form that a computer can execute, provides a few hints about writing assembly programs, and explains how to run these programs on SPIM, a simulator that executes MIPS programs. Unix, Windows, and DOS versions of the SPIM simulator are available through www.mkp.com/cod2e.htm.



Assembly language is the symbolic representation of a computer's binary encoding—machine language. Assembly language is more readable than machine language because it uses symbols instead of bits. The symbols in assembly language name commonly occurring bit patterns, such as opcodes and register specifiers, so people can read and remember them. In addition, assembly language permits programmers to use *labels* to identify and name particular memory words that hold instructions or data.

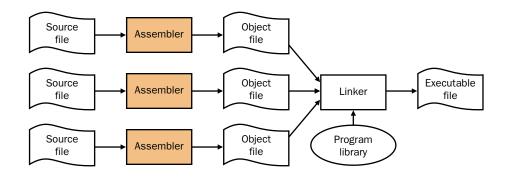


FIGURE A.1 The process that produces an executable file. An assembler translates a file of assembly language into an object file, which is linked with other files and libraries into an executable file.

A tool called an *assembler* translates assembly language into binary instructions. Assemblers provide a friendlier representation than a computer's 0s and 1s that simplifies writing and reading programs. Symbolic names for operations and locations are one facet of this representation. Another facet is programming facilities that increase a program's clarity. For example, *macros*, discussed in section A.2, enable a programmer to extend the assembly language by defining new operations.

An assembler reads a single assembly language *source file* and produces an *object file* containing machine instructions and bookkeeping information that helps combine several object files into a program. Figure A.1 illustrates how a program is built. Most programs consist of several files—also called *modules*—that are written, compiled, and assembled independently. A program may also use prewritten routines supplied in a *program library*. A module typically contains *references* to subroutines and data defined in other modules and in libraries. The code in a module cannot be executed when it contains *unresolved references* to labels in other object files or libraries. Another tool, called a *linker*, combines a collection of object and library files into an *executable file*, which a computer can run.

To see the advantage of assembly language, consider the following sequence of figures, all of which contain a short subroutine that computes and prints the sum of the squares of integers from 0 to 100. Figure A.2 shows the machine language that a MIPS computer executes. With considerable effort, you could use the opcode and instruction format tables in Chapters 3 and 4 to translate the instructions into a symbolic program similar to Figure A.3. This form of the routine is much easier to read because operations and operands are written with symbols, rather than with bit patterns. However, this assembly

A.1 Introduction A-5

```
0010011110111101111111111111100000
1010111110111111100000000000010100
101011111010010000000000000100000
101011111010010100000000000100100
1010111111010000000000000000011000
101011111010000000000000000011100
100011111010111000000000000011100
100011111011100000000000000011000
00000001110011100000000000011001
001001011100100000000000000000001
00101001000000010000000001100101
1010111110101000000000000000011100
0000000000000000111100000010010
000000110000111111100100000100001
000101000010000011111111111111111
101011111011100100000000000011000
100011111010010100000000000011000
00001100000100000000000011101100
00100100100001000000010000110000
1000111110111111100000000000010100
001001111011110100000000000100000
0000000000000000000100000100001
```

FIGURE A.2 MIPS machine language code for a routine to compute and print the sum of the squares of integers between 0 and 100.

language is still difficult to follow because memory locations are named by their address, rather than by a symbolic label.

Figure A.4 shows assembly language that labels memory addresses with mnemonic names. Most programmers prefer to read and write this form. Names that begin with a period, for example .data and .globl, are assembler directives that tell the assembler how to translate a program but do not produce machine instructions. Names followed by a colon, such as str or main, are labels that name the next memory location. This program is as readable as most assembly language programs (except for a glaring lack of comments), but it is still difficult to follow because many simple operations are required to accomplish simple tasks and because assembly language's lack of control flow constructs provides few hints about the program's operation.

By contrast, the C routine in Figure A.5 is both shorter and clearer since variables have mnemonic names and the loop is explicit rather than constructed with branches. (If you are unfamiliar with C, you may wish to look at Web Extension II at www.mkp.com/cod2e.htm.) In fact, the C routine is the only one that we wrote. The other forms of the program were produced by a C compiler and assembler.



```
addiu $29, $29, -32
       $31, 20($29)
SW
       $4, 32($29)
       $5, 36($29)
       $0, 24($29)
SW
       $0, 28($29)
SW
       $14, 28($29)
       $24, 24($29)
1 w
multu $14, $14
addiu $8, $14, 1
slti
       $1. $8. 101
       $8. 28($29)
SW
mflo
       $15
       $25, $24, $15
addu
       $1, $0, -9
bne
       $25, 24($29)
SW
       $4, 4096
lui
       $5, 24($29)
1 w
       1048812
jal
addiu $4. $4. 1072
       $31, 20($29)
addiu
      $29, $29, 32
jr
       $31
       $2,
            $0
move
```

FIGURE A.3 The same routine written in assembly language. However, the code for the routine does not label registers or memory locations nor include comments.

In general, assembly language plays two roles (see Figure A.6). The first role is the output language of compilers. A *compiler* translates a program written in a *high-level language* (such as C or Pascal) into an equivalent program in machine or assembly language. The high-level language is called the *source language*, and the compiler's output is its *target language*.

Assembly language's other role is as a language in which to write programs. This role used to be the dominant one. Today, however, because of larger main memories and better compilers, most programmers write in a high-level language and rarely, if ever, see the instructions that a computer executes. Nevertheless, assembly language is still important to write programs in which speed or size are critical or to exploit hardware features that have no analogues in high-level languages.



Although this appendix focuses on MIPS assembly language, assembly programming on most other machines is very similar. The additional instructions and address modes in CISC machines, such as the VAX (see Web Extension III at www.mkp.com/cod2e.htm), can make assembly programs shorter but do not change the process of assembling a program or provide assembly language with the advantages of high-level languages such as type-checking and structured control flow.

A.1 Introduction A-7

```
.text
       .align
                2
       .globl
               main
main:
       subu
                $sp, $sp, 32
                $ra, 20($sp)
       SW
       sd
                $a0, 32($sp)
                $0, 24($sp)
$0, 28($sp)
       SW
       SW
loop:
       ٦w
                $t6, 28($sp)
      mu1
                $t7, $t6, $t6
                $t8, 24($sp)
       ٦w
       addu
                $t9, $t8, $t7
                $t9, 24($sp)
       SW
       addu
                $t0, $t6, 1
                $t0, 28($sp)
       SW
       ble
                $t0, 100, loop
       1 a
                $a0, str
       ٦w
                $a1, 24($sp)
                printf
       .ial
                $v0, $0
      move
       ٦w
                $ra, 20($sp)
       addu
                $sp, $sp, 32
                $ra
       .ir
       .data
       .align 0
str:
       .asciiz "The sum from 0 .. 100 is %d\n"
```

FIGURE A.4 The same routine written in assembly language with labels, but no comments. The commands that start with periods are assembler directives (see pages A-51–A-53). .text indicates that succeeding lines contain instructions. .data indicates that they contain data. .align n indicates that the items on the succeeding lines should be aligned on a 2" byte boundary. Hence, .align 2 means the next item should be on a word boundary. .globl main declares that main is a global symbol that should be visible to code stored in other files. Finally, .asciiz stores a null-terminated string in memory.

When to Use Assembly Language

The primary reason to program in assembly language, as opposed to an available high-level language, is that the speed or size of a program is critically important. For example, consider a computer that controls a piece of machinery, such as a car's brakes. A computer that is incorporated in another device, such as a car, is called an *embedded computer*. This type of computer needs to respond rapidly and predictably to events in the outside world. Because a

```
#include <stdio.h>
int
main (int argc, char *argv[])
{
    int i;
    int sum = 0;

    for (i = 0; i <= 100; i = i + 1) sum = sum + i * i;
    printf ("The sum from 0 .. 100 is %d\n", sum);
}

High-level language program

Assembly language program

Assembly language program</pre>
```

FIGURE A.6 Assembly language either is written by a programmer or is the output of a compiler.

compiler introduces uncertainty about the time cost of operations, programmers may find it difficult to ensure that a high-level language program responds within a definite time interval—say, 1 millisecond after a sensor detects that a tire is skidding. An assembly language programmer, on the other hand, has tight control over which instructions execute. In addition, in embedded applications, reducing a program's size, so that it fits in fewer memory chips, reduces the cost of the embedded computer.

A hybrid approach, in which most of a program is written in a high-level language and time-critical sections are written in assembly language, builds on the strengths of both languages. Programs typically spend most of their time executing a small fraction of the program's source code. This observation is just the principle of locality that underlies caches (see section 7.2 in Chapter 7).

Program profiling measures where a program spends its time and can find the time-critical parts of a program. In many cases, this portion of the program can be made faster with better data structures or algorithms. Sometimes, howA.1 Introduction A-9

ever, significant performance improvements only come from recoding a critical portion of a program in assembly language.

This improvement is not necessarily an indication that the high-level language's compiler has failed. Compilers typically are better than programmers at producing uniformly high-quality machine code across an entire program. Programmers, however, understand a program's algorithms and behavior at a deeper level than a compiler and can expend considerable effort and ingenuity improving small sections of the program. In particular, programmers often consider several procedures simultaneously while writing their code. Compilers typically compile each procedure in isolation and must follow strict conventions governing the use of registers at procedure boundaries. By retaining commonly used values in registers, even across procedure boundaries, programmers can make a program run faster.

Another major advantage of assembly language is the ability to exploit specialized instructions, for example, string copy or pattern-matching instructions. Compilers, in most cases, cannot determine that a program loop can be replaced by a single instruction. However, the programmer who wrote the loop can replace it easily with a single instruction.

In the future, a programmer's advantage over a compiler is likely to become increasingly difficult to maintain as compilation techniques improve and machines' pipelines increase in complexity (Chapter 6).

The final reason to use assembly language is that no high-level language is available on a particular computer. Many older or specialized computers do not have a compiler, so a programmer's only alternative is assembly language.

Drawbacks of Assembly Language

Assembly language has many disadvantages that strongly argue against its widespread use. Perhaps its major disadvantage is that programs written in assembly language are inherently machine-specific and must be totally rewritten to run on another computer architecture. The rapid evolution of computers discussed in Chapter 1 means that architectures become obsolete. An assembly language program remains tightly bound to its original architecture, even after the computer is eclipsed by new, faster, and more cost-effective machines.

Another disadvantage is that assembly language programs are longer than the equivalent programs written in a high-level language. For example, the C program in Figure A.5 is 11 lines long, while the assembly program in Figure A.4 is 31 lines long. In more complex programs, the ratio of assembly to high-level language (its *expansion factor*) can be much larger than the factor of three in this example. Unfortunately, empirical studies have shown that programmers write roughly the same number of lines of code per day in assembly as in high-level languages. This means that programmers are roughly *x* times

more productive in a high-level language, where x is the assembly language expansion factor.

To compound the problem, longer programs are more difficult to read and understand and they contain more bugs. Assembly language exacerbates the problem because of its complete lack of structure. Common programming idioms, such as *if-then* statements and loops, must be built from branches and jumps. The resulting programs are hard to read because the reader must reconstruct every higher-level construct from its pieces and each instance of a statement may be slightly different. For example, look at Figure A.4 and answer these questions: What type of loop is used? What are its lower and upper bounds?

Elaboration: Compilers can produce machine language directly instead of relying on an assembler. These compilers typically execute much faster than those that invoke an assembler as part of compilation. However, a compiler that generates machine language must perform many tasks that an assembler normally handles, such as resolving addresses and encoding instructions as binary numbers. The trade-off is between compilation speed and compiler simplicity.

Elaboration: Despite these considerations, some embedded applications are written in a high-level language. Many of these applications are large and complex programs that must be extremely reliable. Assembly language programs are longer and more difficult to write and read than high-level language programs. This greatly increases the cost of writing an assembly language program and makes it extremely difficult to verify the correctness of this type of program. In fact, these considerations led the Department of Defense, which pays for many complex embedded systems, to develop Ada, a new high-level language for writing embedded systems.

A.2

Assemblers

An assembler translates a file of assembly language statements into a file of binary machine instructions and binary data. The translation process has two major parts. The first step is to find memory locations with labels so the relationship between symbolic names and addresses is known when instructions are translated. The second step is to translate each assembly statement by combining the numeric equivalents of opcodes, register specifiers, and labels into a legal instruction. As shown in Figure A.1, the assembler produces an

A.2 Assemblers A-11

output file, called an *object file*, which contains the machine instructions, data, and bookkeeping information.

An object file typically cannot be executed because it references procedures or data in other files. A label is *external* (also called *global*) if the labeled object can be referenced from files other than the one in which it is defined. A label is *local* if the object can be used only within the file in which it is defined. In most assemblers, labels are local by default and must be explicitly declared global. Subroutines and global variables require external labels since they are referenced from many files in a program. Local labels hide names that should not be visible to other modules—for example, static functions in C, which can only be called by other functions in the same file. In addition, compiler-generated names—for example, a name for the instruction at the beginning of a loop—are local so the compiler need not produce unique names in every file.

Local and Global Labels

Example

Consider the program in Figure A.4 on page A-7. The subroutine has an external (global) label main. It also contains two local labels—loop and str—that are only visible with this assembly language file. Finally, the routine also contains an unresolved reference to an external label printf, which is the library routine that prints values. Which labels in Figure A.4 could be referenced from another file?

Answer

Only global labels are visible outside of a file, so the only label that could be referenced from another file is main.

Since the assembler processes each file in a program individually and in isolation, it only knows the addresses of local labels. The assembler depends on another tool, the linker, to combine a collection of object files and libraries into an executable file by resolving external labels. The assembler assists the linker by providing lists of labels and unresolved references.

However, even local labels present an interesting challenge to an assembler. Unlike names in most high-level languages, assembly labels may be used before they are defined. In the example, in Figure A.4, the label str is used by the la instruction before it is defined. The possibility of a *forward reference*, like this one, forces an assembler to translate a program in two steps: first find all labels and then produce instructions. In the example, when the assembler sees the la instruction, it does not know where the word labeled str is located or even whether str labels an instruction or datum.

An assembler's first pass reads each line of an assembly file and breaks it into its component pieces. These pieces, which are called *lexemes*, are individual words, numbers, and punctuation characters. For example, the line

```
ble $t0, 100, loop
```

contains 6 lexemes: the opcode ble, the register specifier \$t0, a comma, the number 100, a comma, and the symbol loop.

If a line begins with a label, the assembler records in its *symbol table* the name of the label and the address of the memory word that the instruction occupies. The assembler then calculates how many words of memory the instruction on the current line will occupy. By keeping track of the instructions' sizes, the assembler can determine where the next instruction goes. To compute the size of a variable-length instruction, like those on the VAX, an assembler has to examine it in detail. Fixed-length instructions, like those on MIPS, on the other hand, require only a cursory examination. The assembler performs a similar calculation to compute the space required for data statements. When the assembler reaches the end of an assembly file, the symbol table records the location of each label defined in the file.

The assembler uses the information in the symbol table during a second pass over the file, which actually produces machine code. The assembler again examines each line in the file. If the line contains an instruction, the assembler combines the binary representations of its opcode and operands (register specifiers or memory address) into a legal instruction. The process is similar to the one used in section 3.4 in Chapter 3. Instructions and data words that reference an external symbol defined in another file cannot be completely assembled (they are unresolved) since the symbol's address is not in the symbol table. An assembler does not complain about unresolved references since the corresponding label is likely to be defined in another file.

The Big Picture

Assembly language is a programming language. Its principal difference from high-level languages such as BASIC, Java, and C is that assembly language provides only a few, simple types of data and control flow. Assembly language programs do not specify the type of value held in a variable. Instead, a program-

mer must apply the appropriate operations (e.g., integer or floating-point addition) to a value. In addition, in assembly language, programs must implement all control flow with *go tos*. Both factors make assembly language programming for any machine—MIPS or 80x86—more difficult and error-prone than writing in a high-level language.

A.2 Assemblers A-13

Elaboration: If an assembler's speed is important, this two-step process can be done in one pass over the assembly file with a technique known as *backpatching*. In its pass over the file, the assembler builds a (possibly incomplete) binary representation of every instruction. If the instruction references a label that has not yet been defined, the assembler records the label and instruction in a table. When a label is defined, the assembler consults this table to find all instructions that contain a forward reference to the label. The assembler goes back and corrects their binary representation to incorporate the address of the label. Backpatching speeds assembly because the assembler only reads its input once. However, it requires an assembler to hold the entire binary representation of a program in memory so instructions can be backpatched. This requirement can limit the size of programs that can be assembled.

Object File Format

Assemblers produce object files. An object file on Unix contains six distinct sections (see Figure A.7):

- The *object file header* describes the size and position of the other pieces of the file
- The *text segment* contains the machine language code for routines in the source file. These routines may be unexecutable because of unresolved references.
- The *data segment* contains a binary representation of the data in the source file. The data also may be incomplete because of unresolved references to labels in other files.
- The *relocation information* identifies instructions and data words that depend on absolute addresses. These references must change if portions of the program are moved in memory.
- The *symbol table* associates addresses with external labels in the source file and lists unresolved references.
- The *debugging information* contains a concise description of the way in which the program was compiled, so a debugger can find which instruction addresses correspond to lines in a source file and print the data structures in readable form.

Object file header	Text segment	Data segment	Relocation information	Symbol table	Debugging information
-----------------------	-----------------	-----------------	------------------------	-----------------	-----------------------

FIGURE A.7 Object file. A Unix assembler produces an object file with six distinct sections.

The assembler produces an object file that contains a binary representation of the program and data and additional information to help link pieces of a program. This relocation information is necessary because the assembler does not know which memory locations a procedure or piece of data will occupy after it is linked with the rest of the program. Procedures and data from a file are stored in a contiguous piece of memory, but the assembler does not know where this memory will be located. The assembler also passes some symbol table entries to the linker. In particular, the assembler must record which external symbols are defined in a file and what unresolved references occur in a file.

Elaboration: For convenience, assemblers assume each file starts at the same address (for example, location 0) with the expectation that the linker will *relocate* the code and data when they are assigned locations in memory. The assembler produces *relocation information*, which contains an entry describing each instruction or data word in the file that references an absolute address. On MIPS, only the subroutine call, load, and store instructions reference absolute addresses. Instructions that use PC-relative addressing, such as branches, need not be relocated.

Additional Facilities

Assemblers provide a variety of convenience features that help make assembler programs short and easier to write, but do not fundamentally change assembly language. For example, *data layout directives* allow a programmer to describe data in a more concise and natural manner than its binary representation.

```
In Figure A.4, the directive
```

```
.asciiz "The sum from 0 .. 100 is %d\n"
```

stores characters from the string in memory. Contrast this line with the alternative of writing each character as its ASCII value (Figure 3.15 in Chapter 3 describes the ASCII encoding for characters):

```
.byte 84, 104, 101, 32, 115, 117, 109, 32
.byte 102, 114, 111, 109, 32, 48, 32, 46
.byte 46, 32, 49, 48, 48, 32, 105, 115
.byte 32, 37, 100, 10, 0
```

The .asciiz directive is easier to read because it represents characters as letters, not binary numbers. An assembler can translate characters to their binary representation much faster and more accurately than a human. Data layout directives specify data in a human-readable form that the assembler translates to binary. Other layout directives are described in section A.10 on pages A-51–A-53.

A.2 Assemblers A-15

String Directive

Example

Define the sequence of bytes produced by this directive:

```
.asciiz "The quick brown fox jumps over the lazy dog"
```

Answer

```
.byte 84, 104, 101, 32, 113, 117, 105, 99
.byte 107, 32, 98, 114, 111, 119, 110, 32
.byte 102, 111, 120, 32, 106, 117, 109, 112
.byte 115, 32, 111, 118, 101, 114, 32, 116
.byte 104, 101, 32, 108, 97, 122, 121, 32
.byte 100, 111, 103, 0
```

Macros are a pattern-matching and replacement facility that provide a simple mechanism to name a frequently used sequence of instructions. Instead of repeatedly typing the same instructions every time they are used, a programmer invokes the macro and the assembler replaces the macro call with the corresponding sequence of instructions. Macros, like subroutines, permit a programmer to create and name a new abstraction for a common operation. Unlike subroutines, however, macros do not cause a subroutine call and return when the program runs since a macro call is replaced by the macro's body when the program is assembled. After this replacement, the resulting assembly is indistinguishable from the equivalent program written without macros.

Macros

Example

As an example, suppose that a programmer needs to print many numbers. The library routine printf accepts a format string and one or more values to print as its arguments. A programmer could print the integer in register \$7 with the following instructions:

The .data directive tells the assembler to store the string in the program's data segment, and the .text directive tells the assembler to store the instructions in its text segment.

However, printing many numbers in this fashion is tedious and produces a verbose program that is difficult to understand. An alternative is to introduce a macro, print_int, to print an integer:

```
.data
int_str:.asciiz "%d"
        .text
        .macro
               print_int($arg)
                 $aO, int_str # Load string address into
                              # first arg
        mov
                 $a1, $arg
                             # Load macro's parameter
                              # ($arg) into second arg
                 printf
                              # Call the printf routine
        jal
        .end_macro
print_int($7)
```

The macro has a *formal parameter*, \$arg, that names the argument to the macro. When the macro is expanded, the argument from a call is substituted for the formal parameter throughout the macro's body. Then the assembler replaces the call with the macro's newly expanded body. In the first call on print_int, the argument is \$7, so the macro expands to the code

```
la $a0, int_str
mov $a1, $7
jal printf
```

In a second call on print_int, say, print_int(\$t0), the argument is \$t0, so the macro expands to

```
la $a0, int_str
mov $a1, $t0
jal printf
```

What does the call print_int(\$a0) expand to?

Answer

```
la $a0, int_str
mov $a1, $a0
jal printf
```

This example illustrates a drawback of macros. A programmer who uses this macro must be aware that print_int uses register \$a0 and so cannot correctly print the value in that register.

A.3 Linkers A-17

Hardware Software Interface Some assemblers also implement *pseudoinstructions*, which are instructions provided by an assembler but not implemented in hardware. Chapter 3 contains many examples of how the MIPS assembler synthesizes pseudoinstructions and addressing modes from the spartan MIPS hardware instruction set. For example, section 3.5 in Chapter 3 describes how the assembler synthesizes the blt instruction

from two other instructions: slt and bne. By extending the instruction set, the MIPS assembler makes assembly language programming easier without complicating the hardware. Many pseudoinstructions could also be simulated with macros, but the MIPS assembler can generate better code for these instructions because it can use a dedicated register (\$at) and is able to optimize the generated code.

Elaboration: Assemblers *conditionally assemble* pieces of code, which permits a programmer to include or exclude groups of instructions when a program is assembled. This feature is particularly useful when several versions of a program differ by a small amount. Rather than keep these programs in separate files—which greatly complicates fixing bugs in the common code—programmers typically merge the versions into a single file. Code particular to one version is conditionally assembled, so it can be excluded when other versions of the program are assembled.

If macros and conditional assembly are useful, why do assemblers for Unix systems rarely, if ever, provide them? One reason is that most programmers on these systems write programs in higher-level languages like C. Most of the assembly code is produced by compilers, which find it more convenient to repeat code rather than define macros. Another reason is that other tools on Unix—such as cpp, the C preprocessor, or m4, a general macro processor—can provide macros and conditional assembly for assembly language programs.

A.3

Linkers

Separate compilation permits a program to be split into pieces that are stored in different files. Each file contains a logically related collection of subroutines and data structures that form a *module* in a larger program. A file can be compiled and assembled independently of other files, so changes to one module do not require recompiling the entire program. As we discussed above, separate compilation necessitates the additional step of linking to combine object files from separate modules and fix their unresolved references.

The tool that merges these files is the *linker* (see Figure A.8). It performs three tasks:

- Searches the program libraries to find library routines used by the program
- Determines the memory locations that code from each module will occupy and relocates its instructions by adjusting absolute references
- Resolves references among files

A linker's first task is to ensure that a program contains no undefined labels. The linker matches the external symbols and unresolved references from a program's files. An external symbol in one file resolves a reference from another file if both refer to a label with the same name. Unmatched references mean a symbol was used, but not defined anywhere in the program.

Unresolved references at this stage in the linking process do not necessarily mean a programmer made a mistake. The program could have referenced a library routine whose code was not in the object files passed to the linker. After matching symbols in the program, the linker searches the system's program libraries to find predefined subroutines and data structures that the program

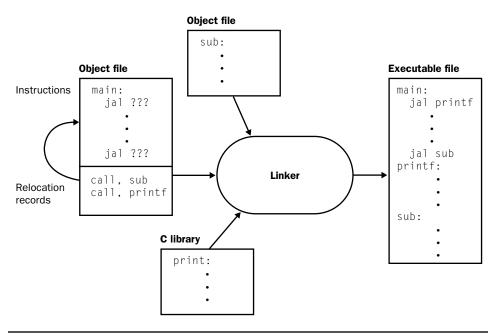


FIGURE A.8 The linker searches a collection of object files and program libraries to find nonlocal routines used in a program, combines them into a single executable file, and resolves references between routines in different files.

A.4 Loading A-19

references. The basic libraries contain routines that read and write data, allocate and deallocate memory, and perform numeric operations. Other libraries contain routines to access a database or manipulate terminal windows. A program that references an unresolved symbol that is not in any library is erroneous and cannot be linked. When the program uses a library routine, the linker extracts the routine's code from the library and incorporates it into the program text segment. This new routine, in turn, may depend on other library routines, so the linker continues to fetch other library routines until no external references are unresolved or a routine cannot be found.

If all external references are resolved, the linker next determines the memory locations that each module will occupy. Since the files were assembled in isolation, the assembler could not know where a module's instructions or data will be placed relative to other modules. When the linker places a module in memory, all absolute references must be *relocated* to reflect its true location. Since the linker has relocation information that identifies all relocatable references, it can efficiently find and backpatch these references.

The linker produces an executable file that can run on a computer. Typically, this file has the same format as an object file, except that it contains no unresolved references or relocation information.

A.4

Loading

A program that links without an error can be run. Before being run, the program resides in a file on secondary storage, such as a disk. On Unix systems, the operating system kernel brings a program into memory and starts it running. To start a program, the operating system performs the following steps:

- 1. Reads the executable file's header to determine the size of the text and data segments.
- 2. Creates a new address space for the program. This address space is large enough to hold the text and data segments, along with a stack segment (see section A.5).
- 3. Copies instructions and data from the executable file into the new address space.
- 4. Copies arguments passed to the program onto the stack.
- 5. Initializes the machine registers. In general, most registers are cleared, but the stack pointer must be assigned the address of the first free stack location (see section A.5).

6. Jumps to a start-up routine that copies the program's arguments from the stack to registers and calls the program's main routine. If the main routine returns, the start-up routine terminates the program with the exit system call.

A.5

Memory Usage

The next few sections elaborate the description of the MIPS architecture presented earlier in the book. Earlier chapters focused primarily on hardware and its relationship with low-level software. These sections focus primarily on how assembly language programmers use MIPS hardware. These sections describe a set of conventions followed on many MIPS systems. For the most part, the hardware does not impose these conventions. Instead, they represent an agreement among programmers to follow the same set of rules so that software written by different people can work together and make effective use of MIPS hardware.

Systems based on MIPS processors typically divide memory into three parts (see Figure A.9). The first part, near the bottom of the address space (starting at address 400000_{hex}), is the *text segment*, which holds the program's instructions.

The second part, above the text segment, is the *data segment*, which is further divided into two parts. *Static data* (starting at address 10000000_{hex}) contains objects whose size is known to the compiler and whose lifetime—the interval during which a program can access them—is the program's entire execution. For example, in C, global variables are statically allocated since they can be referenced anytime during a program's execution. The linker both assigns static objects to locations in the data segment and resolves references to these objects.

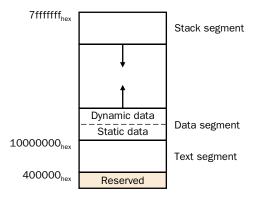


FIGURE A.9 Layout of memory.

Immediately above static data is *dynamic data*. This data, as its name implies, is allocated by the program as it executes. In C programs, the malloc library routine finds and returns a new block of memory. Since a compiler cannot predict how much memory a program will allocate, the operating system expands the dynamic data area to meet demand. As the upward arrow in the figure indicates, malloc expands the dynamic area with the sbrk system call, which causes the operating system to add more pages to the program's virtual address space (see section 7.3 in Chapter 7) immediately above the dynamic data segment.

The third part, the program stack segment, resides at the top of the virtual address space (starting at address $7fffffff_{hex}$). Like dynamic data, the maximum size of a program's stack is not known in advance. As the program pushes values on the stack, the operating system expands the stack segment down, towards the data segment.

This three-part division of memory is not the only possible one. However, it has two important characteristics: the two dynamically expandable segments are as far apart as possible, and they can grow to use a program's entire address space.

Hardware Software Interface

Because the data segment begins far above the program at address 10000000_{hex} , load and store instructions cannot directly reference data objects with their 16-bit offset fields (see section 3.4 in Chapter 3). For example, to load the word in the data segment at address 10010020_{hex} into register $\$ \lor 0$ requires two instructions:

```
lui $s0, 0x1001 \# 0x1001 means 1001 base 16
lw $v0, 0x0020(\$s0) \# 0x10010000 + 0x0020 = 0x10010020
```

(The 0x before a number means that it is a hexadecimal value. For example, 0×8000 is 8000_{hex} or $32,768_{ten}$.)

To avoid repeating the <code>lui</code> instruction at every load and store, MIPS systems typically dedicate a register (<code>\$gp</code>) as a <code>global pointer</code> to the static data segment. This register contains address 10008000_{hex} , so load and store instructions can use their signed 16-bit offset fields to access the first 64 KB of the static data segment. With this global pointer, we can rewrite the example as a single instruction:

```
1w $v0, 0x8020($gp)
```

Of course, a global pointer register makes addressing locations $10000000_{\rm hex}$ – $10010000_{\rm hex}$ faster than other heap locations. The MIPS compiler usually stores *global variables* in this area because these variables have fixed locations and fit better than other global data, such as arrays.

A.6

Procedure Call Convention

Conventions governing the use of registers are necessary when procedures in a program are compiled separately. To compile a particular procedure, a compiler must know which registers it may use and which registers are reserved for other procedures. Rules for using registers are called *register use* or *procedure call conventions*. As the name implies, these rules are, for the most part, conventions followed by software rather than rules enforced by hardware. However, most compilers and programmers try very hard to follow these conventions because violating them causes insidious bugs.

The calling convention described in this section is the one used by the gcc compiler. The native MIPS compiler uses a more complex convention that is slightly faster.

The MIPS CPU contains 32 general-purpose registers that are numbered 0–31. Register \$0 always contains the hardwired value 0.

- Registers \$at (1), \$k0 (26), and \$k1 (27) are reserved for the assembler and operating system and should not be used by user programs or compilers.
- Registers \$a0-\$a3 (4-7) are used to pass the first four arguments to routines (remaining arguments are passed on the stack). Registers \$v0 and \$v1 (2, 3) are used to return values from functions.
- Registers \$t0-\$t9 (8-15, 24, 25) are caller-saved registers that are used to hold temporary quantities that need not be preserved across calls (see section 3.6 in Chapter 3).
- Registers \$\$0-\$\$7 (16-23) are callee-saved registers that hold long-lived values that should be preserved across calls.
- Register \$gp (28) is a global pointer that points to the middle of a 64K block of memory in the static data segment.
- Register \$sp (29) is the stack pointer, which points to the last location on the stack. Register \$fp (30) is the frame pointer. The jal instruction writes register \$ra (31), the return address from a procedure call. These two registers are explained in the next section.

The two-letter abbreviations and names for these registers—for example \$sp for the stack pointer—reflect the registers' intended uses in the procedure call convention. In describing this convention, we will use the names instead of register numbers. Figure A.10 lists the registers and describes their intended uses.

Register name	Number	Usage	
\$zero	0	constant 0	
\$at	1	reserved for assembler	
\$v0	2	expression evaluation and results of a function	
\$v1	3	expression evaluation and results of a function	
\$a0	4	argument 1	
\$a1	5	argument 2	
\$a2	6	argument 3	
\$a3	7	argument 4	
\$t0	8	temporary (not preserved across call)	
\$t1	9	temporary (not preserved across call)	
\$t2	10	temporary (not preserved across call)	
\$t3	11	temporary (not preserved across call)	
\$t4	12	temporary (not preserved across call)	
\$t5	13	temporary (not preserved across call)	
\$t6	14	temporary (not preserved across call)	
\$t7	15	temporary (not preserved across call)	
\$s0	16	saved temporary (preserved across call)	
\$s1	17	saved temporary (preserved across call)	
\$s2	18	saved temporary (preserved across call)	
\$s3	19	saved temporary (preserved across call)	
\$s4	20	saved temporary (preserved across call)	
\$s5	21	saved temporary (preserved across call)	
\$s6	22	saved temporary (preserved across call)	
\$s7	23	saved temporary (preserved across call)	
\$t8	24	temporary (not preserved across call)	
\$t9	25	temporary (not preserved across call)	
\$k0	26	reserved for OS kernel	
\$k1	27	reserved for OS kernel	
\$gp	28	pointer to global area	
\$sp	29	stack pointer	
\$fp	30	frame pointer	
\$ra	31	return address (used by function call)	

FIGURE A.10 MIPS registers and usage convention.

Procedure Calls

This section describes the steps that occur when one procedure (the *caller*) invokes another procedure (the *callee*). Programmers who write in a high-level language (like C or Pascal) never see the details of how one procedure calls another because the compiler takes care of this low-level bookkeeping. However, assembly language programmers must explicitly implement every procedure call and return.

Most of the bookkeeping associated with a call is centered around a block of memory called a *procedure call frame*. This memory is used for a variety of purposes:

- To hold values passed to a procedure as arguments
- To save registers that a procedure may modify, but which the procedure's caller does not want changed
- To provide space for variables local to a procedure

In most programming languages, procedure calls and returns follow a strict last-in, first-out (LIFO) order, so this memory can be allocated and deallocated on a stack, which is why these blocks of memory are sometimes called *stack frames*.

Figure A.11 shows a typical stack frame. The frame consists of the memory between the frame pointer (\$fp), which points to the first word of the frame, and the stack pointer (\$sp), which points to the last word of the frame. The stack grows down from higher memory addresses, so the frame pointer points above the stack pointer. The executing procedure uses the frame pointer to quickly access values in its stack frame. For example, an argument in the stack frame can be loaded into register \$v0\$ with the instruction

```
1w $v0, 0($fp)
```

A stack frame may be built in many different ways; however, the caller and callee must agree on the sequence of steps. The steps below describe the calling convention used on most MIPS machines. This convention comes into play at three points during a procedure call: immediately before the caller invokes the callee, just as the callee starts executing, and immediately before the callee returns to the caller. In the first part, the caller puts the procedure call arguments in standard places and invokes the callee to do the following:

- 1. Pass arguments. By convention, the first four arguments are passed in registers \$a0-\$a3. Any remaining arguments are pushed on the stack and appear at the beginning of the called procedure's stack frame.
- 2. Save caller-saved registers. The called procedure can use these registers (\$a0-\$a3 and \$t0-\$t9) without first saving their value. If the caller expects to use one of these registers after a call, it must save its value before the call.
- 3. Execute a jal instruction (see section 3.6 of Chapter 3), which jumps to the callee's first instruction and saves the return address in register \$ra.

Before a called routine starts running, it must take the following steps to set up its stack frame:

1. Allocate memory for the frame by subtracting the frame's size from the stack pointer.

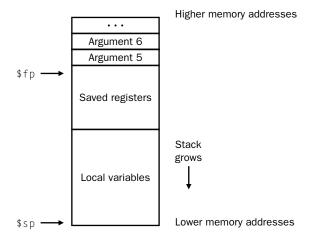


FIGURE A.11 Layout of a stack frame. The frame pointer (\$fp) points to the first word in the currently executing procedure's stack frame. The stack pointer (\$sp) points to the last word of frame. The first four arguments are passed in registers, so the fifth argument is the first one stored on the stack.

- 2. Save callee-saved registers in the frame. A callee must save the values in these registers (\$\$0-\$\$7, \$fp, and \$ra) before altering them since the caller expects to find these registers unchanged after the call. Register \$fp is saved by every procedure that allocates a new stack frame. However, register \$ra only needs to be saved if the callee itself makes a call. The other callee-saved registers that are used also must be saved.
- 3. Establish the frame pointer by adding the stack frame's size minus four to \$sp and storing the sum in register \$fp.

Hardware Software Interface The MIPS register use convention provides callee- and caller-saved registers because both types of registers are advantageous in different circumstances. Callee-saved registers are better used to hold long-lived values, such as variables from a user's program. These registers are only saved during a procedure call if the callee expects to use the register. On the other hand, caller-saved registers are better used

to hold short-lived quantities that do not persist across a call, such as immediate values in an address calculation. During a call, the callee can also use these registers for short-lived temporaries.

Finally, the callee returns to the caller by executing the following steps:

- 1. If the callee is a function that returns a value, place the returned value in register \$ v 0.
- 2. Restore all callee-saved registers that were saved upon procedure entry.
- 3. Pop the stack frame by adding the frame size to \$sp.
- 4. Return by jumping to the address in register \$ra.

Elaboration: A programming language that does not permit *recursive* procedures—procedures that call themselves either directly or indirectly through a chain of calls—need not allocate frames on a stack. In a nonrecursive language, each procedure's frame may be statically allocated since only one invocation of a procedure can be active at a time. Older versions of Fortran prohibited recursion because statically allocated frames produced faster code on some older machines. However, on load-store architectures like MIPS, stack frames may be just as fast because a frame pointer register points directly to the active stack frame, which permits a single load or store instruction to access values in the frame. In addition, recursion is a valuable programming technique.

Procedure Call Example

As an example, consider the C routine

```
main ()
{
    printf ("The factorial of 10 is %d\n", fact (10));
}
int fact (int n)
{
    if (n < 1)
        return (1);
    else
        return (n * fact (n - 1));
}</pre>
```

which computes and prints 10! (the factorial of 10, $10! = 10 \times 9 \times ... \times 1$). fact is a recursive routine that computes n! by multiplying n times (n-1)!. The assembly code for this routine illustrates how programs manipulate stack frames.

Upon entry, the routine main creates its stack frame and saves the two callee-saved registers it will modify: \$fp and \$ra. The frame is larger than required for these two registers because the calling convention requires the minimum size of a stack frame to be 24 bytes. This minimum frame can hold four

argument registers (\$a0-\$a3) and the return address \$ra, padded to a double-word boundary (24 bytes). Since main also needs to save \$fp, its stack frame must be two words larger (remember: the stack pointer is kept doubleword aligned).

The routine main then calls the factorial routine and passes it the single argument 10. After fact returns, main calls the library routine printf and passes it both a format string and the result returned from fact:

Finally, after printing the factorial, main returns. But first, it must restore the registers it saved and pop its stack frame:

```
1 w
                $ra,20($sp)
                                # Restore return address
     1 w
                $fp,16($sp)
                                # Restore frame pointer
     addiu
                $sp,$sp,32
                                # Pop stack frame
     jr
                $ra
                                # Return to caller
      .rdata
$LC:
                "The factorial of 10 is %d\n\000"
      .ascii
```

The factorial routine is similar in structure to main. First, it creates a stack frame and saves the callee-saved registers it will use. In addition to saving \$ra and \$fp, fact also saves its argument (\$a0), which it will use for the recursive call:

```
.text
fact:
     subu
                               # Stack frame is 32 bytes long
               $sp,$sp,32
               $ra,20($sp)
                               # Save return address
     SW
     SW
               $fp,16($sp)
                               # Save frame pointer
               $fp,$sp,28
                               # Set up frame pointer
     addiu
     SW
               $a0,0($fp)
                               # Save argument (n)
```

The heart of the fact routine performs the computation from the C program. It tests if the argument is greater than 0. If not, the routine returns the value 1. If the argument is greater than 0, the routine recursively calls itself to compute fact(n-1) and multiplies that value times n:

```
$v0,0($fp)
     ٦w
                                # Load n
                                \# Branch if n > 0
     batz
                $v0.$L2
     lί
                $v0,1
                                # Return 1
     jr
                $L1
                                # Jump to code to return
$L2:
     1 w
                $v1,0($fp)
                                # Load n
                $v0,$v1,1
     subu
                                # Compute n - 1
                                # Move value to $a0
     move
                $a0,$v0
     jal
                fact
                                # Call factorial function
     ٦w
                $v1,0($fp)
                                # Load n
     mu1
                $v0,$v0,$v1
                                \# Compute fact(n-1) * n
```

Finally, the factorial routine restores the callee-saved registers and returns the value in register \$v0:

Stack in Recursive Procedure

Example

Figure A.12 shows the stack at the call fact(7). main runs first, so its frame is deepest on the stack. main calls fact(10), whose stack frame is next on the stack. Each invocation recursively invokes fact to compute the next-lowest factorial. The stack frames parallel the LIFO order of these calls. What does the stack look like when the call to fact(10) returns?


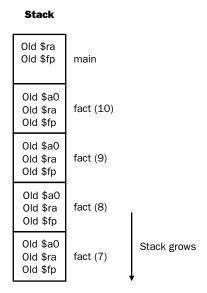


FIGURE A.12 Stack frames during the call of fact(7).

Answer

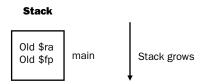

Elaboration: The difference between the MIPS compiler and the gcc compiler is that the MIPS compiler usually does not use a frame pointer, so this register is available as another callee-saved register, \$s8. This change saves a couple of instructions in the procedure call and return sequence. However, it complicates code generation because a procedure must access its stack frame with \$sp, whose value can change during a procedure's execution if values are pushed on the stack.

Another Procedure Call Example

As another example, consider the following routine that computes the tak function, which is a widely used benchmark created by Ikuo Takeuchi. This function does not compute anything useful, but is a heavily recursive program that illustrates the MIPS calling convention.

```
int tak (int x, int y, int z)
{
  if (y < x)
    return 1+ tak (tak (x - 1, y, z),
        tak (y - 1, z, x),
        tak (z - 1, x, y));
  else
    return z;
}
int main ()
{
  tak(18, 12, 6);
}</pre>
```

The assembly code for this program is below. The tak function first saves its return address in its stack frame and its arguments in callee-saved registers, since the routine may make calls that need to use registers \$a0-\$a2 and \$ra. The function uses callee-saved registers since they hold values that persist over the lifetime of the function, which includes several calls that could potentially modify registers.

```
.text
      .globl tak
tak:
              $sp, $sp, 40
     subu
              $ra, 32($sp)
     SW
              $s0, 16($sp)
                              # X
     SW
     move
              $s0. $a0
              $s1, 20($sp)
                              # y
     SW
              $s1, $a1
     move
              $s2, 24($sp)
                              # z
     SW
              $s2, $a2
     move
              $s3, 28($sp)
                              # temporary
```

The routine then begins execution by testing if y < x. If not, it branches to label L1, which is below.

```
bge $s1, $s0, L1 # if (y < x)
```

If y < x, then it executes the body of the routine, which contains four recursive calls. The first call uses almost the same arguments as its parent:

```
addiu $a0, $s0, -1

move $a1, $s1

move $a2, $s2

jal tak # tak (x - 1, y, z)

move $s3, $v0
```

Note that the result from the first recursive call is saved in register \$53, so that it can be used later.

The function now prepares arguments for the second recursive call.

```
addiu $a0, $s1, -1
move $a1, $s2
move $a2, $s0
jal tak # tak (y - 1, z, x)
```

In the instructions below, the result from this recursive call is saved in register \$50. But, first we need to read, for the last time, the saved value of the first argument from this register.

```
addiu $a0, $s2, -1
move $a1, $s0
move $a2, $s1
move $s0, $v0
jal tak # tak (z - 1, x, y)
```

After the three inner recursive calls, we are ready for the final recursive call. After the call, the function's result is in \$v0 and control jumps to the function's epilogue.

This code at label $\bot 1$ is the consequent of the *if-then-else* statement. It just moves the value of argument z into the return register and falls into the function epilogue.

```
L1: move $v0, $s2
```

The code below is the function epilogue, which restores the saved registers and returns the function's result to its caller.

The main routine calls the tak function with its initial arguments, then takes the computed result (7) and prints it using SPIM's system call for printing integers.

```
.globl
             main
main:
     subu
              $sp, $sp, 24
              $ra, 16($sp)
     SW
              $a0, 18
     lί
     lί
              $a1. 12
     lί
              $a2, 6
                              \# tak(18, 12, 6)
     jal
              tak
              $a0, $v0
      move
      lί
              $v0, 1
                              # print_int syscall
      syscall
              ra, 16(sp)
     addiu
              $sp, $sp, 24
     jr
              $ra
```

A.7

Exceptions and Interrupts

Section 5.6 of Chapter 5 describes the MIPS exception facility, which responds both to exceptions caused by errors during an instruction's execution and to external interrupts caused by I/O devices. This section describes exception and interrupt handling in more detail. In MIPS processors, a part of the CPU called *coprocessor 0* records the information the software needs to handle exceptions and interrupts. The MIPS simulator SPIM does not implement all of coprocessor 0's registers, since many are not useful in a simulator or are part of the memory system, which SPIM does not implement. However, SPIM does provide the following coprocessor 0 registers:

Register name	Register number	Usage
BadVAddr	8	register containing the memory address at which memory reference occurred
Status	12	interrupt mask and enable bits
Cause	13	exception type and pending interrupt bits
EPC	14	register containing address of instruction that caused exception

These four registers are part of coprocessor 0's register set and are accessed by the lwc0, mfc0, mtc0, and swc0 instructions. After an exception, register EPC

contains the address of the instruction that was executing when the exception occurred. If the instruction made a memory access that caused the exception, register BadVAddr contains the referenced memory location's address. The two other registers contain many fields and are described below.

Figure A.13 shows the Status register fields implemented by the MIPS simulator SPIM. The interrupt mask field contains a bit for each of the five hardware and three software possible interrupt levels. A bit that is 1 allows interrupts at that level. A bit that is 0 disables interrupts at that level. The low 6 bits of the Status register implement a three-deep stack for the kernel/user and interrupt enable bits. The kernel/user bit is 0 if a program was in the kernel when an exception occurred and 1 if it was running in user mode. If the interrupt enable bit is 1, interrupts are allowed. If it is 0, they are disabled. When an interrupt occurs, these 6 bits are shifted left by 2 bits, so the current bits become the previous bits and the previous bits become the old bits (the old bits are discarded). The current bits are both set to 0 so the interrupt handler runs in the kernel with interrupts disabled.

Figure A.14 shows the Cause register fields implemented by SPIM. The five pending interrupt bits correspond to the five interrupt levels. A bit becomes 1 when an interrupt at its level has occurred but has not been serviced. The Exception code register describes the cause of an exception with the following codes:

Number	Name	Description
0	INT	external interrupt
4	ADDRL	address error exception (load or instruction fetch)
5	ADDRS	address error exception (store)
6	IBUS	bus error on instruction fetch
7	DBUS	bus error on data load or store
8	SYSCALL	syscall exception
9	BKPT	breakpoint exception
10	RI	reserved instruction exception
12	OVF	arithmetic overflow exception

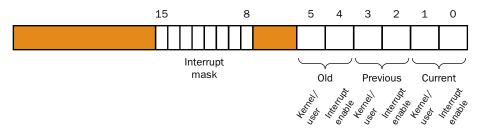


FIGURE A.13 The Status register.

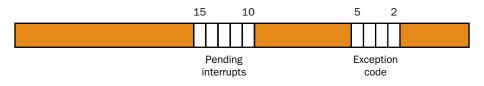


FIGURE A.14 The Cause register. In actual MIPS processors, this register contains additional fields that report: whether the instruction that caused the exception executed in a branch's delay slot, which coprocessor caused the exception, or that a software interrupt is pending.

Exceptions and interrupts cause a MIPS processor to jump to a piece of code, at address $80000080_{\mbox{\scriptsize hex}}$ (in the kernel, not user address space), called an interrupt handler. This code examines the exception's cause and jumps to an appropriate point in the operating system. The operating system responds to an exception either by terminating the process that caused the exception or by performing some action. A process that causes an error, such as executing an unimplemented instruction, is killed by the operating system. On the other hand, exceptions such as page faults are requests from a process to the operating system to perform a service, such as bringing in a page from disk. The operating system processes these requests and resumes the process. The final type of exceptions are interrupts from external devices. These generally cause the operating system to move data to or from an I/O device and resume the interrupted process. The code in the example below is a simple interrupt handler, which invokes a routine to print a message at each exception (but not interrupts). This code is similar to the interrupt handler used by the SPIM simulator, except that it does not print an error message to report an exception.

Interrupt Handler

Example

The interrupt handler first saves registers \$a0 and \$a1, which it later uses to pass arguments. The interrupt handler cannot store the old values from these registers on the stack, as would an ordinary routine, because the cause of the interrupt might have been a memory reference that used a bad value (such as 0) in the stack pointer. Instead the interrupt handler stores these registers in two memory locations (save0 and save1). If the interrupt routine itself could be interrupted, two locations would not be enough since the second interrupt would overwrite values saved during the first interrupt. However, this simple interrupt handler finishes running before it enables interrupts, so the problem does not arise.

```
.ktext 0x80000080 sw $a0, save0 \# Handler is not re-entrant and can't use sw $a1, save1 \# stack to save $a0, $a1 \# Don't need to save $k0/$k1
```

The interrupt handler then moves the Cause and EPC registers into CPU registers. The Cause and EPC registers are not part of the CPU register set. Instead, they are registers in coprocessor 0, which is the part of the CPU that handles interrupts. The instruction <code>mfc0 \$k0, \$13</code> moves coprocessor 0's register 13 (the Cause register) into CPU register \$k0. Note that the interrupt handler need not save registers \$k0 and \$k1 because user programs are not supposed to use these registers. The interrupt handler uses the value from the Cause register to test if the exception was caused by an interrupt (see the preceding table). If so, the exception is ignored. If the exception was not an interrupt, the handler calls <code>print_excp</code> to print a warning message.

```
mfc0
         $k0, $13
                         # Move Cause into $k0
mfc0
                        # Move EPC into $k1
         $k1, $14
         $v0, $k0, 0x44 # Ignore interrupts
sgt
bgtz
         $v0, done
         $a0, $k0
                        # Move Cause into $a0
mov
mov
         $a1, $k1
                        # Move EPC into $a1
jal
         print_excp
                        # Print exception error message
```

Before returning, the interrupt handler restores registers \$a0 and \$a1. It then executes the rfe (return from exception) instruction, which restores the previous interrupt mask and kernel/user bits in the Status register. This switches the processor state back to what it was before the exception and prepares to resume program execution. The interrupt handler then returns to the program by jumping to the instruction following the one that caused the exception.

Elaboration: On real MIPS processors, the return from an interrupt handler is more complex. The rfe instruction must execute in the delay slot of the jr instruction (see elaboration on page 444 of Chapter 6) that returns to the user program so that no interrupt-handler instruction executes with the user program's interrupt mask and kernel/user bits. In addition, the interrupt handler cannot always jump to the instruction following EPC. For example, if the instruction that caused the exception was in a branch instruction's delay slot (see Chapter 6), the next instruction may not be the following instruction in memory.

A.8

Input and Output

SPIM simulates one I/O device: a memory-mapped terminal. When a program is running, SPIM connects its own terminal (or a separate console window in the X-window version <code>xspim</code>) to the processor. A MIPS program running on SPIM can read the characters that you type. In addition, if the MIPS program writes characters to the terminal, they appear on SPIM's terminal or console window. One exception to this rule is control-C: this character is not passed to the program, but instead causes SPIM to stop and return to command mode. When the program stops running (for example, because you typed control-C or because the program hit a breakpoint), the terminal is reconnected to <code>spim</code> so you can type SPIM commands. To use memory-mapped I/O (see below), <code>spim</code> or <code>xspim</code> must be started with the <code>-mapped_io</code> flag.

The terminal device consists of two independent units: a *receiver* and a *transmitter*. The receiver reads characters from the keyboard. The transmitter writes characters to the display. The two units are completely independent. This means, for example, that characters typed at the keyboard are not automatically echoed on the display. Instead, a program must explicitly echo a character by reading it from the receiver and writing it to the transmitter.

A program controls the terminal with four memory-mapped device registers, as shown in Figure A.15. "Memory-mapped" means that each register appears as a special memory location. The *Receiver Control register* is at location ffff0000_{hex}. Only two of its bits are actually used. Bit 0 is called "ready": if it is 1, it means that a character has arrived from the keyboard but has not yet been read from the Receiver Data register. The ready bit is read-only: writes to it are ignored. The ready bit changes from 0 to 1 when a character is typed at the keyboard, and it changes from 1 to 0 when the character is read from the Receiver Data register.

Bit 1 of the Receiver Control register is the keyboard "interrupt enable." This bit may be both read and written by a program. The interrupt enable is initially 0. If it is set to 1 by a program, the terminal requests an interrupt at level 0 whenever the ready bit is 1. However, for the interrupt to affect the proces-

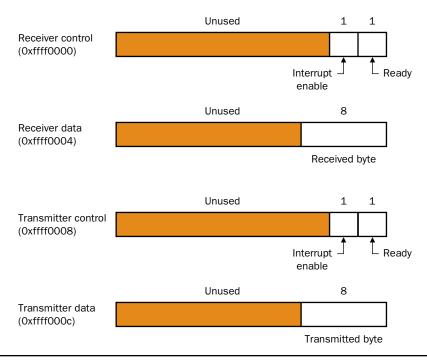


FIGURE A.15 The terminal is controlled by four device registers, each of which appears as a memory location at the given address. Only a few bits of these registers are actually used. The others always read as 0s and are ignored on writes.

sor, interrupts must also be enabled in the Status register (see section A.7). All other bits of the Receiver Control register are unused.

The second terminal device register is the *Receiver Data register* (at address ffff0004 $_{\rm hex}$). The low-order 8 bits of this register contain the last character typed at the keyboard. All other bits contain 0s. This register is read-only and changes only when a new character is typed at the keyboard. Reading the Receiver Data register resets the ready bit in the Receiver Control register to 0.

The third terminal device register is the *Transmitter Control register* (at address ffff0008_{hex}). Only the low-order 2 bits of this register are used. They behave much like the corresponding bits of the Receiver Control register. Bit 0 is called "ready" and is read-only. If this bit is 1, the transmitter is ready to accept a new character for output. If it is 0, the transmitter is still busy writing the previous character. Bit 1 is "interrupt enable" and is readable and writable. If this bit is set to 1, then the terminal requests an interrupt on level 1 whenever the ready bit is 1.

The final device register is the *Transmitter Data register* (at address ffff000c_{hex}). When a value is written into this location, its low-order 8 bits (i.e.,

an ASCII character as in Figure 3.15 in Chapter 3) are sent to the console. When the Transmitter Data register is written, the ready bit in the Transmitter Control register is reset to 0. This bit stays 0 until enough time has elapsed to transmit the character to the terminal; then the ready bit becomes 1 again. The Transmitter Data register should only be written when the ready bit of the Transmitter Control register is 1. If the transmitter is not ready, writes to the Transmitter Data register are ignored (the write appears to succeed but the character is not output).

Real computers require time to send characters over the serial lines that connect terminals to computers. These time lags are simulated by SPIM. For example, after the transmitter starts to write a character, the transmitter's ready bit becomes 0 for a while. SPIM measures time in instructions executed, not in real clock time. This means that the transmitter does not become ready again until the processor executes a certain number of instructions. If you stop the machine and look at the ready bit, it will not change. However, if you let the machine run, the bit eventually changes back to 1.

A.9

SPIM

SPIM is a software simulator that runs programs written for MIPS R2000/R3000 processors. SPIM's name is just MIPS spelled backwards. SPIM can read and immediately execute assembly language files or (on some systems) MIPS executable files. SPIM is a self-contained system for running MIPS programs. It contains a debugger and provides a few operating system-like services. SPIM is much slower than a real computer (100 or more times). However, its low cost and wide availability cannot be matched by real hardware!

An obvious question is, Why use a simulator when many people have workstations that contain MIPS chips that are significantly faster than SPIM? One reason is that these workstations are not universally available. Another reason is rapid progress toward new and faster computers may render these machines obsolete (see Chapter 1). The current trend is to make computers faster by executing several instructions concurrently. This trend makes architectures more difficult to understand and program. The MIPS architecture may be the epitome of a simple, clean RISC machine.

In addition, simulators can provide a better environment for programming than an actual machine because they can detect more errors and provide more features than an actual computer. For example, SPIM has an X-window interface that works better than most debuggers on the actual machines.

Finally, simulators are a useful tool in studying computers and the programs that run on them. Because they are implemented in software, not silicon, simulators can be easily modified to add new instructions, build new systems such as multiprocessors, or simply to collect data.

A.9 SPIM A-39

Simulation of a Virtual Machine

The MIPS architecture, like that of many RISC computers, is difficult to program directly because of delayed branches, delayed loads, and restricted address modes. This difficulty is tolerable since these computers were designed to be programmed in high-level languages and present an interface appropriate for compilers rather than assembly language programmers. A good part of the programming complexity results from delayed instructions. A *delayed branch* requires two cycles to execute (see elaborations on pages 444 and 502 of Chapter 6). In the second cycle, the instruction immediately following the branch executes. This instruction can perform useful work that normally would have been done before the branch. It can also be a nop (no operation). Similarly, *delayed loads* require two cycles so the instruction immediately following a load cannot use the value loaded from memory (see section 6.2 of Chapter 6).

MIPS wisely chose to hide this complexity by having its assembler implement a *virtual machine*. This virtual computer appears to have nondelayed branches and loads and a richer instruction set than the actual hardware. The assembler *reorganizes* (rearranges) instructions to fill the delay slots. The virtual computer also provides *pseudoinstructions*, which appear as real instructions in assembly language programs. The hardware, however, knows nothing about pseudoinstructions, so the assembler must translate them into equivalent sequences of actual, machine instructions. For example, the MIPS hardware only provides instructions to branch when a register is equal to or not equal to 0. Other conditional branches, such as when one register is greater than another, are synthesized by comparing the two registers and branching when the result of the comparison is true (nonzero).

By default, SPIM simulates the richer virtual machine. However, it can also simulate the bare hardware. Below, we describe the virtual machine and only mention in passing features that do not belong to the actual hardware. In doing so, we follow the convention of MIPS assembly language programmers (and compilers), who routinely use the extended machine. (For a description of the real machines, see Gerry Kane and Joe Heinrich, MIPS RISC Architecture, Prentice Hall, Englewood Cliff, NJ, 1992.)

Getting Started with SPIM

The rest of this appendix contains a complete and rather detailed description of SPIM. Many details should never concern you; however, the sheer volume of information can obscure the fact that SPIM is a simple, easy-to-use program. This section contains a quick tutorial on SPIM that should enable you to load, debug, and run simple MIPS programs.

SPIM comes in multiple versions. One version, called spim, is a command-line-driven program and requires only an alphanumeric terminal to display it. It operates like most programs of this type: you type a line of text, hit the return key, and spim executes your command.

A fancier version, called XSpim, runs in the X-windows environment of the Unix system and therefore requires a bit-mapped display to run it. XSpim, however, is a much easier program to learn and use because its commands are always visible on the screen and because it continually displays the machine's registers. Another version, PCspim, is compatible with Windows 3.1, Windows 95, and Windows NT. The Unix, Windows, and DOS versions of SPIM are available through www.mkp.com/cod2e.htm.

Since many people use and prefer <code>xspim</code>, this section only discusses that program. If you plan to use any version of <code>spim</code>, do not skip this section. Read it first and then look at the "SPIM Command-Line Options" section (starting on page A-44) to see how to accomplish the same thing with <code>spim</code> commands. Check <code>www.mkp.com/cod2e.htm</code> for more information on using <code>PCspim</code>.

To start xspim, type xspim in response to your system's prompt (%):

% xspim

On your system, xspim may be kept in an unusual place, and you may need to execute a command first to add that place to your search path. Your instructor should tell you how to do this.

When xspim starts up, it pops up a large window on your screen (see Figure A.16). The window is divided into five panes:

- The top pane is called the *register display*. It shows the values of all registers in the MIPS CPU and FPU. This display is updated whenever your program stops running.
- The pane below contains the *control buttons* to operate XSpim. These buttons are discussed below, so we can skip the details for now.
- The next pane, called the *text segments*, displays instructions both from your program and the system code that is loaded automatically when xspim starts running. Each instruction is displayed on a line that looks like

[0x00400000] 0x8fa40000 1w \$4, 0(\$29) ; 89: 1w \$a0, 0(\$sp)

The first number on the line, in square brackets, is the hexadecimal memory address of the instruction. The second number is the instruction's numerical encoding, again displayed as a hexadecimal number. The third item is the instruction's mnemonic description. Everything following the semicolon is the actual line from your assembly file that produced the instruction. The number 89 is the line number in that file. Sometimes nothing is on the line after the semicolon. This means that the instruction was produced by SPIM as part of translating a pseudo-instruction.



A.9 SPIM A-41

```
xspim
                                                                                              BadVaddr = 00000000
                                                                   Cause
                                                                              = 00000000
= 00000000
                            00000000
00000000
                                                     00000000
00000000
                                                                   LÖ
                 Status =
                                                                 General registers
                                                               00000000
                                                                                                                      =
                      (r0) =
                               00000000
                                              R8
                                                    (t0)
                                                                             R16
                                                                                   (s0)
                                                                                             00000000
                                                                                                                (t8)
                      (at) =
                                              R9
R10
                                                    (t1)
(t2)
                                                                             R17
R18
                                                                                                                (s9)
(k0)
                               00000000
                                                               00000000
                                                                                             00000000
                                                                                                         R25
                                                                                                                          00000000
                                                                                   (s2)
(s3)
                                                                                                         R26
R27
                      (v0)
(v1)
                               00000000
                                                                                                                          00000000
                 R2
                                                              00000000
                                                                                             00000000
                               00000000
                                              R11
                                                    (t3)
                                                                             R19
                                                                                                                (k1)
                                                                                                                          00000000
                                                    (t4)
(t5)
(t6)
                                                                             R20
R21
R22
                 R4
                      (a0) =
                               00000000
                                              R12
R13
                                                               00000000
                                                                                   (s4)
(s5)
                                                                                             00000000
                                                                                                         R28
R29
                                                                                                                (gp)
                                                                                                                          00000000
Register
                     (a1) =
(a2) =
                 R5
                               00000000
                                                              00000000
                                                                                             00000000
                                                                                                                (sp)
(s8)
                                                                                                                          00000000
display
                               00000000
                                                                                   (s6)
                                                                                                                          00000000
                                                          =
                 R7
                      (a3)
                               00000000
                                                              00000000
                                                                             R23
                                                                                   (s7)
                                                                                             00000000
                                                                                                         R31
                                                                                                                          00000000
                                                          Double floating-point registers
                               0.000000
0.000000
0.000000
                                                                                             0.000000
0.000000
0.000000
                                                                                                         FP24
FP26
                                                                                                                       = 0.000000
= 0.000000
= 0.000000
                 FPO
                                              FP8
                                                              \begin{smallmatrix} 0.000000\\ 0.000000 \end{smallmatrix}
                                                                             FP16
FP18
                                              FP10
FP12
                 FP2
                 FP4
                 FP6
                               0.000000
                                              FP14
                                                           = 0.000000
                                                                             FP22
                                                                                             0.000000
                                                                                                         FP30
                                                                                                                          0.000000
                                                           Single floating-point registers
                          quit
                                          load
                                                                                                         set value
                                                           run
                                                                           step
                                                                                           clear
Control
buttons
                         print
                                        breakpt
                                                           help
                                                                         terminal
                                                                                           mode
                                                                  Text segments
                 [0x00400000]
                                       0x8fa40000
                                                         lw $4, 0($29)
                                                                                               89: lw $a0, 0($sp)
                                                                                             90: addiu $a1, $sp, 4
; 91: addiu $a2, $a1, 4
; 92: s11 $v0, $a0, 2
; 93: addu $a2, $a2, $v0
                  0x00400004
                                       0x27a50004
                                                         addiu $5, $29,
                                                        addiu $5, $2, $4
addiu $6, $5, 4
sll $2, $4, 2
addu $6, $6, $2
jal 0x000000000 [main]
                  0x004000081
                                       0x24a60004
Text
                  0x0040000c1
                                       0x00041080
                                       0x00c23021
                  0x00400010]
segments
                                                                                               94: jal main
95: li $v0 10
                  0x00400014]
                                       0x0c000000
                                                         ori $2, $0, 10 syscall
                  0x00400018]
                                       0x3402000a
                 [0x0040001c]
                                       0x0000000c
                                                                                             ; 96: syscall
                                                                  Data segments
                                      [0x10010000]
                 F0x100000001
                                                          0x00000000
                                      0x74706563
                 [0x10010004]
                                                       0x206e6f69
                                                                         0x636f2000
                  0x10010010]
                                      0x72727563
                                                       0x61206465
                                                                         0x6920646e
                                                                                           0x726f6e67
Data and
                  0x10010020]
                                      0x000a6465
                                                       0x495b2020
                                                                         0x7265746e
                                                                                          0x74707572
stack
                  0x10010030]
                                      0x0000205d
                                                       0x20200000
                                                                         0x616e555b
                                                                                          0x6e67696c
segments
                  0x100100407
                                      0x61206465
                                                       0x65726464
                                                                         0x69207373
                                                                                          0x6e69206e
                                                       0x20617461
                                                                         0x63746566
                  0x100100501
                                      0x642f7473
                                                                                          0x00205d68
                 [0x10010060]
                                      0x555b2020
                                                       0x696c616e
                                                                         0x64656e67
                                                                                          0x64646120
                 [0x10010070]
                                      0x73736572
                                                       0x206e6920
                                                                         0x726f7473
                                                                                          0x00205d65
                 SPIM Version 5.9 of January 17, 1997
                 Copyright (c) 1990–1997 by James R. Larus (larus@cs.wisc.edu)
All Rights Reserved.
SPIM
                 See the file README for a full copyright notice.
messages
```

FIGURE A.16 SPIM's X-window interface: xspim.

- The next pane, called the *data and stack segments*, displays the data loaded into your program's memory and the data on the program's stack.
- The bottom pane is the *SPIM messages* that xspim uses to write messages. This is where error messages appear.

Let's see how to load and run a program. The first thing to do is to click on the load button (the second one in the first row of buttons) with the left mouse key. Your click tells <code>xspim</code> to pop up a small prompt window that contains a box and two or three buttons. Move your mouse so the cursor is over the box, and type the name of your file of assembly code. Then click on the button labeled <code>assemblyfile</code> within that prompt window. If you change your mind, click on the button labeled <code>abort command</code>, and <code>xspim</code> gets rid of the prompt window. When you click on <code>assemblyfile</code>, <code>xspim</code> gets rid of the prompt window, then loads your program and redraws the screen to display its instructions and data. Now move the mouse to put the cursor over the scrollbar to the left of the text segments, and click the left mouse button on the white part of this scrollbar. A click scrolls the text pane down so you can find all the instructions in your program.

To run your program, click on the run button in <code>xspim</code>'s control button pane. It pops up a prompt window with two boxes and two buttons. Most of the time, these boxes contain the correct values to run your program, so you can ignore them and just click on <code>ok</code>. This button tells <code>xspim</code> to run your program. Notice that when your program is running, <code>xspim</code> blanks out the register display pane because the registers are continually changing. You can always tell whether <code>xspim</code> is running by looking at this pane. If you want to stop your program, make sure the mouse cursor is somewhere over <code>xspim</code>'s window and type control-C. This causes <code>xspim</code> to pop up a prompt window with two buttons. Before doing anything with this prompt window, you can look at registers and memory to find out what your program was doing. When you understand what happened, you can either continue the program by clicking on <code>continue</code> or stop your program by clicking on abort command.

If your program reads or writes from the terminal, XSpim pops up another window called the *console*. All characters that your program writes appear on the console, and everything that you type as input to your program should be typed in this window.

Suppose your program does not do what you expect. What can you do? SPIM has two features that help debug your program. The first, and perhaps the most useful, is single-stepping, which allows you to run your program an instruction at a time. Click on the button labeled step and another prompt window pops up. This prompt window contains two boxes and three buttons. The first box asks for the number of instructions to step every time you click the mouse. Most of the time, the default value of 1 is a good choice. The other box asks for arguments to pass to the program when it starts running. Again,

A.9 SPIM A-43

most of the time you can ignore this box because it contains an appropriate value. The button labeled step runs your program for the number of instructions in the top box. If that number is 1, xspim executes the next instruction in your program, updates the display, and returns control to you. The button labeled continue stops single-stepping and continues running your program. Finally, abort command stops single-stepping and leaves your program stopped.

What do you do if your program runs for a long time before the bug arises? You could single-step until you get to the bug, but that can take a long time, and it is easy to get so bored and inattentive that you step past the problem. A better alternative is to use a *breakpoint*, which tells xspim to stop your program immediately before it executes a particular instruction. Click on the button in the second row of buttons marked breakpoints. The xspim program pops up a prompt window with one box and many buttons. Type in this box the address of the instruction at which you want to stop. Or, if the instruction has a global label, you can just type the name of the label. Labeled breakpoints are a particularly convenient way to stop at the first instruction of a procedure. To actually set the breakpoint, click on add. You can then run your program.

When SPIM is about to execute the breakpointed instruction, xspim pops up a prompt with the instruction's address and two buttons. The continue button continues running your program and abort command stops your program. If you want to delete a breakpoint, type in its address and click on delete. Finally, list tells xspim to print (in the bottom pane) a list of all breakpoints that are set.

Single-stepping and setting breakpoints will probably help you find a bug in your program quickly. How do you fix it? Go back to the editor that you used to create your program and change it. To run the program again, you need a fresh copy of SPIM, which you get in two ways. Either you can exit from xspim by clicking on the quit button, or you can clear xspim and reload your program. If you reload your program, you *must* clear the memory, so remnants of your previous program do not interfere with your new program. To do this, click on the button labeled clear. Hold the left mouse key down and a two-item menu will pop up. Move the mouse so the cursor is over the item labeled memory & registers and release the key. This causes xspim to clear its memory and registers and return the processor to the state it was in when xspim first started. You can now load and run your new program.

The other buttons in XSpim perform functions that are occasionally useful. When you are more comfortable with XSpim, you should look at the description below to see what they do and how they can save you time and effort.

SPIM Command-Line Options

Both Unix versions of SPIM—spim, the terminal version, and xspim, the X version—accept the following command-line options:

-bare	Simulate a bare MIPS machine without pseudoinstructions or the additional addressing modes provided by the assembler. Implies -quiet.			
-asm	Simulate the virtual MIPS machine provided by the assembler. This is the default.			
-pseudo	Allow the input assembly code to contain pseudoinstructions. This is the default.			
-nopseudo	Do not allow pseudoinstructions in the input assembly code. $ \\$			
-notrap	Do not load the standard exception handler and start-up code. This exception handler handles exceptions. When an exception occurs, SPIM jumps to location 80000080_{hex} , which must contain code to service the exception. In addition, this file contains start-up code that invokes the routine main. Without the start-up routine, SPIM begins execution at the instruction labeledstart.			
-trap	Load the standard exception handler and start-up code. This is the default.			
-noquiet	Print a message when an exception occurs. This is the default.			
-quiet	Do not print a message at exceptions.			
-nomapped_io	Disable the memory-mapped I/O facility (see section A.8). This is the default.			
-mapped_io	Enable the memory-mapped I/O facility (see section A.8). Programs that use SPIM <code>syscalls</code> (see section on "System Calls," page A-48) to read from the terminal <i>cannot</i> also use memory-mapped I/O.			
-file	Load and execute the assembly code in the file.			
-execute	Load and execute the code in the MIPS executable file <i>a.out</i> . This command is only available when SPIM runs on a system containing a MIPS processor.			

A.9 SPIM A-45

The memory segments are named: text, data, stack, ktext, and kdata. The text segment contains instructions from a program. The data segment holds the program's data. The stack segment holds its runtime stack. In addition to running a program, SPIM also executes system code that handles interrupts and exceptions. This code resides in a separate part of the address space called the kernel. The ktext segment holds this code's instructions, and kdata holds its data. There is no kstack segment since the system code uses the same stack as the program. For example, the pair of arguments -sdata 2000000 starts the user data segment at 2,000,000 bytes.

-l <seg> size Sets the limit on how large memory segment seg can grow to be size bytes. The memory segments that can grow are data, stack, and kdata.

Terminal Interface (spim)

The simpler Unix version of SPIM is called spim. It does not require a bit-mapped display and can be run from any terminal. Although spim may be more difficult to learn, it operates just like xspim and provides the same functionality.

The spim terminal interface provides the following commands:

exit Exit the simulator.

read "file" Read *file* of assembly language into SPIM. If the file has already been read into SPIM, the system must be cleared (see reinitialize, below) or global labels will be multiply defined.

load "file" Synonym for read.

execute "a.out" Read the MIPS executable file *a.out* into SPIM. This command is only available when SPIM runs on a system containing a MIPS processor.

run <addr> Start running a program. If the optional address addr is provided, the program starts at that address. Otherwise, the program starts at the global label __start, which is usually the default start-up code that calls the routine at the global label main.

step <n></n>	Step the program for N (default: 1) instructions. Print instructions as they execute.			
continue	Continue program execution without stepping.			
print \$N	Print register N .			
print \$fN	Print floating point register <i>N</i> .			
print addr	Print the contents of memory at address addr.			
print_sym	Print the names and addresses of the global labels known to SPIM. Labels are local by default and become global only when declared in a .globl assembler directive (see "Assember Syntax" section on page A-51).			
reinitialize	Clear the memory and registers.			
breakpoint a	ddr Set a breakpoint at address <i>addr. addr</i> can be either a memory address or symbolic label.			
delete addr	Delete all breakpoints at address addr.			
list	List all breakpoints.			
•	Rest of line is an assembly instruction that is stored in memory.			
<n1></n1>	A newline reexecutes previous command.			

Most commands can be abbreviated to their unique prefix (e.g., ex, re, l, ru, s, p). More dangerous commands, such as reinitialize, require a longer prefix.

X-Window Interface (xspim)

?

The tutorial, "Getting Started with SPIM" (page A-39), explains the most common xspim commands. However, xspim has other commands that are occasionally useful. This section provides a complete list of the commands.

The X version of SPIM, xspim, looks different but operates in the same manner as spim. The X-window has five panes (see Figure A.16). The top pane displays the registers. These values are continually updated, except while a program is running.

The next pane contains buttons that control the simulator:

Print a help message.

quit	Exit from the simulator.
load	Read a source or executable file into SPIM.

A.9 SPIM A-47

run Start the program running.

step Single-step a program.

clear Reinitialize registers or memory.

set value Set the value in a register or memory location.

print Print the value in a register or memory location.

breakpoint Set or delete a breakpoint or list all breakpoints.

help Print a help message.

terminal Raise or hide the console window.

mode Set SPIM operating modes.

The next two panes display the memory. The top one shows instructions from the user and kernel text segments. (These instructions are real—not pseudo—MIPS instructions. SPIM translates assembler pseudoinstructions into one to three MIPS instructions. Each source instruction appears as a comment on the first instruction into which it is translated.) The first few instructions in the text segment are the default start-up code (__start) that loads argc and argv into registers and invokes the main routine. The lower of these two panes displays the data and stack segments. Both panes are updated as a program executes.

The bottom pane is used to display SPIM messages. It does not display output from a program. When a program reads or writes, its I/O appears in a separate window, called the *console*, which pops up when needed.

Surprising Features

Although SPIM faithfully simulates the MIPS computer, SPIM is a simulator and certain things are not identical to an actual computer. The most obvious differences are that instruction timing and the memory systems are not identical. SPIM does not simulate caches or memory latency, nor does it accurately reflect floating-point operation or multiply and divide instruction delays.

Another surprise (which occurs on the real machine as well) is that a pseudoinstruction expands to several machine instructions. When you single-step or examine memory, the instructions that you see are different from the source program. The correspondence between the two sets of instructions is fairly simple since SPIM does not reorganize instructions to fill delay slots.

Byte Order

Processors can number bytes within a word so the byte with the lowest number is either the leftmost or rightmost one. The convention used by a machine

is called its *byte order*. MIPS processors can operate with either *big-endian* or *little-endian* byte order. For example, in a big-endian machine, the directive .byte 0, 1, 2, 3 would result in a memory word containing

Byte #				
0	1	2	3	

while in a little-endian machine, the word would contain

Byte #				
3	2	1	0	

SPIM operates with both byte orders. SPIM's byte order is the same as the byte order of the underlying machine that runs the simulator. For example, on a DECstation 3100 or Intel 80x86, SPIM is little-endian, while on a Macintosh or Sun SPARC, SPIM is big-endian.

System Calls

SPIM provides a small set of operating-system-like services through the system call (syscall) instruction. To request a service, a program loads the system call code (see Figure A.17) into register \$v0 and arguments into registers \$a0-\$a3 (or \$f12 for floating-point values). System calls that return values put their results in register \$v0 (or \$f0 for floating-point results). For example, the following code prints "the answer = 5":

```
.data
str:
      .asciiz "the answer = "
      .text
               $v0.4
      lί
                         # system call code for print_str
               $a0, str # address of string to print
      la
      syscall
                         # print the string
               $v0.1
                         # system call code for print_int
      lί
               $a0, 5
                         # integer to print
                         # print it
      syscall
```

The print_int system call is passed an integer and prints it on the console. print_float prints a single floating-point number; print_double prints a double precision number; and print_string is passed a pointer to a null-terminated string, which it writes to the console.

Service	System call code	Arguments	Result
print_int	1	\$a0 = integer	
print_float	2	\$f12 = float	
print_double	3	\$f12 = double	
print_string	4	\$a0 = string	
read_int	5		integer (in \$v0)
read_float	6		float (in \$f0)
read_double	7		double (in \$f0)
read_string	8	\$a0 = buffer, \$a1 = length	
sbrk	9	\$a0 = amount	address (in \$v0)
exit	10		

FIGURE A.17 System services.

The system calls read_int, read_float, and read_double read an entire line of input up to and including the newline. Characters following the number are ignored. read_string has the same semantics as the Unix library routine fgets. It reads up to n-1 characters into a buffer and terminates the string with a null byte. If fewer than n-1 characters are on the current line, read_string reads up to and including the newline and again null-terminates the string. Warning: Programs that use these syscalls to read from the terminal should not use memory-mapped I/O (see section A.8).

Finally, sbrk returns a pointer to a block of memory containing n additional bytes, and exit stops a program from running.



MIPS R2000 Assembly Language

A MIPS processor consists of an integer processing unit (the CPU) and a collection of coprocessors that perform ancillary tasks or operate on other types of data such as floating-point numbers (see Figure A.18). SPIM simulates two coprocessors. Coprocessor 0 handles exceptions, interrupts, and the virtual memory system. SPIM simulates most of the first two and entirely omits details of the memory system. Coprocessor 1 is the floating-point unit. SPIM simulates most aspects of this unit.

Addressing Modes

MIPS is a load-store architecture, which means that only load and store instructions access memory. Computation instructions operate only on values in registers. The bare machine provides only one memory-addressing mode: c(rx), which uses the sum of the immediate c and register rx as the address. The virtual machine provides the following addressing modes for load and store instructions:

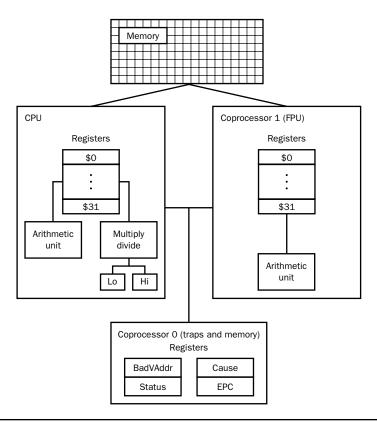


FIGURE A.18 MIPS R2000 CPU and FPU.

Format	Address computation		
(register)	contents of register		
imm	immediate		
imm (register)	immediate + contents of register		
label	address of label		
label ± imm	address of label + or – immediate		
label ± imm (register)	address of label + or - (immediate + contents of register)		

Most load and store instructions operate only on aligned data. A quantity is *aligned* if its memory address is a multiple of its size in bytes. Therefore, a half-word object must be stored at even addresses and a full word object must be stored at addresses that are a multiple of four. However, MIPS provides some instructions to manipulate unaligned data (lwl, lwr, swl, and swr).

Elaboration: The MIPS assembler (and SPIM) synthesizes the more complex addressing modes by producing one or more instructions before the load or store to compute a complex address. For example, suppose that the label table referred to memory location 0x10000004 and a program contained the instruction

```
1d \$ a0. table + 4(\$ a1)
```

The assembler would translate this instruction into the instructions

```
lui $at, 4096
addu $at, $at, $a1
lw $a0, 8($at)
```

The first instruction loads the upper bits of the label's address into register at, which the register that the assemble reserves for its own use. The second instruction adds the contents of register a1 to the label's partial address. Finally, the load instruction uses the hardware address mode to add the sum of the lower bits of the label's address and the offset from the original instruction to the value in register at.

Assembler Syntax

Comments in assembler files begin with a sharp sign (#). Everything from the sharp sign to the end of the line is ignored.

Identifiers are a sequence of alphanumeric characters, underbars (_), and dots (.) that do not begin with a number. Instruction opcodes are reserved words that *cannot* be used as identifiers. Labels are declared by putting them at the beginning of a line followed by a colon, for example:

```
.data
item: .word 1
    .text
    .globl main # Must be global
main: lw $t0. item
```

Numbers are base 10 by default. If they are preceded by 0x, they are interpreted as hexadecimal. Hence, 256 and 0x100 denote the same value.

Strings are enclosed in doublequotes ("). Special characters in strings follow the C convention:

- newline\n
- tab \t
- quote\"

SPIM supports a subset of the MIPS assembler directives:

```
.align n Align the next datum on a 2^n byte boundary. For example, .align 2 aligns the next value on a word boundary. .align 0 turns off automatic alignment of .half, .word, .float, and .double directives until the next .data or .kdata directive.
```

.ascii str Store the string *str* in memory, but do not null-terminate it.

- .asciiz str Store the string *str* in memory and null-terminate it.
- . by te $b1, \ldots, bn$ Store the n values in successive bytes of memory.
- .data <addr> Subsequent items are stored in the data segment. If the optional argument *addr* is present, subsequent items are stored starting at address *addr*.
- .double d1, ..., dn Store the n floating-point double precision numbers in successive memory locations.
- .extern sym size Declare that the datum stored at *sym* is *size* bytes large and is a global label. This directive enables the assembler to store the datum in a portion of the data segment that is efficiently accessed via register \$gp.
- .float f1,..., fn Store the n floating-point single precision numbers in successive memory locations.
- . globl sym Declare that label *sym* is global and can be referenced from other files.
- .half h1, ..., hn Store the n 16-bit quantities in successive memory halfwords.
- .kdata <addr> Subsequent data items are stored in the kernel data segment. If the optional argument *addr* is present, subsequent items are stored starting at address *addr*.
- .ktext <addr> Subsequent items are put in the kernel text segment. In SPIM, these items may only be instructions or words (see the .word directive below). If the optional argument *addr* is present, subsequent items are stored starting at address *addr*.
- .set noat and .set at The first directive prevents SPIM from complaining about subsequent instructions that use register \$at. The second directive reenables the warning. Since pseudoinstructions expand into code that uses register \$at, programmers must be very careful about leaving values in this register.
- . space n Allocate *n* bytes of space in the current segment (which must be the data segment in SPIM).
- .text <addr> Subsequent items are put in the user text segment. In SPIM, these items may only be instructions or words (see the .word directive below). If the optional argument *addr* is present, subsequent items are stored starting at address *addr*.

.word $w1, \ldots, wn$ Store the n 32-bit quantities in successive memory words.

SPIM does not distinguish various parts of the data segment (.data, .rdata, and .sdata).

Encoding MIPS Instructions

Figure A.19 explains how a MIPS instruction is encoded in a binary number. Each column contains instruction encodings for a field (a contiguous group of bits) from an instruction. The numbers at the left margin are values for a field. For example, the j opcode has a value of 2 in the opcode field. The text at the top of a column names a field and specifies which bits it occupies in an instruction. For example, the op field is contained in bits 26–31 of an instruction. This field encodes most instructions. However, some groups of instructions use additional fields to distinguish related instructions. For example, the different floating-point instructions are specified by bits 0–5. The arrows from the first column show which opcodes use these additional fields.

Instruction Format

The rest of this appendix describes both the instructions implemented by actual MIPS hardware and the pseudoinstructions provided by the MIPS assembler. The two types of instructions are easily distinguished. Actual instructions depict the fields in their binary representation. For example, in

Addition (with overflow)



the add instruction consists of six fields. Each field's size in bits is the small number below the field. This instruction begins with 6 bits of 0s. Register specifiers begin with an r, so the next field is a 5-bit register specifier called rs. This is the same register that is the second argument in the symbolic assembly at the left of this line. Another common field is 1 mm_{16} , which is a 16-bit immediate number.

Pseudoinstructions follow roughly the same conventions, but omit instruction encoding information. For example:

Multiply (without overflow)

mul rdest, rsrc1, src2 pseudoinstruction

In pseudoinstructions, rdest and rsrc1 are registers and src2 is either a register or an immediate value. In general, the assembler and SPIM translate a more general form of an instruction (e.g., add \$v1, \$a0, 0x55) to a specialized form (e.g., addi \$v1, \$a0, 0x55).

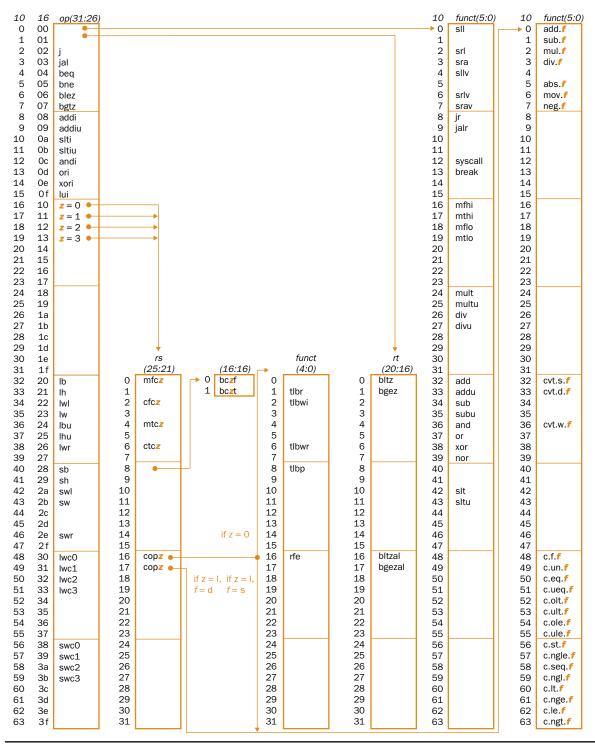


FIGURE A.19 MIPS opcode map. The values of each field are shown to its left. The first column shows the values in base 10 and the second shows base 16 for the op field (bits 31 to 26) in the third column. This op field completely specifies the MIPS operation except for 6 op values: 0, 1, 16, 17, 18, and 19. These operations are determined by other fields, identified by pointers. The last field (funct) uses "f" to mean "s" if r = 16 and r = 17 or "d" if r = 17 and r = 17 and r = 17. The second field (r = 17) uses "r = 17" if r = 17 or "3" if r = 16, the operation is specified elsewhere: if r = 17 and r = 17 and r = 17 and r = 17 and r = 17 then the operations are in the last field with r = 17 and r = 17 then the operations are in the last field with r = 17 and r = 17 then the operations are in the last field with r = 17 and r = 17.

Arithmetic and Logical Instructions


Absolute value

abs rdest, rsrc


pseudoinstruction

Put the absolute value of register rsrc in register rdest.

Addition (with overflow)

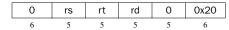

Addition (without overflow)

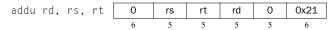

Put the sum of registers rs and rt into register rd.

Addition immediate (with overflow)

Addition immediate (without overflow)

Put the sum of register rs and the sign-extended immediate into register rt.


AND

Put the logical AND of registers rs and rt into register rd.


AND immediate

Put the logical AND of register rs and the zero-extended immediate into register rt.

Divide (with overflow)

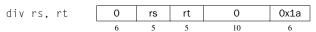

Divide (without overflow)

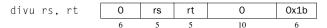

Divide register ns by register nt. Leave the quotient in register 10 and the remainder in register hi. Note that if an operand is negative, the remainder is unspecified by the MIPS architecture and depends on the convention of the machine on which SPIM is run.

Divide (with overflow)

div rdest, rsrc1, src2 pseudoinstruction

Divide (without overflow)


divu rdest, rsrc1, src2 pseudoinstruction

Put the quotient of register rsrc1 and src2 into register rdest.

Multiply

mult rs, rt 0 rs rt 0 0x18

Unsigned multiply

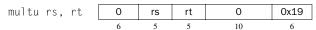

Multiply registers rs and rt. Leave the low-order word of the product in register 10 and the high-order word in register hi.

Multiply (without overflow)

mul rdest, rsrc1, src2 pseudoinstruction

Multiply (with overflow)

mulo rdest, rsrc1, src2 pseudoinstruction

Unsigned multiply (with overflow)

mulou rdest, rsrc1, src2

pseudoinstruction

Put the product of register rsrc1 and src2 into register rdest.

Negate value (with overflow)

neg rdest, rsrc

pseudoinstruction

Negate value (without overflow)

negu rdest, rsrc

pseudoinstruction

Put the negative of register rsrc into register rdest.

NOR

Put the logical NOR of registers rs and rt into register rd.

NOT

not rdest, rsrc

pseudoinstruction

Put the bitwise logical negation of register rsrc into register rdest.

OR

Put the logical OR of registers rs and rt into register rd.

OR immediate

Put the logical OR of register $\protect\operatorname{rs}$ and the zero-extended immediate into register $\protect\operatorname{rt}$.

Remainder

rem rdest, rsrc1, rsrc2

pseudoinstruction

Unsigned remainder

remu rdest, rsrc1, rsrc2

pseudoinstruction

Put the remainder of register rsrc1 divided by register rsrc2 into register rdest. Note that if an operand is negative, the remainder is unspecified by the MIPS architecture and depends on the convention of the machine on which SPIM is run.


Shift left logical

sll rd, rt, shamt

0	rs	rt	rd	shamt	0
6	5	5	5	5	6

Shift left logical variable

sllv rd, rt, rs

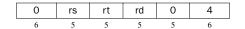

Shift right arithmetic

sra rd, rt, shamt

0	rs	rt	rd	shamt	3
6	5	5	5	5	6

Shift right arithmetic variable

srav rd, rt, rs

0	rs	rt	rd	0	7
6	5	5	5	5	6

Shift right logical

srl rd, rt, shamt



Shift right logical variable

srlv rd, rt, rs



Shift register rt left (right) by the distance indicated by immediate shamt or the register rs and put the result in register rd. Note that argument rs is ignored for sll, sra, and srl.

Rotate left

rol rdest, rsrc1, rsrc2

pseudoinstruction

Rotate right

ror rdest, rsrc1, rsrc2

pseudoinstruction

Rotate register rsrc1 left (right) by the distance indicated by rsrc2 and put the result in register rdest.

Subtract (with overflow)




Subtract (without overflow)




Put the difference of registers rs and rt into register rd.

Exclusive OR

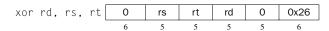

Put the logical XOR of registers rs and rt into register rd.


XOR immediate

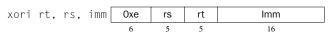

Put the logical XOR of register rs and the zero-extended immediate into register rt.

Constant-Manipulating Instructions

Load upper immediate

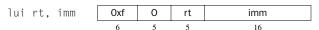

Load the lower halfword of the immediate i mm into the upper halfword of register rt. The lower bits of the register are set to 0.

Load immediate


li rdest, imm

pseudoinstruction

Move the immediate imm into register rdest.

Comparison Instructions

Set less than

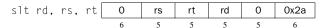

Set less than unsigned

Set register rd to 1 if register rs is less than rt, and to 0 otherwise.

Set less than immediate

Set less than unsigned immediate

Set register \mbox{rt} to 1 if register \mbox{rs} is less than the sign-extended immediate, and to 0 otherwise.

Set equal

seg rdest, rsrc1, rsrc2 pseudoinstruction

Set register rdest to 1 if register rsrc1 equals rsrc2, and to 0 otherwise.

Set greater than equal

sge rdest, rsrc1, rsrc2 pseudoinstruction

Set greater than equal unsigned

sgeu rdest, rsrc1, rsrc2 pseudoinstruction

Set register $\verb|rdest|$ to 1 if register $\verb|rsrc1|$ is greater than or equal to $\verb|rsrc2|$, and to 0 otherwise.

Set greater than

sgt rdest, rsrc1, rsrc2 pseudoinstruction

Set greater than unsigned

sgtu rdest, rsrc1, rsrc2 pseudoinstruction

Set register rdest to 1 if register rsrc1 is greater than rsrc2, and to 0 otherwise.

Set less than equal

sle rdest, rsrc1, rsrc2 pseudoinstruction

Set less than equal unsigned

sleu rdest, rsrc1, rsrc2 pseudoinstruction

Set register rdest to 1 if register rsrc1 is less than or equal to rsrc2, and to 0 otherwise.

Set not equal

sne rdest, rsrc1, rsrc2 pseudoinstruction

Set register rdest to 1 if register rsrc1 is not equal to rsrc2, and to 0 otherwise.

Branch Instructions

Branch instructions use a signed 16-bit instruction *offset* field; hence they can jump $2^{15} - 1$ *instructions* (not bytes) forward or 2^{15} instructions backwards. The *jump* instruction contains a 26-bit address field.


In the descriptions below, the offsets are not specified. Instead, the instructions branch to a label. This is the form used in most assembly language programs because the distance between instructions is difficult to calculate when pseudoinstructions expand into several real instructions.

Branch instruction


b label pseudoinstruction

Unconditionally branch to the instruction at the label.

Branch coprocessor z true

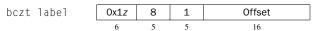


Branch coprocessor z false

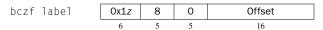

Conditionally branch the number of instructions specified by the offset if z's condition flag is true (false). z is 0, 1, 2, or 3. The floating-point unit is z = 1.

Branch on equal

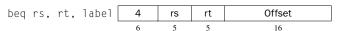

Conditionally branch the number of instructions specified by the offset if register rs equals rt.

Branch on greater than equal zero




Conditionally branch the number of instructions specified by the offset if register rs is greater than or equal to 0.

Branch on greater than equal zero and link



Conditionally branch the number of instructions specified by the offset if register rs is greater than or equal to 0. Save the address of the next instruction in register 31.

Branch on greater than zero

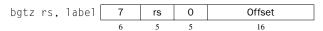

Conditionally branch the number of instructions specified by the offset if register rs is greater than 0.

Branch on less than equal zero

blez rs, label

6	rs	0	Offset
6	5	5	16

Conditionally branch the number of instructions specified by the offset if register rs is less than or equal to 0.

Branch on less than and link

bltzal rs, label

1	rs	0x10	Offset
6	5	5	16

Conditionally branch the number of instructions specified by the offset if register rs is less than 0. Save the address of the next instruction in register 31.

Branch on less than zero

bltz rs, label

1	rs	0	Offset
6	5	5	16

Conditionally branch the number of instructions specified by the offset if register rs is less than 0.

Branch on not equal

bne rs, rt, label

5	rs	rt	Offset
6	5	5	16

Conditionally branch the number of instructions specified by the offset if register rs is not equal to rt.

Branch on equal zero

begz rsrc, label

pseudoinstruction

Conditionally branch to the instruction at the label if rsrc equals 0.

Branch on greater than equal

bge rsrc1, rsrc2, label

pseudoinstruction

Branch on greater than equal unsigned

bgeu rsrc1, rsrc2, label

pseudoinstruction

Conditionally branch to the instruction at the label if register rsrc1 is greater than or equal to rsrc2.

Branch on greater than

bgt rsrc1, src2, label pseudoinstruction

Branch on greater than unsigned

bgtu rsrc1, src2, label pseudoinstruction

Conditionally branch to the instruction at the label if register rsrc1 is greater than src2.

Branch on less than equal

ble rsrc1, src2, label pseudoinstruction

Branch on less than equal unsigned

bleu rsrc1, src2, label pseudoinstruction

Conditionally branch to the instruction at the label if register rsrc1 is less than or equal to src2.

Branch on less than

blt rsrc1, rsrc2, label pseudoinstruction

Branch on less than unsigned

bltu rsrc1, rsrc2, label pseudoinstruction

Conditionally branch to the instruction at the label if register rsrc1 is less than rsrc2.

Branch on not equal zero

bnez rsrc, label pseudoinstruction

Conditionally branch to the instruction at the label if register rsrc is not equal to 0.

Jump Instructions

Jump




Unconditionally jump to the instruction at target.

Jump and link




Unconditionally jump to the instruction at target. Save the address of the next instruction in register \$ra.

Jump and link register

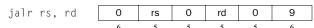

Unconditionally jump to the instruction whose address is in register rs. Save the address of the next instruction in register rd (which defaults to 31).

Jump register

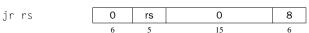

Unconditionally jump to the instruction whose address is in register rs.

Load Instructions

Load address


la rdest, address pseudoinstruction

Load computed *address*—not the contents of the location—into register rdest.

Load byte

1b rt, address 0x20 rs rt Offset
6 5 5 16


Load unsigned byte

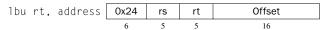

Load the byte at *address* into register rt. The byte is sign-extended by lb, but not by lbu.

Load halfword

Load unsigned halfword

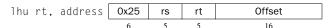


Load the 16-bit quantity (halfword) at *address* into register rt. The halfword is sign-extended by 1h, but not by 1hu.

Load word



Load the 32-bit quantity (word) at address into register rt.

Load word coprocessor

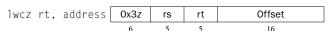

Load the word at *address* into register rt of coprocessor z (0–3). The floating-point unit is z = 1.

Load word left



Load word right



Load the left (right) bytes from the word at the possibly unaligned address into register rt.

Load doubleword

1d rdest, address

pseudoinstruction

Load the 64-bit quantity at *address* into registers rdest and rdest + 1.

Unaligned load halfword

ulh rdest, address

pseudoinstruction

Unaligned load halfword unsigned

ulhu rdest, address

pseudoinstruction

Load the 16-bit quantity (halfword) at the possibly unaligned *address* into register rdest. The halfword is sign-extended by ulh, but not ulhu.

Unaligned load word

ulw rdest, address

pseudoinstruction

Load the 32-bit quantity (word) at the possibly unaligned *address* into register rdest.

Store Instructions

Store byte

sb rt, address 0x28 rs rt Offset

Store the low byte from register rt at address.

Store halfword

sh rt, address 0x29 rs rt 0ffset

Store the low halfword from register rt at address.


Store word

 sw rt, address
 0x2b
 rs
 rt
 Offset

 6
 5
 5
 16

Store the word from register rt at *address*.


Store word coprocessor

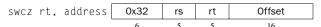

Store the word from register rt of coprocessor z at *address*. The floating-point unit is z = 1

Store word left

Store word right

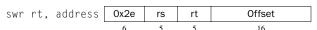

Store the left (right) bytes from register rt at the possibly unaligned *address*.

Store doubleword

sd rsrc, address pseudoinstruction

Store the 64-bit quantity in registers rsrc and rsrc + 1 at address.

Unaligned store halfword

ush rsrc, address *pseudoinstruction*

Store the low halfword from register rsrc at the possibly unaligned *address*.

Unaligned store word

usw rsrc, address pseudoinstruction

Store the word from register rsrc at the possibly unaligned address.

Data Movement Instructions


Move

move rdest, rsrc pseudoinstruction

Move register rsrc to rdest.

Move from hi


Move from Io

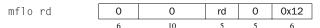


The multiply and divide unit produces its result in two additional registers, hi and 10. These instructions move values to and from these registers. The multiply, divide, and remainder pseudoinstructions that make this unit appear to operate on the general registers move the result after the computation finishes.

Move the hi (10) register to register rd.

Move to hi

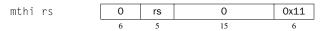


Move to lo

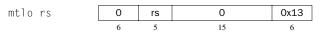

Move register rs to the hi (10) register.

Move from coprocessor z

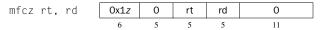

Coprocessors have their own register sets. These instructions move values between these registers and the CPU's registers.


Move coprocessor z's register rd to CPU register rt. The floating-point unit is coprocessor z = 1.

Move double from coprocessor 1

mfc1.d rdest, frsrc1 pseudoinstruction

Move floating-point registers frsrc1 and frsrc1 + 1 to CPU registers rdest and rdest + 1.

Move to coprocessor z

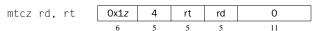

Move CPU register rt to coprocessor z's register rd.


Floating-Point Instructions

The MIPS has a floating-point coprocessor (numbered 1) that operates on single precision (32-bit) and double precision (64-bit) floating-point numbers. This coprocessor has its own registers, which are numbered \$f0-\$f31. Because these registers are only 32 bits wide, two of them are required to hold doubles, so only floating-point registers with even numbers can hold double precision values.


Values are moved in or out of these registers one word (32 bits) at a time by <code>lwc1</code>, <code>swc1</code>, <code>mtc1</code>, and <code>mfc1</code> instructions described above or by the <code>l.s</code>, <code>l.d</code>, <code>s.s</code>, and <code>s.d</code> pseudoinstructions described below. The flag set by floating-point comparison operations is read by the CPU with its <code>bc1t</code> and <code>bc1f</code> instructions.

In the actual instructions below, bits 21–26 are 0 for single precision and 1 for double precision. In the pseudoinstructions below, fdest is a floating-point register (e.g., \$f2).

Floating-point absolute value double

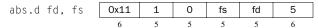

Floating-point absolute value single

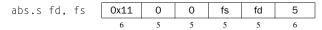


Compute the absolute value of the floating-point double (single) in register fs and put it in register fd.

Floating-point addition double


add.d fd, fs, ft 0x11 1 ft fs fd 0

Floating-point addition single

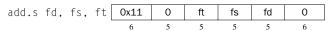


Compute the sum of the floating-point doubles (singles) in registers fs and ft and put it in register fd.

Compare equal double

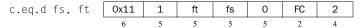

Compare equal single

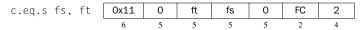


Compare the floating-point double in register fs against the one in ft and set the floating-point condition flag true if they are equal. Use the bclt or bclf instructions to test the value of this flag.

Compare less than equal double



Compare less than equal single

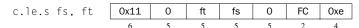


Compare the floating-point double in register fs against the one in ft and set the floating-point condition flag true if the first is less than or equal to the second. Use the bclt or bclf instructions to test the value of this flag.

Compare less than double




Compare less than single

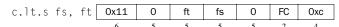

Compare the floating-point double in register fs against the one in ft and set the condition flag true if the first is less than the second. Use the bclt or bclf instructions to test the value of this flag.

Convert single to double

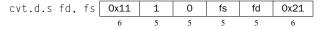

Convert integer to double

cvt.d.w fd, fs
$$0x11$$
 0 0 fs fd $0x21$

Convert the single precision floating-point number or integer in register fs to a double precision number and put it in register fd.

Convert double to single

Convert integer to single

cvt.s.w fd, fs
$$0x11$$
 0 0 fs fd $0x20$

Convert the double precision floating-point number or integer in register fs to a single precision number and put it in register fd.

Convert double to integer

cvt.w.d fd, fs
$$0x11$$
 1 0 fs fd $0x24$

Convert single to integer

cvt.w.s fd, fs
$$0x11$$
 0 0 fs fd $0x24$

Convert the double or single precision floating-point number in register fs to an integer and put it in register fd.

Floating-point divide double

div.d fd, fs, ft
$$0x11$$
 1 ft fs fd 3

Floating-point divide single

Compute the quotient of the floating-point doubles (singles) in registers fs and ft and put it in register fd.

Load floating-point double

1.d fdest, address

pseudoinstruction

Load floating-point single


1.s fdest, address

pseudoinstruction

Load the floating-point double (single) at address into register fdest.

Move floating-point double

Move floating-point single

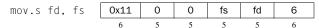

Move the floating-point double (single) from register fs to register fd.

Floating-point multiply double

mul.d fd, fs, ft
$$0x11$$
 1 ft fs fd 2

Floating-point multiply single

mul.s fd, fs, ft
$$0x11$$
 0 ft fs fd 2

Compute the product of the floating-point doubles (singles) in registers fs and ft and put it in register fd.

Negate double

Negate single

Negate the floating-point double (single) in register fs and put it in register fd

Store floating-point double

s.d fdest, address

pseudoinstruction

Store floating-point single

s.s fdest, address

pseudoinstruction

Store the floating-point double (single) in register fdest at address.

Floating-point subtract double


Floating-point subtract single



Compute the difference of the floating-point doubles (singles) in registers fs and ft and put it in register fd.

Exception and Interrupt Instructions

Return from exception

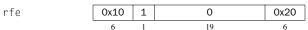

Restore the Status register.

System call




Register V0 contains the number of the system call (see Figure A.17) provided by SPIM.

Break



Cause exception *code*. Exception 1 is reserved for the debugger.

No operation

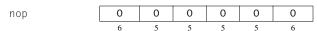

Do nothing.



Concluding Remarks

Programming in assembly language requires a programmer to trade off help-ful features of high-level languages—such as data structures, type checking, and control constructs—for complete control over the instructions that a computer executes. External constraints on some applications, such as response time or program size, require a programmer to pay close attention to every instruction. However, the cost of this level of attention is assembly language programs that are longer, more time-consuming to write, and more difficult to maintain than high-level language programs.

Moreover, three trends are reducing the need to write programs in assembly language. The first trend is toward the improvement of compilers. Modern compilers produce code that is typically comparable to the best handwritten code and is sometimes better. The second trend is the introduction of new processors that are not only faster, but in the case of processors that execute multiple instructions simultaneously, also more difficult to program by hand. In addition, the rapid evolution of the modern computer favors high-level language programs that are not tied to a single architecture. Finally, we witness a trend toward increasingly complex applications—characterized by complex graphic interfaces and many more features than their predecessors. Large applications are written by teams of programmers and require the modularity and semantic checking features provided by high-level languages.

To Probe Further

Kane, G., and J. Heinrich [1992]. MIPS RISC Architecture, Prentice Hall, Englewood Cliffs, NJ.

The last word on the MIPS instruction set and assembly language programming on these machines.

Aho, A., R. Sethi, and J. Ullman [1985]. Compilers: Principles, Techniques, and Tools, Addison-Wesley, Reading, MA.

Slightly dated and lacking in coverage of modern architectures, but still the standard reference on compilers.



Key Terms

A number of key terms have been introduced in this appendix. Check the Glossary for definitions of terms you are uncertain of.

absolute address assembler directive backpatching callee-saved register caller-saved register data segment external or global label formal parameter forward reference

interrupt handler
local label
machine language
macros
procedure call or stack frame
recursive procedures
register-use or procedure-call
convention
relocation information

separate compilation source language stack segment static data symbol table text segment unresolved reference virtual machine

A.13

Exercises

- **A.1** [5] <§A.5> Section A.5 described how memory is partitioned on most MIPS systems. Propose another way of dividing memory that meets the same goals.
- **A.2** [20] <§A.6> Rewrite the code for fact to use fewer instructions.
- **A.3** [5] <§A.7> Is it ever safe for a user program to use registers \$k0 or \$k1?
- **A.4** [25] <§A.7> Section A.7 contains code for a very simple exception handler. One serious problem with this handler is that it disables interrupts for a long time. This means that interrupts from a fast I/O device may be lost. Write a better exception handler that is interruptable and enables interrupts as quickly as possible.
- **A.5** [15] <§A.7> The simple exception handler always jumps back to the instruction following the exception. This works fine unless the instruction that causes the exception is in the delay slot of a branch. In that case, the next instruction is the target of the branch. Write a better handler that uses the EPC register to determine which instruction should be executed after the exception.
- **A.6** [5] <§A.9> Using SPIM, write and test an adding machine program that repeatedly reads in integers and adds them into a running sum. The program should stop when it gets an input that is 0, printing out the sum at that point. Use the SPIM system calls described on pages A-48 and A-49.

A.13 Exercises A-77

A.7 [5] <§A.9> Using SPIM, write and test a program that reads in three integers and prints out the sum of the largest two of the three. Use the SPIM system calls described on pages A-48 and A-49. You can break ties arbitrarily.

- **A.8** [5] <§A.9> Using SPIM, write and test a program that reads in a positive integer using the SPIM system calls. If the integer is not positive, the program should terminate with the message "Invalid Entry"; otherwise the program should print out the names of the digits of the integers, delimited by exactly one space. For example, if the user entered "728," the output would be "Seven Two Eight."
- **A.9** [25] \leq \$A.9> Write and test a MIPS assembly language program to compute and print the first 100 prime numbers. A number n is prime if no numbers except 1 and n divide it evenly. You should implement two routines:
 - \blacksquare test_prime (n) Return 1 if n is prime and 0 if n is not prime.
 - main () Iterate over the integers, testing if each is prime. Print the first 100 numbers that are prime.

Test your programs by running them on SPIM.

A.10 A.10 [10] <§§A.6, A.9> Using SPIM, write and test a recursive program for solving the classic mathematical recreation, the Towers of Hanoi puzzle. (This will require the use of stack frames to support recursion.) The puzzle consists of three pegs (1, 2, and 3) and n disks (the number n can vary; typical values might be in the range from 1 to 8). Disk 1 is smaller than disk 2, which is in turn smaller than disk 3, and so forth, with disk n being the largest. Initially, all the disks are on peg 1, starting with disk n on the bottom, disk n-1 on top of that, and so forth, up to disk 1 on the top. The goal is to move all the disks to peg 2. You may only move one disk at a time, that is, the top disk from any of the three pegs onto the top of either of the other two pegs. Moreover, there is a constraint: You must not place a larger disk on top of a smaller disk.

The C program on the next page can be used to help write your assembly language program.

```
/* move n smallest disks from start to finish using extra */
void hanoi(int n, int start, int finish, int extra){
  if(n != 0){
    hanoi(n-1, start, extra, finish);
    print_string("Move disk");
    print_int(n);
    print_string("from peg");
    print_int(start);
    print_string("to peg");
    print_int(finish);
    print_string(".\n");
    hanoi(n-1, extra, finish, start);
}
main(){
  int n;
  print_string("Enter number of disks>");
  n = read_int();
  hanoi(n, 1, 2, 3);
  return 0;
```