
15.3 Lab 11c. MSP430 assembly language tutorial

15.3.1 Exploring the addressing modes of the MSP430 architecture

The MSP430 architecture

The MSP430 CPU incorporates features specifically designed to allow the use of modern programming techniques such as the computation of jump addresses, data processing in tables, and the use of high-level languages such as C. The whole memory space can be addressed by the MSP430 CPU using seven different addressing modes, without the need for paging. The MSP430 CPU has a set of 27 instructions that can be used with any of the addressing modes.

Figure 15-42. MSP430 CPU block diagram.

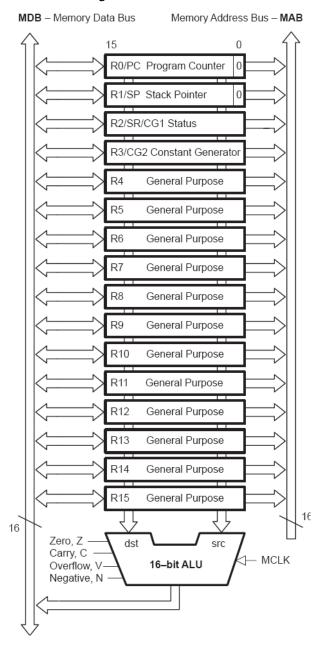

The figure above shows the organization of the MSP430 CPU. Note that the address bus (MAB) and data bus (MDB) are both 16-bits. In addition, both the registers and the memory can be accessed either in word format or in byte format. This architecture supports direct transfer between data memory locations, without passing through the registers.

All the registers have 16-bits and can be accessed directly through the instructions, some of which run in a single clock cycle. Some of the constants most used in programs can be obtained from the constant generators.

The architecture has a 16-bit ALU, and when processing occurs, it affects the state of the following flags:

□ Zero (Z);□ Carry (C);□ Overflow (V);□ Negative (N).

The MCLK (Master) clock signal is used to drive the CPU.

The MSP430 CPU has 16 registers, some of which are dedicated to special use:

□ R0 (PC) - Program Counter

- This register always points to the next instruction to be executed;
- Each instruction occupies an even number of bytes. Therefore, the least significant bit (LSB) of this register is always zero;
- After fetch of an instruction, this register is incremented so that it points to the next instruction.

□ R1 (SP) - Stack Pointer

- This register is used by the MSP430 CPU to store the return address of routines or interrupts;
- At each access of the data stack, the pointer is incremented or decremented automatically;
- The user should be careful to initialize this register with the valid address of the data stack in RAM;
- Also, the LSB of this register is always zero.

☐ R2 (SR/CG1) and R3 (CG2) - Status Register and Constant Generators

- The state of the MSP430 CPU is defined by a set of bits belonging to register R2;
- This register can only be accessed through the register addressing mode;

- All other addressing modes are reserved to support the constant generator;
- The organization of the bits of the R2 register is shown in the figure below:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
	Re	eserv	ed fo	r CG	1		V	SCG1	SCG0	OSCOFF	CPUOFF	GIE	N	Ζ	С	l

■ The following table describes the status of each bit, as well as its functionality.

Bit		Description	
8	V	Overflow bit. $V = 1 \Rightarrow Result$	t of an arithmetic operation overflows the signed-variable range.
7	SCG1	System clock g SCG1 = 1	enerator 1. ⇒ DCO generator is turned off – if not used for MCLK or SMCLK
6	SCG0	System clock g SCG0 = 1	enerator 0. ⇒ FLL+ loop control is turned off
5	OSCOFF	Oscillator Off. OSCOFF = 1	⇒ turns off LFXT1 when it is not used for MCLK or SMCLK
4	CPUOFF	CPU off. CPUOFF = 1	\Rightarrow disable CPU core.
3	GIE	General Interru GIE = 1	upt Enable. ⇒ enables maskable interrupts.
2	N	Negative flag. $N = 1 \Rightarrow$	result of a byte or word operation is negative.
1	Z	Zero flag. $Z = 1 \Rightarrow$	result of a byte or word operation is 0.
0	С	Carry flag. $C = 1 \Rightarrow$	result of a byte or word operation produced a carry.

■ Six different constants commonly used in programming can be generated using the registers R2 and R3, without the need to add a 16-bit word of code to the instruction. The constants are chosen based on the instruction bit (As) that selects the addressing mode.

Table 15-12. Values of the constant generator registers.

Register	As	Constant	Remarks
R2	00	-	Register mode
R2	01	(0)	Absolute mode
R2	10	00004h	+4, bit processing
R2	11	00008h	+8, bit processing
R3	00	00000h	0, word processing
R3	01	00001h	+1
R3	10	00002h	+2, bit processing
R3	11	0FFFFh	-1, word processing

■ Whenever the operand is one of the six constants, the registers are selected automatically. Therefore, R2 and R3 cannot be addressed explicitly in constant mode, as they act as source registers.


□ R4-R15 - General-purpose registers

- The general purpose registers R4 to R15 can be used as data registers, data pointers or index registers and can be accessed either as a byte or as a word;
- These registers support operations on words or bytes;
- Let us look at a specific instruction using registers:

```
ADD.B R5,0(R6)
```

■ For the first operation, the contents of the least significant byte of register R5 (0x8F) are added to the contents of the memory address pointed to by register R6 (0x12). The contents of this memory address is updated with the result of the operation (0xA1). The status flags of the CPU are updated after the execution of the instruction.

Figure 15-43. Example: Register-Byte operation.

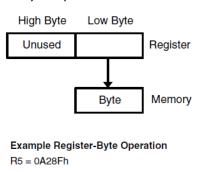

R6 = 0203h
Mem(0203h) = 012h

ADD.B

R5,0(R6)

08Fh
+ 012h
0A1h


Mem (0203h) = 0A1hC = 0, Z = 0, N = 1

■ Let us consider another example:

ADD.B @R6,R5

The contents of the memory address pointed to by R6 (0x5F) are added to the contents of the least significant byte of register R5 (0x02). The result of this operation (0x61) is stored in the least significant byte of register R5. Meanwhile, the most significant byte of the register R5 is set to zero. The flags of the system status register R2 are updated in accordance with the result.

Figure 15-44. Example: Byte- Register operation.

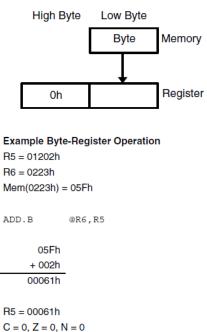


Instructions format

In addition to the 27 instructions of the CPU there are 24 emulated instructions. The CPU coding is unique. The emulated instructions make it easier to read and write code, but do not have their own op-codes. In practice, the emulated instructions are replaced automatically by instructions from the CPU. There are no penalties for using emulated instructions.

There are three formats used to encode the instructions of the CPU core:

Double operand;Single operand;Jumps.

The instructions for double and single operands, depending on the suffix used, (.W) word or (.B) byte, allow word or byte data access, respectively. If the suffix is ignored, the instruction processes word data by default.

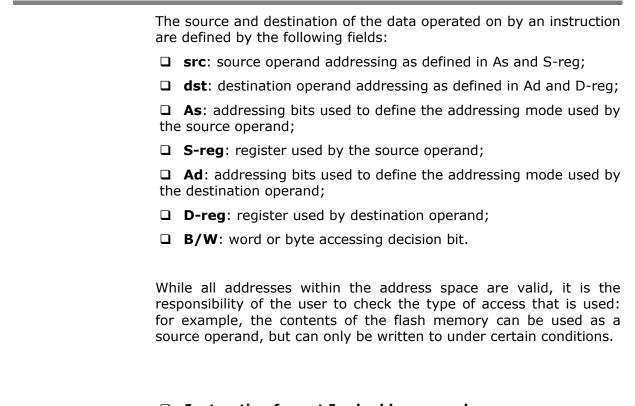

 $f \square$ Instruction format I - double operand

The following figure shows the organization of instructions with two operands:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	Op-	code			S-F	Reg		Ad	B/W	Δ	ıs		D-F	Reg	

The following table shows the instructions that use this format.

Table 15-13. Double operand instructions.

Mnemonic	Operation	Description
Arithmetic instructions		
ADD(.B or .W) src,dst	src+dst→dst	Add source to destination
ADDC(.B or .W) src,dst	src+dst+C→dst	Add source and carry to destination
DADD(.B or .W) src,dst	src+dst+C→dst (dec)	Decimal add source and carry to destination
SUB(.B or .W) src,dst	dst+.not.src+1→dst	Subtract source from destination
SUBC(.B or .W) src,dst	dst+.not.src+C→dst	Subtract source and not carry from destination
Logical and register cont	rol instructions	
AND(.B or .W) src,dst	$src.and.dst \rightarrow dst$	AND source with destination
BIC(.B or .W) src,dst	$.$ not.src.and.dst \rightarrow dst	Clear bits in destination
BIS(.B or .W) src,dst	src.or.dst→dst	Set bits in destination
BIT(.B or .W) src,dst	src.and.dst	Test bits in destination
XOR(.B or .W) src,dst	src.xor.dst→dst	Exclusive OR (XOR) source with destination
Data instructions		
CMP(.B or .W) src,dst	dst-src	Compare source with destination
MOV(.B or .W) src,dst	src→dst	Move source to destination

The instructions CMP and SUB are identical, except for the way the result is stored. The same goes for the BIT and AND instructions.

Examples using double operand format

☐ Move the contents of register R5 to register R4:

MOV R5, R4

Instruction code: 0x4504

Op-code	S-reg	Ad	B/W	As	D-reg
0 1 0 0	0 1 0 1	0	0	0 0	0 1 0 0
MOV	R5	Register	16-Bits	Register	R4

- This instruction uses 1 word;
- The instruction coding specifies that the CPU must perform a 16-bit data MOV instruction, with the source contents in register R5 and the destination contents in register R4.

☐ Move the contents of register R5 to the address in memory TONI:

MOV R5, TONI

Instruction code: 0x4580

Op-code	S-reg	Ad	B/W	As	D-reg
0100	0101	1	0	0 0	0000
MOV	R5	Symbolic	16 Bits	Register	PC

- This instruction uses 2 words;
- The instruction coding specifies that the CPU must perform a 16-bit data MOV instruction, with the source contents in register R5 and the destination memory address pointed to by X1 + PC;
- The word x1 is stored in the word following the instruction.

fill Move the contents between the memory addresses EDEN and TONI:

MOV EDEN, TONI

Instruction code: 0x4090

Op-code	S-reg	Ad	B/W	As	D-reg
0 1 0 0	0000	1	0	0 1	0000
MOV	PC	Symbolic	16-Bits	Symbolic	PC

- This instruction uses 3 words;
- The instruction coding specifies that the CPU must perform a 16-bit data MOV instruction, with source contents of the EDEN memory address pointed to by X1 + PC to the TONI memory address pointed to by X2 + PC;
- The x1 word followed by the word x2 are stored in the 2 words after the instruction.

☐ Instruction format II - Single operand

The instructions with a single operand are coded using the structure described in the following figure:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
			C	p-cod	е				B/W	A	νd		D/S	-Reg	

The set of instructions that use this coding method is shown in the following table:

Table 15-14. Single operand instructions.

Mnemonic	Operation	Description
Logical and register con	trol instructions	
RRA(.B or .W) dst	$MSB \rightarrow MSB \rightarrowLSB \rightarrow C$	Rotate destination right
RRC(.B or .W) dst	C→MSB→LSB→C	Rotate destination right through (from) carry
SWPB(or .W) dst	Swap bytes	Swap bytes in destination
SXT dst	bit 7→bit 8bit 15	Sign extend destination
PUSH(.B or .W) src	SP-2 \rightarrow SP, src \rightarrow @SP	Push source on stack
Program flow control in	structions	
CALL(.B or .W) dst	SP-2 \rightarrow SP, PC+2 \rightarrow @SP dst \rightarrow PC	Subroutine call to destination
RETI	TOS→SR, SP+2→SP TOS→PC, SP+2→SP	Return from interrupt

The CALL instruction can be used with any addressing mode. The word following the instruction contains the routine address when the symbolic, immediate, absolute or indexed addressing modes are used.

Examples using single operand format

□ Rotate the contents of register R5 to the right with carry flag:

RRC R5

Instruction code: 0x1005

Op-code	B/W	Ad	D-reg
00010000	0	0 0	0 1 0 1
RRC	16 bits	Register	R5

- This instruction uses 1 word;
- The instruction coding specifies that the CPU must perform a 16-bit data RRC instruction with the contents of the register R5.
- lacktriangledown Rotate the contents of memory location TONI to the right with carry flag:

RRC TONI


Instruction code: 0x1010

Op-code	B/W	Ad	D-reg
00010000	0	0 1	0000
RRC	16 bits	Symbolic	PC

- This instruction uses 2 words;
- The instruction coding specifies that the CPU must perform a 16-bit data RRC instruction using the value pointed to by X1 + PC;
- The word x1 is stored in the word following the instruction.

□ Jump instructions

These instructions are used to direct program flow to another part of the program. The instruction format used to represent jumps is shown in the following figure:

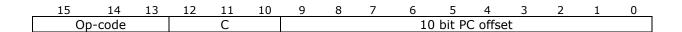

The set of instructions that use this format is given in the following table:

Table 15-15.	Drogram	flow	control	(jumn)	instructions
1 avie 15-15.	Piouiaiii	HOW	COITLIOI	(lullib)	i iiiSti uttioiiS.

Mnemonic	Description	
Program flow contr	ol instructions	
JEQ/JZ label	Jump to label if zero flag is set	
JNE/JNZ label	Jump to label if zero flag is reset	
JC label	Jump to label if carry flag is set	
JNC label	Jump to label if carry flag is reset	
JN label	Jump to label if negative flag is set	
JGE label	Jump to label if greater than or equal	
JL label	Jump to label if less than	
JMP label	Jump to label unconditionally	

The op-code always takes the value 001b, indicating that it is a jump instruction. The condition on which there is a jump depends on the 3-bit C (condition) field and may take the following values:

- □ 000b: jump if not equal;
- □ 001b: jump if equal;
- □ 010b: jump if carry flag equal to zero;
- □ 011b: jump if carry flag equal to one;
- \square 100b: jump if negative (N = 1);
- \square 101b: jump if greater than or equal (N = V or (N OR V = 0));
- \square 110b: jump if lower (N! = V or (V XOR N = 1));
- □ 111b: unconditional jump.

The jumps are executed based on the program counter (PC) contents, are controlled by the status bits, but do not affect the status bits. The jump offset is represented by a signed 10-bit value, as given in the following expression:

$$PC_{new} = PC_{old} + 2 + PC_{offset} \times 2$$

The range of the jump can be between -511 to 512 words in relation to the PC position.

Examples using jump format

☐ Continue to execute code at the label main if carry flag is active:

JC main

Instruction code: 0x2FE4

Op-code	С	10-Bit PC offset
0 0 1	0 1 1	1111100100
JC	carry = 1	- 0x1C

- The instruction uses 1 word;
- The instruction coding specifies that the PC must be loaded with the value resulting from the offset 0x1C being applied to the previous expression.

☐ Continue execution unconditionally at the label main:

JMP main

Instruction code: 0x3FE3

Op-code	С	10-Bit PC offset
0 0 1	111	1111100011
JMP	unconditional	- 0x1D

- This instruction uses 1 word;
- The instruction coding specifies that the PC must be loaded with the value resulting from the offset 0x1D being applied to the previous expression.

□ *Emulated instructions*

In addition to the 27 CPU instructions, there are 24 emulated instructions, which are listed in the following table:

Table 15-16. Emulated instructions.

Mnemonic	Operation	Emulation	Description
Arithmetic instruction	ns		
ADC(.B or .W) dst	dst+C→dst	ADDC(.B or .W) #0,dst	Add carry to destination
DADC(.B or .W) dst	$dst+C\rightarrow dst$ (decimally)	DADD(.B or .W) #0,dst	Decimal add carry to destination
DEC(.B or .W) dst	dst-1→dst	SUB(.B or .W) #1,dst	Decrement destination
DECD(.B or .W) dst	dst-2→dst	SUB(.B or .W) #2,dst	Decrement destination twice
INC(.B or .W) dst	dst+1→dst	ADD(.B or .W) #1,dst	Increment destination
INCD(.B or .W) dst	dst+2→dst	ADD(.B or .W) #2,dst	Increment destination twice
SBC(.B or .W) dst	dst+0FFFFh+C→dst dst+0FFh→dst	SUBC(.B or .W) #0,dst	Subtract source and borrow /.NOT. carry from dest.
Logical and register of	control instructions		
INV(.B or .W) dst	.NOT.dst→dst	XOR(.B or .W) #0(FF)FFh,dst	Invert bits in destination
RLA(.B or .W) dst	$C \leftarrow MSB \leftarrow MSB - 1LSB + 1 \leftarrow LSB \leftarrow 0$	ADD(.B or .W) dst,dst	Rotate left arithmetically
RLC(.B or .W) dst	C←MSB←MSB- 1LSB+1←LSB←C	ADDC(.B or .W) dst,dst	Rotate left through carry

Table 15-16. Emulated instructions (continued).

Mnemonic	Operation	Emulation	Description
Data instructions			
CLR(.B or .W) dst	0→dst	MOV(.B or .W) #0,dst	Clear destination
CLRC	0→C	BIC #1,SR	Clear carry flag
CLRN	0→N	BIC #4,SR	Clear negative flag
CLRZ	0→Z	BIC #2,SR	Clear zero flag
POP(.B or .W) dst	@SP→temp SP+2→SP temp→dst	MOV(.B or .W) @SP+,dst	Pop byte/word from stack to destination
SETC	1→C	BIS #1,SR	Set carry flag
SETN	1→N	BIS #4,SR	Set negative flag
SETZ	1→Z	BIS #2,SR	Set zero flag
TST(.B or .W) dst	dst + 0FFFFh + 1 dst + 0FFh + 1	CMP(.B or .W) #0,dst	Test destination
Program flow contr	ol		
BR dst	dst→PC	MOV dst,PC	Branch to destination
DINT	0→GIE	BIC #8,SR	Disable (general) interrupts
EINT	1→GIE	BIS #8,SR	Enable (general) interrupts
NOP	None	MOV R3,R3	No operation
RET	@SP→PC SP+2→SP	MOV @SP+,PC	Return from subroutine

Examples using emulated instructions

☐ Clear the contents of the register R5:

CLR R5

Instruction code: 0x4305

Op-code	S-reg	Ad	B/W	As	D-reg
0100	0011	0	0	0 0	0 1 0 1
MOV	R3	Register	16 Bits	Register	R5

- This instruction is equivalent to using the instruction MOV R3, R5 where R3 contains the value #0.
- ☐ Increment the content of the register R5:

INC R5

Instruction code: 0x5315

Op-code	S-reg	Ad	B/W	As	D-reg
0 1 0 1	0 0 1 1	0	0	0 1	0 1 0 1
ADD	R3	Register	16 Bits	Indexed	R5

■ This instruction is equivalent to using the instruction ADD 0(R3), R5 where R3 takes the value #1.

□ Decrement the contents of the register R5:

DEC R5

Instruction code: 0x8315

Op-code	S-reg	Ad	B/W	As	D-reg
1000	0011	0	0	0 1	0 1 0 1
SUB	R3	Register	16 Bits	Indexed	R5

■ This instruction is equivalent to using the instruction SUB 0(R3), R5 where R3 takes the value #1.

☐ Decrement by 2 the contents of the register R5:

DECD R5

Instruction code: 0x8325

Op-code	S-reg	Ad	B/W	As	D-reg
1000	0011	0	0	1 0	0 1 0 1
SUB	R3	Register	16 Bits	Indirect	R5

■ This instruction is equivalent to using the instruction SUB @R3,R5 where R3 points to the value #2.

■ Do not carry out any operation:

NOP

Instruction code: 0x4303

Op-code	S-reg	Ad	B/W	As	D-reg
0100	0011	0	0	0 0	0011
MOV	R3	Register	16 Bits	Register	R3

■ This instruction is equivalent to using the instruction MOV R3,R3 and therefore the contents of R3 is moved to itself.

☐ Add the carry flag to the register R5:

ADC R5

Instruction code: 0x6305

Op-code	S-reg	Ad	B/W	As	D-reg
0 1 1 0	0011	0	0	0 0	0 1 0 1
ADDC	R3	Register	16 Bits	Register	R5

■ This instruction is equivalent to using the instruction ADDC R3,R5 where register R3 takes the value #0.

Addressing modes

There are seven addressing modes to indicate the location of the source operand and four addressing modes to indicate the location of the destination operand. The operands can be located in any memory space address, therefore it is up to the user to be aware of the effects that the accesses may have. The addressing modes are selected by the As and Ad fields that make up the data structure of the instruction. The following table summarizes these addressing modes:

Table 15-17. Source and destination operands of the different addressing modes.

Source opera	and instructions) ouble-operand ns)	Destination operands (double-operand instructions)			
Addressing mode	As	S-reg	Addressing mode	Ad	D-reg
Register mode	0 0	0 0 0 0 to 1 1 1 1	Register mode	0	0000to1111
Indexed mode	0 1	0 0 0 1, 0 0 1 1 to 1 1 1 1	Indexed mode	1	0 0 0 1, 0 0 1 1 to 1 1 1 1
Symbolic mode	0 1	0000	Symbolic mode	1	0000
Absolute mode	0 1	0010	Absolute mode	1	0010
Indirect register mode	1 0	0 0 0 0 to 1 1 1 1			
Indirect auto increment mode	1 1	0 0 0 1 to 1 1 1 1			
Immediate mode	1 1	0000			

□ Register mode

In register addressing mode, the contents of the register is used as an operand. This type of addressing mode can be used both for the source operand and the destination operand.


☐ Move the contents of the register R5 to the register R4:

MOV R5,R4

Instruction code: 0x4504

Op-code	S-reg	Ad	B/W	As	D-reg
0 1 0 0	0 1 0 1	0	0	0 0	0100
MOV	R5	Register	16-bit	Register	R4

- The 16-bit contents (B/W = 0) of the register R5 (S-reg = 0101) is transferred to the register R4 (D-reg = 0100);
- After instruction fetch, the PC is incremented by 2 and points to the next instruction;
- The addressing mode used for the source and destination operands is specified by Ad = 0 (Register mode) and As = 00 (Register mode).

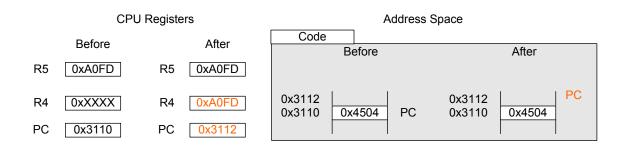

□ Indexed mode

In indexed mode, whether it is used to indicate the source address or the destination address of the operands, the sum of the register and the signed offset points to the operand in memory. The offset value is stored in the word following the instruction. After execution, the contents of the registers are not affected and the PC is incremented to point to the next instruction to be executed. This addressing mode is useful to access data stored in tables. Apart from the registers PC and SR, all other registers can be used as an index in indexed mode.

 \square Move the byte pointed to by (R5 + 4) to the byte pointed to by (R4 + 1):

MOV.B 4(R5),1(R4)

Instruction code: 0x45D4

Op-code	S-reg	Ad	B/W	As	D-reg
0 1 0 0	0 1 0 1	1	1	0 1	0 1 0 0
MOV	R5	Indexed	8-bit	Indexed	R4

■ The instruction coding specifies that the byte (B/W = 1) pointed to by the sum of the register R5 contents

(S-reg = 0101) and the word X1 should be moved to the memory address pointed to by the sum of the register R4 (D-reg = 0100) contents and the word X2;

- The words x1 and x2 are located in the memory addresses following the instruction;
- The addressing mode used for the source and destination operands is specified by the bits Ad = 1 (Indexed mode) and As = 01 (Indexed mode), because D-reg = 0100 and S-reg = 0101 respectively.

	CPL Before	J Registers After	Code Address Space Before After
DE			0x3116 0x3116 PC
R5	0x0200	R5 0x0200	0x3114
R4	0x0200	R4 0x0200	0x3112 0x0004 X1 0x3112 0x0004 X1 0x3110 0x45D4 PC 0x3110 0x45D4 X1
PC	0x3110	PC 0x3116	
	Destination A	Address 0x0200 (R4) +0x0001 (X2) 0x0201	Data 0x0206 0x0206 0x0206 0x0204 0x9ABC 0x0202 0x5678 0x0202 0x5678 0x0200 0x1234 1(R4) 0x0200 0x129A 1(R4) 0x0200 0x129A 1(R4)
	Source Add	dress 0x0200 +0x0004 0x0204 (R5) (X1)	0x0206 0x0204 0x0202 0x0202 0x0200 0x9ABC 0x5678 0x1234 4(R5) 0x0206 0x0204 0x0202 0x0202 0x5678 0x0200 4(R5) 0x0206 0x0202 0x5678 0x0200 4(R5)

□ Symbolic Mode

In symbolic addressing mode, for either source or destination operands, the address is calculated by adding an offset to the program counter (PC) register. The offset value is obtained by determining the code position in the memory, then calculating the difference between the offset address and the memory position that should be achieved. The assembler determines the offset value and puts it in the word following the instruction. After the execution of the current instruction, the PC register is incremented to point to the next instruction.

Although this mode of address is similar to register mode it request more cycles, but now, the program counter (PC) is used to point to the operand. This addressing mode can be used to specify the source and the destination of the data.


lacktriangle Move the word pointed to by EDEN to the word pointed to by TONI:

MOV EDEN, TONI

Instruction code: 0x4090

Op-code	S-reg	Ad	B/W	As	D-reg
0 1 0 0	0000	1	0	0 1	0000
MOV	PC	Symbolic	16-bit	Symbolic	PC

- The instruction coding specifies that the value pointed to by the sum of the PC register contents (S-reg = 0) and the word X1 should be moved to the memory address pointed to by the sum of the register PC contents (D-reg = 0) and the word X2;
- The words x1 and x2 are stored in the memory addresses following the instruction;
- The addressing mode used for the source and destination operands is specified by the bits Ad = 1 (Symbolic mode) and As = 01 (Symbolic mode), because D-reg = 0000 and S-reg = 0000, respectively.

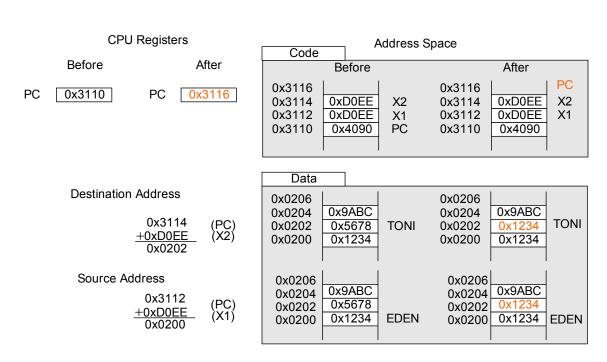

□ Absolute Mode

Another way of addressing the data is defined in absolute mode. The numeric value of the data memory address is placed after the instruction. The difference between this addressing mode and indexed mode is that the register R2 is now used as an index, using the constant generator to generate the value zero. This addressing mode can be used to define both the data source address and the data destination address.


☐ Move the word pointed to by EDEN to the word pointed to by TONI:

MOV &EDEN, &TONI

Instruction code: 0x4292

Op-code	S-reg	Ad	B/W	As	D-reg
0100	0 0 1 0	1	0	0 1	0010
MOV	R2/CG1	Absolute	16-bit	Absolute	R2/CG1

- From the instruction coding it can be seen that the register R2/CG1 (S-reg = 0010) and (D-reg = 0010) is used as an addresses index, in which the constant generator loads the value zero;
- When the contents of this register is added to the offset value x1 or x2 located in the two words following the instruction, the source and destination addresses of the operands are obtained;
- The addressing mode used for the source and destination operands is specified by the bits Ad = 1 (Absolute mode) and As = 01 (Absolute mode), because D-reg = 0010 and S-reg = 0010, respectively.

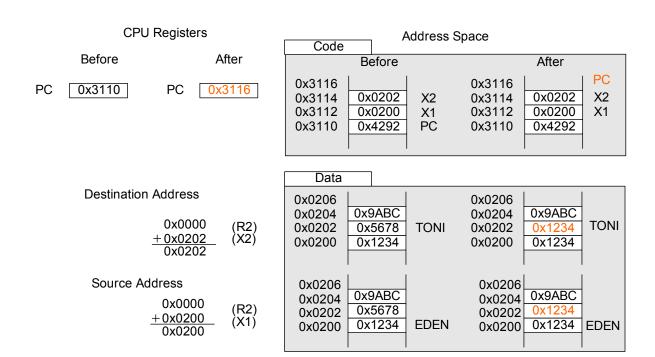

□ Indirect register mode

In this addressing mode, any of the 16 CPU registers can be used. If R2 or R3 are used then a constant value is used as an operand, #0x04 for R2 and #0x2 for R3. A restriction arises from the fact that this addressing mode can only be used to specify the source operand address in dual-operand instructions. A way to avoid this restriction is to use the indexed mode to indicate the destination operand address, with a zero offset.

☐ Move the word pointed to by R5 to the word pointed to by R4:

MOV @R5,0(R4)


Instruction code: 0x45A4

Op-code	S-reg	Ad	B/W	As	D-reg
0 1 0 0	0 1 0 1	1	0	1 0	0 1 0 0
MOV	R5	Indexed	16-bit	Indirect	R4

- The instruction coding specifies that the register R5 (S-reg = 0101) has the source address (As = 10);
- The destination address is pointed to in indexed mode (Ad = 1) by R4 (D-reg = 0100), using a zero value offset.



	Before		After
R5	0x0200	R5	0x0200
R4	0x0202	R4	0x0202
PC	0x3110	PC	0x3114

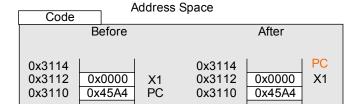

Destination Address

Source Address

Data						
0x0206 0x0204 0x0202 0x0200	0x9A 0x56 0x12	378	0(R4)	0x0206 0x0204 0x0202 0x0200	0x9ABC 0x1234 0x1234	0(R4)
0x0206 0x0204 0x0202 0x0200	0x9A 0x56 0x12	378	@R5	0x0206 0x0204 0x0202 0x0200	0x9ABC 0x1234 0x1234	@R5

☐ Indirect auto-increment mode

This addressing mode is similar to the previous one. The contents of the source register are incremented according to the data type processed. If the data value is of size byte, the source register is incremented by 1. If the data value is of size word, the register is incremented by 2. Note that this addressing mode can only be used to define the source operand in dual-operand instructions.

□ Move the word pointed to by R5 to the word pointed to by R4, and increment the source pointer:


Instruction code: 0x45B4

Op-code	S-reg	Ad	B/W	As	D-reg
0 1 0 0	0 1 0 1	1	0	1 1	0 1 0 0
MOV	R5	Indexed	16-bit	Ind. aut. inc.	R4

- The instruction coding specifies that the register R5 (S-reg = 0101) has the source address with As = 11;
- The destination address is pointed to in indexed mode by R4 (D-reg = 0100), using a zero value as offset;
- The execution of the instruction increments the contents of the register R5 by 2.

CPU Registers

	Before		After
R5	0x0200	R5	0x0202
R4	0x0202	R4	0x0202
PC	0x3110	PC	0x3114

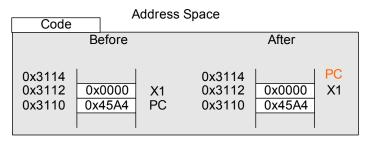

Destination Address

Source Address

Data					
0x0206 0x0204 0x0202 0x0200	0x9ABC 0x5678 0x1234	0(R4)	0x0206 0x0204 0x0202 0x0200	0x9ABC 0x1234 0x1234	0(R4)
0x0206 0x0204 0x0202 0x0200	0x9ABC 0x5678 0x1234	@R5	0x0206 0x0204 0x0202 0x0200	0x9ABC 0x1234 0x1234	@R5

□ Immediate mode

The immediate addressing mode allows loading values in registers or memory addresses. It can only be used as a source operand.


☐ Move the value 0x0200 to R5:

MOV #0x0200,R5

Instruction code: 0x4035

Op-code	Op-code S-reg		B/W	As	D-reg
0100 0000		0	0	1 1	0 1 0 1
MOV	PC	Register	16-bit	Immediate	R5

■ The instruction coding specifies that the register PC (S-reg = 0000) is used to define the location of the word in memory that loads the register R5 (D-reg = 0101) with Ad = 11.

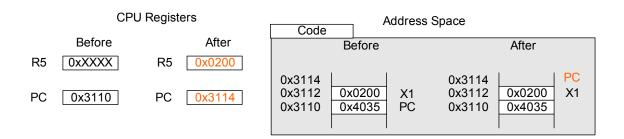

15.3.2 Exploring the addressing modes of the MSP430X CPU architecture

Main features of the MSP430X CPU architecture

The MSP430X CPU extends the addressing capabilities of the MSP430 family beyond 64 kB to 1 MB. To achieve this, there are some changes to the addressing modes and two new types of instructions. One type of new instructions allows access to the entire address space, and the other is designed for address calculations.

The MSP430X CPU address bus is 20 bits, but the data bus is still 16 bits. The CPU supports 8-bit, 16-bit and 20-bit memory accesses. Despite these changes, the MSP430X CPU remains compatible with the MSP430 CPU, having a similar number of registers. A block diagram of the MSP430X CPU is shown in the figure below:

MDB - Memory Data Bus Memory Address Bus - MAB R0/PC Program Counter R1/SP Pointer Stack R2/SR Status Register R3/CG2 Constant Generator R4 General Purpose R5 General Purpose R6 General Purpose R7 General Purpose R8 General Purpose R9 General Purpose R10 General Purpose R11 General Purpose R12 General Purpose R13 General Purpose R14 General Purpose R15 General Purpose 20 16 Zero, Z-Carry, C MCLK 16/20-bit ALU Overflow, V

Figure 15-45. MSP430X CPU block diagram.

Although the MSP430X CPU structure is similar to that of the MSP430 CPU, there are some differences that will now be discussed.

With the exception of the status register SR, all MSP430X registers are 20 bits. The CPU can now process 20-bit or 16-bit data.

□ R0 (PC) - Program Counter

Negative,N

Has the same function as the MSP430 CPU, although now it has 20 bits.

□ R1 (SP) - Stack Pointer

Has the same function as the MSP430 CPU, although now it has 20 bits.

□ R2 (SR) - Status Register

Has the same function as the MSP430 CPU, but still only has 16 bits.

Table 15-18. Description of the SR bits.

Bit	Description				
Reserved	Reserved				
V	Overflow bit. This bit is set wher overflows the signed-variable ra	n the result of an arithmetic operation nge.			
	ADD(.B), ADDX(.B,.A), ADDC(.B), ADDCX(.B.A), ADDA	Set when: positive + positive = negative negative + negative = positive otherwise reset			
	SUB(.B), SUBX(.B,.A), SUBC(.B),SUBCX(.B,.A), SUBA, CMP(.B), CMPX(.B,.A), CMPA	Set when: positive – negative = negative negative – positive = positive otherwise reset			
SCG1	System clock generator 1. This bit, when set, turns off the DCO dc generator if DCOCLK is not used for MCLK or SMCLK.				
SCG0	System clock generator 0. This bit, when set, turns off the FLL+ loop control.				
OSCOFF	Oscillator Off. This bit, when set when LFXT1CLK is not used for	turns off the LFXT1 crystal oscillator MCLK or SMCLK.			
CPUOFF	CPU off. This bit, when set, turn	s off the CPU.			
GIE	General interrupt enable. This b rupts. When reset, all maskable	it, when set, enables maskable inter- interrupts are disabled.			
N	Negative bit. This bit is set wher and cleared when the result is p	n the result of an operation is negative ositive.			
Z	Zero bit. This bit is set when the cleared when the result is not ze	result of an operation is zero and ero.			
С	Carry bit. This bit is set when the carry and cleared when no carry	e result of an operation produced a occurred.			

□ R2 (CG1) and R3 (CG2) - Constant Generators

The registers R2 and R3 can be used to generate six different constants commonly used in programming, without the need to add an extra 16-bit word of code to the instruction. The constants below are chosen based on the bit (As) of the instruction that selects the addressing mode.

Table 15-19. Values of constant generators.

Register	As	Constant	Remarks
negistei	Α3	Constant	Heiliaiks
R2	00	-	Register mode
R2	01	(0)	Absolute address mode
R2	10	00004h	+4, bit processing
R2	11	00008h	+8, bit processing
R3	00	00000h	0, word processing
R3	01	00001h	+1
R3	10	00002h	+2, bit processing
R3	11	FFh, FFFFh, FFFFFh	-1, word processing

Whenever the operand is one of these six constants, the registers are selected automatically. Therefore, when used in constant mode, registers R2 and R3 cannot be addressed explicitly by acting as source registers.


□ R4-R15 – General-purpose registers

These registers have the same function as the MSP430 CPU, although they now have 20 bits. They can store 8-bit, 16-bit or 20-bit data. Any byte written to one of these registers clears bits 19:8. Any word written to one of these registers clears bits 19:16. The exception to this rule is the instruction SXT, which extends the sign value to fill the 20-bit register.

The following figures illustrate how the operations are conducted for the exchange of information between memory and registers, for the following formats: byte (8 bits), word (16 bits) and address (20 bits).


The following figure illustrates the handling of a byte (8 bits) using the suffix .B.

Figure 15-46. Example: Register-Byte/Byte-Register operation.

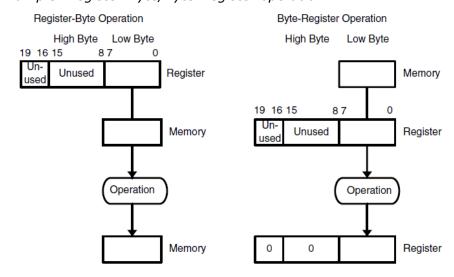


The following figure illustrates the handling of a word (16-bit) using the suffix . \mathbb{W} .

Figure 15-47. Example: Register-Word/Word-Register operation.

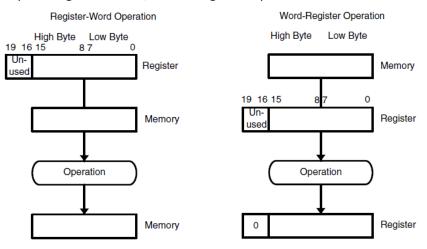

The following figure illustrates the manipulation of an address (20 bits) using the suffix .A.

Figure 15-48. Example: Register - Address-Word operation.

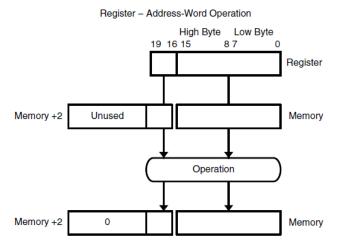

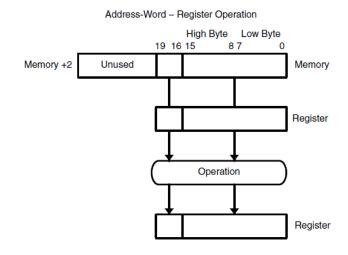


Figure 15-49. Example: Address-Word - Register operation.

Instructions format for the MSP430X CPU

There are three possibilities in the choice of instructions for use with the MSP430X CPU:

- ☐ Use only the MSP430 CPU instructions taking care to adhere to the following rules, with the exceptions of the instructions CALLA/RETA, and BRA:
 - Put all the data in memory below 64 kB and access it using 16-bit pointers;
 - Place the routines in an address within the range PC±32 kB;
 - No 20-bit data.
- ☐ Use only the MSP430X CPU instructions, with the effect of reduced application execution speed and an increase in the space occupied by the program;
- ☐ Use an appropriate selection of the instruction types to use.

The MSP430X CPU supports all functions of the MSP430 CPU. It also offers a set of instructions that provide full access to the 20-bit addressing space. An additional op-code word is added to some of the instructions. All addresses, indexes and immediate numbers have 20 bits.

□ Extension word for the register addressing mode

In register addressing mode, the extension word of an instruction of format type I (two operands) or of format type II (single operand) is given in the figure below:

Figure 15-50. Extension word of an instruction format types I or II - Register mode.



The description of each field is given in the following table:

Table 15-20. Bit description of the extension word (instruction format types I or II - Register mode).

Bit	Description									
15:11	Extension word op-code. Op-codes 1800h to 1FFFh are extension words.									
10:9	Reserved									
ZC	 Zero carry bit. 0: The executed instruction uses the status of the carry bit C. 1: The executed instruction uses the carry bit as 0. The carry bit will be defined by the result of the final operation after instruction execution. 									
#	 Repetition bit. 0: The number of instruction repetitions is set by extension-word bits 3:0. 1: The number of instructions repetitions is defined by the value of the four LSBs of Rn. See description for bits 3:0. 									
A/L	Data length extension bit. Together with the B/W-bits of the following MSP430 instruction, the AL bit defines the used data length of the instruction.									
	A/L B/W Comment									
	0 0 Reserved									
	0 1 20-bit address-word									
	1 0 16-bit word									
	1 1 8-bit byte									
5:4	Reserved									
3:0	Repetition Count. # = 0: These four bits set the repetition count n. These bits conta n - 1. # = 1: These four bits define the CPU register whose bits 3:0 set the number of repetitions. Rn.3:0 contain n - 1.									

The MSP430X CPU supports the repeated execution of the same instruction, provided that the operands are of the type register. The repetition is set by the repeat \mathtt{RPT} instruction placed before the

instruction to be executed. The assembler incorporates information in the extension word in the field # (bit 7) and the repetition counter (bits 3:0). An example of this feature will be provided later.

☐ Extension word for the other addressing modes

The extension word of an instruction in a non-register addressing mode, whether of format I (double operands) or of format II (single operand), is shown in the figure below:

Figure 15-51. Extension word of an instruction format types I or II - other modes..

15			12	11	10 7	6	5	4	3	0
0	0	0	1	1	Source bits 19:16	A/L	0	0	Destination	bits 19:16

The description of each field is given in the following table:

Table 15-21. Bit description of the extension word (instruction format types I or II - other mode).

Bit	Desc	ription	1
15:11	Exter	•	ord op-code. Op-codes 1800h to 1FFFh are exten-
Source Bits 19:16	addre	essing	BBs of the 20-bit source. Depending on the source mode, these four MSBs may belong to an immedia, an index or to an absolute address.
A/L	lowin	ıg MSP	extension bit. Together with the B/W-bits of the fol- 430 instruction, the AL bit defines the used data e instruction.
	A/L	B/W	Comment
	0	0	Reserved
	0	1	20 bit address-word
	1	0	16 bit word
	1	1	8 bit byte
5:4	Rese	erved	
Destination Bits 19:16	tinati	on add	BBs of the 20-bit destination. Depending on the desressing mode, these four MSBs may belong to an an absolute address.

☐ Extended format I -double operand- instructions

There are twelve extended instructions that use two operands, as listed in the following table:

Table 15-22. Double operand instructions.

			S	tatu	s Bit	s
Mnemonic	Operands	Operation	٧	Ν	Z	С
MOVX(.B,.A)	src,dst	$\text{src} \rightarrow \text{dst}$	-	-	-	-
ADDX(.B,.A)	src,dst	$\text{src} + \text{dst} \rightarrow \text{dst}$	*	*	*	*
ADDCX(.B,.A)	src,dst	$src + dst + C \rightarrow dst$	*	*	*	*
SUBX(.B,.A)	src,dst	$\text{dst} + .\text{not.src} + \textbf{1} \rightarrow \text{dst}$	*	*	*	*
SUBCX(.B,.A)	src,dst	$dst + .not.src + C \rightarrow dst$	*	*	*	*
CMPX(.B,.A)	src,dst	dst - src	*	*	*	*
DADDX(.B,.A)	src,dst	$\text{src} + \text{dst} + \text{C} \rightarrow \text{dst (decimal)}$	*	*	*	*
BITX(.B,.A)	src,dst	src .and. dst	0	*	*	Z
BICX(.B,.A)	src,dst	.not.src .and. dst \rightarrow dst	_	-	-	-
BISX(.B,.A)	src,dst	$\text{src .or. dst} \rightarrow \text{dst}$	-	_	_	-
XORX(.B,.A)	src,dst	$\text{src .xor. dst} \to \text{dst}$	*	*	*	Z
ANDX(.B,.A)	src,dst	$\text{src .and. dst} \rightarrow \text{dst}$	0	*	*	Z

- * The status bit is affected
- The status bit is not affected
- 0 The status bit is cleared
- 1 The status bit is set

Examples of coding in this format:

■ Move the contents of the register R5 to the register R4:

MOVX R5,R4

Instruction code: 0x1840 - 0x4504

0	0	0	1	1	0	0	ZC	#	A/L	0 0		n-1/Rn		
0	0	0	1	1	0	0	0	0	1	0	0	0000		
	Op-code		;	S-reg				Ad	B/W	A	S	D-reg		
	0100			0 1 0 1			0	0	0 0		0 10 0			
	MOVX			R5				Register	16-bit	Regi	ster	R4		

- This instruction uses 2 words;
- The instruction coding specifies that the CPU must perform the 16-bit data function MOVX, with the contents of the source register R5 to the destination register R4.
- figure Move the contents of the register R5 to the memory address TONI:

MOVX R5, TONI

Instruction code: 0x184F - 0x4580

0	0	0	1	1	1 src 19:16 A/L			0	0	dst 19:16	
0	0	0	1	1	0	0 0 0	1	0	0	1111	
Op-code		•		S-reg	Ad	B/W	A	S	D-reg		
0100					0 1 0 1	1 0		0	0	0000	
MOVX R5				R5	Symbolic	16-bits	Regi	ster	PC		

- This instruction uses 3 words;
- The instruction coding specifies that the CPU must perform the 16-bit data function MOVX, the source being the contents of register R5 and the destination being the memory address pointed to by (dst 19:16: X1 + PC);
- The destination (dst bits 19:16) is stored in the extension word and the word x1 is stored in the word following the instruction.
- $\hfill \Box$ Move the contents of the memory address TONI to the register R5:

MOVX TONI, R5

Instruction code: 0x1FC0 - 0x4015

0	0	0	1	1	sro	19:16	A/L	0	0	dst 19:16	
0	0	0	1	1	1	111	1	0	0	0000	
Op-code		•		S-reg	Ad	B/W	A	s	D-reg		
	0100				0000	0	0	0 1		0 1 0 1	
MOVX					PC	Register	16-bit	Symbolic		R5	

- This instruction uses 3 words;
- The instruction coding specifies that the CPU must perform the 16-bit data function MOVX, the source being the contents of memory address pointed to by (src 19:16: X1 + PC) and the destination being register R5;
- The destination (dst bits 19:16) are stored in the extension word and the word X1 is stored in the word following the instruction.
- ☐ Move the contents of the memory address TONI to the address memory EDEN:

MOVX TONI, EDEN

Instruction code: 0x1FCF - 0x4090

0	0	0	1	1	src	19:16	A/L	0	0	dst 19:16		
0	0	0	1	1	1	1 1 1	1	0	0	1111		
	Op-code		;		S-reg	Ad	B/W	A	5	D-reg		
	0100				0000	1	0		1	0000		
	MOVX				PC	Symbolic	16-Bit	Syml	oolic	PC		

- This instruction uses 4 words;
- The instruction coding specifies that the CPU must perform the 16-bit data function MOVX, the source being the contents of memory address pointed to by (src 19:16: X1 + PC) and the destination being the contents of the memory address pointed to by (dst 19:16: X2 + PC);
- The source (src bits 19:16) and the destination (dst bits 19:16) are stored in the extension word. The words X1 and X2 are stored after the instruction.

☐ Extended format II - single operand- instructions

The extended instructions of type format II are listed in the table below:

Table 15-23. Single operand instructions.

		Operation		St	atu	s Bi	ts
Mnemonic	Operands	n		٧	N	Z	С
CALLA	dst	Call indirect to subroutine (20-bit address)		-	-	-	-
POPM.A	#n,Rdst	Pop n 20-bit registers from stack 1 –	16	-	_	_	-
POPM.W	#n,Rdst	Pop n 16-bit registers from stack 1 –	16	-	-	-	-
PUSHM.A	#n,Rsrc	Push n 20-bit registers to stack 1 -	16	-	-	-	-
PUSHM.W	#n,Rsrc	Push n 16-bit registers to stack 1 -	16				
PUSHX(.B,.A)	src	Push 8/16/20-bit source to stack		_	_	-	-
RRCM(.A)	#n,Rdst	Rotate right Rdst n bits through carry 1 – (16-/20-bit register)	4	0	*	*	*
RRUM(.A)	#n,Rdst	Rotate right Rdst n bits unsigned 1 – (16-/20-bit register)	4	0	*	*	*
RRAM(.A)	#n,Rdst	Rotate right Rdst n bits arithmetically 1 – (16-/20-bit register)	4	*	*	*	*
RLAM(.A)	#n,Rdst	Rotate left Rdst n bits arithmetically 1 – (16-/20-bit register)	4	*	*	*	*
RRCX(.B,.A)	dst	Rotate right dst through carry 1 (8-/16-/20-bit data)		0	*	*	*
RRUX(.B,.A)	dst	Rotate right dst unsigned (8-/16-/20-bit)		0	*	*	*
RRAX(.B,.A)	dst	Rotate right dst arithmetically 1		*	*	*	*
SWPBX(.A)	dst	Exchange low byte with high byte 1		_	_	_	_
SXTX(.A)	Rdst	Bit7 \rightarrow bit8 bit19		0	*	*	*
SXTX(.A)	dst	Bit7 \rightarrow bit8 MSB		0	*	*	*

The MSP430X CPU has some capabilities in additional to those of the MSP430 CPU:

☐ The ability to place and remove several registers to/from the stack using only a single instruction;

lacktriangle The ability to perform several rotations on the contents of a register.

Examples of coding in this format:

□ Rotate right the 20-bit contents of the register R5 with the carry flag:

RRCX.A R5

Instruction code: 0x1800 - 0x1045

0	0	0	1	1	0	0	ZC	#	A/L	0	0	n-1/Rn
0	0	0	1	1	0	0	0	0	0	0	0	0000
Op-code								B/W	A	d	D/S-reg	
000100000								1	0	0	0 1 0 1	
RRCX									20-bit	Regi	ster	R5

- This instruction uses 2 words;
- The instruction coding specifies that the CPU must perform the function RRCX using 20-bit data as the contents of register R5.

☐ Rotate right the 20-bit contents of the memory address TONI with carry flag:

RRCX.A TONI


Instruction code: 0x180F - 0x1050

0	0	0	1	1	Src 19:16	A/L	0	0	dst 19:16
0	0	0	1	1	0 0 0 0	0	0	0	1111
Op-code				Op-code	B/W	Ad		D/S-reg	
00010000						1	0 1		0000
RRCX						20-bit	Sym	bolic	PC

- This instruction uses 3 words;
- The instruction coding specifies that the CPU must perform the function RRCX using 20-bit data as the contents of the memory address pointed to by (dst 19:16: X1 + PC);
- The destination bits (dst 19:16) are stored in the extension word and the word x1 is stored in the word following the instruction;

As the instruction operand is located in memory, not in a CPU register, two words are used to store the operand, in the format given in the figure below:

Figure 15-52. Single operand format.

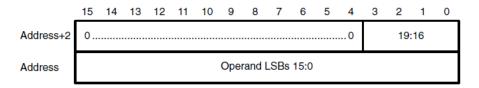

There are some exceptions to the representation of the extended format II instructions of the MSP430X CPU. The following examples illustrate these exceptions:

☐ Store the 20-bit registers R10, R9, R8 on the stack:

PUSHM.A #3,R10

The instructions PUSHM and POPM are coded according to the figure given below:

Figure 15-53. PUSHM and POPM coding format.



Instruction code: 0x142A

Op-code	n - 1	D-reg
0 0 0 1 0 1 0 0	0010	1010
PUSHM.A	#3	R10

- This instruction uses 1 word;
- The instruction coding specifies that the CPU must perform the function PUSHM of the 20-bit registers starting at register R10 and ending at register R8;
- For three registers 6 words (12 Bytes) of stack are used.

□ Rotate right three times the contents of the 20-bit register R5 with the carry flag:

The instructions RRCM, RRAM, RRUM and RLAM are coded according to the figure below:

Figure 15-54. RRCM, RRAM, RLAM coding format.

15		12	11	10	9		4	3		0
	С		n-	-1		Op-code			Rdst	

Instruction code: 0x0845


С	n-1	Op-code	R-reg
0 0 0 0	1 0	000100	0 1 0 1
	#3	RRCM	R5

- This instruction uses 1 word;
- The instruction coding specifies that the CPU must perform the function RRCM using the 20-bit register R5, a total of 3 times.
- ☐ Perform a branch in the program flow:

BRA R5

This type of instruction can be coded in three different formats, as show in the figure below:

Figure 15-55. BRA coding format.

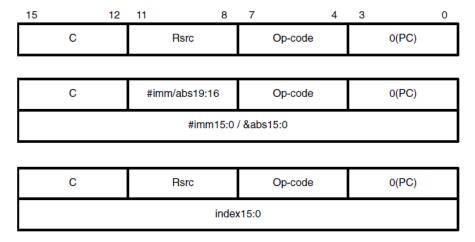

Instruction code: 0x05C0

С	R-reg	Op-code	0(PC)
0 0 0 0	0 1 0 1	1 1 0 0	0 0 0 0
	R5	BRA	PC


- This instruction uses 1 word;
- The instruction coding specifies that the CPU must load the program counter (PC) with the value contained in register R5.

□ Call a routine:

CALLA RS

This type of instruction can be coded in three different formats, as shown in the figure below:

Figure 15-56. CALL coding format.

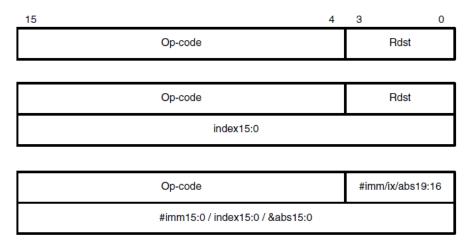

Instruction code: 0x1345

Op-code	D-reg
0001001100	0 1 0 1
CALLA	R5

- This instruction uses 1 word;
- The instruction coding specifies that the CPU must load the PC with the value contained in register R5;
- The execution of this instruction saves the PC on the data stack, so it can return at the end of the execution of the routine.

□ Extended emulated instructions

The constant generators offer a set of extended emulated instructions, which are listed in the following table:

Table 15-24. Extended emulated instructions.

Instruction	Explanation	Emulation
ADCX(.B,.A) dst	Add carry to dst	ADDCX(.B,.A) #0,dst
BRA dst	Branch indirect dst	MOVA dst,PC
RETA	Return from subroutine	MOVA @SP+,PC
CLRA Rdst	Clear Rdst	MOV #0,Rdst
CLRX(.B,.A) dst	Clear dst	MOVX(.B,.A) #0,dst
DADCX(.B,.A) dst	Add carry to dst decimally	DADDX(.B,.A) #0,dst
DECX(.B,.A) dst	Decrement dst by 1	SUBX(.B,.A) #1,dst
DECDA Rdst	Decrement dst by 2	SUBA #2,Rdst
DECDX(.B,.A) dst	Decrement dst by 2	SUBX(.B,.A) #2,dst
<pre>INCX(.B,.A) dst</pre>	Increment dst by 1	ADDX(.B,.A) #1,dst
INCDA Rdst	Increment Rdst by 2	ADDA #2,Rdst
<pre>INCDX(.B,.A) dst</pre>	Increment dst by 2	ADDX(.B,.A) #2,dst
INVX(.B,.A) dst	Invert dst	XORX(.B,.A) #-1,dst
RLAX(.B,.A) dst	Shift left dst arithmetically	ADDX(.B,.A) dst,dst
RLCX(.B,.A) dst	Shift left dst logically through carry	ADDCX(.B,.A) dst,dst
SBCX(.B,.A) dst	Subtract carry from dst	SUBCX(.B,.A) #0,dst
TSTA Rdst	Test Rdst (compare with 0)	CMPA #0,Rdst
TSTX(.B,.A) dst	Test dst (compare with 0)	CMPX(.B,.A) #0,dst
POPX dst	Pop to dst	MOVX(.B, .A) @SP+,dst

■ MSP430X address instructions

The address instructions support 20-bit operands, but they have restrictions on the addressing modes that can be used. A list of extended address instructions, with their supported addressing modes, is given in the following table:

Table 15-25, MSP430X address instructions.

			S	tatu	s Bit	s
Mnemonic	Operands	Operation	٧	N	Z	С
ADDA	Rsrc,Rdst #imm20,Rdst	Add source to destination register	*	*	*	*
MOVA	Rsrc,Rdst #imm20,Rdst z16(Rsrc),Rdst EDE,Rdst &abs20,Rdst @Rsrc,Rdst @Rsrc,Rdst Rsrc,z16(Rdst) Rsrc,&abs20	Move source to destination	-	-	-	-
CMPA	Rsrc,Rdst #imm20,Rdst	Compare source to destination register	*	*	*	*
SUBA	Rsrc,Rdst #imm20,Rdst	Subtract source from des- tination register	*	*	*	*

MSP430X CPU addressing modes

As the MSP430 CPU, the MSP430X CPU supports seven addressing modes for the source operand and four addressing modes for the destination operand. Both the instructions of the MSP430 CPU as the MSP430X CPU can be used throughout the 1 MB address space.

In the next sections we will explore the different addressing modes available in the MSP430X CPU.

□ Register mode

This addressing mode is identical to that of the MSP430 CPU. There are three different types of access to the contents of registers: 8-bit (Byte operation), 16-bit (Word operation) and 20-bit (Addressword). The instruction SXT is the only exception, as the sign of the value is extended to all the other bits of the register.


■ Move the 20-bit contents of register R5 to register R4:

MOVX.A R5,R4

Instruction code: 0x1800 - 0x4544

0	0	0	1	1	0	0	ZC	#	A/L	0	0	n-1/Rn
0	0	0	1	1	0	0	0	0	0	0	0	0000
	Op-	code	;		S-	reg		Ad	B/W	Α	s	D-reg
	0 1	0 0			0 1	0 1		0	1	0	0	0 1 0 0
	MC	VX			F	२5		Register	20-bit	Regi	ster	R4

- This instruction uses 2 words.
- The 20-bit contents (B/W = 1 and A/L = 0) of register R5 (S-reg = 0101) is transferred to register R4 (D-reg = 0100);
- After the execution of the instruction, the PC is incremented by 4 and points to the next instruction;
- The addressing mode used for the source and destination operands is specified by Ad = 0 (Register mode) and As = 00 (Register mode).

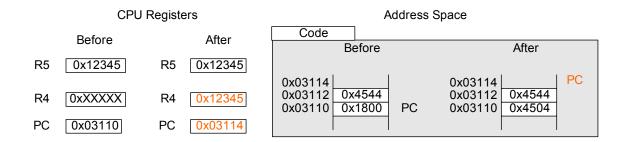

□ Indexed mode

The indexed mode can be used in three different situations:

■ Indexed mode in the memory address space below 64 kB:

If the CPU register Rn points to a memory address located below 64 kB, the address resulting from the sum of the index and the register Rn has the value zero in bits 19:16, thus ensuring that the address is always located in memory below 64 kB.


 \square Move the word pointed to by (R5 - 0x30) to the word pointed to by (R4 + 2):

MOV 0XFFD0(R5),2(R4)

Instruction code: 0x4594

Op-code	S-reg	Ad	B/W	As	D-reg
0 1 0 0	0 1 0 1	1	0	0 1	0100
MOV	R5	Indexed	16-bit	Indexed	R4


- This instruction uses 3 words;
- The instruction coding specifies that the word (B/W = 0) pointed to by the sum of register R5 contents (S-reg = 0101) with the word X1 should be moved to the memory address pointed to by the sum of register R4 contents (D-reg = 0100) and the word X2;
- The words x1 and x2 are located in memory addresses following the instruction;
- The addressing mode used for the source and destination operands is specified by the bits Ad = 1 (Indexed mode) and As = 01 (Indexed mode), because D-reg = 0100 and S-reg = 0101 respectively;
- In this example, the bits 19:16 are set to zero when the operand addresses have been calculated.

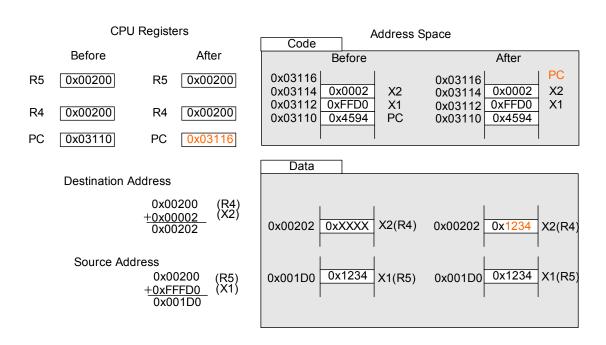

■ Indexed mode in the memory address space above 64 kB

If the CPU register Rn points to a memory address above 64 kB, bits 19:16 are used to calculate the operand address. A prerequisite is that the operand must be located in the range Rn \pm 32 kB, because the index is a signed 16-bit value. In this case, the operand address can overflow or underflow in memory address space below 64 kB.

If a register now points to a memory address space above the 64 kB, the bits 19:16 are used to determine the operand address.

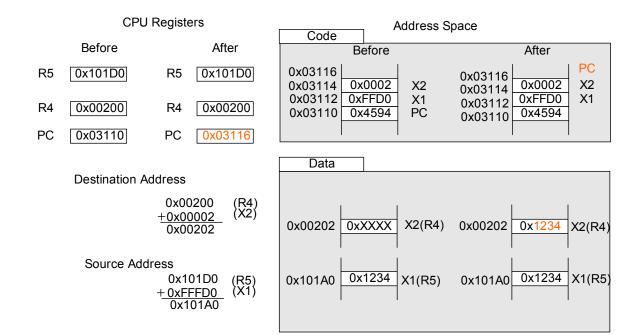

■ Indexed mode using a MSP430X CPU instruction

When a MSP430X CPU instruction is used in indexed mode, the operand can reside anywhere in the address range Rn \pm 19 bits. The operand address is determined from the sum of the 20-bit contents of the register Rn and the 20-bit signed index.

 \square Move the word pointed to by (R5 – 0x30) to the word pointed to by (R4 + 2):

MOVX 0xFFD0(R5),2(R4)

Instruction code: 0x1FC0 - 0x4594

0	0	0	1	1	src	19:16	A/L	0	0	dst 19:16
0	0	0	1	1	1	1 1 1	1	0	0	0000
	Op-code S-reg		S-reg	Ad	B/W	А	S	D-reg		
	1 0	0 0			0101	1	0	0	1	0100
	MO	VX	•		R5	Indexed	16-bit	Inde	exed	R4


- This instruction uses 4 words;
- The instruction coding specifies that the word (B/W = 0 and A/L = 1) pointed to by the sum of register R5 contents (S-reg = 0101) and the word X1 should be moved to the memory address pointed to by the sum the register R4 contents (D-reg = 0100) and the word X2;

- The four MSBs of the indices are placed in the extension word of the instruction and the other 16 bits are placed in the words following the instruction;
- The addressing mode used for the source and destination operands is specified by the bits Ad = 1 (Indexed mode) and As = 01 (Indexed mode) because D-reg = 0100 and S-reg = 0101 respectively.

	CPL	J Registe	ers		Code) <i>F</i>	Address S	pace
	Before		After		0x03118	ΙВ	efore		00
R5	0x101D0	R5	0x101D0]	0x03116 0x03116 0x03114	0x 0x	0002 FFD0	X2 X1	0x0 0x0 0x0
R4	0x00200	R4	0x00200]	0x03112 0x03110	_	4594 1FC0	PC	0x0 0x0
PC	0x03110	PC	0x03118]					
					Data]		
	Destination A	Address							
		0x00 + 0x00 0x00	0002 (X2	<u>}</u>	0x00202	0x)	xxxx	X2(R4)	0x0(
	Source Add	dress							

0x101D0

+ 0xFFFD0 0x101A0

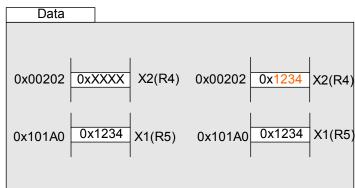

After

0x0002

0xDDF0

0x4594

0x1FC0

0x03118

0x03116

0x03114

0x03112

0x03110

PC

X2

X1

□ Symbolic Mode

The symbolic addressing mode uses the program counter register (PC) to determine the location of the operand based on an index. Like the previous addressing mode, there are three different ways to use symbolic mode with the MSP30X CPU.

Symbolic mode in the memory address space below 64 kR.

As in the indexed addressing mode, if the program counter register (PC) points to a memory address below 64 kB, the bits 19:16 of the address resulting from the sum of the register PC and the signed 16-bit index are set to zero.


 \square Move the address EDEN contents located in 0x00200 to the address TONI located in 0x00202:

MOV EDEN, TONI

Instruction code: 0x4090

Op-code	S-reg	Ad	B/W	As	D-reg
0 1 0 0	0000	1	0	0 1	0000
MOV	PC	Symbolic	16-bit	Symbolic	PC

- This instruction uses 3 words;
- The instruction coding specifies that the word (B/W = 0) pointed to by the sum of the register PC contents (S-reg = 0000) and the word X1 should be moved to the memory address pointed to by the sum of the register PC contents (D-reg = 0000) and the word X2;
- The words x1 and x2 are in the memory addresses following the instruction;
- The addressing mode used for the source and destination operands is specified by the bits Ad = 1 (Symbolic mode) and As = 01 (Symbolic mode), because D-reg = 0000 and S-reg = 0000, respectively.

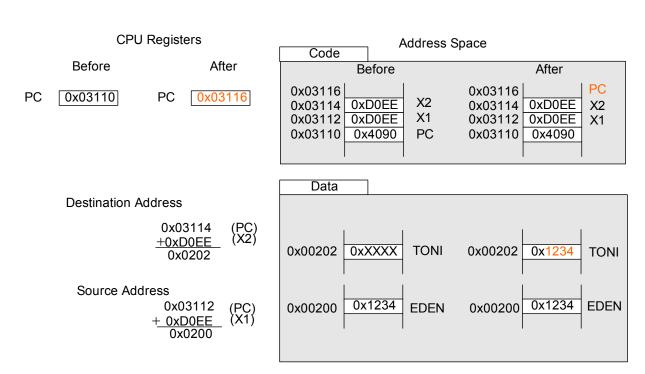

■ Symbolic mode in the memory address space above 64 kB

If the program counter register (PC) points to a memory address above 64 kB, bits 19:16 are used to calculate the operand address. The operand must be located in the memory range PC \pm 32 kB, because the index is a signed 16-bit value. Otherwise there may be overflow or underflow in the address space, corresponding to memory below 64 kB.


 \square Move the address EDEN contents located in 0x10200 to the register R5:

MOV EDEN, R5

Instruction code: 0x4015

Op-code	S-reg	Ad	B/W	As	D-reg
0 1 0 0	0000	0	0	0 1	0 1 0 1
MOV	PC	Register	16-bit	Symbolic	R5

- This instruction uses 2 words;
- The instruction coding specifies that the word (B/W = 0) pointed to by the sum of the contents of the program counter register (PC) (S-reg = 0000) and the word x1 should be moved to the register R5 (D-reg = 0101);
- The word x1 is in the memory address following the instruction;
- The addressing modes used for the source and destination operands are specified by the bits Ad = 0 (Register mode) and As = 01 (Symbolic mode), because D-reg = 0101 and S-reg = 0000, respectively.

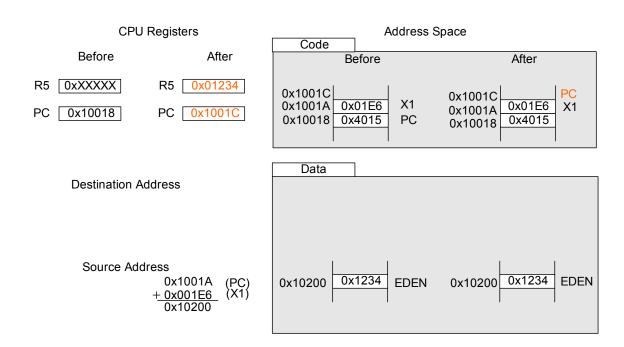

■ Symbolic mode using a MSP430X CPU instruction

When a MSP430X CPU instruction is used in symbolic mode, the operand can be located anywhere in the address space PC \pm 19 bits. The operand address is derived from the sum of the 20-bit contents of the program counter register (PC) and the signed 20-bit index.


 \square Move the address EDEN contents located in 0x00200 to the register R5:

MOVX EDEN, R5

Instruction code: 0x1FC0 - 0x4015

0	0	0	1	1	src	19:16	A/L	0	0	dst 19:16
0	0	0	1	1	1	111	1	0	0	0000
	Op-c	ode)		S-reg	Ad	B/W	Α	S	D-reg
	0 1	0 0			0000	0	0	0	1	0 1 0 1
	MO	VX			PC	Register	16-bit	Sym	bolic	R5

- This instruction uses 3 words;
- The instruction coding specifies that the CPU must perform the function MOVX of 16-bit data (B/W = 0 and A/L = 1), from the contents of the memory address pointed to by (src 19:16:X1 + PC) to the register R5;
- The bits src 19:16 are stored in the extension word and the word x1 is stored after the instruction;
- The addressing modes used for the source and destination operands are specified by the bits Ad = 0 (Register mode) and As = 01 (Symbolic mode), because D-reg = 0000 and S-reg = 0101, respectively.

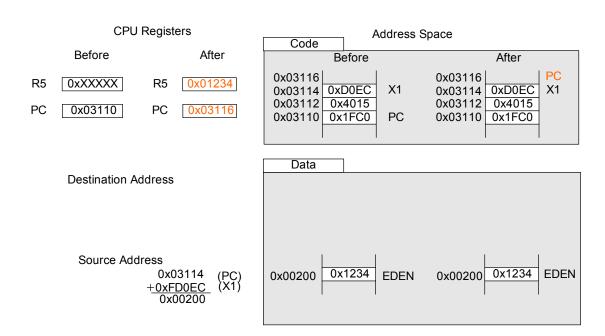

□ Absolute Mode

Absolute mode uses the word contents following the instruction as the operand address. There are two different ways to use absolute mode with the MSP30X CPU.

Absolute mode in the memory address space below 64 kR.

This addressing mode in memory below 64 kB operates in the same was as the MSP430 CPU.

■ Absolute mode using a MSP430X CPU instruction

If a MSP430X CPU instruction is used with an address in absolute mode, the 20-bit absolute address of the operand is used with an index of zero (generated by the constant generator) to point to the operand. The four MSB of the indices are placed in the extension word of the instruction and the other 16 bits are placed in the words following the instruction.

 \square Move the address EDEN contents located in 0x00200 to the address TONI located in 0x00202:

MOVX &EDEN, &TONI

Instruction code: 0x1840 - 0x4292

0	0	0	1	1	src	19:16	A/L	0	0	dst 19:16
0	0	0	1	1	0	0 0 0	1	0	0	0000
	Op-	code	:		S-reg	Ad	B/W	А	s	D-reg
	0 1	0 0			0010	1	0	0	1	0010
MOVX			SR/CG1	Absolute	16-bit	Abso	lute	SR/CG1		

- This instruction uses 4 words;
- The instruction coding specifies that the CPU must perform the function MOVX of 16-bit data (B/W = 0 and A/L = 1), from the memory address contents pointed to by (src 19:16:X1) to the memory address contents pointed to by (dst 19:16:X2);
- The bits src 19:16 and dst 19:16 are stored in the extension word;
- The words x1 and x2 are stored in the memory locations following the instruction;
- The addressing modes used for the source and destination operands are specified by the bits Ad = 1 (Absolute mode) and As = 01 (Absolute mode), because D-reg = 0010 and S-reg = 0010, respectively.

CPU Registers

 Before
 After


 PC
 0x03110
 PC
 0x03118

		- 1	Address	Space		
Code				-		
0x03118	Вє	efore		0x03118	After	PC
0x03116	0x0	0202	X2	0x03116	0x0202	X2
0x03114	0x0	0200	X1	0x03114	0x0200	X1
0x03112	0x4	4292		0x03112	0x4292	
0x03110	0x	1840	PC	0x03110	0x1840	

. . .

Destination Address

Source Address

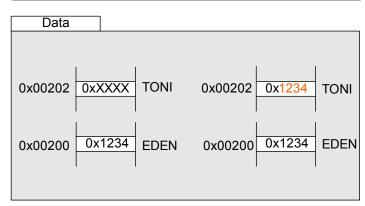

□ Indirect register mode

This addressing mode uses the contents of register Rn to point to the 20-bit operand. It can only be used to point to the source operand.

 \Box Move the operand pointed to by the contents of register R5 to the memory address TONI located at 0x00202:

MOVX @R5,&TONI

Instruction code: 0x1840 - 0x45A2

0	0	0	1	1	src	19:16	A/L	0	0	dst 19:16
0	0	0	1	1	0 0 0 0		1	0	0	0000
	Op-	code)		S-reg	Ad	B/W	Α	S	D-reg
	0 1	0 0			0 1 0 1	1	0	1	0	0010
	MC	VX			R5	Absolute	16-bit	Indi	rect	SR/CG1

- This instruction uses 3 words;
- The instruction coding specifies that the CPU must perform the function MOVX of 16-bit data (B/W = 0 and A/L = 1), from the memory address contents pointed to by register R5 to the memory address contents pointed to by (dst 19:16:X1);
- The bits dst 19:16 are stored in the extension word;
- The words x1 is stored in the memory location following the instruction;

PC

■ The addressing modes used for the source and destination operands are specified by the bits Ad = 1 (Absolute mode) and As = 10 (Indirect mode), because D-reg = 0010 and S-reg = 0101, respectively.

CPU Registers

PC

0x03116


	Before		After
R5	0x00200	R5	0x00200

Address Space									
Code		-							
	В	efore		After					
0x03116				0x03116		PC			
0x03114	0x	0202	X1	0x03114	0x0202	X1			
0x03112	0x	45A2		0x03112	0x45A2				
0x03110	0x	1840	PC	0x03110	0x1840				
0x03112	0x	45A2		0x03114 0x03112	0x45A2	X1			

Destination Address

0x03110

Source Address

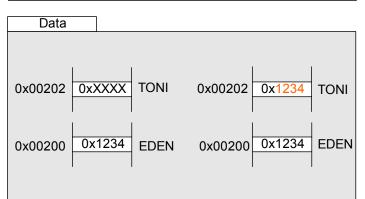

□ Indirect auto-increment mode

This addressing mode uses the register Rn contents to point to the 20-bit source operand. The register Rn is automatically incremented by 1 for a byte operand, by 2 for a word operand and by 4 for an address operand.

 \square Move the word pointed to by register R5 to the memory address TONI located at 0x00202:

MOVX @R5+,&TONI


Instruction code: 0x1840 - 0x45B2

0	0	0	1	1	src	19:16	A/L	0	0	dst 19:16
0	0	0	1	1	0	000	1	0	0	0000
	Op-code				S-reg	Ad	B/W	As		D-reg
	0100			0101		1	0	1 1		0010
MOVX				R5		Absolute	16-bit	Ind. aut. inc.		SR/CG1

- This instruction uses 3 words;
- The instruction coding specifies that the CPU must perform the function MOVX of 16-bit data (B/W = 0 and A/L = 1), from

the memory address contents pointed to by register R5 to the memory address contents pointed to by (dst 19:16:X1);

- The bits dst 19:16 are stored in the extension word;
- The word x1 is stored in the memory location following the instruction;
- The addressing modes used for the source and destination operands are specified by the bits Ad = 1 (Absolute mode) and As = 11 (Indirect auto-increment mode), because D-reg = 0010 and S-reg = 0101, respectively.

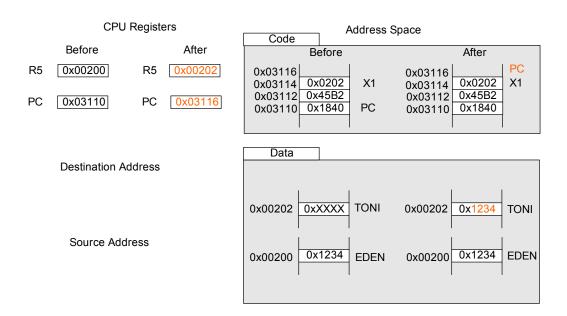

□ Immediate mode

The immediate addressing mode allows constants to be placed after the instruction to use as source operands. There are two ways to use the immediate addressing mode:

■ A 8-bit or 16-bit constant with a MSP430 CPU instruction

The operation in this situation is similar to that of the MSP430 CPU.

■ A 20-bit constant with a MSP430X CPU instruction

If a MSP430X CPU instruction is used in immediate addressing mode, the constant takes a 20-bit value. Bits 19:16 are stored in the extension word and the remaining bits are stored in the location following the instruction.

 \square Move the constant #0x12345 to the register R5:

MOVX.A #0x12345,R5

Instruction code: 0x1880 - 0x4075

0	0	0	1	1 src		19:16	A/L	0	0	dst 19:16
0	0 0 0 1 1		0	0 0 1	0	0	0	0000		
	Op-code				S-reg	Ad	B/W	As		D-reg
	0100			0000		0	1	1 1		0 1 0 1
	MOVX			PC		Register	er 20-bit		diate	R5

- This instruction uses 3 words;
- The instruction coding specifies that the CPU must perform the function MOVX of 20-bit data (B/W = 1 and A/L = 0), from the value (src 19:16:X1) to register R5;
- The bits (src 19:16) are stored in the extension word;
- The word x1 is stored in the memory location following the instruction;
- The addressing modes used for the source and destination operands are specified by the bits Ad = 0 (Register mode) and As = 11 (Immediate mode), because D-reg = 0101 and S-reg = 0000, respectively.

	CPU	Registe	ers
	Before		After
R5	0xXXXXX	R5	0x12345
PC	0x03110	PC	0x03116

Code		Address	Space		
	Before		After		
0x03116 0x03114 0x03112 0x03110	0x2345 0x4075 0x1880	X1 PC	0x03116 0x03114 0x03112 0x03110	0x2345 0x4075 0x1880	PC X1

15.3.3 Assembly language programming characteristics

The following section introduces some fundamentals of assembly language programming using the MSP430 family of microcontrollers. Rather than make an exhaustive study of programming methodologies and techniques, the intention is to focus on the aspects of assembly language programming relevant to the MSP430 family.

The examples are based on the MSP430 CPU, although they can also be applied to the MSP430X CPU. Where appropriate, differences between the MSP430 CPU and MSP430X CPU are highlighted.

Status system flags

□ Bit modification

The state of one or more bits of a value can be changed by the bit clear (BIC) and bit set (BIS) instructions, as described below.

The BIC instruction clears one or more bits of the destination operand. This is carried out by inverting the source value then performing a logical & (AND) operation with the destination. Therefore, if any bit of the source is one, then the corresponding bit of the destination will be cleared to zero.

BIC source, destination **Or** BIC.W source, destination BIC.B source, destination

Consider the instruction:

BIC #0x000C,R5

This clears bits 2 and 3 of register R5 to zero, leaving the remaining bits unchanged.

There is also the bit set (BIS) instruction:

BIS source, destination **or** BIS.W source, destination BIS.B source, destination

This sets one or more bits of the destination using a similar procedure to the previous instruction. The instruction performs a logical \mid (OR) between the contents of the source and the destination.

For example, the instruction:

```
BIS #0x000C, R5
```

Sets bits 2 and 3 of register R5, leaving the remaining bits unchanged.

It is recommended that whenever it is necessary to create control flags, that these are located in the least significant nibble of a word. In this case, the CPU constant generators can generate the constants necessary (1, 2, 4, 8) for bit operations. The code produced is more compact and therefore the execution will be faster.

CPU status bits modification

The CPU contains a set of flags in the Status Register (SR) that reflect the status of the CPU operation, for example that the previous instruction has produced a carry (C) or an overflow (V).

It is also possible to change the status of these flags directly through the execution of emulated instructions, which use the BIC and BIS instructions described above.

□ Directly changing the CPU status flags

The following instructions clear the CPU status flags (C, N and Z):

```
CLRC; clears carry flag (C). Emulated by BIC \#1,SR CLRN; clears negative flag (N). Emulated by BIC \#4,SR CLRZ; clears the zero flag (Z). Emulated by BIC \#2,SR
```

The following instructions set the CPU status flags (C, N and Z):

```
SETC; set the carry flag (C). Emulated by BIS \#1,SR SETN; set the negative flag (N). Emulated by BIS \#4,SR SETZ; set the zero flag (Z). Emulated by BIS \#2,SR
```

□ Enable/disable interrupts

Two other instructions allow the flag that enables or disables the interrupts to be changed. The global interrupt enable GIE flag of the register SR may be set to disable interrupts:

DINT; Disable interrupts. (emulated by BIC #8,SR)

or it may be cleared to enable interrupts:

EINT; Enable interrupts. (emulated by BIS #8,SR)

Arithmetic and logic operations

□ Addition and Subtraction

The MSP430 CPU has instructions that perform addition and subtraction operations, with and without the carry flag (C). It is also possible to perform addition operations of values represented in binary coded decimal (BCD) format.

■ Addition operations

There are three different instructions to carry out addition operations. The addition of two values is performed by the instruction:

ADD source, destination Or ADD.W source, destination ADD.B source, destination

The addition of two values, also taking into consideration the state of the carry bit (C), is performed by the instruction:

ADDC source, destination **Or** ADDC.W source, destination ADDC.B source, destination

The carry bit (C) itself can be added to a value using the instruction:

ADC destination **Or** ADC.W destination ADC.B destination

The CPU status flags are updated to reflect the result of an operation.

For example, two 32-bit values are represented by the combination of registers R5:R4 and R7:R6, where the format is most significant word: least significant word.

The addition operation must propagate the carry from the addition of the least significant register words (R4 and R6) to the addition of the most significant words (R5 and R7).

```
MOV #0x1234,R5; operand 1 most significant word
MOV #0xABCD,R4; operand 1 least significant word
MOV #0x1234,R7; operand 2 most significant word
MOV #0xABCD,R6; operand 2 least significant word
ADD R4,R6; add least significant words
ADDC R5,R7; add most significant words with carry
```

The code begins by loading the values into the registers to be added, 0x1234ABCD in R5:R4 and 0x1234ABCD in R7:R6.

The operation continues by adding the two least significant words $0 \times ABCD$ and $0 \times ABCD$ in registers R4 and R6. The addition may change the carry bit (C), and this must be taken into account during the addition of the two most significant words. The result is placed in the structure formed by the registers R7:R6.

■ Subtraction operations

There are three instructions to perform subtraction operations. The subtraction of two values is performed by the instruction:

```
SUB source, destination Or SUB.W source, destination SUB.B source, destination
```

The subtraction of two values, taking into consideration the carry bit (C), is performed by the instruction:

```
SUBC source, destination Or SUBC.W source, destination SUBC.B source, destination
```

The subtraction of destination taking into consideration the carry bit (C) is provided by the instruction:

```
SBC
      destination or SBC.W
                              destination
SBC.B destination
```

The CPU status flags are updated to reflect the result of the operation.

The borrow is treated as a .NOT. carry: The carry is set to 1 if NO borrow, and reset if borrow.

For example, two 32-bit values are represented by the combination of registers R5:R4 and R7:R6, where the format is most significant word:least significant word.

The subtraction operation of these values must propagate the carry (C) from the subtraction of the least significant words (R4 and R6) to the most significant words (R5 to R7).

Two 32-bit values are subtracted in the example presented below:

```
MOV
      #0xABCD,R5; load operand 1 in R5:R4
MOV
      #0x1234,R4
MOV
      #0x0000,R7 ; load operand 2 in R7:R6
      #0x1234,R6
VOM
SUB
      R4, R6; subtract least significant words
      R5,R7; subtract most significant words
SUBC
             ; with carry
```

The code begins by loading the values in the registers to be subtracted, 0xABCD1234 into R5:R4 and 0x00001234 into R7:R6. The next operation is to subtract the two least significant words. The result of the subtraction affects the carry bit (C), which must be taken into account during the subtraction of the two most significant words.

■ BCD format addition

The CPU supports addition operations for values represented in binary coded decimal (BCD) format. There are two instructions to perform addition operations in this format:

```
DADD source, destination Or DADD.W source, destination DADD.B source, destination
```

The addition of the carry bit (C) to a BCD value is provided by instruction:

```
DADC destination or DADC.W destination DADC.B destination
```

The CPU status flags are updated to reflect the result of the operation.

For example, two 32-bit BCD values are represented by the combination of registers R5:R4 and R7:R6, where the format is most significant word:least significant word. The addition of these values must propagate the carry from the addition of the least significant words (R4 and R6) to the addition of the most significant words (R5 and R7).

Two 32-bit BCD values are added in the example below:

```
#0x1234,R5 ; operand 1 most significant word
MOV
MOV
      #0x5678,R4 ; operand 1 least significant word
      #0x1234,R7 ; operand 2 most significant word
MOV
MOV
      #0x5678,R6 ; operand 2 least significant word
CLRC
                  ; clear carry flag, C
       R4,R6
                 ; add least significant words
DADD
DADD
       R5,R7
                  ; add most significant words
```

The code begins by loading the BCD values into the registers to be added. The carry flag (C) is cleared. Next, the least significant words are added together. The result of the addition generates a carry, which must be added together with the two most significant words.

□ Sign extension

The CPU supports 8-bit and 16-bit operations. Therefore, the CPU needs to be able to extend the sign of a 8-bit value to a 16-bit format.

The extension of the sign bit is produced by the instruction:

```
SXT destination
```

For example, the sign extension of the value contained in R5 is:

```
MOV.B \#0xFC,R5 ; place the value 0xFC in R5
SXT R5 ; sign extend word. R5 = 0xFFFC
```

□ Increment and decrement operations

There are several operations that need to increment or decrement a value, e.g. control of the number of code iterations (for or while loops), access to memory blocks using pointers etc. Therefore, there are four emulated instructions based on the ADD instruction, which facilitate the implementation of these operations.

To increment a value by one:

```
INC destination \mbox{ or } \mbox{INC.W} \mbox{ destination } INC.B destination
```

Similarly, to decrement a value by one:

```
DEC destination \operatorname{Or} DEC.W destination DEC.B destination
```

In the following example, the value placed in R5 is initially incremented and then decremented:

```
MOV.B \#0x00,R5 ; move 0x00 to register R5
INC R5 ; increment R5 by one. R5 = 0x0001
DEC R5 ; decrement R5 by one. R5 = 0x0000
```

The ability of the CPU to address 16-bit values requires the ability to increment or decrement the address pointer by two. The following instruction is used to increment a value by two:

```
INCD destination or INCD.W destination
INCD.B destination
```

Similarly, to decrement a value by two, the following instruction is used:

```
DECD destination or DECD.W destination DECD.B destination
```

The CPU status flags are updated to reflect the result of the operation.

In the following example, the value stored in register R5 is initially incremented by two and then decremented by two:

```
MOV.B \#0x00,R5 ; move 0x00 to the register R5 INCD R5 ; Increment R5 by two. R5 = 0x0002 DECD R5 ; Decrement R5 by two. R5 = 0x0000
```

□ Logical operations

■ Logic instructions

The CPU performs a set of logical operations through the operations AND (logical and), XOR (exclusive OR) and INV (invert). The CPU status flags are updated to reflect the result of the operation.

The AND logical operation between two operands is performed by the instruction:

```
AND source, destination or AND.W source, destination AND.B source, destination
```

In the following example, the value 0xFF is moved to the register R4, and the value 0x0C is moved to the register R5. A logical AND logic operation is performed between these two registers, putting the result in register R5:

```
MOV.B #0xFF,R4 ; load operand 1 into R4
MOV.B #0x0C,R5 ; load operand 2 into R5

AND.B R4,R5 ; result of AND located in R5
```

The code begins by loading the operands into registers R4 and R5. The result of the logical operation between the two registers is placed in register R5. For the MSP430X the bits 19:8 of the result register take the value zero.

The xor logical operation between two operands is performed by the instruction:

```
XOR source, destination Or XOR.W source, destination XOR.B source, destination
```

In the following example, the value 0xFF is moved to the register R4, and the value 0x0C is moved to the register R5. The logical XOR operation is performed between the two registers, putting the result in register R5:

```
MOV.B #0x00FF,R4 ; load operand 1 into R4

MOV.B #0x000C,R5 ; load operand 1 into R5

XOR.B R4,R5 ; XOR result located in R5
```

The NOT logical operation between two operands is performed by the INV (invert) instruction:

```
INV destination or INV.W destination
INV.B destination
```

The XOR logic operation between two operands was performed in the previous example. The following example demonstrates a way to implement a logical OR. The code begins by loading the operands into registers R4 and R5. The contents of the registers are inverted, then the logical & (AND) operation is performed between them.

```
MOV #0x1100,R4 ; load operand 1 into R4
MOV #0x1010,R5 ; load operand 2 into R5
```

```
INV R4  ; invert R4 bits
INV R5  ; invert R5 bits

AND R4,R5  ; AND operation between R4 and R5
INV R5  ; invert R5 bits
```

The operation OR can also be performed with the BIS instruction.

■ Displacement and rotation with carry


The multiplication and division operations on a value by multiples of 2 are achieved using the arithmetic shift left (multiplication) or the shift right (division) operations.

The arithmetic shift left is performed by the instruction:

```
RLA destination \operatorname{or} RLA.W destination RLA.B destination
```

The RLA instruction produces an arithmetic shift left of the destination by inserting a zero in the least significant bit, while the most significant bit is moved out to the carry flag (C).

Figure 15-57. Arithmetic shift left - RLA instruction.

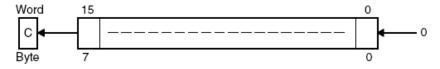

As an example, the registers R5 and R4 are loaded with 0x00A5 and 0xA5A5, respectively, forming a 32-bit value in the structure R5:R4. A shift left performs a multiplication by 2:


```
MOV #0x00A5,R5; load the value 0x00A5 into R5
MOV #0xA5A5,R4; load the value 0xA5A5 into R4
RLA R5; shift most significant word left R5
RLA R4; shift least significant word left R4
ADC R5; add the carry bit of R4 in R5
```

The arithmetic shift right is made by the instruction:

RRA destination **or** RRA.W destination RRA.B destination

The RRA operation produces an arithmetic shift right of the destination, preserving the state of the most significant bit MSB, while the least significant bit is copied into the carry flag (C).

Figure 15-58. Arithmetic shift right - RRA instruction.

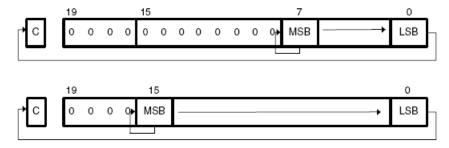


The CPU status flags are updated to reflect the result of the operation.

The rotation of a value can be performed using the carry flag. This allows selection of the bit to be rotated into the value. A left shift with carry flag can be performed by the instruction:

RLC destination \mbox{Or} RLC.W destination RLC.B destination

Figure 15-59. Arithmetic shift right with carry - RLC instruction.

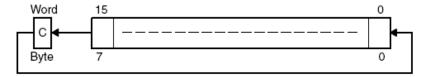


The RLC operation shifts the destination left, moving the carry flag (C) into the LSB, while the MSB is moved into the carry flag (C).

The RRC operation shifts the destination right, moving the carry flag (C) into the MSB, and the LSB is moved to the carry flag (C).

```
RRC destination \mbox{Or} RRC.W destination RRC.B destination
```

Figure 15-60. Rotate right through carry destination word - RRC instruction.

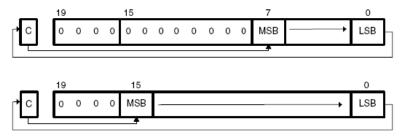

In the following example, the register pair R4:R5 are loaded with 0x0000 and 0xA5A5, respectively, forming a 32-bit value. A shift left of R4:R5 multiplies the value by 2. This example is similar to the previous one, but requires one less instruction:

```
MOV #0x0000,R4; load R4 with #0x0000
MOV #0xA5A5,R5; load R5 with #0xA5A5

RLA R5; Rotate least significant word left
RLC R4; Rotate most significant word left
```

■ Byte exchange

To swap the destination bytes contents of a 16-bit register, the following instruction is used:

```
SWPB destination
```

The operation has no effect on the state of the CPU flags; In the following example, the bytes of register R5 are exchanged:

```
MOV \#0x1234,R5; move the value 0x1234 to R5 SWPB R5; exchange the LSB with the MSB. R5 = 0x3412
```

The above instruction sequence starts by loading the value 0x1234 into the register R5, followed by exchanging the contents of the LSB and the MSB of register R5.

☐ Special operations with MSP430X CPU

In addition to MSP430 CPU instructions, the MPS430 CPU has a 20-bit memory address space and an instruction set that can optimize the performance of certain operations. We shall look at some of them now.

■ Repetition of an instruction

An MP430X CPU instruction, provided that it is used in Register addressing mode, can be repeated a preset number of times, up to a maximum of 15 times. It uses the instruction:

```
RPT #n ; repeat n times
RPT Rn ; repeat Rn.3:0 times
```

In the following example, the instruction sequence starts by loading the value 0x05AD into register R5. The CPU is informed that it must repeat the arithmetic shift left instruction 3 times. The resulting value in register R5 is the original value multiplied by 8.

```
MOV #0x05AD,R5
RPT #3
RLAX R5
```


■ Successive arithmetic shifts and shifts with carry flag (C)

The MSP430X CPU has an instruction set that allows a number of arithmetic shifts or shifts with carry to be carried out. Up to a maximum of 4 shifts can be performed on a 16-bit or 20-bit value.

To perform #n shifts right of a register with the carry flag, the following instruction is used:

```
RRCM #n,Rdst Or RRCM.W #n,Rdst RRCM.A #n,Rdst
```

Figure 15-61. Sucessive arithmetic shift right with carry - RRCM instruction.

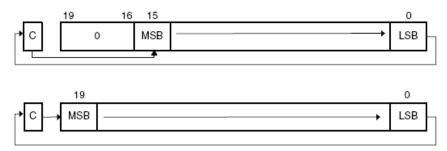


If this is a 16-bit operation, bits 19:16 of the register are reset to zero. The Carry (C) flag contents are placed in the MSB, while the LSB is copied into the carry flag.

To perform an unsigned #n shifts right of a register, the following instruction is used:

```
RRUM #n,Rdst Or RRUM.W #n,Rdst RRUM.A #n,Rdst
```

Figure 15-62. Successive arithmetic unsigned shift right with carry - RRUM instruction.

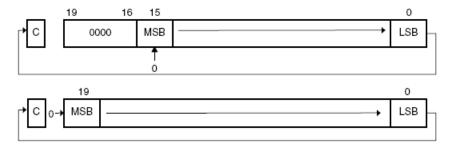


If this is a 16-bit operation, then bits 19:16 of the register are reset to zero. The MSB of the register is cleared to zero and the LSB is copied to the carry (C) flag.

To perform a #n arithmetic shift right using a register, the following instruction is used:

```
RRAM #n,Rdst Or RRAM.W #n,Rdst
RRAM.A #n,Rdst
```

Figure 15-63. Successive arithmetic shift right using a register - RRAM instruction.

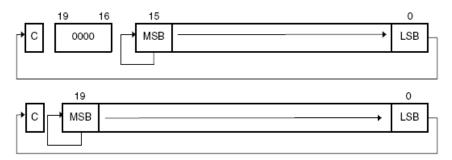


If this is a 16-bit operation, then bits 19:16 of the register are cleared to zero. The operation allows the division of the register contents by 2, 4, 8 or 16, depending on the parameter #n. During the arithmetic shift right of the register contents, the MSB is maintained, while the LSB is copied to the carry flag.

To perform a #n arithmetic shift left using a register, the following instruction is used:

```
RLAM #n,Rdst Or RLAM.W #n,Rdst RLAM.A #n,Rdst
```

Figure 15-64. Successive arithmetic shift left using a register - RLAM instruction.

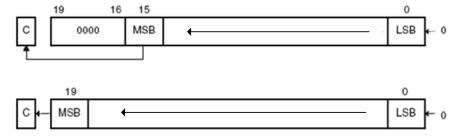

If this is a 16-bit operation, then bits 19:16 of the register are reset to zero. The operation allows multiplication of the register contents by 2, 4, 8 or 16, depending on the parameter #n. The MSB is copied into the carry flag, while the LSB is cleared to zero.

All the previous rotate operations modify the CPU status flags.

In the following example, the value 0x1234 is multiplied by 1.25:

```
MOV #0x1234,R4 ;load 0x1234 in R4
MOV R4,R5 ;store R4 in R5

RRAM #2,R4 ; R4 = 0.25*R4
ADD R4,R5 ; R5 = 1.25*R4
```

■ 20-bit addressing instructions

The addressing instructions can use the 20-bit addresses. There is the limitation that with the exception of the instruction MOVA, only Register and Immediate addressing modes can be used.

A 20-bit address can be manipulated using operations: addition (ADDA), subtraction (SUBA), double-increment (INCDA) and double-decrement (DECDA). There are other instructions of this type, which will be examined later. The contents of a register can be cleared by the instruction (CLRA). Finally, a 20-bit operand can be moved using the instruction (MOVA).

Program flow control

■ MSP430 CPU testing

■ Bit testing

Bit testing can be used to control program flow. Hence, the CPU provides an instruction to test the state of individual or multiple bits. The operation performs a logical $_{\&}$ $_{(\mathrm{AND})}$ logical operation between the source and destination operands. The result is ignored and none of the operands are changed. This task is performed by the following instruction:

```
BIT source, destination Or BIT.W source, destination BIT.B source, destination
```

As a result of the operation, the CPU state flags are updated:

V: reset;

N: set if the MSB of the result is 1, otherwise reset;

Z: set if the result is zero, otherwise reset;

C: set if the result is not zero, otherwise reset.

For example, to test if bit R5.7 is set:

```
MOV \#0\times00CC,R5; load the value \#0\times00CC to R5 BIT \#0\times0080,R5; test R5.7
```

The result of the logical AND operation with 0x0080, the bit R5.7 is tested. Reasoning this case, the result modifies the flags (V = 0, N = 0, Z = 0, C = 1).

■ Comparison with zero

Another operation typically used in a program is the comparison of a value with zero, to determine if the value has reached zero. This operation is performed using the following emulated instruction:

```
TST source, destination or TST.W source, destination TST.B source, destination
```

As a result of the operation, the CPU state flags are updated:

V: reset;

N: set if the MSB of the result is 1, otherwise reset;

Z: set if the result is zero, otherwise reset;

C: set.

For example, to test if register R5 is zero:

```
MOV \#0\times00CC,R5; move the value \#0\times00CC to R5 TST R5; test R5
```

The comparison of the register R5 with #0x0000 modifies the flags (V = 0, N = 0, Z = 0, C = 1).

■ Value comparison

Two operands can be compared using the instruction:

```
CMP source, destination Or CMP.W source, destination CMP.B source, destination
```

The comparison result modifies the CPU status flags:

V: set if an overflow occurs;

N: set if the result is negative, otherwise reset (source >= destination);

Z: set if the result is zero, otherwise reset (source = destination);

C: set if there is a carry, otherwise reset (source <= destination).

In the following example, the contents of register R5 are compared with the contents of register R4:

```
MOV \#0\times0012,R5; move the value 0\times0012 to R5 MOV \#0\times0014,R4; move the value 0\times0014 to R4 CMP R4,R5
```

The register comparison modifies the CPU status flags (V = 0, N = 1, Z = 0, C = 0).

□ Program flow branch

A branch in program flow without any constraint is performed by the instruction:

```
BR destination
```

This instruction execution is only able to reach addresses in the address space below 64 kB. For addresses above this address space, the MSP430X CPU provides the instruction:

```
BRA destination
```

Each of the addressing modes can be used. For example:

```
BR #EXEC ;Branch to label EXEC or direct branch
;(e.g. #0A4h)
; Core instruction MOV @PC+,PC

BR EXEC; Branch to the address contained in
; EXEC
; Core instruction MOV X(PC),PC
; Indirect address

BR &EXEC; Branch to the address contained in
```

```
; absolute address EXEC
            ; Core instruction MOV X(0), PC
            ; Indirect address
BR
      R5
            ; Branch to the address contained in R5
            ; Core instruction MOV R5,PC
            ; Indirect R5
            ; Branch to the address contained in
BR
      @R5
            ; the word pointed to by R5.
            ; Core instruction MOV @R5,PC
            ; Indirect, indirect R5
RR
      @R5+
           ; Branch to the address contained in
            ; the word pointed to by R5 and
            ; increment pointer in R5 afterwards.
            ; The next time-S/W flow uses R5
            ; pointer-it can alter program
            ; execution by access the next
            ; address in the table pointed to by R5
            ; Core instruction MOV @R5,PC
            ; Indirect, indirect R5 with
            ; autoincrement
     X(R5); Branch to the address contained in
BR
            ; the address pointed to by R5 + X
            ; (e.g. table with address starting at
            ; X). X can be an address or a label
            ; Core instruction MOV X(R5), PC
            ; Indirect, indirect R5 + X
```

In addition to the previous instructions it is possible to jump to a destination in the range +512 to -511 words using the instruction:

JMP destination

■ Conditional jump

Action can be taken depending on the values of the CPU status flags. Using the result of a previous operation, it is possible to produce jumps in the program flow execution. The new memory address must be in the range +512 to -511 words.

The following instructions are available for conditional jumps:

```
Jump if equal (Z = 1):

JEQ destination Or JZ destination

label1:
    MOV    0x0100,R5
    MOV    0x0100,R4

CMP    R4,R5
    JEQ label1
```

The above example compares the register R4 and R5 contents. As they are equal, the flag Z is set, and therefore, the jump to position label1 is executed.

```
Jump if different (Z = 0):

JNE destination or JNZ destination

label2:
    MOV #0x0100,R5
    MOV #0x0100,R4

CMP R4,R5
    JNZ label2
```

The above example compares the contents of registers R4 and R5. As they are equal, the flag Z is set, and therefore, the jump to position label2 is not executed.

```
Jump if higher or equal (C = 1) - without sign:

JC destination or JHS destination

label3:
    MOV #0x0100,R5

BIT #0x0100,R5

JC label3
```

The above example tests the state of bit R5.8. As this bit is set, the flag C is set, and therefore, the jump to position label3 is executed.

Jump if lower (C = 0) – without sign:

```
JNC destination or JLO destination label4:

MOV #0x0100,R5

BIT #0x0100,R5

JNC label4
```

The above example tests the state of bit R5.8. As it is set, the flag C is set, and therefore, the jump to position label4 is not executed.

Jump if higher or equal $(N=0 \ \text{and} \ V=0)$ or $(N=1 \ \text{and} \ V=1)$ – with sign:

```
JGE destination

label5:

MOV #0x0100,R5

CMP #0x0100,R5

JGE label5
```

The above example compares the contents of register R5 with the constant #0x0100. As they are equal, both flags N and V are reset, and therefore, the jump to the address <code>label5</code> is executed.

```
Jump if lower (N = 1 and V = 0) or (N = 0 and V = 1) - with sign:  

JL destination  

label6:  

MOV \#0\times0100,R5

CMP \#0\times0100,R5

JL label6
```

The above example compares the contents of register R5 with the constant #0x0100. As they are equal, both flags N and V are reset, and therefore, the jump to the address label6 is not executed.

To perform a jump if the flag (N = 1) is set use the instruction (Jump if negative):

```
JN destination

label7:

MOV #0x0100,R5

SUB #0x0100,R5

JN label7
```

The above example subtracts #0x0100 from the contents of register R5. As they are equal, the flag N is reset, and therefore, the jump to address <code>label7</code> is not executed.

Stack pointer management

The register SP is used by the CPU to store the return address of routines and interrupts. For interrupts, the status register is also saved. An automatic method to increment and decrement of the SP is used for each stack access. The pointer should be initialized by the user to point to a valid RAM address, and aligned on an even memory address. The following figures show the stack pointer for the MSP430 CPU and for MSP430X CPU.

Figure 15-65. Stack pointer - MSP430 CPU.



Figure 15-66. Stack pointer - MSP430X CPU.



□ Stack access functions


The data are placed on the stack using the instruction:

```
PUSH source Or PUSH source PUSH.B source
```

The contents of the register SP are decremented by two and the contents of the source operand are then placed at the address

pointed to by the register SP. In the case of the instruction PUSH.B, only the LSB address on the stack is used to place the source operand, while the MSB address pointed to by the register SP+1 remains unchanged.

In the following example, a byte from register R5 is placed on the stack, followed by a word from register R4.

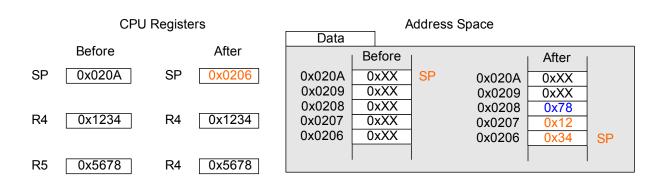

The code that performs this task is:

```
PUSH.B R5; move the register R5 LSB to the stack
PUSH R4; move R4 to the stack
```

The first instruction decrements the register SP by two, pointing to address 0x0208. The LSB of register R5 is then placed in memory. The following instruction decrements the register SP by two and moves the contents of register R4 contents to the stack. The register SP points to the last element that was placed on the stack.

The data values are removed from the stack using the instruction:

```
POP destination or POP destination POP.B destination
```

The contents of the memory address pointed to by the register SP are moved to the destination operand. Then, the contents of the register SP is incremented by two. In the case of the instruction POP.B, only the LSB address is moved. If the destination is a register, then the other bits are zeroed.

	CPU F	Registe	ers			А	ddress S	Space		
	- ·	_		Data						
	Before		After		Befo	ore		ı	After	
SP	0x0206	SP	0x020A	0x020A	0x)	(X		0x020A	0xXX	SP
				0x0209	0x)	⟨X		0x0209	0xXX	
				0x0208	0x7	-		0x0208	0x78	
R4	0xXXXX	R4	0x1234	0x0207	0x1			0x0207	0x12	
				0x0206	0x3	34	SP	0x0206	0x34	
R5	0xXXXX	R4	0x0078							

The code that performs this task is:

```
POP R4 ; extract a word from the stack POP.B R5 ; extract a byte from the stack
```

The instruction POP R4 extracts the word pointed to by the register SP and places it in register R4. Then, the stack pointer is incremented by two, to point to the memory address 0x0208. The instruction POP.B R5 moves the byte pointed to by the register SP to register R5. The stack pointer is then incremented by two, to point to the memory address 0x020A. The register SP points to the last element that was placed on the stack, but not yet retrieved.

In addition to 8-bit or 16-bit values, the MSP430X CPU provides instructions with the ability to handle 20-bit data in memory. This usually requires two words to be placed on the stack.

The placing of 20-bit data on the stack is performed by the instruction:

PUSHX.A source

The register SP is decremented by 4 and the source address operand is placed on the stack. The following figure shows the use of this instruction:

	CPU	Registers		Α	ddress S	Space		
		•	Data					
	Before	After		Before			After	
SP	0x0020A	SP 0x00206	0x0020A	0xXX	SP	0x0020A	0xXX	
			0x00209	0xXX		0x00209	0xXX	
			0x00208	0xXX		0x00208	0x01	
R4	0x12345	R4 0x12345	0x00207	0xXX		0x00207	0x23	
			0x00206	0xXX		0x00206	0x45	SP
			0x00205	0xXX		0x00205	0xXX	

The code that performs this task is:

```
PUSHX.A R4 ; place the 20-bits address of ; register R4 on the stack
```

The MSP430X CPU has the following instruction available for removing a 20-bit data value from the stack:

POPX.A destination

This instruction moves the 20-bit value pointed to by the register SP from the stack to the destination register. Then, the register SP is incremented by 4. The following figure shows the use of this instruction:

CPU	Registers	Data		Address S	pace		
Before	After	Data	Before	1	1	After	
SP 0x0020A R4 0xXXXXX	SP 0x00206 R4 0x12345	0x0020A 0x00209 0x00208 0x00207 0x00206 0x00205	0xXX 0xXX 0x01 0x23 0x45 0xXX	SP	0x0020A 0x00209 0x00208 0x00207 0x00206 0x00205	0xXX 0xXX 0x01 0x23 0x45 0xXX	SP

The code that performs this task is:

POPX.A R4; extract the 20-bits address from stack; to the register R4

□ Data access on stack with the SP in indexed mode

The stack contents can be accessed using the register SP in indexed mode. Using this method, it is possible to place and remove data from the stack without changing the contents of the register SP. Consider the stack structure shown in the following figure:

	CPU	Registe	ers	Data		Address S	pace		
	Before		After	Data					
	DCIOIC		AitCi		Before		1	After	
SP	0x0020A	SP	0x0020A	0x0020A	0x0B	SP	0x0020A	0x0B	SP
				0x00209	0x0A		0x00209	0x0A	
				0x00208	0x09		0x00208	0x09	
R4	0xXXXXX	R4	0x0000B	0x00207	0x08		0x00207	80x0	
				0x00206	0x07		0x00206	0x07	
				0x00205	0x06		0x00205	0x06	
R5	0xXXXXX	R5	0x00A09	0x00204	0x05		0x00204	0x05	
				0x00203	0x04		0x00203	0x04	
				0x00202	0x03		0x00202	0x03	
R6	0xXXXXX	R6	0x70605	0x00201	0x02		0x00201	0x02	
				0x00200	0x01		0x00200	0x01	

The code below moves the information to the registers without modifying the register SP:

```
MOV.B 0(SP),R4 ; byte stack access
MOV -2(SP),R5 ; word stack access
MOVX.A -6(SP),R6 ; address stack access
```

The MSP430 places the data in the memory space in Little Endian format. Therefore, the most significant byte is always at the highest memory address. The first line of code places the value pointed to by the register SP in register R4, i.e., the contents of the memory address $0\times0020A$ are moved to register R4. The second line of code moves the word located at SP - $2 = 0\times00208$ to register R5. Finally, the third line of code moves the contents of the address SP - $6 = 0\times00204$ to register R6. The entire procedure is performed without modifying the value of the register SP.

Routines

During the development of an application, repeated tasks can be identified and separated out into routines. This piece of code can then be executed whenever necessary. It can substantially reduce the code size.

Furthermore, the use of routines allows structuring the application. It also helps code debugging and facilitates understanding of the operation.

□ Invoking a routine

A routine is identified by a label in assembly language. A routine call is made at the point in the program where execution must be changed to perform a task. When the task is complete, it is necessary to return to the point just after where the routine call was called.

Two different instructions are available to perform the routine call, namely CALL and CALLA.

The following instruction can be used if the routine is located in the address below 64 kB:

CALL destination

This instruction decrements the register SP by two, to store the return address. The register PC is then loaded with the routine address and the routine executed. The <code>CALL</code> instruction can be used with any of the addressing modes. The return is performed by the instruction $\tt RET.$

In MSP430X CPU is also available the instruction:

CALLA destination

This instruction decrements the register SP by four to store the return address. The register PC is then loaded with the routine address. The return is performed by the instruction RETA.

□ Routine return

The routine execution return depends on the call type that was used. If the routine is called using a instruction CALL, the following instruction must be used to return:

RET

This instruction extracts the value pointed to by the register SP and places it in the PC.

If the routine call was made with the instruction CALLA, then the following instruction should be used to return:

RETA

Passing parameters to the routine

There are two different ways to move data to a routine.

The first makes use of a register. The data values needed for the routine execution are placed in pre-defined registers before the routine call. The return from the routine execution can use a similar method.

The second method makes use of the stack. The parameters necessary to execute the routine are placed on the stack using the PUSH or PUSHX instructions.

The routine can use any of the methods already discussed to access the information.

To return from the routine, the stack can again be used to pass the parameters, using a POP instruction.

Care is needed in the use of this method to avoid stack overflow problems. Generally, the stack pointer must set back to the value just before pushing parameters after execution of the routine.

■ Routine examples

The following examples bring together the concepts mentioned in this section.

In the first example, the routine is in the address space below 64 kB. Therefore, the instruction CALL is used to call the routine. The parameters are passed to the routine through registers:

```
; -----
; Routine
; -----
adder:
ADD
   R4,R5
RET
             ; return from routine
; -----
; Main
;-----
VOM
   &var1,R4 ; parameter var1 in R4
VOM
    &var2,R5; parameter var2 in R5
CALL #adder
             ; call routine adder
    R5, &var3 ; result R5 in var3
VOM
```

In the second example, the routine is the address space above 64 kB. Therefore, the instruction CALLA is used to call the routine. The parameters are passed to the routine by placing values on the stack.

```
;-----
; Routine
;-----
adder:
MOV
    4(SP),R4; get var2 from stack
    6(SP),R5; get var1 from stack
VOM
ADD
    R4,R5
MOV
    R5,6(SP) ; place the result on stack
RETA
              ; return from stack
;-----
; Main
;-----
PUSH.W
      &var1 ; place var1 on stack
PUSH.W &var2 ; place var2 on stack
CALLA
      #adder ; call routine adder
ADD
       #2,SP ; point SP
POP
       &var3 ; extract result to var3
```

Interrupts

□ Stack management during an interrupt

During an interrupt, the PC and SR registers are automatically placed on the stack as in the figures shown below. The following figures show the interrupt processing for the MSP430 CPU and MSP430X CPU.

Figure 15-67. Interrupt processing - MSP430 CPU.


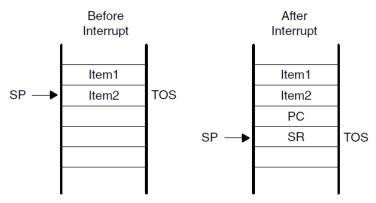


Figure 15-68. Interrupt processing - MSP430X CPU.

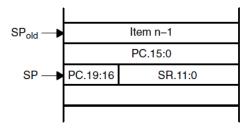

When the instruction RETI is executed, the PC and SR registers are restored thus enabling the return to the program execution point before the interrupt occurred.

An important aspect consists of modifying the low power mode in which the device was before the interrupt. As the register SR is restored at the end of the interrupt, its contents stored on the stack can be modified prior to execution of the RETI instruction. Thus, an new operation mode will be used. For example, executing the instruction:

```
BIC #00F0,0(SP); clear bits CPUOFF, OSCOFF, SCG0 and; SCG1
```

The register SR is loaded in order to keep the device active after completing the interrupt.

15.3.4 Creating an Assembly project with Code Composer Essentials (CCE)

Introduction

The creation of an Assembly project follows a sequence of steps very similar to those of a C/C++ project. Thus, the sequence of tasks to be performed is as follows:

(Recommended);
☐ Assign a name to the project in Project Name , e.g., SQRT;
☐ Choose Project Type : MSP430 Executable;
$\hfill \square$ In $\it Additional\ Project\ Setting\ \mbox{do}$ do not choose any connection with other projects;
$\hfill \square$ In $\it Device Selection$ page select the target device: MSP430FG4618. Do not forget to select the configuration option: $\it Assembly only Project.$
$\hfill \Box$ At the end of this operation sequence, a project named SQRT is opened in the work environment;
 □ Assign a new source code file to the project. In the option <i>Menu</i> > File > Source File and create a new file called SQRT.asm;
☐ In the project properties menu, set the entry point identified by the label BEGIN. This option is found in Build C/C++ build > MSP430 Linker V3.0 > Symbol Management > Specify the program entry point for the output model (- entry point).

Key assembly directives

The MSP430 assembly translates the source code into machine language. The source files may have the following elements:

	Assembly	directives;
--	----------	-------------

Macro directives;

■ Assembly language instructions.

More detailed information on each element can be found in the MSP430 Assembly Language Tools User's Guide (slau131b.pdf).

Some of the most relevant aspects of assembly language for the MSP430 will now be introduced.

The assembly programming tool processes the source code producing an object file and a descriptive listing of the entire process.

This process is completely controlled by macros, allowing conditional execution. A list of options can be found in slau131b.pdf.

The MPS430 source code prograthat have:	ams ar	e a sequence	e of stat	ements
☐ Assembly directives;				
☐ Assembly instructions;				
☐ Macros, and;				
☐ Comments.				
a comments.				
A line can have four fields (la comment). The general syntax is	-	inemonic, op	erand lis	st, and
[label[:]] mnemonic [ope	erand l	ist] [;c	omment]	
Some line examples are:				
.sect ".sysmem"	; Dat	a Space		
var1 .word 2 ; va	riable	var1 decla	ration	
.text ; Program	Space			
Label1: MOV.W R4,R5; mc	ve R4	contents to	R5	
The general guidelines for writing	the co	de are:		
 All statements must begin w semicolon; 	ith a lal	oel, a blank,	an asteris	sk, or a
☐ Labels are optional and if use	ed, they	must begin	in columi	n 1;
One or more blanks must s characters are blanks. You must preceding field with a blank;				
 Comments are optional. Cor begin with an asterisk or a sem begin in any other column must 	nicolon	(* or ;), but	commer	
☐ A mnemonic cannot begin in as a label.	colum	n 1, as it wi	l be inte	rpreted
The assembler supports several t	ypes of	f constants:		
☐ Binary integer: 1111 0000b	\rightarrow	0xF8		
☐ Octal integer: 226	\rightarrow	0x96		
☐ Decimal integer: 25	\rightarrow	0x19		
☐ Hexadecimal integer	\rightarrow	0x78		
☐ Character	\rightarrow	`a′		
☐ Assembly time	\rightarrow	value1	.set	3

Symbols are used as labels, constants, and substitution symbols. A symbol name is a string of up to 200 alphanumeric characters (A-Z, a-z, 0-9, \$, and _). The first character in a symbol cannot be a number, and symbols cannot contain embedded blanks. The symbols you define are case sensitive.

Symbols used as labels become symbolic addresses that are associated with locations in the program.

Labels used locally within a file must be unique. Local labels are special labels whose scope and effect are temporary. A local label can be defined in two ways:

name?, where name is any legal symbol name as described above. The assembler replaces the question mark with a period followed by a unique number. When the source code is expanded, you will not see the unique number in the listing file.

Normal labels must be unique. Local labels, however, can be undefined and redefined again.

The smallest unit of an object file is called a section. A section is a block of code or data that occupies contiguous space in the memory map, with other sections. Each section of an object file is separate and distinct. Object files usually contain three default sections:

- □ text section usually contains executable code;
- data section usually contains initialized data;
- □ bss section usually reserves space for uninitialized variables.

There are two basic types of sections:

- ☐ Initialized sections: contain data or code. The .text and .data sections are initialized. Named sections created with the .sect assembler directive are also initialized;
- ☐ Uninitialized sections: reserve space in the memory map for uninitialized data. The .bss section is uninitialized. Named sections created with the .usect assembler directive are also uninitialized.

A line in a listing file has four fields:

- ☐ Field 1: contains the source code line counter;
- ☐ Field 2: contains the section program counter;
- ☐ Field 3: contains the object code;
- ☐ Field 4: contains the original source statement.

Figure 15-69 shows how the section program counters are modified during assembly.

Figure 15-69. Example: Using sections directives.

```
.global _mpyi
           ************
  2
  3
           * Assemble an initialized table into .data. *
           ***********
  4
  5 0000
                 .data
  6 0000 0011 coeff .word
                      011h,0x22,0x33
    0002 0022
    0004 0033
           ***********
           * Reserve space in .bss for a variable.
  8
           ************
  9
               .bss buffer,10
 10 0000
 11
           ***********
 12
                      Still in .data.
           ************
 13
                .word 0x123
 14 0006 0123 ptr
           *************
 15
           * Assemble code into the .text section.
 17
 18 0000
                 .text
 19 0000 403A add: MOV.W
                      #0x1234,R10
   0002 1234
 20 0004 521A
                ADD.W &coeff+1,R10
   0006 0001!
 21
           * Another initialized table into .data.
 22
           *************
 23
 24 0008
                 .data
 25 0008 00AA ivals .word
                      0xAA,0xBB,0xCC
    000a 00BB
    000c 00CC
           ***********
 26
 27
           * Define another section for more variables. *
           ***********
 28
 29 0000
           var2 .usect "newvars", 1
           inbuf .usect "newvars", 7
           **********
 31
 32
           * Assemble more code into .text.
 33
 34 0008
                 .text
 35 0008 403C mpy: MOV.W
                      #0x3456,R12
    000a 3456
 36 000c 421D
                MOV.W &coeff,R13
   000e 0000!
 37 0010 1290
                       _mpyi
                 CALL
   0012 FFEE!
           ***********
 38
 39
           * Define a named section for int. vectors. *
 40
 41 0000
                       "vectors"
                 .sect
  42 0000 0300
                       0x300
                 .word
Field 1 Field 2 Field 2
                           Field 4
```

file1.obj .bss Executable .text object module Memory map file1 .data Space for (.bss) variables file2 (.bss) Init (.bss) (named section) file1 (.data) Initialized data (.data) file2 (.data) (.text) Executable code file2 (.text) (.text) file2.obj Init Init .bss Tables Tables text .data **Tables** (named section)

Figure 15-70 shows the process of linking two files together.

Figure 15-70. Combining input sections to form an executable object module.

Assembler directives supply data to the program and control the assembly process. Assembler directives enable you to do the following:

- Assemble code and data into specified sections;
- ☐ Reserve space in memory for uninitialized variables;
- □ Control the appearance of listings;
- ☐ Initialize memory;
- Assemble conditional blocks;
- Define global variables;
- ☐ Specify libraries from which the assembler can obtain macros;
- Examine symbolic debugging information.

The following tables summarize the assembler directives.

Table 15-26. Directives that define sections.

Mnemonic and Syntax	Description		
.bss symbol, size in bytes[, alignment]	Reserves size bytes in the .bss (uninitialized data) section		
.data	Assembles into the .data (initialized data) section		
.sect " section name"	Assembles into a named (initialized) section		
.text	Assembles into the .text (executable code) section		
symbol .usect "section name", size in bytes [, alignment]	Reserves size bytes in a named (uninitialized) section		

Table 15-27. Directives that initialize constants (Data and Memory).

Mnemonic and Syntax	Description
.byte value ₁ [,, value _n]	Initializes one or more successive bytes in the current section
.char $value_1$ [,, $value_n$]	Initializes one or more successive bytes in the current section
.double $value_1[,, value_n]$	Initializes one or more 32-bit, IEEE double-precision, floating-point constants
.field value[, size]	Initializes a field of size bits (1-32) with value
.float $value_1[,, value_n]$	Initializes one or more 32-bit, IEEE single-precision, floating-point constants
.half $value_1[,, value_n]$	Initializes one or more 16-bit integers (halfword)
.int $value_1[,, value_n]$	Initializes one or more 16-bit integers
.long $value_1$ [, , $value_n$]	Initializes one or more 32-bit integers
.short $value_1[,, value_n]$	Initializes one or more 16-bit integers (halfword)
.string $\{expr_1 "string_1"\}[,, \{expr_n "string_n"\}]$	Initializes one or more text strings
.word $value_1[,, value_n]$	Initializes one or more 16-bit integers

Table 15-28. Directives that perform alignment and reserve space.

Mnemonic and Syntax	Description
.align [size in bytes]	Aligns the SPC on a boundary specified by size in bytes, which must be a power of 2; defaults to word (2 byte) boundary
.bes size	Reserves <i>size</i> bytes in the current section; a label points to the end of the reserved space
.space size	Reserves <i>size</i> bytes in the current section; a label points to the beginning of the reserved space

Table 15-29. Directives that format the output listing.

Mnemonic and Syntax	Description
.drlist	Enables listing of all directive lines (default)
.drnolist	Suppresses listing of certain directive lines
.fclist	Allows false conditional code block listing (default)
.fcnolist	Suppresses false conditional code block listing
.length [page length]	Sets the page length of the source listing
.list	Restarts the source listing
.mlist	Allows macro listings and loop blocks (default)
.mnolist	Suppresses macro listings and loop blocks
.nolist	Stops the source listing
.option $option_1[, option_2,]$	Selects output listing options; available options are A, B, H, M, N, O, R, T, W, and X
.page	Ejects a page in the source listing
.sslist	Allows expanded substitution symbol listing
.ssnolist	Suppresses expanded substitution symbol listing (default)
.tab size	Sets tab to size characters
.title " string "	Prints a title in the listing page heading
.width [page width]	Sets the page width of the source listing

Table 15-30. Directives that reference other files.

Mnemonic and Syntax	Description
.copy ["]filename["]	Includes source statements from another file
.def $symbol_1[,, symbol_n]$	Identifies one or more symbols that are defined in the current module and that can be used in other modules
.global $symbol_1[,, symbol_n]$	Identifies one or more global (external) symbols
.include ["]filename["]	Includes source statements from another file
.mlib ["]filename["]	Defines macro library
.ref $symbol_1[,, symbol_n]$	Identifies one or more symbols used in the current module that are defined in another module

Table 15-31. Directives that enable conditional assembly.

Description
Ends .loop assembly if well-defined expression is true. When using the .loop construct, the .break construct is optional.
Assembles code block if the .if well-defined expression is false. When using the .if construct, the .else construct is optional.
Assembles code block if the .if well-defined expression is false and the .elseif condition is true. When using the .if construct, the .elseif construct is optional.
Ends .if code block
Ends .loop code block
Assembles code block if the well-defined expression is true
Begins repeatable assembly of a code block; the loop count is determined by the well-defined expression.

Table 15-32. Directives that define structures.

Mnemonic and Syntax	Description		
.endstruct	Ends a structure definition		
.struct	Begins structure definition		
.tag	Assigns structure attributes to a label		

Table 15-33. Directives that define symbols at assembly time.

Mnemonic and Syntax	Description			
.asg ["]character string["], substitution symbol	Assigns a character string to substitution symbol			
symbol .equ value	Equates value with symbol			
.eval well-defined expression, substitution symbol	Performs arithmetic on a numeric substitution symbol			
.label symbol	Defines a load-time relocatable label in a section			
symbol .set value	Equates value with symbol			
.var	Adds a local substitution symbol to a macro's parameter list			

Table 15-34. Directives that perform miscellaneous functions.

Mnemonic and Syntax	Description				
.asmfunc	Identifies the beginning of a block of code that contains a function				
.cdecls [options,] "filename"[, "filename2"[,]	Share C headers between C and assembly code				
.clink ["section name"]	Enables conditional linking for the current or specified section				
.emsg string	Sends user-defined error messages to the output device; produces no .obj file				
.end	Ends program				
.endasmfunc	Identifies the end of a block of code that contains a function				
.mmsg string	Sends user-defined messages to the output device				
.newblock	Undefines local labels				
.wmsg string	Sends user-defined warning messages to the output device				

A project example: square root extraction

□ Algorithm presentation

The routine to perform the calculation of a square root should provide the result in a speedy manner and without needing a starting point, as in Newton's iterative method.

The first step in the manual method of calculating the square root of a number is to partition the number into bit pairs, starting with the least significant bit;

Begin with the most significant pair, subtract 01 and proceed as follows:

- If the subtraction result is positive, enter a bit with value 1 in the square root result;
- If the subtraction result is negative, enter a bit with value 0 in the square root result.

The second step consists of adding to the subtraction result the following bit pair of the number.

The next operation to execute is now selected as follows:

- If the entered bit value in the square root result was 1, add 01 to the square root result and subtract this value;
- If the entered bit value in the square root result was 0, add 11 to the square root result and add this value;
- Proceed until the end of the calculation.

Example: Calculate the square root of 01 01 11 11 00b = 380d:

		1	0	0	1	1	_
1	/_	01 01	01	11	11	00	
		00	01				
		-1	01				
		11	00	11			_
		-	F10	11			
		11	11	10	11		
			+1	00	11		_
			00	11	10	00	10
				- 10	01	01	_
			00	01	00	11	

The result is equal to 10011b = 19d which is the integer part of the square root of 380.

If instead of using 01 01 11 11 00b, the following fractional value had been used: 01 01 11 11 00, 00 00b, the result would be:

	_	1	0	0	1	1,	0	1	1
1	/_	01 01	01	11	11	00,	,00	00	00
		00	01						
		-1	01						
		11	00	11					
		4	-10	11					
		11	11	10	11				
			+1	00	11				
			00	11	10	00			_
				- 10	01	01			
			00	01	00	11	00		
			-	01	00	11	01		
				11	11	11	11	00	_
				+	-10	01	10	11	_
					10	01	01	11	00
				-	01	00	11	01	01
					01	00	10	01	11

The process is identical to the previous one. The value of the square root with n fractional elements can be calculated by adding to the binary number with 2*n fractional elements.

Code implementation and analysis

The algorithm described above is used to build the SQRT_FUNCTION routine. The project for the CCE v3.0 can be found in **Chapt15 > Lab11c**.

- The program body starts by loading the file msp430xG46x.h, providing the C/C++ mnemonics;
- The addressing space ".sysmem" is reserved space for the variable *number* (type word) (UQ16), initialized with the value 50;
- The square root extraction procedure places the result in the variable **sqrt** (type word) (UQ8.8);
- The number of cycles to determine the solution is given by the variable *count* (type byte) initialized to 0x15, allowing 8 fractional part bits.


```
.cdecls C, LIST, "msp430xG46x.h"; load C file Headers
 -----
             ; Data Space
   .sect ".sysmem"
;------
number
   .word 50
             ; reserve space for one word
sqrt
   .word 0
             ; reserve space for one word
   .char 0x0F
count
             ; reserve space for one byte
```

- The program code is placed in the section ".text";
- After setting the entry point BEGIN, start to write the code;
- The first task of the code is to initialize the stack pointer and to stop the watchdog timer;
- Next comes loading the data necessary to execute the routine on the stack using the PUSH instruction;
- The routine is then called. Note that it uses the CALL instruction, so the routine must reside in the address space below 64 kB. Therefore, only bits 15:0 of the register PC are placed on the stack;
- After running the routine, add the value 6 to register SP (corresponding to the space occupied by the routine input data) to restore the stack pointer.

```
;-----
                               ; Program Space
      .global BEGIN
                               ; entry point
BEGIN:
      mov.w #0A00h,SP
                               ; initialize stackpointer
      mov.w #WDTPW+WDTHOLD, &WDTCTL ; stop WDT
      push.w #number
                              ; push data in to stak
      push.w #sqrt
      push.w count
      call #SQRT FUNCTION
                              ; call function
      ADD \#0x6, SP
                               ; restore SP
      ret
                               ; exit
```

- At the beginning of the routine, the machine context is saved. Therefore, all the registers used by the routine are placed on the stack;
- Also reserved on the stack is space for two temporary variables: temp1 and temp2, initialized to the values 0x00 and 0x01, respectively;
- The following figure shows the stack organization:

Figure 15-71. Example: Square root extraction - stack organization.

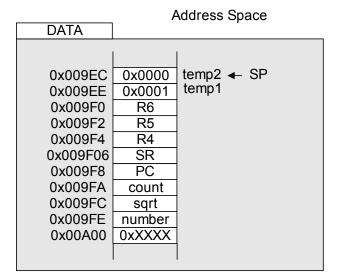

- The square root calculation starts at the label SQRT_LOOP1 and executes 16 times;
- The process begins by removing the 2 most significant bits of the variable *number*, pointed by R4, and placing them in the least significant part of the variable *temp1*.

```
SQRT LOOP1:
                            ; take 1° MSB from number
        mov.w @R4,R6
        rla.w R6
        mov.w R6,0(R4)
        mov.w 2(SP),R6
                             ; put it in temp1
        rlc.w R6
        mov.w R6,2(SP)
        mov.w @R4,R6
                             ; take 2° MSB from number
        rla.w R6
        mov.w R6,0(R4)
        mov.w 2(SP),R6
                             ; put it in temp1
        rlc.w R6
```

- The value of the variable **temp1** is then compared with zero;
- If the result is negative, then execution continues at the label **SQRT_ADD**;
- Otherwise, the variable **temp1** is subtracted from the value of the variable **temp2**;
- After this procedure, program execution continues at the label **SQRT_S1**.

- At this point, depending on the result of the previous operation, a bit of value 0 or 1 is entered in the **sqrt** result;
- If a (1) one (SQRT_PRE_SUB) was entered in the result, the bit pair 01 is added to variable **temp2**.
- If a (0) zero (SQRT_PRE_ADD) was entered in the result, the bit pair 11 is added to the variable *temp2*;
- In both cases, the number of cycles is tested.
- If the cycle value is less than zero, the execution continues at the label **SQRT_END**, otherwise it restarts the procedure at label **SQRT_LOOP1**.

```
SQRT S1:
         cmp #00,R6
         jn SQRT PRE ADD
SQRT PRE SUB:
        mov.w R6,2(SP)
                              ; save temp1 on stack
        mov.w @R5,R6
                               ; insert 1 in sqrt
         setc
         rlc R6
        mov R6,0(R5)
                               ; save sqrt
         rla.w R6
         rla.w R6
         add #1,R6
                               ; append 01b
        mov.w R6,0(SP)
                               ; save temp2
        mov 14(SP), R6
                               ; test count
         dec R6
        mov R6, 14 (SP)
         cmp #00,R6
         jge SQRT LOOP1
         jmp SQRT END
```

```
SQRT PRE ADD:
        mov.w R6,2(SP)
                             ; save temp1 on stack
        mov.w @R5,R6
                             ; insert 0 in sqrt
        clrc
        rlc R6
        mov R6,0(R5)
                             ; save sqrt
        rla.w R6
        rla.w R6
                           ; append 11b
        add #3,R6
        mov.w R6,0(SP)
                             ; save temp2
        mov 14(SP),R6
                            ; test count
        dec R6
        mov R6,14(SP)
        cmp #00,R6
        jge SQRT LOOP1
```

- Before ending the execution of the routine, it is necessary to restore the system state;
- The data values are removed from the stack;
- The execution of the routine ends with the instruction RET.

```
SQRT_END:

pop R6
pop R6
pop R6
pop R5
pop R4
pop SR
ret ; restore context
; restore context
; restore context
```

□ Testing the project

- After the project is built and configured, it is possible to start the debugging process;
- In the memory panel, enter the addresses of the variables *number*, *sqrt* and *count*;
- Make a note of the SP value. Run the program and verify the result;
- It should be noted that after using the routine, the stack returns to the same state. The square root of the value (50) is 0x712, which is the value 7.07 in the format UQ8.8.

This assembly language programming example only intends to provide an overview how a project can be created with the CCE.