
Microprocessor Systems

Addressing Methods

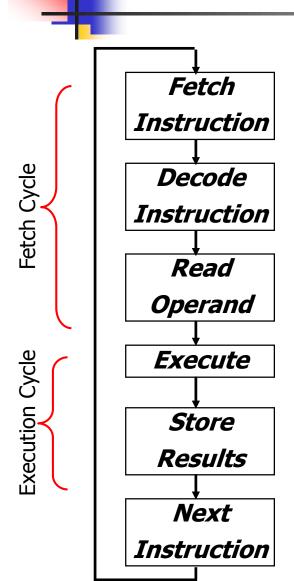


Op-code Operand

1 or 2 bytes 0 to 3 bytes

- Addressing identifies, where to find the operand in the memory or among the registers
- During instruction decoding, the addressing mode is detected and the effective address is obtained
- There are six main addressing methods. Additional methods are derivatives
- Higher quantity and complexity of addressing modes of a CPU designates its flexibility to execute high-level programming languages

0

Operand Sources

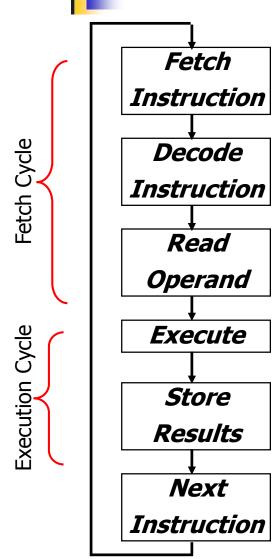

- memory location
- registers
- data

Addressing Codes


- Major Addressing Methods
 - Immediate Addressing
 - Implied Addressing (Register Addressing)
 - Direct Addressing
 - Indirect Addressing
 - Indexed Addressing
 - Relative Addressing
- Advanced Addressing Methods
 - Memory Immediate Write
 - Incremented Index Addressing
 - Decremented Index Addressing
 - Register Relative Index Addressing



Immediate Addressing

- •The operand is contained in the instruction (LDA+X)
- Instruction does not specify an address location
 - Fast instructions
- Example:


LDAB, \$41 LDS, \$1000

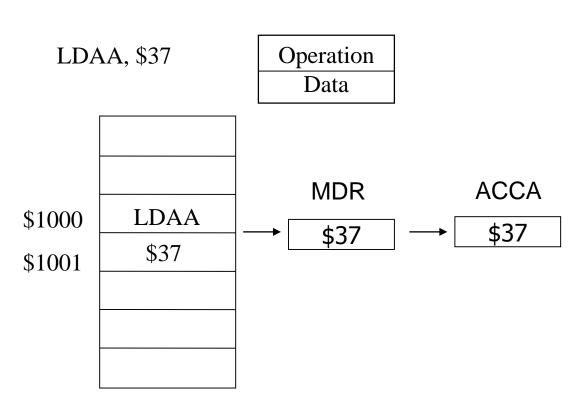




- The instruction contains the register indicator
- No addressing to the memory
- Used for register operations
- Short instruction length (ex. 1 Byte)
- Fast instructions
- Examples:

TAB

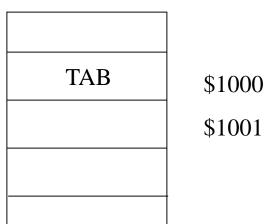

Direct Addressing

- Instruction contains the address of the operand
- Effective address of the operand is in the instruction

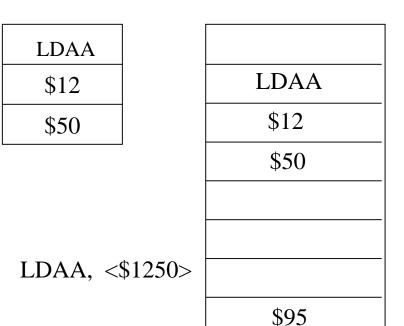

\$1250

\$95

\$95

\$1000

\$1001

\$1002

\$1250


MAR

MDR

ACCA


Indirect Addressing


- Instruction contains the address of the operand's address
- Effective address is at the address location specified in the instruction
- Slow instructions
- Used for queues, lists, pointer type data structures
- Examples: LDAA, ((\$2500)) LDAA, <CD>

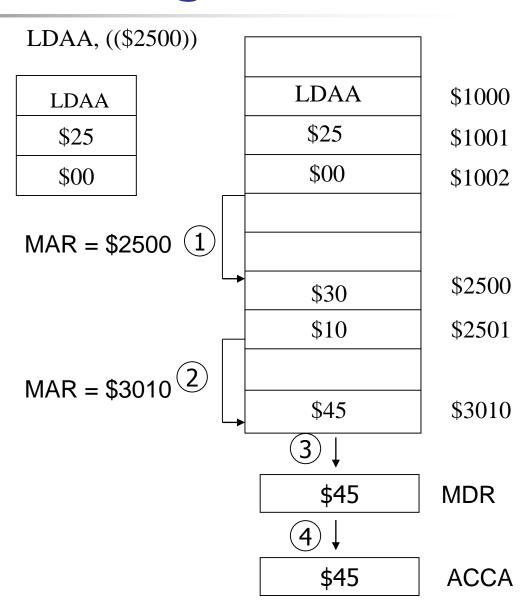



Direct – Indirect Addressing

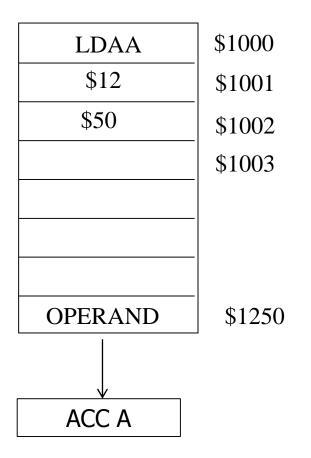


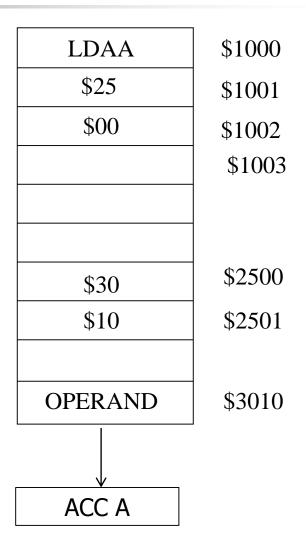



Indexed Addressing


- Index Register (IX) contains the first element of the data set.
- The operand's address = IX + [Index number (1-Byte)]

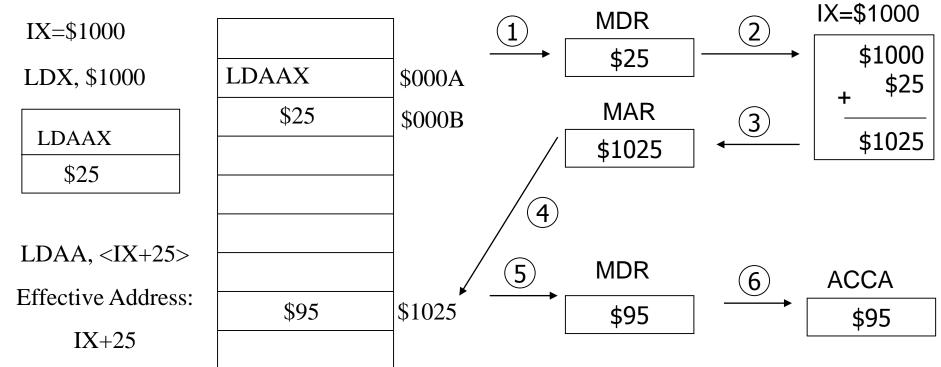



Relative Addressing

- The operand's address is relative to the PC = PC +/- [Step size (7 bit)]
- Used for branching instructions

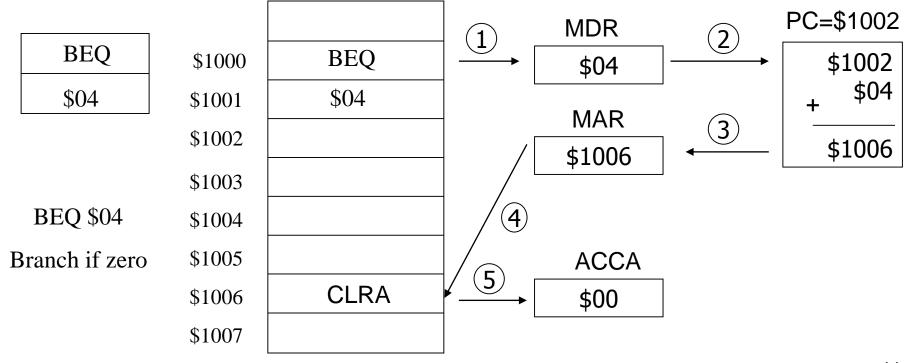



Addressing Methods

a	b	С	d	е	f	g	h	k	n	0	p	S	u	٧	У	Data/address	Data/address	address
1.Octal						2.Octal								3.Octal	4.Octal	5.Octal		

Addressing Method	Effective Address Formula
Immediate	Operand is in Instruction
Register	Operand is in Register
Direct Memory	E.A. = <address in="" instruction=""></address>
Indirect	E.A. = contents <address in="" instruction=""></address>
Indexed	E.A. = IX+Step




- Memory **Immediate Write**
 - Data written directly to a memory location
 - Accumulator, IX, SP, C, D content does not change

STRM \$1000 \$37 \$1001 \$1002 \$12 \$1003 \$50 \$1004

\$1250


\$1251

STRM \$37, \$1250

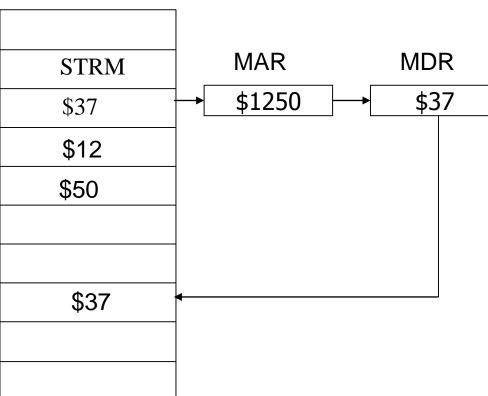




- Incremented Index Addressing
 - Effective address computed as IX + Index
 - Then IX is incremented by the range R [1-Byte (\$00 to \$FF)] provided at the instruction

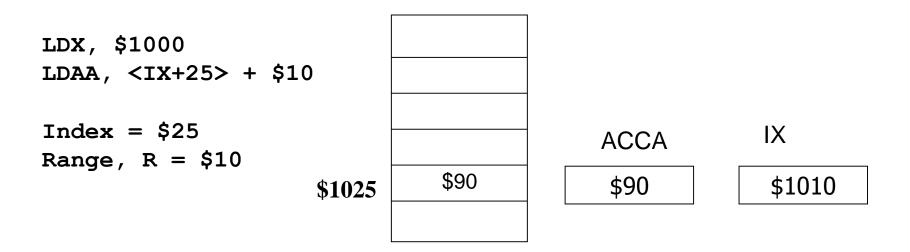




- Decremented Index Addressing
 - First the IX is decremented by R [1-Byte number (Range \$00-\$FF)]
 - Then, Address of operand = IX + Index

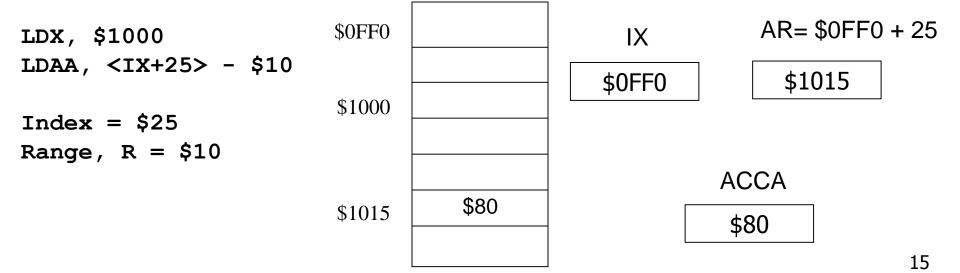



- Register Relative Index Addressing
 - Effective address computed as the sum of General Purpose (GP) Registers [CD], Index Register [IX], and the Index provided in the instruction
 - Size of GP and IX registers should be the same

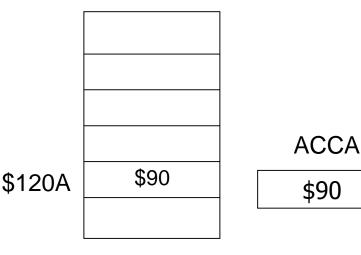



Instruction Set Architecture (ISA) Classification

- Based on operand location
- Type and size of operands
- Memory addressing
- Addressing modes
- Operations in the instruction set
- Instruction set encoding

Instruction Types

- Data Transfer Instructions
 - Operations that move data from one place to another
 - These instructions don't actually modify the data, they just copy it to the destination
- Data Operation Instructions
 - Unlike the data transfer instructions, the data operation instructions do modify the values of data
 - They typically perform some operation using one or two data values (operands) and store the result
- Program Control Instructions
 - Jump or branch instructions are used to go to another part of the program; the jumps can be absolute (always taken) or conditional (taken only if some condition is met)
 - Specific instructions that can generate interrupts (software interrupts)



Instruction Types

- Arithmetic
 - Add, Subtract, Multiply, Divide
- Logical
 - Shift, Rotate
- Data Movement
 - Load, Store
- Flow Control
 - Unconditional Branch
 - Conditional Branch

Instruction Set Categories for Educational CPU

Data Transfer Instructions	Arithmetic-Logic Instructions	c-Shift	Program Control Instructions	Input – Output		
Transfer (MOV) (AKT)	Add (ADD) (TOP)	And (AND) (VE)	Compare (CMP) (KAR)	Branch if Lower (BLO) (DEU)	Load from I/O address (LDA) (YÜK)	
Load (LDA) (YÜK)	Add with carry (ADDC) (TOPE)	Or (OR) (VEYA)	Test (TST) (SIN)	Branch if Overflow (BV) (DTV)		
Store (STA) (YAZ)	Subtract (SUB) (ÇIK)	Xor (XOR) (YADA)	Unconditional Jump (JMP) (BAĞ)	Branch if Carry (BC) (DEV)		
Exchange (XCH) (XCH)	Subtract w. carry (SUBC) (ÇIKE)	Complement (COM) (TÜM)	Unconditional Branch (BR) (DAL)	Branch if Half Carry (BHC) (DYV)	Store to I/O address	
Swap (SWA) (DĞŞ)	Multiply (MUL) (ÇAR)	Logical Shift Left (SHL) (SOL)	Conditional Jump (JMPC) (BAĞK)	Branch if Not Overflow (BNV) (DTY)	(STA) (YAZ)	
Push (PUSH) (YIĞ)	Divide (DIV) (BÖL)	Logical Shift Right (SHR) (SAĞ)	No operation (NOP) (GEÇ)	Branch if Not Carry (BNC) (DEY)		
Pop (POP) (ÇEK)	Increment (INC) (ART)	Arithmetic Shift Right (SHRA) (SAĞİ)	Branch if Equal (BEQ) (DEE)	Branch if No Half Carry (BNHC) (DYY)		
	Decrement (DEC) (AZT)	Circular Shift Left (SHLC) (SOLD)	Branch if Not Equal (BNEQ) (DED)	Decrement, branch if not zero (ADED) ()		
	Negative (NEG) (EKS)	Circular Shift Right (SHRC) (SAĞD)	Branch if Greater (BGT) (DEB)	Branch to Subroutine address (ALTD) ()		
	Convert bin to BCD (DAA) (ONA)	Clear (CLR) (SİL)	Branch if Greater or Equal (BGE) (DBE)	Branch to Subroutine step (ALT) ()		
		Set (SET) (KUR)	Branch if Less (BLT) (DEK)	Conditional Branch to Subroutine (ALTK) ()		
			Branch if Higher (BHI) (DEİ)	Return from Subroutine (RTS) (DÖN)		
			Branch if Higher or Equal (BHS) (DİE)	Return from Interrupt (RTI) (DÖNK)		

 Data Transfer: moves the contents of one register into another.

$$R_i \leftarrow R_j$$

MOV A, B

MOV A, C

MOV B, CCR

MOV IX, SP

 Load: The load instruction copies the contents of a memory location or places an immediate value into an accumulator or a register. Memory contents are not changed.

$$R_i \leftarrow \langle ADDRESS \rangle$$



Store: Store instructions copy the contents of a CPU register into a memory location. The contents of the accumulator or CPU register are not changed.

STA
$$R_i$$
, \leftarrow R_i

STA A, \$1000 \$1000 \leftarrow ACC A

STA C, \$E000 \$E000 \leftarrow C

STA IX, \$C000 \$C000 + \$C001 \leftarrow IX



 Exchange: Exchange instructions exchange the contents of pairs of registers or accumulators.

XCH
$$R_i$$
, R_j $R_i \leftarrow R_j$

XCH A, B
$$ACC A \hookrightarrow ACC B$$

XCH C, D
$$C \longleftrightarrow D$$

Swap: The bits are divided into groups of four. Swap insructions are used to swap the contents of the first group with the second one.

SWA
$$R_i$$
, $R_i[D_3, D_2, D_1, D_0 - D_7, D_6, D_5, D_4]$

SWA A

Push: The contents of the accumulators are pushed onto the stack

PUSH A

PUSH B

push the contents of ACCA onto stack

push the contents of ACCB onto stack

 Pop: Pop instructions are used to read data into the specified accumulator from the stack

POP A

POP B

data on top of the stack is retrieved to ACCA

data on top of the stack is retrieved to ACCB



Arithmetic Instructions

 Add: Add instructions are used to add the contents specified, either in an accumulator or in a register or in memory location, into the accumulator. The result is stored in the accumulator.

 Add with Carry: Add operation is performed by including the carry flag.

ADDC A, B ACCA \longleftarrow ACCA+ACCB+C ADDC A, R_i ACCA \longleftarrow ACCA+R_i+C ADDC A, DATA ACCA \longleftarrow ACCA+DATA+C ADDC A, <ADDRESS> ACCA \longleftarrow ACCA+<ADDRESS>+C



Add Instruction

ADD A, B

ACC A ← ACC A + ACC B

ADDC A, B

 $ACC A \leftarrow ACC A + ACC B + C$

ADD A, \$25

ACC A ← ACC A +\$25

ADD A, <\$1000>

ACC A \leftarrow ACC A + <\$1000>


ADDC A, $\langle IX+10 \rangle$

 $ACC A \leftarrow ACC A + \langle IX+10 \rangle + C$

Add Instruction

 This program reads two numbers (N1,N2) from memory, adds them and stores the result into memory.

 The program starts at memory location \$C000.

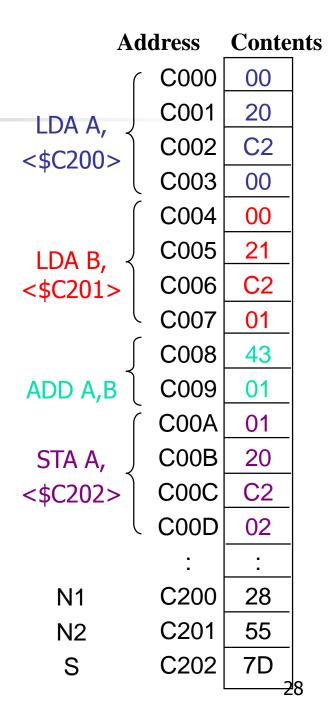

Add Instruction

Example: Add two numbers X=\$40A0 and Y=\$1BC1

```
<10> <11> X <10>:0100 0000 <12> <13> Y <11>:1010 0000 <12>:0001 1011 <14> <15> RESULT <13>:1100 0001
```

```
LDA A, <$0010> ACCA ← 0100 0000

LDA B, <$0011> ACCB ← 1010 0000

ADD B, <$0013> ACCB ← 0110 0001 C=1(carry)

ADDC A, <$0012> ACCA ← 0101 1100

STA A, $0014 ← 0101 1100

STA B, $0015 ← 0110 0001
```

Subtract Instruction

 Subtract: Substract instructions are used to subtract the specified contents, in an acuumulator or in a register or in the memory location, from the contents of the accumulator. The result is stored in the accumulator.

SUB A,
$$R_i$$
 ACCA \leftarrow ACCA- R_i

Subtract with Borrow

SBC A,
$$R_i$$
 ACCA \leftarrow ACCA- R_i -C



Arithmetic Instructions

- Multiplication:
 - The multiplicand is in ACCA.
 - The multiplier is in ACCB or in an 8 bit register or in a memory location or an immediate data.
 - The result is stored in ACCA and ACCB.
 - The multiplicand and multiplier are unsigned.



Arithmetic Instructions

Division:

- The dividend is in ACCA and ACCB pair.
- The divisor is an 8 bit register or a memory location or an immediate data.
- The quotient is in ACCA and ACCB pair and the remainder is in C.
- The dividend and the divisor are unsigned numbers.
- If the divisor is 0, the overflow flag in CCR is set.

```
DIV AB, R_i ACCA + ACCB \leftarrow <ACCA + ACCB> / R_i DIV AB, DATA ACCA + ACCB \leftarrow <ACCA + ACCB> / DATA DIV AB, <ADDRESS> ACCA + ACCB \leftarrow <ACCA + ACCB>/<ADDRESS>
```

Example #1

The 16 bit number in memory locations \$1000 and \$1001 will be divided to the number in memory location \$1002. The result and the remainder will be stored in memory locations \$1005-\$1006 and \$1007 respectively.

```
LDA IX, $1000

LDA A, <IX+0> + $01

LDA B, <IX+0> + $01

DIV AB, <IX+0>

STA AB, $1005

STA C, $1007
```

Example #2

The operands in memory locations \$1000 and \$1001 will be multiplied, then divided to the operand in memory location \$1002. The result will be stored at memory locations \$1005-\$1006, remainder will be stored at memory location \$1007

START	LDA IX, \$1000	IX<-\$1000
	LDA A, <ix+0> + \$01</ix+0>	IX<-\$1001
	MUL A, <ix+0> + \$01</ix+0>	IX<-\$1002
	DIV AB, <ix+0></ix+0>	IX<-\$1002
	LDA IX, \$1005	IX<-\$1005
	STA AB, <ix+0> + \$02</ix+0>	IX<-\$1007
	STA C <tx+0></tx+0>	34