# UNIT 1 INTRODUCTION TO COMPUTER NETWORKS

| Structure |   |        |
|-----------|---|--------|
| 1.0       | Introduction                                    | 5      |
| 1.1       | Objectives                                      |        |
| 1.2       | What is a Computer Network?                     | 6<br>6 |
| 1.3       | Network Goals and Motivations                   |        |
| 1.4       | Classification of Networks                      | 7<br>8 |
| 1.4       | 1.4.1 Broadcast Networks                        | O      |
|           | 1.4.2 Point-to-Point or Switched Networks       |        |
| 1.5       |   |        |
| 1.0       | 1.5.1 Bus Topology                              | 11     |
|           | 1.5.2 Star Topology                             |        |
|           | 1.5.3 Ring Topology                             |        |
|           | 1.5.4 Tree Topology                             |        |
|           | 1.5.5 Mesh Topology                             |        |
|           | 1.5.6 Cellular Topology                         | 4.6    |
| 1.6       | Applications of Network 10 Networking Model 11  |        |
| 1.7       | 1.7 Networking Model                            |        |
|           | 1.7.1 OSI Reference Model                       |        |
|           | 1.7.2 TCP/IP Reference Model                    |        |
| 1.8       | Network Architecture                            | 29     |
|           | 1.8.1 Client/Server Architecture                |        |
| 1.0       | 1.8.2 Peer-to-Peer Architecture                 | 2.1    |
| 1.9       | Example Networks                                | 31     |
|           | 1.9.1 Novell Netware                            |        |
|           | 1.9.2 ARPANET<br>1.9.3 Internet                 |        |
|           | 1.9.4 ATM Network                               |        |
| 1.10      | Types of Computer Networks                      | 37     |
| 1.10      | 1.10.1 Metropolitan Area Network (MAN)          | 31     |
|           | 1.10.2 Wide Area Network (WAN)                  |        |
|           | 1.10.3 Comparison Between LAN, MAN, WAN and GAN |        |
| 1.11      | 1 , ,   |        |
| 1.12      | · ·   |        |
| 1.13      | ,   |        |
| 1.13      | Further Readings                                | 43     |
| 1.14      | i utulci readiligo                              | 43     |

## 1.0 INTRODUCTION

These days, practically every business, no matter how small uses computers to handle various transactions and as business grows, they often need several people to input and process data simultaneously and in order to achieve this, the earlier model of a single computer serving all the organisations computational needs has been replaced by a model in which a number of separate but interconnected computers do the job and this model is known as a Computer Network. By linking individual computers over a network their productivity has been increased enormously.

A most distinguishing characteristic of a general computer network is that data can enter or leave at any point and can be processed at any workstation. For example: A printer can be controlled from any word processor at any computer on the network. This is an introductory unit where, you will be learning about the basic concepts regarding Computer Networks. Here, you will learn about Networks, different types of Networks, their applications, Network topology, Network protocols, OSI Reference Model, TCP/IP Reference Model. We shall also examine some of the popular computer networks like Novell network, ARPANET, Internet, and ATM networks.

Towards the end of this unit the concept of Delays in computer networks is also discussed.

## 1.1 OBLECTIVES

After going through this unit, you should be able to:

- understand the concept of computer networks;
- differentiate between different types of computer networks;
- understand the different application of networks;
- compare the different network topologies;
- signify the importance of network protocols;
- know the importance of using networked system;
- understand the layered organisation and structuring of computer networks using OSI and TCP/IP reference model;
- have a broad idea about some of the popular networks like Novell network, ARPANET, INTERNET, ATM etc., and
- understand the concept of delays.

## 1.2 WHAT IS A COMPUTER NETWORK?



Figure 1: A computer-networked environment

A Computer network consists of two or more autonomous computers that are linked (connected) together in order to:

- Share resources (files, printers, modems, fax machines).
- Share Application software like MS Office.
- Allow Electronic communication.
- Increase productivity (makes it easier to share data amongst users).

*Figure 1* shows people working in an networked environment. The Computers on a network may be linked through Cables, telephones lines, radio waves, satellites etc.

A Computer network includes, the network operating system in the client and server machines, the cables, which connect different computers and all supporting hardware

in between such as bridges, routers and switches. In wireless systems, antennas and towers are also part of the network.

Introduction to Computer Networks



Computer networks are generally classified according to their structure and the area they are localised in as:

- **Local Area Network (LAN):** The network that spans a relatively small area that is, in the single building or campus is known as LAN.
- **Metropolitan Area Network (MAN):** The type of computer network that is, designed for a city or town is known as MAN.
- Wide Area Network (WAN): A network that covers a large geographical area and covers different cities, states and sometimes even countries, is known as WAN.

The additional characteristics that are also used to categorise different types of networks are:

- **Topology:** Topology is the graphical arrangement of computer systems in a network. Common topologies include a bus, star, ring, and mesh.
- **Protocol:** The protocol defines a common set of rules which are used by computers on the network that communicate between hardware and software entities. One of the most popular protocols for LANs is the Ethernet. Another popular LAN protocol for PCs is the token-ring network.
- **Architecture:** Networks can be broadly classified as using either a peer-to-peer or client/server architecture.

## 1.3 NETWORK GOALS AND MOTIVATIONS

Before designing a computer network we should see that the designed network fulfils the basic goals. We have seen that a computer network should satisfy a broad range of purposes and should meet various requirements. One of the main goals of a computer network is to enable its users to share resources, to provide low cost facilities and easy addition of new processing services. The computer network thus, creates a global environment for its users and computers.

Some of the basic goals that a Computer network should satisfy are:

- Cost reduction by sharing hardware and software resources.
- Provide high reliability by having multiple sources of supply.
- Provide an efficient means of transport for large volumes of data among various locations (High throughput).
- Provide inter-process communication among users and processors.
- Reduction in delay driving data transport.
- Increase productivity by making it easier to share data amongst users.
- Repairs, upgrades, expansions, and changes to the network should be performed with minimal impact on the majority of network users.
- Standards and protocols should be supported to allow many types of equipment from different vendors to share the network (Interoperatability).
- Provide centralised/distributed management and allocation of network resources like host processors, transmission facilities etc.

## 1.4 CLASSIFICATION OF NETWORKS

Depending on the transmission technology i.e., whether the network contains switching elements or not, we have two types of networks:

- Broadcast networks.
- Point-to-point or Switched networks.

#### 1.4.1 Broadcast Networks

Broadcast networks have a single communication channel that is shared by all the machines on the network. In this type of network, short messages sent by any machine are received by all the machines on the network. The packet contains an address field, which specifies for whom the packet is intended. All the machines, upon receiving a packet check for the address field, if the packet is intended for itself, it processes it and if not the packet is just ignored.

Using Broadcast networks, we can generally address a packet to all destinations (machines) by using a special code in the address field. Such packets are received and processed by all machines on the network. This mode of operation is known as "Broadcasting". Some Broadcast networks also support transmission to a subset of machines and this is known as "Multicasting". One possible way to achieve Multicasting is to reserve one bit to indicate multicasting and the remaining (n-1) address bits contain group number. Each machine can subscribe to any or all of the groups.

Broadcast networks are easily configured for geographically localised networks. Broadcast networks may be Static or dynamic, depending on how the channel is allocated.

In Static allocation, time is divided into discrete intervals and using round robin method, each machine is allowed to broadcast only when its time slot comes up. This method is inefficient because the channel capacity is wasted when a machine has nothing to broadcast during its allocated slot.

Dynamic allocation may be centralised or decentralised. In centralised allocation method, there is a single entity, for example, a bus arbitration unit which determine who goes next and this is achieved by using some internal algorithm. In Decentralised channel allocation method, there is no central entity, here, each machine decides for itself whether or not to transmit.

The different types of Broadcast networks are:

- 1) Packet Radio Networks.
- 2) Satellite Networks.
- 3) Local Area Networks.

**Packet Radio** broadcasting differs from **satellite network** broadcasting in several ways. In particular stations have limited range introducing the need for radio repeaters, which in turn affects the routing, and acknowledges schemes. Also the propagation delay is much less than for satellite broadcasting.

#### LAN (Local Area Network)

Local Area Network is a computer network that spans over a relatively small area. Most LANs are confined to a single building or group of buildings within a campus. However, one LAN can be connected to other LANs over any distance via telephone

lines and radio waves. A system of LANs connected in this way is called a wide-area network (WAN).

Introduction to Computer Networks



Most LANs connect workstations and personal computers. Each node (individual computer) in a LAN has its own CPU with which it executes programs, but it is also able to access data and devices anywhere on the LAN. This means that many users can share data as well as expensive devices, such as laser printers, fax machines etc. Users can also use the LAN to communicate with each other, by sending e-mail or engaging in chat sessions. There are many different types of LANs, Ethernets being the most common for PCs.

The following characteristics differentiate one LAN from another:

- **Topology:** The geometric arrangement of devices on the network. For example, devices can be arranged in a ring or in a straight line.
- Protocols: The rules and encoding specifications for sending data. The
  protocols also determine whether the network uses peer-to-peer or client/server
  architecture.
- **Media:** Devices can be connected by twisted-pair wire, coaxial cables, or fiber optic cables. Some networks communicate via radio waves hence, do not use any connecting media.

LANs are capable of transmitting data at very fast rates, much faster than data can be transmitted over a telephone line; but the distances are limited, and there is also a limit on the number of computers that can be attached to a single LAN.

The typical characteristics of a LAN are:

- Confined to small areas i.e., it connects several devices over a distance of 5 to 10 km.
- High speed.
- Most inexpensive equipment.
- Low error rates.
- Data and hardware sharing between users owned by the user.
- Operates at speeds ranging from 10Mbps to 100Mbps. Now a days 1000 Mbps are available.

#### 1.4.2 Point-to-Point or Switched Networks

Point—to-point or switched, networks are those in which there are many connections between individual pairs of machines. In these networks, when a packet travels from source to destination it may have to first visit one or more intermediate machines. Routing algorithms play an important role in Point-to-point or Switched networks because often multiple routes of different lengths are available.

An example of switched network is the international dial-up telephone system.

The different types of Point- to-point or Switched networks are:

- Circuit Switched Networks.
- Packet Switched Networks

In Switched network, the temporary connection is established from one point to another for either the duration of the session (circuit switching) or for the transmission of one or more packets of data (packet switching).

#### **Circuit Switched Networks**

Circuit Switched networks use a networking technology that provides a temporary, but dedicated connection between two stations no matter how many switching devices are used in the data transfer route. Circuit switching was originally developed for the analog based telephone system in order to guarantee steady and consistent service for two people engaged in a phone conversation. Analog circuit switching has given way to digital circuit switching, and the digital counterpart still maintains the connection until broken (one side hangs up). This means bandwidth is continuously reserved and "silence is transmitted" just the same as digital audio in voice conversation.

#### **Packet Switched Networks**

Packet switched Networks use a networking technology that breaks up a message into smaller packets for transmission and switches them to their required destination. Unlike circuit switching, which requires a constant point-to-point circuit to be established, each packet in a packet-switched network contains a destination address. Thus, all packets in a single message do not have to travel the same path. They can be dynamically routed over the network as lines become available or unavailable. The destination computer reassembles the packets back into their proper sequence.

Packet switching efficiently handles messages of different lengths and priorities. By accounting for packets sent, a public network can charge customers for only the data they transmit. Packet switching has been widely used for data, but not for real-time voice and video. However, this is beginning to change. IP and ATM technologies are expected to enable packet switching to be used for everything.

The first international standard for wide area packet switching networks was X.25, which was defined when all circuits were digited and susceptible to noise. Subsequent technologies, such as frame relay and SMDS were designed for today's almost-error-free digital lines.

ATM uses a cell-switching technology that provides the bandwidth sharing efficiency of packet switching with the guaranteed bandwidth of circuit switching.

Higher-level protocols, such as TCP/IP, IPX/SPX and NetBIOS, are also packet based and are designed to ride over packet-switched topologies.

Public packet switching networks may provide value added services, such as protocol conversion and electronic mail.

## **Check Your Progress 1**

| )  | xplain the difference between Client/Server and Peer-to-peer architecture.        |  |
|----|---|--|
|    |   |  |
|    |   |  |
|    |   |  |
| 2) | List the important aspects that should be kept in mind while designing a network? |  |
|    |   |  |
|    |   |  |
|    |   |  |

| 3) | Write briefly about the areas where networks are used?       |
|----|--|
|    |  |
|    |  |
|    |  |
| 4) | Differentiate between Broadcast and point-to-point networks. |
|    |  |
|    |  |
|    |  |

## Introduction to Computer Networks



## 1.5 NETWORK TOPOLOGY

Topology refers to the shape of a network, or the network's layout. How different nodes in a network are connected to each other and how they communicate with each other is determined by the network's topology. Topologies are either *physical* or *logical*.

Some of the most common network topologies are:

- Bus topology
- Star topology
- Ring topology
- Tree topology
- Mesh topology
- Cellular topology.

The parameters that are to be considered while selecting a physical topology are:

- Ease of installation.
- Ease of reconfiguration.
- Ease of troubleshooting.

#### 1.5.1 Bus Topology

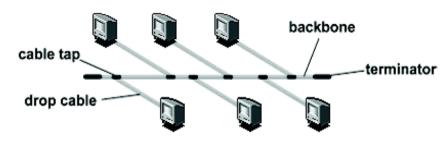


Figure 2: Bus topology

In Bus topology, all devices are connected to a central cable, called the bus or backbone. The bus topology connects workstations using a single cable. Each workstation is connected to the next workstation in a point-to-point fashion. All workstations connect to the same cable. *Figure 2* shows computers connected using Bus Topology.

In this type of topology, if one workstation goes faulty all workstations may be affected as all workstations share the same cable for the sending and receiving of information. The cabling cost of bus systems is the least of all the different topologies. Each end of the cable is terminated using a special terminator.

The common implementation of this topology is Ethernet. Here, message transmitted by one workstation is heard by all the other workstations.

## **Advantages of Bus Topology**

- Installation is easy and cheap when compared to other topologies.
- Connections are simple and this topology is easy to use.
- Less cabling is required.

#### **Disadvantages of Bus Topology**

- Used only in comparatively small networks.
- As all computers share the same bus, the performance of the network deteriorates when we increase the number of computers beyond a certain limit.
- Fault identification is difficult.
- A single fault in the cable stops all transmission.

## 1.5.2 Star Topology

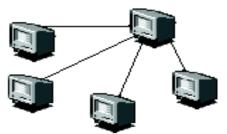


Figure 3: Star topology

Star topology uses a central hub through which, all components are connected. In a Star topology, the central hub is the host computer, and at the end of each connection is a terminal as shown in *Figure 3*.

Nodes communicate across the network by passing data through the hub. A star network uses a significant amount of cable as each terminal is wired back to the central hub, even if two terminals are side by side but several hundred meters away from the host. The central hub makes all routing decisions, and all other workstations can be simple.

An advantage of the star topology is, that failure, in one of the terminals does not affect any other terminal; however, failure of the central hub affects all terminals. This type of topology is frequently used to connect terminals to a large time-sharing host computer.

### **Advantages of Star Topology**

- Installation and configuration of network is easy.
- Less expensive when compared to mesh topology.
- Faults in the network can be easily traced.



- Expansion and modification of star network is easy.
- Single computer failure does not affect the network.
- Supports multiple cable types like shielded twisted pair cable, unshielded twisted pair cable, ordinary telephone cable etc.

## **Disadvantages of Star Topology**

- Failure in the central hub brings the entire network to a halt.
- More cabling is required in comparison to tree or bus topology because each node is connected to the central hub.

### 1.5.3 Ring Topology

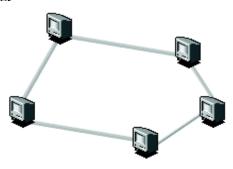


Figure 4: Ring topology

In Ring Topology all devices are connected to one another in the shape of a closed loop, so that each device is connected directly to two other devices, one on either side of it, i.e., the ring topology connects workstations in a closed loop, which is depicted in *Figure 4* Each terminal is connected to two other terminals (the next and the previous), with the last terminal being connected to the first. Data is transmitted around the ring in one direction only; each station passing on the data to the next station till it reaches its destination.

Information travels around the ring from one workstation to the next. Each packet of data sent on the ring is prefixed by the address of the station to which it is being sent. When a packet of data arrives, the workstation checks to see if the packet address is the same as its own, if it is, it grabs the data in the packet. If the packet does not belong to it, it sends the packet to the next workstation in the ring.

Faulty workstations can be isolated from the ring. When the workstation is powered on, it connects itself to the ring. When power is off, it disconnects itself from the ring and allows the information to bypass the workstation.

The common implementation of this topology is token ring. A break in the ring causes the entire network to fail. Individual workstations can be isolated from the ring.

#### **Advantages of Ring Topology**

- Easy to install and modify the network.
- Fault isolation is simplified.
- Unlike Bus topology, there is no signal loss in Ring topology because the tokens are data packets that are re-generated at each node.

#### **Disadvantages of Ring Topology**

• Adding or removing computers disrupts the entire network.

- A break in the ring can stop the transmission in the entire network.
- Finding fault is difficult.
- Expensive when compared to other topologies.

#### 1.5.4 Tree Topology

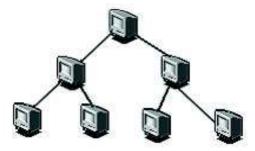


Figure 5: Tree topology

Tree topology is a LAN topology in which only one route exists between any two nodes on the network. The pattern of connection resembles a tree in which all branches spring from one root. *Figure 5* shows computers connected using Tree Topology.

Tree topology is a hybrid topology, it is similar to the star topology but the nodes are connected to the secondary hub, which in turn is connected to the central hub. In this topology groups of star-configured networks are connected to a linear bus backbone.

#### **Advantages of Tree Topology**

- Installation and configuration of network is easy.
- Less expensive when compared to mesh topology.
- Faults in the network can be detected traced.
- The addition of the secondary hub allows more devices to be attached to the central hub.
- Supports multiple cable types like shielded twisted pair cable, unshielded twisted pair cable, ordinary telephone cable etc.

#### **Disadvantages of Tree Topology**

- Failure in the central hub brings the entire network to a halt.
- More cabling is required when compared to bus topology because each node is connected to the central hub.

#### 1.5.5 Mesh Topology

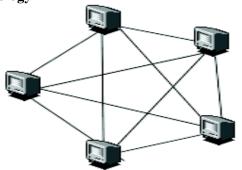


Figure 6: Mesh Topology

Devices are connected with many redundant interconnections between network nodes. In a well-connected topology, every node has a connection to every other node in the

Introduction to Computer Networks



network. The cable requirements are high, but there are redundant paths built in. Failure in one of the computers does not cause the network to break down, as they have alternative paths to other computers.

Mesh topologies are used in critical connection of host computers (typically telephone exchanges). Alternate paths allow each computer to balance the load to other computer systems in the network by using more than one of the connection paths available. A fully connected mesh network therefore has n (n-1)/2 physical channels to link n devices. To accommodate these, every device on the network must have (n-1) input/output ports.

## **Advantages of Mesh Topology**

- Use of dedicated links eliminates traffic problems.
- Failure in one of the computers does not affect the entire network.
- Point-to-point link makes fault isolation easy.
- It is robust.
- Privacy between computers is maintained as messages travel along dedicated path.

#### **Disadvantages of Mesh Topology**

- The amount of cabling required is high.
- A large number of I/O (input/output) ports are required.

## 1.5.6 Cellular Topology




Figure 7: Cellular topology

Cellular topology, divides the area being serviced into cells. In wireless media each point transmits in a certain geographical area called a cell, each cell represents a portion of the total network area. *Figure 7* shows computers using Cellular Topology. Devices that are present within the cell, communicate through a central hub. Hubs in different cells are interconnected and hubs are responsible for routing data across the network. They provide a complete network infrastructure.

Cellular topology is applicable only in case of wireless media that does not require cable connection.

## **Advantages of Cellular Topology**

- If the hubs maintain a point-to-point link with devices, trouble shooting is easy.
- Hub-to-hub fault tracking is more complicated, but allows simple fault isolation.

## **Disadvantages of Cellular Topology**

• When a hub fails, all devices serviced by the hub lose service (are affected).

## **™** Check Your Progress 2

| 1) | List the importance of using computer networks in Airline and Railway reservation systems?       |
|----|--|
|    |  |
|    |  |
|    |  |
| 2) | What are the various types of networks?  |
|    |  |
|    |  |
|    |  |
| 3) | Compare Tree topology with Star topology.  |
|    |  |
|    |  |
|    |  |
| 4) | Suppose we have to add new nodes to the network, then which is the best suited topology and why? |
|    |  |
|    |  |
|    |  |

## 1.6 APPLICATIONS OF NETWORK

Computer networks are used as a highly reliable medium for exchange of information. Using a computer network we can do virtually everything that a Mainframe or a Minicomputer can do, but at a much lower cost.

There are numerous applications of computer networks some of them are:

- Share resources and information.
- Access to remote information.
- Person-to-person communication.
- Interactive entertainment.

#### **Share Resources and Information**

Using a Computer network we can share expensive resources such as laser printers, CD-ROM Drives, Fax machines etc. We can share information and many persons can work together on projects and tasks that require co-ordination and communication, even though these users may not be physically close.

#### **Access to Remote Information**

Access to remote information involves interaction between a person and a remote database. Financial Institutions allow access to their information so that people can pay their bills, handle their investments and manage their bank accounts electronically. Online shopping also allows people, access to product information before purchasing the product.

Introduction to Computer Networks



These days, many newspapers and digital libraries are available online and allow users to access news and information which is of interest to them. Another application is the World Wide Web, which contains information about a wide variety of subjects like health, sports, science, recreation, history, government etc.

#### **Person-to-person Communication**

Person-to-person communication is mostly carried out using e-mail (Electronic mail) Electronic mail is a simple, yet potent facility. E-mail is more valuable and useful than the telephone because by using e-mail we can convey information that is difficult or impossible to read over the telephone, like reports, tables, charts, images etc. Using a computer network, it is also possible to organise virtual meeting among people who are far away from each other and this is called video conferencing. Virtual meetings have other applications such as in Distance education, getting medical opinions from distant specialists (remote diagnosis) etc. Multimedia communication can also be used for tele training.

#### **Interactive Entertainment**

Computer Networks such as Internet offer a wide variety of entertainment, there are many companies online, which offer video-on-demand. A large variety of multiperson real-time simulation games, like hide-and seek in a virtual dungeon and flight simulators with the players in one team trying to shoot down the players in the opposite team and many such games are available on-line.

## 1.7 NETWORKING MODEL

Most of the networks today are organised as a series of stacked layers with each layer stacked over another layer below it. This is done in order to divide the workload and to simplify the systems design. The architecture is considered scalable if it is able to accommodate a number of layers in either large or small scales. For example, a computer that runs an Internet application may require all of the layers that were defined for the architectural model. Similarly, a computer that acts as a router may not need all these layers. Systems design is furthermore simplified because with a layered architecture, the design has to only concern the layer in question and not worry about the architecture in a macro sense.

The depth and functionality of this stack differs from network to network. However, regardless of the differences among all networks, the purpose of each layer is to provide certain services (job responsibilities) to the layer above it, shielding the upper layers from the intricate details of how the services offered are implemented.

Every computer in a network possesses within it a generic stack. A *logical* communication may exist between any two computers through the layers of the same "level". Layer-n on one computer may converse with layer-n on another computer. There are rules and conventions used in the communication at any given layers, which are known collectively as the layer-n *protocol* for the nth layer.

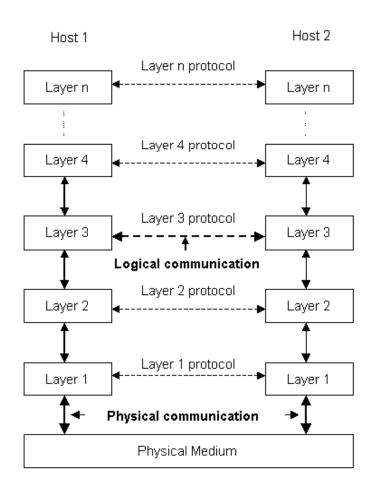


Figure 8: Layered network architecture

Data are not directly transferred from layer-n on one computer to layer-n on another computer. Rather, each layer passes data and control information to the layer directly below until the lowest layer is reached. Below layer-1 (the bottom layer), is the physical medium (the hardware) through which the actual transaction takes place. In *Figure 8* logical communication is shown by a broken-line arrow and physical communication by a solid-line arrow.

Between every pair of adjacent layers is an interface. The interface is a specification that determines how the data should be passed between the layers. It defines what primitive operations and services the lower layer should offer to the upper layer. One of the most important considerations when designing a network is to design clean-cut interfaces between the layers. To create such an interface between the layers would require each layer to perform a specific collection of well-understood functions. A clean-cut interface makes it easier to replace the implementation of one layer with another implementation because all that is required of the new implementation is that, it offers, exactly the same set of services to its neighbouring layer above as the old implementation did.



APPLICATION LAYER

PRESENTATION LAYER

SESSION LAYER

TRANSPORT LAYER

NETWORK LAYER

DATA LINK LAYER

Figure 9: Layers of OSI reference model

PHYSICAL LAYER

The Open System Interconnection (OSI) model is a set of protocols that attempt to define and standardise the data communications process; we can say that it is a concept that describes how data communications should take place.

The OSI model was set by the International Standards Organisation (ISO) in 1984, and it is now considered the primary architectural model for inter-computer communications. The OSI model has the support of most major computer and network vendors, many large customers, and most governments in different countries.

The Open Systems Interconnection (OSI) reference model describes how information from a software application in one computer moves through a network medium to a software application in another computer. The OSI reference model is a conceptual model composed of seven layers as shown in *Figure 9* each specifying particular network functions and into these layers are fitted the protocol standards developed by the ISO and other standards bodies. The OSI model divides the tasks involved with moving information between networked computers into seven smaller, more manageable task groups. A task or group of tasks is then assigned to each of the seven OSI layers. Each layer is reasonably self-contained so that the tasks assigned to each layer can be implemented independently. This enables the solutions offered by one layer to be updated without affecting the other layers.

The OSI model is modular. Each successive layer of the OSI model works with the one above and below it.

Although, each layer of the OSI model provides its own set of functions, it is possible to group the layers into two distinct categories. The first four layers i.e., physical, data link, network, and transport layer provide the end-to-end services necessary for the transfer of data between two systems. These layers provide the protocols associated with the communications network used to link two computers together. Together, these are communication oriented.

The top three layers i.e., the application, presentation, and session layers provide the application services required for the exchange of information. That is, they allow two applications, each running on a different node of the network to interact with each other through the services provided by their respective operating systems. Together, these are data processing oriented.

The following are the seven layers of the Open System Interconnection (OSI) reference model:

- Layer 7 Application layer
- Layer 6 Presentation layer
- Layer 5 Session layer
- Layer 4 Transport layer
- Layer 3 Network layer
- Layer 2 Data Link layer
- Layer 1 Physical layer

## Application layer (Layer 7)

The Application layer is probably the most easily misunderstood layer of the model. This top layer defines the language and syntax that programs use to communicate with other programs. The application layer represents the purpose of communicating in the first place. For example, a program in a client workstation uses commands to request data from a program in the server. Common functions at this layer are opening, closing, reading and writing files, transferring files and e-mail messages, executing remote jobs and obtaining directory information about network resources etc.

#### **Presentation layer (Layer 6)**

The Presentation layer performs code conversion and data reformatting (syntax translation). It is the translator of the network; it makes sure the data is in the correct form for the receiving application.

When data are transmitted between different types of computer systems, the presentation layer negotiates and manages the way data are represented and encoded. For example, it provides a common denominator between ASCII and EBCDIC machines as well as between different floating point and binary formats. Sun's XDR and OSI's ASN.1 are two protocols used for this purpose. This layer is also used for encryption and decryption. It also provides security features through encryption and decryption.

#### Session layer (Layer 5)

The Session layer decides when to turn communication on and off between two computers. It provides the mechanism that controls the data-exchange process and coordinates the interaction (communication) between them in an orderly manner.

It sets up and clears communication channels between two communicating components. It determines one-way or two-way communications and manages the dialogue between both parties; for example, making sure that the previous request has been fulfilled before the next one is sent. It also marks significant parts of the transmitted data with checkpoints to allow for fast recovery in the event of a connection failure.

#### Transport layer (Layer 4)

The transport layer is responsible for overall end-to-end validity and integrity of the transmission i.e., it ensures that data is successfully sent and received between two computers. The lower data link layer (layer 2) is only responsible for delivering packets from one node to another. Thus, if a packet gets lost in a router somewhere in the enterprise Internet, the transport layer will detect that. It ensures that if a 12MB file is sent, the full 12MB is received.

Introduction to Computer Networks



If data is sent incorrectly, this layer has the responsibility of asking for retransmission of the data. Specifically, it provides a network-independent, reliable message-independent, reliable message-interchange service to the top three application-oriented layers. This layer acts as an interface between the bottom and top three layers. By providing the session layer (layer 5) with a reliable message transfer service, it hides the detailed operation of the underlying network from the session layer.

#### Network layer (Layer 3)

The network layer establishes the route between the sending and receiving stations. The unit of data at the network layer is called a packet. It provides network routing and flow and congestion functions across computer-network interface.

It makes a decision as to where to route the packet based on information and calculations from other routers, or according to static entries in the routing table. It examines network addresses in the data instead of physical addresses seen in the Data Link layer.

The Network layer establishes, maintains, and terminates logical and/or physical connections.

The network layer is responsible for translating logical addresses, or names, into physical addresses.

The main device found at the Network layer is a router.

#### Data link layer (Layer 2)

The data link layer groups the bits that we see on the Physical layer into Frames. It is primarily responsible for error-free delivery of data on a hop. The Data link layer is split into two sub-layers i.e., the Logical Link Control (LLC) and Media Access Control (MAC).

The Data-Link layer handles the physical transfer, framing (the assembly of data into a single unit or block), flow control and error-control functions (and retransmission in the event of an error) over a single transmission link; it is responsible for getting the data packaged and onto the network cable. The data link layer provides the network layer (layer 3) reliable information-transfer capabilities.

The main network device found at the data link layer is a bridge. This device works at a higher layer than the repeater and therefore is a more complex device. It has some understanding of the data it receives and can make a decision based on the frames it receives as to whether it needs to let the information pass, or can remove the information from the network. This means that the amount of traffic on the medium can be reduced and therefore, the usable bandwidth can be increased.

#### Physical layer (Layer 1)

The data units on this layer are called bits. This layer defines the mechanical and electrical definition of the network medium (cable) and network hardware. This includes how data is impressed onto the cable and retrieved from it.

The physical layer is responsible for passing bits onto and receiving them from the connecting medium. This layer gives the data-link layer (layer 2) its ability to transport a stream of serial data bits between two communicating systems; it conveys the bits that moves along the cable. It is responsible for ensuring that the raw bits get from one place to another, no matter what shape they are in, and deals with the mechanical and electrical characteristics of the cable.



This layer has no understanding of the meaning of the bits, but deals with the electrical and mechanical characteristics of the signals and signalling methods.

The main network device found the Physical layer is a **repeater**. The purpose of a repeater (as the name suggests) is simply to receive the digital signal, reform it, and retransmit the signal. This has the effect of increasing the maximum length of a network, which would not be possible due to signal deterioration if, a repeater were not available. The repeater, simply regenerates cleaner digital signal so it doesn't have to understand anything about the information it is transmitting, and processing on the repeater is non-existent.

An example of the Physical layer is RS-232.

Each layer, with the exception of the physical layer, adds information to the data as it travels from the Application layer down to the physical layer. This extra information is called a header. The physical layer does not append a header to information because it is concerned with sending and receiving information on the individual bit level.

We see that the data for each layer consists of the header and data of the next higher layer. Because the data format is different at each layer, different terms are commonly used to name the data package at each level. *Figure 10* summarises these terms layer by layer.

| LAYER              | DATA PACKAGE<br>NAME  |
|--------------------|---|
| Application layer  | Application Protocol Data<br>Unit   |
| Presentation layer | Presentation Protocol Data<br>Unit. Generic name is<br>Protocol Data Unit (PDU).<br>For example, at session<br>layer it is S-PDU. |
| Session layer      | Session Protocol Data Unit  |
| Transport layer    | Segment   |
| Network layer      | Datagram, packet  |
| Data link layer    | Frame   |
| Physical layer     | Bit   |

Figure 10: Data package names in the OSI reference model.

#### **OSI Protocols**

The OSI model provides a conceptual framework for communication between computers, but the model itself is not a method of communication. Actual communication is made possible by using communication protocols. In the context of data networking, a *protocol* is a formal set of rules and conventions that governs how computers exchange information over a network medium. A protocol implements the functions of one or more of the OSI layers. A wide variety of communication protocols exist, but all tend to fall into one of the following groups: *LAN protocols*, *WAN protocols*, *network protocols*, and *routing protocols*. *LAN protocols* operate at the network and data link layers of the OSI model and define communication over the various LAN media. *WAN protocols* operate at the lowest three layers of the OSI model and define communication over the various wide-area media. *Routing protocols* are network-layer protocols that are responsible for path determination and traffic switching. Finally, *network protocols* are the various upper-layer protocols that exist in a given protocol suite.



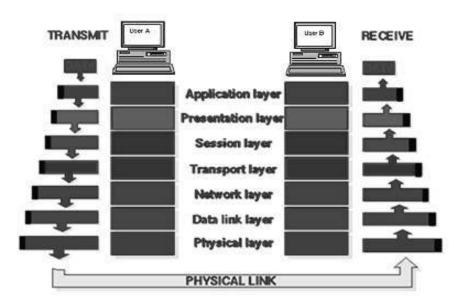


Figure 11: Working of OSI Reference Model

Information being transferred from a software application in one computer system to software application in another must pass through each of the OSI layers. Each layer communicates with three other OSI layers i.e., the layer directly above it, the layer directly below it, and its peer layer in other networked systems. If, for example, in Figure 10, a software application in System A has information to transmit to a software application in System B, the application program in System A will pass its information to the application layer (Layer 7) of System A. The application layer then passes the information to the presentation layer (Layer 6); the presentation layer reformats the data if required such that B can understand it. The formatted data is passed to the session layer (Layer 5), which in turn requests for connection establishment between session layers of A and B, it then passes the data to the transport layer. The transport layer breaks the data into smaller units called segments and sends them to the Network layer. The Network layer selects the route for transmission and if, required breaks the data packets further. These data packets are then sent to the Data link layer that is responsible for encapsulating the data packets into data frames. The Data link layer also adds source and destination addresses with error checks to each frame, for the hop.

The data frames are finally transmitted to the physical layer. In the physical layer, the data is in the form of a stream of bits and this is placed on the physical network medium and is sent across the medium to System B.

B receives the bits at its physical layer and passes them on to the Data link layer, which verifies that no error has occurred. The Network layer ensures that the route selected for transmission is reliable, and passes the data to the Transport layer. The function of the Transport layer is to reassemble the data packets into the file being transferred and then, pass it on to the session layer. The session layer confirms that the transfer is complete, and if so, the session is terminated.

The data is then passed to the Presentation layer, which may or may not reformat it to suit the environment of B and sends it to the Application layer. Finally the Application layer of System B passes the information to the recipient Application program to complete the communication process.

#### Interaction between different layers of OSI model

A given layer in the OSI layers generally communicates with three other OSI layers: the layer directly above it, the layer directly below it, and its peer layer in an other networked computer system. The data link layer in System A, for example, communicates with the network layer of System A, the physical layer of System A, and the data link layer in System B.

#### Services provided by OSI layers

One OSI layer communicates with another layer to make use of the services provided by the second layer. The services provided by adjacent layers help a given OSI layer communicate with its peer layer in other computer systems. Three basic elements are involved in layer services: the service user, the service provider, and the service access point (SAP).

In this context, the service *user* is the OSI layer that requests services from an adjacent OSI layer. The service *provider* is the OSI layer that provides services to service users. OSI layers can provide services to multiple service users. The *SAP* is a conceptual location at which one OSI layer can request the services of another OSI layer.

#### **OSI Model Layers and Information Exchange**

The seven OSI layers use various forms of control information to communicate with their peer layers in other computer systems. This *control information* consists of specific requests and instructions that are exchanged between peer OSI layers.

Control information typically takes one of two forms: headers and trailers. Headers are prepended to data that has been passed down from upper layers. Trailers are appended to data that has been passed down from upper layers.

Headers, trailers, and data are relative concepts, depending on the layer that analyses the information unit. At the network layer, an information unit, for example, consists of a Layer 3 header and data. At the data link layer, however, all the information passed down by the network layer (the Layer 3 header and the data) is treated as data. In other words, the data portion of an information unit at a given OSI layer potentially can contain headers, trailers, and data from all the higher layers. This is known as encapsulation.

#### 1.7.2 TCP/IP Reference Model

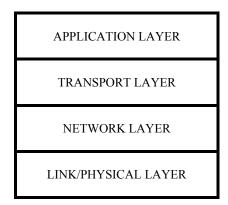


Figure 12: Layers of TCP/IP reference model

Introduction to Computer Networks



TCP/IP stands for Transmission Control Protocol / Internet Protocol. It is a protocol suite used by most communications software. TCP/IP is a robust and proven technology that was first tested in the early 1980s on ARPA Net, the U.S. military's Advanced Research Projects Agency network, and the world's first packet-switched network. TCP/IP was designed as an open protocol that would enable all types of computers to transmit data to each other via a common communications language.

TCP/IP is a layered protocol similar to the ones used in all the other major networking architectures, including IBM's SNA, Windows' NetBIOS, Apple's AppleTalk, Novell's NetWare and Digital's DECnet. The different layers of the TCP/IP reference model are shown in *Figure 13*. Layering means that after an application initiates the communications, the message (data) to be transmitted is passed through a number of stages or layers until it actually moves out onto the wire. The data are packaged with a different header at each layer. At the receiving end, the corresponding programs at each protocol layer unpack the data, moving it "back up the stack" to the receiving application.

TCP/IP is composed of two major parts: TCP (Transmission Control Protocol) at the transport layer and IP (Internet Protocol) at the network layer. TCP is a connection-oriented protocol that passes its data to IP, which is a connectionless one. TCP sets up a connection at both ends and guarantees reliable delivery of the full message sent. TCP tests for errors and requests retransmission if necessary, because IP does not.

An alternative protocol to TCP within the TCP/IP suite is UDP (User Datagram Protocol), which does not guarantee delivery. Like IP, it is also connectionless, but very useful for real-time voice and video, where it doesn't matter if a few packets get lost.

#### Layers of TCP/IP reference model

#### **Application Layer (Layer 4)**

The top layer of the protocol stack is the application layer. It refers to the programs that initiate communication in the first place. TCP/IP includes several application layer protocols for mail, file transfer, remote access, authentication and name resolution. These protocols are embodied in programs that operate at the top layer just as any custom-made or packaged client/server application would.

There are many Application Layer protocols and new protocols are always being developed.

The most widely known Application Layer protocols are those used for the exchange of user information, some of them are:

- The HyperText Transfer Protocol (HTTP) is used to transfer files that make up the Web pages of the World Wide Web.
- The File Transfer Protocol (FTP) is used for interactive file transfer.
- The Simple Mail Transfer Protocol (SMTP) is used for the transfer of mail messages and attachments.
- **Telnet,** is a terminal emulation protocol, and, is used for remote login to network hosts.

Other Application Layer protocols that help in the management of TCP/IP networks are:

- The Domain Name System (DNS), which, is used to resolve a host name to an IP address.
- The Simple Network Management Protocol (SNMP) which is used between network management consoles and network devices (routers, bridges, and intelligent hubs) to collect and exchange network management information.



Examples of Application Layer interfaces for TCP/IP applications are Windows Sockets and NetBIOS. Windows Sockets provides a standard application-programming interface (API) under the Microsoft Windows operating system. NetBIOS is an industry standard interface for accessing protocol services such as sessions, datagrams, and name resolution.

## **Transport Layer (Layer 3)**

The Transport Layer (also known as the Host-to-Host Transport Layer) is responsible for providing the Application Layer with session and datagram communication services.

TCP/IP does not contain Presentation and Session layers, the services are performed if required, but they are not part of the formal TCP/IP stack. For example, Layer 6 (Presentation Layer) is where data conversion (ASCII to EBCDIC, floating point to binary, etc.) and encryption /decryption is performed. Layer 5 is the Session Layer, which is performed in layer 4 in TCP/IP. Thus, we jump from layer 7 of OSI down to layer 4 of TCP/IP.

From Application to Transport Layer, the application delivers its data to the communications system by passing a stream of data bytes to the transport layer along with the socket of the destination machine.

The core protocols of the Transport Layer are TCP and the User Datagram Protocol (UDP).

- TCP: TCP provides a one-to-one, connection-oriented, reliable communications service. TCP is responsible for the establishment of a TCP connection, the sequencing and acknowledgment of packets sent, and the recovery of packets lost during transmission.
- **UDP:** UDP provides a one-to-one or one-to-many, connectionless, unreliable communications service. UDP is used when the amount of data to be transferred is small (such as the data that would fit into a single packet), when the overhead of establishing a TCP connection is not desired, or when the applications or upper layer protocols provide reliable delivery.

The Transport Layer encompasses the responsibilities of the OSI Transport Layer and some of the responsibilities of the OSI Session Layer.

#### **Internet Layer (Layer 2)**

The Internet layer handles the transfer of information across multiple networks through the use of gateways and routers. The Internet layer corresponds to the part of the OSI network layer that is concerned with the transfer of packets between machines that are connected to different networks. It deals with the routing of packets across these networks as well as with the control of congestion. A key aspect of the Internet layer is the definition of globally unique addresses for machines that are attached to the Internet.

The Internet layer provides a single service namely, best-effort connectionless packet transfer. IP packets are exchanged between routers without a connection setup; the packets are routed independently and so they may traverse different paths. For this reason, IP packets are also called datagrams. The connectionless approach makes the system robust; that is, if failures occur in the network, the packets are routed around the points of failure; hence, there is no need to set up connections. The gateways that interconnect the intermediate networks may discard packets when congestion occurs. The responsibility for recovery from these losses is passed on to the Transport Layer.



- The Internet Protocol (IP) is a routable protocol responsible for IP addressing and the fragmentation and reassembly of packets.
- The Address Resolution Protocol (ARP) is responsible for the resolution of the Internet Layer address to the Network Interface Layer address, such as a hardware address.
- The Internet Control Message Protocol (ICMP) is responsible for providing diagnostic functions and reporting errors or conditions regarding the delivery of IP packets.
- The Internet Group Management Protocol (IGMP) is responsible for the management of IP multicast groups.

The Internet Layer is analogous to the Network layer of the OSI model.

## Link/Physical Layer (Layer 1)

The Link/Physical Layer (also called the Network Access Layer) is responsible for placing TCP/IP packets on the network medium and receiving TCP/IP packets of the network medium. TCP/IP was designed to be independent of the network access method, frame format, and medium. In this way, TCP/IP can be used to connect differing network types. This includes LAN technologies such as Ethernet or Token Ring and WAN technologies such as X.25 or Frame Relay. Independence from any specific network technology gives TCP/IP the ability to be adapted to new technologies such as Asynchronous Transfer Mode (ATM).

The Network Interface Layer encompasses the Data Link and Physical layers of the OSI Model. **Note**, that the Internet Layer does not take advantage of sequencing and acknowledgement services that may be present in the Data Link Layer. An unreliable Network Interface Layer is assumed, and reliable communications through session establishment and the sequencing and acknowledgement of packets is the responsibility of the Transport Layer.

#### Comparison between OSI and TCP/IP reference model

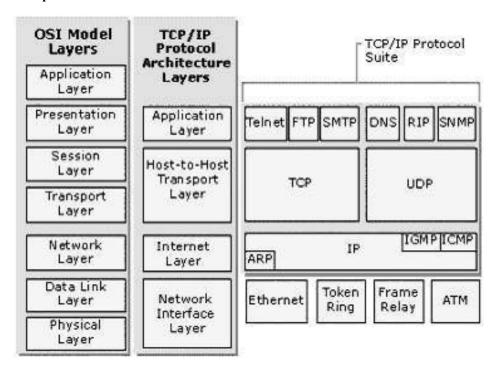


Figure 13: Comparison between OSI & TCP/IP reference model

Both OSI and TCP/IP reference models are based on the concept of a stack of protocols. The functionality of the layers is almost similar. In both models the layers are there to provide an end-to-end network-independent transport service to processes wishing to communicate with each other.

The Two models have many differences. An obvious difference between the two models is the number of layers: the OSI model has seven layers and the TCP/IP has four layers. Both have (inter) network, transport, and application layers, but the other layers are different. OSI uses strict layering, resulting in vertical layers whereas TCP/IP uses loose layering resulting in horizontal layers. The OSI model supports both connectionless and connection-oriented communication in the network layer, but only connection-oriented communication at the transport layer. The TCP/IP model has only one mode in network layer (connectionless), but supports both modes in the transport layer. With the TCP/IP model, replacing IP by a substantially different protocol would be virtually impossible, thus, defeating one of the main purposes of having layered protocols in the first place.

The OSI reference model was devised before the OSI protocols were designed. The OSI model was not biased toward one particular set of protocols, which made it quite general. The drawback of this ordering is that the designers did not have much experience with the subject, and did not have a good idea of the type of functionality to put in a layer. With TCP/IP the reverse was true: the protocols came first, and the model was really just a description of the existing protocols. There was no problem with the protocols fitting the model. The only drawback was that the model did not fit any other protocol stacks.

Figure 14 summarises the basic differences between OSI and TCP/IP reference models.

| OSI MODEL  | TCP/IP MODEL   |
|--|--|
| Contains 7 Layers  | Contains 4 Layers  |
| Uses Strict Layering resulting in vertical layers.   | Uses Loose Layering resulting in horizontal layers.  |
| Supports both connectionless & connection-oriented communication in the Network layer, but only connection-oriented communication in Transport Layer | Supports only connectionless communication in the Network layer, but both connectionless & connectionoriented communication in Transport Layer               |
| It distinguishes between Service,<br>Interface and Protocol.   | Does not clearly distinguish between Service, Interface and Protocol.  |
| Protocols are better hidden and can be replaced relatively easily as technology changes (No transparency)  | Protocols are not hidden and thus cannot be replaced easily. (Transparency) Replacing IP by a substantially different protocol would be virtually impossible |
| OSI reference model was devised before the corresponding protocols were designed.  | The protocols came first and the model was a description of the existing protocols   |

Figure 14: Difference between OSI and TCP/IP reference model

Some of the drawbacks of OSI reference model are:

## Introduction to Computer Networks



- All layers are not roughly, of equal size and complexity. In practise, the session layer and presentation layer are absent from many existing architectures.
- Some functions like addressing, flow control, retransmission are duplicated at each layer, resulting in deteriorated performance.
- The initial specification of the OSI model ignored the connectionless model, thus, leaving much of the LANs behind.

Some of the drawbacks of TCP/IP model are:

- TCP/IP model does not clearly distinguish between the concepts of service, interface, and protocol.
- TCP/IP model is not a general model and therefore it cannot be used to describe any protocol other than TCP/IP.
- TCP/IP model does not distinguish or even mention the Physical or the Data link layer. A proper model should include both these layers as separate.

## **™** Check Your Progress 3

| 1) | Give two reasons for using layered protocols.  |
|----|--|
|    |  |
|    |  |
| 2) | Explain the OSI reference model in detail.     |
|    |  |
|    |  |
|    |  |
| 3) | Explain the TCP/IP reference model in detail.  |
|    |  |
|    |  |
|    |  |
| 4) | Bring out the differences between TCP and UDP. |
|    |  |
|    |  |
|    |  |

## 1.8 NETWORK ARCHITECTURE

Depending on the architecture used Networks can be classified as Client/Server or Peer-to-Peer Networks.

#### 1.8.1 Client/Server Architecture



Figure 15: Client/Server architecture

Client/Server Architecture is one in which the client (personal computer or workstation) is the requesting machine and the server is the supplying machine, both of which are connected via a local area network (LAN) or wide area network (WAN). Since the early 1990s, client/server has been the buzzword for building applications on LANs in contrast to centralised minis and mainframes with dedicated terminals. A client/server network is called Centralised or Server based network. *Figure 15* shows the arrangement of computers in the client/server environment.

The client contains the user interface and may perform some or all of the application processing. Servers can be high-speed microcomputers, minicomputers or even mainframes. A database server maintains the databases and processes requests from the client to extract data from or update the database. An application server provides additional business processing for the clients.

The term client/server is sometimes used to contrast a peer-to-peer network, in which any client can also act as a server. In that case, a client/server entails having a dedicated server.

However, client/server architecture means more than dedicated servers. Simply downloading files from or sharing programs and databases on a server is not true client/server either. True client/server implies that the application was originally designed to run on a network and that the network infrastructure provides the same quality of service as traditional mini and mainframe information systems. *Figure 15* shows the arrangement of computers in the Client/Server system.

The network operating system (NOS) together with the database management system (DBMS) and transaction monitor (TP monitor) are responsible for integrity and security of these types of networks. Some of these products have gone through many client/server versions by now and have finally reached industrial strength.

#### Non-client/server

In non-client/server architecture, the server is nothing more than a remote disk drive. The user's machine does all the processing. If, many users routinely perform lengthy searches, this can bog down the network, because each client has to pass the entire database over the net. At 1,000 bytes per record, a 10,000 record database requires 10MB of data be transmitted.

#### Two-tier client/server

Two-tier client/server is really the foundation of client/server. The database processing is done in the server. An SQL request is generated in the client and transmitted to the server. The DBMS searches locally and returns only matching

**Introduction to Computer Networks** 



#### Three-tier client/server

Many applications lend themselves to centralised processing. If, they contain proprietary algorithms, security is improved. Upgrading is also simpler. Sometimes, programs are just too demanding to be placed into every client PC. In three-tier client/server, application processing is performed in one or more servers.

#### 1.8.2 Peer-to-Peer Architecture



Figure 16: Peer-to-peer architecture

A type of network in which each workstation has equal capabilities and responsibilities is called peer-to-peer network. *Figure 16* shows the arrangement of computers in a peer-to-peer environment. Here each workstation acts as both a client and a server. There is no central repository for information and there is no central server to maintain. Data and resources are distributed throughout the network, and each user is responsible for sharing data and resources connected to their system. This differs from client/server architectures, in which some computers are dedicated to serving the others. Peer-to-peer networks are generally simpler and less expensive, but they usually do not offer the same performance under heavy loads. A peer-to-peer network is also known as a Distributed network.

## 1.9 EXAMPLE NETWORKS

Nowdays, as computers are extensively used in almost every field, we have many different types of networks. Some of them are public networks, research networks, and co-operative networks, commercial or corporate networks. We can distinguish between different networks on the basis of their history, administration, facilities offered, technical design and the people who use them (user communities). Here we shall discuss some of the popular networks, such as, Novell NetWare, ARPANET, Internet, ATM network etc.

### 1.9.1 Novell Netware

Novell NetWare is the most popular network system in the PC world. Novell NetWare contains the protocols that are necessary to allow communication between different types of PC's and devices. There are several versions of NetWare. The earlier versions NetWare 286 version 2.X was written to run on 286 machines. NetWare 386 versions 3.X were written to run on 386 and 486 machines. The most recent version NetWare 4.X can probably run on almost any type of machine.

Novell Networks are based on the client/server model in which at least one computer functions as a network file server, which runs all of the NetWare protocols and maintains the networks shared data on one or more disk drives. File servers generally allow users on other PC's to access application software or data files i.e., it provides services to other network computers called clients.

There are two types of file servers:

- Dedicated file servers.
- Non-dedicated file servers.

**Dedicated File Servers**: Dedicated file server runs only NetWare and do not run any other software, such as Windows application. Dedicated file servers are mostly used in large networks, because, in large networks, one extra client is less significant and a dedicated server can handle a larger number of requests more efficiently. In large networks security is one of the major concerns and providing a clear distinction between client and server hardware provides greater security.

**Non-dedicated File Server**: Non-dedicated file server can run both applications and NetWare. It is useful in small networks because it allows the server to also act as a client and thus, increase the number of clients in the network by one.

There are many other servers within a Novell NetWare such as, Print server, Message server, Database server etc.

**Print server:** The job of the Print server is to allow users to access shared printers. A Print server manages both requests and printers.

**Message server:** The job of the Message server is to transfer email messages between a client's PC and a user's mailbox.

**Database server:** A database server manages database files i.e., it adds, deletes and modifies records in the database; queries the database and generates the result required by the client; and transmits the results back to the client.

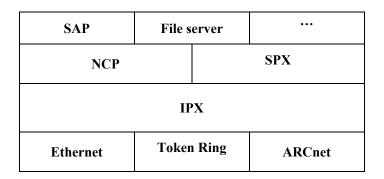


Figure 17: The Novell NetWare reference model

NetWare uses a proprietary protocol stack as shown in *Figure 17*. This model is based on the old Xerox Network System, XNS<sup>TM</sup> but with a lot of modifications.

The Physical and Data link layers can be chosen from various standards that are available, such as, the Ethernet, IBM Token ring, ARCnet.

The Network layer runs an unreliable connectionless internetwork protocol called Internet Packet eXchange (IPX). The IPX passes packets transparently from the

Introduction to Computer Networks



source to the destination, even if the source and destination are on different networks. The functioning of IPX is similar to IP, except that IPX uses12 byte addresses instead of 4 byte addresses.

The Transport layer contains a connection oriented transport protocol called NCP (Network Core Protocol). NCP is the heart of NetWare and provides various other services besides user data transport. It defines the type of requests that can be made and how the server responds to the request it eventually receives. The other protocol that is available in the transport layer is SPX (Sequenced Packet eXchange), which provides only transport. TCP is another option. Applications can choose anyone of them, for example, Lotus notes use SPX and File systems uses NCP.

Here, the Session and Presentation layers do not exist.

The Application layer contains various application protocols like SAP, File server etc.

#### **1.9.2 ARPANET**

ARPANET stands for Advanced Research Projects Agency (ARPA) Network. The network was developed in 1969 by ARPA and funded by the Department of Defence (DoD). In the mid-1960s at the height of the cold war, the DoD wanted a command and control network, which could survive the nuclear war. The traditional circuit switched telephone networks were considered too vulnerable, since the loss of one line would certainly terminate all conversations using them and might even partition the network.

The network (ARPANET) was chiefly experimental, and was used to research, develop and test networking technologies. The original network connected four host computers at four separate universities throughout the United States, enabling users to share resources and information. By 1972, there were 37 host computers connected to ARPANET. Also in that year, ARPA's name was changed to DARPA (Defence Advanced Research Projects Agency). In 1973, ARPANET went beyond the boundaries of the United States by making its first international connection to England and Norway. One goal of ARPANET was to devise a network that would still be operational, even if, part of the network failed. The research in this area resulted in a set of networking rules or protocols, called TCP/IP (Transmission Control Protocol/Internet Protocol).

TCP/IP is a set of protocols that govern how data is transmitted across networks. It also enables different types of computer operating systems such as DOS and UNIX to share data across a network.

ARPANET functioned as a "backbone" network allowing smaller local networks to connect to the backbone.

Once these smaller networks were connected to the backbone, they were in effect connected to each other.

In 1983, DARPA decided that TCP/IP would be the standard set of protocols used by computers connecting to ARPANET. This meant that any smaller networks (for example, a university network) that wanted to connect to ARPANET also had to use TCP/IP. TCP/IP was available for free and was increasingly used by networks. The spread of TCP/IP helped create the Internet, as we know it today, which is the network of networks that either use the TCP/IP protocols, or can interact with TCP/IP networks.

ARPANET continued to grow, encompassing many networks from universities and government institutions. To help manage this rapidly growing "network of networks", ARPANET was split into two networks in 1983:

- ARPANET continued to be a research and development network.
- MILNET an unclassified network reserved only for military sites. MILNET continues to serve this function.

In 1986, a faster backbone network called the NSFNET (National Science Foundation Network) was created. By 1989, there were over 10,000 host computers connected to the Internet.

Because of the success of the NSFNET, plans were made to phase out ARPANET. Many of the sites connected to ARPANET were absorbed by the NSFNET, and in 1990 ARPANET was officially dissolved.

#### 1.9.3 Internet

When ARPANET and NSFNET were interconnected the number of networks, machines and users grew exponentially, many regional networks joined up and connections were made across many countries.

The internet is said to have been "officially" born around 1982 when the different networks (BITNET, EARN, etc.) agreed on using the TCP/IP protocol as a standard for their interconnections making it a network of networks and overcoming some of the previous cacophony of standards, protocols and increasing its coverage.

The word Internet was coined from the words "interconnection" and "network". Now Internet is the world's largest computer network. It is considered to be the network of networks, and is scattered all over the world. The computers connected to the Internet may communicate with each other using fiber optic cables, telephone lines, satellite links and other media.

The development of Internet is coordinated by a non-profit organisation called the Internet Society (ISOC). Its aim is to spread the use of Internet, keep statistics of its use, helpless developed countries in building their infrastructure and Internet-technology. The Internet Architecture Board (IAB), plans long term trends and keeps a record of the RFC (Request for Comments) documents on various technical solutions and protocols used in Internet. The development is also steered by the IETF (Internet Engineering Task Force), which has several sub-groups for handling various problems and planning new standards etc.

The rapid growth of Internet may also be due to several important factors:

- 1) Easy-to-use software graphical browsers
- 2) Improved telecommunications connections
- 3) Rapid spread of automatic data processing, including electronic mail, bank ransfers, etc.
- 4) The Information Superhighway projects.

The Internet Society maintains a list of Internet service providers providing connections all over the world. There is one "universal" aspect of all computers connect to the Internet i.e., they all run the TCP/IP family of protocols.

Introduction to Computer Networks



The Internet Protocol (IP) gives the physical 32-bit address, which uniquely identifies an individual computer connected to the Internet, while Transmission Control Protocol (TCP) is a connection-oriented protocol, which takes care of the delivery and order of the packages. TCP also provides the port numbers for individual services within a computer.

The major information services provided by the Internet are (with the protocol in parentheses): electronic mail (SMTP), remote file copying (FTP), remote login, terminal connections (TELNET), menu-based file access (GOPHER), wide area information servers (WAIS, Z39.50), the World Wide Web (HTTP), and the Packet Internet Groper (PING).

There are three major ways to connect your computer to the Internet:

- dial up modem access to a computer connected to Internet,
- dial-up networking, and
- leased lines (usually from a local telephone company).

## **Switched Dial-Up Lines**

The most common circuit provided by public communication carriers are dial-up telephone circuits. Subscribers send routing information i.e., the dialled number to the network, which connects them to the receiver, then follow this with the information (speech).

Switched circuits are not permanent. They exist only for the duration of the connection and are switched by the public network (it connects the circuits). Switched dial-up lines are not generally suited to data transmission, but are used heavily for some types of services (e.g., Bulletin Boards). Using a modem, a user can use their phone line to dial up a network provider via the phone line and connect to the Internet. At present speeds upto 56Kbps are possible over standard dial up telephone circuits.

#### **Leased Lines**

A leased line is a permanent non-switched end-to-end connection. Data is sent from one end to the other. It is not required to send routing information along with the data. Leased lines provide an instant guaranteed method of delivery. They are suited to high volume, high speed data requirements. The cost of the line (which is leased per month), is offset against that of toll or other rental charges. In addition, the leased line offers a significantly higher data transmission rate than the datel circuit.

Very high speeds can be achieved on leased lines. The cost varies, and goes up according to the capacity (speed in bits per second) that the customer requires.

#### Working of the Web

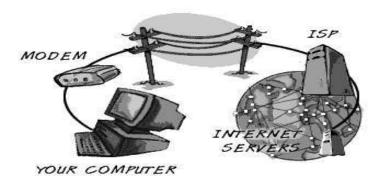


Figure 18: Working of internet

The Web physically consists of your personal computer, web browser software, a connection to an Internet service provider, computers called servers that host digital data and routers and switches to direct the flow of information.

The Web is known as a client-server system. Here, the Users computer is the client, and the remote computer that stores electronic files is the server.

The working of the Web can be explained by the following example:

Let's say you want to pay a visit to the IGNOU's website. First, you enter the address or URL of the website in your web browser (more about this in a while). Then your browser requests the web page from the web server. The IGNOU's server sends the data over the Internet to your computer. Your web browser interprets the data and displays it on your computer screen.

The glue that holds the Web together is called hypertext and hyperlinks. This feature allows electronic files on the Web to be linked so that you can easily jump between them. On the Web you can navigate through pages of information based on what interests you at that particular moment. This is commonly known as browsing or surfing the Net.

To access the Web you need software such as Netscape Navigator or Microsoft Internet Explorer. These are known as web browsers. Web pages are written in a computer language called HTML, which stands for Hypertext Markup Language.

#### 1.9.4 ATM Network

Asynchronous Transfer Mode (ATM) is a network technology adopted by the telecommunication sector. It is a high-performance, cell-oriented switching and multiplexing technology that utilises fixed-length packets to carry different types of traffic. The data transfer takes place in the form of cells or packets of a fixed size (53 bytes). The cell used with ATM is relatively small compared to units used with older technologies. The small constant cell size allows ATM equipment to transmit video, audio, and computer data over the same network, and assures that no single type of data hogs the line.

ATM technology is used for both local and wide area networks (LANs and WANs) that support real-time voice and video as well as data. The topology uses switches that establish a logical circuit from end to end, which guarantees quality of service (QoS). However, unlike telephone switches that dedicate circuits end-to-end, unused bandwidth in ATM's logical circuits can be utilised when needed. For example, idle bandwidth in a videoconference circuit can be used to transfer data.

ATM is widely used as a backbone technology in carrier networks and large enterprises, but never became popular as a local network (LAN) topology. ATM is highly scalable and supports transmission speeds of 1.5, 25, 100, 155, 622, 2488 and 9953 Mbps. ATM is also running as slow as 9.6 Kbps between ships at sea. An ATM switch can be added into the middle of a switch fabric to enhance total capacity, and the new switch is automatically updated using ATM's PNNI routing protocol.

One of the important features of ATM is its ability to specify Quality of Service (QoS), allowing video and voice to be transmitted smoothly. It provides the following levels of service:

- Constant Bit Rate (CBR) guarantees bandwidth for realtime voice and video.
- Realtime variable Bit Rate (rt-VBR) supports interactive multimedia that requires minimal delays.
- Non-realtime variable bit rate (nrt-VBR) is used for bursty transaction traffic.



- Available Bit Rate (ABR) adjusts bandwidth according to congestion levels for LAN traffic.
- Unspecified Bit Rate (UBR) provides the best effort for non-critical data such as file transfers.

#### **Advantages of ATM**

- Flexible bandwidth allocation.
- Simple routing due to connection oriented technology.
- High bandwidth utilisation due to statistical multiplexing.
- Potential QOS (Quality Of Service) guarantees.

## **Disadvantages of ATM**

- Overhead of cell header (5 bytes per cell).
- Complex mechanisms for achieving Quality of Service.
- Congestion may cause cell losses.
- It is costly compared to IP.

## 1. 10 TYPES OF COMPUTER NETWORKS

Computer Networks are mostly classified on the basis of the geographical area that the network covers, the topology used, the transmission media used and the computing model used.

Based on the geographical area covered the networks may be LAN, MAN, WAN.

### 1.10.1 Metropolitan Area Network (MAN)

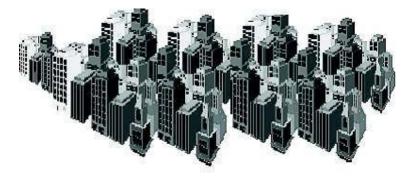


Figure 19: Metropolitan area network

**MAN (Metropolitan Area Network):** Metropolitan Area Network is a Computer network designed for a town or city as shown in *Figure 19*. In terms of geographic area MAN's are larger than local-area networks (LANs), but smaller than wide-area networks (WANs). MAN's are usually characterised by very high-speed connections using fiber optical cable or other digital media.

The Typical Characteristics of a MAN are:

- Confined to a larger area than a LAN and can range from 10km to a few 100km in length.
- Slower than a LAN but faster than a WAN.

- Operates at a speed of 1.5 to 150 Mbps.
- Expensive equipment.
- Moderate error rates.

#### 1.10.2 Wide Area Network (WAN)

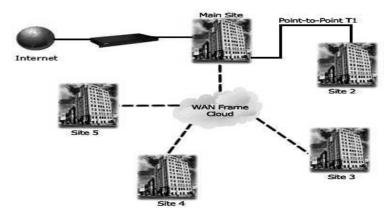


Figure 20: Wide area network

**WAN (Wide Area Network):** Wide Area Network is a computer network that spans a relatively large geographical area. Typically, a WAN consists of two or more local-area networks (LANs), which are depicted, in *Figure 20*. They can connect networks across cities, states or even countries.

Computers connected to a wide-area network are often connected through public networks, such as the telephone system. They can also be connected through leased lines or satellites.

## The Typical characteristics of a WAN are:

- A WAN can range from 100km to 1000km and the speed between cities can vary form1.5 Mbps to 2.4 Gbps.
- WAN supports large number of computers and multiple host machines.
- Various segments of network are interconnected using sophisticated support devices like routers and gateways.
- Usually the speed is much slower than LAN speed.
- Highest possible error rate compared to LAN & MAN.

#### 1.10.3 Comparison Between LAN, MAN, WAN and GAN

| NETWORK                      | SIZE                             | TRANSMISSION<br>MEDIA                                     | MAXIMUM<br>DISTANCE                    |
|------------------------------|----------------------------------|---|--|
| Local Area Network           | Confined to building or campus   | Cable used  | Covers up to 10 km                     |
| Metropolitan Area<br>Network | Network confined to city or town | Different hardware & transmission media are used          | Covers the area of a city or town      |
| Wide Area Network            | Larger than MAN                  | Telephone lines, radio waves, leased lines or satellites. | Covers a number of cities or countries |

Figure 21: Comparison between different types of networks.

## Introduction to Computer Networks



## 1.11 ADVANTAGES OF NETWORKS

Computers in a networked environment provide numerous advantages when compared to computers in a stand alone environment. The immense benefits that the computer networks provide are in the form of excellent sharing of computational resources, computational load, increased level of reliability, economy and efficient person-to-person communication.

Following are some of the major advantages of using computer networks.

**Resource Sharing:** The main aim of a computer network is to make all programs, equipment, and data available to anyone on the network without regard to the physical location of the resource and the user. Users need to share resources other than files, as well. A common example being printers. Printers are utilised only a small percentage of the time; therefore, companies don't want to invest in a printer for each computer. Networks can be used in this situation to allow all the users to have access to any of the available printers.

**High Reliability:** Computer networks provide high reliability by having alternative sources of supply. For example, all files could be replicated on two or three machines, so, if one of them is unavailable (due to hardware failure), the other copies could be used. In addition, the presence of multiple CPUs means that if one goes down, the others may be able to take over its work, although at reduced performance. For military, banking, air traffic control, nuclear reactor safety, and many other applications, the ability to continue operating in the face of hardware problems is of utmost importance.

**Saving Money:** Small computers have a much better price/performance ratio than larger ones. Mainframes are roughly a factor of ten faster than personal computers but they cost much more. This imbalance has caused many systems designers to build systems consisting of personal computers, one per user, with data kept on one or more shared **file server** machines. In this model, the users are called **clients**, and the whole arrangement is called the **client-server model.** 

**Scalability:** The ability to increase the system performance gradually as the workload grows just by adding more processors. With centralised mainframes, when a system is full, it must be replaced by a larger one, usually at great expense and even greater disruption to the users. With client-server model, new clients and new servers can be added when needed.

Communication Medium: A computer network can provide a powerful communication medium among widely separated users. Using a computer network it is easy for two or more people who are working on the same project and who live far apart to write a report together. When one worker, makes a change to an on-line document, the others can see the change immediately, instead of waiting several days for a letter. Such a speedup makes cooperation among far-flung groups of people easy whereas previously it was impossible.

**Increased Productivity:** Networks increase productivity as several people can enter data at the same time, but they can also evaluate and process the shared data. So, one person can handle accounts receivable, and someone else processes the profit-and-loss statements.

#### **™** Check Your Progress 4

| 1) | Briefly describe about NCP and IPX of Novell NetWare reference model.                  |
|----|--|
|    |  |
|    |  |
|    |  |
|    |  |
| 2) | List the basic components (equipments) in order to connect a computer to the Internet. |
|    |  |
|    |  |
|    |  |
|    |  |
| 3) | What are advantages of having small fixed size cells in ATM?                           |
|    |  |
|    |  |
|    |  |
|    |  |

## 1.12 SUMMARY

In this unit we have learnt about the basic concepts of Networking. Here we discussed the different types of networks and the difference between them. Computer networks are basically classified as LAN, MAN, WAN depending on the geographical distance covered and depending on the various ways of interconnecting computers in a network (network topology) like Star, Bus, Ring, Tree, Mesh and cellular topologies.

We have seen the immense benefits that the computer networks provide in the form of excellent sharing of computational resources, computational load, increased level of reliability, economy and efficient person-to-person communication. Here we have briefly explained some of the network protocols which define a common set of rules and signals that computers on the network use to communicate with each other.

Standard network architecture is required for meaningful communication between end systems. We have discussed the two most widely used reference models i.e., the OSI reference model and the TCP/IP reference model. Nowadays, we come across different types of networks like Public networks, Research networks, Co-operative networks, Commercial networks etc. and we have learnt about some of the popular networks such as Novell NetWare, ARPANET, Internet, ATM network. Towards the end of this unit the concept of delays was also introduced.

## 1.13 SOLUTIONS/ANSWERS

## **Introduction to Computer Networks**



## **Check Your Progress 1**

1) Difference between Client/Server and Peer-to-Peer architecture

| Client/Server   | Peer-to-Peer  |
|---|---|
| Also known as Centralised or Server based network.  | Also known as distributed network.  |
| 2. Some computers in the network are dedicated to a particular task and are called Servers. | 2. Each workstation has equal rights and responsibilities i.e., each work station acts as both a client and a server.                               |
| 3. Only some computers are dedicated to serve others.                                       | 3. Data and resources are distributed throughout the network and each user is responsible for sharing data and resources connected to their system. |
| 4. These networks are more expensive when compared to peer-to peer networks.                | 4. These networks are generally simpler and less expensive.   |

- 2) Some of the important aspects that should be considered while designing a network are:
  - Cost reduction.
  - High reliability.
  - Increased productivity.
  - Use of standard protocols etc.
- 3) Refer to Section 1.6
- 4) Difference between Broadcast and Point-to-Point networks.

**Broadcast Networks: Broadcast** networks have a single communication channel that is shared by all the machines on the network. In this type of network, short messages called packets, sent by any machine are received by all the machines on the network. The packet contains an address field, which specifies for whom the packet is intended. All the machines upon receiving a packet check for the address field, (if the packet is intended for itself), it processes it and if not the packet is just ignored.

**Point-to-point or Switched networks:** Point-to-point or Switched networks are those in which there are many connections between individual pairs of machines. In these networks when a packet travels from source to destination it may have to first visit one or more intermediate machines. Routing algorithms play an important role in Point-to-Point or Switched networks because often multiple routes of different lengths are available. Large networks are usually Point-to-Point networks.

## **Check Your Progress 2**

1) Students are advised to write as an excercise.

- 2) The various types of networks are:
  - Local Area Network (LAN): The network that spans a relatively small area, that is, in the single building or campus.
  - **Metropolitan Area Network (MAN):** The type of computer network that is designed for a city or town.
  - Wide Area Network (WAN): A network that covers a large geographical area and covers different cities, states and sometimes even countries.
- 3) Comparison between Star and Tree Topology.

| Star Topology   | Tree Topology   |
|---|---|
| All devices are connected directly to the central hub.      | All devices are not connected to the central hub directly.                                |
| 2. There is only one central hub.                           | 2. It is not always necessary for the data to pass through the central                    |
| 3. In order for the nodes to communicate across the network | hub.  |
| data always passes through the central hub.                 | 3. The addition of a secondary hub allows more devices to be attached to the central hub. |
| 4. More cabling is required when                            |   |
| compared to tree topology.                                  | 4. Less cabling required when compared to Star topology.                                  |

4) The best suited topology is Star Topology, reason out why.

## **Check Your Progress 3**

- 1) The following are the reasons why layered protocols are useful.
  - They help to reduce the design complexity of computer network.
  - Help in understanding different concepts.
- 2) Refer to Section 7.1
- 3) Refer to Section 7.2
- 4) Difference between TCP and UDP

Transmission Control Protocol (TCP):

- Transmission Control Protocol is a highly reliable, connection oriented, end-to-end transport layer protocol.
- TCP provides message fragmentation and reassembly, and can accept messages of any length from upper layer protocols.

• TCP can maintain multiple conversations with upper layer protocols and can improve use of network bandwidth by combining multiple messages into the same segment.

Introduction to Computer Networks



## User Datagram Protocol (UDP):

- User Datagram Protocol is a unreliable connectionless transport (host-to-host) layer protocol.
- UDP does not provide message acknowledgments, it simply transports datagrams.
- UDP is used when the amount of data to be transferred is small (such as the data that would fit into a single packet), when the overhead of establishing a TCP connection is not desired, or when the applications or upper layer protocols provide reliable delivery.
- Like TCP, UDP utilises port addresses to deliver datagrams.

## **Check Your Progress 4**

- 1) Novell NetWare is best suited in a computer network consisting of PC's and it is based on the Client/Server model.
  - NCP (NetWare Core Protocol) is a connection oriented transport protocol. This is one of the important protocols of Novell NetWare. NCP defines the type of requests that can be made and how the server responds to these requests.

IPX (Internetwork Packet Exchange). This protocol is used to establish and maintain connections between network devices. IPX determines source and destination addresses and stores them in a packet along with the request. IPX does not guarantee packet delivery.

- 2) The basic equipments that are required in order to connect to the Internet is
  - Computer
  - Modem
  - Connection to Internet provided by the Internet Service Provider.
- 3) One of the key aspects of ATM is that it uses 53 bytes fixed size cells. In which 48 bytes are for data and 5 bytes for header.

The advantages of using small fixed size cells are:

- It is easy for programmers to write programs that manipulate fixed-size record structures than writing ones, which deal with variable-size structures.
- Because of small cells, the queuing delay for high priority cell is reduced, because small cells do not occupy an outgoing link for lengthy periods.
- If the cell size is fixed the bytes arrive at a more consistent rate at the final destination as opposed to a bustier arrival pattern.
- The fixed cell size ensures that time-critical information such as voice or video is not adversely affected by long data frames or packets.
- The header is organised for efficient switching in high speed hardware implementations and carries payload type information, virtual circuit identifiers and header error check.

## 1.14 FURTHER READINGS

- 1) Computer Networks, Andrew S. Tenenbaum, PHI, New Delhi.
- 2) Data and Computer Communication, William Stalling, PHI, New Delhi.

## **UNIT 2 DATA TRANSMISSION**

| Stru<br>Nos. | cture          |   | Page |
|--------------|----------------|---|------|
| 2.0          | Introduc       | etion   | 44   |
| 2.1          | Objecti        | ves   | 45   |
| 2.2          |                | ommunication Terminology                                | 45   |
|              | 2.2.1          | Channel   |      |
|              | 2.2.2          | Baud  |      |
|              | 2.2.3          | Bandwidth   |      |
|              | 2.2.4          | Frequency   |      |
| 2.3          | Modes          | of Data Transmission                                    | 46   |
|              | 2.3.1          | Serial and Parallel Communication                       |      |
|              | 2.3.2          | Synchronous, Asynchronous and Isochronous Communication |      |
|              | 2.3.3          | Simplex, Half Duplex and Full Duplex Communication      |      |
| 2.4          | _              | and Digital Data Transmission                           | 52   |
| 2.5          | Transm         | ission Impairments                                      | 54   |
|              | 2.5.1          | Attenuation   |      |
|              | 2.5.2          | Delay Distortion  |      |
|              | 2.5.3          | Noise   |      |
| 2.6          | 2.5.4          | Concept of Delays                                       | 5.5  |
| 2.6          |                | ission Media and its Characteristics                    | 55   |
|              | 2.6.1          | Magnetic media Twisted Pair                             |      |
|              | 2.6.2<br>2.6.3 | Baseband Coaxial Cable                                  |      |
|              |                | Broadband Coaxial Cable                                 |      |
|              | 2.6.5          | Optical Fiber   |      |
|              | 2.6.6          | Comparison between Optical Fiber and Copper wire        |      |
| 2.7          | Wireles        | s Transmission  | 60   |
|              |                | Microwave Transmission                                  |      |
|              | 2.7.2          | Radio Transmission                                      |      |
|              | 2.7.3          | Infrared and Millimeter Waves                           |      |
| 2.8          | Wireles        | s LAN   | 64   |
| 2.9          | Summa          | ry  | 65   |
| 2.10         |                | ns/Answers  | 66   |
|              |                | Readings  | 69   |
| 11           | 1 41 11101     | 1100011150  | 0)   |

## 2.0 INTRODUCTION

Communication from a source to a destination, that is, from one computer to another or from one device to another, involves the transfer of information from the sender to the receiver. The transfer of data from one machine to another machine such that, the sender and the receiver both interpret the data correctly is known as Data Communication.

All communication between devices requires that the devices agree on the format of the data. The set of rules defining a format is known as a protocol. At the very least, a communications protocol must define the following:

- Transmission media used.
- Rate of transmission (in baud or bps)
- Whether transmission is to be synchronous or asynchronous
- Whether data is to be transmitted in half-duplex or full-duplex mode

In order to understand this we need to learn about some of the basic concepts and terminologies related to data transmission, which we will be doing in this unit.

## 2.1 OBJECTIVES

After going through this unit, you should be able to:

- understand the concept of Transmission terminology;
- differentiate between Serial and Parallel communication;
- differentiate between Analog and Digital Data Transmission;
- have a broad idea about the different Transmission Impairments;
- compare the different Transmission Media and their characteristics, and
- understand Wireless Transmission and realise its importance.

## 2.2 DATA COMMUNICATION TERMINOLOGY

The transfer of data from one machine to another machine such that, the sender and the receiver both interpret the data correctly is known as Data Communication.

### 2.2.1 Channel

In communications, the term channel refers to a path of communications between two computers or devices. A communication channel provides everything that is needed for the transfer of electronic information from one location to another. It may refer to the physical medium, such as coaxial cable, or to a specific carrier frequency (subchannel) within a larger channel or a wireless medium.

The channel capacity of a transmission system is the maximum rate at which information can be transferred reliably over a given period of time. Two basic types of channels that are used in voice and data communication are Analog and Digital.

The Analog type of channel transmits signals generally using sinusoidal waves as shown in *Figure 6*. Non-sinusoidal waves can also be used for transmission. The commercial radio station and Public telephone system are examples of this type.

The Digital type of channel transmits pulsed wave signals, such as, those shown in *Figure 7*.

### 2.2.2 **Baud**

Pronounced bawd, Baud is the number of signaling elements that occur each second. The term is named after **J.M.E. Baudot**, the inventor of the Baudot telegraph code.

At slow speeds, only one bit of information (signaling element) is encoded in each electrical change. The baud, therefore, indicates the number of bits per second that are transmitted. For example, 300 baud means that 300 bits are transmitted each second (abbreviated 300 bps). Assuming asynchronous communication, which requires 10 bits per character, this translates in to 30 characters per second (cps). For slow rates (below 1,200 baud), you can divide the baud by 10 to see how many characters per second are sent.

At higher speeds, it is possible to encode more than one bit in each electrical change. 4,800 baud may allow 9,600 bits to be sent each second. At high data transfer speeds; therefore, data transmission rates are usually expressed in bits per second (bps) rather than baud. For example, a 9,600 bps modem may operate at only 2,400 baud.

## 2.2.3 Bandwidth

The amount of data or signals that the transmission media can carry in a fixed amount of time is called Bandwidth. The Bandwidth depends upon the length, media and

signaling technique used. A high bandwidth allows increased throughput and better performance. A medium that has a high capacity has a high bandwidth. A medium that has limited capacity has a low bandwidth. It is calculated using the difference between the highest and the lowest frequencies that the medium can carry. For digital devices, the bandwidth is usually expressed in bits per second (bps) or bytes per second. For analog devices, the bandwidth is expressed in cycles per second, or Hertz (Hz).

Bandwidth is particularly important for I/O devices. For example, a fast disk drive can be hampered by a bus with a low bandwidth.

## 2.2.4 Frequency

Frequency is the number of cycles or periods a signal completes within one second. The unit of measuring frequency is called Hertz named after a German mathematician **Heinrich Hertz.** One Hz is one cycle/second. We use one Kilohertz or one kHz to mean 1000Hz and one Mega hertz or one MHz to mean 1000 kHz or 1000000Hz.

## 2.3 MODES OF DATA TRANSMISSION

Data can be transmitted from Source to Destination in a number of ways. The different modes of data transmission be outlined as follows:

- Parallel and Serial Communication.
- Asynchronous, Synchronous and Isochronous Communication.
- Simplex, Half duplex and Full duplex Communication.

#### 2.3.1 Serial and Parallel Communication

There is always a need to exchange commands, data and other control information between two communicating devices. There are mainly two options for transmitting data, commands and other control information from the sender to the receiver. These are:

- Serial communication.
- Parallel communication.

## **Serial Communication**

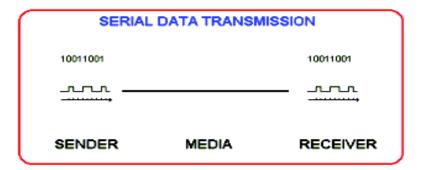


Figure 1: Serial Communication

In Serial data transmission, bits are transmitted serially, one after the other, as shown in *Figure 1*. The least significant bit (LSB) is usually transmitted first. While sending data serially, characters or bytes have to be separated and sent bit by bit. Thus, some hardware is required to convert the data from parallel to serial. At the destination, all the bits are collected, measured and put together as bytes in the memory of the destination. This requires conversion from serial to parallel.

As compared to parallel transmission, serial transmission requires only one circuit interconnecting the two devices. Therefore, serial transmission is suitable for transmission over long distances.

### **Parallel Communication**

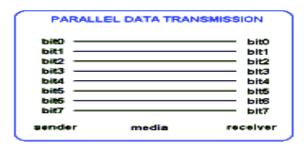


Figure 2: Parallel Data Transmission.

In Parallel transmission, all the bits of a byte are transmitted simultaneously on separate wires as shown in the *Figure 2*. Here, multiple connections between the two devices are therefore, required. This is a very fast method of transmitting data from one place to another.

The disadvantage of Parallel transmission is that it is very expensive, as it requires several wires for both sending, as well as receiving equipment. Secondly, it demands extraordinary accuracy that cannot be guaranteed over long distances.

## 2.3.2 Asynchronous, Synchronous and Isochronous Communication

One of the major difficulties in data transmission is that of synchronising the receiver (destination) with the sender (source). This is the main problem with serial communication. The receiver must be able to detect the beginning of each new character in the bit stream that is being presented to it and if it is not able to achieve this, it will not be able to interpret the incoming bit stream correctly.

The three mechanisms used for synchronisation are:

- Asynchronous Communication
- Synchronous Communication
- Isochronous Communication

## **Asynchronous Communication**

Asynchronous communication sends individual characters one at a time framed by a start bit and 1 or 2 stop bits. Each frame begins with a start bit that enables the receiving device to adjust to the timing of the transmitted signal. The message can begin at any time. Here, messages are kept as short as possible because, the sending and receiving devices should not draft out of synchronisation, when the message is being transferred. Asynchronous communication is most frequently used to transmit character data and is ideally suited for characters that are transmitted at irregular intervals, such as, when users are typing in character data from the keyboard.

A typical frame used to transmit a character data has four components:

- 1) **A start bit:** Signals the starting a frame and enables the receiving device to synchronise itself with the message.
- 2) **Data Bits:** Consists of 7 or 8 bits when character data is being transmitted.
- 3) Parity Bits: Optionally used as a crude method for detecting transmission errors.

4) A stop bit or bits: Signals the end of the data frame.

Error detection in asynchronous transmission makes use of the parity bit. Parity techniques can detect errors that affect only one bit and if two or more bits are affected by errors, the parity techniques may not be able to detect them.

### **Advantages of Asynchronous Communication**

- Asynchronous transmission is simple, inexpensive and is ideally suited for transmitting small frames at irregular intervals (e.g., Data entry from a keyboard).
- As each individual character is complete in itself, if a character is corrupted during transmission, its successor and predecessor will not be affected.

## **Disadvantages of Asynchronous Communication**

- As start, stop and parity bits must be added to each character that is to be transmitted, this adds a high overhead to transmission. This wastes the bandwidth; as a result, asynchronous transmission is undesirable for transmitting large amounts of data.
- Successful transmission inevitably depends on the recognition of the start bits, hence, as these bits can be easily missed or occasionally spurious, as start bits can be generated by line interference, the transmission may be unsuccessful.
- Due to the effects of distortion the speed of asynchronous transmission is limited.

## **Synchronous Communication**

In synchronous communication the whole block of data bits is transferred at once, instead of one character at a time. Here, transmission begins at a predetermined regular time instant. A sync signal is used to tell the receiving station that a new frame is arriving and to synchronise the receiving station.

Sync signals, generally utilise a bit pattern that cannot appear elsewhere in the messages, ensuring that they will always be distinct and easy for the receiver to recognise. As the transmitter and receiver remain in synchronisation for the duration of the transmission, frames can be of longer length.

As frames are longer the parity method of error detection is not suitable because, if multiple bits are affected, then, the parity technique will not report error accurately. Hence, the technique used with synchronous transmission is the Cyclic Redundancy Check (CRC).

The transmitter uses an algorithm to calculate a CRC value that summarises the entire value of data bits. This CRC value is appended to the data frame. The receiver uses the same algorithm, recalculates the CRC and compares the CRC in the frame to the value that it has calculated. If these values match then, it is sure that the frame was transmitted without error.

An end bit pattern indicates the end of the frame. Like sync the bit pattern for end is such that, it will not appear elsewhere in the messages, ensuring that they will always be distinct and easy for the receiver to recognise at the end of the frame.

Serial synchronous transmission is used for high-speed communication between computers. It is used when high volumes of data are to be transmitted.

### **Advantages of Synchronous Communication**

- Synchronous transmission is more efficient because, only 4 additional bytes (for start and end frames) are required to transmit upto 64 k bits.
- Synchronous transmission is not really prone to distortion, as a result, it can be used at high- speeds.

## **Disadvantages of Synchronous Communication**

- Synchronous transmission is expensive as complex circuitry is required and it is difficult to implement.
- If an error occurs during transmission, rather than just a single character the whole block of data is lost.
- The sender cannot transmit characters simply, as they occur, but has to store them until it has built up a block. Thus, this is not suitable where characters are generated at irregular intervals.

## **Isochronous Communication**

## **Advantages of Isochronous Communication**

- Isochronous transmission guarantees transmission rates, and it is almost deterministic.
- It has low overheads.
- It has high speed.

### **Disadvantages of Isochronous Communication**

 In isochronous transmission its necessary to ensure that the clocking device is fault tolerant.

## 2.3.3 Simplex, Half Duplex and Full Duplex Communication

This classification of data transmission is based on the which question of, communication can send data and at what point of time.

The three basic ways in which this can be done are:

- Simplex.
- Half Duplex
- Full Duplex, sometimes called Duplex.

## **Simplex**

Figure 3: Simplex connection

The simplest signal flow technique is the simplex configuration. In Simplex transmission, one of the communicating devices can only send data, whereas the other can only receive it. Here, communication is only in one direction (unidirectional) where one party is the transmitter and the other is the receiver as shown in the *Figure 3*. Examples of simplex communication are the simple radio, and Public broadcast television where, you can receive data from stations but can't transmit data back. The television station sends out electromagnetic signals. The station does not expect and does not monitor for a return signal from the television set. This type of channel design is easy and inexpensive to set up.

### **Half Duplex**

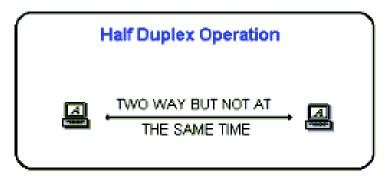


Figure 4: Half duplex connection

Half duplex refers to two-way communication where, only one party can transmit data at a time. Unlike, the Simplex mode here, both devices can transmit data though, not at the same time, that is Half duplex provides Simplex communication in both directions in a single channel as shown in *Figure 4*. When one device is sending data, the other device must only receive it and vice versa. Thus, both sides take turns at sending data. This requires a definite turn around time during which, the device changes from the receiving mode to the transmitting mode. Due to this delay, half duplex communication is slower than simplex communication. However, it is more convenient than simplex communication as both the devices can send and receive data.

Note, the difference between simplex and half-duplex. Half-duplex refers to two-way communication where, only one party can transmit data at a time. Simplex refers to one-way communication where, one party is the transmitter and the other is the receiver

For example, a walkie-talkie is a half-duplex device because only one party can talk at a time.

Most modems contain a switch that lets you select between half-duplex and full-duplex modes. The correct choice depends on which program you are using to transmit data through the modem.

## **Full Duplex**

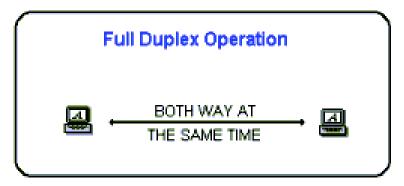


Figure 5: Full duplex connection

Full duplex refers to the transmission of data in two directions simultaneously. Here, both the devices are capable of sending as well as receiving data at the same time as shown in *Figure 5*. As you can see from *Figure 5*, that simultaneously bi-directional communication is possible, as a result, this configuration requires full and independent transmitting and receiving capabilities at both ends of the communication channel. Sharing the same channel and moving signals in both directions increases the channel throughput without increasing its bandwidth. For example, a telephone is a full-duplex device because both parties can talk to each other simultaneously. In contrast, a walkie-talkie is a half-duplex device because only one party can transmit at a time.

Most modems have a switch that lets you choose between full-duplex and half-duplex modes. The choice depends on which communications program you are running.

## **™** Check Your Progress 1

| 1) | What is Data Communication?   |
|----|---|
|    |   |
|    |   |
|    |   |
|    |   |
| 2) | Explain the term bandwidth. Why is bandwidth useful?  |
|    |   |
|    |   |
|    |   |
|    |   |
| 3) | If, a sine wave completes one cycle in 3 seconds, what is its frequency?  |
|    |   |
|    |   |
|    |   |
|    |   |
| 4) | Compare Parallel and Serial transmission methods and mention the situation where Parallel transmission is a better choice as compared to serial transmission. |
|    |   |
|    |   |

| 5) | Give reasons as to why Full duplex is more challenging then simplex and half duplex transmission. |
|----|---|
|    |   |
|    |   |
|    |   |
|    |   |
| 5) | Bring out the difference between Synchronous, Asynchronous and Isochronous transmission.          |
|    |   |
|    |   |
|    |   |
|    |   |

# 2.4 ANALOG AND DIGITAL DATA TRANSMISSION

We know that the two major types of signals are Analog and Digital. The manner in which these two types of signals can be transmitted from source to destination is of the same two types that is –

- Analog data transmission.
- Digital data transmission.

## **Analog Signal**

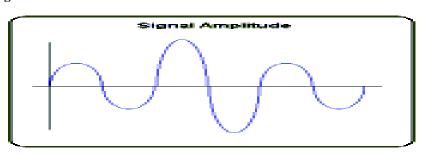


Figure 6: Analog signal

Analog signals vary constantly in one or more values; these changes in values can be used to represent data. An analog signal is continuous and can be represented by using sine waves. Human voice, video and music are all examples of analog signals, which vary in amplitude (volume) and frequency (pitch). Human voice generates an analog (continuously varying) signal containing multiple frequencies that is transmitted as an analog signal over the medium. Amplifiers are used to overcome the attenuation that the signal suffers on its way. The drawback is that amplifiers amplify noise along with the original signal and hence, if the signal gets distorted, it cannot be reconstructed and it is a permanent loss. Due to this reason, this type of transmission is not used where a high level of accuracy is needed. This is used in telephony where a slight distortion in human communication does not matter.

The ability to capture the subtle nature of the real world is the single advantage of analog techniques. However, once captured, modern electronic equipment, no matter

how advanced, cannot copy analog signals perfectly. Third and fourth generations of audio and video recordings show marked deterioration.

By converting analog signals into digital, the original audio or video data can be preserved indefinitely within the specified error bounds and copied over and over without deterioration. Once continuously varying analog signals are measured and converted into digital form, they can be stored and transmitted without loss of integrity due to the accuracy of digital methods.

## **Digital Data Transmission**

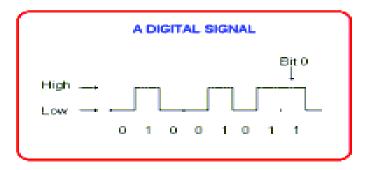


Figure 7: Digital Data Transmission

Digital data transmission describes any system based on discontinuous data or events. Computers are digital machines because at their most basic level they can distinguish between just two values, 0 and 1, or off and on. There is no simple way to represent all the values in between, such as 0.25. All data that a computer processes must be encoded digitally, as a series of zeroes and ones.

Information coming out of the computer is in the form of digital signals. The bandwidth of a digital signal is infinite as compared to any medium, which has a limited bandwidth. Therefore, as the signal is generated and enters the medium, at that point of entry, only limited frequencies are permissible on the medium and this depends upon the bandwidth. As the signal traverses over the medium it gets distorted and beyond a certain distance, the signal becomes unrecognisable from the original one. A hardware device called Repeater is used to regenerate the digital signal. The repeater measures the signal values at regular intervals to recognise the 0's and 1's in the signal and regenerates them. Hence, there is no loss of information. The number of repeaters to be used depends on the distance between the source and the destination. Any line with repeaters placed at appropriate distance is called a digital line.

When information, music, voice and video are turned into binary digital form, they can be electronically manipulated, preserved and regenerated perfectly at high speed. The millionth copy of a computer file is exactly the same as the original. This is, nevertheless, a major advantage of digital processing.

## 2.5 TRANSMISSION IMPAIRMENTS

When data is transmitted from a transmitter to receiver, there is scope for transmission errors. If, transmission media were perfect, the receiver would receive exactly the same signal that the transmitter sent. Unfortunately, media are not perfect, so the received signal may sometimes not be the same as the transmitted signal.

Transmission lines suffer from three major problems:

- Attenuation.
- Delay distortion.

Noise.

#### 2.5.1 Attenuation

Attenuation is the loss of energy as the signal propagates outwards. On guided media (e.g., wires and optical fibers), the signal falls off logarithmically with the distance. Attenuation is very small at short distances; therefore, the original signal can be recognised without too much distortion. Attenuation increases with distance as, some of the signal energy is absorbed by the medium. The loss is expressed in decibels per kilometer (db/km). The amount of energy lost depends on the frequency. Attenuation is also higher at higher frequencies.

If the attenuation is high, the receiver may not be able to detect the signal at all, or the signal may fall below the noise level. In many cases, the attenuation properties of a medium are known, so amplifiers can be put in place to try to compensate for the frequency-dependent attenuation. This approach helps but can never restore the signal exactly back to its original shape.

## 2.5.2 Delay Distortion

Delay distortion is caused by the fact that the signals of varying frequencies travel at different speeds along the medium. Any complex signal can be decomposed into different sinusoidal signals of different frequencies, resulting, in a frequency bandwidth for every signal.

One property of signal propagation is that the speed of travel of the frequency is the highest at the center of this bandwidth, and lowest at both ends. Therefore, at the receiving end, signals with different frequencies in a given bandwidth will arrive at different times. If, the signals received are measured at a specific time, they will not be exactly like the original signal resulting in its misinterpretation.

For digital data, fast components from one bit may catch up and overtake low components from the bit ahead, mixing the two bits and increasing the probability of incorrect reception.

## 2.5.3 **Noise**

Noise is unwanted energy from sources other than the transmitter. Thermal noise is caused by the random motion of the electrons in a wire and is unavoidable. Cross talk is caused by inductive coupling between two wires that are close to each other. Sometimes when talking on the telephone, you can hear another conversation in the background. That is crosstalk. Finally, there is impulse noise, caused by spikes on the power line or other causes. For digital data, impulse noise can wipe out one or more bits.

## 2.5.4 Concept of Delays

The average delay required to deliver a packet from source (origin) to destination has a large impact on the performance of a data network. Delay considerations strongly influence the choice and performance of network algorithms, such as routing and flow control. Because of these reasons, it is very important to understand the nature and mechanism of network delay, and the manner in which it depends on the characteristics of the network.

A large delay is disastrous for data transfer. The total delay can be categorised into two types. The first type is fixed delay. This is the total delay which is always present due to buffering, link capacity etc. The second type is variable delay. This is the delay component which is caused by packets queuing in the routers, congestions etc. Among the different types of delays, here, we shall discuss Transmission delay and Propagation delay.

### Transmission delay

Transmission delay is the delay, which is present due to link capacities. When resource reservation methods are supported in routers, transmission delays can probably be kept low enough to satisfy the overall delay constraint of 200 ms.

When data is transmitted, there is always a minimal amount of delay, due to the capacity of the links along which the data travels. But the most significant part of the delay of transmission is usually due to queuing of packets inside routers. This delay is highly variable and depends both on the number of routers along the path and the load of the routers.

## Propagation delay

Satellite microwave systems can reach remote places on the earth and can also communicate with mobile devices. As the signal travels a long distance (around 36,000 km), there is a delay of about 5 kms between, the transmission and the reception of the signal. This delay is known as the propagation delay. Such delays occur in all communication channels, however, small they may be.

Propagation delay is the time between the last bit transmitted at the head node of the link and the time the last bit is received at the tail node. This is proportional to the physical distance between the transmitter and the receiver; it can be relatively substantial, particularly for a satellite link or a very high-speed link.

The propagation delay depends on the physical characteristics of the link and is independent of the traffic carried by the link.

# 2.6 TRANSMISSION MEDIA AND ITS CHARACTERISTICS

Various physical media can be used for the actual transmission of information from one place to another. Each one has its own niche in terms of bandwidth, delay, cost, and ease of installation and maintenance. Transmission media are roughly grouped into guided media, such as copper wire and fiber optics, and unguided media, such as radio and lasers.

## 2.6.1 Magnetic Media

One of the most common ways to transport data from one computer to another is to write them onto magnetic tape or floppy disks, physically transport the tape or disks to the destination machine, and read them back in again. While, this method is not as sophisticated as using a geosynchronous communication satellite, it is often much more cost effective, especially for applications in which high bandwidth or cost per bit transported is the key factor.

## 2.6.2 Twisted Pair

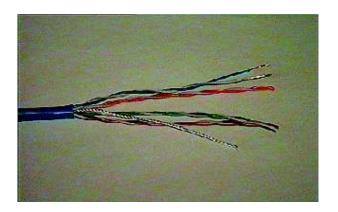


Figure 8: Twisted pair cable

Although, the bandwidth characteristics of magnetic tape are excellent, the delay characteristics are poor. Transmission time is measured in minutes or hours, not milliseconds. For many applications an on-line connection is needed. The oldest and still most common transmission medium is the twisted pair. A twisted pair consists of two insulated copper wires, typically about 1 mm thick. The purpose of twisting the wires is to reduce electrical interference from similar pairs that may be close by.

The most common application of the twisted pair is in the telephone system. Nearly all telephones are connected to the telephone company office by a twisted pair. Twisted pairs can run several kilometers without amplification, but for longer distances, repeaters are needed. When many twisted pairs run in parallels for a substantial distance, such as, all the wires coming from an apartment building to the telephone company office, they are bundled together and encased in a protective sheath. The pairs in these bundles would interfere with one another if, it were not twisted.

Twisted pairs can be used for either analog or digital transmission. The bandwidth depends on the thickness of the wire and the distance travelled, but several megabits/sec can be achieved for a few kilometers in many cases.

Twisted pair cable has the following advantages:

Adequate performance and lowest cost per meter as compared to other cable types as these are inexpensive to install, makes twisted pairs popular and hence, they are widely used and are likely to remain so for years to come.

### 2.6.3 Baseband Coaxial Cable

Another common transmission medium is the coaxial cable (also known as "coax"). It has better shielding than twisted pairs, so it can span longer distances at higher speeds.

A coaxial cable consists of a stiff copper wire as the core, surrounded by an insulating material. The insulator is encased by a cylindrical conductor, often, as a closely woven braided mesh. The outer conductor is covered with a protective plastic sheath. A cutaway view of a coaxial cable is shown in *Figure 9*.



Figure 9: Coaxial cable

The construction and shielding of the coaxial cable gives it a good combination of high bandwidth and excellent noise immunity. The bandwidth possible depends on the cable length. For 1-km cables, a data rate of 1 to 2 Gbps is feasible. Longer cables can also be used, but only at lower data rates or with periodic amplifiers. Coaxial cables used to be widely used within the telephone system but, have now largely been replaced by fiber optics on long-haul routes. Coax is still widely used for cable television and some local area networks.

### 2.6.4 Broadband Coaxial Cable

The other kind of coaxial cable system uses analog transmission on standard cable television cabling. It is called broadband. Although the term "broadband" comes from the telephone world, where it refers to anything wider than 1 MHz, in the computer networking world "broadband cable" means any cable network using analog transmission.

Since, broadband networks use standard cable television technology, the cables can be used up to 300 MHz (and often up to 450 MHz) and can run for nearly 100 km due to the analog signaling, which is much less critical than digital signaling. To transmit digital signals on an analog network, each interface must contain electronics to, convert the outgoing bit stream to an analog signal, and the incoming analog signal to a bit stream. Depending on the type of electronics, 1 bps may occupy roughly, 1 Hz of bandwidth. At higher frequencies, many bits per Hz are possible using advanced modulation techniques.

## 2.6.5 Optical Fiber

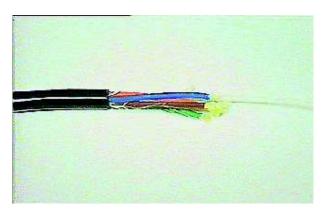


Figure 10: Optical fiber

Fiber optic cable is made of fine strands of silicon glass fiber (thinner than a human hair), and is coated with a refractive surface. The signals are converted to light pulses before being sent. When light (provided by a laser or LED) is show into the strand, it travels along the fiber strand (the refractive layer prevents it from escaping). Each fiber optic strand can support thousands of speech channels and multiple TV channels

simultaneously. It is used for long haul telecommunications links, for providing highspeed data communications links for computers, and information services to homes (e.g., PAY TV).

Advantages of Fiber optic cable are:

- high capacity (laser bandwidth),
- immune to interference (electromagnetic), and
- can go long distances (low attenuation).

Its disadvantages are,

- costly,
- difficult to join, and
- expensive to install and greater skill is required.

An Optical fiber transmission system has three components: the light source, the transmission medium, and the detector. Conventionally, a pulse of light indicates a 1 bit and the absence of light indicates a zero bit. The transmission medium is an ultrathin fiber of glass. The detector is a photo-divider that generates an electrical pulse when light falls on it. By attaching a light source to one end of an optical fiber and a detector to the other, we have a unidirectional data transmission system that accepts an electrical signal, converts and transmits it by light pulses, and then reconverts the output to an electrical signal at the receiving end.

Fibers can be connected in three different ways. First, they can terminate in connectors and be plugged into fiber sockets. Connectors lose about 10 to 20 percent of the light, but they make it easy to reconfigure systems.

Second, they can be spliced mechanically. Mechanical splices just place the two carefully cut ends next to each other in a special sleeve and clamp them together. The alignment can be improved by passing light through the junction and then making small adjustments to maximise the signal. Trained personnel can do mechanical splicing in 5 minutes, and show result in a 10 percent light loss.

Third, two pieces of fiber can be fused (melted) to form a solid connection. A fusion splice is almost as good as a single drawn fiber, but even here, a small amount of attenuation occurs. For all three kinds of splices, reflections can occur at the point of the splice, and the reflected energy can interfere with the signal.

### 2.6.6 Comparison between Optical Fiber and Copper Wire

Optical fiber has many advantages over copper wire. The advantages are:

Optical fiber can handle much higher bandwidths than copper wire. Due to the low attenuation, repeaters are needed only about every 30 km on long lines, whereas, copper wires require repeaters every 5 km, which, is substantial savings in cost.

Optical fiber also has the advantage of not being affected by power surges, electromagnetic interference, or power failures. Neither, is it affected by corrosive chemicals in the air, making it ideal for harsh factory environments.

Optical fiber is lighter than copper. One thousand twisted pairs 1 km long weigh 8000 kg. Two fibers have more capacity and weigh only 100 kg, which greatly reduces the need for expensive mechanical support systems that must be maintained.

For new routes, the installation cost of optical fiber is much lower than that for copper wire.

Finally, optical fibers do not leak light and are quite difficult to tap. This gives them excellent security against potential wire trappers.

The reason that optical fiber is better than copper wire is inherent in underlying physics. When electrons move in a wire, they affect one another and are themselves affected by electrons outside the wire. Photons in a fiber do not affect one another (they have no electric charge) and are not affected by stray photons outside the fiber.

## The disadvantages of optical fiber are:

It is a complex technology requiring skills that most engineers do not possess. Since optical transmission is inherently unidirectional, two-way communication requires either two fibers or two frequency bands on one fiber. Fiber interfaces cost more than electrical interfaces.

## **™** Check Your Progress 2

| 1) | What is Analog data transmission?                               |
|----|---|
|    |   |
|    |   |
|    |   |
| 2) | Explain the use of repeaters with respect to data transmission. |
|    |   |
|    |   |
|    |   |
|    |   |
| 3) | Describe the three categories of distortion.                    |
|    |   |
|    |   |
|    |   |
|    |   |
| 4) | List out the significance of delays in data transmission.       |
|    |   |
|    |   |
|    |   |
|    |   |
|    |   |

## 2.7 WIRELESS TRANSMISSION

Figure 11: Frequency spectrum for Wireless transmission

Wireless transmission is also called **unbounded media**. Here, there are no physical connectors between the two communicating devices. Usually the transmission is sent through the atmosphere, but sometimes it can be just across a room. Wireless media is used when a physical obstruction or distance blocks the use of normal cable media. The three main types of Wireless Media are:

- Radio wave,
- Microwave, and
- Infrared.

However, wireless also has advantages for fixed devices in some circumstances. For example, if running a fiber to a building is difficult due to the terrain (mountains, jungles, swamps, etc.) wireless may be preferable. It is noteworthy that modem wireless digital communication began in the Hawaiian Islands, where large chunks of Pacific Ocean separated the users and the telephone system was inadequate.

### 2.7.1 Microwave Transmission



Figure 12: Microwave transmission station.

Microwave is a radio system, which uses very high frequencies to send and receive data. Because of the high frequencies involved, microwave stations are located about 30 kilometers apart and in line of sight (visible to each other).

Microwave systems have sufficient bandwidth capacity to support a large number of voice channels and one or two TV channels.

Above 100 MHz, the waves travel in straight lines and can therefore, be narrowly focused upon. Concentrating all the energy into a small beam, using a parabolic antenna (like the familiar satellite TV dish) gives a much higher signal to noise ratio, but the transmitting and receiving antennas must be accurately aligned with each other. In addition, this directionality allows, multiple transmitters lined up in a row to communicate with multiple receivers in a row without interference. Before fiber optics, microwaves formed the heart of long distance telephone transmission system.

Since, microwaves travel in straight lines, if, the towers are too far apart, the earth will get in the way. Consequently, repeaters are needed periodically. The higher the

towers are, the further apart they can be. The distance between repeaters increases roughly, with the square root of the tower height. For 100-m high towers, repeaters can be spaced 80 km apart.

Unlike, radio waves at lower frequencies, microwaves do not pass through buildings well. In addition, even though the beam may be well focused at the transmitter, there is still some divergence in space. Some waves may be refracted off low-lying atmospheric layers and may take slightly longer to arrive than, direct waves. The delayed waves may arrive out of phase with the direct wave and thus cancel the signal. This effect is called multipath fading and is often a serious problem. It is weather and frequency dependent. Some operators keep 10 percent of their channels idle as spares to switch on to when, multipath fading affects some frequency band temporarily.

In summary, microwave communication is so widely used for long-distance telephone communication, cellular telephones, television distribution, and other uses, that a severe shortage of spectrum has developed.

Microwave systems have the advantage of:

- medium capacity,
- medium cost, and
- can go long distances.

## Its disadvantages are:

- noise interference,
- geographical problems due to line of sight requirements, and
- becoming outdated.

## Comparison between Microwave and Optical Fiber

The microwave has several significant advantages over optical fiber cable. The main one is that no right of way is needed, and by buying a small plot of ground every 50 km and putting a microwave tower on it, one can bypass the telephone system and communicate directly.

Microwave is also relatively inexpensive. Putting up two simple towers (maybe just big poles with four guy wires) and putting antennas on each one may be cheaper than burying 50 km of fiber through a congested urban area or up over a mountain, and it may also be cheaper than leasing optical fiber from a telephone company.

## **Terrestrial Microwave**

Terrestrial Microwave employs Earth-based transmitters and receivers. The frequencies used are in the low-gigahertz range, hence, limiting all communication to line of sight.

Microwave transmissions are carried out using a parabolic antenna that produces a narrow, highly directional signal. At the receiving site a similar antenna, which is sensitive to signals, only within a narrow focus, is placed. As both the transmitter and receiver are highly focused, they must be carefully adjusted so that, the transmitted signal is aligned with the receiver.

Microwave is frequently used as a means of transmitting signals where it would be impractical to run cables.

Terrestrial microwave systems operate in the low-giga hertz range, typically at 2-6GHz and 21-23GHz

Attenuation characteristics are determined by transmitter power, frequency and antenna size. Properly designed systems are not affected by attenuation under normal operational conditions. Rain and fog, however, can cause attenuation at higher frequencies.

Microwave systems might be vulnerable to electronic eavesdropping and signals transmitted through microwave are frequently encrypted.

#### **Satellite Microwave**

Satellite Microwave systems relay transmission through communication satellites that operate in geosynchronous orbits (36,000 - 40,000 km) above the Earth.

In order to communicate with satellites, the Earth stations use parabolic antennas. Satellites can retransmit signals in broad or in narrow beams depending on the locations that are to receive the signals. When the destination is on the opposite side of the earth, the first satellite must relay the signal through another satellite, as it cannot directly transmit to the receiver.

Satellite Microwave communication is possible with most remote sites and with mobile devices as no cables are required. Ships at sea and motor vehicles also use Satellite Microwave communication.

As all signals must travel 36,000 miles to the satellite and 36,000 miles when returning to the receiver, the time required to transmit a signal is independent of the distance. The time required for the signal to arrive at its destination is called propagation delay. The delay encountered with satellite transmissions is about 0.5 seconds.

Satellite Microwave communication is extremely expensive, as a result of which, organisations share the cost or they purchase services from a commercial provider.

Satellite links operate in the low-giga hertz range, typically at 4-6 GHz.

Attenuation depends on transmitter power, frequency and atmospheric conditions. Rain and atmospheric conditions may cause attenuation at higher frequencies. Signals transmitted through Satellite Microwave are usually encrypted.

### 2.7.2 Radio Transmission

The radio portion of the electromagnetic spectrum extends from 10KHz to 1GHz. Within this range there are numerous bands or ranges of frequencies that are designated for specific purposes. Some of the familiar frequency bands are:

- Short wave,
- VHF (Very High Frequency) used for television and FM radio, and
- UHF (Ultra High Frequency) used for television.

Radio waves are easy to generate, can travel long distances, and penetrate buildings easily, so they are widely used for communication, both indoors and outdoors. Radio waves also are omni directional, meaning that they travel in all directions from the source, so that the transmitter and receiver do not have to be carefully aligned physically and that the signal can be received by all the radios within the broadcast area.

The properties of radio waves are frequency dependent. At low frequencies, radio waves pass through obstacles well, but the power falls off sharply with distance from the source, roughly as  $1/r^3$  in air. At high frequencies, radio waves tend to travel in straight lines and bounce off obstacles. They are also absorbed by rain. At all frequencies, radio waves are subject to interference from motors and other electrical equipment.

### 2.7.3 Infrared and Millimeter Waves

Unguided infrared and millimeter waves are widely used for short-range communication. The remote controls used on televisions, VCR's, and stereos all use infrared communication. The remote control transmits pulses of infrared light that carry coded instructions to the receiver on the TV. They are relatively directional, cheap, and easy to build, but they have a major drawback, that is, they do not pass through solid objects (try standing between your remote control and your television and see if it still works). In general, as we go from long-wave radio toward visible light, the waves behave more and more like light and less and less like radio.

Infrared waves do not pass through solid walls well, as a result of which, an infrared system in one room of a building, will not interfere with a similar system in adjacent rooms, which is a great advantage. Due to this nature, security of infrared systems against eavesdropping is better than that of radio systems. Because of these reasons, no government license is needed to operate an infrared system, in contrast to radio systems, which must be licensed.

These properties have made infrared suitable for indoor wireless LANS. For example, the computers and offices in a building can be equipped with relatively unfocused (i.e., somewhat omni directional), infrared transmitters and receivers. In this way, portable computers with infrared capability can be on the local LAN without having to physically connect to it. During a meeting where several people use their portables, they can just sit down in the conference room and be fully connected, without having to plug in. Infrared communication cannot be used outdoors because the sun shines as brightly in the infrared as in the visible spectrum.

Two methods of infrared networking that are in use are:

### Point-to-point and Broadcast Infrared

**Point-to-point:** The Point-to-point networks operate by relaying infrared signals from one device to the next. Hence, transmissions are focused on a narrow beam, and the transmitter and receiver must be aligned carefully. Point-to point infrared is not suitable for use with devices that move frequently because, here, the devices must be carefully aligned and setup.

High power laser transmitters can be used in order to transmit data for several thousand yards when the line of sight communication is possible.

The cost of Point-to-point infrared equipment is higher than the cost for a comparable cabled network. When systems use transmitters that are based on LED technology and hardware cost is moderate, but, when long distance systems use high powered laser transmitters then the cost is very high.

Infrared devices are insensitive to radio frequency interference, but, the reception can be degraded by bright light. As the transmitters are tightly focused, they are fairly immune to electronic eavesdropping.

**Broadcast Infrared:** Broadcast infrared disperses transmissions so that, they are visible to several receivers. The two possible approaches to broadcast infrared networking are:

- The active transmitter can be located at a high point so that, it can transmit to all
  devices.
- A reflective material can be placed on the ceiling. Devices transmit toward the ceiling, from where, the light signals are dispersed to other devices in the room.

Installation is simple as device alignment is not critical. Hence, it is essential that each device has clear transmission and reception pathways.

As all devices are sensitive to light interference, during installation, the control of ambient light is very important.

## 2.8 WIRELESS LAN

Wireless LAN's are a system of portable computers that communicate using radio transmission. Wireless LAN's make use of the omnidirectional wireless communication.

The main objective of wireless LAN is to provide high-speed communication among computers that are located in relatively close proximity.

Wireless LAN's are usually configured in an office building with the base stations strategically placed around the building. Optical fiber cable can be used to cable all base stations together. If the transmission power of the base stations and portables is adjusted to a range of 3 or 4 meters, then, each room acts as a single cell, and the entire building acts as a large cellular system. Here unlike the cellular telephone system, each cell has only one channel that covers the entire bandwidth, which is available. Typically its bandwidth is 1 to 2 Mbps.

The disadvantages of using Radio transmitters are:

When the receiver is within the range of two active transmitters, the resulting signal will usually be grabled and hence, useless.

In indoor wireless LAN's, the presence of walls between the stations have great impact on the effective range of each station.

## **™** Check Your Progress 3

| 1) | Discuss the twisted pair cable.   |
|----|---|
|    |   |
|    |   |
|    |   |
|    |   |
| 2) | Describe co-axial cable and its uses.   |
|    |   |
|    |   |
|    |   |
| 3) | Describe the structure of optical fiber and mention its advantages and disadvantages. |
|    |   |
|    |   |
|    |   |
| 4) | Explain how Radio communication differs from Satellite communication.                 |
|    |   |
|    |   |

| 5) | Explain the working of Wireless LAN's. |
|----|--|
|    |  |
|    |  |
|    | ,                                      |
|    |  |

## 2.9 SUMMARY

In this unit, we have studied, the basic concepts of Data Transmission. To start with, we discussed the basic terms that are frequently used in Data transmission like Bandwidth, frequency, channel, baud etc. Bandwidth is the amount of data or signals that a transmission media can carry in a fixed amount of time and its unit of measurement is bits per second (bps) for digital signal and Hertz (Hz) for analog signals. Frequency is the number of cycles or periods that a signal completes within one second and its unit of measurement is Hertz (Hz). Channel refers to the communication path between the source and destination.

As it is essential to know how data can be transmitted from the source to the destination, the different modes of data transmission were outlined as follows:

- Parallel and Serial communication.
- Asynchronous, Synchronous and Isochronous communication.
- Simplex, Half duplex and Full duplex communication.

We also discussed the two major types of signals that is Analog and Digital and, the manner in which these two types of signals can be transmitted from the source to the destination.

When, data is transmitted from the source to the destination, there is, always a scope for transmission errors and the data may not reach in exactly the same form as it was sent. We have seen that these transmission errors are classified into three main categories that is Delay distortion, Attenuation and Noise. Delay distortion is caused because, signals at different frequencies, travel at different speeds along the transmission medium. As the signal travels along the transmission medium, its strength decreases over distance, this is known as Attenuation. Usually, some unwanted electromagnetic energy gets inserted during the course of transmission and this is called Noise. The concept of Delays and how to reduce them were also discussed.

We have seen that transmission media can be classified in to two categories, that are, guided media and unguided media. The guided media uses physical cable for data transmission. Twisted pair, co-axial cable and optical fiber are the three main types of guided media; they differ in their physical characteristics as well as transmission capacities. In case of unguided media, the transmission medium is air. Unguided media can be Radio, Microwave or Infrared. Security is a major concern when using unguided media for transmission.

Towards the end, Wireless LAN's were also discussed. Here, we saw that Wireless LAN's make use of Radio transmission and their main objective is to provide high speed communication among computers that are located in relatively close proximity. In the next unit, we will be studying, the different Data encoding and communication techniques.

## 2.10 SOLUTIONS/ANSWERS

## **Check Your Progress 1**

- Data communication has become an essential and important part of the modern world. The possibilities of exchanging important business documents and information amoung widely separated users, sharing of information with friends etc., have made data communication very important and hence, it is necessary to understand how it works internally and how to exchange data among different users. Data communication system consists of a combination of hardware and software. A good data communication system must posses the following characteristics.
  - **Correct delivery:** When a sender transmits data to a particular recipient, the data must reach only the intended recipient and not someone else.
  - **Accurate delivery:** There must not be any sort of attenuation to the data sent during transmission from the sender to the receiver.
  - **Timely delivery:** The data must travel from the source to the destination in a finite amount of time.
- 2) Bandwidth is the amount of signals that the transmission media can carry in a fixed amount of time. Bandwidth has a great influence on performance, that is, a higher bandwidth increases the throughput and better performance.
- 3) Solution:

Since Frequency (f) is the inverse of period (T) we have f = 1/T = 1/3 = 0.33 Hz. therefore, the frequency of sine wave is 0.33 Hz.

4)

| Parallel Transmission   | Serial Transmission  |
|---|--|
| All the Data bits are transmitted simultaneously on separate wires.                   | Data bits are transmitted one bit at a time serially.      |
| Here multiple circuits interconnecting the two devices are required.                  | Requires only one circuit interconnecting the two devices. |
| It is a very fast method of data transmission.  | It is slow compared to parallel transmission.              |
| Expensive, as it requires several wires for sending as well as receiving equipment.   | Comparatively cheaper.                                     |
| Suitable for short distance data transmission where, accuracy is of prime importance. | Suitable for long distance data transmission.              |

- 5) In Full duplex transmission, simultaneously, bi-directional communication is possible, as a result, this configuration requires full and independent transmitting and receiving capabilities at both ends of the communication channel. This increases the throughput without increasing the bandwidth.
- 6) Refer to Section 2.3.2 Synchronous, Asynchronous and Isochronous communication.

## **Check Your Progress 2**

- Analog data may be transmitted using analog signals. Analog signal is continuous and is represented using sine wave. Amplifiers are used to overcome the attenuation that the signal suffers during transmission. By converting analog signals into digital signals, the original audio or video data can be preserved indefinitely and copied any number of times without distortion.
  - Human voice, video and music are all examples of analog signal.
- 2) As the signal flows through the transmission medium, it gets distorted and beyond a certain distance, the signal becomes unrecognisable from the original one. Repeaters are used to regenerate the digital signal. The result of adding a repeater is that the potential length of the overall network is doubled. Some repeaters only amplify signals; this strengthens the signal but, at the same time, also amplifies the noise on the network.
  - Advanced repeaters both amplify as well as regenerate the signals. Signal regenerating repeaters, identify the data in the signal they receive and use the data to regenerate the original signal. As a result only the strength of the desired signal is amplified while, reducing noise and clearing up any distortion that might be present. Hence, the output of such (regenerating) repeaters is the same as the original data signal.
- 3) When data is transmitted from the source to the destination, there is always a scope for transmission errors and the data may not reach in exactly the same form as it was sent. We have seen that these transmission errors are classified into three main categories that is Delay distortion, Attenuation and Noise. Delay distortion is caused because the signals at different frequencies travel at different speeds along the transmission medium. As the signal travels along the transmission medium, its strength decreases over distance and this is called Attenuation. Usually, some unwanted electromagnetic energy can get inserted during the course of transmission and this is called Noise.

4) Refer to section 2.5.4 Concept of delays

## **Check Your Progress 3**

- 1) The oldest and still most common transmission medium is the twisted pair. A twisted pair consists of two insulated copper wires, typically about 1 mm thick. The importances of twisting the two strands of insulated copper wire are:
  - Twisting reduces the sensitivity of the cable to EMI (Electromagnetic Interference).
  - Reduces the tendency of the cable to radiate radio frequency noise that interferes with the nearby cables and electronic components.
  - Twisting also controls the tendency of the wires in the pair to cause EMI in each other.

The most common application of the twisted pair is in the telephone system. Nearly all telephones are connected to the telephone company office by a twisted pair. Twisted pairs can run several kilometers without amplification, but for longer distances, repeaters are needed. When many twisted pairs run in parallels, for a substantial distance, such as, all the wires coming from an apartment building to the telephone company office, they are bundled together and encased in a protective sheath. The pairs in these bundles would interfere with one another if, they were not twisted.

2) The components of a co-axial cable are:

A center conductor, which is usually a stiff copper wire. Shield, which is an outer conductor that forms a tube surrounding the centre conductor. This conductor consists of braided wires, metallic foil or both. An insulation layer that also keeps the outer conductor spaced evenly from the inner conductor. A plastic encasement (jacket ) that protects the cable from damage.

3) Fiber optic cable is made from fine strands of silicon glass fiber (thinner than a human hair), and is coated with a refractive surface. The signals are converted to light pulses before being sent. When light (provided by a laser) is show into the strand, it travels along the fiber strand (the refractive layer prevents it from escaping). Each fiber optic strand can support thousands of speech channels and multiple TV channels simultaneously. It is used for long haul telecommunications links, high-speed data communications links for computers, and information services to homes (e.g., PAY TV).

Advantages of Fiber optic cable are:

- high capacity
- immune to interference
- can go long distances

Its disadvantages are:

- costly
- difficult to join.

4)

| RADIO COMMUNICATION   | SATELLITE COMMUNICATION  |
|---|--|
| Frequency Range: Any part of the radio spectrum can be used. Frequencies in the low Gigahertz (GHz) range are usually selected in order to achieve high data rates. | Frequency Range: Satellite links operate in the low Gigahertz (GHz) range typically from 11-14 GHz.            |
| Cost: Depends on the design, but can be low in comparison to other wireless communication.  | Cost: Costs are extremely high and are usually distributed among many users by selling communication services. |
| Installation: Installation is difficult.  | Installation: Installation is very difficult.  |
| Attenuation: Attenuation is high.   | Attenuation: Attenuation depends on frequency, signal strength and atmospheric conditions.                     |
| <b>EMI Sensitivity:</b> High EMI sensitivity, vulnerable to eavesdropping.  | EMI Sensitivity: Low EMI sensitivity, moderately vulnerable to eavesdropping.                                  |

5) Refer to Section 2.5 Wireless LAN.

## 2.11 FURTHER READINGS

- 1) Computer Networks, Andrew.S.Tannenbaum, PHI, New Delhi.
- 2) Data and Computer Communication, William Stalling, PHI, New Delhi

# UNIT 3 DATA ENCODING AND COMMUNICATION TECHNIQUE

| Structure |                              | Page Nos. |
|-----------|------------------------------|-----------|
| 3.0       | Introduction                 | 70        |
| 3.1       | Objectives                   | 70        |
| 3.2       | Encoding                     | 71        |
| 3.3       | Analog to Analog Modulation  | 71        |
| 3.4       | Analog to Digital Modulation | 75        |
| 3.5       | Digital to Analog Modulation | 77        |
| 3.6       | Digital to Digital Encoding  | 81        |
| 3.7       | Summary                      | 85        |
| 3.8       | Solutions/Answers            | 85        |
| 3.9       | Further Readings             | 86        |

## 3.0 INTRODUCTION

You might be aware from the description in the previous blocks, how data is transmitted through a channel (wired or wireless) in the form of an analog or digital signal. In this unit, we will elaborate on the techniques to produce these types of signals from analog or digital data. We will look at, in brief, on the following encoding techniques [Figure 1]:

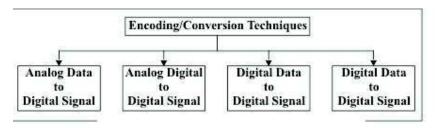


Figure 1: Encoding/Conversion Techniques

- Analog data as an analog signal
- Analog data as a digital signal
- Digital data as an analog signal
- Digital data as a digital signal

We will confine ourselves to, a treatment of the most useful and common techniques only, and will skip over the many other kinds of encoding of data that can be performed.

## 3.1 OBJECTIVES

After going through this unit, you should be able to describe:

- what encoding means;
- why encoding is needed;

- some different types of encoding;
- mechanisms and techniques used for encoding, and
- when each type of encoding is used with examples.

There are several other types of encoding as well as encoding techniques that will not be discussed in this unit.

## Data Encoding and Communication Technique

## 3.2 ENCODING

Usually, we cannot send a signal containing information directly over a transmission medium, at least not for long distances. For example, the sound of our voice can only travel a few hundred meters. If we want to send our voice to the next city, we have to be able to transform our voice, to, an electrical signal that can then, be sent that long distance. Then, we would also need to perform the reverse conversion at the other end.

So, we see that, to send a signal over a physical medium, we need to encode or transform the signal in some way so that the transmission medium can transmit it. The sender and the receiver must agree on what kind of transformation has been done so that, it can be reversed at the other end and the actual signal or information can be recovered. The information content in a signal is based upon having some changes in it. For example, if we just send a pure sine wave, where the voltage varies with time as a sine function, then, we cannot convey much information apart from the fact that there is some entity at the other end that is doing the transmitting.

The information content of a signal is dependent on the variation in the signal. After sending one cycle of a sine wave there is no point in sending another cycle because we will not be able to convey anything more than what we have already done. What is needed is to modify the sine wave in some way to carry the information we want to convey. This is called modulation.

You know that there are two kinds of signals: analog and digital. Likewise, there are two types of information that we may want to transmit, again analog and digital. So, we get four basic combinations of encoding that we may need to perform, depending on the signal type as well as the information type. We shall look at each of these four types briefly in this unit and will also study the ways in which the actual encoding can be done.

## 3.3 ANALOG-TO-ANALOG MODULATION

Let us first look at a situation where our signal and information are both of the analog type. The act of changing or encoding the information in the signal is known as **modulation.** A good example of such encoding is radio broadcasting. Here we primarily want to send sound in some form over the atmosphere to the receiving radio sets. The sound is converted into an analog electrical signal at the source and is used to encode the signal which is the base frequency at which the transmission is being done. The reverse process is performed at the radio set to recover the information in electrical form, which is then converted back to sound so that, we hear what was being said at the radio station.

Let us, formulate another definition of modulation. When a low frequency information signal is encoded over a higher frequency signal, it is called modulation [Ref.3]. The encoding can be done by varying amplitude (strength of a signal), period (amount of

Introduction to Data Communication and Computer Network Concepts



time, in seconds, a signal needs to complete a cycle) and frequency (number of cycles per second) and phase (position of waveform relative to zero).

Notice the simulations of the word modulation to the word modifying. For instance, an audio signal (one that is audible to human ear) can be used to modify an RF (Radio Frequency) carrier, when the amplitude of the RF is varied according to the changes in the amplitude of the audio, it is called amplitude modulation (AM), and when the frequency is varied, it is called FM (frequency modulation).

Although, it can be dangerous to use analogies as they can be carried too far, we can understand this process with an example. Suppose we want to send a piece of paper with something written on it to a person a hundred meters away. We will not be able to throw the paper that far. So, we can wrap it around a small stone and then throw the stone towards the person. He can then unwrap the paper and read the message. Here, the stone is the signal and the piece of paper is the information that is used to change the stone. Just as sending the stone alone would not have conveyed much to our friend, similarly sending only the base signal (also called carrier signal) will not convey much information to the recipient.

Therefore, there are three different ways in which this encoding of the analog signal with analog information is performed. These methods are:


- **Amplitude modulation** (AM), where the amplitude of the signal is changed depending on the information to be sent (*Figure 2 (a)*).
- **Frequency modulation**, where the frequency of the signal is changed depending on the information to be sent (*Figure 2 (b)*).
- **Phase modulation,** where it is the phase of the signal that is changed according to the information to be sent.

## **Amplitude Modulation**

Now, let us go into the details. In this type of modulation the frequency and phase of the carrier or base signal are not altered. Only the amplitude changes and we can see that the information is contained in the envelope of the carrier signal. It can be proud/demonstrated that, the bandwidth of the composite signal is twice that of the highest frequency in the information signal that modulates the carrier.

By international agreement, for radio transmission using AM, 9 KHz is allowed as the bandwidth. So, if a radio station transmits at 618 KHz, the next station can only transmit at 609 or at 627 KHz. It will be clear that the highest audio frequency that can be carried over AM radio is thus 4.5 KHz, which is sufficient for most voice and musical pieces. Actually, the modulating signal is centred around the carrier frequency and extends the composite signal both ways in equal measure. Each of these is called a sideband and therefore, AM radio transmission is dual sideband. This is actually wasteful because the spectrum is unnecessarily used up, but the cost and complexity associated with eliminating one sideband, and performing single sideband AM modulation, have led to the technique not being used widely.

AM radio transmission has been assigned the frequency range of 530 to 1700 KHz. The quality of AM transmission is not very good as noise in the channel (the atmosphere, here) can easily creep into the signal and alter its amplitude. So, the receiving end will likely find a fair amount of noise in the signal, particularly at higher, short wave frequencies. That is why you often get a lot of static in short wave or even medium wave broadcasts.

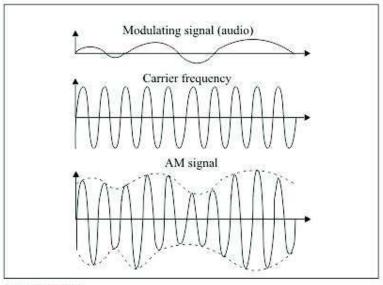

AM Bandwidth

Figure 2 (a): Amplitude modulation

## **Frequency Modulation**

In contrast to Amplitude Modulation, here it is the frequency of the base signal that is altered depending on the information that is to be sent. The amplitude and phase of the carrier signal are not changed at all. It can be shown that this results in a bandwidth requirement of 10 times the modulating signal, centred on the carrier frequency.

This method is the less susceptible to noise and gives the best performance of all data encoding types as far as the quality of the transmitted signal is concerned. Although digital encoding methods may give better performance over multiple hops (because in their case, the original signal can be accurately reconstructed at each hop), Frequency Modulation (FM) is the best as far as single hop transmission goes.

FM radio transmission has been allocated the spectrum range 88 MHz to 108 MHz. As a good stereo sound signal needs 15 KHz of bandwidth, this means that FM transmission has a bandwidth of 150 KHz. To be safe from interference from neighbouring stations, 200 KHz is the minimum separation needed. As a further safety measure, in any given area, only alternate stations are allowed and the neighbouring frequencies are kept empty. This is practical because FM transmission is line of sight (because of the carrier frequency) and so, beyond a range of about 100 Km or so, the signal cannot be received directly (this distance depends on various factors). We can therefore, have at most 50 FM stereo radio stations in a given geographical area.

As in the case of AM transmission (having 2 subbands), FM also has multiple sidebands maybe two or more, which is really wasteful but is tolerated in the interests of simplicity and cost of the equipment.

In television transmission the bandwidth needed is 4.5 MHz in each sideband. The video signal is sent using amplitude modulation. The audio signal goes at a frequency that is 5.5 MHz over the video signal and is sent as a frequency modulated signal. To reduce the bandwidth requirement, the video signal is sent using a method called

Introduction to Data Communication and Computer Network Concepts vestigial sideband that needs only 6 MHz, instead of the 9 MHz that would have been needed for dual sideband transmission, though, it is more than the 4.5 MHz that a pure single sideband transmission would have needed.

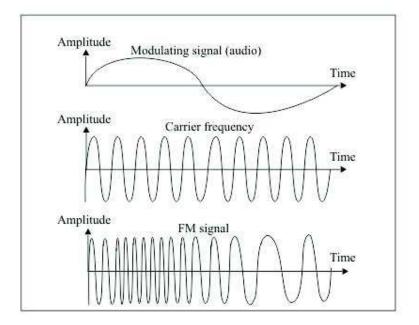


Figure 2 (b): Frequency modulation

### Phase Modulation

As you would have guessed by now, in Phase Modulation (PM) the modulating signal leaves the frequency and amplitude of the carrier signal unchanged but alters its phase. The characteristics of this encoding technique are similar to FM, but the advantage is that of reduced complexity of equipment. However, this method is not used in commercial broadcasting.

## **™** Check Your Progress 1

| 1) | Why do we need modulation? Would it be right to simply send the information as the signal itself?                   |
|----|---|
|    |   |
|    |   |
|    |   |
| 2) | Why is it that there are at most 50 FM radio stations in a particular geographical area? Justify with calculations. |
|    |   |
|    |   |
|    |   |
| 3) | Why is AM the most susceptible to noise, of the three types of modulation?  |
|    |   |
|    |   |
|    |   |

## 3.4 ANALOG TO DIGITAL MODULATION

Data Encoding and Communication Technique

Natural phenomena are analog in nature and can take on any of the potentially infinite number of values. For example, the actual frequencies contained in a sound made by a human is an analog signal, as is the amplitude or loudness of the sound. One example of coding analog data in digital form is when, we want to record sound on digital media such as a DVD or in other forms such as MP3 or as a ".wav" file. Here, the analog signal, that is, the musical composition or the human voice is encoded in digital form. This is an example of analog to digital encoding.

While, in the case of analog to analog encoding, the motivation was to be able to transmit the signal for long distances, here, the main reason is to be able to change the information itself to digital form. That digital signal can then be transmitted, if necessary, by any suitable method.

One method of encoding is what is called Pulse Code Modulation (PCM). This gives very good quality and when used in conjunction with error correction techniques, can be regenerated at every hop on the way to its final destination. This is the big advantage of digital signals. At every hop, errors can be removed and the original signal reconstructed almost exactly, barring the few errors that could not be corrected.

The first step in PCM is, to convert the analog signal into a series of pulses (*Figure 3*). This is called Pulse Amplitude Modulation (PAM). To do this the analog signal is sampled at fixed intervals and the amplitude at each sample decides the amplitude of that pulse. You can see that at this step, the resulting signal is still actually an analog signal because the pulse can have any amplitude, equal to the amplitude of the original signal at the time the sample was taken. In PAM, the sampled value is held for a small time so that the pulse has a finite width. In the original signal the value occurs only for the instant at which it was sampled.

One question that arises here is, how many samples do we have to take? We would not want to take too many samples as that would be wasteful. At the same time, if, we take too few samples, we may not be able to reconstruct the original signal properly. The answer comes from Nyqist's theorem, which states that, to be able to get back the original signal, we must sample at a rate, that is, at least twice that of the highest frequency contained in the original signal.

Let us do some calculations to see what this means in practice. In the next unit, you will see that a voice conversation over a telephone has a range of frequencies from 300 Hz to 3300 Hz. Because the highest frequency is 3300 Hz, we need at least 6600 samples a second to digitise the voice to be sent over a phone line. For safety we take 8000 samples per second, corresponding to a sampling interval of 125 microseconds.

The next stage in the digitization of the signal is quantisation. In this process, the analog values of the sampled pulses are quantised, that is, converted into discrete values. For example, if the original analog signal had an amplitude ranging from +5v to -5v, the result of PAM might be to produce pulses of the following amplitudes (each sample is taken at say, intervals of 125 microseconds)

+4.32, +1.78, -3.19, -4.07, -2.56, +0.08 and so on.

In quantisation, we may decide to give the amplitude 256 discrete values. So, they will range from -127 to +128. The actual amplitude of +5v to -5v has to be represented in this range, which means each value is of 39 mV nearly. By this token, the first value of +4.32v lies between 110 and 111, and we can decide that such a

value will be taken as 110. This is quantisation. The analog values now become the following quantised values:

110, 45, -81, -104, -65, 2 and so on.

The above discrete values are now represented as 8 binary digits with, 1 bit giving the sign while the other 7 bits represent the value of the sample.

In the final stage of the encoding, the binary digits are then transformed into a digital signal using any of the digital to digital encoding mechanisms discussed later in this unit. This digital signal is now the representation of the original analog signal.

PCM is commonly used to transmit voice signals over a telephone line. It gives good voice quality but, is a fairly complex method of encoding the signal. There is a simpler method that can be used, but we have to pay the price in terms of the lower quality of the encoded signal. This is called Delta modulation. Here, samples are taken as described above, but instead of quantising them into 256 or more levels, only the direction of change is retained. If the sample is larger in value than the previous one, it is considered a 1 while otherwise it is considered a 0 bit. So the sequence above would be encoded as:

1, 0, 0, 0, 1, 1 and so on.

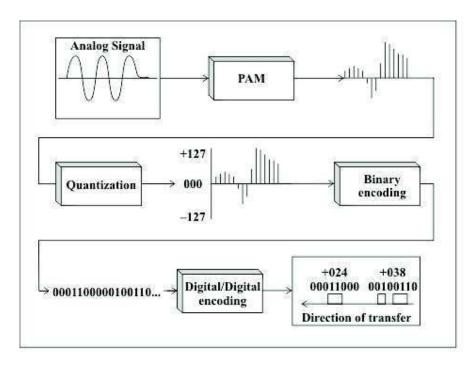


Figure 3: Pulse code modulation

## **™** Check Your Progress 2

| 1) | Why is PAM a necessary pre-requisite to PCM? Why can we not use PCM directly? |
|----|---|
|    |   |
|    |   |
|    |   |

| 2) | What would be the minimum sampling interval needed for reconstructing a signal where the highest frequency is 1 KHz?   | Data Encoding and<br>Communication Technique |
|----|--|--|
| 3) | Consider a signal where the amplitude varies from +6.4v to -6.4v. If we want to quantise it into 64 levels, what would be the quantised values corresponding to signals of -3.6v and +0.88v? |  |
|    |  |  |
|    |  |  |

# 3.5 DIGITAL TO ANALOG MODULATION

So far, we have looked at the codification of analog data, where the source information could take up any value. We also have need for the reverse type of encoding, where binary digital values have to be encoded into an analog signal. This may seem simple because after all, we only have to give two distinct values to the analog signal, but here you need to realise that, we have to be able to distinguish between successive digital values that are the same, say three 1's in succession or two 0's in succession. These should not get interpreted as a single 1 or a single 0! This sort of problem did not exist in the case of analog to analog encoding.

One example where such encoding is needed is, when we need to transmit between computers over a telephone line. The computers generate digital data, but the telephone system is analog. So, this situation is a bit different from the transmission of voice over the telephone, where the source signal is also analog.

In this kind of encoding, one important factor of interest is the rate at which we can transfer bits. Clearly, there will be some kind of limit to the amount of information that we can send in a given time. This depends on the available bandwidth of the carrier signal, that is, the variation that we can permit around the nominal frequency as well as on the specific technique of encoding that we use.

Here it is important to understand two aspects of the rate of transfer of information. The first is the bit rate, that tells us the number of individual bits that are transmitted per second. The second, and more important from the transmission angle, is the baud rate. This is the number of signal transitions per second that are needed to represent those bits. For a binary system, the two are equal. In general, the bit rate cannot be lower than the baud rate, as there has to be at least one signal transition to represent a bit.

We have seen in analog to analog encoding that, the source signal modulates the base or carrier signal to convey the information that we want to transmit. A similar principle is also used in digital to analog encoding. The carrier signal has to be modulated, but this time by the digital signal, to produce the composite signal that is transmitted. However, while in the analog case there were a potentially infinite number of values that could have been transmitted, here we have only two values (a 0 or a 1) that will modulate the signal.

If, there is no modulation, the carrier signal will be a pure sine wave at the frequency of transmission. You will realise that the baud rate that can be supported also depends

on the quality of the line and the amount of random noise that is present in the medium. Like in analog-to-analog encoding, there are three properties of the sine wave that we can alter to convey information. These are the amplitude, the frequency and the phase. In addition, we can also use a combination of amplitude and phase change to encode information more efficiently. Modulation is also referred to as shift keying in this type of encoding technique.

There are three types of digital to analog modulation (*Figure 4*)

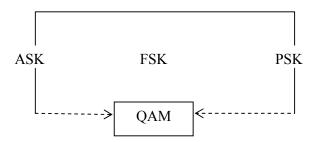


Figure 4: Digital to analog modulation techniques

Now we will take up each one individually.

#### **Amplitude Shift Keying (ASK)**

In this kind of encoding, abbreviated as ASK, the amplitude of the analog signal is changed to represent the bits, while the phase and the frequency are kept the same. The bigger the difference between the two values, the lower the possibility of noise causing errors. There is no restriction, however, on what voltage should represent a 1 or a 0, and this is left to the designers. For the duration of a bit, the voltage should remain constant.

One method could be to represent the high voltage as a 1 and the negative high voltage as a 0, although the reverse convention could also be used. Sometimes, to reduce the energy needed for transmission, we can choose to represent a 0 or a 1 by a zero voltage, and the other bit by the high voltage. This scheme is called on-off-keying (OOK).

Like amplitude modulation in the analog case, ASK is vulnerable to noise. Amplitude changes easily as a result of the noise in the line, and if, the quantum of noise is great enough, it can result in an error. This would mean that a 0 gets interpreted as a 1 at the receiving end, or vice versa. Noise can occur as spikes or as a constant voltage that shifts the amplitude of the received signal. Even thermal noise, that is fairly constant, can cause a 0 to be interpreted as a 1 or the other way round.

To find the bandwidth requirement of an ASK encoded signal on an ideal, noiseless, line, we have to do a Fourier analysis of the composite signal. This yields harmonics on either side of the carrier frequency, with frequencies that are shifted by an odd multiple of half the baud rate. As most of the energy is concentrated in the first harmonic, we can ignore the others. It can then be shown that the bandwidth required for ASK encoding is equal to the baud rate of the signal. So if we want to transfer data at 256 Kbps, we need a bandwidth of at least 256 KHz.

In a practical case, there will be noise in the line and this ideal cannot be achieved. This increases the bandwidth requirement by a factor that depends on the line quality and the carrier amplitude. ASK is a simple encoding method but is not commonly used by itself because of efficiency and quality issues.



#### Frequency Shift Keying (FSK)

Just as in the case of analog to analog encoding, we can encode a digital signal by changing the frequency of the analog carrier. This is frequency shift keying (FSK). When a bit is encoded, the frequency changes and remains constant for a particular duration. The phase and the amplitude of the carrier are unaltered by FSK. Just as in FM, noise in the line has little effect on the frequency and so, this method is less susceptible to noise.

It is possible to show that an FSK signal can be analysed as the sum of two ASK signals. One of these is centred around the frequency used for a 0 bit and the other for the frequency used for a 1 bit. From this, it is easy to show that the bandwidth needed for an FSK signal is equal to the sum of the baud rate and the difference between the two frequencies. Thus, the requirement of FSK is a higher bandwidth that helps us to avoid the noise problems of ASK.

FSK is not much used in practice because of the need for higher bandwidth and the comparative complex requirement for changing the frequency.

#### Phase Shift Keying (PSK)

We can also encode by varying the phase of the carrier signal. This is called phase shift keying (PSK) and here, the frequency and amplitude of the carrier are not altered. To send a 1 we could use a phase of 0 while we could change it to 180 degrees to represent a 0. Such an arrangement is not affected by the noise in the line, because that affects amplitude rather than the phase of the signal.

This quality of PSK can be used to achieve more efficient encoding. For example, instead of having only 2 phases, we could have four phases, 0, 90 degrees, 180 degrees and 270 degrees. Each of these phase shifts could represent 2 bits at one go, say, the combinations 00, 01, 10 and 11 respectively. Such a scheme is called 4-PSK. The concept can be extended to higher levels and we could have 8-PSK to send groups of 3 bits in one go. This method can be extended further, but at some point the sensitivity of the communication equipment will not be enough to detect the small phase changes and we are then limited for that reason.

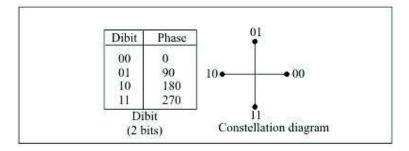


Figure 5(a): 4 PSK

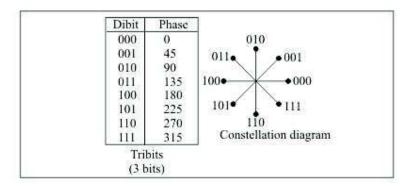


Figure 5(b): 8 PSK

Clearly, the scheme is more efficient than ASK because, we can now achieve a higher bit rate from the same bandwidth. It can be shown that the bandwidth required in 2-PSK is the same as that needed in ASK. But the same bandwidth at 8-PSK can transmit thrice the number of bits at the same band rate.

Why can we not apply the same trick in ASK? We could have 4, 8 or more amplitude levels to transmit 2, 3 or more bits in one signal transition. The reason is that, ASK is vulnerable to noise and that makes it unsuitable for using many different amplitude levels for encoding. Similarly, FSK has higher bandwidth requirements and so we do not use this kind of technique there as, there is not much to be gained.

#### Quadrature Amplitude Modulation (QAM)

To further improve the efficiency of the transmission, we can consider combining different kinds of encoding. While, at least one them has to be held constant, there is no reason to alter only one of them. Because of its bandwidth requirements, we would not bother to combine FSK with any other method. But it can be quite fruitful to combine ASK and PSK together and reap the advantages. This technique is called Quadrature Amplitude Modulation (QAM).

We have already seen how ASK is vulnerable to noise. That is why the number of different amplitude levels is small while there may be more phase shift levels possible. There are a large number of schemes possible in the QAM method. For example 1 amplitude and 4 phases is called 4-QAM. It is the same as 4-PSK because there is no change in the amplitude. With 2 amplitudes and 4 phases we can send 3 bits at a time and so this scheme is called 8-QAM (*Figure 6*).

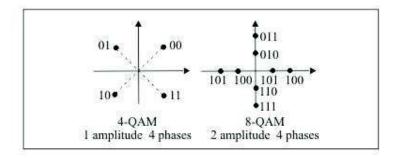


Figure 6: 4-QAM and 8-QAM constellations

In practical application we use 3 amplitudes and 12 phases or 4 amplitudes and 8 phases. Although, this way, we should be able to send 4 bits at a time (this is 32-QAM), to guard against errors, adjacent combinations are left unused. So, there is a

smaller possibility of noise affecting the amplitude and causing problems with the signal received. As a further safeguard, in some schemes, certain amplitudes and phases are coupled, so that, some amount of error correction is possible at the physical layer itself.

Data Encoding and Communication Technique

Note, that the errors we have talked of here are at the physical layer. By using the appropriate techniques, at the data link layer we achieve error free transmission irrespective of the underlying mechanisms at the physical layer. That is not something that will be looked at in this unit.

It can be shown that QAM requires the same bandwidth as ASK or PSK. So, we are able to achieve a much higher bit rate using the same baud rate. That is why QAM is the method of encoding used currently in data communication applications.

#### **™** Check Your Progress 3

| 1) | example.  |
|----|---|
|    |   |
|    |   |
| 2) | If our equipment is able to reliably detect differences of voltage of up to $0.5 \text{ v}$ , and the probability is $99.74\%$ that noise will cause a change in the amplitude of our signal of no more than $0.2 \text{ v}$ , then how many amplitude levels can one have if the peak signal strength is to vary from between $+3v$ to $-3v$ ? |
|    |   |
|    |   |
|    |   |
| 3) | If our equipment can reliably detect phase changes of up to 20°, how many phase levels can we use in a PSK system?  |
|    |   |
|    |   |
|    |   |
| 4) | Given the characteristics (of questions 2 and 3 above) and using only half the possible combinations for safety, what level of QAM can be achieved?   |
|    |   |
|    |   |
|    |   |

# 3.6 DIGITAL TO DIGITAL ENCODING

Let us, now look at the last combination of encoding possible, from digital to digital signals. A simple example is when sending data from a computer to a printer, both of which understand digital signals. The transmission has to be for short distances over the printer cable and occurs as a series of digital pulses. Another example of such



encoding is for transmission over local area networks such as an Ethernet, where the communication is between computer and computer.

This kind of encoding is really of three types and we will look at each of the types here. Again, there can be many other mechanisms other than the ones discussed in this unit, but we will look at only the methods that are used in data communication applications. These types are unipolar, polar and bipolar techniques.

#### **Unipolar Encoding**

This is a simple mechanism but is rarely used in practice because of the inherent problems of the method. As the name implies, there is only one polarity used in the transmission of the pulses. A positive pulse may be taken as a 1 and a zero voltage can be taken as 0, or the other way round depending on the convention we are using (*Figure 7*). Unipolar encoding uses less energy and also has a low cost.

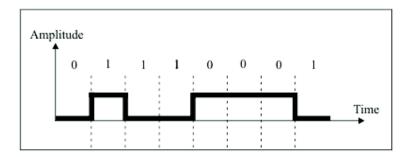


Figure 7: Unipolar encoding

What then are the problems that preclude widespread use of this technique? The two problems are those of synchronisation and of the direct current (DC) component in the signal.

In any digital communication system the transmitter and receiver have to be synchronised or all information may be lost. For example, in determining when to consider the next bit to have started, a very useful mechanism is of using signal transition to indicate start of the next bit. But, if there is a string of bits of the same value, then this method does not work.

In such a case, we have to rely on the clock of the receiver to determine when a bit has ended. This has potential problems because sometimes there can be delays at the transmission end which may stretch the time of transmission, causing the receiver to wrongly believe that there are more bits than is actually the case. Moreover, drift in the clock of the receiver can also lead to difficulties. So, we cannot directly rely on the transmitter and receiver clocks being accurate enough to achieve synchronisation. One way out of this is, to send a separate timing pulse along with the signal on a separate cable, but this increases the cost of the scheme.

Another problem with unipolar encoding is that the average voltage of the signal is non-zero. This causes a direct current component to exist in the signal. This cannot be transmitted through some components of the circuit, causing difficulties in reception.

#### **Polar**

Unlike unipolar schemes, the polar methods use both a positive as well as a negative voltage level to represent the bits. So, a positive voltage may represent a 1 and a negative voltage may represent a 0, or the other way round. Because both positive

and negative voltages are present, the average voltage is much lower than in the unipolar case, mitigating the problem of the DC component in the signal. Here, we will look at three popular polar encoding schemes.

Data Encoding and Communication Technique

Non-return to Zero (NRZ) is a polar encoding scheme which uses a positive as well as a negative voltage to represent the bits. A zero voltage will indicate the absence of any communication at the time. Here again there are two variants based on level and inversion. In NRZ-L (for level) encoding, it is the levels themselves that indicate the bits, for example a positive voltage for a 1 and a negative voltage for a 0. On the other hand, in NRZ-I (inversion) encoding, an inversion of the current level indicates a 1, while a continuation of the level indicates a 0.

Regarding synchronisation, NRZ-L is not well placed to handle it if, there is a string of 0's or 1's in the transmission. But NRZ-I is better off here as a 1 is signaled by the inversion of the voltage. So every time a 1 occurs, the voltage is inverted and we know the exact start of the bit, allowing the clock to be synchronised with the transmitter. However, this advantage does not extend to the case where there is a string of 1's. We are still vulnerable to losing synchronisation in such a case.

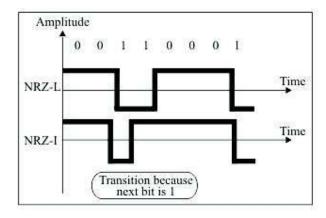


Figure 8: NRZ - L and NRZ-I encoding

Return to Zero (RZ) is a method that allows for synchronisation after each bit. This is achieved by going to the zero level midway through each bit. So a 1 bit could be represented by the positive to zero transition and a 0 bit by a negative to zero transition. At each transition to zero, the clocks of the transmitter and receiver can be synchronised. Of course, the price one has to pay for this is a higher bandwidth requirement.

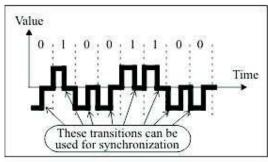


Figure 9: RZ encoding

A third polar method is biphase encoding. While in RZ, the signal goes to zero midway through each bit, in biphase it goes to the opposite polarity midway through each bit. These transitions help in synchronisation, as you may have guessed. Again this has two flavours called Manchester encoding and Differential Manchester



encoding. In the former, there is a transition at the middle of each bit that achieves synchronisation. A 0 is represented by a negative to positive transition while a 1 is represented by the opposite. In the Differential Manchester method, the transition halfway through the bit is used for synchronisation as usual, but a further transition at the beginning of the bit represents the bit itself. There is no transition for a 1 and there is a transition for a 0, so that a 0 is actually represented by two transitions.

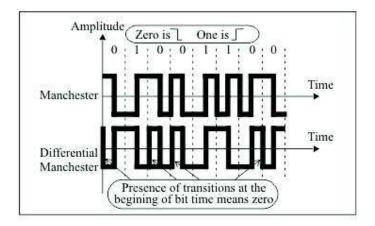


Figure 10: Manchester and differential manchester encoding

## Bipolar

This encoding method uses three levels, with a zero voltage representing a 0 and a 1 being represented by positive and negative voltages respectively. This way the DC component is done away with because, every 1 cancels the DC component introduced by the previous 1. This kind of transmission also ensures that every 1 bit is synchronised. This simplest bipolar method is called Alternate Mark Inversion (AMI). The problem with Bipolar AMI is that synchronisation can be lost in a long string of 0's.

One way of synchronising 0's is to use the High Density Bipolar 3 (HDB3) method. This changes the pattern after every four consecutive 0's. The change is to represent the 0 by a positive or negative signal instead of the zero voltage. How do we prevent this from being wrongly interpreted as a 1? It is done by using the same voltage level as was used for the previous 1. As in bipolar encoding, a real 1 bit is represented by the opposite voltage level every time, there is no possibility of confusing the 0 with a 1. So we deliberately violate the convention to achieve synchronisation, a scheme which works because, the violation can be logically detected and interpreted for synchronisation.

HDB3 changes the pattern of four 0's depending on the number of 1's since the last such substitution and the polarity of the last 1. If the number of 1's since the last substitution is odd, the pattern is violated at the fourth 0. So if the previous 1 was positive, the 0 is also made positive to avoid confusion with a 1. If the number of 1's since the last substitution is even, the first and fourth zeroes have a pattern violation.

Another method of achieving 0 synchronisation is called 8-Zero Substitution (B8ZS). Here, a string of 8 zeroes is encoded depending on the polarity of the previous actual 1 bit that occurred. If the previous 1 was sent as a negative voltage, the zeroes are sent as three 0's followed by a negative, positive, zero, positive, negative voltage sequence. A similar but opposite pattern violation is performed for the case where the last 1 was positive. This way a deliberate pattern violation is used to achieve synchronisation.

## **™** Check Your Progress 4

| Data Encoding and       |
|-------------------------|
| Communication Technique |
|                         |

| 1) | Which type of encoding is most effective at removing the DC component in the signal and why?                           |
|----|--|
|    |  |
|    |  |
|    |  |
| 2) | How does return to zero ensure synchronisation irrespective of the data that is transmitted? What is its disadvantage? |
|    |  |
|    |  |
|    |  |
| 3) | How can we reconstruct the correct signal inspite of pattern violation in bipolar encoding ?                           |
|    |  |
|    |  |
|    |  |

# 3.7 SUMMARY

In this unit, you have seen the need for data encoding and seen that there are four types of data encoding. These arise from the fact that there are 2 source signal types and 2 transmission types. You have seen the different kinds of techniques used for each type of data encoding – analog-to-analog, analog to digital, digital to analog and digital-to-digital. The bandwidth needed, noise tolerance, synchronisation methods and other features of each different technique of encoding have been elaborated upon.

# 3.8 SOLUTIONS/ANSWERS

## **Check Your Progress 1**

- 1) Please see the text (Refer Section 3.3, 3.4, 3.5)
- 2) The spectrum allocation for FM is 88 to 108 MHz, which is 20 MHz. Since a bandwidth of 200 KHz is needed for each station, we can have 100 stations in an area. But as discussed, only alternate stations are allowed in one particular area, to prevent any possibility of interference between them. This means that in any on geographical area, we can have at most 50 radio stations.
- 3) Please see the text (Refer Section 3.5)

#### **Check Your Progress 2**

- 1) Please see the text.
- 2) From Nyqist's theorem, for reconstructing a 1 KHz, signal, we must sample at least 2000 times a second, corresponding to a sampling interval of 500

- microseconds. However, to be safe and to take care of noise and other perturbations, we may like to sample at a somewhat more frequent interval, such as 400 microseconds.
- 3) The voltage interval is 12.8v, that has to be quantised into 64 levels. Each level will therefore be 0.2v. Starting from 0v, we find that –3.6v will correspond to a level of –18, while 0.88v will correspond to a level of +4.

#### **Check Your Progress 3**

- 1) Please see the text.
- 2) A voltage level of 0 can become anything from -0.2v to 0.2v because of noise. The next detectable level will be 0.7v which can become anything from 0.5v to 0.9v because of noise but will still remain detectable as a separate level. Similarly the next levels that will always remain detectable are 1.4v, 2.1v, 2.8v and 3.5v, making for a total of 10 levels from -3.6v to +3.6v.
- 3) We can have 18 levels as there are a total of 360 degrees available for shifting.
- 4) With 10 amplitude levels and 18 phase levels we can have 180 QAM combinations, of which we can then use only 90 for safety.

#### **Check Your Progress 4**

- 1) Bipolar encoding eliminates the DC component entirely because each 0 is represented by a 0 voltage while, a 1 is represented alternately by a positive and a negative voltage. So each 1 cancels out the DC component of the voltage introduced by the previous 1.
- 2) Please see the text.
- 3) Please see the text.

# 3.9 FURTHER READINGS

This unit has tried to cover a vast area in the very little space available. For a more detailed treatment of data encoding, you may refer to the following books:

- 1) Computer Communications and Networking Technologies, by Michael A Gallo and William M Hancock, Thomson Asia, Second Reprint, 2002.
- 2) *Introduction to Data Communications and Networking*, by Behrouz Forouzan, Tata McGraw-Hill, 1999.
- 3) *Networks*, Tirothy S. Ramteke, Second Edition, Pearson Education, New Delhi, 2004.

# UNIT 4 MULTIPLEXING AND SWITCHING

| Struct<br>Nos. | ture                                  | Page |
|----------------|---------------------------------------|------|
| 4.0            | Introduction                          | 87   |
| 4.1            | Objectives                            | 87   |
| 4.2            | Multiplexing                          | 88   |
|                | 4.2.1 Frequency Division Multiplexing |      |
|                | 4.2.2 Time Division Multiplexing      |      |
| 4.3            | Digital Subscriber Lines              | 94   |
| 4.4            | ADSL vs. Cable                        | 95   |
| 4.5            | Switching                             | 95   |
|                | 4.5.1 Circuit Switching               |      |
|                | 4.5.2 Packet Switching                |      |
| 4.6            | Summary                               | 101  |
| 4.7            | Solutions/Answers                     | 102  |
| 4.8            | Further Readings                      | 104  |

# 4.0 INTRODUCTION

The transmission of data over a network, whether wireless or not, requires us to solve the problem of being able to send a large amount of data among different groups of recipients at the same time without the message of one being mixed up with those of the others. For example, think of the thousands of radio or television channels that are being broadcast throughout the world simultaneously, or of the millions of telephone conversations that are taking place every minute of the day. This feat is achieved by *multiplexing* the transmissions in some way. In this unit, we will look at the different methods of multiplexing that are commonly used, frequency division multiplexing and time division multiplexing. Time division multiplexing again can be synchronous or statistical.

There are some differences in the characteristics of voice and data communication. Although, finally everything is really data, these differences dictate the design of the telephone network as well as the techniques of switching. When one wants to transmit data over a telephone line, we have to make some changes to be able to get sufficiently high speeds. We will look at ADSL, a scheme for doing this at rates that can compete on cost and quality with those offered by cable television service providers. We will also look at the advantages and disadvantages of the two methods and of high-speed data access.

When constructing networks of any size, a fundamental requirement is that any two nodes of the network should be able to communicate with each other, for, if they cannot do so, they are not on the same network. This brings up the issue of how to switch the data stream, that is, to make sure it reaches its destination and not some other random location on the network. This unit will, describe the different switching techniques available to make this possible.

# 4.1 **OBJECTIVES**


After going through this unit, you should be able to:

- state what multiplexing and switching mean;
- state how a telephone line can be used for transmitting data using ADSL;
- describe the differences between ADSL and cable television for data access;

- describe the different kinds of multiplexing and switching;
- state the characteristics of Frequency Division Multiplexing;
- describe the features of Time Division Multiplexing, both synchronous and statistical, and
- differentiate between the different kinds of switching.

# 4.2 MULTIPLEXING

If, one wanted to send data between a single source and a single destination, things would be comparatively easy. All it would need is a single channel between the two nodes, of a capacity sufficient to handle the rate of transmission based on Nyqist's theorem and other practical considerations. Granted that there would be no other claimants for the resources, there would be no need for sharing and no contention.



The transmission channel would be available to the sole users in the world at all times, and any frequency which they chose could be theirs. In a broadcasting case, we could have the single source transmitting at any time of its choosing and at any agreed upon frequency.

However, things are not so straightforward in the real world. We have a large number of nodes, each of which may be transmitting or receiving, from or to possibly different nodes each time. These transmissions could be happening at the same moment. So, when we need to transmit data on a large scale, we run into the problem of how to do this simultaneously, because, there can be many different sources and the intended recipients for each source are often different. The transmission resource, that is the available frequencies, is scarce compared to the large number of users. So, there will have to share the resource and consequently, the issue of preventing interference between them will arise.

If, all possible pairs of nodes could be completely connected by channels(?!), we would still not have a problem. But that is obviously out of the question, given the very large number of possible source and destination nodes. There would be over a billion telephones in the world today, for instance.

This problem is solved by performing what is called *multiplexing*. It can be done by sharing the available frequency band or by dividing up the time between the different transmissions. The former is called Frequency Division Multiplexing (FDM) while the other scheme is Time Division Multiplexing (TDM).

Another reason for multiplexing is that it is more economical to transmit data at a higher rate as the relative cost of the equipment is lower. But at the same time, most applications do not require the high data rates that are technologically possible. This is an added inducement to multiplex the data so that, the effective cost can be brought down further by sharing across many different, independent transmissions.

In this context, a multiplexer is a device that can accept *n* different inputs and send out 1 single output. This output can be transmitted over a link or medium to its destination, where to be useful, the original inputs have to be recovered. This is done

by a demultiplexer. We need to realise that for this kind of scheme to work, the creation of the composite signal by the multiplexer needs to be such that, the original component signals can be separated at the receiving end – otherwise we would end up with just a lot of noise!

When we transmit data over a cable, we are really setting up a different medium. We can transmit data over different cables at the same frequency at the same time without interference because the media or links are different. Even in radio transmission, where the medium is space and hence is a single medium available to all transmissions, geographical distance can in many cases give rise to different links. A low power medium wave transmission happening in India can be done simultaneously with a similar transmission in Europe without interference or the need for any special precautions. However, throughout the rest of the unit, when we talk of multiplexing, we are referring to the simultaneous transmission of data over the same medium or link.

#### 4.2.1 Frequency Division Multiplexing

Suppose, it is human voice that has to be transmitted, over a telephone. This has frequencies that are mostly within the range of 300 Hz to 3400 Hz. We can modulate this on a bearer or carrier channel, such as one at 300 kHz. Another transmission that has to be made can be modulated to a different frequency, such as, 304 kHz, and yet another transmission could be made simultaneously at 308 kHz. We are thus, dividing up the channel from 300 kHz up to 312 kHz into different frequencies for sending data. This is Frequency Division Multiplexing (FDM) because all the different transmissions are happening at the same time – it is only the frequencies that are divided up.

The composite signal to be transmitted over the medium of our choice is obtained by summing up the different signals to be multiplexed (*Figure1*). The transmission is received at the other end, the destination and there, it has to be separated into its original components, by demultiplexing. In practice, a scheme like this could result in interference or cross talk between adjacent channels because the bandpass filters that are used to constrain the original data between the agreed upon frequencies (300 to 3400 kHz) are not sharp. To minimise this, there are guard bands, or unused portions of the spectrum between every two channels.

Another possible cause of interference could arise because of the fact that the equipment, such as amplifiers used to increase the strength of the signal, may not behave linearly over the entire set of frequencies that we seek to transmit. Then, the output can contain frequencies that are the sum or difference of the frequencies used by the input. This produces what is called intermodulation noise.

In this kind of division, it should be realised that the actual modulation technique used is not of consequence. So, one could use analog modulation (AM) or Frequency Modulation (FM). Also the composite signal that we have produced could again be modulated over a different frequency altogether. For example, the three voice channels, that have been modulated for commercial broadcast radio to produce a spectrum from 300 kHz to 312 kHz could be modulated onto a 2 GHz satellite channel for long distance transmission to the other side of the earth. This second modulation could use a technique different from the first one. The only thing that needs to be take care of is, that the recovery of the original signals have to be done in the reverse order, complementing the method used for producing the composite signal.

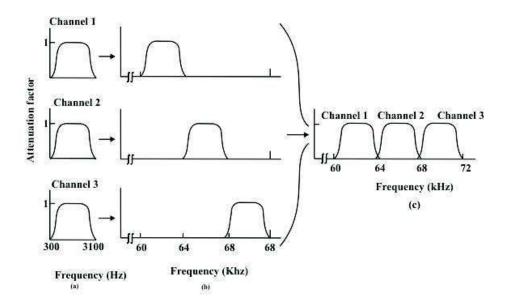


Figure 1: Frequency division multiplexing

[Source: Computer Network by A.S. Tanenbaum]

The International Telecommunication Union (ITU) has standardised a hierarchy of schemes that utilise FDM for the transmission of voice and video signals. To begin with, a cluster of 12 voice channels, each of 4 kHz is combined to produce a signal of bandwidth 48 kHz that is then, modulated and transmitted over the 60 to 108 kHz band. This is called a group.

The next level of the hierarchy is the supergroup, where 5 such groups are combined to use 240 kHz of bandwidth, occupying from 312 to 552 kHz. The next level is the mastergroup that consists of 5 such supergroups. This uses 1232 kHz from 812 to 2044 kHz. Again, 3 such supergroups form a supermaster group that contains 3.872 MHz from 8.516 to 12.388 MHz. The United States uses a similar hierarchy as decided by AT&T (the telecommunications company) that is not entirely identical to the ITU standard.

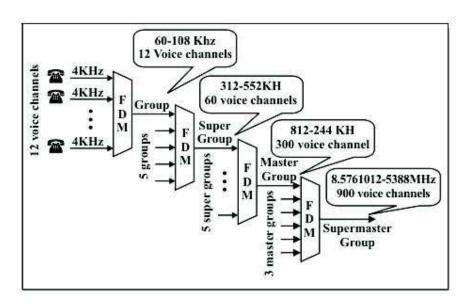


Figure 2: Analog hierarchy

We, thus, see that the original signal could find itself subjected to modulation several times, each of which may be of different kinds, before it is finally transmitted. This

raises the possibility of interference and noise, but, with the very good equipment available today, this need not be a matter of concern.

FDM has the disadvantage of not being entirely efficient if the transmissions that are multiplexed together have periods of silence or no data. Since, a frequency band is dedicated to each data source, any such periods are simply not utilised.

## 4.2.2 Time Division Multiplexing

Another multiplexing scheme is to use the entire bandwidth for each channel but to divide it into different time slots, as shown below.

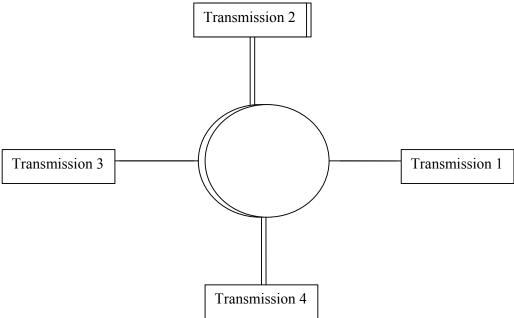


Figure 3: Time division multiplexing

In this case, we have four different transmissions occurring with each being ½ of the time slice. The slice should be small enough so that the slicing is not apparent to the application. So, for a voice transmission a cycle of 100ms could be sufficient as we would not be able to detect the fact that there are delays. In that case, each transmission could be allotted a slice of 25ms.

At the receiving end, the transmission has to be reconstructed by dividing up the cycle into the different slices, taking into account the transmission delays. This synchronisation is essential, for if the transmission delay is, say 40ms, then the first transmission would start reaching 40 ms later, and would extend to 65ms. If, we interpreted it to be from 0 to 25 ms, there would be complete loss of the original transmission. This interleaving of the signal could be at any level starting from that of a bit or a byte or bigger.

# **Synchronous Time Division Multiplexing**

In this kind of Time Division Multiplexing (TDM), the simpler situation is where the time slots are reserved for each transmission, irrespective of whether it has any data to transmit or not. Therefore, this method can be inefficient because many time slots may have only silence. But it is a simpler method to implement because the act of multiplexing and demultiplexing is easier. This kind of TDM is known as Synchronous TDM.

Here, we usually transmit digital signals, although the actual transmission may be digital or analog. In the latter case, the composite signal has to be converted into analog data by passing it through a modem. Here, the data rate that the link can support has to at least equal the sum of the data rates required for each transmission.

So, if one has to transmit four streams of data at 2400 bps each, we would need a link that can support at least 9600 bps. For each data stream, we would typically have a small, say 1 character buffer, that would take care of any data flow issues from the source.

Although, the transmission has to be synchronous, that is not the reason the scheme is called Synchronous TDM. It is because of the fact that each data source is given fixed slots or time slices. We can also support data sources with differing data rates. This could be done by assigning fewer slots to slower sources and more slots to the faster ones. Here, a complete cycle of time slots is called a frame. At the receiving end, the frame is decomposed into the constituent data streams by sending the data in each time slot to the appropriate buffer. The sequence of time slots allotted to a single data source makes up a transmission channel.

We have already seen that the transmission in TDM must be synchronous because otherwise, all the data would be garbled and lost. How is this achieved? Because this unit is concerned with the physical layer and not the data link layer, we will not concern ourselves with the problem of flow control or error correction or control. But even at the physical layer, we have to ensure that each frame is synchronised to maintain the integrity of the transmission.

One scheme to attain this is to add an extra bit of data to each frame. In succeeding frames, this extra bit forms a fixed pattern that is highly unlikely to occur naturally in the data. The receiver can then use this fact to synchronise the frames. Suppose each frame has n bits. Starting from anywhere, the receiver compares bit number 1, n+1, 2n+1 and so on. If the fixed data pattern is found, the frames are synchronised. Otherwise, the receiver commences to check bit number 2, n+2, 2n+2, ... until it can determine whether the frames are in synchronization or otherwise. This continues till, it is able to synchronise the frames and can then start receiving the data from the various channels.

Even after this, it is important to continue to monitor the fixed pattern to make sure that the synchronisation remains intact. If it is lost, the routine of re-establishing it needs to be repeated as before.

The second problem in synchronising the transmission is the fact that there can be some variations between the different clock pulses from the different input streams. To take care of this, we can use the technique of pulse stuffing. Here, the multiplexed signal is of a rate that is a bit higher than that of the sum of the individual inputs. The input data is stuffed with extra pulses as appropriate by the multiplexer at fixed locations in the frame. This is needed so that the demultiplexer at the other, receiving, end can identify and remove these extra pulses. All the input data streams are thus synchronised with the single local, multiplexer clock.

## **Statistical Time Division Multiplexing**

We have seen that synchronous TDM can be quite wasteful. For example, in a voice transmission, much of the bandwidth can be wasted because there are typically many periods of silence in a human conversation. Another example, could be, that of a time sharing system where many terminals are connected to a computer through the network. Here too, many of the time slots will not be used because there is no activity at the terminal. In spite of being comparatively simpler, synchronous TDM is therefore, often not an attractive option.

To take care of this problem, we can use statistical TDM. This is a method where there are more devices than the number of time slots available. Each input data stream has a buffer associated with it. The multiplexer looks at the buffer of each device that provides the input data and checks to see if it has enough to fill a frame. If, there are enough, the multiplexer sends the frame. Otherwise, it goes to the next

device in line and checks its input buffer. This cycle is continued indefinitely. At the receiving end the demultiplexer decomposes the signal into the different data streams and sends them to the corresponding output line.

The multiplexer data rate is not higher than that of the sum of all the input devices connected to it. So statistical, TDM can make do with a lower transmission rate than needed by synchronous TDM, at the cost of more complexity. The other way in which this is of benefit is, by the ability to support higher throughput for the same available data rate of the multiplexer. This capability is easily realised during the normal, expected data transmission periods when the amount of data that the different input devices have available for transmission is, in fact, lower than the capacity of the multiplexing device. But the same attribute becomes a disadvantage during peak loads, where all or many of the devices may have data to transmit for a short time. In such a situation, the slack that was available to us for more efficient transmission is no longer present. We will see later how to handle peak load situations in statistical TDM.

In this kind of scheme it is not known to us which input device will have data to send at a given time. So we cannot use a round robin positional scheme that was possible in synchronous TDM. Each frame has to be accompanied by information that will tell the demultiplexer which input device the frame belongs to, so that it can be delivered to the appropriate destination. This is the overhead of statistical TDM, besides increased complexity of equipment.

If, we are sending input data from only one source at a time, the structure of a frame would need to have an address field for the source followed by the data for it. This is really the statistical TDM data frame. It would form the data part of a larger, enclosing HDLC frame if we are using HDLC as the transmission protocol. This frame would itself have various other fields that we will not discuss here.

Such a scheme is also not as efficient as we can make it. This is because the quantum of data available from the source, in that time slot, may not be enough to fill the TDM sub frame. So, while it may be an adequate method if the load is not heavy, we also need to think of a method that can utilise available resources better.

The way to do this would be, to have more than one input data source transmit in a single TDM frame. We would then need to have a more complex structure for the frame whereby, we would have to specify the different input devices in the frame followed by the length of the data field. More sophisticated approaches could be used, in order to optimise the number of bits, we need to encode all this addressing and data information.

For peak loads, there is need for some kind of buffering mechanism, so that, whenever there is excess input from the data sources that the multiplexer cannot immediately handle, it is stored until it can be sent. The size of the buffer needed will increase as the transmission capacity of the multiplexer decreases, as it will become more likely that an input data stream will not be transmitted immediately. It will also depend on the average data rate of the input devices taken together. No matter what the buffer size we choose, there is always a non-zero probability that the buffer itself will overflow, leading to loss of data. If, the average data rate of all devices is close to the peak rate, then we are approaching a situation of synchronous TDM where we are not able to take advantage of periods of silence that is the basis of statistical TDM.

# 4.3 DIGITAL SUBSCRIBER LINES

Digital Subscriber Lines are an example of multiplexing in action. They are really telephone lines that can support much higher data rates than are possible with an ordinary telephone connection. The concept came up in response to the high data

rates of more than 10 Mbps offered by cable television providers. Compared to those rates, the 56 Kbps possible over a telephone dial up connection was a miserable offering.

The 56 Kbps rate is really an artificial barrier arising from the fact that voice telephone line standards limited the bandwidth to about 3.1 KHz to take advantage of the normal range of the human voice in conversation. Nyquist's theorem and the limitations of line quality ensured that we ended up with that rate. Once the 3.1 KHz limit is removed, the telephone line can support much higher data speeds.

Out of the several different technical solutions that came about, the ADSL (Asymmetric DSL) technology has proved to be the most popular. Asymmetric comes from the fact that the data rates in the two directions are different. The approach is to divide the 1.1 MHz bandwidth available over the Cat-3 telephone cables into 256 channels. Of these channels, 0 is used for normal voice communication. The next 5 channels are not used to ensure separation and non-interference between data and voice transmissions. The next 2 channels are used for upstream and downstream control. The remaining 248 channels are available for data transmission.

Like in voice circuits, it would have been possible to use half the channels for communication in each direction. But, statistics show that most users download much more data than they upload. So usually 32 channels are dedicated to uploading, that is, transferring data from the users to the provider and the remaining 216 channels are used for downloading data to the users. This typically translates into 512 Kbps to 1 Mbps download and 64 Kbps to 256 Kbps upload data rates. This then, is the asymmetric aspect of the DSL line.

A problem with ADSL is that the physics of the local loop is such that, the speed at which it can be driven depends heavily on the distance between the subscriber's premises and the provider's nearest termination point. The speed falls sharply with distance and so, distance can become a limiting factor in being able to offer competitive speed compared to that of the cable television providers.

However, ADSL is comparatively simple for a service provider to offer, given an existing telephone network, and does not require much change to its already available equipment. It necessitates two modifications, one each, at the subscriber end and at the end office. On the user's premises, a Network Interface Device has to be installed that incorporates a filter. This is called a splitter and it sends the non-voice portion of the signal to an ADSL modem. The signal from the computer has to be sent to the ADSL modem at high speed, usually done these days by connecting them over a USB port.

At the provider's end office, the signal from the users is recovered and converted into packets that are then sent to the Internet Service Provider, which may be the telephone company itself.

# 4.4 ADSL Vs. CABLE

At first glance, a comparison between ADSL and cable may seem like a no contest. Cable television, sent over coaxial cables, has a bandwidth that is potentially hundreds of times that of the twisted pair Cat-3 cable used for telephone connections. But, as we go along, it turns out that there are considerations in favour of both sides.

First, there are specific assurances regarding bandwidth that we get from telephone companies who provide ADSL connectivity. An ADSL link is a dedicated connection that is always available to the user, unlike television cable that is shared by scores or even hundreds of subscribers in the immediate neighbourhood. So the kind of speeds that we can get over cable can vary from one moment to the next, depending on the number of users that are working at the time.

There are security risks associated with the fact that cable is shared. Potentially other users can always tap in and read (even change) what you are sending or receiving. The problem does not exist on ADSL, because, each channel is separate and dedicated to the specific user. Though, cable traffic is usually encrypted by the provider, this situation is worse than ADSL where other users just do not get your traffic at all. Also because the channel is dedicated to you, the total number of users does not have any effect on your access speeds as there is no contention with other users.

## 4.5 SWITCHING

There are many potential sources of data in the world and likewise, many potential recipients. Just think of the number of people who may like to reach one another over the telephone. How can one ensure that every data source is able to connect to the recipient? Clearly one cannot have a physical link between every pair of devices that might want to communicate! Therefore, we need a mechanism, to be able to connect together devices that, need to transfer data between them. This is the problem of switching.

There are two basic approaches to switching. In circuit switching, we create a circuit or link between devices, for the duration of time for which they wish to communicate. This requires a mechanism for, the initiating device to choose the device that it wants to send data to. All devices must also have an identifying, unique address that can be used to set up the circuit. Then, the transmission occurs, and when it is over, the circuit is dismantled so that the same physical resources can be used for another transmission.

The packet switching approach can be used when we are using datagrams or packets to transmit data over the channel. Each datagram is a self-contained unit that includes within itself the needed addressing information. The datagrams can arrive at the destination by any route and may not come in sequence.

#### 4.5.1 Circuit Switching

As mentioned already, in circuit switching, we create a link or circuit between the devices that need to communicate, for the duration of the transmission only. It entails setting up the circuit, doing the actual transmission that can be simplex, half duplex or full duplex, and then dismantling the circuit for use by another pair of devices. An example is shown in the *Figure 4* where there are 7 devices. These are divided into two groups of 3 on the left and 4 on the right. To ensure complete connectivity between them at all times, we would need 12 physical links. But, if connectivity is not required at all times, we can achieve connectivity between any of the devices by grouping them together and using switches to achieve temporary links.

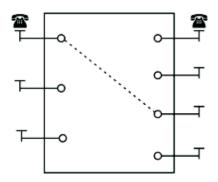


Figure 4: Circuit switching

For example, we can have 7 links that connect the devices A, B and C on the left to the switch. The other devices D, E, F and G on the right are also connected to the same switch. The switch can connect any two devices together using only these seven links as desired.

The capacity of the switch is determined by the number of circuits that it can support at any given time. In the above example, we have seen a switch with 1 input and 1 output. If devices C and E are communicating with each other, the others cannot communicate at the same time, although, there are available links from them to the switch. A circuit switch is really a device that has n inputs and m outputs (n need not be equal to m).

There are two main approaches to circuit switching, called space division or time division switches. Space division switches are so called because the possible circuit paths are separated from one another in space. The old, and now obsolete, crossbar telephone exchanges are an example of space division switching. The technique can be used for both digital or analog systems. There were other designs of such switching but the only one that went into large scale use was the crossbar. Because of the way it is constructed, such switching does not have any delays. Once the path is established, transmission occurs continuously at the rate that the channel can support.

In essence, a crossbar connects p inputs to q outputs. Each such connection is actually performed by connecting the input to the output using some switching technology such as, a transistor based electronic switch or an electromechanical relay. This requires a large number of possible connections, called crosspoints. For a 10,000 line telephone exchange, it would mean that, each of the 10,000 possible inputs be able to connect to any of the 10,000 possible outputs, requiring a total of 100,000,000 crosspoints. As this is clearly impractical, the pure crossbar design is not usable on a commercial scale. Moreover, there are inherent inefficiencies in this design as statistically, only a small fraction of these crosspoints are ever in use simultaneously.

The way to get around this limitation is, to split the switch into different stages. If we consider a 36 line exchange where each of 36 inputs needs to be connected to 36 outputs, we can do so in, say, 3 stages. The first stage could have 3 switches, each with 12 inputs and 2 outputs to the two second stage switches. These intermediate switches could each have 3 inputs from the 3 first stage switches and 3 outputs to the 3 third stage switches. The last stage of the switches would then have 2 inputs from the 2 second stage switches and 12 outputs, each to 12 of the 36 devices. It is thus, possible for each of the 36 inputs to connect to each of the 36 outputs as required, using only 72 + 18 + 72 = 162 crosspoints, instead of the 1296 crosspoints that would have been required without the multistage design. The following *Figure 5* shows the multistage switch.

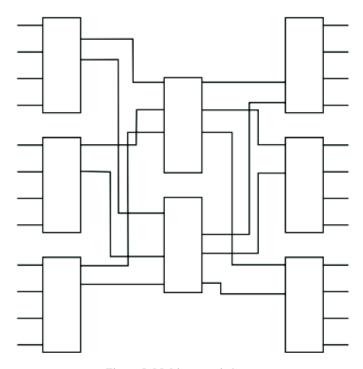


Figure 5: Multistage switch

If, we use a single stage switch, we will always be able to connect each device to any other device that is not already busy. This is because all the paths are independent and do not overlap. What this means is that, we will never be starved of circuits and will never suffer the problem of blocking. For multistage switching, the reduction in the number of crosspoints required comes at the cost of possible blocking. This happens when there is no available path from a device, to another free device, that we desire to connect to. In the *Figure 5*, if we have a switch in the first stage that is already serving 2 input devices, then there are no free outputs from that stage. We cannot therefore service more than 2 input devices connected to one switch at a time and the 3<sup>rd</sup> device would not be able to connect anywhere, getting a busy signal.

It is possible to minimise the possibility of blocking by using stochastic analysis to find the least number of independent paths that we should provide for. However, we will not go into such an analysis in this unit. But, we can see that the limiting factor in the *Figure 5* is the middle stage where there are only 3 inputs and 2 outputs. This is the point at which congestion is most likely to occur. You too may have experienced blocking when trying to make a telephone call and found that you got an exchange busy tone, indicating that it was not the number you called but the exchange (switch) itself that was congested. Such a problem is, most likely to occur during periods of heavy activity such as at midnight on a new year's day, when many people might be trying to call one another to exchange greetings.

Another advantage of multistage switching is that, there are many paths that can be used to connect the input and output devices. So, in the above case, if there is a failure in one of the connections in the first stage switch, two input devices can still connect to it. In the case of single stage switching, that would have meant that we could not set up a circuit between those devices.

Let us, now look at another method of switching that uses time slots rather than spatial separation. You have already seen how synchronous TDM involves transmission between input and output devices using fixed time slots dedicated to each channel. But, that is not switching because the input-output device combinations are fixed. So, if we have three devices A, B and C transmitting and three devices D, E and F that are receiving the respective transmissions, there will be no way to change the circuit path so that A can transmit to E or F.

To achieve switching, we use a device called a Time Slot Interchange (TSI). The principle of such a device is simple. Based on the desired paths that we want to set up, the TSI changes the input ordering in the data streams. So, if the demultiplexer is sending the outputs to D, E and F in order, and if we want that A send data to E instead of F, and that B send data to F rather than E, then the TSI will change the input ordering of the time slots from A, B, C to C, A, B. The demultiplexer will not be aware of this and will continue to send the output the same way as before. The result will be, that our desired switching will be accomplished. However, unlike space division switching, our output will be subject to delays because we might have to wait for the input from the right device before it can be transmitted. This is unlike space division switching where the data can be sent in a steady stream.

How does the TSI work? It consists of a control unit that does the actual reordering of the input. For this, it has to first, buffer the input it gets, in the order it gets it. This would be stored in some kind of volatile memory. The control unit then sends out the data from the buffer in the order in which it is desired. Usually the size of each buffer would be that of the data that the input generates in one time slice.

We do not have to confine ourselves to a single type of switch. There can be switches that are based on a combination of both kinds of switching. For example, we could have a multistage switch where, some of the stages are space division switches whiles others are time division switches. With such an approach, we can try to optimise the design by reducing the need for crosspoints while keeping the delays in the whole system to a minimum. For example, we could have a TST three stage switch where the first and last stages use time division switching while the middle stage uses crosspoints.

Circuit switching is useful for voice based communication because of the characteristics of the data transfer. Although, a voice conversation tends to have periods of silence in between, those periods are usually brief. The rest of the time there is data available for transmission. Secondly, in such communication, we cannot tolerate delays of more than about 100 ms as that becomes perceptible to the human ear and is quite annoying to the speaker and listener.

Again, because it is human beings that are present at both ends, the rate at which data is generated at both ends is similar, even if one person talks a bit faster than the other! Also, the other human can usually understand what is being said even if he cannot at the same rate. And if really required, one can communicate to the other to speak slower or louder. But, when we are dealing with data generating devices, there can always be a mismatch between the rate at which one device generates data and at which the other device can assimilate it. Moreover, there can be long periods when there is no data generated at all for transmission. In such a situation, circuit switching will not be a suitable method and we have to look at something that takes care of the characteristics of data communication between devices.

#### 4.5.2 Packet Switching

Packet switching *Figure* 6 is a method of addressing these problems of circuit switching. It will be further elaborated in the Block 3. It is based on the concept of data packets, called datagrams. These are self-contained units that include the address of the destination, the actual data and other control information. It takes care of the sporadic nature of data communication where transmissions tend to occur in bursts. So, we do not waste transmission capacity by keeping circuits connected but, idle while there are periods of silence. Even if we multiplex the channel, we cannot cater to a situation where all or most of the devices are silent, leading to underutilisation of the capacity. The concept is so interesting that it is worth devoting few words to it. Whenever a user wants to sends a packet to another user, s/he transmit to the nearest router either on its own LAN or over a point-to-point link to the caviar. The packet is stored for verification and then transmitted further to the

next router along in way until it reaches for fixed destination machine. This mechanism is called packet switching.

Some of the other limitations of circuit switching for sending data are:

- It is not possible to prioritise a transmission. In a circuit switching mechanism, all the data will be sent in the order in which it is generated, irrespective of its importance or urgency. This is fine for voice transmission, in which we want to hear things in the sequence in which they are spoken at the other end, but this does not work for data where, some packets may be more important than others and the order of delivery does not have to be sequential.
- A circuit, once set up, defines the route that will be taken by the data until it is dismantled and set up again. Sometimes, that circuit may have been set up via a less advantageous set of links because that was the best route available at the time it was set up (best could be in terms of channel capacity, delays, line quality or other parameters). Now, subsequently, even if another, better route is released by other devices, we cannot change over to this better route without disconnecting the previous circuit and forcing the participants to set up the call again.

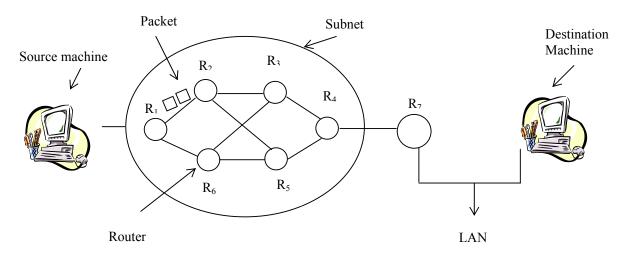


Figure 6: Packet switching

A datagram can contain different lengths of data. Besides, it would have control information such as the address to which it needs to be sent, the address from which it has originated, its type and priority and so on. From its source node it is sent to a neighbouring node, depending on its final destination. The format of the datagram depends on the protocol that is used and it is the responsibility of each node to route the datagram onto the next node that would take it to its destination. There can be several routes possible and each node would make the decision based on availability, traffic conditions, channel quality and so on.

Although datagram length can vary, long messages would have to be split into more than one datagram as the network protocol would have a limit on the maximum size of a datagram. Because each datagram is routed independently, the different datagrams that make up a message may arrive out of sequence at the destination, as different routes may take different times to traverse. In communication protocols it is the responsibility of the network layer to make sure that routing gets done, while it is the transport layer that ensures that the message at the receiving end is in the proper sequence.

Again, the physical link between two nodes can be of any type and is of no consequence at the higher layers of the communication protocol in use. That link itself may be multiplexed and may carry several transmissions simultaneously, for the

same or different pairs of source and destination nodes. Moreover, these transmissions may be happening in different directions.

This was the datagram approach to packet switching. It is also possible to look at packet switching in terms of a virtual circuit, which again has two different approaches that are in current practice.

In a virtual circuit, when the first datagram is sent out, we decide on the route that will be followed, and subsequent datagrams continue to follow that route. So, it is like circuit switching to a large extent. But, in circuit switching the link is dedicated to the pair of nodes and there is no multiplexing that happens at the level of individual switches. In virtual circuits there can be multiplexing at the switches as well.

Permanent virtual circuits are dedicated channels set up for communication between a pre-decided pair of nodes. It is thus, akin to a leased line where the routing is decided once the virtual circuit is set up. There is no call set up required because, the link is always available to the pair of nodes. On the other hand, we can also have switched virtual circuits where the routing is decided every time a pair of nodes want to communicate. This is like a dial-up connection where any two pairs of nodes can communicate by setting up a call that is terminated when the conversation is over.

Another difference between circuit and virtual circuit switching has to do with reliability and failure recovery. In circuit switching, if the link breaks because of a failure in any portion, the call is terminated. It would have to be established again for the conversation to continue. In virtual circuits, although the route is decided at the beginning when the session is set up, in case of failure of any part of the route, an alternate route will be agreed upon and set up.

Also, in circuit switching there is no possibility of failure due to congestion after the link is set up. In virtual circuits, congestion can occur even later because of multiplexing at the switches.

#### **Check Your Progress 1**

| 1)  | What is the problem in offering high speed ADSL connection to all subscribers that have a telephone?          |
|-----|---|
| 2)  | Which method is more efficient in terms of capacity utilisation?  |
| 3)  | Do you think voice transmission could be done using packet switching?   |
| 4)  | What sort of problems could arise in trying to completely connect all data transmission devices in the world? |
| 5)  | What are some of the requirements for a multiplexed signal to be useful?                                      |
| 5)  | Is multiplexing needed for transmissions over different links?  |
| 7)  | What are the problems that can occur in Frequency Division Multiplexing?                                      |
| 3)  | What is the method that FDM uses to mix signals that can be recovered later?                                  |
| 9)  | List the considerations that make FDM useful and possible.  |
| 10) | What are the considerations in choosing the length of the time slice for Time Division Multiplexing?          |
|     |   |

| What are the problems in synchronising the transmission and how can they be taken care of?                                       |
|--|
| What are the inefficiencies inherent in synchronous Time Division Multiplexing and how does statistical TDM seek to reduce them? |
| What price do we have to pay for increased efficiency in statistical TDM?  |
| What would happen if the load from the input devices exceeds the capacity of the multiplexer?                                    |
| How does ADSL enable high speed data access although voice lines are so slow?  |
| Why is ADSL called asymmetric and why is it not kept symmetric?  |
| How can a cable provider improve quality of service after the number of users becomes larger?                                    |
| Why is ADSL more secure than cable for data communication?   |
| Why is switching necessary?  |
| What is circuit switching?   |
| What is packet switching? How does it differ from circuit switching?   |
| What is meant by multistage switching? Is the capacity of such a switch limited?   |
| List five important features of space division switching.  |
| What are the characteristics of time division switching?   |
| How can we combine space and time division switching? What are the advantages of such an approach?                               |
| Why is circuit switching suitable for voice transmission?  |
| What are the features needed for a switching mechanism that transmits data?  |
| What is a virtual circuit? How does it differ from circuit switching?  |

# 4.6 SUMMARY

Multiplexing is needed in communication networks because of the scarcity of bandwidth compared to the large number of users. Frequency Division and Time Division Multiplexing are the two ways of multiplexing, of which Time Division multiplexing can be synchronous or asynchronous. The asynchronous method is more complex but more efficient for data transmission.

ADSL is a means of utilising the existing capacity of the local loop in the telephone system for providing subscribers with high speed data access. Such access is also

provided by companies over the cable television network. ADSL is more secure and predictable in terms of service quality, while cable does not have the limitations of distance from the end office that ADSL has.

Switching is necessary to connect two nodes or devices over the network that intend to communicate for a limited duration. Circuit switching is more suitable for voice communication, and can be done using space division, time division or a combination of both kinds of switches. Multistage switching is needed to optimise the number of crosspoints needed. Packet switching is used for data transmission and allows for prioritising of data packets, alternate routing as needed and is also more efficient for the bursty traffic pattern of data communication. Datagrams are self contained packets of data that are routed by the intermediate nodes of the network. Switched or permanent virtual circuits can also be utilised, where the route is established at the beginning of the session, but can be altered without disrupting the channel in case of failure of any part of the route.

# 4.7 SOLUTIONS/ANSWERS

#### **Check Your Progress 1**

- First, the subscriber may be located too far from the provider's end office for the local loop to give sufficiently high data speeds to be competitive with cable. Secondly, providing a connection means a visit to the subscriber's premises to install the Network Interface Device, splitter and ADSL modem.
- 2) Cable is more efficient because bandwidth is not dedicated to a user. In ADSL, a user's dedicated bandwidth remains unutilised if s/he is not active at any given time.
- 3) Packet switching can be and is used for voice transmission, such as in the highly popular Voice Over Internet Protocol (VOIP) used for Internet Telephony. It is cheaper than voice transmission though there is some deterioration in voice quality.
- 4) There are a very large number of such transmission devices. For example, there may be over a billion telephones in the world today. The number of data channels to always connect even one phone to another billion phones alone would be one billion. It is therefore, not practically possible to have so many distinct data channels.
- Multiplexing is the creation of a composite signal from various constituent signals at the transmitting end. There must be a way to separate the different signals at the receiving end, otherwise all we would have at that end would be a lot of noise. Secondly, there must be a way to send each separate signal to the proper device for which it was meant, otherwise we may have a useful signal but delivered to the wrong device.
- 6) Multiplexing is needed because we want to send several signals over the same link. If there are different physical links available, then no multiplexing is needed because the transmissions would be independent and would not interfere with each other.
- One problem with FDM is that we have to use filters to constrain the constituent signals between the agreed upon frequencies. For example, in telephone transmission, the voice signal is filtered to lie between 300 and 3400 Hz. Other frequency components in the voice, such as very low or high frequencies, are therefore not transmitted. This filtering is not very sharp and can result in cross talk between adjacent channels.
  - Secondly, the amplifiers and other equipment used may not behave linearly over the whole frequency range. This gives rise to other frequency components that were not present in the original signal, giving rise to distortion of the original signal. This is called intermodulation noise.
- 8) FDM uses different methods to mix signals. We can use analogue modulation (AM) where the carrier amplitude is modulated with the signal, or frequency modulation (FM) where the carrier frequency is modulated with the signal.
- 9) FDM is useful because we are able to make use of the available spectrum more efficiently. We can use different carrier frequencies to send different signals at the same time.
- 10) The length of the time slice must be such that the application that is using the signal is not able to perceive the slicing, or it does not matter to the application. For example, in

- voice transmission, a delay of 300 ms is quite apparent to a human speaker. So the time slice must be much smaller than this.
- 11) The multiplexed signal consists of signals from the different data sources, each of which has a fixed time slot. To send the received data to the correct data source, the demultiplexer must be in synchronization with the multiplexer, else the data would go to the wrong destination. That is why synchronous TDM is so called.
- 12) One problem is that the clocks of the different input signals may not be in synchronization. So we use a multiplexer clock to do the synchronization. The multiplexed signal is sent at a rate slightly higher than the sum of the input signals. At fixed points in the transmitted data frames, we stuff the frame with synchronization pulses that can be identified and removed by the demultiplexer at the receiving end.
  - Secondly, the start of the frame from different sources needs to be known. This is done by adding extra bits to the frames that form a fixed pattern unlikely to occur in an actual transmission. This pattern is used by the demultiplexer to establish synchronization with the input from the multiplexer.
- In synchronous TDM, every data source has a fixed time slot, irrespective of whether it has any data transmit during that slot or not. For example, a human conversation is often interspersed with periods of silence. Such slots are really wasted because no useful data is sent in that slot. Statistical TDM seeks to improve efficiency by ensuring that every slot is utilized. If a particular data source has no data to send, then the slot is given over to another data source. To make it even more efficient, if a particular data source does not have enough data to utilize the whole time slot, then within one time slot we send data from more than one data source.
- 14) Statistical TDM is a more complex scheme to implement and requires more complex equipment at both the multiplexing and demultiplexing ends. But this is well worth the increased throughput one gets.
- 15) Such a situation would cause loss of data. To prevent such loss, we have a buffer in the multiplexer to store such excess data. The size of the buffer depends on how often we expect such a situation to occur and for how long it would persist. If we have a situation where the peak load from the devices is close to the average load, then there is little advantage to using statistical TDM and a simpler synchronous TDM approach would be adequate. This is because the basic premise of statistical TDM that each data source has periods of silence.
- Voice lines are not slow because of any inherent limitation. They are kept artificially slow because that is the nature of voice transmission, given the 3400 Hz upper limit on most normal voice conversations. They therefore do not need to cater to higher frequencies and do not need a higher transmission rate. Once we remove these constraints for data transmission, high speed data access is possible over the same lines.
- 17) ADSL is called asymmetric because the data transmission rate available to the user for uploads and downloads are different. Of the 248 channels available for the transmission, 32 are dedicated to uploads and 216 to downloading. This is done because in practice most users download much more than they upload. So it improves the performance of the line. However, it could have easily been kept symmetric.
- 18) The option he would have would be to install an additional cable to serve some of the users.
- 19) ADSL is more secure because each link is physically independent of that used by other users. In cable, all users share the same channel with the potential to tap into the data of other users. However, the problem can be mitigated by encrypting all traffic.
- 20) Switching is necessary because we cannot completely connect all the devices that may have a need to communicate, as that number is very large. So whenever needed, we have to use some mechanism to connect them together.
- 21) In circuit switching, a dedicated path or channel is set up between the devices that want to communicate. This requires each device to have an identifying address by means of which the initiating device can request for a channel. For the duration of the conversation, the channel is dedicated to the two devices. Once the conversation is over, the circuit is dismantled and the same physical resources can be used for another pair of devices that might want to communicate.
- 22) In packet switching there is no dedicated channel set up for the two devices to communicate. The transmitting device merely sends out the message over the transmission medium that can be accessed by all devices. The intended recipient finds out that the message is meant for it from the address and retrieves the message.

- 23) In multistage switching, there are different points at which switching is done to set up the circuit, rather than having a direct path between each device to be connected. The capacity of such a switch is limited by the number of available paths at a time. So the reduction in the number of crosspoints is at the cost of possible blocking.
- 24) In space division switching
  - a. The different paths are separated in space
  - b. There are no delays during the transmission
  - c. There is a set up time while the circuit is established
  - d. During periods of silence, resources are wasted
  - e. The number of crosspoints limits the capacity of the switch
- 25) Here switching is achieved by multiplexing the transmission from different sources and demultiplexing them at the output stage. There can be delays while the switching is being done. Flow control is also more of a problem here.
- 26) Different stages of a multistage switch can use different approaches. The time division switches help reduce the number of crosspoints while the space division switches reduce the delays. By using a combination of both one can try to optimize the number of crosspoints without having too much delay.
- 27) Voice conversations do not have many periods of silence, so that the circuit is used effectively. Humans can communicate with each other and ensure that flow control is done, say, if somebody is talking too fast for the other to understand. Moreover, in voice conversations we cannot tolerate delays and so circuit switching is the better choice as it gives us a dedicated channel.
- 28) For transmitting data, we need a switching mechanism that allows for
  - Efficiency during periods of silence. In circuit switching, the available resources are wasted during such periods as the link is dedicated to the devices and cannot be used by others.
  - Flow control is required because the sending and receiving devices may not have the capacity to communicate at the same rate. In circuit switching, such a situation would lead to loss of data.
  - If a route becomes unavailable, we should be able to change over to another route. Similarly if a better route becomes available, we should be able to utilize it.

All the above features are provided by packet switching.

- A virtual circuit is set up at the time a pair of devices begins to communicate using packet switching. Unlike circuit switching, we can change the path or route used if there is a failure in the route. Virtual circuits can also be permanent, that is, dedicated to a pair of devices, or can be set up for a limited time between different devices. Another difference is that in virtual circuits multiplexing can happen at the level of individual switches as well.
- 30) Datagrams are self contained units of information that consist of a control part that has data about the recipient, the priority and so on, as well as the actual data to be sent. Each node that receives a datagram is responsible for sending it out onto the next node till it reaches its destination. Datagrams may arrive out of sequence at the destination because they have taken different routes.

## 4.8 FURTHER READINGS

- 1) Computer Networks, Andrew.S. Tannenbaum, PHI, New Delhi.
- 2) Data and Computer Communication, William Stalling, PHI, New Delhi.
- 3) *Introduction to Data Communications and Networking,* by Behrouz Forouzan, Tata McGraw-Hill, 1999, New Delhi.

# UNIT 1 DATA LINK LAYER FUNDAMENTALS

| Stru | icture  | Page Nos. |  |  |  |
|------|---|-----------|--|--|--|
| 1.0  | Introduction                                      | 5         |  |  |  |
| 1.1  | Objectives  | 5         |  |  |  |
| 1.2  | Framing   | 6         |  |  |  |
| 1.3  | Basics of Error Detection                         | 9         |  |  |  |
| 1.4  | Forward Error Correction                          | 13        |  |  |  |
| 1.5  | Cyclic Redundancy Check Codes for Error Detection | 15        |  |  |  |
| 1.6  | Flow Control                                      | 18        |  |  |  |
| 1.7  | Summary   | 23        |  |  |  |
| 1.8  | Solutions/Answers                                 | 23        |  |  |  |
| 1.9  | Further Readings                                  | 24        |  |  |  |

# 1.0 INTRODUCTION

Data Link Layer (DLL) is the second layer of the OSI model which takes services from the Physical layer and provides services to the network layer. DLL transfers the data from a host to a node or a node to another node.

The main task of the data link layer is to take a raw data from transmission facility and transform it into a line that appears free of transmission errors to the network layer. Data packets are encoded and decoded into bits. These are called frames. The **Functions of the Data Link Layer** are Framing, Frame synchronisation, Error Handling Flow Regulation, Addressing and Access Control. The data link layer is divided into two sublayers: The Media Access Control (MAC) layer and the Logical Link Control (LLC) layer. The MAC sublayer controls how a computer on the network gains access to the link resources and grants permission to transmit it. The LLC layer controls frame synchronisation, flow control and error checking.

Frame is a data structure used in transmissions at DLL consisting of a header and a trailer bracketing a data frame. Packets are the fundamental unit of information transport in all modern computer networks, and increasingly, in other communication networks as well these are converted to frame at DLL. The destination host not receiving the data bits as transmitted by the source host is termed as error in data. The error needs to be detected or corrected, as the data on the network must be error free and reliable which is one of the key features of the DLL. There are various methods used for detection and correction of these errors viz.: FEC (Forward Error Correction) and CRC (Cyclic Redundancy Check). To transmit data from a source to a destination node, a node in a network should be uniquely identified. This identification is known as the address of the node. Access control is related to addressing the problem of "Which channel or node on a LAN or WAN would transmit data?" The data link layer also deals with the problem of difference in the speed of transmission of data by the sender and receiver. Very often the speed of the receiver is slower than the speed of the sender. To overcome the same, the DLL has many flow control mechanism as part of its functionality.

# 1.1 **OBJECTIVES**

After going through this unit, you should be able to understand:

- the functionality of the Data Link Layer;
- the concept of framing and how framing is done;

Media Access Control and Data Link Layer



- the types of errors that can be generated in frames during transmission;
- error in a data frame;
- methods for detecting errors;
- methods for correcting errors;
- forwarding the error correction method for error correction;
- following the CRC method for error detection;
- the meaning of flow control, and
- the methods for Managing Flow Control and error control.

# 1.2 FRAMING

As you already know, the physical layer deals with raw transmission of data in the form of bits and gives services to the data link layer. The data link layer provides services to the network layer as shown in the *Figure 1*:

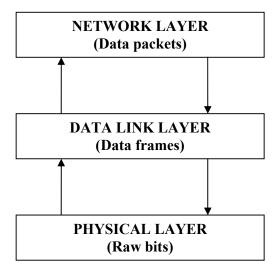


Figure 1: Data link layer providing services to network layer

The raw data coming from the Physical layer is converted into frames for forwarding to the network layer. This is done to ensure that the transmission of data is error free. Error detection and correction (if required) is done by the Data link layer, which is discussed in the following sections. The structure of the frame is shown in *Figure 2*.

Converting the bit stream into frames is a tedious process. The beginning and end of each frame should be explicitly marked. The easiest way to do so is to insert some time gap between frames.

| Flag | Control Information | Data Value | Control Information | Flag |
|------|---------------------|------------|---------------------|------|
|      |                     |            |                     |      |

Figure 2: Frame format

But, it is difficult to keep track of counts on timing to mark the start and end time of each frame. So to overcome the same, we will discuss the following methods for framing.

- Character Count.
- Character Patterns
- Bit Patterns
- Framing by Illegal code (code violation)

# Fundamentals

**Data Link Layer** 

#### **Character Count**

The first framing method, Character count, uses a header field to specify the number of characters in the frame. The Data Link Layer at the destination checks the header field to know the size of the frame and hence, the end of frame. The process is shown in *Figure 3* for a four-frame of size 4, 5, 5 and 9 respectively.

|   | F | RA | ME | 1 |   | F | RA | ME | 2 |   |   | FR.A | M | ∃ 3 |   |   |   |   | FR.A | AME | 3 4 |   |   |
|---|---|----|----|---|---|---|----|----|---|---|---|------|---|-----|---|---|---|---|------|-----|-----|---|---|
| Γ | 4 | 1  | 2  | 3 | 5 | 4 | 5  | 6  | 7 | 5 | 8 | 9    | 1 | 2   | 9 | 3 | 4 | 5 | 6    | 7   | 8   | 9 | 0 |

Figure 3: Character count

However, problems may arise due to changes in character count value during transmission. For example, in the first frame if the character count 4 changes to 6, the destination will receive data out of synchronisation and hence, it will not be able to identify the start of the next frame. This example is shown in *Figure*. 4. Even, after a request from the destination to the source for retransmission comes, it does not solve the problem because the destination does not know from where to start retransmission.




Figure 4: Problems in character count

#### **Character Patterns**

The second framing method, Character stuffing, solves the problem of out of synchronisation. Here, each frame starts with special character set e.g., a special ASCII character sequence.

The frame after adding the start sequence and the end sequence is shown in Figure 5.

Begin each frame with DLE STX.

End each frame with DLE ETX.

DLE stands for Data Link Escape

STX stands for Start of Text

ETX stands for End of Text

| DLE | STX | <br>DLE | ETX |
|-----|-----|---------|-----|

Figure 5: Character patterns (Character stuffing)

If a DLE ETX occurs in the middle of the data and interferes with the data during framing then, insert an ASCII DLE character just before DLE character in the data. The Receiver interprets the single DLE as an escape indicating that the next character is a control character.

If two DLE's appear in succession at the receiver's end, the first is discarded and the second is regarded as data. Thus, framing DLE STX or DLE ETX is distinguished by whether DLE is present once or twice.

Media Access Control and Data Link Layer

Here, the example is explained with the help of Figures 6(a), 6(b) and 6(c).

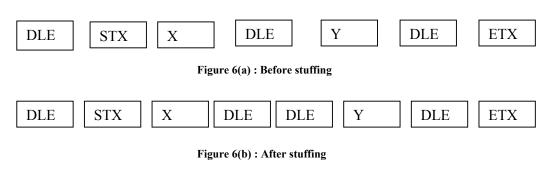


Figure 6(c): After destuffing

DLE

A problem with character stuffing is that not all bit streams are character oriented (e.g., Unicode is a 16-bit code). Hence, for arbitrary sized characters the process of character stuffing becomes more complex. So next we will discuss a new method known as the bit stuffing, which solves the problem of arbitrary sized character.

DLE

Y

**DLE** 

**ETX** 

#### **Bit Patterns**

STX

X

DLE

This method is similar to the one discussed above, except that, the method of bit stuffing allows insertion of bits instead of the entire character (8 bits). Bit pattern framing uses a particular sequence of bits called a *flag* for framing. The flag is set as the start and the end of the frame.

Use of *bit patterns* is to keep the sequence of data in the same order.

Flag = 0 1 1 1 1 1 1 0 (begins and ends frame.)

In this case the transmitter automatically inserts a 0 after 5 consecutive 1's in the data. This is called Bit stuffing. The receiver discards these stuffed 0's as soon as it encounters 5 consecutive 1's in the received data as shown with the help of an example described in *Figure 7 (a)*, (b) and (c).

11111111110010011

Figure 7(a): Original data ready to be sent

0111111011111011111100010011 01111110

Figure 7(b): Data after adding Flag and stuffing

111111111110010011

Figure 7(c): Data after destuffing

#### Framing by Illegal Code (Code violation)

A fourth method is based on any redundancy in the coding scheme. In this method, we simply identify an illegal bit pattern, and use it as a beginning or end marker, i.e., certain physical layers use a line code for timing reasons.

| For example: Manchester Encoding  |
|---|
| 1 –It can be coded into two parts i.e., high to low $\square$ $\equiv$ 1 0                                |
| $0 - \text{It can be coded into two parts i.e., low to high} \equiv 0.1$                                  |
| Codes of all low (000) or all high (111) aren't used for the data and therefore, can be used for framing. |
| Check Your Progress 1   |
| 1) Name different framing methods.  |
|   |

# 1.3 BASICS OF ERROR DETECTION

Write the bit sequence after bit stuffing for the data stream

Why bit stuffing is advantageous over character stuffing?

11000111111111000011111100

The Network should ensure complete and accurate delivery of data from the source node to destination node. But many times data gets corrupted during transmission. As already discussed in the previous block, many factors can corrupt or alter the data that leads to an error. A reliable system should have methods to detect and correct the errors. Firstly, we will discuss what the error could be then, in the later section we will discuss the process of detecting and correcting them.

## **Types of Error**

2)

3)

Several types of error may occur during transmission over the network:

- 1-bit error
- burst error
- lost message (frame)

**1-bit error**: **1**-bit error/Single bit error means that only one bit is changed in the data during transmission from the source to the destination node i.e., either 0 is changed to 1 or 1 is changed to 0 as shown in *Figure 8*.




Figure 8: 1 bit error

Data Link Layer Fundamentals Media Access Control and Data Link Layer



This error will not appear generally in case of serial transmission. But it might appear in case of parallel transmission.

**Burst error:** Burst error means that 2 or more bits of data are altered during transmission from the source to the destination node. But, it is not necessary that error will appear in consecutive bits. Size of burst error is from the first corrupted bit to the last corrupted bit as shown in *Figure 9*.

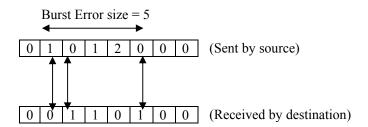


Figure 9: Burst error

An *n*-bit burst error is a string of bits inverted during transmission. This error will hardly occur in case of parallel transmission. But, it is difficult to deal with all corrupted bits at one instance.

**Lost Message (Frame):** The sender has sent the frame but that is not received properly, this is known as loss of frame during transmission. To deal with this type of error, a retransmission of the sent frame is required by the sender. We will discuss retransmission strategies in the next unit.

Now we will discuss some methods for error detection.

#### **Error Detection**


As already discussed in the beginning of this section accurate delivery of data at the receiver's site is, one of the important goals of this layer. This implies that the receivers should get the data that is error free. However, due to some factors if, the data gets corrupted, we need to correct it using various techniques. So, we require error detection methods first to detect the errors in the data before correcting it. Error detection is an easy process.


For error detection the sender can send every data unit twice and the receiver will do bit by bit comparison between the two sets of information. Any alteration found after the comparison will, indicate an error and a suitable method can be applied to correct the error.

But, sending every data unit twice increases the transmission time as well as overhead in comparison. Hence, the basic strategy for dealing with errors is to include groups of bits as additional information in each transmitted frame, so that, the receiver can detect the presence of errors. This method is called Redundancy as extra bits appended in each frame are redundant. At the receiver end these extra bits will be discarded when the accuracy of data is confirmed.

For example:

Data Link Layer Fundamentals



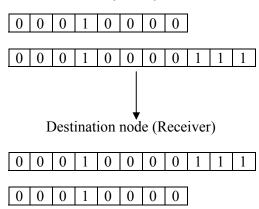

Redundancy check methods commonly used in data transmission are:

- Parity check
- CRC
- Checksum

## **Parity Check**

- The most common method used for detecting errors when the number of bits in the data is small, is the use of the *parity bit*.
- A *parity bit* is an extra binary digit added to the group of data bits, so that, the total number of one's in the group is even or odd.
- Data bits in each frame is inspected prior to transmission and an extra bit (the
  parity bit) is computed and appended to the bit string to ensure even or odd
  parity, depending on the protocol being used.
- If odd parity is being used, the receiver expects to receive a block of data with an odd number of 1's.
- For even parity, the number of 1's should be even.

In the example below, even parity is used. The ninth column contains the parity bit.

0 1 0 1 0 1 0 1 **0** 0 1 1 1 1 0 0 1 **1** 1 1 1 1 0 0 1 1 **0** 

- Use of parity bits a rather weak mechanism for detecting errors.
- A single parity bit can only detect single-bit errors.

#### Block Sum Check Method

- This is an extension to the single parity bit method. This can be used to detect up to two bit errors in a block of characters.
- Each byte in the frame is assigned a parity bit (*row parity*).
- An extra bit is computed for each bit position (*column parity*).
- The resulting set of parity bits for each column is called the *block sum check*. Each bit that makes up the character is the modulo-2 sum of all the bits in the corresponding column.

Media Access Control and Data Link Layer



Block Sum Check, example

Sender's data: 0000100 0010101 0101011

#### Data after adding parity bits:

```
00001000 \quad 00101010 \quad 01010110 \quad 01110100
```

This method detects single bit errors as well as increases the probability of finding burst error.

#### **CRC**

#### Cyclic Redundancy Check (CRC) is used to detect burst errors

In this method, you would need to treat strings of bits as coefficients of a polynomial code that uses modulo 2 arithmetic. In modulo 2 arithmetic there are no carriers for addition and borrows for subtraction. Polynomial codes treat bit strings as representative of polynomials with coefficients of 0 and 1 only.

For example, the bit sequence 1 0 01 0 1 is represented by the polynomial  $x^5 + x^2 + 1$   $(1.x^5 + 0.x^4 + 0.x^3 + 1.x^2 + 0.x^2 + 1.x^0)$ . When the polynomial method is employed, the sender and the receiver must agree upon a generator polynomial both the high and low order bits of the generator must be 1.

In this method the Sender divides frame (data string) by a predetermined Generator Polynomial and then appends the remainder (called checksum) onto the frame before starting the process of transmission. At the receiver end, the receiver divides the received frame by the same Generator polynomial. If the remainder obtained after the division is zero, it ensure that data received at the receiver's end is error free. All operations are done modulo 2.

An example that explains finding CRC (Cyclic Redundancy Check) will follow later.

#### Checksum

In this method the checksum generator divides the given input data into equal segments of k bits(8 or 16). The addition of these segments using ones complement arithmetic is complimented. This result is known as the checksum and it is appended with the data stream. This appended data stream is transmitted across the network on the transmission media. At the receiver end add all received segments. If the addition of segments at the receiver end is all 1's then, the data received is error free as, complement of the same will be all 0's. Then the data can be accepted, otherwise, data can be discarded.

For example:

Checksum (Compliment) 10101101

Data with appended checksum: 00000010 01010000 10101101

Receiver's accept the data as

#### 00000010 01010000 10101101

At receiver's end

00000010 01010000 10101101 sum 11111111

Complement 00000000

As complement is 0 it indicates that the data received at the receiver's end is error free so, it will be accepted by the receiver.

The checksum method detects all errors as it retains all its carries.

- Odd number of bits
- Most of even number of bits.

#### **™** Check Your Progress 2

| 1) | Define parity bit? Also define even and odd parity?               |
|----|---|
|    |   |
|    |   |
|    |   |
| 2) | Name the method that can detect single bit error and burst error. |
|    |   |
|    |   |
|    |   |
| 3) | Define checksum.  |
|    |   |
|    |   |
|    |   |

#### 1.4 FORWARD ERROR CORRECTION

In the previous section, we have discussed detection of error that appears after the transmission of data over the network from sender to receiver. In this section, we will study how to perform correction of errors. Forward Error Correction (FEC) is a type of error correction method which improves on simple error detection schemes by enabling the receiver to correct errors once they are detected. This reduces the need for retransmissions of error frames.

Firstly we consider the simple case i.e., correcting single bit error. As we have discussed earlier that a single bit error can be detected by adding one additional bit (parity bit/ redundant bit). This additional bit can detect error in any bit stream by differentiating the two condition error or not error as a bit can have two states only i.e., 0 and 1.





For correction of detected single bit error two states are not sufficient. As an error occurs in bit stream indicates that one bit is altered from either 0 to 1 or 1 to 0. To correct the same, conversion of altered bit is required. For performing this conversion we must know the location of bit which is in error. Therefore, for error correction identification of location of error bit is required. For example, for applying error correction of single bit error in ASCII character we must find which of 7 bit is altered. For doing this we could have eight different states i.e., no error, error in bit position 1, error in bit position 2 up to error in bit position7. For this we need many redundant bits to represent all eight states.

Here, 3 bit redundancy code can represent all possible eight states because 3 bits can represent 8 states (000 to 111). But if an error occurs in redundancy bit then we need 3 Additional bits added with 7 ASCII character bits, it covers all possible error locations.

So we can generalise if we have n data bits and r redundancy bits then total n+r will be the transmittable bits and r bits must be able to represent at least n+r+1 different states, here plus 1 indicates no error state. Hence n+r+1 states are identifiable by r additional bits and r additional bits represents 2<sup>r</sup> different states.

• 
$$2^r >= n+r+1$$

For example, in 7 bit ASCII character we need at least 4 redundant bits as  $2^4 > = 7 + 4 + 1$ .

Hamming code is one such error correcting code.

For the example discussed above for a 7 bit ASCII character and 4 redundant bit, we will have total bits as n+r i.e., 7+4=11. These 4 redundant bits can be inserted in 7 bit data stream in position 1,2,4 and 8 (in 11 bit sequence at  $2^0,2^1,2^2,2^3$ ) named as r1,r2,r4 and r8 respectively.


In Hamming code each redundant bit is the combination of data bits where each data bit can be included in more than one combination as shown below.


r1:1,3,5,7,9,11 r2:2,3,6,7,10,11 r3:4,5,6,7 r8:8,9,10,11

Now we, will find the values of redundant bit r1,r2, r4 and r8 for the data bit sequence 1010101 as shown in following *Figure*.

| 11 | 10 | 9 | 8  | 7 | 6 | 5 | 4  | 3 | 2  | 1  |
|----|----|---|----|---|---|---|----|---|----|----|
| 1  | 0  | 1 | r8 | 0 | 1 | 0 | r4 | 1 | r2 | r1 |

For finding values of r1, r2, r4 and r8 we will find even parities for various bit combination. The parity bit will be the value of redundant bit.



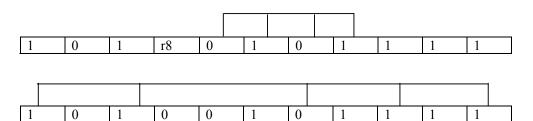

Data Link Layer Fundamentals

Assume that during transmission the number 5 bit is altered from 0 to 1. So at receiver end for error detection and correction new parities will be calculated as

|   |   |   | Error |   |   |   |   |   |   |   | w parity |
|---|---|---|-------|---|---|---|---|---|---|---|----------|
|   |   |   |       |   |   | ✓ |   |   |   |   | ✓        |
| 1 | 0 | 1 | 0     | 0 | 1 | 1 | 1 | 1 | 1 | 1 | 1        |
| 1 | 0 | 1 | 0     | 0 | 1 | 1 | 1 | 1 | 1 | 1 | 0        |
| 1 | 0 | 1 | 0     | 0 | 1 | 1 | 1 | 1 | 1 | 1 | 1        |
| 1 | 0 | 1 | 0     | 0 | 1 | 1 | 1 | 1 | 1 | 1 | 0        |

0101 = 5. It implies  $5^{th}$  bit is the error bit. The binary number obtained from new parties will indicate the error bit location in the received data stream. Subsequently that bit can be altered and data can be corrected.

If all the values in the new parity column are 0, we conclude that the data is error free. In the given example if no error it should be 0000.

### **™** Check Your Progress 3

| 1) | Define Hamming distance.                                      |
|----|---|
|    |   |
|    |   |
|    |   |
| 2) | Generate the Hamming code for the following input data 101111 |
|    |   |
|    |   |
|    |   |

# 1.5 CYCLIC REDUNDANCY CHECK CODES FOR ERROR DETECTION

The most commonly used method for detecting burst error in the data stream is Cyclic Redundancy Check Method. This method is based on the use of *polynomial codes*. Polynomial codes are based on representing bit strings as polynomials with coefficients as 0 and 1 only.

For example, the bit string 1110011 can be represented by the following polynomial:

$$1.x^6 + 1.x^5 + 1.x^4 + 0.x^3 + 0.x^2 + 1.x^1 + 1.x^0$$

This is equivalent to:

$$x^6 + x^5 + x^4 + x^1 + 1$$
.

• The polynomial is manipulated using *modulo 2* arithmetic (which is equivalent to Exclusive OR or XOR).



- Depending on the content of the frame a set of check digits is computed for each frame that is to be transmitted. Then the receiver performs the same arithmetic as the sender on the frame and check the digits. If the result after computation is the same then the data received is error free.
- A different answer after the computation by the receiver indicates that, some error is present in the data.
- The computed check digits are called the frame check sequence (FCS) or the cyclic redundancy check (CRC).

The CRC method requires that:

- The sender and receiver should agree upon a generator polynomial before the transmission process start.
- Both the high and low bits of the generator must be 1.
- To compute the checksum for a frame with *m* bits, the size of the frame must be longer than the generator polynomial.

Algorithm for Computing the Checksum is as follows as:

Let D(x) be the data and G(x) be the generating polynomial. Let r be the degree of generator polynomial G(x).

- Step 1: Multiple the data D(x) by  $x^r$ , giving r zeros in the low-order end of the frame.
- Step 2: Divide the result obtained in step 1 by G(x), using modulo-2 division.
- Step 3: Append the remainder from step 2 to D(x), thus, placing r terms in the r low-order positions.

The type of generating polynomial is important for finding the types of error that are detected.

- A generator polynomial of R bits will detect:
  - all single-bit errors
  - all double-bit errors
  - all odd-number of bit errors
  - all burst errors < R</li>
  - most burst errors  $\ge$  R

#### Example:

Data 1011101

Generator Polynomial G(x):  $x^4+x^2+1 = 10101$ 

Here the size of the generator polynomial is 5 bit long, so, we will place 5 - 1 = 4 0's in the low order data stream. So the data will be:

Data 1011101 0000

Now using modulo2 division, (for getting data ready to be transmitted), we will divide the data by the generator polynomial as shown in the *Figure 10*.

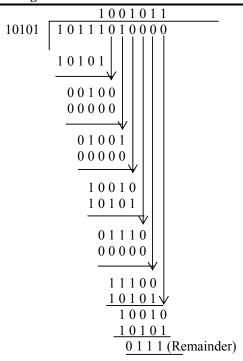


Figure 10: Cyclic redundancy check

The remainder obtained after the division of 0111, will be placed on the low order bits of the data stream. So the Data that is transmitted over the network by the sender is  $D(x) = 1011101\ 0111$ 

Now at the receiver's end, the receiver receives D(x) as data which will be divided by the generator polynomial as shown in *Figure 11*.

#### Division diagram at receiver's site

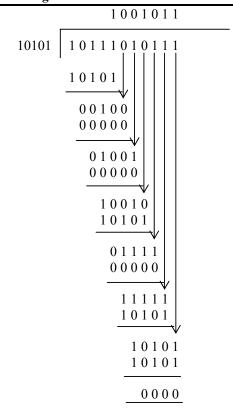


Figure 11: Cyclic redundancy check at the receiver side



Here the remainder obtained after division is 0000, so it ensure that data received at the receiver end is error free otherwise, it indicates that the data has some error in it. In this way the CRC method can detect whether the data has some error or is error free.

#### **™** Check Your Progress 4

| 1) | Find the CRC for the data polynomial $x^4+x^2+x+1$ where generator polynomial is $x^3+1$ . |
|----|--|
|    |  |
|    |  |
|    |  |

## 1.6 FLOW CONTROL

Another important issue for the data link layer is dealing with the situation which occurs when the sender transmits frames faster than the receiver can accept or process them. If the sender is working on a fast machine and the receiver is working on a slow machine this situation may occur in the network. In this process of transmission, some of the frames might be lost as they were not processed by the receiver due to it's low speed, while the sender might have through the transmission to be completely error free. To prevent this situation during transmission, a method is introduced called the *Flow Control*.

Flow control means using some feedback mechanism by which, the sender can be aware of when to the send next frame, and not at the usual speed of the sender. If the frame is accepted /processed by the receiver then only with the sender send the next frame. It may be said that the speed of the sender and the receiver should be compatible with each other, so that the receiver will receive or process all frames sent by the sender as every receiver has a limited block of memory called the buffer, reserved for storing incoming frames.

There are several methods available for deciding when a sender should send one frame or the next frame. Flow control ensures that the speed of sending the frame, by the sender, and the speed of processing the received frame by the receiver are compatible.

There are two basic strategies for flow control:

- 1) Stop-and-wait
- 2) Sliding window.

We shall start with the assumption that the transmission is error free and that we have an ideal channel

#### Stop and Wait

Stop-and-Wait Flow Control (*Figure 12*) is the simplest form of flow control, In this method, the receiver indicates its readiness to receive data for each frame, the message is broken into multiple frames. The Sender waits for an ACK(acknowledgement) after every frame for a specified time (called time out). It is sent to ensure that the receiver has received the frame correctly. It will then send the next frame only after the ACK has been received.

#### **Operations:**

Data Link Layer Fundamentals

- 1) **Sender:** Transmits a single frame at a time.
- 2) Receiver: Transmits acknowledgement (ACK) as it receives a frame.
- 3) Sender receives ACK within time out.
- 4) Go to step 1.

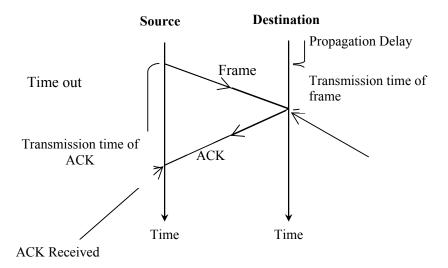


Figure 12: Stop and Wait

If a frame or ACK is lost during transmission then it has to be transmitted again by the sender. This retransmission process is known as ARQ (automatic repeat request). Stop and Wait ARQ is one of the simplest methods of flow control. It will be further discussed in detail in the next unit.

The problem with stop and wait is that only one frame can be transmitted at a time and that often leads to inefficient transmission channel till we get the acknowledgement the sender can not transmit any new packet. During this time both the sender and the channel are unutilised.

To deal with this problem, there is another flow control method i.e., sliding window protocol which is discussed below:

#### **Sliding Window Protocol**

In this flow control method, the receiver allocates buffer space for *n* frames in advance and allows transmission of multiple frames. This method allows the sender to transmit *n* frames without an ACK. A k-bit sequence number is assigned to each frame. The range of sequence number uses modulo-2 arithmetic. To keep track of the frames that have been acknowledged, each ACK has a *sequence* number. The receiver acknowledges a frame by sending an ACK that includes the Sequence number of the **next expected frame.** The sender sends the next *n* frames **starting with** the last received sequence number that has been transmitted by the receiver (ACK). Hence, a single ACK can acknowledge multiple frames as shown in the *Figure 13*.

The receiver receives frames 1, 2 and 3. Once frame 3 arrives ACK4 is sent to the sender. This ACK4 acknowledge the receipt of frame 1, 2 and 3 and informs the sender that the next expected frame is frame 4. Therefore, the sender can send multiple back-to-back frames, making efficient use of the channel.

#### Normal Flow diagram of a sliding window



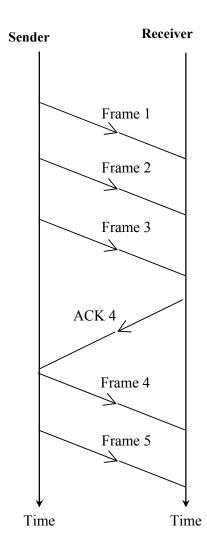


Figure 13: Normal flow diagram of sliding

Sequence number is a field in the frame that is of finite size. If k bits are reserved for the sequence number, then the values of sequence number ranges from 0 to  $2^k - 1$  (Modulo Arithmetic).

#### Operation of a Sliding Window

#### **Sending Window:**

In this mechanism we maintain two types of windows (buffer) sending window and receiving windows as shown in *Figure 14 & 15*.

At any instant, the sender is permitted to send frames with sequence numbers in a certain range (3-bit sending window) as shown in *Figure 14*.



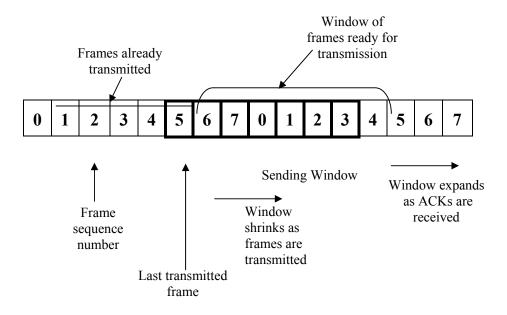


Figure 14: Sending window in a sliding window

#### **Receiving Window**

The receiver maintains a receiving window depending on the sequence numbers of frames that are accepted as shown in *Figure 15*.

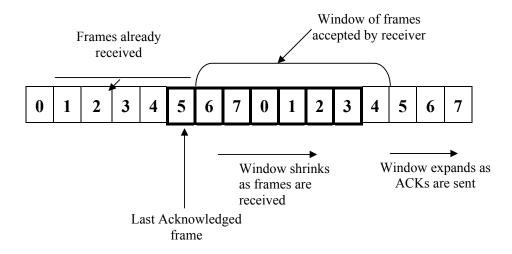


Figure 15: Receiving window in a sliding window

### **Functioning of Sliding Window**

Flow control is achieved as the receiver can control the size of the sending window by limiting the size of the sending window. Similarly, data flow from the sender to the receiver can be limited, and that too can controls the size of receiving window as explained with the help of an example in *Figure 16*.

#### **Example:**



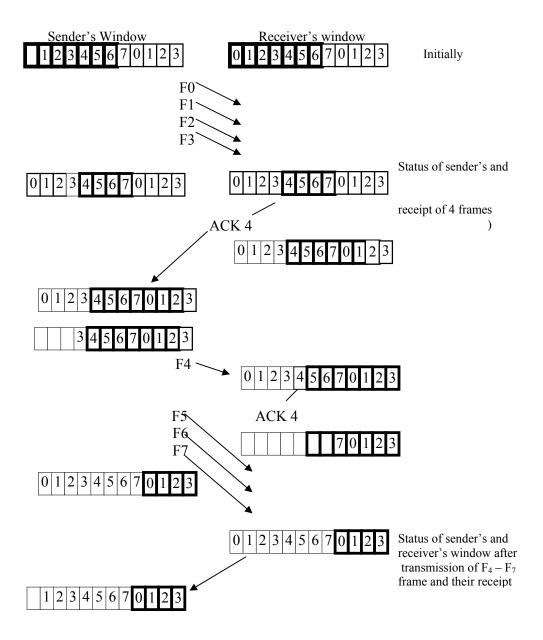


Figure 16: Function of a sliding window machine

Two types of errors are possible while transmission from source to destination takes place

- 1) Lost frame: Frame (data or control) fails to arrive.
- 2) Damaged frame: Frame is recognised, but some bits have been changed.

Two commonly used methods for sliding window are:

- 1) Go-back-n ARQ
- 2) Selective-repeat ARQ

Details of these two ARQ requests are discussed in the next unit.

### **™** Check Your Progress 5

| Data Link Layer |
|-----------------|
| Fundamental     |
| (S)             |
|                 |

| 1) | How does the sliding window protocol increase the utilisation of bandwidth? |
|----|---|
|    |   |
|    |   |
|    |   |
| 2) | Define ARQ. How does ARQ facilitate the error control process?              |
|    |   |
|    |   |
|    |   |

# 1.7 SUMMARY

This unit introduced the basic fundamental issues related to the Data Link Layer. The concept of framing and different methods of framing like Character Count, Character Stuffing, Bit stuffing and Framing by Illegal code has been focused up on. In the Data Link layer, data flow and error control is discussed. This error and flow control is required in the system for reliable delivery of data in the network. For the same, different types of error, different methods for error detection and correction are discussed. Among various methods, Block sum check method detects burst of error with high probability. CRC method is the one which detects the error with simplicity. Forward Error Correction is the error correction method that uses the parity concept. For flow control, stop and wait method tries to ensure that the speed of the sender and the receivers are matching to an extent. To overcome this sliding window protocol is introduced. Sliding window protocol can send many frames at one instance and that increases the efficiency of transmission channel. If some error occurs in the data then retransmission of the error frame is required and it is known as ARQ.

# 1.8 SOLUTIONS/ANSWERS

#### **Check Your Progress 1**

- 1) Character Count, Character Stuffing, Bit Stuffing and Framing by Illegal Code
- 2) 1100011111101110000111111000
- 3) Only 1 bit used as stuffed bit in bit stuffing instead of character (8 bits) in character stuffing.

#### **Check Your Progress 2**

- 1) The extra bit added to the data bits to make number of 1's even or odd. Even parity: The number of 1's in data bits including the parity bit should be even.
  - Odd Parity: The number of 1's in data bits including the parity bit should be odd.
- 2) Parity bit method is used for detecting single bit error. And CRC method is used to detect burst error.



3) Checksum is the value that is used for error detection. It is generated by adding data units using 1's compliment and then complementing the result (modulo 2 arithmetic).

## **Check Your Progress 3**

- 1) A method that adds redundant bits to the data stream for error detection and correction is called Hamming Code.
- 2)  $r_1 = 0$   $r_2 = 0$   $r_4 = 0$   $r_8 = 1$

#### **Check Your Progress 4**

1) CRC-101

### **Check Your Progress 5**

- 1) Sliding Window protocol increases the utilization of bandwidth as we can transmit many frames without waiting for an acknowledgement.
- 2) An error control method in which correction is made by retransmission of data by. ARQ facilitate error control process by using any of the following method:

Stop and Wait ARQ Go-Back N ARQ Selective Repeat ARQ

# 1.9 FURTHER READINGS

- 1) *Computer Networks*, Andrew S. Tanenbaum, 4<sup>th</sup> Edition, Prentice Hall of India, New Delhi.
- 2) Data and Computer Communications, William Stalling, 5<sup>th</sup> Edition, Pearson Education, New Delhi.
- 3) Data Communications and Networking, Behrouz A. Forouzan, 3<sup>rd</sup> Edition, Tata McGraw Hill, New Delhi.
- 4) Communication Networks Fundamental Concepts and Key Architectures, Leon Garcia and Widjaja, 3<sup>rd</sup> Edition, Tata McGraw Hill, New Delhi.

# **UNIT 2 RETRANSMISSION STRATEGIES**

| Struc | ture                 | Page Nos. |
|-------|----------------------|-----------|
| 2.0   | Introduction         | 25        |
| 2.1   | Objectives           | 25        |
| 2.2   | Stop & Wait ARQ      | 26        |
| 2.3   | Go-Back-N ARQ        | 29        |
| 2.4   | Selective Repeat ARQ | 30        |
| 2.5   | Pipelining           | 31        |
| 2.6   | Piggybacking         | 32        |
| 2.7   | Summary              | 33        |
| 2.8   | Solutions/Answers    | 33        |
| 2.9   | Further Readings     | 34        |

## 2.0 INTRODUCTION

In the previous unit we discovered that, Data Link Layer is responsible for ensuring that data is received at the receiver's end in line and error free. For the same task it has two important functions to perform that is Flow control and Error control. Flow and Error control are performed by the data link protocol. Before starting discussion on methods for flow and error control, firstly, we will define Flow control and Error control.

Flow control deals with when the sender should send the next frame and for how long the sender should wait for an acknowledgement. Data link protocol takes care of the amount of data that a sender can send and that a receiver can process as, the receiver has its own limitation in terms of speed for processing the frames. It also sees the compatibility of speed of both the sender and the receiver.

Error control deals with error detection and correction method that we have already discussed in the previous unit. If, an error is found in the frame either due to loss of frame or due to damage of frame, retransmission of the same is required by the sender. Retransmission is required when a sender does not receive a positive acknowledgement in time, due to a loss of frame or loss of acknowledgement or if, the sender receives negative acknowledgment from the receiver due to frame not been error free. This process of retransmission is called ARQ (Automatic Repeat Request). The set of rules that will determine the operations for the sender and the receiver are named the ARQ protocol. This ARQ protocol makes the network reliable, and that is, one of the important requirements of a network system if, data transmits from one node to another over the network and ensures that data received at receiver's site is complete and accurate. Here, we will refer to ACK, for positive acknowledgement (that is receiver has correct data) and NAK (REJect) to refer to negative acknowledgement (that is frame is received with some error). In this unit, you will study three commonly used methods for flow and error control that is Stop & Wait ARQ, GoBack-n ARQ and Selective Repeat ARQ.

# 2.1 OBJECTIVES

After going through this unit, you should be able to:

- define flow and error control;
- define is ARO;



- define functionality of data link protocol;
- define Stop & Wait ARQ method for error and flow control;
- define GoBack-n ARQ method for error and flow control;
- perform selective Repeat ARQ method for error and flow control, and
- define pipelining.

# 2.2 STOP & WAIT ARQ

This is the simplest method for flow and error control. This protocol is based on the concept that, the sender will send a frame and wait for its acknowledgment. Until it receives an acknowledgment, the sender cannot send the next frame to the receiver. During transmission of frame over the network an error can appear.

Error can be due to a frame getting damaged/lost during transmission. Then, the receiver discards that frame by using error detection method. The sender will wait for acknowledgement of frame sent for a predetermined time (allotted time). If timeout occurs in the system then, the same frame is required to be retransmitted. Hence, the sender should maintain a duplicate copy of the last frame sent, as, in future it can be required for retransmission. This will facilitate the sender in retransmitting the lost/damaged frame.

At times the receiver receives the frame correctly, in time and sends the acknowledgment also, but the acknowledgment gets lost/damaged during transmission. For the sender it indicates time out and the demand for retransmission of the same frame appears in the network. If, the sender sends the last frame again, at the receiver's site, the frame would be duplicated. To overcome this problem it, follows a number mechanism and discards the duplicate frame.

Another situation when a error can appear in the network system is when the receiver receives the frame out of order, then it simply discards that frame and sends no acknowledgement. If, the acknowledgement is not received by the sender in time then, it assumes that the frame is lost during transmission, and retransmits it.

For distinguishing both data frame and acknowledgement frame, a number mechanism is used. For example A data frame 0 is acknowledged by acknowledgement frame 1, to show that the receiver has received data frame 0 and is expecting data frame1 from the sender.

Both the sender and the receiver both maintain control variable with volume 0 or 1 to get the status of recently sent or received. The sender maintains variable S that can hold 0 or 1 depending on recently sent frame 0 or 1. Similarly the receiver maintains variable R that holds 0 or 1 depending on the next frame expected 0 or 1.

Here, we are considering one directional information flow (Frame) and other direction control information (ACK) flow. If transmission of frames leads to an error then, the recovery process of the same demands, a retransmission strategy to be used that leads to four different possible outcomes, that are:

- Normal Operation
- When ACK is lost
- When frame is lost
- When ACK time out occurs

Normal Operation Retransmission Strategies

If the sender is sending frame 0, then it will wait for ack 1 which will be transmitted by the receiver with the expectation of the next frame numbered frame 1. As it receives ACK1 in time (allotted time) it will send frame 1. This process will be continuous till complete data transmission takes place. This will be successful transmission if ack for all frames sent is received in time. It is shown with the help of *Figure.1* 

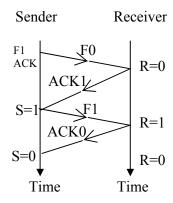


Figure 1: Stop and wait protocol

#### When ACK is lost

Here the sender will receive corrupted ACK1 for frame sent frame 0. It will simply discard corrupted ACK1 and as the time expires for this ACK it will retransmit frame 0. The receiver has already received frame 0 and is expecting frame1, hence, it will discard duplicate copy of frame 0. In this way the numbering mechanism solves the problem of duplicate copy of frames. Finally the receiver has only one correct copy of one frame. This is explained with the help of *Figure.2*.

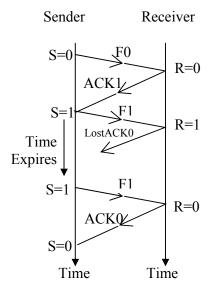


Figure 2: Loss of ACK

#### When Frame is lost

If the receiver receives corrupted/damaged frame1, it will simply discard it and assumes that the frame was lost on the way. And correspondingly, the sender will not get ACK0 as frame has not been received by the receiver. The sender will be in waiting stage for ACK0 till its time out occurs in the system. As soon as time out

occurs in the system, the sender will retransmit the same frame i.e frame1(F1) and the receiver will send ACK0 in reply as shown in *Figure.3*.

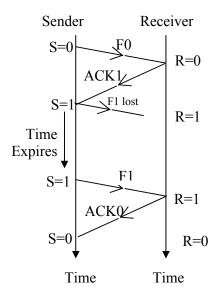


Figure 3: Loss of a frame

#### When ACK time out occurs

In this operation, the receiver is not able to send ACK1 for received frame0 in time, due to some problem at the receiver's end or network communication. The sender retransmits frame0 as ACK1 is not received in time. Then, the sender retransmits frame0 as ACK1 time expires. At the receiver end, the receiver discards this frame0 as the duplicate copy is expecting frame1 but sends the ACK1 once again corresponding to the copy received for frame0. At the sender's site, the duplicate copy of ACK1 is discarded as the sender has received ACK1 earlier as explained with the help of *Figure 4*.

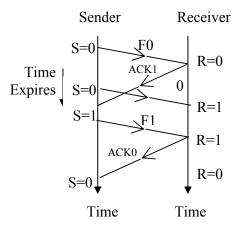


Figure 4: ACK time out

These operations indicate the importance of the numbering mechanism while, transmitting frames over the network. The method above discussed has low efficiency due to improper use of the communication channel. So, now, we will discuss the case if flow of data is bidirectional. In Bidirectional transmission both the sender and the receiver can send frames as well as acknowledgement. Hence, both will maintain S and R variables. To have an efficient use of bandwidth the ACK can be appended with the data frame during transmission. The process of combining ACK with data is

known as **Piggybacking.** The concept of piggybacking is explained in a later section. This reduces transmission overhead and increases the overall efficiency of data transmission.

Retransmission Strategies

The process is shown in *Figure*.5.

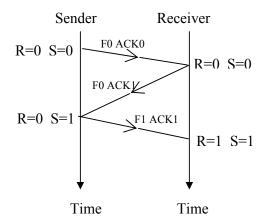



Figure 5: Piggybacking 1

The problem with stop and wait is that only one frame can be transmitted at a time and this leads to inefficiency of transmission. To deal with this, we have another error and flow control method that we will discuss in the next section.

# 2.3 GO-BACK-N ARQ

In this section, we will try to overcome the inefficient transmission that occurs in Stop & Wait ARQ. In this method, many frames can be transmitted during the process without waiting for acknowledgement. In this, we can send n frames without making the sender wait for acknowledgements. At the same time, the sender will maintain a copy of each sent frame till acknowledgement reaches it safely. As seen earlier in the Stop & Wait ARQ where, we used number mechanism, here also, we will use number method for transmission and receipt of frames. Each frame will have a sequence number that will be added with the frame. If, the frame can have k bit sequence number then the numbers will range between 0 to 2<sup>k</sup>-1. For example if k is 2 bit then numbers will be 0,1,2,3,0,1,2,3,0,....

The sender can send 4 frames continuously without waiting for acknowledgment. But, the receiver will look forward to only one frame that must be in order. If, the frame received is not in order, it will simply keep on discarding the frame till, it receives the desired sequence number frame. The receiver is not bound to send an individual acknowledgment for all frames received; it can send a cumulative acknowledgment also. The receiver will send a positive acknowledgement if, the received frame is the desired sequence number frame. Otherwise, it will keep on waiting if, the frame received is corrupted or out of order. As soon as the timer expires for the frame sent by the sender, the sender will GoBack and retransmit all frames including the frame for which the timer expired, till, the last sent frame. Hence, it is named as Go-Back-N ARQ. The process of retransmission for an error frame is shown in *Figure*.6.Go-Back-N is used in HDLC protocol.

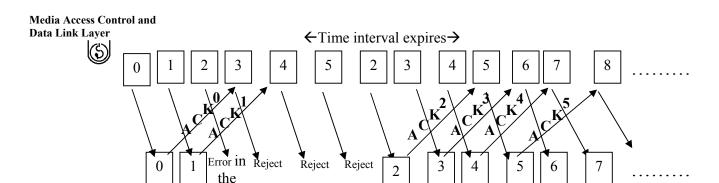

packet

Figure 6: Go-Back-N

If, the error rate is high, then, this leads to a lot of wastage of bandwidth as the sender will retransmit all the frames from, the frame in which error appears till the last sent. To increase the efficiency of transmission, when the error rate is high, another protocol called Selective Repeat ARQ is used which is discussed in the next section.

# 2.4 SELECTIVE REPEAT ARQ

This method increases the efficiency of the use of bandwidth. In this method, the receiver has a window with the buffer that can hold multiple frames sent by the sender. The sender will retransmit only that frame which has some error and not all the frames as in Go-Back-N ARQ. Hence, it is named as selective repeat ARQ. Here, the size of the sender and the receiver window will be same. The receiver will not look forward only to one frame as in Go-Back-N ARO but it will look forward to a continuous range of frames. The receiver also sends NAK for the frame which had the error and required to be retransmitted by the sender before the time out event fires. As in the earlier section we discussed, each frame will have a sequence number that will be added with the frame. If, the frame can have k bit sequence number then the sequence number of frames will range between 0 to  $2^k$ -1. For example, if k is 2 bit then numbers will be 0,1,2,3,0,1,2,3,0,... Size of sender and receiver window would be  $2^k/2$  i.e 4/2=2 or it can be written as  $2^{k-1}$ . If the window size is 2 and acknowledgement for frame0 and frame1 both gets lost during transmission then, after timer expires the sender will retransmit frame0 though the receiver is expecting frame2 after frame1 was received without any error. Hence, frame0 will be discarded by the receiver as a duplicate frame. If the receiver window size is more than two, the receiver will accept duplicate frame0 as a new frame and hence, the size of window should be  $2^k/2$ . The process is shown in *Figure*. 7.

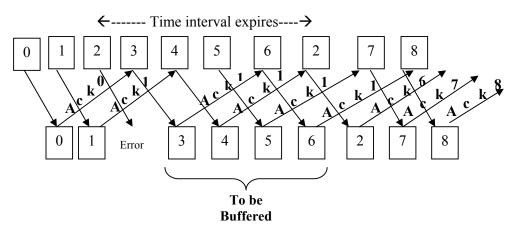


Figure 7: Selective Repeat

#### TCP uses Selective repeat ARQ strategy to deal with flow and error control

Retransmission Strategies

If, we consider bidirectional transmission i.e., data and acknowledgement flow from both sender and receiver then, the concept of Piggybacking can be used in a similar fashion as already discussed in Stop & Wait ARQ method, in order to better utilise bandwidth.

# 2.5 PIPELINING

Pipelining in the network is one task that starts before the previous one is completed. We might also say that the number of tasks is buffered in line, to be processed and this is called pipelining. For example, while printing, through the printer before one task printing is over we can give commands for printing second task. Stop & Wait ARQ does not use pipelining. As in Stop & Wait ARQ the sender cannot send the next frame till it receives acknowledgement for the frame sent. Here, Pipelining is used in Go-Back-N ARQ and Selective repeat ARQ as both methods can send multiple frames without holding the sender for receiving the acknowledgement for frame sent earlier. This process of pipelining improves the efficiency of bandwidth utilisation. Now, we will explain with the help of *Figure 8* how pipelining is used in Go-Back-N ARQ.

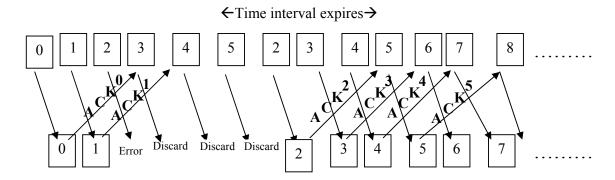


Figure 8: Pipelining in Go-Back-N

Here frame 0 is received by the receiver and without waiting for acknowledgment of frame 0 sent at sender site, the sender is allowed to send frame 1. This process is known as pipelining.

Similarly, selective repeat pipelining is used as shown in *Figure 9* below.

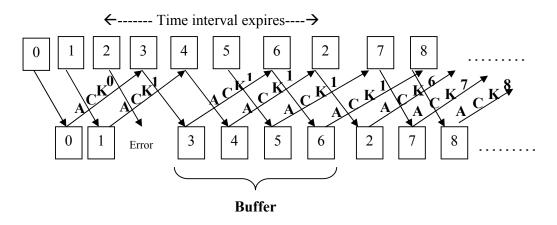


Figure 9: Pipelining in selective repeat



In this example we can show how pipelining increases the overall utilisation of bandwidth. Frame0 and frame1 are sent in continuous order without making the sender wait for acknowledgment for frame0 first.

#### **™** Check Your Progress 1

| 1) | Define flow and error control.  |
|----|---|
|    |   |
|    |   |
|    |   |
| 2) | Explain Go-Back-N ARQ and Selective repeat ARQ are better methods for retransmission. |
|    |   |
|    |   |
|    |   |
| 3) | Give an example where pipelining can be applied.                                      |
|    |   |
|    |   |
| 1) | What is the significance of control variables S and R?                                |
|    |   |
|    |   |
|    |   |

# 2.6 PIGGYBACKING

Piggybacking is the process which appends acknowledgement of frame with the data frame. Piggybacking process can be used if Sender and Receiver both have some data to transmit. This will increase the overall efficiency of transmission. While data is to be transmitted by both sender and receiver, both will maintain control variable S and R. We will explain the process of piggybacking when the sender and the receiver both are transmitting data with the help of *Figure 10*.

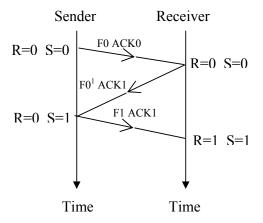


Figure 10: Piggybacking

Here, both the sender and the receiver maintain control variables S and R. The sender sends frame 0 (F0) with ACK0 appended along with it. Similarly, the receiver sends Frame 0(F0) with ACK1 appended to it. This way transmitting both frame and acknowledgement will concurrently increase optimal efficiency of bandwidth utilisation because piggybacking will get a free side.



# 2.7 SUMMARY

This unit focuses on one prime function of the Data link layer that is flow and error control for achieving the goal of reliable data transmission over the network. For flow and error control retransmission strategies are considered. Flow control specifically talks about the speed of sending the frame by the sender and processing the received frame by the receiver. The speed for the sender and the receiver must be compatible. So, that all frames can be received in order and processed in time. Error control technique combines two processes error detection and error correction in the data frame. In Stop & wait ARQ protocol sender waits for acknowledgment for the last frame sent. After the acknowledgment is received by the sender then only the next frame can be sent. In Go-Back-N ARQ frames can be sent continuously without waiting for the sender to send the acknowledgement. If an error is found in any frame then frames received after that will be discarded by the receiver. Retransmission of frames will start from the error frame itself. In selective repeat Process frames can be sent continuously. But here, the receiver has a buffer window that can hold the frames received after the error frame. Hence, retransmission will be only for error frame. This increases the efficiency of data transmission on a network. For better utilisation of bandwidth, piggybacking can be used. Piggybacking process appends acknowledgement along with the data frame. This will be efficient for bidirectional communication.

#### 2.8 SOLUTIONS/ANSWERS

#### **Check Your Progress 1**

- 1) Flow Control: A method to control rate of flow of frames. Error Control: A method to detect and handle the errors during data transmission.
- 2) Go-Back-N ARQ and Selective repeat ARQ are better method for retransmission as they keep the copy of each sent frame till the frame is acknowledged by receiver. Go-Back-N ARQ retransmits all frames in which there is an error and the following frames. Selective repeat ARQ retransmit only the error frame.
- 3) Pipelining is used in Go-Back-N ARQ and Selective repeat ARQ because many frames can be sent without waiting for previous frame acknowledgement.
- 4) Numbering system that is used by sender and receiver by using variable S and R that can hold 0 or 1 removes the occurrence of possible ambiguities like either duplicate frame or duplicate acknowledgement.

# 2.9 FURTHER READINGS

- 1) *Computer Networks*, Andrew S. Tanenbaum, 4<sup>th</sup> Edition, Prentice Hall of India, New Delhi.
- 2) Data and Computer Communications, William Stalling, 5<sup>th</sup> Edition, Prentice Hall of India, New Delhi.
- 3) Data Communications and Networking, Behrouz A. Forouzan, 3<sup>rd</sup> Edition, Tata McGraw Hill, New Delhi.
- 4) Communication Networks, Fundamental Concepts and Key Architectures, Leon Garcia and Widjaja, 3<sup>rd</sup> Edition, Tata McGraw Hill, New Delhi.

# UNIT 3 CONTENTION-BASED MEDIA ACCESS PROTOCOLS

| Stru | Page Nos.  |    |
|------|--|----|
| 3.0  | Introduction   | 35 |
| 3.1  | Objectives   | 36 |
| 3.2  | Advantages of Multiple Access Sharing of Channel Resources | 36 |
| 3.3  | Pure ALOHA   | 37 |
| 3.4  | Slotted ALOHA  | 39 |
| 3.5  | Carrier Sense Multiple Access (CSMA)                       | 40 |
| 3.6  | CSMA with Collision Detection (CSMA/CD)                    | 41 |
| 3.7  | Ethernet Frame Format (IEEE 802.3)                         | 43 |
| 3.8  | Summary  | 45 |
| 3.9  | Solutions/Answers  | 45 |
| 3.10 | Further Readings   | 45 |

# 3.0 INTRODUCTION

As discussed in first unit of this block, the Data Link Layer (DLL) is divided into two sub layers i.e., the Media Access Control (MAC) layer and the Logical Link Control (LLC) layer. In a network nodes are connected to or use a common transmission media. Based on the connection of nodes, a network can be divided into two categories, that is, point-to-point link and broadcast link. In this unit, we will discuss, broadcast link and their protocols. If, we talk about broadcast network then, a control process for solving the problem of accessing a multi access channel is required. Many protocols are available for solving the problem of multi-access channel. These protocols can control an access on shared link as in broadcast network. It is an important issue to be taken into consideration that is, how to who gets access to the channel while, many nodes are in competition as shown in *Figure 1*.

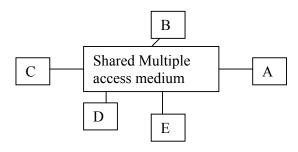


Figure 1: Shared media

The protocol which decides who will get access to the channel and who will go next on the channel belongs to MAC sub-layer of DLL. Channel allocation is categorised into two, based on the allocation of broadcast among competeting users that is Static channel allocation problem and Dynamic Channel allocation problem as shown in *Figure 2*. In this unit, we will also discuss whether some access conflict or collision comes in the network, and how to deal with these conflicts. This is an important issue for LAN.

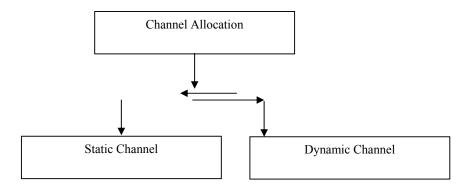


Figure 2: Channel allocation technique

Here the transmission of frames can occupy the medium or any arbitrary time or in slotted time intervals (time is divided into slots). When the transmission station senses whether the channel is busy or free, this is called *carrier sensing*.

# 3.1 OBJECTIVES

After going through this unit, you should be able to learn:

- the need for accessing multi-access channel;
- common methods for accessing multi-access channel like FDM, TDM;
- the need for Dynamic channel allocation method;
- pure ALOHA method for channel allocation;
- slotted ALOHA method for channel allocation;
- carrier sensing method CSMA to improve performance;
- carrier sensing with collision detection method CSMA/CD;
- IEEE 802.3 standard and their Different Cabling types, and
- basics of Giga Bit Ethernet.

# 3.2 ADVANTAGES OF MULTIPLE ACCESS SHARING OF CHANNEL RESOURCES

MAC sub layer's primary function is to manage the allocation of one broadcast channel among N competing users. For the same, many methods are available such as static, and dynamic allocation method.

In the static channel allocation method, allocating a single channel among N competing users can be either FDM (Frequency division multiplexing) or TDM (Time division multiplexing). In FDM the total bandwidth will be divided into N equal parts for N users. This way, every user will have their own frequency band so no conflict or collision will occur among user in the network. But, this is feasible only when the number of users are small and traffic is also limited. If, the number of users becomes large this system has face many problems like either one user is gets one frequency band that is not used at all or the other user does not get a frequency band for transmission. Hence, it is simple and efficient for a small number of users. Similarly, in TDM (Time Division Multiplexing), discussed with first Block every user will get a fixed Nth time slot.

In the dynamic channel allocation the important issues to be considered are whether, time is continuous or discrete or whether the station is carrier sensing large number of stations each with small and bursty traffic.

# 3.3 PURE ALOHA

As we have discussed earlier in the previous unit, if, one node sends a frame to another node, there can be some error in the frame. For the same we discussed some retransmission strategies to deal with the error. But, in case of allocating a single channel among N uncoordinated competing users, then the probability of collision will be high. Station accesses the channel and when their frames are ready. This is called random access. In an ALOHA network one station will work as the central controller and the other station will be connected to the central station. If, any of stations want to transmit data among themselves, then, the station sends the data first to the central station, which broadcast it to all the stations.

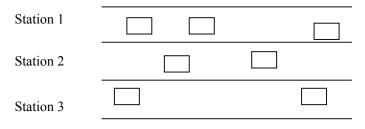


Figure 3: ALOHA

Here, the medium is shared between the stations. So, if two stations transmit a frame at overlapping time then, collision will occur in the system. Here, no station is constrained, any station that has data /frame to transmit can transmit at any time. Once one station sends a frame (when it receives its own frame and assumes that the destination has received it) after 2 times the maximum propagation time. If the sender station does not receive the its own frame during this time limit then, it retransmit this frame by using backoff algorithm that we will discuss later on. And if, after a number of repeats if it does receive own pocket then the station gives up and stops retransmitting the same frame.

Let R be the bit rate of the transmission channel and L be the length of the frame. Here, we are assuming that the size of frame will be constant and hence, it will take constant time t = L/R for transmission of each packet.

As in the case of Pure ALOHA protocol frames can be sent any time so, the probability of collision will be very high. Hence, to present a frame from colliding, no other frame should be sent within its transmission time. We will explain this with the help of the concept of vulnerable period as shown in *Figure 4*. Let a frame is that transmitted at time  $t_0$  and t be the time required for its transmission. If, any other station sends a frame between  $t_0$  and  $t_0$ +t then the end of the frame will collide with that earlier sent frame. Similarly, if any other station transmits a frame between the time interval  $t_0$ +t and  $t_0$ +2t again, it will result in a garbage frame due to collision with the reference frame. Hence, 2t is the vulnerable interval for the frame. In case a frame meets with collision that frame is retransmitted after a random delay.



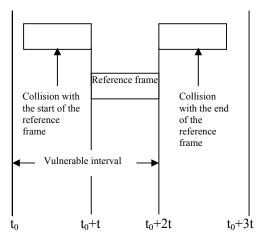


Figure 4: Vulnerable Period

Hence, for the probability of successful transmission, no additional frame should be transmitted in the vulnerable interval 2t.

To find the probability of no collision with a reference a frame, we assume that a number of users are generating new frames according to Poisons distribution. Let S be the arrival rate of new frames per frame time. As we find probability of no collision, S will represent the throughput of the system. Let G be the total arrival rate of frames including retransmission frames (also called load of the system). For finding the probability of transmission from the new and retransmitted frame. It is assumed that frames arrival is Poisson distributed with an average number of arrivals of G frames/frame time. The probability of k frames transmission in 2t seconds is given by the Poisson distribution as follows:

The throughput of the system S is equal to total arrival rate G times the probability of successful transmission with no collision,

That is S = G \* P

S=G \* P (zero frame transmission in the vulnerable interval i.e.,2t seconds) Since

P [K frame in vulnerable interval 2t] =  $\frac{(2G) e^{-2G}}{K!}$ , K = 0, 1, 2,3

Thus

$$P[K = 0 \text{ in } 2t] = -2G$$

Hence, 
$$S = G * P = G \cdot e^{-2G}$$

Note that the averages load is G. Hence it is 2G in 2t

$$S=G * e^{-2G}$$

The relationship between S vs. G can be shown in *Figure 5*.

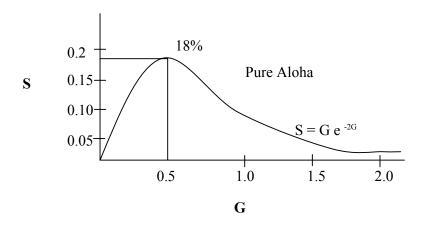


Figure 5: Throughput vs. load graph of pure ALOHA

As G is increasing, S is also increasing for small values of G. At G=1/2, S attains its peak value i.e., S=1/2e i.e., 0.18(approx). After that, it starts decreasing for increasing values of G. Here, the average number of successful transmission attempts/frames can be given as  $G/S = e^{2G}$ .

An average number of unsuccessful transmission attempts/frame is  $G/S - 1 = e^{2G} - 1$ .

By this, we know that the performance of ALOHA is not good as unsuccessful transmission are increasing exponentially with load G. So, we will discuss Slotted ALOHA in the next section to see how performance can be improved.

# 3.4 SLOTTED ALOHA

In this, we can improve the performance by reducing the probability of collision. In the slotted ALOHA stations are allowed to transmit frames in slots only. If more than one station transmit in the same slot, it will lead to collision This reduces the occurrence of collision in the network system. Here, every station has to maintain the record of time slot. The process of transmission will be initiated by any station at the beginning of the time slot only. Here also, frames are assumed to be of constant length and with the same transmission time. Here the frame will collide with the reference frame only if, it arrives in the interval t<sub>0</sub>-t to t<sub>0</sub>. Hence, here the vulnerable period is reduced that is to t seconds long.

The throughput of the system S is equal to the total arrival rate G times the probability of successful transmission with no collision

That is 
$$S = G * P$$
  
 $S=G * P$  (zero frame transmission in t seconds)

The probability of k frames transmission in t seconds and is given by the Poisson distribution as follows:

$$P[k] = (G)^{k} * e^{-G}/k!, k=0,1,2,3...$$

Here average load in the vulnerable interval is G (one frame time) Hence, the probability of zero frames in t seconds =  $e^{-G}$ 

$$S = G * e^{-G}$$

The relationship between S vs G can be shown in *Figure 6*.

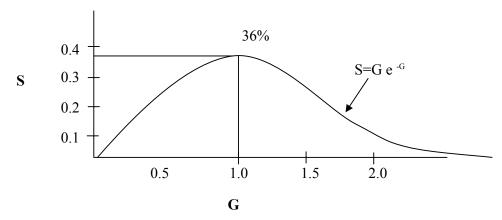


Figure 6: Throughput vs. load graph of slotted ALOHA

From the figure we can see that the system is exhibiting its performance. Maximum throughput that can be achieved with Slotted ALOHA S=1/e= 36 % (Approx.)

However, with this performance also we are not able to utilise the medium in an efficient manner. Due to the high rate of collision systems the bandwidth is which was designed to implement random access in LANs. So, we will discuss a new protocol called CSMA in the next section.

# 3.5 CARRIER SENSE MULTIPLE ACCESS (CSMA)

As we have seen in previous section, the Slotted ALOHA maximum throughput that can be achieved is 1/e only, though, the stations do not keep track of what the other station is doing or what's going on in the medium. Then also, many frames meet and collide. So in LANs we will observe the behavior of other station as well and try to reduce the number of collision to achieve better throughput of the network. To achieve maximum throughput here, we will try to restrict transmission that will cause collision by sensing whether the medium has some data or not. Protocols in which station senses the channel before starting transmission are in the category of CSMA protocols (also known as listen before talk protocols).

CSMA have many variants available that are to be adapted according to the behaviour of the station that has frames to be transmitted when the channel is busy or that some transmission is going on. The following are some versions of CSMA protocols:

- 1-Persistent CSMA
- Non-Persistent CSMA
- p-Persistent CSMA

#### 1-Persistent CSMA

In this protocol a station i.e., who wants to transmit some frame will sense the channel first, if it is found busy than that some transmission is going on the medium, then, this station will continuously keep sensing that the channel. And as soon as this station finds that the channel has become idle it will transmit its frame. But if more than one station is in waiting state and keeps track of the channel then a collision will occur in the system because both waiting station will transmit their frames at the same time. The other possibility of collision can be if the frame has not reached any other station

Contention-based Media
Access Protocols

then, it indicates to the second station that the channel is free. So the second station also starts its transmission and that will lead to collision. Thus 1-persistent CSMA a greedy protocol as to capture the channel as soon as it finds it idle. And, hence, it has a high frequency of collision in the system. In case of collision, the station senses the channel again after random delay.

#### **Non-Persistent CSMA**

To reduce the frequency of the occurrence of collision in the system then, another version of CSMA that is non-persistent CSMA can be used. Here, the station who has frames to transmit first sense whether the channel is busy or free. If the station finds that channel to be free it simply transmits its frame. Otherwise, it will wait for a random amount of time and repeat the process after that time span is over. As it does not continuously senses the channel to be, it is less greedy in comparison of 1-Persistent CSMA. It reduces the probability of the occurrence of collision as the waiting stations will not transmit their frames at the same time because the stations are waiting for a random amount of time, before restarting the process. Random time may be different for different stations so, the likelihood waiting station will start their transmission at the same time is reduced. But, it can lead to longer delays than the 1-Persistent CSMA.

#### p-Persistent CSMA

This category of CSMA combines features of the above versions of CSMA that is 1-persistent CSMA and non-persistent CSMA. This version is applicable for the slotted channel. The station that has frames to transmit, senses the channel and if found free then simply transmits the frame with p probability and with probability 1-p it, defers the process. If the channel is found busy then, the station persists sensing the channel until it became idle. Here value of p is the controlling parameter.

After studying the behaviour of throughput vs load for persistent CSMA it is found that Non-Persistent CSMA has maximum throughput. But we can using collision detection mechanism improve upon this to achieve more throughput in the system using collision defection mechanism and for the same we will discuss CSMA/CD in the next section.

# 3.6 CSMA WITH COLLISION DETECTION (CSMA/CD)

As before here also any transmission in the system needs to sense the channel to see whether it is busy or free. The stations ensure that the transmission will start only when it finds that the channel is idle. In CSMA/CD the station aborts the process of transmission as soon as they detect some collision in the system. If two stations sense that the channel is free at the same time, then, both start transmission process immediately. And after that, both stations get information that collision has occurred in the system. Here, after the station detecting the collision, the system aborts the process of transmission. In this way, time is saved and utilisation of bandwidth is optimised. This protocol is known as CSMA/CD and, this scheme is commonly used in LANs. Now, we will discuss the basic operation of CSMA/CD. Let, t be the maximum transmission time between two extreme ends of a network system (LAN). At t<sub>0</sub> station A, at one extreme end of the LAN begins the process of transmitting a frame F<sub>A</sub>. This frame reaches the station E which at another extreme end of the same network system in t propagation delay away. If no other station in between has started its frame transmission, it implies that A has captured the channel successfully. But, in case E<sub>F</sub> station E starts its frame transmission just before the arrival of frame from station A frame then, collision will take place. Station A will get the signal of

collision after 2t time. Hence, 2t time is required to ensure that station A has captured the channel successfully as shown with the help of *Figure 8*.

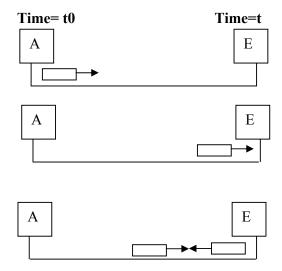


Figure 8: Collision detection

Collision of frames will be detected by looking at the strength of electric pulse or signal received after collision. After a station detects a collision, it aborts the transmission process and waits for some random amount of time and tries the transmission again with the assumption that no other station has started its transmission in the interval of propagation time. And hence, in CSMA/CD the channel can be any of the following three states as it can be shown with the *Figure 9*.

- Transmission of frame is going on.
- Idle slot.
- Contention period/slot.




Figure 9: Transmission states

In CSMA/CD a station with a frame ready to begin transmission senses the channel and starts transmission if it finds that the channel is idle. Otherwise, if it finds it busy, the station can persist and use backoff algorithm which will be discussed in the next paragraph.

#### **Backoff Algorithm**

With the help of backoff algorithm we will see how the randomisation process occurs as soon as collision detection takes place. Time is divided into discrete slots with the length of worst case propagation time (propagation time between two extreme ends of LAN) 2t. After the first collision in the system, each station waits for 0 or 1 slot time before trying transmission for the next time. If, two stations that collide is select the same random number then collision will be repeated. After the second collision, the station will select 0,1,2 or 3 randomly and wait for these many number of slots. If, the process of collision will occur repeatedly, then, the random number interval would be

between 0 and  $2^i$ -1 for  $i^{th}$  collision and this number of slots will be the waiting time for the station. This algorithm is known as the binary exponential algorithm.

# Contention-based Media Access Protocols

#### **™** Check Your Progress 1

| 1) | Why is DLL divided into two sub layers? What are the key functions of those sub layers? |
|----|---|
|    |   |
|    |   |
|    |   |
| 2) | How does Slotted ALOHA improve the performance of the system over Pure ALOHA?           |
|    |   |
|    |   |
| 3) | How has non-persistent reduced the probability of collision?                            |
|    |   |
|    |   |
| 4) | Explain Back off Algorithm and give one example of where it is used.                    |
|    |   |
|    |   |
|    |   |

# 3.7 ETHERNET FRAME FORMAT (IEEE 802.3)

Ethernet protocol is a MAC sublayer protocol. Ethernet stands for cable and IEEE 802.3 Ethernet protocol was designed to operate at 10 Mbps. Here, we will begin discussing the Ethernet with various types of cabling. With the help of *Figure 9*, we will try to summarise the cabling used for baseband 802.3 LANs.

| Characteristic\Cable | 10Base5     | 10Base2      | 10BaseT      | 10BaseF     |
|----------------------|-------------|--------------|--------------|-------------|
| Medium               | Thick       | Thin Coaxial | Twisted Pair | Optical     |
|                      | Coaxial     | Cable        |              | Fiber       |
|                      | Cable       |              |              |             |
| Maximum Length of    | 500 m       | 200 m        | 100 m        | 2 Km        |
| segment              |             |              |              |             |
| Topology             | Bus         | Bus          | Star         | Star        |
| Advantages           | Used for    | Low cost     | Existing     | Good noise  |
|                      | connecting  |              | environment  | immunity    |
|                      | workstation |              | can use Hub  | and good to |
|                      | with tap on |              | and connect  | use         |
|                      | the cable   |              | the stations |             |

Figure 9: Characteristics ethernet cable

IEEE 802.3 Ethernet accesses the channel using 1-persistent CSMA/CD method in LAN. Now we will discuss MAC frame structure for IEEE 802.3 with the help of *Figure 10*.

| Preamble | Start     | Destination | Source  | Length  | Data | Pad | Frame |
|----------|-----------|-------------|---------|---------|------|-----|-------|
|          | Delimiter | Address     | Address | of Data |      |     | Check |
|          | of frame  |             |         | Field   |      |     | Sum   |

Figure 10: Ethernet Frame Format

Each frame has seven fields explained as follows:

**Preamble:** The first field of 802.3 frame is 7 byte (56 bits) long with a sequence of alternate 1 and 0 i.e., 10101010. This pattern helps the receiver to synchronise and get the beginning of the frame.

**Starting Delimiter (SD):** The second field start delimiter is 1 byte (8 bit) long. It has pattern 10101011. Again, it is to indicate the beginning of the frame and ensure that the next field will be a destination address. Address, here, can be a single address or a group address.

**Destination Address (DA):** This field is 6 byte (48 bit) long. It contains the physical address of the receiver.

**Source Address (SA):** This filed is also 6 byte (48 bit) long. It contains the physical address of the sender.

**Length of Data Field:** It is 2 byte (16 bit) long. It indicates the number of bytes in the information field. The longest allowable value can be 1518 bytes.

**Data:** This field size will be a minimum of 46 bytes long and a maximum of 1500 bytes as will be explained later.

**Pad:** This field size can be 0 to 46 bytes long. This is required if, the data size is less than 46 bytes as a 802.3 frame must be at least 64 bytes long.

**Frame Checksum (FCS):** This field is 4 bytes (32 bit) long. It contains information about error detection. Here it is CRC-32.

#### Minimum and Maximum Length of Frame

Minimum frame length = 64 bytes = 512 bits Maximum frame length= 1518 bytes = 12144 bits

Minimum length or lower limit for frame length is defined for normal operation of CSMA/CD. This is required so that, the entire frame is not transmitted completely before its first bit has been received by the receiver. If, this happens then the probability of the occurrence of collision will be high (the same has been explained earlier in the previous section CSMA/CD).

Hence, Ethernet frame must be of 64 bytes long. Some of the bytes are header and trailer parts of the frame. If, we consider 6 bytes destination address, 6 bytes source address, 2 bytes length and 4 bytes FCS (6+6+2+4=18) then, the minimum length of data will be 64-18= 46 bytes. If, frame is less than 46 bytes then, padding bits fill up this difference.

As per 802.3 standard, the frames maximum length or upper limit of frame is = 1518 bytes (excluding preamble and SD). If we subtract 18 bytes of header and trailer then, the maximum length will be 1500 bytes.

# 3.8 SUMMARY

In some networks, if a single channel and many users use that channel, then, allocation strategy is required for the channel. We have discussed FDM and TDM allocation method. They are the simplest methods for allocation. They work efficiently for a small number of user. For a large number of users the ALOHA protocol is considered. There are two versions of ALOHA that is Pure ALOHA and Slotted ALOHA. In Pure ALOHA no slotting was done but the efficiency was poor. In Slotted ALOHA, slots have been made, so that every frame transmission starts at the beginning of the slot and throughput is increased by a factor of 2. For avoiding collision and to increase efficiency in sensing the channel, CSMA is used. Many versions of CSMA are persistent and non-persistent. In CSMA/CD collision detection process is added so that process can be aborted just after a collision is detected. Ethernet is a commonly used protocol for LAN. IEEE 802.3 Ethernet uses 1 persistent CSMA/CD access method.

# 3.9 SOLUTIONS/ANSWERS

# **Check Your Progress 1**

- DLL is divided into two sub layers LLC and MAC as IEEE has defined LLC for standard LANs and MAC for avoiding the conflict and collision on a network to access to the medium at any time. LLC does error flow control and MAC deals with channel allocation problem.
- 2) Slotted ALOHA follows synchronization for transmitting the frames that reduces the probability of collision and hence improves the efficiency.
- 3) In non persistent strategy, station waits for random amount of time after sensing the collision on multiple access channels. Hence are stations attempts for retransmission after random time that reduces the probability of collision.
- 4) After a collision is sensed by the channel, time is divided up into discrete slots. For example, if first collision identified then each station waits for either 0 or 1 slot time. Similarly, if third collision occurs then random interval will be 0 to 7 and for i<sup>th</sup> collision random number interval will be 0 to 2<sup>i</sup>-1. Subsequently, these many numbers of slots will be skipped before retransmission. This is called as binary exponential back off algorithm. CSMA/CD uses back off algorithm.

# 3.10 FURTHER READINGS

- 1) *Computer Networks*, Andrew S. Tanenbaum, 4<sup>th</sup> Edition, Prentice Hall of India, New Delhi.
- 2) Data and Computer Communications, William Stalling, 5<sup>th</sup> Edition, Pearson Education, New Delhi.
- 3) Data Communications and Networking, Behrouz A. Forouzan, 3<sup>rd</sup> Edition, Tata McGraw Hill, New Delhi.
- 4) Communication Networks Fundamental Concepts and Key Architectures, Leon Garcia and Widjaja 3<sup>rd</sup> Edition, Tata McGraw Hill, New Delhi.



# UNIT 4 WIRELESS LAN AND DATALINK LAYER SWITCHING

| Struct | Page Nos.   |    |
|--------|---|----|
| 4.0    | Introduction  | 46 |
| 4.1    | Objectives  | 46 |
| 4.2    | Introduction to Wireless LAN  | 47 |
| 4.3    | Wireless LAN Architecture (IEEE 802.11)   | 47 |
| 4.4    | Hidden Station and Exposed Station Problems   | 48 |
| 4.5    | Wireless LAN Protocols: MACA and MACAW  | 49 |
| 4.6    | IEEE 802.11 Protocol Stack  | 51 |
|        | 4.6.1 The 802.11 Physical Layer<br>4.6.2 The 802.11 MAC Sub-layer Protocol  |    |
| 4.7    | Switching at Data Link Layer 4.7.1 Operation of Bridges in Different LAN Environment 4.7.2 Transparent Bridges 4.7.3 Spanning Tree Bridges 4.7.4 Source Routing Bridges | 55 |
| 4.8    | Summary   | 59 |
| 4.9    | Solutions/Answers   | 60 |
| 4.10   | Further Readings  | 60 |

# 4.0 INTRODUCTION

The Previous discussion, we had in this block was related to wired LANs but recently, wireless LANs are taking a dominant position due to coverage of location difficult to wire, to satisfy the requirement of mobility and adhoc networking. In a few years from now, we will notice a broader range of wireless devices accessing the Internet, such as digital cameras, automobiles, security systems, kitchen appliances. **KUROSE** and **ROSS** [reference] writes that some day wireless devices that communicate with the Internet may be present everywhere: on walls, in our cars, in our bedrooms, in our pockets and in our bodies.

In this unit, we cover two broad topics: Wireless LAN, its protocols, its standard and Data Link Layer Switching. In organisation we need an interconnection mechanism so that all nodes can talk to each other. Bridges and switches are used for this purpose. The spanning tree algorithms are used to build plugs and act as bridges.

# 4.1 OBJECTIVES

After going through this unit, you should be able to:

- understand what is a wireless LAN;
- describe the various LAN Protocols;
- understand the IEEE 802.11 Standard, and
- describe the operation of bridges (transparent, spanning tree and remote bridges).

Wireless LAN and Datalink Layer Switching

As the number of mobile computing and communication devices grows, so does the demand to connect them to the outside world. A system of notebook computers that communicate by radio can be regarded as a wireless LAN. These LANs have different properties than conventional LANs and require special MAC sublayer protocols. The 802.11b standard defines the physical layer and media access sublayer for wireless local area network.

To understand the concept, we will take a simplistic view that, all radio transmitters have some fixed range. When a receiver is within a range of two active transmitters, the resulting signal will generally be garbled and of no use. It is important to realise that in some wireless LANs, not all stations are within the range of one another, which leads to a variety of complications, which we will discuss in the next sections.

Wireless LANs are commonly being used in academic institutions, companies, hospitals and homes to access the internet and information from the LAN server while on roaming.

# 4.3 WIRELESS LAN ARCHITECTURE (IEEE 802.11)

The wireless LAN is based on a cellular architecture where the system is subdivided into cells as shown in *Figure1*. Each cell (called basic service set or BSS, in the 802.11) is controlled by a base station (called access point or AP). Wireless LAN may be formed by a single cell, with a single access point (it can also work within an AP), most stations will be formed by several cells, where the APs are connected through some kind of backbone (called distribution system or DS). This backbone may be the Ethernet and in some cases, it can be the wireless system. The DS appears to upperlevel protocols (for example, IP) as a single 802 network, in much the same way as a bridge in wire 802.3. The Ethernet network appears as a single 802 network to upperlayer protocols.

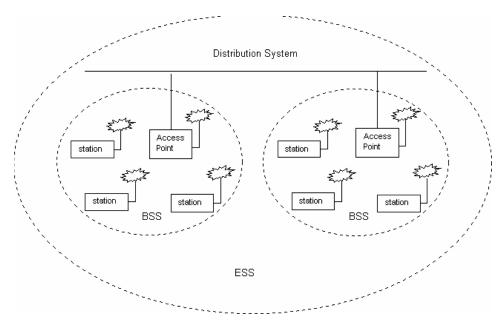


Figure 1: Wireless LAN architecture

Media Access Control and Data link Layer

Stations can also group themselves together to form an *ad hoc* network: a network with no central control and with no connections to the "outside world." Here, the network is formed "on the fly," simply because, there happens to be mobile devices that have found themselves in proximity to each other, that have a need to communicate, and that find no preexisting network infrastructure. An *ad hoc* network might be formed when people with laptops meet together (for example, in a conference room, a train, or a car) and want to exchange data in the absence of a centralised AP. There has been tremendous interest in *ad hoc* networking, as communications between devices continue to proliferate.

# 4.4 HIDDEN STATION AND EXPOSED STATION PROBLEMS

There are two fundamental problems associated with a wireless network. Assume that there are four nodes A, B, C and D. B and C are in the radio range of each other. Similarly A and B are in the radio range of each other. But C is not in the radio range of A.

Now, suppose that there is a transmission going on between A and B (*Figure 2 (a)*). If C also wants to transmit to B, first, it will sense the medium but will not listen to A's transmission to B because, A is outside its range. Thus, C will create garbage for the frame coming from A if, it transmits to B. This is called the **hidden station problem**. The problem of a station not being able to detect another node because that node is too far away is called hidden station problem.

Now, let us consider the reverse situation called the **exposed station problem.** (*Figure 2 (b)*.)

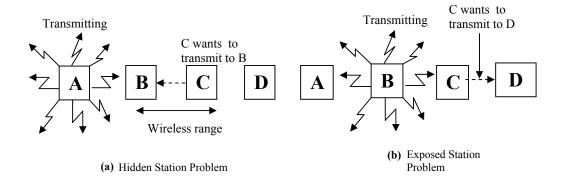


Figure 2: Hidden and exposed station problem

In this case, B is transmitting to A. Both are within radio range of each other. Now C wants to transmit to D. As usual, it senses the channel and hears an ongoing transmission and falsely concludes that it cannot transmit to D. But the fact is transmission between C and D would not have caused any problems because, the intended receivers C and D are in a different range. This is called exposed station problem.

# 4.5 WIRELESS LAN PROTOCOLS: MACA AND MACAW

In this section, we, will describe two wireless LAN protocols: MACA and MACAW. MACA is the oldest protocol of the two. MACA was proposed as an alternative to CSMA Protocol which has certain drawbacks:

First, it senses the channel to see if the channel is free, it transmits a packet, otherwise it waits for a random amount of time.

- Hidden Station Problems leading to frequent collision.
- Exposed terminal problems leading to worse bandwidth utilisation. MACA eliminates the hidden and exposed station problems using RTS (Repeat to Send) and CTS (Clear to Send) handshake mechanism, which is explained below through a *Figure 3*. RTS and CTS packets carry the expected duration of the data transmission, which will have some implications. All nodes near the sender/receiver after hearing RTS/CTS will defer the transmission. Therefore, it avoids some cases of hidden and exposed station problems. However, it does not always avoid these problems. If, the neighbour hears the RTS only, it is free to transmit once the waiting interval is over.

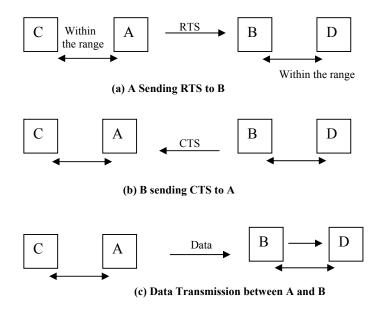


Figure 3: MACA Protocol

Just assume that, there are four nodes A, B, C, and D in a wireless LAN (*Figure 3*). A is a sender and B is a receiver. The station C is within range of A but not within range of B. Therefore, it can hear transmission from A (i.e., RTS) but not transmission from B (i.e., CTS) (*Figure 3(a) and 3(b)*). Therefore, it must remain silent long enough for the CTS to be transmitted back to A without conflict. The station D is within the range of B but not A so it hears CTS but not RTS. Therefore, it must remain silent during the upcoming data transmission, whose length it can tell by examining the CTS frame. This is illustrated through a diagram (*Figure 3(a) and 3(c)*) A sends RTS to B. Then B sends CTS to A. Then, follows data between A and B.

Media Access Control and Data link Layer

C hears the RTS from A but not the CTS from B. As long as it does not interfere with the CTS, it is free to transmit while the data frame is being sent. In contrast, the station D is within range of B but not A. It does not hear the RTS but does hear the CTS. Hearing the CTS tips it off that, it is close to a station that is about to receive a frame, so it defers sending anything until that frame is expected to be finished.

Despite these precautions, collisions can still occur. For example, B and C could both send RTS frames to A at the same time. These frames will collide and will be lost. In the event of a collision, an unsuccessful transmitter (i.e. one that does not hear a CTS within the expected time interval) waits a random amount of time and tries again later. MACAW (MACA for wireless) extends MACA to improve its performance which will have the following handshaking mechanism. RTS-CTS-DS-Data → ACK. It is also illustrated through the following diagram (Figure 4).

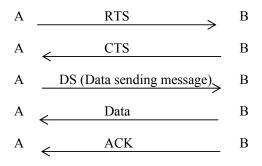


Figure 4: The MACAW protocol

MACAW extends MACA with the following features:

- **Data link layer acknowledgement:** It was noticed that without data link layer acknowledgements, lost frames were not retransmitted until the transport layer noticed their absences, much later. They solved this problem by introducing an ACK frame after each successful data frame.
- Addition of carrier sensing: They also observed that CSMA has some use, namely, to keep a station from transmitting a RTS while at the same time another nearby station is also doing so to the same destination, so carrier sensing was added.
- An improved backoff mechanism: It runs the backoff algorithm separately for each data stream (source-destination pair), rather than for each station. This change improves the fairness of the protocol.
- **DS (Data sending) message:** Say a neighbour of the sender overhears an RTS but not a CTS from a receiver. In this case it can tell if RTS-CTS was successful or not. When it overhears DS, it realises that the RTS-CTS was successful and it defers its own transmission.

Finally, they added a mechanism for stations to exchange information about congestion and a way to make the back off algorithm react less violently to temporary problems, to improve system performance.

# Check Your Progress 1What is Hidden Station Problem?

|  | <br> | <br> | <br> |   | • |
|--|------|------|------|---|---|
|  |      |      |      |   |   |
|  | <br> | <br> | <br> | • | • |
|  |      |      |      |   |   |
|  | <br> | <br> | <br> |   |   |

| 2) | Why CSMA/CD cannot be used in wireless LAN environment? Discuss. | Wireless LAN and<br>Datalink Layer Switching |
|----|--|--|
| 3) | How is MACAW different from MACA?                                |  |
|    |  |  |
|    |  |  |
|    |  |  |

# 4.6 IEEE 802.11 PROTOCOL STACK

IEEE 802.11 standard for wireless LAN is similar in most respects to the IEEE 802.3 Ethernet standard addresses. As shown in the *Figure 5* the physical layer of 802.11 corresponds to the OSI physical layer fairly well but, the data link layer in all the 802 protocols is split into two or more sublayers. In 802.11, the MAC (Medium Access Control) sublayer determines how the channel is allocated, that is, who gets to transmit next. Above it is the LLC (Logical Link Control) sublayer, whose job is to hide the differences between the different 802 variants and make them indistinguishable as far as the network layer is concerned.

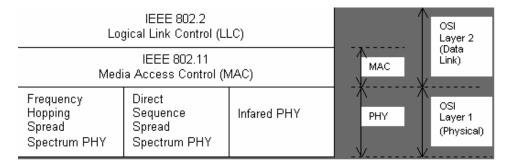


Figure 5: Part of the 802.11 protocol stack

#### **4.6.1** The **802.11** Physical Layer

The 802.11 physical layer (PHY) standard specifies three transmission techniques allowed in the physical layer. The infrared method used much the same technology as television remote controls do. The other two use short-range radio frequency (RF) using techniques known as FHSS (Frequency Hopped Spread Spectrum) and DSSS (Direct Sequence Spread Spectrum). Both these techniques, use a part of the spectrum that does not require licensing (the 2.4 –GHz ISM band). Radio-controlled garage door openers also use the same piece of the spectrum, so your notebook computer may find itself in competition with your garage door. Cordless telephones and microwave ovens also use this band. All of these techniques operate at 1 or 2 Mbps and at low enough power that they do not conflict too much. RF is capable of being used for 'not line of sight' and longer distances.

The other two short range radio frequency techniques are known as spread spectrum. It was initially developed for military and intelligence requirement. The essential idea is to spread information signal over a wider bandwidth to make jamming and interception more difficult. The spread spectrum is ideal for data communication

Media Access Control and Data link Layer

because, it is less susceptible to radio noise and creates little interference. It is used to comply with the regulations for use with ISM Band.

There are two types of spread spectrum:

- (i) Frequency Hopping (FH), and
- (ii) Direct Sequence (DS)

Both these techniques are used in wireless data network products as well as other communication application such as, a cordless telephone please refer to [5] for further studies.

Under this scheme, the signal is broadcast over a seemingly random data sequence RF hopping from frequency to frequency at split second intervals. A receiver hopping between frequencies in synchronisation with the transmitter, picks up the message. Using FHSS (Frequency Hopped Spread Spectrum) the 2.4 GHz is divided into 75 MHz Channel. In this scheme, a pseudorandom number generator is used to produce the sequence of the frequencies hopped to. As long as all stations use the same seed to the pseudorandom number generator and stay synchronised in time, they will hop to the same frequencies simultaneously. FHSS' randomisation provides a fair way to allocate spectrum in the unregulated ISM band. It also provides some sort of security. Because an intruder does not know the hopping sequence it cannot eavesdrop on transmissions. Over longer distance, multipath fading can be an issue, and FHSS offers good resistance to it. It is also relatively insensitive to radio interference, which makes it popular for building-to-building links. Its main disadvantage is its low bandwidth. FHSS allows for a less complex radio design than DSSS but FHSS is limited to 2 Mbps data transfer rate due to FCC regulations that restrict subchannel bandwidth to 1 MHz causing many hops which means a high amount of hopping overhead. The DSSS is a better choice for WLAN application. It is also restricted to 1 or 2 Mbps.

DSSS divides 2.4 GHz band into 14 channels. Channels using at the same location should be separated 25 MHz from each other to avoid interference. FHSS and DHSS are fundamentally different signaling techniques and are not capable of interoperating with each other. Under this scheme, each but in the original signal is represented by multiple bits in the transmitted signal, which is known as chipping code. The chipping code spreads the signal across a wider frequency band in direct proportion to the number of bits used. Therefore, a 10 bit chopping code spreads signal across a frequency band that is 10 times greater than 1 bit chipping code (Ref. 3).

#### 4.6.2 The 802.11 MAC Sub-layer Protocol

After the discussion on the physical layer it is time to switch over to the IEEE 802.11 MAC sublayer protocols which are quite different from that of the Ethernet due, to the inherent complexity of the wireless environment compared to that of a wired system. With Ethernet (IEEE 802.3) a node transmits, in case, it has sensed that the channel is free. If, it does not receive a noise burst back within the first 64 bytes, the frame has almost assuredly been delivered correctly. With wireless technology, this situation does not hold.

As mentioned earlier 802.11 does not use CSMA/CD due to the following problems:

(i) The Hidden Station Problem: CSMA does not avoid the hidden station problem

(Figure (a) & (b))

A transmit to B

B receives the message
C does not hear the transmission

(a)

A tries to transmit to B

C also tries to transmit both


Message to B arrive at B

leading to garbage.

(b)

Figure 6: (a) The hidden station problem

(ii) The exposed Station Problem CSMA may cause nodes to unnecessarily refrain from accessing the channel as shown in the *Figure below:* 



**B** Transmits to **A** which is heard by **C** 

 ${f C}$  unnecessarily avoids sending a message to  ${f D}$  even though there would be no collision.

Figure 6: (b) The exposed station problem

(iii) In addition, most radios are half duplex, meaning that they cannot transmit and listen for noise bursts at the same time on a single frequency as Ethernet does.

To deal with this problem, 802.11 supports two modes of operation.

- DCF (Distributed Coordination Function)
- PCF (Point Coordinated Function) (optional)

Now, we, will examine IEEE 802.11 DCF separately. It does not use any central control. In this respect it is similar to Ethernet.

When DCF is employed, 802.11 uses a protocol called CSMA/CA (CSMA with Collision Avoidance). In this protocol, both **physical channel sensing** and **virtual channel sensing** are used. Two methods of operation are supported by CSMA/CA. In the first method (Physical sensing), before the transmission, it senses the channel. If the channel is sensed idle, it just wants and then transmitting. But it does not sense the channel while transmitting but, emits its entire frame, which may well be destroyed at the receiver's end due to interference there. If, the channel is busy, the sender defers transmission until it goes idle and then starts transmitting. If, a collision occurs, the colliding stations wait for a random time, using the Ethernet binary exponential backoff algorithm and then try again later.

The second mode of CSMA/CA operation is based on MACAW and uses virtual **channel sensing**, as illustrated in *Figure 6*. In this example, there are four stations A,

Wireless LAN and Datalink Layer Switching

Media Access Control and Data link Layer

B, C, and D. A is a transmitter and B is a receiver, C is within the radio range of A (and possibly within the range of B) where as D is within the range of B but not within range of A.

When A has to send data to B, it begins by sending an RTS frame to B to request permission to send it a frame. When B receives this request, it may decide to grant permission, in which case it sends the

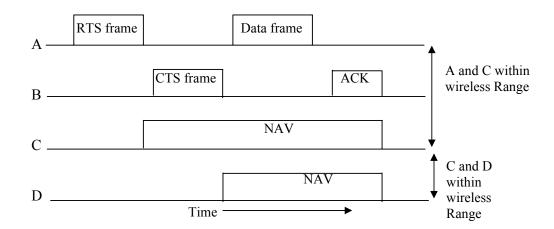


Figure 7: The use of virtual channel sensing using CSMA/CA

CTS frame back. Upon receipt of the CTS, A now sends its frame and starts an ACK timer. Upon correct receipt of the data frame, B responds with an ACK frame leading to the closure of data transfer operation between A & B. In case A's ACK timer expires before the ACK gets back to it, the whole protocol is run again.

Now, how will C and D nodes react to it? Node C is within range of A, so it may receive the RTS frame. C may receive the RTS frame because it is in the rage of A. From the information in the RTS frame it estimates how long the transfer will take, including the final ACK and asserting a kind of virtual channel busy for itself, indicated by NAV (Network Allocation Vector) as shown in *Figure 7*. Similarly, D also asserts the NAV signal for itself because it hears the CTS. The NAV signals are not for transmission. They are just internal reminders to keep quite for a certain period of time.

In contrast to wired networks, wireless networks are noisy and unreliable. To deal with the problem of noisy channels, 802.11 allows frames to be fragmented into smaller pieces, each with its own checksum because, if a frame is too long, it has very little chance of getting through undamaged and will, probably have to be retransmitted. The fragments are individually numbered and acknowledged using a stop and wait protocol at LLC (i.e., the sender may not transmit fragment k+1 until it has received the acknowledgement for fragment k). Once the channel has been acquired using RTS and CTS, multiple fragments can be sent in a row, as shown in Fig. 8. A sequence of fragments is called a **fragment burst.** 



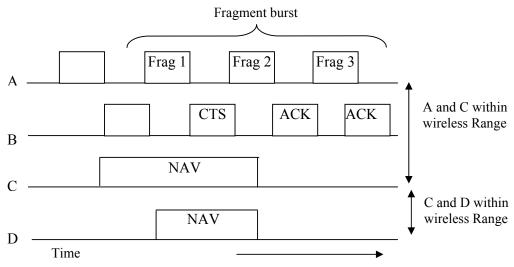


Figure 8: A fragment burst

The second advantage of fragmentation is that it increases the channel throughput by not allowing retransmission to the bad fragments rather than the entire frame. The size of C fragment can be adjusted by a base station in a cell. A base station in a cell can adjust the size of C fragment. The NAV mechanism keeps other stations quiet, only until the next acknowledgement, but another mechanism (described below) is used to allow a whole fragment burst to be sent without interference.

So, far we have discussed DCF in which, the base station polls the other stations, asking them if they have any frames to send. Since, transmission order is completely controlled by the base station in PCF mode, no collisions ever occurs. The standard prescribes the mechanism for polling, but not the polling frequency, polling order, or even whether all stations need to get equal service.

The basic mechanism is for the base station to broadcast a beacon frame periodically (10 to 100 times per second). The beacon frame contains system parameters, such as hopping sequences and dwell times (for FHSS), clock synchronisation, etc. It also invites new stations to sign up for polling services. Once a station has signed up for polling service at a certain rate, it is effectively guaranteed a certain fraction of the bandwidth, thus making it possible to give guarantee of quality services.

Battery life is always an issue with mobile wireless devices, so 802.11 pays attention to the issue of power management. In particular, the base station can direct a mobile station to go into sleep state until explicitly awakened by the base station or the user. Having told a station to go to sleep, however, means that the base station has the responsibility for buffering any frames directed at it while the mobile station is asleep. These can be collected later.

PCF and DCF can coexist within one cell. At first it might seem impossible to have central control and distributed control operating at the same time, but 802.11 provides a way to achieve this goal. It works by carefully defining the interframe time interval. After a frame has been sent, a certain amount of dead time is required before any station can send a frame.

# 4.7 SWITCHING AT DATA LINK LAYER

Before discussing data link layer switching devices, let us talk about repeaters which are layer 1 devices. Repeaters provide both physical and electrical connections. Their functions are to regenerating and propagate a signal in a channel. Repeaters are used to extend the length of the LAN which depends upon the type of medium. For example 10 mbps 802.3 LAN that uses UTP cable (10 BASE-T) has a maximum

Media Access Control and Data link Layer

restriction of 100 meters. Many organisations have multiple LANs and wish to connect them. LANs can be connected by devices called **bridges**, which operate as the data link layer. Unlike repeaters, bridges connect networks that have different physical layers. It can also connect networks using either the same or different types of architecture at the MAC. (Token ring, FDDI, Ethernet etc).

Bridges have some other characteristics:

- (i) Store and forward device.
- (ii) Highly susceptible to broadcast storms.

Bridges are store and forward devices to provide error detection. They capture an entire frame before deciding whether to filter or forward the frame, which provides a high level of error detection because a frame's CRC checksum can be calculated by the bridge. Bridge are highly succeptable to broadcast storms. A broadcast storm occurs when several broadcasts are transmitted at the same time. It can take up huge bandwidth.

Before looking at the technology of bridges, it is worthwhile taking a look at some common situations in which bridges are used. **Tanenbaun** [Ref.1] has six reasons why a single organisation may end up with multiple LANs.

- Multiple LANs in organisation: Many university and corporate departments have their own LANs, primarily to connect their own personal computers, workstations, and servers. Since the goals of the various departments differ, different departments choose different LANs. But there is a need for interaction, so bridges are needed.
- 2) **Geographical difference:** The organisation may be geographically spread over several buildings separated by considerable distances. It may be cheaper to have separate LANs in each building and connect them with bridges and later link them to run a single cable over the entire site.

# Bridge Bridge Bridge LAN 1 LAN 2 LAN 3

Figure 9: Multiple LANs connected by a backbone to handle a total load higher than the capacity of single LAN

- 3) **Load distribution**: It may be necessary to split what is logically a single LAN into separate LANs to accommodate the load.
- 4) **Long Round Trip delay:** In some situations, a single LAN would be adequate in terms of the load, but the physical distance between the most distant machines is can be great (e.g. more than 2.5 km for Ethernet). Even if, laying the cable is easy to do, the network would not work due to the excessively long round-trip delay. The only solution is to partition the LAN and install bridges between the segments. Using bridges, the total physical distance covered can be increased.

- 5) **Reliability:** By inserting bridges at critical points reliability can be enforced in the network by isolating a defective node. Unlike a repeater, which just copies whatever it sees, a bridge can be programmed to exercise some discretion regarding what forwards and what it does not forward.
- Wireless LAN and Datalink Layer Switching
- 6) **Security** is a very important feature in bridges today, and can control the movement of sensitive traffic by isolating the different parts of the network.

In an ideal sense, a bridge should have the following characters:

- (i) **Fully transparent:** It means that it should allow the movement of a machine from one cable segment to another cable segment without change of hardware and software or configuration tools.
- (ii) **Interpretability:** It should allow a machine on one LAN segment to talk to another machine on another LAN segment.

# 4.7.1 Operation of Bridges in Different LAN Environment

Having studied the features of bridges and why we require multiple LANs, let's learn how they work. Assume that, there are two machines A and B. Both of them are attached to a different LANs. Machine A is on a wireless LAN (Ethernet IEEE 802.3). While B is on both LANs are connected to each other through a bridge. Now, A has a packet to be sent to B. The flow of information at Host A is shown below:

- 1) The packet at machine A arrives at the LLC sublayer from the application layer through the transport layer and network layer.
- 2) LLC Sublayer header get attached to the packet.
- 3) Then it moves to the MAC Sublayer. The packet gets MAC sublayer header for attachment.
- 4) Since the node is part of a wireless LAN, the packet goes to the air using GRF.
- 5) The packet is then picked up by the base station. It examines its destination address and figures that it should be forwarded to the fixed LAN (it is Ethernet in our case).
- 6) When the packet arrives at the bridge which connects the wireless LAN and Ethernet LAN, it starts at the physical layer of the bridge and moves to its LLC layer. At the MAC sublayer its 802.11 header is removed.
- 7) The packet arrives at the LLC of a bridge without any 802.11 header.
- 8) Since the packet has to go to 802.3 LAN, the bridge prepares packets accordingly.

Note that a bridge connecting k different LANs will have K different MAC sublayers and k different physical layers. One for each type.

So far we have presented a very simplistic scenario in forwarding a packet from one LAN to another through a bridge. In this section, we will point out some of the difficulties that one encounters when trying to build a bridge between the various 802 LANs due to focus on the following reasons:

1) **Different frame Format :**To start with, each of the LANs uses a different frame format. Unlike the differences between Ethernet, token bus, and token ring, which were due to history and big corporate egos, here the differences are to some extent legitimate. For example, the *Duration* field in 802.11 is there, due to the MACAW protocol and that makes no sense in Ethernet. As a result, any copying between different LANs requires reformatting, which takes CPU time, requires a new checksum calculation, and introduces the possibility of undetected errors due to bad bits in the bridge's memory.

Media Access Control and Data link Layer

- 2) **Different data rates**: When forwarding a frame from a fast LAN to a slower one, the bridge will not be able to get rid of the frames as fast as they come in. Therefore, it has to be buffered. For example, if a gigabit Ethernet is pouring bits into an 11-Mbps 802.11 LAN at top speed, the bridge will have to buffer them, hoping not to run out of memory.
- 3) **Different frame lengths:** An obvious problem arises when a long frame must be forwarded onto a LAN that cannot accept it. This is the most serious problem. The problem comes when a long frames arrives. An obvious solution is that the frame must be split but, such a facility is not available at the data link layer. Therefore the solution is that such frames must be discarded. Basically, there is no solution to this problem.
- 4) **Security:** Both 802.11 and 802.16 support encryption in the data link layer, but the Ethernet does not do so. This means that the various encryption services available to the wireless networks are lost when traffic passes over the Ethernet.
- 5) **Quality of service:** The Ethernet has no concept of quality of service, so traffic from other LANs will lose its quality of service when passing over an Ethernet.

# 4.7.2 Transparent Bridges

In, the previous section, we dealt with the problems encountered in connecting two different IEEE 802 LANs via a single bridge. However, in large organisations with many LANs, just interconnecting them all raises a variety of issues, even if they are all just Ethernet. In this section, we introduce a type of bridge called Transparent Bridge, which is a plug and play unit which you connect to your network and switch it on. There is no requirement of hardware and software changes, no setting of address switches, no downloading of routing tables, just plug and play. Furthermore, the operation of existing LANs would not be affected by the bridges at all. In other words, the bridges would be completely transparent (invisible to all the hardware and software). Operating in a promiscuous mode, a transparent bridge captures every frame that is transmitted in all the networks to which the bridge is connected. The bridge examines every frame it receives and extracts each frame's source address, which it adds to the backward address table.




Figure 10: A configuration with four LANs and two bridges.

As an example take the following Confirmation (Figure 10). There are 3 LANs: LAN1, LAN2 and LAN3 and two Bridges B1 and B2. B1 is connected to LAN1 and LAN2 and bridges B2 is connected to LAN2 and LAN3. The routing procedure for an incoming frame depends on the LAN it arrives on (the source LAN) and the LAN its destination is on (the destination LAN), as follows:

- 1) If destination and source LANs are the same, discard the frame. (For example packet from A is going to B. Both are on the same LAN i.e. LAN1).
- 2) If the destination and source LANs are different, forward the frame. (For example, a packet from A on LAN1 has to go to D on LAN3)
- 3) If the destination LAN is unknown, use flooding.

When the bridges are first plugged in, all its hash tables are empty. None of the bridges know where these destination nodes are exactly. Therefore, they use a

flooding algorithm: every incoming frame for an unknown destination is output on all the LANs to which the bridge is connected, except to the one it arrived on. Gradually, the bridges learn where destinations are. Once the destination is known there is no more flooding and the packet is forwarded on the proper LAN.

Wireless LAN and Datalink Layer Switching

The algorithm used by the transparent bridges is called **backward learning.** As mentioned above, the bridges operate in promiscuous mode, so they see every frame sent on any of their LANs. By looking at the source address, they can tell which machine is accessible on which LAN. For example, if bridge B2 in Figure 10 sees a frame on LAN 3 coming from D, it knows that D must be reachable via LAN 3, so it makes an entry in its hash table noting that frames going to D should use LAN 3.

#### 4.7.3 Spanning Tree Bridges

For reliability, some networks contain more than one bridge, which increases the likelihood of *networking loops*. A networking loop occurs when frames are passed from bridge to bridge in a circular manner, never reaching its destination. To prevent networking loops when multiple bridges are used, the bridges communicate with each other and establish a map of the network to derive what is called a spanning tree for all the networks. A spanning tree consists of a single path between source and destination nodes that does not include any loops. Thus, a spanning tree can be considered to be a loop-free subset of a network's topology. The spanning tree algorithm, specified in IEEE 802.1d, describes how bridges (and switches) can communicate to avoid network loops.

# 4.7.4 Source Routing Bridges

IBM introduced source routing bridges for use in token ring networks. With source routing, the sending machine is responsible for determining whether, a frame is destined for a node on the same network or on a different network. If, the frame is destined for a different network, then, the source machine designates this by setting the high-order bit of the group address bit of the source address to 1. It also includes in the frame's header the path the frame is to follow from source to destination. Source routing bridges are based on the assumption that a sending machine will provide routing information for messages destined for different networks. By making the sending machine responsible for this task, a source routing bridge can ignore frames that have not been "marked" and forward only those frames with their high-order destination bit set to 1.

# **Check Your Progress 2**

|    | What are the features of a transparent bridge?                               |  |  |  |
|----|--|--|--|--|
|    |  |  |  |  |
|    |  |  |  |  |
| 2) | What are the difficulties in building a bridge between the various 802 LANs? |  |  |  |
|    |  |  |  |  |
|    |  |  |  |  |
|    |  |  |  |  |

# 4.8 SUMMARY

In this unit we discussed two major topics wireless LANs and switching mechanism at the data link layer with IEEE at the data link layer. With IEEE 802.11 standardisation, wireless LANs are becoming common in most of the organisations but, they have

Media Access Control and Data link Layer

their own problems and solutions CSMA/CD does not work due to hidden station problem. To make CSMA work better two new protocols, MACA and MACAW were discussed. The physical layer of wireless LAN standard i.e. IEEE 802.11 allows five different transmission modes, including infrared, various spread spectrum schemes etc. As a part of inter LANs connecting mechanism we discussed different types of bridges. Bluetooth was not taken up in this unit, although, it is a very important topic today. It is a also a wireless network used for connecting handsets and other peripherals to computers without wires.

# 4.9 SOLUTIONS/ANSWERS

#### **Check Your Progress 1**

- The problem of a station not being able to detect another node for the medium because the competitor is outside its wireless range is called hidden station problem.
- 2) The crux of the issue is that the CSMA can be applied to wireless environment. Because it simply informs whether there is a transmission activity around the sender node that senses the carrier. Whereas, in a wireless environment, before sending a transmission, a station needs whether there is activity around the receiver or not. With a wire, all signals inform all stations, so, only one transmission can take place at a time, anywhere in the system.
- 3) It is different in the following ways:
  - Addition of a data link layer acknowledgement
  - Addition of carrier sensing
  - An improved backoff mechanism
  - Addition of DS message

# **Check Your Progress 2**

- It is a plug and play device. There are no additional requirement of Hardware and Software changes, no setting of address switches, no downloading of routing table, in case, it is used to connect LANs. It does not affect the operation of LANs.
- 2) The following are the difficulties in building a bridge between the various 802 LAN:
  - i) Different frame formats
  - ii) Different data rates
  - iii) Different frame length
  - iv) Security.

# 4.10 FURTHER READINGS

- 1) Computer Networks, A. S. Tanenbaum 4<sup>th</sup> Edition, Practice Hall of India, New Delhi. 2003.
- 2) *Computer Networking*, J.F. Kurose & K.W. Ross, A Top Down Approach Featuring the Internet, Pearson Edition, 2003.
- 3) *Introduction to Data Communication & Networking*, Behrouz Forouzan, Tata McGraw Hill, 1999.
- 4) Communications Networks, Leon Garcia, and Widjaja, Tata McGraw Hill, 2000.
- 5) Data and Computer Communications, Willian Stallings, 6<sup>th</sup> Edition, Pearson Education, New Delhi.

Wireless LAN and **Datalink Layer Switching** 



# UNIT 1 INTRODUCTION TO LAYER FUNCTIONALITY AND DESIGN ISSUES

| Struc<br>Nos. | cture  | Page |    |
|---------------|--|------|----|
| 1.0           | Introduction   |      | 5  |
| 1.1           | Objectives   |      | 6  |
| 1.2           | Connection Oriented vs. Connection-less Services 1.2.1 Connection-oriented Services 1.2.2 Connection-less Services   |      | 6  |
| 1.3           | Implementation of the Network Layer Services 1.3.1 Packet Switching 1.3.2 Implementation of Connection -oriented Services 1.3.3 Implementation of Connection-less Services |      | 7  |
| 1.4<br>1.5    | Comparison between Virtual Circuit and Datagram Subnet Addressing 1.5.1 Hierarchical Versus Flat Address 1.5.2 Static vs. Dynamic Address 1.5.3 IP Address                 | 11   | 13 |
| 1.6           | Concept of Congestion  |      | 16 |
| 1.7           | Routing Concept 1.7.1 Main Issues in Routing 1.7.2 Classification of Routing Algorithm   |      | 17 |
| 1.8           | Summarys   |      | 20 |
| 1.9           | Solutions/Answers  |      | 20 |
|               | Further Readings   |      | 22 |

# 1.0 INTRODUCTION

In the previous blocks of this course, we have learned the basic functions of physical layer and data link layer in networking. Now, in this chapter, we will go through the functions of the network layer.

The network layer is at level three in OSI model. It responds to service requests from the transport layer and issues service requests to the data link layer. It is responsible for end-to-end (source to destination) packet delivery, whereas the data link layer is responsible for node-to-node (hop-to-hop) packet delivery. Three important functions of the network layers are:

- **Path Determination:** It determines the route taken by the packets from the source to the destination.
- **Forwarding:** It forwards packets from the router's input to the appropriate router output.
- Call Setup: Some network architectures require router call setup along the path before the data flows. To perform these functions, the network layer must be aware of the topology of the communication subnet (i.e., set of routers, communication lines).

For end-to-end delivery, the network provides two type of services i.e., **connection oriented service** and **connection less service** to the transport layer. The network layer services meet the following entries [ref.1].

- Transport layer should not be aware of the topology of the network (subnet).
- Services should be independent of the router technology.

In this unit, we will first go through the basic concepts of these services and will then differentiate between these two. Then, we will introduce some other concepts like routing and congestion.

# 1.1 **OBJECTIVES**

After going through this unit, you should be able to:

- define basic functions of the network layer;
- differentiate between connection oriented and connection less services;
- define the concept of addressing in networking;
- define congestion in the network layer;
- explain the concept of routing;
- explain the concept of pocket switching, and
- define packet switching network.

# 1.2 CONNECTION ORIENTED Vs. CONNECTION- LESS SERVICES

In computer networks, delivery between source and destination can be accomplished in either of the two ways:

- Connection-oriented services
- Connection-less services.

#### 1.2.1 Connection-oriented Services

Connection-oriented services define a way of transmitting data between a sender and a receiver, in which an end-to-end connection is established before sending any data. After establishing a connection, a sequence of packets, (from the source to destination), can be sent one after another. All the packets belonging to a message are sent from the same connection. When all packets of a message have been delivered, the connection is terminated.

In connection-oriented services, the devices at both the endpoints use a protocol to establish an end-to-end connection before sending any data.

Connection-oriented service usually has the following **characteristics**:

- i) The network guarantees that all packets will be delivered in order without loss or duplication of data.
- ii) Only a single path is established for the call, and all the data follows that path.
- iii) The network guarantees a minimal amount of bandwidth and this bandwidth is reserved for the duration of the call.
- iv) If the network is over utilised, future call requests are refused.

Connection-oriented service is sometimes called a "reliable" network service because:

- It guarantees that data will arrive in the proper sequence.
- Single connection for entire message facilitates acknowledgement process and retransmission of damaged and lost frames.

Connection-oriented transmission has three **stages**. These are:

- (i) Connection establishment: In connection oriented services, before transmitting data, the sending device must first determine the availability of the other to exchange data and a connection must be established by which data can be sent. Connection establishment requires three steps. These are:
  - a) First the sender computer requests the connection by sending a connection request packet to the intended receiver.
  - (b) Then the receiver computer returns a confirmation packet to the requesting computer.
  - (c) Finally, the sender computer returns a packet acknowledging the confirmation.
- (ii) **Data transfer:** After the connection gets established, the sender starts sending data packets to the receiver.
- (iii) Connection termination: After all the data gets transferred, the connection has to be terminated. Connection termination also requires a three-way handshake i.e.,
  - (a) First, the sender computer requests disconnection by sending a disconnection request packet.
  - (b) Then, the receiver computer confirms the disconnection request.
  - (c) Finally, the sender computer returns a packet acknowledging the confirmation.

**Transmission Control Protocol** (TCP) is a connection-oriented protocol.

#### 1.2.2 Connection-less Services

Connection-less services define a way of communication between two network end points in which, a message can be sent from one end point to another without prior arrangement. The sender simply starts sending packets, addressed to the intended recipient.

Connectionless service is a service that allows the transfer of information among subscribers without the need for end-to-end connection establishment procedures.

Connection-less service is sometimes known as "**unreliable**" network service. Connection-less protocols are usually described as stateless because the endpoints have no protocol-defined way of remembering where they are in a "conversation" of message exchange.

The Internet Protocol (IP) and User Datagram Protocol (UDP) are connectionless protocols, but TCP/IP (the most common use of IP) is connection-orientated.

# 1.3 IMPLEMENTATION OF THE NETWORK LAYER SERVICES

In this section, we will examine how the network layer services are implemented. Two different services are taken into consideration depending on the type of service being offered. These two schemes are known as virtual circuit subnet (VC subnet) for connection-oriented service and datagram subnet for **connection-less** services. A VC subnet may be compared to the physical circuit required in a telephone setup. In a connection-oriented service, a route from the source to the destination must be established. In a datagram subnet, no advance set up is needed. In this case, packets are routed independently. But, before we take up the implementation issues let us,

revisit the packet switching concepts once again. The services are implement through a packet switched network.

#### 1.3.1 Packet Switching

In the fourth unit of Block 1, we introduced the concept of packet switching. We further elaborate in this section, in the context of the network layer. The network layer operates in the packet switched network (or subnet) environment which comprises several routers linked with transmission lines (leased or dial up) besides user's machines as shown in *Figure 1*.

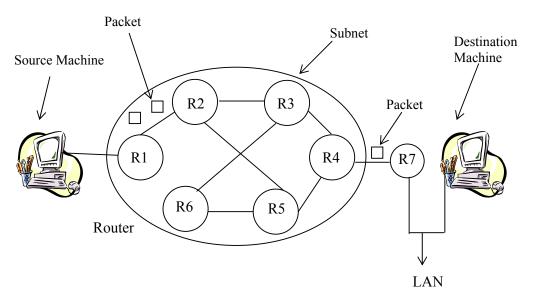


Figure 1: A Packet switched network

This subnet works in the following manner. Whenever user wants to send a packet to another users, s/he transmits the packet to the nearest router either on its own LAN or over a point-to-point link to the carrier. The packet is stored for verification and then transmitted further to the next router along the way until it reaches the final destination machine. This mechanism is called packet switching.

But, why packet switching? Why not circuit switching? Now, let us discuss these issues.

Circuit switching was not designed for packet transmission. It was primarily designed for voice communication. It creates temporary (dialed) or permanent (leased) dedicated links that are well suited to this type of communication [Ref. 2].

- (i) Data transmission tend to be bursty, which means that packets arrive in spurts with gaps in between. In such cases, transmission lines will be mostly idle leading to wastage of resources if we use circuit switching for data transmission.
- (ii) **Single Data Rate:** In circuit switching mechanism there is a single data rate for the two end devices which limits flexibility and usefulness of circuit switched connection for networks interconnection of a variety of digital devices.
- (iii) **No priority to transmission:** Circuit switching treats all transmissions as equal. But often, with data transmission we may be required to send a certain packet on a high priority basis, which may not be implemented with the circuit switching approach.

#### 1.3.2 Implementation of Connection-oriented Services

To implement connection-oriented services, we need to form a **virtual-circuit** subnet. This idea behind the creation of a VC is so that, a new route for every packet sent.

In virtual circuits:

- First, a connection needs to be established.
- After establishing a connection, a route from the source machine to the
  destination machine is chosen as part of the connection setup and stored in
  tables inside the routers. This route is used for all traffic flowing over the
  connection.
- After transmitting all the data packets, the connection is released. When the connection is released, the virtual circuit is also terminated.

In a connection-oriented service, each packet carries an identifier that identifies the virtual circuit it belongs to.

Now, let us take an example, consider the situation of a subnet in *Figure 2*. In this figure, H1,H2 and H3 represent host machines and R1, R2, R3, R4, R5 and R6 represent routers. Processes are running on different hosts.

Here, host HI has established connection 1 with host H2. It is remembered as the first entry in each of the routing tables as shown in *Table 1*. The first line of R1's table says that, if a packet bearing connection identifier 1 comes in from HI, it is to be sent to router R3, and given connection identifier 1. Similarly, the first entry at R3 routes the packet to R5, also with connection identifier 1.

Now, let us consider a situation in which, H3 also wants to establish a connection with H2. It chooses connection identifier 1 (because it is initiating the connection and this is its only connection) and informs the subnet to setup the virtual circuit. This leads to the second row in the table. Note, that we have a conflict here because although R1 can easily distinguish connection 1 packets from H1 and connection 1 packets from H3, R3 cannot do this. For this reason, R1 assigns a different connection identifier to the outgoing traffic for the second connection (No.2). In order to avoiding conflicts of this nature, it is important that routers have the ability to replace connection identifiers in outgoing packets. In some contexts, this is called label switching.

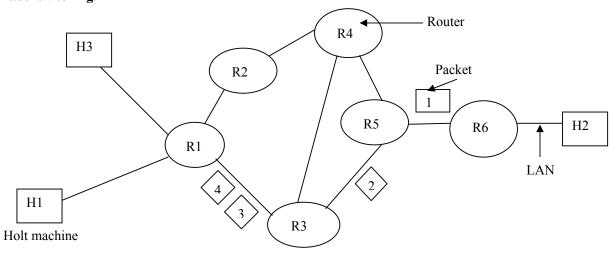


Figure 2: Routing in a virtual circuit subnet

Table 1: Routing table for VC subnet

R1's Table

| H1 | 1 |  |  |
|----|---|--|--|
| Н3 | 1 |  |  |
| in |   |  |  |

| R3  | 1 |  |  |
|-----|---|--|--|
| R3  | 2 |  |  |
| out |   |  |  |

R3's Table

| R1 | 1 |  |  |  |
|----|---|--|--|--|
| R1 | 1 |  |  |  |
| in |   |  |  |  |

| R5  | 1 |  |  |  |
|-----|---|--|--|--|
| R5  | 2 |  |  |  |
| out |   |  |  |  |

R5's Table

| R3 | 1 |  |  |  |
|----|---|--|--|--|
| R3 | 1 |  |  |  |
| in |   |  |  |  |

| R6  | 1 |  |  |  |
|-----|---|--|--|--|
| R6  | 1 |  |  |  |
| out |   |  |  |  |

# 1.3.3 Implementation of Connection-less Services

In this section, we shall discuss the implementation of these services i.e., how connection-less services are implemented in real networks. To implement connection-less services, we need a datagram subnet.

In these services, packets are individually injected into the subnet and their routing decisions are not dependent on each other (packets). Therefore, in connectionless services, no advance setup is needed. In this context, the packets are frequently called **datagrams** and the subnet is called a **datagram subnet**.

Now, let us take an example to learn how a datagram subnet works. Consider the situation of *Figure 3*. In this *Figure*, H1 and H2 represent host machines and R1, R2, R3, R4, R5 and R6 represent routers. Suppose, that the process running at host H1 has a long message to be transmited to a process running at H2 machine. To do so, it transfers the message to the transport layer with appropriate instructions to deliver it to the process running at H2. Where is the transfer layer process running, can you figure out? Well, it may also be running on H1 but within the operating system. The transport layer process adds a transport header to the front of the message and transfers the message (also called TPDU) to the network layer, The network layer too, might be running as another procedure within the operating system.

Let us assume, that the message is five times longer than the maximum packet size, therefore, the network layer has to break it into five packets, 1,2, 3, 4 and 5 and send each of them in turn to router R1 (because it is linked to R1) using some point-to-point protocol. After this, the carrier (supported by ISP) takes over. Every router has an internal table telling it where to send packets for each possible destination. Each table entry is a pair consisting of a destination and the outgoing line to use for that destination. Only directly-connected lines can be used. For example, in *Figure 3*, R1 has only two outgoing lines-to R2 and R3. So every incoming packet must be sent to one of these routers.

As the packets arrive at R1 from H1, packets 1, 2, and 3 were stored briefly (to verify their checksums). Then, each packet was forwarded to R3 according to R1's table (table not shown here). Packet 1 was then forwarded to R5 and from R5 to R6. When it got to R6, it was encapsulated in a data link layer frame and sent to H2. Packets 2 and 3 follow the same route.

However, something different happened to packet 4 and 5. When it got to R1 it was sent to router R2, even though it has the same destination. Due to some reason (for ex. congestion), R1 decided to send packet 4 and 5 via a different route than that of the first three.

The algorithm that manages the tables and makes the routing decisions is known as the **routing algorithm**. In next unit, we shall study routing algorithms. Students are

requested to refer to [Ref. 1] for further study on the implementation of connection oriented and connection less services. You should focus on connecting routing tables.

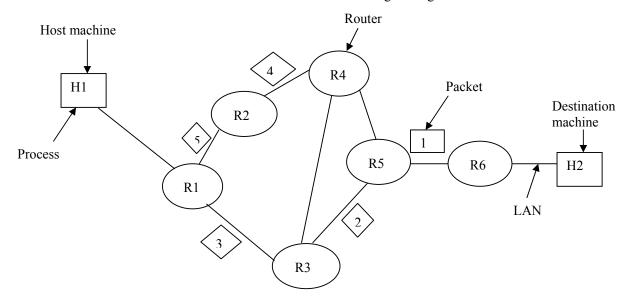


Figure 3: Routing in a datagram subnet

# 1.4 COMPARISON BETWEEN VIRTUAL CIRCUIT AND DATAGRAM SUBNET

Both virtual circuits and datagrams have their pros and cons. We shall compare them on the basis of different parameters. These various parameters are:

# • Router memory space and bandwidth

Virtual circuits allow packets to contain circuit numbers instead of full destination addresses. A full destination address in every packet may represent a significant amount of overhead, and hence waste bandwidth.

#### Setup time vs. address parsing time

Using virtual circuits requires a setup phase, which takes time and consumes memory resources. However, figuring out what to do with a data packet in a virtual-circuit subnet is easy: the router simply uses the circuit number to index into a table to find out where the packet goes. In a datagram subnet, a more complicated lookup procedure is required to locate the entry for the destination.

#### • Amount of table space required in router memory

A datagram subnet needs to have an entry for every possible destination, whereas a virtual-Circuit subnet just needs an entry for each virtual circuit.

# Quality of service

Virtual circuits have some advantages in guaranteeing quality of service and avoiding congestion within the subnet because resources (e.g., buffers, bandwidth, and CPU cycles) can be reserved in advance, when the connection is established. Once the packets start arriving, the necessary bandwidth and router capacity will be there. With a datagram subnet, congestion avoidance is more difficult.

#### • Vulnerability

Virtual circuits also have a vulnerability problem. If, a router crashes and loses its memory, even if it comes back a second later, all the virtual circuits passing through it will have to be aborted. In contrast, if a datagram router goes down, only those users whose packets were queued in the router at the time will suffer, and maybe not even all those, depending upon whether they have already been acknowledged. The loss of a communication line is fatal to virtual circuits using it but can be easily compensated for if datagrams are used.

#### • Traffic balance

Datagrams also allow the routers to balance the traffic throughout the subnet, since routes can be changed partway through a long sequence of packet transmissions. A brief comparison between a virtual circuit subnet and a datagram subnet is given in *Table 2*. Students should refer to Reference 1 for further discussion.

Table 2: Comparison between Virtual Circuit and Datagram Subnets (Source: Ref. [1])

| Issue                        | Datagram subnet                         | Virtual-circuit subnet                   |
|------------------------------|---|--|
| Addressing machine           | Each datagram contains                  | Each datagram contains a Small VC number |
|                              | the full source and destination address | Small vC number                          |
| Referencing of Circuit setup | Not needed                              | Required                                 |
| State information by a       | Routers do not hold state               | Each VC requires router                  |
| router                       | information about connections.          | table space per connection.              |
| Routing procedure            | Each datagram is                        | Route is selected when                   |
|                              | routed independently.                   | VC is set up and all                     |
|                              |   | the packets follow all routes.           |
| Effect of router failures    | None, except the datagram               | All VCs that passed                      |
|                              | lost during the crash                   | through the failed router                |
|                              |   | are terminated and the                   |
|                              |   | new virtual circuit is established       |
| Quality of service           | Difficult                               | Easy                                     |
| Congestion control           | Difficult                               | Easy                                     |
| mechanism                    |   |  |

# **™** Check Your Progress 1

Give right choice for the following:

- 1) Connection-oriented service is sometimes called a .....network service.
  - (a) Reliable
  - (b) Unreliable.
- 2) .....is a connection-oriented protocol.
  - (a) UDP
  - (b) TCP
  - (c) IP
- 3) Why are connection oriented services known as reliable services? Explain brifly.

| <br> | <br> |
|------|------|
| <br> | <br> |
| <br> | <br> |
|      |      |

# 1.5 ADDRESSING

Network addresses identify devices separately or as members of a group. Addressing is performed on various layers of the OSI model. Thus, schemes used for addressing vary on the basis of the protocol used and the OSI layer. On this basis, internetwork addresses can be categorised into three types. These are:

- (a) Data link layer addresses
- (b) Media Access Control (MAC) addresses
- (c) Network layer addresses.

#### a) Data Link Layer Addresses

Data-link layer addresses sometimes are referred to as *physical* or *hardware addresses*, uniquely identify each physical network connection of a network device. Usually data-link addresses have a pre-established and fixed relationship to a specific device.

End systems generally have only one physical network connection and thus, have only one data-link address. Routers and other internetworking devices typically have multiple physical network connections and therefore, have multiple data-link addresses.

#### b) Media Access Control (MAC) Addresses

Media Access Control (MAC) addresses are used to identify network entities in LANs that implement the IEEE MAC addresses of the data link layer. These addresses are 48 bits in length and are expressed as 12 hexadecimal digits.

MAC addresses are unique for each LAN interface. These addresses consist of a subset of data link layer addresses. *Figure 4* illustrates the relationship between MAC addresses, data-link addresses, and the IEEE sub-layers of the data link layer.

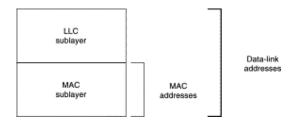


Figure 4: MAC addresses, data-link addresses, and the IEEE Sub-layers of the data link layer are all related

#### c) Network Layer Addresses

Network addresses are sometimes called virtual or logical addresses. These addresses are used to identify an entity at the network layer of the OSI model. Network addresses are usually hierarchical addresses.

#### 1.5.1 Hierarchical vs. Flat Address

Usually Internetwork addresses are of two types:

#### (i) Hierarchical address

Hierarchical addresses are organised into a number of subgroups, each successively narrowing an address until it points to a single device as a house address.

#### (ii) Flat address

A flat address space is organised into a single group, such as, your enrolment no. Hierarchical addressing offers certain advantages over flat-addressing schemes. In hierarchical addressing, address sorting and recalling is simplified using the comparison operation. For example, "India" in a street address eliminates any other country as a possible location. *Figure 5* illustrates the difference between hierarchical and flat address spaces.

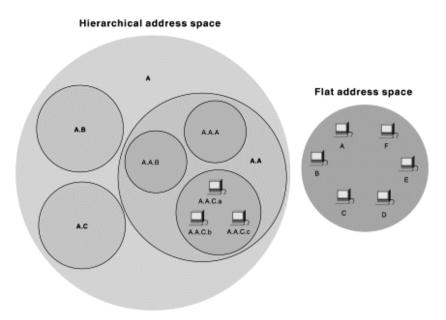


Figure 5: Hierarchical and flat address spaces differ in comparison operations

#### 1.5.2 Static vs. Dynamic Address

In networking, the address to a device can be assigned in either of these two ways:

- (i) **Static address assignment:** Static addresses are assigned by a network administrator according to a preconceived internetwork addressing plan. A static address does not change until the network administrator changes it manually.
- (ii) **Dynamic addresses:** Dynamic addresses are obtained by devices when they are attached to a network, by means of some protocol-specific process. A device using dynamic address often has a different address each time it connects to the network.

#### 1.5.3 IP Address

IP address is a unique address i.e., no two machines on the Internet can have same IP address. It encodes it's network number and host number. Every host and router, in a internetwork has an IP address.

The format of an IP address is a 32-bit numeric address written as four numbers separated by periods. Each number can be zero to 255. For example, 1.160.10.240 could be an IP address. These numbers defines three fields:

- (i) Class type: Indicate the IP class, to which the packet belongs:
- (ii) **Network identifier (netid):** Indicates the network (a group of computers). Networks with different identifiers can be interconnected with routers.
- (iii) **Host identifier (hostid):** Indicates a specific computer on the network.

| Class type | Netid | Hostid |
|------------|-------|--------|
|------------|-------|--------|

Figure 6: IP address

You will read more details on IP address in unit 4.

#### **™** Check Your Progress 2

| 1) | What are three types of internetwork addresses? Explain in brief. |  |  |
|----|---|--|--|
|    |   |  |  |
|    |   |  |  |
|    |   |  |  |
|    |   |  |  |
| 2) | Differentiate between following:                                  |  |  |
|    | (i) Hierarchical address and Flat address                         |  |  |
|    | (ii) Static and Dynamic address.                                  |  |  |
|    |   |  |  |
|    |   |  |  |
|    |   |  |  |
|    |   |  |  |
|    |   |  |  |
|    |   |  |  |

# 1.6 CONCEPT OF CONGESTION

In the network layer, when the number of packets sent to the network is greater than the number of packets the network can handle (capacity of network), a problem occurs that is known as congestion. This is just like congestion on a road due to heavy traffic. In networking, congestion occurs on shared networks when, multiple users contend for access to the same resources (bandwidth, buffers, and queues).

When the number of packet sent into the network is within the limits, almost all packets are delivered, however, the traffic load increases beyond the network capacity. As a result the system starts discarding packets.

Figure 7 shows congestion in a network due to too much traffic.

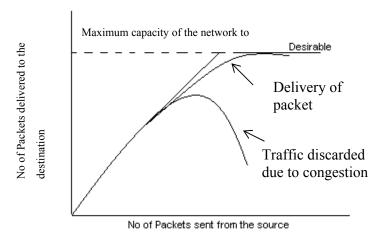


Figure 7: Congestion

Because routers receive packets faster than they can forward them, one of these two things may happen in case of congestion:

- The subnet may prevent additional packets from entering the congested region until those already present can be processed, or
- The congested routers can discard queued packets to make room for those that are arriving currently.

#### **Congestion Control**

Congestion control refers to the network mechanism and techniques used to control congestion and keep the load below the networks capacity.

Congestion handling can be divided into the following:

- **Congestion recovery:** Restore the operating state of the network when demand exceeds capacity.
- Congestion avoidance: Anticipate congestion and avoid it so that congestion never occurs.

By storing content closer to users i.e., caching can be the best congestion control scheme. In this manner, majority of the traffic could be obtained locally rather than being obtained from distant servers along routed paths that may experience congestion.

Some basic techniques to manage congestion are:

- 1) **End-system flow control:** This is not a congestion control scheme. It is a way of preventing the sender from overrunning the buffers of the receiver.
- 2) **Network congestion control:** In this scheme, end systems throttle back in order to avoid congesting the network. The mechanism is similar to end-to-end flow controls, but the intention is to reduce congestion in the network, not at the receiver's end.
- 3) **Network-based congestion avoidance:** In this scheme, a router detects that congestion may occur and attempts to slow down senders before queues become full.
- 4) **Resource allocation:** This technique involves scheduling the use of physical circuits or other resources, perhaps for a specific period of time. A virtual circuit, built across a series of switches with a guaranteed bandwidth is a form

# 1.7 ROUTING CONCEPT

Suppose, you need to go from location (A) to another location (B) in your city and more than one routes are available for going from location A to location B. In this case, first you decide the best route for going from location A to B. This decision may be based on a number of factors such as distance (route with minimum traffic distance), time (route with minimum traffic jam), cost etc. After deciding the best route you start moving on that route. The same principle is at work here, in computer networks also. While transferring data packets in a packet switched network the same principle is applied, and this is known as routing. Now, we can say that *routing is the act of moving data packets in packet-switched network, from a source to a destination*. Along the way, several intermediate nodes typically are encountered.

Routing occurs at Layer 3 (the network layer) in OSI reference model. It involves two basic activities:

- Determining optimal routing paths.
- Forwarding packets through a subnet. In this section, we will look at several issues related to routing.

# 1.7.1 Main Issues in Routing

Routing in a network typically involves a rather complex collection of algorithms that work more or less independently mainly due to the environment in which it works and yet support each other by exchanging services or information. The complex is due to a number of reasons. First, routing requires coordination between all the nodes of the subnet rather than just a pair of modules as, for example, in data link and transport layer protocols. Second, the routing system must cope with transmission link and router failures, requiring redirection of traffic resetting up of new VC and an update of the routing tables databases maintained by the system. Third, to achieve high performance, the routing algorithm may need to modify its routes when some areas within the network become congested.

There are two main performance measures that are substantially affected by the routing algorithm – throughput (quantity of service) and latency (average packet delay when quality of service is required). The parameter **throughput** refers to the number of packets delivered in the subnet. Routing interacts with **flow control** in determining these performance measures by means of a feedback mechanism shows in *Figure 8* When the traffic load offered by the external resources to the subnet is within the limits of the carrying capacity of the subnet, it will be fully accepted into the network, that is,

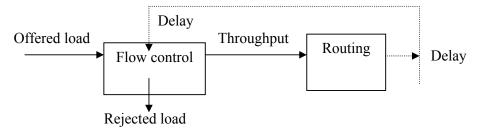


Figure 8: Interaction of routing and flow control

**Network throughput = offered packets** 

But, when the offered load exceeds the limit, the packet will be rejected by the flow control algorithm and

Network Throughput = offered packets – rejected packets

The traffic accepted into the network will experience an average delay per packet that will depend on the routes chosen by the routing algorithm.

However, throughput will also be greatly affected (if only indirectly) by the routing algorithm because typical flow control schemes operate on the basis of striking a balance between throughput and delay. Therefore, as the routing algorithm is more successful in keeping delay low, the flow control algorithm allows more traffic into the network, while the precise balance between delay and throughput will be determined by flow control, the effect of good routing under high offered load conditions is to realise a more favourable delay-throughput curve along which flow control operates, as shown in *Figure 9*.


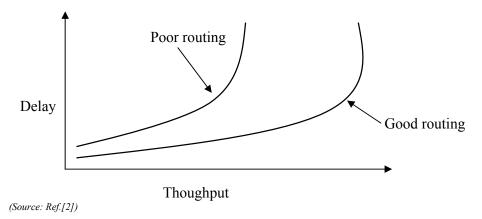


Figure 9: Throughput vs. delay graph

Let us take an example to understand the intencacy. In the network of *Figure 10*, all links have a capacity of 10 units. There is a single destination (R6) and two origins (R1 and R2). The offered pockets from each of R1 and R2 to R5 and R6 is 5 units. Here, the offered load is light and can easily be accommodated with a short delay by routing along the leftmost and rightmost paths, 1-3-6 and 2-5-6, respectively. If instead, however, the routes 1-4-6 and 2-4-6 are used, the flow on link (4,6) with equal capacity, resulting in very large delays.

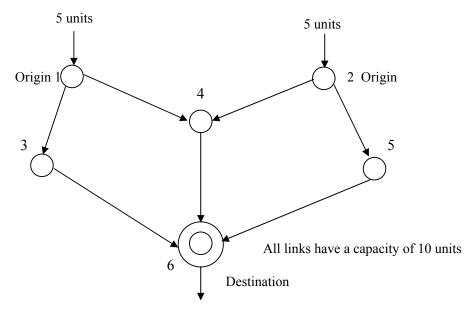

(Source ref. [2])

#### Figure 10: Example a sub network

Observe *Figure 10* once again. All links have a capacity of 10 units. If, all traffic is routed through the middle link (R4,R6), congestion occurs. If, instead, paths (R1-R3-R6) and (R2-R5-R6) are used, the average delay is shorter/lesses.

In conclusion, the effect of good routing is to increase throughput for the same value of average delay per packet under high offered load conditions and decrease average delay per packet under low and moderate offered load conditions. Furthermore, it is evident as low as possible for any given level of offered load. While this is easier said than done, analytically. Students are requested to refer to (*Ref. 2*) for further discussion. You are requested to further enhance your knowledge by reading [*Ref. 2*].

# 1.7.2 Classification of Routing Algorithm

Routing can be classified into the following types:

#### (i) Adaptive Routing

In adaptive routing; routing decisions are taken for each packet separately i.e., for the packets belonging to the same destination, the router may select a new route for each packet. In it, routing decisions are based on condition or the topology of the network.

#### (ii) Non-adaptive Routing

In non-adaptive routing; routing decisions are not taken again and again i.e., once the router decides a route for the destination, it sends all packets for that destination on that same route. In it routing decisions are not based on condition or the topology of the network.

#### **™** Check Your Progress 3

| What is congestion in the network? Explain in brief.                |
|---|
|   |
|   |
|   |
|   |
| Explain various congestion control schemes.                         |
|   |
|   |
|   |
|   |
| What is routing? What are various activities performed by a router? |
|   |
|   |
|   |
|   |
| Differentiate between adaptive and non-adaptive routing.            |
|   |
|   |
|   |
|   |

# 1.8 SUMMARY

In this unit, we looked at the two types of end-to-end delivery services in computer networks i.e., connection oriented service and connection less service. Connection-oriented service is a reliable network service, while connection-less service is unreliable network service. Then we studied the concept of addressing. A network addresses identifies devices separately or as members of a group. Internetwork addresses can be categorised into three types i.e., data link layer addresses, media access control (MAC) addresses and network layer addresses. After this, we studied a problem that occurs at the network layer level i.e., congestion. It is a problem that occurs due to overload on the network. Then, we discussed routing. It is the act of moving data packets in packet-switched network, from a source to a destination. We also examined the relationship between routing and flow control through an example and digrams.

# 1.9 SOLUTIONS/ANSWERS

#### **Check Your Progress 1**

- 1) a
- 2) b
- 3) Connection-oriented service is sometimes called a "reliable" network service because:
  - It guarantees that data will arrive in the proper sequence.
  - Single connection for entire message facilitates acknowledgement process and retransmission of damaged and lost frames.

# **Check Your Progress 2**

- 1) Three types of internetwork addresses are:
  - (i) Data link layer addresses:

Data-link layer addresses sometimes are referred to as *physical* or *hardware addresses*, because they uniquely identifies each physical network connection of a network device.

(ii) Media Access Control (MAC) addresses:

Media Access Control (MAC) addresses are used to identify network entities in LANs that implement the IEEE MAC addresses of the data link layer.

(iii) Network layer addresses:

Network addresses are sometimes called virtual or logical addresses. These addresses are used to identify an entity at the network layer of the OSI model.

- 2) (a) *Hierarchical addresses* are organised into a number of subgroups, each successively narrowing an address until it points to a single device as an house address.
  - A *flat address* space is organised into a single group, such as, your enrolment no.
  - (b) *Static addresses* are assigned by a network administrator according to a preconceived internetwork addressing plan. A static address does not change until the network administrator manually changes it.

*Dynamic addresses* are obtained by devices when they are attached to a network, by means of some protocol-specific process. A device using dynamic address often has a different address each time that it connects to the network.

#### **Check Your Progress 3**

- 1) In the network layer, when the number of packets sent to the network is greater then the number of packets the network can handle (capacity of network), a problem occurs that is known as congestion.
- 2) Congestion handling can be broadly divided into the following:

**Congestion recovery:** Restores the operating state of the network when demand exceeds capacity.

**Congestion avoidance:** Anticipates congestion and avoids it so that congestion never occurs.

Some basic techniques to manage congestion are:

- (a) End-system flow control: This is not a congestion control scheme. It is a way of preventing the sender from overrunning the buffers of the receiver.
- **(b) Network congestion control:** In this scheme, end systems throttle back in order to avoid congesting the network. The mechanism is similar to end-to-end flow controls, but the intention is to reduce congestion in the network, not at the receiver's end.
- **(c) Network-based congestion avoidance:** In this scheme, a router detects that congestion may occur and attempts to slow down senders before queues become full.
- (d) Resource allocation: This technique involves scheduling the use of physical circuits or other resources, perhaps for a specific period of a time. A virtual circuit, built across a series of switches with a guaranteed bandwidth is a form of resource allocation. This technique is difficult, but can eliminate network congestion by blocking traffic that is in excess of the network capacity.
- 3) Routing is the act of moving data packets in packet-switched network, from a source to a destination.
  - A Router is a device used to handle the job of routing. It identifies the addresses on data passing through it, determines which route the transmission should take and collects data in packets which are then sent to their destinations.
- 4) In *adaptive routing*, routing decisions are taken on each packet separately i.e., for the packets belonging to the same destination, the router may select a new route for each packet.

In *non-adaptive routing*, routing decisions are not taken again and again i.e., once the router decides a route to the destination, it sends all packets for that destination on the same route.

# 1.10 FURTHER READINGS

- 1) *Computer Network*, A. S. Tarenbaum, 4<sup>th</sup> edition, Prentice Hall of India, New Delhi, 2002.
- 2) Data Network, Drnitri Berteskas and Robert Galleger, Second edition, Prentice Hall of India, 1997, New Delhi.

# UNIT 2 ROUTING ALGORITHMS

| Structure |  | Page Nos. |
|-----------|--|-----------|
| 2.0       | Introduction   | 23        |
| 2.1       | Objectives   | 23        |
| 2.2       | Flooding   | 23        |
| 2.3       | Shortest Path Routing Algorithm  | 25        |
| 2.4       | Distance Vector Routing 2.4.1 Comparison 2.4.2 The Count-to-Infinity Problem | 26        |
| 2.5       | Link State Routing   | 30        |
| 2.6       | Hierarchical Routing   | 33        |
| 2.7       | Broadcast Routing  | 35        |
| 2.8       | Multicast Routing  | 36        |
| 2.9       | Summary  | 39        |
| 2.10      | Solutions/Answer   | 40        |
| 2.11      | Further Readings   | 41        |

# 2.0 INTRODUCTION

As you have studied earlier, the main function of the network layer is to find the best route from a source to a destination. In routing, the route with the minimum cost is considered to be the best route. For this purpose, a router plays an important role. On the basis of cost of a each link, a router tries to find the optimal route with the help of a good routing algorithm. There are a large number of routing algorithms. These algorithms are a part of the network layer and are responsible for deciding on which output line an incoming packet should be transmitted. Some of these routing algorithms are discussed in this unit.

# 2.1 OBJECTIVES

After going through this unit, you should be able to:

- understand how the shortest path routing algorithm works;
- draw a spanning tree;
- understand the functioning of distance vector routing and link state routing, and
- understand and implement multicast routing.

# 2.2 FLOODING

Consider an example of any network topology (VC subnet) in which, there are some link failures or in which, a few routers are not operational. These failures will cause changes in the network typology which have to be communicated to all the nodes in the network. This is called **broadcasting**. These could be many such examples of broadcasting in which the message has to be passed on to the entire network.

A widely used broadcasting method, known as **flooding**, operates in the following manner. The source node sends its information in the form of a packet to those nodes in a subnet to which it is directly connected by a link. These nodes relay it further to their neighbours who are also directly connected, and so on, until the packet reaches



all nodes in the network. For example, in the Figure 1(a), R1 will send its packets to R2 and R3. R2 will send the packet to R5 and R4. Two additional rules are also applied in order to limit the number of packets to be transmitted. First, a node will not relay the packet back to the node from which the packet was obtained. For example, R2 will not send the packet back to R1 if, it has received it from R1. Second, a node will transmit the packet to its neighbours at most once; this can be ensured by including on the packet the ID number of the origin node and a sequence number, which is incremented with each new packet issued by the origin node. By storing the highest sequence number received for each node, and by not relaying packets with sequence numbers that are less than or equal to the one stored, a node can avoid transmitting the same packet more than once, on each of its incident links. On observing these rules, you will notice that, links need not preserve the order of packet transmissions; the sequence numbers can be used to recognise the correct order. The following figure gives an example of flooding and illustrates how, the total number of packet transmission per packet broadcast lies between L and 2L, where L is the number of bi-directional links of the network. In this Figure 1(a) Packet broadcasting from router R1 to all other nodes by using flooding [as in Figure 1(a)] or a spanning tree [as in Figure 1(b)]. Arrows indicate packet transmissions at the time shown. Each packet transmission time is assumed to be one unit. Flooding requires at least as many packet transmissions as the spanning tree method and usually many more. In this example, the time required for the broadcast packet to reach all nodes is the same for the two methods. In general, however, depending on the choice of the spanning tree, the time required for flooding may be less than for the spanning tree method. The spanning tree is used to avoid the looping of packets in the subnet.

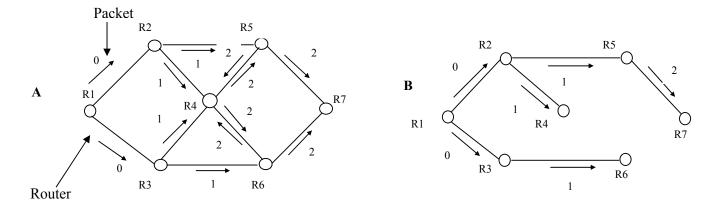


Figure 1(a): Flooding Figure 1(b): Spanning Tree

Figure 1: Broadcasting (Source: Ref. [2])

Student should refer to [2] for further reading on this topic.

#### **™** Check Your Progress 1

- 1) Following statements are True or False
  - (i) Dijkstra algorithm divides the node into two sets i.e., tentative and permanent. T □ F □
     (ii) Flooding generates lots of redundant packets. T □ F □
     (iii) Flooding discovers only the optimal routes T □ F □

| () | What is a spanning tree? | Routing Algorithms |
|----|--------------------------|--------------------|
|    |                          | اردما              |
|    |                          |                    |
|    |                          |                    |
|    |                          |                    |
|    |                          |                    |
|    |                          |                    |

# 2.3 SHORTEST PATH ROUTHING ALGORITHM

Shortest path routing algorithm is a simple and easy to understand technique. The basic idea of this technique is to build a graph of the subnet, with each node of the graph representing a router and each arc of the graph representing a communication line i.e., link. For finding a route between a given pair of routers, the algorithm just finds the shortest path between them on the graph. The length of a path can be measured in a number of ways as on the basis of the number of hops, or on the basis of geographic distance etc.


There are a number of algorithms for computing the shortest path between two nodes of a graph. One of the most used algorithm is the **Dijkstra algorithm**. This is explained below:

In this algorithm, each node has a label which represents its distance from the source node along the best known path. On the basis of these labels, the algorithm divides the node into two sets i.e., *tentative* and *permanent*. As in the beginning no paths are known, so all labels are tentative. The Algorithm works in the following manner:

- 1) First mark source node as current node (T-node)
- 2) Find all the neighours of the T-node and make them tentative.
- 3) Now examine all these neigbour.
- 4) Then among all these node, label one node as permanent (i.e., node with the lowest weight would be labeled as permanent) and mark it as the T-node.
- 5) If, the desination node is reached or tentative list is empty then stop, else go to step 2.


An example of **Dijkstra** routing algorithm is explained in *Figure 2*: In this example, we want to find the best route between A and E. Here, we will show permanent nodes with filled circles and T-nodes with the --> symbol.

1) As shown in the *Figure* below, the source node (A) has been chosen as T-node, and so its label is permanent.

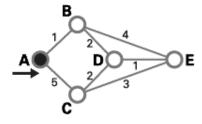


2) In this step, as you see B, C are the tentative nodes directly linked to T-node (A). Among these nodes, since B has less weight, it has been chosen as T-node and its label has changed to permanent.




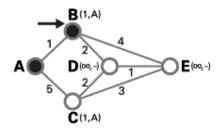

3) In this step, as you see D, E are the tentative nodes directly linked to T-node(B). Among these nodes, since D has less weight, it has been chosen as T-node and its label has changed to permanent.

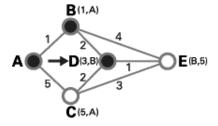

4) In this step, as you see C, E are the tentative nodes directly linked to T-node(D). Among these nodes, since E has less weight, it has been chosen as T-node and its label has changed to permanent.

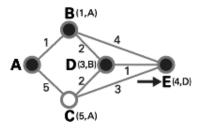

5) E is the destination node. Now, since the destination node (E) has been, reached so, we stop here, and the shortest path is A –B –D –E.

Figure 2: Dijkstra's algorithm to compute the shortest path routing

# 2.4 DISTANCE VECTOR ROUTNIG

Nowadays, computer networks generally use dynamic routing algorithms rather than the static ones described above because, static algorithms do not take the current network load into account. **Distance vector routing** and **link state routing** are two main dynamic algorithms. In this section, we will go through the distance vector routing algorithm. It is also known as **Belman-Ford routing algorithm**.

#### **Bellman-Ford Algorithm**



The Bellman-Ford algorithm can be stated as follows: Find the shortest paths from a given source node subject keeping in mind the constraint that, the paths contain at most one link; then, find the shortest paths, keeping in mind a contraint of paths of at most two links, and so on. This algorithm also proceeds in stages. The description of the algorighm is given below.

$$s =$$
source node

 $w(i, j) = \text{link cost from node } i \text{ to node } j; w(i, j) = \infty \text{ if the two nodes are not directly connected; } w(i, j) \ge 0 \text{ if the two nodes are directly connected.}$ 

h = maximum number of links in a path at the current stage of the algorithm

 $L_h(n) = \text{cost of the least-cost path from node } s \text{ to node } n \text{ under the constraint of no more than } h \text{ links}$ 

#### 1. [Initialisation]

$$L_0(n) = \infty$$
, for all  $n \neq s$   
 $L_h(s) = 0$ , for all  $h$ 

#### 2. [Update]

For each successive  $h \ge 0$ : For each  $n \ne s$ , compute

$$L_{h+1}(n) = \min_{j} [L_h(j) = w(j, n)]$$

Connect n with the predecessor node j that achieves the minimum, and eliminate any connection of n with a different predecessor node formed during an earlier iteration. The path from s to n terminates with the link from j to n.

For the iteration of step 2 with h = K, and for each destination node n, the algorithm compares potential paths from s to n of length K+1 with the path that existed at the end of the previous iteration. If the previous, shorter path has less cost, then that path is retained. Otherwise a new path with length K+1 is defined from S to S; this path consists of a path of length S from S to some node S, plus a direct hop from node S to node S. In this case, the path from S to S that is used is the S-hop path for S defined in the previous iteration.

Table 1 shows the result of applying this algorithm to a public switched network, using s = 1. At each step, the least-cost paths with a maximum number of links equal to h are found. After the final iteration, the least-cost path to each node and the cost of that path has been developed. The same procedure can be used with node 2 as the source node, and so on. Students should apply Dijkstra's algorithm to this subnet and observe that the result will eventually be the same.



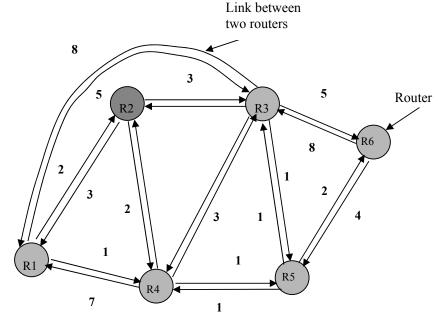


Figure 3: Public switched network

(b) Bellman-Ford Algorithm (s = 1)

Table 1: Link Cost (Ref. Source [3])

| H | L <sub>h</sub> (2) | Path | $L_h(3)$ | Path    | $L_h(4)$ | Path | $L_h(5)$ | Path  | $L_h(6)$ | Path    |
|---|--------------------|------|----------|---------|----------|------|----------|-------|----------|---------|
| 0 | $\infty$           |      | 8        | _       | $\infty$ | _    | 8        | _     | 8        | _       |
| 1 | 2                  | 1-2  | 5        | 1-3     | 1        | 1-4  | $\infty$ |       | $\infty$ |         |
| 2 | 2                  | 1-2  | 4        | 1-4-3   | 1        | 1-4  | 2        | 1-4-5 | 10       | 1-3-6   |
| 3 | 2                  | 1-2  | 3        | 1-4-5-3 | 1        | 1-4  | 2        | 1-4-5 | 4        | 1-4-5-6 |
| 4 | 2                  | 1-2  | 3        | 1-4-5-3 | 1        | 1-4  | 2        | 1-4-5 | 4        | 1-4-5-6 |

### 2.4.1 Comparison

Now, let us compare the two algorithms in terms of what information is required by each node to find out the optional path in the Bellman-Ford algorithm. In step 2, the calculation for node n involves knowledge of the link cost to all neighboruing nodes to node n [i.e., w(j, w(j, n)] plus the total path cost to each of those neighbouring nodes from a particular source node s (i.e.,  $L_h(j)$ ]. Each node can maintain a set of costs and associated paths for every other node in the network and, exchange this information with its direct neighbours from time to time. Each node can therefore, use the expression in step 2 of the Bellman-Ford algorithm, based only on information from its neighbours and knowledge of its link costs, to update it costs and paths. On the other hand, consider Dijkstra's algorithm. Step 3, it appears, required that each node have complete topological information about the network. That is, each node must know the link costs of all links in the network. Thus, for this algorithm, information must be exchanged with all other nodes.

In general, an evaluation of the relative merits of the two algorithms should consider the processing time of the algorithms and the amount of information that must be collected from other nodes in the network or internet. The evaluation will depend on the implementation appraoch and the specific implementation. A final point: Both algorithm are known to converge under static conditions of topology, and link costs and will converge to the same solution. If the link costs change over time the algorithm will attempt to catch up with these changes. However, if the link cost depends on traffic, which in turn depends on the routes chosen, then a feedback condition exists, that could result in instablities.

# Routing Algorithms

### 2.4.2 The Count-to-Infinity Problem

One of the serious drawbacks of the Bellman-Food algorithm is that it quickly responds to a path will a shorter delay but, responds slowly to a path with a longer delay. This is also known as count to infinity problem. Consider a subnet in which a router, whose best route to destination X is large. If, on the next exchange neighbour, A suddenly reports a short delay to X, the router just switches over to using line A to send traffic to X. In one vector exchange, the good news is processed.

To see how fast good news propagates, consider the five-node (linear) subnet of the following figure. (*Figure 4*), where the delay metric is the number of hops. In the *Figure 4 (a)* there are five routers *Ra*, *Rb*, *Rc*, *Rd* and *Re* linked to each other linearly. Suppose, a router Ra is down initially and all the other routers know this. In other words, they have all recorded the delay to *Ra* as infinity.

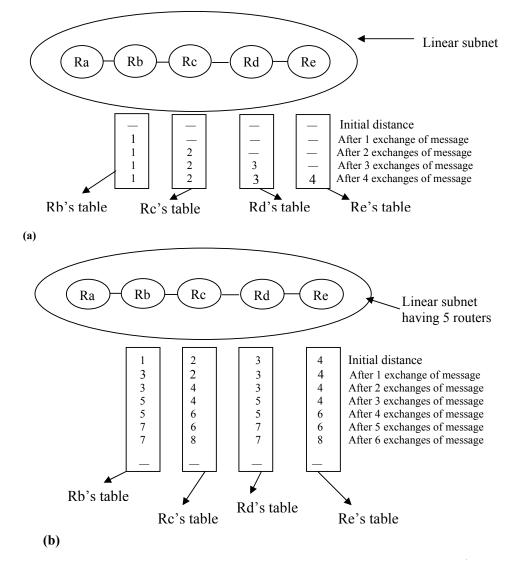


Figure 4: Count to infinity problem



We will describe this problem in the following stages: (i) when router Ra is up, and (ii) when router Ra is down. Now let us take the first stage. When Ra is up, the other routers in the subnet learn about it via the information (vector) exchanges. At the time of the first exchange, Rb learns that its left neighbour has zero delay to Ra. Rb now makes an entry in its routing table that Ra is just one hop away to the left. All the other routers still think that Ra is down. At this point, the routing table entries for Ra are as shown in the second row of  $Figure\ 4(b)$ . On the next exchange, Rc learns that Rb has a path of length 1 to A, so it updates its routing table to indicate a path of length 2, but Rd and Re do not hear the good news until later. Clearly, the good news is spreading at the rate of one hop per exchange. In a subnet whose longest path is of length N hops, within N exchanges everyone will know about the newly-revived lines and routers.

Now, let us consider the second stage *Figure 4(b)*, in which all the lines and routers are intially up. Routers *Rb,Rc,Rd* and *Re* are at a distance of 1,2,3 and 4 from A. Suddenly, *A* goes down, or alternatively, the line between *A* and *B* is cut, which is effectively the same thing from *B*'s point of view.

At the first packet exchange, *Rb* does not hear anything from *Ra*. Fortunately, *Rc* says: Do not worry; I have a path to *A* of length 2. Little does *B* know that *C's* path runs through *Rb* itself. For all *Rb* knows, *Rc* might have ten lines all with separate paths to *Ra* of length 2. As a result, *Rb* thinks it can reach *Ra* via *Rc*, with a path length of 3. *Rd* and *Re* do not update their entries on the first exchange.

On the second exchange, C notices that each of its neighbours are claiming a path to Ra of length 3. It picks one of them at random and makes its new distance to Ra 4, as shown in the third row of Figure 4(b). Subsequent exchanges produce the history shown in the rest of Figure 4(b).

Form *Figure 4*, it should be clear why bad news travels slowly: no router ever has a value higher than the minimum of all its neighbours. Gradually, all routers work their way up to infinity, but the number of exchanges required depends on the numerical value used for infinity. For this reason, it is wise to set infinity to the longest path plus 1. If the metric time is delay, there is no well-defined upper bound, so a high value is needed to prevent a path with a long delay from being treated as down. Not entirely surprisingly, this problem is known as the count-to-infinity problem. The core of the problem is that when *X* tells *Y* that it has a path somewhere, *Y* has no way of knowing whether it itself is on the path.

# 2.5 LINK STATE ROUTING

As explained above distance vector routing algorithm has a number of problems like count to infinity problem. For these reasons, it was replaced by a new algorithm, known as the link state routing.

Link state routing protocols are like a road map. A link state router cannot be fooled as easily into making bad routing decisions, because it has a complete picture of the network. The reason is that, unlike approximation approach of distance vector, link state routers have first hand information from all their peer routers. Each router originates information about itself, its directly connected links, and the state of those links. This information is passed around from router to router, each router making a copy of it, but never changing it. Link-state involves each router building up the complete topology of the entire network (or at least of the partition on which the router is situated), thus, each router contains the same information. With this method, routers only send information to of all the other routers when there is a change in the

topology of the network. The ultimate objective is that every router should have identical information about the network, and each router should be able to calculate its own best path independently. Independently calculate its own best paths.



In contrast to the distance-vector routing protocol, which works by sharing its knowledge of the entire network with its neighbours, link-state routing works by having the routers inform every router in the network about its nearest neighbours. The entire routing table is not distributed any router but, the part of the table containing its neighbours is:

Link-state is also known as **shortest path first**.

### Link State Packet

When a router floods the network with information about its neighbourhood, it is said to be advertising. The basis of this advertising is a short packet called a link state packet (**LSP**). An LSP usually contains four fields: the ID of the advertiser, the ID of the destination network, the cost, and the ID of the neighbour router. The structure of a LSP is shown in *Table 2*.

Table 2: Link state packet (LSP)

| Advertiser DD | Network DD | Cost | Neighbour DD |
|---------------|------------|------|--------------|
|               |            |      |              |
|               |            |      |              |
|               |            |      |              |
|               |            |      |              |

### **How Link State Routing Operates**

The idea behind link state routing is simple and can be stated in five parts as suggested by Tanenbaum [Ref.1]. Each router must do the following:

### 1) Neighbour discovery

The Router has to discover its neighbours and learn their network addresses. As a router is booted, its first task is to learn who its neighbours are.

The Router does this by sending a special HELLO packet on each point-to-point line. The router on the other end is expected to send a reply disclosing its identity. These names must be globally unique. If two or more routers are connected by a LAN, the situation becomes slightly more complicated. One way of modeling the LAN is to consider it as a node itself. Please see reference [1] for further explanation through a diagram.

### 2) Measure delay

Another job that a router needs to perform is to measure the delay or cost to each of its neighbours. The most common way to determine this delay is to send over the line a special ECHO packet that the other side is required to send back immediately. By measuring the round-trip time and dividing it by two, the sending router can get a reasonable estimate of the delay. For even better results, the test can be conducted several times and the average used.

This method implicitly assumes that delays are symmetric, which may not always be the case.

### 3) Building link state packets

After collecting the information needed for the exchange, the next step for each router is to build a link state packet containing all the data. This packet starts with the



identity of the sender, followed by a sequence number and age, and a list of neighbours. For each neighbour, the delay to that neighbour is given.

As an example, let's consider the subnet given in *Figure 5* with delays shown as labels on the lines. For this network, the corresponding link state packets for all six routers are shown in the *Table 3*.

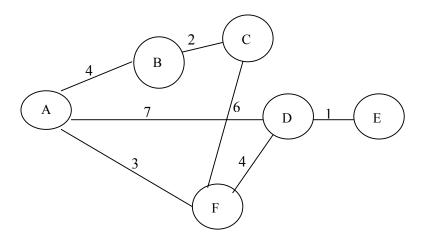


Figure 5: A subnet for link state routing

Table 3: The link state packets (LSPs) for the subnet in figure

| A    |   |
|------|---|
| Seq. |   |
| Age  |   |
| В    | 4 |
| D    | 7 |
| F    | 3 |

| В    |   |
|------|---|
| Seq. |   |
| Age  |   |
| C    | 2 |
| Α    | 4 |

| C    |   |
|------|---|
| Seq. |   |
| Age  |   |
| В    | 2 |
| F    | 6 |
|      | Ü |

| D    |   |
|------|---|
| Seq. |   |
| Age  |   |
| A    | 7 |
| Е    | 1 |
| F    | 4 |

| E    |   |
|------|---|
| Seq. |   |
| Age  |   |
| D    | 1 |
|      |   |

| F    |   |
|------|---|
| Seq. |   |
| Age  |   |
| Α    | 3 |
| С    | 4 |
| D    | 6 |

Building the link state packets is easy. The hard part is determining when to build them. One possibility, is to build them periodically, that is, at regular intervals. Another possibility is to build them when some significant event occurs, such as a line or neighbour going down or coming back up again or changing its properties appreciably.

### 4) Distribute the packets

Let us describe the basic algorithm in distributing the link state packet. The fundamental concept here is flooding to distribute the packets. But to keep the number of packets flowing in the subnet under control, each packet contains a sequence number that is incremented for each new packet delivered. When a new link state packet arrives, it is checked against the list of packets already scene by a router. It is discarded in case the packet is old; otherwise it is forwarded on all lines except the one it arrived on. A router discards an obsolete packet (i.e., with a lower sequence) in case it has seen the packet with a highest sequence number.

The age of a data packet is used to prevent corruption of the sequence number from causing valid data to be ignored. The age field is decremented once per second by the routers which forward the packet. When it hits zero it is discarded. How often should data be exchanged?

### 5) Compute shortest path tree

After accumulating all link state packets, a router can construct the entire subnet graph because every link is represented. In fact, every link is represented twice, once for each direction. The two values can be averaged or used separately.

Now, an algorithm like Dijkstra's algorithm can be run locally to construct the shortest path to all possible destinations. The results of this algorithm can be installed in the routing tables, and normal operation resumed.

### **Problems in Link State Routing**

- In link state protocol, the memory required to store the data is proportional to *k* \* *n*, for *n* routers each with *k* neighbors and the time required to compute can also be large.
- In it bad data e.g., data from routers in error will corrupt the computation.

### **™** Check Your Progress 2

| 1) | Whi   | ch of the following statements are True or False.                                 |              |             |
|----|-------|---|--------------|-------------|
|    | (i)   | Distance vector routing is a static routing algorithm.                            | Т            | F $\square$ |
|    | (ii)  | Dijkstra's algorithms can be run locally in link state routing the shortest path. | ~ <b>_</b> _ | ruct<br>F 🔲 |
| 2) | Ans   | wer the following questions briefly.  |              |             |
|    | (a) V | What are the problems with distance vector routing algorithm                      | n? .         |             |
|    |       |   |              |             |
|    |       |   |              |             |
|    |       |   |              |             |
|    | (b) V | What is LSP?  |              |             |
|    |       |   |              |             |
|    |       |   |              |             |
|    |       |   |              |             |

# 2.6 HIERARCHICAL ROUTING

As you see, in both link state and distance vector algorithms, every router has to save some information about other routers. When the network size grows, the number of routers in the network increases. Consequently, the size of routing tables increases, as well, and routers cannot handle network traffic as efficiently. We use *hierarchical routing* to overcome this problem. Let's examine this subject with an example:

We use distance vector algorithms to find best routers between nodes. In the situation depicted below in *Figure 6*, every node of the network has to save a routing table with 17 records.

Here is a typical graph and routing table (*Table 4*) for A:





Table 4: A's Routing Table

| Destination | Line | Weight |  |
|-------------|------|--------|--|
| A           |      |        |  |
| В           | В    | 1      |  |
| C           | C    | 1      |  |
| D           | В    | 2      |  |
| E           | В    | 3      |  |
| F           | В    | 3      |  |
| G           | В    | 4      |  |
| Н           | В    | 5      |  |
| I           | C    | 5      |  |
| J           | C    | 6      |  |
| K           | C    | 5      |  |
| L           | C    | 4      |  |
| M           | C    | 4      |  |
| N           | C    | 3      |  |
| O           | C    | 4      |  |
| P           | C    | 2      |  |
| Q           | C    | 3      |  |

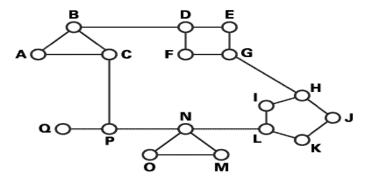


Figure 6: Network graph

In hierarchical routing, routers are classified in groups known as *regions* (*Figure 7*). Each router has only the information about the routers in its own region and has no information about routers in other regions. So routers just save one record in their table for every other region. In this example, we have classified our network into five regions as shown below.

Table 5: A's Routing table for Hierarchical routing

| Destination | Line | Weight |
|-------------|------|--------|
| A           |      |        |
| В           | В    | 1      |
| C           | C    | 1      |
| Region 2    | В    | 2      |
| Region 3    | C    | 2      |
| Region 4    | C    | 3      |
| Region 5    | C    | 4      |
|             |      |        |



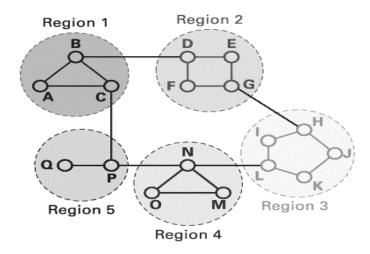


Figure 7: Hierarchical routing

If A wants to send packets to any router in region 2 (D, E, F or G), it sends them to B, and so on. As you can see, in this type of routing, the tables sizes are reduced so, network efficiency improves. The above example shows two-level hierarchical routing. We can also use three or four level hierarchical routing as well.

In three-level hierarchical routing, the network is classified into a number of *clusters*. Each cluster is made up of a number of regions, and each region contains a number of routers. Hierarchical routing is widely used in Internet routing and makes use of several routing protocols.

# 2.7 BROADCAST ROUTING

Up to now we were discussing about sending message from a source to a destination. Sometimes a host needs to send messages all other hosts. This type of transmission i.e., to send a message to all destinations simultaneously is known as *broadcasting*. There are a no. of methods for broadcasting. These are:

### • Send a distinct packet to each destination

This is a very simple method, in which a source sends a distinct packet to each destination. Major disadvantages of this method are:

- a) It wastes bandwidth.
- b) In this method source needs to have a complete list of all destinations.

Because of this reason this method is the least desirable of the other methods.

### Flooding

This is also a very simple method of broadcasting. In this method every incoming packet is sent out on every outgoing line except the line from which it arrived. This algorithm is very simple to implement. But the major disadvantage of this algorithm is that it generates lots of redundant packets, thus consumes too much bandwidth.

### Multidestination routing

In this method each packet contains either a list of destinations or a bit map indicating the desired destinations. When a packet arrives at a router, router determines the set of output lines that would be required by checking all the destinations. Router only chooses those output lines which are the best route to at least one of the destinations. After this router creates a new copy of the packet for each output line to be used and



in each packet it includes only those destinations that are to use the line. Therefore, the destination set is partitioned among the output lines. In this, after a sufficient number of hops, each packet will carry only one destination and can be treated as a normal packet.

### Using a spanning tree

A spanning tree is a subset of graph that includes all the nodes (of graph) but contains no loops. This method uses the spanning tree, therefore, each router knows which of its lines belong to the spanning tree. When a packet arrives at a router, it copies onto all the spanning tree lines except the one it arrived on.

Advantage of this method is that it makes excellent use of bandwidth and generates only the minimum number of packets required to do the job.

In this method each router must have knowledge of some spanning tree. Sometimes this information is available (e.g., with link state routing) but sometimes it is not (e.g., with distance vector routing), this is the major disadvantage of this method.

### • Reverse path forwarding

Our last broadcast algorithm is an attempt to approximate the behaviour of the previous one, even when the routers do not know anything at all about spanning trees. The idea, called reverse path forwarding, is remarkably simple once it has been pointed out.

In this method, when a broadcast packet arrives at a router, the router checks whether the packet arrived on the line that is normally used for sending packets to the source of the broadcast or not.

If the packet arrived on the line that is normally used for sending packets to the source of the broadcast then

Router forwards copies of it onto all lines except the one it arrived on.

Else (i.e., packet arrived on a line other than the preferred one for reaching the source)

Router discards the packet as a likely duplicate.

### 2.8 MULTICAST ROUTING

In many cases, you need to send same data to multiple clients at the same time. In this case, if, we use unicasting then the server will connect to each of its clients again and again, but each time it will send an identical data stream to each client. This is a waste of both server and network capacity. If, we use broadcasting in this case, it would be inefficient because sometimes receivers are not interested in the message but they receive it nonetheless, or sometimes they are interested but are not supposed to see the message.

In such cases i.e., for sending a message to a group of users (clients), we use another technique known as multicasting. The routing algorithm used for multicasting, is called multicast routing.

Group management is the heart of multicasting. For group management, we require some methods to create and destroy a group and to allow processes to join and leave a group. When a router joins a group, it informs its host of this fact. For routing, routers

mainly want to know which of their hosts belong to which group. For this, either the host must inform their router about changes in the group membership, or routers must query their hosts periodically. On receiving this information, routers tell their neighbours, so the informations propagated through the subnet.

Routing Algorithms

Now, we will learn the working of multicasting through an example. In our example (as shown in *Figure 8*), we have taken a network containing two groups i.e., group 1 and 2. Here, some routers are attached to hosts that belong to only one of these groups and some routers are attached to hosts that belong to both of these groups.

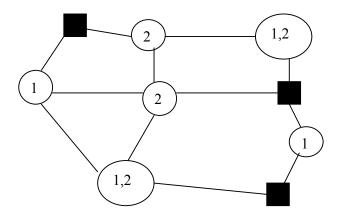


Figure 8: Network containing two groups i.e., 1 and 2

To do multicast routing, first, each router computes a *spanning tree* covering all other routers. For example, *Figure 9* shows spanning tree for the leftmost router.

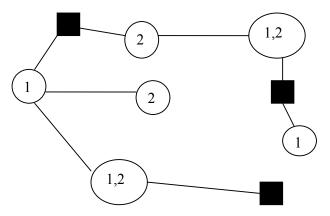


Figure 9: Spanning tree for the leftmost router

Now, when a process sends a multicast packet to a group, the first router examines its spanning tree and prunes it. *Pruning* is the task of removing all lines that do not lead to hosts that are members of the group. For example, *Fig. 10* shows the pruned spanning tree for group 1 and *Fig. 11* shows the pruned spanning tree for group 2. There are a number of ways of pruning the spanning tree. One of the simplest ones that can be used, if link state routing is used and each router is aware of the complete topology, including the hosts that belong to those groups. Then, the spanning tree can be pruned, starting at the end of each path, working toward the root, and removing all routers that do not belong to the group under consideration. With distance vector routing, a different pruning strategy can be followed. The basic algorithm is reverse path forwarding. However, whenever a router with no hosts interested in a particular group and no connections to other routers, receives a multicast message for that group,



it responds with a PRUNE message, thus, telling the sender not to send it any more multicasts for that group. When a router with no group members among its own hosts has received such a message on its lines, it, too, can respond with a PRUNE message. In this way, the subnet is recursively pruned.

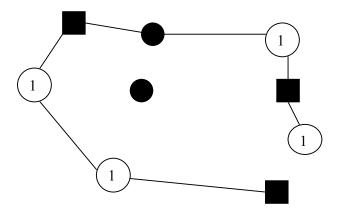


Figure 10: A pruned spanning multicast tree for group 1

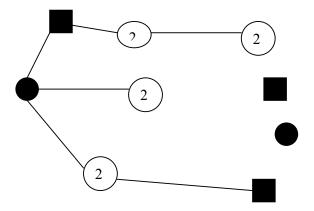


Figure 11: A pruned spanning multicast tree for group 2

After pruning, multicast packets are forwarded only along the appropriate spanning tree. This algorithm needs to store separate pruned spanning tree for each member of each group. Therefore, this would not be good for large networks.

# ™ Check Your Progress 3

| 1) | which of the following | statements are | True of Faise. |
|----|------------------------|----------------|----------------|
|    |                        |                |                |

| (a) | In hierarchical routing, each router has no information about            |               |             |
|-----|--|---------------|-------------|
|     | other regions.   | Т             | F∟          |
| (b) | A spanning tree is a subset of a graph that includes some of that graph. | ne node<br>T□ |             |
| (c) | Sending a message to a group of users in a network is known              | as            |             |
| ( ) | broadcasting.  | $T \square$   | $F \square$ |

| 2) | An | swer the following questions in orief.    |
|----|----|---|
|    | a) | Explain reverse path forwarding in brief. |
|    |    |   |
|    | b) | What is Pruning?                          |
|    |    |   |

# Routing Algorithms

# 2.9 SUMMARY

In this unit, we first studied different routing algorithms. First, we looked at finding the route between a given pair of routers. The algorithm finds the shortest path between them on the graph. A number of algorithms for computing the shortest path between two nodes of a graph are known. Here, we have studied the Dijkstra algorithm.

Next, we studied flooding. In flooding, every incoming packet is sent out on every outgoing line except the line from which it arrived. This algorithm is very simple to implement, but it generates lots of redundant packets. It discovers all routes, including the optimal one, therefore this is robust and gives high performance.

Next, we studied the Belman-Ford routing algorithm. In this algorithm each host maintains a routing table. This routing table has an entry for every other router in the subnet. These tables are updated by exchanging information with the neighbours.

Next, we studied the link state routing algorithm. In this algorithm, each router originates information about itself, its directly connected links, and the state of those links. This information is passed around from router to router, each router making a copy of it, but never changing it. The ultimate objective is that every router has identical information about the network, and each router will independently calculate its own best paths.

Next, we discussed hierarchical routing algorithm. In hierarchical routing, routers are classified in groups known as regions. Each router has only the information about the routers in its own region and has no information about routers in other regions.

Next, we studied broadcasting i.e., to send a message to all destinations in a network simultaneously. There are a number of methods for broadcasting such as, flooding, muitidestination routing, reverse path forwarding etc. In this unit we discussed all these methods in brief.

Finally, we discussed multicasting i.e., to send a message to a group of users in a network. In multicasting, each router first computes a spanning tree covering all other router. Now, when a process sends a multicast packet to a group, the first router examines its spanning tree and prunes it. Then, packets are forwarded only along the appropriate spanning tree.



# 2.10 SOLUTIONS/ANSWERS

### **Check Your Progress 1**

- 1) (i) True
  - (ii) True
  - (iii) False
- 2) (a) A variation of flooding that is selective flooding. In this algorithm the routers do not send every incoming packet *out* on every line, only *on* those lines that are moving approximately in the right direction.

# **Check Your Progress 2**

- 1) (i) False
  - (ii) True
- 2) (a) Problems with distance vector routing algorithm are: it uses only approximation, neighbours, slowly increase their path length to a dead node, and the condition of being dead (infinite distance) is reached by counting to infinity, one at a time.
  - (b) In link state routing, a router floods the network with information about 3 of its neighbours, by using a short packet, known as link state packet (LSP). An LSP usually contains four fields: the ID of the advertiser, the ID of the destination network, the cost, and the ID of the neighbour router.

| Advertiser | Network | Cost | Neighbour |
|------------|---------|------|-----------|
|            |         |      |           |
|            |         |      |           |
|            |         |      |           |
|            |         |      |           |

Link State Packet (LSP)

# **Check Your Progress 3**

- 1) (a) True
  - (b) False
  - (c) False
- 2) (a) Reverse path forwarding is a method of broadcasting. In this method, when a broadcast packet arrives at a router, the router checks whether the packet has arrived on the line that is normally used for sending packets to the source of the broadcast or not. *If* the packet has arrived on the line that is normally used for sending packets to the source of the broadcast then, the Router forwards copies of it onto all lines except the one it has arrived on. *Else (i.e.,* packet arrived on a line other than the preferred one for reaching the source). The router discards the packet as a likely duplicate.
  - (b) In multicasting, pruning is the task of removing all lines from the spanning tree of a router that do not lead to hosts that are members of a particular group.

# 2.11 FURTHER READINGS



- 1) *Computer Network*, S. Tanenbaum, 4<sup>th</sup> edition, Prentice Hall of India, New Delhi 2002.
- 2) Data Network, Drnitri Berteskas and Robert Galleger, Second edition, Prentice Hall of India, 1997, New Delhi.
- 3) Data and Computer Communication, William Stalling, Pearson Education, 2<sup>nd</sup> Edition, Delhi.

# UNIT 3 CONGESTION CONTROL IN PUBLIC SWITCHED NETWORK

| Structure |  | Page Nos. |
|-----------|--|-----------|
| 3.0       | Introduction   | 42        |
| 3.1       | Objectives   | 43        |
| 3.2       | Reasons for Congestion in the network                    | 43        |
| 3.3       | Congestion Control vs. Flow Control                      | 43        |
| 3.4       | Congestion Prevention Mechanism                          | 44        |
| 3.5       | General Principles of Congestion Control                 | 45        |
| 3.6       | Open Loop Control  | 46        |
|           | 3.6.1 Admission Control                                  |           |
|           | 3.6.2 Traffic Policing and its Implementation            |           |
|           | 3.6.3 Traffic Shaping and its Implementation             |           |
|           | 3.6.4 Difference between Leaky Bucket Traffic Shaper and |           |
|           | Token Bucket Traffic Shaper                              |           |
| 3.7       | Congestion Control in Packet-switched Networks           | 49        |
| 3.8       | Summary  | 50        |
| 3.9       | Solutions/Answers  | 50        |
| 3.10      | Further Readings   | 51        |

# 3.0 INTRODUCTION

Congestion occurs when the number of packets being transmitted through the public switched networks approaches the packet handling capacity of the network. When the number of packets dumped into the subnet by the hosts, is within its carrying capacity, all packets are delivered (except for a few that are afflicted with transmission errors). The networks get overloaded and start dropping the packet, which leads to congestion in the network. Due to the dropping of packets, the destination machine may demand the sources to retransmit the packet, which will result in more packets in the network and this leads to further congestion. The net result is that the throughput of the network will be very low as, illustrated in the *Figure 1*.

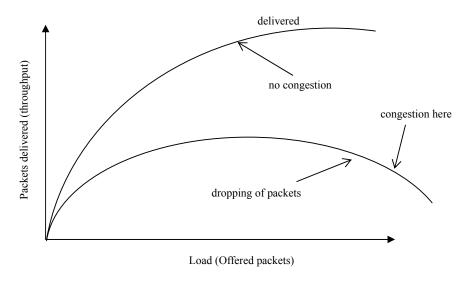


Figure 1: Congestion in network

#### 3.1 **OBJECTIVES**

After going through this unit, you should be able to:

- define congestion;
- list the factors for the occurrence of congestion in the Network;
- differentiate between congestion control and flow control;
- outline the general principles of congestion Control, and
- discuss congestion prevention mechanism.

### 3.2 REASONS FOR CONGESTION IN THE **NETWORK**

**Tanenbaum** [Ref 1] has mentioned several reasons for the occurrence of congestion in the network:

- 1) Sudden arrival of a packet on a particular output line from multiple input source, leading to the formation of a queue and dropping of a packet in case of an insufficient memory in a router to hold these packets. Nagle has pointed out that, even if, there is a huge memory at the router level, there is no improvement in congestion, rather, it get worse because of time out of the packet.
- 2) Slow processors can also cause congestion.
- Low bandwidth channels can also cause congestion. If, we increase the 3) bandwidth without a fast processor or vice-versa, will be of little help.

### **CONGESTION CONTROL Vs FLOW** 3.3 CONTROL

The differences between congestion and flow control are whether mentioning as they are related terms. There is another term, related to these two, called **error control**. Congestion Control ensures that the subnet is able to carry the offered traffic and that it is not overloaded. Flow control has to do with ensuring that the fast sender does not overload packets from the noisy channels receiver. Error control deals with algorithms that recover or conceal the effects from packet losses. The goal of each of these control mechanisms are different, but, the implementation can be combined.

The following *Table* differentiates between Congestion Control and Flow Control:

**Table 1: Congestion Control vs. Flow Control** 

| Congestion Control                              | Flow Control                                 |
|---|--|
| Congestion Control is needed when buffers       | Flow Control is needed when, the buffers at  |
| in packet switches overflow or cause            | the receiver are not depleted as fast as the |
| congestion.                                     | data arrives.                                |
| Congestion is end-to-end, it includes all       | Flow is between one data sender and one      |
| hosts, links and routers. It is a global issue. | receiver. It can be done on link-to-link or  |
|   | end-to-end basis. It is a local issue.       |
| If viewed as a "congested buffer", then the     | If there is a queue on the input side of a   |
| switch tells the source of the data stream to   | switch, and link-by-link flow control is     |
| slow down using congestion control              | used, then as a "flow control" action the    |
| notifications. When output buffers at a         | switch tells its immediate neighbour to      |
| switch fill up and packets are dropped this     | slow down if the input queue fills up.       |
| leads to congestion control actions.            |  |





The reason for comparing congestion and flow control is that, some congestion control algorithms operate by sending messages back to the senders to slow down incase, the network is congested. In case, the receiver is overloaded, the host will get a similar message to slow down.

### **™** Check Your Progress 1

| 1) | Differentiate between Congestion Control and Flow Control.                          |
|----|---|
|    |   |
|    |   |
| 2) | What are the differences between open loop and closed loop solutions to congestion? |
|    |   |
|    |   |

### 3.4 CONGESTION PREVENTION MECHANISM

The purpose of this section is to examine various mechanisms used at the different layers to achieve different goals. But, from the congestion control point of view, these mechanism are not very effective. We will start with data link layer first. **Go back N** and Selection Repeat are flow control mechanism available at the data link layer. Incase, there is any error with the packet, Go back N retransmits all the packets up to the packet where the error occurred. For example, there is an error in 5<sup>th</sup> packet, it means that it will retransmit 1, 2, 3, 4, and 5 which create extra load on the network, thereby, leading to congestion. Selective repeat retransmits only that packet. With respect to congestion control, selective repeat is clearly better than go back N.

The following table provides the detail:

**Table 2: Mechanism Affecting Congestion** 

| Layer     | Mechanisms                         | Solution                       |
|-----------|------------------------------------|--------------------------------|
| Transport | Sliding window with credit schemes | Similar to data link layer     |
|           | Piggybacking                       | problem                        |
|           | Timeout determination              | Optimal time out determination |
| Network   | Bad Routing algorithm              | A good routing algorithm       |
|           | Packet lifetime management         | +                              |
|           |                                    | Optimal lifetime manager       |
| Data link | Go back N, Selective Repeat        | Selective Repeat               |
| layer     | Piggybacking                       | +                              |
|           |                                    | Small window size.             |

Acknowledgement mechanism also affects congestion. If, each packet is acknowledged immediately then it will generate extra traffic. However, if acknowledgement is piggybacked onto reverse traffic along, extra timeouts and retransmissions may happen which will cause congestion. A flow control scheme with a small window size reduces the data rate and thus, helps reduce congestion.

Congestion Control in Public Switched Network



At the network good routing algorithm can help avoid congestion by distributing the traffic over all the lines, whereas a bad one can send too much traffic over already congested lines. Finally, packet lifetime management deals with the duration a packet may live before being discarded. If, it is too long, lost packets may reside in the network a long time, but if, it is too short, packets may sometimes time out before reaching their destination, thus, inducing retransmissions. Therefore, we require good routing algorithm and optimal packet life time.

Between transport and data link layer there are common issues (Flow Control, acknowledge mechanism) with respect to Congestion Control mechanism but at the transport layer, the extra problem is related to determining time out internal across the network, which is a difficult problem.

# 3.5 GENERAL PRINCIPLES OF CONGESTION CONTROL

From our earlier discussions it appears that congestion problem is not very easy to solve. Typically, the solution depends on the type of requirements for the application (e.g.,  $Q_o S$ , high bandwidth, fast processing). Like routing algorithm, congestion control algorithms have been classified into two types:

- Open Loop
- Closed Loop.

**Open loop** solutions attempt to solve the problem with a good design, that ensures that congestion does not occur in the network. Once having network is running midcourse corrections are not made. Open loop algorithm works on two basic mechanisms: i) **Admission Control** ii) **Resource Reservation**. Admission control is a function performed by a network to accept or reject traffic flow. Therefore, the purpose of open loop solution is to ensure that the traffic generated by the source will not lower the performance of network below the specified  $Q_0$  S. The network will accept traffic till  $Q_0$ S parameters are satisfied otherwise, it rejects the traffic.

In contrast, **closed loop** solutions are based on the concept of a feedback loop. These algorithms are called closed loop because the state of the network has to be fed up to the source that regulates traffic. Closed loop algorithms follow dynamic approach to the solution of congestion problems. It reacts during the congestion occurrence period or when the congestion is about to happen. A variety of metrices have been proposed to monitor the state of a subnet in order to observe congestion. These are:

- Queue length
- The number of retransmitted packets due to timeout
- Percentage of rejected packets due to shortage of the router's memory
- Average packet delay.

To prevent congestion from occurring, this mechanism monitors the system to detect when and where congestion occurs, pass is this information to places where action can be taken usually at the source and finally adjusts the systems operation to correct the problem.

The presence of congestion means that the offered load in the network is (temporarily) greater than the resources (routers) can handle. Two straight forward solutions are to **increase the resources** or **decrease the load.** To increase the resources the following mechanism may be used as suggested in **Tanenbaum** [Ref 1].



- i) Higher bandwidth may be achieved by increasing transmission power of a satellite.
- ii) Splitting traffic on multiple routers instead of a single best rout.
- iii) Use of temporary dial-up telephone line between certain points.

However, sometimes it is not possible to increase the capacity or it has already been increased to the limit. But, if the network has reached the maximum limit, the alternative is to reduce the load. The following mechanism may be used (i) Denying service to some users (ii) Degrading services to some or all users.

For subnets that use virtual circuits internally, these methods can be used at the network layer. In the next section, we will focus on their use in the network layer. We will also discuss the open loop control mechanism in detail. The closed loop mechanism will be discussed in Block 4 Unit 2 as a part of TCP Protocol.

# 3.6 OPEN LOOP CONTROL

As mentioned earlier Open Loop Control algorithm prevent the occurrence of from Congestion occurrence rather than dealing with it after it has occurred. It does not rely on feedback information to regulate the traffic. Thus, this technique is based on the assumption that once the packets are accepted from a particular source, the network will not get overloaded. In this section, we will examine several such techniques and its implementation. Learners are requested to **Leon Garcia's** book [*Ref. 2*].

#### 3.6.1 Admission Control

This is a widely used technique in virtual circuit network. The technique is very simple and straight forward. Once congestion has occurred, no more virtual circuits are to be set up. This is similar to a telephone system in which there is no dial tone in case the source gets overloaded. When a source wants to establish a connection, admission control mechanism examine  $Q_0S$  parameters of the connections initiated by the source. If it is OK, the connection (VC) is established otherwise, it is rejected. In order to initiate a connection setup, a source specifies its traffic flow indicating a set of parameters called **traffic descriptor**, which includes **peak rate**, **average rate**, and **maximum traffic burst size**. (Maximum length of time the traffic is generated at the peak rate) and so on. Based on the characteristic of traffic flow, admission control mechanism reserves the bandwidth (which usually lies between peak rate and average rate).

### 3.6.2 Traffic Policing and its Implementation

Leon Garcia [Ref 2] has defined traffic policing as the process of monitoring and enforcing the traffic flow of packets during the connection period. The network may drop or mark the packet as noncompliant and give low priority to traffic in case, it does not obey the agreed upon parameters values during the initial connection setup phase. Most implementations of traffic policing is done through the Leaky Bucket algorithm. In this algorithm the bucket is considered as a network and traffic flow is considered as water being poured into a bucket. The following assumption are made:

- The bucket has certain depth to hold water just like a network can accept a certain number of packets.
- The bucket leaks at a certain rate (if there is water is the bucket) no matter at what rate water enters the bucket. In terms of computer networks, it should be interpreted as follows: No matter at what rate the packets arrive at the input lines of a routers, routers in a subnet passes to its outgoing link at a fixed rate.

- Congestion Control in Public
  Switched Network
- The bucket will spillover if, it is full and if, additional water is poured into it, if
  it gets more packets than it can handle, it will lead to congestion and then the
  network due to which the additional packets will be lost.

If, we expect the traffic flow to be very smooth, then the bucket has to be of a shallow type. In case, the flow is bursty in nature, the bucket should be deeper. In summary, what we want to observe is whether the outflow of packets corresponds to the arrival rate of packets or not? Implementation of a leaky bucket is similar to queue data structure implementation. When a packet arrives, if there is space left in the queue, it gets appended to the queue otherwise, it gets rejected.

### 3.6.3 Traffic Shaping and its Implementation

**Leon Garcia** [*Ref 2*] has defined **traffic shaping** as the process of altering traffic flow to another flow. It is mainly used for smoothening the traffic. Consider an example, where a host is generating data at 30 kbps, which, it can transmit to the network in several ways (as shown in the following *Figure 2*).

- It can transmit at the rate of 100 kbps for 0.3 Second
- It can transmit at the rate of 75 kbps for 0.4 Second

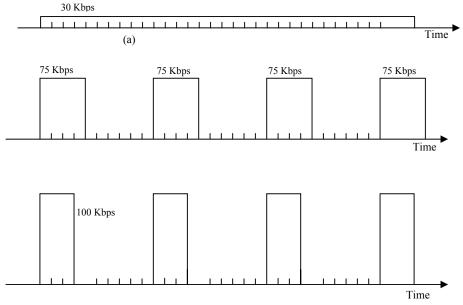


Figure 2: Possible traffic patterns at the average rate of 30 Kbps

You can make observation from the *Figure 2* that the *Figure 2 (a)* shows the smoothened pattern will create less stress on the network but the destination machine may not want to wait for 1 Second to retrieve 30 kbps data at each period. Now, we will look at its implementation. There are two mechanism:

- Leaky bucket traffic Shaper
- Token bucket traffic Shaper.

**Leaky Bucket Traffic Shaper:** It is a very simple mechanism in which data stored at the senders buffer, is passed on at a constant interval to smoothen traffic as shown

Network Layer

in *Figure 3*. The buffer is used to store bursty traffic. This size defines the maximum burst that can be accommodated.





Figure 3: A leaky bucket traffic shaper

This mechanism is different from a leaky bucket algorithm which was used in traffic policing. The bucket in traffic policing is just a counter whereas, a bucket is traffic shaper is a buffer that stores the packets.

**Token Bucket Traffic Shaper:** The leaky bucket traffic shaper has a very restricted approach. Since, the output pattern is always constant no matter how bursty traffic is. Many applications produce variable rate traffic; sometimes bursty but sometimes normal. If, such traffic is allowed to pass through a leaky bucket traffic shaper, it may cause a very long delay. One such algorithms that deals with such situations is the **token bucket algorithm**.

The following are the features of token bucket traffic shaper:

- Token is used here, as a permit to send a packet. Unless there is a token, no packet can be transmitted.
- A Token bucket holds tokens which are generated periodically at a constant rate.
- New tokens are discarded, incase, the token buckets are full.
- A packet can be transmitted only if, there is a token in the token buffer. For example; in the *Figure 4* there are two tokens in the token buffer and five packets to be transmitted. Only two packets will be transmitted and the other three will wait for tokens.
- Traffic burstiness is proportional to the size of a token bucket.

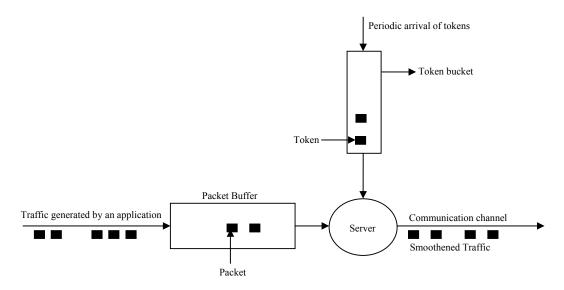

Source: Ref.[2]

Source: Ref.[2]

Figure 4: Token bucket traffic shaper

(3)

Just assume that the token bucket is empty and the numbers of packets have arrived in the buffer. Since, there is no token in the token buffer, the packets have to wait until the new packet is generated. Since, tokens are generated periodically, the packet will be also transmitted periodically at the rate at which the tokens arrive. In, the next section, we will compare between the leaky bucket traffic shaper and token bucket traffic shaper. Students are also requested to see question 2 of Check Your Progress 2.

# 3.6.4 Difference Between Leaky Bucket Traffic Shaper and Token Bucket Traffic Shaper

The following tables differentiate between two types of traffic shapers:

Table 3: Leaky Bucket Traffic Shaper and Token Bucket Traffic Shaper

| Leaky Bucket   | Token Bucket  |
|--|---|
| <ul> <li>Leaky Bucket (LB) discards packets.</li> <li>With LB, a packet can be transmitted if the bucket is not full.</li> <li>LB sends the packets at an average rate.</li> <li>LB does not allow saving, a constant rate is maintained.</li> </ul> | <ul> <li>Token Bucket (TB) discards tokens.</li> <li>With TB, a packet can only be transmitted if, there are enough tokens to cover its length in bytes.</li> <li>TB allows for large bursts to be sent faster by speeding up the output.</li> <li>TB allows saving up of tokens (permissions) to send large bursts.</li> </ul> |

# 3.7 CONGESTION CONTROL IN PACKET-SWITCHED NETWORKS

Several control mechanism for Congestion Control in packet switched network have been explored and published. **William Stalling** [*Ref 3*] has presented the following mechanism to handle congestion:

- Send a control packet (choke packet) from a node where congestion has
  occurred to some or all source nodes. This choke packet will have the effect of
  stopping or slowing the rate of transmission from sources and therefore, it will
  reduce total load on the network. This approach requires additional traffic on
  the network during the period of congestion.
- 2) Make use of an end-to-end probe packet. Such a packet could be time stamped to measure the delay between two particular endpoints. This has the disadvantage of adding overhead to the network.
- 3) Allow packet-switching nodes to add congestion information to packets as they go by. There are two possible approaches here. A node could add such information to packets moving in the direction opposite to the congestion. This information reaches the source node quickly, and this reduces the flow of packets into the network. Alternatively, a node could add such information to packets moving in the same direction as the congestion. The destination either asks the source to adjust the load or returns the signal to the source in the packets (or acknowledgements) moving in the reverse direction.

Network Layer

### **™** Check Your Progress 2

| 1) | What are the different approaches to open loop control?                                     |
|----|---|
|    |   |
|    |   |
|    |   |
| 2) | What is the difference between leaky bucket traffic shaper and token bucket traffic shaper? |
|    | traffic shaper?   |
|    |   |
|    |   |
|    |   |

# 3.8 SUMMARY

In this unit, we examined several aspects of congestion i.e., what is Congestion? How does it occur? We also differentiated between congestion control and flow control. Then, we gave two broad classification of congestion control; open loop and closed loop. At the end, we touched upon issues related to congestion control in packet switched network.

# 3.9 SOLUTIONS/ANSWERS

# **Check Your Progress 1**

1)

| Congestion Contro   | ol vs. Flow Control  |
|---|--|
| Congestion Control is needed when buffers in packet switches overflow or congest.         | Flow Control is needed when the buffers at the receiver are not depleted as fast as the data arrives.                      |
| Congestion is end to end, it includes all hosts, links and routers. It is a global issue. | Flow in between one data sender and one receiver. It can be done on link-to-link or end-to-end basis. It is a local issue. |

2) The purpose of open loop solution is to ensure that the traffic generated by the source will not lower the performance of the network below the specified  $Q_o$  S. The network will accept traffic till  $Q_o$ S parameters are satisfied, otherwise, it rejects the packets.

In contrast, closed loop solutions are based on the concept of a feedback loop. These algorithms are called closed loop because the state of the network has to be fed, up to the source that regulates traffic. Closed loop algorithms follow dynamic approach to solution of congestion problems. It reacts during the congestion occurrence period or when the congestion is about to happen.

### **Check Your Progress 2**

Congestion Control in Public Switched Network

- 1) The following are the different approaches:
  - Admission Control Mechanism
  - Traffic Policing
  - Traffic Shaping
- 2) (i) Token bucket algorithm is more flexible than leaky bucket traffic shaper algorithm but both are used to regulate traffic.
  - (ii) The leaky bucket algorithm does not allow idle hosts to save up permission to send large bursty packets later, whereas, token bucket algorithm allows saving up to maximum size of the bucket N. This means that burst up to N packet can be sent at once, allowing some burstiness in the output stream and giving fast response to sudden bursts of output [*Ref 1*].
  - (iii) Token bucket algorithm throws away tokens (i.e., transmission capacity), when the bucket fills up but never throws packets. In contrast, the leaky bucket algorithm discards the packets when the bucket fills up.

# 3.10 FURTHER READINGS

- 1) Computer Networks, 4<sup>th</sup> Edition, A.S. Tanenbaum, Prentice Hall of India, New Delhi.
- 2) Communication Networks fundamental concepts and key architecture, Leon Garcia and Indra Widjaja, Tata McGraw Hill, New Delhi.
- 3) Data and Computer Communication, 6<sup>th</sup> edition, William Stallings, Pearson Edition, New Delhi.



Congestion Control in Public Switched Network



# **UNIT 4 INTERNETWORKING**

| Structure |   | Page Nos |
|-----------|---|----------|
| 4.0       | Introduction                                      | 52       |
| 4.1       | Objectives  | 52       |
| 4.2       | Internetworking                                   | 52       |
|           | 4.2.1 How does a Network differ?                  |          |
|           | 4.2.2 Networks Connecting Mechanisms              |          |
|           | 4.2.3 Tunneling and Encapsulation                 |          |
| 4.3       | Network Layer Protocols                           | 55       |
|           | 4.3.1 IP Datagram Formats                         |          |
|           | 4.3.2 Internet Control Message Protocol (ICMP)    |          |
|           | 4.3.3 OSPF: The Interior Gateway Routing Protocol |          |
|           | 4.3.4 BGP: The Exterior Gateway Routing Protocol  |          |
| 4.4       | Summary   | 68       |
| 4.5       | Solutions/Answers                                 | 68       |
| 4.6       | Further Readings                                  | 69       |
|           |   |          |

# 4.0 INTRODUCTION

There are many ways in which one network differs from another. Some of the parameters in which a network differs from another network are packet length, quality of services, error handling mechanisms, flow control mechanism, congestion control mechanism, security issues and addressing mechanisms. Therefore, problems are bound to occur when we require interconnection between two different networks. Different mechanisms have been proposed to solve this problem: Tunneling is used when the source and destination are the same type of network but, there is a different network in-between. Fragmentation may be used for different maximum packet sizes of different networks. The network layer has a large set of protocols besides IP. Some of these are OSPF and BGP and ICMP. In this unit, we will discuss some of these protocols as well as some internetworking mechanisms.

### 4.1 **OBJECTIVES**

After going through this unit, you should be able to:

- list how are network differs from another;
- list the components of a network layer;
- define tunneling and fragmentation concepts;
- discuss the field format of IP datagram, IP addressing;
- describe internet routing protocols, such OSPF and BGP, and
- introduce Internet Control Message Protocol (ICMP).

# 4.2 INTERNETWORKING

The Internet is comprised of several networks, each one with different protocols. There are many reasons for having different networks (thus different protocols):

- Many personal computers use TCP/IP.
- Many larger business organisations still use IBM mainframes with SNA Protocol.



- Some PCs still run on Novell's NCP/IPX or Appletalk.
- Wireless Network will have different protocols.
- A large number of Telecommunication companies provide ATM facilities.

In this section, we will examine some issues that arise when two or more networks are interconnected. The purpose of interconnecting is to allow any node or any network (e.g., Ethernet) to access data to any other node on any other network. (e.g., ATM). Users should not be aware of the existence of multiple networks.

### 4.2.1 How does a Network differ?

**Tanenbaum** [Ref.1] has defined several features (Kindly refer to Table1) that distinguishes one network from another. These differences have be resolved while internetworking. All these features are defined at the network layer only, although, the network differs at the other layers too. They might have different encoding techniques at the physical layer, different frame formats at the data link layer, and different  $Q_0$  S at the transport layer etc.

**Options** Features Connection-oriented, connection-less, Types of services IP, IPX, SNA, ATM Protocols Addressing Scheme Flat vs. Hierarchical Maximum Packet size Different for each network Flow Control Sliding window, Credit based Congestion Control Mechanism Leaky bucket, Token bucket, Hop by Hop, Choke Packets By connect time, packet by packet, byte Accounting by byte

**Table 1: Different type of Networks** 

### 4.2.2 Networks Connecting Mechanisms

We have been addressing the problems of connecting network in the earlier blocks also. Let us revisit these topics again. Networks can be connected by the following devices:

- Repeaters or Hubs can be used to connect networks at the physical layer. The
  purpose of these devices is to move bits from one network to another network.
  They are mainly analog devices and do not understand higher layer protocols.
- At data link layer, bridges and switches were introduced to connect multiple LANs. They work at the frame level rather than bits level. They examine the MAC address of frames and forward the frames to different LANs. They may do little translation from one protocol (e.g., Token ring, Ethernet) to another MAC Layer Protocol. Routers were used at the network layer, which also does translation incase the network uses different network layer protocols.

Finally, the transport layer and application layer gateways deal with conversion of protocols at the transport and application layer respectively, in order to interconnect networks.

The focus of the section is to introduce mechanism internetworking at the network layer. Therefore, we have to understand the difference between the **switching that** operates at the data link layer and routing that operate at the network layer.



The main difference between the two operations is that, with a switch, the entire frame is forwarded to a different LAN on the basis of its MAC address. With a router, the packet is extracted and encapsulated in a different kind of a frame and forwarded to a remote router on the basis of the IP address in the packet. Switches need not understand the network layer protocol to switch a packet, whereas, a router requires to do so. **Tanenbaum** [*Ref.I*] has described two basic mechanisms of internetworking: **Concatenated virtual circuit** and **connectionless internetworking**. In the next sections we will talk about them.

### **Concatenated Virtual Circuit**

This scheme is similar to the implementation of a connection-oriented service in which, a connection from the source router to the destination router must be established before any packet can be forwarded. This type of a connection is called a virtual circuit, keeping with the analogy of the physical circuits set up by the telephone system and the subnet is called a Virtual Circuit Subnet. The idea behind a Virtual Circuit is to avoid choosing a new route for every packet to be forwarded. A route selected as a part of the connection setup is stored in tables inside the routers.

The essential feature of this mechanism is that a series of Virtual Circuits is setup from the source machine on one network to the destination machine on another network through one or more gateways. Just like a router, each gateway maintains tables, indicating the virtual circuits that are to be used for packet forwarding. This scheme works when all the networks follow the same  $Q_0S$  parameters. But, if only some networks support reliable delivery service, then all the schemes will not work. In summary, this scheme has the same advantage and disadvantage of a Virtual Circuit within a subnet.

### **Datagram Model**

Unlike the previous model there is no concept of virtual circuits, therefore, there is no guarantee of packet delivery. Each packet contains the full source and destination address and are forwarded independently. This strategy uses multiple routes and therefore, achieve higher bandwidth.

A major disadvantage of this approach is that, it can be used over subnets that do not use Virtual Circuit inside. For example, many LAN and some mobile networks support this approach.

In summary, approach to internetworking is the same as datagram subnets: Congestion proves, robustness in case of router failures.

### 4.2.3 Tunneling and Encapsulation

It is used when the source and destination networks are the same but the network, which lies in-between, is different. It uses a mechanism called encapsulation where, a data transfer unit of one protocol is enclosed inside a different kind of protocol. Tunneling allows us to carry one kind of frame that uses a particular network but uses, a different kind of frame.

Suppose two hosts located very far away from each other wants to communicate and both have access to the Internet link. It means that both of them are running TCP/IP based protocol. The carrier (WAN) which lies between the two hosts is based at X.25. Its format is different from TCP/IP. Therefore, the IP datagram forwarded by the host one will be encapsulated in X.25 network layer packet and will be transported to the address of the router of the destination host, when it gets there. The destination router removes the IP packet and sends it to host 2. WAN can be considered as a **big tunnel** 



extending from one router to another [*Ref.1*]. The packet from host 1 travels from one end of a X.25 based tunnel to another end of the tunnel encapsulated properly. Sending and receiving hosts are not concerned about the process. It is done by the concerned router at the other end.

### **™** Check Your Progress 1

| 1) | List the important features in which one network differs from another. |
|----|--|
|    |  |
|    |  |
|    |  |
| 2) | What are the mechanisms for interconnecting networks?                  |
|    |  |
|    |  |
|    |  |
| 3) | Where is tunneling used?   |
|    |  |
|    |  |
|    |  |

# 4.3 NETWORK LAYER PROTOCOLS

In the network layer, the internet can be viewed as a collection of subnetworks or Autonomous systems that are interconnected. End systems are not usually directly attached to each other via a single communication link. Instead, they are directly connected to each other through intermediate switching devices known as routers. A router takes a chunk of information arriving on, one of its incoming links and forwards that chunk of information on one of its outgoing communication channels. Routing and communication links are a part of Internet service providers. To allow communication among Internet users and to allow users to access worldwide internet content, these lower tier ISPs are interconnected through national and international upper tier ISPs. An upper tier ISP consists of high speed routers interconnected with high speed fiber-optic channels [Ref. 5]. Each ISP network whether upper tier or lower tier, is managed independently and runs the IP Protocol which holds the whole internet together and provides a best-efforts (not guaranteed) service to forward information (datagrams) from source to destination without regards to where the machines are located. In this section, we will introduce several network layer protocols. The following Figure 1 shows the network layer with these major components [Ref.5]:

- (i) IP
- (ii) ICMP
- (iii) RIP, OSPF and BGP



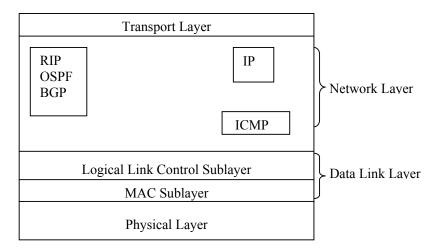


Figure 1: Network layer protocols

- (i) **IP:** The first component is IP Protocol, which defines the followings:
  - Fields in IP datagram
  - Address formats
  - Action taken by routers and end systems on a IP datagram based on the values in these fields.
- (ii) ICMP: The Second Component of the network layer is ICMP (Internet Control Message Protocol) used by the hosts, routers and gateways to communicate network layer information to each other. The most typical use of ICMP is for error reporting.
- (iii) **RIP, OSPF and BGP:** The third component is related to routing protocols: RIP and OSPF are used for Intra-AS routing, whereas, BGP is used as exterior gateway routing protocol.

Now we will describe each component separately.

### 4.3.1 IP Datagram Formats

An IP datagram consists of a header part and a data part. The header has a 20-byte fixed part and a variable length optional part as shown in the Figure 2(a). The header format is shown in Figure 2(b). It is transmitted in big-endian order: from left to right, with the high-order bit of the Version field going first. On little endian machines, software conversion is required on both the transmission header as well as the reception header. The key fields in the IPv<sub>4</sub> Internet Protocol version 4 datagram header are the followings.




Figure 2 (a): IP datagram



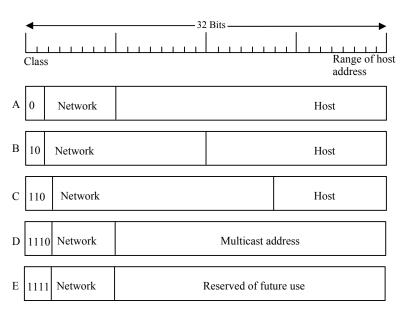


Figure 2 (b): IP address formats

The *Version* field specifies the IP version of the protocol, the datagram belongs to. By including the version in each datagram, the router can determine/interpret the reminder of the IP datagram.

### Header length (4 bits)

The field defines the length of the header in multiples of four bytes. The four bytes can represent a number between 0 and 15, which when multiplied by 4, results in a 60 bytes. A typical IP datagram has 20 byte header only, because most IP datagram do not contain options.

The *Type of service* (8 bits) defines how the datagram should be handled. It defines bits to specify priority, reliability, delay, level of throughput to meet the different requirements. For example, for digitised voice, fast delivery, beats accurate delivery. For file transfer, error-free transmission is more important than fast transmission.

The *Total length* includes everything in the datagram both header and data. The maximum length is 65,535 bytes. At present, this upper limit is tolerable, but with future gigabit networks, larger datagrams may be needed.

The *Identification* filed is used in **fragmentation.** A datagram when passing through different networks may be broken into several fragments to match the network frame size. Once the fragmentation occurs, each fragment is identified with a sequence number to this field. Surprisingly, the  $IPV_6$  does not permit the fragmentation of the IP datagram at the routers level.

Next, comes an unused bit and then two 1-bit fields. **DF** stands for **Don't Fragment**. It is an order to the router not to fragment the datagram because, the destination is incapable of putting the pieces back together again.

**MF** stands for **More Fragments**. All fragments except the last one have this bit set. It is needed to know when all fragments of a datagram have arrived.

The *Fragment offset* (13 bits) depicts the location of that the current datagram, this fragment belongs to. All fragments except, the last one in a datagram, must be a



multiple of 8 bytes, the elementary fragment unit. Since 13 bits are provided, there is a maximum of 8192 fragments per datagram, with a maximum datagram length of 65,536 bytes, one more than the *Total length field*.

The *Time to live* (8 bit) field is a counter used to limit packet lifetimes. It is supposed to count time in seconds allowing a maximum lifetime of 255 sec. It must be decremented on each hop and is supposed to be decremented multiple times when queued for a long time in the router. In practice, it just counts hops. When it hits zero, the packet is dropped and a warning packet is sent back to the source host. This feature, prevents datagrams from wandering around forever, something that otherwise might happen if the routing tables become corrupted.

*Protocol* (8 bits) is used when IP reaches its final destination. When, the network layer has assembled a complete datagram, it needs to know what to do with it. The *Protocol* field identifies the transport protocol the network layers needs to give it to. TCP is one possibility, but so are UDP and some others. The numbering of protocols is global across the entire Internet.

The *Header checkum* verifies the header only. Such a checkum is useful for detecting errors generated by bad memory words inside a router. This algorithm is more robust than a normal add. Note, that the *Header checksum* must be recomputed at each hop because, at least one field always changes (the *time to live* field), but tricks can be used to speed up the computation.

The *Source address and Destination IP address*: These fields carry the 32 bit IP addresses of the source and destination address. One portion of the IP address indicates the network and the other portions indicate the host (or router) on the network. The IP addresses will be described in the next section.

The *Option* filed (32 bits): This field allows an IP header to be extended to be more functional. It can carry fields that control routing, timing and security.

### IP Addressing

All IP addresses are 32 bits long and are used in the *Source address and Destination address* fields of IP packets.

In addition, to the physical addresses (contained on NICs) that identify individual devices, the Internet requires an additional addressing convention, an address that identifies the connection of a host to its network. Before discussing the IP addressing, let us discuss, a host and a router. A router is, fundamentally different from a host whose job is receive a datagram on an incoming link from a host and forward it on some outgoing link. Both router and a host are connected to a link through an interface. 4 Routers has multiple interfaces whereas, a host has a single interface. Because every host and a router is capable of sending and receiving IP datagram, IP requires each host and router interface to have its own IP address. Thus, an IP address is technically associated with an interface rather than with the host or a router.

For several decades, IP addresses were divided into the five categories given in the *Figure*. The different classes are designed to cover the needs of different types of organisations.

The three main address classes are class A, class B, and class C. By examining the first few bits of an address, IP software can quickly determine the class, and therefore, the structure, of an address. IP follows these rules to determine the address class:

• Class A: If, the first bit of an IP address is 0, it is the address of a class A network. The first bit of a class A address identifies the address class.



The next 7 bits identify the network, and the last 24 bits identify the host. There are fewer than 128 class A network numbers, but each class A network can be composed of millions of hosts.

- Class B: If, the first 2 bits of the address are 1 0, it is a class B network address. The first 2 bits identify class; the next 14 bits identify the network, and the last 16 bits identify the host. There are thousands of class B network numbers and each class B network can contain thousands of hosts.
- Class C: If, the first 3 bits of the address are 1 1 0, it is a class C network address. In a class C address, the first 3 bits are class identifiers; the next 21 bits are the network address, and the last 8 bits identify the host. There are millions of class C network numbers, but each class C network is composed of fewer than 254 hosts.
- Class D: If, the first 4 bits of the address are 1 1 1 0, it is a multicast address. These addresses are sometimes called class D addresses, but they don't really refer to specific networks. Multicast addresses are used to address groups of computers together at moment in time. Multicast addresses, identify a group of computers that share a common application, such as a video conference, as opposed to a group of computers that share a common network.
- Class E: If, the first four bits of the address are 1 1 1 1, it is a special reserved address. These addresses are called class E addresses, but they don't really refer to specific networks. No numbers are currently assigned in this range.

IP addresses are usually written as four decimal numbers separated by dots (periods). Each of the four numbers is in the range 0-255 (the decimal values possible for a single byte). Because the bits that identify class are contiguous with the network bits of the address, we can lump them together and look at the address as composed of full bytes of network address and full bytes of host address. If the value of the first byte is:

- Less than 128, the address is class A; the first byte is the network number, and the next three bytes are the host address.
- From 128 to 191, the address is class B; the first two bytes identify the network, and the last two bytes identify the host.
- From 192 to 223, the address is class C; the first three bytes are the network address, and the last byte is the host number.
- From 224 to 239, the address is multicast. There is no network part. The entire address identifies a specific multicast group.
- Greater than 239, the address is reserved.

The following table depicts each class range with other details.

Table 2: IP address classes in dotted decimal format with their ranges

| IP<br>Address<br>Class | High<br>Order<br>Bit (s) | Format  | Range                           | No. of<br>Network Bits | No. of<br>Host Bits | Max.<br>Hosts      | Purpose                        |
|------------------------|--------------------------|---------|---------------------------------|------------------------|---------------------|--------------------|--------------------------------|
| A                      | 0                        | N.H.H.H | 1.0.0.0 to<br>126.0.0.0         | 7                      | 24                  | 2 <sup>24</sup> -2 | Few large organisations        |
| В                      | 1,0                      | N.N.H.H | 128.1.0.0 to<br>191.254.0.0     | 14                     | 16                  | 2 <sup>16</sup> -2 | Medium-size organisations      |
| С                      | 1,1,0                    | N.N.N.H | 192.0.1.0 to<br>223.255.254.0   | 21                     | 8                   | 2 <sup>8</sup> -2  | Relatively small organisations |
| D                      | 1,1,1,0                  | N/A     | 224.0.0.0 to<br>239.255.255.255 | N/A                    | N/A                 | N/A                | Multicast groups<br>(RFC 1112) |
| Е                      | 1,1,1,1                  | N/A     | 240.0.0.0 to<br>254.255.255.255 | N/A                    | N/A                 | N/A                | Future Use<br>(Experimental)   |

# Network Layer

The IP address, which provides, universal addressing across all the networks of the Internet, is one of the great strengths of the TCP/IP protocol suite. However, the original class structure of the IP address has weaknesses. The TCP/IP designers did not envision the enormous scale of today's network. When TCP/IP was being designed, networking was limited to large organisations that could afford substantial computer systems. The idea of a powerful UNIX system on every desktop did not exist. At that time, a 32-bit address seemed so large that it was divided into classes to reduce the processing load on routers, even though dividing the address into classes sharply reduced the number of host addresses actually available for use. For example, assigning a large network a single class B address, instead of six class C addresses, reduced the load on the router because the router needed to keep only one route for that entire organisation. However, an organisation that was given the class B address probably did not have 64,000 computers, so most of the host addresses available to the organisation were never assigned.

The class-structured address design was critically strained by the rapid growth of the Internet. At one point it appeared that all class B addresses might be rapidly exhausted. To prevent this, a new way of looking at IP addresses without a class structure was developed.

### **Subnet Masks and CIDR Networks (Classless IP Addresses)**

The size of a network (i.e., the number of host addresses available for use on it) is a function of the number of bits used to identify the host portion of the address. If, a subnet mask shows that 8 bits are used for the host portion of the address block, a maximum of 256 possible host addresses are available for that specific network. Similarly, if a subnet mask shows that 16 bits are used for the host portion of the address block, a maximum of 65,536 possible host addresses are available for use on that network.

If a network administrator needs to split a single network into multiple virtual networks, the bit-pattern in use with the subnet mask can be changed to allow as many networks as necessary. For example, assume that we want to split the 24-bit 192.168.10.0 network (which allows for 8 bits of host addressing, or a maximum of 256 host addresses) into two smaller networks. All we have to do in this situation is, change the subnet mask of the devices on the network so that they use 25 bits for the network instead of 24 bits, resulting in two distinct networks with 128 possible host addresses on each network. In this case, the first network would have a range of network addresses between 192.168.10.0 -192.168.10.127, while the second network would have a range of addresses between 192.168.10.128 -192.168.10.255.

Internetworking

Networks can also be enlarged through the use of a technique known as "**supernetting**," which works by extending the host portion of a subnet mask to the left, into the network portion of the address. Using this technique, a pair of networks with 24-bit subnet masks can be turned into a single large network with a 23-bit subnet mask. However, this works only if you have two neighbouring 24-bit network blocks, with the lower network having an even value (when the network portion of the address is shrunk, the trailing bit from the original network portion of the subnet mask should fall into the host portion of the new subnet mask, so the new network mask will consume both networks). For example, it is possible to combine the 24-bit 192.168.10.0 and 192.168.11.0 networks together since the loss of the trailing bit from each network (00001010 vs. 00001011) produces the same 23-bit subnet mask (0000101x), resulting in a consolidated 192.168.10.0 network. However, it is not possible to combine the 24-bit 192.168.11.0 and 192.168.12.0 networks, since the binary values in the seventh bit position (00001011 vs. 00001100) do not match when the trailing bit is removed.

### **Classless Inter-Domain Routing**

In the modern networking environment defined by RFC 1519 [Classless Inter-Domain Routing (CIDR)], the subnet mask of a network is typically annotated in written form as a "slash prefix" that trails the network number. In the subnetting example in the previous paragraph, the original 24-bit network would be written as 192.168.10.0/24, while the two new networks would be written as 192.168.10.0/25 and 192.168.10.128/25. Likewise, when the 192.168.10.0/24 and 192.168.11.0/24 networks were joined together as a single supernet, the resulting network would be written as 192.168.10.0/23. Note, that the slash prefix annotation is generally used for human benefit; infrastructure devices still use the 32-bit binary subnet mask internally to identify networks and their routes. All networks must reserve host addresses (made up entirely of either ones or zeros), to be used by the networks themselves. This is so that, each subnet will have a network-specific address (the all-zeroes address) and a broadcast address (the all-ones address). For example, a /24 network allows for 8 bits of host addresses, but only 254 of the 256 possible addresses are available for use. Similarly, /25 networks have a maximum of 7 bits for host addresses, with 126 of the 128 possible addresses available (the all-ones and all-zeroes addresses from each subnet must be set aside for the subnets themselves). All the systems on the same subnet must use the same subnet mask in order to communicate with each other directly. If, they use different subnet masks they will think they are on different networks, and will not be able to communicate with each other without going through a router first. Hosts on different networks can use different subnet maks, although the routers will have to be aware of the subnet masks in use on each of the segments.

Subnet masks are used only by systems that need to communicate with the network directly. For example, external systems do not need to be aware of the subnet masks in use on your internal networks, since those systems will route data to your network by way of your parent network's address block. As such, remote routers need to know only the provider's subnet mask. For example, if you have a small network that uses only a /28 prefix that is, a subset of your ISP's /20 network, remote routers need to know only about your upstream provider's /20 network, while your upstream provider needs to know your subnet mask in order to get the data to your local /28 network. The rapid depletion of the class B addresses showed that three primary address classes were not enough: class A was much too large and class C was much too small. Even a class B address was too large for many networks but was used because it was better than the other alternatives.

The obvious solution to the class B address crisis was to force organisations to use multiple class C addresses. There were millions of these addresses available and they were in no immediate danger of depletion. As is often the case, the obvious solution is not as simple as it may seem. Each class C address requires its own entry within the

Network Layer

routing table. Assigning thousands or millions of class C addresses would cause the routing table to grow so rapidly that the routers would soon be overwhelmed. The solution requires a new way of assigning addresses and a new way of looking at addresses.

Originally network addresses were assigned in more or less sequential order as they were requested. This worked fine when the network was small and centralised. However, it did not take network topology into account. Thus, only random chance would determine if the same intermediate routers would be used to reach network 195.4.12.0 and network 195.4.13.0, which makes it difficult to reduce the size of the routing table. Addresses can only be aggregated if they are contiguous numbers and are reachable through the same route. For example, if addresses are contiguous for one service provider, a single route can be created for that aggregation because that service provider will have a limited number of routes to the Internet. But if one network address is in France and the next contiguous address is in Australia, creating a consolidated route for these addresses will not work.

Today, large, contiguous blocks of addresses are assigned to large network service providers in a manner that better reflects the topology of the network. The service providers then allocate chunks of these address blocks to the organisations to which they provide network services. This alleviates the short-term shortage of class B addresses and, because the assignment of addressees reflects the topology of the network, it permits route aggregation. Under this new scheme, we know that network 195.4.12.0 and network 195.4.13.0 are reachable through the same intermediate routers. In fact, both these addresses are in the range of the addresses assigned to Europe, 194.0.0.0 to 195.255.255.255. Assigning addresses that reflect the topology of the network enables route aggregation, but does not implement it. As long as network 195.4.12.0 and network 195.4.13.0 are interpreted as separate class C addresses, they will require separate entries in the routing table. A new, flexible way of defining addresses is therefore, needed.

Evaluating addresses according to the class rules discussed above limits the length of network numbers to 8, 16, or 24 bits - 1, 2, or 3 bytes. The IP address, however, is not really byte-oriented. It is 32 contiguous bits. A more flexible way to interpret the network and host portions of an address is with a bit mask. An address bit mask works in this way: if a bit is on in the mask, that equivalent bit in the address is interpreted as a network bit; if a bit in the mask is off, the bit belongs to the host part of the address. For example, if address 195.4.12.0 is interpreted as a class C address, the first 24 bits are the network numbers and the last 8 bits are the host addresses. The network mask that represents this is 255.255.255.0, 24 bits on and 8 bits off. The bit mask that is derived from the traditional class structure is called the default mask or the natural mask.

However, with bit masks we are no longer limited by the address class structure. A mask of 255.255.0.0 can be applied to network address 195.4.0.0. This mask includes all addresses from 195.4.0.0 to 195.4.255.255 in a single network number. In effect, it creates a network number as large as a class B network in the class C address space. Using bit masks to create networks larger than the natural mask is called supernetting, and the use of a mask instead of the address class to determine the destination network is called Classless Inter-Domain Routing (CIDR).

Specifying both the address and the mask is cumbersome when writing out addresses. A shorthand notation has been developed for writing CIDR addresses. Instead of writing network 172.16.26.32 with a mask of 255.255.255.224, we can write 172.16.26.32/27. The format of this notation is address/prefix-length, where prefix-length is the number of bits in the network portion of the address. Without this notation, the address 172.16.26.32 could easily be interpreted as a host address. RFC

Internetworking

1878 list all 32 possible prefix values. But little documentation is needed because the CIDR prefix is much easier to understand and remember than address classes. I know that 10.104.0.19 is a class A address, but writing it as 10.104.0.19/8 shows me that this address has 8 bits for the network number and therefore, 24 bits for the host number. I don't have to remember anything about the class A address structure.

### **Internet-Legal Versus Private Addressing**

Although the pool of IP addresses is somewhat limited, most companies have no problems obtaining them. However, many organisations have already installed TCP/IP products on their internal networks without obtaining "legal" addresses from the proper sources. Sometimes these addresses come from example books or are simply picked at random (several firms use networks numbered 1.2.3.0, for example). Unfortunately, since they are not legal, these addresses will not be usable when these organisations attempt to connect to the Internet. These firms will eventually have to reassign Internet-legal IP addresses to all the devices on their networks, or invest in address-translation gateways that rewrite outbound IP packets so they appear to be coming from an Internet-accessible host.

Even if an address-translation gateway is installed on the network, these firms will never be able to communicate with any site that is a registered owner of the IP addresses in use on the local network. For example, if you choose to use the 36.0.0.0/8 address block on your internal network, your users will never be able to access the computers at Stanford University, the registered owner of that address block. Any attempt to connect to a host at 36.x.x.x will be interpreted by the local routers as a request for a local system, so those packets will never leave your local network.

Not all firms have the luxury of using Internet-legal addresses on their hosts, for any number of reasons. For example, there may be legacy applications that use hardcode addresses, or there may be too many systems across the organisation for a clean upgrade to be successful. If you are unable to use Internet-legal addresses, you should at least be aware that there are groups of "private" Internet addresses that can be used on internal networks by anyone. These address pools were set-aside in RFC 1918, and therefore, cannot be "assigned" to any organisation. The Internet's backbone routers are configured explicitly not to route packets with these addresses, so they are completely useless outside an organisation's internal network. The address blocks available are listed in *Table3*.

Class Range of Addresses

A Any addresses in 10.x.x.x

B Addresses in the range of 172.16.x.x-172.31.x.x

C Addresses in the range of 192.168.0.x-192.168.255.x

Table 3: Private Addresses Provided in RFC 1918

Since these addresses cannot be routed across the Internet, you must use an address-translation gateway or a proxy server in conjunction with them. Otherwise, you will not be able to communicate with any hosts on the Internet.

An important note here is that, since, nobody can use these addresses on the Internet, it is safe to assume that anybody who is using these addresses is also utilising an address-translation gateway of some sort. Therefore, while you will never see these addresses used as destinations on the Internet, if your organisation establishes a private connection to a partner organisation that is using the same block of addresses that you are using, your firms will not be able to communicate on the Internet. The packets destined for your partner's network will appear to be local to your network, and will never be forwarded to the remote network.



There are many other problems that arise from using these addresses, making their general usage difficult for normal operations. For example, many application-layer protocols embed addressing information directly into the protocol stream, and in order for these protocols to work properly, the address-translation gateway has to be aware of their mechanics. In the preceding scenario, the gateway has to rewrite the private addresses (which are stored as application data inside the application protocol), rewrite the UDP/TCP and IP checksums, and possibly rewrite TCP sequence numbers as well. This is difficult to do even with simple and open protocols such as FTP, and extremely difficult with proprietary, encrypted, or dynamic applications (these are problems for many database protocols, network games, and voice-over-IP services, in particular). These gateways almost never work for all the applications in use at a specific location.

It is always better to use formally-assigned, Internet-legal addresses whenever possible, even if, the hosts on your network do not necessarily require direct Internet access. In those cases in which your hosts are going through a firewall or application proxy of some sort, the use of Internet-legal addresses causes the least amount of maintenance trouble over time. If, for some reason this is not possible, use one of the private address pools described in *Table 3*. Do not use random, self-assigned addresses if you can possibly avoid it, as this will only cause connectivity problems for you and your users.

### Fragmentation

Fragmentation is process of breaking bigger IP datagrams into smaller fragments. Each network imposes some maximum size on its packets. Maximum payloads range from 48 bytes (ATM cells) to 65,515 bytes (IP packets), although the payload size in higher layers is often bigger.

What happens if the original host sends a source packet which is too large to be handled by the destination network? The routing algorithm can hardly bypass the destination.

Basically, the only solution to the problem is to allow routers to break up packets into **fragments.** 

The data in the IP datagram is broken among two or more smaller IP datagrams and these smaller fragments are then sent over the outgoing link.

The real problems in the fragmentation process is **reassembly** of fragments into a single IP datagram before sending it to the transport layer. If it is done at the network level, it will decrease the performance of a router. Therefore, to keep the network layer simple. IP V<sub>4</sub> designer has left it to be done at the receiver level. When the destination host receives a series of fragments from the same host, it examines the identification number of a fragment, its flag number (the flag bit is set to 0 for the last fragment whereas it is a set to 1 for all the other fragments). This is required because one or more fragments may never reach because IP provides best efforts service. **Offset** field is used to determine where the fragment fits within the original IP datagram [*Ref.5*]. When all the packets have arrived, the destination host reassembles them and sends it to the transport layer. The following table illustrates an example of 5000 bytes (20 bytes of IP header plus 4980 bytes of IP Payload arrives at a router which must be forwarded to the outgoing link with a maximum transfer unit of 1500 bytes (equivalent to Ethernet frame size).

**Table 4: Fragmentation Table** 

| Fragment | Bytes                    | ID               | Offset                         | Flag              |
|----------|--------------------------|------------------|--------------------------------|-------------------|
| 1st      | 1,480 bytes in the data  | Identification = | Offset = $0$ (meaning the data | Flag = 1          |
| Fragment | field of the IP datagram | 999              | should be inserted             | (meaning there is |
|          |                          |                  | beginning at byte 0)           | more)             |
| 2nd      | 1,480 byte information   | Identification = | Offset = $1,480$ (meaning the  | Flag = 1          |
| Fragment | field                    | 999              | data should be inserted        | (meaning there is |
|          |                          |                  | beginning at byte 1,480)       | more)             |
| 3rd      | 1,480 byte information   | Identification = | Offset = $2,960$ (meaning the  | Flag = 1          |
| Fragment | field                    | 999              | data should be inserted        | (meaning there is |
|          |                          |                  | beginning at byte 2,960)       | more)             |
| 4th      | 220 bytes                | Identification = | Offset = $4,440$ (meaning the  | Flag = 0          |
| Fragment | (=4,980-1,480-1,480-     | 999              | data should be inserted        | (meaning this is  |
|          | 1,480)                   |                  | beginning at byte 4, 440)      | the last fragment |

This means that 4,980 data bytes in the original datagram must be allocated to four separate segments (each of which are also IP datagram). The original datagram has been stamped with an identification number 999. It is desirable to have a minimum number of fragments because fragmentation and reassembling creates extra overheads or a network system and a host. This is done by limiting the size of UDP and TCP segments to small size.

### 4.3.2 Internet Control Message Protocol (ICMP)

It is a protocol used by hosts and routers to send notification of datagram problems. The most typical use of ICMP is for error reporting. We have encountered errors such as, "Destination network unreachable" while running a telnet, FTP or HTTP session. This type of error reporting is done by ICMP [*Ref.5*]. As we are aware, IP is an unreliable and connectionless protocol, due to which, very often, a datagram may not reach the destination because of to a link failure, congestion etc. ICMP does reporting of such cases to the sender.

ICMP is often considered part of IP but architecturally lies just above IP as ICMP messages are carried inside IP packets. Similar to TCP and UDP segments which are carried as IP payloads, ICMP messages are also carried as IP payloads. Note, that, a datagram carries only the addresses of the original sender and the final destination. It does not know the addresses of the previous router (s) that passed a message. For this reason, ICMP can send messages only to the source and not to an intermediate router. Student are required to refer to *Reference* [1] & [5] for details of message types.

### 4.3.3 OSPF: The Interior Gateway Routing Protocol

Open Shortest Path First (OSPF) has become standard interior gateway routing protocol. It supports many advanced features [*Ref.1* and *Ref.5*] to meet a long list of requirements.

- The protocol specification should be publicly available. **O** in OSPF stands for **open**. It means that OSPF is not a proprietary protocol.
- It is a **dynamic algorithm** one that adapts to changes in the topology automatically and quickly.
- **Load distribution:** When multiple paths to a destination have the same cost OSPF allows multiple paths to be used.

Network Layer

- Support for hierarchy within a single routing domain. By 1988, the internet
  had grown so large that no router was expected to know the entire topology.
  OSPF was designed so that no router would have to do so.
- **Security:** All exchanges between OSPF routers are authenticated and allows only trusted routers to participate. OSPF supports three kinds of connections and networks [*Ref.I*]:
  - (i) Point-to-point lines between two routers only.
  - (ii) Multi-access networks with broadcasting (e.g., LANs).
  - (iii) Multi-access networks without broadcasting (e.g., Packet Switched WANs).

OSPF identifies four types of routers:

- (i) Internal routers (within one area).
- (ii) Area border routers (connects two or more areas).
- (iii) Backbone routers (performs routing within the backbone).
- (iv) AS boundary routers (exchanges routing information with routers in other ASes).

OSPF allows a longer AS to be divided into smaller areas. Topology and details of one area is not visible to others. Every AS has a backbone area (called Area 0) as shown in *Figure3*.

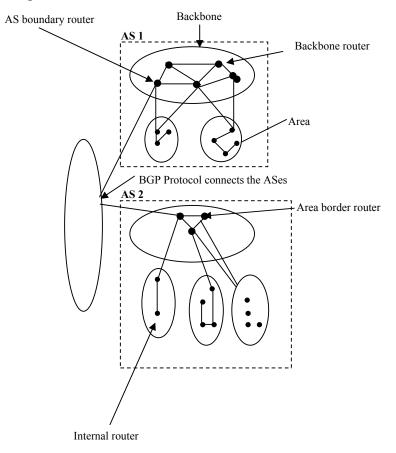


Figure 3: Working domain of OSPF

All areas are connected to the backbone possibly by a **tunnel**, so it is possible to move from one area to another area through a backbone. The primary role of the backbone

Internetworking

area is to route traffic between the other areas in the AS. Inter area routing within the AS requires the follows movement of packets as shown below by arrows.

Host  $\longrightarrow$  internal router of an area  $\longrightarrow$  area border router of a source area  $\longrightarrow$  backbone  $\longrightarrow$  area border router of a destination area internal router of a destination area  $\longrightarrow$  final destination

After having described all the components of OSPF, let us now conclude the topic by describing its operation.

At its heart, however, OSPF is a link state protocol that uses flooding of link state information and Dijkstra's Least-Cost path algorithm. Using flooding each router informs all other routers in its area of its neighbours and costs. This information allow each router to construct the graph for its area (s) and computers the shortest path using Dijkstra's algorithm. This is done by backbone routers also. In addition backbone routers accept information from the area border routers in order to compute the best route from each backbone router to every other router. This information is propagated back to area border routers, which advertise it within the their areas. In this manner, the optimal route is selected.

### 4.3.4 BGP: The Exterior Gateway Routing Protocol

The purpose of Border Gateway Protocol is to enable two different ASes to exchange routing information so that, IP traffic can flow across the AS border. A different protocol is needed between the ASes because the objectives of an interior gateway and exterior gateway routing protocol are different. Exterior gateway routing protocol such as BGP is related to policy matters. BGP is fundamentally a distance vector protocol but, it is more appropriately characterised as **path vector protocol** [*Ref.5*]. Instead of maintaining just the cost to each destination, each BGP router keeps track of the path used [*Ref.1*]. Neighbouring **BGP routers**, known as **BGP peers** exchange detailed information alongwith the list of ASes on a path to a given destination rather than record cost information.

The main advantage of using BGP is to solve the **count to infinity problem** which is illustrated in the following *Figure 4*.

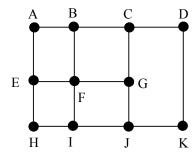


Figure 4: Solution to Count to infinity problems in BGP

In this *Figure 4* there are A, B, C, D, E, F, G, H, I, J and K routers. Now consider G's routing table. G uses G C D K path to forward a packet to K. As discussed earlier whenever a router gives any routing information, it provides a complete path.

For ex. From A, the path used to send a packet to K is ABCDK From B-the path used is BCDK From C-the path used is CGJK From E-EFGJK From H-HIJK.



After receiving all the paths from the neighbours, G will find the best route available. It will outright reject the path from C and E, since they pass through G itself.

Therefore, the choice left is between a route announced by B and H. BGP easily solves count to infinity problems. Now, suppose C crashes or the line B-C is down. Then if B receives, two routes from its 2 neighbours: ABCDK and FBCDK, then these which can be rejected because it passes through C itself. Other distance vector algorithms make the wrong choice because, they cannot tell which of their neighbours have independent routes to their destination or not.

### **™** Check Your Progress 2

| ) | What are the important categories of Network layer protocols?      |
|---|--|
|   |  |
|   |  |
| ) | List the important OSPF routers and their purposes.                |
|   |  |
|   |  |
| ) | How is BGP different from other distance vector routing protocols? |
|   |  |
|   |  |
|   |  |

# 4.4 SUMMARY

In this unit, we defined, a large number of concepts and protocols. Tunneling is used when the source and destination networks are identical but the network, which lies in between, is different. A subnet allows a network to be split into several parts for Internet use but still acts like a single network to the outside world. It makes management of IP addresses simpler. Another reason for creating a subnet is to, establish security between different work groups. Internet is made of a large number of autonomous regions controlled by a different organisation which can, use its own routing algorithm inside. A routing algorithm within an autonomous region (such as LAN, WAN) is called an **interior gateway protocol**, an algorithm for routing between different autonomous regions are called **exterior gateway routing protocols**.

# 4.5 SOLUTIONS/ANSWERS

### **Check Your Progress 1**

- 1) The following are the important features in which one network differs form another
  - Protocols
  - Addressing mechanism
  - Size of a packet
  - Quality of service
  - Flow control
  - Congestion control.

- 2) There are two such mechanisms:
  - (i) Concatenated Virtual Circuit
  - (ii) Datagram Approach.
- 3) Tunneling is used when the source and destination networks are the same but the network which lies in between is different. It uses a mechanism called encapsulation, where data transfer unit of one protocol is enclosed inside a different protocol.

### **Check Your Progress 2**

- 1) There are three categories of network layer protocols:
  - IP which defines network layer addressing the field in the datagram and the
    action taken by routers and end systems on a datagram based on the values
    in these fields.
  - RIP, OSPF and BGP: They are used for routing purposes.
  - ICMP: Mainly used for error reporting in datagrams.
- 2) OSPF distinguishes four classes of routers:
  - Internal routers that are wholly within one area
  - Area border routers that connect two or more areas
  - Backbone routers that are on the backbone, and
  - AS boundary routers that talk to routers in other ASes.
- 3) It is different from other BGP protocol because its router keeps track of the path used instead of maintaining just the cost to each destination. Similarly, instead of periodically giving each neighbour its estimated cost to each possible destination, each BGP router tells its neighbours the exact path it is using.

# 4.6 FURTHER READINGS

- 1) *Computer Networks*, 4<sup>th</sup> Edition, A.S. Tanenbaum, Prentice Hall of India, New Delhi.
- 2) Communication Networks fundamental concepts and key architecture, Leon Garcia and Indra Widjaja, Tata McGraw Hill, New Delhi.
- 3) Data Communication and Networking, 2<sup>nd</sup> edition, Behrouz A. Forouzan, Tata McGraw Hill, New Delhi.
- 4) Networks, 2<sup>nd</sup> Edition, Timothy S Ramteke, Pearson Edition, New Delhi.
- 5) Computer Networking A Top down Approach featuring the Internet, James F. Kurose and Keith W. Ross Pearson Edition, New Delhi.





# Internetworking