Computer Organization and Architecture

8 Cache

Tongwei Ren

Oct. 10, 2019




Review

- Semiconductor memory
 - RAM: DRAM, SRAM, SDRAM, DDR
 - ROM, PROM
 - EPROM, EEPROM, flash memory
- From cell to main memory
 - Addressable unit, memory array, chip, module, main memory




Memory Hierarchy

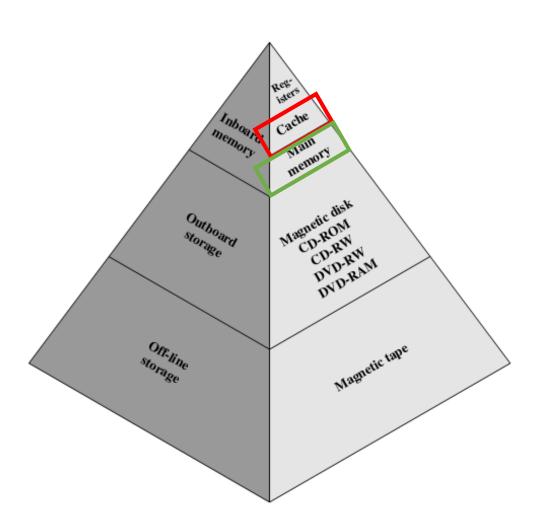



Why cache?


The speed of CPU is faster than memory's

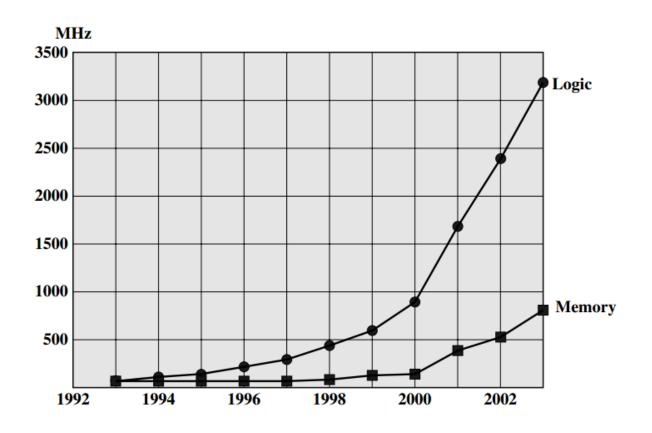



Basic Idea


- Use a smaller, faster cache memory block together with a relatively large and slow main block
- The cache contains a copy of portions of main memory
- Located between CPU and memory, and may be integrated inside CPU or as a module on motherboard

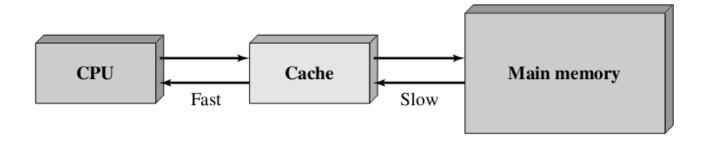



How Cache Works

- Check: when the processor attempts to read a word of memory, a check is made to determine if the word is in the cache
- Hit: if so, the word is delivered to the processor
- Miss: if not, a block of main memory, consisting of some fixed number of words, is read into the cache and then the word is delivered to the processor

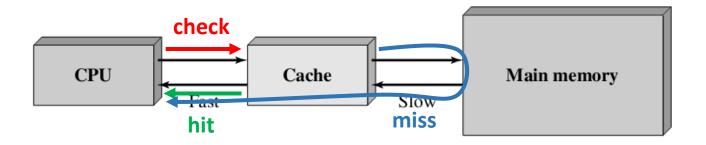



Some Questions

- How to determine hit and miss?
- Why not directly move the word from memory to CPU if miss?
- Why read a block but not a word from memory if miss?
- Why cache can save time since more operations are required?



Hit and Miss Determination

- The von Neumann machine design
 - The contents of this memory are addressable by **location**, without regard to the type of data contained there
- Cache includes tags to identify its content's corresponding locations in main memory



Some Questions (cont.)

- How to determine hit and miss?
- Why not directly move the word from memory to CPU if miss?
- Why read a block but not a word from memory if miss?
- Why cache can save time since more operations are required?



Principle of Locality

- Also known as: locality of reference
- a phenomenon describing the same value, or related storage locations, being frequently accessed (Wikipedia)
- Types
 - Temporal locality: the reuse of specific data, and/or resources, within a relatively small time duration
 - Spatial locality: the use of data elements within relatively close storage locations
 - Sequential locality: a special case of spatial locality, occurs
 when data elements are arranged and accessed linearly, such
 as, traversing the elements in a one-dimensional array



Principle of Locality (Example)

Temporal locality

```
int factorial = 1;
for (int i = 2; i <= n; i++) {
   factorial = factorial * i;
}</pre>
```


Spatial locality

```
for (int i = 0; i < num; i++) {
    score[i] = final[i] * 0.4 + midterm[i] * 0.3 + assign[i] * 0.2 + activity[i] * 0.1;
}
```



Move Content to Cache

- Use "temporal locality"
- Typical cache organization

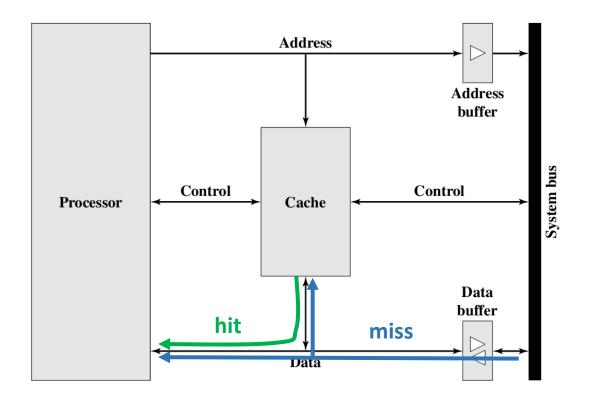



Move Block Instead of Word

Memory Use "spatial locality" address 0 Block (K words) 3 Cache structure Line number Tag Block 0 2 Block C - 1 $2^{n} - 1$ Block length Word (K Words)



Some Questions (cont.)

- How to determine hit and miss?
- Why not directly move the word from memory to CPU if miss?
- Why read a block but not a word from memory if miss?
- Why cache can save time since more operations are required?



Average Access Time

• Assume p is **hit rate**, T_C is access time of cache, T_M is access time of main memory, the average access time when using cache is

$$T_A = p \times T_C + (1 - p) \times (T_C + T_M)$$
$$= T_C + (1 - p) \times T_M$$

- The larger p and smaller T_C are, the better performance is
- If we want $T_A < T_M$, it is required

$$p > T_C / T_M$$

 Difficulty: the capacity of cache is much smaller than the capacity of memory




Elements of Cache Design

- · Cache size
- Mapping function
- Replacement algorithm
- Write policy
- Line size
- Number of caches



Cache Size

- Increasing cache size will:
 - Increases hit rate p
 - Increases cost and access time of cache T_C

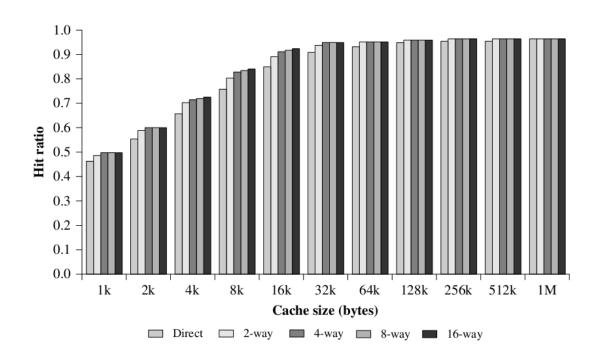



Cache Size (cont.)

Cache size of some processors

Processor	Туре	Year of Introduction	L1 Cache ^a	L2 Cache	L3 Cache
IBM 360/85	Mainframe	1968	16 to 32 kB	_	_
PDP-11/70	Minicomputer	1975	1 kB	_	_
VAX 11/780	Minicomputer	1978	16 kB	_	_
IBM 3033	Mainframe	1978	64 kB	_	_
IBM 3090	Mainframe	1985	128 to 256 kB	_	_
Intel 80486	PC	1989	8 kB	_	_
Pentium	PC	1993	8 kB/8 kB	256 to 512 KB	-
PowerPC 601	PC	1993	32 kB	_	_
PowerPC 620	PC	1996	32 kB/32 kB	_	_
PowerPC G4	PC/server	1999	32 kB/32 kB	256 KB to 1 MB	2 MB
IBM S/390 G4	Mainframe	1997	32 kB	256 KB	2 MB
IBM S/390 G6	Mainframe	1999	256 kB	8 MB	_
Pentium 4	PC/server	2000	8 kB/8 kB	256 KB	_
IBM SP	High-end server/ supercomputer	2000	64 kB/32 kB	8 MB	_
CRAY MTAb	Supercomputer	2000	8 kB	2 MB	_
Itanium	PC/server	2001	16 kB/16 kB	96 KB	4 MB
SGI Origin 2001	High-end server	2001	32 kB/32 kB	4 MB	_
Itanium 2	PC/server	2002	32 kB	256 KB	6 MB
IBM POWER5	High-end server	2003	64 kB	1.9 MB	36 MB
CRAY XD-1	Supercomputer	2004	64 kB/64 kB	1 MB	_
IBM POWER6	PC/server	2007	64 kB/64 kB	4 MB	32 MB
IBM z10	Mainframe	2008	64 kB/128 kB	3 MB	24-48 MB



Elements of Cache Design (cont.)

- Cache size
- Mapping function
- Replacement algorithm
- Write policy
- Line size
- Number of caches



Mapping Function

- An algorithm used to map main memory blocks into cache lines
- A method is needed for determining which main memory block currently occupies a cache line
- The choice of the mapping function dictates how the cache is organized
- Types
 - Direct mapping
 - Associative mapping
 - Set associative mapping



Direct Mapping


- Map each block of main memory into only one possible cache line
- Assume i is cache line number, j is main memory block number,
 C is number of lines in cache

$$i = j \mod C$$



Direct Mapping (cont.)

Example

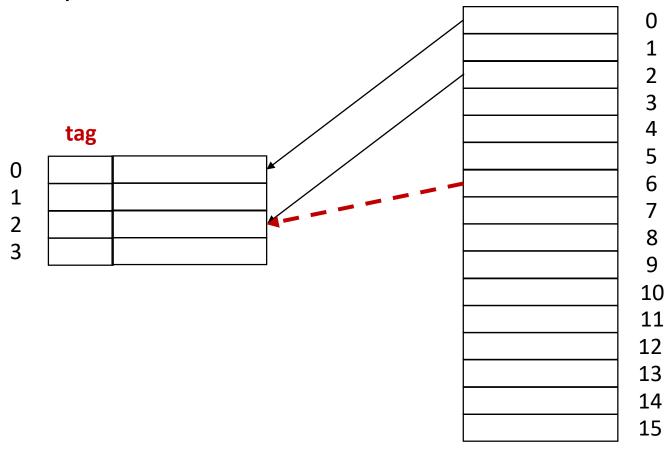



Direct Mapping (cont.)

- Tag
 - Highest *n* bits in address, $n = log_2M log_2C$

Address	Tag	Line	Word
---------	-----	------	------

- Example
 - Assume cache has 4 lines, each line contains 8 words, and main memory contains 128 words. To access main memory, the length of address is 7 bits. The lowest 3 bits determines which word in the block, the middle 2 bits determines which line is possible, and the highest 2 bits determines which block occupies the cache



Direct Mapping (cont.)


- Advantages
 - Simple
 - Fast mapping
 - Fast checking
- Disadvantages
 - Thrashing: if a program accesses two blocks that map to the same line repeatedly, cache miss rate will be very high
- Good for cache with large capacities



Associative Mapping

A memory block can load into any line of cache

Example

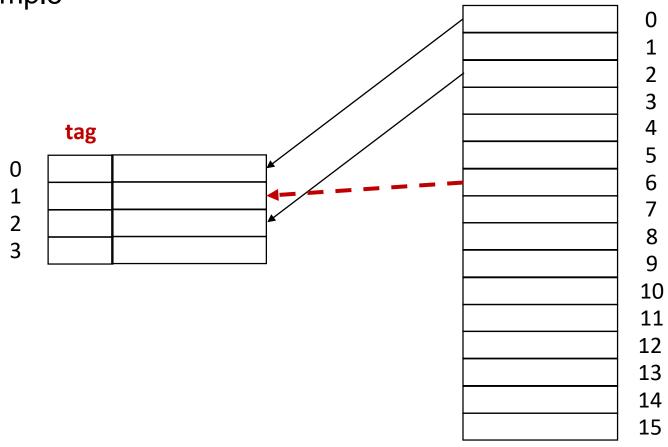



Associative Mapping (cont.)

- Tag
 - Highest n bits in address, $n = log_2 M$

Address Tag Word

- Example
 - Assume cache has 4 lines, each line contains 8 words, and main memory contains 128 words. To access main memory, the length of address is 7 bits. The lowest 3 bits determines which word in the block, and the highest 4 bits determines which block occupies the cache



Associative Mapping (cont.)

- Advantages
 - Avoid thrashing
- Disadvantages
 - Complicated implementation
 - Cache search is expensive, i.e. require to access each line of cache in checking
- Good for cache with smaller capacities



Set Associative Mapping

- Cache is divided into a number of sets, each set contains a number of lines, and a given block maps to any line in a given set
- Assume s is set number, j is main memory block number, S is number of sets in cache


$$s = j \mod S$$

• K-way set K = C/S



Set Associative Mapping (cont.)

Example

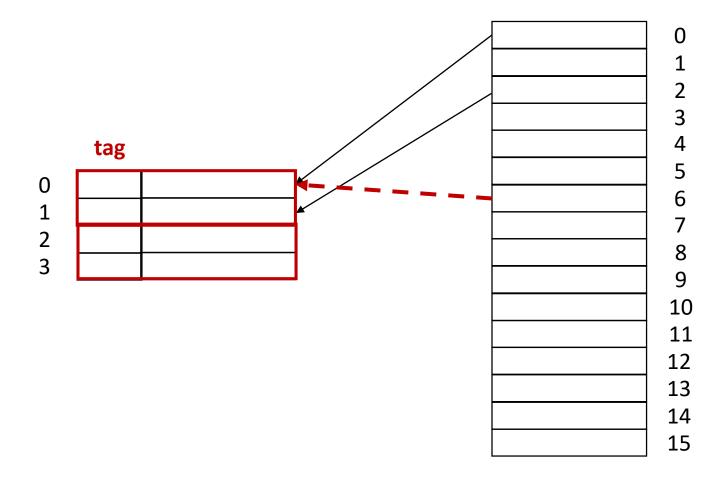



Set Associative Mapping (cont.)

- Tag
 - Highest *n* bits in address, $n = log_2M log_2S$

Address	Tag	Set	Word
Address	Tag		Word

- Example
 - Assume cache has 4 lines which are divided into 2-way set, each line contains 8 words, and main memory contains 128 words. To access main memory, the length of address is 7 bits. The lowest 3 bits determines which word in the block, the middle 1 bit determines which set in the cache, and the highest 3 bits determines which block occupies the cache



Set Associative Mapping (cont.)

- Advantages
 - Combine the advantages of direct mapping and associate mapping
- Disadvantages
 - Combine the disadvantages of direct mapping and associate mapping
- Make a good trade-off for arbitrary capacity cache



Comparison of Mapping Functions

- Relationship
 - If K = 1, set associate mapping is same to direct mapping
 - If K = C, set associate mapping is same to associate mapping



Comparison of Mapping Functions (cont.)

- Correlation: number of possible cache lines for each block in main memory
 - Direct mapping: 1
 - Associative mapping: C
 - Set associative mapping: K



Comparison of Mapping Functions (cont.)

F

- The lower correlation is, the lower hit rate is
 - Direct mapping is the lowest in hit rate, and the associative mapping is the highest
- The lower correlation is, the quicker checking is
 - Direct mapping has the least check time, and associative has the most check time
- The lower correlation is, the shorter tag is
 - Direct mapping is the shortest tag, and the associative mapping is the longest tag



Elements of Cache Design (cont.)

- Cache size
- Mapping function
- Replacement algorithm
- Write policy
- Line size
- Number of caches



Replacement Algorithm

- Once the cache has been filled, when a new block is brought into the cache, one of the existing blocks must be replaced
- For direct mapping, there is only one possible line for any particular block, and no choice is possible
- For the associative and set-associative mappings, a replacement algorithm is needed, which must be implemented in hardware



Replacement Algorithm (cont.)

- Most common replacement algorithms
 - Least Recently Used (LRU)
 - First In First Out (FIFO)
 - Least Frequently Used (LFU)
 - Random



Least Recently Used (LRU)

- Replace a set of blocks in cache having the longest time of having no references to it
- Assumption: more recently used memory locations are more likely to be referenced
- Implementation for two-way set associative mapping
 - Each line includes a USE bit
 - When a line is referenced, its USE bit is set to 1 and the USE bit of the other line in that set is set to 0
 - When a block is to be read into the set, the line whose USE bit is 0 is used



First In First Out (FIFO)

- Replace the set of blocks in cache that has been in the cache for the longest time
- Assumption: later used memory locations are more likely to be referenced
- Implementation: round-robin or circular buffer technique



Least Frequently Used (LFU)

- Replace the set of blocks having the least number of references
- Assumption: more frequently used memory locations are more likely to be referenced
- Implementation: associate a counter with each line



Random

- Replace that block in cache or the set randomly
- Assumption: each memory location is similar to be referenced
- Implementation: randomly replace
- random replacement provides only slightly inferior performance to an algorithm based on usage



Elements of Cache Design (cont.)

- Cache size
- Mapping function
- Replacement algorithm
- Write policy
- Line size
- Number of caches



Write Policy



- Consistency between memory and cache
 - When a block in cache is being replaced, it should consider whether the block has been altered
- Two cases
 - If not altered, it may be overwritten with a new block without any other operation
 - If altered, the block in main memory must be updated before replacement
- Policy
 - Write through
 - Write back



Write Through

- All write operations are made to main memory as soon as cache is modified
- Advantage
 - Ensures that main memory is always up to date
- Disadvantages
 - Generates substantial memory traffic and may create a bottleneck
 - Slows down write operation



Write Back

- Updates are made only in the cache, and when a block is replaced, it is written back to main memory if and only if it is altered
- Use a dirty bit, or use bit, to represent whether a block is altered
- Advantage
 - Minimizes memory writes
- Disadvantages
 - Portions of main memory are outdated, and hence accesses by I/O modules can be allowed only through the cache, which makes for complex circuitry and a potential bottleneck



Elements of Cache Design (cont.)

- Cache size
- Mapping function
- Replacement algorithm
- Write policy
- Line size
- Number of caches



Line Size

- As the line size increases from very small to larger
 - Hit ratio increases
 - More useful data can be brought into the cache
- As the line becomes even larger
 - Hit ratio decreases
 - Larger blocks reduce the number of lines in a cache, which leads to frequent replacement of lines
 - Each additional word is farther from the requested word and therefore less likely to be needed in the near future
- The relationship between block size and hit ratio is complex



Elements of Cache Design (cont.)

- Cache size
- Mapping function
- Replacement algorithm
- Write policy
- Line size
- Number of caches



Numbers of Caches

- Single or two level
 - Single
 - Integrates a cache on the same chip as the processor
 - Reduces external bus activity and speeds up execution
 - Two level
 - Reduces the processor's access of DRAM or ROM memory across the bus when L1 misses
 - Uses a separate data path instead of system bus for transferring data between the L2 cache and the processor
 - Some processors incorporate L2 cache on processor chip



Numbers of Cache (cont.)

- Unified or split
 - Unified
 - Higher hit rate for automatic balancing of load between instruction and data
 - Only one cache is needed to be designed and implemented
 - Split
 - Eliminate contention for the cache between the instruction fetch/decode unit and the execution unit, which is important to the pipelining of instructions



Summary

- Cache
 - Motivation, basic idea, work procedure
- Some questions about cache's work procedure
- Elements of cache design
 - Cache size, mapping function, replacement algorithm, write policy, line size, number of caches



Thank You

rentw@nju.edu.en

