# Computer Organization and Design ECE 452 (Spring 2015)

# Instructions: Language of the Computer

**Sudeep Pasricha** 

(http://www.engr.colostate.edu/~sudeep/)

#### Instruction Set

- The repertoire of instructions of a computer
- Different computers have different instruction sets
  - But with many aspects in common
- Early computers had very simple instruction sets
  - Simplified implementation
- Many modern computers also have simple instruction sets

### **The MIPS Instruction Set**

- Used as the example throughout the course
  - Any processor design first starts with ISA design, followed by hardware and compiler design
- Stanford MIPS commercialized by MIPS Technologies (<u>www.mips.com</u>)
- Variants of the ISA used in ARM processors have a large share of embedded core market
  - Applications in smartphones, tablets, consumer electronics, network/storage equipment, cameras, printers, ...

# **Arithmetic Operations**

- Add and subtract, three operands
  - Two sources and one destination

```
add a, b, c # a gets b + c
```

- All arithmetic operations have this form
- Why not more complex instructions?
  - e.g., add 3 numbers, add 2 numbers and sub 3<sup>rd</sup>
- Design Principle 1: Simplicity favors regularity
  - Regularity makes implementation simpler
  - Simplicity enables higher performance at lower cost

# **Arithmetic Example**

C code:

```
f = (g + h) - (i + j);
```

Compiled MIPS code:

```
add t0, g, h # temp t0 = g + h add t1, i, j # temp t1 = i + j sub f, t0, t1 # f = t0 - t1
```

# Register Operands

- Arithmetic instructions use register operands
- MIPS has a 32 x 32-bit register file
  - Used for frequently accessed data
  - Numbered 0 to 31
  - 32-bit data called a "word"
- Assembler names
  - \$t0, \$t1, ..., \$t9 for temporary values
  - \$\$0, \$\$1, ..., \$\$7 for saved variables
- Why not have a larger register file?
- Design Principle 2: Smaller is faster
  - Reason for small register file
  - c.f. main memory: millions of locations

# Register Operand Example

C code:

```
f = (g + h) - (i + j);

• f, ..., j in $s0, ..., $s4
```

Compiled MIPS code:

```
add $t0, $s1, $s2
add $t1, $s3, $s4
sub $s0. $t0. $t1
```

# **Memory Operands**


- Main memory used for composite data
  - Arrays, structures, dynamic data, ...
  - Only a small amount of data can fit in registers
- To apply arithmetic operations
  - Load values from memory into registers
  - Store result from register to memory
- Memory is byte addressed
  - Each address identifies an 8-bit byte
- Words are aligned in memory
  - Address must be a multiple of 4
- MIPS is Big Endian
  - Most-significant byte at least address of a word
  - c.f. Little Endian: least-significant byte at least address


# Big vs. Little Endian

Big Endian: leftmost byte is word address

IBM 360/370, Motorola 68k, MIPS, Sparc, HP PA

□ Little Endian: rightmost byte is word address
Intel 80x86, DEC Vax, DEC Alpha (Windows NT)

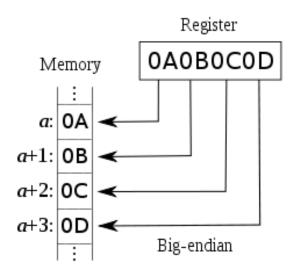

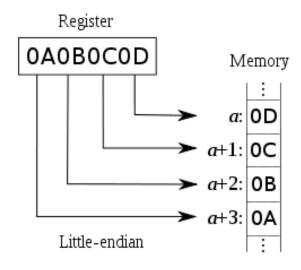

- Many architectures today are bi-endian
  - switchable endianness, e.g., ARMv3 and higher, PowerPC, ...

# **Memory Operand Example 1**

C code:

```
g = h + A[8];
```

- g in \$\$1, h in \$\$2, base address of A in \$\$3
- Compiled MIPS code:
  - Index 8 requires offset of 32
    - 4 bytes per word

```
lw $t0, 32($s3)  # load word
add $s1, $s2, $t0

offset base register
```

# **Memory Operand Example 2**

C code:

```
A[12] = h + A[8];
```

- h in \$\$2, base address of A in \$\$3
- Compiled MIPS code:
  - Index 8 requires offset of 32

```
lw $t0, 32($s3)  # load word
add $t0, $s2, $t0
sw $t0, 48($s3)  # store word
```

# Registers vs. Memory

- Registers are faster to access than memory
  - Operating on memory data requires loads and stores
    - More instructions to be executed
- Compilers use registers for variables as much as possible
  - Only "spill" to memory for less frequently used variables
  - Register optimization is important!

# **Immediate Operands**

- Constant data specified in an instruction addi \$s3, \$s3, 4
- No subtract immediate instruction
  - Just use a negative constant addi \$s2, \$s1, -1
- Why have immediate instructions?
- Design Principle 3: Make the common case fast
  - Small constants are common
  - Immediate operand avoids a load instruction

### **The Constant Zero**

- MIPS register 0 (\$zero) is the constant 0
  - Cannot be overwritten
- Useful for common operations
  - E.g., move between registers add \$t2, \$s1, \$zero

# **Unsigned Binary Integers**

Given an n-bit number

$$x = x_{n-1} 2^{n-1} + x_{n-2} 2^{n-2} + \dots + x_1 2^1 + x_0 2^0$$

- Range: 0 to +2<sup>n</sup> 1
- Example
  - 0000 0000 0000 0000 0000 0000 0000 1011<sub>2</sub> = 0 + ... +  $1 \times 2^3 + 0 \times 2^2 + 1 \times 2^1 + 1 \times 2^0$ = 0 + ... + 8 + 0 + 2 + 1 =  $11_{10}$
- Using 32 bits
  - 0 to +4,294,967,295

# **2s-Complement Signed Integers**

Given an n-bit number

$$x = -x_{n-1}2^{n-1} + x_{n-2}2^{n-2} + \dots + x_12^1 + x_02^0$$

- Range: −2<sup>n-1</sup> to +2<sup>n-1</sup> − 1
- Example
- Using 32 bits
  - -2,147,483,648 to +2,147,483,647

## **2s-Complement Signed Integers**

- Bit 31 is sign bit
  - 1 for negative numbers
  - 0 for non-negative numbers
- $-(-2^{n-1})$  can't be represented
- Non-negative numbers have the same unsigned and 2s-complement representation
- Some specific numbers
  - 0: 0000 0000 ... 0000
  - –1: 1111 1111 ... 1111
  - Most-negative: 1000 0000 ... 0000
  - Most-positive: 0111 1111 ... 1111
- By default, all data in MIPS is a signed integer
  - add vs. addu

# Signed Negation

- Complement and add 1
  - Complement means 1 → 0, 0 → 1

$$x + \overline{x} = 1111...111_2 = -1$$
  
 $\overline{x} + 1 = -x$ 

- Example: negate +2
  - $+2 = 0000 \ 0000 \ \dots \ 0010_2$

$$-2 = 1111 \ 1111 \ \dots \ 1101_2 + 1$$
  
= 1111 \ 1111 \ \dots \ 1110\_2

# Sign Extension

- Immediate constants are typically 16 bits
- How to represent a number using more bits?
  - e.g. 16 bit number as a 32 bit number
  - Must preserve the numeric value
- Replicate the sign bit to the left
  - Unsigned values: extend with 0s
- Examples: 8-bit to 16-bit
  - +2: 0000 0010 => 0000 0000 0000 0010
  - -2: 1111 1110 => 1111 1111 1111 1110
- In MIPS instruction set
  - addi: extend immediate value
  - 1b, 1h: extend loaded byte/halfword
  - beq, bne: extend the displacement

# Representing Instructions

- Instructions are encoded in binary
  - Called machine code
- MIPS instructions
  - Encoded as 32-bit instruction words
  - Small number of formats encoding operation code (opcode), register numbers, ...
  - Regularity!
- Register numbers
  - \$t0 \$t7 are reg's 8 15
  - \$t8 \$t9 are reg's 24 25
  - -\$\$0 \$\$7 are reg's 16 23

## MIPS-32 ISA

- Instruction Categories
  - Computational
  - Load/Store
  - Jump and Branch
  - Floating Point
    - coprocessor
  - Memory Management
  - Special

Registers

**R0 - R31** 

PC

HI

LO

3 Instruction Formats: all 32 bits wide

ор	rs	rt	rd	sa	funct	R format
ор	rs	rt	imme	I format		
ор	J format					

#### **MIPS R-format Instructions**

ор	rs	rt	rd	shamt	funct
6 bits	5 bits	5 bits	5 bits	5 bits	6 bits

#### Instruction fields

- op: operation code (opcode)
- rs: first source register number
- rt: second source register number
- rd: destination register number
- shamt: shift amount (00000 for now)
- funct: function code (extends opcode)

# **R-format Example**

ор	rs	rt	rd	shamt	funct
6 bits	5 bits	5 bits	5 bits	5 bits	6 bits

add \$t0, \$s1, \$s2

special	\$s1	\$s2	\$tO	0	add
0	17	18	8	0	32
000000	10001	10010	01000	00000	100000

 $00000010001100100100000000100000_2 = 02324020_{16}$ 

#### Hexadecimal

- Base 16
  - Compact representation of bit strings
  - 4 bits per hex digit

0	0000	4	0100	8	1000	С	1100
1	0001	5	0101	9	1001	d	1101
2	0010	6	0110	а	1010	Ф	1110
3	0011	7	0111	b	1011	f	1111

- Example: eca8 6420
  - 1110 1100 1010 1000 0110 0100 0010 0000

#### **Aside: What is Stored in Memory?**


Instructions are represented as numbers and, as such, are indistinguishable from data

2. Programs are stored in alterable memory (that can

be read or written to) just like data

#### **The BIG Picture**

- Stored-program concept
  - Programs can be shipped as files of binary numbers binary compatibility
  - Computers can inherit ready-made software provided they are compatible with an existing ISA leads industry to align around a small number of ISAs

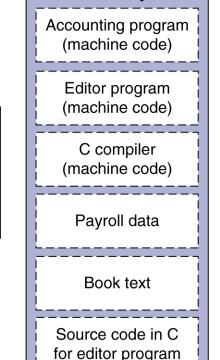

Memory

**Processor** 

# **Logical Operations**

Instructions for bitwise manipulation

Operation	С	Java	MIPS
Shift left	<<	<<	sll
Shift right	>>	>>>	srl
Bitwise AND	&	&	and, andi
Bitwise OR			or, ori
Bitwise NOT	~	~	nor

 Useful for extracting and inserting groups of bits in a word

# **Shift Operations**



- shamt: how many positions to shift
- Shift left logical
  - Shift left and fill with 0 bits
  - s11 by i bits multiplies by 2i
- Shift right logical
  - Shift right and fill with 0 bits
  - srl by i bits divides by 2i (unsigned only)

# **AND Operations**

- Useful to mask bits in a word
  - Select some bits, clear others to 0

```
and $t0, $t1, $t2
```

```
$t2 | 0000 0000 0000 0000 00<mark>00 11</mark>01 1100 0000
```

# **OR Operations**

- Useful to include bits in a word
  - Set some bits to 1, leave others unchanged

```
or $t0, $t1, $t2
```

# **NOT Operations**

- Useful to invert bits in a word
  - Change 0 to 1, and 1 to 0
- MIPS has NOR 3-operand instruction
  - a NOR b == NOT ( a OR b )

```
nor $t0, $t1, $zero ← ____
```

Register 0: always read as zero

```
$t1 | 0000 0000 0000 0001 1100 0000 0000
```

\$t0 | 1111 1111 1111 1100 0011 1111 1111

#### **MIPS I-format Instructions**



- Immediate arithmetic and load/store instructions
  - rt: destination or source register number
  - Constant:  $-2^{15}$  to  $+2^{15} 1$
  - Address: offset added to base address in rs
- Why have multiple instruction formats?
- Design Principle 4: Good design demands good compromises
  - Different formats complicate decoding, but allow 32-bit instructions uniformly
  - Keep formats as similar as possible

# **Conditional Operations**


- Conditional operation used heavily in programs
  - for loops, while loops, if-then-else, etc.
- Branch to a labeled instruction if a condition is true
  - Otherwise, continue sequentially
- beq rs, rt, L1
  - if (rs == rt) branch to instruction labeled L1;
- bne rs, rt, L1
  - if (rs != rt) branch to instruction labeled L1;
- j L1
  - unconditional jump to instruction labeled L1

# **Compiling If Statements**

C code:

```
if (i==j) f = g+h;
else f = g-h;
```

- f, g, ... in \$s0, \$s1, ...
- Compiled MIPS code:

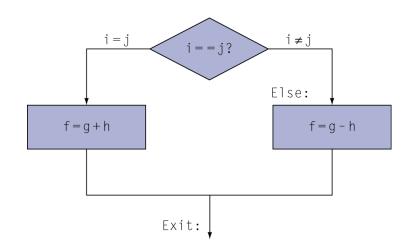

```
bne $s3, $s4, Else
add $s0, $s1, $s2
j Exit
Else: sub $s0, $s1, $s2
Exit:
```

Assembler calculates addresses

# **Compiling Loop Statements**

C code:


```
while (save[i] == k) i += 1;
```

- i in \$\$3, k in \$\$5, address of save in \$\$6
- Compiled MIPS code:

```
Loop: sll $t1, $s3, 2 # $t1 = i*4 add $t1, $t1, $s6 lw $t0, 0($t1) bne $t0, $s5, Exit addi $s3, $s3, 1 j Loop Exit: ...
```

#### **Basic Blocks**

- A basic block is a sequence of instructions with
  - No embedded branches (except at end)
  - No branch targets (except at beginning)

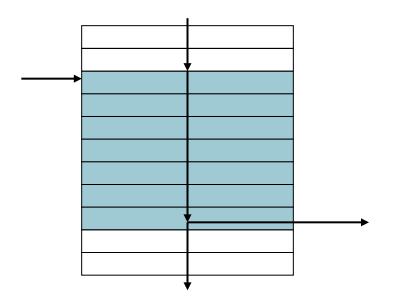

- A compiler identifies basic blocks for optimization
- An advanced processor can accelerate execution of basic blocks

# **More Conditional Operations**

- Set result to 1 if a condition is true
  - Otherwise, set to 0
- slt rd, rs, rt
  - if (rs < rt) rd = 1; else rd = 0;
- slti rt, rs, constant
  - if (rs < constant) rt = 1; else rt = 0;</p>
- Use in combination with beq, bne

```
slt $t0, $s1, $s2 # if ($s1 < $s2)
bne $t0, $zero, L # branch to L</pre>
```

### **Branch Instruction Design**

- Why not blt, bge, etc?
- Hardware for <, ≥, ... slower than =, ≠</p>
  - Combining with branch involves more work per instruction, requiring a slower clock
  - All instructions penalized!
- beq and bne are the common case
- This is a good design compromise

## Signed vs. Unsigned

- Signed comparison: slt, slti
- Unsigned comparison: sltu, sltui
- Example

  - slt \$t0, \$s0, \$s1 # signed ■  $-1 < +1 \Rightarrow $t0 = 1$
  - sltu \$t0, \$s0, \$s1 # unsigned
    - $+4,294,967,295 > +1 \Rightarrow $t0 = 0$

## **Procedure Calling**

- Procedures enable structured programs
  - Easier to understand and reuse code
- Steps required
  - 1. Place arguments in registers
  - 2. Transfer control to procedure
  - 3. Acquire storage for procedure
  - 4. Perform procedure's operations
  - 5. Place result in register for caller
  - 6. Return to place of call

### Register Usage

- \$a0 \$a3: arguments (reg's 4 7)
- \$v0, \$v1: result (i.e. return) values (reg's 2 and 3)
- \$t0 \$t9: temporaries
  - Can be overwritten by callee
- \$s0 \$s7: saved
  - Must be saved/restored by callee
- \$gp: global pointer for static data (reg 28)
- \$sp: stack pointer (reg 29)
- \$fp: frame pointer (reg 30)
- \$ra: return address (reg 31)

### **Procedure Call Instructions**

- Procedure call: jump and link jal ProcedureLabel
  - Address of following instruction put in \$ra
  - Jumps to target address
- Procedure return: jump register jr \$ra
  - Copies \$ra to program counter
  - Can also be used for computed jumps
    - e.g., for case/switch statements

### Leaf Procedure Example

C code:

```
int leaf_example (int g, h, i, j)
{ int f;
    f = (g + h) - (i + j);
    return f;
}
```

E.g. called from main() with

```
q=leaf_example(2,5,8,9);
```

- Arguments g, ..., j in \$a0, ..., \$a3
- f in \$s0 (hence, need to save \$s0 on stack)
- Result in \$v0

### Leaf Procedure Example

### MIPS code:

```
leaf_example:
 addi $sp, $sp, -4
 $sw $s0, 0($sp)
 add $t0, $a0, $a1
 add $t1, $a2, $a3
       $s0, $t0, $t1
 sub
       $v0, $s0, $zero
 add
       $s0, 0(\$sp)
  1w
 addi $sp, $sp, 4
       $ra
  Jr
```

```
int leaf_example (int g, h, i, j)
{ int f;
    f = (g + h) - (i + j);
    return f;
```

Save \$s0 on stack


Procedure body

Result

Restore \$s0

Return


### **Local Data on the Stack**

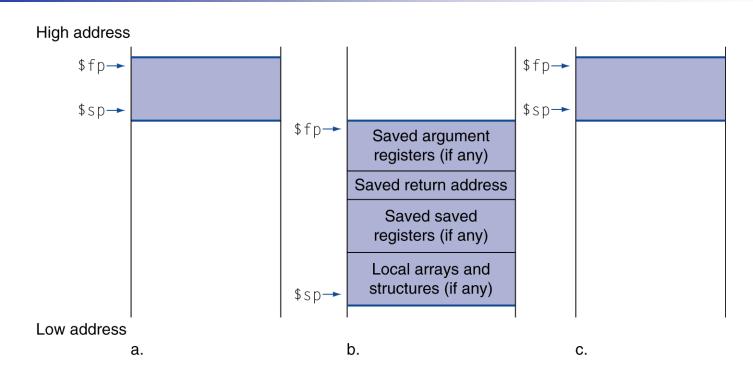

- Local data allocated by callee
  - e.g., C automatic variables
- Procedure frame (activation record)
  - Used by some compilers to manage stack storage

## **Memory Layout**

- Text: program code
- Static data: global variables
  - e.g., static variables in C, constant arrays and strings
  - \$gp initialized to address allowing ±offsets into this segment
- Dynamic data: heap
  - E.g., malloc() in C, new in Java, linked lists
  - Must use free() in C
    - Memory leak issues!
- Stack: automatic storage

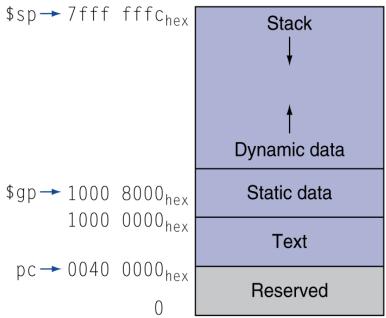

### Non-Leaf Procedures

- Procedures that call other procedures
- For nested call, caller needs to save on the stack:
  - Any saved registers being used \$s0-\$s7
  - Its return address
  - Any arguments and temporaries needed after the call
    - e.g., suppose main program calls procedure A with an argument 3 in \$a0 and then using jal A
    - Then if procedure A calls procedure B via jal B with an argument of 7 placed in \$a0
    - But this causes a conflict over the use of register \$a0
- Restore from the stack after the call

### Non-Leaf Procedure Example

C code:

```
int fact (int n)
{
  if (n < 1) return 1;
  else return n * fact(n - 1);
}</pre>
```

- Argument n in \$a0
- Result in \$v0

### **Tracing Recursive Functions**

= 24

- Executing recursive algorithms goes through two phases:
  - Expansion in which the recursive step is applied until hitting the base step
  - "Substitution" in which the solution is constructed backwards starting with the base step

```
fact(4) = 4 * fact (3)

= 4 * (3 * fact (2))

= 4 * (3 * (2 * fact (1)))

= 4 * (3 * (2 * (1 * fact (0))))

= 4 * (3 * (2 * (1 * 1)))

= 4 * (3 * (2 * 1))

= 4 * (3 * 2)

= 4 * 6
```

48

## Non-Leaf Procedure Example

MIPS code:

```
int fact (int n)
{
   if (n < 1) return 1;
   else return n * fact(n - 1);
}</pre>
```

```
fact:
    addi $sp, $sp, -8
                         # adjust stack for 2 items
    sw $ra, 4($sp)
                         # save return address
    sw $a0, 0($sp)
                         # save argument
    slti $t0, $a0, 1
                         # test for n < 1
    beq $t0, $zero, L1
    addi $v0, $zero, 1
                         # if so, result is 1
    addi $sp, $sp, 8
                          # pop 2 items from stack
        $ra
                          # and return
    jr
L1: addi $a0, $a0, -1
                         # else decrement n
        fact
                          # recursive call
    jal
        $a0, 0($sp)
                         # restore original n
                         # and return address
    lw $ra, 4($sp)
    addi $sp, $sp, 8
                         # pop 2 items from stack
        $v0, $a0, $v0
                          # multiply to get result
   mul
    jr
         $ra
                          # and return
```

## **MIPS** Register Conventions

Name	Register number	Usage	Preserved on call?
\$zero	0	The constant value 0	n.a.
\$v0-\$v1	2–3	Values for results and expression evaluation	no
\$a0-\$a3	4–7	Arguments	no
\$t0-\$t7	8–15	Temporaries	no
\$s0 <b>-</b> \$s7	16–23	Saved	yes
\$t8-\$t9	24–25	More temporaries	no
\$gp	28	Global pointer	yes
\$sp	29	Stack pointer	yes
\$fp	30	Frame pointer	yes
\$ra	31	Return address	yes

Register 1, called \$at, is reserved for the assembler and registers 26–27, called \$k0-\$k1, are reserved for the operating system.

### **Character Data**

- Byte-encoded character sets
  - ASCII: 128 characters
    - 95 graphic, 33 non-printable control (almost obsolete now)

ASCII value	Char- acter										
32	space	48	0	64	@	80	Р	96	`	112	р
33	!	49	1	65	А	81	Q	97	а	113	q
34	"	50	2	66	В	82	R	98	b	114	r
35	#	51	3	67	С	83	S	99	С	115	S
36	\$	52	4	68	D	84	Т	100	d	116	t
37	%	53	5	69	E	85	U	101	е	117	u
38	&	54	6	70	F	86	V	102	f	118	V
39	•	55	7	71	G	87	W	103	g	119	W
40	(	56	8	72	Н	88	X	104	h	120	Х
41	)	57	9	73	I	89	Υ	105	i	121	у
42	*	58	)**  **	74	J	90	Z	106	j	122	Z
43	+	59	;	75	K	91	]	107	k	123	{
44	,	60	<	76	L	92	/	108	I	124	ĵ
45	-	61	=	77	М	93	]	109	m	125	}
46		62	>	78	N	94	٨	110	n	126	~
47	/	63	?	79	0	95	_	111	0	127	DEL

- Latin-1: 256 characters
  - ASCII, +96 more graphic characters

### **Character Data**

- Unicode: 32-bit character set
  - Used in Java, C++ wide characters, ...
  - UTF-8, UTF-16: variable-length encodings
  - Most of the world's alphabets, plus symbols

Latin	Malayalam	Tagbanwa	General Punctuation
Greek	Sinhala	Khmer	Spacing Modifier Letters
Cyrillic	Thai	Mongolian	Currency Symbols
Armenian	Lao	Limbu	Combining Diacritical Marks
Hebrew	Tibetan	Tai Le	Combining Marks for Symbols
Arabic	Myanmar	Kangxi Radicals	Superscripts and Subscripts
Syriac	Georgian	Hiragana	Number Forms
Thaana	Hangul Jamo	Katakana	Mathematical Operators
Devanagari	Ethiopic	Bopomofo	Mathematical Alphanumeric Symbols
Bengali	Cherokee	Kanbun	Braille Patterns
Gurmukhi	Unified Canadian Aboriginal Syllabic	Shavian	Optical Character Recognition
Gujarati	Ogham	Osmanya	Byzantine Musical Symbols
Oriya	Runic	Cypriot Syllabary	Musical Symbols
Tamil	Tagalog	Tai Xuan Jing Symbols	Arrows
Telugu	Hanunoo	Yijing Hexagram Symbols	Box Drawing
Kannada	Buhid	Aegean Numbers	Geometric Shapes

### **Byte/Halfword Operations**

- To manipulate text (e.g. ASCII characters)
   byte operations are essential
- MIPS byte/halfword load/store
  - String processing is a common case

```
lb rt, offset(rs) lh rt, offset(rs)
```

Sign extend to 32 bits in rt

```
lbu rt, offset(rs) lhu rt, offset(rs)
```

Zero extend to 32 bits in rt

```
sb rt, offset(rs) sh rt, offset(rs)
```

Store just rightmost byte/halfword

## **String Copy Example**

- C code (naïve):
  - Null-terminated string

```
void strcpy (char x[], char y[])
{ int i;
    i = 0;
    while ((x[i]=y[i])!='\0')
        i += 1;
}
```

- Addresses of x, y in \$a0, \$a1
- i in \$s0

# **String Copy**

#### MIPS code:

```
void strcpy (char x[], char y[])
{ int i;
    i = 0;
    while ((x[i]=y[i])!='\0')
        i += 1;
}
```

```
strcpy:
   addi $sp, $sp, -4
                          # adjust stack for 1 item
        $s0, 0($sp)
                          # save $s0
    SW
    add $s0, $zero, $zero # i = 0
L1: add $t1, $s0, $a1
                          # addr of y[i] in $t1
   1bu $t2, 0($t1)
                          # $t2 = y[i]
   add $t3, $s0, $a0
                          # addr of x[i] in $t3
    sb $t2, 0($t3)
                          \# x[i] = y[i]
                          # exit loop if y[i] == 0
    beq $t2, $zero, L2
                          # i = i + 1
    addi $s0, $s0, 1
                          # next iteration of loop
        L1
L2: lw $s0, 0($sp)
                          # restore saved $s0
   addi $sp, $sp, 4
                          # pop 1 item from stack
        $ra
                          # and return
    jr
```

### **32-bit Constants**

- Most constants are small
  - 16-bit immediate is sufficient
- For the occasional 32-bit constant

```
lui rt, constant
```

- Copies 16-bit const to left 16 bits of rt; Clears right 16 bits of rt
- Example: how can we load 32 bit constant into \$s0? 0000 0000 0111 1101 0000 1001 0000 0000

 Typically assembler is responsible for breaking a large constant and reassembling into a register (using the reserved register \$at)

### **Branch Addressing**

- Branch instructions specify
  - Opcode, two registers, target address
- If addresses had to fit in 16-bits, then no program could be bigger than 2<sup>16</sup> instr.

op	rs	rt	constant or address
6 bits	5 bits	5 bits	16 bits

- PC-relative addressing
  - Target address = PC + offset x 4
  - PC already incremented by 4 by this time
  - Almost all loops and if statements < 2<sup>16</sup> words

### **Jump Addressing**


- Jump (j and jal) targets could be anywhere in text segment
  - Encode full address in instruction

ор	address
6 bits	26 bits

- (Pseudo)Direct jump addressing
  - Target address =  $PC_{31...28}$ : (address × 4)

# Target Addressing Example

- Loop code from earlier example
  - Assume Loop at location 80000

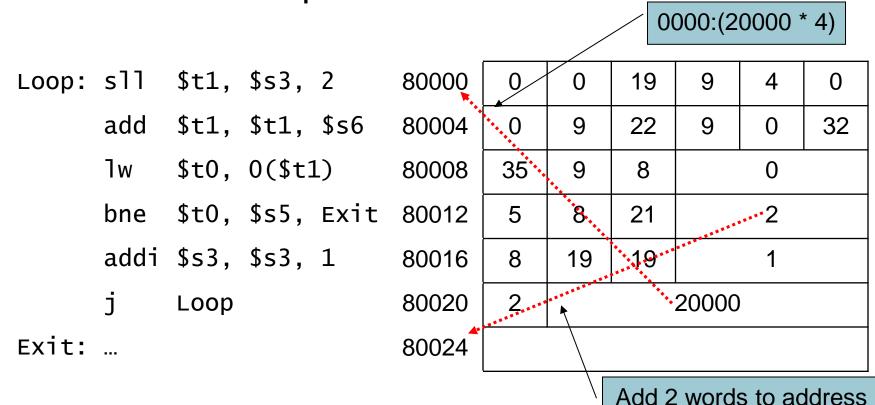


of following instruction

## **Branching Far Away**

- If branch target is too far to encode with 16-bit offset, assembler rewrites the code
- Example: how can we increase branching distance for the following instruction?

## **Addressing Mode Summary**

What are the different ways data for an instruction can be found?

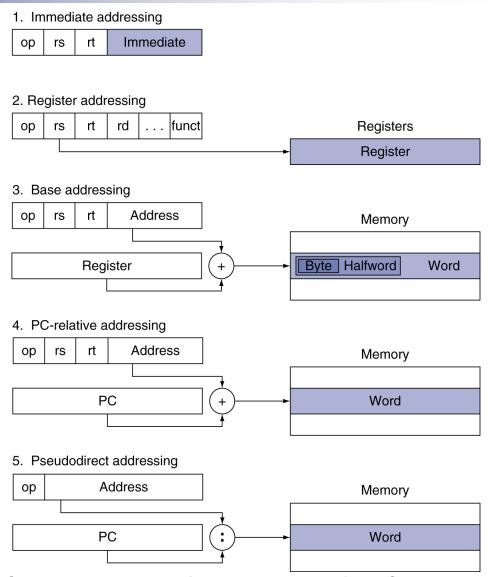

Chapter 2 — Instructions: Language of the Computer — 61

## **C Sort Example**

- Illustrates use of assembly instructions for a C bubble sort function
- Swap procedure (leaf)

```
void swap(int v[], int k)
{
  int temp;
  temp = v[k];
  v[k] = v[k+1];
  v[k+1] = temp;
}
```

v in \$a0, k in \$a1, temp in \$t0

### The Procedure Swap

```
void swap(int v[], int k)
{
  int temp;
  temp = v[k];
  v[k] = v[k+1];
  v[k+1] = temp;
}
```

 Forgetting that sequential word addresses differ by 4 instead of 1 is a common mistake in assembly language programming

### The Sort Procedure in C

Non-leaf bubble/exchange sort (calls swap)

```
void sort (int v[], int n)
  int i, j;
  for (i = 0; i < n; i += 1) {
for (j = i - 1; j >= 0 && v[j] > v[j + 1]; j -= 1) {
       swap(v,j);
```

- v in \$a0, n in \$a1, i in \$s0, j in \$s1
- we will also make use of \$s2, \$s3 (to store \$a0, \$a1)

### The Procedure Body

addi \$1, \$0, -1 # j = i - 1

1w \$t3. 0(\$t2) # \$t3 = v[i]

1w \$t4, 4(\$t2) # \$t4 = v[j + 1]

# i = 0

move \$s2, \$a0

move \$s3, \$a1

move \$s0, \$zero

move \$a0, \$s2

ial swap

exit2:

i for2tst

addi \$s0, \$s0, 1

for1tst

```
# save $a0 into $s2 }
                                                                    Move
                             # save $a1 into $s3
                                                                    params
                                                                  Outer loop
for1tst: slt t0, s0, s3 # t0 = 0 if s0 \ge s3 (i \ge n)
        beg t0, zero, exit1 # go to exit1 if s0 \ge s3 (i \ge n)
for2tst: slti t0, s1, 0 # t0 = 1 if s1 < 0 (j < 0)
        bne t0, zero, exit2 # go to exit2 if s1 < 0 (j < 0)
                                                                  Inner loop
        add t2, s2, t1 # t2 = v + (j * 4)
        \$1t \$t0, \$t4, \$t3  # \$t0 = 0 if \$t4 \ge \$t3
                                                                  Pass
                                                                  params
                                                                  & call
                                                                  Inner loop
```

void sort (int v[], int n)

### The Full Procedure

```
addi $sp,$sp, -20
                            # make room on stack for 5 registers
sort:
        sw $ra, 16($sp)
                            # save $ra on stack
        sw $s3,12($sp) # save $s3 on stack
        sw $s2, 8($sp) # save $s2 on stack
        sw $s1, 4($sp) # save $s1 on stack
        sw $s0, 0(\$sp)
                            # save $s0 on stack
                            # procedure body
        exit1: lw $s0, 0($sp) # restore $s0 from stack
        lw $s1, 4($sp) # restore $s1 from stack
       lw $s2, 8($sp)  # restore $s2 from stack
       lw $s3,12($sp) # restore $s3 from stack
        lw $ra,16($sp) # restore $ra from stack
        addi $sp,$sp, 20
                           # restore stack pointer
        ir $ra
                            # return to calling routine
```


### **Assembler Pseudoinstructions**

- Most assembler instructions represent machine instructions one-to-one
- Pseudoinstructions: figments of the assembler's imagination

```
move $t0, $t1 \rightarrow add $t0, $zero, $t1 blt $t0, $t1, L \rightarrow slt $at, $t0, $t1 bne $at, $zero, L
```

\$at (register 1): assembler temporary

## **Translation and Startup**

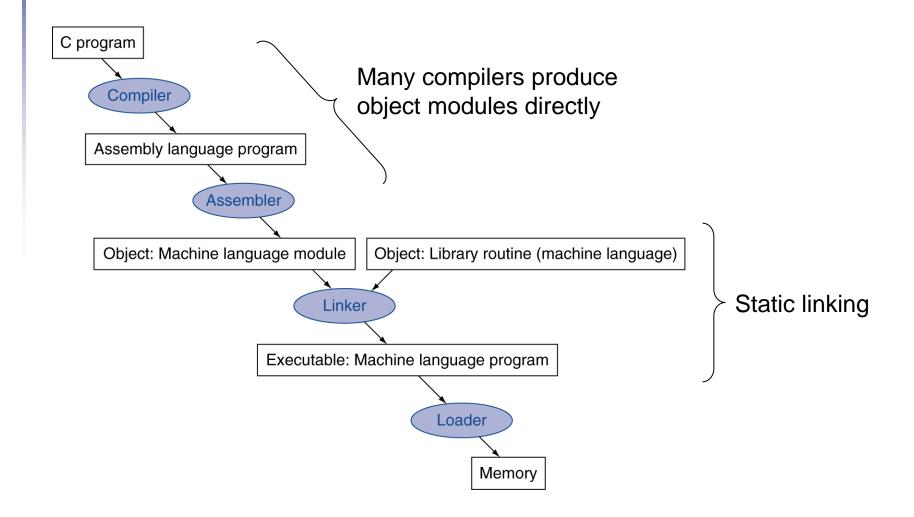

Chapter 2 — Instructions: Language of the Computer — 68

### Producing an Object Module

- Assembler (or compiler) translates program into machine instructions
- Provides information for building a complete program from the pieces
- E.g. object file (\*.o) for UNIX has 6 distinct parts:
  - Header: described contents of object module
  - Text segment: translated instructions
  - Static data segment: data allocated for the life of the program
  - Relocation info: for contents that depend on absolute location of loaded program (e.g. jump targets)
  - Symbol table: global definitions and external refs
  - Debug info: for associating machine code with high level source code by debuggers

### **Linking Object Modules**

- Produces an executable image
  - 1. Merges segments/object files/procedures
    - Rather than compiling/assembling whole program when a single line of a procedure is changed, procedures are compiled/assembled independently
  - 2. Resolve labels (determine their addresses)
  - 3. Patch location-dependent and external refs

## Loading a Program

- Load from image file on disk into memory
  - 1. Read header to determine segment sizes
  - 2. Create virtual address space
  - 3. Copy text and initialized data into memory
    - Or set page table entries so they can be faulted in
  - 4. Set up arguments on stack
  - 5. Initialize registers (including \$sp, \$fp, \$gp)
  - 6. Jump to startup routine
    - Copies arguments to \$a0, ... and calls main
    - When main returns, do exit syscall

## Static and Dynamic Linking

- So far discussed traditional approach to linking libraries before program executes
  - Static linking
    - If new version of a library released to fix bugs or support new hardware, statically linked program keeps using old version
    - All routines in a library are loaded, even if they are not used
- Dynamic linking: Do not link/load library routines until program is run
  - Requires procedure code to be relocatable
  - Automatically picks up new library versions
  - Dynamically linked libraries (DLLs)

# Lazy Linkage

Routine linked only after it is called


Avoids image bloat caused by static linking of all referenced libraries


Indirection table

Stub: Loads routine ID, Jump to linker/loader

Linker/loader code

Dynamically mapped code

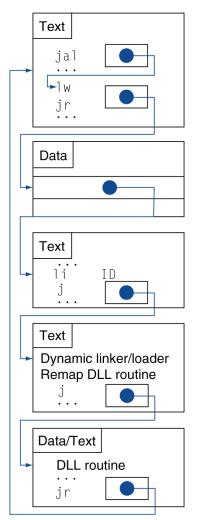


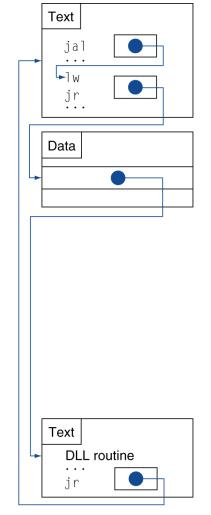

a. First call to DLL routine

b. Subsequent calls to DLL routine

# **Starting Java Applications**

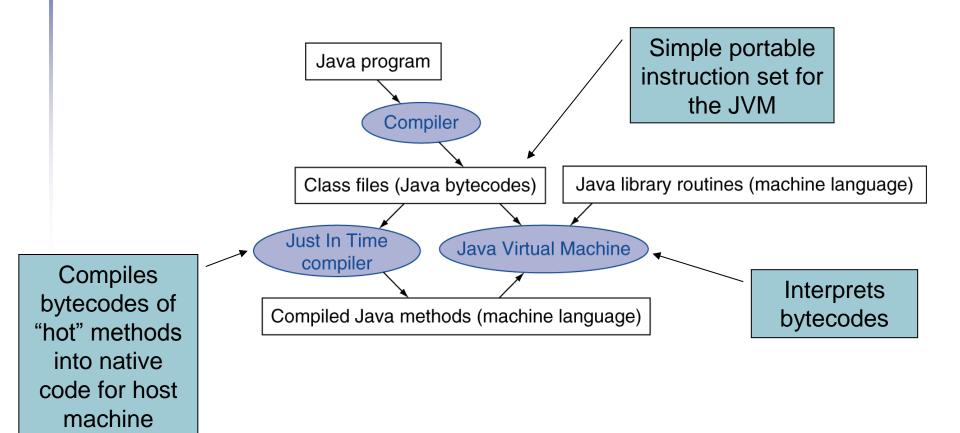


## **Compiler Optimizations**


#### gcc compiler options


- -01: the compiler tries to reduce code size and execution time, without performing any optimizations that take a great deal of compilation time
- -O2: Optimize even more. GCC performs nearly all supported optimizations that do not involve a spacespeed tradeoff. As compared to –O1, this option increases both compilation time and the performance of the generated code
- -O3: Optimize yet more. All -O2 optimizations and also turns on the -finline-functions, -funswitch-loops, fpredictive-commoning, -fgcse-after-reload, -ftree-vectorize and -fipa-cp-clone options


### **Effect of Compiler Optimization**



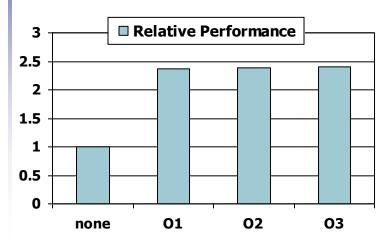


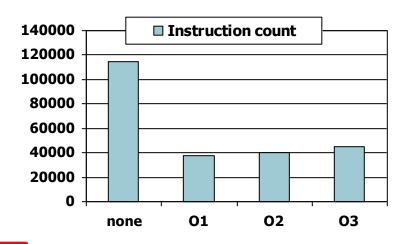

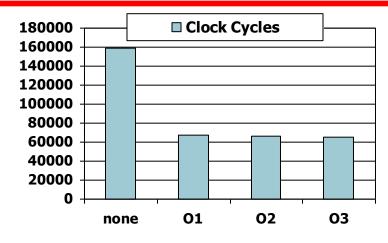

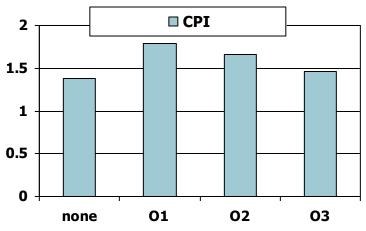

### **Effect of Language and Algorithm**

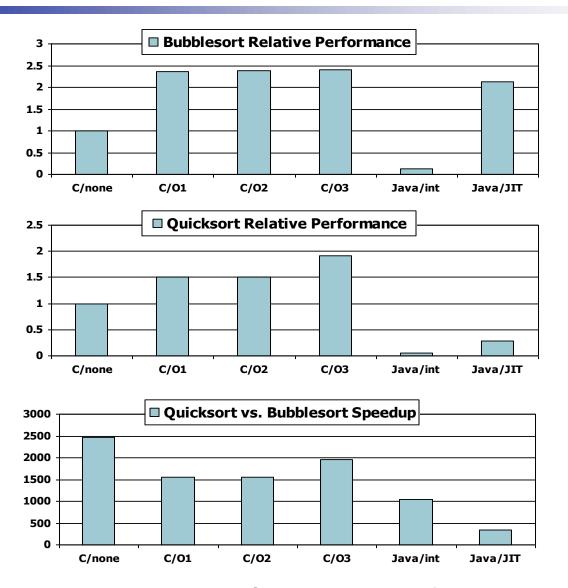

Chapter 2 — Instructions: Language of the Computer — 77

#### **Lessons Learnt**

- Instruction count and CPI are not good performance indicators in isolation
- Compiler optimizations are sensitive to the algorithm
- Java/JIT compiled code is significantly faster than JVM interpreted
  - Comparable to optimized C in some cases
  - But C is typically much faster than Java
- Nothing can fix a dumb algorithm!

## **Arrays vs. Pointers**

- Array indexing involves
  - Multiplying index by element size
  - Adding to array base address
- Pointers correspond directly to memory addresses
  - Can avoid indexing complexity

# **Example: Clearing an Array**

```
clear1(int array[], int size) {
                                        clear2(int *array, int size) {
 int i;
                                          int *p;
 for (i = 0; i < size; i += 1)
                                          for (p = \&array[0]; p < \&array[size];
   array[i] = 0;
                                               p = p + 1
                                            *p = 0:
                                        }
      move $t0,$zero # i = 0
                                               move t0,a0 # p = & array[0]
loop1: sll $t1,$t0,2  # $t1 = i * 4
                                               sll $t1,$a1,2  # $t1 = size * 4
      add $t2,$a0,$t1 # $t2 =
                                               add t2,a0,t1 # t2 =
                       # &array[i]
                                                                   &array[size]
                                        loop2: sw zero,0(t0) # Memory[p] = 0
      sw zero, 0(t2) # array[i] = 0
      addi $t0,$t0,1 # i = i + 1
                                               addi t0,t0,4 # p = p + 4
      s1t $t3.$t0.$a1 # $t3 =
                                               s1t $t3.$t0.$t2 # $t3 =
                       # (i < size)
                                                               #(p<&array[size])
      bne $t3,$zero,loop1 # if (...)
                                               bne $t3,$zero,loop2 # if (...)
                          # goto loop1
                                                                   # goto loop2
```

## Comparison of Array vs. Ptr

- Multiply "strength reduced" to shift
- Array version requires shift to be inside loop
  - Part of index calculation for incremented i
  - c.f. incrementing pointer
- Compiler can achieve same effect as manual use of pointers
  - Induction variable elimination
  - Better to make program clearer and safer
    - Avoid using pointers!!

## **Synchronization**

- Two processors sharing an area of memory
  - P1 writes, then P2 reads
  - Data race if P1 and P2 don't synchronize
    - Result depends on order of accesses
      - e.g. P1 is still writing when P2 starts reading
    - In general, multiple processors accessing shared memory (or any shared resource) creates data races
- Hardware and ISA support required
  - Atomic read/write memory operation
    - No other access to the location allowed during the read/write
  - How is atomic access support provided for processors?
    - Locks for shared resources
    - Aka semaphores or mutexes

## **Motivation for Atomic Swap**

- Build lock for multi-processor system
  - To govern access to some critical resource
  - 0 indicates lock is free; 1 indicates lock is unavailable; "lock" stored in memory
  - Processor tries to set the lock by doing an exchange of 1 which is in a register
  - Value returned from exchange is
    - 1 if another processor already acquired the lock;
    - 0 otherwise; in this case value changed to 1 to prevent another processor from retrieving 0
  - Locks allow breaking race conditions

## Synchronization in MIPS

- Load linked: 11 rt, offset(rs)
- Store conditional: sc rt, offset(rs)
  - Succeeds if location not changed since the 11
    - Returns 1 in rt
  - Fails if location is changed
    - Returns 0 in rt
- Example: atomic swap (to test/set lock variable)

- Hardware (e.g. mem controller) serializes accesses to lock
- II, sc can be used to build other synchronization primitives
- atomic compare and swap, fetch and increment, etc.

### **ARM & MIPS Similarities**

- ARM: the most popular embedded core
- Similar basic set of instructions to MIPS

	ARM	MIPS
Date announced	1985	1985
Instruction size	32 bits	32 bits
Address space	32-bit flat	32-bit flat
Data alignment	Aligned	Aligned
Data addressing modes	9	3
Registers	15 × 32-bit	31 × 32-bit
Input/output	Memory mapped	Memory mapped


## **ARM & MIPS Similarities**

	Instruction name	ARM	MIPS
	Add	add	addu, addiu
	Add (trap if overflow)	adds; swivs	add
	Subtract	sub	subu
	Subtract (trap if overflow)	subs; swivs	sub
	Multiply	mul	mult, multu
	Divide	-	div, divu
5	And	and	and
Register-register	Or	orr	or
	Xor	eor	xor
	Load high part register		lui
	Shift left logical	Isl <sup>1</sup>	sllv, sll
	Shift right logical	Isr <sup>1</sup>	srlv, srl
	Shift right arithmetic	asr <sup>1</sup>	srav, sra
	Compare	cmp, cmn, tst, teq	slt/i, slt/iu
Data transfer	Load byte signed	Idrsb	Ib
	Load byte unsigned	ldrb	Ibu
	Load halfword signed	Idrsh	Ih
	Load halfword unsigned	ldrh	lhu
	Load word	ldr	lw
	Store byte	strb	sb
	Store halfword	strh	sh
	Store word	str	sw
	Read, write special registers	mrs, msr	move
	Atomic Exchange	swp, swpb	II;sc

## Compare and Branch in ARM

- Uses condition codes for result of an arithmetic/logical instruction
  - Negative, zero, carry, overflow
  - Compare (CMP) instructions to set condition codes without keeping the result
    - Subtracts one operand from the other
- Each instruction can be conditional
  - Top 4 bits of instruction word: condition value
  - Can avoid branches over single instructions

# Instruction Encoding

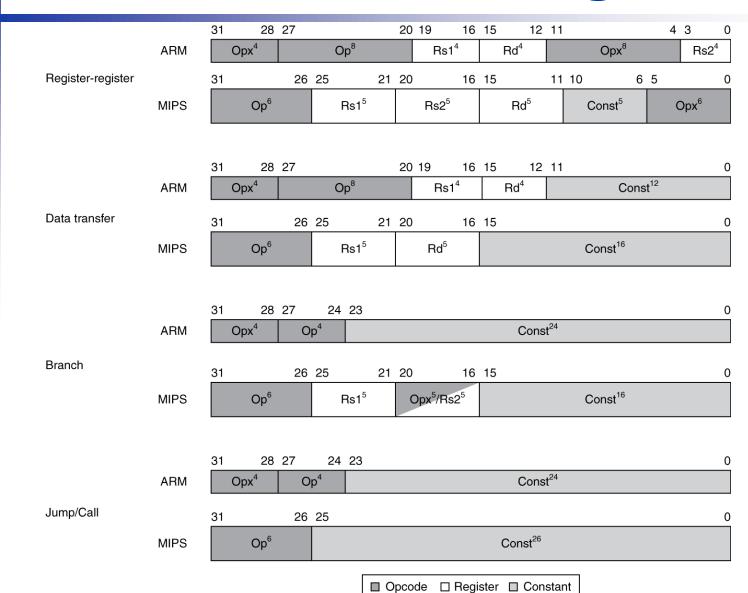

# **Unique ARM Instructions**

Name	Definition	ARM v.4	MIPS
Load immediate	Rd = Imm	mov	addi, \$0,
Not	Rd = ~(Rs1)	mvn	nor, \$0,
Move	Rd = Rs1	mov	or, \$0,
Rotate right	Rd = Rs i >> i $Rd_{0i-1} = Rs_{31-i31}$	ror	
And not	Rd = Rs1 & ~(Rs2)	bic	
Reverse subtract	Rd = Rs2 - Rs1	rsb, rsc	
Support for multiword integer add	CarryOut, Rd = Rd + Rs1 + OldCarryOut	adcs	_
Support for multiword integer sub	CarryOut, Rd = Rd - Rs1 + OldCarryOut	sbcs	_


### **ARM v8 Instructions**

- In moving to 64-bit, ARM did a complete overhaul
- ARM v8 resembles MIPS
  - Changes from v7:
    - No conditional execution field
    - Immediate field is 12-bit constant
    - Dropped load/store multiple
    - PC is no longer a GPR
    - GPR set expanded to 32
    - Addressing modes work for all word sizes
    - Branch if equal/branch if not equal instructions

### The Intel x86 ISA

- Evolution with backward compatibility
  - 8080 (1974): 8-bit microprocessor
    - Accumulator, plus 3 index-register pairs
  - 8086 (1978): 16-bit extension to 8080
    - Complex instruction set (CISC)
  - 8087 (1980): floating-point coprocessor
    - Adds FP instructions and register stack
  - 80286 (1982): 24-bit addresses, MMU
    - Segmented memory mapping and protection
  - 80386 (1985): 32-bit extension (now IA-32)
    - Additional addressing modes and operations
    - Paged memory mapping as well as segments

# Basic x86 Registers (80386)

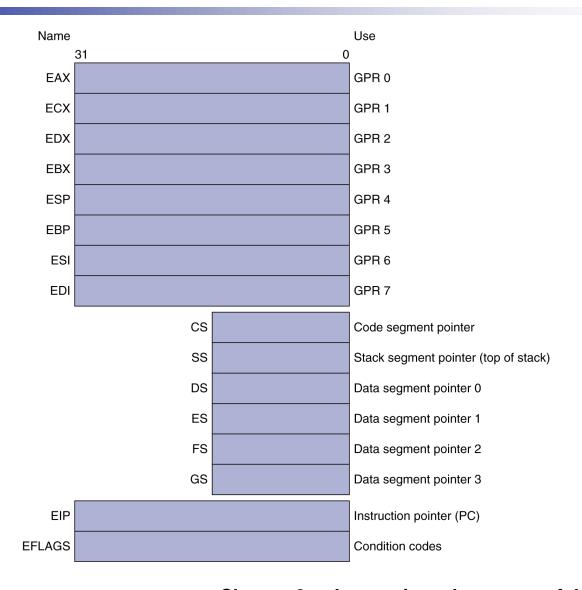

Chapter 2 — Instructions: Language of the Computer — 92

# **Basic x86 Addressing Modes**


#### Two operands per instruction

Source/dest operand	Second source operand
Register	Register
Register	Immediate
Register	Memory
Memory	Register
Memory	Immediate

#### Memory addressing modes

- Address in register
- Address = R<sub>base</sub> + displacement
- Address =  $R_{base}$  +  $2^{scale}$  ×  $R_{index}$  (scale = 0, 1, 2, or 3)
- Address = R<sub>base</sub> + 2<sup>scale</sup> × R<sub>index</sub> + displacement

## x86 Instruction Encoding

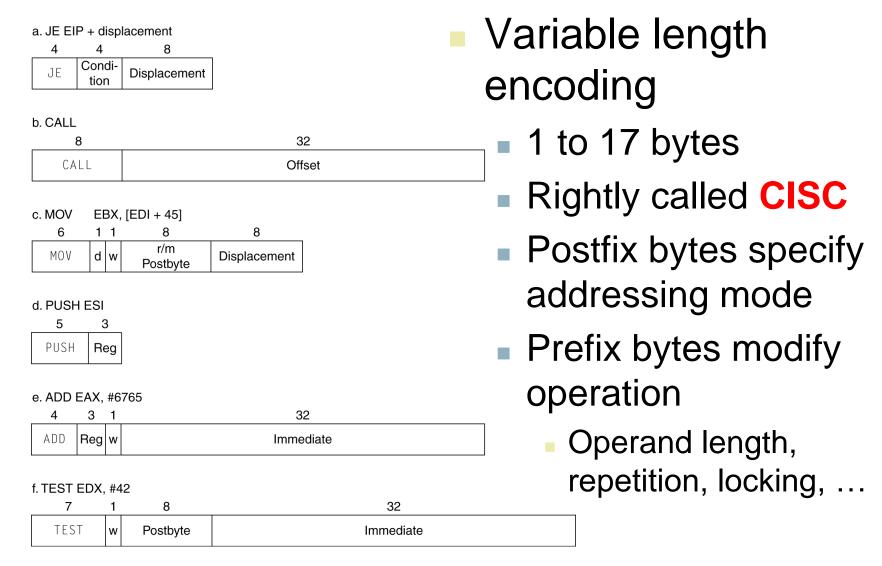

## Implementing IA-32

- Complex instruction set makes implementation difficult
  - Hardware translates instructions to simpler micro-operations
    - Simple instructions: 1–1
    - Complex instructions: 1—many
  - Microengine similar to RISC
- Comparable performance to RISC
  - Compilers avoid complex instructions

### The Intel x86 ISA

- Further evolution...
  - i486 (1989): pipelined, on-chip caches and FPU
    - Compatible competitors: AMD, Cyrix, ...
  - Pentium (1993): superscalar, 64-bit datapath
    - Later versions added MMX (Multi-Media eXtension) instructions
    - The infamous \$500M FDIV bug
  - Pentium Pro (1995), Pentium II (1997)
    - New microarchitecture (see Colwell, The Pentium Chronicles)
  - Pentium III (1999)
    - Added SSE (Streaming SIMD Extensions) and associated registers
  - Pentium 4 (2001)
    - New microarchitecture
    - Added 144 SSE2 instructions

#### The Intel x86 ISA

- And further...
  - AMD64 (2003): extended architecture to 64 bits
  - EM64T Extended Memory 64 Technology (2004)
    - AMD64 adopted by Intel (with refinements)
    - Added SSE3 instructions
  - Intel Core (2006)
    - Added SSE4 instructions, virtual machine support
  - AMD64 (2007): SSE5 instructions
  - Intel Core i3/i5/i7 (2011): Advanced Vector Extensions
    - Longer SSE registers, more instructions
  - Intel Haswell (2013): AVX2, FMA3, TSX
- Existing x86 software base at each step too important to jeopardize with significant architectural changes
  - x86 extended by one instruction per month since inception!
  - is an architecture that is difficult to explain and hard to love
  - despite lacking "technical elegance", x86 family pervasive today

### **Fallacies**


#### ■ Powerful instruction ⇒ higher performance

- Fewer instructions required
- But complex instructions are hard to implement
  - May slow down all instructions, including simple ones
- Compilers are good at making fast code from simple instructions
- Use assembly code for high performance
  - In general modern compilers are better at dealing with modern processors
  - More lines of code (as is the case for assembly code vs. C or Java) ⇒ more errors and less productivity
  - Assembly coding sometimes used today in embedded software and device drivers

Chapter 2 — Instructions: Language of the Computer — 98

### **Fallacies**

- Backward compatibility ⇒ instruction set doesn't change
  - But they do accrue more instructions

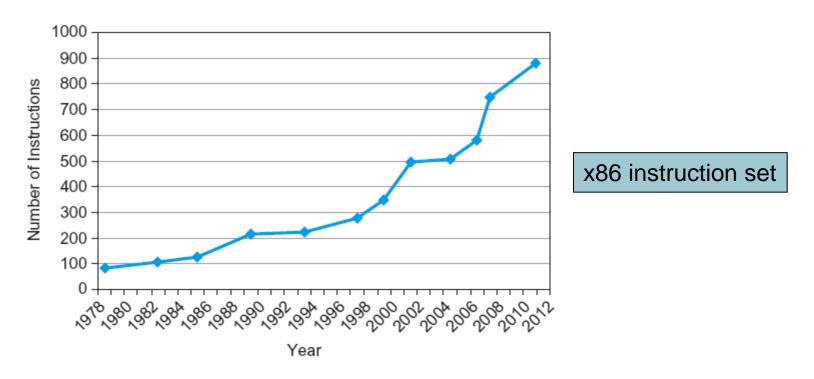

# **Programming Pitfalls**

- Forgetting that sequential words are not at sequential addresses
  - Increment by 4, not by 1!
- Keeping a pointer to an automatic variable after procedure returns
  - e.g., passing pointer to a local array/variable back via an argument
  - Pointer becomes invalid when stack popped

# **Concluding Remarks**

- MIPS: typical of RISC ISAs
  - c.f. x86
- Layers of software/hardware
  - Compiler, assembler, hardware
  - All of them impact performance
- MIPS Design principles

### MIPS (RISC) Design Principles

#### Simplicity favors regularity

- fixed size instructions
- small number of instruction formats
- opcode always the first 6 bits

#### Smaller is faster

- limited instruction set
- limited number of registers in register file
- limited number of addressing modes

#### Make the common case fast

- arithmetic operands from the register file (load-store machine)
- allow instructions to contain immediate operands

#### Good design demands good compromises

three instruction formats

### **MIPS Addressing Modes**

