The METAS joule-watt balance

Notes on principles of the Kibble and joule balances

Daniel Zahnd

March 01, 2024 - July 9, 2024

Contents

1	Elec	Electrodynamics 1				
	1.1	Maxwell's equations	1			
		1.1.1 Microscopic Maxwell equations	1			
		1.1.2 Macroscopic Maxwell equations	2			
	1.2	Electromagnetic induction	2			
	1.3	Electromagnetic force	4			
2	Quantum mechanics					
	2.1	Schrödinger's equation	5			
	2.2	The quantum Hall effect	7			
		2.2.1 The classical Hall effect	7			
		2.2.2 The Hamiltonian for the quantum Hall effect derivation .	11			
		2.2.3 Solving the quantum Hall effect Schrödinger equation	13			
		2.2.4 Deriving the quantum Hall resistance	16			
	2.3	The Josephson effect	19			
		2.3.1 A two-state quantum system	20			
		2.3.2 Cooper pairs	21			
		2.3.3 The Josephson two-state quantum system	21			
3	Sup	Superconductivity 2				
	3.1	Expulsive property of superconductors	23			
		3.1.1 Expulsion property	23			
		3.1.2 Formation of a supercurrent	24			
	3.2	The Meissner effect	25			
	3.3	London theory	25			
		3.3.1 The London equations	25			
		3.3.2 The penetration depth	26			
4	Kibble balance 29					
-	4.1	Introduction	29			
	4.2	General principle	29			
	4.3	Data processing	32			
		4.3.1 Data processing theory	32			
		4.3.2 Data processing example	36			

	4.4	Self-centering mechanism
	4.5	Abbe error issue
		4.5.1 Introduction
		4.5.2 Theoretical preliminaries 40
	4.6	Practical implementation of the 3-interferometer technique 48
		4.6.1 Measurement circuit
		4.6.2 Description of the TIA device
		4.6.3 Signals to process
		4.6.4 Required output
		4.6.5 Sine to square wave conversion 49
		4.6.6 Experiment 1: Providing signal to TIA and getting times-
		tamps
		4.6.7 Experiment 2: Frequency sweep experiment 52
		4.6.8 Experiment 3: Frequency stability experiment 53
5	Jou	le balance 55
	5.1	Introduction
	5.2	General principle
\mathbf{A}	Stat	istics 58
	A.1	Random variable
	A.2	Expectation value
		Variance, standard deviation and covariance
		Propagation of uncertainties
		A.4.1 Application: Uncertainty of correlated methods to deter-
		mine the same quantity

Chapter 1

Electrodynamics

1.1 Maxwell's equations

The design of a watt and/or joule balance heavily relies on classical electrodynamics. It is therefore instructive to consider Maxwell's equations, which can be written in microscopic or macroscopic form, aswell as in differential or integral form.

1.1.1 Microscopic Maxwell equations

Consider an electric field $E(\mathbf{r},t)$, a magnetic field $B(\mathbf{r},t)$, a charge density¹ $\rho(\mathbf{r},t)$ and a current density² $j(\mathbf{r},t)$. The four so-called Maxwell equations

$$\nabla \cdot \boldsymbol{E} = \frac{\rho}{\epsilon_0} \quad \Leftrightarrow \quad \oint_{\partial V} \boldsymbol{E} \cdot d\boldsymbol{S} = \frac{1}{\epsilon_0} \int_{V} \rho \, dV$$
 (1.1)

$$\nabla \cdot \boldsymbol{B} = 0 \quad \Leftrightarrow \quad \oint_{\partial V} \boldsymbol{B} \cdot d\boldsymbol{S} = 0$$
 (1.2)

$$\nabla \times \boldsymbol{E} = -\frac{\partial \boldsymbol{B}}{\partial t} \quad \Leftrightarrow \quad \oint_{\partial S} \boldsymbol{E} \cdot d\boldsymbol{l} = -\int_{S} \frac{\partial \boldsymbol{B}}{\partial t} \cdot d\boldsymbol{S}$$
 (1.3)

$$\nabla \times \boldsymbol{B} = \mu_0 \boldsymbol{j} + \mu_0 \epsilon_0 \frac{\partial \boldsymbol{E}}{\partial t} \quad \Leftrightarrow \quad \oint_{\partial S} \boldsymbol{B} \cdot d\boldsymbol{l} = \mu_0 \int_{S} \boldsymbol{j} \cdot d\boldsymbol{S} + \mu_0 \epsilon_0 \int_{S} \frac{\partial \boldsymbol{E}}{\partial t} \cdot d\boldsymbol{S} \quad (1.4)$$

govern these physical quantities in a situation, where no matter is present. These equations are also known as the microscopic Maxwell equations. One can go back and forth between integral and differential formulations by means of the Gauss and Stokes integral theorems.

 $^{^1{\}rm The}$ charge density ρ gives the amount of charge per volume in Euclidean space.

 $^{^2{\}rm The}$ current density \boldsymbol{j} gives the amount of current per area, through which the current flows.

1.1.2 Macroscopic Maxwell equations

Consider an electric field $\boldsymbol{E}(\boldsymbol{r},t)$, a magnetic field $\boldsymbol{B}(\boldsymbol{r},t)$, a charge density $\rho(\boldsymbol{r},t)$ and a current density $\boldsymbol{j}(\boldsymbol{r},t)$. Consider furthermore a polarization $\boldsymbol{P}(\boldsymbol{r},t)$ and magnetization $\boldsymbol{M}(\boldsymbol{r},t)$ of a material present in the fields. Due to the magnetization and the polarization of the material, the electric and magnetic fields are shifted such that one now writes the Maxwell equations for the electric displacement field

$$\boldsymbol{D}(\boldsymbol{r},t) \doteq \epsilon_0 \boldsymbol{E}(\boldsymbol{r},t) + \boldsymbol{P}(\boldsymbol{r},t) \tag{1.5}$$

and the magnetic field strength

$$\boldsymbol{H}(\boldsymbol{r},t) \doteq \frac{1}{\mu_0} \boldsymbol{B}(\boldsymbol{r},t) - \boldsymbol{M}(\boldsymbol{r},t). \tag{1.6}$$

One arrives thus at the so-called macroscopic Maxwell equations given by

$$\nabla \cdot \boldsymbol{D} = \rho \quad \Leftrightarrow \quad \oint_{\partial V} \boldsymbol{D} \cdot d\boldsymbol{S} = \int_{V} \rho \, dV$$
 (1.7)

$$\nabla \cdot \boldsymbol{B} = 0 \quad \Leftrightarrow \quad \oint_{\partial V} \boldsymbol{B} \cdot d\boldsymbol{S} = 0$$
 (1.8)

$$\nabla \times \boldsymbol{E} = -\frac{\partial \boldsymbol{B}}{\partial t} \quad \Leftrightarrow \quad \oint_{\partial S} \boldsymbol{E} \cdot d\boldsymbol{l} = -\int_{S} \frac{\partial \boldsymbol{B}}{\partial t} \cdot d\boldsymbol{S}$$
 (1.9)

$$\nabla \times \boldsymbol{H} = \boldsymbol{j} + \frac{\partial \boldsymbol{D}}{\partial t} \quad \Leftrightarrow \quad \oint_{\partial S} \boldsymbol{H} \cdot d\boldsymbol{l} = \int_{S} \boldsymbol{j} \cdot d\boldsymbol{S} + \int_{S} \frac{\partial \boldsymbol{D}}{\partial t} \cdot d\boldsymbol{S}.$$
 (1.10)

1.2 Electromagnetic induction

In order to derive an expression for electromagnetic induction, it is necessary to invoke Maxwell's equations; in particular the Lorentz force equation

$$F(r,t) = q \left[E(r,t) + v(t) \times B(r,t) \right], \tag{1.11}$$

where r and t denote the position and time of evaluation; and where q is a charge probe, v is the velocity of q and E and B are the electric and magnetic field respectively. Furthermore, the third Maxwell equation is of interest for the watt and joule balance techniques, namely

$$\nabla \times \boldsymbol{E}(\boldsymbol{r},t) = -\frac{\partial \boldsymbol{B}(\boldsymbol{r},t)}{\partial t}.$$
 (1.12)

In addition to these equations, also the integral theorem of Stokes is relevant; let Σ denote an arbitrary surfae in \mathbb{R}^3 and let $\partial \Sigma$ denote its boundary, which in this case is a line in \mathbb{R}^3 . If then V is an arbitrary vector field in \mathbb{R}^3 , the integral theorem of Stokes states that

$$\int_{\Sigma} (\nabla \times \mathbf{V}) \cdot d\mathbf{S} = \oint_{\partial \Sigma} \mathbf{V} \cdot d\mathbf{l}, \qquad (1.13)$$

where $d\mathbf{S}$ denotes the oriented surface element of Σ and $d\mathbf{l}$ is a line element of $\partial \Sigma$. With this theorem, Maxwell's third equation eq. (1.12) can be transformed to the integral form

$$\oint_{\partial \Sigma} \boldsymbol{E}(\boldsymbol{r}, t) \cdot d\boldsymbol{l} = -\int_{\Sigma} \frac{\partial \boldsymbol{B}(\boldsymbol{r}, t)}{\partial t} \cdot d\boldsymbol{S}.$$
(1.14)

If the surface Σ becomes time-dependent $\Sigma \to \Sigma(t)$, the magnetic flux Φ_B through the surface $\Sigma(t)$ can be written as

$$\Phi_B = \int_{\Sigma(t)} \boldsymbol{B}(\boldsymbol{r}, t) \cdot d\boldsymbol{S}. \tag{1.15}$$

The total time derivative of the magnetic flux in turn gives the negative induced voltage U(t), namely

$$U(t) = -\frac{\mathrm{d}\Phi_B}{\mathrm{d}t} = -\frac{\mathrm{d}}{\mathrm{d}t} \int_{\Sigma(t)} \boldsymbol{B}(\boldsymbol{r}, t) \cdot \mathrm{d}\boldsymbol{S}. \tag{1.16}$$

In order to evaluate this total time derivative, both a change in the magnetic field as well as in the surface element have to be considered. The change in the surface element $d\mathbf{S}$ with time t can be written as $\frac{d\mathbf{S}}{dt} = \mathbf{v} \times d\mathbf{l}$, as fig. 1.1 indicates. With this knowledge, one can differentiate both $\mathbf{B}(\mathbf{r},t)$ and $d\mathbf{S}$ in

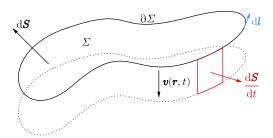


Figure 1.1: Illustration for the derivation of the expression for the change in the surface element $\frac{dS}{dt} = v \times dl$.

the integrand to arrive at

$$\frac{d\Phi_{B}}{dt} = \frac{d}{dt} \int_{\Sigma(t)} \mathbf{B}(\mathbf{r}, t) \cdot d\mathbf{S}$$

$$= \int_{\Sigma(t)} \frac{\partial \mathbf{B}(\mathbf{r}, t)}{\partial t} \cdot d\mathbf{S} + \int_{\Sigma(t)} \mathbf{B}(\mathbf{r}, t) \cdot \frac{d\mathbf{S}}{dt}$$

$$= -\oint_{\partial\Sigma(t)} \mathbf{E}(\mathbf{r}, t) \cdot d\mathbf{l} + \oint_{\partial\Sigma(t)} \mathbf{B}(\mathbf{r}, t) \cdot (\mathbf{v}(t) \times d\mathbf{l})$$

$$= -\oint_{\partial\Sigma(t)} [\mathbf{E}(\mathbf{r}, t) + \mathbf{v}(t) \times \mathbf{B}(\mathbf{r}, t)] \cdot d\mathbf{l} = -U(t).$$
(1.17)

In the case where the external magnetic field is zero, i.e. $\boldsymbol{E}(\boldsymbol{r},t)=0$, this equation reduces to

$$U(t) = \oint_{\partial \Sigma(t)} [\boldsymbol{v}(t) \times \boldsymbol{B}(\boldsymbol{r}, t)] \cdot d\boldsymbol{l}$$
 (1.18)

and is herewith the first of the fundamental equations used for the Kibble balance experiment.

1.3 Electromagnetic force

A second important equation is derived from the Lorentz force equation. Consider for this purpose fig. 1.2. In this figure, a short element of length dl of a

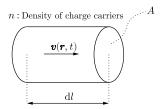


Figure 1.2: Illustration to derive the second important equation needed for the Kibble balance principle.

wire with charge carrier density n is shown. In principle, this wire represents any object of choice. If one assumes, that this wire or alternatively an object of choice is immersed in a magnetic field $\mathbf{B}(\mathbf{r},t)$, a magnetic force is exerted on charge carriers moving at speed $\mathbf{v}(t)$ in the object. Assuming that all charge carriers move at speed $\mathbf{v}(t)$, the total current I(t) is given by $I(t) = nAe|\mathbf{v}(t)$. The electromagnetic force exerted on one electron would be given by the expression $e\mathbf{E}(\mathbf{r},t) + e\mathbf{v}(t) \times \mathbf{B}(\mathbf{r},t)$; and on $nA\,\mathrm{d}l$ carriers with no external electric field $(\mathbf{E}(\mathbf{r},t)=0)$, the force differential d \mathbf{F} is given by

$$d\mathbf{F} = neA dl \left[\mathbf{v}(t) \times \mathbf{B}(\mathbf{r}, t) \right] = I(t) d\mathbf{l} \times \mathbf{B}(\mathbf{r}, t) = -I(t) \mathbf{B}(\mathbf{r}, t) \times d\mathbf{l}, \quad (1.19)$$

where in the last steps the definition $d\mathbf{l} \doteq dl \frac{\mathbf{v}}{|\mathbf{v}|}$ was used. Integrated over a closed path $\partial \Sigma(t)$ therefore one obtains the magnetic force on the object given by

$$F(r,t) = -I(t) \oint_{\partial \Sigma(t)} B(r,t) \times dl.$$
 (1.20)

Chapter 2

Quantum mechanics

Quantum mechanics describes everything by means of a wave function $\Psi(\boldsymbol{r},t)$. According to the probability interpretation of quantum mechanics, the quantity $|\Psi(\boldsymbol{r},t)|^2 \,\mathrm{d}^3 r$ gives the probability, that the described object is located in the volume $\mathrm{d}^3 r$ at time t. In order to calculate the probability P_V to find the described object in the volume V therefore, one has to perform the integral

$$P_V = \int_V |\Psi(\mathbf{r}, t)|^2 d^3r.$$
 (2.1)

Any system described by such a wave function is governed by the Schrödinger equation

$$i\hbar \frac{\partial \Psi(\mathbf{r},t)}{\partial t} = \hat{H}\Psi(\mathbf{r},t),$$
 (2.2)

where \hat{H} is the Hamilton operator of the system determining its energy states. The Hamilton operator \hat{H} is derived from the Hamiltonian H from classical mechanics describing the total energy of the system under consideration; it is commonly given as the sum of potential energy V and kinetic energy T, thus H = T + V. The Hamilton operator then is obtained by the substitution $\mathbf{p} \to \hat{\mathbf{p}} = -i\hbar \nabla$ for any occurrence of the momentum \mathbf{p} in the Hamiltonian H. Depending on the system under consideration, potential and kinetic energy will be given differently and hence also the Hamilton operator, subsequently simply called "the Hamiltonian", will look differently.

2.1 Schrödinger's equation

The Schrödinger equation, in reference to wave-particle duality, is intended to describe a matter wave. A general solution to the wave equation can be achieved by superposition of plane waves $F(\mathbf{r},t) = Ae^{i(\mathbf{k}\cdot\mathbf{r}-\omega t)}, A \in \mathbb{C}$. This is done through a function

$$W(\mathbf{r},t) = \int_{\mathbb{R}^3} d^3k \, A(\mathbf{k}) e^{i(\mathbf{k}\cdot\mathbf{r} - \omega t)}, \qquad (2.3)$$

where the wave vector $|\mathbf{k}| = \frac{2\pi}{\lambda}$ is related to ω with $\omega = \omega(\mathbf{k})$. According to De Broglie, the relations

$$|\boldsymbol{p}| = \frac{h}{\lambda} \quad \Leftrightarrow \quad \boldsymbol{p} = \hbar \boldsymbol{k}, \quad E = h\nu = \hbar\omega$$
 (2.4)

should also apply to matter waves. Therefore, in the above integral, one replaces

$$\mathbf{k} \to \frac{1}{\hbar} \mathbf{p}, \quad \omega \to \frac{E}{\hbar}$$
 (2.5)

and obtains

$$W(\boldsymbol{r},t) \to \Psi(\boldsymbol{r},t) = \int_{\mathbb{R}^3} d^3 p \, \phi(\boldsymbol{p}) e^{\frac{i}{\hbar}(\boldsymbol{p} \cdot \boldsymbol{r} - Et)}, \qquad (2.6)$$

where $A(\mathbf{k}) \to \phi(\mathbf{p})$ due to the substitution $\mathbf{k} \to \hbar^{-1}\mathbf{p}$ was used. Furthermore, derivatives of $\Psi(\mathbf{r},t)$ are calculated as

$$\frac{\partial \Psi(\boldsymbol{r},t)}{\partial t} = -i\frac{E}{\hbar}\Psi(\boldsymbol{r},t), \quad \Delta\Psi(\boldsymbol{r},t) = -\frac{\boldsymbol{p}^2}{\hbar^2}\Psi(\boldsymbol{r},t) = -\frac{2mE}{\hbar^2}\Psi(\boldsymbol{r},t), \quad (2.7)$$

where it is used that for a free particle, the energy is given by $E = \frac{m\mathbf{v}^2}{2} = \frac{\mathbf{p}^2}{2m}$. One can require

$$\alpha \left(-i\frac{E}{\hbar} \right) \stackrel{!}{=} E, \quad \beta \left(-\frac{2mE}{\hbar^2} \right) \stackrel{!}{=} E,$$
 (2.8)

which is satisfied for

$$\alpha = i\hbar, \quad \beta - \frac{\hbar^2}{2m}. \tag{2.9}$$

Thus, the Schrödinger equation for a free particle is obtained as

$$i\hbar \frac{\partial \Psi(\mathbf{r},t)}{\partial t} = -\frac{\hbar^2}{2m} \Delta \Psi(\mathbf{r},t).$$
 (2.10)

From this, the correspondence principle

$$E \to \hat{H} = i\hbar \frac{\partial}{\partial t}, \quad \boldsymbol{p} \to \hat{\boldsymbol{p}} = -i\hbar \boldsymbol{\nabla}$$
 (2.11)

can be derived. Considering $E\Psi = \frac{p^2}{2m}\Psi$ leads again to the free Schrödinger equation. By adding a potential term $V\Psi$ to the free Schrödinger equation, the full Schrödinger equation is obtained as

$$i\hbar\frac{\partial\Psi(\boldsymbol{r},t)}{\partial t}=-\frac{\hbar^2}{2m}\Delta\Psi(\boldsymbol{r},t)+V(\boldsymbol{r})\Psi(\boldsymbol{r},t)=\hat{H}\Psi(\boldsymbol{r},t), \eqno(2.12)$$

where $\hat{H} \doteq -\frac{\hbar^2}{2m}\Delta + V$ was defined as the Hamilton operator.

The Schrödinger equation is a non-relativistic equation and therefore can only be used to describe particles with $v \ll c$. However, both fermions and bosons can be described. To incorporate special relativity into quantum mechanics, the Klein-Gordon equation and the Dirac equation are available.

If the potential $V(\mathbf{r})$ is not time dependent, the wave function $\Psi(\mathbf{r},t)$ separates as

$$\Psi(\mathbf{r},t) = \psi(\mathbf{r})\varphi(t), \tag{2.13}$$

which allows to solve the Schrödinger equation with respect to time t and position r separately. The latter Schrödinger equation is called the time-independent Schrödinger equation and is obtained by inserting the ansatz eq. (2.13) into the full Schrödinger equation eq. (2.12). Doing that, one obtains

$$i\hbar \frac{1}{\varphi(t)} \frac{\partial \varphi(t)}{\partial t} = -\frac{\hbar^2}{2m} \frac{1}{\psi(\mathbf{r})} \Delta \psi(\mathbf{r}) + V(\mathbf{r}). \tag{2.14}$$

On the left hand side, one finds an expression solely dependent on time t, whereas the right hand side only depends on position r; the only possibility for this to be true if both sides of the equation are equal to a constant E, called the energy (eigenstates). Thus, multiplying the above equation by $\psi(r)$ and rewriting it using the definitions of E and the Hamilton operator yields the time-independent Schrödinger equation as

$$\hat{H}\psi(\mathbf{r}) = -\frac{\hbar^2}{2m}\Delta\psi(\mathbf{r}) + V(\mathbf{r})\psi(\mathbf{r}) = E\psi(\mathbf{r}). \tag{2.15}$$

Given this form of the equation, the resemblance to the eigenvalue equation of linear algebra becomes evident, which is why one calls the values of E and functions $\varphi(\mathbf{r})$ solving eq. (2.15) energy eigenstates and eigenfunctions.

2.2 The quantum Hall effect

The quantum Hall effect can be used for resistance measurement; according to [Jeckelmann and Jeanneret, 2001], the quantum Hall resistance R_H is given by the expression

$$R_H = \frac{h}{n_H e^2}, \quad n_H \in \mathbb{N}, \tag{2.16}$$

where $h = 6.626\,070\,15 \times 10^{-35}\,\mathrm{J}\,\mathrm{s}$ is the Planck constant and e is the elementary charge. The following treatment of the classical and quantum Hall effects will closely follow the material given by [Tong, 2016].

2.2.1 The classical Hall effect

In order to understand the quantum Hall effect, it is instructive to first attain a solid understanding of the classical Hall effect. Consider fig. 2.1 for a start. The situation is such that the shown flat rectangle represents the plane, to which the movement of electrons in the material is restricted. In this plane, electrons of mass m_e can move with velocity $\mathbf{v} = (v_x, v_y, 0)^{\top}$. Perpendicular to the plane, an external magnetic field $\mathbf{B} = (0, 0, B)^{\top}$ is applied. The classical Hall effect states, that a current I_x flowing in the x-direction will produce a Hall voltage U_H associated to the Hall resistance $R_H = (ne)^{-1}$, where n is the surface density

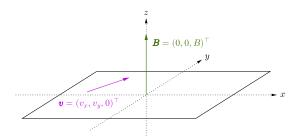


Figure 2.1: Setup of the classical Hall effect. B denotes an external magnetic field and v the velocity of electrons restricted to the x-y-plane.

of charge carriers and e is the elementary charge. The Hall voltage hence is independent of any geometrical or microscopic factors.

Let now a single electron represent the electronic flow restricted to the x-yplane in a flat material as shown in fig. 2.1. Such an electron in the material is subject to the Lorentz force

$$\mathbf{F}_L = q\mathbf{E} + q\mathbf{v} \times \mathbf{B}.\tag{2.17}$$

Using Newton's second law and q = -e, one can derive the equation of motion

$$m_e \frac{\mathrm{d} \boldsymbol{v}}{\mathrm{d} t} = -e \boldsymbol{E} - e \boldsymbol{v} \times \boldsymbol{B} - \tau^{-1} m_e \boldsymbol{v}, \qquad (2.18)$$

where a resistive term $\mathbf{F}_R = -\tau^{-1} m_e \mathbf{v}$ has been added. The resistive force counteracts the Lorentz acceleration and therefore has a negative sign; it is furthermore assumed to scale linearly with velocity \mathbf{v} . The parameter τ with units $[\tau] = \mathbf{s}$ can be interpreted as scattering time; hence the larger τ is, the less collisions will take place between charge carriers in the material and the less electrical resistance the material will have. Requiring, that the charge carriers in the material are in equilibrium and hence are non-accelerated,

$$e\mathbf{v} \times \mathbf{B} + \tau^{-1} m_e \mathbf{v} = -e\mathbf{E} \tag{2.19}$$

follows. Explicitly writing out this equation knowing $\mathbf{v} = (v_x, v_y, 0)^{\top}$ and $\mathbf{B} = (0, 0, B)^{\top}$, the two-dimensional situation

$$\frac{e\tau}{m_e} \begin{pmatrix} v_y B \\ -v_x B \end{pmatrix} + \begin{pmatrix} v_x \\ v_y \end{pmatrix} = -\frac{e\tau}{m_e} \begin{pmatrix} E_x \\ E_y \end{pmatrix}$$
 (2.20)

is obtained. Defining now $\omega_B = eB/m_e$, eq. (2.20) can be rewritten in matrix form as

$$\underbrace{\begin{pmatrix} 1 & \omega_B \tau \\ -\omega_B \tau & 1 \end{pmatrix}}_{\stackrel{=}{=} \mathbf{Q}} \mathbf{v} = -\frac{e\tau}{m_e} \mathbf{E}.$$
 (2.21)

Furthermore using the current density $J \doteq nqv = -nev$, the above equation can be further simplified to

$$\mathbf{Q}\mathbf{J} = \mathcal{C}_{DC}\mathbf{E}, \qquad \mathcal{C}_{DC} \doteq \frac{e^2n\tau}{m_e},$$
 (2.22)

where \mathcal{C}_{DC} is known as the conductivity in the absence of a magnetic field. For a matrix $\mathbf{A} \in \mathrm{Mat}(2,2,\mathbb{R})$, the inverse can be easily calculated as

$$\mathbf{A} = \begin{pmatrix} a & b \\ c & d \end{pmatrix}, \qquad \mathbf{A}^{-1} = \frac{1}{ad - bc} \begin{pmatrix} d & -b \\ -c & a \end{pmatrix}. \tag{2.23}$$

Hence, the inverse \mathbf{Q}^{-1} of \mathbf{Q} is given by

$$\frac{1}{1 - \omega_B^2 \tau^2} \begin{pmatrix} 1 & -\omega_B \tau \\ \omega_B \tau & 1 \end{pmatrix}. \tag{2.24}$$

Multiplying eq. (2.22) from the left with \mathbf{Q}^{-1} , one obtains

$$\mathbf{Q}^{-1}\mathbf{Q}\mathbf{J} = \mathcal{C}_{DC}\mathbf{Q}^{-1}\mathbf{E} \quad \Leftrightarrow \quad \mathbf{J} = \mathcal{C}\mathbf{E}, \tag{2.25}$$

which is known as Ohm's law. Hereby, the matrix \mathcal{C} was defined as

$$\mathbf{C} \doteq \frac{\mathcal{C}_{DC}}{1 - \omega_B^2 \tau^2} \begin{pmatrix} 1 & -\omega_B \tau \\ \omega_B \tau & 1 \end{pmatrix} \doteq \begin{pmatrix} \mathcal{C}_{xx} & \mathcal{C}_{xy} \\ -\mathcal{C}_{xy} & \mathcal{C}_{xx} \end{pmatrix}$$
(2.26)

and is generally known as the conductivity tensor/matrix. In the absence of a magnetic field therefore, \mathcal{C} reduces to $\mathcal{C} = \mathcal{C}_{DC}\mathbf{1}$. In the special case, where one has a current $I = J_x L$ only in x-direction distributed over a width L_y in y-direction and no external magnetic field, the well-known form U = RI results as

$$I = J_x L_y = \mathcal{C}_{DC} E_x L_y = \mathcal{C}_{DC} U = \frac{U}{R}, \tag{2.27}$$

where $U = E_x L_y$ is a voltage and $R = \mathcal{C}_{DC}^{-1}$ is a resistance, which is by definition the inverse of conductivity.

The so-called resistivity tensor/matrix \mathcal{R} is then defined as the inverse of the conductivity tensor, namely $\mathcal{R} \doteq \mathcal{C}^{-1}$ amounting to

$$\mathcal{R} = \frac{1}{\mathcal{C}_{DC}} \begin{pmatrix} 1 & \omega_B \tau \\ -\omega_B \tau & 1 \end{pmatrix} \doteq \begin{pmatrix} \mathcal{R}_{xx} & \mathcal{R}_{xy} \\ -\mathcal{R}_{xy} & \mathcal{R}_{xx} \end{pmatrix}. \tag{2.28}$$

It is now instructive to think about why the so-called Hall voltage arises from an initial situation as depicted in fig. 2.1. If one has a current $I_x = L_y J_x$ in the x-direction only, the electrons will be deflected towards the y-direction by the Lorentz force. In a finite material, this leads to an accumulation of electrons on the edge of the material, leading to the build up of an electric field E_y in the y-direction. The field E_y then counteracts the deflection due to the Lorentz force; hence in an equilibrium situation where the electrons have no net

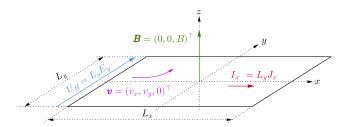


Figure 2.2: Visualization of the origin of the Hall voltage U_H in the classical Hall effect situation. The pictured current I_x and the Hall voltage U_H refer to an equilibrium condition as specified by eq. (2.19).

acceleration anymore, the associated voltage in the y-direction is the so-called Hall voltage $U_H = L_y E_y$; consider fig. 2.2 for a visualization of the situation.

The elements of the resitivity tensor \mathcal{R} have special properties, which will now be examined. The exact expressions are given by

$$\mathcal{R}_{xx} = \frac{1}{\mathcal{C}_{DC}} = \frac{m_e}{ne^2\tau}$$
 and $\mathcal{R}_{xy} = \frac{\omega_B\tau}{\mathcal{C}_{DC}} = \frac{\omega_B m_e}{e^2n} = \frac{B}{ne}$. (2.29)

Note, that the transverse resistivity \mathcal{R}_{xy} is independent of the scattering time τ and hence does only depend on the magnetic field strength B and the electron surface density n. The resistivity \mathcal{R}_{xx} however does depend on the scattering time τ ; fig. 2.3 shows the behaviour of the resistivities \mathcal{R}_{xx} and \mathcal{R}_{xy} in dependence of magnetic field strength B. Now consider the situation depicted in

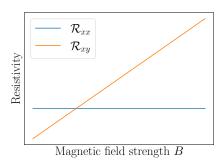


Figure 2.3: Longitudinal and transversal resistivities for the classical Hall effect.

fig. 2.2. The situation is such that one has a transverse voltage $U_y=U_H$ in the y-direction and a current I_x flowing in the x-direction. One can now calculate the transverse resistance by Ohm's law as

$$R_{xy} = \frac{U_y}{I_x} = \frac{U_H}{I_x} = \frac{L_y E_y}{L_y J_x} = \frac{E_y}{J_x}.$$
 (2.30)

By explicitly writing out the matrix equation $\mathcal{R}J = E$ one obtains the equation $E_y = -\mathcal{R}_{xy}J_x + \mathcal{R}_{xx}J_y$. In the case as shown in fig. 2.2, $J_y = 0$ and hence $E_y/J_x = -\mathcal{R}_{xy}$, which leads to the conclusion

$$R_{xy} = -\mathcal{R}_{xy} = -\frac{B}{ne}. (2.31)$$

The transverse resistance R_{xy} is the classical Hall resistance and is equal to the transverse resistivity \mathcal{R}_{xy} in magnitude. The special thing about this resistance is that it does not depend on any geometrical or microscopic factor of the material.

2.2.2 The Hamiltonian for the quantum Hall effect derivation

The starting point to derive the quantum Hall effect is the definition of the system under consideration. This will lead to the determination of the Hamilton operator \hat{H}_{QHE} of the system and thus allows the Schrödinger equation to be solved for this particular system.

In order to obtain the Hamilton operator for a quantum Hall effect system, one can first look for an expression of the Lagrangian \mathcal{L} for such a system. The claim made here is that the Lagrangian for a charged particle of mass m and charge q moving in an electromagnetic field given by

$$\boldsymbol{E}(\boldsymbol{r},t) = -\boldsymbol{\nabla}\phi(\boldsymbol{r},t) - \frac{\partial \boldsymbol{A}(\boldsymbol{r},t)}{\partial t}, \qquad \boldsymbol{B}(\boldsymbol{r},t) = \boldsymbol{\nabla} \times \boldsymbol{A}(\boldsymbol{r},t)$$
 (2.32)

is equal to

$$\mathcal{L}(\boldsymbol{r}, \dot{\boldsymbol{r}}, t) = \frac{m}{2}\dot{\boldsymbol{r}}^2 - q\phi(\boldsymbol{r}, t) + q\dot{\boldsymbol{r}} \cdot \boldsymbol{A}(\boldsymbol{r}, t). \tag{2.33}$$

In order to prove this, one needs to calculate the Euler-Lagrange equations

$$\frac{\mathrm{d}}{\mathrm{d}t} \left(\frac{\partial \mathcal{L}(\boldsymbol{r}, \dot{\boldsymbol{r}}, t)}{\partial \dot{r}_k} \right) = \frac{\partial \mathcal{L}(\boldsymbol{r}, \dot{\boldsymbol{r}}, t)}{\partial r_k}, \quad k \in \{1, 2, 3\}, \quad \boldsymbol{r} = (r_1, r_2, r_3)^{\top}$$
 (2.34)

in order to see, if the correct equation of motion results. In the following text, a short-hand notation

$$\frac{\mathrm{d}}{\mathrm{d}t} \left(\frac{\partial \mathcal{L}}{\partial \dot{r}} \right) = \frac{\partial \mathcal{L}}{\partial r} \tag{2.35}$$

for the Euler-Lagrange equations will be adopted. In the general case of a particle of mass m moving in an electromagnetic field without friction of any kind, the equation of motion is given by the Lorentz force and Newton's second law as

$$m\ddot{\mathbf{r}} = q\mathbf{E} + q\dot{\mathbf{r}} \times \mathbf{B}.\tag{2.36}$$

¹The expressions found in eq. (2.32) for the electromagnetic field are derived in classical electrodynamics. The potentials $\phi(\mathbf{r},t)$ and $\mathbf{A}(\mathbf{r},t)$ are not unique and lead to the same electric and magnetic fields under gauge transformations $\phi(\mathbf{r},t) \to \phi(\mathbf{r},t) - \frac{\partial}{\partial t} \Lambda(\mathbf{r},t)$ and $\mathbf{A}(\mathbf{r},t) \to \mathbf{A}(\mathbf{r},t) + \nabla \Lambda(\mathbf{r},t)$ for an arbitrary real function $\Lambda(\mathbf{r},t)$.

Calculating the Euler-Lagrange equations for the Lagrangian eq. (2.33) yields

$$\frac{\mathrm{d}}{\mathrm{d}t} \left(\frac{\partial \mathcal{L}}{\partial \dot{r}} \right) = \frac{\mathrm{d}}{\mathrm{d}t} \left(m\dot{r} + q\mathbf{A} \right) = m\ddot{r} + q(\dot{r} \cdot \nabla)\mathbf{A} + q\frac{\partial \mathbf{A}}{\partial t}$$
(2.37)

and

$$\frac{\partial \mathcal{L}}{\partial \mathbf{r}} = -q \nabla \phi + q \nabla (\mathbf{r} \cdot \mathbf{A}). \tag{2.38}$$

Combining these two expressions results in

$$m\ddot{\mathbf{r}} = q\left(-\nabla\phi - \frac{\partial \mathbf{A}}{\partial t}\right) + q\left[\nabla(\dot{\mathbf{r}}\cdot\mathbf{A}) - (\dot{\mathbf{r}}\cdot\nabla)\mathbf{A}\right].$$
 (2.39)

Now, using the identity $\dot{r} \times (\nabla \times A) = (\nabla \cdot A)\dot{r} - \dot{r}(\nabla \cdot A)$ from vector analysis and $\nabla (\dot{r} \cdot A) = A(\nabla \cdot \dot{r}) + \dot{r}(\nabla \cdot A) = (\nabla \cdot A)\dot{r}$, one obtains

$$\nabla(\dot{r}\cdot A) - (\dot{r}\cdot \nabla)A = (\nabla\cdot A)\dot{r} - \dot{r}(\nabla\cdot A) = \dot{r}\times(\nabla\times A), \tag{2.40}$$

where furthermore the relations $\nabla \cdot \dot{\boldsymbol{r}} = 0$ and $(\dot{\boldsymbol{r}} \cdot \nabla) \boldsymbol{A} = \dot{\boldsymbol{r}} (\nabla \cdot \boldsymbol{A})$ were used. Inserting now eq. (2.40) into eq. (2.39) finally yields

$$m\ddot{\mathbf{r}} = q\left(-\nabla\phi - \frac{\partial \mathbf{A}}{\partial t}\right) + q\dot{\mathbf{r}} \times (\nabla \times \mathbf{A}) = q\mathbf{E} + q\dot{\mathbf{r}} \times \mathbf{B},$$
 (2.41)

proving that eq. (2.33) is indeed the correct Lagrangian for the system under consideration.

Now, from the general Lagrangian eq. (2.33) for a charged particle in an electromagnetic field, one can derive the Lagrangian for an electron subject to only a magnetic field as

$$\mathcal{L}_{QHE}(\mathbf{r}, \dot{\mathbf{r}}, t) = \frac{m_e}{2} \dot{\mathbf{r}}^2 + e\phi(\mathbf{r}, t) - e\dot{\mathbf{r}} \cdot \mathbf{A}(\mathbf{r}, t), \qquad (2.42)$$

where $\boldsymbol{B}(\boldsymbol{r},t) = \boldsymbol{\nabla} \times \boldsymbol{A}(\boldsymbol{r},t)$ and $\boldsymbol{E}(\boldsymbol{r},t) = -\boldsymbol{\nabla}\phi(\boldsymbol{r},t) - \frac{\partial \boldsymbol{A}(\boldsymbol{r},t)}{\partial t}$, which for the following material will be called the quantum Hall effect Lagrangian. From classical mechanics it is known, that the Hamiltonian H of a system is a scalar and that it is given by

$$H(\mathbf{r}, \mathbf{p}, t) = \dot{\mathbf{r}}(\mathbf{r}, \mathbf{p}, t) \cdot \mathbf{p} - \mathcal{L}(\mathbf{r}, \dot{\mathbf{r}}(\mathbf{r}, \mathbf{p}, t), t), \tag{2.43}$$

where p is the so-called canonical momentum defined as

$$\mathbf{p} \doteq \frac{\partial \mathcal{L}(\mathbf{r}, \dot{\mathbf{r}}, t)}{\partial \dot{\mathbf{r}}}.$$
 (2.44)

Applying this to the above quantum Hall effect Lagrangian, one obtains the quantum Hall effect Hamiltonian H_{OHE} as

$$H_{OHE}(\mathbf{r}, \mathbf{p}, t) = \dot{\mathbf{r}}(\mathbf{r}, \mathbf{p}, t) \cdot \mathbf{p} - \mathcal{L}_{OHE}(\mathbf{r}, \dot{\mathbf{r}}(\mathbf{r}, \mathbf{p}, t), t). \tag{2.45}$$

First, one calculates the canonical momentum and solves for the velocity \dot{r} to get an expression $\dot{r}(r, p, t)$, namely

$$\mathbf{p} = \frac{\partial \mathcal{L}_{QHE}}{\partial \dot{\mathbf{r}}} = m_e \dot{\mathbf{r}} - e \mathbf{A} \quad \Leftrightarrow \quad \dot{\mathbf{r}}(\mathbf{r}, \mathbf{p}, t) = \frac{\mathbf{p} + e \mathbf{A}(\mathbf{r}, t)}{m_e}.$$
 (2.46)

Next, this expression is inserted to the Lagrangian $\mathcal{L}_{QHE}(\boldsymbol{r}, \dot{\boldsymbol{r}}, t)$ to obtain the transformation $\mathcal{L}_{QHE}(\boldsymbol{r}, \dot{\boldsymbol{r}}, t) \to \mathcal{L}_{QHE}(\boldsymbol{r}, \dot{\boldsymbol{r}}(\boldsymbol{r}, \boldsymbol{p}, t), t)$, which yields

$$\mathcal{L}_{QHE}(\boldsymbol{r}, \dot{\boldsymbol{r}}(\boldsymbol{r}, \boldsymbol{p}, t), t) = \frac{m_e}{2} \left(\frac{\boldsymbol{p} + e\boldsymbol{A}(\boldsymbol{r}, t)}{m_e} \right)^2 + e\phi(\boldsymbol{r}, t)$$

$$-e \left(\frac{\boldsymbol{p} + e\boldsymbol{A}(\boldsymbol{r}, t)}{m_e} \right) \cdot \boldsymbol{A}(\boldsymbol{r}, t).$$
(2.47)

Inserting eq. (2.46) and eq. (2.47) into eq. (2.45) yields

$$H_{QHE}(\mathbf{r}, \mathbf{p}, t) = \frac{(\mathbf{p} + e\mathbf{A}(\mathbf{r}, t))^2}{2m_e} - e\phi(\mathbf{r}, t)$$
(2.48)

after rearrangement of terms. This is the quantum Hall effect Hamiltonian associated to the quantum Hall effect Lagrangian.

2.2.3 Solving the quantum Hall effect Schrödinger equation

Case 1: Magnetic field nonzero, electric field zero

In order to derive an expression for the quantum Hall effect Schrödinger equation, a gauge for the vector potential \boldsymbol{A} defining the magnetic field $B\boldsymbol{e}_z \doteq \boldsymbol{B} = \boldsymbol{\nabla} \times \boldsymbol{A}$ has to be defined, where \boldsymbol{e}_z is the unit vector in z-direction and $B = |\boldsymbol{B}|$ is the absolute value of the magnetic field. The magnetic field \boldsymbol{B} takes this form due to the geometry of the quantum Hall effect; recall, that the Hall effect describes the movement of electrons restricted to a x-y-plane. Hence, the choice of the vector potential \boldsymbol{A} has to fulfill

$$\nabla \times \mathbf{A} = B\mathbf{e}_z. \tag{2.49}$$

The electric field on the other hand is assumed to be zero until further notice. The common choice for A is the so-called Landau gauge, defined by

$$\mathbf{A} = xB\mathbf{e}_y. \tag{2.50}$$

Manifestly, this gauge fulfills the above mentioned requirement, as the calculation

$$\nabla \times \mathbf{A} = \begin{pmatrix} \partial_x \\ \partial_y \\ \partial_z \end{pmatrix} \times \begin{pmatrix} 0 \\ xB \\ 0 \end{pmatrix} = \begin{pmatrix} \partial_z(xB) \\ 0 \\ \partial_x(xB) \end{pmatrix} = \begin{pmatrix} 0 \\ 0 \\ B \end{pmatrix} = B\mathbf{e}_z$$
 (2.51)

shows. Using this gauge, the quantum Hall Hamiltonian eq. (2.48) becomes

$$\begin{split} H_{QHE} &= \frac{(\boldsymbol{p} + e\boldsymbol{A})^2}{2m_e} = \frac{\boldsymbol{p} \cdot \boldsymbol{p} + 2exB\boldsymbol{p} \cdot \boldsymbol{e}_y + e^2x^2B^2\boldsymbol{e}_y \cdot \boldsymbol{e}_y}{2m_e} \\ &= \frac{1}{2m_e} \left(p_x^2 + p_y^2 + 2exBp_y + e^2x^2B^2 \right) \\ &= \frac{1}{2m_e} \left[p_x^2 + (p_y + exB)^2 \right], \end{split} \tag{2.52}$$

where the fact was used, that the electrons are restricted to move in the x-y plane, which is why the z-component of the momentum is zero.

Performing now the canonical substitutions $p_x \to \hat{p}_x = -i\hbar\partial_x$ and $p_y \to \hat{p}_y = -i\hbar\partial_y$, one obtains the transition $H_{QHE} \to \hat{H}_{QHE}$ of the Hamiltonian from classical mechanics to the Hamilton operator of quantum mechanics, namely

$$\hat{H}_{QHE} = \frac{1}{2m_a} \left[-\hbar^2 \partial_x^2 + (exB - i\hbar \partial_y)^2 \right]. \tag{2.53}$$

One can show that $[\hat{H}_{QHE}, \hat{p}_x] \neq 0$, but $[\hat{H}_{QHE}, \hat{p}_y] = 0$, which motivates the ansatz

$$\psi_k(x,y) = e^{iky} f_k(x) \tag{2.54}$$

for a wave function solving the time-independent Schrödinger equation eq. (2.15). Now, the effect of $-i\hbar\partial_y$ on $\psi_k(x,y)$ is given by

$$-i\hbar\partial_{u}\psi_{k}(x,y) = -i\hbar ike^{iky}f_{k}(x) = \hbar k\psi_{k}(x,y), \qquad (2.55)$$

which allows to rewrite the quantum Hall effect Hamilton operator as

$$\hat{H}_{QHE} = \frac{1}{2m_e} \left[-\hbar^2 \partial_x^2 + (exB + \hbar k)^2 \right]. \tag{2.56}$$

Using the expression $\omega_B = eB/m_e$ for the cyclotron frequency, this Hamilton operator can further be rewritten as

$$\hat{H}_{QHE} = \frac{1}{2m_e} \left[-\hbar^2 \partial_x^2 + (exB + \hbar k)^2 \right]$$

$$= -\frac{\hbar^2}{2m_e} \frac{\partial^2}{\partial x^2} + \frac{1}{2} m_e \left(\omega_B^2 x^2 + 2 \frac{\omega_B \hbar k}{m_e} x + \frac{\hbar^2 k^2}{m_e^2} \right)$$

$$= -\frac{\hbar^2}{2m_e} \frac{\partial^2}{\partial x^2} + \frac{1}{2} m_e \omega_B^2 \left(x^2 + 2 \frac{\hbar k}{\omega_B m_e} x + \frac{\hbar^2 k^2}{\omega_B^2 m_e^2} \right)$$

$$= -\frac{\hbar^2}{2m_e} \frac{\partial^2}{\partial x^2} + \frac{1}{2} m_e \omega_B^2 \left(x + k l_B^2 \right)^2,$$
(2.57)

where $l_B = \sqrt{\hbar/(\omega_B m_e)} = \sqrt{\hbar/(eB)}$ was defined as the so-called magnetic length. Comparing this Hamilton operator to that of the harmonic oscillator

$$\hat{H}_{HO} = -\frac{\hbar}{2m} \frac{\partial^2}{\partial x^2} + \frac{1}{2} m\omega^2 x^2 \tag{2.58}$$

for a particle of mass m oscillating in x-direction at a frequency of ω , one can see that the quantum Hall effect Hamilton operator is just that of a harmonic oscillator displaced from the origin by a distance kl_B^2 . Now, according to [Griffiths and Schroeter, 2018, pp.51-52], the energy eigenstates E_n and the wave functions $\psi_n(x)$ solving the time-independent Schrödinger equation $\hat{H}_{HO}\psi_n(x)=E_n\psi_n(x)$ of the harmonic oscillator are given by

$$E_n = \left(n + \frac{1}{2}\right)\hbar\omega, \quad n \in \{0, 1, 2, \dots\}$$
 (2.59)

and

$$\psi_n(x) = \left(\frac{m\omega}{\pi\hbar}\right)^{1/4} \frac{1}{\sqrt{2^n n!}} H_n(\xi) e^{-\xi^2/2}, \quad \xi \doteq \sqrt{\frac{m\omega}{\hbar}} x, \tag{2.60}$$

where $H_n(\xi)$ are the Hermite polynomials defined as

$$H_n(\xi) = (-1)^n e^{\xi^2} \left(\frac{\mathrm{d}}{\mathrm{d}\xi}\right)^n e^{-\xi^2}.$$
 (2.61)

Leveraging the quantum harmonic oscillator, solutions to the quantum Hall effect time-independent Schrödinger equation

$$\hat{H}_{QHE}\psi_{k,n}(x,y) = E_n\psi_{k,n}(x,y) \tag{2.62}$$

can be found by substitutions $m \to m_e$, $\omega \to \omega_B$ and $x \to x + kl_B^2$. The energy eigenstates for the quantum Hall effect are hence just those of the one-dimensional quantum harmonic oscillator, namely

$$E_n = \left(n + \frac{1}{2}\right)\hbar\omega_B, \quad n \in \mathbb{N}_0. \tag{2.63}$$

Furthermore, the quantum Hall effect eigenfunctions are given by

$$\psi_{k,n}(x,y) \propto e^{iky} H_n \left(\frac{x}{l_B} + kl_B\right) e^{-\frac{(x+kl_B^2)^2}{2l_B^2}},$$
 (2.64)

where the proportionality constant would be defined by the normalization condition

$$\iint_{\mathbb{R}^2} |\psi_{k,n}(x,y)|^2 \, \mathrm{d}x \, \mathrm{d}y \stackrel{!}{=} 1 \tag{2.65}$$

for all $n \in \mathbb{N}_0$ and $k \in \mathbb{R}$. One can note from eq. (2.63) and eq. (2.66) that in an infinite medium in the x-y-plane there are infinite eigenfunctions per eigenstate; hence the energy spectrum is degenerate. A finite degeneracy of eigenstates can hence only be calculated for a finite medium. The properly normalized wavefunction for a finite system of length L_y in the y-direction is given by

$$\psi_{k,n}(x,y) = \frac{1}{\sqrt{L_y l_B \sqrt{\pi} 2^n n!}} e^{iky} H_n \left(\frac{x}{l_B} + k l_B\right) e^{-\frac{(x+k l_B^2)^2}{2l_B^2}}.$$
 (2.66)

In addition to this it is worth mentioning, that the wave functions $\psi_{k,n}(x,y)$ are extended in the y-direction, but exponentially localized in the x-direction around $x_0 = -kl_B^2$.

Case 2: Magnetic field nonzero, electric field nonzero

Now, if the magnetic field is given by $Be_z = \nabla \times A$ with $A = xBe_y$ and the electric field is constant in the x-direction, namely $E = Ee_x = -\nabla \phi$ with $\phi = -Ex$, a similar procedure can be carried out as in the case with E = 0. The Hamilton function for this situation in the Landau gauge is hence accounted for by

$$H_{QHE} = \frac{1}{2m_e} \left[p_x^2 + (p_y + exB)^2 \right] + exE.$$
 (2.67)

Performing the canonical substitutions $p_x \to \hat{p}_x = -i\hbar \partial_x$ and $p_y \to \hat{p}_y = -i\hbar \partial_y$ leads to the Hamilton operator

$$\begin{split} \hat{H}_{QHE} &= \frac{1}{2m_e} \left[-\hbar^2 \partial_x^2 + (exB + \hbar k)^2 \right] + exE \\ &= -\frac{\hbar^2}{2m_e} \frac{\partial^2}{\partial x^2} + \frac{1}{2} m_e \omega_B^2 (x + k l_B^2)^2 + exE \\ &= -\frac{\hbar^2}{2m_e} \frac{\partial^2}{\partial x^2} + \frac{1}{2} m_e \omega_B^2 \left(\left[x + k l_B^2 + \frac{m_e E}{eB^2} \right]^2 - 2k l_B^2 \frac{m_e E}{eB^2} - \frac{m_e^2 E^2}{e^2 B^4} \right) \\ &= -\frac{\hbar^2}{2m_e} \frac{\partial^2}{\partial x^2} + \frac{1}{2} m_e \omega_B^2 \left(x + k l_B^2 + \frac{m_e E}{eB^2} \right)^2 - \frac{k \hbar E}{B} - \frac{m_e E^2}{2B^2}. \end{split}$$
(2.68)

The last two terms are just constants, hence the energy eigenstates can be read off from the quantum harmonic oscillator eigenstates as

$$E_{n,k} = \left(n + \frac{1}{2}\right)\hbar\omega_B - \frac{k\hbar E}{B} - \frac{m_e E^2}{2B^2};$$
 (2.69)

whereas the eigenfunctions are given by

$$\psi_{k,n}(x,y) \propto e^{iky} H_n \left(\frac{x}{l_B} + kl_B + \frac{m_e E}{eB^2 l_B}\right) e^{-\frac{\left(x + kl_B^2 + \frac{m_e E}{eB^2}\right)^2}{2l_B^2}}.$$
(2.70)

The properly normalized wave function can only be obtained for a finite material of length L_y in the y-direction as

$$\psi_{k,n}(x,y) = \frac{1}{\sqrt{L_y l_B \sqrt{\pi} \, 2^n \, n!}} e^{iky} H_n \left(\frac{x}{l_B} + k l_B + \frac{m_e E}{eB^2 l_B} \right) e^{-\frac{\left(x + k l_B^2 + \frac{m_e E}{eB^2} \right)^2}{2l_B^2}}. \tag{2.71}$$

by satisfying the requirement $\iint_{\mathbb{R}^2} |\psi_{k,n}(x,y)|^2 \,\mathrm{d}x\,\mathrm{d}y \stackrel{!}{=} 1.$

2.2.4 Deriving the quantum Hall resistance

In order do understand the integer quantum Hall effect, the degeneracy of energy eigenstates for values of k at the same quantum number n is key. Each level E_n is known as a Landau level, for which several states with different k-values exist. Each value of k per value of n can be thought of representing an electron;

thus the Landau levels can be understood of electron bands. Hence, in order to calculate a current flowing through some finite flat material of length L_x and width L_y in the x-y-plane, one has to know how many electron states there are. Thus the degeneracy of each energy eigenstate E_n in terms of k has to be known.

In order to calculate the amount of allowed values of k for a given energy state n, one integrates over k from the minimal allowed to the maximal allowed value of k, namely $k \in [k_{min}, k_{max}]$, and divides by the spacing Δ_k of k-states subsequently. Mathematically, the degeneracy g is calculated as

$$g = \frac{1}{\Delta_k} \int_{k_{min}}^{k_{max}} \mathrm{d}k. \tag{2.72}$$

Now, with respect to fig. 2.2, let the origin in the x-axis be to the right of the material as x=0, hence the left end of the material will have the coordinate $x=-L_x$. With respect to the y-axis, one can picture electrons in the system as free particles within an infinite square well, which according to [Griffiths and Schroeter, 2018, p.32] is known to lead to a spacing Δ_k of allowed k-values in the y-direction as $\Delta_k = 2\pi/L_y$.

Now, note that the eigenfunctions eq. (2.66) of a quantum Hall system are exponentially localized around $x_0 = -kl_B^2$. This means, that to a good approximation any wave function $\psi_{k,n}(x,y)$ will be non-negligible only for $x \in [-L_x,0]$. For lower values $x < -L_x$ wave functions become non-significant due to the exponential term $e^{-(x+kl_B^2)^2}$; also for x > 0. This leads to $k_{min} = 0$ and $k_{max} = L_x eB$. Using these parameters, the degeneracy can now be explicitly calculated as

$$g = \frac{L_y}{2\pi} \int_0^{L_x/l_B^2} dk = \frac{L_x L_y}{2\pi l_B^2} = \frac{L_x L_y}{2\pi \hbar} eB = \frac{L_x L_y B}{\Phi_0}, \tag{2.73}$$

with $\Phi_0 \doteq 2\pi\hbar/e$ the so-called quantum of flux. As one can see, the degeneracy of the energy eigenstates E_n scales with magnetic field strength B.

Now the momentum of an electron moving in a quantum Hall system is given by

$$m_e \dot{\mathbf{r}} = \mathbf{p} + e\mathbf{A},\tag{2.74}$$

where p is the canonical momentum as defined by eq. (2.44). As specified already in the derivation of the classical Hall effect, one can define a current density Jas $J = nq\dot{r} = -ner$, where n is the surface density of charge carriers of charge q and \dot{r} is their bulk velocity. Going from a classical to a quantum mechanical system, one has to perform the substitution $p \to \hat{p} = -i\hbar\nabla$ for every occurence of p in the classical expressions. Furthermore, the quantum mechanical charge carrier density is obtained by dividing the number of filled electronic states \mathcal{N} within the system by the surface area $A = L_x L_y$ of the quantum Hall system. The definition of the current density J hence becomes an operator

$$\hat{\boldsymbol{J}} = -\frac{e}{m_e L_x L_y} \left(\hat{\boldsymbol{p}} + e \boldsymbol{A} \right) = -\frac{e}{m_e L_x L_y} \left(-i\hbar \boldsymbol{\nabla} + e \boldsymbol{A} \right)$$
 (2.75)

giving the expected current density for each state $\psi_{k,n}(x,y)$. In order to obtain the total expected current density J_{QHE} , one needs to sum the expectation values $\langle \hat{J} \rangle_{k,n} \doteq \langle \psi_{k,n} | \hat{J} | \psi_{k,n} \rangle$ for each possible state $\psi_{k,n}(x,y)$. Hereby, the expression $\langle \psi | \hat{Q} | \psi \rangle$ for a D-dimensional quantum mechanical operator and possible wave functions $\psi(x)$ for $x \in \mathbb{R}^D$ and $D \in \mathbb{N}$ is defined as

$$\langle \psi | \hat{\boldsymbol{Q}} | \psi \rangle \doteq \int_{\mathbb{R}^D} \psi^*(\boldsymbol{x}) \hat{\boldsymbol{Q}} \psi(\boldsymbol{x}) d^D x,$$
 (2.76)

where z^* denotes the complex conjugate of a complex number z=a+ib, so $z^*=a-ib$ for $a,b\in\mathbb{R}$. The quantum Hall current density J_{QHE} is thus given by the expression

$$\mathbf{J}_{QHE} = \sum_{n=1}^{n_H} \sum_{k} \langle \hat{\mathbf{J}}_{k,n} \rangle
= -\frac{e}{m_e L_x L_y} \sum_{n=1}^{n_H} \sum_{k} \langle \psi_{k,n} | -i\hbar \nabla + e\mathbf{A} | \psi_{k,n} \rangle,$$
(2.77)

where $\psi_{k,n}(x,y)$ are the states eq. (2.71) of a general quantum Hall system with nonzero magnetic and electric fields. This expression can be further simplified by again leveraging the Landau gauge given by

$$\mathbf{A} = xB\mathbf{e}_{y}, \qquad \phi = -Ex. \tag{2.78}$$

Using this gauge and writing $J_{QHE} = (J_{QHE,x}, J_{QHE,y})^{\top}$ out in components, one has

$$J_{QHE,x} = -\frac{e}{m_e L_x L_y} \sum_{n=1}^{n_H} \sum_{k} \langle \psi_{k,n} | -i\hbar \partial_x | \psi_{k,n} \rangle \quad \text{and}$$

$$J_{QHE,y} = -\frac{e}{m_e L_x L_y} \sum_{n=1}^{n_H} \sum_{k} \langle \psi_{k,n} | -i\hbar \partial_y + eBx | \psi_{k,n} \rangle.$$
(2.79)

The first component amounts to zero, because $\psi_{k,n}$ are wave functions of a quantum harmonic oscillator. These wave functions behave in such a way, that the product $\psi_{k,n}^{\star} \partial_x \psi_{k,n}$ is an odd function of x. For any odd function f(x), the integral over \mathbb{R} will be zero, namely

$$\int_{-\infty}^{\infty} f(x) dx = 0, \quad \text{if } f(x) \text{ is odd.}$$
 (2.80)

Hence, one has $J_{QHE,x}=0$. The expectation values of the second component

 $J_{QHE,y}$ can be simplified by first calculating

$$\begin{split} \langle \psi_{k,n}| - i\hbar \partial_y + eBx |\psi_{k,n}\rangle &= \langle \psi_{k,n}| - i\hbar \partial_y |\psi_{k,n}\rangle + eB\langle \psi_{k,n}|x|\psi_{k,n}\rangle \\ &= \langle \psi_{k,n}|\hbar k |\psi_{k,n}\rangle + eB\langle \psi_{k,n}|x|\psi_{k,n}\rangle \\ &= \hbar k \underbrace{\langle \psi_{k,n}|\psi_{k,n}\rangle}_{=1} + eB\left(-kl_B^2 - \frac{m_eE}{eB^2}\right) \\ &= \hbar k - \hbar k - \frac{m_eE}{B} = -\frac{m_eE}{B}. \end{split} \tag{2.81}$$

The expectation value $\langle \psi_{k,n} | x | \psi_{k,n} \rangle$ is $-kl_B^2 - m_e E/(eB^2)$ because the wave functions $\psi_{k,n}$ given by eq. (2.71) are dominated by an exponential factor as

$$\psi_{k,n}(x,y) \propto e^{iky} e^{-\frac{\left(x+kl_B^2 + \frac{m_e E}{eB^2}\right)^2}{2l_B^2}}$$
 (2.82)

Thus, one has

$$J_{QHE,y} = -\frac{e}{m_e L_x L_y} \sum_{\substack{n=1 \ e \ n_H \ e \ L_x L_y}}^{n_H} \sum_{\substack{n=1 \ e \ n_H \ e \ L_x L_y}} \left(-\frac{m_e E}{B} \right) = \frac{e}{L_x L_y} n_H g$$

$$= \frac{e n_H}{L_x L_y} \frac{e L_x L_y B}{2\pi \hbar} = \frac{n_H e^2 E}{2\pi \hbar} = \frac{n_H e^2 E}{h},$$
(2.83)

where the expression eq. (2.73) for the degeneracy g was used. Explicitly writing out Ohm's law $\mathcal{R} J_{QHE} = E$ for the given electric field $E = (E, 0)^{\top}$ yields the matrix equation

$$\begin{pmatrix} \mathcal{R}_{xx} & \mathcal{R}_{xy} \\ -\mathcal{R}_{xy} & \mathcal{R}_{xx} \end{pmatrix} \begin{pmatrix} 0 \\ \frac{n_H e^2}{h} \end{pmatrix} = \begin{pmatrix} 1 \\ 0 \end{pmatrix}. \tag{2.84}$$

From this equation, the resistivities $\mathcal{R}_{xx} = 0$ and $\mathcal{R}_{xy} = h/(n_H e^2)$ can be read off. In the case of the transverse resistivity \mathcal{R}_{xy} , it was seen in the derivation of the classical Hall effect that it is equal to the transverse resistance R_{xy} . This transverse resistance is the resistance orthogonal to the current flow direction in the material. This resistivity is also known as the quantum Hall resistance R_H , hence the final equation

$$R_H = R_{xy} = \mathcal{R}_{xy} = \frac{h}{n_H e^2}, \quad n_H \in \mathbb{N}$$
 (2.85)

is obtained.

2.3 The Josephson effect

The Josephson voltage U_J across a Josephson junction can be used for voltage measurements; according to [Kajastie et al., 2009] it is given by the equation

$$U_J = \frac{h}{2e} n_J f_J, \quad n_J \in \mathbb{N}, \tag{2.86}$$

where h is the Planck constant, e is the elementary charge and f_J is the frequency of the microwave radiation used to irradiate the Josephson junction with.

This section is concerned with a heuristic derivation of the above mentioned relation eq. (2.86) from first principles of quantum mechanics and superconductivity.

2.3.1 A two-state quantum system

As a first step to a heuristic derivation of the Josephson effect, two-state quantum systems need to be studied. A two-state quantum system is by definition two-dimensional, hence two basis vectors are sufficient to describe any vector occurring in this quantum system.

Let $|1\rangle$ and $|2\rangle$ denote the two basis vectors of the quantum system; thus, any state vector in the quantum system can be represented by means of

$$\psi(t) = \psi_1(t)|1\rangle + \psi_2(t)|2\rangle. \tag{2.87}$$

Hereby, $\psi_1(t)$ and $\psi_2(t)$ are time-dependent complex coefficients. An operator describing the energy of the system, namely the Hamilton operator \mathbf{H} , needs to be a 2 by 2 hermitian matrix. It must be a 2 by 2 matrix, because the Hilbert space of the system is two-dimensional. Furthermore, it must be hermitian because the expectation value of the Hamilton operator is the energy of the system and thus a physical variable. In quantum mechanics, the expectation value of an operator $\hat{\mathbf{Q}}$ representing a physical variable of a system is required to be real, which implies that the operator $\hat{\mathbf{Q}}$ must be hermitian. Operators $\hat{\mathbf{Q}}$ are said to be hermitian, if they are equal to their hermitian conjugate, which is defined as

$$\hat{\mathbf{Q}}^{\dagger} = \hat{\mathbf{Q}}^{\star \top}. \tag{2.88}$$

Hence, one can write down the Hamilton operator $\dot{\mathbf{H}}$ of a two-state system as

$$\hat{\mathbf{H}} = \begin{pmatrix} \hat{H}_{11} & \hat{H}_{12} \\ \hat{H}_{21} & \hat{H}_{22} \end{pmatrix}. \tag{2.89}$$

Because of the required hermiticity, \hat{H}_{11} , $\hat{H}_{22} \in \mathbb{R}$ and $\hat{H}_{21} = \hat{H}_{12}^{\star}$ hold. Hereby \hat{H}_{11} and \hat{H}_{22} represent the energy of states $|1\rangle$ and $|2\rangle$, whereas \hat{H}_{12} and \hat{H}_{21} give information associated to the energy required to change from state $|1\rangle$ to $|2\rangle$ and vice versa. Now, the Schrödinger equation for the case at hand writes as

$$i\hbar \frac{\partial \psi(t)}{\partial t} = \hat{\mathbf{H}}\psi(t)$$
 (2.90)

and hence is only dependent on time t in that case. Using the above definitions of the wave functions and the Hamilton operator, one arrives at

$$i\hbar \frac{\partial}{\partial t} \begin{pmatrix} \psi_1(t) \\ \psi_2(t) \end{pmatrix} = \begin{pmatrix} \hat{H}_{11} & \hat{H}_{12} \\ \hat{H}_{21} & \hat{H}_{22} \end{pmatrix} \begin{pmatrix} \psi_1(t) \\ \psi_2(t) \end{pmatrix}, \tag{2.91}$$

where $|1\rangle = (1,0)^{\top}$ and $|2\rangle = (0,1)^{\top}$ were used to "simulate" the orthogonality of $|1\rangle$ and $|2\rangle$.

2.3.2 Cooper pairs

Cooper pairs are the charge carriers of superconductivity. At low temperatures, electron-lattice interactions lead to an attractive force between electrons leading them to pair up to Cooper pairs, which are essentially two electrons bound together by means of electron-phonon interactions. Since electrons are fermions, a Cooper pair is a so-called composite boson; a boson, because its spin is either 0 or 1 and composite, because such bosons are comprised of two fermions. Hence, at low temperatures, all electrons in a material condense to Cooper pairs, which are all in the same quantum state in the extreme case. This effect is responsible for superconductivity and is also the reason, why all charge carriers in a superconducting material can be described by just one wave function.

2.3.3 The Josephson two-state quantum system

Consider now the two-state Josephson junction system depicted in fig. 2.4. With

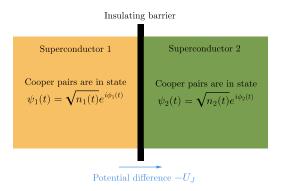


Figure 2.4: Visalization of a Josephson junction.

respect to eq. (2.91), the Schrödinger equation for the depicted quantum system is given by

$$i\hbar \frac{\partial}{\partial t} \begin{pmatrix} \sqrt{n_1(t)} e^{i\phi_1(t)} \\ \sqrt{n_2(t)} e^{i\phi_2(t)} \end{pmatrix} = \begin{pmatrix} \hat{H}_{11} & \hat{H}_{12} \\ \hat{H}_{21} & \hat{H}_{22} \end{pmatrix} \begin{pmatrix} \sqrt{n_1(t)} e^{i\phi_1(t)} \\ \sqrt{n_2(t)} e^{i\phi_2(t)} \end{pmatrix}, \tag{2.92}$$

where the components of the Hamilton operator are yet to be determined. Now the components \hat{H}_{11} and \hat{H}_{22} are given by just the energy associated to states ψ_1 and ψ_2 . Assuming that the Cooper pairs do not have any kinetic energy, the energy of these two states is solely given by the potential energy. The potential energy W_{pot} of a particle of charge q_s in an electric field $\mathbf{E} = -\nabla \varphi$ subject to

the potential difference $U_{diff} = \varphi(\mathbf{x}_1) - \varphi(\mathbf{x}_2)$ is given by

$$W_{pot} = \int_{\boldsymbol{x}_1}^{\boldsymbol{x}_2} \boldsymbol{F} \cdot d\boldsymbol{x} = q_s \int_{\boldsymbol{x}_1}^{\boldsymbol{x}_2} \boldsymbol{E} \cdot d\boldsymbol{x} = -q_s \int_{\boldsymbol{x}_1}^{\boldsymbol{x}_2} \boldsymbol{\nabla} \varphi \cdot d\boldsymbol{x} = qU_{diff}, \quad (2.93)$$

where φ is the electric potential. In the system at hand, the potential difference between both superconductors is U_J , whereas one can define zero potential at $U_J/2$. This means, that the Cooper pairs in superconductor 1 in state ψ_1 have potential energy $\hat{H}_{11} = -q_s U_J/2$, whereas the Cooper pairs in superconductor 2 in state ψ_2 have energy $\hat{H}_{22} = q_s U_J/2$. Furthermore, the energy associated to a change $\psi_1 \leftrightarrow \psi_2$ is denoted by K, so one has $\hat{H}_{12} = \hat{H}_{21} = K$. Hence, the Schrödinger equation for the system with $q_s = -2e$ is now

$$i\hbar \frac{\partial}{\partial t} \begin{pmatrix} \sqrt{n_1(t)} e^{i\phi_1(t)} \\ \sqrt{n_2(t)} e^{i\phi_2(t)} \end{pmatrix} = \begin{pmatrix} -\frac{q_s U_J}{2} & K \\ K & \frac{q_s U_J}{2} \end{pmatrix} \begin{pmatrix} \sqrt{n_1(t)} e^{i\phi_1(t)} \\ \sqrt{n_2(t)} e^{i\phi_2(t)} \end{pmatrix}$$

$$= \begin{pmatrix} e U_J & K \\ K & -e U_J \end{pmatrix} \begin{pmatrix} \sqrt{n_1(t)} e^{i\phi_1(t)} \\ \sqrt{n_2(t)} e^{i\phi_2(t)} \end{pmatrix}. \tag{2.94}$$

The Josephson effect

Chapter 3

Superconductivity

Superconductivity is a peculiar state of matter, in which an electrical current through the material experiences no resistance. Superconducting materials are used in many technological and science applications, among which also the watt and joule balances take their place. The latter applications make use of so-called Josephson junctions, which essentially are voltage standards connecting a measured voltage to units of the Planck constant h. It is therefore integral to understanding the watt and joule balance methods in detail to consider some main topics of superconductivity.

3.1 Expulsive property of superconductors

3.1.1 Expulsion property

A superconductor is a material, whose resistivity drops to zero below a certain cricical temperature T_c . If a material is in superconducting state, its charge carriers - namely the electrons - are in a so-called Cooper pair quantum state, which experience no resistance along their way through the material. The mechanism leading to the formation of Cooper pairs is very complex and in most cases can only be understood phenomenologically.

A superconductor may phenomenologically be characterized by means of two postulates, which need to be fullfilled for a certain material to be called a superconductor:

- 1. The material must be an ideal conductor, meaning that the considered system's resistivity tensor \mathcal{R} is zero, i.e. $\mathcal{R} = 0$.
- 2. The material must be an ideal diamagnet, meaning that $\mathbf{B} = \mu_0(\mathbf{H} + \mathbf{M}) = 0$ holds for the material.

The second condition effectly means an expulsion of any magnetic field from a superconductor. This expulsion can be understood qualitatively by means of Maxwell's third equation

$$\nabla \times \boldsymbol{E} = -\frac{\partial \boldsymbol{B}}{\partial t} \tag{3.1}$$

and Ohm's law $\mathcal{R}J = E$, where \mathcal{R} is the resistivity tensor and J is the current density. Now, if the above first condition is met, E = 0 must hold since the resistivity tensor \mathcal{R} vanishes. Hence,

$$\frac{\partial \mathbf{B}}{\partial t} = 0 \quad \Rightarrow \quad \mathbf{B}(t) = \text{const.},$$
 (3.2)

which in words means, that the magnetic field within an ideal conductor (zero resistivity) is constant. Therefore, the magnetic field remains trapped in a conductor, if it is cooled down such that $T < T_c$. In a superconductor however, the magnetic field drops to zero as soon as $T < T_c$.

3.1.2 Formation of a supercurrent

Consider fig. 3.1. This figure visualizes the formation of a supercurrent, which is confined to the surface of materials. The supercurrent forms as a response to the external magnetic field $\mathbf{B} = \mathbf{B}_{ext}$. Identifying the purple path as integration path ∂S in the fourth microscopic Maxwell equation, one obtains

$$\oint_{\partial S} \mathbf{B} \cdot d\mathbf{l} = |\mathbf{B}_{ext}|l = B_{ext}l. \tag{3.3}$$

Given a stationary situation, the electric field E(t) is constant with respect

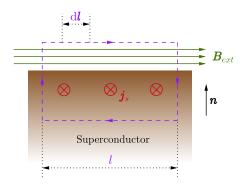


Figure 3.1: Visualization of supercurrent formation. Figure inspired by [Tsirlin, 2024].

to time t, hence $\mathbf{E}(t) = \text{const.}$ and thus $\partial \mathbf{E}/\partial t = 0$. The fourth microscopic Maxwell equation for the situation at hand is thus given by

$$\oint_{\partial S} \boldsymbol{B} \cdot d\boldsymbol{l} = B_{ext} l = \mu_0 \int_{S} \boldsymbol{j} \cdot d\boldsymbol{S}, \tag{3.4}$$

where S is the surface enclosed by the purple integration path ∂S as seen in fig. 3.1. Now identifying $j = j_s$ as the supercurrent, one can see that the

integration path can be chosen to lie arbitrarily close to the surface of the material; hence the supercurrent j_s needs to be confined to the surface of the material, as $B_{ext}l$ is a constant quantity.

3.2 The Meissner effect

The Meissner effect is the property of superconductors to have a magnetic susceptibility of -1. Given some material, the magnetic field \mathbf{B} is characterized by the equation $\mathbf{B} = \mu_0(\mathbf{H} + \mathbf{M})$, where \mathbf{H} is the magnetic field strength in the presence of matter and \mathbf{M} is the magnetization of the material. Now, the first postulate of superconductivity demands $\mathbf{B} = 0$, from which $\mathbf{M} = -\mathbf{H}$ immediately follows. The magnetic susceptibility defined as

$$\chi \doteq \frac{1}{\dim(\mathbf{M})} \nabla_{\mathbf{H}} \mathbf{M} = \frac{1}{\dim(\mathbf{M})} \begin{pmatrix} \partial_{H_x} \\ \partial_{H_y} \\ \partial_{H_z} \end{pmatrix} \mathbf{M}$$
(3.5)

now leads to the conclusion $\chi = -1$ for a superconductor. The Meissner effect only occurs, if the temperature T of the material is lower than the so-called critical temperature T_c , namely $T < T_c$.

3.3 London theory

3.3.1 The London equations

The so-called London equations are phenomenological equations for the description of materials in superconducting state. The underlying assumptions are that $\rho = 0$ and $\mathbf{B} = 0$ hold, aswell as the macroscopic Maxwell equations.

Let the mass and charge of charge carriers in superconducting state be denoted by m_s and q_s . From the Lorentz force equation, one obtains the equation of motion for such a charge carrier as

$$m_s \frac{\mathrm{d}\boldsymbol{v}}{\mathrm{d}t} = q_s \boldsymbol{E},\tag{3.6}$$

since B=0. From the theory of superconductivity it is known, that the charge carriers are so-called Cooper pairs, which are a compound of two electrons; thus $m_s=2m_e$ and $q_s=-2e$. Let furthermore $n_{e,s}$ be the so-called superfluid density, which is defined as the density of electrons in a superconducting state. The density of charge carriers n_s is a superconducting state is thus given by $n_s=n_{e,s}/2$. Furthermore, one can define the supercurrent j_s as the product of bulk velocity of charge carriers with the charge q_s and the density n_s of charge carriers, thus

$$\mathbf{j}_s = n_s q_s \mathbf{v} = -n_{e,s} e \mathbf{v}. \tag{3.7}$$

Inserting this expression into the above equation of motion, the first London equation is obtained:

$$\frac{\mathrm{d}\boldsymbol{j}_s}{\mathrm{d}t} = \frac{e^2 n_{e,s}}{m_e} \boldsymbol{E}.\tag{3.8}$$

In normal materials, E=0 means that there cannot be any current. In superconducting materials however, E=0 only means $j_s=$ const., as one can see from the first London equation. Taking the curl of the first London equation, applying the third Maxwell equation and requiring $\partial j_s/\partial t = \mathrm{d}j_s/\mathrm{d}t$, one obtains the second London equation as

$$\nabla \times \boldsymbol{j}_s = -\frac{e^2 n_{e,s}}{m_e} \boldsymbol{B}. \tag{3.9}$$

Experimentally, it is seen that near only near the surface of superconductor does the field \boldsymbol{B} become nonzero, which according to the second London equation means that the supercurrent \boldsymbol{j}_s does only flow in the surface regions of the material. By means of using a scalar and vector potentials ϕ and \boldsymbol{A} and writing $\boldsymbol{B} = \boldsymbol{\nabla} \times \boldsymbol{A}$ and $\boldsymbol{E} = -\boldsymbol{\nabla}\phi - \frac{\partial \boldsymbol{A}}{\partial t}$ one can combine both London equations to one equation

$$\mathbf{j}_s = -\frac{e^2 n_{e,s}}{m_e} \mathbf{A}. \tag{3.10}$$

Since ϕ and \boldsymbol{A} can be gauged and the London equations are not gauge invariant, one needs to chose a gauge that matches the requirements of the London equations. The first London equation requires that $\nabla \phi = 0$ to be fulfilled. Secondly, the second London equation demands $\nabla \cdot \boldsymbol{A} = 0$, since the continuity equation $\nabla \cdot \boldsymbol{j} = \partial_t \rho = 0$ requires $\nabla \cdot \boldsymbol{j} = 0$ whenever one has a constant charge density with respect to time in a material. In a superconducting material described by the London equations, such a constant charge density is given.

3.3.2 The penetration depth

The so-called penetration depth as derived from London theory is a measure on how deep a magnetic field can penetrate a superconductor. As postulated, $\boldsymbol{B}=0$ is required within a superconductor; this is however not exactly true, as one can show experimentally. The magnetic field vanishes for most of the superconductor, but is nonzero close to the surface. The penetration depth gives an idea on how thick this surface layer of magnetic field is.

Assuming a stationary situation and that the magnetization is zero, i.e. M = 0, the fourth Maxwell equation implies

$$\nabla \times \boldsymbol{B} = \mu_0 \boldsymbol{j}_s. \tag{3.11}$$

Using the vector analysis identity

$$\nabla \times (\nabla \times B) = \nabla (\nabla \cdot B) - \nabla^2 B, \tag{3.12}$$

one obtains

$$\nabla \times (\nabla \times B) = \mu_0 \nabla \times j_s = -\nabla^2 B. \tag{3.13}$$

Inserting the second London equation into the above equation, the differential equation

$$\nabla^2 \boldsymbol{B} = \frac{\mu_0 e^2 n_{e,s}}{m_e} \boldsymbol{B} \tag{3.14}$$

results. The inverse of the prefactor on the right hand side has units of length squared, as

$$\[\frac{\mu_0 e^2 n_{e,s}}{m_e}\] = \frac{\text{kgmC}^2}{\text{s}^2 \text{A}^2 \text{m}^3 \text{kg}} = \frac{\text{C}^2 \text{s}^2}{\text{s}^2 \text{C}^2 \text{m}^2} = \text{m}^{-2}$$
(3.15)

shows, where $[\mu_0] = NA^{-2}$. Hence, one defines the so-called London penetration depth λ_L as

$$\lambda_L \doteq \sqrt{\frac{m_e}{\mu_0 e^2 n_{e,s}}}. (3.16)$$

A similar equation can be derived for the supercurrent density j_s by means of taking the rotation of the second London equation and employing the above mentioned vector analysis identity eq. (3.12). A stationary situation means that the continuity equation

$$\nabla \cdot \mathbf{j}_s + \frac{\partial \rho}{\partial t} = 0 \tag{3.17}$$

yields $\nabla \cdot \boldsymbol{j}_s$, since $\partial_t \rho = 0$. Furthermore using again $\nabla \times \boldsymbol{B} = \mu_0 \boldsymbol{j}_s$ following from the fourth Maxwell equation in a stationary situation one obtains


$$\nabla^2 \boldsymbol{j}_s = \frac{\mu_0 e^2 n_{e,s}}{m_e} \boldsymbol{j}_s. \tag{3.18}$$

Using the penetration depth λ_L , both the equations for the supercurrent density and the magnetic field can be written as

$$\nabla^2 \mathbf{B} = \frac{1}{\lambda_L^2} \mathbf{B}, \qquad \nabla^2 \mathbf{j}_s = \frac{1}{\lambda_L^2} \mathbf{j}_s. \tag{3.19}$$

Surface of a superconductor

In order to investigate the surface of a superconductor, consider fig. 3.2a. The

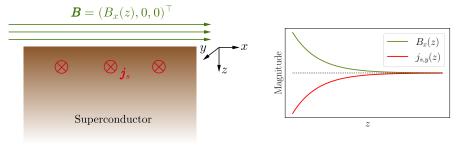

(a) Surface of a superconductor.

(b) Plot of the magnetic field and supercurrent for the situation at hand.

Figure 3.2: Visualization of magnetic field and supercurrent formation at the boundary of a superconductor.

magnetic field in this case is given by $\mathbf{B} = (B_x(z), 0, 0)^{\top}$, where one requires the boundary conditions $B_x(z=\infty) = 0$ and $B_x(z=0) = B_0$ to hold in accordance

with the two postulates of superconductivity. The governing equation for the magnetic field simplifies as

$$\nabla^2 \mathbf{B} = \frac{1}{\lambda_L^2} \mathbf{B} \quad \Rightarrow \quad \frac{\mathrm{d}^2 B_x(z)}{\mathrm{d}z^2} = \frac{1}{\lambda_L^2} B_x(z). \tag{3.20}$$

Using $B_x(z)=B_0e^{az}$ as ansatz one obtains the general solution $B_x(z)=B_0(e^{z/\lambda_L}+e^{-z/\lambda_L})$, which simplifies to

$$B_x(z) = B_0 e^{-z/\lambda_L}, \quad \mathbf{B} = \begin{pmatrix} B_0 e^{-z/\lambda_L} \\ 0 \\ 0 \end{pmatrix}$$
 (3.21)

after implementation of the boundary conditions. The supercurrent is obtained by means of $j_s = \mu_0^{-1} \nabla \times \boldsymbol{B}$, thus obtaining

$$j_{s,y}(x) = -j_{s,0}e^{-z/\lambda_L}, \quad \mathbf{j}_s = \begin{pmatrix} 0 \\ -j_{s,0}e^{-z/\lambda_L} \\ 0 \end{pmatrix},$$
 (3.22)

where $j_{s,0} \doteq B_0/(\mu_0 \lambda_L)$ was defined as the supercurrent at z=0. Thus one can conclude, that both the magnetic field aswell as the supercurrent are directed as seen in fig. 3.2a and drop exponentially with depth z into the superconductor, whereby λ_L is the characteristic distance for which the magnetic field and the supercurrent drop by 1/e. The behaviour of the supercurrent and the magnetic field is shown in the plot fig. 3.2b.

Chapter 4

Kibble balance

4.1 Introduction

The so-called Kibble balance (or watt balance) relates the kilogram to Planck constant h. As of 2019, the value for the Planck constant is fixed and hence used to define the kilogram based on various Kibble and joule balance experiments around the world. The experiment mainly compares electrical with mechanical power virtually; by means of quantum mechanics, the electrical power furthermore can be linked to the Planck constant h via the quantum Hall and the Josephson effects.

4.2 General principle


The measurement principle of the Kibble balance relies on a virtual comparison between mechanical and electrical power. This comparison is coined by the term "virtual", because the comparison occurs not simultaneously, but at subsequent times.

One of the most crucial parts of the Kibble balance is a coil immersed in a radial magnetic field $\boldsymbol{B}(\boldsymbol{r},t)$. This coil is attached to a mechanism guiding the coil on an exactly vertical movement. Furthermore, a platform supporting a test weight is attached to the coil.

There are two main modes of the experiment; the static and dynamic modes as indicated by fig. 4.1a and fig. 4.1b, aswell as by fig. 4.2a and fig. 4.2b.


In the static mode, a weight is placed on the mass platform supported by the coil attached to the guiding system. This weight exerts a downward force \mathbf{F}_g on the coil by means of gravity. A tailored current I(t) is then introduced to the coil such that by eq. (1.20) it generates an upward force \mathbf{F}_{el} exactly balancing the gravitational force. Using eq. (1.20), one can write down an expression for the upward force \mathbf{F}_{el} as

$$F_{el}(\mathbf{r},t) = -I(t) \oint_{\partial \Sigma(t)} \mathbf{B}(\mathbf{r},t) \times d\mathbf{l} = -F_g(\mathbf{r},t) = -m\mathbf{g}(\mathbf{r},t),$$
 (4.1)

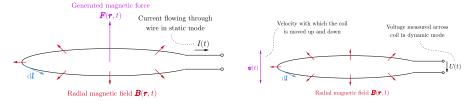

(a) Coil illustration for the static mode of the (b) Coil illustration for the dynamic mode of the experiment.

Figure 4.1: Coil illustrations of the Kibble balance principle.

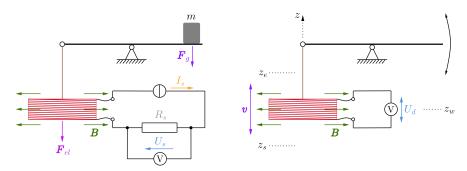

(a) Overview illustration for the static mode of the experiment.
(b) Overview illustration for the dynamic mode of the experiment.

Figure 4.2: Overview illustrations of the Kibble balance principle. The red part in both figures depicts the coil, which is placed in a radial magnetic field \boldsymbol{B} , which usually depends on place \boldsymbol{r} and time t, hence $\boldsymbol{B}(\boldsymbol{r},t)$ due to temperature fluctuations and spatial inhomogenities.

where $\partial \Sigma(t)$ is the wire of the coil and dl a length element along the coil's wire as depicted in fig. 4.1a. Hereby, g(r,t) denotes the gravitational acceleration a position r and time t.

Now, in the dynamic phase the coil supporting the mass platform with the test weight placed on it is deliberately moved by a linear actuator with velocity v(t) up and down. Invoking eq. (1.18), this leads to the induction of a voltage across the coil. Multiplying the above equation for F_{el} with v from the right, one obtains

$$F_{el}(\mathbf{r},t) \cdot \mathbf{v}(t) = -I(t) \oint_{\partial \Sigma(t)} \left[\mathbf{B}(\mathbf{r},t) \times d\mathbf{l} \right] \cdot \mathbf{v}(t)$$

$$= -I(t) \oint_{\partial \Sigma(t)} \left[\mathbf{v}(t) \times \mathbf{B}(\mathbf{r},t) \right] \cdot d\mathbf{l} = -I(t)U(t),$$
(4.2)

where the last equality is given by invoking eq. (1.18). If the gravitational force exerted on a mass in the Kibble balance is exactly balanced by the electromagnetic force generated by the coil, this means that $\mathbf{F}_g = -\mathbf{F}_{el}$ holds. One

therefore has

$$\underbrace{mg(r,t)v(t)}_{\text{Mech. power}} = \underbrace{I(t)U(t)}_{\text{El. power}}.$$
(4.3)

This equation can be further simplified, if $g(r,t) \parallel v(t)$; then the equation can be written as

$$mg(\mathbf{r},t)v(\mathbf{r},t) = I(t)U(t) \cdot \begin{cases} (-1), & \text{gravity and velocity antiparallel} \\ (+1), & \text{gravity and velocity parallel} \end{cases}$$
 (4.4)

This is one of the fundamental equations of the Kibble balance. The voltage U(t) and the current I(t) = U(t)/R(t) are measured using Josephson junctions and the quantum Hall effect.

It should be noted at this point, that eq. (4.3) renders an incomplete relation of mechanical to electrical power. The equation reflects the ideal case, where no torque acts upon the coil. In the case, where one has a torque M(r,t) acting upon the coil with angular speed $\omega(t)$, the relation

Total mechanical power
$$\underbrace{F_g(\mathbf{r},t) \cdot \mathbf{v}(t)}_{\text{Translational power}} + \underbrace{M(\mathbf{r},t) \cdot \boldsymbol{\omega}(t)}_{\text{Rotational power}} = \underbrace{I(t)U(t)}_{\text{Electrical power}} \tag{4.5}$$

holds, where $\mathbf{F}_g(\mathbf{r},t)\cdot\mathbf{v}(t) = -\mathbf{F}_{el}(\mathbf{r},t)\cdot\mathbf{v}(t) = m\mathbf{g}(\mathbf{r},t)\cdot\mathbf{v}(t)$ is the translational power and where $\mathbf{M}(\mathbf{r},t)\cdot\boldsymbol{\omega}(t)$ is the rotational power.

Let now the time t and place r be fixed. The voltage U is measured in the dynamic phase; hence one writes $U = U_d$. The current I however is measured in the static phase and therefore obtains a subscript "s", namely $I = I_s$. Using this notation, one can write eq. (4.4) as

$$mgv = I_s U_d. (4.6)$$

The voltage U_d in the dynamic mode is measured against a suitable number of Josephson junctions giving the voltage $U_{J,d}$, whereas in the static mode the current I_s is measured as the fraction of the applied voltage U_s measured against the Josephson junctions voltage $U_{J,s}$ over a resistor R_s calibrated against a quantum Hall resistance R_H . Therefore, one has the relations

$$U_d = C_d U_{J,d} = C_d \frac{h}{2e} n_{J,d} f_{J,d}, \quad I_s = \frac{U_s}{R_s} = \frac{C_{s1} U_{J,s}}{C_{s2} R_H} = C_s \frac{n_{J,s} f_{J,s} n_H e}{2}, \quad (4.7)$$

where C_d and $C_s \doteq C_{s1}/C_{s2}$ are dimensionless calibration factors. Combining these equations with eq. (4.6), one obtains the fundamental Kibble balance equation

$$m = C \frac{f_{J,d} f_{J,s}}{qv} h, \qquad C \doteq C_d C_s \frac{n_{J,d} n_{J,s} n_H}{4}$$

$$\tag{4.8}$$

relating the mass m to the Planck constant, the meter and the second. Hereby $f_{J,d}$ and $f_{J,s}$ are the Josephson frequencies for both the voltage as well as the

current measurement in the dynamic or the static mode respectively. Furthermore, g is to be regarded as the local gravitational constant at the time of measurement and v is the vertical velocity in the direction of local gravitation. This equation can be used for an uncertainty evaluation of the calculated mass, where C, $f_{J,d}$, $f_{J,s}$, g and v have an uncertainty associated to them, and h is a constant of nature without uncertainty.

4.3 Data processing

In this section, the theory of data processing for data obtained by the current METAS Kibble balance is derived. Furthermore, the derived theory is applied to an example batch of data and compared to the results as published by [Eichenberger et al., 2022].

4.3.1 Data processing theory

The Kibble balance measurement procedure produces two main types of data; one type consists of induced voltages $U_{i,d}$ integrated over timespans Δt_i and the other type comprises voltages $U_{i,s}$ measured over a resistor R_s which is itself calibrated against a quantum Hall resistance standard. The voltage measurements is regularly calibrated against a Josephson voltage standard. Consider now fig. 4.3 for a thorough overview of the necessary data processing calculations.

Voltage to velocity ratio G_e

The measurement files for the dynamic phase contain timestamps, where one has zero-crossings between descructive and constructive interferences of the interferometer signal. Furthermore, the voltage measurement files contain the timestamps $t_{i,s}$ and $t_{i,e}$ in between which the voltage is integrated to obtain the mean voltage value $U_{i,d}$ for each interval of the dynamic phase. If $U_d(t)$ denotes the instantaneous reading of the digital voltmeter measuring the induced voltage in the dynamic phase of the experiment, the value $U_{i,s}$ is obtained as

$$U_{i,d} = \frac{1}{\Delta t_i} \int_{t_{i,s}}^{t_{i,e}} U_d(t) \, dt, \qquad \Delta t_i = t_{i,e} - t_{i,s}.$$
 (4.9)

The dynamic phase files also contain a timestamp, where the zero-position z=0 is passed by the coil in vertical direction. By means of counting the number of zero-crossings of the interferometer signal, this allows to associate every timestamp in the file to a vertical position. The association of every timestamp with a vertical position furthermore allows for the calculation of velocities for each desired interval. In order to calculate the voltage to velocity ratio $G_{i,e} \doteq U_{i,d}/v_i$ for every time interval Δt_i of voltage measurement, one has to calculate the average velocities v_i for each interval $i \in \{1, ..., N\}$, $N \in \mathbb{N}$. First of all, the positions $z_{i,-}$ and $z_{i,+}$ are calculated. These positions are the positions of the

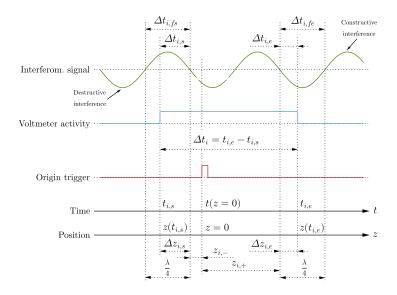


Figure 4.3: Data processing scheme for induced voltage measurements. One has three synchronized channels for voltage and position measurements; the first channel (interferom. signal) records the timestamps of constructive and destructive interferences by the interferometer, the second channel (voltmeter activity) records the timestamps associated to the voltage measurement windows and the third channel (origin trigger) records the time, when the zero-position z=0 is passed by the coil.

first zero-crossing of the interferometer signal after voltage measurement $U_{i,d}$ has started and of the last zero-crossing before the voltage measurement ends. The fractional fringe distances $\Delta z_{i,s}$ and $\Delta z_{i,e}$ at both ends of the time interval Δt_i are then calculated by means of

$$\Delta z_{i,s} = \frac{\Delta t_{i,s}}{\Delta t_{i,fs}} \frac{\lambda}{4}, \qquad \Delta z_{i,e} = \frac{\Delta t_{i,e}}{\Delta t_{i,fs}} \frac{\lambda}{4}, \tag{4.10}$$

where $\Delta t_{i,s}$ is the time associated to $\Delta z_{i,s}$ and $\Delta t_{i,e}$ that associated to $\Delta z_{i,e}$, which can be calculated by knowing the timestamps of all zero-crossings of the interferometer signal and the timestamps of voltage measurement starts/stops. The number of zero-crossings N_i in the interval Δt_i can easily be calculated from the timestamps of all zero-crossings. Hence, the total distance Δz_i of vertical coil travel in the time interval Δt_i is calculated by $\Delta z_i = N_i \frac{\lambda}{4} + \Delta z_{i,s} + \Delta z_{i,e}$. Knowing this, the average velocity v_i of the coil in the time interval Δt_i is calculated as

$$v_i = \frac{\Delta z_i}{\Delta t_i} = \frac{\Delta z_{i,s} + \Delta z_{i,e} + N_i \frac{\lambda}{4}}{\Delta t_i}.$$
 (4.11)

Finally, one can now calculate the voltage to velocity ratio $G_{i,e} = U_{i,d}/v_i$ for every interval $i \in \{1, ..., N\}$.

Once the values $G_{i,e}$ are calculated for one measurement series, they are

associated to the vertical position

$$z_{i} = \frac{z_{i,+} + \Delta z_{i,e} - z_{i,-} - \Delta z_{i,s}}{2}$$
(4.12)

at the middle of the voltage integration times, hence one obtains sample points of a function $G_e(z)$. All sample points of $G_e(z)$ can then be plotted against the vertical position of each measurement point, which leads to a figure as shown in fig. 4.4. The next step then consists of fitting the obtained points of $G_e(z)$ to a polynomial $f_e(z)$ of order $\mathcal{O}(z^k)$, where k is usually chosen in the range $k \in \{4,5,6\}$. The weighting position z_w for the static phase is then chosen in such

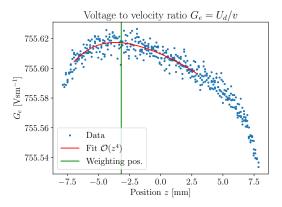


Figure 4.4: Example for all values $G_{i,e} = U_{i,s}/v_i$ for one measurement series consisting of 10 upward and 10 downward motions of the coil.

a way, that the slope of G_e at z_w becomes minimal, namely $\frac{\mathrm{d}G_e(z)}{\mathrm{d}z}\big|_{z=z_w}\approx 0$. This ensures, that the error on an estimate of $G_e(z_w)$ introduced by the fit due to possible over- or underfitting of the data is minimized. For one measurement series then, the extracted voltage to velocity ratio $G_e(z_w)$ at the weighting position is taken to be the value, where the green vertical line in fig. 4.4 crosses the polynomial fit to the data given by the red line, namely

$$G_e(z_w) = p_e(z_w), \tag{4.13}$$

where $p_e(z)$ is the polynomial fit to the data as mentioned above.

Gravity to current ratio G_m

A further step then is to determine the current $I_s = I_s(z_w)$ at the weighting position in the static phase. Again, the weighting position is determined in such a way, that the slope of the G_e curve in the dynamic phase vanishes as well as possible. One measurement series consists of three individual weightings, which are carried out alternatively in the pos-neg-pos or neg-pos-neg configurations. These weightings take place a constant positive or negative currents. With

regard to fig. 4.2a, the post configuration means that a positive current is applied to flow through the coil, which generates a downward electromagnetic force F_{el} almost balancing the gravitational force F_g exerted on the test mass m placed on the balance. The residual mass Δm not balanced by the generated electromagnetic force F_{el} is then accounted for by a mass comparator. The experimental apparatus of the watt balance is constructed in such a way, that the coil with its suspension weights exactly half of a kilogram; thus, if a weight of one kilogram is placed on the balance, the electromagnetic force generated by a positive current flowing through the coil must be equal to the gravitational force generated by a mass of half a kilogram. In the neg configuration however, the test mass m is removed from the balance and thus the coil and suspension pull the balance down with the gravitational force of half a kilogram. Introducing now a negative current flowing through the coil, an upward electromagnetic force equivalent to half a kilogram can be generated. The names pos or neg thus refer to the direction of the weighting current flowing through the coil. In each configuration pos or neg, there are $i \in \{1, ..., M\}$ with $M \in \mathbb{N}$ measurement values of the voltage $U_{s,pi}$ or $U_{s,ni}$ measured by a digital voltmeter over a resistor R_s obtained by integrating the voltage during a time window Δt_i . It is assumed hereby, that the measured voltages $U_{s,pi}$ and $U_{s,ni}$ have already been corrected using a calibration factor, which arises for the calibration against a Josephson voltage standard. The calibration factor for some measured voltage U_m of a digital voltmeter and the reference voltage U_r is defined as

$$\alpha \doteq \frac{U_m - U_r}{U_r} = \frac{U_m}{U_r} - 1. \tag{4.14}$$

The corrected voltage \tilde{U}_m is hence obtained as $\tilde{U}_m = U_m(1-\alpha)$ for $\alpha > 0$ and $\tilde{U}_m = U_m(1+\alpha)$ for $\alpha < 0$. Using Ohm's law next, one can calculate the average current $I_{s,pi}$ or $I_{s,ni}$ for each integration time as

$$I_{s,qi} = \frac{1}{R_s \Delta t_i} \int_{t_{s,q}}^{t_{i,e}} U_{s,qi}(t) \, \mathrm{d}t, \qquad q \in \{p, n\}.$$
 (4.15)

Let $I_{s,1i}$ denote the current measurements obtained in the first weighting (pos or neg), $I_{s,2i}$ the measurements obtained in the second weighting (neg or pos) and $I_{s,3i}$ those of the third weighting (pos or neg). The comparator values (masses) shall be denoted by Δm_{ji} with $i \in \{1, \ldots, M\}$ and $j \in \{1, 2, 3\}$. In order to eliminate a possible drift concerning the mass comparator, mean values using these measurements are calculated. First, Mean values for each of the neg and pos configurations are computed by means of

$$I_{s,mj} = \frac{1}{M} \sum_{i=1}^{M} I_{s,1i}$$
 and $\Delta m_j = \frac{1}{M} \sum_{i=1}^{M} \Delta m_{ji}$, $j \in \{1, 2, 3\}$. (4.16)

Second, overall mean values are calculated using the relations

$$I_{s,m} = I_{s,m2} + \frac{I_{s,m1} + I_{s,m3}}{2}$$
 and $\Delta m = \left| \Delta m_2 - \frac{\Delta m_1 + \Delta m_3}{2} \right|$. (4.17)




Figure 4.5: The residual mass $\Delta m = |\Delta F_g|/g$ is measured by the mass comparator.

Now, consider fig. 4.5. The gravitational force is given gy $F_g \doteq |\mathbf{F}_g| = mg$, whereas the residual gravitational force is accounted for by $F_g \doteq |\Delta \mathbf{F}_g| = \Delta mg$. Furthermore, the electromagnetic force is calculated by $F_{el} \doteq |\mathbf{F}_{el}| = F_g - \Delta F_g = (m - \Delta m)g$. Introducing the quantity $G_m \doteq \frac{mg}{I_{s,c}}$ with $I_{s,c}$ being the "corrected" current, if $\Delta m = 0$; $I_{s,m}$ denotes the actually measured current with $\Delta m \neq 0$. Herewith,

$$F_{el} = (m - \Delta m)g = G_m I_{s,c} - \Delta mg = I_{s,m} G_m$$
 (4.18)

follows, from which further

$$G_m(I_{s,c} - I_{s,m}) = \Delta mg \quad \Rightarrow \quad G_m(z_w) = (m - \Delta m) \frac{g(z_w)}{I_{s,m}}$$
 (4.19)

can be derived by using $I_{s,c} = mg/G_m$. In this equation g is a mean value over the time of weighting at the weighting position z_w ; see fig. 4.2a.

Calculation of the mass m

With regard to eq. (4.6), one can now calculate the mass m using the voltage to velocity and gravity to current ratios G_e and G_m at the weighting position, namely

$$m = \underbrace{\frac{U_d(z_w)}{v(z_w)}}_{G_e(z_w)} \underbrace{\frac{I_s(z_w)}{g(z_w)}}_{G_m(z_w)^{-1}} = G_e G_m^{-1}. \tag{4.20}$$

4.3.2 Data processing example

The theory for data processing as described in section 4.3.1 was implemented in Python. This led to results as seen in fig. 4.6a and fig. 4.6b for a total of 10 measurement series. The blue points indicate the values obtained by the implemented Python routine, whereas the red points denote the validation values which were obtained in [Eichenberger et al., 2022]. Note, that the tidal corrections have not yet been implemented, which could lead to an improvement of the

calculated G_m values with respect to the reference values which are corrected for tidal effects.

From the pictured blue and red points, one can calculate a mass m using eq. (4.20). Averaging over the blue points (calculated by Python routine) leads to a mass of $m_c = 1.000\,000\,661\,85\,\mathrm{kg} = 1\,\mathrm{kg} + 661.85\,\mathrm{\mu g}$, whereas the red points (validation values from [Eichenberger et al., 2022]) lead to a mass $m_r = 1.000\,000\,661\,89\,\mathrm{kg} = 1\,\mathrm{kg} + 661.89\,\mathrm{\mu g}$. The difference $\Delta m_{c,r}$ between the calculated value m_c of the described data processing routine and the value m_r obtained from the reference data processing is therefore $\Delta m_{c,r} = |m_c - m_r| \approx 40\,\mathrm{ng}$, which is of relative order 10^{-11} . Thus, one can conclude that the reported

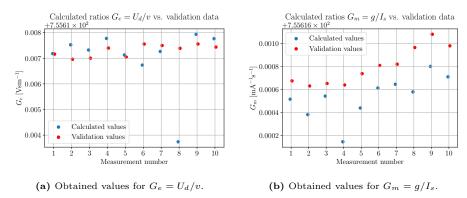


Figure 4.6: Comparison of values for G_e and G_m as obtained by the described procedure in section 4.3.1 to the values presented in [Eichenberger et al., 2022]. The datapoints represent the results from 10 measurement series, which consist of 3 weightings (neg-pos-neg or posneg-pos) and 10 up-downs each. Note, that tide corrections have not yet been implemented so far and that the shown values for the blue points hence are not corrected for tidal effects.

Python implementation¹ agrees well with the data processing routine used for the publication [Eichenberger et al., 2022].

4.4 Self-centering mechanism

Consider a case, where one has a mass support system (MSS) supported at one flexure point as visualized in fig. 4.7. This figure depicts a self-centering mechanism present in commercial mass comparators, as well as most Kibble balances. Essentially, the mechanism works by lowering and lifting the mass on and off the MSS, until the mass m has sufficiently centered.

Let x_i denote the distance between the center of mass of the mass m to be placed on the MSS and the center of mass of the mass m_s . The mass m_s denotes the mass of the MSS and is assumed to be centered perfectly, which means that m_s is exactly aligned vertically with the flexure point, where the

 $^{^{1}} The most recent code can be found in this folder (accessible only within the METAS network): $$ \METASFSO1.AD.METAS\HOME$\OFFICE\ZADA\PhDDanielZahnd\Joule-wattbalanceproject\Pythoncode\Kibblebalancetestevaluationdata.$

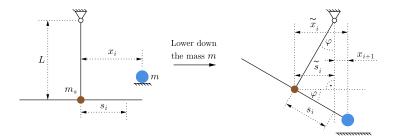


Figure 4.7: Visualization of the working principle of the self-centering mechanism for mass support systems.

MSS is supported. Hereby $i \in \mathbb{N}_0$ is the index of the i'th lowering and lifting (iteration) of the mass on and off the MSS. By placing the mass m on the MSS, the MSS will swing around the flexure point such that the center of mass of the masses m and m_s will be aligned with a vertical axis going through the flexure point. Lifting the mass again, the mass m will have moved closer to the mass m_s exactly centered on the MSS. That this is indeed the case for iterations $i \to \infty$ will be shown below.

By inspection of fig. 4.7, the center of mass s_i of m and m_s is calculated as

$$s_i = \underbrace{\frac{m}{m_s + m}}_{\stackrel{\cdot}{\underline{}} u} x_i = \mu x_i, \tag{4.21}$$

where the fact was used, that m_s is exactly centered on the MSS. In the tilted case then, the quantity of interest will be x_{i+1} , since it is the distance of the mass m to the vertical axis going through the flexure point for the unloaded MSS for the next iteration. In order to obtain this quantity of interest, \tilde{x}_i and \tilde{s}_i have to be calculated first. For this, the small-angle approximation $\cos(\varphi) \approx 1 - \frac{\varphi^2}{2}$ is permissible. This leads to the expression

$$\tilde{s}_i = \cos(\varphi) s_i \approx \left(1 - \frac{\varphi^2}{2}\right) s_i,$$
(4.22)

where the angle φ is calculated as $\varphi \approx \tan(\varphi) = s_i/L$. Furthermore, \tilde{x}_i is obtained by a similar trigonometric expression

$$\tilde{x}_i = \cos(\varphi)x_i \approx \left(1 - \frac{\varphi^2}{2}\right)x_i.$$
 (4.23)

Using all above expressions, the instructive relation

$$x_{i+1} = \tilde{x}_i - \tilde{s}_i = \left(1 - \frac{\varphi^2}{2}\right)(x_i - s_i) = \underbrace{\left(1 - \frac{\mu^2 x_i^2}{2L^2}\right)}_{\dot{-}\dot{\epsilon}}\underbrace{(1 - \mu)}_{\dot{-}\dot{\epsilon}} x_i$$
 (4.24)

is obtained. Requiring now $m_s \in (0, \infty)$, it follows that $\mu \in (0, 1)$. Furthermore demanding $x_0 < L$ - meaning, that the initial displacement of the mass m from the center position is smaller than the arm's length of the MSS - one can establish $\xi_1 \in (0, 1)$ and $\xi_2 \in (0, 1)$. Therefore, the estimation

$$x_{i+1} = \xi_1 \xi_2 x_i < x_i \tag{4.25}$$

is established. If $x_i \geq 0$ is ensured for all $j \in \mathbb{N}_0$, the conclusion

$$\lim_{j \to \infty} x_j = 0 \tag{4.26}$$

follows. It is shown therefore using a simple model as depicted in fig. 4.7, that a self-centering mechanism as described indeed centers a mass m on a MSS. It is crucial to perform several iterations to ensure, that a mass m is sufficiently centered on the MSS.

4.5 Abbe error issue

Since the Kibble balance setup relies on the exact alignment of the vertical velocity with local gravitational acceleration, the fact that this cannot be realized in reality perfectly gives rise to a possible issue. In order to obtain good measurements, one needs to measure the exact vertical velocity of the center of mass of the suspended coil. In reality, this measurement is difficult to achieve, since the coil is always slightly tilted with respect to a perpendicular plane to local gravitational acceleration. This introduces the so-called Abbe error in the measurement of the vertical velocity of the coil. However, this problem can be overcome by reconstructing the position/velocity signal in the optical center (projection of mass center of the suspended coil onto the plane of the coil) by means of weighting the measurement data of three interferometers measuring the vertical position of three corner cubes placed in equal angular distances on the coil. The corresponding procedure is explained in more detail below.

4.5.1 Introduction

The watt balance experiment as it relies on a precise measurement of the vertical velocity of a coil immersed in a constant magnetic field. The watt balance in the current consists of an interferometer measuring the vertical velocity of a corner cube placed in the geometrical center of the coil. The geometrical center however does not necessarily coincide with the optical center, which is the projection of the center of mass of the coil plus its suspension vertically onto the plane of the coil. The watt balance experiment however relies on aligning the corner cube placement precisely with the optical center, which is notably a tedious process and hence prone to inaccuracies.

Recently, [Glardon, 2024] explored an alternative approach to determine the precise vertical velocity of the coil's optical center. This approach substitutes the one interferometer placed approximately in the optical center of the coil with

three interferometers placed around the geometrical center of the coil. Using these three interferometers and a computational reconstruction of the interferometer signal in the calculated optical center renders a precise and tedious alignment of a corner cube with the optical center of the coil obsolete.

In order for this alternative approach to be implemented in the watt balance experiment however, reproducibility of results need first be established. The work underlying this report aims at doing precisely that.

The goal of this work is to show, that reproducibility can be established with respect to multiple measurement series distributed over several days, aswell as with regard to de- and remounting one interferometer in the setup. A successful outcome will provide encouragement for substituting one of the three interferometers with the currently used interferometer posterior to calculating the weighting factors of the individual interferometers. These weighting factors are used to calculate the optical center of the coil and the reconstructed signal therein. This substitution of one of the three new interferometers with the currently used interferometer would allow to significantly reduce the uncertainty associated to the position measurement of the coil due to a superior stability and accuracy of the used laser light as compared to the other two interferometers.

4.5.2 Theoretical preliminaries

Finding the optical center of the coil

Consider the setup as seen in fig. 4.8. This is a mock-up of a part of the watt balance experiment. It consists of a metal plate at the bottom equipped with three corner cubes as shown. Each corner cube has a corresponding interferometer measuring the vertical position of the corner cubes. This metal plate simulating the coil in the real watt balance experiment is attached to the translation stage via an articulation. A Sarrus mechanism ensures, that the vertical motion of the articulation is only strictly vertical during the translation stage. The apparatus further features a linear actuator to simulate the movement of the coil in the translational stage of the actual watt balance experiment.

The metal plate simulating the coil in the real watt balance experiment oscillates about the vertical axis given by the vertical rod of the translational stage at an eigenfrequency $\boldsymbol{\omega} = (\omega_x, \omega_y)^{\top}$, which [Glardon, 2024, p.12] reports to be given by $\omega_x = 2\pi \cdot 1.2009(3)$ Hz and $\omega_y = 2\pi \cdot 1.2236(3)$ Hz.

Consider now the case, where the rod connecting the coil to the articulation is rotated around the axis $i \in \{x, y\}$. The rotation angle can be written by $\varphi_i(t)$. Following [Glardon, 2024, p.8], the precise expression for $\varphi_i(t)$ can be written by

$$\varphi_i(t) = A_i \sin(\omega_i t) + \theta_i, \quad i \in \{x, y\}, \tag{4.27}$$

where θ_i denotes a potential bias rotation angle around the *i*-axis in the equilibrium position where no force except gravity acts on the coil.

Considering that a corner cube may be displaced a distance a_y in the coil's plane from the optical center, [Glardon, 2024, p.9] derives the expression z(t)

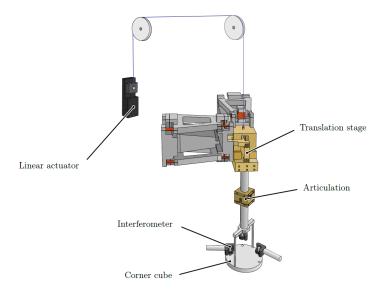


Figure 4.8: Setup of mock experiment. Figure taken from [Glardon, 2024].

for the vertical position of said corner cube to be

$$z(t) \approx A_x(a_y + R\theta_x)\sin(\omega_x t) - \frac{A_x^2 R}{4}\cos(2\omega_x t) + \frac{RA_x^2}{4} + \theta_x \left(\frac{R\theta_x}{2} + a_y\right)$$
$$\propto A_x(a_y + R\theta_x)\sin(\omega_x t) - \frac{A_x^2 R}{4}\cos(2\omega_x t),$$
(4.28)

where the "approximately equal" sign stems from application of the small angle approximations $\sin(x) \approx x$ and $\cos(x) \approx 1 - \frac{1}{2}x^2$ for $x \ll 1$. Consider fig. 4.9 for a visualization of this situation. One can generalize this expression for displacements a_x and a_y of the corner cube from the optical center to be given as

$$z(t) \propto \sum_{\substack{i,j \in \{x,y\}\\i \neq j}} A_i(a_j + R\theta_i) \sin(\omega_i t) - \frac{A_i^2 R}{4} \cos(2\omega_i t). \tag{4.29}$$

Note, that the term featuring $\sin(\omega_x t)$ vanishes for $a_y = -R\theta_x$. This corresponds to the case, where one aligns the corner cube exactly with the optical center of the coil. If this is precisely the case, then the function z(t) will only feature oscillations at angular frequency of two times the eigenfrequency ω_x . Henceforth, the term with periodicity ω_x will be called the 1f-term; and the term with periodicity $2\omega_x$ the 2f-term. If generalized for deviations a_x , a_y of the corner cube from the optical center, amplitudes A_x , A_y in both x- and y-directions, eigenfrequencies ω_x , ω_y in both x- and y-directions aswell as biases

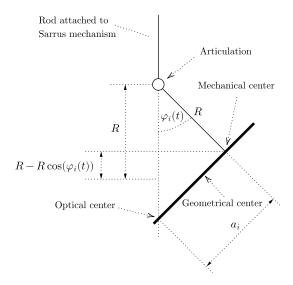


Figure 4.9: Situation, if optical center is not aligned with the mechanical/geometrical center of the coil. The quantity a_i denotes the displacement of a corner cube from the optical center in *i*-direction, where $i \in \{x, y\}$.

 θ_x , θ_y , the function z(t) becomes equivalent to the position signal $I_{OC}(t)$ of the vertical position for the optical center of the coil.

Calculation of the signal in the optical center of the coil

Consider first fig. 4.10. One can see, that the geometry of the corner cubes on the coil is given by the set of parameters $(R_1,R_2,R_3,i_1,i_2,i_3)$, where R_j and i_j denote the radial distance from the geometrical center and the angle with respect to the x-axis of each corner cube $j \in \{1,2,3\}$. Let now $I_{OC}(t)$ denote the vertical position of the optical center, and $I_{GC}(t)$ the vertical position of the geometrical center of the corner cubes. Furthermore, d_x and d_y denote the deviations of the optical center from the geometrical center in x- and y-directions in the coil's plane. The angles α and β as seen in fig. 4.10 are a measure for the tilt angles of the coil around the x-axis (α) and around the y-axis (β) . Given these definitions, one can deduce the relation

$$I_{OC}(t) = I_{GC}(t) + \sin[\alpha(t)]d_y - \sin[\beta(t)]d_x \qquad (4.30)$$

from a consideration of fig. 4.10. Given the geometry of the ring and position measurements $I_1(t)$, $I_2(t)$ and $I_3(t)$ of the vertical position of the three corner cubes on the ring, [Haddad et al., 2010] derive the expressions

$$\sin[\alpha(t)] = \frac{1}{\det(A)} C_{cos}(t), \quad \sin[\beta(t)] = \frac{1}{\det(A)} C_{sin}(t), \tag{4.31}$$

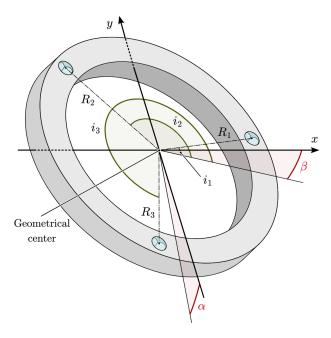


Figure 4.10: Geometry of the corner cubes on a ring simulating the behaviour of the coil in the real watt balance experiment. Figure taken from [Glardon, 2024, p.11] with slight modifications by the author.

where $C_{sin}(t)$ and $C_{cos}(t)$ are defined as

$$\begin{split} C_{cos}(t) &\doteq R_1[I_3(t) - I_2(t)]\cos(i_1) + R_2[I_1(t) - I_3(t)]\cos(i_2) + R_3[I_2(t) - I_1(t)]\cos(i_3), \\ C_{sin}(t) &\doteq R_1[I_3(t) - I_2(t)]\sin(i_1) + R_2[I_1(t) - I_3(t)]\sin(i_2) + R_3[I_2(t) - I_1(t)]\sin(i_3). \end{split} \tag{4.32}$$

The quantity det(A) is given entirely by the geometry of the corner cubes on the coil and can be calculated as

$$\det(A) = R_1 R_2 \sin(i_1 - i_2) + R_2 R_3 \sin(i_2 - i_3) + R_3 R_1 \sin(i_3 - i_1). \tag{4.33}$$

Furthermore defining

$$C_{GC}(t) \doteq R_1 R_3 [I_2(t) - I_1(t)] \sin(i_3 - i_1) + R_1 R_2 [I_1(t) - I_3(t)] \sin(i_2 - i_1),$$
 (4.34)

the signal $I_{GC}(t)$ specifying the vertical position of the geometrical center is calculated by

$$I_{GC}(t) = I_1(t) + \frac{1}{\det(A)} C_{GC}(t),$$
 (4.35)

as [Glardon, 2024, p.10] states. In total therefore, the reconstructed signal $I_{OC}(t)$ describing the vertical position of the optical center of the coil can be calculated at any time t by

$$I_{OC}(t) = I_1(t) + \frac{1}{\det(A)} \left[C_{GC}(t) + C_{cos}(t) d_y - C_{sin}(t) d_x \right]. \tag{4.36}$$

Fixing the time coordinate t for a certain moment, the above equation thus defined an objective function

$$\mathcal{L}_1(d_x, d_y) = I_1 + \frac{1}{\det(A)} [C_{GC} + C_{cos} d_y - C_{sin} d_x]. \tag{4.37}$$

for an optimization process. The parameters to be optimized by this function are d_x and d_y , denoting the deviation of the optical center from the geometrical center.

As [Glardon, 2024, p.21-23] shows, there is a bijection between the representation of the position signal $I_{OC}(t)$ as given by eq. (4.36) and a weighted average representation given by

$$I_{OC}(t) = \lambda_1 I_1(t) + \lambda_2 I_2(t) + \lambda_3 I_3(t), \quad \sum_{i=1}^{3} \lambda_i = 1.$$
 (4.38)

Given the normalization condition for the weighting parameters, one can also write this equation as

$$I_{OC}(t) = \lambda_1 I_1(t) + \lambda_2 I_2(t) + (1 - \lambda_1 - \lambda_2) I_3(t). \tag{4.39}$$

This equation defines a second objective function

$$\mathcal{L}_2(\lambda_1, \lambda_2) = \lambda_1 I_1(t) + \lambda_2 I_2(t) + (1 - \lambda_1 - \lambda_2) I_3(t), \tag{4.40}$$

which can be optimized by varying λ_1 and λ_2 following an optimization goal.

An important observation to state here is that while $\mathcal{L}_1(d_x, d_y)$ requires an a priori assumption for the geometry of the coils corner cubes, $\mathcal{L}_2(\lambda_1, \lambda_2)$ does not. There is however an analytical bijection between both representations, which therefore allows to switch between the (d_x, d_y) and the (λ_1, λ_2) representations of $I_{OC}(t)$. This means, that the algorithm optimizing \mathcal{L}_2 is independent of the geometry of the corner cubes on the coil, while the algorithm optimizing \mathcal{L}_1 is not.

Optimization routine

Recalling eq. (4.28), which describes the vertical position z(t) of the optical center and is therefore equivalent to $I_{OC}(t)$, one can state that the optical center is found with regard to eq. (4.36) or eq. (4.39), whenever the 1f-term vanishes. This is also to say, that only $2\omega_x$ and $2\omega_y$ will be visible in a frequency spectrum of the signal $I_{OC}(t)$. Alternatively, this also means that the amplitude of the signal $I_{OC}(t)$ is minimized.

This observation gives rise to two algorithm designs, both implemented and explored by [Glardon, 2024]. A first design of the algorithm minimizes the amplitude of the position signal $I_{OC}(t)$ in the optical center, while a second design minimizes the 1f-term peak amplitude as compared to the 2f-term peak amplitude in a frequency spectrum of $I_{OC}(t)$. Furthermore, there are two subdesigns for both types of algorithms, optimizing either the parameters (d_x, d_y)

for eq. (4.37) or (λ_1, λ_2) for eq. (4.40). As [Glardon, 2024] shows in his work, the algorithms minimizing the 1-term peak amplitude as compared to the 2f-term peak amplitude generally performs much better; therefore the work at hand concentrates only on these algorithms. The idea behind such an algorithm is to interatively adapt the parameters (d_x, d_y) or the weights (λ_1, λ_2) , such that the 1f-term peak amplitudes vanish. Note, that the vertical position I(x, y, t) of any coordinates² (x, y) in the plane of the coil can be calculated based on eq. (4.36) by

$$I(x, y, t) = I_1(t) + \frac{1}{\det(A)} [C_{GC}(t) + C_{cos}(t) \cdot y - C_{sin}(t) \cdot x].$$
 (4.41)

The outcome of an algorithm as described is visualized in fig. 4.11. The left panels show the reconstructed signals at a position I(x, y, t) in the plane of the coil, whereas the right panels show a section of the respective Fourier transform $\mathcal{F}[I(x,y,t)](\nu)$ obtained by a fast Fourier transform (FFT) algorithm. Hereby, x and y are held constant and only t is Fourier transformed. Clearly, the algorithm optimizing the weights $(\lambda_1, \lambda_2, \lambda_3)$ given eq. (4.40) successfully minimizes the 1f peak amplitudes relative to the 2f peak amplitudes.

PicoScale adjustment procedure

Consider two signals

$$x(\Delta\phi) = G_x \cos(\Delta\phi + \Delta\phi_{0,x}) + G_{0,x}, \quad y(\Delta\phi) = G_y \sin(\Delta\phi + \Delta\phi_{0,y}) + G_{0,y}$$
(4.42)


that form a quadrature signal and hence a so-called Lissajous figure. Hereby, G_x and G_y are the amplitudes for the signals in both x- and y-direction of the coordinate system. Furthermore, $\Delta \phi$ serves as the argument of dependence of the signals $x(\Delta \phi)$ and $y(\Delta \phi)$. Then, there are the parameters $G_{0,x}$, $G_{0,y}$, which are amplitude offsets in both x- and y-directions. Furthermore, one has the parameters $\Delta \phi_{0,x}$ and $\Delta \phi_{0,y}$, which are offsets in the phase difference of both signals. In vectorial notation, one therefore has

$$\boldsymbol{x}(\Delta\phi) = \begin{pmatrix} x(\Delta\phi) \\ y(\Delta\phi) \end{pmatrix} = \begin{pmatrix} G_x \cos(\Delta\phi + \Delta\phi_{0,x}) \\ G_y \sin(\Delta\phi + \Delta\phi_{0,y}) \end{pmatrix} + \boldsymbol{G}_0, \tag{4.43}$$


where $G_0 = (G_{0,x}, G_{0,y})^{\top}$. If $G_0 = 0$, $G_x = G_y$ and $\Delta \phi_{0,x} = \Delta \phi_{0,y} = 0$, then $x(\Delta \phi)$ describes a so-called perfect Lissajous figure; an exact circle in dependence of $\Delta \phi$ in the x-y-plane. See fig. 4.12 for a visualization of an imperfect and perfect Lissajous figure with associated parameter settings. In this figure, a whole round-trip around the Lissajous figure corresponds to $\Delta \phi \in [0, \lambda]$ for $\lambda = 1550\,\mathrm{nm}$ the used wavelength of the laser.

Often times, Michelson-interferometers like that employed by the PicoScale technique, one has two signals $x(\Delta\phi)$ and $y(\Delta\phi)$ in quadrature sent through the interferometer. "In quadtrature" hereby means, that $x(\Delta\phi)$ and $y(\Delta\phi)$ ideally

 $^{^2}$ The origin of the coordinate system is the geometrical/mechanical center of the coil.

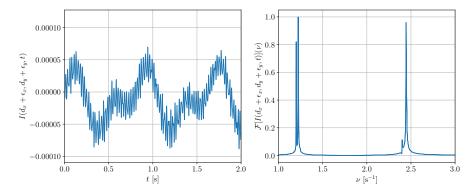

(a) Signal of vertical position at point slightly deranged from optical center; $I(d_x + \epsilon_x, d_y + \epsilon_y, t)$. The dominating frequency seem to be the 1f-frequencies $\nu_x = \omega_x (2\pi)^{-1}$ and $\nu_y = \omega_y (2\pi)^{-1}$. Both the 1f- and 2f-signals are superimposed with high-frequency oscillations not seen in the right panel.

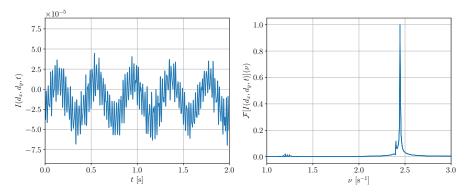

(b) Signal of vertical position at optical center; $I(d_x, d_y, t) = I_{OC}(t)$. The dominating frequencies are the 2f-frequencies $2\nu_x = 2\omega_x(2\pi)^{-1}$ and $2\nu_y = \omega_y(2\pi)^{-1}$. The 2f-signals are superimposed with high-frequency oscillations not seen in the right panel.

Figure 4.11: Signals I(x, y, t) describing the vertical position for coordinates (x, y) in the plane of the coil.

employ a $\pi/2$ phase difference, as it is the case with $x(\Delta\phi)$ being proportional to $\cos(\Delta\phi)$ and $y(\Delta\phi)$ being proportional to $\sin(\Delta\phi)$. This technique allows one to be sensitive in the x-signal, whenever one is insensitive in the y-signal, and vice versa. However, due to misalignment with verticality or horizontality of the target mirror and due to other imperfections in the interferometer setup, the phase difference is never exactly $\pi/2$, nor are the amplitudes G_x and G_y exactly equal, nor are the offsets $G_{x,0}$ and $G_{y,0}$ exactly zero. Therefore, the interferometer setup - like the PicoScale device - auto-adjusts the parameter set $\{G_x, G_y, G_{x,0}, G_{y,0}, \Delta\phi_{0,x}, \Delta\phi_{0,y}\}$ after one manually adjusts the setup with verticality and horizontality as required; see [SmarAct GmbH, 2019, p.23] for more information about this auto-adjustment process.

Depending on the settings of these parameters however, an identical distance

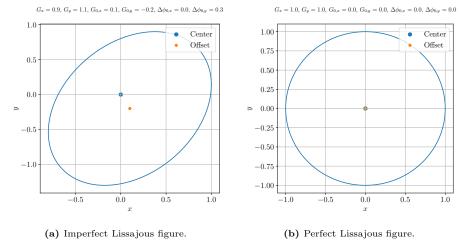


Figure 4.12: Imperfect and perfect Lissajous figures with associated parameters with respect to eq. (4.43).

might be measured to be equal to different distances, which is why this might result in a problem concerning the reproducibility of length measurements when rebuilding a setup. According to [SmarAct GmbH, 2019, p.23], the PicoScale device establishes a relationship between the vector $\boldsymbol{x}(\Delta\phi)$ as given by eq. (4.43) and the displacement Δs of the target mirror as given by the relation

$$\Delta s = \frac{\lambda}{2\pi} \Delta \phi. \tag{4.44}$$

If $x(\Delta\phi)$ does not describe a perfect Lissajous figure, then the above relation becomes non-linear, which is why distance measurements become erroneous, since they implicitly use the linear relationship as given above.

Influence of pressure fluctuations on length measurements

It is the case that a medium changes the index of refraction for light. The index of refraction is commonly denoted by n with an appropriate subscript giving reference to the medium to which it refers. Let c_{vac} denote the speed of light in vacuum and c_{med} the speed of light in a medium. Furthermore, if λ_{vac} denotes the wavelength in vacuum, n_{med} the index of refraction in a medium and λ_{med} the wavelength in the latter, the defined quantities relate as

$$c_{vac} = n_{med}c_{med}, \qquad \lambda_{med} = \frac{c_{med}}{\nu}, \qquad \lambda_{vac} = \frac{c_{vac}}{\nu},$$
 (4.45)

where ν refers to the frequency of the light which is invariant in the non-relativistic case across different media. In particular if $n_{med} > 1$ as it is the case for air, the relation

$$\lambda_{med} = \frac{c_{med}}{\nu} < \frac{c_{vac}}{\nu} = \lambda_{vac} = n_{med}\lambda_{med}. \tag{4.46}$$

This is to say that if $n_{med} > 1$, then a given wavelength is larger in vacuum than it is in the medium. Concerning length measurements of a length L_{vac} , this means that one obtains larger lengths for L_{vac} if it is measured in a medium; then, the relation

$$L_{med} = n_{med}L_{vac} \quad \Leftrightarrow \quad L_{vac} = \frac{L_{med}}{n_{med}}$$
 (4.47)

holds for the conversion of measured lengths L_{med} to the corresponding length L_{vac} if it were measured in a vacuum.

The refractive index of air can be calculated using the so-called Edlén equation³, which gives the refractive index n_{air} depending on relative humidity H_R , temperature T, CO₂ concentration $X_{\rm CO_2}$ and pressure P; therefore, it is a function

$$n_{air} = n_{air}(T, H_R, CO_2, P). \tag{4.48}$$

4.6 Practical implementation of the 3-interferometer technique

Implementing the 3-interferometer technique to the current METAS Kibble balance setup requires additional time interval analyzers to count the fringes and the associated time intervals between zero-crossings of the interferometer signals. At METAS, an IDQ ID900 time controller⁴ is available to take over that task. It has however to be studied yet, how this can be achieved. Furthermore, also more than the currently available components such as beam-splitters and optical fibres are necessary.

4.6.1 Measurement circuit

A coarse overview of the measurement circuit for the implementation of the 3-interferometer technique is visualized in fig. 4.13. The circuit features the PicoScale device used to read out the optical information gathered by the interferometer heads. Furthermore, it features photodetectors used to translate the optical superposition of interferometer signals to a processable output to use as input for the time interval analyzer. The time interval analyzer then records the timestamps of zero-crossings of the interferometer signal for each of the three channels. Knowing the wavelength of the used laser, one can then calculate distances and velocities as indicated and explained with fig. 4.3 and section 4.3.1.

 $^{^3 \}rm See$ for example https://emtoolbox.nist.gov/wavelength/Documentation.asp, link last checked on April 05, 2024.

⁴See [ID QUANTIQUE SA, 2018] for further information.

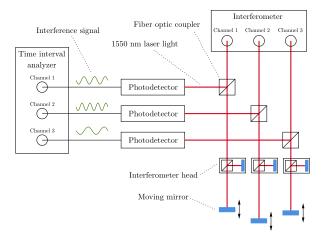


Figure 4.13: Overview of the optical circuit for the implementation of the 3-interferometer technique.

4.6.2 Description of the TIA device

The time interval analyzer features 4 inputs for an electric signal ranging between $-3 \,\mathrm{V}$ and $+3 \,\mathrm{V}$. It can be controlled using either the shipped graphical user interface, LabVIEW or python; it should be able to get timestamps of zero-crossings of interference signals of an interferometer.

4.6.3 Signals to process

The signals to process by the time interval analyzers are interference signals provided by the photodetectors as seen in fig. 4.13. These signals are based on interference patterns as provided by the interferometer heads.

4.6.4 Required output

The required output of the time interval analyzer are the timestamps of zerocrossings for the interferometer signal of each of the three interferometers. Using these timestamps and knowing the wavelength of the used laser light, one can then calculate distances and velocities of the moving mirrors as visualized in fig. 4.13 and fig. 4.3.

4.6.5 Sine to square wave conversion

Essentially, the TIA counts zero-crossings of a signal. It can be adjusted/programmed such that it triggers to logic 1, if a certain threshold with a positive and/or negative flank is met. The available TIA IDQ ID900 however requires the slope s(t) of a signal at trigger point t to be larger than $50 \,\mathrm{V}\,\mathrm{\mu s}^{-1}$, i.e. $s(t) \geq 50 \,\mathrm{V}\,\mathrm{\mu s}^{-1}$.

In the case at hand, the expected velocity of the coil measured by an interferometer, whose signal is then planned to be processed by the TIA, is given by $v \approx 1.3\,\mathrm{mm\,s^{-1}}$. Given the wavelength $\lambda = 1550\,\mathrm{nm}$ this means, that the expected frequency of a signal to be processed by the TIA is given as $\nu = v/\lambda \approx 840\,\mathrm{Hz}$.

Assuming now that the signal output of a photodetector will be a sine wave

$$U(t) = U_0 \sin(2\pi\nu t) \tag{4.49}$$

with amplitude U_0 and frequency ν , the slope s(t) at a given time t is calculated as

$$s(t) = \frac{\mathrm{d}U(t)}{\mathrm{d}t} = 2\pi\nu U_0 \cos(2\pi\nu t). \tag{4.50}$$

The average slope \bar{s}_+ for a window of positive time derivative of the signal can be calculated as

$$\bar{s}_{+} = \frac{1}{t_{2} - t_{1}} \int_{t_{1}}^{t_{2}} s(t) dt = 2\nu \int_{-1/4\nu}^{1/4\nu} 2\pi\nu U_{0} \cos(2\pi\nu t) dt$$

$$= 2\nu U_{0} \left[\sin\left(2\pi\nu \frac{1}{4\nu}\right) - \sin\left(-2\pi\nu \frac{1}{4\nu}\right) \right] = 4\nu U_{0}.$$
(4.51)

If a signal amplitude ov $U_0=2\,\mathrm{V}$ is expected, the average increasing slope \bar{s}_+ is given by


$$\bar{s}_{+} = 4 \cdot 840 \,\mathrm{Hz} \cdot 2 \,\mathrm{V} = 6.72 \,\mathrm{mV} \,\mathrm{\mu s}^{-1} \ll 50 \,\mathrm{V} \,\mathrm{\mu s}^{-1}.$$
 (4.52)

The slope of the expected sine signal of the photodetector therefore has not nearly sufficient slope to be properly detected by the TIA input. The signal hence has to be preprocessed somehow to produce a steeper slope at a desired threshold value. This can be achieved by means of rectifying the sine signal to a square wave signal, which can be done using a so-called Schmitt trigger.

Schmitt trigger

A Schmitt trigger is a device leveraging an operational amplifier to trigger a sine wave like signal at a certain threshold, whereby the threshold has an associated hysteresis. This means that there are actually two thresholds; one U_t^+ for a positive and one U_t^- for a negative flank.

A Schmitt trigger can be built as inverting or non-inverting device. The advantage of the inverting Schmitt trigger is that the back-coupling does not affect the input signal U_{in} . Therefore, most often one uses the inverting setup, which is sometimes coupled with a signal inverter at the end to back-invert the outgoing signal from the Schmitt trigger. The visualization fig. 4.14 shows both types of Schmitt triggers, the non-inverting type fig. 4.14a and the inverting implementation fig. 4.14b. Consider the non-inverting Schmitt trigger first. An operational amplifier always regulates its output such that $U_1 - U_- = 0$.

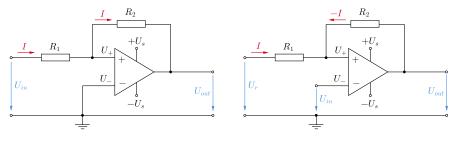

- (a) Non-inverting Schmitt trigger.
- (b) Inverting Schmitt trigger.

Figure 4.14: Schemata of non-inverting and inverting Schmitt triggers.

Furthermore, the inputs draw no current. Given these two properties of an operational amplifier, one can write down

$$\frac{U_{in}}{R_1} = \frac{U_{out}}{R_2} = I \quad \Leftrightarrow \quad U_{out} = \frac{R_2}{R_1} U_{in}. \tag{4.53}$$

The trigger voltages U_t^+ and U_t^- can be obtained by requiring that $U_{out}=\pm U_s$ for $U_{in}=U_t^\pm$. That is to say, that the output voltage goes to saturation, if either U_t^+ is surpassed or U_t^- subpassed. Hence, one obtains

$$U_s = \frac{R_2}{R_1} U_t^+, \quad -U_s = \frac{R_2}{R_1} U_t^- \tag{4.54}$$

and therefore

$$U_t^+ = \frac{R_1}{R_2} U_s, \quad U_t^- = -\frac{R_1}{R_2} U_s.$$
 (4.55)

With respect to the inverting Schmitt trigger, the equation

$$\frac{U_r - U_{in}}{R_1} = -\frac{U_{out} - U_{in}}{R_2} = I \quad \Leftrightarrow \quad U_{out} = U_{in} - \frac{R_2}{R_1}(U_r - U_{in})$$
 (4.56)

follows. Again requiring that $U_{out} = \pm U_s$ for $U_{in} = U_t^{\pm}$, the equations

$$U_s = U_t^+ - \frac{R_2}{R_1}(U_r - U_t^+), \quad -U_s = U_t^- - \frac{R_2}{R_1}(U_r - U_t^-)$$
 (4.57)

follow and therefore

$$U_t^+ = \frac{R_2 U_r + R_1 U_s}{R_2 + R_1}, \quad U_t^- = \frac{R_2 U_r - R_1 U_s}{R_2 + R_1}.$$
 (4.58)

4.6.6 Experiment 1: Providing signal to TIA and getting timestamps

In order to take the available time interval analyzer into operating mode, a first preliminary experiment was carried out. This experiment consisted of providing a square pulsed signal of frequency $\nu = 840\,\mathrm{Hz}$ generated by a frequency

generator to an input of the time interval analyzer. The time interval analyzer was programmed such that is acquired the timestamps of positive zero-crossings of the signal. The acquired timestamps can then expected to have a spacing of Δt matching the provided frequency by means of the relation $\nu = 1/\Delta t$. In

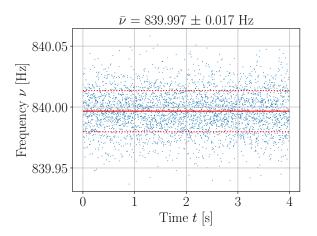


Figure 4.15: Outcome for the described experiment. The filled red line denotes the mean value, while the dotted red lines indicate the standard deviation of the acquired dataset.


fig. 4.15, the results of the described experiment can be seen.

One can see that the acquired timestamps of the time interval analyzer do lead to plausible values for the frequencies, as the mean value of frequency is $\bar{\nu} = 839.997 \pm 0.017 \, \text{Hz}$, which is in accordance with the set value of 840 Hz. In the case at hand, a relative uncertainty of $\sigma_{\bar{\nu}}/\bar{\nu} \approx 2.02 \cdot 10^{-5}$ is achieved.

4.6.7 Experiment 2: Frequency sweep experiment

This second experiment consisted of supplying a variable frequency to a time interval analyzer input, whose threshold for making a timestamp was set to a positive flank at about half the peak-to-peak voltage value of the supplied signal. The supplied frequency ν was set to a linear frequency sweep of 20 s duration in the interval $\nu \in [100\,\mathrm{Hz}, 1000\,\mathrm{Hz}]$. The time interval analyzer recorded the timestamps of positive flanks, wherefrom differences Δt_i between timestamps t_{i+1} and t_i could be calculated and hence the associated frequencies $\nu_i = 1/\Delta t_i$. The results of this experiment are given in fig. 4.16. Note, that fig. 4.16 shows the calculated velocity ν , if the provided signal to the time interval analyzer is assumed to be an interferometer signal, where the interferometer is assumed to have a wavelength of $\lambda = 1550\,\mathrm{nm}$.

The obtained results indicate, that the time interval analyzer indeed does what it should do and furthermore show, that a signal of expected frequency around 840 Hz can be accurately processed by the TIA. Thus one can con-

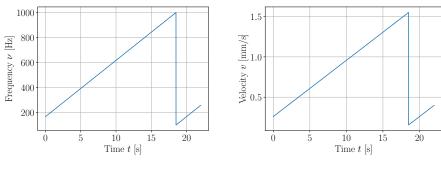

- (a) Results for the frequency ν .
- **(b)** Results for the velocity v.

Figure 4.16: Frequency sweep experiment outcome.

clude, that the TIA works well for square signal frequencies in the range $\nu \in [100\,\mathrm{Hz}, 1000\,\mathrm{Hz}]$.

4.6.8 Experiment 3: Frequency stability experiment

This third experiment consisted of supplying to the time interval analyzer input a constant frequency of 840 Hz over a time window of 300 seconds. The goal of this experiment was to determine the discrimination stability of the time interval analyzer input, assuming that the signal generated by the frequency generator has negligible noise. The obtained timestamps by the TIA were converted to frequencies; the results can be seen in fig. 4.17.

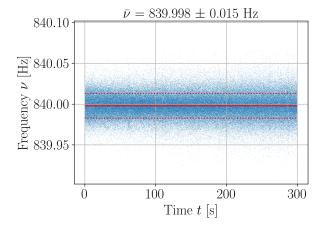


Figure 4.17: Frequency stability experiment outcome. The filled red line denotes the mean value, while the dotted red lines indicate the standard deviation of the acquired dataset.

If one denotes the standard deviation of the dataset by $\sigma_{\bar{\nu}}$, one can conclude that most of the datapoints are indeed within a $2\sigma_{bar\nu}$ range around the mean value $\bar{\nu}$, thus indicating that the noise is Gaussian in nature. One can also perceive, that the frequency does seem to fluctuate around a constant value of $\bar{\nu}$; however, a slight tendency of the noise to increase with time can be perceived. In the prevalent case, a relative uncertainty of $\sigma_{\bar{\nu}}/\bar{\nu} \approx 1.79 \cdot 10^{-5}$ is obtained.

Chapter 5

Joule balance

5.1 Introduction

The joule balance as proposed and implemented by [Xu et al., 2016] is actually a generalized concept of the Kibble balance principle. Depending on the nature of Kibble balance implementation, one can use a Kibble balance as a joule balance with comparatively little additional modifications.

Simply put, mechanical and electrical virtual power are compared only at a fixed vertical position of the balance in the Kibble balance experiment. The joule balance experiment however equates the time integrals of mechanical and electrical virtual power and hence relates electrical to mechanical virtual energy; thus the name "joule balance".

5.2 General principle

The general working principle of the joule balance is very similar to that of the Kibble balance. One can start from the fundamental general equation

Total mechanical power
$$\underbrace{F(r,t) \cdot v(t)}_{\text{Translational power}} + \underbrace{M(r,t) \cdot \omega(t)}_{\text{Electrical power}} = \underbrace{I(t)U(t)}_{\text{Electrical power}} \tag{5.1}$$

governing the Kibble balance, which was derived in section 4.2. Hereby, F(r,t) is the force acting on the balance at position r, v(t) is the velocity with which the coil is moved in the dynamic phase using a linear actuator, M(r,t) is a torque exerted on the coil due to misalignments $\omega(t)$ is the associated angular velocity to the torque, I(t) is the current injected in the static phase to balance the gravitational force of the test mass and U(t) is the induced voltage in the coil in the dynamic phase.

Now, note that $\boldsymbol{v}(t) = \frac{\mathrm{d}\boldsymbol{r}(t)}{\mathrm{d}t}$ and that $\boldsymbol{\omega}(t) = \frac{\mathrm{d}\boldsymbol{\theta}(t)}{\mathrm{d}t}$, where $\boldsymbol{r}(t)$ is the position of the center of mass of the coil and $\boldsymbol{\theta}(t)$ is the angular displacement of the coil's

fixed coordinate system to a rest coordinate system. Let furthermore t_1 be the time at which the balance is at its lower position of the dynamic phase and t_2 the time at which the balance is at its upper position. Let furthermore $\mathbf{r}(t_1) = (x(t_1), y(t_1), z(t_1))^\top \doteq (x_1, y_1, z_1)^\top \doteq \mathbf{r}_1$ and $\mathbf{r}(t_2) = (x(t_2), y(t_2), z(t_2))^\top \doteq (x_2, y_2, z_2)^\top \doteq \mathbf{r}_2$ be the associated position coordinates of the center of mass of the coil at times t_1 and t_2 ; the associated angular deviations are similarly given as $\boldsymbol{\theta}(t_1) = (\theta_x(t_1), \theta_y(t_1), \theta_z(t_1))^\top \doteq (\theta_{x_1}, \theta_{y_1}, \theta_{z_1})^\top \doteq \boldsymbol{\theta}_1$ and $\boldsymbol{\theta}(t_2) = (\theta_x(t_2), \theta_y(t_2), \theta_z(t_2))^\top \doteq (\theta_{x_2}, \theta_{y_2}, \theta_{z_2})^\top \doteq \boldsymbol{\theta}_2$.

Using these definitions, one can integrate eq. (5.1) with respect to time t from t_1 to t_2 , such that one obtains

$$\int_{\boldsymbol{r}(t_1)}^{\boldsymbol{r}(t_2)} \frac{\boldsymbol{F}(\boldsymbol{r},t)}{I(t)} \cdot \frac{\mathrm{d}\boldsymbol{r}(t)}{\mathrm{d}t} \, \mathrm{d}t + \int_{\boldsymbol{\theta}(t_1)}^{\boldsymbol{\theta}(t_2)} \frac{\boldsymbol{M}(\boldsymbol{r},t)}{I(t)} \cdot \frac{\mathrm{d}\boldsymbol{\theta}(t)}{\mathrm{d}t} \, \mathrm{d}t = \int_{t_1}^{t_2} U(t) \, \mathrm{d}t.$$
 (5.2)

Simplifying this expression leads to the equation

$$\int_{r_1}^{r_2} \frac{F(r)}{I(r)} \cdot dr + \int_{\theta_1}^{\theta_2} \frac{M(\theta)}{I(\theta)} \cdot d\theta = \int_{t_1}^{t_2} U(t) dt.$$
 (5.3)

The goal of the alignment procedure of any joule balance would be, that the second integral and all but the z-component of the first integral of the above equation vanish; and that the current I(r) does only depend on where the weighting was performed on the z-axis, thus I(r) = I(z). Also, the force measurements are performed along the z-axis, therefore one can write F(r) = F(z). Provided that the x- and y-component integrals of the force along the trajectory r(t) of the coil integrate to zero, the equation

$$\int_{z_1}^{z_2} \frac{F_z(z)}{I(z)} dz = m \int_{z_1}^{z_2} \frac{g(z)}{I(z)} dz = \int_{t_1}^{t_2} U(t) dt.$$
 (5.4)

thus results, where it was used in a second step that the vertical force $F_z(z)$ is given by the gravitational acceleration g(z) times the mass m of the weighted object.

Given that the current I(z) is measured at each position z using a digital voltmeter calibrated against a Josephson voltage standard and a resistor calibrated against a quantum Hall resistance standard, one can by similarity to eq. (4.7) write

$$I(z) = C_I(z) \frac{n_{J,I}(z) f_{J,I}(z) n_H e}{2},$$
(5.5)

where $C_I(z)$ is a calibration constant, $n_{J,I}(z)$ is an integer number of Josephson junctions used for the measurement at position z, $f_{J,I}(z)$ is the Josephson frequency used for the measurement at position z, n_H is an integer number quantifying the quantum Hall resistance and e is the elementary charge. Similarly, given that U(t) is measured at each time t(z) using a voltmeter calibrated against a Josephson voltage standard, one can formulate the equation

$$U(t) = C_U(t) \frac{h}{2e} n_{J,U}(t) f_{J,U}(t).$$
 (5.6)

Here, $C_U(t)$ is a calibration constant, $n_{J,U}(t)$ is an integer number of Josephson junctions used for the measurement at time t(z) and $f_{J,I}(t)$ is the Josephson frequency used for the measurement at time t(z). Defining the new calibration constants

$$\tilde{C}_I(z) \doteq \frac{2}{C_I(z)n_{J,I}(z)n_H}, \qquad \tilde{C}_U(t) \doteq \frac{C_U(t)n_{J,U}(t)}{2},$$
 (5.7)

and inserting these expressions along with eq. (5.5) and eq. (5.6) into eq. (5.4), one obtains the integral equation

$$m \int_{z_1}^{z_2} \tilde{C}_I(z) \frac{g(z)}{f_{J,I}(z)} dz = h \int_{t_1}^{t_2} \tilde{C}_U(t) f_{J,U}(t) dt$$
 (5.8)

relating the mass m to the Planck constant h by means of the measured quantities g(z), $\tilde{C}_I(z)$, $f_{J,I}(z)$, $\tilde{C}_U(t)$ and $f_{J,U}(t)$. The final equation in the form "mass equals Planck constant times measured quantities" can be obtained by means of rearranging; finally, the fundamental joule balance equation

$$m = h \left(\int_{z_1}^{z_2} \tilde{C}_I(z) \frac{g(z)}{f_{J,I}(z)} dz \right)^{-1} \int_{t_1}^{t_2} \tilde{C}_U(t) f_{J,U}(t) dt$$
 (5.9)

results.

Appendix A

Statistics

A.1 Random variable

A random variable is some quantity x, which can take a random value. Those random values follow a certain probability distribution, which is determined by the underlying process constituting the random variable. If the probability distribution of a random variable is known, the probability density p(x) can be written down for the continuous and discrete cases as

$$\int_{-\infty}^{\infty} p(x) dx = 1 \quad \text{and} \quad \sum_{i} p(x_i) = 1.$$
 (A.1)

A.2 Expectation value

The expectation value $E(x) \doteq \bar{x}$ of a random variable x for both the continuous and discrete case is defined as

$$E(x) = \int_{-\infty}^{\infty} x p(x) dx$$
 and $E(x) = \sum_{i} x_{i} p(x_{i}).$ (A.2)

A.3 Variance, standard deviation and covariance

The variance V(x) of a continuous or discrete random variable x can be calculated by means of

$$V(x) = \int_{-\infty}^{\infty} (x - \bar{x})^2 dx$$
 and $V(x) = \sum_{i} (x_i - \bar{x})^2 p(x_i).$ (A.3)

The standard deviation σ_x is defined as the square root of the variance, hence

$$\sigma_x = \sqrt{V(x)}. (A.4)$$

Let now x_1, \ldots, x_n be random variables with associated probability densities $p(x_j), j \in \{1, \ldots, n\}$ and joint probability densities $p(x_i, x_j)$. Let furthermore be $\bar{x}_i = E(x_i)$. The covariance $K(x_i, x_j)$ of two random variables for the continuous and discrete case is defined as

$$K(x_i, x_j) = \int_{-\infty}^{\infty} \int_{-\infty}^{\infty} (x_i - \mu_i)(x_j - \mu_j) p(x_i, x_j) \, \mathrm{d}x_i \, \mathrm{d}x_j \tag{A.5}$$

and

$$K(x_i, x_j) = \sum_{k,l} (x_{i_k} - \mu_i)(x_{j_l} - \mu_j) p(x_{i_k}, x_{j_l}).$$
 (A.6)

In the context of covariance, one usually also defines the correlation coefficient $\rho(x_i, x_j)$ between two random variables as

$$\rho(x_i, x_j) = \frac{K(x_i, x_j)}{\sqrt{V(x_i)V(x_j)}} = \frac{K(x_i, x_j)}{\sigma_{x_i}\sigma_{x_j}}.$$
(A.7)

If one has two discrete random variables a and b following a uniform distribution and samples $\{a_1, \ldots, a_n\}$ and $\{b_1, \ldots, b_n\}$ with $n \in \mathbb{N}$, one can calculate an estimate s(a, b) of the covariance K(a, b) as

$$s(a,b) = \frac{1}{n-1} \sum_{i=1}^{n} (a_i - \bar{a})(b_i - \bar{b}).$$
 (A.8)

A.4 Propagation of uncertainties

Consider some random variables x_1, \ldots, x_n and a function $f(x_1, \ldots, x_n)$ relating those variables. Let furthermore σ_{x_i} be the uncertainties (standard deviations) of the random variables x_i and let $\sigma_{x_ix_j} = \sqrt{K(x_i, x_j)}$ be the joint uncertainties of x_i and x_j . In this case, the general propagation of uncertainties $\sigma(x_i)$ on the outcome $f(x_1, \ldots, x_n)$ is quantified by the uncertainty σ_f as

$$\sigma_f = \sqrt{\sum_{i=1}^n \left(\frac{\partial f}{\partial x_i}\right)^2 \sigma_{x_i}^2 + 2 \sum_{1 \le i < j \le n} \left(\frac{\partial f}{\partial x_i}\right) \left(\frac{\partial f}{\partial x_j}\right) \sigma_{x_i x_j}^2}.$$
 (A.9)

A.4.1 Application: Uncertainty of correlated methods to determine the same quantity

Consider two random variables m_1 and m_2 representing two methods to determine the same quantity m. The variable m_1 could for example denote the Kibble balance method and m_2 the joule balance method to determine the weight of the same mass m. The uncertainties associated to both methods shall be denoted by σ_{m_1} and σ_{m_2} ; and the correlation coefficient shall be identified with $\rho(m_1, m_2)$.

The quantity m can then be calculated as a weighted average from both methods, namely by

$$m(m_1, m_2, w_1, w_2) = w_1 m_1 + w_2 m_2, w_1 + w_2 = 1,$$
 (A.10)

where w_1 and w_2 are chosen such that the uncertainty associated with m denoted as σ_m is minimized. One can write down an expression for that uncertainty by means of applying the uncertainty propagation law eq. (A.9) to eq. (A.10), which amounts to

$$\sigma_{m} = \left(\sum_{i=1}^{2} \left(\frac{\partial m}{\partial m_{i}}\right)^{2} \sigma_{m_{i}}^{2} + 2 \sum_{1 \leq i < j \leq 2} \left(\frac{\partial m}{\partial m_{i}}\right) \left(\frac{\partial m}{\partial m_{j}}\right) \sigma_{m_{i}m_{j}}^{2}\right)^{1/2} \\
= \left(w_{1}^{2} \sigma_{m_{1}}^{2} + w_{2}^{2} \sigma_{m_{2}}^{2} + 2w_{1} w_{2} \sigma_{m_{1}m_{2}}^{2}\right)^{1/2} \\
= \sqrt{w_{1}^{2} \sigma_{m_{1}}^{2} + w_{2}^{2} \sigma_{m_{2}}^{2} + 2w_{1} w_{2} \rho(m_{1}, m_{2}) \sigma_{m_{1}} \sigma_{m_{2}}} \\
= \sqrt{w_{1}^{2} \sigma_{1}^{2} + w_{2}^{2} \sigma_{2}^{2} + 2w_{1} w_{2} \rho_{12} \sigma_{1} \sigma_{2}}, \tag{A.11}$$

where in the last step straightforward short-hand notation was introduced. Choosing the weights w_1 and w_2 such that the uncertainty of m is minimized means that the function $\gamma(w_1, w_2) \doteq \sigma(m)^2 = \gamma(w_1, 1 - w_1) = \gamma(w_1)$ given by

$$\gamma(w_1) = w_1^2 \sigma_1^2 + (1 - w_1)^2 \sigma_2^2 + 2w_1(1 - w_1)\rho_{12}\sigma_1\sigma_2 \tag{A.12}$$

is minimized with respect to w_1 . This leads to the weights

$$w_1 = \frac{\sigma_2^2 - \rho_{12}\sigma_1\sigma_2}{\sigma_1^2 + \sigma_2^2 - 2\rho_{12}\sigma_1\sigma_2}, \qquad w_2 = \frac{\sigma_1^2 - \rho_{12}\sigma_1\sigma_2}{\sigma_1^2 + \sigma_2^2 + 2\rho_{12}\sigma_1\sigma_2}.$$
 (A.13)

Inserting these weights into the expression for σ_m , one obtains after tedious term rearrangements

$$\sigma_m(\rho_{12}) = \sqrt{\frac{\sigma_1^2 \sigma_2^2 (1 - \rho_{12}^2)}{\sigma_1^2 + \sigma_2^2 - 2\rho_{12}\sigma_1\sigma_2}}.$$
(A.14)

One can show by standard analysis procedures, that $\rho_m(\rho_{12})$ has a maximum at $\rho_{12} = \sigma_1/\sigma_2$, if $\sigma_1 \leq \sigma_2$ or at $\rho_{12} = \sigma_2/\sigma_1$, if $\sigma_2 \leq \sigma_1$. The corresponding values of the uncertainty σ_m on m are

$$\sigma_m(\rho_{12} = \sigma_1/\sigma_2) = \sigma_1 \quad \text{if} \quad \sigma_1 \le \sigma_2$$
 (A.15)

and

$$\sigma_m(\rho_{12} = \sigma_2/\sigma_1) = \sigma_2 \quad \text{if} \quad \sigma_2 \le \sigma_1.$$
 (A.16)

From this, one can hence conclude

$$\sigma_m(\rho_{12}) \le \min(\sigma_1, \sigma_2) \tag{A.17}$$

for all $\rho_{12} \in [-1, 1]$, namely the definition range of the correlation coefficient ρ_{12} . If one therefore has two methods m_1 and m_2 to determine the same quantity $m = w_1 m_1 + w_2 m_2$, the uncertainty on the outcome m will always be smaller than or equal as the smaller uncertainty of both methods.

An example plot of eq. (A.14) for $\sigma_{m_1} = \sigma_1 = 1$ and $\sigma_{m_2} = \sigma_2 = 2$ can be seen in fig. A.1. It can be seen from the plot, that indeed the combined uncer-

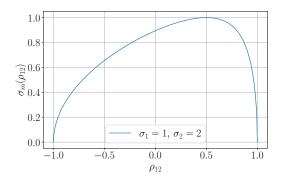


Figure A.1: Example plot of the combined uncertainty on a quantity m determined by two correlated procedures m_1 and m_2 by means of $m = w_1m_1 + w_2m_2$, where w_1 and w_2 are weights $w_1 + w_2 = 1$.

tainty is always smaller than or equal to the smaller of both input uncertainties σ_1 or σ_2 ; in the case at hand, $\sigma_m \leq \sigma_1$, because $\sigma_1 < \sigma_2$.

Since any additional methods m_2, \ldots, m_h with associated uncertainties $\sigma_1, \ldots, \sigma_h$ with $h \in \mathbb{N}$ can be incorporated in the same manner as if one has only two, namely

$$m = \sum_{i=1}^{h} w_i m_i, (A.18)$$

one can make the argument that the presented result for the combined uncertainty σ_m is always equal or less than the smallest involved uncertainty, i.e.

$$\sigma_m \le \min(\sigma_1, \dots, \sigma_h).$$
 (A.19)

Bibliography

- [Eichenberger et al., 2022] Eichenberger, A., Baumann, H., Mortara, A., Tommasini, D., Reber, D., Klingelé, E., Jeanneret, B., and Jeckelmann, B. (2022). First realisation of the kilogram with the metas kibble balance. *Metrologia*, 59(2):025008.
- [Glardon, 2024] Glardon, N. (2024). Measurement of the position and velocity of translation of a coil in a magnetic field. Ecole Polytechnique Fédérale de Lausanne EPFL.
- [Griffiths and Schroeter, 2018] Griffiths, D. J. and Schroeter, D. F. (2018). *Introduction to quantum mechanics*. Cambridge University Press, Cambridge, third edition edition.
- [Haddad et al., 2010] Haddad, D., Steiner, R., Williams, E., and Liu, R. (2010). In situ correction of abbe offset error in the watt balance experiment. In *CPEM 2010*, pages 14–15.
- [ID QUANTIQUE SA, 2018] ID QUANTIQUE SA (2018). *ID900 Time Controller User Manual*. ID QUATIQUE SA, Chemin de la Marbrerie 3, CH-1227 Carouge.
- [Jeckelmann and Jeanneret, 2001] Jeckelmann, B. and Jeanneret, B. (2001). The quantum hall effect as an electrical resistance standard. *Reports on Progress in Physics*, 64(12):1603.
- [Kajastie et al., 2009] Kajastie, H., Riski, K., and Satrapinski, A. (2009). Mass determination with the magnetic levitation method—proposal for a new design of electromechanical system. *Metrologia*, 46(3):298.
- [SmarAct GmbH, 2019] SmarAct GmbH (2019). *PicoScale user manual*. SmarAct GmbH, Schuette-Lanz-Strasse 9, D-26135 Oldenburg.
- [Tong, 2016] Tong, D. (2016). Lectures on the quantum hall effect.
- [Tsirlin, 2024] Tsirlin, A. (2024). Superconductivity I: Lecture notes. Universität Leipzig.

[Xu et al., 2016] Xu, J., Zhang, Z., Li, Z., Bai, Y., Wang, G., Li, S., Zeng, T., Li, C., Lu, Y., Han, B., Wang, N., and Zhou, K. (2016). A determination of the planck constant by the generalized joule balance method with a permanent-magnet system at nim. *Metrologia*, 53(1):86.