

# ENGINEERING STATICS

Open and Interactive



Baker and Haynes

Engineering Statics

Open and Interactive

# Engineering Statics

Open and Interactive

Daniel W. Baker  
Colorado State University

William Haynes  
Massachusetts Maritime Academy

May 10, 2021



# Acknowledgements

The book was supported by the team's tireless efforts and funding from the Colorado Department of Higher Education, the Colorado State University Digital Learning Initiative, and the Colorado State University Libraries.

DANIEL W. BAKER

*Colorado State University*

*Project lead, chapter author, and interactive developer*

DEVIN BERG

*University of Wisconsin - Stout*

*Chapter author*

ANDY GUYADER

*Cal Poly, San Luis Obispo*

*Chapter author*

WILLIAM HAYNES

*Massachusetts Maritime Academy*

*Chapter author, interactive developer, and PreTeXt lead*

ERIN HENSLEE

*Wake Forest University*

*Chapter author*

ANNA HOWARD

*North Carolina State University*

*Chapter author*

JAMES LORD

*Virginia Tech*

*Chapter author*

RANDY MONDRAGON

*Colorado State University*

*Interactive developer*

JACOB MOORE

*Penn State University – Mont Alto*

*Chapter author*

SCOTT BEVILL

*Colorado Mesa University*

*Chapter reviewer*

ERIC DAVISHAHL

*Whatcom Community College*

*Chapter reviewer*

JOEL LANNING

*University of California, Irvine*

*Chapter reviewer*

RICHARD PUGSLEY

*Tidewater Community College*

*Chapter reviewer*

# Preface

*Engineering Statics* is a free, open-source textbook appropriate for anyone who wishes to learn more about vectors, forces, moments, static equilibrium, and the properties of shapes. Specifically, it has been written to be the textbook for Engineering Mechanics: Statics, the first course in the Engineering Mechanics series offered in most university-level engineering programs.

This book's content should prepare you for subsequent classes covering Engineering Mechanics: Dynamics and Mechanics of Materials. At its core, *Engineering Statics* provides the tools to solve static equilibrium problems for rigid bodies. The additional topics of resolving internal loads in rigid bodies and computing area moments of inertia are also included as stepping stones for later courses. We have endeavored to write in an approachable style and provide many questions, examples, and interactives for you to engage with and learn from.

**Feedback.** Please contact our team with feedback and suggestions that can be provided directly to the lead author Dan Baker via email at [dan.baker@colostate.edu](mailto:dan.baker@colostate.edu). We would also appreciate knowing if you are using the book for teaching purposes. There are currently no instructor resources available beyond the textbook itself.

**Access.** The entire book is available for free as an interactive online ebook. This should work well on all screen sizes, including smartphones. A free PDF version, suitable for reading on a tablet or computer, is available for download for offline use. The PDF will be searchable and easy to navigate using embedded links. The source files for this book are available on GitHub.

**History.** This book began as the vision of a handful of the authors to create a book filled with interactives instead of static figures. Spurred into action by funding opportunities in the Fall of 2018, the team worked on the book through 2019 and launched this working draft version in Fall 2020. Over the two years of creating the book, our team grew to a coast-to-coast representation of large public universities, small private colleges, and community colleges.

**License.** *Engineering Statics* by Daniel Baker et al. is licensed under a Creative Commons Attribution-NonCommercial-ShareAlike 4.0 International License. You are

free to download, use, and print this work as you wish as long as your use is not primarily intended for or directed toward commercial advantage or monetary compensation. You can also modify the text as much as you like (for example to create a custom edition for your students), as long as you attribute the parts of the book you use to the authors. All the GeoGebra content found in the book is licensed under a Creative Commons Attribution-NonCommercial-ShareAlike 3.0 International License with more detailed information found at <https://www.geogebra.org/license> Content in chapters 1-7 and 9-10 of Engineering Statics was adapted with permission from Jacob Moore's *Mechanics Map - Open Textbook Project* <http://mechanicsmap.psu.edu/>.

**On the Cover.** A photo by [Artur Westergren](#) from Yerba Buena Island across the San Francisco bridge of the San Francisco, California skyline. Image source: <https://unsplash.com/photos/Rx92z9dU-mA>

# Contents

<b>Acknowledgements</b>	iv
<b>Preface</b>	v
<b>1 Introduction to Statics</b>	1
1.1 Newton's Laws of Motion . . . . .	3
1.2 Units . . . . .	7
1.3 Forces . . . . .	10
1.4 Problem Solving . . . . .	11
<b>2 Forces and Other Vectors</b>	14
2.1 Vectors . . . . .	14
2.2 One-Dimensional Vectors . . . . .	16
2.3 Two Dimensional Coordinate Systems . . . . .	18
2.4 Three Dimensional Coordinate Systems . . . . .	22
2.5 Unit Vectors . . . . .	26
2.6 Vector Addition . . . . .	32
2.7 Dot Products . . . . .	38
2.8 Cross Products . . . . .	43
2.9 Exercises . . . . .	48
<b>3 Equilibrium of Particles</b>	49
3.1 Equilibrium . . . . .	49
3.2 Particles . . . . .	50
3.3 Particles in One Dimension . . . . .	51
3.4 Particles in Two Dimensions . . . . .	58
3.5 Particles in Three Dimensions . . . . .	74
3.6 Exercises . . . . .	81

<b>4 Moments and Static Equivalence</b>	<b>82</b>
4.1 Direction of a Moment . . . . .	82
4.2 Moments in Two Dimensions . . . . .	83
4.3 Moments in Three Dimensions . . . . .	87
4.4 Couples . . . . .	92
4.5 Equivalent Transformations . . . . .	93
4.6 Statically Equivalent Systems . . . . .	98
4.7 Exercises . . . . .	105
<b>5 Rigid Body Equilibrium</b>	<b>106</b>
5.1 Degree of Freedom . . . . .	106
5.2 Free Body Diagrams . . . . .	107
5.3 Equations of Equilibrium . . . . .	114
5.4 2D Rigid Body Equilibrium . . . . .	115
5.5 3D Rigid Body Equilibrium . . . . .	122
5.6 Stability and Determinacy . . . . .	123
5.7 Equilibrium Examples . . . . .	125
5.8 Exercises . . . . .	126
<b>6 Equilibrium of Structures</b>	<b>127</b>
6.1 Structures . . . . .	127
6.2 Interactions between members . . . . .	129
6.3 Trusses . . . . .	131
6.4 Method of Joints . . . . .	138
6.5 Method of Sections . . . . .	140
6.6 Frames and Machines . . . . .	142
6.7 Summary . . . . .	145
6.8 Exercises . . . . .	146
<b>7 Centroids and Centers of Gravity</b>	<b>147</b>
7.1 Weighted Averages . . . . .	148
7.2 Center of Gravity . . . . .	149
7.3 Center of Mass . . . . .	152
7.4 Centroids . . . . .	153
7.5 Centroids using Composite Parts . . . . .	157
7.6 Average Value of a Function . . . . .	163
7.7 Centroids using Integration . . . . .	165
7.8 Distributed Loads . . . . .	188
7.9 Fluid Statics . . . . .	194
7.10 Exercises . . . . .	201

<b>8 Internal Loadings</b>	<b>202</b>
8.1 Internal Loads . . . . .	202
8.2 Sign Conventions . . . . .	205
8.3 Internal Loads at a Point . . . . .	206
8.4 Shear and Bending Moment Diagrams . . . . .	212
8.5 Conclusion . . . . .	226
8.6 Exercises . . . . .	226
<b>9 Friction</b>	<b>227</b>
9.1 Dry Friction . . . . .	227
9.2 Block and Wedge Friction . . . . .	233
9.3 Slipping vs. Tipping . . . . .	235
9.4 Screw Friction . . . . .	237
9.5 Flexible Belt Friction . . . . .	246
9.6 Journal Bearing Friction . . . . .	254
9.7 Disc Friction . . . . .	258
9.8 Exercises . . . . .	261
<b>10 Moments of Inertia</b>	<b>262</b>
10.1 Integral Properties of Shapes . . . . .	262
10.2 Moments of Inertia of Common Shapes . . . . .	270
10.3 Parallel Axis Theorem . . . . .	284
10.4 Moment of Inertia of Composite Shapes . . . . .	290
10.5 Polar Moment of Inertia . . . . .	300
10.6 Radius of Gyration . . . . .	301
10.7 Products of Inertia . . . . .	302
10.8 Mass Moment of Inertia . . . . .	303
10.9 Exercises . . . . .	303
<b>Appendices</b>	
<b>A Notation</b>	<b>304</b>
<b>B Useful Mathematics</b>	<b>306</b>
B.1 Distance Formula . . . . .	306
B.2 Right Triangle Trigonometry . . . . .	306
B.3 Oblique Triangle Trigonometry . . . . .	308
<b>C Properties of Steel Sections</b>	<b>310</b>
C.1 Angles . . . . .	311

C.2 Channels . . . . .	313
C.3 Standard Sections . . . . .	315
C.4 Wide Flange Sections . . . . .	318

# Chapter 1

## Introduction to Statics

Engineering Statics is the gateway into *engineering mechanics*, which is the application of Newtonian physics to design and analyze objects, systems, and structures with respect to motion, deformation, and failure. In addition to learning the subject itself, you will also develop skills in the art and practice of problem solving and mathematical modeling, skills that will benefit you throughout your engineering career.

The subject is called “statics” because it is concerned with particles and rigid bodies that are in equilibrium, and these will usually be stationary, i.e. static.

The chapters in this book are:

[Introduction to Statics](#)— an overview of statics and an introduction to units and problem solving.

[Forces and Other Vectors](#)— basic principles and mathematical operations on force and position vectors.

[Equilibrium of Particles](#)— an introduction to equilibrium and problem solving.

[Moments and Static Equivalence](#)— the rotational tendency of forces, and simplification of force systems.

[Rigid Body Equilibrium](#)— balance of forces and moments for single rigid bodies.

[Equilibrium of Structures](#)— balance of forces and moments on interconnected systems of rigid bodies.

[Centroids and Centers of Gravity](#)— an important geometric property of shapes and rigid bodies.

[Internal Loadings](#)— forces and moments within beams and other rigid bodies.


[Friction](#)— equilibrium of bodies subject to friction.

[Moments of Inertia](#)— an important property of geometric shapes used in many applications.

Your statics course may not cover all of these topics, or may move through them in a different order.

Below are two examples of the types of problems you'll learn to solve in statics. Notice that each can be described with a picture and problem statement, a free-body diagram, and equations of equilibrium.

**Equilibrium of a particle:** A 140 lb person walks across a slackline stretched between two trees. If angles  $\alpha$  and  $\theta$  are known, find the tension in each end of the slackline.

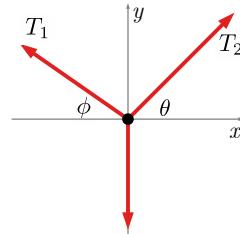


Person's point of contact to slackline:

$$\Sigma F_x = 0 \\ T_1 \cos \alpha + T_2 \cos \theta = 0$$

$$\Sigma F_y = 0 \\ T_1 \sin \alpha + T_2 \sin \theta - W = 0$$

**Equilibrium of a rigid body:** Given the interaction forces at point  $C$  on the upper arm of the excavator, find the internal axial force, shear force, and bending moment at point  $D$ .

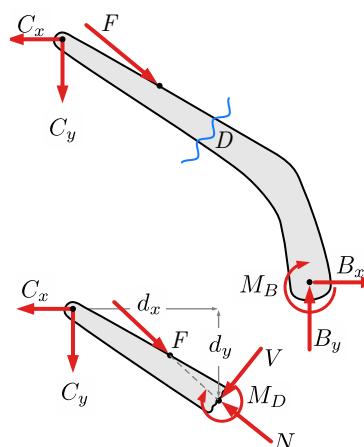


Section cut FBD:

$$\Sigma F_x = 0 \\ -C_x + F_x + V_x + N_x = 0$$

$$\Sigma F_y = 0 \\ -C_y + F_y + V_y - N_y = 0$$

$$\Sigma M_D = 0 \\ -(d_y)C_x + (d_x)C_y - M_D = 0$$

The knowledge and skills gained in Statics will be used in your other engineering courses, in particular in Dynamics, Mechanics of Solids (also called Strength or Mechanics of Materials), and in Fluid Mechanics. Statics will be a foundation of your engineering career.

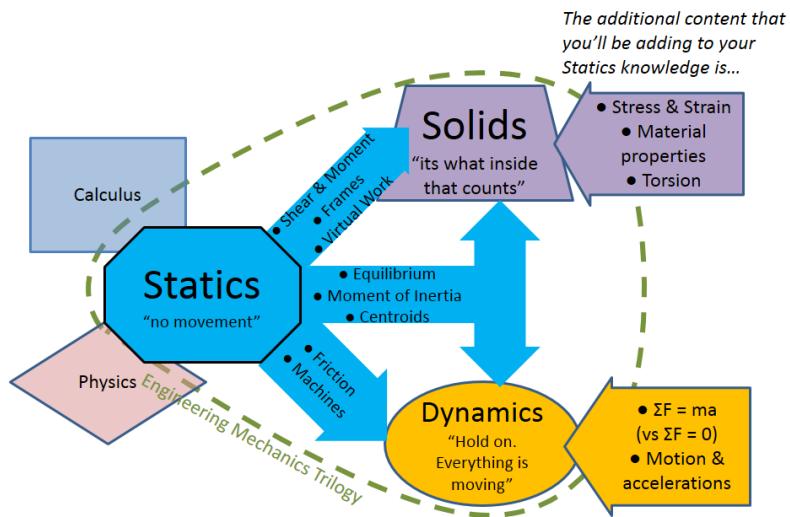

**Figure 1.0.1** Map of how Statics builds upon the prerequisites of Calculus and Physics and then informs the later courses of Mechanics of Solids and Dynamics.

## 1.1 Newton's Laws of Motion

### Key Questions

- What are the two types of motion?
- What three relationships do Newton's laws of motion define?
- What are physical examples for each of Newton's three laws of motion?

The English scientist Sir Issac Newton established the foundation of mechanics in 1687 with his three laws of motion, which describe the relation between forces, objects and motion. Motion can be separated into two types:

**Translation**— where a body changes position without changing its orientation in space, and

**Rotation**— where a body spins about an axis fixed in space, without changing its average position.

Some moving bodies are purely translating, others are purely rotating, and many are doing both. Conveniently, we can usually separate translation and rotation and analyze them individually with independent equations.

Newton's three laws and their implications with respect to translation and rotation are described below.

### 1.1.1 Newton's 1st Law


Newton's first law states that

*an object will remain at rest or in uniform motion in a straight line unless acted upon by an external force.*

This law, also sometimes called the “law of inertia,” tells us that bodies maintain their current velocity unless a net force is applied to change it. In other words, if an object is at rest it will remain at rest until an unbalanced force changes its velocity, and if an object is moving at a constant velocity, it will hold that velocity unless a force makes it change. Remember that velocity is a vector quantity which includes both speed and direction, so an unbalanced force may cause an object to speed up, slow down, or change direction.



**Figure 1.1.1** This rock is at rest with zero velocity and will remain at rest until a unbalanced force causes it to move.

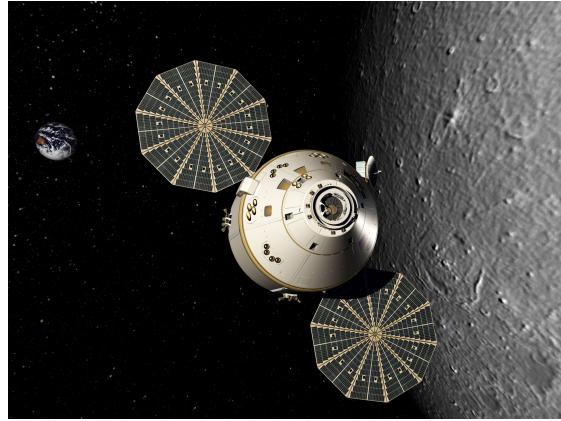

**Figure 1.1.2** In the absence of friction in space, this space capsule will maintain its current velocity.

Newton's first law also applies to angular velocities, however instead of force, the relevant quantity which causes an object to rotate is called a **torque** by physicists, but usually called a **moment** by engineers. A moment, as you will learn in [Chapter 4](#), is the rotational tendency of a force. Just as a force will cause a change in linear velocity, a moment will cause a change in angular velocity. This can be seen in things like tops, flywheels, stationary bikes, and other objects that spin on an axis when a moment is applied, but eventually stop because of the opposite moment produced by friction.



**Figure 1.1.3** A spinning top demonstrates rotatory motion.

In the absence of friction this top would spin forever, but the small frictional moment exerted at the point of contact with the table will eventually bring it to a stop.

### 1.1.2 Newton's 2nd Law

Newton's second law is usually succinctly stated with the familiar equation

$$\mathbf{F} = m\mathbf{a} \quad (1.1.1)$$

where  $\mathbf{F}$  is net force,  $m$  is mass, and  $\mathbf{a}$  is acceleration.

You will notice that the force and the acceleration are in bold face. This means these are vector quantities, having both a magnitude and a direction. Mass on the other hand is a scalar quantity, which has only a magnitude. This equation indicates that a force will cause an object to accelerate in the direction of the net force, and the magnitude of the acceleration will be proportional to the net force but inversely proportional to the mass of the object.

In this course, Statics, we are only concerned with bodies which are *not* accelerating which simplifies things considerably. When an object is not accelerating  $a = 0$ , which implies that it is either at rest or moving with a constant velocity. With this restriction [Newton's Second Law](#) for translation simplifies to

$$\sum \mathbf{F} = 0 \quad (1.1.2)$$

where  $\sum \mathbf{F}$  is used to indicate the *net* force acting on the object.

Newton's second law for rotational motions is similar

$$\mathbf{M} = I\alpha. \quad (1.1.3)$$

This equation states that a net moment  $\mathbf{M}$  acting on an object will cause an angular acceleration  $\alpha$  proportional to the net moment and inversely proportional to  $I$ , a quantity known as the **mass moment of inertia**. Mass moment of inertia for rotational acceleration is analogous to ordinary mass for linear acceleration. We will have more to say about the moment of inertia in [Chapter 10](#).

Again, we see that the net moment and angular acceleration are vectors, quantities with magnitude and direction. The mass moment of inertia, on the other hand, is

a scalar quantity and has only a magnitude. Also, since Statics deals only with objects which are *not* accelerating  $\alpha = 0$ , they will always be at rest or rotating with constant angular velocity. With this restriction Newton's second law implies that the net moment on all static objects is zero.


$$\sum \mathbf{M} = 0 \quad (1.1.4)$$

### 1.1.3 Newton's 3rd Law

Newton's Third Law states

*For every action, there is an equal and opposite reaction.*


The actions and reactions Newton is referring to are **forces**. Forces occur whenever one object interacts with another, either directly like a push or pull, or indirectly like magnetic or gravitational attraction. Any force acting on one body is always paired with another equal-and-opposite force acting on some other body.

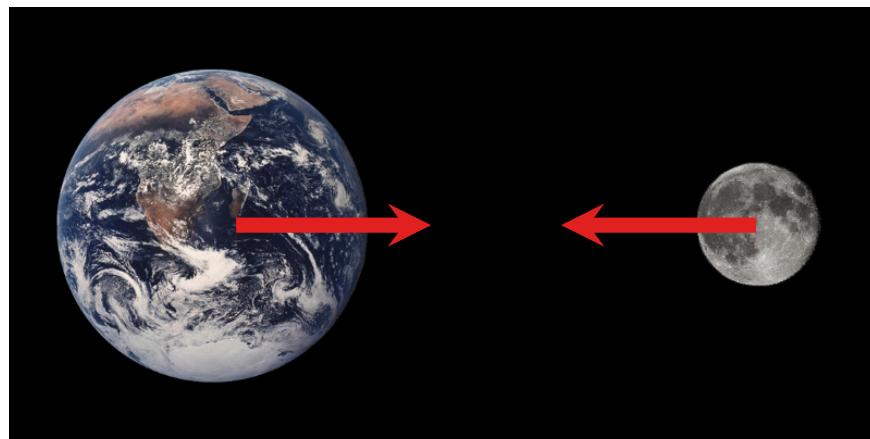

**Figure 1.1.4** The earth exerts a gravitational force on the moon, and the moon exerts an equal and opposite force on the earth.

These equal-and-opposite pairs can be confusing, particularly when there are multiple interacting bodies. To clarify, we always begin solving statics problems by drawing a **free-body diagram** — a sketch where we isolate a body or system of interest and identify the forces acting *on* it, while ignoring any forces exerted *by* it on interacting bodies.

Consider the situation in figure [Figure 1.1.5](#). Diagram (a) shows a book resting on a table supported by the floor. The weights of the book and table are placed at their centers of gravity. To solve for the forces on the legs of the table, we use the free-body diagram in (b) which treats the book and the table as a single system and replaces the floor with the forces of the floor *on* the table. In diagram (c) the book and table are treated as independent objects. By separating them, the equal-and-opposite interaction forces of the book *on* the table and the table *on* the book are exposed.

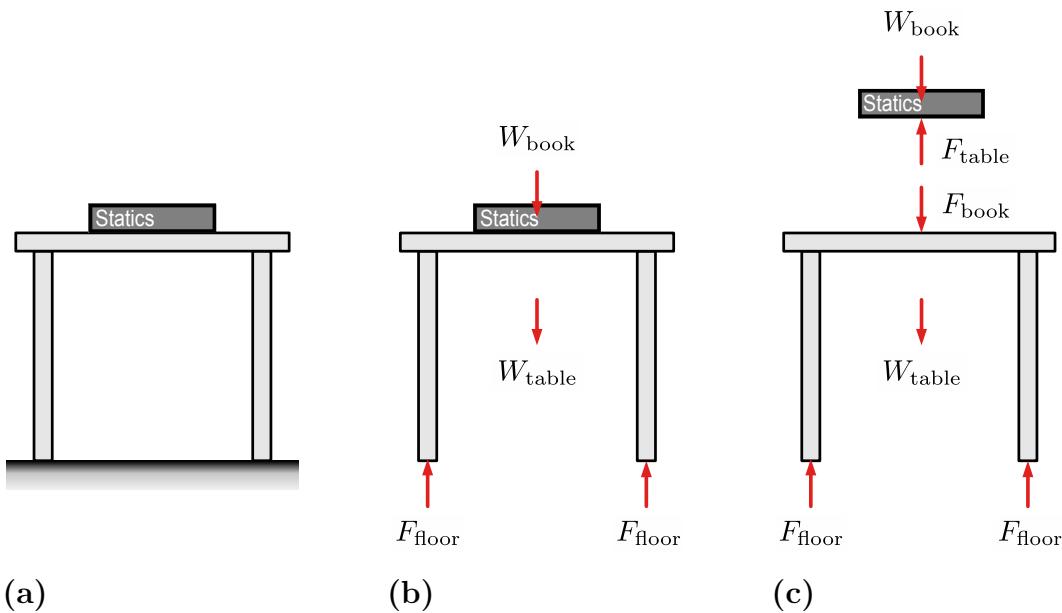

**Figure 1.1.5** Free-body diagrams are used to isolate objects and identify relevant forces and moments.

This will be discussed further in [Chapter 3](#) and [Chapter 5](#).

## 1.2 Units

### Key Questions

- What are the similarities and differences between the SI and US Customary Unity Systems?
- How do you convert a value into different units?
- When a Statics problem lists the pounds [lb] of a body, is this referring to pounds-force [lbf] or pounds-mass [lbm]?

Most quantities used in engineering consist of a numeric value and an associated unit. The value by itself is meaningless, unless, except when the quantity is unitless.

In the United States there are two primary unit systems in use. The International System of Units, SI, abbreviated from the French *Système international (d'unités)* is the modern form of the metric system and is the most widely used system of measurement. It comprises a coherent system of units of measurement built on seven base units: the second, meter, kilogram, ampere, kelvin, mole, candela. In statics, the only the first three base units are used. All other units required are derived from combinations of the base units. Prefixes to unit names are used to specify the base-10 multiple of the original unit.

The other unit system in use is the United States customary system. This system was developed from the measurement system in use in the British Empire before the US became an independent country. However, the United Kingdom's system

of measures was overhauled in 1824 to create the Imperial system, changing the definitions of some units. Therefore, while many US units are similar to their Imperial counterparts, there are significant differences between the systems. The base units in the customary system for time, distance, and mass are the second, foot, and slug.

The magnitude of a force is measured in units of mass [ $m$ ] times length [ $L$ ] divided by time [ $t$ ] squared

$$[F = mL/t^2].$$

In metric units, the most common force unit is the newton, abbreviated N, where one newton is a kilogram multiplied by a meter per second squared. This means that a one-newton force would cause a one-kilogram object to accelerate at a rate of one-meter-per-second-squared. In English units, the most common unit is the pound-force [ $\text{lb}_f$ ], or pound [lb] for short, where one pound is the force which can accelerate a mass of one slug at one foot per second squared. Many physics texts use pounds mass [ $\text{lb}_m$ ] exclusively instead of slugs, where 1 slug = 32.174 lb<sub>m</sub>. This text will use slugs as they are the standard mass unit in US customary system and so are analogous to kilograms in the SI system.

The unit of force for the two unit systems in terms of the base units are

$$1 \text{ N} = 1 \frac{[\text{kg}][\text{m}]}{[\text{s}^2]} \text{ in SI units, and}$$

$$1 \text{ lb} = 1 \frac{[\text{slug}][\text{ft}]}{[\text{s}^2]} \text{ in US customary units.}$$

When you find the weight of an object from its mass you are applying Newton's Second Law.

**Table 1.2.1 Fundamental Units**

Unit System	Force	Mass	Length	Time	$g$ (Earth)
SI	newton [N]	kilogram [kg]	meter [m]	second [s]	9.81 m/s <sup>2</sup>
US Customary	pound [lb]	slug [slug]	foot [ft]	second [s]	32.2 ft/s <sup>2</sup>
US lb <sub>m</sub>	pound-force [lb <sub>f</sub> ]	pound-mass [lb <sub>m</sub> ]	foot [ft]	second [s]	1 ft/s <sup>2</sup>

Table 1.2.1 shows the name and abbreviation of the standard units for weight, mass, length, time, and gravitational acceleration in SI and US unit systems. When in doubt always convert to these units.

Take care to consider the difference between mass and weight.

$$W = mg. \tag{1.2.1}$$

Gravitational acceleration  $g$  varies up to about 0.5% across the earth's surface due to factors including latitude and elevation, but for the purpose of this course the values in Table 1.2.1 are sufficiently accurate.

Awareness of units will help you prevent errors in your engineering calculations. You should always:

- Pay attention to the units of every quantity in the problem. Forces should have force units, distances should have distance units etc.

- Use the unit system given in the problem statement.
- Avoid unit conversions when possible. If you must, convert given values to a consistent set of units and stick with them.
- Check your work for unit consistency. You can only add or subtract quantities which have the same units. When multiplying or dividing quantities with units, multiply or divide the units as well. The units on both sides of the equals sign must be the equivalent.
- Develop a sense of the magnitudes of the units and consider your answers for reasonableness. A kilogram is about 2.2 times as massive as a pound-mass and a newton weighs about a quarter pound.
- Be sure to include units with every answer.

**Example 1.2.2**

How much does a 5 kg bag of flour weigh?

**Hint.** A value in kg is a mass. Weight is a force.

**Answer.**  $W = 49.05 \text{ N}$

**Solution.**

$$\begin{aligned} W &= mg \\ &= 5 \text{ kg}(9.81 \text{ m/s}^2) \\ &= 49.05 \text{ N} \end{aligned}$$

**Example 1.2.3**

How much does a 5 lb bag of sugar weigh?

**Hint.** When someone says “pounds” they probably mean “pounds-force.”.

Even if they mean pounds-mass,  $1 \text{ lb}_m = 1 \text{ lb}_f$  on earth.

**Answer.**  $W = 5 \text{ lb}$

**Solution.**

$$5 \text{ lb} = 5 \text{ lb}_f$$


## 1.3 Forces

### Key Questions

- What are some of the fundamental types of forces used in statics?
- Why do we often simplify distributed forces with equivalent forces?

Statics is a course about forces and we will have a lot to say about them. At its simplest, a force is a “push or pull,” but forces come from a variety of sources and occur in many different situations. As such we need a specialized vocabulary to talk about them. We are also interested in forces that cause rotation, and we have special terms to describe these too.

As an example of the types of forces you will encounter in statics consider the forces affecting a box on a rough surface being pulled by a cable. The loading on the box can be represented by four different types of force. The cable causes a point force, the normal and friction forces are reaction forces, and the weight is a body force.

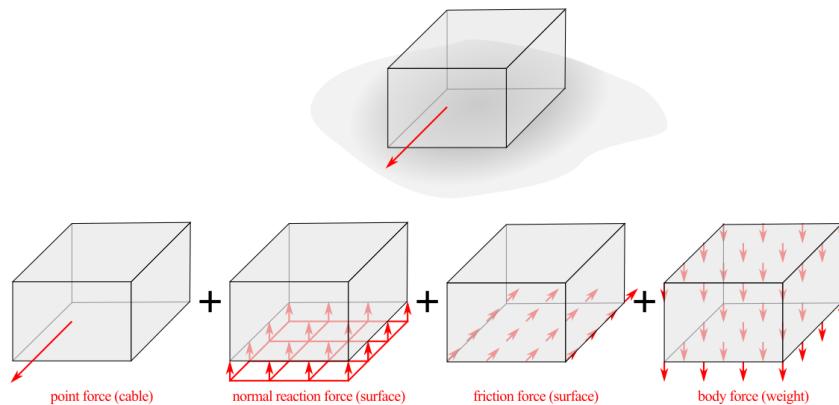

**Figure 1.3.1** Forces on a box being pulled across a rough surface.

Some of the important terms used to describe different types of forces are given below; others will be defined as needed later in the book.

A **point force** is a force that acts at a single point. Examples would be the push you give to open a door, the thrust of a rocket engine, or the pull of the chain suspending a wrecking ball. In reality, point forces are an idealization as all forces are distributed over some amount of area. Point forces are also called **concentrated forces**. Point forces are the easiest type to deal with computationally so we will learn some mathematical tools to represent other types as point forces.

**Body forces** are forces that are distributed throughout a three dimensional body. The most common body force is the weight of an object, but there are other body forces including buoyancy and forces caused by gravitational, electric, and magnetic fields. Weight and buoyancy will be the only body forces we consider in this book.

In many situations, these forces are small in comparison to the other forces acting on the object, and as such may be neglected. In practice, the decision to neglect forces must be made on the basis of sound engineering judgment; however, in this course

you should consider the weight in your analysis if the problem statement provides enough information to determine it, otherwise you may ignore it.

In the example above, the point force due to the cable, and the weight of the box are both called **loads**. The weight of an object and any forces intentionally applied to it are considered loads, while forces which hold a loaded object in equilibrium or hold parts of an object together are not.

**Reaction forces** or simply **reactions** are the forces and moments which hold or constrain an object or mechanical system in equilibrium. They are called the reactions because they react when other forces on the system change. If the load on a system increases, the reaction forces will automatically increase in response to maintain equilibrium. Reaction forces are introduced in [Chapter 3](#) and reaction moments are introduced in [Chapter 5](#).

In the example above, the force of the ground on the box is a reaction force, and is distributed over the entire contact surface. The reaction force can be divided into two parts: a **normal** component which acts perpendicular to the surface and supports the box's weight, and a **tangential** friction component which acts parallel to the ground and resists the pull of the cable.

The weight, normal component, and frictional component are all examples of **distributed forces** since they act over a volume or area and not at a single point. For computational simplicity we usually model distributed forces with equivalent point forces. This process is discussed in [Chapter 7](#).

## 1.4 Problem Solving

### Key Questions

- What are some strategies to practice selecting a tool from your problem-solving toolbox?
- What is the basic problem-solving process for equilibrium?

Statics may be the first course you take where you are required to decide on your own how to approach a problem. Unlike your previous physics courses, you can't just memorize a formula and plug-and-chug to get an answer; there are often multiple ways to solve a problem, not all of them equally easy, so before you begin you need a plan or strategy. This seems to cause a lot of students difficulty.

The ways to think about forces, moments and equilibrium, and the mathematics used to manipulate them are like tools in your toolbox. Solving statics problems requires acquiring, choosing, and using these tools. Some problems can be solved with a single tool, while others require multiple tools. Sometimes one tool is a better choice, sometimes another. You need familiarity and practice to get skilled using your tools. As your skills and understanding improve, it gets easier to recognize the most efficient way to get a job done.

Struggling statics students often say things like:

“I don’t know where to start the problem.”

“It looks so easy when you do it.”

“If I only knew which equation to apply, I could solve the problem.”

These statements indicate that the students think they know how to use their tools, but are skipping the planning step. They jump right to writing equations and solving for things without making much progress towards the answer, or they start solving the problem using a reasonable approach but abandon it in mid-stream to try something else. They get lost, confused and give up.

Choosing a strategy gets easier with experience. Unfortunately, the way you get that experience is to solve problems. It seems like a chicken and egg problem and it is, but there are ways around it. Here are some suggestions which will help you become a better problem-solver.

- Get fluent with the math skills from algebra and trigonometry.
- Do lots of problems, starting with simple ones to build your skills.
- Study worked out solutions, however don’t assume that just because you understand how someone else solved a problem that you can do it yourself without help.
- Solve problems using multiple approaches. Confirm that alternate approaches produce the same results, and try to understand why one method was easier than the other.
- Draw neat, clear, labeled diagrams.
- Familiarize yourself with the application, assumptions, and terminology of the methods covered in class and the textbook.
- When confused, identify what is confusing you and ask questions.

The majority of the topics in this book focus on equilibrium. The remaining topics are either preparing you for solving equilibrium problems or setting you up with skills that you will use in later classes. For equilibrium problems, the problem-solving steps are:

1. Read and understand the problem.
2. Identify what you are asked to find and what is given.
3. Stop, think, and decide on an strategy.
4. Draw a free-body diagram and define variables.
5. Apply the strategy to solve for unknowns and check solutions.
6. (a) Write equations of equilibrium based on the free-body diagram.

- (b) Check if the number of equations equals the number of unknowns. If it doesn't, you are missing something. You may need additional free-body diagrams or other relationships.
  - (c) Solve for unknowns.
7. Conceptually check solutions.

Using these steps does not guarantee that you will get the right solution, but it will help you be critical and conscious of your chosen strategies. This reflection will help you learn more quickly and increase the odds that you choose the right tool for the job.

# Chapter 2

## Forces and Other Vectors

Before you can solve statics problems, you will need to understand the basic physical quantities used in Statics: scalars and vectors.

**Scalars** are physical quantities which have no associated direction and can be described by a positive or negative number, or even zero. Scalar quantities follow the usual laws of algebra, and most scalar quantities have units. Mass, time, temperature, and length are all scalars.

**Vectors** represent physical quantities which have magnitude and a direction. Vectors are identified by a symbolic name which will be typeset in bold like  $\mathbf{r}$  or  $\mathbf{F}$  to indicate its vector nature. The primary vector quantity you will encounter in statics will be **force**, but **moment** and **position** are also important vectors. Computations involving vectors must always consider the directionality of each term and follow the rules of vector algebra as described in this chapter.

### 2.1 Vectors

#### Key Questions

- What differentiates a vector from a scalar?
- How do you identify the tip, tail, line of action, direction, and magnitude of any drawn vector?
- What are the standard notations for vectors and scalars in this textbook?
- What is the difference between the sense and orientation of a vector?

You can visualize a vector as an **arrow** pointing in a particular direction. The **tip** is the pointed end and the **tail** the trailing end. The tip and tail of a vector define a **line of action**. A line of action can be thought of as an invisible string along which a vector can slide. Sliding a vector along its line of action does not change its magnitude or its direction. Sliding a vector can be a handy way to simplify vector problems.

The standard notation for a vector uses either an arrow above the vector name or the vector name in bold font. This book will use a bold font for vectors. You and your instructor will use an arrow above the vector name for handwritten work.

$$\mathbf{F} = \vec{F} = \text{Vector } F$$

Force vectors acting on physical objects have a **point of application**, which is the point at which the force is applied. Other vectors, such as moment vectors, are **free vectors**, which means that the point of application is not significant. Free vectors can be moved freely to any location as long as the magnitude and direction are maintained.


The vector's **magnitude** is a *positive real number* including units which describes the 'strength' or 'intensity' of the vector. Graphically a vector's magnitude is represented by the length of its vector arrow, and symbolically by enclosing the vector's symbol with vertical bars. This is the same notation as for the absolute value of a number. The absolute value of a number and the magnitude of a vector can both be thought of as a distance from the origin, so the notation is appropriate. By convention the magnitude of a vector is also indicated, by the same letter as the vector, but in a non-bold font.

$$F = |\mathbf{F}| = \text{magnitude of vector } \mathbf{F}$$

By itself, a vector's magnitude is a scalar quantity, but it makes no sense to speak of a vector with a negative magnitude so vector magnitudes are always positive or zero. Multiplying a vector by -1 produces a vector with the same magnitude but pointing in the opposite direction.

Vector directions are described with respect to a **coordinate system**. A coordinate system is an arbitrary reference system used to establish the **origin** and the primary directions. Distances are usually measured from the origin, and directions from a primary or **reference direction**. You are probably familiar with the Cartesian coordinate system with mutually perpendicular  $x$ ,  $y$  and  $z$  axes and the origin at their intersection point.

Another way of describing a vector's direction is to specify its **orientation** and **sense**. Orientation is the angle the vector's line of action makes with a specified reference direction, and sense defines the direction the vector points along its line of action. A vector with a positive sense points towards the positive end of the reference

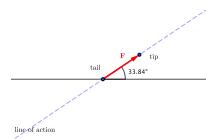

**Figure 2.1.1** Vector Definitions

axis and vice-versa. A vector representing an object's weight has a vertical reference direction and downward sense or negative sense, for example.

A third way to represent a vector is with its **unit vector** multiplied by a scalar value called its **scalar component**. A unit vector is a vector with a length of *one* (unitless) which points in a defined direction. Hence, a unit vector represents pure direction, independent of the magnitude and unit of measurement. **The scalar component is a signed number** with units which may be positive or negative, and which defines the both the magnitude and sense of the vector. They should not be confused with vector magnitudes, which are always positive.

Vectors can either be either constant or vary as a function of time, position, or something else. For example, if a force varied with time according to the function  $F(t) = 10t$  [N] where  $t$  is the time in seconds, then the force would be 0 N at  $t = 0$ , and increase by 10 N each second thereafter.

## 2.2 One-Dimensional Vectors

### Key Questions


- Given two one-dimensional vectors, how do you compute and then draw the resultant?
- What happens when you multiply a vector by a scalar?

The simplest vector calculations involve one-dimensional vectors. You can learn some important terminology here without much mathematical difficulty. In one-dimensional situations, all vectors share the same line of action, but may point towards either end. If the line of action has a positive end like a coordinate axis does, then a vector pointing towards that end will have a positive scalar component.

### 2.2.1 Vector Addition

Adding multiple vectors together finds the **resultant** vector. Resultant vectors can be thought of as the *sum* of or *combination* of two or more vectors.

To find the resultant vector **R** of two one-dimensional vectors **A** and **B** you can use the tip-to-tail technique in [Figure 2.1.1](#) below. In the tip-to-tail technique, you slide vector **B** until its tail is at the tip of **A**, and the vector from the tail of **A** to the tip of **B** is the resultant **R**. Note that the resultant **R** is the same when you add **A** onto **B**, so the order of vector addition does not matter and is considered commutative.

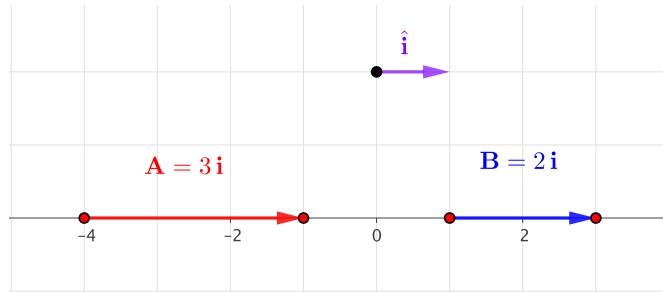

**Figure 2.2.1** One Dimensional Vector Addition

## 2.2.2 Vector Subtraction

The easiest way to handle vector subtraction is to add the negative of the vector you are subtracting to the other vector. In this way, you can still use the tip-to-tail technique after flipping the vector you are subtracting.

$$\mathbf{A} - \mathbf{B} = \mathbf{A} + (-\mathbf{B}) \quad (2.2.1)$$

Example 2.2.2 Vector subtraction.

Find  $\mathbf{A} - \mathbf{B}$  where  $\mathbf{A} = 2\mathbf{i}$  and  $\mathbf{B} = 3\mathbf{i}$ .

**Answer.**

$$\mathbf{R} = -1\mathbf{i}.$$

**Solution.** You can simulate this in Figure 2.2.1.

1. Set  $\mathbf{A}$  to a value of  $2\mathbf{i}$  and  $\mathbf{B}$  to a value of  $-3\mathbf{i}$ , the negative of its actual value.
2. Move the vectors until they are tip-to-tail. The order does not matter because vector addition is commutative.

$$\mathbf{R} = -1\mathbf{i}.$$

## 2.2.3 Vector Multiplication by a Scalar

Multiplying or dividing a vector by a scalar changes the vector's magnitude but maintains its original line of action. One common transformation is to find the negative of a vector. To find the negative of vector  $\mathbf{A}$ , we multiply it by -1; in equation form

$$-\mathbf{A} = (-1)\mathbf{A}$$

Spatially, the effect of negating a vector this way is to rotate it by  $180^\circ$ . The magnitude, line of action, and orientation stay the same, but the sense reverses so now the arrowhead points in the opposite direction.

## 2.3 Two Dimensional Coordinate Systems

### Key Questions

- Why are orthogonal coordinate systems useful?
- How do you transform between polar and Cartesian coordinates?

A coordinate system gives us a frame of reference to describe a system which we would like to analyze. In statics we normally use **orthogonal** coordinate systems, where orthogonal means “perpendicular.” In an orthogonal coordinate system the coordinate directions are perpendicular to each other and thereby independent. The intersection of the coordinate axes is called the **origin**, and measurements are made from there. Both points and vectors are described with a set of numbers called the **coordinates**. For points in space, the coordinates specify the distance you must travel in each of the coordinate directions to get from the origin to the point in question. Together, the coordinates can be thought of as specifying a **position vector**, a vector from the origin directly to the point. The position vector gives the magnitude and direction needed to travel directly from the origin to the point.

In the case of force vectors, the coordinates are the **scalar components** of the force in each of the coordinate directions. These components locate the tip of the vector and they can be interpreted as the fraction of the total force which acts in each of the coordinate directions.


Three coordinate directions are needed to map our real three-dimensional world, but in this section we will start with two, simpler, two-dimensional orthogonal systems: **rectangular** and **polar** coordinates, and the tools to convert from one to the other.

### 2.3.1 Rectangular Coordinates

The most important coordinate system is the **Cartesian** system, which was named after the French mathematician René Descartes. In two dimensions the coordinate axes are straight lines rotated  $90^\circ$  apart named  $x$ , and  $y$ .

In most cases the  $x$  axis is horizontal and points to the right, and the  $y$  axis points vertically upward, however we are free to rotate or translate this entire coordinate system if we like. It is usually mathematically advantageous to establish the origin at a convenient point to make measurements from, and to align one of the coordinate axes with a major feature of the problem.

Points are specified as an ordered pair of coordinate values separated by a *comma* and enclosed in parentheses,  $P = (x, y)$ .

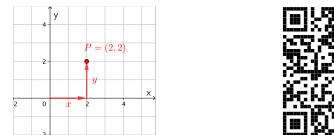

**Figure 2.3.1** Cartesian Coordinate System

Similarly, forces and other vectors will be specified with an ordered pair of scalar components enclosed by angle brackets,

$$\mathbf{F} = \langle F_x, F_y \rangle.$$


### 2.3.2 Polar Coordinates

The **polar** coordinate system is an alternate orthogonal system which is useful in some situations. In this system a point is specified by giving its distance from the origin  $r$ , and  $\theta$ , an angle measured counterclockwise from a reference direction – usually the positive  $x$  axis.

In this text, points in polar coordinates will be specified as an ordered pair of values separated by a *semicolon* and enclosed in parentheses

$$P = (r ; \theta).$$

Angles can be measured in either radians or degrees, so be sure to include a degree sign on angle  $\theta$  if that is what you intend.

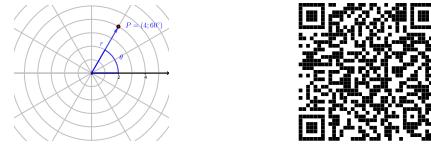

**Figure 2.3.2** Polar Coordinate System

### 2.3.3 Coordinate Transformation

You should be able to translate points from one coordinate system to the other whenever necessary. The relation between  $(x, y)$  coordinates and  $(r; \theta)$  coordinates are illustrated in the diagram and right triangle trigonometry is all that is needed to convert from one representation to the other.



**Figure 2.3.3** Coordinate Transformation

**Rectangular To Polar for points (Given:  $x$  and,  $y$ ).**

$$r = \sqrt{x^2 + y^2} \quad (2.3.1)$$

$$\theta = \tan^{-1} \left( \frac{y}{x} \right) \quad (2.3.2)$$

$$P = (r ; \theta) \quad (2.3.3)$$

**Note 2.3.4** Take care when using the inverse tangent function on your calculator. Calculator angles are always in the first or fourth quadrant, and you may need to add or subtract  $180^\circ$  to the calculator angle to locate the point in the correct quadrant.

**Polar to Rectangular for points (Given:  $r$  and,  $\theta$ ).**

$$x = r \cos \theta \quad (2.3.4)$$

$$y = r \sin \theta \quad (2.3.5)$$

$$P = (x, y) \quad (2.3.6)$$

**Rectangular To Polar for forces (Given: rectangular components).** If you are working with forces rather than distances, the process is exactly the same but triangle is labeled differently. The hypotenuse of the triangle is the magnitude of the vector, and sides of the right triangle are the scalar components of the force, so for vector  $\mathbf{A}$

$$A = \sqrt{A_x^2 + A_y^2} \quad (2.3.7)$$

$$\theta = \tan^{-1} \left( \frac{A_y}{A_x} \right) \quad (2.3.8)$$

$$\mathbf{A} = (A ; \theta) \quad (2.3.9)$$

**Polar to Rectangular for forces (Given: magnitude and direction).**


$$A_x = A \cos \theta \quad (2.3.10)$$

$$A_y = A \sin \theta \quad (2.3.11)$$

$$\mathbf{A} = \langle A_x, A_y \rangle = A \langle \cos \theta, \sin \theta \rangle \quad (2.3.12)$$

### Example 2.3.5 Rectangular to Polar Representation.

Express point  $P = (-8.66, 5)$  in polar coordinates.

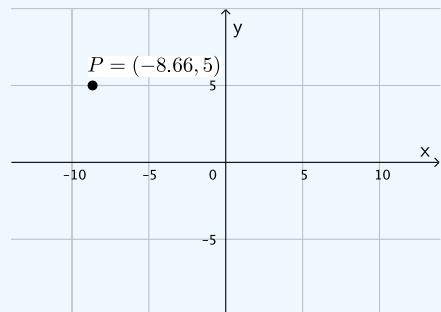

**Answer.**  $P = (10 ; 150^\circ)$

**Solution 1.** Given:  $x = -8.66$ ,  $y = 5$

$$\begin{aligned} r &= \sqrt{x^2 + y^2} & \theta &= \tan^{-1} \left( \frac{y}{x} \right) \\ &= \sqrt{(-8.66)^2 + (5)^2} & &= \tan^{-1} \left( \frac{5}{-8.66} \right) \\ &= 10 & &= \tan^{-1}(-0.577) \\ & & &= -30^\circ \end{aligned}$$

You must be careful here and use some common sense. The  $-30^\circ$  angle your calculator gives you in this problem is incorrect because point  $P$  is in the second quadrant, but your calculator doesn't know this. It can't tell whether the argument of  $\tan^{-1}(-0.577)$  is negative because the  $x$  was negative or because the  $y$  was negative, so it must make an assumption and in this case it is wrong.

The arctan function on calculators will always return values in the first and fourth quadrant. If, by inspection of the  $x$  and the  $y$  coordinates, you see that the point is in the second or third quadrant, you must add or subtract  $180^\circ$  to the calculator's answer.


So in this problem,  $\theta$  is really  $-30^\circ + 180^\circ$ . After making this adjustment, the location of  $P$  in polar coordinates is:

$$P = (10; 150^\circ)$$

**Solution 2.** Most scientific calculators include handy polar-to-rectangular and rectangular-to-polar functions which can save you time and help you avoid errors. Perhaps you should [google your calculator model](#) to find out if yours does and learn how to use it?

#### Example 2.3.6 Polar to Rectangular Representation.

Express 200 N force  $\mathbf{F}$  as a pair of scalar components.

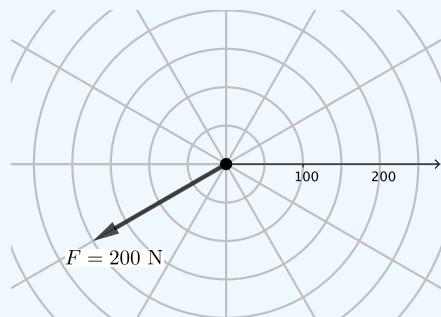

**Answer.**

$$\mathbf{F} = \langle -173.2 \text{ N}, -100 \text{ N} \rangle$$

**Solution 1.** Given: The magnitude of force  $\mathbf{F} = 200 \text{ N}$ , and from the diagram we see that the direction of  $\mathbf{F}$  is  $30^\circ$  counterclockwise from the negative  $x$  axis.

Letting  $\theta = 30^\circ$  we can find the components of  $\mathbf{F}$  with right triangle trigonometry.

$$\begin{aligned} F_x &= F \cos \theta \\ &= 200 \text{ N} \cos 30^\circ \\ &= 173.2 \text{ N} \end{aligned}$$

$$\begin{aligned} F_y &= F \sin \theta \\ &= 200 \text{ N} \sin 30^\circ \\ &= 100 \text{ N} \end{aligned}$$

Since the force points down and to the left into the third quadrant, these values are actually negative, and the signs must be applied manually.

After making this adjustment, the the location of  $\mathbf{F}$  expressed in rectangular coordinates is:

$$\mathbf{F} = \langle -173.2 \text{ N}, -100 \text{ N} \rangle$$

**Solution 2.** If you would prefer not to apply the negative signs by hand, you can convert the  $30^\circ$  to an angle measured from the positive  $x$  axis and let your calculator take care of the signs. You may use either  $\theta = 30^\circ \pm 180^\circ$ .

For  $\theta = -150^\circ$

$$\begin{aligned} F_x &= F \cos \theta & F_y &= F \sin \theta \\ &= 200 \text{ N} \cos(-150^\circ) & &= 200 \text{ N} \sin(-150^\circ) \\ &= -173.2 \text{ N} & &= -100 \text{ N} \end{aligned}$$

$$\mathbf{F} = \langle -173.2 \text{ N}, -100 \text{ N} \rangle$$

Although this approach is mathematically correct, experience has shown that it can lead to errors and we recommend that when you work with right triangles, use angles between zero and  $90^\circ$ , and apply signs manually as required by the physical situation.

## 2.4 Three Dimensional Coordinate Systems

### Key Questions

- What is a right-hand Cartesian coordinate system?
- What are direction cosine angles and why are they always less than  $180^\circ$ ?
- How are spherical coordinates different than cylindrical coordinates?

In this section we will discuss four methods to specify points and vectors in three-dimensional space.

The most commonly use method is an extension of two-dimensional **rectangular coordinates** to three-dimensions. Alternately, points and vectors in three dimensions can be specified in terms of **direction cosines**, or using **spherical** or cylindrical coordinate systems. These will be discussed in the following sections.

You will often need to convert from one representation to another. Good visualization skills are helpful here.

### 2.4.1 Rectangular Coordinates

We can extend the two-dimensional Cartesian coordinate system into three dimensions easily by adding a  $z$  axis perpendicular to the two-dimensional cartesian plane. The notation is similar the notation used for two-dimensional vectors. Points and forces are expressed as ordered triples of rectangular coordinates following the same notation used previously.

$$P = (x, y, z)$$

$$\mathbf{F} = \langle F_x, F_y, F_z \rangle$$

For nearly all three-dimensional problems, you will need the rectangular  $x$ ,  $y$ , and  $z$  locations of points in space and components of vectors before proceeding with the computations. If you are given the components upfront, then you are set to move forward, but otherwise you will need to transform one coordinate system into rectangular coordinates.




**Figure 2.4.1** Three-Dimensional Rectangular Coordinates

**Thinking Deeper 2.4.2 Right Handed Coordinate Systems.** Does it matter which way the axes are oriented? Is it ok to make the  $x$  axis point left or the  $y$  axis point down?

In one sense, it doesn't matter at all. The positive directions of the coordinate axes are arbitrary. On the other hand, it's convenient for everyone if we can agree on a standard orientation. In mathematics and engineering the default is a **right-handed coordinate system**, where the coordinate axes are oriented according to the **right hand rule** shown in the figure.

To apply the right hand rule, orient your thumb and first two fingers at right angles to each other and align them with three coordinate axes. Starting with your thumb, name the axes in alphabetical order  $x-y-z$ .

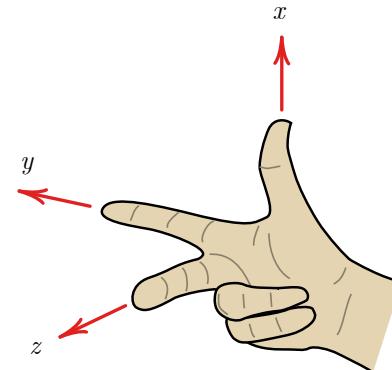

**Figure 2.4.3** Right-handed coordinate system.

These are the labels for the three axes and your fingers point in their positive directions. If it is more convenient, you may name your thumb  $y$  or  $z$ , as long as you name the other two fingers in the same sequence  $y-z-x$  or  $z-x-y$ .

### 2.4.2 Direction Cosine Angles

The direction of a vector in two-dimensional systems could be expressed clearly with a single angle measured from a reference axis, but adding an additional dimension means that one angle is no longer enough.

One way to define the direction of a three-dimensional vector is by using **direction cosine angles**, also commonly known as **coordinate direction angles**. The direction cosine angles are the angles between the positive  $x$ ,  $y$ , and  $z$  axes to a given vector and are traditionally named  $\theta_x$ ,  $\theta_y$ , and  $\theta_z$ . Three dimensional vectors, components, and angle are often difficult to visualize because they do not commonly lie in the Cartesian planes.



**Figure 2.4.4** Direction Cosine Angles

We can relate the components of a vector to its direction cosine angles using the following equations.

$$\cos \theta_x = \frac{A_x}{|A|} \quad \cos \theta_y = \frac{A_y}{|A|} \quad \cos \theta_z = \frac{A_z}{|A|} \quad (2.4.1)$$

Note the component in the numerator of each direction cosine equation is positive or negative as defined by the coordinate system, and the vector magnitude in the denominator is always positive. From these equations, we can conclude that:

- Direction cosines are signed value between -1 and 1.
- Direction cosine angles must always be between  $0^\circ$  and  $180^\circ$  or

$$0^\circ \leq \theta_n \leq 180^\circ.$$

- Any direction cosine angle greater than  $90^\circ$  indicates a negative component along that respective axis. Spatially this is because all direction cosine angles are measured from the positive side of each axis. Mathematically this is because the cosine of any angle less than  $90^\circ$  is numerically negative.

### 2.4.3 Spherical Coordinates

In spherical coordinates, points are specified with these three coordinates

- $r$ , the distance from the origin to the tip of the vector,
- $\theta$ , the angle, measured counterclockwise from the positive  $x$  axis to the projection of the vector onto the  $xy$  plane, and

- $\phi$ , the polar angle from the  $z$  axis to the vector.



**Figure 2.4.5** Spherical Coordinate System

**Question 2.4.6** What are the differences between polar coordinates and terrestrial latitude/longitude locations?

**Answer.** In terrestrial measurements

- Coordinate  $r$  is not needed since all points are on the surface of the globe.
- Latitude is measured  $0^\circ$  to  $180^\circ$  East or West of the prime meridian, rather than  $0^\circ$  to  $360^\circ$  counterclockwise from the  $x$  axis.
- Longitude is measured  $0^\circ$  to  $180^\circ$  North or South of the equator, whereas polar angle  $\phi$  is  $0^\circ$  to  $180^\circ$  measured from the “North Pole”.

□

When vectors are specified using cylindrical coordinates the magnitude of the vector is used instead of distance  $r$  from the origin to the point.

When the two given spherical angles are defined the manner shown here, the rectangular components of the vector  $\mathbf{A} = (A ; \theta ; \phi)$  are found thus:

$$A' = A \sin \phi \quad (2.4.2)$$

$$A_z = A \cos \phi \quad (2.4.3)$$

$$A_x = A' \cos \theta = A \sin \phi \cos \theta \quad (2.4.4)$$

$$A_y = A' \sin \theta = A \sin \phi \sin \theta \quad (2.4.5)$$


Reflect on the equations above. Can you think through the process of how they were derived? The generalized steps are as follows. First, draw an accurate sketch of the given information and define the right triangles related to both  $\theta$  and  $\phi$ . Then use trig identities on the right triangle involving the vector, the  $z$  axis and angle  $\phi$  to find  $A_z$ , and  $A'$ , the projection of  $\mathbf{A}$  onto the  $xy$  plane. Finally, use trig identities on the right triangle involving vector  $\mathbf{A}'$  and  $\theta$  to find the remaining components of  $\mathbf{A}$ .

## 2.4.4 Cylindrical Coordinates

Cylindrical coordinate systems are seldom used in statics, however they are useful in certain geometries. Cylindrical coordinates extend two-dimensional polar coordinates by adding a  $z$  coordinate indicating the distance above or below the  $xy$  plane.

Points are specified with these three cylindrical coordinates.

- $r$ , the distance from the origin to the projection of the tip of the vector onto the  $xy$  plane,
- $\theta$ , the angle, measured counterclockwise from the positive  $x$  axis to the projection of the vector onto the  $xy$  plane
- $z$ , the vertical height of the vector tip.

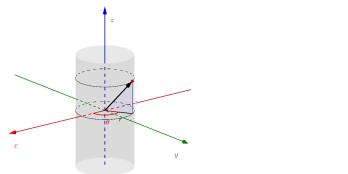

**Figure 2.4.7** Cylindrical Coordinate System

Unfortunately, not all problems give the angles  $\theta$  and  $\phi$  as defined here; so you will need to find them from the given angles in other situations.

You can use the interactive diagram in this section to practice visualizing and finding the components of a vector from a given magnitude and polar angles  $\theta$  and  $\phi$ . You should be able to find the  $x$ ,  $y$ , and  $z$  coordinates given direction angles or spherical coordinates, and vice-versa.

## 2.5 Unit Vectors

### Key Questions

- Why are unit vectors useful?
- What are the unit vectors along the Cartesian  $x$ ,  $y$ , and  $z$  axes?
- How do you find the force vector components of known force magnitude along a geometric line?
- How can you find unit vector components from direction cosine angles?

A unit vector is a vector with a magnitude of one and no units. As such, a unit vector represents a pure direction. By convention a unit vector is indicated by a *hat* over a vector symbol. This may sound like a new concept, but it's a simple one, directly related to the unit circle, the Pythagorean Theorem, and the definitions of sine and cosine.

#### 2.5.1 Cartesian Unit Vectors

A unit vector can point in any direction, but because they occur so frequently the unit vectors in each of the three Cartesian coordinate directions are given their own symbols, which are:

- $\mathbf{i}$ , for the unit vector pointing in the  $x$  direction,

- $\mathbf{j}$ , for the unit vector pointing in the  $y$  direction, and
- $\mathbf{k}$ , for the unit vector pointing in the  $z$  direction..

This interactive shows a unit vector  $\hat{\mathbf{F}}$  as well as the standard unit vectors  $\mathbf{i}$  and  $\mathbf{j}$ . The  $x$  and  $y$  components of a point on the unit circle are also the scalar components of  $\hat{\mathbf{F}}$ , so



$$\begin{aligned}F_x &= \cos \theta \\F_y &= \sin \theta \\\hat{\mathbf{F}} &= \langle \cos \theta, \sin \theta \rangle \\&= \cos \theta \mathbf{i} + \sin \theta \mathbf{j}.\end{aligned}$$

Applying the Pythagorean Theorem to the triangle gives the equation for a unit circle

$$\cos^2 \theta + \sin^2 \theta = 1^2$$

No matter what angle a unit vector makes with the  $x$  axis,  $\cos \theta$  and  $\sin \theta$  are its scalar components. This relations assumes that the angle  $\theta$  is measured from the  $x$  axis, if it is measured from the  $y$  axis the sine and cosine functions reverse, with  $\sin \theta$  defining the horizontal component and the  $\cos \theta$  defining the vertical component.

### 2.5.2 Relation between Vectors and Unit Vectors

When a unit vector is multiplied by a scalar value it is *scaled* by that amount, so for instance when a unit vector pointing to the right is multiplied by 100 N the result is a 100 N vector pointing to the right; when a unit vector pointing up is multiplied by -50 N the result is a 50 N vector pointing down.

In general,

$$\mathbf{F} = F \hat{\mathbf{F}}, \quad (2.5.1)$$

where  $F$  is the magnitude of  $\mathbf{F}$ , and  $\hat{\mathbf{F}}$  is the unit vector pointing in the direction of  $\mathbf{F}$ .

Solving equation (2.5.1) for  $\hat{\mathbf{F}}$  gives the approach to find the unit vector of known vector  $\mathbf{F}$ .



The process is straightforward—divide the vector by its magnitude. For arbitrary vector  $\mathbf{F}$

$$\hat{\mathbf{F}} = \frac{\mathbf{F}}{|\mathbf{F}|}. \quad (2.5.2)$$

To emphasize that unit vectors are pure direction, track what happens when a vector is divided by its magnitude

$$\text{unit vector} = \frac{\mathbf{F}}{|\mathbf{F}|} = \frac{[\text{vector}]}{[\text{magnitude}]} = \frac{[\text{magnitude}] \cdot [\text{direction}]}{[\text{magnitude}]} = [\text{direction}].$$

This interactive shows vector  $\mathbf{F}$ , its associated unit vector  $\hat{\mathbf{F}}$ , and expressions for  $\mathbf{F}$  in terms of its unit vector  $\hat{\mathbf{F}}$ .

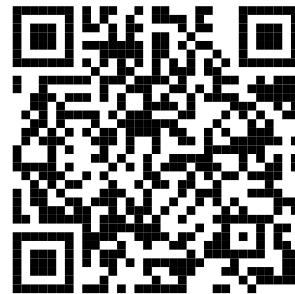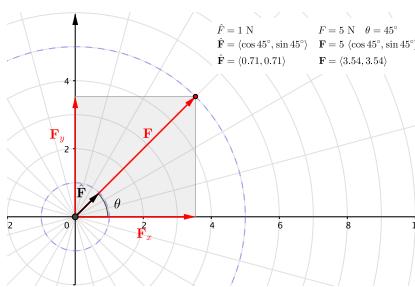

**Figure 2.5.1** Unit Vectors

Example 2.5.2 Find unit vector of a force.

Find the unit vector corresponding to a 100 N force at  $60^\circ$  from the  $x$ -axis.

**Answer.**

$$\hat{\mathbf{F}} = (1 ; 60^\circ) = \langle \cos 60^\circ, \sin 60^\circ \rangle$$

**Solution.** In polar coordinates, the unit vector is a vector of magnitude 1, pointing in the same direction as the force, so, by inspection

$$\mathbf{F} = (100 \text{ N} ; 60^\circ)$$

$$\hat{\mathbf{F}} = (1 ; 60^\circ)$$

In rectangular coordinates, first express  $\mathbf{F}$  in terms of its  $x$  and  $y$  components.

$$\begin{aligned} F_x &= F \cos 60^\circ, F_y &= F \sin 60^\circ \\ \mathbf{F} &= \langle F \cos 60^\circ, F \sin 60^\circ \rangle \end{aligned}$$

Solve equation (2.5.2) for  $\hat{\mathbf{F}}$

$$\begin{aligned} \hat{\mathbf{F}} &= \frac{\mathbf{F}}{F} \\ &= \frac{\langle F \cos 60^\circ, F \sin 60^\circ \rangle}{F} \\ &= \langle \cos 60^\circ, \sin 60^\circ \rangle \end{aligned}$$

### 2.5.3 Force Vectors from Position Vectors

Unit vectors are generally the best approach when working with forces and distances in three dimensions.

For example, when the location of two points on the line of action of a force are known, the unit vector of the line of action can be found and used to determine the

components of a force acting along that line. This can be accomplished as follows, where  $A$  and  $B$  are points on the line of action.

1. Use the problem geometry to find  $\mathbf{AB}$ , the displacement vector from point  $A$  to point  $B$ , then either subtract the coordinates of the starting point  $A$  from the coordinates of the destination point  $B$  to find the vector  $\mathbf{AB}$

$$\begin{aligned} A &= (A_x, A_y, A_z) \\ B &= (B_x, B_y, B_z) \\ \mathbf{AB} &= (B_x - A_x)\mathbf{i} + (B_y - A_y)\mathbf{j} + (B_z - A_z)\mathbf{k}, \text{ or} \end{aligned}$$

or, write the displacements directly by noting the distance traveled in each coordinate direction when moving from  $A$  to  $B$ . This is really the same as the previous method.

$$\begin{aligned} \Delta x &= AB_x = B_x - A_x \\ \Delta y &= AB_y = B_y - A_y \\ \Delta z &= AB_z = B_z - A_z \\ \mathbf{AB} &= \Delta x \mathbf{i} + \Delta y \mathbf{j} + \Delta z \mathbf{k} \end{aligned}$$

2. Find the direct distance between point  $A$  and point  $B$  using the Pythagorean Theorem. This distance is also the magnitude of  $\mathbf{AB}$  or  $|\mathbf{AB}|$

$$|\mathbf{AB}| = \sqrt{(AB_x)^2 + (AB_y)^2 + (AB_z)^2}.$$


3. Find  $\widehat{\mathbf{AB}}$ , the unit vector from  $A$  to  $B$ , by dividing vector  $\mathbf{AB}$  by its magnitude. This is a unitless vector with a magnitude of 1 which points from  $A$  to  $B$ .

$$\widehat{\mathbf{AB}} = \left\langle \frac{A_x}{|A|}, \frac{A_y}{|A|}, \frac{A_z}{|A|} \right\rangle$$

4. Multiply the magnitude of the force by the unit vector  $\widehat{\mathbf{AB}}$  to get force  $\mathbf{F}_{AB}$ .

$$\begin{aligned} \mathbf{F}_{AB} &= F_{AB} \widehat{\mathbf{AB}} \\ &= F_{AB} \left\langle \frac{A_x}{|A|}, \frac{A_y}{|A|}, \frac{A_z}{|A|} \right\rangle \end{aligned}$$

The interactive below can be used to visualize the displacement vector and its unit vector, and practice this procedure.

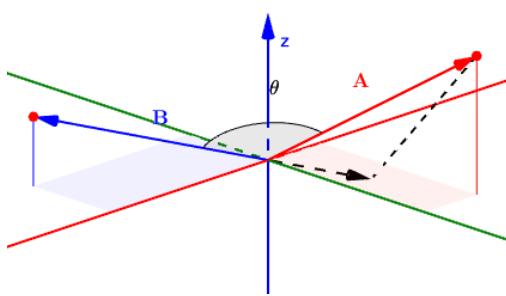**Figure 2.5.3** Unit Vectors in Space**Example 2.5.4** Component in a Specified Direction.

Determine the components of a 5 kN force  $\mathbf{F}$  acting at point  $A$ , in the direction of a line from  $A$  to  $B$ . Given:  $A = (2, 3, -2.1)$  m and  $B = (-2.5, 1.5, 2.2)$  m

We will take the solution one step at a time.

- (a) Draw a good diagram.

**Hint.** The interactive in [Figure 2.5.3](#) may be useful for this problem.

- (b) Find the displacement vector from  $A$  to  $B$ .

**Answer.**

$$\mathbf{AB} = \langle -4.5, -1.5, 4.3 \rangle \text{ m}$$

**Solution.**

$$\begin{aligned}\mathbf{AB} &= (B_x - A_x)\mathbf{i} + (B_y - A_y)\mathbf{j} + (B_z - A_z)\mathbf{k} \\ &= [(-2.5 - 2)\mathbf{i} + (1.5 - 3)\mathbf{j} + (2.2 - (-2.1))\mathbf{k}] \text{ m} \\ &= (-4.5\mathbf{i} - 1.5\mathbf{j} + 4.3\mathbf{k}) \text{ m} \\ &= \langle -4.5, -1.5, 4.3 \rangle \text{ m}\end{aligned}$$

- (c) Find the magnitude of the displacement vector.

**Answer.**

$$|\mathbf{AB}| = 6.402 \text{ m}$$

**Solution.**

$$\begin{aligned}|\mathbf{AB}| &= \sqrt{(\Delta_x)^2 + (\Delta_y)^2 + (\Delta_z)^2} \\ &= \sqrt{(-4.5)^2 + (-1.5)^2 + 4.3^2} \text{ m}^2 \\ &= \sqrt{40.99} \text{ m}^2 \\ &= 6.402 \text{ m}\end{aligned}$$

(d) Find the unit vector pointing from  $A$  to  $B$ .

**Answer.**

$$\widehat{\mathbf{AB}} = \langle -0.7, -0.23, 0.67 \rangle$$

**Solution.**

$$\begin{aligned}\widehat{\mathbf{AB}} &= \left\langle \frac{\Delta_x}{|\mathbf{AB}|}, \frac{\Delta_y}{|\mathbf{AB}|}, \frac{\Delta_z}{|\mathbf{AB}|} \right\rangle \\ &= \left\langle \frac{-4.5}{6.402}, \frac{-1.5}{6.402}, \frac{4.3}{6.402} \right\rangle \\ \widehat{\mathbf{AB}} &= \langle -0.7, -0.23, 0.67 \rangle\end{aligned}$$

(e) Find the force vector.

**Answer.**

$$\mathbf{F}_{AB} = \langle -3.51, -1.17, 3.36 \rangle \text{ kN}$$

**Solution.**

$$\begin{aligned}\mathbf{F}_{AB} &= F_{AB} \widehat{\mathbf{AB}} \\ &= 5 \text{ kN} \langle -0.7, -0.23, 0.67 \rangle \\ &= \langle -3.51, -1.17, 3.36 \rangle \text{ kN}\end{aligned}$$

Given the properties of unit vectors, there are some conceptual checks you can make after computing unit vector components which can prevent subsequent errors.

- The signs of unit vector components need to match the signs of the original position vector. A unit vector has the same line of action and sense as the position vector but is scaled down to one unit in magnitude.
- Components of a unit vector must be between -1 and 1. If the magnitude of a unit vector is one, then it is impossible for it to have rectangular components larger than one.

#### 2.5.4 Unit Vectors and Direction Cosines

If you look closely at the right side of equation (2.4.1), you will see that each equation consists of a component divided by the total vector magnitude. These are the same equations just used to find unit vectors. Thus, the cosine of each direction cosine angle collectively also computes the components of the unit vector; hence we can write an equation for  $\hat{\mathbf{A}}$ , i.e., the unit vector along  $\mathbf{A}$ .

$$\hat{\mathbf{A}} = \cos \theta_x \mathbf{i} + \cos \theta_y \mathbf{j} + \cos \theta_z \mathbf{k}$$

Combining the Pythagorean Theorem with our knowledge of unit vectors and direction cosine angles gives this result: if you know two of the three direction cosine angles you can manipulate the following equation to find the third.

$$\cos^2 \theta_x + \cos^2 \theta_y + \cos^2 \theta_z = 1 \quad (2.5.3)$$

## 2.6 Vector Addition

### Key Questions

- How do you set up vectors for graphical addition using the Triangle Rule?
- Does it matter which vector you start with when using the Triangle Rule?
- Why can you separate a two-dimensional vector equation into two independent equations to solve for up to two unknowns?
- If you and another student define vectors using different direction coordinate systems, will you end up with the same resultant vector?
- What is the preferred technique to add vectors in three-dimensional systems?

In this section we will look at several different methods of vector addition. Vectors being added together are called the **components**, and the sum of the components is called the **resultant vector**.

These different methods are tools for your statics toolbox. They give you multiple different ways to think about vector addition and to approach a problem. Your goal should be to learn to use them all and to identify which approach will be the easiest to use in a given situation.

### 2.6.1 Triangle Rule of Vector Addition

All methods of vector addition are ultimately based on the tip-to-tail method discussed in a one-dimensional context in [Subsection 2.2.1](#). There are two ways to draw or visualize adding vectors in two or three dimensions, the **Triangle Rule** and **Parallelogram Rule**. Both are equivalent.


- *Triangle Rule.*

Place the tail of one vector at the tip of the other vector, then draw the resultant from the first vector's tail to the final vector's tip.

- *Parallelogram Rule.*

Place both vectors tails at the origin, then complete a parallelogram with lines parallel to each vector through the tip of the other. The resultant is equal to the diagonal from the tails to the opposite corner.

The interactive below shows two forces **A** and **B** pulling on a particle at the origin, and the appropriate diagram for the triangle or parallelogram rule. Both approaches produce the same resultant force **R** as expected.

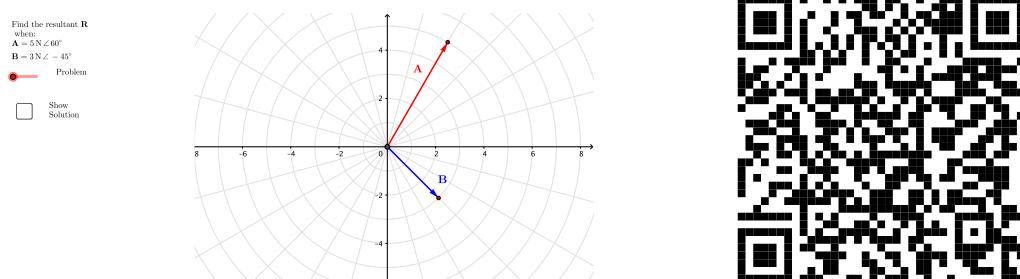

**Figure 2.6.1** Vector Addition Methods

## 2.6.2 Orthogonal Components

Any arbitrary vector **F** can be broken into two component vectors which are the sides of a parallelogram having **F** as its diagonal. The process of finding components of a vector in particular directions is called **vector resolution**.

While a vector can be resolved into components in any two directions, it's generally most useful to resolve them into **rectangular** or **orthogonal components**, where the parallelogram is a rectangle and the sides are perpendicular.

One benefit of finding orthogonal components is that each component is independent of the other. This independence simplifies the vector computations by allowing us to use independent equations for each orthogonal direction. Another benefit of components parallel to the coordinate axes is that you can treat these components as scalar quantities and use ordinary algebra to work with them.

However, there are infinite number of possible rectangles to choose from, so each vector has an infinite number of sets of rectangular components. Of these, the most important one is found when the sides of the rectangle are parallel to the  $x$  and  $y$  axes. These particular components are given  $x$  and  $y$  subscripts indicate that the components are aligned with the  $x$  and  $y$  axes. For the vector **F**,


$$\mathbf{F} = \mathbf{F}_x + \mathbf{F}_y = F_x \mathbf{i} + F_y \mathbf{j}, \quad (2.6.1)$$

where  $F_x$  and  $F_y$  are the scalar components of **F**.

Another possibility is to rotate the coordinate system to any other convenient angle, and find the components in the directions of the rotated coordinate axes  $x'$  and  $y'$ . In either case, the vector is the sum of the rectangular components

$$\mathbf{F} = \mathbf{F}_x + \mathbf{F}_y = \mathbf{F}_{x'} + \mathbf{F}_{y'}. \quad (2.6.2)$$

The interactive below can help you visualize the relationship between a vector and its components in both the  $x$ - $y$  and  $x'$ - $y'$  directions.

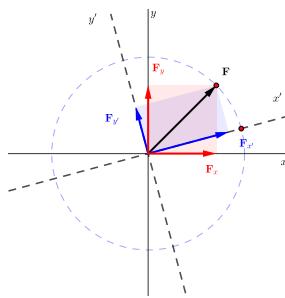

**Figure 2.6.2** Orthogonal Components

### 2.6.3 Graphical Vector Addition

Graphical vector addition involves drawing a scaled diagram using either the parallelogram or triangle rule, and then measuring the magnitudes and directions from the diagram. Graphical solutions work well enough for two-dimensional problems where all the vectors live in the same plane and can be drawn on a sheet of paper, but are not very useful for three-dimensional problems unless you use technology.

If you carefully draw the triangle accurately to scale and use a protractor and ruler you can measure the magnitude and direction of the resultant. Your answer will only be as precise as your diagram and your ability to read your tools however. If you use technology such as GeoGebra or a CAD program to make the diagram, your answer will be precise. The interactive in [Figure 2.6.1](#) may be useful for this.

Even though the graphical approach has limitations, it is worth your attention because it provides a good way to visualize the effects of multiple forces, to quickly estimate ballpark answers, and to visualize the diagrams you need to use alternate methods to follow.

### 2.6.4 Trigonometric Vector Addition

You *can* get a precise answer from the triangle or parallelogram rule by

1. drawing a quick diagram using either rule,
2. identifying three known sides or angles,
3. using trigonometry to solve for the unknown sides and angles.

The trigonometric tools you will need is in [Appendix B](#).

Using triangle-based geometry to solve vector problems is a quick and powerful tool, but includes the following limitations:

- There are only three sides in a triangle; thus vectors can only be added two at a time. If you need to add three or more vectors using this method, you must add the first two, then add the third to that sum and so on.
- If you fail to draw the correct vector triangle, or identify the known sides and angles you will not find the correct answer.

- The trigonometric functions are scalar functions. They are quick ways of solving for the magnitudes of vectors and the angle between vectors, but you may still need to find the vector components from a given datum.

When you need to find the resultant of more than two vectors, it is generally best to use the algebraic methods described below.

### 2.6.5 Algebraic Addition of Components

While the parallelogram rule and the graphical and trigonometric methods are useful tools to for visualizing and finding the sum of two vectors, they are not particularly suited for adding *more* than two vectors or working in three dimensions..

Consider vector  $\mathbf{R}$  which is the sum of several vectors  $\mathbf{A}$ ,  $\mathbf{B}$ ,  $\mathbf{C}$  and perhaps more. Vectors  $\mathbf{A}$ ,  $\mathbf{B}$  and  $\mathbf{C}$  are the components of  $\mathbf{R}$ , and the  $\mathbf{R}$  is the resultant of  $\mathbf{A}$ ,  $\mathbf{B}$  and  $\mathbf{C}$ .

It is easy enough to say that  $\mathbf{R} = \mathbf{A} + \mathbf{B} + \mathbf{C}$ , but how can we calculate  $\mathbf{R}$  if we know the components? You could draw the vectors arranged tip-to-tail and then use the triangle rule to add the first two components, then use it again to add the third component to that sum, and so forth until all the components have been added. The final sum is the resultant,  $\mathbf{R}$ . The process gets progressively more tedious the more components there are to sum.

This section introduces an alternate method to add multiple vectors which is straightforward, efficient and robust. This is called *algebraic method*, because the vector addition is replaced with a process of *scalar* addition of *scalar* components. The algebraic technique works equally well for two and three dimensional vectors, and for summing any number of vectors.

To find the sum of multiple vectors using the algebraic:

1. Find the scalar components of each component vector in the  $x$  and  $y$  directions using the P to R procedure described in [Subsection 2.3.3](#).
2. Algebraically sum the scalar components in each coordinate direction. The scalar components will be positive if they point right or up, negative if they point left or down. These sums are the scalar components of the resultant.
3. Resolve the resultant's components to find the magnitude and direction of the resultant vector using the R to P procedure described in [Subsection 2.3.3](#).


We can write the equation for the resultant  $\mathbf{F}_R$  as

$$\mathbf{F}_R = \sum F_x \mathbf{i} + \sum F_y \mathbf{j} + \sum F_z \mathbf{k}$$

or in bracket notation

$$\mathbf{F}_R = \langle \Sigma F_x, \Sigma F_y, \Sigma F_z \rangle. \quad (2.6.3)$$

This process is illustrated in the following interactive diagram and in the next example.

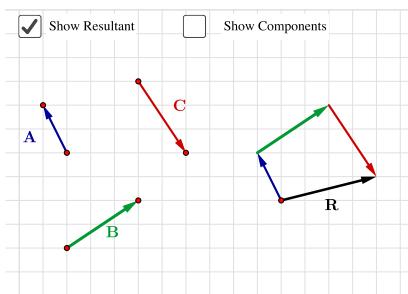

**Figure 2.6.3** Vector addition by summing rectangular components.

#### Example 2.6.4 Vector Addition.

Vector  $\mathbf{A} = 200 \text{ N} \angle 45^\circ$  counterclockwise from the  $x$  axis, and vector  $\mathbf{B} = 300 \text{ N} \angle 70^\circ$  counterclockwise from the  $y$  axis.


Find the resultant  $\mathbf{R} = \mathbf{A} + \mathbf{B}$  by addition of scalar components.

**Answer.**

$$\mathbf{R} = 281.6 \text{ N} \angle 119.9^\circ \text{ counterclockwise from the } x \text{ axis.}$$

#### Solution.

Use the given information to draw a sketch of the situation. By imagining or sketching the parallelogram rule, it should be apparent that the resultant vector points up and to the left.

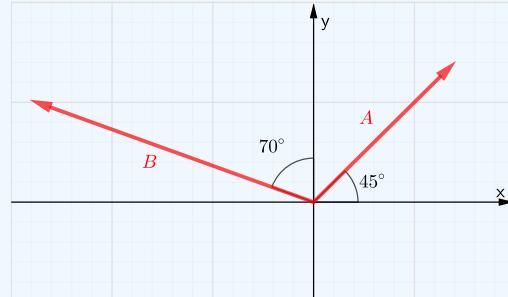

$$A_x = 200 \text{ N} \cos 45^\circ = 141.4 \text{ N}$$

$$A_y = 200 \text{ N} \sin 45^\circ = 141.4 \text{ N}$$

$$B_x = -300 \text{ N} \sin 70^\circ = -281.9 \text{ N}$$

$$B_y = 300 \text{ N} \cos 70^\circ = 102.6 \text{ N}$$

$$\begin{aligned} R_x &= A_x + B_x \\ &= 141.4 \text{ N} + -281.9 \text{ N} \\ &= -140.5 \text{ N} \end{aligned}$$

$$\begin{aligned} R_y &= A_y + B_y \\ &= 141.4 \text{ N} + 102.6 \text{ N} \\ &= 244.0 \text{ N} \end{aligned}$$

$$\begin{aligned} R &= \sqrt{R_x^2 + R_y^2} \\ &= 281.6 \text{ N} \end{aligned}$$

$$\begin{aligned} \theta &= \tan^{-1} \left( \frac{R_y}{R_x} \right) \\ &= -60.1^\circ \end{aligned}$$

This answer indicates that the resultant points down and to the left. This is because the calculator answers for the inverse trig function will always be in the first or fourth quadrant. To get the actual direction of the resultant, add  $180^\circ$  to the calculator result.


$$\theta = -60.1^\circ + 180^\circ = 119.9^\circ$$

The final answer for the magnitude and direction of the resultant is

$$\mathbf{R} = 281.6 \text{ N} \angle 119.9^\circ$$

measured counterclockwise from the x axis.

The process for adding vectors in space is exactly the same as in two dimensions, except that an additional  $z$  component is included. This interactive allows you to input the three-dimensional vector components of forces  $\mathbf{A}$  and  $\mathbf{B}$  and view the resultant force  $\mathbf{R}$  which is the sum of  $\mathbf{A}$  and  $\mathbf{B}$ .

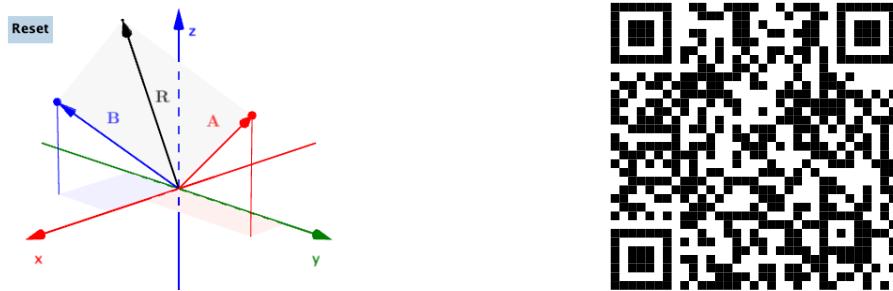

**Figure 2.6.5** Vector Addition in Three Dimensions

## 2.6.6 Vector Subtraction

Like one-dimensional vector subtraction, the easiest way to handle two dimensional vector subtraction is by taking the negative of a vector followed by vector addition. Multiplying a vector by  $-1$  preserves its magnitude but flips its direction, which has the effect of changing the sign of the scalar components.

$$\mathbf{A} - \mathbf{B} = \mathbf{A} + (-\mathbf{B})$$

After negating the second vector you can choose any technique you prefer for vector addition.

## 2.7 Dot Products

### Key Questions

- Why are dot products used for?
- What does it mean when the dot product of two vectors is zero?
- How do you use a dot product to find the angle between two vectors?
- What does it mean when the scalar component of the projection  $\|\text{proj}_{\mathbf{A}} \mathbf{B}\|$  is negative?

Unlike ordinary algebra where there is only one way to multiply numbers, there are two distinct vector multiplication operations. The first is called the **dot product** or **scalar product** because the result is a scalar value, and the second is called the **cross product** or **vector product** and has a vector result. The dot product will be discussed in this section and the cross product in the next.

For two vectors  $\mathbf{A} = \langle A_x, A_y, A_z \rangle$  and  $\mathbf{B} = \langle B_x, B_y, B_z \rangle$ , the dot product multiplication is computed by summing the products of the components.

$$\mathbf{A} \cdot \mathbf{B} = A_x B_x + A_y B_y + A_z B_z. \quad (2.7.1)$$

An alternate, equivalent method to compute the dot product is

$$\mathbf{A} \cdot \mathbf{B} = |\mathbf{A}| |\mathbf{B}| \cos \theta = A B \cos \theta \quad (2.7.2)$$

where  $\theta$  in the equation is the angle between the two vectors and  $|\mathbf{A}|$  and  $|\mathbf{B}|$  are the magnitudes of  $\mathbf{A}$  and  $\mathbf{B}$ .

We can conclude from this equation that the dot product of two perpendicular vectors is zero, because  $\cos 90^\circ = 0$ , and that the dot product of two parallel vectors is the product of their magnitudes.

When dotting unit vectors which have a magnitude of one, the dot products of a unit vector with itself is one and the dot product of two perpendicular unit vectors is zero, so for  $\mathbf{i}$ ,  $\mathbf{j}$ , and  $\mathbf{k}$  we have

$$\begin{array}{lll} \mathbf{i} \cdot \mathbf{i} = 1 & \mathbf{j} \cdot \mathbf{i} = 0 & \mathbf{k} \cdot \mathbf{i} = 0 \\ \mathbf{i} \cdot \mathbf{j} = 0 & \mathbf{j} \cdot \mathbf{j} = 1 & \mathbf{k} \cdot \mathbf{j} = 0 \\ \mathbf{i} \cdot \mathbf{k} = 0 & \mathbf{j} \cdot \mathbf{k} = 0 & \mathbf{k} \cdot \mathbf{k} = 1 \end{array}$$

Dot products are commutative, associative and distributive:

1. **Commutative.** The order does not matter.

$$\mathbf{A} \cdot \mathbf{B} = \mathbf{B} \cdot \mathbf{A} \quad (2.7.3)$$

2. **Associative.** It does not matter whether you multiply a scalar value  $C$  by the final dot product, or either of the individual vectors, you will still get the same answer.

$$C(\mathbf{A} \cdot \mathbf{B}) = C \mathbf{A} \cdot \mathbf{B} = \mathbf{A} \cdot C \mathbf{B} \quad (2.7.4)$$

3. **Distributive.** If you are dotting one vector  $\mathbf{A}$  with the sum of two more ( $\mathbf{B} + \mathbf{C}$ ), you can either add  $\mathbf{B} + \mathbf{C}$  first, or dot  $\mathbf{A}$  by both and add the final value.

$$\mathbf{A} \cdot (\mathbf{B} + \mathbf{C}) = \mathbf{A} \cdot \mathbf{B} + \mathbf{A} \cdot \mathbf{C} \quad (2.7.5)$$

Dot products are a particularly useful tool which can be used to compute the magnitude of a vector, determine the angle between two vectors, and find the rectangular component or projection of a vector in a specified direction. These applications will be discussed in the following sections.

### 2.7.1 Magnitude of a Vector

Dot products can be used to find vector magnitudes. When a vector is dotted with itself using (2.7.1), the result is the square of the magnitude of the vector. By the Pythagorean theorem

$$|\mathbf{A}| = \sqrt{\mathbf{A} \cdot \mathbf{A}}. \quad (2.7.6)$$

The proof is trivial. Consider vector  $\mathbf{A} = \langle A_x, A_y \rangle$ .

$$\begin{aligned} \mathbf{A} \cdot \mathbf{A} &= A_x A_x + A_y A_y = A_x^2 + A_y^2 \\ \sqrt{\mathbf{A} \cdot \mathbf{A}} &= \sqrt{A_x^2 + A_y^2} = A = |\mathbf{A}|. \end{aligned}$$

The results are similar for three-dimensional vectors.

#### Example 2.7.1 Find Vector Magnitude using the Dot Product.

Find the magnitude of vector  $\mathbf{F}$  with components  $F_x = 30 \text{ N}$ ,  $F_y = -40 \text{ N}$  and  $F_z = 50 \text{ N}$

**Answer.**

$$F = |\mathbf{F}| = 70.7 \text{ N}$$

**Solution.**

$$\mathbf{F} = \langle 30 \text{ N}, -40 \text{ N}, 50 \text{ N} \rangle$$

$$\begin{aligned} \mathbf{F} \cdot \mathbf{F} &= F_x^2 + F_y^2 + F_z^2 \\ &= (30 \text{ N})^2 + (-40 \text{ N})^2 + (50 \text{ N})^2 \\ &= 5000 \text{ N}^2 \end{aligned}$$

$$F = |\mathbf{F}| = \sqrt{\mathbf{F} \cdot \mathbf{F}}$$

$$= \sqrt{5000 \text{ N}^2}$$

$$= 70.7 \text{ N}$$

### 2.7.2 Angle between Two Vectors

A second application of the dot product is to find the angle between two vectors. Equation (2.7.2) provides the procedure.

$$\mathbf{A} \cdot \mathbf{B} = |\mathbf{A}| |\mathbf{B}| \cos \theta$$

$$\cos \theta = \frac{\mathbf{A} \cdot \mathbf{B}}{|\mathbf{A}| |\mathbf{B}|} \quad (2.7.7)$$

**Example 2.7.2** Angle between Orthogonal Unit Vectors.

Find the angle between  $\mathbf{i} = \langle 1, 0, 0 \rangle$  and  $\mathbf{j} = \langle 0, 1, 0 \rangle$ .

**Answer.**

$$\theta = 90^\circ$$

**Solution.**

$$\begin{aligned} \cos \theta &= \frac{\mathbf{i} \cdot \mathbf{j}}{|\mathbf{i}| |\mathbf{j}|} \\ &= \frac{(1)(0) + (0)(1) + (0)(0)}{(1)(1)} \\ &= 0 \end{aligned}$$

$$\begin{aligned} \theta &= \cos^{-1}(0) \\ &= 90^\circ \end{aligned}$$

This shows that  $\mathbf{i}$  and  $\mathbf{j}$  are perpendicular to each other.

**Example 2.7.3** Angle between Two Vectors.

Find the angle between  $\mathbf{F} = \langle 100 \text{ N}, 200 \text{ N}, -50 \text{ N} \rangle$  and  $\mathbf{G} = \langle -75 \text{ N}, 150 \text{ N}, -40 \text{ N} \rangle$

**Answer.**

$$\theta = 51.7^\circ$$

**Solution.**

$$\begin{aligned} \cos \theta &= \frac{\mathbf{F} \cdot \mathbf{G}}{|\mathbf{F}| |\mathbf{G}|} \\ &= \frac{F_x G_x + F_y G_y + F_z G_z}{\sqrt{F_x^2 + F_y^2 + F_z^2} \sqrt{G_x^2 + G_y^2 + G_z^2}} \end{aligned}$$

$$\begin{aligned}
 &= \frac{(100)(-75) + (200)(150) + (-50)(-40)}{\sqrt{100^2 + 200^2 + (-50)^2} \sqrt{(-75)^2 + 150^2 + (-40)^2}} \\
 &= \frac{24500}{(229.1)(172.4)} \\
 &= 0.620
 \end{aligned}$$

$$\begin{aligned}
 \theta &= \cos^{-1}(0.620) \\
 &= 51.7^\circ
 \end{aligned}$$

### 2.7.3 Vector Projection


The dot product is used to find the **projection** of one vector onto another. You can think of a projection of **B** on **A** as a vector the length of the shadow of **B** on the line of action of **A** when the sun is directly above **A**. More precisely, the projection of **B** onto **A** produces the rectangular component of **B** in the direction *parallel* to **A**. This is one side of a rectangle aligned with **A**, having **B** as its diagonal.

This is illustrated in [Figure 2.7.4](#), where **u** is the projection of **B** onto **A**, or alternately **u** is the rectangular component of **B** in the direction of **A**.

In this text we will use the symbols

- $\text{proj}_{\mathbf{A}} \mathbf{B}$  to mean the projection of **B** on **A**, a vector quantity,
- $|\text{proj}_{\mathbf{A}} \mathbf{B}|$  to mean the magnitude of the projection, a positive or zero valued scalar, and
- $\| \text{proj}_{\mathbf{A}} \mathbf{B} \|$  to mean the scalar component of the projection (the scalar projection), a signed scalar.

As we have mentioned before, the magnitude of a vector is its length and is always positive or zero, while a scalar component is a signed value which can be positive or negative. When a scalar component is multiplied by a unit vector the result is a vector in that direction when the scalar component is positive, or  $180^\circ$  opposite when the scalar component is negative.

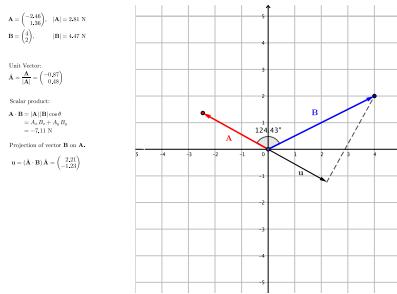

**Figure 2.7.4** Vector projection in two dimensions.

The interactive shows that the projection is the adjacent side of a right triangle with  $\mathbf{B}$  as the hypotenuse. From the definition of the dot product (2.7.2) we find that

$$\mathbf{A} \cdot \mathbf{B} = A(B \cos \theta) = A \|\text{proj}_A \mathbf{B}\|,$$

where  $B \cos \theta$  is the scalar component of the projection. So, the dot product of  $\mathbf{A}$  and  $\mathbf{B}$  gives us the projection of  $\mathbf{B}$  onto  $\mathbf{A}$  times the magnitude of  $\mathbf{A}$ . This value will be positive when  $\theta < 90^\circ$ , negative when  $\theta > 90^\circ$ , and zero when the vectors are perpendicular because of the properties of the cosine function.

So, to find the scalar value of the projection of  $\mathbf{B}$  onto  $\mathbf{A}$  we divide by the magnitude of  $\mathbf{A}$

$$\|\text{proj}_{\mathbf{A}} \mathbf{B}\| = \frac{\mathbf{A} \cdot \mathbf{B}}{A} = \hat{\mathbf{A}} \cdot \mathbf{B} \quad (2.7.8)$$

The final simplified form is written in terms of the unit vector in the direction vector  $\hat{\mathbf{A}} = \frac{\mathbf{A}}{A}$ .

If you want the *vector* projection of  $\mathbf{B}$  onto  $\mathbf{A}$ , as opposed to the *scalar* projection we just found, multiply the scalar projection by the unit vector  $\hat{\mathbf{A}}$

$$\text{proj}_{\mathbf{A}} \mathbf{B} = \|\text{proj}_{\mathbf{A}} \mathbf{B}\| \hat{\mathbf{A}} = (\hat{\mathbf{A}} \cdot \mathbf{B}) \hat{\mathbf{A}}. \quad (2.7.9)$$

Similarly, the vector projection of  $\mathbf{A}$  onto  $\mathbf{B}$  is

$$\text{proj}_{\mathbf{B}} \mathbf{A} = (\mathbf{A} \cdot \hat{\mathbf{B}}) \hat{\mathbf{B}}. \quad (2.7.10)$$

The spatial interpretation of the results the scalar projection  $\|\text{proj}_A \mathbf{B}\|$  is

- *Positive value.*

means that  $\mathbf{A}$  and  $\mathbf{B}$  are generally in the same direction.

- *Negative value.*

means that  $\mathbf{A}$  and  $\mathbf{B}$  are generally in opposite directions.

- *Zero.*

means that  $\mathbf{A}$  and  $\mathbf{B}$  are perpendicular.

- *Magnitude smaller than  $\mathbf{B}$ .*


This is the most common answer. The vectors are neither parallel nor perpendicular.

- *Magnitude equal to  $\mathbf{B}$ .*

$\mathbf{A}$  and  $\mathbf{B}$  point in the same direction, thus 100% of  $\mathbf{B}$  acts in the direction of  $\mathbf{A}$ .

- Magnitude larger than  $\mathbf{B}$ .

This answer is impossible. Check your algebra; you might have forgotten to divide by the magnitude of  $\mathbf{A}$ .

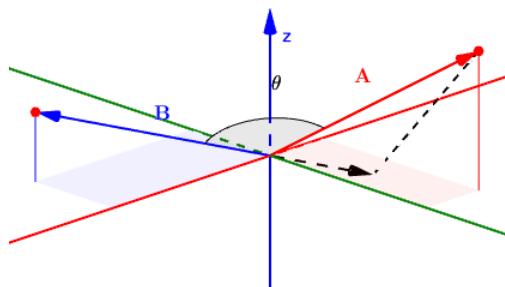


**Figure 2.7.5** Vector projections in three dimensions.

#### 2.7.4 Perpendicular Components

The final application of dot products is to find the component of one vector perpendicular to another.

To find the component of  $\mathbf{B}$  perpendicular to  $\mathbf{A}$ , first find the vector projection of  $\mathbf{B}$  on  $\mathbf{A}$ , then subtract that from  $\mathbf{B}$ . What remains is the perpendicular component.

$$\mathbf{B}_{\perp} = \mathbf{B} - \text{proj}_{\mathbf{A}} \mathbf{B} \quad (2.7.11)$$

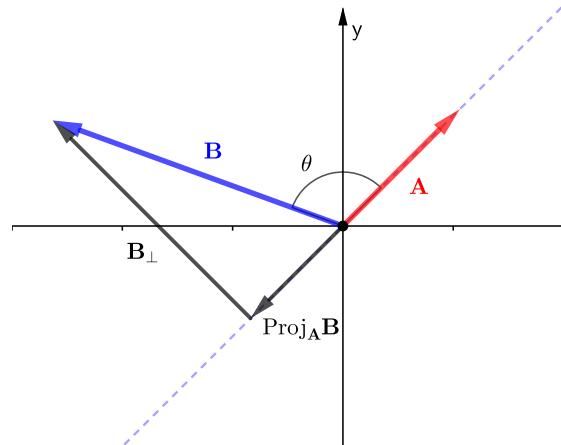

**Figure 2.7.6** Perpendicular and parallel components of  $\mathbf{B}$ .

## 2.8 Cross Products

### Key Questions

- How is a cross product different than a dot product?
- What is a determinant?
- What defines a right-handed Cartesian coordinate system?
- How do you use the cross-product circle to find the cross product of two unit

vectors?

The vector **cross product** is a mathematical operation applied to two vectors which produces a third mutually perpendicular vector as a result. It's sometimes called the **vector product**, to emphasize this and to distinguish it from the dot product which produces a scalar value. The  $\times$  symbol is used to indicate this operation.

Cross products are used in mechanics to find the moment of a force about about a point.

The cross product is a vector multiplication process defined by

$$\mathbf{A} \times \mathbf{B} = A B \sin \theta \hat{\mathbf{u}}. \quad (2.8.1)$$

The result is a vector mutually perpendicular to the first two with a sense determined by the right hand rule. If **A** and **B** are in the *xy* plane, this is

$$\mathbf{A} \times \mathbf{B} = (A_y B_x - A_x B_y) \mathbf{k}. \quad (2.8.2)$$

The operation is not commutative, in fact

$$\mathbf{A} \times \mathbf{B} = -\mathbf{B} \times \mathbf{A}.$$

The magnitude of the cross product is the product of the perpendicular component of **A** with the magnitude of **B**, which is also the area of the parallelogram formed by vectors **A** and **B**. The magnitude of the cross product is zero if **A** and **B** are parallel, and it is maximum when they are perpendicular.


Notice that all the terms in the cross product equation are similar to those of the dot product, except that sin is used rather than cos and the product includes a unit vector  $\hat{\mathbf{u}}$  making the result a vector. This unit vector  $\hat{\mathbf{u}}$  is simple to find in a two-dimensional problem as it will always be perpendicular to the page, but for three-dimensional cross products it is advisable to use a vector determinant method discussed here.

### 2.8.1 Cross Product of Arbitrary Vectors

The cross product of two three-dimensional vectors can be calculated by evaluating the *determinant* of this  $3 \times 3$  matrix.

$$\mathbf{A} \times \mathbf{B} = \begin{vmatrix} \mathbf{i} & \mathbf{j} & \mathbf{k} \\ A_x & A_y & A_z \\ B_x & B_y & B_z \end{vmatrix} \quad (2.8.3)$$

Here, the first row are the unit vectors, the second row are the components of **A** and the third row are the components of **B**.

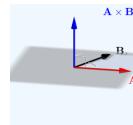

Calculating the  $3 \times 3$  determinant can be reduced to calculating three  $2 \times 2$  determinants using the method of cofactors, as follows

$$\mathbf{A} \times \mathbf{B} = + \begin{vmatrix} A_y & A_z \\ B_y & B_z \end{vmatrix} \mathbf{i} - \begin{vmatrix} A_x & A_z \\ B_x & B_z \end{vmatrix} \mathbf{j} + \begin{vmatrix} A_x & A_y \\ B_x & B_y \end{vmatrix} \mathbf{k} \quad (2.8.4)$$

Finally a  $2 \times 2$  determinant can be evaluated with the formula

$$\begin{vmatrix} a & b \\ c & d \end{vmatrix} = ad - bc \quad (2.8.5)$$

After simplifying, the resulting formula for a three-dimensional cross product is

$$\mathbf{A} \times \mathbf{B} = (A_y B_z - A_z B_y) \mathbf{i} - (A_x B_z - A_z B_x) \mathbf{j} + (A_x B_y - A_y B_x) \mathbf{k} \quad (2.8.6)$$

In practice, the easiest way to remember this equation is to use the augmented determinant below, where the first two columns have been copied and placed after the determinant. The cross product is then calculated by adding the product of the red diagonals and subtracting the product of blue diagonals.

$$\mathbf{A} \times \mathbf{B} = \begin{array}{ccc|cc} \mathbf{i} & \mathbf{j} & \mathbf{k} & \mathbf{i} & \mathbf{j} \\ A_x & A_y & A_z & A_x & A_y \\ B_x & B_y & B_z & B_x & B_y \end{array}$$

The augmented determinant is shown with three columns on the left and two on the right. The first column contains  $\mathbf{i}$ ,  $A_x$ , and  $B_x$ . The second column contains  $\mathbf{j}$ ,  $A_y$ , and  $B_y$ . The third column contains  $\mathbf{k}$ ,  $A_z$ , and  $B_z$ . Red diagonal lines connect  $\mathbf{i}$  to  $A_z$  and  $B_y$ , and  $\mathbf{k}$  to  $A_x$  and  $B_z$ . Blue diagonal lines connect  $\mathbf{i}$  to  $A_y$  and  $B_x$ , and  $\mathbf{j}$  to  $A_x$  and  $B_y$ .

**Figure 2.8.1** Augmented determinant

The result is

$$\mathbf{A} \times \mathbf{B} = (A_y B_z - A_z B_y) \mathbf{i} + (A_z B_x - A_x B_z) \mathbf{j} + (A_x B_y - A_y B_x) \mathbf{k}, \quad (2.8.7)$$


which is mathematically equivalent to equation (2.8.6).

In two dimensions, vectors  $\mathbf{A}$  and  $\mathbf{B}$  have no  $z$  components, so (2.8.3) reduces to

$$\mathbf{A} \times \mathbf{B} = \begin{vmatrix} \mathbf{i} & \mathbf{j} & \mathbf{k} \\ A_x & A_y & 0 \\ B_x & B_y & 0 \end{vmatrix} = (A_x B_y - A_y B_x) \mathbf{k}. \quad (2.8.8)$$

This equation produces the same result as equation (2.8.1) and you may use it if it is more convenient.

Example 2.8.2 2-D Cross Product.

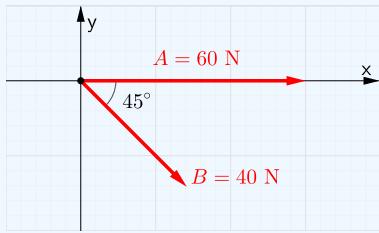

Determine the cross product  $\mathbf{A} \times \mathbf{B}$ .

**Answer.**

$$\mathbf{A} \times \mathbf{B} = -1,697 \text{ N}^2 \mathbf{k}$$

**Solution 1.** In this solution we will apply equation (2.8.1).

$$\mathbf{A} \times \mathbf{B} = A B \sin \theta \hat{\mathbf{u}}$$

The direction of the the cross product is determined by applying the right hand rule. With the right hand, rotating  $\mathbf{A}$  towards  $\mathbf{B}$  we find that our thumb points into the  $xy$  plane, so the direction of  $\hat{\mathbf{u}}$  is  $-\mathbf{k}$ .

$$\begin{aligned}\mathbf{A} \times \mathbf{B} &= (60 \text{ N})(40 \text{ N}) \sin 45^\circ (-\mathbf{k}) \\ &= 1,697 \text{ N}^2 (-\mathbf{k}) \\ &= -1,697 \text{ N}^2 \mathbf{k}\end{aligned}$$

**Solution 2.** From the diagram:

$$\begin{array}{ll} A_x = 60 \text{ N} & A_y = 0 \text{ N} \\ B_x = 40 \text{ N} \cos 45^\circ & B_y = -40 \text{ N} \sin 45^\circ \\ & = 28.28 \text{ N} \\ & & = -28.28 \text{ N} \end{array}$$

From (2.8.8):

$$\begin{aligned}\mathbf{A} \times \mathbf{B} &= (A_x B_y - A_y B_x) \mathbf{k} \\ &= (60)(-28.28) - (0)(28.28) \text{ N}^2 \mathbf{k} \\ &= -1697 \text{ N}^2 \mathbf{k}\end{aligned}$$

## Example 2.8.3 3-D Cross Product.

Find the cross product of  $\mathbf{A} = \langle 2, 4, -1 \rangle$  and  $\mathbf{B} = \langle 10, 25, 20 \rangle$ . The components of  $\mathbf{A}$  are in meters and  $\mathbf{B}$  are in Newtons.

**Answer.**

$$\mathbf{A} \times \mathbf{B} = \langle 105, -50, 10 \rangle \text{ N}\cdot\text{m}$$

**Solution 1.** To solve, set up the augmented determinant and evaluate it by adding the left-to-right diagonals and subtracting the right-to-left diagonals. (2.8.6).

$$\begin{aligned}\mathbf{A} \times \mathbf{B} &= \begin{vmatrix} \mathbf{i} & \mathbf{j} & \mathbf{k} \\ 2 & 4 & -1 \\ 10 & 25 & 20 \end{vmatrix} \begin{matrix} \mathbf{i} & \mathbf{j} \\ 2 & 4 \\ 10 & 25 \end{matrix} \\ &= (4)(20) \mathbf{i} + (-1)(10) \mathbf{j} + (2)(25) \mathbf{k} - (4)(10) \mathbf{k} - (-1)(25) \mathbf{i} - (2)(20) \mathbf{j} \\ &= (80 + 25) \mathbf{i} + (-10 - 40) \mathbf{j} + (50 - 40) \mathbf{k} \\ &= \langle 105, -50, 10 \rangle \text{ N}\cdot\text{m}\end{aligned}$$

**Solution 2.** Calculating three-dimensional cross products by hand is tedious and error prone. Whenever you can, you should use technology to do the grunt work for you and focus on the meaning of the results. In this solution we will use an embedded Sage calculator to calculate the cross product. This same calculator can be used to do other problems.

Given:

$$\mathbf{A} = \langle 2, 4, -1 \rangle \text{ m}$$

$$\mathbf{B} = \langle 10, 25, 20 \rangle \text{ N.}$$

$\mathbf{A}$  and  $\mathbf{B}$  are defined in the first two lines, and  $\mathbf{A}.\text{cross\_product}(\mathbf{B})$  is the expression to be evaluated. Click Evaluate to see the result. You'll have to work out the correct units for yourself.

```
A = vector([2, 4, -1]);
B = vector([10, 25, 20]);
A.cross_product(B)
```

(-105, -50, 10)

Try changing the third line to  $\mathbf{B}.\text{cross\_product}(\mathbf{A})$ . What changes?

## 2.8.2 Cross Product of Unit Vectors

Since unit vectors have a magnitude of one and are perpendicular to each other, the magnitude of the cross product of two perpendicular unit vectors will be one by (2.8.1). The direction is determined by the right hand rule. On the other hand, whenever you cross a unit vector with itself, the result is zero since  $\theta = 0$ .

One way to apply the right hand rule is to hold your right hand flat and point your fingers in the direction of the first vector, then curl them towards the second vector. When you do, your thumb will be oriented in the direction of the cross product.

To illustrate, imagine unit vectors  $\mathbf{i}$  and  $\mathbf{j}$  drawn on a white board in the normal orientation —  $\mathbf{i}$  pointing right,  $\mathbf{j}$  pointing up. Orient your right hand with your fingers pointing to the right along  $\mathbf{i}$ , then curl them towards  $\mathbf{j}$  and your thumb will point out of the board and establish that the direction of  $\mathbf{i} \times \mathbf{j} = \mathbf{k}$ . Now try to cross  $-\mathbf{i}$  with  $\mathbf{j}$  and you will find that your thumb now points into the board.

You should be able to convince yourself that the cross products of the positive unit vectors are

$$\mathbf{i} \times \mathbf{i} = 0$$

$$\mathbf{i} \times \mathbf{j} = \mathbf{k}$$

$$\mathbf{i} \times \mathbf{k} = -\mathbf{j}$$

$$\mathbf{j} \times \mathbf{i} = -\mathbf{k}$$

$$\mathbf{j} \times \mathbf{j} = 0$$

$$\mathbf{j} \times \mathbf{k} = \mathbf{i}$$

$$\mathbf{k} \times \mathbf{i} = \mathbf{j}$$


$$\mathbf{k} \times \mathbf{j} = -\mathbf{i}$$

$$\mathbf{k} \times \mathbf{k} = 0$$

An alternate way to remember this is to use the cross product circle shown. For example when you cross  $\mathbf{i}$  with  $\mathbf{j}$  you are going in the positive (counterclockwise) direction around the blue inner circle and thus the answer is  $+\mathbf{k}$ . But when you cross  $\mathbf{j}$  into  $\mathbf{i}$  you go in the negative (clockwise) direction around the circle and thus get a  $-\mathbf{k}$ . Remember that the order of cross products matter. If you put the vectors in the wrong order you will introduce a sign error.

If you have any negative unit vectors it is easiest to separate the negative values until after you have taken the cross product, so for example

$$-\mathbf{j} \times \mathbf{i} = (-1)(\mathbf{j} \times \mathbf{i}) = (-1)(-\mathbf{k}) = +\mathbf{k}.$$

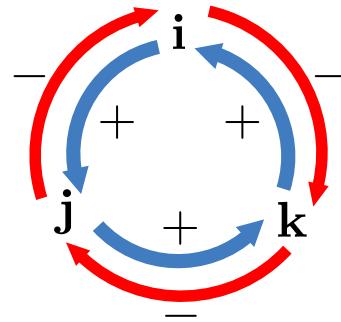

**Figure 2.8.4** Unit vector cross product circle.

## 2.9 Exercises

# Chapter 3

## Equilibrium of Particles

### 3.1 Equilibrium

Engineering statics is the study of rigid bodies in equilibrium so it's appropriate to begin by defining what we mean by *rigid bodies* and what we mean by *equilibrium*.

A **body** is an object, possibly made up of many parts, which may be examined as a unit. In statics, we consider the forces acting on the object as a whole and also examine it in greater detail by studying each of its parts, which are bodies in their own right. The choice of the body is an engineering decision based on what we are interested in finding out. We might, for example, consider an entire high-rise building as a body for the purpose of designing the building's foundation, and later consider each column and beam of the structure to ensure that they are strong enough to perform their individual roles.

A **rigid body** is a body which doesn't deform under load, that is to say, an object which doesn't bend, stretch, or twist when forces are applied to it. It is an idealization or approximation because no objects in the real world behave this way; however, this simplification still produces valuable information. You will drop the rigid body assumption and study deformation, stress, and strain in a later course called Strength of Materials or Mechanics of Materials. In that course you will perform analysis of non-rigid bodies, but each problem you do *there* will begin with the rigid body analysis you will learn to do *here*.

A body in **equilibrium** is not accelerating. As you learned in physics, acceleration is the rate of change of velocity, and is a vector quantity. For linear motion,

$$\mathbf{a} = \frac{d\mathbf{v}}{dt}.$$

For an object in equilibrium  $\mathbf{a} = 0$  which implies that the body is either stationary or moving with a constant velocity

$$\mathbf{a} = 0 \implies \begin{cases} \mathbf{v} = 0 \\ \mathbf{v} = C \end{cases} .$$

The acceleration of an object is related to the net force acting on it by **Newton's Second Law**

$$\Sigma \mathbf{F} = m\mathbf{a}.$$

So for the special case of static equilibrium Newton's Law becomes

$$\Sigma \mathbf{F} = 0. \quad (3.1.1)$$

This simple equation is one of the two foundations of engineering statics.

There are several ways to think about this equation. Reading it from left to right it says that *if all the forces acting on a body sum to zero, then the body will be in equilibrium*. If you read it from right to left it says that *if a body is in equilibrium, then all the forces acting on the body must sum to zero*. Both interpretations are equally valid but we will be using the second one more often. In a typical problem equilibrium of a body implies that the forces sum to zero, and we use that fact to find the unknown forces which make it so. Remember that we are talking about vector addition here, so the sums of the forces must be calculated using the rules of vector addition; you won't get correct answers if you can't add vectors!

We'll be using all of the different vector addition techniques introduced in [Section 2.6](#), which may lead to some confusion. It doesn't matter, mathematically, which technique you use but part of the challenge and reward of statics is learning to select the best tool for the job at hand; to select the simplest, easiest, fastest, or clearest way to get to the solution. You'll do best in this course if can use multiple approaches to solve the same problem.

In [Chapter 5](#) we will add another requirement for equilibrium, namely equilibrium equation [\(5.3.2\)](#) which says the the forces which cause rotational motion and angular acceleration  $\alpha$  also must sum to zero, but for the problems of this chapter the only condition we'll need for equilibrium is  $\Sigma \mathbf{F} = 0$ .

## 3.2 Particles

We'll begin our study of Equilibrium with the simplest possible object in the simplest possible situation — a **particle** in a **one-dimensional coordinate system**. Also, in this chapter and the next all forces will be represented as **concentrated forces**. In later sections the we will address more complicated situations, higher dimensions, and distributed forces, but beginning with very simple situations will help you to develop engineering sense and problem solving skills which will be useful later.

The defining characteristic of a particle is that all forces that act on it are coincident<sup>1</sup> or concurrent<sup>2</sup>, not that it is small. Forces are coincident if they have the same line of action, and concurrent if they intersect at a point. The moon, earth and sun can all be treated as particles, but we probably won't encounter them in statics since they're not in equilibrium. Forces are coincident/concurrent if their lines of action all intersect at a single, common point. Two or more forces are also considered

---

<sup>1</sup>Two lines are coincident when one lies on top of the other.

<sup>2</sup>Two or more lines are concurrent if they intersect at a single point.

concurrent if they share the same line of action. One practical consequence of this is that particles are never subjected to forces which cause rotation. So a see-saw, for example, is not a particle because the weights of the children tend<sup>3</sup> to cause rotation.

Another consequence of concurrent forces is that Equation (3.1.1) is the only equilibrium equation that applies. This vector equation can be used to solve for a maximum of one unknown per dimension. If you find yourself trying to solve a two-dimensional particle equilibrium problem and you are seeking more than two unknowns, it's likely that you have missed something and need to re-read the question.

Another simplification we will be making is to treat all forces as **concentrated**. Concentrated forces act at a single point, have a well defined line of action, and can be represented with an arrow — in other words, they are vectors. Real forces don't actually act at a single mathematical point but concentrating them is intuitive and will be justified in a [later chapter 7.8](#). You're already familiar with the concept if you have ever placed all the weight of an object at its center of gravity.

## 3.3 Particles in One Dimension


### 3.3.1 A simple case

Consider the weight suspended by a rope shown in [Figure 3.3.1](#). Diagrams of this type are called **space diagrams**; they show the objects as they exists in space.

In mechanics we are interested in studying the forces acting on objects and in this course, the objects will be in equilibrium. The best way to do this is to draw a diagram which focuses on the forces acting on the object, not the mechanisms that hold it in place. We call this type of diagram a free-body diagram because it shows the object disconnected or freed from its supporting mechanisms. You can see the free-body diagram for this situation by moving the slider in the interactive to position two. This shows that there are two forces acting on the object; the force of the rope holding it up, and the weight of the object which is trying to pull it to earth, which we treat as acting at its center of gravity.

The actual shape of the weight is not important to us, so it can simply be represented with a dot, as shown when the view control is in position three. The forces have been slid along their common line of action until they both act on the dot, which is an example of an [equivalent transformation](#) called the “Principle of Transmissibility.” This diagram in view three is completely sufficient for this situation.

Drawing free-body diagrams can be surprisingly tricky. The reason for this is that you must identify all the forces acting on the object and correctly represent them on



**Figure 3.3.1** A suspended weight

---

<sup>3</sup>We say tend to cause rotation because in a statics context all objects are static — so no actual rotation occurs.

the free-body diagram. If you fail to account for all the forces, include additional ones, or represent them incorrectly, your analysis will surely be wrong.

So what kind of analysis can we do here? Admittedly not much. We can find the tension in the rope caused by a particular weight and use it to select an appropriately strong rope, or we can determine the maximum weight a particular rope can safely support.

The actual analysis is so trivial that you've probably already done it in your head, nevertheless several ways to approach it will be shown next.

In the vector approach we will use the [equation of equilibrium](#).

### Example 3.3.2 1-D Vector Addition.

Find the relationship between the tension in the rope and the suspended weight for the system of [Figure 3.3.1](#).

#### Answer.

$$T = W$$

We learn that the tension equals the weight.

#### Solution.

The free-body diagram shows two forces acting on the particle, and since the particle is in equilibrium they must add to zero.

$$\begin{aligned}\Sigma \mathbf{F} &= 0 \\ \mathbf{T} + \mathbf{W} &= 0 \\ \mathbf{T} &= -\mathbf{W}\end{aligned}$$

We conclude that force  $\mathbf{T}$  is equal and opposite to  $\mathbf{W}$ , that is, since the weight is acting down, the rope acts with the same magnitude but up.

**Tension** is the magnitude of the rope's force. Recall that the magnitude of a vector is always a positive scalar. We use normal (non-bold) typefaces or absolute value bars surrounding a vector to indicate its magnitude. For any force  $\mathbf{F}$ ,

$$F = |\mathbf{F}|.$$

To find how the tension is related to  $\mathbf{W}$ , take the absolute value of both sides

$$\begin{aligned}|\mathbf{T}| &= |- \mathbf{W}| \\ T &= W\end{aligned}$$

We can also formulate this example in terms of unit vectors. Recall that  $\mathbf{j}$  is the unit vector which points up. It has a magnitude of one with no units associated. So in terms of unit vector  $\mathbf{j}$ ,  $\mathbf{T} = T\mathbf{j}$  and  $\mathbf{W} = -W\mathbf{j}$ .

**Example 3.3.3** 1-D Vector Addition using unit vectors.

Find the relation between the tension  $T$  and weight  $W$  for the system of [Figure 3.3.1](#) using unit vectors.


**Answer.**

$$T = W$$

**Solution.**

Express the forces in terms of their magnitudes and the unit vector  $\mathbf{j}$  then proceed as before,

$$\begin{aligned}\Sigma \mathbf{F} &= 0 \\ \mathbf{T} + \mathbf{W} &= 0 \\ T\mathbf{j} + W(-\mathbf{j}) &= 0 \\ T\mathbf{j} &= W\mathbf{j} \\ T &= W\end{aligned}$$



In the previous example, the unit vector  $\mathbf{j}$  completely dropped out of the equation leaving only the coefficients of  $\mathbf{j}$ . This will be the case whenever you add vectors which all act along the same line of action.

The coefficients of  $\mathbf{i}$ ,  $\mathbf{j}$ , and  $\mathbf{k}$  are known as the **scalar components**. A scalar component times the associated unit vector is a force vector.

When you use scalar components, the forces are represented by scalar values and the equilibrium equations are solved using normal algebraic addition rather than vector addition. This leads to a slight simplification of the solution as shown in the next example.

**Example 3.3.4** 1-D Vector Addition using scalar components.

Find the relation between the tension  $T$  and weight  $W$  for the system of [Figure 3.3.1](#) using scalar components.

**Answer.**

$$T = W$$

Unsurprisingly, we get the same result.

**Solution.**


The forces in this problem are  $\mathbf{W} = -W \mathbf{j}$  and  $\mathbf{T} = T \mathbf{j}$ , so the corresponding scalar components are

$$W_y = -W \quad T_y = T.$$

Adding scalar components gives,

$$\begin{aligned}\Sigma F_y &= 0 \\ W_y + T_y &= 0 \\ -W + T &= 0 \\ T &= W\end{aligned}$$

Unsurprisingly, we get the same result.



### 3.3.2 Scalar Components

The scalar component of a vector is a *signed* number which indicates the vector's **magnitude** and **sense**, and is usually identified by a symbol with a subscript that indicates the line of action of the vector.

So for example,  $F_x = 10 \text{ N}$  is a scalar component. We can tell it's not a vector because it  $F_x$  is not bold.  $10 \text{ N}$  is the magnitude of the associated vector; the subscript  $x$  indicates that the force acts "in the  $x$  direction," in other words it acts on a line of action which is parallel to the  $x$  axis; and the (implied) positive sign means that the vector points towards the positive end of the  $x$  axis — towards positive infinity. So a scalar component, while not a vector, contains all the information necessary to completely describe and draw the corresponding vector. Be careful not to confuse scalar components with vector magnitudes. A force with a magnitude of  $10 \text{ N}$  can point in any direction, but can never have a negative magnitude.

Scalar components can be added together algebraically, but only if they act "in the same direction." It makes no sense to add  $F_x$  to  $F_y$ . If that's what you want to do, first you must convert the scalar components to vectors, then add them according to the rules of vector addition.

**Example 3.3.5 1-D Scalar Addition.**


If  $A_x = 10 \text{ lb}$  and  $B_x = -15 \text{ lb}$ , find the magnitude and direction of their resultant  $\mathbf{R}$ .

**Answer.**

$$\mathbf{R} = 5 \text{ lb} \leftarrow$$

**Solution.** Start by sketching the two forces. The subscripts indicate the line of action of the force, and the sign indicates the direction along the line of action. A negative  $B_x$  points towards the negative end of the  $x$  axis.

$$\begin{aligned} R &= A_x + B_x \\ &= 10 \text{ lb} + -15 \text{ lb} \\ &= -5 \text{ lb} \end{aligned}$$

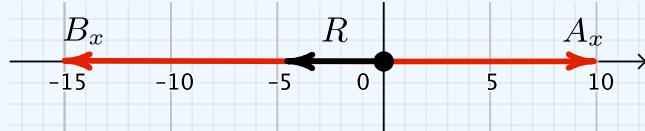

$R$  is the scalar component of the resultant  $\mathbf{R}$ .

The negative sign on the result indicates that the resultant force acts to the left.

#### Example 3.3.6 2-D Scalar Addition.

If  $F_x = -40 \text{ N}$  and  $F_y = 30 \text{ N}$ , find the magnitude and direction of their resultant  $\mathbf{F}$ .


**Answer.**

$$\mathbf{F} = 50 \text{ N at } 143.1^\circ \angle$$

**Solution.** In this example the scalar components have different subscripts indicating that they act along different lines of action, and this must be accounted for when they are added together.

Make a sketch of the two vectors and add them using the parallelogram rule to get

$$\begin{aligned} F &= \sqrt{F_x^2 + F_y^2} & \theta &= \tan^{-1} \left| \frac{B_y}{B_x} \right| \\ &= \sqrt{(-40)^2 + (30)^2} & &= \tan^{-1} \left| \frac{30}{-40} \right| \\ &= 50 \text{ N} & &= 36.9^\circ \end{aligned}$$

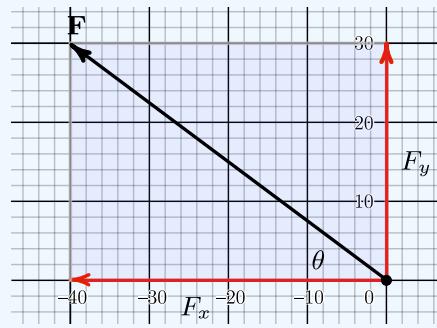

These are the magnitude and direction of vector  $\mathbf{F}$ .

### 3.3.3 Two-force Bodies


As you might expect from the name, a **two-force body** is a body with two forces acting on it, like the weight just discussed. As we just saw, in order for a two-force body to be in equilibrium the two forces must add to zero. There are only three possible ways that this can happen:

The two forces must either

- share the same line of action, have the same magnitude, and point away from each other, or

- share the same line of action, have the same magnitude, and point towards each other, or
- both forces have zero magnitude.

When two forces have the same magnitude but act in diametrically opposite directions, we say that they are **equal and opposite**. When equal and opposite forces act on an object and they point towards each other we say that the object is **in compression**, when they point away from each other the object is **in tension**. Tension and compression describe the internal state of the object.

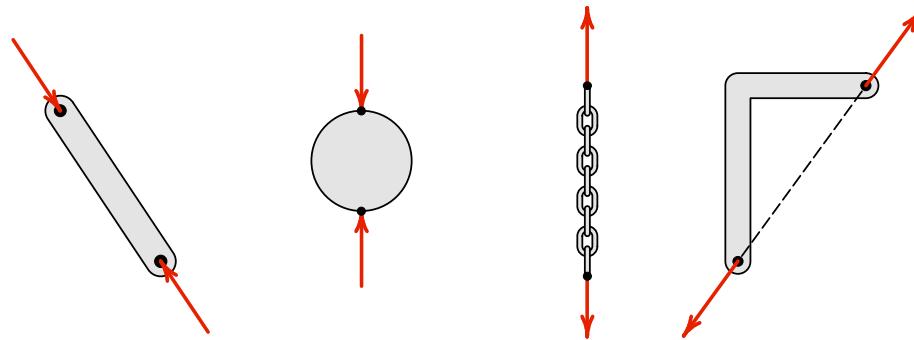

**Figure 3.3.7** Examples of two-force bodies

Two force bodies appear frequently in multipart structures and machines which will be covered in [Chapter 6](#). Some examples of two force bodies are struts and linkages, ropes, cables and guy wires, and springs.

#### Example 3.3.8 Tug of War.

Marines and Airmen at Goodfellow Air Force Base are competing in a tug of war and have reached a stalemate. The Marines are pulling with a force of 1500 lb. How hard are the Airmen pulling? What is the tension in the rope?




This is a simple question, but students often get it wrong at first.

**Answer.** The tension in the rope is  $\sqrt{lb}1500$ . Both teams are pulling with the same force.

**Solution.**

**Assumptions.** A free-body diagram of the rope is shown.



**Figure 3.3.9**

We'll solve this with scalar components because there's no need for the additional complexity of the vector approaches in this simple situation.

We'll align the  $x$  axis with the rope with positive to the right as usual to establish a coordinate system.

Assume that the pull of each team can be represented by a single force. Let force  $M$  be supplied by the Marines and force  $A$  by the Airmen; call the tension in the rope  $T$ .

Assume that the weight of the rope is negligible; then the rope can be considered a particle because both forces lie along same line of action.

**Givens.**  $M = 1500$  lb.

**Procedure.** Since they're stalemated we know that the rope is in equilibrium.

Applying the equation of equilibrium gives:

$$\begin{aligned}\Sigma F_x &= 0 \\ -M + A &= 0 \\ A &= M \\ &= 1500 \text{ lb}\end{aligned}$$

We find out that both teams pull with the same force. This was probably obvious without drawing the free-body diagram or solving the equilibrium equation.

It may seem equally obvious that if both teams are pulling with 1500 lb in opposite directions that the tension in the rope must be 3000 lb. This is wrong however.

The tension in the rope  $T$  is an example of an internal force and in order to learn its magnitude we need a free-body diagram which includes force  $T$ . To expose the internal force we take an imaginary cut through the rope and draw (or imagine) a free-body diagram of either half of the rope.



**Figure 3.3.10**

The correct answer is easily seen to be  $T = A = M = 1500$  lb.

**Example 3.3.11 Hanging Weight.**

The wire spool being lifted into the truck consists of 750 m of three strand medium voltage (5 kV) 1/0 AWG electrical power cable with a 195 amp capacity at 90°C, weighing 927 kg/km, on a 350 kg steel reel.

How much weight is supported by the hook and high tension polymer lifting sling?



**Answer.**

$$W = 10300 \text{ N}$$

**Solution.** The entire weight of the wire and the spool is supported by the hook and sling.

Remember that weight is not mass and mass is not force. The total weight is found by multiplying the total mass by the gravitational constant  $g$ .

$$\begin{aligned} W &= mg \\ &= (m_w + m_s) g \\ &= ((0.75 \text{ km})(927 \text{ kg/km}) + 350 \text{ kg}) g \\ &= (1045 \text{ kg})(9.81 \text{ m/s}^2) \\ &= 10300 \text{ N} \end{aligned}$$

**Question 3.3.12** How can we apply the principles of mechanics in the two previous examples if the rope and the sling are clearly not “rigid bodies?”

**Answer.** They are not rigid, but they are inextensible and in tension. Under these conditions they don’t change shape, so we can treat them as rigid. If the force were to change direction and put either into compression, our assumptions and analysis would fail. That why “tug of war” involves pulling and not pushing. □

## 3.4 Particles in Two Dimensions

### 3.4.1 Introduction

In this section we will study situations where everything of importance occurs in a 2-dimensional plane and the third dimension is not involved. Studying two-dimensional problems is worthwhile, because they illustrate all the important principles of engineering statics while being easier to visualize and less mathematically complex.

We will normally work in the “plane of the page,” that is, a two-dimensional Cartesian plane with a horizontal  $x$  axis and a vertical  $y$  axis discussed in [Section 2.3](#)

previously. This coordinate system can represent either the front, side, or top view of a system as appropriate. In some problems it may be worthwhile to **rotate the coordinate** system, that is, to establish a coordinate system where the  $x$  and  $y$  axes are not horizontal and vertical. This is usually done to simplify the mathematics by avoiding simultaneous equations.

### 3.4.2 General Procedure

The general procedure for solving equilibrium of a particle problems in two dimensions is to:


1. *Identify the particle.* The particle will be the object or point where the lines of action of all the forces intersect.
2. *Establish a coordinate system.* Normally this will be a system with the origin at the particle and a horizontal  $x$  axis and a vertical  $y$  axis, though it may be advantageous to align one axis with an unknown.
3. *Draw a free-body diagram.* The FBD shows the object and all the forces acting on it, and defines the symbols we will use. Every force should be labeled with a *roman letter* to represent its magnitude and, unless it aligns with a coordinate axis, a *greek letter* or degree measure for its direction.
4. *State any given values* and identify the unknown values.
5. *Find trivial angles.* Some angles may be easily found from the geometry of the problem. If that is the case, draw a simple, labeled triangle and use trigonometry to determine the measure of the angle.
6. *Count knowns and unknowns.* At this point you should have no more than two unknowns remaining. If you don't, reread the problem and look for overlooked information. When solving mechanics problems, it is always helpful to know what you know and what you are looking for and this information changes as you work through your solution.
7. *Formulate equilibrium equations.* Based on the free-body diagram, and using the symbols you have selected, formulate an equilibrium equation using one of the methods described in this section. The choice of method is up to you, and as you gain experience you will be able to identify the 'best' approach.
8. *Simplify.* Use algebra to simplify the equilibrium equations. Get them into a form where the unknown values are alone on the left of the equals sign. Work symbolically as long as you can and avoid the temptation to insert numeric values prematurely, because this tends to lead to errors and obscures the relationships between the forces and angles.

9. *Substitute values for symbols.* When your equilibrium equations have been fully simplified in symbolic form, pull out your calculator and substitute the known values and calculate the unknowns. Indicate the units of your results, and underline or box your answers.
10. *Check your work.* Have you made any algebra or trig mistakes? If you add the forces graphically do they appear to add to zero? Do the results seem reasonable given the situation? Have you included appropriate units? If you have time, work the problem using another approach and compare answers.

### 3.4.3 Force Triangle Method

The force triangle method is applicable to situations where there are (exactly) three forces acting on a particle, and no more than two unknown magnitudes or directions.

If such a particle is in equilibrium then the three forces must add to zero. Graphically, if you arrange the force vectors tip-to-tail, they will form a closed, three-sided polygon, i.e. a triangle. This is illustrated in [Figure 3.4.1](#).

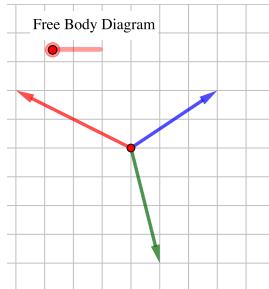

**Figure 3.4.1** Free Body Diagram and Force Triangle

**Question 3.4.2** Why do the forces always form a closed polygon?


**Answer.** Because their resultant is zero. □

The force triangle is a graphical representation of the vector [equilibrium equation \(3.1.1\)](#). It can be used to solve for the unknown values in a number of different ways, which will be illustrated in the next two examples. In [Example 3.4.3](#) We will use a graphical approach to find the forces causing equilibrium, and in [Example 3.4.5](#) we will use trigonometry to solve for the unknown forces mathematically.

In the next example we will use technology to draw a scaled diagram of the force triangle representing the equilibrium situation. We are using [Geogebra](#) to make the drawing, but you could use CAD, another drawing program, or even a ruler and protractor as you prefer. Since the diagram is accurately drawn, the lengths and angles represent the the magnitudes and directions of the forces which hold the particle in equilibrium.

## Example 3.4.3 Frictionless Incline.

A force  $P$  is being applied to a 100 lb block resting on a frictionless incline as shown. Determine the magnitude and direction of force  $P$  and of the contact force on the bottom of the block.

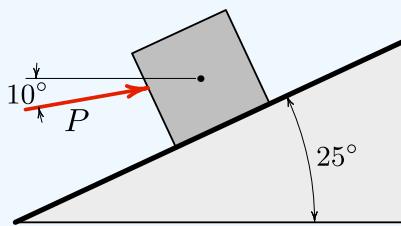**Answer.**

$$P = 43.8 \text{ lb at } 10^\circ \angle$$

$$N = 102 \text{ lb at } 115^\circ \angle$$

**Solution.**


**Assumptions.** We must assume that the block is in equilibrium, that is, either motionless or moving at a constant velocity in order to use the equilibrium equations. We will represent the block's weight and the force between the incline and the block as concentrated forces. The force of the inclined surface on the block must act in a direction which is normal to the surface since it is frictionless and can't prevent motion along the surface.

**Givens.** The knowns here are the weight of the block, the direction of the applied force, and the slope of the incline. The slope of the incline provides the direction of the normal force.

The unknown values are the magnitudes of forces  $P$  and  $N$ .

**Free Body Diagram.** You should always begin a statics problem by drawing a free-body diagram. It gives you an opportunity to think about the situation, identify knowns and unknowns, and define symbols.

We define three symbols,  $W$ ,  $N$ , and  $P$ , representing the weight, normal force, and the applied force respectively. The angles could be given symbols too, but since we know their values it isn't necessary.

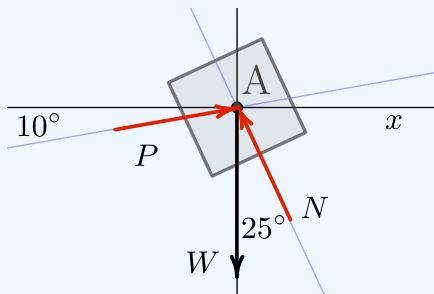


The free-body can be a quick sketch or an accurate drawing but it must show *all* the forces acting on the particle and define the symbols. In most cases you won't know the magnitudes of all the forces, so the lengths of the vectors are just approximate.

Notice that the force  $N$  is represented as acting  $25^\circ$  from the  $y$  axis, which is  $90^\circ$  away from the direction of the surface.

gle.

### Force Triangle

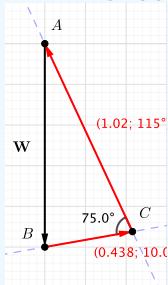

Use the known information to carefully and accurately construct the force triangle.

1. Start by placing point  $A$  at the origin.
2. Draw force  $\mathbf{W}$  straight down from  $A$  with a length of 1, and place point  $B$  at its tip. The length of this vector represents the weight.
3. We know the direction of force  $\mathbf{P}$  but not its magnitude. For now, just draw line  $BC$  passing through point  $B$  with an angle of  $10^\circ$  from the horizontal.
4. Similarly we know force  $\mathbf{N}$  acts at  $25^\circ$  from vertical because it is perpendicular to the inclined surface, and it will close the triangle. So draw line  $CA$  passing through point  $A$  and at a  $25^\circ$  angle from the  $y$  axis.
5. Call the point where lines  $BC$  and  $CA$  intersect point  $C$ . Points  $A$ ,  $B$ , and  $C$  define the force triangle.
6. Now draw force  $\mathbf{P}$  from point  $B$  to point  $C$ , and
7. Draw force  $\mathbf{N}$  from point  $C$  back to point  $A$ .

**Question 3.4.4** Can you prove from the geometry of the triangle that angle  $BCA$  is  $75^\circ$ ? □

**Results.** In steps 6 and 7, Geogebra tells us that  $\mathbf{p} = (0.438; 10.0^\circ)$  which means force  $P$  is 0.438 units long with a direction of  $10^\circ$ , similarly  $\mathbf{n} = (1.02; 115^\circ)$  means  $N$  is 1.02 units long at  $115^\circ$ . These angles are measured counterclockwise from the positive  $x$  axis.

These are not the answers we are looking for, but we're close. Remember that for this diagram, our scale is

$$1 \text{ unit} = 100 \text{ lbs},$$

so scaling the lengths of  $\mathbf{p}$  and  $\mathbf{n}$  by this factor gives

$$P = (0.438 \text{ unit})(100 \text{ lb/unit})$$

$$\begin{aligned}
 &= 43.8 \text{ lb at } 10^\circ \angle \\
 N &= (1.02 \text{ unit})(100 \text{ lb/ unit}) \\
 &= 102 \text{ lb at } 115^\circ \angle.
 \end{aligned}$$

If you use technology such as Geogebra, as we did here, or CAD software to draw the force triangle, it will accurately produce the solution.

If technology isn't available to you, such as during an exam, you can still use a ruler and protractor draw the force triangle, but your results will only be as accurate as your diagram. In the best case, using a sharp pencil and carefully measuring lengths and angles, you can only expect about two significant digits of accuracy from an hand drawn triangle. Nevertheless, even a roughly drawn triangle can give you an idea of the correct answers and be used to check your work after you use another method to solve the problem.

### 3.4.4 Trigonometric Method

The general approach for solving particle equilibrium problems using the trigonometric method is to:


1. Draw and label a free-body diagram.
2. Rearrange the forces into a force triangle and label it.
3. Identify the knowns and unknowns.
4. Use trigonometry to find the unknown sides or angles of the triangle.

There must be no more than two unknowns to use this method, which may be either magnitudes or directions. During the problem setup you will probably need to use the geometry of the situation to find one or more angles.

If the force triangle has a right angle you can use [Section B.2](#) to find the unknown values, but in most cases the triangle will be oblique and you will need to use either or both of the [Law of Sines](#) or the [Law of Cosines](#) to find the sides or angles.

## Example 3.4.5 Cargo Boom.

A 24 kN crate is being lowered into the cargo hold of a ship. Boom  $AB$  is 20 m long and acts at a  $40^\circ$  angle from king-post  $AC$ . The boom is held in this position by topping lift  $BC$  which has a 1:4 slope. Determine the forces in the boom and in the topping lift.

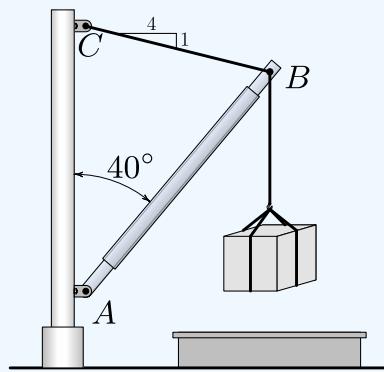

## Answer.


$$T = 17.16 \text{ kN}$$

$$C = 25.9 \text{ kN}$$

## Solution.

**Draw diagrams.** Start by identifying the particle and drawing a free-body diagram. The particle in this case is point  $B$  at the end of the boom because it is the point where all three forces intersect. Let  $T$  be the tension of the topping lift,  $C$  be the force in the boom, and  $W$  be the weight of the load. Let  $\alpha$  and  $\beta$  be the angles that forces  $T$  and  $C$  make with the horizontal.

Rearrange the forces acting on point  $B$  to form a force triangle as was done in the previous example.

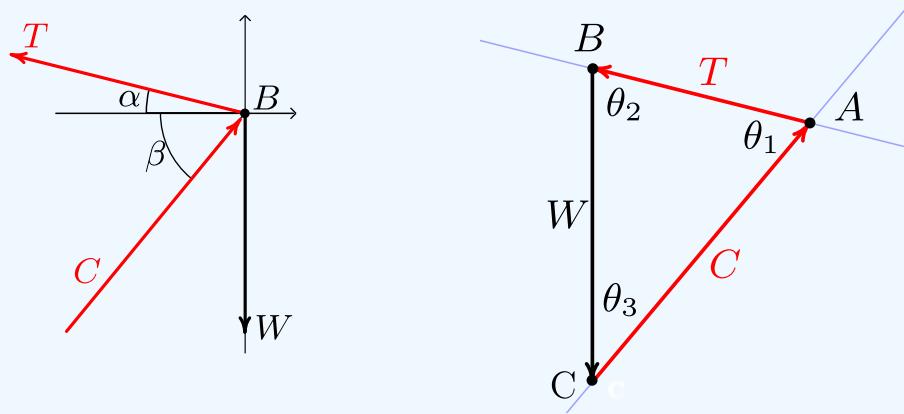

**Find angles.** Angle  $\alpha$  can be found from the slope of the topping lift.

$$\alpha = \tan^{-1} \left( \frac{1}{4} \right) = 14.0^\circ.$$

Angle  $\beta$  is the complement of the  $40^\circ$  angle the boom makes with the vertical kingpost.

$$\beta = 90^\circ - 40^\circ = 50^\circ$$

Use these values to find the three angles in the force triangle.

$$\theta_1 = \alpha + \beta = 64.0^\circ$$

$$\theta_2 = 90^\circ - \alpha = 76.0^\circ$$

$$\theta_3 = 90^\circ - \beta = 40.0^\circ$$

**Solve force triangle.** With the angles and one side of the force triangle known, apply the [Law of Sines](#) to find the two unknown sides.

$$\frac{\sin \theta_1}{W} = \frac{\sin \theta_2}{C} = \frac{\sin \theta_3}{T}$$

$$T = W \left( \frac{\sin \theta_3}{\sin \theta_1} \right)$$

$$T = 24 \text{ kN} \left( \frac{\sin 40.0^\circ}{\sin 64.0^\circ} \right)$$

$$T = 17.16 \text{ kN}$$

$$C = W \left( \frac{\sin \theta_2}{\sin \theta_1} \right)$$

$$C = 24 \text{ kN} \left( \frac{\sin 76.0^\circ}{\sin 64.0^\circ} \right)$$

$$C = 25.9 \text{ kN}$$

### 3.4.5 Scalar Components Method

The general statement of equilibrium of forces, [\(3.1.1\)](#), can be expressed as the sum of forces in the **i**, **j** and **k** directions

$$\Sigma \mathbf{F} = \Sigma F_x \mathbf{i} + \Sigma F_y \mathbf{j} + \Sigma F_z \mathbf{k} = 0. \quad (3.4.1)$$

This statement will only be true if all three coefficients of the unit vectors are themselves equal to zero, leading to this scalar interpretation of the equilibrium equation

$$\Sigma \mathbf{F} = 0 \implies \begin{cases} \Sigma F_x = 0 \\ \Sigma F_y = 0 \\ \Sigma F_z = 0 \end{cases} \quad (\text{three dimensions}). \quad (3.4.2)$$

In other words the single vector equilibrium equation is equivalent to three independent scalar equations, one for each coordinate direction.

In two-dimensional situations, no forces act in the **k** direction leaving just these two equilibrium equations to be satisfied

$$\Sigma \mathbf{F} = 0 \implies \begin{cases} \Sigma F_x = 0 \\ \Sigma F_y = 0 \end{cases} \quad (\text{two-dimensions}). \quad (3.4.3)$$


We will use this equation as the basis for solving two-dimensional particle equilibrium problems in this section and [equation \(3.4.2\)](#) for three-dimensional problems in [Section 3.5](#).

You are undoubtedly familiar with utility poles which carry electric, cable and telephone lines, but have you ever noticed as you drive down a winding road that the poles will switch from one side of the road to the other and back again? Why is this?

If you consider the forces acting on the top of a pole beside a curving section of road you'll observe that the tensions of the cables produce a net force towards the road. This force is typically opposed by a "guy wire" pulling in the opposite direction which prevents the pole from tipping over due to unbalanced forces. The power company tries to keep poles beside road segments with convex curvature. If they didn't switch sides, the guy wire for poles at concave curves would extend into the road... which is a poor design.

#### Example 3.4.6 Utility Pole.

Consider the utility pole next to the road shown below. A top view is shown in the right hand diagram. If each of the six cables pulls with a force of 10.0 kN, determine the magnitude of the tension in the guy wire.

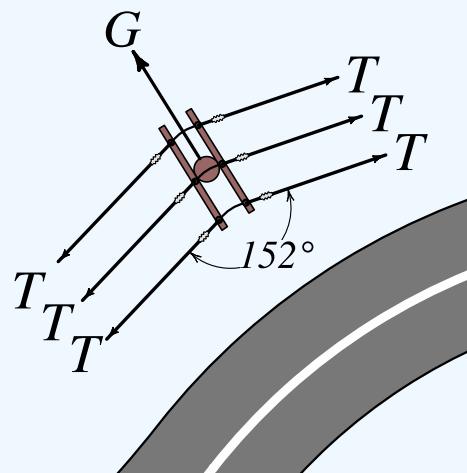

#### Answer.

$$G = 14.5 \text{ kN}$$

#### Solution.


**Assumptions.** A utility pole isn't two-dimensional, but we will consider the top view and forces in the horizontal plane only.

It also isn't a concurrent force problem because the lines of action of the forces don't all intersect at a single point. However, we can make it into one

by replacing the forces of the three cables in each direction with a single force three times larger. This is an example of an *equivalent transformation*, a trick engineers use frequently to turn complex situations into simpler ones. It works here because all the tensions are equal, and the outside wires are equidistant from the center wire. You must be careful to justify all equivalent transformations, because they will lead to errors if they are not applied correctly. Equivalent transformations will be discussed in greater detail in [Section 4.5](#) later.

**Givens.**  $T = 10.0 \text{ kN}$

**Procedure.** Begin by drawing a neat, labeled, free-body diagram of the pole, establishing a coordinate system and indicating the directions of the forces. Although it is not necessary, it simplifies this problem considerably to note the symmetry and establish the  $x$  axis along the axis of symmetry. Let  $T$  be the tension in one wire, and  $G$  be the tension of the guy wire.

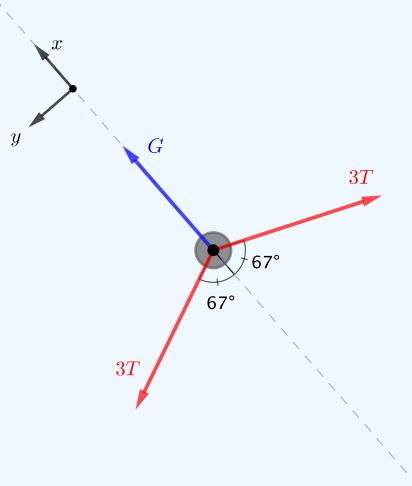

To solve apply the equations of equilibrium. The symmetry of this problem means that the  $\Sigma F_x$  equation is sufficient.

$$\Sigma F_x = 0$$

$$G - 6 T_x = 0$$

$$G = 6 (T \cos 76^\circ)$$

$$= 14.5 \text{ kN}$$


This problem could have also been solved using the force triangle method. See [Subsection 3.4.3](#).

In the next example we look at the conditions of equilibrium by considering the load and the constraints, rather than taking a global equilibrium approach which considers both the load and reaction forces.

## Example 3.4.7 Slider.

Three forces act on a machine part which is free to slide along a vertical, frictionless rod. Forces  $A$  and  $B$  have a magnitude of 20 N and force  $C$  has a magnitude of 30 N. Force  $B$  acts  $\alpha$  degrees from the horizontal, and force  $C$  acts at the same angle from the vertical.

Determine the angle  $\alpha$  required for equilibrium, and the magnitude and direction of the reaction force acting on the slider.

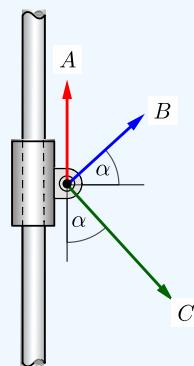


**Answer.** The question asks for the *reaction force*. The reaction force  $\mathbf{R}'$  is equal and opposite to force  $\mathbf{R}$ .

$$\begin{aligned}\mathbf{R}' &= -\mathbf{R} = 26.15 \text{ N} \leftarrow \\ &= \langle -26.15 \text{ N}, 0 \rangle\end{aligned}$$

## Solution.

**Givens.** We are given magnitudes of forces  $A = 20 \text{ N}$ ,  $B = 20 \text{ N}$ , and  $C = 30 \text{ N}$ . The unknowns are angle  $\alpha$  and resultant force  $R$ .

dure.

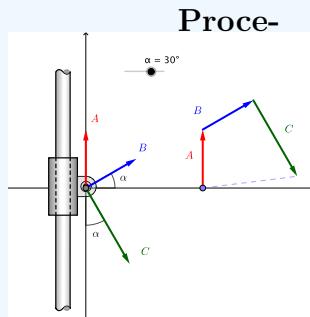

Proce-



Since the rod is frictionless, it cannot prevent the slider from moving vertically. Consequently the slider will only be in equilibrium if the resultant of the three load forces is horizontal. Since a horizontal force has no  $y$  component, we can establish this equilibrium condition:

$$R_y = \Sigma F_y = A_y + B_y + C_y = 0$$

Inserting the known values into the equilibrium relation and simplifying gives an equation in terms of unknown angle  $\alpha$ .

$$R_y = A_y + B_y + C_y = 0$$

$$\begin{aligned} A + B \sin \alpha - C \cos \alpha &= 0 \\ 20 + 20 \sin \alpha - 30 \cos \alpha &= 0 \\ 2 + 2 \sin \alpha - 3 \cos \alpha &= 0 \end{aligned}$$

This is a single equation with a single unknown, although it is not particularly easy to solve with algebra. One approach is described [here](#). An alternate approach is to use technology to graph the function  $y(x) = 2 + 2 \sin x - 3 \cos x$ . The roots of this equation correspond to values of  $\alpha$  which satisfy the equilibrium condition above. The root occurring closest to  $x = 0$  will be the answer corresponding to our problem, in this case  $\alpha = 22.62^\circ$  which you can verify by plugging it back into the equilibrium equation. Note that  $-90^\circ$  also satisfies this equation, but it is not the solution we are looking for.

Once  $\alpha$  is known, we can find the reaction force by adding the  $x$  components of  $A$ ,  $B$ , and  $C$ .

$$\begin{aligned} R_x &= A_x + B_x + C_x \\ &= A + B \cos \alpha + C \sin \alpha \\ &= 0 + 10 \cos(22.62^\circ) + 20 \sin(22.62^\circ) \\ &= 26.15 \text{ N} \end{aligned}$$

By inspection the sum of  $A$ ,  $B$ , and  $C$  acts to the right, and the resultant force  $\mathbf{R}$  is the vector sum of  $R_x$  and  $R_y$ . In this case, because  $R_y = 0$ ,


$$\begin{aligned} \mathbf{R} &= R_x \rightarrow \\ &= \langle 26.15 \text{ N}, 0 \rangle \end{aligned}$$

The next example demonstrates how rotating the coordinate system can simplify the solution. In the first solution, the standard orientation of the  $x$  and  $y$  axes is chosen, and in the second the coordinate system is rotated to align with one of the unknowns, which enables the solution to be found without solving simultaneous equations.

**Example 3.4.8 Roller.**

A lawn roller which weighs 160 lb is being pulled up a  $10^\circ$  slope at a constant velocity.

Determine the required pulling force  $P$ .

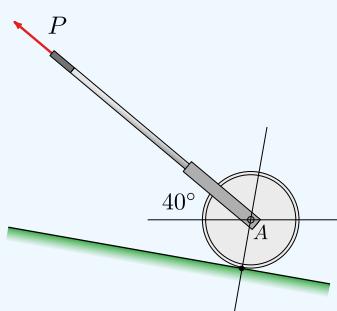


**Answer.**

$$P = 32.1 \text{ lb}$$

**Solution 1.**

**Strategy.**

1. Select a coordinate system, in this case horizontal and vertical.
2. Draw a free-body diagram
3. Solve the equations of equilibrium using the scalar approach.

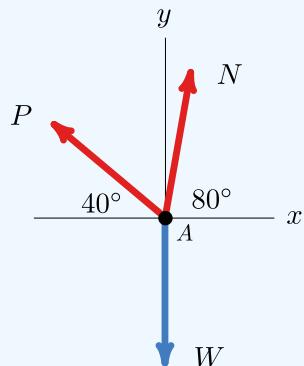

**Procedure.**

$$\Sigma F_x = 0$$

$$-P_x + N_x = 0$$

$$N \cos 80^\circ = P \cos 40^\circ$$

$$N = P \left( \frac{0.766}{0.174} \right)$$

$$\Sigma F_y = 0$$

$$P_y + N_y = 0$$

$$P \sin 40^\circ + N \sin 80^\circ = W$$

$$0.643P + 0.985N = 160 \text{ lb}$$

Solving simultaneously for  $P$

$$0.643P + 0.985(4.40P) = 160 \text{ lb}$$


$$4.98P = 160 \text{ lb}$$

$$P = 32.1 \text{ lb}$$

### Solution 2.

#### Strategy.

1. Rotate the standard coordinate system  $10^\circ$  clockwise to align the new  $y'$  axis with force  $N$ .
2. Draw a free-body diagram and calculate the angles between the forces and the rotated coordinate system.
3. Solve for force  $P$  directly.

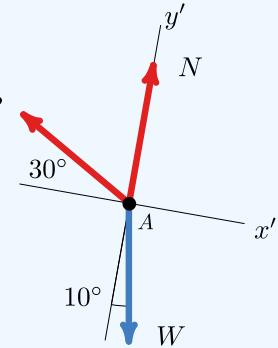

#### Procedure.

$$\Sigma F_{x'} = 0$$

$$-P_{x'} + W_{x'} = 0$$

$$P \cos 30^\circ = W \sin 10^\circ$$

$$P = 160 \text{ lb} \left( \frac{0.1736}{0.866} \right)$$


$$P = 32.1 \text{ lb}$$

### 3.4.6 Multi-Particle Equilibrium

When two or more particles interact with each other there will always be common forces between them as a result of Newton's Third Law, the action-reaction principle.

Consider the two boxes with weights  $W_1$  and  $W_2$  connected to each other and the ceiling shown in the interactive diagram. Position one shows the physical arrangement of the objects, position two shows their free-body diagrams, and position three shows simplified FBDs where the objects are represented by points. The boxes were freed by replacing the cables with tension forces  $T_A$  and  $T_B$ .


From the free-body diagrams you can see that cable  $B$  only supports the weight of the bottom box, while cable  $A$  and the ceiling support the combined weight. The



tension  $T_B$  is common to both diagrams. Recognizing the common force is the key to solving multi-particle equilibrium problems.

**Example 3.4.9** Two hanging weights.

A 100 N weight  $W$  is supported by cable  $ABCD$ . There is a frictionless pulley at  $B$  and the hook is firmly attached to the cable at point  $C$ . What is the magnitude and direction of force  $\mathbf{P}$  required to hold the system in the position shown?

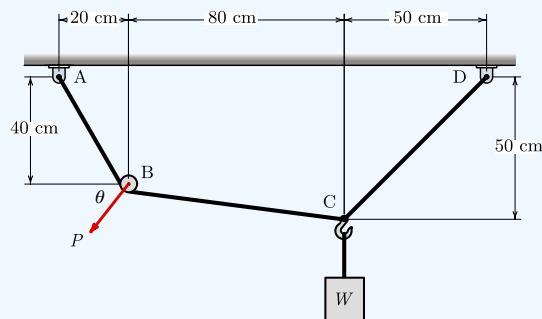

**Hint.** The particles are points  $B$  and  $C$ . The common force is the tension in rope segment  $BC$ .

**Answer.**


$$P = 84.3 \text{ N}$$

$$\theta = 54.7^\circ \text{ CCW from } -x \text{ axis.}$$

$$\mathbf{P} = \langle -48.7 \text{ N}, -68.8 \text{ N} \rangle$$

**Solution.**

**Strategy.** Following the [General Procedure](#) we identify the particles as points  $A$  and  $B$ , and draw free-body diagrams of each. We label the rope tensions  $A$ ,  $C$ , and  $D$  for the endpoints of the rope segments, and label the angles of the forces  $\alpha$ ,  $\beta$ , and  $\phi$ . We will use the standard cartesian coordinate system and use the [scalar components method](#).

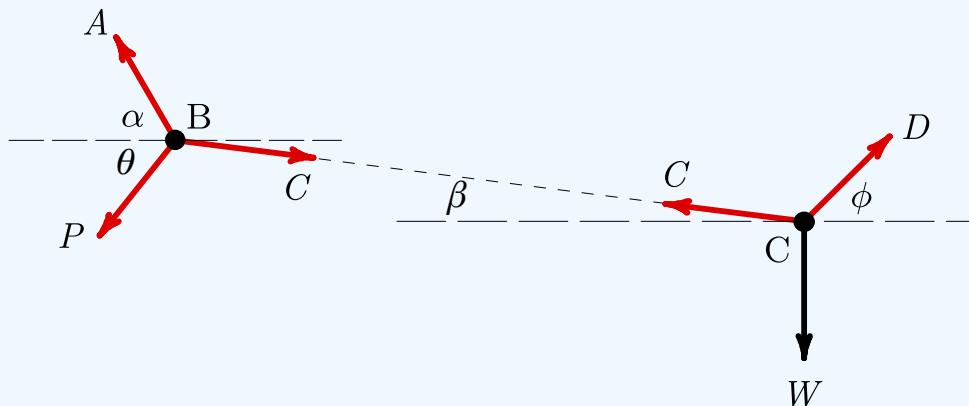

Weight  $W$  was given, and we can easily find angles  $\alpha$ ,  $\beta$ , and  $\phi$  so the knowns are:

$$W = 100 \text{ N}$$

$$\alpha = \tan^{-1} \left( \frac{40}{20} \right) = 63.4^\circ$$

$$\beta = \tan^{-1} \left( \frac{10}{80} \right) = 7.13^\circ$$

$$\phi = \tan^{-1} \left( \frac{50}{50} \right) = 45^\circ$$

Counting unknowns we find that there are two on the free-body diagram of particle  $C$  ( $C$  and  $D$ ), but four on particle  $B$ , ( $A$   $C$ ,  $P$  and  $\theta$ ).

Two unknowns on particle  $C$  means it is solvable since there are two [equilibrium equations](#) available, so we begin there.

### Solve Particle C.

$$\begin{array}{ll} \Sigma F_x = 0 & \Sigma F_y = 0 \\ -C_x + D_x = 0 & C_y + D_y - W = 0 \\ C \cos \beta = D \cos \phi & C \sin \beta + D \sin \phi = W \\ C = D \left( \frac{\cos 45^\circ}{\cos 7.13^\circ} \right) & C \sin 7.13^\circ + D \sin 45^\circ = 100 \text{ N} \\ C = 0.713D & 0.124C + 0.707D = 100 \text{ N} \end{array}$$

Solving these two equations simultaneously gives

$$C = 89.5 \text{ N} \quad D = 125.7 \text{ N.}$$

With particle  $C$  solved, we can use the results to solve particle  $B$ . There are three unknowns remaining, tension  $A$ , magnitude  $P$ , and direction  $\theta$ . Unfortunately, we still only have two available equilibrium equations. When you find yourself in this situation with more unknowns than equations, it generally means that you are missing something. In this case it is the pulley. When a cable wraps around a frictionless pulley the tension doesn't change. The missing information is that  $A = C$ . Knowing this, the magnitude and direction of force  $\mathbf{P}$  can be determined.

Because  $A = C$ , the free-body diagram of particle  $B$  is symmetric, and the technique used in [Example 3.4.6](#) to rotate the coordinate system could be applied here.

**Solve Particle B.** Referring to the FBD for particle  $B$  we can write these equations.

$$\Sigma F_x = 0 \quad \Sigma F_y = 0$$

$$\begin{aligned} -A_x - P_x + C_x &= 0 & A_y - P_y - C_y &= 0 \\ P \cos \theta &= C \cos \beta - A \cos \alpha & P \sin \theta &= A \sin \alpha - C \sin \beta \end{aligned}$$

Since  $A = C = 89.5$  N, substituting and solving simultaneously gives

$$\begin{aligned} P \cos \theta &= 48.7 \text{ N} & P \sin \theta &= 68.9 \text{ N} \\ P &= 84.3 \text{ N} & \theta &= 54.7^\circ. \end{aligned}$$

These are the magnitude and direction of vector  $\mathbf{P}$ . If you wish, you can express  $\mathbf{P}$  in terms of its scalar components. The negative signs on the components have been applied by hand since  $\mathbf{P}$  points down and to the left.

$$\begin{aligned} \mathbf{P} &= \langle -P \cos \theta, -P \sin \theta \rangle \\ &= \langle -48.7 \text{ N}, -68.8 \text{ N} \rangle \end{aligned}$$

## 3.5 Particles in Three Dimensions


The world we live in has three dimensions. One and two dimensional textbook problems have been useful for learning the principles of engineering mechanics, but to model real-world problems we will have to consider all three.

Fortunately, all the principles you have learned so far still apply, but many students have difficulty visualizing three-dimensional problems drawn on two-dimensional paper and the mathematics becomes a bit harder. It is especially important to have good diagrams and keep your work neat and organized to avoid errors.

### 3.5.1 Three-Dimensional Coordinate Frame

We need a coordinate frame for three dimensions, just as we did in two dimensions, so we add a third orthogonal axis  $z$  to our existing two-dimensional frame.

For equilibrium of a particle, usually the origin of the coordinate frame is at the particle, the  $x$  axis is horizontal, and the  $y$  axis is vertical just as in a two-dimensional situation. The orientation of the  $z$  axis is determined by the **right hand rule**. Using your *right hand*, put your palm at the origin and point your fingers along the positive  $x$  axis. Then curl your fingers towards the positive  $y$  axis. Your thumb will point in the direction of the positive  $z$  axis. In this case, if the positive  $x$  axis is horizontal and to the right and the positive  $y$  axis is vertical and upwards, the positive  $z$  axis will be coming *towards* you. Remember that the three axes are mutually perpendicular, i.e. each axis is perpendicular to both of the others. The right hand rule is important in many aspects of engineering, so make sure that you understand how it works. Mistakes will lead to sign errors.

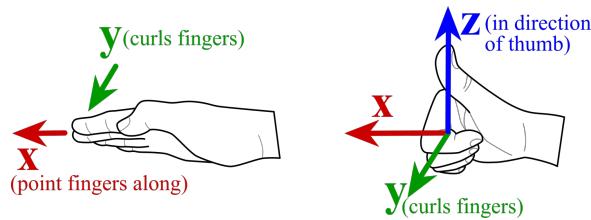

**Figure 3.5.1** Point-and-curl right-hand rule technique.

### 3.5.2 Free Body Diagrams

As we did before, we begin our analysis by drawing a free body diagram which shows all forces and moment acting on the object of interest. Drawing a FBD in three-dimensions can be difficult. It is sometimes hard to see things in three-dimensions when they are drawn on a two-dimensional sheet. Consequently, it is important to carefully label vectors and angles, but not to clutter up the diagram with too much and/or unnecessary information. When working in two-dimensions, you only need one angle to determine the direction of the vector, but when working in three-dimensions you actually need two or three angles.


### 3.5.3 Angles

As stated above, when working in three dimensions you actually need three angles to determine the direction of the vector, namely, the angle with respect to the  $x$  axis, the angle with respect to the  $y$  axis and the angle with respect to the  $z$  axis. The three angles mentioned above are not necessarily located in any of the coordinate planes. Think of it this way — three points determine a plane, and in this case, the three points are: the origin, the tip of the vector, and a point on an axis. The plane made by those three points is not necessarily the  $xy$ ,  $yz$ , or  $xz$  plane. It is most likely a “tilted” plane.

The angle the vector makes with the positive  $x$  axis is usually labeled  $\theta_x$ , but any Greek letter will do. The angle the vector makes with the positive  $y$  axis is usually labeled  $\theta_y$ ; and the angle the vector makes with the positive  $z$  is usually labeled  $\theta_z$ .

As with two dimensions, angles can be determined from geometry — a distance vector going in the same direction as the force vector. This is the three-dimensional equivalent of similar triangles that you used in the two-dimensional problems.

If you know that the line of action of a force vector goes between two points, then you can use the distance vector that goes from one point to the other to determine

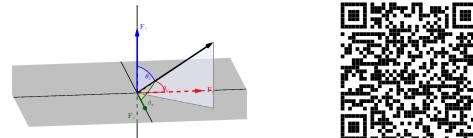

**Figure 3.5.2** Direction Cosine Angles

the angles.

Let's suppose that the line of action goes through two points  $A$  and  $B$ , and the direction of the force is from  $A$  towards  $B$ . The first step in determining the three angles is to write the distance vector from point  $A$  towards point  $B$ . Let's call this vector  $\mathbf{r}_{AB}$ . Starting at point  $A$ , you need to determine how to get to point  $B$  by moving in each of the three directions. Ask yourself: to get from point  $A$  to point  $B$  do I have to move in the  $x$  direction? If so, how far do I have to travel? This becomes the  $x$  component of the vector  $\mathbf{r}_{AB}$  namely  $r_{AB_x}$ . Next, to get from point  $A$  to point  $B$  how far do I move in  $y$  direction? This distance is  $r_{AB_y}$ . Finally, to get from point  $A$  to point  $B$  how far do I move in the  $z$ -direction? This distance is  $r_{AB_z}$ .

When writing these scalar components pay attention to which way you move along the axes. If you travel towards the positive end of an axis, the corresponding scalar component gets a positive sign. Travel towards the negative end results in a negative sign. The sign is important.

Once you have determined the components of the distance vector  $r_{AB}$ , you can determine the total distance from point  $A$  to  $B$  using the [three-dimensional Pythagorean Theorem](#)

$$r_{AB} = \sqrt{(r_{AB_x})^2 + (r_{AB_y})^2 + (r_{AB_z})^2} \quad (3.5.1)$$

Lastly, the angles are determined by the direction cosines, namely

$$\cos \theta_x = \frac{r_{AB_x}}{r_{AB}} \quad \cos \theta_y = \frac{r_{AB_y}}{r_{AB}} \quad \cos \theta_z = \frac{r_{AB_z}}{r_{AB}}$$

Since the force vector has the same line of action as the distance vector, by the three-dimensional version of similar triangles,

$$\frac{r_{AB_x}}{r_{AB}} = \frac{F_x}{F} \quad \frac{r_{AB_y}}{r_{AB}} = \frac{F_y}{F} \quad \frac{r_{AB_z}}{r_{AB}} = \frac{F_z}{F}.$$

So,

$$F_x = \left( \frac{r_{AB_x}}{r_{AB}} \right) F \quad F_y = \left( \frac{r_{AB_y}}{r_{AB}} \right) F \quad F_z = \left( \frac{r_{AB_z}}{r_{AB}} \right) F$$

Now, that is a bit of math there, but the important things to remember are:

- You can use three angles to determine the direction of a force in three dimensions.
- You can use the geometry to get them from a distance vector that lies along the line of action of the force.

The three direction cosine angles are not mutually independent. From (3.5.1) you can easily show that

$$\cos^2 \theta_x + \cos^2 \theta_y + \cos^2 \theta_z = 1, \quad (3.5.2)$$

so if you know two direction cosine angles you can find the third from this relationship.

### 3.5.4 General Procedure

The general procedure for solving equilibrium of a particle (or concurrent force) problems in three dimensions is essentially the same as for two dimensions using the components method. The major differences are that you must be very careful about the orientation and direction of each axis of the coordinate frame and the angles each vector makes with each axis. When working in three dimensions there are three important angles, but the general procedure is the same. The overall procedure is presented here and then each of the new steps is explained in more detail.

1. *Identify the particle.* The particle will be the object or point where the lines of action of all the forces intersect.
2. *Establish a coordinate system.* Normally this will be a system with the origin at the particle or directly below the particle, a horizontal  $x$  axis, a vertical  $y$  axis, and the  $z$  axis coming out of the page and towards you. It is important to follow the right-hand rule when defining the coordinate system.
3. *Draw a free-body diagram.* The FBD shows the object and all the forces acting on it, and defines the symbols we will use. Every force should be labeled with a roman letter to represent its magnitude. Appropriate angles should be represented by a greek letter with a subscript indicating which axis the angle of the vector is measured against.
4. *State any given values* and identify the unknown values.
5. *Determine the direction of each of the force vectors.* Angles are usually determined by the geometry.
6. *Count knowns and unknowns.* At this point you should have no more than three unknowns remaining. If you don't, reread the problem and look for overlooked information. When solving mechanics problems, it is always helpful to know what you know and what you are looking for and this information changes as you work through your solution.
7. *Formulate equilibrium equations.* Based on the free-body diagram and using the symbols you have selected, formulate the three equilibrium equations.
8. *Simplify.* Use algebra to simplify the equilibrium equations. Get them into a form where the unknown values are alone on the left of the equals sign. Work symbolically as long as you can and avoid the temptation to insert numeric values prematurely, because this tends to lead to errors and obscures the relationships between the forces and angles.
9. *Substitute values for symbols.* When your equilibrium equations have been fully simplified in symbolic form, pull out your calculator and substitute the known values and calculate the unknowns. Indicate the units of your results, and underline or box your answers.


10. *Check your work.* Have you made any algebra or trig mistakes? If you add the components of the forces, do they add to zero? Do the results seem reasonable given the situation? Have you included appropriate units?

Example 3.5.3 Balloon.

A hot air balloon 30 ft above the ground is tethered by three cables as shown below.

If the balloon is pulling upwards with a force of 900 lb, what is the tension in each of the three cables?

The grid lines on the ground plane are spaced 10 ft apart.

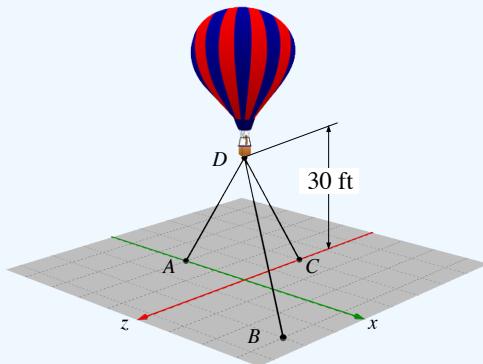

**Answer.**

$$A = 540 \text{ lb}$$

$$B = 469 \text{ lb}$$

$$C = 361 \text{ lb}$$


**Solution.**

**Strategy.**

The three tensions are the unknowns which we can find by applying the three equilibrium equations.

We'll establish a coordinate system with the origin directly below the balloon and the  $y$  axis vertical, then draw and label a free-body diagram.

Next we'll use the given information to find two points on each line of action and use them to find the components of each force in terms of the unknowns.

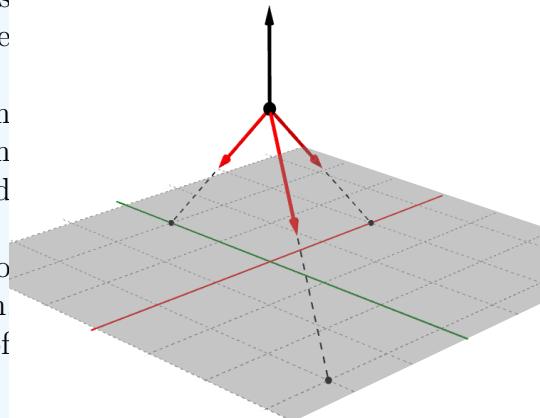

When the  $x$ ,  $y$  and  $z$  components of all forces can be expressed in terms of known values, the equilibrium equations can be solved.

**Geometry.** From the diagram, the coordinates of the points are

$$A = (-20, 0, 0) \quad B = (30, 0, 20) \quad C = (0, 0, -20) \quad D = (0, 30, 0)$$

Use the point coordinates to find the  $x$ ,  $y$  and  $z$  components of the forces.

$$\begin{aligned} A_x &= \frac{-20}{L_A} A & A_y &= \frac{-30}{L_A} A & A_z &= \frac{0}{L_A} A \\ B_x &= \frac{30}{L_B} B & B_y &= \frac{-30}{L_B} B & B_z &= \frac{20}{L_B} B \\ C_x &= \frac{0}{L_C} C & C_y &= \frac{-30}{L_C} C & C_z &= \frac{-20}{L_C} C \end{aligned}$$

Where  $L_A$ ,  $L_B$  and  $L_C$  are the lengths of the three cables found with the [distance formula](#).

$$\begin{aligned} L_A &= \sqrt{(-20)^2 + (-30)^2 + 0^2} & = 36.1 \text{ ft} \\ L_B &= \sqrt{30^2 + (-30)^2 + 20^2} & = 46.9 \text{ ft} \\ L_C &= \sqrt{0^2 + (-30)^2 + 20^2} & = 36.1 \text{ ft} \end{aligned}$$

**Equilibrium Equations.** Applying the three equations of equilibrium yields three equations in terms of the three unknown tensions.

$$\begin{aligned} \Sigma F_x &= 0 \\ A_x + B_x + C_x &= 0 \\ -\frac{20}{36.1}A + \frac{30}{46.9}B + 0C &= 0 \\ A &= 1.15B \end{aligned} \tag{1}$$

$$\begin{aligned} \Sigma F_z &= 0 \\ A_z + B_z + C_z &= 0 \\ 0A + \frac{20}{46.9}B - \frac{20}{36.1}C &= 0 \\ C &= 0.769B \end{aligned} \tag{2}$$

$$\begin{aligned} \Sigma F_y &= 0 \\ A_y + B_y + C_z + D &= 0 \\ -\frac{20}{36.1}A - \frac{30}{46.9}B - \frac{30}{36.1}C + 900 &= 0 \\ 0.555A + 0.640B + 0.831C &= 900 \text{ lb} \end{aligned} \tag{3}$$

Solving these equations simultaneously yields the answers we are seeking. One way to do this is to substitute equations (1) and (2) into (3) to eliminate  $A$  and  $C$  and solve the resulting equation for  $B$ .

$$0.555(1.15B) + 0.640B + 0.831(0.769B) = 900 \text{ lb}$$

$$1.917B = 900 \text{ lb}$$

$$B = 469 \text{ lb}$$


With  $B$  known, substitute it into equations (1) and (2) to find  $A$  and  $C$ .

$$\begin{aligned} A &= 1.15B \\ &= 540 \text{ lb} \end{aligned}$$

$$\begin{aligned} C &= 0.769B \\ &= 361 \text{ lb} \end{aligned}$$

#### Example 3.5.4 Skycam.

The skycam at Stanford University Stadium has a mass of 20 kg and is supported by three cables as shown. Assuming that it is currently in equilibrium, find the tension in each of the three supporting cables.

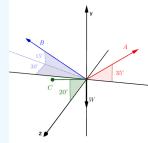

#### Answer.

$$A = 196.4 \text{ N} \quad B = 192.2 \text{ N} \quad C = 98.5 \text{ N}$$

**Solution.** In this situation, the directions of all four forces are specified by the angles in the free body diagram, and the magnitude of the weight is known. The three unknowns are the magnitudes of forces  $\mathbf{A}$ ,  $\mathbf{B}$ , and  $\mathbf{C}$ .

$$W = mg = 20 \text{ kg } 9.81 \text{ m/s}^2 = 196.2 \text{ N}$$

We will first find unit vectors in the directions of the four forces by inspection of the free body diagram. This step requires visualizing the components unit vectors, and determining the angles each makes with the coordinate axis.

$$\hat{\mathbf{W}} = \langle 0, -1, 0 \rangle$$

$$\hat{\mathbf{A}} = \langle \cos 35^\circ, \cos 55^\circ, 0 \rangle$$

$$\hat{\mathbf{B}} = \langle -\cos 15^\circ \cos 30^\circ, \cos 75^\circ, -\cos 15^\circ \cos 60^\circ \rangle$$

$$\hat{\mathbf{C}} = \langle 0, \cos 70^\circ, \cos 20^\circ \rangle$$

Particle equilibrium requires that  $\sum \mathbf{F} = 0$ , so,

$$A \hat{\mathbf{A}} + B \hat{\mathbf{B}} + C \hat{\mathbf{C}} = -W \hat{\mathbf{W}}.$$

This is a  $3 \times 3$  system of three simultaneous equation, one for each coordinate direction, which needs to be solved for  $A$ ,  $B$ , and  $C$ .

$$A \cos 35^\circ - B \cos 15^\circ \cos 30^\circ + 0 = 0 \quad (\Sigma F_x = 0)$$

$$A \cos 55^\circ + B \cos 30^\circ + C \cos 70^\circ = 196.2 \text{ N} \quad (\Sigma F_y = 0)$$

$$0 - \cos 15^\circ \cos 60^\circ + C \cos 20^\circ = 0 \quad (\Sigma F_z = 0)$$

These can be solved by any method you choose. Here we will use Sage. Evaluating the coefficients and expressing the equations in matrix form gives

$$\begin{bmatrix} 0.819 & -0.837 & 0 \\ 0.574 & 0.259 & 0.342 \\ 0 & -0.482 & 0.940 \end{bmatrix} \begin{bmatrix} A \\ B \\ C \end{bmatrix} = \begin{bmatrix} 0 \\ 196.2 \text{ N} \\ 0 \end{bmatrix}.$$

This is an equation in the form

$$[A][x] = [B].$$

Entering the coefficient matrixes into Sage.

```
A = Matrix([[0.819, -0.837, 0], [0.574, 0.259, 0.342], [0, -0.482, 0.940]])
B = vector([0, 196.2, 0])
x = A.solve_right(B)
x
```

(196.391530042156, 192.168056277808, 98.5372373679827)

After evaluating, we learn that

$$A = 196.4 \text{ N}$$

$$B = 192.2 \text{ N}$$

$$C = 98.5 \text{ N.}$$

## 3.6 Exercises


# Chapter 4

## Moments and Static Equivalence

When a force is applied to a body, the body tends to translate in the direction of the force and also tends to rotate. We have already explored the translational tendency in [Chapter 3](#). We will focus on the rotational tendency in this chapter.

This rotational tendency is known as the moment of the force, or more simply the **moment**. You may be familiar with the term **torque** from physics. Engineers use “torque” where physicists use “moment” to describe the same concept. Moments are vectors, so they have magnitude and direction and obey all rules of vector addition and subtraction described in [Chapter 2](#). Additionally, moments have a *center of rotation*, although it is more accurate to say that they have an axis of rotation. In two dimensions, the axis of rotation is perpendicular to the plane of the page and so will appear as a **point of rotation**, also called the **moment center**. In three dimensions, the axis of rotation can be any direction in 3D space.

A wrench provides a familiar example. A force  $\mathbf{F}$  applied to the handle of a wrench, as shown in [Figure 4.0.1](#), creates a moment  $\mathbf{M}_A$  about an axis out of the page through the centerline of the nut at  $A$ . The  $\mathbf{M}$  is bold because it represents a vector, and the subscript  $A$  indicates the axis or center of rotation. The direction of the moment can be either clockwise or counter-clockwise depending on how the force is applied.

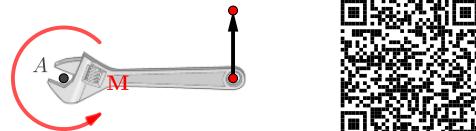

**Figure 4.0.1** A moment  $\mathbf{M}_A$  is created by force  $\mathbf{F}$ .


### 4.1 Direction of a Moment

In a two-dimensional problem the direction of a moment can be determined easily by inspection as either clockwise or counter-clockwise. A counter-clockwise rotation corresponds with a moment vector pointing out of page and is considered positive.

In three-dimensions a moment vector may point in any direction in space and is


more difficult to visualize. The direction is established by the *right hand rule*.

To apply the right hand rule, first establish a position vector  $\mathbf{r}$  pointing *from* the rotation center *to* the point of application of the force, or another point on its line of action. If you align your thumb with the position vector and your index finger with the force vector, then your middle finger points the direction of the moment vector  $\mathbf{M}$ . Alternately, you can align your index finger with the position vector and your middle finger with the force vector, and your thumb will point in the direction of the moment vector.

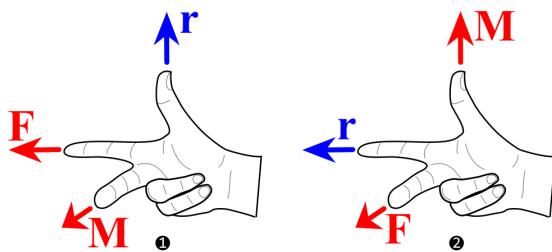

**Figure 4.1.1** Two ways to apply the right hand rule to determine the direction of a moment.

Another approach is the point-and-curl method. Start with your hand flat and fingertips pointing along the position vector  $\mathbf{r}$  pointing *from* the center of rotation *to* a point on the force's line of action. Adjust your hand so the force vector  $\mathbf{F}$  pushes fingers into a curl. Your thumb then defines the direction of the moment  $\mathbf{M}$ .

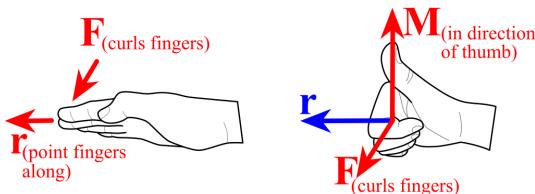

**Figure 4.1.2** Point-and-curl right-hand rule technique for moments.

Any of these techniques may be used to find the direction of a moment. They all produce the same result so you don't need to learn them all, but make sure you have at least one method you can use accurately and consistently.

## 4.2 Moments in Two Dimensions

### Key Questions

- Why is there no moment about any point on the line of action of a force?
- If you increase the distance between a force and a point of interest, does the moment of the force go up or down?
- What practical applications can you think of that could use moments to de-

scribe?

Moments in two dimensions can only cause a clockwise or counter-clockwise rotation in the plane of the page. This means that we can completely describe a two-dimensional moment with a signed scalar value. This signed value is called the **scalar moment**. The numerical value indicates its magnitude and the sign indicates its direction. By convention, a positive sign indicates a counter-clockwise moment and a negative sign means clockwise. This sign convention is chosen to be consistent with the right hand rule.

As you probably know, the strength of the moment (or torque) produced by a wrench depends on where and how much force you apply to the wrench. If the nut won't budge, you can apply a larger force or get a longer wrench, and the optimum direction to apply the force is at right angles to the wrench's handle.

The magnitude of a scalar moment is found by multiplying the magnitude of force  $\mathbf{F}$  times the **moment arm**, where the moment arm is defined as the **perpendicular distance**,  $d_{\perp}$ , from the center of rotation to the line of action of the force, measured perpendicularly as illustrated in the interactive.

$$M = Fd_{\perp}. \quad (4.2.1)$$

To this value you must attach a positive sign to indicate counter-clockwise rotation or a negative sign to indicate clockwise rotation.

Notice that since the magnitude of a moment depends only on the force and the moment arm, different points on the wrench experience different moments. Points on the force's line of action experience no moment because there the moment arm is zero.



**Figure 4.2.1** Definition of the moment,  $M = Fd_{\perp}$ .

### 4.2.1 Varignon's Theorem

Varignon's Theorem is a method to calculate moments developed in 1687 by French mathematician Pierre Varignon (1654 – 1722). It states that sum of the moments of several concurrent forces about a point is equal to the moment of the resultant of those forces, or alternately, the moment of a force about a point equals the sum of the moments of its components.

This means you can find the moment of a force by first breaking it into components, evaluating the scalar moments of the individual components, and finally summing them to find the net moment about the point. The scalar moment of a component is the magnitude of the component times the perpendicular distance to the moment

center by the [definition of a moment](#), with a positive or negative sign assigned to indicate its direction.

This may sound like more work than just finding the moment of the original force, but in practice it is often easier. Consider the interactive to the right. If we break the force into components along the wrench handle and perpendicular to it, the sum of the moments of these component is


$$M = F_{\perp}d, \quad (4.2.2)$$

where  $d$  is the length of the handle, and  $F_{\perp}$  is the component of  $\mathbf{F}$  perpendicular to the handle. Here, the contribution of the parallel component to the sum is zero, since its line of action passes through the moment center  $A$ .

This result agrees with our intuitive understanding of how a wrench works; the greatest torque is developed when the force is applied at a right angle to the handle.

Equations (4.2.1) and (4.2.2) not only produce the same result, they are completely identical. If the length of the handle is  $d$  and the angle between the force  $\mathbf{F}$  and the handle is  $\theta$ , then  $d_{\perp} = d \sin \theta$  and  $F_{\perp} = F \sin \theta$ . Using either equation to calculate the moment gives

$$M = F d \sin \theta. \quad (4.2.3)$$

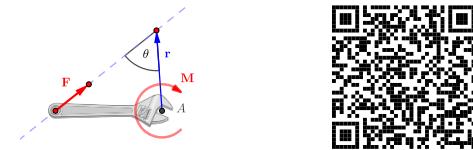

**Figure 4.2.2** Verignon's Theorem:  $M = F_{\perp}d$




## 4.2.2 Rectangular Components

Verignon's theorem is particularly convenient to use the diagram provides horizontal and vertical dimensions, which is often the case. If you decompose forces into horizontal and vertical components you can find the scalar moments of the components without difficulty.

The moment of a force is the sum of the moments of the components, so

$$M = \pm F_x d_y \pm F_y d_x. \quad (4.2.4)$$


Take care to assign the correct sign to the individual moment terms to indicate direction; positive moment tend to rotate the object counter-clockwise and negative moment tend to rotate it clockwise according to the standard right hand rule convention.

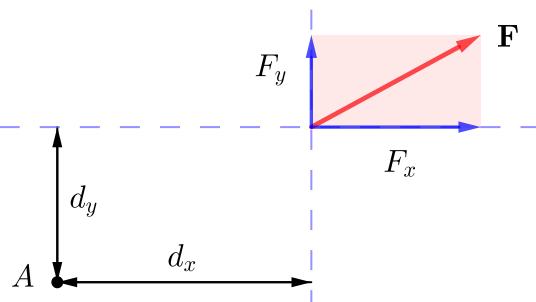

**Figure 4.2.3** Sum of moments of components.  $M = \pm F_x d_y \pm F_y d_x$

Example 4.2.4 Verignon's theorem.

A 750 lb force is applied to the frame as shown.  
Determine the moment this force makes about point A.

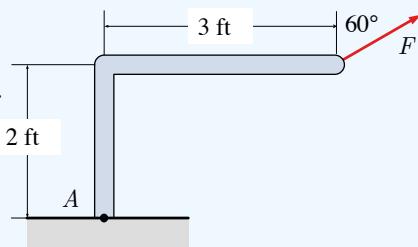

**Answer.**

$$\mathbf{M}_A = 174 \text{ ft}\cdot\text{lb} \text{ Clockwise.}$$

**Solution.** Force  $\mathbf{F}$  acts  $60^\circ$  from the vertical with a 750 lb magnitude, so its horizontal and vertical components are

$$\begin{aligned} F_x &= F \sin 60^\circ = 649.5 \text{ lb} \\ F_y &= F \cos 60^\circ = 375.0 \text{ lb} \end{aligned}$$

For component  $F_x$ , the perpendicular distance from point A is 2 ft so the moment of this component is

$$M_1 = 2F_x = 1299 \text{ ft}\cdot\text{lb} \text{ Clockwise.}$$

For component  $F_x$ , the perpendicular distance from point A is 3 ft so the moment of this component is

$$M_2 = 3F_y = 1125 \text{ ft}\cdot\text{lb} \text{ Counter-clockwise.}$$


Assigning a negative sign to  $M_1$  and a positive sign to  $M_2$  to account for their directions and summing, gives the moment of  $\mathbf{F}$  about A.

$$\begin{aligned} M_A &= -M_1 + M_2 \\ &= -1299 + 1125 \\ &= -174 \text{ ft}\cdot\text{lb} \end{aligned}$$

The negative sign indicates that the resultant moment is clockwise, with a magnitude of 174 ft·lb.

$$\mathbf{M}_A = 174 \text{ ft}\cdot\text{lb} \text{ Clockwise.}$$

The interactive diagram below will help you visualize the different tools to find moments that were covered in this section.

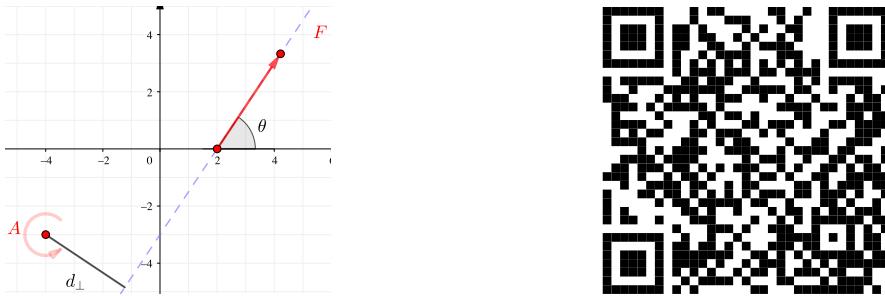

**Figure 4.2.5** Various approaches to find a moment about a point.



## 4.3 Moments in Three Dimensions

### Key Questions

- Where does the moment arm vector  $\mathbf{r}$  start and end?
- Why does Varignon's Theorem give you the same answer as a determinant?
- How can you combine a dot product and a cross product to find the moment about a line?
- Why does a mixed-triple determinant give you a scalar while a cross-product determinant gives you a vector?

Moments are vectors and they will typically have components in the  $x$ ,  $y$  and  $z$  directions in three-dimensional situations. The circular arrows we used to represent vectors in two dimensions are unclear in three dimensions, so moments are drawn as vectors just like force and position vectors, although you will sometimes see moments drawn with double arrowheads to differentiate them from force vectors. In three-dimensions, it is usually not convenient to find the moment arm and use equation (4.2.1), so instead we will use the vector cross product, which is easier to apply but less intuitive.

### 4.3.1 Moment Cross Products

The most robust and general method to find the moment of a force is to use the vector cross product



$$\mathbf{M} = \mathbf{r} \times \mathbf{F}, \quad (4.3.1)$$

where  $\mathbf{F}$  is the force creating the moment, and  $\mathbf{r}$  is a position vector from the moment center to the line of action of the force. The cross product is a vector multiplication operation and the product is a vector perpendicular to the vectors you multiplied.

The mathematics of cross products was discussed in [Section 2.8](#), and equation [\(2.8.1\)](#) provides one method to calculate a moment cross products

$$\mathbf{M} = |\mathbf{r}| |\mathbf{F}| \sin \theta \hat{\mathbf{u}}. \quad (4.3.2)$$

Here,  $\theta$  is the angle between the two vectors as shown in [Figure 4.3.1](#) above, and  $\hat{\mathbf{u}}$  is the unit vector perpendicular to both  $\mathbf{r}$  and  $\mathbf{F}$  with the direction coming from the right-hand rule. This equation is useful if you know or can find the magnitudes of  $\mathbf{r}$  and  $\mathbf{F}$  and the angle  $\theta$  between them. This equation is the vector equivalent of [\(4.2.3\)](#).

Alternately, if you know or can find the components of the position  $\mathbf{r}$  and force  $\mathbf{F}$  vectors, it's typically easiest to evaluate the moment cross product using the determinant form discussed in [Subsection 2.8.1](#).

$$\begin{aligned} \mathbf{M} &= \mathbf{r} \times \mathbf{F} \\ &= \begin{vmatrix} \mathbf{i} & \mathbf{j} & \mathbf{k} \\ r_x & r_y & r_z \\ F_x & F_y & F_z \end{vmatrix} \\ &= (r_y F_z - r_z F_y) \mathbf{i} - (r_x F_z - r_z F_x) \mathbf{j} + (r_x F_y - r_y F_x) \mathbf{k} \end{aligned} \quad (4.3.3)$$

Here,  $r_x$ ,  $r_y$ , and  $r_z$  are components of the vector describing the distance from the point of interest to the force.  $F_x$ ,  $F_y$ , and  $F_z$  are components of the force. The resulting moment has three components. These components represent the moments around each of the  $x$ ,  $y$ , and  $z$  axes. The magnitude of the resultant moment can be calculated using the three-dimensional Pythagorean Theorem.

$$M = |\mathbf{M}| = \sqrt{M_x^2 + M_y^2 + M_z^2} \quad (4.3.4)$$

It is important to avoid three common mistakes when setting up the cross product.

- The order must always be  $\mathbf{r} \times \mathbf{F}$ , never  $\mathbf{F} \times \mathbf{r}$ . The moment arm  $\mathbf{r}$  appears in the middle line of the determinant and the force  $\mathbf{F}$  on the bottom line.

- The moment arm  $\mathbf{r}$  must always be measured from moment center to the line of action of the force. Never from the force to the point.
- The signs of the components of  $\mathbf{r}$  and  $\mathbf{F}$  must follow those of a right-hand coordinate system.

In two dimensions,  $r_z$  and  $F_z$  are zero, so (4.3.3) reduces to


$$\begin{aligned}\mathbf{M} &= \mathbf{r} \times \mathbf{F} \\ &= \begin{vmatrix} \mathbf{i} & \mathbf{j} & \mathbf{k} \\ r_x & r_y & 0 \\ F_x & F_y & 0 \end{vmatrix} \\ &= (r_x F_y - r_y F_x) \mathbf{k}. \end{aligned}\quad (4.3.5)$$

This is just the vector equivalent of [Varignon's Theorem](#) in two dimensions, with the correct signs automatically determined from the signs on the scalar components of  $\mathbf{F}$  and  $\mathbf{r}$ .

### 4.3.2 Moment about a Point

The next two interactives should help you visualize moments in three dimensions.

The first shows the force vector, position vector and the resulting moment all placed at the origin for simplicity. The moment is perpendicular to the plane containing  $\mathbf{F}$  and  $\mathbf{r}$  and has a magnitude equal to the ‘area’ of the parallelogram with  $\mathbf{F}$  and  $\mathbf{r}$  for sides.

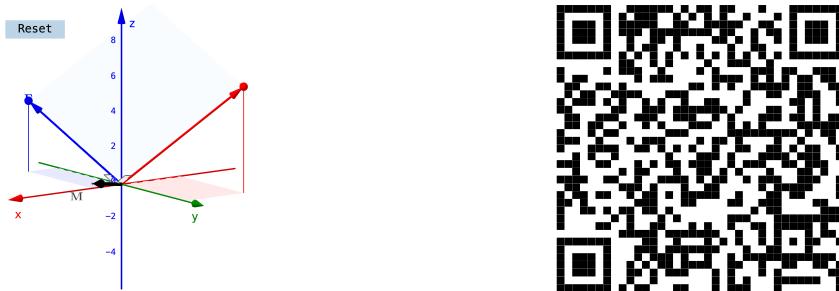

**Figure 4.3.2**

The second interactive shows a more realistic situation. The moment center is at arbitrary point  $A$ , and the line of action of force  $\mathbf{F}$  passes through arbitrary points  $P_1$  and  $P_2$ . The position vector  $\mathbf{r}$  is the vector from  $A$  to a point on the line of action, and the force  $\mathbf{F}$  can be slid anywhere along that line.

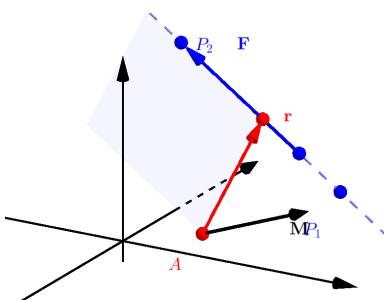


Figure 4.3.3

### 4.3.3 Moment about a Line

In three dimensions, the moment of a force about a point can be resolved into components about the  $x$ ,  $y$  and  $z$  axes. The moment produces a rotational tendency about all three axes simultaneously, but only a portion of the total moment acts about any particular axis.

We are often interested in finding the effect of a moment about a specific line or axis. For example, consider the moment created by a push on a door handle. Unless you push with a force exactly perpendicular to the hinge, only a portion of the total moment you produce will act around the hinge axis and be effective to open the door. The moment we are looking for is the vector projection of the moment onto the axis of interest. Vector projections were first discussed in [Subsection 2.7.3](#).

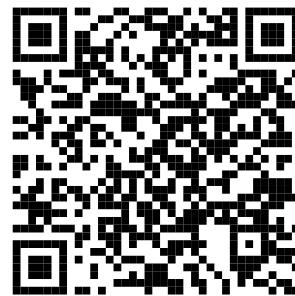
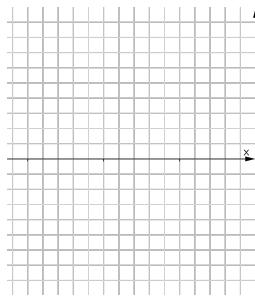


Figure 4.3.4 Moment on a hinge.

The axis of interest does not need to be a coordinate axis. This interactive shows the projection of moment  $\mathbf{M}$  on a line passing through points  $A$  and  $B$ .

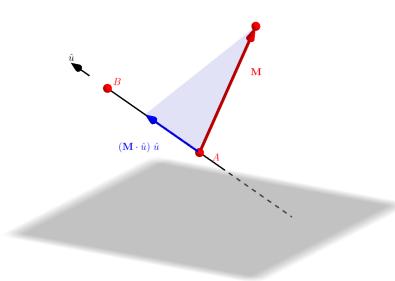


Figure 4.3.5 Moment of a force about a line

To compute the moment of a force about a particular axis you combine skills you already have learned

- finding the moment of a force about a point using the cross product, (4.3.1).
- finding the scalar projection of one vector onto another vector using the dot product, (2.7.8) and,
- multiplying a scalar projection by a unit vector to find the vector projection, (2.7.9).

Carrying these operations out gives a vector which is the component of moment  $\mathbf{r} \times \mathbf{F}$  along the  $u$  axis.

$$\mathbf{M}_{\hat{\mathbf{u}}} = \hat{\mathbf{u}} \cdot (\mathbf{r} \times \mathbf{F}) \hat{\mathbf{u}} \quad (4.3.6)$$

The combined dot and cross product is the scalar projection of the moment on the line of interest and is called the **mixed triple product**.

$$\begin{aligned} \|\text{proj}_u \mathbf{M}\| &= \hat{\mathbf{u}} \cdot \mathbf{M} \\ &= \hat{\mathbf{u}} \cdot (\mathbf{r} \times \mathbf{F}) \end{aligned}$$

The mixed triple product can be calculated one operation at a time, or in a single step. Either way, the result is a scalar value which may be positive or negative. Both techniques require the components of three vectors

- $\hat{\mathbf{u}}$ , the unit direction vector of the line or axis of interest. This vector represents the direction of the axis.<sup>1</sup>
- $\mathbf{r}$ , the position vector from any point on the line of interest to any point on the line of action of the force.
- $\mathbf{F}$ , the force vector. If you have multiple concurrent forces, you can treat them individually or add them together first and find the moment of the resultant — using Verignon's principle.

To calculate the triple product in a single step, evaluate the  $3 \times 3$  determinant consisting of the components of the unit vector  $\hat{\mathbf{u}}$  in the top row, the components of a position vector  $\mathbf{r}$  from line of interest to the line of action of force  $\mathbf{F}$  in the middle row, and the components of the force in the bottom row using the augmented determinant method [Figure 2.8.1](#).

$$\begin{aligned} \|\text{proj}_u \mathbf{M}\| &= \hat{\mathbf{u}} \cdot (\mathbf{r} \times \mathbf{F}) \\ &= \begin{vmatrix} u_x & u_y & u_z \\ r_x & r_y & r_z \\ F_x & F_y & F_z \end{vmatrix} \\ &= (r_y F_z - r_z F_y) u_x + (r_z F_x - r_x F_z) u_y + (r_x F_y - r_y F_x) u_z \end{aligned}$$

To find the vector projection along the selected axis, multiply this value by unit vector for the axis, equation (4.3.6).

---

<sup>1</sup>In many texts, the Greek letter lambda,  $\lambda$  is often used to indicate unit direction vectors.

## 4.4 Couples

### Key Questions

- What makes a couple different than a typical  $\mathbf{r} \times \mathbf{F}$  moment?
- Why is a couple considered a pure moment?
- If a couple is applied about the point we are summing moments, does it still need to be included in the sum of moments equation?

The moments we have considered so far were all caused single forces producing rotation about a moment center. In this section we will consider another type of moment, called a **couple**.

A couple consists of two parallel forces, equal in magnitude, opposite in direction, and non-coincident. Couples are special because the pair of forces always cancel each other, which means that a couple produces a rotational effect but never translation. For this reason, couples are sometimes referred to as “pure moments.” The strength of the rotational effect is called the **moment of the couple** or the **couple-moment**.

When a single force causes a moment about a point, the magnitude depends on the magnitude of the force and the location of the point. In contrast, the moment of a couple is the same at every point and only depends on magnitude of the opposite forces and the distance between them.

For example, consider the interactive where two equal and opposite forces with different lines of action form a couple. The moment of this couple is found by summing the moments of the two forces about arbitrary moment center  $A$ , applying positive or negative signs for each term according to the right hand rule. The moment of the couple is always


$$M = Fd_{\perp} \quad (4.4.1)$$

where  $d_{\perp}$  is the perpendicular distance between the lines of action of the forces.

In two dimensions, couples are represented by a curved arrow indicating the direction of the rotational effect. Following the right-hand rule the value will be positive if the moment is counter-clockwise and negative if it is clockwise. In three dimensions, a couple is represented by a normal vector arrow.

When adding moments to find the total or resultant moment, you must include couple-moments as well the  $\mathbf{r} \times \mathbf{F}$  moments. In equation form, we could express this as:

$$\Sigma M_P = \Sigma(\mathbf{r} \times \mathbf{F}) + \Sigma(\mathbf{M}_{\text{couple}})$$

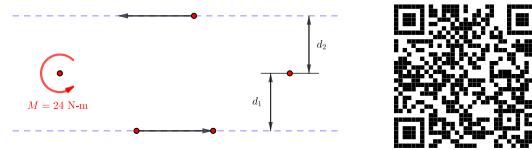

**Figure 4.4.1** Moment of a couple.



**Thinking Deeper 4.4.2 Location Independence.** In this section we have shown that couples produce the same moment at every point on the body. This means that the external effect of couples is *location independent*. Because the moment of a couple is location independent, the moment vector is not bound to any particular point and for this reason is a *free vector*.

We will learn in [Chapter 8](#) that moving a couple around on a rigid body does affect the *internal* loads or stresses inside a body, but changing the location of a couple does not change the *external* loading or reactions.

## 4.5 Equivalent Transformations

### Key Questions

- What is an equivalent transformation?
- What are some examples of equivalent transformations?
- What are *external effects*?

An *equivalent transformation* occurs when a loading on an object is replaced with another loading which has the same *external* effect on the object. By external effect we mean the response of the body that we can see from outside, with no consideration of what happens to it internally. If the object is a free-body, the external effect would be translation and rotation. In statics, since objects are not accelerating, the external effect really means the reactions at the supports required to maintain equilibrium. The external effects will be exactly the same before and after an equivalent transformation.


Equivalent transformation permits us to swap out one set of forces with another one without changing the fundamental physics of the situation. This is usually done to simplify or clarify the situation, or to give you an alternate way to think about, understand, and solve a mechanics problem.

You already know several equivalent transformations although we have not used this terminology before. Here are some transformations you have applied previously.

**Vector Addition.** When you add forces together using the rules of vector addition, you are performing an equivalent transformation. You can swap out two or more components and replace them with a single equivalent resultant force.

Any number of *concurrent* forces can be added together to produce a single resultant force. By definition, the lines of action of concurrent forces all intersect at a common point. The resultant must be placed at this intersection point in order for this replacement to be equivalent. This is because before and after the replacement, the moment about the intersection point is zero. If the resultant was placed somewhere else, that would not be true.

**Replacing a Force with its Component.** Resolving forces into components is also an equivalent transformation, in fact this is just the inverse operation of vector addition. The components are usually orthogonal and in the coordinate directions, or in a given plane and perpendicular to it, but any combination of components forces that adds to the original force is equivalent.

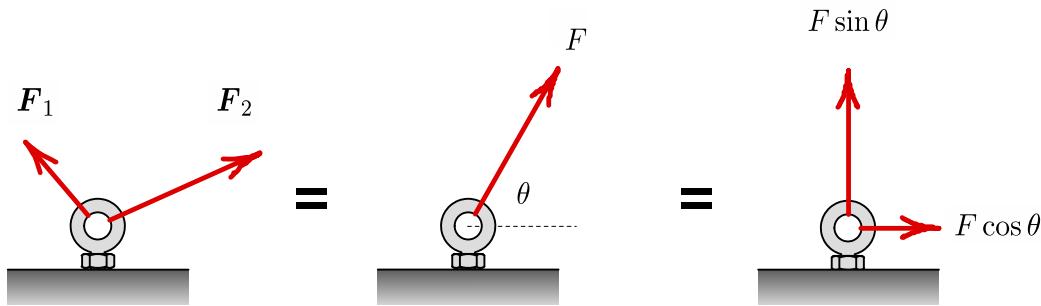

**Figure 4.5.1** Equivalent transformations of vectors

In this diagram,


$$\mathbf{F}_1 + \mathbf{F}_2 = \mathbf{F} = (F; \theta) = \langle F \cos \theta, F \sin \theta \rangle.$$

The effects of the force in the  $x$ ,  $y$  and (in three dimensions the  $z$ ) directions remains the same, and by Verignon's theorem we know that the moment these forces make about any point will also be the same.

An interesting special case occurs when two forces are equal and opposite and have the same line of action. When these are added together, they cancel out, so replacing these two forces with nothing is an equivalent transformation. The opposite is true as well, so you can make two equal and opposite forces spontaneously appear a point if you wish.


**Thinking Deeper 4.5.2 Internal Effects.** We made a point of saying that equivalent systems of force have the same *external* effect on the body. This implies that there may be some other effects which are not the same. As you will see in [Chapter 8](#), we sometimes need to consider internal forces and moments. These are the forces inside a body which hold all the parts of the object to each other, otherwise it would break apart and fail. Although the external effects are the same for all equivalent systems, the internal forces depend on the specifics of how the loads are applied.

Let's imagine that you have gone off-roading and have managed to get your Jeep stuck in the mud. You have two basic options to get it out: you can *pull* it out using the winch on the front bumper, or you can ask your friend to *push* you out with his truck. Both methods (assuming that they apply forces with the same magnitude, direction and line of action) are statically equivalent, and both will equally move your vehicle forward.

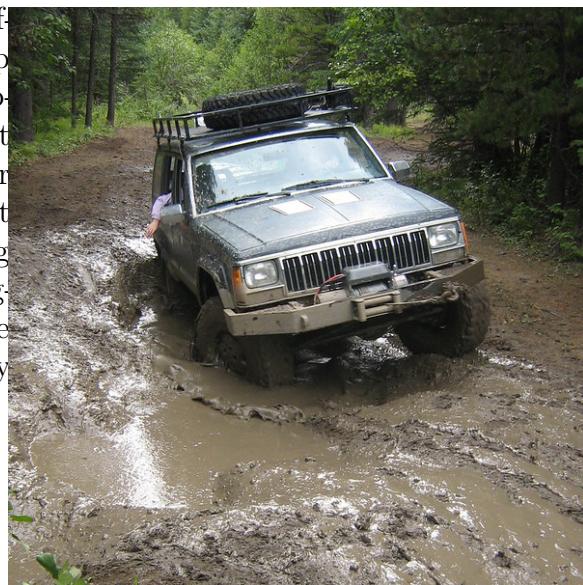

The difference is what might happen to your vehicle. With one method there's a danger that you will rip your front bumper off, with the other you might damage your rear bumper. These are the internal effects and they depend on *where* the equivalent force is applied. These forces are necessary to maintain rigidity and hold the parts of the body together.

**Sliding a force along its line of action.** Sliding a force along its line of action is an equivalent transformation because sliding a force does not change its magnitude, direction or the perpendicular distance from the line of action to any point, so the moments it creates do not change either. This transformation is called the “Principle of Transmissibility”.

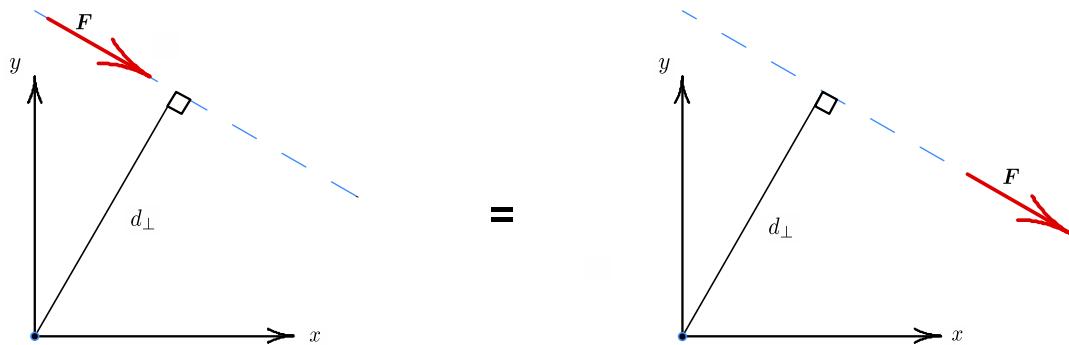


**Figure 4.5.3** Sliding a vector along its line of action

**Replacing a couple with couple-moment or vice-versa.** A *couple*, defined as “two equal and opposite forces with different lines of action,” produces a pure turning action that is equivalent to a concentrated moment, called the *couple-moment*. Couples and couple-moments have no translational effect. Couple-moments are free

vectors, which means that they are not bound to any point. Their external effect is on the entire body and is the same regardless of where it is applied.

This means that you are free to swap out a couple for its couple-moment, or swap a couple-moment for a couple which has the same moment, and you may put the replacement anywhere on you please and it will still be equivalent.

The diagram shows a series of equivalent transformation of a couple.

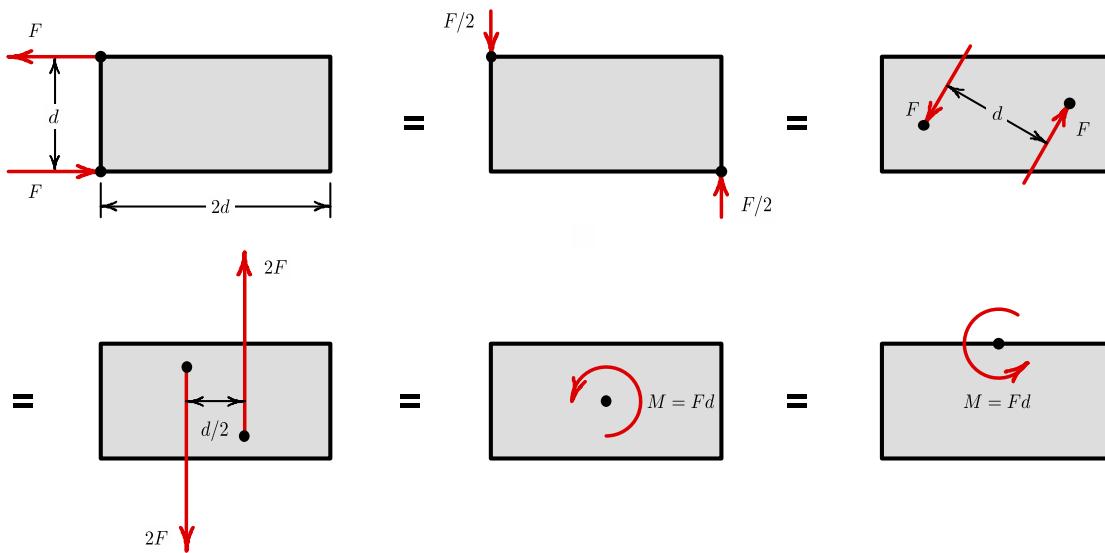

**Figure 4.5.4** Equivalent transformations of couples

Concentrated moments are *free vectors*, which you may draw the circular arrow anywhere you like on the body. In other words moving a concentrated moment from one point to another is an equivalent transformation. Remember though, this equivalence only applies to the external effects. What happens inside the body definitely does depend on the specific point where the moment is applied.


**Adding moments to produce a resultant moment.** If more than one couple-moment or concentrated moment acts on an object the situation may be simplified by adding them together to produce one *resultant moment*,  $\mathbf{M}_R$ . The standard rules of vector addition apply.

In two-dimensional problems moments are either clockwise or counterclockwise, so they may be considered scalar values and added algebraically. Give counterclockwise moments a positive sign and clockwise moments a negative sign according to the right hand rule sign convention. If this is done, the sign of the resultant moment will indicate the direction of the net moment. You can use the right hand rule to establish the direction of the moment vector, which will point into or out of the page.

$$\mathbf{M}_R = \sum \mathbf{M}$$

**Example 4.5.5** Equivalent Moment.

Two concentrated moments and a couple are acting on the object shown. Given:  $M_1 = 400 \text{ N}\cdot\text{m}$ ,  $M_2 = 200 \text{ N}\cdot\text{m}$ ,  $F = 40 \text{ N}$  and  $d = 2 \text{ m}$ . Replace these with single, equivalent concentrated moment, and give the magnitude and direction of your result.

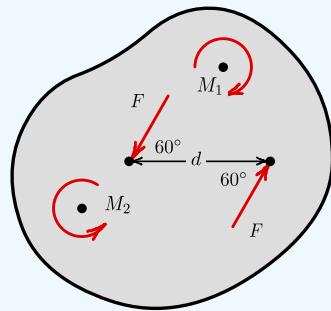

**Answer.**  $M_r = 69.2 \text{ N}\cdot\text{m}$  clockwise.

**Solution.** First, replace the couple with an equivalent couple,  $M_3$ , the magnitude of which is

$$\begin{aligned} M_3 &= Fd_{\perp} \\ &= Fd \sin 60^\circ \\ &= 69.2 \text{ N}\cdot\text{m} \end{aligned}$$

By observation, this is a counterclockwise moment as is  $M_2$ .  $M_1$  is clockwise. Summing the scalar magnitudes gives the resultant moment. The signs of the terms are assigned according to the sign convention: positive if counterclockwise, negative if clockwise.

$$\begin{aligned} M_R &= \Sigma M \\ &= M_1 + M_2 + M_3 \\ &= -400 \text{ N}\cdot\text{m} + 200 \text{ N}\cdot\text{m} + 69.2 \text{ N}\cdot\text{m} \\ &= -130.7 \text{ N}\cdot\text{m} \\ &= 130.7 \text{ N}\cdot\text{m} \text{ clockwise} \end{aligned}$$

**Resolving a moment into components.** For three dimensional moment vectors, another potential equivalent transformation is to resolve a moment vector into components. These may be orthogonal components in the  $x$ ,  $y$ , and  $z$  directions, or components in a plane and perpendicular to it, or components in some other rotated coordinate system.

## 4.6 Statically Equivalent Systems

### Key Questions

- What is an equivalent system?
- What is a resultant force?
- What is a resultant moment?
- Do you have to include both  $\mathbf{r} \times \mathbf{F}$  moments and couples to find the resultant moment?
- How can you find the simplest equivalent system?
- When will the simplest equivalent system be a wrench?
- How can you determine if two loading systems are statically equivalent?

A loading system is a combination of load forces and moments which act on an object. It can be as simple as a single force, or as complex as a three-dimensional combination of many force and moment vectors.

You will see that any loading systems may be replaced with a simpler *statically equivalent system* consisting of one *resultant force* at a specific point and one *resultant moment* by performing a series of equivalent transformations. Force system resultants provide a convenient representation for complex force interactions at engineering connections that we will rely on later in a variety of contexts. For now we will focus on the details of reducing a system to a single force and couple.

Depending on the original loading system, the resultant force, the resultant moment, or both may be zero. If they are both zero, it indicates that the object is in equilibrium under this load condition. If they are non-zero, the supports will need to provide an equal and opposite reaction to put the object into equilibrium.

The resultant force acting on a system,  $\mathbf{R}$ , can be found from adding the individual forces,  $\mathbf{F}_i$ , such that

$$\mathbf{R} = \sum \mathbf{F} = \mathbf{F}_1 + \mathbf{F}_2 + \mathbf{F}_3 + \dots$$

The resultant moment,  $\mathbf{M}_O$ , about a point  $O$ , can be found from adding all of the moments  $\mathbf{M}$ , about that point, including both  $\mathbf{r} \times \mathbf{F}$  moments and concentrated moments.

$$\mathbf{M}_O = \sum \mathbf{M}_i = \mathbf{M}_1 + \mathbf{M}_2 + \mathbf{M}_3 + \dots$$

It is often more convenient to work with the scalar components of the resultant vectors, since they separate the effects in the three coordinate directions.

$$R_x = \Sigma F_x$$

$$R_y = \Sigma F_y$$

$$M_{Ox} = \Sigma M_x$$

$$M_{Oy} = \Sigma M_y$$

$$R_z = \Sigma F_z$$

$$M_{Oz} = \Sigma M_z$$

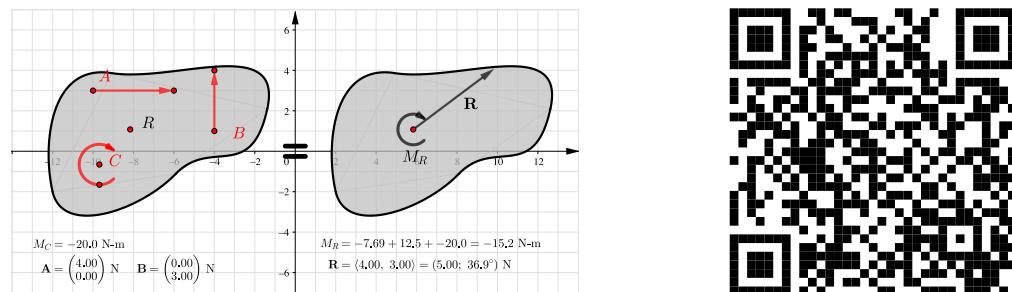


Figure 4.6.1 Statically equivalent systems

**Force-Couple Systems.** One transformation you might *want* to make is to move a force to another location. While *sliding* a force along its line of action is fine, *moving* a force to another point changes its line of action and thus its rotational effect on the object, so moving is *not* an equivalent transformation.

Consider the cantilever beam below. In diagram (a), the load  $P$  is at the end of the beam, and in (b) it has been moved to the center. The external effects are shown in (c) and (d). Although the vertical reaction force is the  $P$  in both cases, the reaction moment at point  $O$  is  $2P\ell$  in the first case and  $P\ell$  in the second.


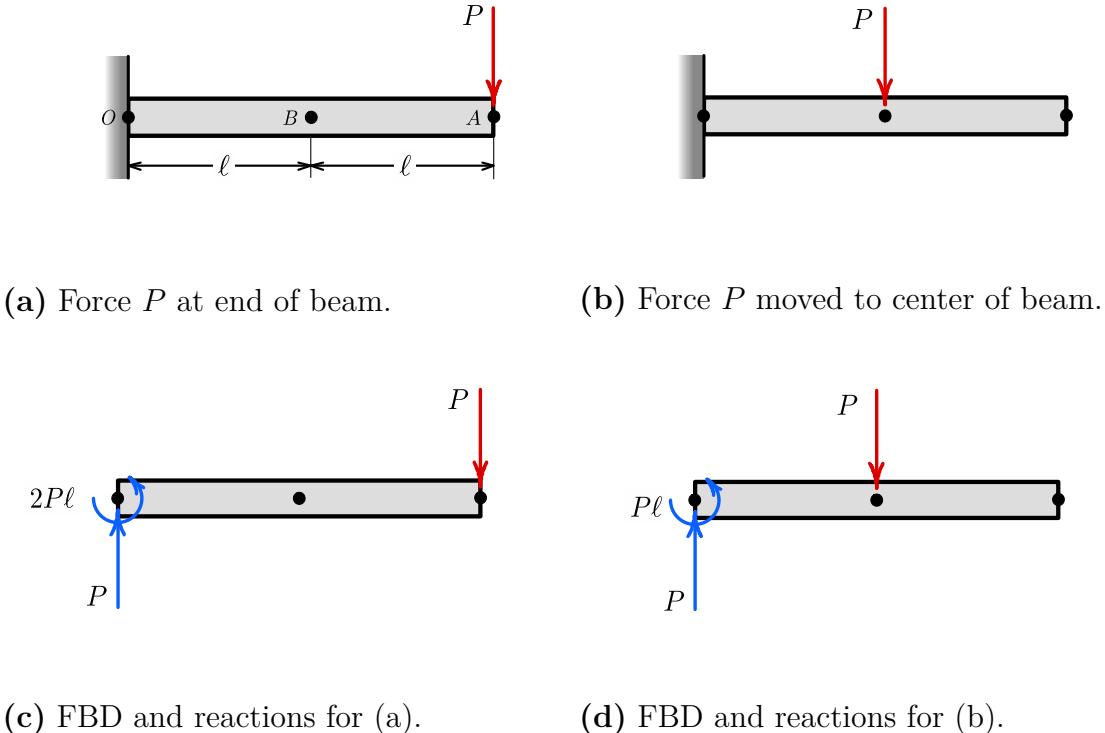


Figure 4.6.2 Moving a force is not an equivalent transformation

You *can* move a force to a new line of action in an equivalent fashion if you add

a “compensatory couple” to undo the effect of changing the line of action. This can be accomplished with a series of individual equivalent transformations as shown in the diagram below. To move  $P$  to another location, first add two equal and opposite forces where you want the force to be, as in (b). Then recognize the couple you have formed (c), and replace it with an equivalent couple-moment. The result of this process is the *equivalent force-couple system* shown in diagram (d), which is statically equivalent to the original situation in (a).

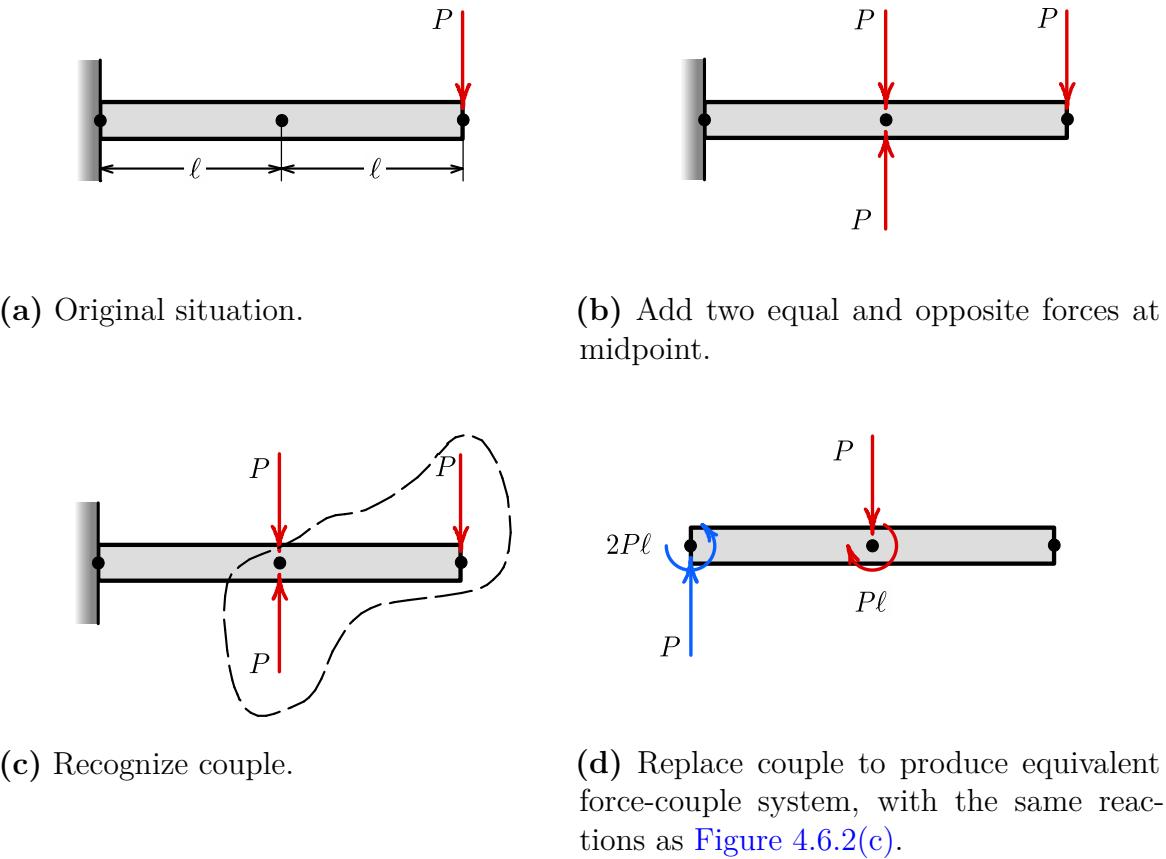

**Figure 4.6.3** Equivalent Force-couple system

Evaluating the moment at point  $O$  at was an arbitrary choice. Any other point would give the same result. For example, in the original situation (a) force  $P$  makes a clockwise moment  $M = P\ell$  about the midpoint. When the force is moved to the center  $P$  creates no moment there, so a clockwise compensatory couple with a magnitude of  $P\ell$  must be added to maintain equivalence. This is the same result as we found previously (d). The compensatory couple has been drawn centered around the midpoint, but this too is arbitrary because concentrated moments are free vectors and can be placed at any location.


**Reduction of a complex system.** Any loading system can be reduced to a statically equivalent system consisting of single force and a single moment at a specified point with the following procedure:

1. Determine the resultant moment about the specified point by considering all forces and concentrated moments on the original system.
2. Determine the resultant force by adding all forces acting on the original system.
3. Determine the resultant moment about a point in the original system
4. Create the statically equivalent system by replacing all loads with the resultant force and the resultant moment at the selected point.

Example 4.6.4 Eccentric loading.

An vertical column is supporting an eccentric load as shown.

Replace this load with an equivalent force-couple system acting at the center of the beam's top surface.

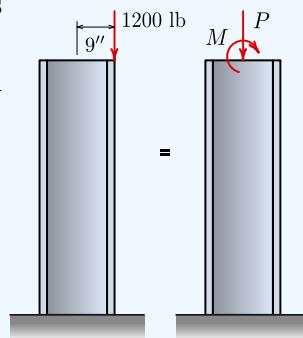

**Answer.**  $P = 1200 \text{ lb}$  and  $M = 900 \text{ ft}\cdot\text{lb}$  clockwise


**Solution.** In order to move the vertical force 9 in to the left, a clockwise couple  $M$  must be added to maintain equivalence, where

$$\begin{aligned} M &= Pd \\ &= (1200 \text{ lb})(9 \text{ in}) \\ &= 10,800 \text{ in}\cdot\text{lb} \\ &= 900 \text{ ft}\cdot\text{lb}. \end{aligned}$$

Example 4.6.5 Equivalent Force-couple System.

Replace the system of forces in diagram (a) with an equivalent force-couple system at  $A$ .

Replace the force-couple system at  $A$  with a single equivalent force and specify its location.

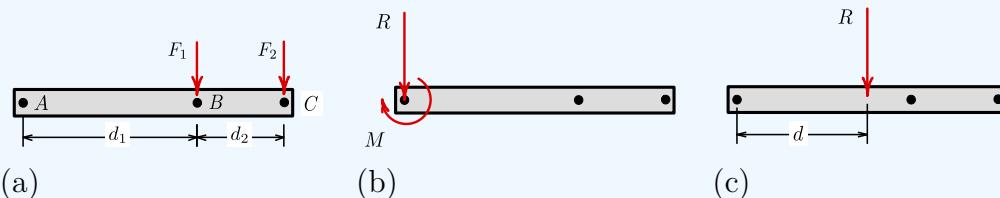

**Answer.**  $R = F_1 + F_2$ ,  $M_A = F_1d_1 + F_2(d_1 + d_2)$  and  $d = M/R$

**Solution.** The original system is shown in (a).

Since the  $F_1$  and  $F_2$  are parallel, the magnitude of the resultant force is just the sum of the two magnitudes and it points down.

$$R = F_1 + F_2$$

The resultant moment about point  $A$  is

$$M_A = F_1d_1 + F_2(d_1 + d_2).$$

To create the equivalent system (b), the resultant force and resultant moment are placed at point  $A$ .

The system in (b) can be further simplified to eliminate the moment at  $M_A$ , by performing the process in reverse.

In (c) we place the resultant force  $R$  a distance  $d$  away from point  $A$  such that the resultant moment around point  $A$  remains the same. This distance can be found using  $M = Fd$ .

$$d = M_A/R$$

The systems in (a), (b), and (c) are all statically equivalent

In this example, we started with two forces. We have found two different statically equivalent systems; one with a force and a couple, the other with a single force. This latter system is simpler than the original system.

It is important to note that static equivalence applies to external effects only. When determining internal forces, such as the shear and bending moment discussed in [Section 8.4](#) or when considering non-rigid bodies, the original loading system must be used.

**Determining Equivalence.** Two complex loading systems are equivalent if they reduce to the same resultant force and the same resultant moment about any arbitrary point.


Two loading systems are statically equivalent if

- The resultant forces are equal
- The resultant moments about some point are equal

This process is illustrated in the following example.

Example 4.6.6 Finding Statically Equivalent Loads.

Which of the three loading systems shown are statically equivalent?

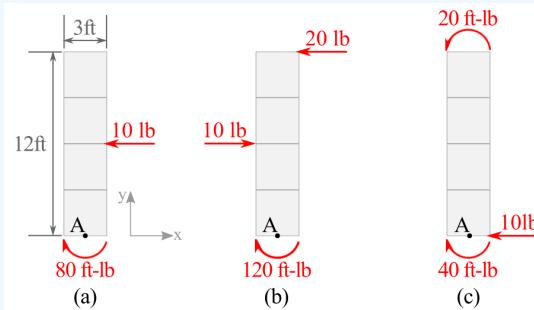**Figure 4.6.7****Answer.** (a) and (c) are statically equivalent**Solution.**

**Strategy.** Evaluate the resultant force and resultant moment for each case and compare. We choose to evaluate the resultant moment about point A, though any other point would work.

**For system (a).**

$$\begin{aligned}\mathbf{R} &= \langle -10, 0 \rangle \text{ lb} \\ \mathbf{M}_A &= -80 + 6(10) \\ &= -20 \text{ ft}\cdot\text{lb}\end{aligned}$$

**For system (b).**

$$\begin{aligned}\mathbf{R} &= \langle -20 + 10, 0 \rangle \text{ lb} \\ &= \langle -10, 0 \rangle \text{ lb} \\ \mathbf{M}_A &= -120 + 12(20) - 6(10) \\ &= 60 \text{ ft}\cdot\text{lb}\end{aligned}$$

**For system (c).**

$$\begin{aligned}\mathbf{R} &= \langle -10, 0 \rangle \text{ lb} \\ \mathbf{M}_A &= -40 + 20 + 0(10) \\ &= -20 \text{ ft}\cdot\text{lb}\end{aligned}$$

Systems (a) and (c) are statically equivalent since  $\mathbf{R}$  and  $\mathbf{M}_A$  are the same in both cases. System (b) is not as its resultant moment is different than the other two.

Any load system can be simplified to its resultant force  $\mathbf{R}$ , and resultant couple  $\mathbf{M}$ , acting at any arbitrary point  $O$ . There are four common special cases which are


worth highlighting individually.

**Concurrent forces.** When all forces in a system are concurrent, the resultant moment about that their common intersection point will always be zero. We then need only find the resultant force and place it at the point of intersection. The resultant moment about any other point is the moment of the resultant force  $\mathbf{R}$  about that point.

**Parallel forces.** When all forces in a system are parallel, the resultant force will act in this direction with a magnitude equal to the sum of the individual magnitudes. There will be no moment created about this axis, but we need to find the resultant moment about the other two rectangular axes. That is, if all forces act in the  $x$  direction, we need only find the resultant force in the  $x$  direction and the resultant moment about the  $y$  and  $z$  axes.

**Coplanar forces.** When all forces in a system are coplanar we need only find the resultant force in this plane and the resultant moment about the axis perpendicular to this plane. That is, if all forces exist in the  $x$ - $y$  plane, we need only to sum components in the  $x$  and  $y$  directions to find resultant force  $\mathbf{R}$ , and use these to determine the resultant moment about the  $z$  axis. All two-dimensional problems fall into this category.

**Wrench resultant.** A wrench resultant is a special case where the resultant moment acts around the axis of the resultant force. The directions of the resultant force vector and the resultant moment vector are the same.

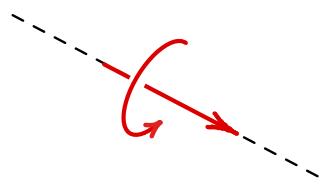

For example, if the resultant force is only in the  $x$  direction and the resultant moment acts only around the  $x$  axis, this is an example of a wrench resultant. An everyday example is a screwdriver, where both the resultant force and axis of rotation are in-line with the screwdriver. A wrench resultant is considered positive if the couple vector and force vector

**Figure 4.6.8** Wrench Repoint in the same direction, and negative if they point in opposite directions.

Any three-dimensional force-couple system may be reduced to an equivalent wrench resultant even if the resultant force and resultant moment do not initially form a wrench resultant.

To find the equivalent wrench resultant:

1. First, find the resultant force  $\mathbf{R}$  and resultant moment  $\mathbf{M}$  at an arbitrary at arbitrary point,  $O$ . These need not act along the same axis.
2. Resolve the resultant moment into scalar components  $M_{\parallel}$  and  $M_{\perp}$ , parallel and perpendicular to the axis of the resultant force.

3. Eliminate  $M_{\perp}$  by moving the the resultant force away from point  $O$  by distance  $d = M_{\perp}/R$

The simplified system consists of moment  $\mathbf{M}_{\parallel}$  and force  $\mathbf{R}$  and acting distance  $d$  away from point  $O$ . Since  $\mathbf{R}$  and  $\mathbf{M}_{\parallel}$  act along the same axis, the system has been reduced to a wrench resultant. Wrench resultants are the most general way to represent a complex force-couple system, but their utility is limited.

## 4.7 Exercises

# Chapter 5

## Rigid Body Equilibrium

In this chapter we will investigate the equilibrium of simple rigid bodies like your book, phone, or pencil. The important difference between rigid bodies and the particles of [Chapter 3](#) is that rigid bodies have the potential to rotate around a point or axis, while particles do not.

For rigid body equilibrium, we need to maintain translational equilibrium with

$$\sum \mathbf{F} = 0 \quad (5.0.1)$$

and also maintain a balance of rotational forces and couple-moments with a new equilibrium equation


$$\sum \mathbf{M} = 0. \quad (5.0.2)$$

### 5.1 Degree of Freedom

*Degrees of freedom* refers to the number of independent parameters or values required to specify the *state* of an object.


The *state* of a *particle* is completely specified by its location in space, while the state of a rigid body includes its location in space and also its orientation.

Two-dimensional rigid bodies in the  $xy$  plane have three degrees of freedom. Position can be characterized by the  $x$  and  $y$  coordinates of a point on the object, and orientation by angle  $\theta_z$  about an axis perpendicular to the plane. The complete movement of the body can be defined by two linear displacements  $\Delta x$  and  $\Delta y$ , and one angular displacement  $\Delta\theta_z$ .

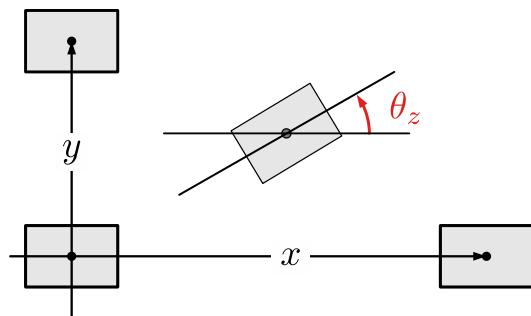

**Figure 5.1.1** Two-dimensional rigid bodies have three degrees of freedom.

Three-dimensional rigid bodies have six degrees of freedom, which can be specified with three orthogonal coordinates  $x, y$  and  $z$ , and three angles of rotation,  $\theta_x, \theta_y$  and  $\theta_z$ . Movement of the body is defined by three translations  $\Delta x, \Delta y$  and  $\Delta z$ , and three rotations  $\Delta\theta_x, \Delta\theta_y$  and  $\Delta\theta_z$ .

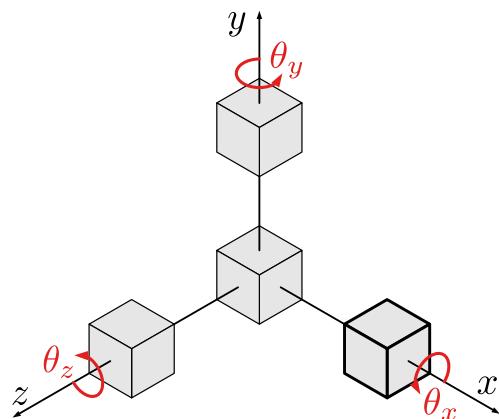

**Figure 5.1.2** Three-dimensional rigid body have six degrees of freedom - three translations and three rotations.

For a body to be in static equilibrium, all possible movements of the body need to be adequately restrained. If a degree of freedom is not restrained, the body is in an unstable state, free to move in one or more ways. Stability is highly desirable for reasons of human safety, and bodies are often restrained by *redundant* restraints so that if one were to fail, the body would still remain stable. If the restraints correctly interpreted, then equal constraints and degrees of freedom create a stable system, and the values of the reaction forces and moments can be determined using equilibrium equations. If the number of restraints exceeds the number of degrees of freedom, the body is in equilibrium but you will need techniques we won't cover in statics to determine the reactions.

## 5.2 Free Body Diagrams

### Key Questions

- What are the five steps to create a free-body diagram?
- What are degrees of freedom, and how do they relate to stability?
- Which reaction forces and couple-moments come from each support type?
- What are the typical support force components and couple-moment components which can be modeled from the various types of supports?

Free body diagrams are the tool that engineers use to identify the forces and moments that influence an object. They will be used extensively in statics, and you will use them again in other engineering courses so your effort to master them now is worthwhile. Although the concept is simple, students often have great difficulty with them.

Drawing a correct free-body diagram is the first and most important step in the process of solving an equilibrium problem. It is the basis for all the equilibrium

equations you will write; if your free-body diagram is incorrect then your equations, analysis, and solutions will be wrong as well.

A good free-body diagram is neat and clearly drawn and contains all the information necessary to solve the equilibrium. You should take your time and think carefully about the free body diagram before you begin to write and solve equations. A straightedge, protractor and colored pencils all can help. You will inevitably make mistakes that will lead to confusion or incorrect answers; you are also encouraged to think about these errors and identify any misunderstandings to avoid them in the future.

*Every equilibrium problem begins by drawing and labeling a free-body diagram!*

**Creating Free Body Diagrams.** The basic process for drawing a free body diagrams is

1. *Select and isolate an object.*

The “free-body” in free-body diagram means that the body to be analyzed must be free from the supports that are physically holding it in place

Simply sketch a quick outline of the object as if it is floating in space disconnected from everything. Do *not* draw free-body diagram forces on top of your problem drawing — the body needs to be drawn free of its supports.

2. *Select a reference frame.*

Select a right-handed coordinate system to use as a reference for your equilibrium equations. If you are using something other than a horizontal  $x$  axis and vertical  $y$  axis, indicate it on your diagram.

Look ahead and select a coordinate system which minimizes the number of unknown force components in your equations. The choice is technically arbitrary, but a good choice will simplify your calculations and reduce your effort. If you and another student pick different reference systems, you should both get the same answer, while expressing your work with different components.

3. *Identify all loads.*

Add vectors arrows representing the applied forces and couple-moments acting on the body. These are often obvious. Include the body’s weight if it is non-negligible. If a vector has a known line of action, draw the arrow in that direction; if its sense is unknown, assume one. Every vector should have a descriptive variable name and a clear arrowhead indicating its direction.

4. *Identify all reactions.*

Traverse the perimeter of the object and wherever a support was removed when isolating the body, replace it with the forces and/or couple-moments which it provides. Label each reaction with a descriptive variable name and a clear arrowhead. Again, if a vector’s direction is unknown just assume one.

The reaction forces and moments provided by common two-dimensional supports are shown in [Figure 5.2.1](#) and three dimensional support in [Figure 5.2.2](#). Identifying the correct reaction forces and couple-moments coming from supports is perhaps the most challenging step in the entire equilibrium process.

5. *Label the diagram.*


Verify that every dimension, angle, force, and moment is labeled with either a value or a symbolic name if the value is unknown. Supply the information needed for your calculations, but don't clutter the diagram up with unneeded information; This diagram should be a “stand-alone” presentation.

Drawing good free-body diagrams is surprisingly tricky and requires practice. Study the examples, think hard about them, do lots of problems, and learn from your errors.

**Two-dimensional Reactions.** Supports supply reaction forces and moment which prevent bodies from moving when loaded. In the most basic terms, forces prevent translation, and moments prevent rotation.

The reactions supplied by a support depend on the nature of the particular support. For example in a top view, a door hinge allows the door to rotate freely but prevents it from translating. We model this as a frictionless pin that supplies a perpendicular pair of reaction forces, but no reaction moment. We can evaluate all the other physical supports in a similar way to come up with the table below. You will notice that some two-dimensional supports only restrain one degree of freedom and others restrain up to three degrees of freedom. The number of degrees of freedom directly correlates to the number of unknowns created by the support.

















The table below shows typical two-dimensional support methods and the corresponding reaction forces and moments supplied each.

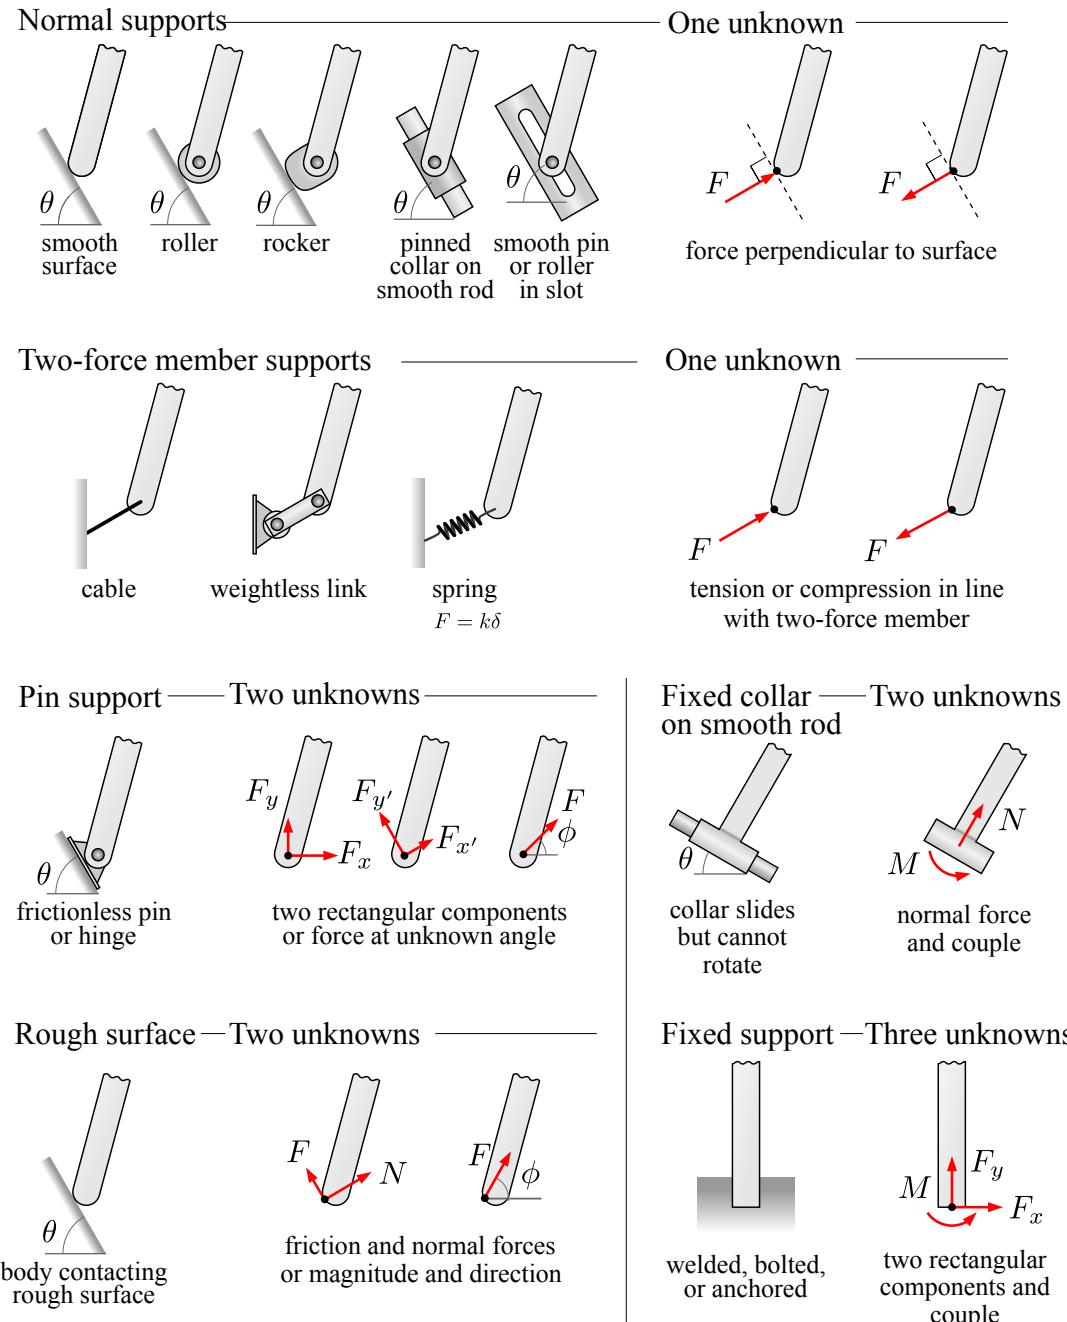

**Figure 5.2.1** Table of common two-dimensional supports and their representation on free body diagrams.

**Three-dimensional Reactions.** The main added complexity with three-dimensional objects is that there are more possible ways the object can move, and also more possible ways to restrain it. The table below show the types of supports which are available and the corresponding reaction forces and moment. As before, your

free-body diagrams should show the reactions supplied by the constraints, not the constraints themselves.

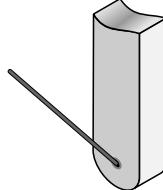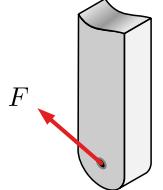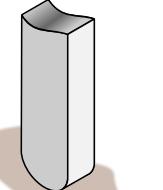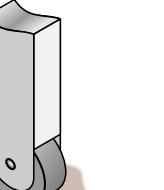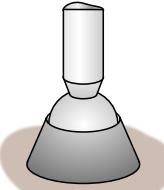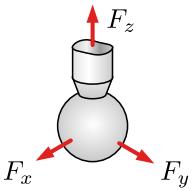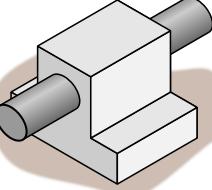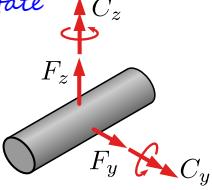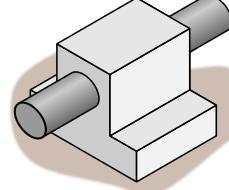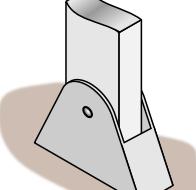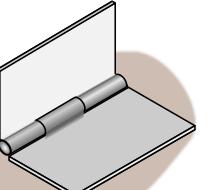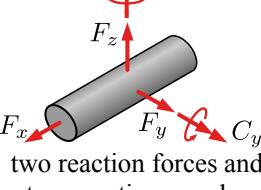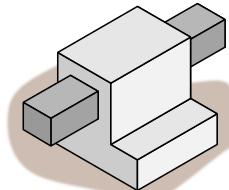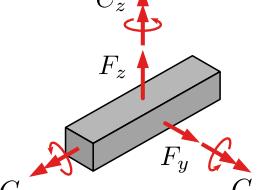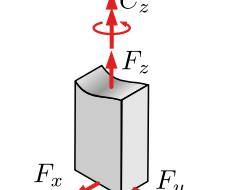
<b>Two-force support</b> — One reaction <i>two-force member constrains translation</i>		<b>Smooth surface</b> — One reaction <i>smooth surface constrains translation</i>	
 cable (or other two-force member)	 reaction force in-line with two-force member	 body contacts smooth surface	 roller on smooth surface
<b>Ball &amp; socket</b> — Three reactions <i>ball cannot slide but is free to rotate</i>		<b>Free-axle bearing</b> — Four reactions <i>axle free to slide &amp; rotate</i>	
 ball stays in socket & is free to rotate	 three reaction force components	 journal bearing	 two reaction forces and two reaction couples perpendicular to axle
<b>Confined-axle bearing</b> — Five reactions <i>axle/pin cannot slide but is free to rotate</i>		<b>Hinge</b> — Five reactions <i>two reaction forces and two reaction couples all perpendicular to axle, plus reaction force along axle</i>	
 thrust bearing	 smooth pin	 hinge	 two reaction forces and two reaction couples all perpendicular to axle, plus reaction force along axle
<b>Square-axle bearing</b> — Five reactions <i>square axle free to slide but cannot rotate</i>		<b>Fixed support</b> — Six reactions <i>body cannot slide &amp; cannot rotate</i>	
 square axle journal bearing	 two reaction forces perpendicular to axle, three reaction couples	 welded, bolted, or anchored	 three reaction forces & three reaction couples

**Figure 5.2.2** Table of common three-dimensional supports and their associated reactions.

One new issue we face in three-dimensional problems is that reaction couples may


be **available** but not **engaged**.

A support which provides a non-zero reaction is said to be engaged. Picture a crate sitting at rest on a horizontal surface with a cable attached to the top of the crate. If the cable is slack, the reaction of the cable would be available but not *engaged*. Instead, the floor would be supporting the full weight of the crate. If we were to remove the floor, the cable would be engaged and support the weight of the crate.

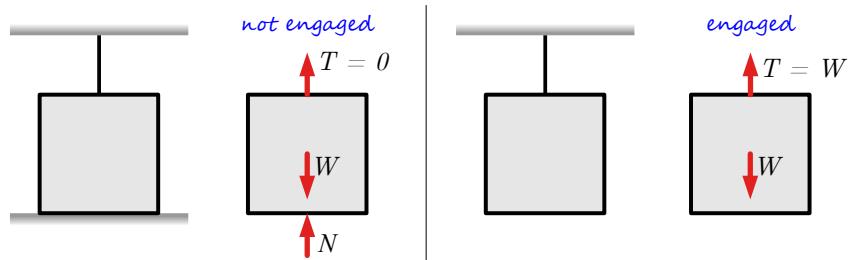

**Figure 5.2.3** Available and Engaged reactions.

To get a feel for how reaction couples engage, pick up your laptop or a heavy book and hold it horizontally with your left hand. Can you feel your hand supplying an upward force to support the weight *and* a counter-clockwise reaction couple to keep it horizontal? Now add a similar support by gripping with your right hand. How do the forces and couple-moments change? You should have felt the force of your left hand decrease as your right hand picked up half the weight, and also noticed that the reaction couple from your left hand was no longer needed.

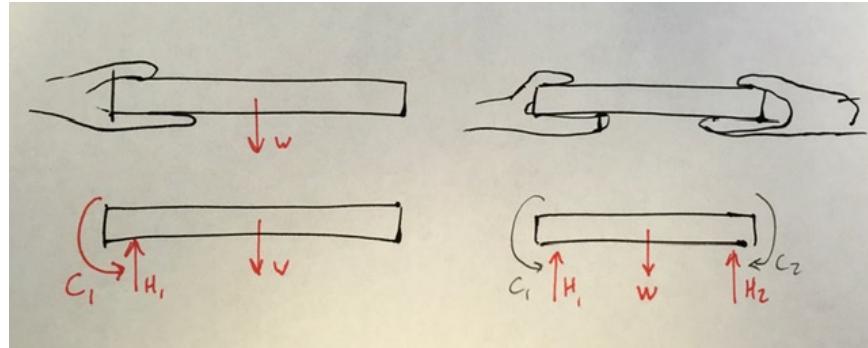

**Figure 5.2.4** One hand holding an object versus two hands holding the same object.

The vertical force in your right hand engaged instead of the couple-moment of your left hand. The reaction couples from both hands are available, but the vertical forces engage first and are sufficient for equilibrium. This phenomena is described by the saying “reaction forces engage before reaction couple-moments”.

**Free Body Diagram Examples.** Given that there several options for representing reaction forces and couple-moments from a support, there are different, equally valid options for drawing free-body diagrams. With experience you will learn which representation to choose to simplify the equilibrium calculations.

Possible free-body diagrams for two common situations are shown in the next two examples.

### Example 5.2.5 Fixed support.

The cantilevered beam is embedded into a fixed vertical wall at *A*. Draw a neat, labeled, correct free-body diagram of the beam and identify the knowns and the unknowns.

#### Solution.



Begin by drawing a neat rectangle to represent the beam disconnected from its supports, then add all the known forces and couple-moments. Label the magnitudes of the loads and the known dimensions symbolically.

Choose the standard *xy* coordinate system, since it aligns well with the forces.

The wall at *A* is a fixed support which prevents the beam from translating up, down, left or right, or rotating in the plane of the page. These constraints are represented by two perpendicular forces and a concentrated moment, as shown in [Figure 5.2.1](#). Label these unknowns as well.


The knowns in this problem are the magnitudes and directions of moment **C**, forces **B**, and **D** and the dimensions of the beam. The unknowns are the two force components  $A_x$  and  $A_y$  and the scalar moment  $M_A$  caused by the fixed connection. If you prefer, you may represent force **A** as a force of unknown magnitude acting at an unknown direction. Whether you represent it as *x* and *y* components or as a magnitude and direction, there are two unknowns associated with force **A**.

The three unknown reactions can be found using the three independent equations of equilibrium we will discuss later in this chapter.

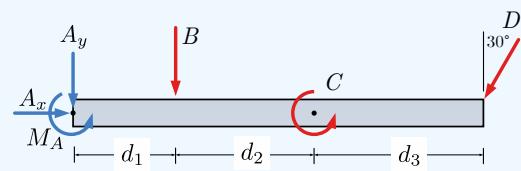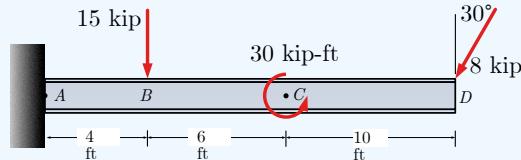

### Example 5.2.6 Frictionless pin and roller.

The beam is supported by a frictionless pin at *A* and a rocker at *D*. Draw a neat, labeled, correct free-body diagram of the beam and identify the knowns and the unknowns.

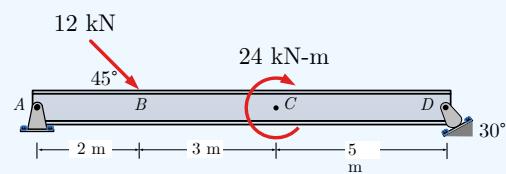

**Solution.** In this problem, the knowns are the magnitude and direction of force **B** and moment **C** and the dimensions of the beam.

The constraints are the frictionless pin at *A* and the rocker at *D*. The pin



prevents translation but not rotation, which means two it has two unknowns, represented by either magnitude and direction, or by two orthogonal components. The rocker provides a force perpendicular to the surface it rests on, which is  $30^\circ$  from the horizontal. This means that the line of action of force  $\mathbf{D}$  is  $30^\circ$  from the vertical, giving us its direction but not its sense or magnitude

To draw the free body diagram, start with a neat rectangle to representing the beam disconnected from its supports, then draw and label known force  $B$  and moment  $C$  and the dimensions.

Add forces  $A_x$  and  $A_y$  representing vector  $\mathbf{A}$  and force  $\mathbf{D}$  at  $D$ , acting  $30^\circ$  from the vertical.

When a force has a known line of action as with force  $\mathbf{D}$ , draw it acting along that line; don't break it into components. When it is not obvious which way a reaction force actually points along its lines of action, just make your best guess and place an arrowhead accordingly. Your calculations will confirm or refute your guess later.

As in the previous example, you could alternately represent force  $\mathbf{A}$  as an unknown magnitude acting in an unknown direction, though there is no particular advantage to doing so in this case.

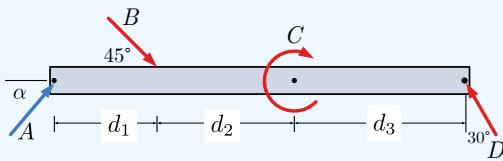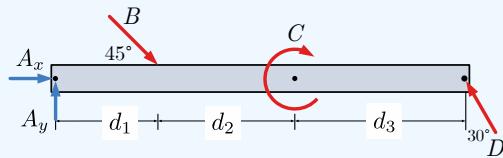

## 5.3 Equations of Equilibrium

### Key Questions

- What is the definition of static equilibrium?
- How do I choose which are the most efficient equations to solve two-dimensional equilibrium problems?

In statics, our focus is on systems where both linear acceleration  $\mathbf{a}$  and angular acceleration  $\alpha$  are zero. These systems are frequently stationary, but could be moving with constant velocity.

Under these conditions [Newton's Second Law for translation](#) reduces to

$$\sum \mathbf{F} = 0, \quad (5.3.1)$$

and, [Newton's second law for rotation](#) gives the similar equation

$$\sum \mathbf{M} = 0. \quad (5.3.2)$$

The first of these equations requires that all forces acting on an object balance and cancel each other out, and the second requires that all moments balance as well. Together, these two equations are the mathematical basis of this course and are sufficient to evaluate equilibrium for systems with up to six degrees of freedom.

These are vector equations; hidden within each are three independent scalar equations, one for each coordinate direction

$$\sum \mathbf{F} = 0 \implies \begin{cases} \sum F_x = 0 \\ \sum F_y = 0 \\ \sum F_z = 0 \end{cases} \quad \sum \mathbf{M} = 0 \implies \begin{cases} \sum M_x = 0 \\ \sum M_y = 0 \\ \sum M_z = 0 \end{cases} . \quad (5.3.3)$$

Working with these scalar equations is often easier than using their vector equivalents, particularly in two-dimensional problems.

In many cases we do not need all six equations. We saw in [Chapter 3](#) that particle equilibrium problems can be solved using the force equilibrium equation alone, because particles have, at most, three degrees of freedom and are not subject to any rotation.

To analyze rigid bodies, which can rotate as well as translate, the moment equations are needed to address the additional degrees of freedom. Two-dimensional rigid bodies have only one degree of rotational freedom, so they can be solved using just one moment equilibrium equation, but to solve three-dimensional rigid bodies, which have six degrees of freedom, all three moment equations and all three force equations are required.

## 5.4 2D Rigid Body Equilibrium

Two-dimensional rigid bodies have three degrees of freedom, so they only require three independent equilibrium equations to solve. The six scalar equations of [\(5.3.3\)](#) can easily be reduced to three by eliminating the equations which refer to the unused  $z$  dimension. For objects in the  $xy$  plane there are no forces acting in the  $z$  direction to create moments about the  $x$  or  $y$  axes, so the reduced set of three equations is

$$\{1\} = \begin{cases} \sum F_x = 0 \\ \sum F_y = 0 \\ \sum M_A = 0 \end{cases} .$$

where the subscript  $z$  has been replaced with a letter to indicate an arbitrary moment center in the  $xy$  plane instead of a perpendicular  $z$  axis.

This is not the only possible set of equilibrium equations. Either force equation can be replaced with a linearly independent moment equation about a point of your

choosing <sup>1</sup>, so the other possible sets are

$$\{2\} = \begin{cases} \sum F_x = 0 \\ \sum M_B = 0 \\ \sum M_A = 0 \end{cases} \quad \{3\} = \begin{cases} \sum M_C = 0 \\ \sum F_y = 0 \\ \sum M_A = 0 \end{cases} \quad \{4\} = \begin{cases} \sum M_C = 0 \\ \sum M_B = 0 \\ \sum M_A = 0 \end{cases}$$

For set four, moment centers  $A$ ,  $B$ , and  $C$  must form a triangle to ensure the three equations are linearly independent.

You have a lot of flexibility when solving rigid-body equilibrium problems. In addition to choosing which set of equations to use, you are also free to rotate the coordinate system to any orientation you like, pick different points for moment centers, and solve the equations in any order or simultaneously.

This freedom raises several questions. Which equation set should you choose? Is one choice ‘better’ than another? Why bother rotating coordinate systems? How do you select moment centers? Students want to know “how to solve the problem,” when in reality there are many ways to do it.

The actual task is to choose an efficient approach and carry it out. An efficient solution is one which avoids mathematical complications and makes the problem easy to solve. Complications include unpleasant geometries, unnecessary algebra, and particularly simultaneous equations, which are algebra intensive and error prone.

So how do you do set up an efficient approach? First, stop, think, and look for opportunities to make the solution more efficient. Here are some recommendations.


1. Equation set one is usually a good choice, and should be considered first.
2. Inspect your free-body diagram and identify the unknown values in the problem. These may be magnitudes, directions, angles or dimensions.
3. Align the coordinate system with at least one unknown force.
4. Take moments about the point where the lines of action of two unknown forces intersect, which eliminates them from the equation.
5. Solve equations with one unknown first.

---

<sup>1</sup>Labels  $A$ ,  $B$  and  $C$  in these equations are representative. They don’t have to correspond to points  $A$ ,  $B$  and  $C$  on your problem.

## Example 5.4.1 Pin and Roller.


The L-shaped body is supported by a roller at  $B$  and a frictionless pin at  $A$ . The body supports a 100 lb vertical force at  $C$  and a 500 ft-lb couple-moment at  $D$ . Determine the reactions at  $A$  and  $B$ .

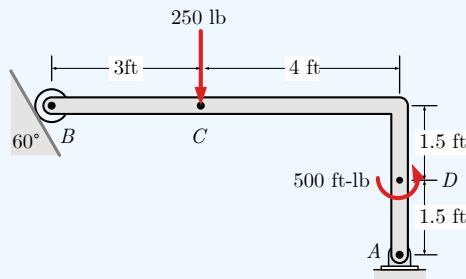

This problem will be solved three different ways, to demonstrate the advantages and disadvantages of different approaches.

**Solution 1.**

Solutions always start with a free-body diagram, showing all forces and moments acting on the object. Here, the known loads  $C = 250$  lb (down) and  $D = 500$  ft·lb (CCW) are red, and the unknown reactions  $A_x$ ,  $A_y$  and  $B$  are blue.

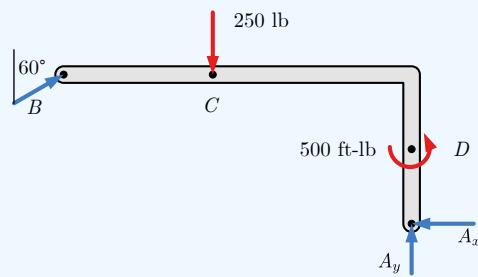

The force at  $B$  is drawn along its known line-of-action perpendicular to the roller surface, and drawn pointing up and right because that will oppose the rotation of the frame about  $A$  caused by load  $C$  and moment  $D$ . The force at  $A$  is represented by unknown components  $A_x$  and  $A_y$ . The sense of these components is unknown, so we have arbitrarily assigned the arrowheads pointing left and up.

We have chosen the standard coordinate system with positive  $x$  to the right and positive  $y$  pointing up, and resolved force  $A$  into components in the  $x$  and  $y$  directions.

The magnitude of force  $B$  is unknown but its direction is known, so the  $x$  and  $y$  components of  $B$  can be expressed as

$$B_x = B \sin 60^\circ \quad B_y = B \cos 60^\circ.$$

We choose to solve equation set  $\{A\}$ , and choose to take moments about point  $A$ , because unknowns  $A_x$  and  $A_y$  intersect there. Substituting the variables into the equation and solving for the unknowns gives

$$\begin{aligned} \sum F_x &= 0 \\ B_x - A_x &= 0 \\ A_x &= B \sin 60^\circ \end{aligned} \tag{1}$$

$$\sum F_y = 0$$

$$\begin{aligned}B_y - C + A_y &= 0 \\A_y &= C - B \cos 60^\circ\end{aligned}\quad (2)$$

$$\begin{aligned}\sum M_A &= 0 \\-B_x(3) - B_y(7) + C(4) + D &= 0 \\3B \cos 60^\circ + 7B \sin 60^\circ &= 4C + D \\B(3 \sin 60^\circ + 7 \cos 60^\circ) &= 4C + D \\B &= \frac{4C + D}{6.098}\end{aligned}\quad (3)$$

Of these three equations only the third can be evaluated immediately, because we know  $C$  and  $D$ . In equations (1) and (2) unknowns  $A_x$  and  $A_y$  can't be found until  $B$  is known. Inserting the known values into (3) and solving for  $B$  gives

$$\begin{aligned}B &= \frac{4(250) + 500}{6.098} \\&= \frac{1500 \text{ ft}\cdot\text{lb}}{6.098 \text{ ft}} \\&= 246.0 \text{ lb}\end{aligned}$$


Now with the magnitude of  $B$  known,  $A_x$  and  $A_y$  can be found with (1) and (2).

$$\begin{aligned}A_x &= B \sin 60^\circ \\&= 246.0 \sin 60^\circ \\&= 213.0 \text{ lb}\end{aligned}$$

$$\begin{aligned}A_y &= C - B \cos 60^\circ \\&= 250 - 246.0 \cos 60^\circ \\&= 127.0 \text{ lb}\end{aligned}$$

The positive signs on these values indicate that the directions assumed on the free-body diagram were correct.

The magnitude and direction of force  $\mathbf{A}$  can be found from the scalar components  $A_x$  and  $A_y$  using a rectangular to polar conversion.

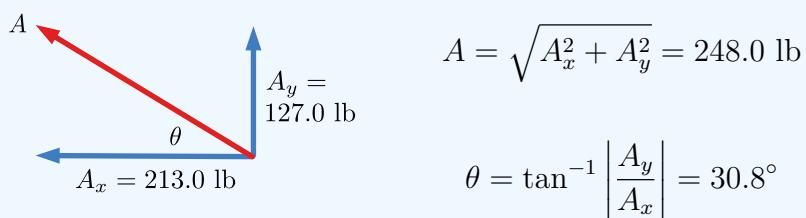

The final answer for **A** and **B**, with angles measured counter-clockwise from the positive  $x$  axis are


$$\mathbf{A} = 248.0 \text{ lb } \angle 149.2^\circ,$$

$$\mathbf{B} = 246.0 \text{ lb } \angle 60^\circ.$$

This solution demonstrates a fairly standard approach appropriate for many statics problems, and should be considered whenever the free body diagram contains a frictionless pin. Start by taking moments there.

### Solution 2.

In this solution, we have rotated the coordinate system  $30^\circ$  to align it with force **B** and also chosen the components of force **A** to align with the new coordinate system.

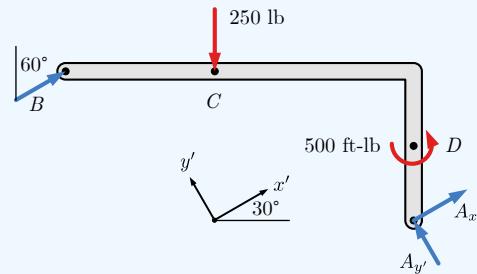

There is no particular advantage to this approach over the first one, but with two unknown forces aligned with the  $x'$  direction,  $A_{y'}$  can be found directly after breaking force **C** into components.

$$\begin{aligned} \sum F_{x'} &= 0 \\ B - C_{x'} + A_{x'} &= 0 \\ A_{x'} &= -B + C \sin 30^\circ \end{aligned} \quad (1)$$

$$\begin{aligned} \sum F_{y'} &= 0 \\ C_{y'} + A_{y'} &= 0 \\ A_{y'} &= C \cos 30^\circ \end{aligned} \quad (2)$$

$$\begin{aligned} \sum M_A &= 0 \\ -B_x(3) - B_y(7) + C(4) + D &= 0 \\ 3B \cos 60^\circ + 7B \sin 60^\circ &= 4C + D \\ B(3 \cos 60^\circ + 7 \sin 60^\circ) &= 4C + D \\ B &= \frac{4C + D}{7.56} \end{aligned} \quad (3)$$

Solving equation (2) yields

$$A_{y'} = 216.5 \text{ lb.}$$

Solving equation (3) yields the same result as previously

$$B = 246.0 \text{ lb.}$$


Substituting  $B$  and  $C$  into equation (1) yields

$$\begin{aligned} A_{x'} &= -B + C \sin 30^\circ \\ &= -246.0 + 250 \sin 30^\circ \\ &= -121.0 \text{ lb} \end{aligned}$$

The negative sign on this result indicates that our assumed direction for  $A_{x'}$  was incorrect, and that force actually points  $180^\circ$  to the assumed direction.

Resolving the  $A_{x'}$  and  $A_{y'}$  gives the magnitude and direction of force  $\mathbf{A}$ .

$$A_{y'} = 216.5 \text{ lb}$$

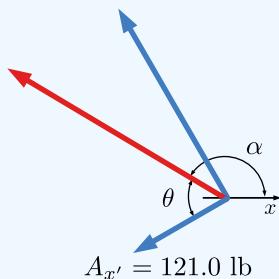

$$A = \sqrt{A_{x'}^2 + A_{y'}^2} = 248.0 \text{ lb}$$

$$\theta = \tan^{-1} \left| \frac{A_y}{A_x} \right| = 60.8^\circ$$

$$\alpha = 180^\circ - (\theta - 30^\circ) = 149.2^\circ$$

Again, the final answer for  $\mathbf{A}$  and  $\mathbf{B}$ , with angles measured counter-clockwise from the positive  $x$  axis are


$$\mathbf{A} = 248.0 \text{ lb} \angle 149.2^\circ,$$

$$\mathbf{B} = 246.0 \text{ lb} \angle 60^\circ$$

This approach was slightly more difficult than solution 1 because of the additional trigonometry involved to find components in the rotated coordinate system.

### Solution 3.

For this solution, we will use the same free-body diagram as solution one, but will use three moment equations, about points  $B$ ,  $C$  and  $D$ .

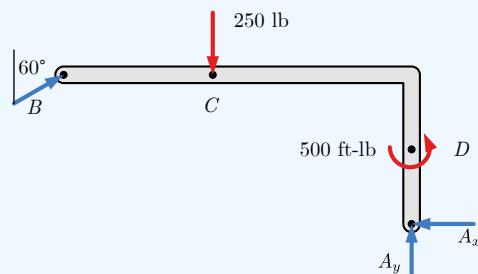

$$\begin{aligned} \sum M_B &= 0 \\ -A_x(3) + A_y(7) - C(3) + D &= 0 \\ -3A_x + 7A_y &= 250 \end{aligned} \tag{1}$$

$$\sum M_C = 0$$

$$\begin{aligned}
 -A_x(3) + A_y(4) - B_y(3) + D &= 0 \\
 -3A_x + 4A_y - 3B \cos 60^\circ &= -D \\
 3A_x - 4A_y + 1.5B &= 500
 \end{aligned} \tag{2}$$

$$\begin{aligned}
 \sum M_D &= 0 \\
 -A_x(1.5) - B_x(1.5) - B_y(7) + C(4) + D &= 0 \\
 1.5A_x + 1.5B \sin 60^\circ + 7B \cos 60^\circ &= 4C + D \\
 1.5A_x + 4.799B &= 1500
 \end{aligned} \tag{3}$$

This set of three equations and three unknowns can be solved with some algebra.

Adding (1) and (2) gives

$$3A_y + 1.5B = 750 \tag{4}$$

Dividing equation (2) by 2 and subtracting it from (3) gives

$$2A_y + 4.049B = 1250 \tag{5}$$

Multiplying (4) by 2/3 and subtracting from (5) eliminates  $A_y$  and gives

$$3.049B = 750$$

$$B = 246.0 \text{ lb},$$

the same result as before.

Substituting  $B$  into (3) gives  $A_x = 213.0$  lb, and substituting this into (1) gives  $A_y = 127.0$  lb, again the same result as before.

An alternate approach is to set these three equations up for a matrix solution and use technology to do the algebra, as done here with Sage.

$$\begin{bmatrix} -3 & 7 & 0 \\ 3 & -4 & 1.5 \\ 1.5 & 0 & 4.799 \end{bmatrix} \begin{bmatrix} A_x \\ A_y \\ B \end{bmatrix} = \begin{bmatrix} 250 \\ 500 \\ 1500 \end{bmatrix}$$

```

A = Matrix([[-3, 7, 0], [3, -4, 1.5], [1.5, 0, 4.799]])
B = vector([250, 500, 1500])
x = A.solve_right(B)
x

```

(213.020662512299, 127.008855362414, 245.982289275172)

This is a good example of an inefficient solution because of all the algebra involved. The issue here was the poor choice of  $B$ ,  $C$  and  $D$  as moment centers. Whenever possible you should take moments about a point where the line of action of two unknowns intersect as was done in solution 1. This gives a moment equation which can be solved immediately for the third unknown.

## 5.5 3D Rigid Body Equilibrium

### Key Questions

- What are the similarities and differences between solving two-dimensional and three-dimensional equilibrium problems?
- Why are some three-dimensional reaction couple-moments “available but not engaged”?
- What kinds of problems are solvable using linear algebra?

Three-dimensional systems are closer to reality than two-dimensional systems and the basic principles to solving both are the same, however they are generally harder to solve because of the additional degrees of freedom involved and the difficulty visualizing and determining distances, forces and moments in three dimensions.

Three-dimensional problems are usually solved using vector algebra rather than the scalar approach used in the last section. The main differences are that directions are described with unit vectors rather than with angles, and moments are determined using the vector cross product rather than scalar methods. Because there are more possible unknowns it is harder to find efficient equations to solve by hand. A problem might involve solving a system of up to six equations and six unknowns, in which case it is best solved using linear algebra and technology.

**Resolving Forces and Moments into Components.** To break two-dimensional forces into components, you likely used right-triangle trigonometry, sine and cosine. However, three-dimensional forces will likely need to be broken into components using [Section 2.5](#).

When summing moments, make sure to consider both the  $\mathbf{r} \times \mathbf{F}$  moments and also the couple-moments with the following guidance:

1. First, choose any point in the system to sum moments around.
2. There are two general methods for summing the  $\mathbf{r} \times \mathbf{F}$  moments. Both techniques will give you the same set of equations.
  - (a) *Sum moments around each axis.*

For relatively simple systems with few position and force vector components, you can find the cross product for each non-parallel position and force pair. Using this method requires you to resolve the direction of each cross product pair using the right-hand rule as covered in [Chapter 4](#). Recall that there are up to six pairs of non-parallel components that you need to consider.

- (b) *Sum all moments around a point using vector determinants.*

Choose a point in the system which is on the line of action of as many forces as possible, then set up each cross product as a determinant. After

computing the components coming from each determinant, combine the  $x$ ,  $y$ , and  $z$  terms into each of the  $\Sigma\mathbf{M}_x = 0$ ,  $\Sigma\mathbf{M}_y = 0$ , and  $\Sigma\mathbf{M}_z = 0$  equations.

3. Finally, add the components of any couple-moments into the corresponding  $\Sigma\mathbf{M}_x = 0$ ,  $\Sigma\mathbf{M}_y = 0$ , and  $\Sigma\mathbf{M}_z = 0$  equations.

**Solving for unknown values in equilibrium equations.** Once you have formulated  $\Sigma\mathbf{F} = 0$  and  $\Sigma\mathbf{M} = 0$  equations in each of the  $x$ ,  $y$  and  $z$  directions, you could be facing up to six equations and six unknown values.

Frequently these simultaneous equation sets can be solved with substitution, but it is often easier to solve large equation sets with linear algebra. Note that the adjective “linear” specifies that the unknown values must be linear terms, which means that each unknown variable cannot be raised to a exponent, be an exponent, or buried inside of a sin or cos function. Luckily, most unknowns in equilibrium are linear terms, except for unknown angles. If you are not familiar with the use of linear algebra matrices to solve simultaneously equations, search the internet for *Solving Systems of Equations Using Linear Algebra* and you will find plenty of resources.

No matter how you choose to solve for the unknown values, any numeric values which come out to be negative indicate that your initial hypothesis of that vector’s sense was incorrect.

Three-dimensional Equilibrium Examples. [TBD]

## 5.6 Stability and Determinacy

### Key Questions

- What does *stable* mean for a rigid body?
- What does *determinate* mean for a rigid body?
- Does stability depend on the external loads or only the reactions?
- How can I tell if a system is determinate?
- How can I decide if a problem is both stable and determinate, which makes it solvable statics?

**Determinate vs. Indeterminate.** A static system is **determinate** if it is possible to find the unknown reactions using the methods of statics, that is, by using equilibrium equations, otherwise it is **indeterminate**.

In order for a system to be determinate the number of unknown force and moment reaction components must be less than or equal to the number of independent equations of equilibrium available. Each equilibrium equation derives from a degree


of freedom of the system, so there may be no more unknowns than degrees of freedom. This means that we can determine no more than three unknown reaction components in two-dimensional systems and no more than six in three-dimensional systems.

An indeterminate system with fewer reaction components than degrees of freedom is **under-constrained** and therefore unstable. On the other hand, if there are more reaction components than degrees of freedom, the system is both **over-constrained** and **indeterminate**. In terms of force and moment equations, there are more unknowns than equilibrium equations so they can't all be determined. This is not to say that it is impossible to find all reaction force on an over-constrained system, just that you will not learn how to find them in this course.

**Stable vs. Unstable.** A body in equilibrium is held in position by its supports, which restrict the body's motion and counteract the applied loads. When there are sufficient supports to restrain a body from moving, we say that the body is **stable**. A stable body is prevented from translating and rotating in all directions. A body which *can* move is **unstable** even if it is not currently moving, because the slightest change in load may take it out of equilibrium and initiate motion. Stability is loading independent i.e. a stable body is stable for *any* loading condition.

**Rules to Validate a Stable and Determinate System.** There are three rules to determine if a system is both stable and determinate. While, the rules below can technically be checked in any order, they have been sorted from the quickest to the most time consuming to speed up your analysis.









*Rule 1:* Are there exactly three reaction components on a two-dimensional body?  
If YES, the system is determinate.  
If NO, the system is indeterminate or not stable.

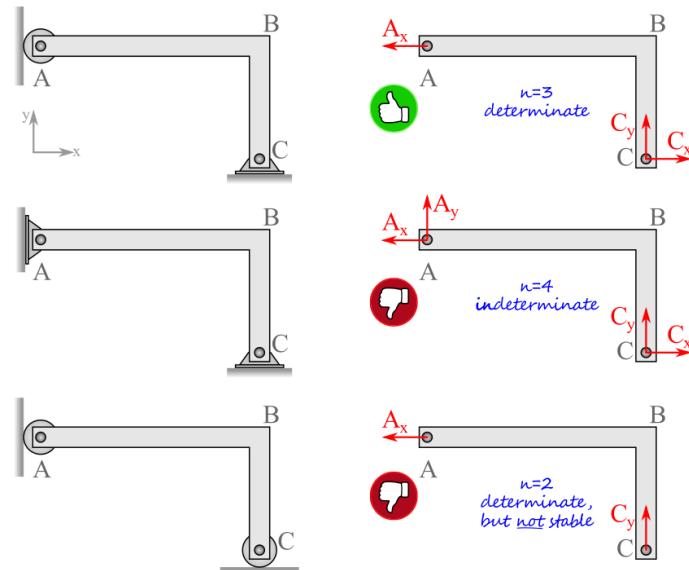

*Rule 2:* Are any reaction force components parallel to one another?

If YES, the system is unstable for translation.

If NO, the system is stable for translation.

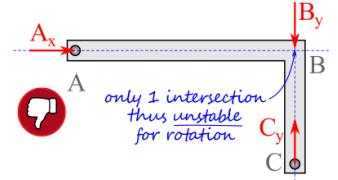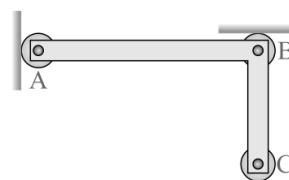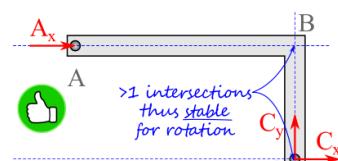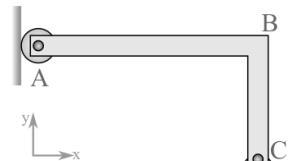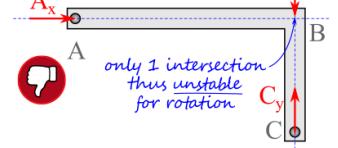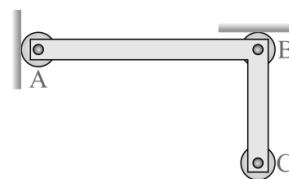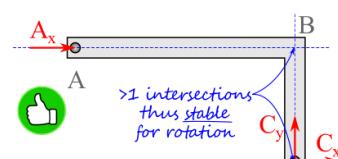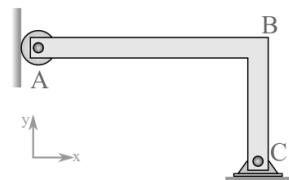

*Rule 3:* Do the lines of action of the reaction forces intersect at a single point?

If YES, the system is unstable for rotation about the single intersection point.

If NO, the system is stable for rotation.

## 5.7 Equilibrium Examples

You can use these interactives to explore how the reactions supporting rigid bodies are affected by the loads applied. You can use the equations of equilibrium to solve for the unknown reactions, and check your work.

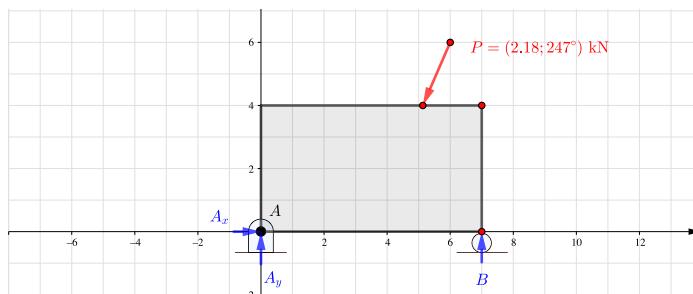
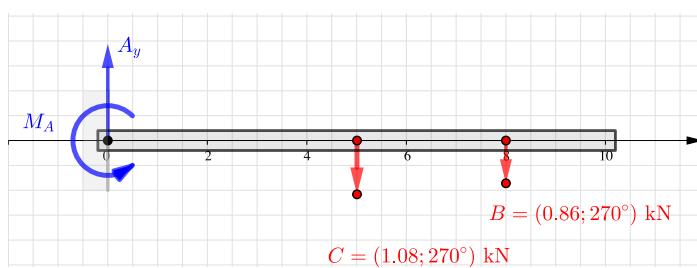
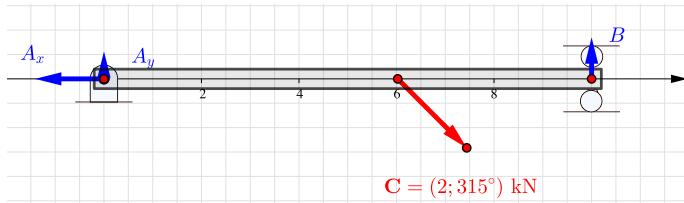
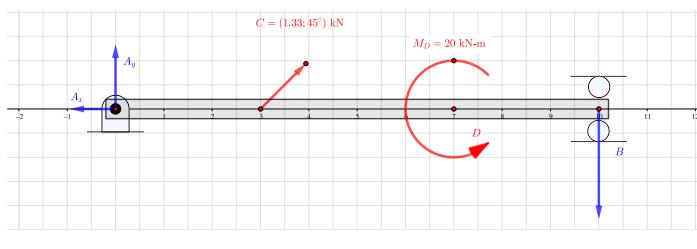


Figure 5.7.1 Rigid body Equilibrium

**Figure 5.7.2** Cantilever beam**Figure 5.7.3** Beam with concentrated load**Figure 5.7.4** Beam with concentrated force and couple moment

## 5.8 Exercises

# Chapter 6

## Equilibrium of Structures

In this chapter you will conduct static analysis of multi-body structures. Broadly defined, a structure is any set of interconnected rigid bodies designed to serve a purpose. The parts of the structure may move relative to one another, like the blades of scissors, or they may be fixed relative to one another, like the structural members of a bridge.

Analysis of structures involves determining all forces acting on and between individual members of the structure. Fundamentally there is nothing new here; the techniques you have already learned apply, however structures tend to have more unknown forces, and so are more involved and provide more opportunities for error than the problems you have previously encountered. Correct free-body diagrams and careful work are required, as always.

### 6.1 Structures

Structures fall into three broad categories: trusses, frames, and machines, and you should be able to identify which is which.

A **truss** is a multi-body structure made up of long slender members connected at their ends in triangular subunits. Truss members carry axial forces only. Trusses are commonly used for spanning large distances without interruption: bridges, roof systems, stadiums, aircraft hangers, auditoriums for example. They are also used for crane booms, radio towers and the like. Trusses are lightweight and relatively strong. Over the years many unique truss designs have been developed and are often named after the original designer.

A **frame** is a multi-part, rigid, stationary structure primarily designed to support some type of load. A frame contains at least one multi-force member, which a truss never has. This means that, unlike trusses, frame members must support bending moments as well as shear and normal forces. Many common items can be considered frames. Some examples: building structure, bike frames, ladders, scaffolding, and more.

A **machine** is very similar to a frame, except that it includes some moving parts. The purpose of a machine is usually to provide a mechanical advantage and multiply

forces. Pliers, scissors jacks, automobile suspensions, construction equipment are all examples of machines.



**Figure 6.1.1** Scissors and bridges are examples of engineering structures. Scissors are a machine with three interconnected parts. The bridge is a truss.

**Solving** a structure means determining all forces acting on all of its parts. The solution typically begins by determining the global equilibrium of the entire structure, then breaking it into parts and analyzing each separate part. The specific process will depend on the type of structure, but will always follow the principles covered in the previous chapters.

**Two-force Members.** Many structures contain at least one two-force member, and trusses consist of two-force members exclusively. Recall from [Subsection 3.3.3](#) that a two-force body is an object subjected to exactly two forces. Two-force members are not required to be slender or straight, but can be recognized because they connect to other bodies or supports at exactly two points, and have no other loading unless it is also applied at those points.

Identifying two-force members is helpful when solving structures because they automatically establish the line of action of the two forces. In order for a two-force body to be in equilibrium, the forces acting on it must be equal in magnitude, opposite in direction, and have a line-of-action passing through the point where the two forces are applied. Since these points are known, the direction of the line-of-action is readily found.

The common way to express the force of a two-force member is with a magnitude and a sense, where the sense is either tension or compression. If the two forces tend to stretch the object we say it is in *tension*; if they act the other way and squash the object, it is in *compression*. The usual approach is to assume that a two-force member is in tension, then draw the free-body diagram and write the equilibrium equations accordingly. If the analysis shows that the forces are negative then they actually act with the opposite sense, i.e. compression.




**Figure 6.1.2** Two-force members in tension and compression.

## 6.2 Interactions between members

When analyzing structures we are dealing with multi-body systems, and need to recall [Newton's 3rd Law](#), “For every action, there is an equal and opposite reaction.”


This law applies to multi-body systems wherever one body connects to another. At any interaction point, forces are transferred from one body to the interacting body as equal and opposite action-reaction pairs. These forces cancel out and are invisible when the structure is intact. Only when we cut through a member or joint in the isolation step of creating a free-body diagram, do we expose the interaction forces. When drawing free-body diagrams of the components of structures, it is critically important to represent these action-reaction pairs consistently. You may assume either direction for one, but the other *must* be equal and opposite.

For example, look at the members and joints in the truss below. Diagram (a) shows the truss members held together by pins at  $A$ ,  $B$ , and  $C$ . The forces holding the parts together cancel and are not shown. In the ‘exploded’ view (b), the parts have been separated and the action-reaction pairs are exposed. Member  $AB$  is in tension, and the forces acting on it, also called  $AB$ , oppose each other and tend to stretch the member. These stretching forces are accompanied by equal and opposite forces, also called  $AB$  acting on pins  $A$  and  $B$ . Tensile forces  $BC$  and compressive forces  $CA$  behave similarly.

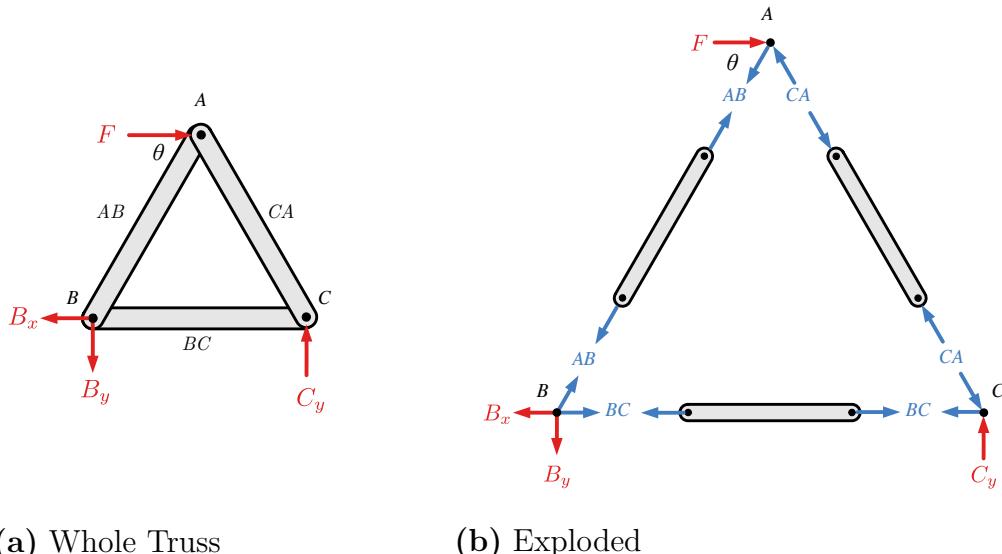

**Figure 6.2.1** External load and global reactions in red. Internal action-reaction pairs in blue.


**Thinking Deeper 6.2.2 Equilibrium of Multi-Body Systems.** When a multi-part structure is in equilibrium, each part of the structure is also in equilibrium. For example in the truss below, each member of the truss, each joint, and each portion of the truss is also in equilibrium. This continues all the way down to the atoms of the structure. This universal equilibrium across spatial scales is one of the governing principles which allows us to break multi-body systems into smaller solvable parts.

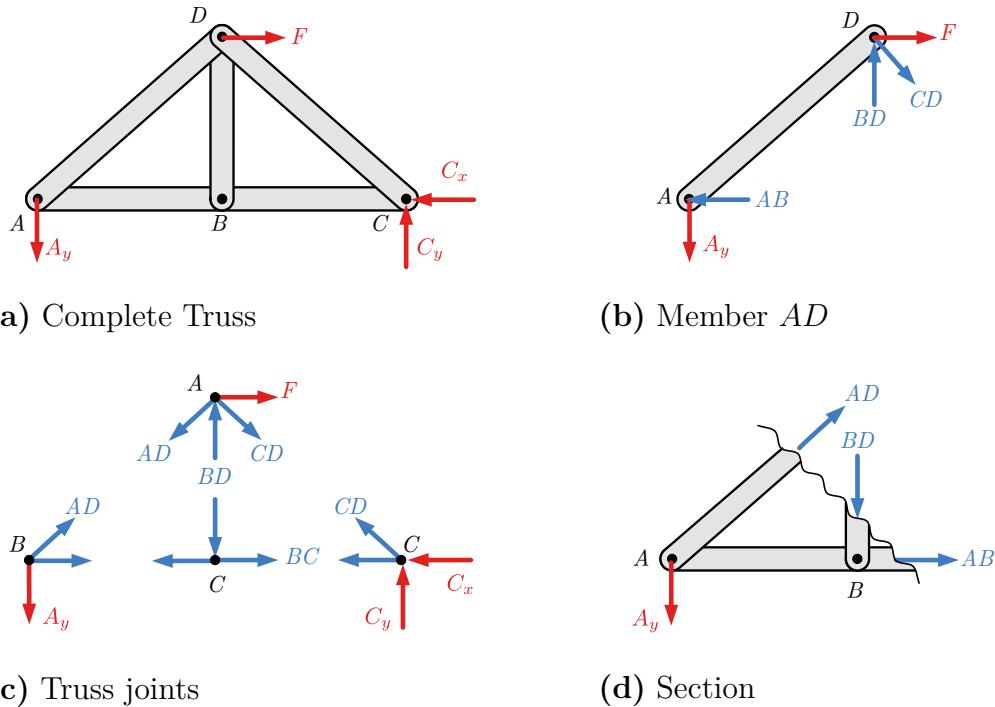

**Figure 6.2.3** Possible free-body diagrams

You will see in this chapter that we have the freedom to isolate free-body diagrams at any scale to expose our target unknowns.

**Load Paths.** Load paths can help you think about structural systems. Load paths show how applied forces like the floor load in the image below pass through the interconnected members of the structure until they end up at the fixed support reactions. All structural systems, whether non-moving frames or moving machines have some sort of load path. When analyzing all structures, you computationally move from known values through the interconnected bodies of the system, following the load path, solving for unknowns as you go.

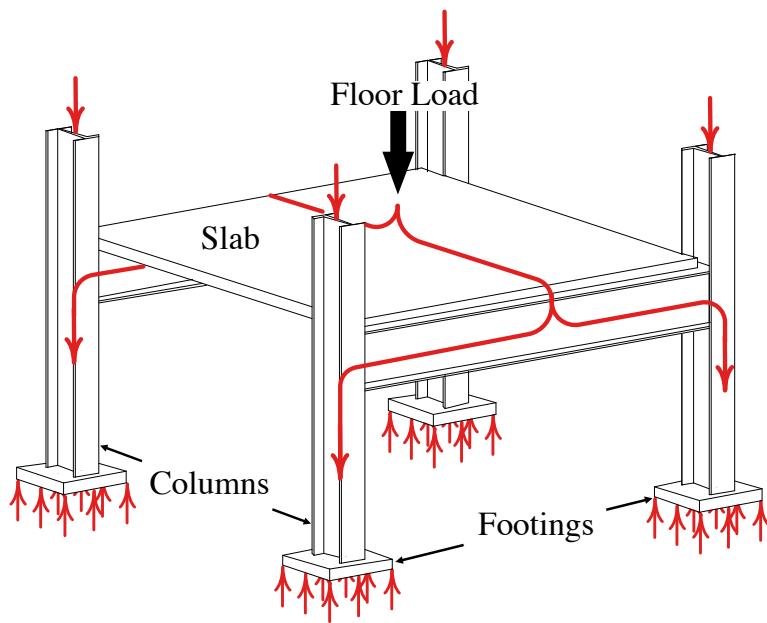

**Figure 6.2.4** Load paths

## 6.3 Trusses

### Key Questions

- What are simple trusses and how do they differ from other structural systems?
- What are the benefits and dangers of simple trusses?
- How can we determine the forces acting within simple truss systems?
- For a truss in equilibrium, why is every individual member, joint, and section cut from the truss also in equilibrium?
- How do we identify zero-force members in a truss and use their presence to simplify the analysis?

#### 6.3.1 introduction

A **truss** is a rigid engineering structure made up of long, slender members connected at their ends. Trusses are commonly used to span large distances with a strong, light-weight structure. Some familiar applications of trusses are bridges, roof structures, and pilons. **Planar trusses** are two-dimension trusses built out of triangular sub-units, while **space trusses** are three-dimensional, and the basic unit is a tetrahedron.

In this section we will analyze a simplified approximation of a planar truss, called a **simple truss** and determine the forces the members individually support when the

truss supports a load. Two different approaches will be presented: the **method of sections**, and the **method of joints**.

### 6.3.2 Simple Trusses

Truss members are connected to each other rigidly, by welding or joining the ends with a gusset plate. This makes the connecting joints rigid, but also make the truss difficult to analyze. To reduce the mathematical complexity in this text we will only consider **simple trusses**, which are a simplification appropriate for preliminary analysis.



**Figure 6.3.1** Truss with riveted gusset plates.

Simple trusses are made of all two-force members and all joints are modeled as frictionless pins. All applied and reaction forces are applied only to these joints. Simple trusses, by their nature, are statically determinate, having a sufficient number of equations to solve for all unknowns values. While the members of real-life trusses stretch and compress under load, we will continue to assume that all bodies we encounter are rigid.

Simple trusses are made of triangles, which makes them rigid when removed from supports. Simple trusses are determinate, having a balance of equations and unknowns, following the equation:

$$\underbrace{2 \times (\text{number of joints})}_{\text{system equations}} = \underbrace{(\text{number of reaction forces}) + (\text{number of members})}_{\text{system unknowns}}$$

Commonly, rigid trusses have only three reaction forces, resulting in the equation:

$$2 \times (\text{number of joints}) = 3 + (\text{number of members})$$

Unstable trusses lack the structural members to maintain their rigidity when removed from their supports. They can also be recognized using the equation above

having more system equations on the left side of the equation above than system unknowns on the right.

Truss systems with redundant members have fewer system equations on the left side of the equation above than the system unknowns on the right. While they are indeterminate in statics, in later courses you will learn to solve these trusses too, by taking into account the deformations of the truss members.

**Thinking Deeper 6.3.2 The Danger of Simple Trusses.** Simple trusses have no structural redundancy, which makes them easy to solve using the techniques of this chapter, however this simplicity also has a dark side.



These trusses are sometimes called *fracture critical trusses* because the failure of a single component can lead to catastrophic failure of the entire structure. With no redundancy, there is no alternative load path for the forces that normally would be supported by that member. You can visualize the fracture critical nature of simple trusses by thinking about a triangle with pinned corners. If one side of a triangle fails, the other two sides lose their support and will collapse. In a full truss made of only triangles, the collapse of one triangle starts a chain reaction which causes others to collapse as well.

While fracture critical bridges are being replaced by more robust designs, there are still thousands in service across the United States. To read more about two specific fracture critical collapses search the internet for the *Silver Bridge* collapse, or the *I-5 Skagit River Bridge* collapse.

### 6.3.3 Solving Trusses


“Solving” a truss means identifying and determining the unknown forces carried by the members of the truss when supporting the assumed load. Because trusses contain only two-force members, these internal forces are all purely axial. Internal forces in

frames and machines will additionally include traverse forces and bending moments, as you will see in [Chapter 8](#).


Determining the internal forces is only the first step of a thorough analysis of a truss structure. Later steps would include refining the initial analysis by considering other load conditions, accounting for the weight of the members, relaxing the requirement that the members be connected with frictionless pins, and ultimately determining the stresses in the structural members and the dimensions required in order to prevent failure.

Two strategies to solve trusses will be covered in the following sections: the [Method of Joints](#) and the [Method of Sections](#). Either method may be used, but the Method of Joints is usually easier when finding the forces in all the members, while the Method of Sections is a more efficient way to solve for specific members without solving the entire truss. It's also possible to mix and match methods.

The initial steps to solve a truss are the same for both methods. First, ensure that the structure can be modeled as a simple truss, then draw and label a sketch of the entire truss. Each joint should be labeled with a letter, and the members will be identified by their endpoints, so member  $AB$  is the member between joints  $A$  and  $B$ . This will help you keep everything organized and consistent in later analysis. Then, treat the entire truss as a rigid body and solve for the external reactions using the methods of [Chapter 5](#). If the truss is cantilevered and unsupported at one end you may not actually need the reaction forces and may skip this step. The reaction forces can be used later to check your work.

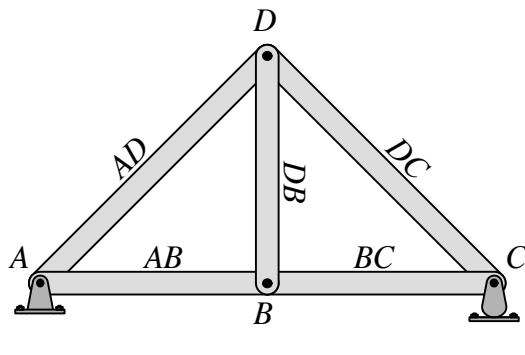

**Figure 6.3.3** Truss Labels.

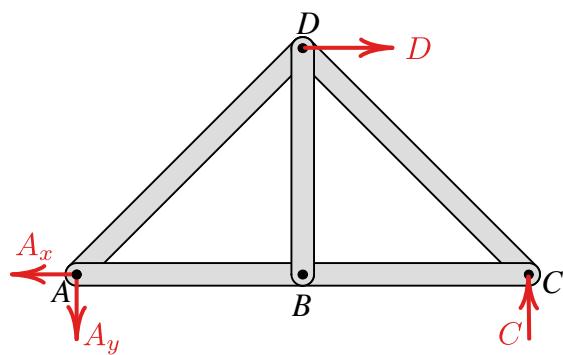


**Figure 6.3.4** Free body diagram.

### 6.3.4 Zero-Force Members

Sometimes a truss will contain one or more zero-force members. As the name implies, zero-force members carry no force and thus support no load. Zero-force members will be found when you apply equilibrium equations to the joints, but you can save some work if you can spot and eliminate them before you begin. Fortunately, zero-force members can easily be identified by inspection with two rules.

- Rule 1: If *two* non-collinear members meet at an unloaded joint, then both are zero-force members.

- Rule 2: If *three* forces (interaction, reaction, or applied forces) meet at a joint and two are collinear, then the third is a zero-force member.

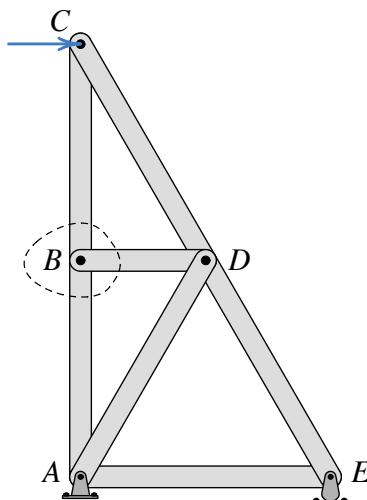

Consider the truss to the left. Assume that the dimensions, angles and the magnitude of force  $C$  are given. At joint  $B$ , there are two vertical collinear members as well as a third member which is horizontal, so Rule 2 should apply.



What does Rule 2 say about member  $BD$ ? Can it tell us anything about member  $DA$ ?

Cutting the members at the dotted boundary line exposes internal forces  $BC$ ,  $BD$  and  $BA$ . These forces act along the axis of the corresponding members by the nature of two-force members, and for convenience have been assumed in tension although that may turn out to be incorrect.

Rule 2 applies here since  $BA$  and  $BC$  are collinear and  $BD$  is not.

The free-body diagram of joint  $B$  may be drawn by eliminating the cut members and only showing the forces themselves.

The situation is simple enough to apply the equilibrium equations in your head.

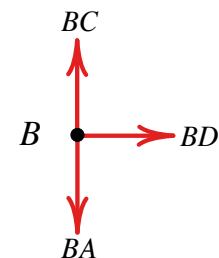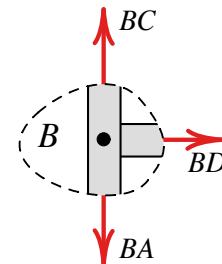

Vertically, forces  $BC$  and  $BA$  must be equal, and horizontally, force  $BD$  must be zero to satisfy  $\Sigma F_x = 0$ . We learn that member  $BD$  is a zero-force member.

While it is probably easiest to think about Rule 2 when the third member is perpendicular to the collinear pair, it doesn't have to be. Any perpendicular component must be zero which implies that the corresponding member is zero-force.

Finding zero-force members is an iterative process. If you determine that a member is zero-force, eliminate it and you may find others. Continuing the analysis at joint  $D$  draw its free-body diagram. Keep in mind that if one end of a member is zero-force the whole member is zero-force. Since member  $BD$  is zero-force, horizontal force  $BD$  acting on joint  $D$  is zero and need not be included on the free-body diagram, and the remaining three forces match the conditions to apply Rule 2.

Analyzing the joint as before, but with a coordinate system aligned with the collinear pair,




$$\Sigma F_y = 0$$

$$DA \sin \theta = 0$$

This equation will be satisfied if  $DA = 0$  or if  $\sin \theta = 0$  but the second condition is only true when  $\theta = 0^\circ$  or  $\theta = 90^\circ$ , which is not the case here. Therefore, force  $DA$  must be zero, and we can conclude that member  $DA$  is a zero-force member as well.

Finally consider joint  $C$  and draw its free-body diagram. Does either Rule apply to this joint? No. You will need to solve two equilibrium equations with this free-body diagram to find the magnitudes of forces  $CD$  and  $CB$ .

On the other hand, if the horizontal load  $C$  was not present or if either  $BC$  or  $DC$  was zero-force, then Rule 1 *would* apply and the remaining members would also be zero-force.

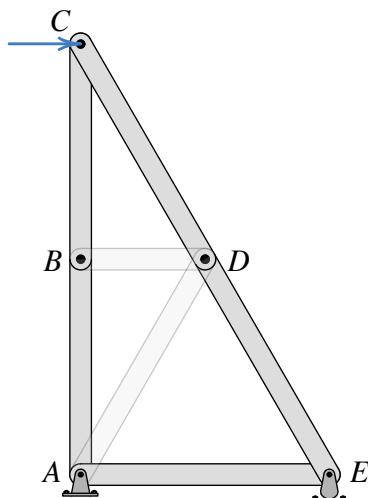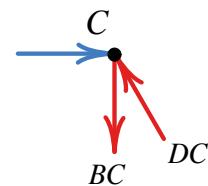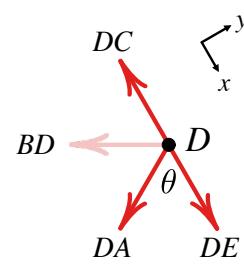

The final truss after eliminating the zero-force members is shown to the left. Forces  $BC = BA$  and  $DC = DE$  and the members may be replaced with longer members  $AC$  and  $CE$ .

The original truss has been reduced to a simpler triangular structure with only three internal forces to be found. Once you are able to spot zero force members, this simplification can be made without drawing any diagrams or performing any calculations.

**Thinking Deeper 6.3.5 Why include Zero-Force Members?** You may be wondering what is the point of including a member in a truss if it supports no load. In our simplified example problems, they really are unnecessary, but in the real world, zero-force members are important for several reasons:

- We have assumed that all members have negligible weight or if not, applied


half the weight to each pin. The *actual* weight of *real* members invalidates the two-force body assumption and leads to errors. Consider a vertical member -- the internal forces must at least support the member's weight.

- Truss members are not actually rigid, and long slender members under compression will *buckle* and collapse. The so-called zero-force member will be engaged to prevent this buckling. In the previous example, members CD and DE are under compression and form an unstable equilibrium and would definitely buckle at pin D if they were not replaced with a single member CE with sufficient rigidity.
- Trusses are often used over a wide array of loading conditions. While a member may be zero-force for one loading condition, it will likely be engaged under a different condition — think about how the load on a bridge shifts as a heavy truck drives across.

So finding a zero-force member in a determinate truss does not mean you can discard the member. Zero-force members can be thought of as removed from the analysis, but only for the loading you are currently analyzing. After removing zero-force members, you are left with the simplest truss which connects the reaction and applied forces with triangles. If you misinterpret the rules you may over-eliminate members and be left with missing legs of triangles or 'floating' forces that have no load path to the foundation.

#### Example 6.3.6 Zero-Force Member Example.

Given the truss shown, eliminate all the zero-force members and draw the remaining truss.

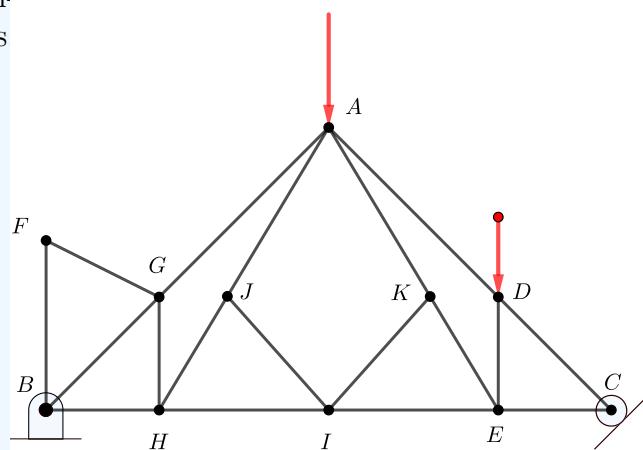

**Answer.** There are six zero-force members: GH, FG, BF, EI, DE and CD.

**Solution.** Rule 1:


- Due to two members meeting at unloaded joint G, both members GH and FG are zero-force members
- Due to two members meeting at unloaded joint D, both members DE and CD are zero-force members

Rule 2:


- Due to three forces meeting at joining  $B$ , with two being collinear (internal forces in  $AB$  and  $BC$ ) then  $BF$  is a zero-force member.
- Due to three forces meeting at joint  $I$ , with two being collinear (internal forces  $IF$  and  $CI$ ), then  $EI$  is a zero-force member. Note that member  $EI$  does not need to be perpendicular to the collinear members to be a zero force.

The remaining truss is shown.

Note that once  $EI$  and  $BF$  are eliminated, you can effectively eliminate the joints  $B$  and  $I$  as the member forces in the collinear members will be equal. Also notice that the truss is still formed of triangles which fully support all of the applied forces.

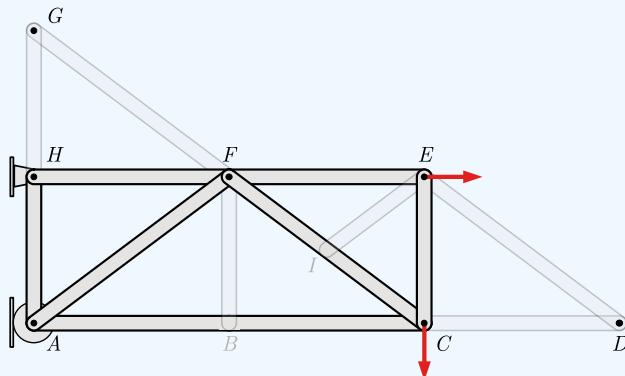

Try to find all the zero-force members in the truss in the interactive diagram below, once you believe you have found all of them, check out the step-by-step solution in the interactive.

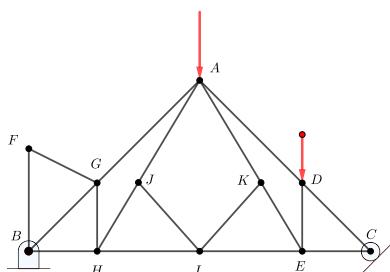

**Figure 6.3.7** Identify zero-force members.

## 6.4 Method of Joints

### Key Questions

- What are the important components to include on a free-body diagram of a joint in a truss?
- How are the solutions found at one joint used to create an accurate free-body diagram of another joint?

- How do we ensure that tension or compression in a member is properly represented?

The **method of joints** is a process used to solve for the unknown forces acting on members of a truss. The method centers on the joints or connection points between the members, and it is most useful when you need to solve for all the unknown forces in a truss structure.

The joints are treated of particles subjected to force by the connected members and any applied loads. As the joints are in equilibrium and the forces are concurrent,  $\Sigma F = 0$  can be applied, but the  $\Sigma M = 0$  equation provides no information.

For planar trusses, each joint yields two scalar equations,  $\Sigma F_x = 0$  and  $\Sigma F_y = 0$ , and so two unknowns can be found. Therefore, a joint can be solved when there are one or two unknowns forces and at least one known force acting on it.

Forces are transferred from joint to joint by the connecting members, so when unknown forces on a joint are found, the corresponding forces on adjacent joints are also found.

#### 6.4.1 Procedure

The procedure is straightforward application of rigid body and particle equilibrium

1. Determine if the structure is a truss and if it is determinate. See [Subsection 6.3.2](#)
2. Identify and remove all zero-force members. This is not required, but will eliminate unnecessary computations. See [Subsection 6.3.4](#).
3. Determine if you need to find the external reactions. If you can identify a solvable joint immediately, then you do not need to find the external reactions.  
A solvable joint includes one or more known forces and no more than two unknown forces. If there are no joints that satisfy this condition then you will need to find the external reactions before proceeding, using a free-body diagram of the entire truss.
4. Identify a solvable joint and solve it using the methods of [Chapter 3](#). When drawing free-body diagrams of joints you should
  - Represent the joint as a dot.
  - Draw all known forces in their known directions with arrowheads indicating their sense. Known forces are the given loads, and forces determined from previously solved joints.
  - Assume the sense of unknown forces. A common practice is to assume that all unknown forces are in tension, i.e. pulling away from the free-body diagram of the pin, and label them based on the member they represent .

Finally, write out and solve the force equilibrium equations for the joint. If you assumed that all forces were tensile earlier, negative answers indicate compression.

5. Once the unknown forces acting on a joint are determined, carry these values to the adjacent joints and repeat step four until all the joints have been solved. Take care when transferring forces to adjoining joints to maintain their sense — either tension or compression.
6. If you solved for the reactions in step two, you will have more equations available than unknown forces when you reach the last joint. The extra equations can be used to check your work.

Rather than solving the joints sequentially, you could write out the equations for all the joints first and solve them simultaneously using a matrix solution, but only if you have a computer available as large matrices are not typically solvable with a calculator.

The interactive below shows a triangular truss, loaded at the top and supported by a pin at  $A$  and a roller at  $B$ . You can see how the reactions and internal forces adjust as you vary the load at  $C$ . You can solve it by starting at joint  $C$  and solving for  $BC$  and  $CD$ , then moving to joint  $B$  and solving for  $AB$ . Joint  $A$  can be used to check your work.

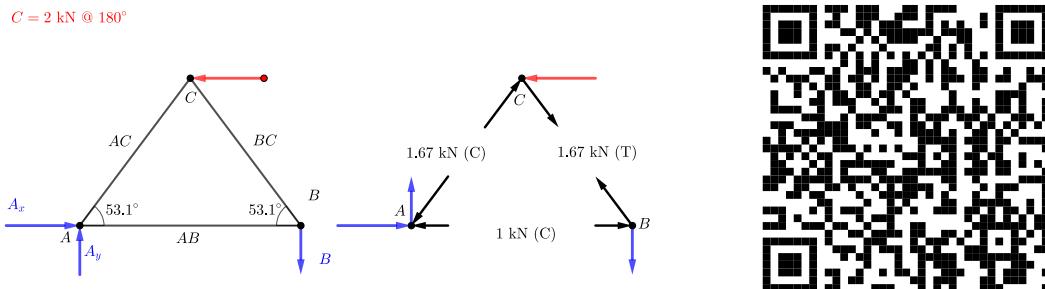


Figure 6.4.1 Internal and external forces of a simple truss.

## 6.5 Method of Sections

### Key Questions

- How do we determine an appropriate section to cut through a truss?
- How are equilibrium equations applied to a section?

The **method of sections** is used to solve for the unknown forces within specific members of a truss without solving for them all. The method involves dividing the truss into sections by cutting through the selected members and analyzing the section as a rigid body. The advantage of the Method of Sections is that the only internal

member forces exposed are those which you have cut through, the remaining internal forces are not exposed and thus ignored.

### 6.5.1 Procedure


The procedure to solve for unknown forces using the method of sections is

1. Determine if a truss can be modeled as a [simple truss](#).
2. Identify and eliminate all [zero-force members](#). Removing zero-force members is not required but may eliminate unnecessary computations.
3. Solve for the external reactions, if necessary. Reactions will be necessary if the reaction forces act on the section of the truss you choose to solve below.
4. Use your imaginary chain saw to cut the truss into two pieces by cutting through some or all of the members you are interested in. The cut does not need to be a straight line.

Every cut member exposes an unknown internal force, so if you cut three members you'll expose three unknowns. Exposing more than three members is not advised because you create more unknowns than available equilibrium equations.

5. Select the easier of the two halves of the truss and draw its free-body diagram.
  - Include all applied and reaction forces acting on the section, and show known forces acting in their known directions.
  - Draw unknown forces in assumed directions and label them. A common practice is to assume that all unknown forces are in tension and label them based on the endpoints of the member they represent.
6. Write out and solve the equilibrium equations for your chosen section. If you assumed that unknown forces were tensile, negative answers indicate compression.
7. If you have not found all the required forces with one section cut, repeat the process using another imaginary cut or proceed with the method of joints if it is more convenient.

The interactive below demonstrates the method of sections. The internal forces in the truss members are exposed by cutting through the truss at three locations. The known loads are shown in red, and the unknown reactions  $F_x$ ,  $A_x$  and  $A_y$ , and unknown member forces are shown in blue. All members are assumed to be in tension. In this situation, it is not necessary to find the reactions if the section to the right of the cut is selected.

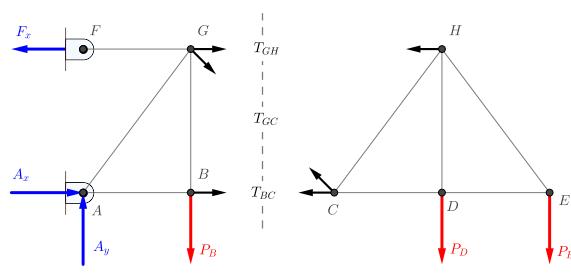

**Figure 6.5.1** Method of sections demonstration.

## 6.6 Frames and Machines

### Key Questions

- How are frames and machines different from trusses?
- Why can the method of joints and method of sections not be used for frames and machines?
- How do we identify if a structure is independently rigid?
- How do we apply equilibrium equations to each member of the structure, and ensure that the sense of a force appearing on multiple free-body diagrams is consistent?

Frame and machines are engineering structures that contain at least one multi-force member. As their name implies, multi-force members have more than two concentrated loads, distributed loads, and/or couples applied to them and therefore are not two-force members. Note that all bodies we investigated in [Chapter 5](#) were all multi-force bodies.

Analyzing a frame or machine means determining all applied, reaction, and internal forces and couples acting on the structure and all of its parts.

**Frames** are rigid, stationary structures designed to support loads and must include at least one multi-force member.

**Machines** are non-rigid structures where the parts can move relative to one another. Generally they have an input and an output force and are designed produce a mechanical advantage. Note that all machines in this text are in static equilibrium by their interacting and applied forces.

Though there is a design difference between frames and machines they are grouped together because they can both be analyzed using the same process, which is the subject of this section.



**Figure 6.6.1** Frames are rigid objects containing multi-force members.



**Figure 6.6.2** Machines contain multi-force members that can move relative to one another.

Analyzing frames and machines involves disassembling the structure into individual rigid bodies; we “take the structure apart” and analyze each part separately. Each component is analyzed as an independent rigid body. This leads to equilibrium equations for each component, and by Newton’s Third Law, every interaction force and couple is one half of a complementary pair. The interacting force of body  $A$  on  $B$  is equal and opposite to the force of body  $B$  on body  $A$  and the free-body diagrams must reflect this.

In [Chapter 5](#) we saw that each two-dimensional free-body diagram results in up to three linearly independent equations. By disassembling the structure we now have more free-body diagrams available, and can use them to find more unknown values. Here’s a few more details on the number of equations that come from each type of two-dimensional free-body diagram:

- *Two-force members. One equation.* Two-force members can be recognized as either a cable or a weightless link with all forces coming from two frictionless pins. The force at one pin is equal and opposite to the force on the other placing the body in tension or compression.
- *Objects with concurrent forces and no couple-moments. Two equations* These are the problems you solved in [Chapter 3](#). There are two equations available  $\Sigma F_x = 0$  and  $\Sigma F_y = 0$ .
- *Multi-force rigid body with offset forces and/or couples. Three equations* These are the most general body types where you can use  $\Sigma F_x = 0$ ,  $\Sigma F_y = 0$ , and  $\Sigma M = 0$  to solve for three unknowns.

### 6.6.1 Procedure

The process used to analyze frames and machines is outlined below

1. Determine if the entire structure as independently rigid. An independently rigid structure will hold its shape even when separated from its supports. Look for


triangles formed among the members, as triangles are inherently rigid. If it is not independently rigid, the structure will collapse when the supports are removed.

If the structure is independently rigid, model it as a single rigid body and determine the reaction forces. If the structure is not independently rigid then skip this step.


2. Draw a free-body diagram for each of the members in the structure. You must represent all forces acting on each member, including:

- Applied forces and couples and the weights of the components if non-negligible.
- Interaction forces due to two-force members. There will be force of unknown magnitude but the known direction at points connected to two-force members. The forces will act along the line between the two connection points.
- All reaction forces and couples at the connection points between members. Forces with an unknown magnitude and direction are usually represented by unknown  $x$  and  $y$  components, but can also be represented as a force with unknown magnitude acting in an unknown direction.

All interaction forces and couples between connected bodies *must* be shown as equal-and-opposite action-reaction pairs.

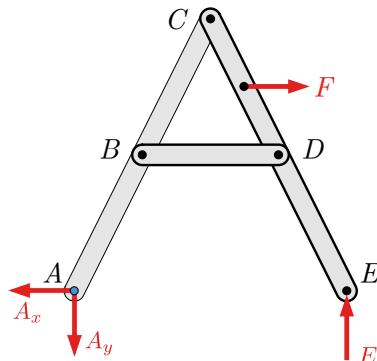

**Figure 6.6.3** Free-body diagram of a rigid frame with pin at  $A$ , roller at  $E$ , and load at  $F$ .

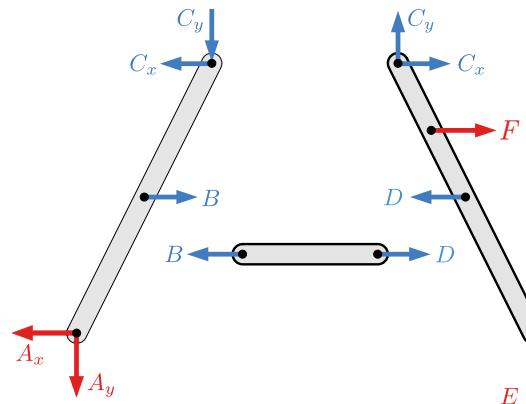

**Figure 6.6.4** Free body diagrams of the individual components. External forces are red, exposed action-reaction pairs in blue.

3. Write out the equilibrium equations for each free-body diagram.
4. Solve the equilibrium equations for the unknowns. You can do this algebraically, solving for one variable at a time, or you can use matrix equations to solve for everything at once. Negative magnitudes indicate that the assumed direction of

that term was incorrect, and the actual force/moment is opposite the assumed direction.

**Thinking Deeper 6.6.5 Why does the Method of Joints work on trusses but fail on Frames and Machines?** We can solve trusses using the methods of joints and method of sections because all members of a simple truss are two-force bodies. Cutting a truss member exposes an internal force which has an unknown scalar magnitude, but a known line of action. The force acts along the axis of the member, and causes no bending if the member is straight. Cutting a truss member exposes *one* unknown.

Frames and machines are made of multi-force members and cutting these, in general, exposes:

- A force with an unknown magnitude acting in an unknown direction, and
- A bending moment at the plane of the cut.

Cutting a two-dimensional multi-force member exposes *three* unknowns, and *six* are exposed for a three-dimensional body. The number of unknowns quickly eclipses the available equations rendering the problem impossible to solve.

Bottom line: use method of sections and joints *only* for trusses made of two-force straight members; for all other multi-force rigid body systems draw and analyze free-body diagrams of the components.

## 6.7 Summary

The various equilibrium topics we have covered and the associated problem solving techniques are summarized below.

You should be able to recognize these situations, draw the associated free-body diagrams and solve for the unknowns of each case.

**Particle Equilibrium.** An object may be treated as a particle when the forces acting on it are coincident, that is, all of their lines of action intersect at a common point. In this case, they produce no moment to rotate the object, and  $\Sigma M = 0$  is not helpful. The applicable equation is

$$\Sigma F = 0,$$

which produces two scalar equations in two dimensions and three scalar equations in three dimensions.

**Rigid Body Equilibrium.** A rigid body can rotate and translate so both force and moment equilibrium must be considered.

$$\Sigma F = 0$$

$$\Sigma M = 0$$

In two dimensions, these equations produce in two scalar force equations and one scalar moment equation. Up to three unknowns can be determined.

In three dimension, they produce three scalar force equations and scalar three moment equations. Up to six unknowns can be determined.

**Trusses.** A truss is a structure which consists entirely of two-force members and only carries forces at the joints connecting members. Two-force members and loading at joints allows free-body diagram of the joints to expose the axial loads in members.

In addition to the equations provided by treating the entire truss as a rigid body, each joint provides two additional equations for two-dimensional trusses, and three for non-planar trusses.

**Frames and Machines.** Frames and machines are structures which contain multiple rigid body systems. Frames don't move and are designed to support loads. Machines are generally designed to multiply forces, and usually have moving parts. Both frames and machines can be solved using the same methods.

All interactions between bodies are equal and opposite action-reaction pairs.

When solving frames and machines

- Two-force members provide one useful equilibrium equation, and can determine one unknown.
- In two dimensions, rigid bodies result in two scalar force equations and one scalar moment equation. Up to three unknowns can be determined.
- In three dimensions, rigid bodies produce three scalar force equations and scalar three moment equations. Up to six unknowns can be determined.

## 6.8 Exercises

# Chapter 7

## Centroids and Centers of Gravity

A **centroid** is the geometric center of a geometric object: a one-dimensional curve, a two-dimensional area or a three-dimensional volume. Centroids are useful for many situations in Statics and subsequent courses, including the analysis of distributed forces, beam bending, and shaft torsion.

Two related concepts are the **center of gravity**, which is the average location of an object's *weight*, and the **center of mass** which is the average location of an object's *mass*. In many engineering situations, the centroid, center of mass, and center of gravity are all coincident. Because of this, these three terms are often used interchangeably without regard to their precise meanings.

We consciously and subconsciously use centroids for many things in life and engineering, including:

*Keeping your body's balance:* Try standing up with your feet together and leaning your head and hips in front of your feet. You have just moved your body's center of gravity out of line with the support of your feet.

*Computing the stability of objects in motion like cars, airplanes, and boats:* By understanding how the center of gravity interacts with the accelerations caused by motion, we can compute safe speeds for sharp curves on a highway.

*Designing the structural support to balance the structure's own weight and applied loadings on buildings, bridges, and dams:* We design most large infrastructure not to move. To keep it from moving, we must understand how the structure's weight, people, vehicles, wind, earth pressure, and water pressure balance with the structural supports.

You probably have already developed a good intuition about centroids and centers of gravity based upon your life experience, and can roughly estimate their location when you look at an object or diagram. In this chapter you will learn to locate them precisely using two techniques: [integration 7.7](#) and the method of [composite parts 7.5](#).

## 7.1 Weighted Averages

You certainly know how to find the average of several numbers by adding them up and dividing by the number of values, so for example the average of the first four positive integers is

$$\frac{1 + 2 + 3 + 4}{4} = 2.5$$

More formally, if  $a$  is a set with  $n$  elements then the average, or ***mean***, value is

$$\bar{a} = \frac{1}{n} \sum_{i=1}^n a_i = \frac{a_1 + a_2 + \cdots + a_n}{n}. \quad (7.1.1)$$

This average is also called the **arithmetic mean**. When calculating an arithmetic mean, each number is equally important when evaluating the average. The overbar symbol is often used to indicate that a quantity is a mean value.

In situations where some values are more important than others, we use a **weighted average**. A familiar example is your grade point average. Your GPA is calculated by weighting your grade for each class by the credits for that class, then dividing by the total credits you have taken. The credit values are called the **weighting factors**.

In general terms a weighted average is

$$\bar{a} = \frac{\sum a_i w_i}{\sum w_i} \quad (7.1.2)$$

Where  $a_i$  are the values we are averaging and  $w_i$  are the corresponding weighting factors. The weighting factors may be different for each item being averaged, so  $w_i$  is the weighting factor for value  $a_i$ . In this book we will not write the limits on the sums, and understand that the intent is always to sum over all the values. Notice that if the weighting factors are all identical, they can be factored out of the sums so the weighted average and the arithmetic mean will be the same.

Weighted averaging is used to find centroids, centers of gravity and centers of mass, the subject of this chapter. All three are *points* located at the “center” the object, but the meaning of “center” depends on the weighting factors. Area or volume are the factors used for centroids, weight for center of gravity, and mass for center of mass.

### Example 7.1.1 Course Grades.

The mechanics syllabus says that there are two exams worth 25% each, homework is 10%, and the final is worth 40%. You have a 40 on the first exam, a 80 on the second exam, and your homework grade is 90.

What do you have to earn on the final exam to get a 70 in the class?

**Answer.** You need a 77.5 on the final to get a 70 for the class.

**Solution.** Your known grades and the weighting factors are

$$G_i = [40, 80, 90, FE]$$

$$w_i = [25\%, 25\%, 10\%, 40\%]$$

Find final exam score  $FE$  so that your average grade  $\bar{G}$  is 70%.


$$\begin{aligned}\bar{G} &= \frac{\sum G_i w_i}{\sum w_i} \\ 70 &= \frac{(40 \times 0.25) + (80 \times 0.25) + (90 \times 0.1) + (FE \times 0.4)}{(0.25 + 0.25 + 0.1 + 0.4)} \\ FE &= \frac{70(1) - (10 + 20 + 9)}{0.4} = 77.5.\end{aligned}$$

## 7.2 Center of Gravity

So far in this book we have always taken the weight of an object to act at a point at its center. This is the **center of gravity**: the point where all of an object's weight may be concentrated and still have the same *external* effect on the body. In this chapter we will learn to actually locate this point.

We will indicate the center of gravity with a circle with black and white quadrants, and we will use  $(\bar{x}, \bar{y})$  as the coordinates of this point. This represents the average location of all the particles which make up the body. The same symbols are also used for centroids, and  $\bar{z}$  is used as well for three-dimensional problems.

The center of gravity of a body is fixed with respect to the body, but the coordinates depend on the choice of coordinate system. For example, in Figure 7.2.1 the center of gravity of the block is at its geometric center meaning that  $\bar{x}$  and  $\bar{y}$  are positive, but if the block is moved to the left of the  $y$  axis, or the coordinate system is translated to the right of the block,  $\bar{x}$  would then become negative.

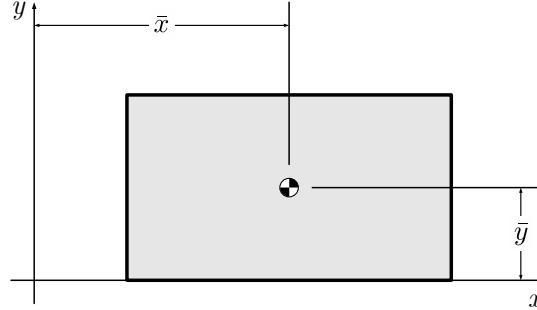


**Figure 7.2.1** Location of the centroid, measured from the origin.

Lets explore the center of gravity of a familiar object. Take a pencil and try to balance it on your finger. How do you decide where to place it? You likely supported it roughly in the middle, then adjusted it until it balanced. You found the point where the moments of the weights on either side of your finger were in equilibrium.

Let's develop this balanced moment idea mathematically.

Assume that the two halves of the pencil have known weights acting at points 1 and 2. How could we replace the two weights with a single statically equivalent force? Recall from Section 4.6 that statically equivalent systems produce the same external effect on the object —the net force on the object, and the net moment about any point don't change. An upward force at this point will support the pencil without tipping.

To be equivalent, the total weight must equal the total weight of the parts.  $W = W_1 + W_2$ . Common sense also tells us that  $W$  will act somewhere between  $W_1$  and  $W_2$ .

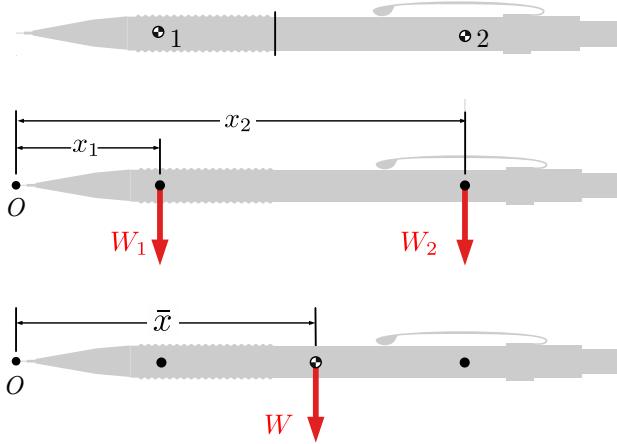

**Figure 7.2.2** (top) Side view of a pencil representing each half as a particle. (middle) A force diagram showing the weights of the two particles. (bottom) An equivalent system consisting of a single weight acting at the pencil's center of gravity.

Next, let's do the mathematical equivalent of sliding your finger back and forth until a balance point is located. Pick any point  $O$  to be the origin, then calculate the total moment about  $O$  due to the two weights.

The sum of moments around point  $O$  can be written as:

$$\sum M_O = -x_1 W_1 - x_2 W_2$$

Notice that the moment of both forces are clockwise around point  $O$ , so the signs are negative according to the right-hand rule. We want a single equivalent force acting at the (unknown) center of gravity. Call the distance from the origin to the center of gravity  $\bar{x}$ .

$\bar{x}$  represents the mean distance of the weight, mass, or area depending on the context of the problem. We are evaluating weights in this problem, so  $\bar{x}$  represents the distance from  $O$  to the center of gravity.

The sum of moments around point  $O$  for the equivalent system can be written as:

$$\sum M_O = -\bar{x}W$$

The moment of total weight  $W$  is also clockwise around point  $O$ , so the sign of moment will also be negative according to the right-hand rule. Since the two representation are equivalent we can equate them and solve for  $\bar{x}$ .

$$\begin{aligned} -\bar{x}W &= -x_1 W_1 - x_2 W_2 \\ \bar{x} &= \frac{x_1 W_1 + x_2 W_2}{W_1 + W_2} \end{aligned}$$

This result is exactly in the form of (7.1.2) where the value being averaged is distance  $x$  and the weighting factor is the weight of part  $W_i$  and the result is the mean distance  $\bar{x}$ .

The pencil was made up of two halves, but this equation can easily be extended  $n$  discrete parts. The resulting general definition of the centroidal coordinate  $\bar{x}$  is:

$$\bar{x} = \frac{\sum \bar{x}_i W_i}{\sum W_i} \quad (7.2.1)$$

where:

$W_i$  is the weight of part  $i$ ,

$\bar{x}_i$  is the  $x$  coordinate of the center of gravity of element  $i$ , and

$\sum$  is understood to mean “sum all parts” so there is no need to write  $\sum_{i=1}^n$ .

The numerator is the **first moment** of force which is literally a moment of force as we defined it in [Chapter 3](#). The denominator is the sum of the weights of the pieces, which is the weight of the whole object. We will soon also see first moments of mass and first moments of area and in [Chapter 10](#), we will introduce **second moments**, which are the integral of some quantity like area, multiplied by a distance *squared*.

We treated the pencil as a one-dimensional object, so this discussion focused on  $\bar{x}$ . There are similar formula for the other dimensions as well

$$\bar{x} = \frac{\sum \bar{x}_i W_i}{\sum W_i} \quad \bar{y} = \frac{\sum \bar{y}_i W_i}{\sum W_i} \quad \bar{z} = \frac{\sum \bar{z}_i W_i}{\sum W_i}. \quad (7.2.2)$$

In words, these equations say

$$\text{distance to CG} = \frac{\text{sum of first moments of weight}}{\text{total weight}}$$

They apply to any object which can be divided into discrete parts, and they produce the coordinates of the object's center of gravity.

**Question 7.2.3** Can you explain why the center of gravity of a symmetrical object will always fall on the axis of symmetry?


**Answer.** If the object is symmetrical, every subpart on the positive side of the axis of symmetry will be balanced by an identical part on the negative side. The first moment for the entire shape about the axis will sum to zero, meaning that

$$\bar{x} = \frac{\sum \bar{x}_i W_i}{\sum W_i} = \frac{0}{W} = 0.$$

In other words, the distance from the axis of symmetry of the shape to the centroid is zero.  $\square$

## Example 7.2.4 Simple Center of Gravity.

Three 10 lb boxes are distributed along the  $x$  axis as shown.

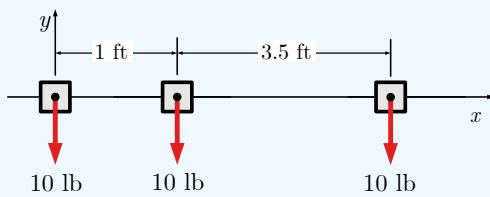

- Find the total weight and the distance from the origin to the center of gravity of the three boxes.
- How would the center of gravity change if the right-most box weighed 20 lb instead of 10 lb?


**Answer.** a)  $W = 30 \text{ lb}$      $\bar{x} = 2.5 \text{ ft}$

b)  $W = 40 \text{ lb}$      $\bar{x} = 3.25 \text{ ft}$

The total weight increases by 10 lb and the center of gravity shifts to the right by 0.75 ft. Also, if the weights of box three doubles, the first moment of weight with respect to the origin of the third box would also double.

$$M_3 = W_3 x_3 = (20 \text{ lb})(5.5 \text{ ft}) = 110 \text{ ft}\cdot\text{lb}.$$

**Solution.**

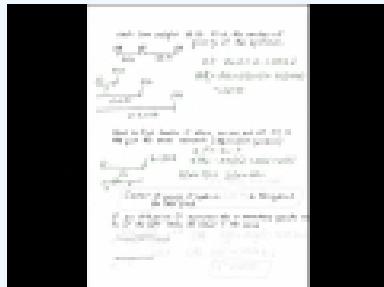

YouTube: <https://www.youtube.com/watch?v=HdqM4wITZq8>

### 7.3 Center of Mass

The **center of mass** is the mean location of the mass of an object, and is related to the center of gravity by Newton's Second Law because

$$W = mg,$$

where  $g$  is the local strength of the gravitational field. In this course you may take  $g = 9.81 \text{ m/s}^2$  as a reasonable assumption for objects on the surface of the earth.

Substituting  $m_i g_i = W_i$  in (7.2.2) gives the equations for the center of mass.

$$\bar{x} = \frac{\sum \bar{x}_i m_i g_i}{\sum m_i g_i} \quad \bar{y} = \frac{\sum \bar{y}_i m_i g_i}{\sum m_i g_i} \quad \bar{z} = \frac{\sum \bar{z}_i m_i g_i}{\sum m_i g_i}. \quad (7.3.1)$$

By our assumption that  $g$  is constant on the surface of the earth,  $g_i$  can be factored out of the sums and drops out of the equation completely.

$$\bar{x} = \frac{\sum \bar{x}_i m_i}{\sum m_i} \quad \bar{y} = \frac{\sum \bar{y}_i m_i}{\sum m_i} \quad \bar{z} = \frac{\sum \bar{z}_i m_i}{\sum m_i}. \quad (7.3.2)$$

These equations give the coordinates of the center of mass. The numerator contains the **first moment of mass**, and the denominator contains the total mass of the object. As long as the assumption that  $g$  is constant is valid, the center of mass and the center of gravity are identical points and the two terms may be used interchangeably.

## 7.4 Centroids

### Key Questions

- What is the difference between a centroid, center of gravity and a center of mass?
- When will the centroid, center of gravity and center of mass refer to the same point
- Why do the equations for the center of gravity, mass, volume, and area all have the same structure?

A centroid is a weighted average like the center of gravity, but weighted with a geometric property like area or volume, and not a physical property like weight or mass. This means that centroids are properties of pure shapes, not physical objects. They represent the coordinates of the “middle” of the shape.

The defining equations for centroids are similar to the equations for [Centers of Gravity \(7.2.2\)](#) but with *volume* used as the weighting factor for three-dimensional shapes

$$\bar{x} = \frac{\sum \bar{x}_i V_i}{\sum V_i} \quad \bar{y} = \frac{\sum \bar{y}_i V_i}{\sum V_i} \quad \bar{z} = \frac{\sum \bar{z}_i V_i}{\sum V_i}, \quad (7.4.1)$$


and *area* for two-dimensional shapes

$$\bar{x} = \frac{\sum \bar{x}_i A_i}{\sum A_i} \quad \bar{y} = \frac{\sum \bar{y}_i A_i}{\sum A_i}. \quad (7.4.2)$$

We will see how to use these equations on complex shapes later in this chapter, but centroids of some simple shapes can be easily found using symmetry.

If the shape has an axis of symmetry, every point on one side of the axis is mirrored by another point equidistant on the other side. One has a positive distance from the axis, and the other is the same distance away in the negative direction. These two points will add to zero the numerator, as will every other point making up the shape, and the first moment will be zero. This means that the centroid must lie along the

line of symmetry if there is one. If a shape has multiple symmetry lines, then the centroid must exist at their intersection.

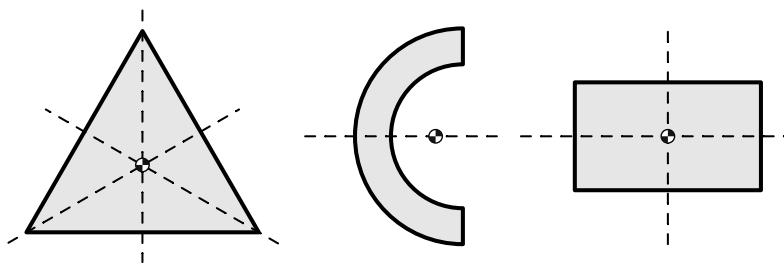


**Figure 7.4.1** Centroids lie upon axes of symmetry.

Since rectangles, circles, cubes, spheres, etc. have multiple lines of symmetry, their centroids must be exactly in the center as we would expect.

### Question 7.4.2

What are the coordinates of the centroid of the I beam section shown?

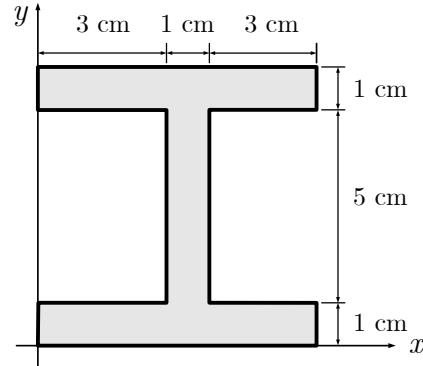

**Answer.**

$$\bar{x} = \bar{y} = 3.5 \text{ cm}$$

**Solution.** The cross section is symmetrical about both a vertical and horizontal centerline. The centroid is at the intersection, in the middle. The coordinates are measured from the origin, in the bottom left of the diagram.


$$\bar{x} = \bar{y} = 3.5 \text{ cm}$$


□

### 7.4.1 Properties of Common Shapes

We will learn how to find centroids of other shapes in [Section 7.7](#) using integration, but in the mean time several common shapes are recorded in the table below. This information in this table will be needed in the next section.


Shape	Area	Centroid	Remarks
-------	------	----------	---------

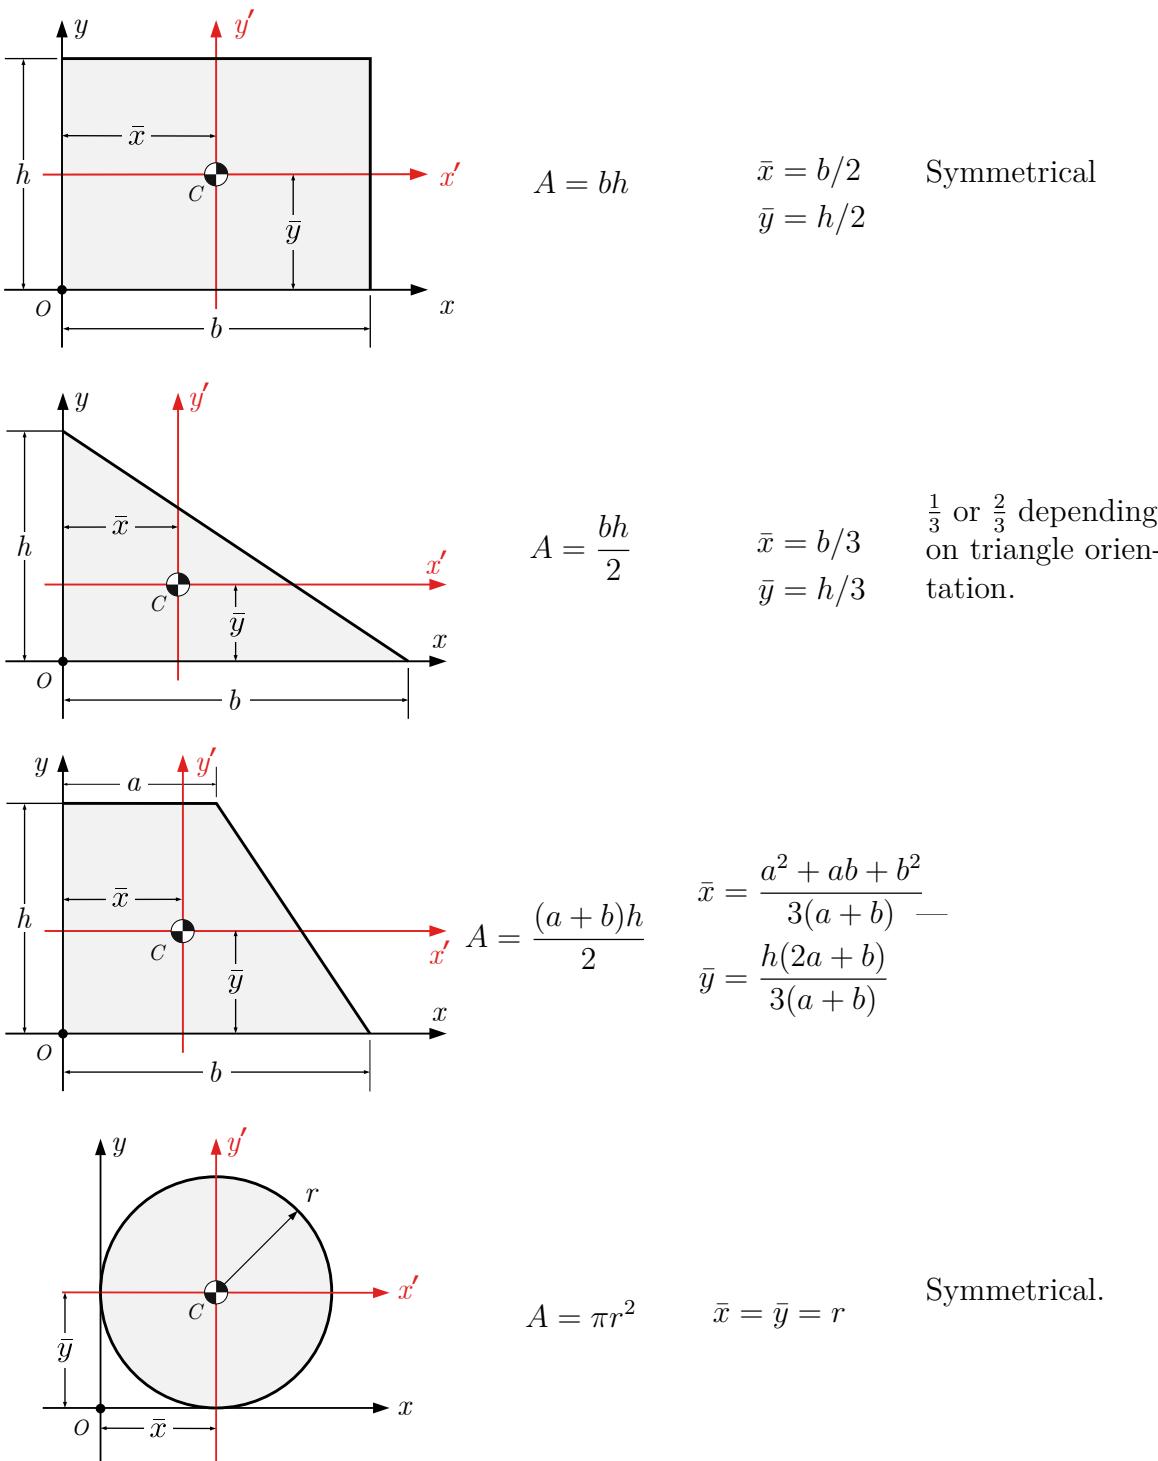

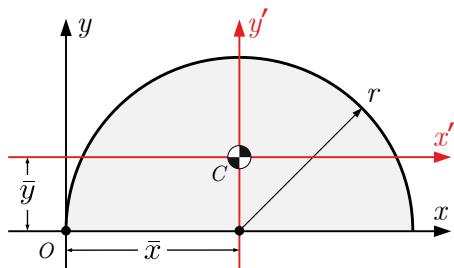

$$\begin{aligned} \bar{x} &= r \\ A &= \frac{\pi r^2}{2} \\ \bar{y} &= \frac{4r}{3\pi} \\ \frac{4r}{3\pi} &\approx 0.424r \end{aligned}$$

Memorize this.  
See Example 7.7.15 for proof.

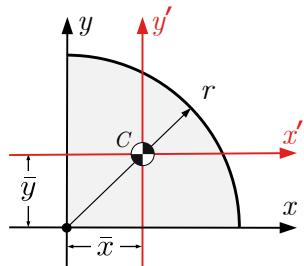

$$\begin{aligned} \bar{x} &= \bar{y} = \frac{4r}{3\pi} \\ A &= \frac{\pi r^2}{4} \\ \frac{4r}{3\pi} &\approx 0.424 r \end{aligned}$$

Symmetrical along  $y = x$ .

**Note 7.4.3** In this table, all centroids are measured from the indicated origin. You must make the appropriate adjustments when the origin of your coordinate system is located elsewhere.

### 7.4.2 Relations between Centroids and Center of gravity

The equations we have been discussing (7.2.2), (7.3.1), (7.4.1) and (7.4.2) are all variations on the general weighted average formula (7.1.2).


$$\bar{a} = \frac{\sum a_i w_i}{\sum w_i}$$

Here  $a_i$  represents the distance in one of the coordinate directions such as  $x$ ,  $\bar{a}$  is the mean distance in the  $a$  direction to the ‘middle’ of the whole object, and  $w$  is the weighting factor. The only difference between them is the choice of weighting factor. For center of gravity, the weighting factor is the weight, for center of mass, it is the mass, for 3d Centroids it is the volume, and for 2d Centroids it is area.

To understand how these equations relate to one another consider a plate with a cross-sectional area  $A$ , divided into  $n$  pieces with volume  $V_i$ .

The weight of part  $i$  is the product of its specific weight and volume.

$$W_i = \gamma V_i = \rho_i g_i A_i t_i$$

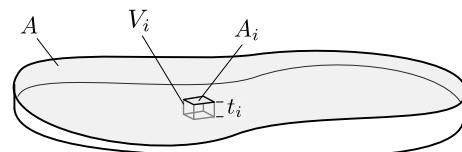

**Figure 7.4.4** Plate with variable thickness  $t$ , divided into many volume elements  $V_i$ .

In the most general case, all of these terms might depend on the position of the part, but if any are constant they can be factored out and simplify the formulas.

For a homogeneous flat plate with uniform thickness, like a piece of plywood, the density, thickness and  $g$  are all constant so

$$W_i = \rho g t A_i$$

$$\begin{aligned}\bar{x} &= \frac{\sum \bar{x}_i W_i}{\sum W_i} & \bar{y} &= \frac{\sum \bar{y}_i W_i}{\sum W_i} & \bar{z} &= \frac{\sum \bar{z}_i W_i}{\sum W_i} \\ \bar{x} &= \frac{\rho g t \sum \bar{x}_i A_i}{\rho g t \sum A_i} & \bar{y} &= \frac{\rho g t \sum \bar{y}_i A_i}{\rho g t \sum A_i} & \bar{z} &= \frac{\rho g t \sum \bar{z}_i A_i}{\rho g t \sum A_i}.\end{aligned}$$

The two dimensional centroid equations are sufficient to find the center of gravity of a three dimensional object.

## 7.5 Centroids using Composite Parts

### Key Questions

- How do you calculate the center of gravity of a system of separate objects?
- Where do the equations for the shapes in areas and centroids table come from?
- When finding the centroid, what do you do with a cut-out area of a composite part?
- Does it matter whether a distance to the centroid of a part is positive or negative from the axis system?

In this section we will discuss how to find centroids of two-dimensional shapes by first dividing them into pieces with known properties, and then combining the pieces to find the centroid of the original shape. This method will work when the geometric properties of all the sub-shapes are known or can be easily determined. If the shape can't be decomposed this way, perhaps because it has a curved boundary, you will need to use integration to find the centroid. Integration will be covered in [Section 7.7](#).

For convenience, the properties of several common shapes can be found [here](#).

### 7.5.1 Composite Parts Method

The equations we will use for this approach are

$$\bar{x} = \frac{\sum \bar{x}_i A_i}{\sum A_i} \quad \bar{y} = \frac{\sum \bar{y}_i A_i}{\sum A_i} \tag{7.5.1}$$

where,

$\bar{x}$ , and  $\bar{y}$  are the coordinates of the centroid of the entire shape.

$V_i$  is the area of composite part  $i$ .

$\bar{x}_i$ , and  $\bar{y}_i$  are the coordinates of the centroid of composite part  $i$ .

The steps to finding a centroid using the composite parts method are:


1. Break the overall shape into simpler parts.
2. Collect the areas and centroid coordinates, and
3. Apply (7.5.1) to combine to find the coordinates of the centroid of the original shape.

As a simple example, consider the L-shaped area shown, which has been divided into two rectangles. The areas of the rectangles are

$$A_1 = 18 \text{ in}^2, A_2 = 14 \text{ in}^2$$

The origin is located at the lower left, so the coordinates of the centroids of the two rectangles are

$$\bar{x}_1 = 1.5 \text{ in}, \bar{y}_1 = 5 \text{ in}, \quad \bar{x}_2 = 3.5 \text{ in}, \bar{y}_2 = 1 \text{ in}$$

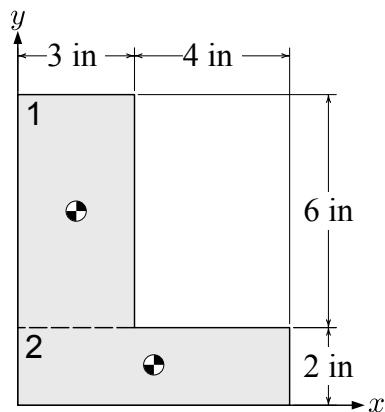

The centroid of the whole shape is found by applying (7.5.1)

$$\begin{aligned}\bar{x} &= \frac{\sum \bar{x}_i A_i}{\sum A_i} & \bar{y} &= \frac{\sum \bar{y}_i A_i}{\sum A_i} \\ \bar{x} &= \frac{(1.5)(18) + (3.5)(14)}{18 + 14} & \bar{y} &= \frac{\sum(5)(18) + (1)(14)}{18 + 14} \\ \bar{x} &= 2.375 \text{ in} & \bar{y} &= 3.25 \text{ in}\end{aligned}$$


For more complex shapes, the usual practice is to set up a table to organize the information needed to calculate the centroid, as we will now show. The process can be broken into three steps.

1. *Break the overall shape into simpler parts.*


We begin with a sketch of the shape and establish a coordinate system. It is critical that all measurements are made from a common origin, and the results will be measured from this origin as well. A careful choice of origin can simplify the problem, so give it some thought.

Then divide the shape into several simpler shapes. The sub-shapes may include holes, which are treated as negative areas. You must know how to calculate the area and locate the centroid of any sub-shape you use.


Consider the complex shape below.

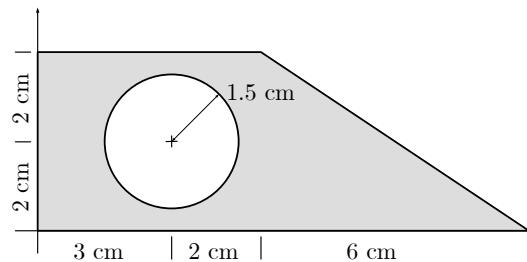

There are often several ways to divide a shape, but it's best to use as few parts as possible to minimize your computations and opportunities for error. For example, you could choose to break this shape into either a  $5 \text{ cm} \times 4 \text{ cm}$  rectangle, a  $6 \text{ cm} \times 4 \text{ cm}$  right triangle, and an  $r = 1.5 \text{ cm}$  circular hole,

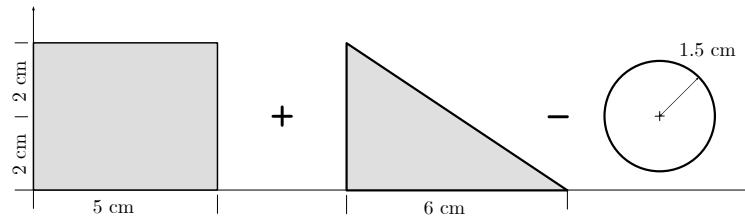

or a large  $10 \text{ cm} \times 4 \text{ cm}$  rectangle, an  $r = 1.5 \text{ cm}$  circular hole, and a  $6 \text{ cm} \times 4 \text{ cm}$  right triangle subtracted from the large rectangle.

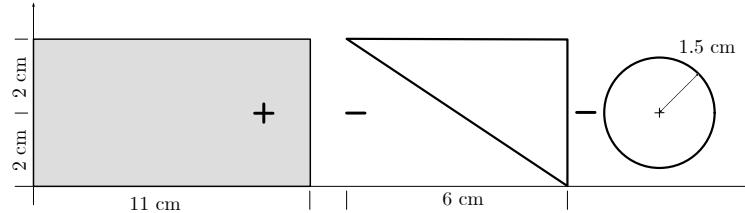

Both options will give the same results, and in this case there is no particular advantage to one choice over the other. However, it would be silly and unnecessary to break this into more than three parts, and it would not be a good idea to divide this into a trapezoid minus a hole, unless you know geometric properties of a trapezoid, which are not available in [Subsection 7.4.1](#). Be sure your sub-shapes don't overlap and don't get counted more than once.

## 2. Collect the areas and centroid coordinates.

Once the complex shape has been divided into parts, the next step is to determine the area and centroidal coordinates for each part. You can use the properties in [Subsection 7.4.1](#) for rectangles, triangles, circles, semi-circles and quarter circles but you will need to use integration if other shapes are involved. Any holes or removed shapes should be treated as negative areas.

Record the information you gather in a table like the one below. The table should include a row containing column headings and units, one row for each part, and a summary row. The first column identifies the part — by number

or sketch, the second contains the areas, and the third and fourth contains the centroidal coordinates of the parts.

Part	$A_i$ [cm <sup>2</sup> ]	$\bar{x}_i$ [cm]	$\bar{y}_i$ [cm]	$A_i\bar{x}_i$ [cm <sup>3</sup> ]	$A_i\bar{y}_i$ [cm <sup>3</sup> ]
1	20	2.5	2	50	40
2	12	7	4/3	84	16
3	-2.25 $\pi$	3	2	-6.75 $\pi$	-4.5 $\pi$
$\Sigma$	24.93	—	—	112.8	41.86

The last two columns of the table contain the first moments of area  $Q_x = A_i\bar{y}_i$  and  $Q_y = A_i\bar{x}_i$ , and are easily filled in by multiplying the values in columns two to four. Be sure to attend to positive and negative signs when multiplying. Note that the moment of area with respect to the  $x$  axis uses the distance from the  $x$  axis, which is  $\bar{y}_i$ , and vice-versa.

The final row of the table are total values, calculated by summing the entries for  $A_i$ ,  $Q_x$  and  $Q_y$ , so for example the total area of the shape is

$$A = \sum A_i = A_1 + A_2 + A_3 \dots$$

Don't sum columns three or four, since  $\sum \bar{x}_i$  and  $\sum \bar{y}_i$  are meaningless.


### 3. Combine the pieces to find the overall centroid.

After you have filled in the whole table, you can find the coordinates of the centroid by applying (7.5.1) with the summary values from the last row.

$$\begin{aligned}\bar{x} &= \frac{Q_y}{A} &= \frac{112.8}{24.93} = 4.52 \text{ cm} \\ \bar{y} &= \frac{Q_x}{A} &= \frac{41.86}{24.93} = 1.692 \text{ cm}\end{aligned}$$

Finally, plot the centroid ( $\bar{x}, \bar{y}$ ) on the diagram. If you have made a calculation error it will usually be obvious, because the centroid location won't "feel right."

Example 7.5.1 Interactive: Centroid of Trapezoid and Hole.

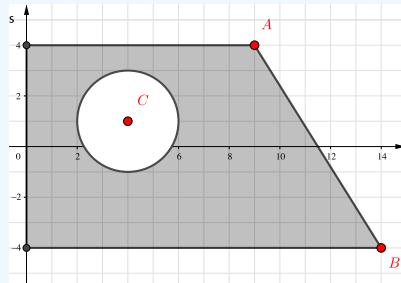


**Figure 7.5.2** Interactive of the composite body consisting of a rectangle, triangle and a circular hole.

Example 7.5.3 Interactive: Centroid of Composite Rectangles.

This interactive shows a composite shape consisting of a large rectangle with a smaller rectangle subtracted. You can change the location and size of the rectangles by moving the red points.

Use this to visualize how the centroids of the whole is related to the centroid of the parts. Note that for objects divided into two pieces, the centroid of the whole always falls on the line connecting the centroids of the parts.

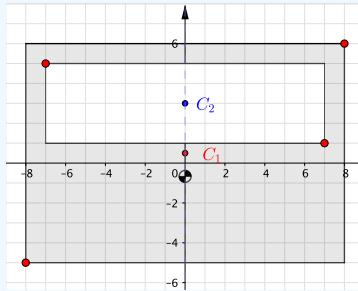

**Figure 7.5.4** Interactive Centroids

**Question 7.5.5** When finding a centroid, what will happen if you don't measure the centroids of the parts consistently from the same origin?

**Answer.** Your answer will be wrong! □

## 7.5.2 Centroids of 3D objects

### Key Questions

- How do you divide a composite solid into parts and compute the volume/mass and centroidal distances of each part?
- What is the technique to compute the overall center of volume/mass for a composite solid?

The centroid of a three-dimensional volume is found similarly to two-dimensional centroids, but with volume used instead of area for the weighting factor. The centroid of a volume and the center of mass or gravity for a homogenous solid are identical.

$$\bar{x} = \frac{\sum \bar{x}_i V_i}{\sum V_i} \quad \bar{y} = \frac{\sum \bar{y}_i V_i}{\sum V_i} \quad \bar{z} = \frac{\sum \bar{z}_i V_i}{\sum V_i}$$

Where,

$\bar{x}$ ,  $\bar{y}$ , and  $\bar{z}$  are the coordinates of the centroid of the overall volume.  $V_i$  is the volume of composite part  $i$ .

$\bar{x}_i$ ,  $\bar{y}_i$ , and  $\bar{z}_i$  is the coordinates of the centroid of composite part  $i$ .

Many three-dimensional shapes are just prismatic extrusions of the shapes. The volume of a prism is the product of the cross-sectional area and the length of the prism and is easily calculated. For example, the volume of a circular cylinder with radius  $r$  and length  $l$  is  $V = \pi r^2 l$ .

If the density varies for each part of a composite solid, we can find the center of mass by dividing the first moment of mass by the total mass. You can also compute the center of gravity by replacing the mass terms in the equations below with weight terms.

$$\bar{x} = \frac{\sum \bar{x}_i m_i}{\sum m_i} \quad \bar{y} = \frac{\sum \bar{y}_i m_i}{\sum m_i} \quad \bar{z} = \frac{\sum \bar{z}_i m_i}{\sum m_i}$$

Here  $m_i$  is the mass of composite part  $i$ .


You must always use the same weighting factor (area, volume, mass, weight, etc) in both the numerator and denominator of the center of area/volume/mass/weight equations.

#### Example 7.5.6 3D Center of Mass.

A composite solid consists of a rectangular block of lightweight concrete and a triangular wedge of steel with dimensions as shown. The rectangular block has a 2 ft radius circular hole drilled through its full depth, perpendicular to the front and back faces.

Assume  $\gamma_C = 125 \text{ lb/ft}^3$ , and  $\gamma_S = 493 \text{ lb/ft}^3$ .

Find the center of mass of this composite solid.

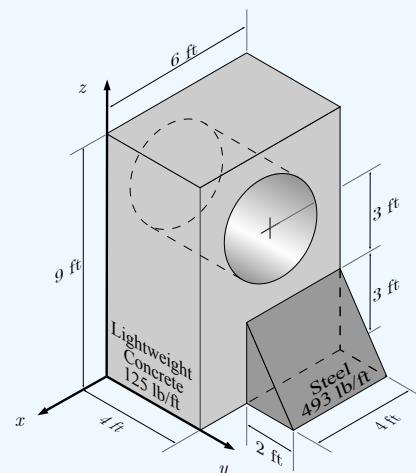

**Answer.**

$$\bar{x} = -3.33 \text{ ft}$$

$$\bar{y} = 2.59 \text{ ft}$$

$$\bar{z} = 3.37 \text{ ft}$$

**Solution.**

**Table 7.5.7**

Part	$V_i$ [ft <sup>3</sup> ]	$\gamma$ [lb/ft <sup>3</sup> ]	$W_i$ [lb]	$\bar{x}_i$ [ft]	$\bar{y}_i$ [ft]	$\bar{y}_i$ [ft]	$W_i \bar{x}_i$ [lb-ft]	$W_i \bar{y}_i$ [lb-ft]	$W_i \bar{z}_i$ [lb-ft]
block	216	125	27000	-3	2	4.5	-81000	54000	121500
hole	-50.27	125	-6283	-3	2	6	18850	-12566	-37699
wedge	12	493	5916	-4.5	4.67	1	-26622	27608	5916
			26633				-88772	69042	89717

$$\bar{x} = \frac{\sum W_i \bar{x}_i}{\sum V_i} = \frac{-88772 \text{ ft}^3}{26633 \text{ ft}^2} = -3.33 \text{ ft}$$

$$\bar{y} = \frac{\sum W_i \bar{y}_i}{\sum V_i} = \frac{69042 \text{ ft}^3}{26633 \text{ ft}^2} = 2.59 \text{ ft}$$

$$\bar{z} = \frac{\sum W_i \bar{z}_i}{\sum V_i} = \frac{89717 \text{ ft}^3}{26633 \text{ ft}^2} = 3.37 \text{ ft}$$

We have actually found the coordinates of the center of gravity, but since  $g$  is constant they are also coordinates of the center of mass.

## 7.6 Average Value of a Function


The weighted average technique discussed in (7.1.2) are a fine for averaging several discrete values, but what do we do if we need to find the average of an infinite number of values or values which change continuously?

Consider a function  $y = f(x)$  over some interval from  $a$  to  $b$ . How can we find the average value  $\bar{y}$  of the function over that interval? To understand what is meant by the average value of a function, look at the interactive below. There, the function  $f(x)$  is the red curve, and which you can change if you like. The blue dots  $a$  and  $b$  mark the beginning and end of the interval and are also adjustable.

The area under this curve between  $a$  and  $b$  is shaded with gray, and we can find it using a definite integral

$$\int_a^b f(x) \, dx$$

The blue hatched rectangle has the same area as the gray shaded region, and because the areas are the same, the height of the rectangle  $\bar{y}$ , is the average value of  $f(x)$ .

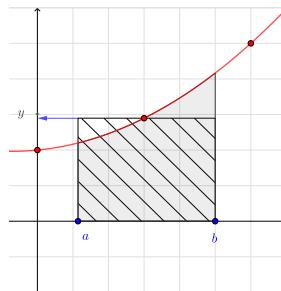

**Figure 7.6.1** The average value of a function between  $a$  and  $b$ .

With this in mind, we can calculate the average value of  $f(x)$  by equating the area under the curve with the area of the rectangle and solving for  $\bar{y}$ .

$$\int_a^b f(x) \, dx = \bar{y}(b - a)$$

$$\bar{y} = \frac{\int_a^b f(x) \, dx}{(b - a)}$$

$$\text{and since } \int_a^b dx = (b - a)$$

$$\bar{y} = \frac{\int_a^b f(x) \, dx}{\int_b^a dx}$$

This is a weighted average like (7.1.2) but instead of summing  $n$  discrete values, we integrate of an infinite number of infinitesimal values.  $f(x)$  is the value being averaged and the weighting function is  $dx$ .

This approach is true for any choice of weighting function. To find  $\bar{x}$  for a two dimensional area, the value to be averaged is  $x$  and the weighting function is  $dA$ , so replacing  $dx$  with  $dA$  and  $x_i$  with  $x$ ,

$$\bar{x} = \frac{\sum \bar{x}_i A_i}{\sum A_i} \quad \Rightarrow \quad \bar{x} = \frac{\int x dA}{\int dA}$$

In other words, to transform a discrete summation to an equivalent continuous integral form you:

1. Replace the summation with integration,  $\Sigma \Rightarrow \int$ .
2. Replace the discrete weighting factor with the corresponding differential element,

$$\begin{cases} A_i & \Rightarrow dA \\ V_i & \Rightarrow dV \\ W_i & \Rightarrow dW \end{cases} \quad \text{etc.}$$

3. Rename the value being averaged to eliminate the index  $i$ . We often use  $el$  as a subscript when referring to a differential element.

The two-dimensional centroid equations (7.5.1) become,

$$\bar{x} = \frac{\sum \bar{x}_i A_i}{\sum A_i} \Rightarrow \frac{\int \bar{x}_{\text{el}} dA}{\int dA} \quad \bar{y} = \frac{\sum \bar{y}_i A_i}{\sum A_i} \Rightarrow \frac{\int \bar{y}_{\text{el}} dA}{\int dA},$$

and in the same way the center of gravity equations become

$$\bar{x} = \frac{\int \bar{x}_{\text{el}} dW}{\int dW} \quad \bar{y} = \frac{\int \bar{y}_{\text{el}} dW}{\int dW} \quad \bar{z} = \frac{\int \bar{z}_{\text{el}} dW}{\int dW}.$$

**Question 7.6.2** How far is it from the earth to the sun?

**Answer.** 92,958,412 miles

**Solution.** Siri says that “The average distance from the earth to the sun is 92,958,412 miles.”

That’s a pretty exact answer. What does it mean, exactly? From what point on the earth to what point on the sun?

If the earth and sun were perfect spheres, we could use the distance between their centroids. With more information about shape and density, we could find their centers of mass and measure between those points.

The bigger problem is that this distance changes continuously as the earth revolves around the sun. How can we find an average value for something which is continuously changing?

We need to use the methods described here, integrating the distance as a function of time over the course of a year.  $\square$

## 7.7 Centroids using Integration

### Key Questions

- How do you find the the centroid of an area using integration?
- What is a differential quantity?
- Why are double integrals required for square  $dA$  elements and single integrals required for rectangular  $dA$  elements?

In this section we will use the integral form of (7.4.2) to find the centroids of non-homogenous objects or shapes with curved boundaries.

$$\bar{x} = \frac{\int \bar{x}_{\text{el}} dA}{\int dA} \quad \bar{y} = \frac{\int \bar{y}_{\text{el}} dA}{\int dA} \quad \bar{z} = \frac{\int \bar{z}_{\text{el}} dA}{\int dA} \quad (7.7.1)$$

With the integral equations we are mathematically breaking up a shape into an infinite number of infinitesimally small pieces and adding them together by integrating. This powerful method is conceptually identical to the discrete sums we introduced first.

### 7.7.1 Integration Process

Determining the centroid of a area using integration involves finding weighted average values  $\bar{x}$  and  $\bar{y}$ , by evaluating these three integrals,

$$A = \int dA, \quad Q_x = \int \bar{y}_{\text{el}} dA \quad Q_y = \int \bar{x}_{\text{el}} dA, \quad (7.7.2)$$

where

- $dA$  is a differential bit of area called the *element*.
- $A$  is the *total area* enclosed by the shape, and is found by evaluating the first integral.
- $\bar{x}_{\text{el}}$  and  $\bar{y}_{\text{el}}$  are the coordinates of the *centroid of the element*. These are frequently functions of  $x$  or  $y$ , not constant values.
- $Q_x$  and  $Q_y$  are the *First moments of Area* with respect to the  $x$  and  $y$  axis.

The procedure for finding centroids with integration can be broken into three steps:


1. Set up the integrals.

Usually this is the hardest step.

You should always begin by drawing a sketch of the problem and reviewing the given information.

You will need to understand the boundaries of the shape, which may be lines or functions. You may need to know some math facts, like the definition of slope, or the equation of a line or parabola. A bounding function may be given as a function of  $x$ , but you want it as a function of  $y$ , or vice-versa or it may have a constant which you will need to determine.

You will need to choose an element of area  $dA$ . There are several choices available, including vertical strips, horizontal strips, or square elements; or in polar coordinates, rings, wedges or squares. There really is no right or wrong choice; they will all work, but one may make the integration easier than another. The best choice depends on the nature of the problem, and it takes some experience to predict which it will be.

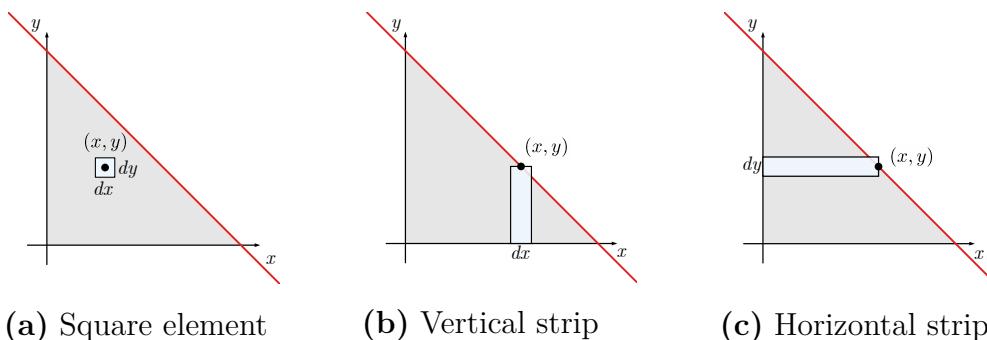

**Figure 7.7.1** Differential Elements of Area

The two most common choices for differential elements are:

- *Square elements and double integrals.*

If you choose an infinitesimal square element  $dA = dx dy$ , you must integrate twice, over  $x$  and over  $y$  between the appropriate integration limits. The position of the element typically designated  $(x, y)$ .

- *Rectangular elements and single integrals.*

If you choose rectangular strips you eliminate the need to integrate twice. You may select a vertical element with a different width  $dx$ , and a height extending from the lower to the upper bound, or a horizontal strip with a differential height  $dy$  and a width extending from the left to the right boundaries. Either way, you only integrate once to cover the enclosed area. When finding the area enclosed by a single function  $y = f(x)$ , and the  $x$  and  $y$  axes  $(x, y)$  represents a point on the function and  $dA = y dx$  for vertical strips, or  $dA = x dy$  for horizontal strips.

You must find expressions for the area  $dA$  and centroid of the element  $(\bar{x}_{el}, \bar{y}_{el})$  in terms of the bounding functions. This is how we turn an integral over an area into a definite integral which can be integrated.

When you have established all these items, you can substitute them into (7.7.2) and proceed to the integration step.

## 2. Solve the integrals.

This step is pure mathematics.

Here are some tips if you are doing integration “by hand”. Be neat, work carefully, and check your work as you go along. Use proper mathematics notation: don’t lose the differential  $dx$  or  $dy$  before the integration step, and don’t include it afterwards. Don’t forget to use equals signs between steps. Simplify as you go and don’t substitute numbers or other constants too soon. Pay attention to units: Area  $A$  should have units of [length]<sup>3</sup> and the first moments of area  $Q_x$  and  $Q_y$  should have units of [length]<sup>3</sup>. If your units aren’t consistent, then you have made a mistake.

## 3. Evaluate the centroid.

After you have evaluated the integrals you will have expressions or values for  $A$ ,  $Q_x$ , and  $Q_y$ . All that remains is to substitute these into the defining equations for  $\bar{x}$  and  $\bar{y}$  and simplify. Notice the  $Q_x$  goes into the  $\bar{y}$  equation, and vice-versa.

$$\bar{x} = \frac{Q_y}{A} \quad \bar{y} = \frac{Q_x}{A}$$

Finally, plot the centroid at  $(\bar{x}, \bar{y})$  on your sketch and decide if your answer makes sense for area.

**Thinking Deeper 7.7.2 What is  $dA$ ?**  $dA$  is just an area, but an extremely tiny one!

It's an example of an **differential quantity** — also called an **infinitesimal**. A differential quantity is value which is as close to zero as it can possibly be without actually being zero. You can think of its value as  $\frac{1}{\infty}$ . Integration is the process of adding up an infinite number of infinitesimal quantities.


Some other differential quantities we will see in statics are  $dx$ ,  $dy$  and  $dz$ , which are infinitesimal increments of distance;  $dV$ , which is a differential volume;  $dW$ , a differential weight;  $dm$ , a differential mass, and so on.

Any product involving a differential quantity is itself a differential quantity, so if the area of a vertical strip is given by  $dA = y dx$  then, even though height  $y$  is a real number, the area is a differential because  $dx$  is differential.

If you like, you can pronounce the  $d$  as “the little bit of” so  $dA = y dx$  reads “The little bit of area is the height  $y$  times a little bit  $x$ .” and  $A = \int dA$  reads “The total area is the sum of the little bits of area.”

## 7.7.2 Area of a General Spandrel

In this section we will use the integration process describe above to calculate the area of the general spandrel shown in [Figure 7.7.3](#). A **spandrel** is the area between a curve and a rectangular frame. This is a general spandrel because the curve is defined by the function  $y = kx^n$ , where  $n$  is not specified. If  $n = 0$  the function is constant, if  $n = 1$  then it is a straight line,  $n = 2$  it's a parabola, etc.. You can change the slider to see the effect of different values of  $n$ .

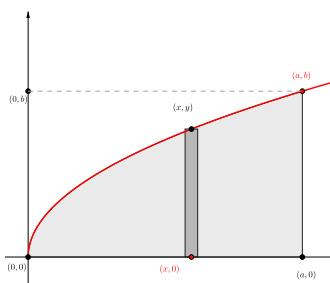

**Figure 7.7.3** A general spandrel of the form  $y = kx^n$

Begin by identifying the bounding functions. From the diagram, we see that the boundaries are the function, the  $x$  axis and, the vertical line  $x = b$ . The function  $y = kx^n$  has a constant  $k$  which has not been specified, but which is not arbitrary. The diagram indicates that the function passes through the origin and point  $(a, b)$ , and there is only one value of  $k$  which will cause this. We can find  $k$  by substituting  $a$  and  $b$  into the function for  $x$  and  $y$  then solving for it.

$$\begin{aligned}y &= kx^n \\b &= ka^n \\k &= \frac{b}{a^n}\end{aligned}$$

Next, choose a differential area. For this problem a vertical strip works well. A vertical strip has a width  $dx$ , and extends from the bottom boundary to the top boundary. Any point on the curve is  $(x, y)$  and a point directly below it on the  $x$  axis is  $(x, 0)$ . This means that the height of the strip is  $(y - 0) = y$  and the area of the strip is (base  $\times$  height), so

$$dA = y \, dx.$$

The limits on the integral are from  $x = 0$  on the left to  $x = a$  on the right since we are integrating with respect to  $x$ .

With these details established, the next step is to set up and evaluate the integral  $A = \int dA = \int_0^a y \, dx$ . This is the familiar formula from calculus for the area under a curve. Proceeding with the integration

$$\begin{aligned} A &= \int_0^a y \, dx && (y = kx^n) \\ &= \int_0^a kx^n dx && (\text{integrate}) \\ &= k \frac{x^{n+1}}{n+1} \Big|_0^a && (\text{evaluate limits}) \\ &= k \frac{a^{n+1}}{n+1} && \left( k = \frac{b}{a^n} \right) \\ &= \frac{b}{a^n} \frac{a^{n+1}}{n+1} && (\text{simplify}) \\ A &= \frac{ab}{n+1} && (\text{result}) \end{aligned}$$

This result is not a number, but a general formula for the area under a curve in terms of  $a$ ,  $b$ , and  $n$ . Explore with the interactive, and notice for instance that when  $n = 0$ , the shape is a rectangle and  $A = ab$ ; when  $n = 1$  the shape is a triangle and the  $A = ab/2$ ; when  $n = 2$  the shape is a parabola and  $A = ab/3$  etc. This single formula gives the equation for the area under a whole family of curves.

#### Thinking Deeper 7.7.4 Which is better, horizontal or vertical elements?


Recall that the first moment of area  $Q_x = \int \bar{x}_{\text{el}} \, dA$  is the distance weighted area as measured from a desired axis. The distance term  $\bar{x}_{\text{el}}$  is the the distance from the desired axis to the centroid of each differential element of area,  $dA$ .

If you're using a single integral with a *vertical* element  $dA$

$$dA = \underbrace{y(x)}_{\text{height}} \underbrace{(dx)}_{\text{base}}$$


and the horizontal distance from the  $y$  axis to the centroid of  $dA$  would simply be

$$\bar{x}_{\text{el}} = x$$

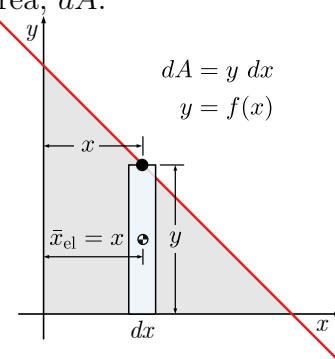

It is also possible to find  $\bar{x}$  using a horizontal element but the computations are a bit more challenging. First the equation for  $dA$  changes to


$$dA = \underbrace{x(y)}_{\text{height}} \underbrace{(dy)}_{\text{base}}.$$

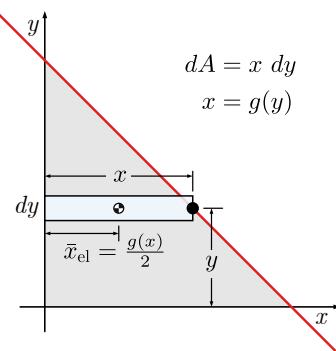


Additionally, the distance to the centroid of each element,  $\bar{x}_{el}$ , must measure to the middle of the horizontal element. For this triangle,

$$\bar{x}_{el} = \frac{x(y)}{2}.$$

We find a similar contrast to finding the vertical centroidal distance  $\bar{y}$  where it is easier to use a  $dy$  element to find  $\bar{y}$  than it is to use a  $dx$  element.

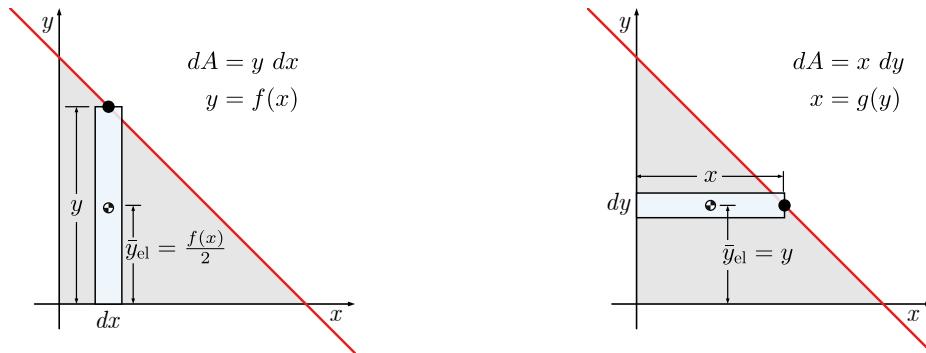

The interactive below compares horizontal and vertical strips for a shape bounded by the parabola  $y^2 = x$  and the diagonal line  $y = x - 2$ . Horizontal strips are a better choice in this case, because the left and right boundaries are easy to express as functions of  $y$ . If vertical strips are chosen, the parabola must be expressed as two different functions of  $x$ , and two integrals are needed to cover the area, the first from  $x = 0$  to  $x = 1$ , and the second from  $x = 1$  to  $x = 4$ .

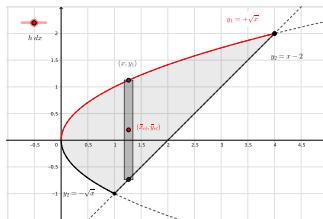

**Figure 7.7.5** Function demonstrating good and bad choices of differential elements.


### 7.7.3 Examples

This section contains several examples of finding centroids by integration, starting with very simple shapes and getting progressively more difficult. All the examples include interactive diagrams to help you visualize the integration process, and to see how  $dA$  is related to  $x$  or  $y$ .

The first two examples are a rectangle and a triangle evaluated three different ways: with vertical strips, horizontal strips, and using double integration. The different approaches produce identical results, as you would expect. You should try to decide which method is easiest for a particular situation.

**Example 7.7.6** Centroid of a rectangle.

Use integration to show that the centroid of a rectangle with a base  $b$  and a height of  $h$  is at its center.

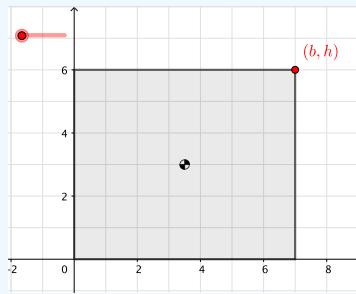

**Figure 7.7.7**

**Answer.**

$$\bar{x} = b/2 \quad \bar{y} = h/2 \quad (7.7.3)$$

**Solution 1.** This solution demonstrates solving integrals using vertical rectangular strips. Set the slider on the diagram to  $h dx$  to see a representative element.

**Set up the integrals.** The bounding functions in this example are vertical lines  $x = 0$  and  $x = a$ , and horizontal lines  $y = 0$  and  $y = h$ .

The strip extends from  $(x, 0)$  on the  $x$  axis to  $(x, h)$  on the top of the rectangle, and has a differential width  $dx$ .

The area of the strip is the base times the height, so

$$dA = h \, dx.$$

The centroid of the strip is located at its midpoint so, by inspection

$$\bar{x}_{\text{el}} = x$$

$$\bar{y}_{\text{el}} = h/2$$

With vertical strips the variable of integration is  $x$ , and the limits on  $x$  run from  $x = 0$  at the left to  $x = b$  on the right. For a rectangle, both 0 and  $h$

are constants, but in other situations,  $\bar{y}_{\text{el}}$  and the left or right limits may be functions of  $x$ .

**Solve the integrals.** Substitute  $dA$ ,  $\bar{x}_{\text{el}}$ , and  $\bar{y}_{\text{el}}$  into (7.7.2) and integrate.

$$\begin{aligned} A &= \int dA & Q_x &= \int \bar{y}_{\text{el}} dA & Q_y &= \int \bar{x}_{\text{el}} dA \\ &= \int_0^b h dx & &= \int_0^b \frac{h}{2}(h dx) & &= \int_0^b x(h dx) \\ &= [hx]_0^b & &= \frac{h^2}{2} \int_0^b dx & &= h \int_0^b x dx \\ &= hb - 0 & &= \frac{h^2}{2} [x]_0^b & &= h \left[ \frac{x^2}{2} \right]_0^b \\ A &= bh & Q_x &= \frac{h^2 b}{2} & Q_y &= \frac{b^2 h}{2} \end{aligned}$$

Unsurprisingly, we learn that the area of a rectangle is base times height. Since the area formula is well known, it was not really necessary to solve the first integral. Note that  $A$  has units of [length]<sup>2</sup>, and  $Q_x$  and  $Q_y$  have units of [length]<sup>3</sup>.

**Find the centroid.** Substituting the results into the definitions gives

$$\begin{aligned} \bar{x} &= \frac{Q_y}{A} & \bar{y} &= \frac{Q_x}{A} \\ &= \frac{b^2 h}{2} / bh & &= \frac{h^2 b}{2} / bh \\ &= \frac{b}{2} & &= \frac{h}{2}. \end{aligned}$$

**Solution 2.** This solution demonstrates solving integrals using horizontal rectangular strips. Set the slider on the diagram to  $b dy$  to see a representative element.

**Set up the integrals.** The bounding functions  $x = 0$ ,  $x = a$ ,  $y = 0$  and  $y = h$ .

The strip extends from  $(0, y)$  on the  $y$  axis to  $(b, y)$  on the right, and has a differential height  $dy$ .

The area of the strip is the base times the height, so

$$dA = b dy.$$

The centroid of the strip is located at its midpoint so, by inspection

$$\bar{x}_{\text{el}} = b/2$$

$$\bar{y}_{\text{el}} = y$$

With horizontal strips the variable of integration is  $y$ , and the limits on  $y$  run from  $y = 0$  at the bottom to  $y = h$  at the top.

For a rectangle, both 0 and  $h$  are constants, but in other situations,  $\bar{x}_{\text{el}}$  and the upper or lower limits may be functions of  $y$ .

**Solve the integrals.** Substitute  $dA$ ,  $\bar{x}_{\text{el}}$ , and  $\bar{y}_{\text{el}}$  into (7.7.2) and integrate. The results are the same as we found using vertical strips.

$$\begin{aligned} A &= \int dA & Q_x &= \int \bar{y}_{\text{el}} dA & Q_y &= \int \bar{x}_{\text{el}} dA \\ &= \int_0^h b dy & &= \int_0^h y (b dy) & &= \int_0^h \frac{b}{2} (b dy) \\ &= [by]_0^h & &= b \int_0^h y dy & &= \frac{b^2}{2} \int_0^h dy \\ &= bh & &= b \left[ \frac{y^2}{2} \right]_0^h & &= \frac{b^2}{2} [y]_0^h \\ A &= bh & Q_x &= \frac{h^2 b}{2} & Q_y &= \frac{b^2 h}{2} \end{aligned}$$

**Find the centroid.** Substituting the results into the definitions gives

$$\begin{aligned} \bar{x} &= \frac{Q_y}{A} & \bar{y} &= \frac{Q_x}{A} \\ &= \frac{b^2 h}{2} / bh & &= \frac{h^2 b}{2} / bh \\ &= \frac{b}{2} & &= \frac{h}{2}. \end{aligned}$$

**Solution 3.** This solution demonstrates solving integrals using square elements and double integrals. Set the slider on the diagram to  $dx dy$  to see a representative element.

**Set up the integrals.** Set the slider on the diagram to  $dx dy$  to see a representative element.

The bounding functions  $x = 0$ ,  $x = a$ ,  $y = 0$  and  $y = h$ .

Instead of strips, the integrals will be evaluated using square elements with width  $dx$  and height  $dy$  located at  $(x, y)$ .

The area of the square element is the base times the height, so

$$dA = dx dy = dy dx.$$

The centroid of the strip is located at its midpoint so, by inspection

$$\begin{aligned}\bar{x}_{\text{el}} &= x \\ \bar{y}_{\text{el}} &= y\end{aligned}$$

We will integrate twice, first with respect to  $y$  and then with respect to  $x$ . The limits on the first integral are  $y = 0$  to  $h$  and  $x = 0$  to  $b$  on the second. For a rectangle, both  $b$  and  $h$  are constants. In other situations, the upper or lower limits may be functions of  $x$  or  $y$ .


**Solve the integrals.** Substitute  $dA$ ,  $\bar{x}_{\text{el}}$ , and  $\bar{y}_{\text{el}}$  into (7.7.2) and integrate the ‘inside’ integral, then the ‘outside’ integral. The results are the same as before.

$$\begin{array}{lll} A = \int dA & Q_x = \int \bar{y}_{\text{el}} dA & Q_y = \int \bar{x}_{\text{el}} dA \\ = \int_0^b \int_0^h dy dx & = \int_0^b \int_0^h y dy dx & = \int_0^b \int_0^h x dy dx \\ = \int_0^b \left[ \int_0^h dy \right] dx & = \int_0^b \left[ \int_0^h y dy \right] dx & = \int_0^b x \left[ \int_0^h dy \right] dx \\ = \int_0^b \left[ y \right]_0^h dx & = \int_0^b \left[ \frac{y^2}{2} \right]_0^h dx & = \int_0^b x \left[ y \right]_0^h dx \\ = h \int_0^b dx & = \frac{h^2}{2} \int_0^b dx & = h \int_0^b x dx \\ = h \left[ x \right]_0^b & = \frac{h^2}{2} \left[ x \right]_0^b & = h \left[ \frac{x^2}{2} \right]_0^b \\ A = hb & Q_x = \frac{h^2 b}{2} & Q_y = \frac{b^2 h}{2} \end{array}$$

**Find the centroid.** Substituting the results into the definitions gives

$$\begin{array}{ll} \bar{x} = \frac{Q_y}{A} & \bar{y} = \frac{Q_x}{A} \\ = \frac{b^2 h}{2} / bh & = \frac{h^2 b}{2} / bh \\ = \frac{b}{2} & = \frac{h}{2}. \end{array}$$



**Solution 4.**

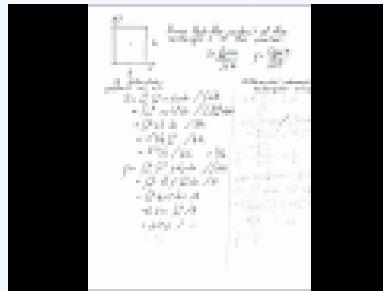

YouTube: <https://www.youtube.com/watch?v=XoeDvh6NuZk>

### Example 7.7.8 Centroid of a triangle.

Use integration to locate the centroid of a triangle with base  $b$  and height of  $h$  oriented as shown in the interactive.

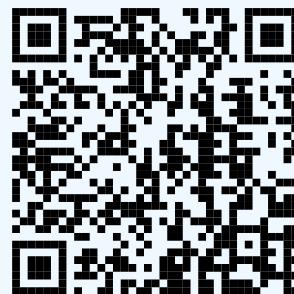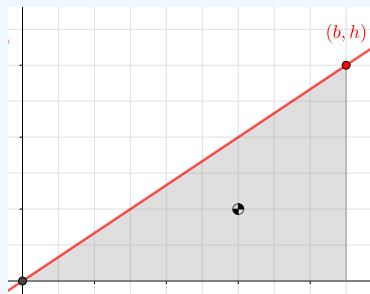

**Figure 7.7.9**

**Answer.**

$$\bar{x} = \frac{2}{3}b \quad \bar{y} = \frac{1}{3}h \quad (7.7.4)$$

**Solution 1.** This solution demonstrates finding the centroid of the triangle using vertical strips  $dA = y dx$ . Set the slider on the diagram to  $y dx$  to see a representative element.

**Set up the integrals.** The bounding functions in this example are the  $x$  axis, the vertical line  $x = b$ , and the straight line through the origin with a slope of  $\frac{h}{b}$ . Using the slope-intercept form of the equation of a line, the upper bounding function is

$$y = f(x) = \frac{h}{b}x$$

and any point on this line is designated  $(x, y)$ .

The strip extends from  $(x, 0)$  on the  $x$  axis to  $(x, y)$  on the function, has a height of  $y$ , and a differential width  $dx$ . The area of this strip is

$$dA = y dx.$$

The centroid of the strip is located at its midpoint so, by inspection

$$\bar{x}_{\text{el}} = x$$

$$\bar{y}_{\text{el}} = y/2$$

With vertical strips the variable of integration is  $x$ , and the limits are  $x = 0$  to  $x = b$ .

**Solve the integrals.** Substitute  $dA$ ,  $\bar{x}_{\text{el}}$ , and  $\bar{y}_{\text{el}}$  into (7.7.2) and integrate. In contrast to the rectangle example both  $dA$  and  $\bar{y}_{\text{el}}$  are functions of  $x$ , and will have to be integrated accordingly.

$$\begin{aligned} A &= \int dA & Q_x &= \int \bar{y}_{\text{el}} dA & Q_y &= \int \bar{x}_{\text{el}} dA \\ &= \int_0^b y dx & &= \int_0^b \frac{y}{2}(y dx) & &= \int_0^b x(y dx) \\ &= \int_0^b \frac{h}{b}x dx & &= \frac{1}{2} \int_0^b \left(\frac{h}{b}x\right)^2 dx & &= \int_0^b x \left(\frac{h}{b}x\right) dx \\ &= \frac{h}{b} \left[\frac{x^2}{2}\right]_0^b & &= \frac{h^2}{2b^2} \int_0^b x^2 dx & &= \frac{h}{b} \int_0^b x^2 dx \\ &= \frac{h}{b} \frac{b^2}{2} & &= \frac{h^2}{2b^2} \left[\frac{x^3}{3}\right]_0^b & &= \frac{h}{b} \left[\frac{x^3}{3}\right]_0^b \\ A &= \frac{bh}{2} & Q_x &= \frac{h^2b}{6} & Q_y &= \frac{b^2h}{3} \end{aligned}$$

We learn that the area of a triangle is one half base times height. Since the area formula is well known, it would have been more efficient to skip the first integral. Note that  $A$  has units of [length]<sup>2</sup>, and  $Q_x$  and  $Q_y$  have units of [length]<sup>3</sup>.

**Find the Centroid.** Substituting the results into the definitions gives

$$\begin{aligned} \bar{x} &= \frac{Q_y}{A} & \bar{y} &= \frac{Q_x}{A} \\ &= \frac{\frac{b^2h}{3}}{\frac{bh}{2}} & &= \frac{\frac{h^2b}{6}}{\frac{bh}{2}} \\ &= \frac{2}{3}b & &= \frac{1}{3}h. \end{aligned}$$

**Solution 2.** This solution demonstrates solving integrals using horizontal rectangular strips. Set the slider on the diagram to  $(b-x) dy$  to see a representative element.

**Set up the integrals.** As before, the triangle is bounded by the  $x$  axis, the vertical line  $x = b$ , and the line

$$y = f(x) = \frac{h}{b}x.$$

To integrate using horizontal strips, the function  $f(x)$  must be inverted to express  $x$  in terms of  $y$ . Solving for  $f(x)$  for  $x$  gives

$$x = g(y) = \frac{b}{h}y.$$

The limits on the integral are from  $y = 0$  to  $y = h$ .

The strip extends from  $(x, y)$  to  $(b, y)$ , has a height of  $dy$ , and a length of  $(b - x)$ , therefore the area of this strip is

$$dA = (b - x)dy.$$

The coordinates of the midpoint of the element are

$$\begin{aligned}\bar{y}_{\text{el}} &= y \\ \bar{x}_{\text{el}} &= x + \frac{(b - x)}{2} = \frac{b + x}{2}.\end{aligned}$$

These expressions are recognized as the *average* of the  $x$  and  $y$  coordinates of strip's endpoints.

**Warning 7.7.10** A common student mistake is to use  $dA = x dy$ , and  $\bar{x}_{\text{el}} = x/2$ . These would be correct if you were looking for the properties of the area to the left of the curve.

**Solve the integrals.** Substitute  $dA$ ,  $\bar{x}_{\text{el}}$ , and  $\bar{y}_{\text{el}}$  into the definitions of  $Q_x$  and  $Q_y$  and integrate. The results are the same as we found using vertical strips. There is no need to evaluate  $A = \int dA$  since we know that  $A = \frac{bh}{2}$  for a triangle.

$$\begin{aligned}Q_x &= \int \bar{y}_{\text{el}} dA & Q_y &= \int \bar{x}_{\text{el}} dA \\ &= \int_0^h y (b - x) dy & &= \int_0^h \frac{(b + x)}{2} (b - x) dy \\ &= \int_0^h (by - xy) dy & &= \frac{1}{2} \int_0^h (b^2 - x^2) dy \\ &= \int_0^h \left( by - \frac{by^2}{h} \right) dy & &= \frac{1}{2} \int_0^h \left( b^2 - \frac{b^2y^2}{h^2} \right) dy \\ &= b \left[ \frac{y^2}{2} - \frac{y^3}{3h} \right]_0^h & &= \frac{b^2}{2} \left[ y - \frac{y^3}{3h^2} \right]_0^h \\ &= bh^2 \left( \frac{1}{2} - \frac{1}{3} \right) & &= \frac{1}{2}(b^2h) \left( 1 - \frac{1}{3} \right) \\ Q_x &= \frac{h^2b}{6} & Q_y &= \frac{b^2h}{3}\end{aligned}$$

It makes solving these integrals easier if you avoid prematurely substituting in the function for  $x$  and if you factor out constants whenever possible. Here it  $x = g(y)$  was not substituted until the fourth line.

**Find the centroid.** Substituting the results into the definitions gives

$$\begin{aligned}\bar{x} &= \frac{Q_y}{A} & \bar{y} &= \frac{Q_x}{A} \\ &= \frac{b^2 h}{3} / \frac{bh}{2} & &= \frac{h^2 b}{6} / \frac{bh}{2} \\ &= \frac{2}{3}b & &= \frac{1}{3}h.\end{aligned}$$

**Solution 3.** This solution demonstrates solving integrals using square elements and double integrals. Set the slider on the diagram to  $dx dy$  or  $dy dx$  to see a representative element.

**Set up the integrals.** As before, the triangle is bounded by the  $x$  axis, the vertical line  $x = b$ , and the line

$$y = f(x) = \frac{h}{b}x \quad \text{or in terms of } y, \quad x = g(y) = \frac{b}{h}y.$$

In this solution the integrals will be evaluated using square differential elements  $dA = dy dx$  located at  $(x, y)$ .

With double integration, you must take care to evaluate the limits correctly, since the limits on the inside integral are functions of the variable of integration of the outside integral. The inside integral essentially stacks the elements into strips and the outside integral adds all the strips to cover the area.

Choosing to express  $dA$  as  $dy dx$  means that the integral over  $y$  will be conducted first. The limits on the inside integral are from  $y = 0$  to  $y = f(x)$ . Then, the limits on the outside integral are from  $x = 0$  to  $x = b$ .

Using  $dA = dx dy$  would reverse the order of integration, so the inside integral's limits would be from  $x = g(y)$  to  $x = b$ , and the limits on the outside integral would be  $y = 0$  to  $y = h$ . Either choice will give the same results — *if you don't make any errors!*

The area of the square element is the base times the height, so

$$dA = dy dx.$$

The centroid of the square is located at its midpoint so, by inspection

$$\bar{x}_{\text{el}} = x$$

$$\bar{y}_{\text{el}} = y$$

**Solve the integrals.** Substitute  $dA$ ,  $\bar{x}_{\text{el}}$ , and  $\bar{y}_{\text{el}}$  into (7.7.2) and integrate the ‘inside’ integral, then the ‘outside’ integral. The results are the same as before.

$$Q_x = \int \bar{y}_{\text{el}} dA \qquad Q_y = \int \bar{x}_{\text{el}} dA$$

$$\begin{aligned}
 &= \int_0^b \int_0^{f(x)} y \, dy \, dx & &= \int_0^b \int_0^{f(x)} x \, dy \, dx \\
 &= \int_0^b \left[ \int_0^{f(x)} y \, dy \right] dx & &= \int_0^b x \left[ \int_0^{f(x)} dy \right] dx \\
 &= \int_0^b \left[ \frac{y^2}{2} \right]_0^{f(x)} dx & &= \int_0^b x \left[ y \right]_0^{f(x)} dx \\
 &= \frac{1}{2} \int_0^b \left[ \frac{h^2}{b^2} x^2 \right] dx & &= \int_0^b x \left[ \frac{h}{b} x \right] dx \\
 &= \frac{h^2}{2b^2} \int_0^b x^2 dx & &= \frac{h}{b} \int_0^b x^2 dx \\
 &= \frac{h^2}{2b^2} \left[ \frac{x^3}{3} \right]_0^b & &= \frac{h}{b} \left[ \frac{x^3}{3} \right]_0^b \\
 Q_x &= \frac{h^2 b}{6} & Q_y &= \frac{b^2 h}{3}
 \end{aligned}$$

**Find the centroid.** Substituting  $Q_x$  and  $Q_y$  along with  $A = bh/2$  into the centroid definitions gives

$$\begin{aligned}
 \bar{x} &= \frac{Q_y}{A} & \bar{y} &= \frac{Q_x}{A} \\
 &= \frac{b^2 h}{3} / \frac{bh}{2} & &= \frac{h^2 b}{6} / \frac{bh}{2} \\
 &= \frac{2}{3} b & &= \frac{1}{3} h.
 \end{aligned}$$

#### Solution 4.




YouTube: <https://www.youtube.com/watch?v=AksWTA-kiv4>

The next two examples involve areas with functions for both boundaries,

#### Example 7.7.11 Centroid of a semi-parabola.

Find the coordinates of the centroid of a parabolic spandrel bounded by the  $y$  axis, a horizontal line passing through the point  $(a, b)$ , and a parabola with a vertex at the origin and passing through the same point.  $a$  and  $b$  are positive

integers.

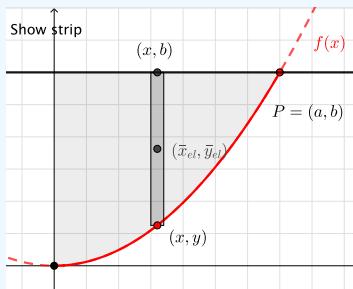

**Figure 7.7.12**

**Answer.**

$$\bar{x} = \frac{3}{8}a \quad \bar{y} = \frac{2}{5}b$$

**Solution.** We will use (7.7.2) with vertical strips to find the centroid of a spandrel.

**Set up the integrals.** Determining the bounding functions and setting up the integrals is usually the most difficult part of problems like this. Begin by drawing and labeling a sketch of the situation.

1. Place a point in the first quadrant and label it  $P = (a, b)$ . This point is in the first quadrant and fixed since we are told that  $a$  and  $b$  are positive integers
2. Place a horizontal line through  $P$  to make the upper bound.
3. Sketch in a parabola with a vertex at the origin and passing through  $P$  and shade in the enclosed area.
4. Decide which differential element you intend to use. For this example we choose to use vertical strips, which you can see if you tick `show strips` in the interactive above. Horizontal strips  $dA = x dy$  would give the same result, but you would need to define the equation for the parabola in terms of  $y$ .

Determining the equation of the parabola and expressing it in terms of  $x$  and any known constants is a critical step. You should remember from algebra that the general equation of parabola with a vertex at the origin is  $y = kx^2$ , where  $k$  is a constant which determines the shape of the parabola. If  $k > 0$ , the parabola opens upward and if  $k < 0$ , the parabola opens downward.

To find the value of  $k$ , substitute the coordinates of  $P$  into the general equation, then solve for  $k$ .

$$y = kx^2, \text{ so at } P$$

$$(b) = k(a)^2$$

$$k = \frac{b}{a^2}$$

The resulting function of the parabola is

$$y = y(x) = \frac{b}{a^2}x^2.$$

To perform the integrations, express the area and centroidal coordinates of the element in terms of the points at the top and bottom of the strip. The area of the strip is its height times its base, so

$$dA = (b - y) dx.$$

If you incorrectly used  $dA = y dx$ , you would find the centroid of the spandrel below the curve.

For vertical strips, the bottom is at  $(x, y)$  on the parabola, and the top is directly above at  $(x, b)$ . The strip has a differential width  $dx$ . The centroid of the strip is located at its midpoint and the coordinates are found by averaging the  $x$  and  $y$  coordinates of the points at the top and bottom.

$$\bar{x}_{\text{el}} = (x + x)/2 = x$$

$$\bar{y}_{\text{el}} = (y + b)/2$$

For vertical strips, the integrations are with respect to  $x$ , and the limits on the integrals are  $x = 0$  on the left to  $x = a$  on the right.

**Solve the integrals.** We have already established that  $y(x) = kx^2$  where  $k = b/a^2$ . To simplify the algebra, it is best not to prematurely substitute  $y(x)$  and  $k$ , but you must substitute in any functions of  $x$  before you do the integration step.

$$\begin{aligned} A &= \int dA & Q_x &= \int \bar{y}_{\text{el}} dA & Q_y &= \int \bar{x}_{\text{el}} dA \\ &= \int_0^a (b - y) dx & &= \int_0^a \frac{(b + y)}{2} (b - y) dx & &= \int_0^a x(b - y) dx \\ &= \int_0^a (b - kx^2) dx & &= \frac{1}{2} \int_0^a (b^2 - y^2) dx & &= \int_0^a x(b - y) dx \\ &= bx - k \frac{x^3}{3} \Big|_0^a & &= \frac{1}{2} \int_0^a (b^2 - (kx^2)^2) dx & &= \int_0^a x(b - kx^2) dx \\ &= ba - k \frac{a^3}{3} & &= \frac{1}{2} \int_0^a (b^2 - k^2 x^4) dx & &= \int_0^a (bx - kx^3) dx \end{aligned}$$

$$\begin{aligned}
 &= ba - \left( \frac{b}{a^2} \right) \frac{a^3}{3} &= \frac{1}{2} \left[ b^2 x - k^2 \frac{x^5}{5} \right]_0^a &= \left[ \frac{bx^2}{2} - k \frac{x^4}{4} \right]_0^a \\
 &= \frac{3ba}{3} - \frac{ba}{3} &= \frac{1}{2} \left[ b^2 a - \left( \frac{b}{a^2} \right)^2 \frac{a^5}{5} \right] &= \left[ \frac{ba^2}{2} - \left( \frac{b}{a^2} \right) \frac{4^4}{4} \right] \\
 &= \frac{2}{3}ba &= \frac{1}{2}b^2a \left[ 1 - \frac{1}{5} \right] &= ba^2 \left[ \frac{1}{2} - \frac{1}{4} \right] \\
 A &= \frac{2}{3}ba &Q_x &= \frac{2}{5}b^2a &Q_y &= \frac{1}{4}ba^2
 \end{aligned}$$

The area of the spandrel is  $2/3$  of the area of the enclosing rectangle and the moments of area have units of [length] $^3$ .

**Find the centroid.** Substituting the results into the definitions gives

$$\begin{aligned}
 \bar{x} &= \frac{Q_y}{A} &\bar{y} &= Q_x A \\
 &= \frac{ba^2}{4} / \frac{2ba}{3} && = \frac{2b^2a}{5} / \frac{2ba}{3} \\
 &= \frac{3}{8}a && = \frac{2}{5}b.
 \end{aligned}$$

$\bar{x}$  is  $3/8$  of the width and  $\bar{y}$  is  $2/5$  of the height of the enclosing rectangle.

Example 7.7.13 Centroid of an area between two curves.

Use integration to locate the centroid of the area bounded by

$$y_1 = \frac{x}{4} \text{ and } y_2 = \frac{x^2}{2}.$$

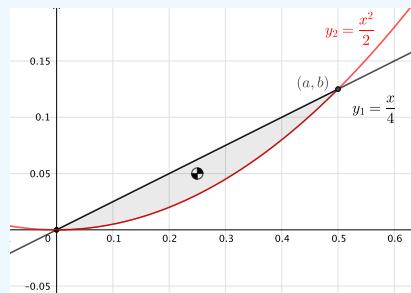


Figure 7.7.14

Find the centroid location  $(\bar{x}, \bar{y})$  of the shaded area between the two curves below.

**Answer.**

$$\bar{x} = \frac{1}{4} \quad \bar{y} = \frac{1}{20} \quad (7.7.5)$$

**Solution 1.** This solution demonstrates finding the centroid of the area between two functions using vertical strips  $dA = y \, dx$ . Set the slider on the diagram to  $h \, dx$  to see a representative element.

**Set up the integrals.** The bounding functions in this example are the  $x$  axis, the vertical line  $x = b$ , and the straight line through the origin with a slope of  $\frac{h}{b}$ . Using the slope-intercept form of the equation of a line, the upper bounding function is

$$y = f(x) = \frac{h}{b}x$$

and any point on this line is designated  $(x, y)$ .

The strip extends from  $(x, 0)$  on the  $x$  axis to  $(x, y)$  on the function, has a height of  $y$ , and a differential width  $dx$ . The area of this strip is

$$dA = ydx.$$

The centroid of the strip is located at its midpoint so, by inspection

$$\begin{aligned}\bar{x}_{\text{el}} &= x \\ \bar{y}_{\text{el}} &= y/2\end{aligned}$$

With vertical strips the variable of integration is  $x$ , and the limits are  $x = 0$  to  $x = b$ .

**Solve the integrals.** Substitute  $dA$ ,  $\bar{x}_{\text{el}}$ , and  $\bar{y}_{\text{el}}$  into (7.7.2) and integrate. In contrast to the rectangle example both  $dA$  and  $\bar{y}_{\text{el}}$  are functions of  $x$ , and will have to be integrated accordingly.

$$\begin{aligned}A &= \int dA \\ &= \int_0^{1/2} (y_1 - y_2) \, dx \\ &= \int_0^{1/2} \left( \frac{x}{4} - \frac{x^2}{2} \right) \, dx \\ &= \left[ \frac{x^2}{8} - \frac{x^3}{6} \right]_0^{1/2} \\ &= \left[ \frac{1}{32} - \frac{1}{48} \right] \\ A &= \frac{1}{96}\end{aligned}$$

$$Q_x = \int \bar{y}_{\text{el}} \, dA \qquad Q_y = \int \bar{x}_{\text{el}} \, dA$$

$$\begin{aligned}
&= \int_0^{1/2} \left( \frac{y_1 + y_2}{2} \right) (y_1 - y_2) \, dx &= \int_0^{1/2} x(y_1 - y_2) \, dx \\
&= \frac{1}{2} \int_0^{1/2} (y_1^2 - y_2^2) \, dx &= \int_0^{1/2} x \left( \frac{x}{4} - \frac{x^2}{2} \right) \, dx \\
&= \frac{1}{2} \int_0^{1/2} \left( \frac{x^2}{16} - \frac{x^4}{4} \right) \, dx &= \int_0^{1/2} \left( \frac{x^2}{4} - \frac{x^3}{2} \right) \, dx \\
&= \frac{1}{2} \left[ \frac{x^3}{48} - \frac{x^5}{20} \right]_0^{1/2} &= \left[ \frac{x^3}{12} - \frac{x^4}{8} \right]_0^{1/2} \\
&= \frac{1}{2} \left[ \frac{1}{384} - \frac{1}{640} \right] &= \left[ \frac{1}{96} - \frac{1}{128} \right] \\
Q_x &= \frac{1}{1920} &Q_y &= \frac{1}{384}
\end{aligned}$$

**Find the Centroid.** Substituting the results into the definitions gives

$$\begin{aligned}
\bar{x} &= \frac{Q_y}{A} & \bar{y} &= \frac{Q_x}{A} \\
&= \frac{1}{384} / \frac{1}{96} & &= \frac{1}{1920} / \frac{1}{96} \\
\bar{x} &= \frac{1}{4} & \bar{y} &= \frac{1}{20}.
\end{aligned}$$

**Solution 2.** This solution demonstrates finding the centroid of the area between two functions using vertical strips  $dA = y \, dx$ . Set the slider on the diagram to  $h \, dx$  to see a representative element.

**Set up the integrals.** The bounding functions in this example are the  $x$  axis, the vertical line  $x = b$ , and the straight line through the origin with a slope of  $\frac{h}{b}$ . Using the slope-intercept form of the equation of a line, the upper bounding function is

$$y = f(x) = \frac{h}{b}x$$

and any point on this line is designated  $(x, y)$ .

The strip extends from  $(x, 0)$  on the  $x$  axis to  $(x, y)$  on the function, has a height of  $y$ , and a differential width  $dx$ . The area of this strip is

$$dA = y \, dx.$$

The centroid of the strip is located at its midpoint so, by inspection

$$\begin{aligned}
\bar{x}_{\text{el}} &= x \\
\bar{y}_{\text{el}} &= y/2
\end{aligned}$$

With vertical strips the variable of integration is  $x$ , and the limits are  $x = 0$  to  $x = b$ .

**Solve the integrals.** Substitute  $dA$ ,  $\bar{x}_{\text{el}}$ , and  $\bar{y}_{\text{el}}$  into (7.7.2) and integrate. In contrast to the rectangle example both  $dA$  and  $\bar{y}_{\text{el}}$  are functions of  $x$ , and will have to be integrated accordingly.

$$\begin{aligned} A &= \int dA \\ &= \int_0^y (x_2 - x_1) dy \\ &= \int_0^{1/8} (4y - \sqrt{2y}) dy \\ &= \left[ 2y^2 - \frac{4}{3}y^{3/2} \right]_0^{1/8} \\ &= \left[ \frac{1}{32} - \frac{1}{48} \right] \\ A &= \frac{1}{96} \end{aligned}$$

$$\begin{aligned} Q_x &= \int \bar{y}_{\text{el}} dA & Q_y &= \int \bar{x}_{\text{el}} dA \\ &= \int_0^{1/8} y(x_2 - x_1) dy & &= \int_0^{1/8} \left( \frac{x_2 + x_1}{2} \right) (x_2 - x_1) dy \\ &= \int_0^{1/8} y (\sqrt{2y} - 4y) dy & &= \frac{1}{2} \int_0^{1/8} (x_2^2 - x_1^2) dy \\ &= \int_0^{1/8} (\sqrt{2}y^{3/2} - 4y^2) dy & &= \frac{1}{2} \int_0^{1/8} (2y - 16y^2) dy \\ &= \left[ \frac{2\sqrt{2}}{5}y^{5/2} - \frac{4}{3}y^3 \right]_0^{1/8} & &= \frac{1}{2} \left[ y^2 - \frac{16}{3}y^3 \right]_0^{1/8} \\ &= \left[ \frac{1}{320} - \frac{1}{384} \right] & &= \frac{1}{2} \left[ \frac{1}{64} - \frac{1}{96} \right] \\ Q_x &= \frac{1}{1920} & Q_y &= \frac{1}{384} \end{aligned}$$


**Find the Centroid.** Substituting the results into the definitions gives

$$\begin{aligned} \bar{x} &= \frac{Q_y}{A} & \bar{y} &= \frac{Q_x}{A} \\ &= \frac{1}{384} / \frac{1}{96} & &= \frac{1}{1920} / \frac{1}{96} \\ \bar{x} &= \frac{1}{4} & \bar{y} &= \frac{1}{20}. \end{aligned}$$

The last example demonstrates using double integration with polar coordinates.

**Example 7.7.15** Centroid of a semi-circle.

Find the coordinates of the top half of a circle with radius  $r$ , centered at the origin.

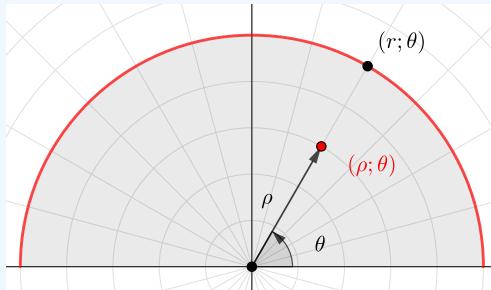

**Figure 7.7.16**

**Answer.** The centroid of a semicircle with radius  $r$ , centered at the origin is

$$\bar{x} = 0 \quad \bar{y} = \frac{4r}{3\pi} \quad (7.7.6)$$

**Solution.** We will use (7.7.2) with polar coordinates  $(\rho, \theta)$  to solve this problem because they are a natural fit for the geometry. In polar coordinates, the equation for the bounding semicircle is simply

$$\rho = r.$$

Normally this involves evaluating three integrals but as you will see, we can take some shortcuts in this problem. Otherwise we will follow the same procedure as before.

**Set up the integrals.** Divide the semi-circle into "rectangular" differential elements of area  $dA$ , as shown in the interactive when you select **Show element**. This shape is not really a rectangle, but in the limit as  $d\rho$  and  $d\theta$  approach zero, it doesn't make any difference.

The radial height of the rectangle is  $d\rho$  and the tangential width is the arc length  $\rho d\theta$ . The product is the differential area  $dA$ .

$$dA = (d\rho)(\rho d\theta) = \rho d\rho d\theta. \quad (7.7.7)$$

The differential element is located at  $(\rho, \theta)$  in polar coordinates. Expressing this point in rectangular coordinates gives

$$\begin{aligned}\bar{x}_{\text{el}} &= \rho \cos \theta \\ \bar{y}_{\text{el}} &= \rho \sin \theta.\end{aligned}$$

**Solve the integrals.** The area of a semicircle is well known, so there is no need to actually evaluate  $A = \int dA$ ,

$$A = \int dA = \frac{\pi r^2}{2}.$$

Since the semi-circle is symmetrical about the  $y$  axis,

$$Q_y = \int \bar{x}_{\text{el}} dA = 0.$$

This is because each element of area to the right of the  $y$  axis is balanced by a corresponding element the same distance the left which cancel each other out in the sum.

All that remains is to evaluate the integral  $Q_x$  in the numerator of

$$\bar{y} = \frac{Q_x}{A} = \frac{\bar{y}_{\text{el}} dA}{A}$$

The differential area  $dA$  is the product of two differential quantities, we will need to perform a double integration.

$$\begin{aligned} Q_x &= \int \bar{y}_{\text{el}} dA \\ &= \int_0^\pi \int_0^r (\rho \sin \theta) \rho d\rho d\theta \\ &= \int_0^\pi \sin \theta \left[ \int_0^r \rho^2 d\rho \right] d\theta \\ &= \int_0^\pi \sin \theta \left[ \frac{\rho^3}{3} \right]_0^r d\theta \\ &= \frac{r^3}{3} \int_0^\pi \sin \theta d\theta \\ &= \frac{r^3}{3} [-\cos \theta]_0^\pi \\ &= -\frac{r^3}{3} [\cos \pi - \cos 0] \\ &= -\frac{r^3}{3} [(-1) - (1)] \\ Q_x &= \frac{2}{3} r^3 \end{aligned}$$

**Find the centroid.** Substituting the results into the definitions gives

$$\bar{y} = \frac{Q_x}{A}$$

$$= \frac{2r^3}{3} \left/ \frac{\pi r^2}{2} \right. \\ = \frac{4r}{3\pi}.$$

So  $\bar{x} = 0$  and lies on the axis of symmetry, and  $\bar{y} = \frac{4r}{3\pi}$  above the diameter.

This result can be extended by noting that a semi-circle is mirrored quarter-circles on either side of the  $y$  axis. These must have the same  $\bar{y}$  value as the semi-circle. Further, quarter-circles are symmetric about a  $45^\circ$  line, so for the quarter-circle in the first quadrant,

$$\bar{x} = \bar{y} = \frac{4r}{3\pi}.$$

## 7.8 Distributed Loads

### Key Questions


- What is a distributed load?
- Given a distributed load, how do we find the magnitude of the equivalent concentrated force?
- Given a distributed load, how do we find the location of the equivalent concentrated force?

**Distributed loads** are forces which are spread out over a length, area, or volume. Most real-world loads are distributed, including the weight of building materials and the force of wind, water, or earth pushing on a surface. Pressure, load, weight density and stress are all names commonly used for distributed loads. Distributed load is a force per unit length or force per unit area depicted with a series of force vectors joined together at the top, and will be designated as  $w(x)$  to indicate that the distributed loading is a function of  $x$ .


For example, although a shelf of books *could* be treated as a collection of individual forces, it is more common and convenient to represent the weight of the books as a **uniformly distributed load**. A uniformly distributed load is a load which has the same value everywhere, i.e.  $w(x) = C$ , a constant.



(a) A shelf of books with various weights.



(b) Each book represented as an individual weight



(c) All the books represented as a distributed load.

**Figure 7.8.1**

We can use the computational tools discussed in the previous chapters to handle distributed loads if we first convert them to equivalent point forces. This equivalent replacement must be the **resultant** of the distributed loading, as discussed in [Section 4.6](#). Recall that this resultant force has the identical effect on the object as the original system of forces had.

To be equivalent, the point force must have a:

- Magnitude equal to the area or volume under the distributed load function.
- Line of action that passes through the centroid of the distributed load distribution.

The next two sections will explore how to find the magnitude and location of the equivalent point force for a distributed load.

### 7.8.1 Equivalent Magnitude

The magnitude of the distributed load of the books is the total weight of the books divided by the length of the shelf

$$w(x) = \frac{\sum W_i}{\ell}.$$

It represents the *average* book weight per unit length. Similarly, the total weight of the books is equal to the value of the distributed load times the length of the shelf or

$$W = w(x)\ell$$

$$\text{total weight} = \frac{\text{weight}}{\text{length}} \times \text{length of shelf}$$

This total load is simply the area under the curve  $w(x)$ , and has units of force. If the loading function is not uniform, integration may be necessary to find the area.

**Example 7.8.2 Bookshelf.**

A common paperback is about 3 cm thick and weighs approximately 3 N.

What is the loading function  $w(x)$  for a shelf full of paperbacks and what is the total weight of paperback books on a 6 m shelf?

**Answer.**

$$w(x) = 100 \text{ N/m}$$

$$W = 600 \text{ N}$$


**Solution.** The weight of one paperback over its thickness is the load intensity  $w(x)$ , so

$$w(x) = \frac{3 \text{ N}}{3 \text{ cm}} = 100 \text{ N/m.}$$

The total weight is the the area under the load intensity diagram, which in this case is a rectangle. So, a 6 m bookshelf covered with paperbacks would have to support

$$W = w(x)\ell = (100 \text{ N/m})(6 \text{ m}) = 600 \text{ N.}$$

The line of action of this equivalent load passes through the centroid of the rectangular loading, so it acts at  $x = 3 \text{ m}$ .

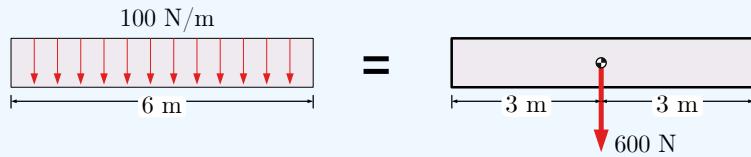

### 7.8.2 Equivalent Location

To use a distributed load in an equilibrium problem, you must know the equivalent magnitude to sum the forces, and also know the position or line of action to sum the moments.

The line of action of the equivalent force acts through the centroid of area under the load intensity curve. For a rectangular loading, the centroid is in the center. We know the vertical and horizontal coordinates of this centroid, but since the equivalent point force's line of action is vertical and we can slide a force along its line of action, the vertical coordinate of the centroid not important in this context.

Similarly, for a triangular distributed load — also called a **uniformly varying load** — the magnitude of the equivalent force is the area of the triangle,  $bh/2$  and


the line of action passes through the centroid of the triangle. The horizontal distance from the larger end of the triangle to the centroid is  $\bar{x} = b/3$ .

Essentially, we're finding the balance point so that the moment of the force to the left of the centroid is the same as the moment of the force to the right.


The examples below will illustrate how you can combine the computation of both the magnitude and location of the equivalent point force for a series of distributed loads.

### Example 7.8.3 Uniformly Varying Load.

Find the equivalent point force and its point of application for the distributed load shown.

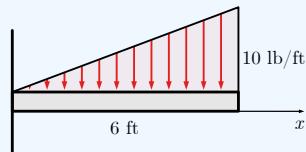

**Answer.** The equivalent load is 30 lb downward force acting 4 ft from the left end.

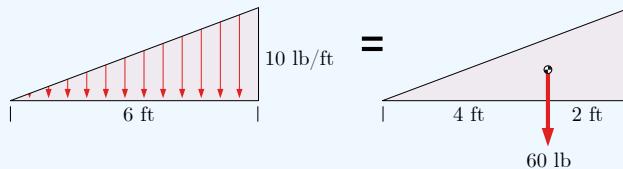


**Solution 1.** The equivalent load is the ‘area’ under the triangular load intensity curve and it acts straight down at the centroid of the triangle. This triangular loading has a 6 ft base and a 10 lb/ft height so

$$W = \frac{1}{2}bh = \frac{1}{2}(6 \text{ ft})(10 \text{ lb/ft}) = 30 \text{ lb.}$$

and the centroid is located  $2/3$  of the way from the left end so,

$$\bar{x} = 4 \text{ ft.}$$

### Solution 2.

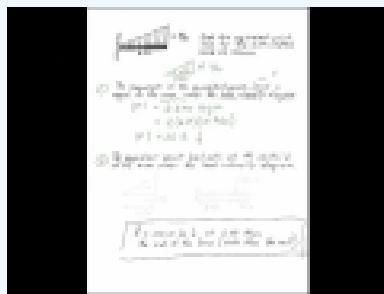

YouTube: <https://www.youtube.com/watch?v=eGtd6Qy whole>

Distributed loads may be any geometric shape or defined by a mathematical function. If the load is a combination of common shapes, use the properties of the shapes to find the magnitude and location of the equivalent point force using the methods of

**Section 7.5.** If the distributed load is defined by a mathematical function, integrate to find their area using the methods of [Section 7.7](#).

A few things to note:


- You can include the distributed load or the equivalent point force on your free body diagram, *but not both!*
- Since you're calculating an area, you can divide the area up into any shapes you find convenient. So, if you don't recall the area of a trapezoid off the top of your head, break it up into a rectangle and a triangle.

### 7.8.3 Distributed Load Applications

Once you convert distributed loads to the resultant point force, you can solve problem in the same manner that you have other problems in previous chapters of this book. Note that while the resultant forces are *externally* equivalent to the distributed loads, they are not *internally* equivalent, as will be shown [Chapter 8](#).

Example 7.8.4 Cantilever Beam.


Find the reactions at the fixed connection at A.

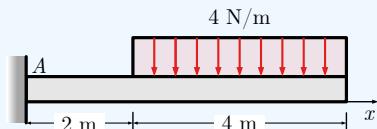

**Answer.**

$$\begin{aligned}A_x &= 0 \\A_y &= (16 \text{ N}) \\M &= 64 \text{ N}\cdot\text{m}\end{aligned}$$


**Solution.** Draw a free body diagram with the distributed load replaced with an equivalent concentrated load, then apply the equations of equilibrium.

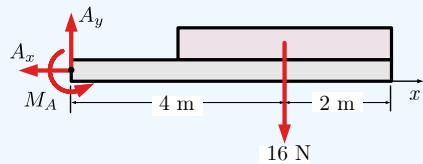

$$\begin{aligned}\Sigma F_x = 0 &\rightarrow A_x = 0 \\ \Sigma F_y = 0 &\rightarrow A_y = 16 \text{ N} \\ \Sigma M_A = 0 &\rightarrow M_A = (16 \text{ N})(4 \text{ m}) \\ &= 64 \text{ N}\cdot\text{m}\end{aligned}$$

Example 7.8.5 Beam Reactions.

Find the reactions at the supports for the beam shown.

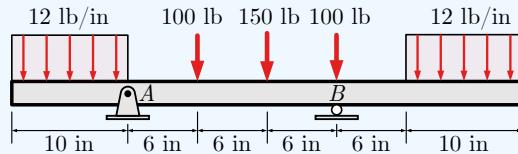

**Answer.**

$$B_y = F_y = 295 \text{ lb}, B_x = 0$$

**Solution 1.**

$$\begin{aligned} \sum M_B &= 0 \\ +(12 \text{ lb/in})(10 \text{ in})(5 \text{ in}) - (100 \text{ lb})(6 \text{ in}) \\ -(150 \text{ lb})(12 \text{ in}) - (100 \text{ lb})(18 \text{ in}) \\ +(F_y)(24 \text{ in}) - (12 \text{ lb/in})(10 \text{ in})(29 \text{ in}) &= 0 \rightarrow \quad F_y = 295 \text{ lb} \end{aligned}$$

$$\begin{aligned} \sum F_y &= 0 \\ -(12 \text{ lb/in})(10 \text{ in}) + B_y - 100 \text{ lb} - 150 \text{ lb} \\ -100 \text{ lb} + F_y - (12 \text{ lb/in})(10 \text{ in}) &= 0 \rightarrow \quad B_y = 295 \text{ lb} \end{aligned}$$

$$\sum F_x = 0 \rightarrow \quad B_x = 0$$

**Solution 2.**

1. The two distributed loads are  $(10 \text{ in})(12 \text{ lb/in}) = 120 \text{ lb}$  each.

2. The total downward force is

$$W = (2 \times 120 \text{ lb}) + (2 \times 100 \text{ lb}) + 150 \text{ lb} = 590 \text{ lb}$$

3. Since the beam and loading are symmetrical supports  $B$  and  $F$  share the load equally, so

$$B_y = F_y = \frac{590 \text{ lb}}{2} = 295 \text{ lb}$$

4. There are no horizontal loads acting on the beam, so

$$B_x = 0$$

## 7.9 Fluid Statics

### Key Questions

- What is the basic relationship between depth and pressure?
- How are absolute and relative pressure different?
- How can we use our knowledge of centroids to compute the equivalent point forces of fluids?

Pressure is the term used for a force distributed over an area

$$P = \frac{F}{A}. \quad (7.9.1)$$

We will consider the effect of fluid pressure on underwater surfaces, including slanted or curved objects. In all cases we will simply ask the question: what is the pressure at each point and how does it change along the surface?

Pressure can be measured in two different ways

- **Absolute pressure** is the pressure measured above an absolute or perfect vacuum. The absolute pressure of the surrounding atmosphere is approximately 101.3 kPa or 14.7 lb/in<sup>2</sup>, and a perfect vacuum is 0 psi or 0 kPa.
- **Gage pressure** is the pressure indicated by a standard pressure gage. The gage reads zero when exposed directly to the atmosphere, positive when the pressure is higher than atmospheric pressure, and negative pressure indicates a vacuum. In effect, pressure gages ignores the pressure of the atmosphere which surrounds us.

We will use gage pressure for the remainder of the chapter.

Commonly used pressure units include:

- 1 pascals (Pa) = 1 N/m<sup>2</sup>
- 1 kilopascal (kPa) = 1000 N/m<sup>2</sup>
- 1 pound per square inch (psi) = lb/in<sup>2</sup>
- 1 kip per square inch (ksi) = 1000 lb/in<sup>2</sup>
- 1 pound per square foot (psf) = 1 lb/ft<sup>2</sup>

### 7.9.1 Principles of Fluid Statics

A fluid, like water or air exerts a pressure on its surroundings. This pressure applies a distributed load on surfaces surrounding the fluid, like the face of a dam, an irrigation control gate, a teakettle, or the drum of a steam boiler.


When you dive underwater, the pressure you feel in your ears increases with depth. At the surface, the gage pressure is zero no matter which unit system you use. As you descend, the fluid pressure  $P$  increases with depth according to the equation

$$P = \rho gh, \quad (7.9.2)$$

where:

- $\rho$  is the density of a fluid,
- $g$  is gravitational acceleration, and
- $h$  is the height of fluid above the point of interest.

Since fluid pressure increases linearly with depth, it behaves as a distributed load which increases linearly from 0 at the surface to  $\rho gh$  at depth  $h$ , acting normal to the surface. The pressure can be replaced with an equivalent force acting through the centroid of the triangular loading, with a magnitude equal to the triangular area. The pressure on horizontal surfaces is constant, and it is normal to all surfaces.

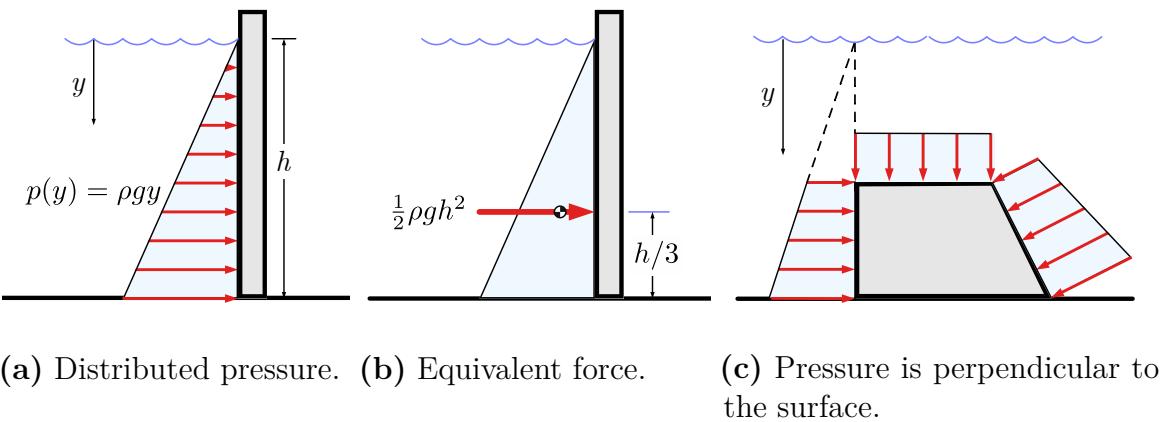

**Figure 7.9.1** Pressure on submerged surfaces.

Some points to remember when solving fluid pressure problems.

1. The pressure due to the fluid always acts perpendicular the surface.
2. A particle underwater will feel the same pressure from all directions.
3. Pressure increases linearly with depth.  $P = \rho gh$
4.  $P = \rho gh$  assumes a constant density and thus is valid only for incompressible fluids like water or oil, but not for compressible fluids like air.

5. In English units, specific weight  $\gamma$  is often used instead of density  $\rho$  to describe fluids. Specific weight is the *weight* per unit volume of a substance, while density is its *mass* per unit volume. The two properties are related by  $\gamma = \rho g$ . The specific weight of freshwater at room temperature is about  $62.4 \text{ lb/ft}^3$ .
6. Gage pressure is the pressure above the surrounding atmospheric pressure. Atmospheric pressure is approximately  $14.7 \text{ lb/in}^2$  or  $101.3 \text{ kPa}$ , but since this pressure acts on everything equally and from all directions, the pressure scale can be offset to make the pressure of the surroundings  $0 \text{ lb/in}^2$ , gage.

**Question 7.9.2** Does fluid pressure depend on the surface area of the container? For instance, is the pressure below the Atlantic Ocean less than the pressure below the Pacific Ocean since the Pacific is larger?

**Answer.** No. Fluid pressure is a function of density and depth only, so the surface area of an ocean or tank is insignificant.

$$P = \rho gh.$$

Assuming that the density of seawater and  $g$  are the same everywhere under the ocean, the gage pressure depends on depth only.  $\square$

**Question 7.9.3** Compare the pressure at three feet and thirty feet below the surface of freshwater to the atmospheric pressure.

**Answer.** The gage pressure at 3 ft is

$$p = \gamma d = 62.4 \text{ lb/ft}^3 \times 3 \text{ ft} = 187 \text{ lb/ft}^2 = 1.30 \text{ lb/in}^2.$$

This is

$$\frac{14.7 \text{ lb/in}^2 + 1.3 \text{ lb/in}^2}{14.7 \text{ lb/in}^2} = 1.088,$$

approximately 9% greater than atmospheric pressure.


At 30 ft below the surface, the pressure is 10 times higher,  $13.0 \text{ lb/in}^2$  which is nearly twice atmospheric pressure.  $\square$

## 7.9.2 Fluid Statics Applications

**Example 7.9.4** Force on a submerged window.


An aquarium tank has a  $3 \text{ m} \times 1.5 \text{ m}$  window AB for viewing the inhabitants. The tank contains water with density  $\rho = 1000 \text{ kg/m}^3$ .

Find the force of the water on the window, and the location of the equivalent point load.

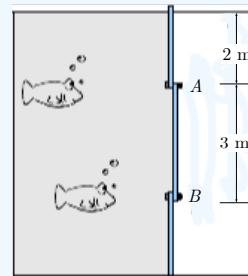

**Answer.**  $F = 155 \text{ kN}$  acting 1.29 m above point B or 3.71 m below the surface of the water.

**Solution 1.** Begin by drawing a diagram of the window showing the load intensity and the equivalent concentrated force.

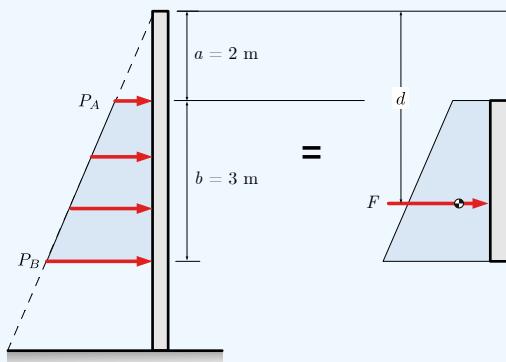

The pressure at the top and the bottom of the window are

$$\begin{aligned} P_A &= \rho g(2 \text{ m}) = 19620 \text{ N/m}^2 \\ P_B &= \rho g(5 \text{ m}) = 49050 \text{ N/m}^2 \end{aligned}$$

Since the loading is linear, the average pressure acting on the window is

$$\begin{aligned} P_{ave} &= (P_A + P_B)/2 \\ &= 34300 \text{ N/m}^2 \end{aligned}$$

The total force acting on the window is the average pressure times the area of the window

$$\begin{aligned} F &= (P_{ave})(3 \text{ m} \times 1.5 \text{ m}) \\ &= 155 \text{ kN} \end{aligned}$$

This force may also be visualized as the volume of a trapezoidal prism with a 1.5 m depth into the page.

The line of action of the equivalent force passes through the centroid of the trapezoid, which may be calculated using composite areas, see [Section 7.5](#).

Dividing the trapezoid into a triangle and a rectangle and measuring down from the surface of the tank, the distance to the equivalent force is

$$d = \frac{\sum A_i \bar{y}_i}{\sum A_i}$$

$$d = \frac{[P_A(3 \text{ m})](3.5 \text{ m}) + \left[ \frac{1}{2}(P_B - P_A)(3 \text{ m}) \right] (4 \text{ m})}{[P_A(3 \text{ m})] + \left[ \frac{1}{2}(P_B - P_A)(3 \text{ m}) \right]}$$

$$d = 3.71 \text{ m}$$

If you prefer, you may use the formula from the [Centroid table](#) to locate the centroid of the trapezoid instead.

### Solution 2.




YouTube: <https://www.youtube.com/watch?v=3qRaa9vFZa8>

### Example 7.9.5 Mud on Concrete Wall.

Find the depth  $h$  of mud for which the 3 m tall concrete retaining wall will be on the verge of tipping over.


Assume the density of mud is  $1760 \text{ kg/m}^3$  and the density of concrete is  $2400 \text{ kg/m}^3$ .

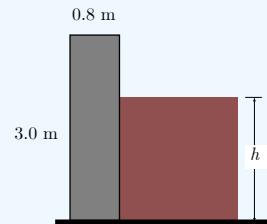

### Answer.

$$h = 1.99 \text{ m}$$

### Solution.

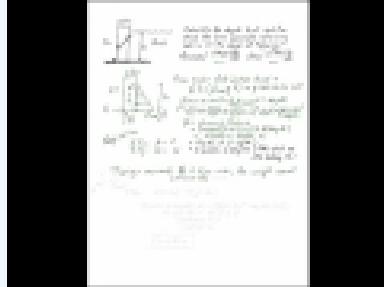


YouTube: <https://www.youtube.com/watch?v=xf00CKPpnMQ>

### Example 7.9.6 Sea Gate.

A sea gate is hinged at point *A* and is designed to rotate and release the water when the depth *d* exceeds a certain value.

The gate extends 2 m into the page. The mass density of the water is  $\rho = 1000 \text{ kg/m}^3$ .

What depth will cause the gate to open?

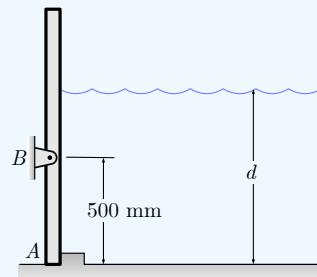


#### Answer.

$$d \geq 1.50 \text{ m}$$

**Solution 1.** For the gate to tip, the force of the water must act at or above *A*. That happens when the centroid of the load intensity diagram from the water has its equivalent point force at or above *A*, so

$$\begin{aligned}\frac{d}{3} &\geq 500 \text{ mm} \\ d &\geq 1500 \text{ mm.}\end{aligned}$$

#### Solution 2.

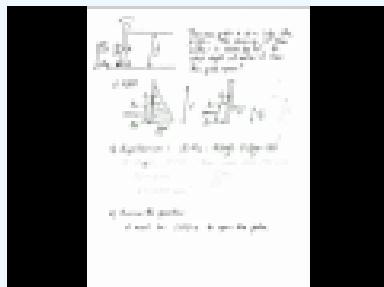


YouTube: <https://www.youtube.com/watch?v=i1jWLFpfh-s>

**Example 7.9.7 Gate with Horizontal Surface.**

The gate at the end of a freshwater channel is fabricated from three 125 kg, 0.6 m  $\times$  1 m rectangular steel plates. The gate is hinged at *A* and rests against a frictionless support at *D*. The depth of the water  $d = 0.75$  m.

Draw the free body diagram and determine the reactions at *A* and *D*.

**Answer.**

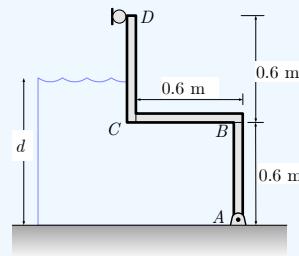

$$D_x = 124 \text{ N right}$$


$$A_x = 2636 \text{ N left}$$

$$A_y = 2795 \text{ N up}$$

**Solution.**

A free body diagram of a cross section of the gate is shown. For simplicity the thickness of the steel plates has been ignored. You must sufficient distances are provided to locate the loads.

The easiest way to solve this is to apply the principle of transmissibility: slide the lower trapezoid left until it aligns with the upper triangle and makes a triangular loading.

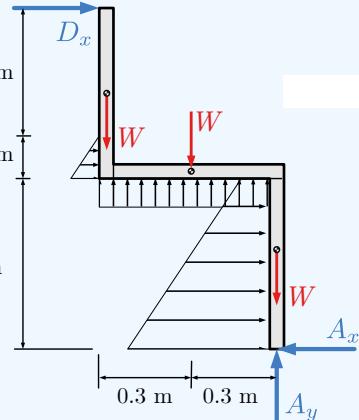

The total horizontal force from the water will be

$$\begin{aligned} F_x &= P_{ave} A \\ &= \left[ \frac{1}{2} \rho g 0.75 \text{ m} \right] (0.75 \text{ m} \times 1 \text{ m}) \\ &= \left[ \frac{1}{2} (1000 \text{ kg/m}^3) (9.81 \text{ m/s}^2) 0.75 \text{ m} \right] (0.75 \text{ m} \times 1 \text{ m}) \\ &= 2760 \text{ N} \end{aligned}$$

acting to the right 0.25 m above point *A*.

The total vertical load from the water is

$$\begin{aligned} F_y &= P_{ave} A \\ &= [\rho g (0.15 \text{ m})] (0.6 \text{ m} \times 1 \text{ m}) \\ &= [(1000 \text{ kg/m}^3) (9.81 \text{ m/s}^2) (0.15 \text{ m})] (0.6 \text{ m} \times 1 \text{ m}) \end{aligned}$$

$$= 882.9 \text{ N}$$

acting upward 0.3 m to the left of  $A$ .

Each plate weighs

$$\begin{aligned}W &= mg \\&= (125 \text{ kg})(9.81 \text{ m/s}^2) \\&= 1226 \text{ N.}\end{aligned}$$

From here solve the equilibrium equations to find the reactions. You should complete this for practice.

$$\begin{array}{lll}\Sigma M_A = 0 & \rightarrow & D_x = 124 \text{ N right} \\ \Sigma F_x = 0 & \rightarrow & A_x = 2636 \text{ N left} \\ \Sigma F_y = 0 & \rightarrow & A_y = 2795 \text{ N up}\end{array}$$

## 7.10 Exercises

# Chapter 8

## Internal Loadings

One of the fundamental assumptions we make in statics is that bodies are *rigid*, that is, they do not deform, bend, or change shape when forces and moments are applied. While we know that this assumption is not true for real materials, we are building the analytical tools necessary to analyze deformation. In this chapter you will learn to compute the internal loads, which are the forces and moments within a body which hold it together as it supports its own weight and any applied loads.

The chapter begins with a discussion of internal forces and moments and defines a new sign conventions especially for them. Discussion of how to find internal loads at a specific point within a rigid body follows. The chapter concludes with three techniques to find internal loads throughout a beam. Note that the words *loads* or *loading* as opposed to *forces* are used here when we are referring to both forces and bending moments.

In courses you take after statics, determining the internal loading is the first step you will take to find stresses, strains, deformations and ultimately select the appropriate shape, size, and material necessary for structural elements to safely support the applied loads. So you are advised to pay attention, and master this topic.

### 8.1 Internal Loads

In Subsection 3.3.3 you were introduced to axial internal loadings, loadings which were either tension or compression, or possibly zero. This section will explain two other internal loads found in two-dimensional systems, the **internal shear** and **internal bending moment**.


Internal loads are present at every point within a rigid body, but they always occur in equal-and-opposite pairs which cancel each other out, so they're not obvious. They're there however, and when an object is cut (in your imagination) into two parts the internal loads become visible and can be determined.

You are familiar with straight, two-force members which only exist in equilibrium if equal and opposite forces act on either end. Now imagine that we cut the member at some point along its length. To maintain equilibrium forces must exist at the cut, equal and opposite to the external forces. These forces are internal forces.



**Figure 8.1.1** Internal Loading in a straight two-force member.

Now let's examine the two-force member shown in [Figure 8.1.2](#). This time, the member is L shaped, not straight, but the external forces must still share the same line of action to maintain equilibrium. If you cut across the object, you will obtain two rigid bodies which must also be in equilibrium. However, adding an equal and opposite horizontal force at the cut won't produce static equilibrium because the two forces form a couple which causes the piece to rotate. This means that something is missing!

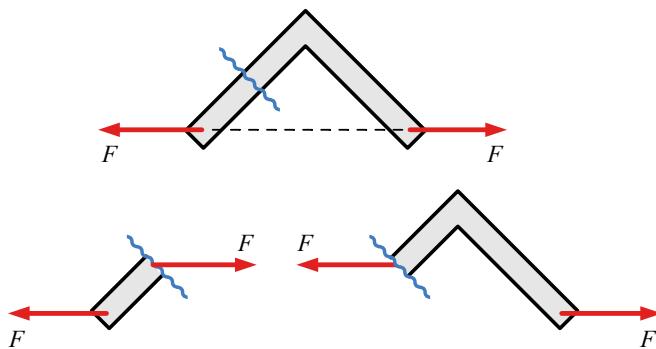

**Figure 8.1.2** A horizontal force alone does not create equilibrium.

Two-dimensional rigid bodies have three degrees-of-freedom and require three equilibrium equations to satisfy for static equilibrium.

$$\Sigma F_x = 0$$

prevents translation in the  $x$  direction,


$$\Sigma F_y = 0$$

prevents translation in the  $y$  direction, and

$$\Sigma M = 0$$


prevents rotation.

Assuming the material is rigid, the connection between the two halves must resist both translation and rotation, so we can model this connection as a fixed support and replace the removed half of the link with a force reaction *and* a couple-moment reaction as shown in the free-body diagrams of [Figure 8.1.3](#). This internal loading is actually a simplification of a more complex loading distributed across the section plane. The couple  $\mathbf{M}$  represents the net rotational effect of the force system on the surface of the cut.

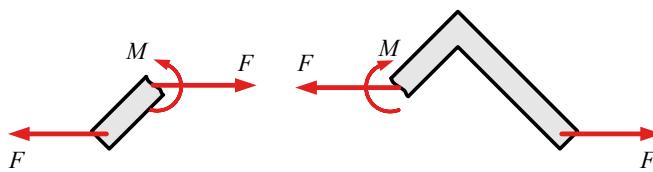

**Figure 8.1.3** The internal loading represented as an equal and opposite force  $\mathbf{F}$  and a bending moment  $\mathbf{M}$

The horizontal force can also be resolved into orthogonal components parallel and perpendicular to the cut. These components have special names in the context of internal loads.

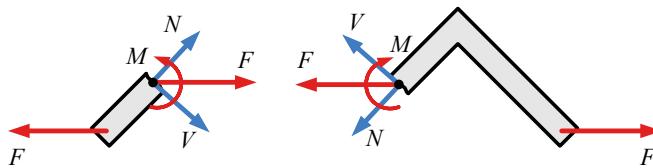


**Figure 8.1.4** The internal loading represented as a normal force  $\mathbf{N}$ , a shear force  $\mathbf{V}$ , and bending moment  $\mathbf{M}$

The internal force component perpendicular to the cut is called the **normal force**. This is the same internal tension or compression force that we assumed to be the only significant internal load for trusses. If the object has an axis, and the cut is perpendicular to it, the the normal force may also be properly called an **axial force**.

The internal force component parallel to the cut is called the **shear force**. The word shear refers to the shearing between that occurs between adjacent planes due to this force. You can get a feel for shearing adjacent planes by sliding two pieces of paper together.

The internal couple-moment is called the **bending moment** because it tends to bend the material by rotating the cut surface.

The shear force is often simply referred to as **shear**, and the bending moment as **moment**; together with the normal or axial force the three are referred to as the “internal loading”. The symbol  $\mathbf{V}$  is commonly chosen for the shear force, and  $\mathbf{A}$ ,  $\mathbf{P}$  or  $\mathbf{N}$  for the normal force and  $\mathbf{M}$  for the bending moment.

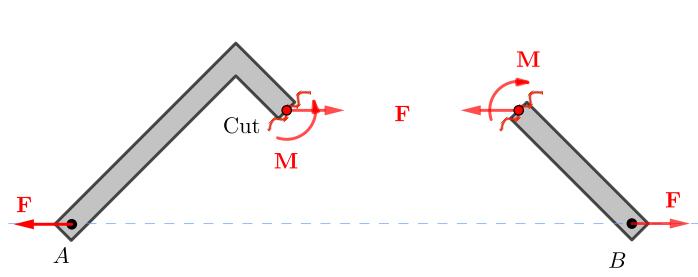

**Figure 8.1.5** Internal Loading in a L shaped member.

**Thinking Deeper 8.1.6 Deformation.** The controlling design parameter for most engineering systems is deformation. Thankfully, due to a property called elasticity, most materials will bend, stretch, and compress, long before they ultimately break. For example, when designing the floor in a new building, the floor is often limited to deflecting less than the length of the span in inches, divided by 360. Any more deformation than this would be considered disconcerting to the building residents and also start damaging surface materials like drywall. For example, for a 20 ft span, the deflection would need to be less than

$$\delta = \frac{20 \text{ ft} \cdot \frac{12 \text{ in}}{1 \text{ ft}}}{360} = 0.667 \text{ in.}$$

To meet this deformation limit, we need to consider the magnitude and location of applied loads, the size and shape of the floor beams, and the material the floor beams are made from. As deflection is an internal property of the flooring materials, the first step is to determine the internal loadings that arise from the externally applied loads, using the methods of this chapter.

## 8.2 Sign Conventions


When talking about internal loads our standard sign convention for forces and moments is not good enough. We can't, for instance, just call a vertical shear force positive if it points up and negative if it points down, because internal forces always occur in pairs so at any given point a shear force is *both* up and down. The direction of the internal force at a point depends on which side of the cut you're looking at.

So to define the state of internal loads at a point we need a better sign convention. Although the choice is somewhat arbitrary, agreeing on a *standard* sign convention allows us to have consistency across our calculations and to communicate the internal state clearly to others. The standard sign conventions defined here are used for internal loadings at a point and also for the shear and bending moment diagrams which are discussed in [Section 8.4](#).

Be aware that although this new sign convention applies all internal loads, it doesn't change the sign convention for the equations of equilibrium at all, so you will continue to solve them in the same way you always have.


The standard sign convention used for shear force, normal force, and bending moment is shown below.

- Positive Shear.



Positive shear forces tend to rotate the object counter-clockwise, i.e. the shear forces act down when looking towards the cut from the right, and up when looking from the left.

- Positive Normal Force.



Positive normal forces tends to stretch the object.

- *Positive Bending Moment.*




Positive bending moments tends to deform the object with an upward curvature.

**Question 8.2.1** We have defined positive internal loads by looking at the “front” side of the object. Would the results change if you walked around the object and analyzed it from the other side?  $\square$

## 8.3 Internal Loads at a Point


This section covers the procedure to compute the internal normal force, shear force, and bending moment at a designated point in a multiforce rigid body.

Consider the frame shown in [Figure 8.3.1](#) consisting of two-force members  $GD$  and  $BE$ , and multiforce members  $AD$  and  $CF$ . Since no information is provided, we can assume that the components have negligible weight. The internal loading within the two-force members is purely axial, but the multiforce members will be subject to the complete set of internal loadings.

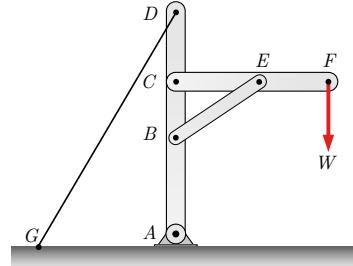

**Figure 8.3.1** A frame supporting a load at  $F$ .

To find the internal loadings at a specified point within one of the members, we make an imaginary cut there. [Figure 8.3.2](#) shows the free-body diagram of member  $AD$ , with a proposed cut between points  $D$  and  $C$ . The free-body diagram is shown with reactions for pinned connections at  $A$  and  $C$  and forces from the two-force members at locations  $B$  and  $D$ .

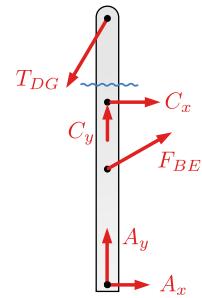

**Figure 8.3.2** Wavy line indicating the location of imaginary cut.


We then separate the free-body diagram of the member into two independent free-body diagrams, one above the cut and one below. This is analogous to the Method of Sections technique of [Chapter 6](#). The free-body diagrams for the two sections of the member are shown in [Figure 8.3.3](#). The three internal forces are exposed and labeled **N**, **V**, and **M**. Either free-body diagram can be used to solve for the internal forces, so it is wise to choose the easier one. Recognizing which one is easier takes practice, but look for the piece with more knowns and fewer unknown values.

Note that the internal loadings at the cut are drawn in the positive direction according to the [sign conventions](#) for internal loads, that they act in opposite direction either side of the cut, and they would cancel out if the object was put back together.

This technique can be used to find the internal loads at any point within any object. In the examples below we will find the internal loadings at a specific point in load carrying beams.

#### Example 8.3.4 Internal loads in a simply supported beam.

A beam of length  $L$  is supported by a pin at  $A$  and a roller at  $B$  and is subjected to a horizontal force  $F$  applied to point  $B$  and a uniformly distributed load over its entire length. The intensity of the distributed load is  $w$  with units of [force/length].



Find the internal loads at the midpoint of the beam.

**Answer.** At the midpoint of the beam,

$$A = F$$

$$V = 0$$

$$M = wL^2/8$$


#### Solution.

##### Find the external reactions.


Begin by drawing a free-body diagram of the entire beam, simplified by replacing the distributed load  $w$  with an equivalent concentrated load at the centroid of the rectangle. The magnitude of the equivalent load  $W$  is equal to the “area” under the rectangular loading curve.

$$W = w(L)$$

Then apply and simplify the equations of equilibrium to find the external

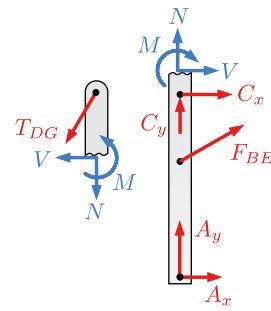

**Figure 8.3.3** Internal forces are exposed by the cut.

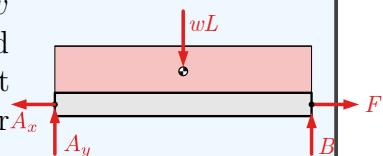


reactions at  $A$  and  $B$ .

$$\begin{aligned}\Sigma M_A &= 0 \\ -(wL)(L/2) + (B_y)L &= 0 \\ B_y &= wL/2\end{aligned}$$

$$\begin{aligned}\Sigma F_x &= 0 \\ -A_x + F &= 0 \\ A_x &= F\end{aligned}$$

$$\begin{aligned}\Sigma F_y &= 0 \\ A_y - wL + B_y &= 0 \\ A_y &= wL - wL/2 \\ &= wL/2\end{aligned}$$

**Cut the beam.** Cut the beam at the point of interest and separate the beam into two sections. Notice that as the beam is cut in two, the distributed load  $w$  is cut as well. Each of these distributed load halves will support equivalent point loads of  $wL/2$  acting through the centroid of each cut half.

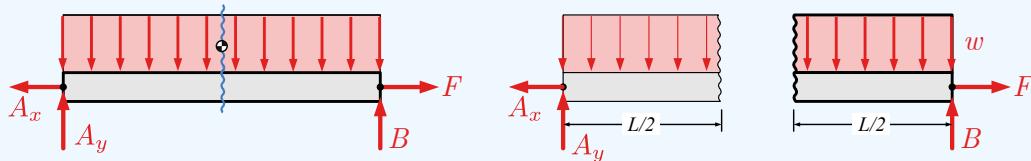

**Add the internal forces.** At each cut, a shear force, a normal force, and a bending moment will be exposed, and these need to be included on the free-body diagram.

At this point, we don't know the actual directions of the internal loads, but we do know that they act in opposite directions. We will assume that they act in the positive sense as defined by the [standard sign convention](#).


Axial forces are positive in tension and act in opposite directions on the two halves of the cut beam.

Positive shear forces act down when looking at the cut from the right, and up when looking at the cut from the left. An alternate definition of positive shears is that the positive shears cause clockwise rotation. This definition is useful if you are dealing with a vertical column instead of a horizontal beam.

Bending moments are positive when the moment tends to bend the beam into a smiling U-shape. Negative moments bend the beam into a frowning shape.

For vertical columns, positive bending moments bend a beam into a C shape and negative into a backward C-shape.

The final free-body diagrams look like this. Horizontal beams should always have assumed internal loadings in these directions at the cut, indicating that you have assumed *positive* shear, *positive* normal force and *positive* bending moments at that point.

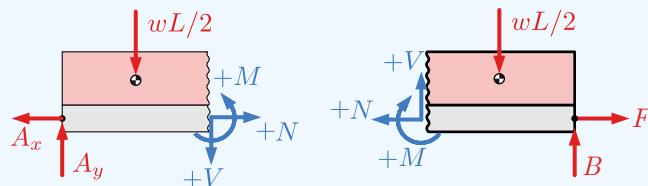

**Solve for the internal forces.** You may use either FBD to find the internal loads using the techniques you have already learned. So, with a standard  $xy$  coordinate system, forces to the left or up are positive when summing forces and counterclockwise moments are positive when summing moments.

Using the left free-body diagram and substituting in the reactions, we get:

$$\begin{aligned}\Sigma F_x &= 0 \\ -A_x + A &= 0 \\ A &= A_x = F\end{aligned}$$

$$\begin{aligned}\Sigma F_y &= 0 \\ A_y - wL/2 - V &= 0 \\ V &= wL/2 - wL/2 \\ V &= 0\end{aligned}$$

$$\begin{aligned}\Sigma M_{\text{cut}} &= 0 \\ (wL/2)(L/4) - (A_y)(L/2) + M &= 0 \\ M &= -wL^2/8 + wL^2/4 \\ M &= wL^2/8\end{aligned}$$

Using the right side free-body diagram we get:

$$\begin{aligned}\Sigma F_x &= 0 \\ -A + F &= 0 \\ A &= F\end{aligned}$$

$$\begin{aligned}\Sigma F_y &= 0 \\ V - wL/2 + B_y &= 0\end{aligned}$$

$$\begin{aligned}V &= wL/2 - B_y \\V &= wL/2 - wL/2 \\V &= 0\end{aligned}$$


$$\begin{aligned}\Sigma M_{\text{cut}} &= 0 \\-M - (L/4)(wL/2) + (L/2)(B_y) &= 0 \\M &= -WL^2/8 + wL^2/4 \\M &= WL^2/8\end{aligned}$$

Regardless of which side is chosen, we get the same results for the internal loads at the chosen point.

When you solve for the internal loadings, the results can be either positive, negative, or sometimes zero. Negative values indicate that the actual direction of the load is opposite to the assumed direction. Since we assumed all three internal loads were positive as defined by the [standard sign convention](#), a negative answer means that the load actually acts in the opposite direction to the vector shown on the free-body diagram.

#### Example 8.3.5 Internal loads in a cantilever beam.

Consider a cantilever beam which is supported by a fixed connection at  $A$ , and loaded by a vertical force  $P$  and horizontal force  $F$  at the free end  $B$ . Determine the internal loads at a point a distance  $a$  from the left end.

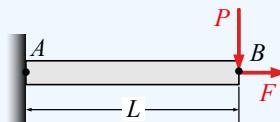


**Answer.** At the midpoint,

$$\begin{aligned}N &= F \\V &= A_y \\M &= -Pb\end{aligned}$$

#### Solution.

##### Determine the reactions.

Draw an FBD of the entire, un-cut beam and determine the reactions.



Notice that only the applied loads and support reactions are included on this un-cut beam FBD. The internal loads are only exposed and shown on a FBD after the beam is cut.

**Note 8.3.6** If you pick the right FBD in the next step, you may not need to do this. Think ahead!

Use this free-body diagram and the equations of equilibrium to determine the external reaction forces.

$$\begin{aligned}\Sigma F_x &= 0 &\Rightarrow A_x &= F \\ \Sigma F_y &= 0 &\Rightarrow A_y &= P \\ \Sigma M_A &= 0 &\Rightarrow M_A &= PL\end{aligned}$$

**Section the beam.** **Note 8.3.7** Try to choose the simpler free-body diagram. If one part has no external reactions, then you can skip the previous step.

Take a cut at the point of interest and draw a FBD of either or both parts.



The free-body diagrams of both portions have been drawn with the internal loads indicated in the positive direction defined by the **standard sign convention**.

The axial force is shown in tension on both parts. This force has been named **N** so its name doesn't conflict with the forces at point **A**.

The shear force **V** is positive when the shear is down on the right face of the cut and up on the left face.

The bending moment **M** is positive if the bending direction would tend to bend the beam into a concave upward curve.

Always assume that the unknown internal loads act in the positive direction as defined by the standard sign convention.

**Solve for the internal loads.** Solve for the three unknown internal loads.

$$\begin{aligned}\Sigma F_x &= 0 \Rightarrow N = F \\ \Sigma F_y &= 0 \Rightarrow V = A_y \\ \Sigma M_{\text{cut}} &= 0 \Rightarrow M = -Pb\end{aligned}$$

Once you have found the reactions and drawn a free-body diagram of the simpler portion with the normal force, shear force, and bending moment assumed positive, you then solve for the unknown values and signs just like any other equilibrium problem.


This workflow typically includes:

- A horizontal *x* and vertical *y* axes system.
- Three equilibrium equations, usually  $\Sigma F_x = 0$ ,  $\Sigma F_y = 0$ , and  $\Sigma M_z = 0$  to solve for the three unknown internal loads.

The values of the normal force  $\mathbf{N}$ , the shear force  $\mathbf{V}$ , and the bending moment  $\mathbf{M}$  may be positive, zero, or negative depending on the applied loads. When the sign of the load is known, the direction is also known.

### 8.3.1 Interactive Internal Loading

The internal loading inside a beam depends on the load that the beam is supporting and differs from point to point. This simply supported beam supports a uniformly varying load. The interactive traces out the value of the shear and bending moment as you move point  $C$ . Can you deduce the relation between the triangular loading and the value of the shear and bending moment?

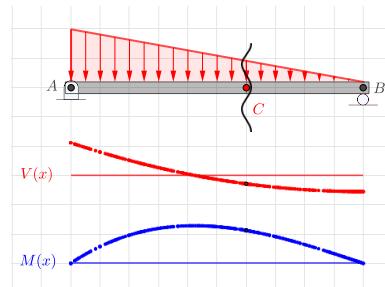

**Figure 8.3.8** Internal loading in a beam with a uniformly varying load.

## 8.4 Shear and Bending Moment Diagrams

The previous section addressed a method to find shear and bending moment at a single point, which is useful, but this technique is of little use if you want to know the shear and moment at *every* point in the object. Shear and bending moment diagrams are a way for us to do that, easily.

We will limit our analysis in this chapter to beams, which are structural elements primarily designed to support vertical loads. When designing a beam it is important to locate the points of maximum shear and maximum moment and their magnitudes because that's

where it is most likely to fail. To find these weak points, we need to check the internal loading at every point along the beam's full length. We use shear and bending moment diagrams to do this.

You will learn three related but different methods to produce shear and bending moment diagrams, and the chapter will conclude with a comparison of the advantages and disadvantages of each method.

### 8.4.1 Shear and Bending Moment Diagrams


Shear and moment diagrams are graphs of the internal shear and bending moment plotted along the length of the beam. They allow us to find where the maximum

loads occur in order to prevent failure and to optimize the design to reduce the overall weight and cost of a structure.

Since beams primarily support vertical loads, the normal forces are small and also independent of shear and moment, so they will not be considered in this section.

Beams can be supported in a variety of ways as shown in [Figure 8.4.1](#). Beam support types include:

1. a simply supported beam with a pin on one end and a roller at the other,
2. a cantilevered beam which is fixed on one end, and
3. an overhanging beam which acts as a combination of a simply supported and cantilever beam.

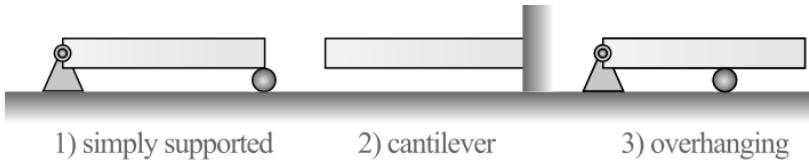

**Figure 8.4.1** Beam supports.


### 8.4.2 Section Cut Method

In this section we'll extend the previous method where we found internal loadings at a specific point to find the internal load at every point by developing equations, by cutting at an variable location  $x$ .

The difference between cutting a beam at a specific point, and cutting at point  $x$  is that the resulting equilibrium equations will include  $x$  rather than a known distance, and the resulting equations for shear and moment will be functions of  $x$ . To find the internal loads at a specific point we can just substitute in that point's location for  $x$ .

As an example, we will use a cantilevered beam fixed to a wall on its left end and subject to a vertical force  $P$  on its right end as an example.

By taking a cut at a location a distance  $x$  from the left we can draw two free-body diagrams with lengths  $x$  and  $(L - x)$ . This beam has *one* loading segment, because no matter where  $x$  is chosen, the free-body diagrams shown in [Figure 8.4.2](#) are correct.

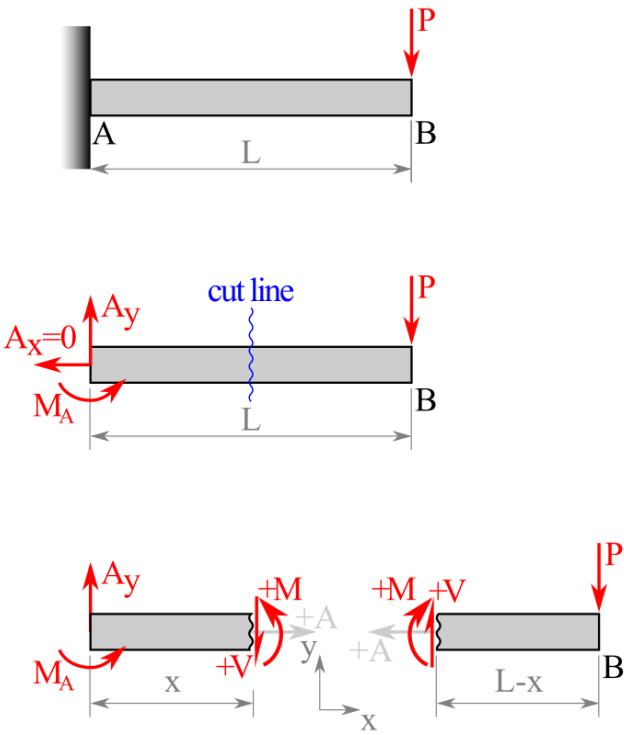**Figure 8.4.2**

To find the shear and loading functions, apply the equilibrium to one of the free-body diagrams. Either side will work, so we'll select the right-hand portion as it doesn't require us to find the reactions at  $A$ .

Using a standard coordinate system, the equations of equilibrium are:


$$\begin{aligned}\Sigma F_y &= 0 \\ V - P &= 0 \\ \Sigma M_{\text{cut}} &= 0 \\ -M - P(L - x) &= 0\end{aligned}$$

where  $L$  is the length of the beam.

We can solve these to find that  $V = P$  and  $M = -P(x - L)$ . This indicates that the shear force  $V$  is constant over the length of the beam and the moment  $M$  is a linear function of location  $x$ .


This example was simple because because only one FBD was necessary for any point on the beam. But many beams are more complex than this one. Beams with multiple loads must be broken into loading segments between each point where a load is applied or changes.

The beam in [Figure 8.4.3](#) has three loading segments but the procedure is similar, however in this case you must draw and analyze three free-body diagrams, one for each segment.

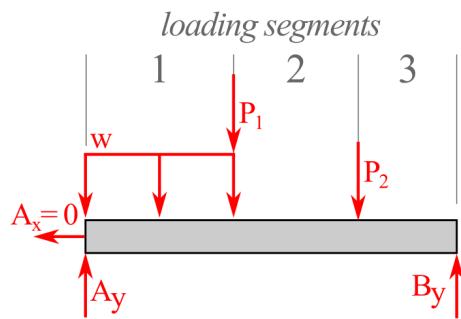

**Figure 8.4.3** The FBD of a simply supported beam  $AB$  with a constant value distributed load  $w$  and two vertical loads  $P_1$  and  $P_2$ .

If we make an imaginary cut through the second segment, we can draw a new free-body diagram of the segment to the left of the cut location as shown in [Figure 8.4.4](#)

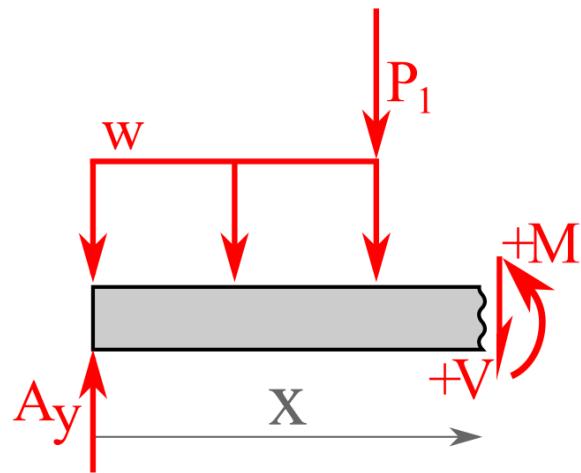


**Figure 8.4.4** Free body diagram of a section of the beam from [Figure 8.4.3](#) to the left of the cut location including the assumed positive shear and moment internal loads.

The equations of  $V$  and  $M$  from each segment are joined to plot the shear and moment diagrams. These diagrams help us visualize the change in the values of  $V$  and  $M$  everywhere within the beam.

When writing equations for loading segments, you may choose either

- *global equations*— all segments use the same origin, usually at the left end of the beam.
- *local equations*— each segment uses its own origin, usually at the left end of the segment.

Often local equations are easier because you can simply use the variable  $x$  in your equations as opposed to “ $x + \text{constant}$ ”, and you do not have to project the  $y$ -intercept values back to an axis system which is not adjacent to the segment.

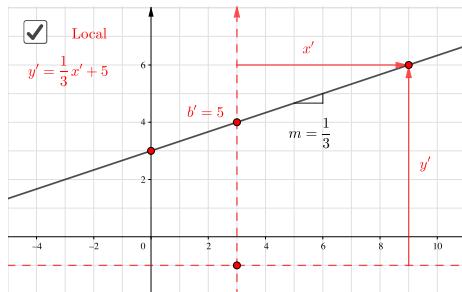


**Figure 8.4.5** Interactive demonstrating the difference between global and local equations.

Notice as you change the slope, global intercept, and location of point  $A$  that the only values that shift between local and global equations are the  $y$  intercept values ( $b'$  vs.  $b$ ) and the  $x$  coordinate of  $A$ .


### 8.4.3 Relation Between Loading, Shear and Moment

Suppose that we have a simply supported beam upon which there is an applied load  $w(x)$  which is distributed on the beam by some function of position,  $x$ , as shown in Figure 8.4.6.

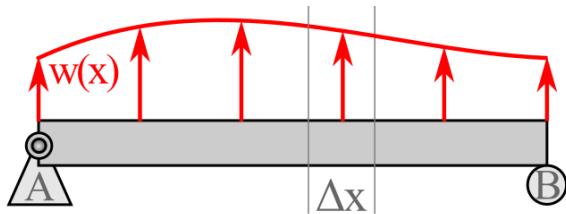

**Figure 8.4.6** A simply supported beam with a distributed load that is a function of beam position  $w(x)$ .

If we select a small section of this beam to look at closely, we can assume a free-body diagram such as shown in Figure 8.4.7.

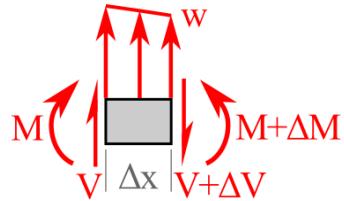

**Figure 8.4.7** A free-body diagram of a small section of the beam with a width of  $\Delta x$ . Given that we assume  $\Delta x$  is infinitely short, we can also assume that the distributed load value is constant over this small distance.

Apply force equilibrium in the vertical direction gives allows us to make the following derivation:

$$\sum F_y = 0$$

$$\begin{aligned}
 V + w(\Delta x) - (V + \Delta V) &= 0 \\
 \frac{\Delta V}{\Delta x} &= w \\
 \lim_{\Delta x \rightarrow 0} \frac{\Delta V}{\Delta x} &\Rightarrow \frac{dV}{dx} = w
 \end{aligned}$$

This final equation tells us that, at a given location, the slope of the shear  $V$  is the value of the loading  $w$ . Furthermore, if we multiply both sides by  $dx$ , we can integrate to find that

$$\Delta V = \int w \, dx$$

In words, this equation says that over a given distance, the change in the shear  $V$  is the area under the loading curve,  $w$ .

Now looking at the internal bending moments on the FBD in [Figure 8.4.7](#), when we apply moment equilibrium about the centroid  $G$  of the element:

$$\begin{aligned}
 \sum M_G &= 0 \\
 -\frac{\Delta x}{2}V - \frac{\Delta x}{2}(V + \Delta V) - M + (M + \Delta M) &= 0 \\
 \frac{\Delta M}{\Delta x} &= \frac{1}{2}(2V + \Delta V) \\
 \lim_{\Delta x \rightarrow 0} \frac{\Delta M}{\Delta x} &\Rightarrow \frac{dM}{dx} = V
 \end{aligned}$$

This final equation tells us that, the slope of the moment diagram is the value of the shear. Furthermore, if we multiply both sides by  $dx$ , we can integrate to find that

$$\Delta M = \int V \, dx$$

In words, this equation says that over a given segment, the change in the moment value is the area under the shear curve.

Hence, your loading, shear, and moment are related directly by the basic derivatives and integrals that you learned in Calculus I. These relationships are summarized in [Table 8.4.8](#) below.

**Table 8.4.8 Summary of the relationships between loading  $w$ , internal shear force  $V$ , and internal bending moment  $M$** 

Relating	Derivatives (slopes)	Integrals (areas)
Loading function $w(x)$ with shear function $V(x)$	$\frac{dV}{dx} = w(x) \quad (8.4.1)$ <p>The slope of the shear diagram at <math>x</math> is the value of the loading function at <math>x</math>.</p>	$\Delta V = \int w(x) dx \quad (8.4.2)$ <p>The change in the shear diagram is the area under the loading function.</p>
Shear function $V(x)$ with moment function $M(x)$	$\frac{dM}{dx} = V(x) \quad (8.4.3)$ <p>The slope of the moment diagram is the value of the shear at the same position.</p>	$\Delta M = \int V(x) dx \quad (8.4.4)$ <p>The change in the moment between two points is the area under the shear curve.</p>

## 8.4.4 Graphical Method

### Application of the graphical method

This graphical technique is a quick and intuitive way to draw shear and moment diagrams. This technique is really a graphical integration process; you integrate from load  $w(x)$  to shear  $V(x)$  to moment  $M(x)$ , from top to bottom. You have derivatives the other direction.


The curves show the relationships between loading, shear, and moment of each diagram with jumps, slopes, and areas.

- **Jumps**— vertical changes in shear and moment diagrams.
- **Slopes**— gradual changes in shear and moment diagrams.
- **Areas**—“areas” under the load and shear curves. The area under the loading curve is actually a force, and the area under the shear curve is a moment.

[Table 8.4.9](#) Summarize the relationships between load, shear and moment. You can explore the behavior using the interactive in [Figure 8.4.10](#).

**Table 8.4.9 Graphical relationships between loading, shear, and moment of a beam as they relate to jumps, slopes, and areas for each diagram.**

Load	Jumps	Slopes	Areas
Shear	Concentrated loads cause the shear to jump by the same amount. Upward loads cause upward jumps.	The value of the load is the slope of the shear.	The change in the shear is equal to the area under the loading curve. $\Delta V = \int w(x)dx$
Moment	Concentrated moments on the beam have no effect on the shear curve, but cause jumps on the moment curve. Counterclockwise moments cause downward jumps and vice-versa.	The value of shear at a point is the slope of the moment at that point. $V = +M$ slope ( ) $V = -M$ slope ( )	Change in the moment is equal to the area under a shear curve. $M = \int V dx$

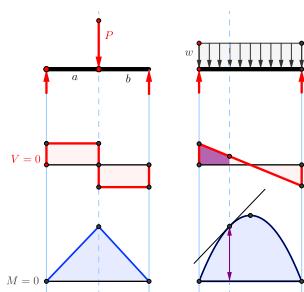**Figure 8.4.10 Building Blocks for Shear and Moment Diagrams**

### Step-by-step

Shear and bending moment diagrams are governed by these equations and must be consistent with them.

$$1. \quad \frac{dV}{dx} = w(x)$$

$$2. \quad \Delta V = \int_a^b w(x) dx$$

$$3. \quad \frac{dM}{dx} = V(x)$$

$$4. \quad \Delta M = \int_a^b V(x) dx$$

- First, **determine the reaction forces** and moments by drawing a free-body diagram of the entire beam and applying the equilibrium equations. Double check that your reactions are correct.

2. Establish the shear graph with a horizontal axis below the beam and a vertical axis to represent shear. Positive shears will be plotted above the  $x$ -axis and negative below.
3. Make vertical lines at all the “interesting points”, i.e. points where concentrated forces or moments act on the beam and at the beginning and end of any distributed loads. This divides the beam into segments between vertical lines.
4. ***Draw the shear diagram*** by starting with a dot at  $x = 0, V = 0$  then proceeding from left to right until you reach the end of the beam. Choose and label a scale which keeps the diagram a reasonable size.
  - (a) Whenever you encounter a concentrated force, jump up or down by that value.
  - (b) Whenever you encounter a concentrated moment, do not jump.
  - (c) Whenever you encounter a distributed load, move up or down by the “area” under the loading curve over the length of the segment, according to equation 2. The “area” is actually a force.
  - (d) The slope of the curve at each point  $x$  is given by equation 1. Distributed loads cause the shear diagram to have a slope equal to the negative value of the load at that point. For unloaded segments of the beam, the slope is zero, i.e. the shear curve is horizontal. For segments with uniformly distributed load, the slope is constant.
  - (e) The shear diagram should start and end at  $V = 0$ . If it doesn’t, recheck your work.
5. Add another interesting point wherever the shear diagram crosses the  $x$ -axis, and determine the  $x$  position of the zero crossing.
6. After you have completed the shear diagram, ***calculate the area under the shear*** curve for each segment. Areas above the axis are positive, areas below the axis are negative. The areas represent moments and the sum of the areas plus the values of any concentrated moments should add to zero. If they don’t, then recheck your work.
7. Establish the moment graph with a horizontal axis below the shear diagram and a vertical axis to represent moment. Positive moments will be plotted above the  $x$  axis and negative below.
8. ***Draw and label dots on the moment diagram*** by starting with a dot at  $x = 0, M = 0$  then proceed from left to right placing dots until you reach the end of the beam. As you move over each segment move up or down from the current value by the “area” under the shear curve for that segment and place a dot on the graph. In this step, you are applying equation 4.
  - (a) Positive areas cause the moment to increase, negative areas cause it to decrease.

- (b) If you encounter a concentrated moment, jump straight up or down by the amount of the moment and place a dot. Clockwise moments cause upward jumps and counterclockwise moments cause downward jumps.
  - (c) When you reach the end of the beam you should return to  $M = 0$ . If you don't, then recheck your work.
9. **Connect the dots with correctly shaped lines.** Segments under constant shear are straight lines, segments under changing shear are curves. The general curvature of the lines can be determined by considering equation 3.

Every shear and bending moment diagram problem should include:

1. A neat, accurate, labeled free-body diagram of the entire structure, and the work to find the reactions. For this work, you may replace the distributed loads with equivalent concentrated loads.
2. A neat, properly scaled diagram of the beam showing its reactions and “true” loads. Distributed loads must be shown this diagram, because their distributed nature is significant.
3. A large graph of the shear and bending moment functions drawn directly below the scaled beam diagram. It is convenient to draw this graph on graph paper.
4. Show the correct shape and curvature for each curve segment: zero, constant slope, polynomial. Changes in curve shapes should align with the load which causes them. Indicate the scale used for shear and moment, and use a straight-edge.
5. Indicate values of shear and moment at maximums, minimums and points of inflection
6. Any other work need to justify your results.

#### 8.4.5 Calculus Method

In [Table 8.4.8](#) we learned that loading, shear and bending moments are related by integral and differential equation, and used this knowledge to draw shear and bending moment diagram suing a graphical approach. This method is easy and fast in cases when you can easily calculate the areas under the loading and shear curves without integration.

However, there are times that the graphical technique falls short when the areas are more complicated than rectangles or triangles. For example, a uniformly varying load, which is a 1st-degree linear function of  $x$ , integrates to a 2nd-degree parabolic shear function, and a 3rd degree cubic moment function. To use the graphical method you will need to find the area under the parabolic shear curve to compute the cubic moment. When the loading becomes more complex it is better to use perform the integration directly.

We use the same fundamental equations in this section as you used in the graphical method

$$\Delta V = \int w(x)dx \quad \Delta M = \int V dx$$

But, instead of finding areas and slopes you will obtain an equation for the load as a function of  $x$ , then integrate it to find the shear function. The integral equations are the change in the shear and moment, thus you will need starting values for each segment.

The starting values come from either the ending value of the previous segment or point loads or point moments. Because of the requirement for these segment starting values, no segment can be computed in isolation from the other segments. Physically this means that the shear and moment along a beam are not just due to the loading in one segment, but are related to the loading on the rest of the beam as well.

**Table 8.4.11 Equations for various loading types in a segment.**


Loading type in a segment	Equation	Description
between point loads	$w = 0$	load between point loads will result in no change in the shear ( $V$ ) between point loads (only happens when self-weight of the beam is ignored)
distributed loads (rectangular area)	constant value	value is negative (-) if the load is downward ( $\downarrow$ ) and positive (+) if the load is upward ( $\uparrow$ )
changing loads (triangular or trapezoidal area)	$= mx + b$	defined by the arrow tips of the distributed load = slope (rise/run) = distance from datum (global or local to segment, see Global vs Local functions for segment equations above) = $y$ intercept at $x = 0$
other loading distribution	$= f(x)$	defined by the arrow tips of the distributed load  Note that point and uniformly distributed loads can easily be handled with the graphical method and do not require the use of the calculus method.  As most gravitational distributed loads are drawn with the arrows pointing down and resting on the beam, slide distributed loads along their line of action so that their tails are on the beam and their tips define your equation.

### Application of the Calculus Method

1. You can either start with this method from the start of your problem or, to be more time-efficient, use the graphical method until the point you need to find

areas of more complicated shapes than rectangles and triangles.

2. You will need to have solved the loading segment to the left of your desired segment.
3. Write an equation for the loading  $w$  in the segment, see [Table 8.4.11](#).
4. Integrate the loading equation  $w(x)$  to find the change in the shear  $V$  and include the shear value at the beginning of your loading segment including the influence of any point loads at that location (equivalent to the integration constant)
5. Integrate the shear equation  $w(x)$  to find the change in the bending moment  $M$  and include the moment value at the beginning of your loading segment including the influence of any point couple-moments at that location (equivalent to the integration constant)
6. To find maximum values
  - (a) For shear, use  $V(x)$  equation to compute
  - (b) For moment, use  $M(x)$  to compute. If the value of the maximum moment is in the middle of a loading segment (often where the shear value is zero), set the  $V(x) = 0$ , solve for  $x$  and then put that distance value into the moment  $M(x)$  equation. See the example below)


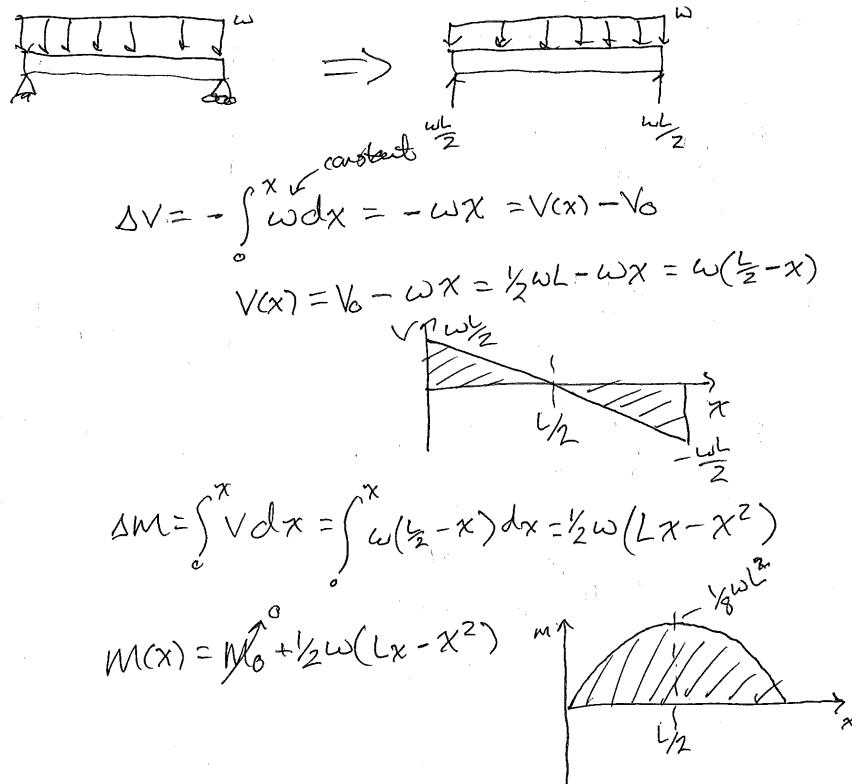


### 8.4.6 Geogebra Interactives




You can use the interactives below to practice drawing shear and moment diagrams. You can change the position of the loads and change their magnitudes and observe how the diagrams change, or you can click New Problem to generate a new problem.

After exploring the diagrams and seeing how they relate to each other, turn off the solutions and try for yourself. You will very likely see problems like these on an exam.




#### Concentrated Forces

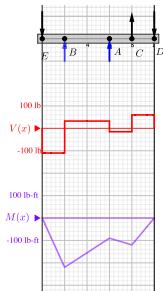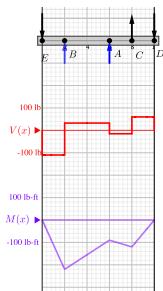


#### Concentrated Force and Moment

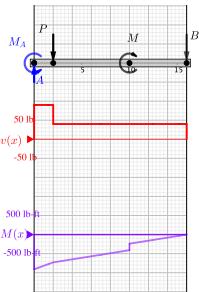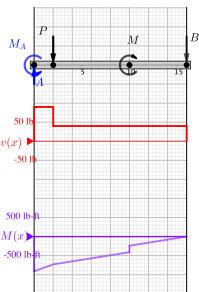


#### Distributed Load

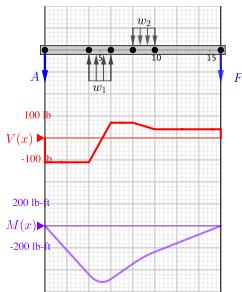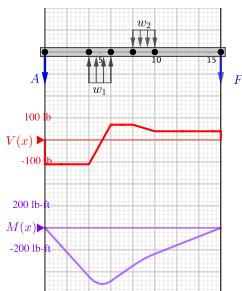

## Combination Load

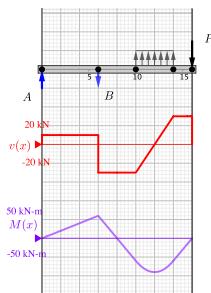

## Arbitrary Load

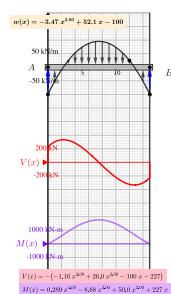

## 8.5 Conclusion

You have likely realized that in engineering (and life) that there are multiple ways to solve a problem. The four different techniques in this chapter to compute internal loadings are a demonstration of this.

The table below may help you consider the advantages and disadvantages of each method. In the end, the decision of which method to use is yours, and the better you know each method the easier it will be to choose the one which is both applicable and efficient.

## 8.6 Exercises

# Chapter 9

## Friction

Up until this point in the course, the effects of friction forces have been considered negligible. The reality is that friction not only slows things down (like friction between your skis and the snow when you ski down a hill) but is also the force which causes motion (like the friction between the rear wheel of your bicycle and the road causing you to move forward when you pedal). This chapter introduces various types of friction that occur on blocks, wedges, screws, belts, bearings, and rotating discs.

### 9.1 Dry Friction


#### Key Questions

- Contrast the types of friction covered in statics in the context of the other types of friction in existence
- Know when you can use the equation  $F = \mu_s N$  and when you cannot
- Graphically show how the friction and normal force vectors are related to the friction resultant vector and the friction angle at impending motion.
- Locate and compute the friction angle  $\phi_s$  on a free-body diagram
- Explain how a (typically) distributed normal force can be represented by a point force that moves as the distribution of a normal force shifts.


There are multiple types of friction, including:

1. Dry friction: the force that opposes one solid surface sliding across another solid surface
2. Fluid friction: the friction between layers of a viscous fluid in motion
3. Internal friction: the force resisting internal deformation of a solid material

Statics focuses on dry friction. By definition, dry friction always opposes the direction of motion of the contact point/surface that the friction is acting upon. Depending on the type of movement of the body, dry friction can either have the effect of opposing or causing motion.

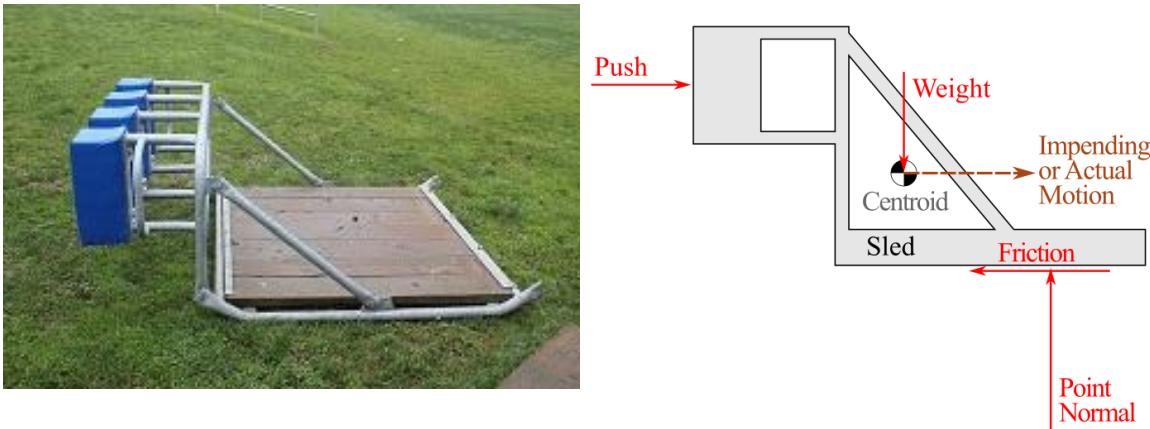


**Figure 9.1.1** Dry friction occurs between the bottom of this training sled and the grassy field. Dry friction is actually a surface force along the bottom surface of the sled which would oppose the motion of the sled sliding along the field. Also, notice that the point normal force is shown offset from the centroid of the sled. This offset is required to create rotational equilibrium given the pushing force.

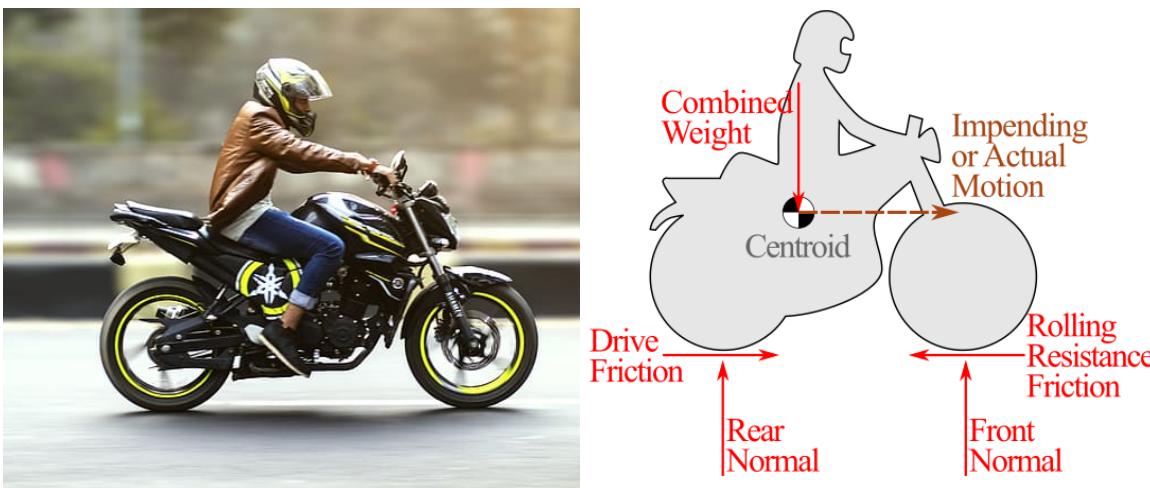

**Figure 9.1.2** Dry friction occurs between the rear tire and the road for this motorcycle. The dry friction force on the rear tire is in the direction the motorcycle is traveling and is what allows it to accelerate, for example on flat ground. There is also dry friction coming from the rolling resistance of the front tire, which is opposing the motion of the motorcycle.


**Thinking Deeper 9.1.3 Statically Equivalent Loadings.** For computational simplicity, we often represent the actual force as a vertical normal force and a horizontal friction force, as shown in the third FBD below. In reality, the force acting on an object being pushed across the ground approximates the non-vertical distributed

force shown in the first FBD below. The second FBD shows the intermediate step.

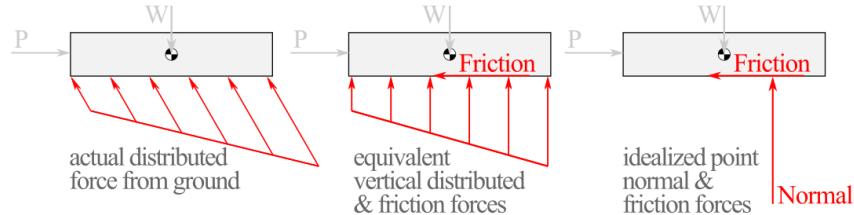

### 9.1.1 How can you tell from a problem statement which phase of friction to use?

The most commonly used model for dry friction is Coulomb friction, which includes phases (as shown in Figure 9.1.4 below): (1) static but not impending friction, (2) impending motion, and (3) kinetic friction. Coulomb friction relies on a friction coefficient  $\mu$  to serve as the proportionality constant between the normal and friction forces. The friction coefficient  $\mu$  is always greater than 0 and commonly less than 1. The friction coefficient can be greater than 1 for materials that exhibit positive adhesion to each other (like silicone rubber or glued surfaces).

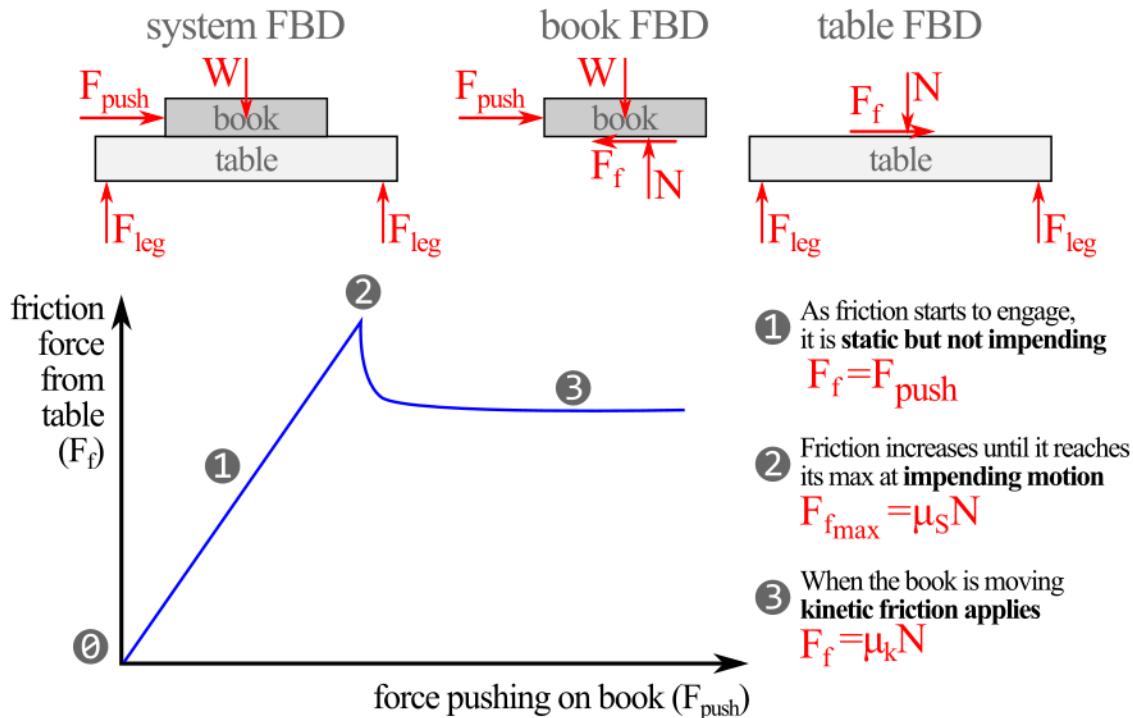

**Figure 9.1.4** A simple model of a book being pushed horizontally while sitting on a table. FBDS are provided for the system, book, and table. Additionally, a Coulomb friction graph is shown and the various phases are numbered.

Here is a more detailed discussion of what happens in each friction phase.

- At the origin of the graph in Figure 9.1.4, there is material interaction between

the book and table, thus a friction force is available, but not engaged  $F_f = F_{\text{push}} = 0$ .

2. Assuming the pushing force  $F_{\text{push}}$  gradually increases from zero in this static-but-not-impending phase, the friction force increases proportionally to keep the forces balanced and the box static  $F_f = F_{\text{push}}$ .
3. Next, the maximum friction possible is reached at impending motion and the pushing force matches the maximum friction force  $F_{f_{\text{max}}} = \mu_s N$ .
4. Finally, if the pushing force is increased beyond impending motion, the book starts to move under the influence of kinetic friction  $F_{f_{\text{max}}} = \mu_k N$ .

Notice that impending motion friction is always greater than kinetic friction, this is because the coefficient  $\mu_s > \mu_k$  for most materials. Practically, this tells us that once a material starts to move it is easier to keep moving than it was to get it started from rest.

If you wonder why we include kinetic friction in a statics course, remember that a body in equilibrium might be moving with constant velocity.

The key to deciding what type of friction is appropriate for a given problem will depend on the specifics of the problem statement.

**Table 9.1.5 Summary of the three phases of friction with the key to recognizing and examples of each.**

Type	Governing equation	Key to recognizing
Static-but-not-impending motion	None, $F_f$ is independent of $N$ .	Mention of sitting or static, but no extremal language
<b>Examples:</b>		
A moment of 20 N·m is applied to a wheel held static by a brake arm. What is the friction force between the wheel and the brake arm? A box sits on a slope, find the resultant of the friction and normal forces on the box.		
Impending motion	$F_f = \mu_s N$	The use of extremal language (related to maximum or minimum values) in the problem statements
<b>Examples:</b>		
What is the maximum force applied to the box before it will start to move? What is the minimum coefficient of static friction that will keep the box static? What is the lightest box which will not slip or tip on this slope? What is the most massive moment that the brake arm will hold static?		
Kinetic friction	$F_f = \mu_k N$	Mention of the body moving at a constant


Note that when you solve static-but-not-impending motion problems (as opposed to impending or kinetic) that you will need one additional piece of data given in the problem to solve for both  $F_f$  and  $N$  as you will not be able to apply the equation  $F_f = \mu N$ .

### 9.1.2 Friction angle and friction resultant

Friction and normal forces can be represented in two equivalent ways:

**Friction and normal forces.** Using these perpendicular vectors is most convenient on block and wedge type problems and apply equally-well in all three phases of friction (static but not impending, impending motion, and kinetic friction)

**Resultant force and friction angle.** Recall that resultants are the sum of two or more vectors. In this case, the friction resultant is  $\mathbf{R} = \mathbf{F} + \mathbf{N}$ . The friction angle  $\phi_s$  is the angle between the friction resultant and normal forces but only is applicable at impending motion. The friction resultant and friction angle are used for screw, flexible belt, and journal bearing type problems.

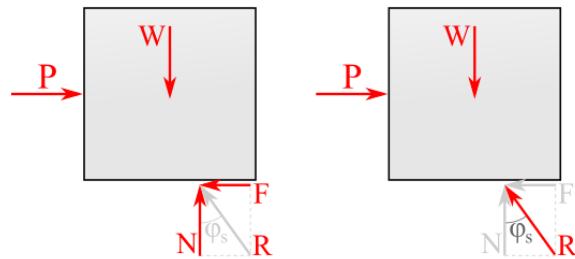

**Figure 9.1.6** A block of weight  $W$  is pushed sideways by force  $P$ . The combined effect of the friction and normal forces can either be modeled as separate friction ( $F$ ) and normal ( $N$ ) forces (left) or a friction resultant force ( $R$ ) and friction angle ( $\phi_s$ ).


The friction angle  $\phi_s$  relates directly to the coefficient of static friction ( $\mu_s$ ) as the friction angle  $\phi_s$  is the internal angle of the right triangle formed by the normal force  $N$ , the friction resultant  $R$ , and the friction force  $F$ . Hence:

$$\tan \phi_s = \frac{F}{N} \quad \phi_s = \tan^{-1} \left( \frac{F}{N} \right) \quad (9.1.1)$$

### 9.1.3 Normal Forces

Commonly on two dimensional problems, normal forces are represented at the point of contact or in the middle of the contacting surface. However, normal forces are rarely point loads but instead are loads distributed across a surface. The point force vector we typically represent as a normal force on an FBD is the externally equivalent

resultant of the distributed normal force (as demonstrated in [Chapter 7](#), distributed loads). To demonstrate this further, take a look at [Figure 9.1.7](#).

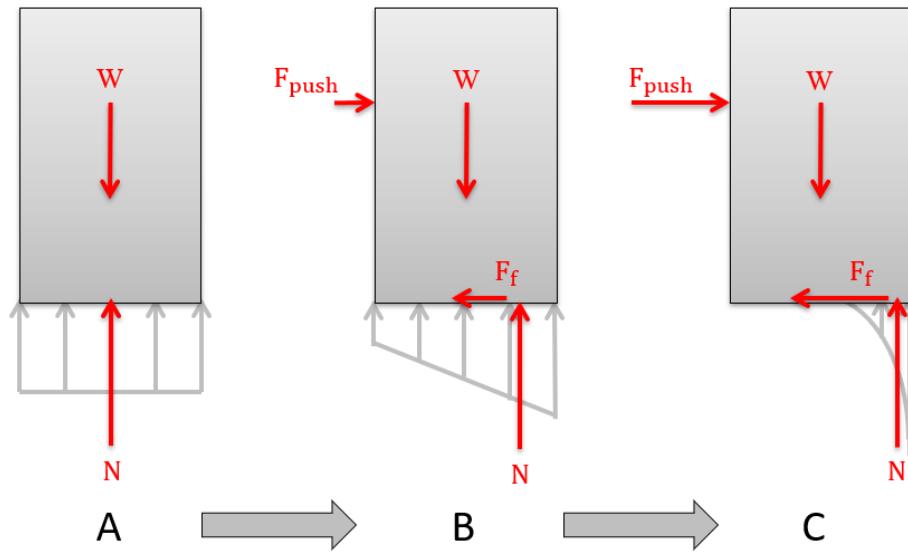

**Figure 9.1.7** (A) A box at rest has a uniformly distributed normal force along the bottom of the box. Hence, the resultant normal force is located directly below the weight force, and the friction force (while available) is not engaged. (B) As a pushing force  $F_{\text{push}}$  is applied, the distributed normal force changes shape, and the resultant normal force  $N$  is shifted to the right to maintain equilibrium. (C) This trend continues as you push harder on the box as the normal force continues to shift right.

## 9.2 Block and Wedge Friction

### Key Questions

- Show on a free-body diagram how a normal force always remains perpendicular to the contact surface, while the friction force lies parallel to the contact surface
- Demonstrate graphically that components of friction and normal forces are related to the right-triangle trigonometry terms sine and cosine.

In this section, a block is defined as any rectangular rigid body. A wedge is a tapered object that forces objects apart or holds something in place. Wedges are used in two primary ways:

*Low friction wedges* are a simple machine which allows users to create large normal forces to move objects with comparatively small input forces.

*High-friction (self-locking) wedges* control the location of or hold things in place (as in doorstop wedges or carpentry wedges).




**Figure 9.2.1** A hydraulic ram is used to push a stationary wedge into the through a piece of firewood. All forces are drawn with respect to forces on the log and there would be mirrored friction and normal forces on the other side of the splitter. The normal force  $N$  is pushing the two halves of the log apart while the friction force  $F$  is opposing the pushing force  $P$ .

Luckily the free-body diagrams and computations associated with both low- and high-friction wedges are identical. Block and wedge friction problems are quite similar to the multi-force body equilibrium problems from [Chapter 5](#) Rigid Body Equilibrium and [Chapter 6](#) in the Frames and Machines section. The main difference is the inclusion of friction from all non-smooth contact surfaces. The directions of both the normal and friction forces on the free-body diagrams are defined below.

*Normal forces* act between bodies are reactions forces perpendicular to the contacting surfaces. All normal forces on a FBD should be pointing at (and not away from) the body.

*Friction forces* are reaction forces between bodies parallel (or tangential) to the contacting surfaces and created by the roughness of both surfaces. All friction forces on an FBD should resist the motion at the point of contact.

The key added challenge of solving wedge problems is that the angled faces of wedges create additional force components in your equations. One of the critical steps to solve a block or wedge problem is to look at the problem statement and drawing to determine which force is engaging the friction of the system. Start by drawing the friction forces on the body where this force acts (see [Figure 9.2.2](#)). As you are passing the friction and normal forces to adjacent FBDS, do not forget to draw both friction and normal forces in the opposite direction.

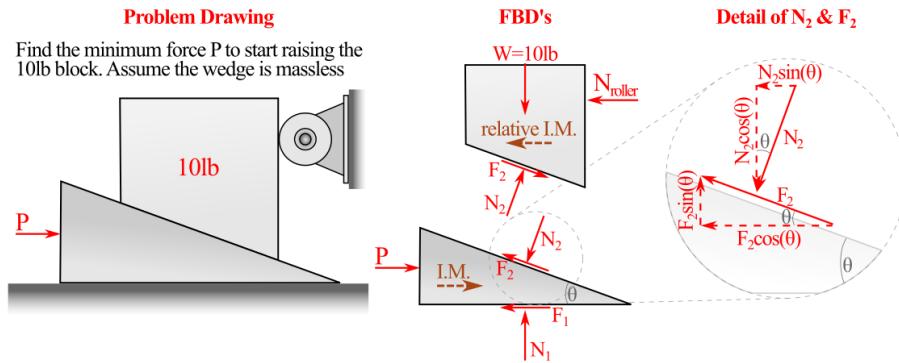

**Figure 9.2.2** This figure demonstrates the free-body diagrams to find the minimum  $P_1$  to raise the block. We would assume that all the friction forces are pushed to impending motion, thus can use  $F = \mu_s$  to relate the friction and normal forces at all contact surfaces. A detail of  $N_2$  and  $F_2$  has also been provided so that you can see how the angle  $\theta$  is incorporated into the  $x$  and  $y$  components.

If the problem in [Figure 9.2.2](#) was changed to “Given a coefficient of static friction of  $\mu_s = 0.6$  find the minimum force  $P_2$  to keep the wedge from slipping out under the 10 lb block”, the FBDS would need to change in the following ways:

- all friction force directions would change as the impending motion of both the wedge and 10 lb block would change direction and
- the direction of  $P$  may have to change if the wedge has sufficient friction to stay static when  $P = 0$ .

Note that for all values of  $P$  between  $P_1$  and  $P_2$  the system would be static, and the friction forces would be static-but-not-impending.

## 9.3 Slipping vs. Tipping

### Key Questions


- Interpret all the ways that a system could reach impending motion and create free-body diagrams for each scenario
- Select a criterion which you can compare across motion scenarios
- Compare your results to conclude which scenario would reach impending motion first

**Thinking Deeper 9.3.1 Failure in Engineering.** The goal of engineering design is to forecast and plan for all the ways that something can fail. The challenge is to know the questions to ask and the data to gather to model all possible failure modes. The controlling failure is the mode which occurs at the smallest load.

This section focuses on the various ways a rigid body in equilibrium might begin to move. The point at which an object starts to move is called the point of impending motion.

The interactive in [Figure 9.3.2](#) shows a box sitting on a rough surface. Imagine that we start pushing on the side of the box with a gradually increasing force. Initially, friction between the block and the incline will increase to maintain equilibrium, and the box will sit still.

As we continue to increase the force there are two possibilities; the maximum static friction force will be reached and the box will begin to slide, or the pushing force and the friction force will create a sufficient couple to cause the box tip on its corner.

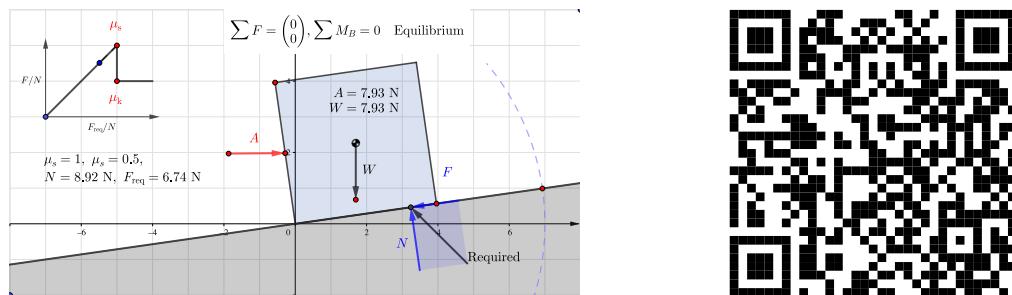


**Figure 9.3.2** Slipping vs. Tipping

One of the most straightforward ways to determine how the box will move is to solve for the pushing force twice, once assuming slipping and a second time expecting tipping. Whichever iteration requires the least pushing force is the option that will cause the box to move. This process is summarized in the following three steps:

This process is summarized in the following three steps:

1. *Check slipping.*


Create an FBD with the normal force  $N$  at some unknown location and solve for the pushing force necessary to make the body slip.

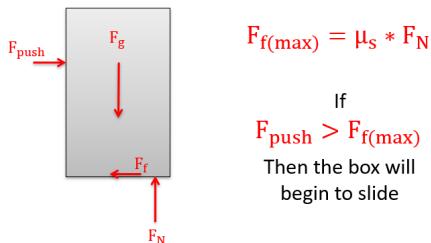

**Figure 9.3.3** A body will slide across a surface if the pushing force exceeds the maximum static friction force that can exist between the two surfaces in contact. As in all dry friction problems, this limit to the friction force is equal to the static coefficient of friction times the normal force between the body ( $F = \mu_s N$ ). Given the scenario below of a box on a horizontal surface, if the pushing force exceeds the maximum force of friction, then the body will slip.

2. *Check tipping.*

Create an FBD with the normal force  $N$  at the corner of the box and solve for the pushing force necessary to make the body tip.

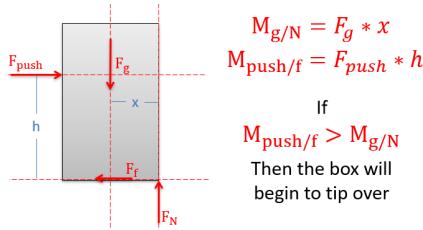

**Figure 9.3.4** Given the box on a rough horizontal surface above, as we push horizontally on the body, the resultant normal force (as discussed above in section XX) will shift to the right. Because the normal force is the direct result of physical contact, we cannot move the normal force beyond the corner of the box. At tipping, the friction force is static-but-not-impending as it has not reached impending motion for slipping.

3. *Compare the results.*

In this case, the least value of  $F_{\text{push}}$  will initiate impending motion.

## 9.4 Screw Friction

### Key Questions

- Explain how the right-hand rule relates to the motion and rotation of screws,
- Compute the thread pitch and friction angle for a screw,
- Contrast the different types of screw motion, with and against applied loads, and match the motion cases to their corresponding equation, and
- Describe how a screw and nut move in relatively opposite directions.

A power screw (also sometimes called a lead screw) is another simple machine that is essentially the surface of a wedge wound around a shaft.

A power screw assembly includes a nut that is machined to fit around the screw. There are several ways that a power screw can be used, based upon the movement of the screw and nut.



**Figure 9.4.1** A power screw is essentially a ramp wrapped around a cylinder.

A C-clamp is an example of a screw which rotates and translates through a fixed nut.



**Figure 9.4.2** A power screw is essentially a ramp wrapped around a cylinder.

Compare that with with a scissors car jack. Here the screw rotates and the nut (on the far end) translates along the screw. The handle end of the screw acts as a thrust bearing but is not threaded.




**Figure 9.4.3** Scissors Jack.

In either case, a small moment on the screw can cause enormous forces on the nut, with the added benefit of the force being applied at a precise location as controlled by the screw.

### 9.4.1 Screw motion and the Right-hand-rule


Most screws are right-hand threaded, which means that when you are looking at the head of a screw and rotate the top of the screw to the right, it tightens (commonly taught as “righty-tighty”). Another way to think about the relationship between screw rotation and motion uses the right-hand rule. When you make a thumbs up with your right hand, if you rotate a screw towards your fingertips (clockwise = CW), then the screw will move in the direction of your thumb (as shown in [Figure 9.4.4](#)). Of course, the reverse is true as well if you want to loosen the screw from its nut.

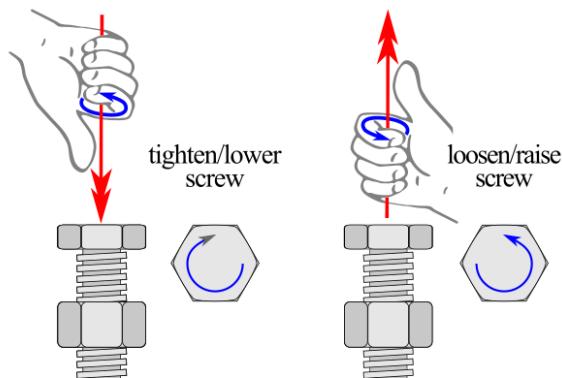

**Figure 9.4.4** This figure demonstrates the movement of a right-hand threaded screw through a fixed nut. First, make a thumbs up with your right hand. To tighten/lower the screw, rotate the screw in the direction of your fingertips (CW and blue rotational arrows). To loosen/raise the screw, point your right thumb upwards and rotate the screw in the direction of your fingertips (CCW and direction of blue rotational arrows).

Note that there is a small percentage of screws that are left-hand threaded. Their application is often related to:

- machines where the reverse-threading prevents them from loosening gradually under the torque of the moving part (like the left pedal on a bicycle)
- machines where the movement of the screw creates dual motion (like a hand-screw wood clamp)
- situations where you do not want to mix up constituents (like the oxygen and acetylene tanks on a cutting torch)

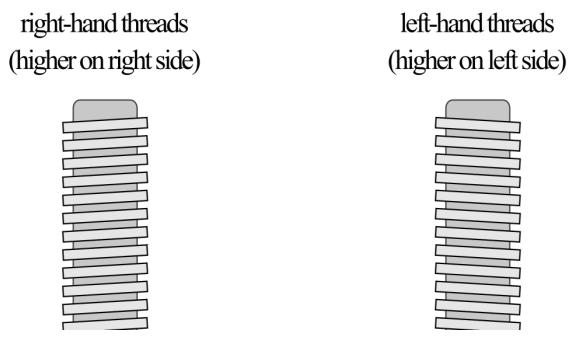


**Figure 9.4.5** Notice that the threads on a right hand threaded screw angle up to the right, while those on a left-hand threaded screw angle up to the left. Note that turning a screw upside-down does not reverse the direction of its threads.

The motion of left-hand screws can either be thought of as opposite the right-hand rule or conforming to the same relationships if you use your left hand.

### 9.4.2 Screw thread properties

For computational simplicity, all screw problems in this course will focus on square-threaded screws. Note that other threading shapes (like Acme or Trapezoidal threads) are also common, but their angled threads increase the computational complexity. The easiest way to analyze a square-thread power screw system is to turn the problem into a two-dimensional problem by "unwrapping" the ramp from around the cylinder of the shaft. We can summarize the geometry of the screw using two values (1) the mean radius of the screw ( $r$ ) and secondly the lead ( $l$ ) (also called the pitch), which is the distance between two adjacent threads. Alternately, you can compute the lead by computing the inverse of the threads-per-inch or centimeter. With a single thread design, this will also be the number of times the thread wraps around the screw in one inch/centimeter.

To visualize these terms, we can imagine unwrapping a thread from around the screw, as seen below.

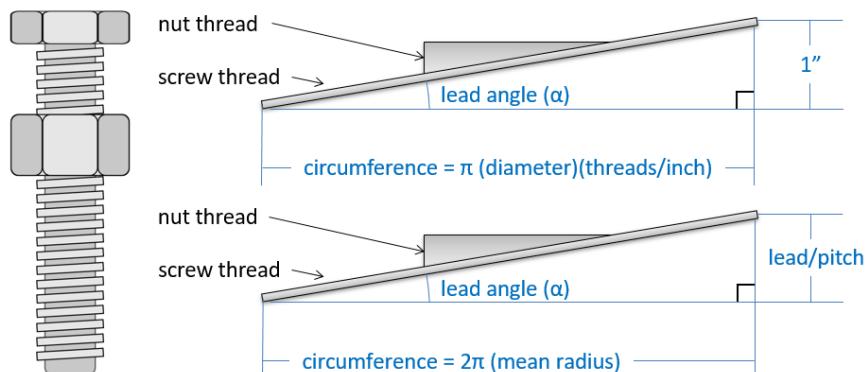

**Figure 9.4.6** Notice that the threads on a right hand threaded screw angle up to the right, while those on a left-hand threaded screw angle up to the left. Note that turning a screw upside-down does not reverse the direction of its threads.

Using the right triangle shown in [Figure 9.4.6](#), we see that the thread pitch  $\alpha$  (also known as the lead angle or helix angle) is the inverse tangent of the ratio of the lead over the circumference

$$\alpha = \tan^{-1} \left( \frac{l}{2\pi r} \right)$$

### 9.4.3 Moments to reach impending motion

1. The focus of all screw problems covered by this book is to find the required rotational moment to push a screw to impending motion. As impending motion is the threshold between the system holding still and moving, your knowledge of the moments required at impending motion allows you to interpret what happens to the screw system in static-but-not-impending conditions as well.


2. Since all friction is impending, we will use the coefficient of static friction  $\mu_s$  and the related friction angle  $\phi_s$ . Recall from earlier in this chapter, that the friction angle  $\phi_s$  can be related directly to  $\mu_s$  the by the equation:

$$\phi_s = \tan^{-1} \left( \frac{F}{N} \right)$$

We now have the tools assembled to derive the relationship between a screw's geometry and applied loads.

### 9.4.4 Screws where the applied force opposes impending motion


The first scenario we will examine is the amount of moment  $M$  required to raise a screw to impending motion against the applied force  $W$  ([Figure 9.4.7](#)). To eliminate any references to the orientation of the screw and force (like upward, downward, left, or right), this type of motion will be described as “the applied force opposes impending motion.” This case occurs any time you are applying a force to an object with a screw (like tightening a clamp).

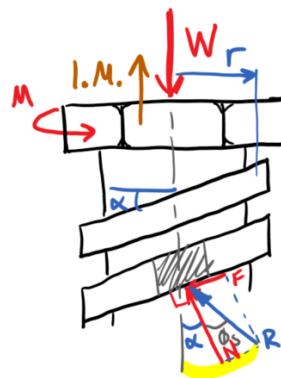

Weight against screw motion

**Figure 9.4.7** Free body diagram showing the moment  $M$  required to raise a load  $W$  given the friction  $F$  and normal force  $N$  on a single thread of a screw interacting with a nut.

For screw analysis, it is often easiest to express the friction force  $F$  and normal force  $N$  as the friction resultant  $\mathbf{R}$  and the friction angle  $\phi_s$ . Recall that the friction force  $F$  direction always opposes the impending motion of the point of contact – in this case, the screw threads. Also, the thread angle  $\alpha$  determines the angle of the normal force  $N$  from the centerline of the screw. Finally, the friction angle  $\phi_s$  is the angle between the friction resultant force  $\mathbf{R}$  and the normal force  $N$ .

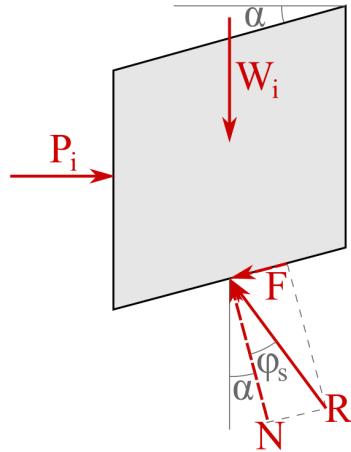

**Figure 9.4.8** FBD of single thread element.  $W_i$  is the fraction of the total weight on this element, and the total moment  $M$  is represented by the fraction of the rotational force  $P_i$  acting at the mean radius  $\ell$  from the center of the screw ( $M_i = r P_i$ ).

Summing the forces in the  $x$  and  $y$  directions for the FBD in [Figure 9.4.8](#) yields:

$$\sum F_x = 0$$

$$P_i = R \sin(\alpha + \phi_s)$$

$$\sum F_y = 0$$

$$W_i = R \cos(\alpha + \phi_s)$$

By summing the forces across all elements of one wrap of the screw we find:

$$\begin{aligned}\sum F_x &= 0 & \sum F_y &= 0 \\ \frac{M}{r} &= \Sigma R \sin(\alpha + \phi_s) & W &= \Sigma R \cos(\alpha + \phi_s)\end{aligned}$$

We next need to reduce these two equations to a single equation and also eliminate the difficulty to quantify  $\Sigma R$  term. Thus we solve both equations for  $\Sigma R$ .

$$\begin{aligned}\Sigma R &= \frac{M}{r \sin(\alpha + \phi_s)} \\ \Sigma R &= \frac{W}{\cos(\alpha + \phi_s)}\end{aligned}$$

1. Finally, set these two equations equal to each other and solve for the moment  $M$ .
- 2.


$$M = Wr \tan(\phi_s + \alpha) \quad (9.4.1)$$

1.  $M$  is the moment required to raise the screw to impending motion,  $W$  is the force load on the screw,  $r$  is the mean radius of the screw,  $\phi_s$  is the screw friction angle, and  $\alpha$  is the screw thread pitch.

- 1.
2. Practically, you can interpret from this equation that the moment to move a screw against an applied force must overcome the screw friction (represented by  $\phi_s$ ) and also the component of the weight on the screw (represented by  $\alpha$ ).

#### 9.4.5 Screws where the applied force supports impending motion

When the impending motion of the screw is in the direction of the applied force, we can also state that the “applied force supports impending motion.” This case occurs any time you remove a force held by a screw (like loosening a screw clamp). This motion case is a bit more complicated than the force opposing impending motion, as there are three different cases determined by the relative magnitude of the friction angle  $\phi_s$  and the thread angle  $\alpha$ . The basic derivation and variables in the case-specific equations below are quite similar to the derivation for (9.4.1), but use subtly different FBDS (see [Figure 9.4.9](#) below).

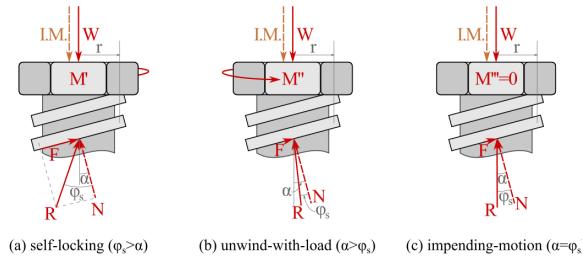

**Figure 9.4.9** Free body diagrams for the three cases where the impending motion of the screw is in the direction of the force on the screw. Cases include (a) a self-locking screw ( $\phi_s > \alpha$ ), (b) a screw that will unwind-with-load ( $\alpha > \phi_s$ ), and (c) a screw at impending motion ( $\phi_s = \alpha$ ). Note that in all three cases, the thread angle  $\alpha$  also determines the angle of the normal force  $\mathbf{N}$  from the centerline of the screw, and the friction angle  $\phi_s$  is the angle between the friction resultant force  $\mathbf{R}$  and the normal force  $\mathbf{N}$ .

**Self-locking screw** ( $\phi_s > \alpha$ ) Self-locking screws are the typical type of screws that you will encounter in mechanical systems as they are highly predictable. They have sufficient friction available to hold their applied load even with no moment applied. Thus, they would be safely carrying the load in a static-but-not impending condition until you wish to overcome the excess friction by using a moment  $M'$  to push them to impending motion.

$$M' = W r \tan(\phi_s - \alpha) \quad (9.4.2)$$

**Unwind-with-load screw** ( $\phi_s < \alpha$ ) - As its name implies, an unwind-under-load screw will start turning unless a moment  $M''$  is applied to keep the screw at (or beyond) impending motion. Note that the moment to push a self-locking screw to impending motion  $M'$  is in the opposite direction as the moment to keep unwind-under-load screws at impending motion  $M''$ , as  $M''$  is in the same direction as the moment to loosen (or raise) a screw. These unwind-with-load screws are not often found in mechanical systems, except for in dynamic motion control systems, where the screw is used to slow down motion. To be designed in an unwind-with-load condition, a screw must have a quite steep thread angle  $\alpha$  and minimal friction between the threads and nut, which reduces  $\phi_s$ .

$$M'' = W r \tan(\alpha - \phi_s) \quad (9.4.3)$$

**Impending-motion screw** ( $\phi_s = \alpha$ ) - As the derived equations for all three unwind-with-load screw cases push the screw to impending motion if a screw is already at impending motion, it requires no applied moment. Note that this case is mechanically unstable. If the load increases, the screw will begin to unwind-under-load, whereas if the load decreases, the screw will become self-locking.

$$M''' = 0 \text{ when } \phi_s = \alpha \quad (9.4.4)$$

The concept of an applied force in the direction of impending motion works for either (1) a force applied in the impending motion direction of a screw, or (2) a

force applied to the impending motion direction of a nut. The first case holds in the derivation and [Figure 9.4.9](#) above, and the second could be seen in an example of a screw jack on a car that has a rotating but non-translating screw, plus a non-rotating but translating nut.

For an alternate derivation of the screw equations based upon wedges, please see the appendix.

**Thinking Deeper 9.4.10 Absolute vs. Relative Motion of Screw and Nut.**  
Thinking Deeper - Absolute vs. Relative Motion of Screw and Nut [box]

As we have seen, screws typically rotate but can be designed to for the screw or nut to translate depending on the intended use. To better understand the use of screws and nuts, it is valuable to learn about the differences between absolute and relative motion. Absolute motion is the motion you observe from a stationary reference point. The speed of a car or the velocity of the wind are all typically measured from an absolute (or non-moving) reference frame. When we choose to measure the same terms from a moving reference frame, they are considered relative motion terms. For example, the velocity of a car relative to a moving train is a relative velocity term. We typically label absolute velocity with a single variable subscript, like the velocity of car  $C$  could be written  $\mathbf{v}_C$ . Relative velocities we write with a slash between the two moving objects, like a fraction in the subscript. So, the velocity of the car  $C$  relative to the moving train  $T$  is written  $\mathbf{v}_{C/T}$ . The relationship between the absolute and relative velocities of two particles can be written as:

$$\mathbf{v}_C = \mathbf{v}_T - \mathbf{v}_{C/T} \text{ or}$$

$$\mathbf{v}_{C/T} = \mathbf{v}_C - \mathbf{v}_T$$

The relative motion of a fixed object can also be measured from the reference frame of a moving object. Thus, we find that the stop sign's relative velocity with respect to a moving car is equal and opposite to the car's absolute velocity.

$$\mathbf{v}_{S/C} = \mathbf{v}_S - \mathbf{v}_C$$

but since the velocity of the stop sign is zero,

$$\mathbf{v}_{S/C} = -\mathbf{v}_C.$$

The same concept can be applied to screws and nuts. In a system where a screw both translates and rotates, but the nut is stationary, you would find that the relative translation direction of the nut is equal and opposite to the absolute translation of the screw. We will use relative motion for this and other friction topics in Statics also heavily in Dynamics.

## 9.5 Flexible Belt Friction

### Key Questions

- Use the impending motion of the system to determine which side of the belt will have a higher tension
- Compute the contact angle  $\beta$  between the belt and pulley or cylinder
- Compute the tension differential on either side of the belt or cylinder for both flat and v-belts
- Compute the maximum torque transfer available from a pulley system

When a belt, rope, or cable is wrapped around an object, there is potential for flexible belt friction. In cases such as a rope over a tree branch being used to lift an object (example in [Figure 9.5.1](#) below), the friction forces resist motion. In other cases, such as a belt-driven system (example in [Figure 9.5.2](#) below), the friction forces help transfer power from one pulley to another pulley.




**Figure 9.5.1** If we were to pass a rope over a tree branch to help lift a heavy object, there would be a tension differential between sides of the rope due to friction resisting the rope's motion relative to the tree branch.



**Figure 9.5.2** In many belt-driven systems, friction keeps the belt from slipping on the pulley, which allows the belt to transfer forces from one pulley to another.


To evaluate flexible belt friction, we start a flat, massless belt passing over a cylindrical surface. If we have an equal tension at each end of the belt, the belt experiences a distributed normal force, which varies as a function of the angle between

the contact surface of the belt and the direction the belt tension forces are pulling (Figure 9.5.3).

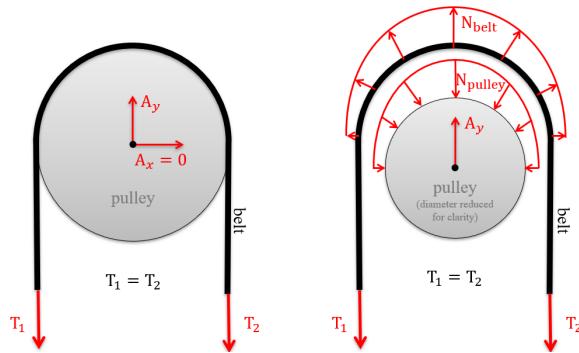

**Figure 9.5.3** With equal tensions on each side of the belt, the only interaction force between the belt and pulley is a non-uniform distributed force.


If there were no friction between the belt and cylinder, if we were to increase the tension on one side of the rope, it would begin to slide across the cylinder. However, if friction is available between the rope and the surface, the friction force will oppose the sliding motion (Figure 9.5.4)

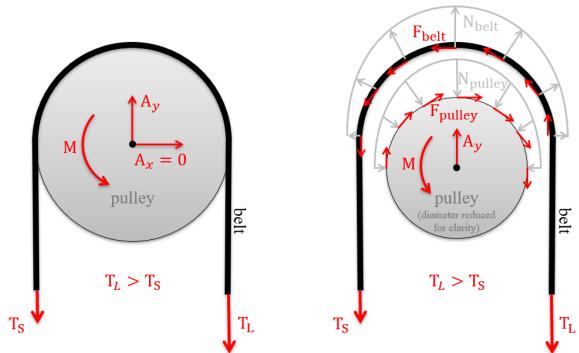

**Figure 9.5.4** With unequal tensions, a distributed friction force along the surface of the belt opposes the impending motion of the belt due to the tension differential. The distributed normal forces still exist but have been grayed-out to highlight the equal and opposite friction forces  $\mathbf{F}_{\text{belt}}$  and  $\mathbf{F}_{\text{pulley}}$ . Additionally, the pulley needs a couple-moment  $\mathbf{M}$  to remain static, resisting the effects of  $\mathbf{F}_{\text{pulley}}$ .

### 9.5.1 Friction in Flat Belts

There are two belt shapes discussed in this chapter, flat belts and v-belts (Figure 9.5.5). We start with the analysis of flat belts as they are the simpler of the two.

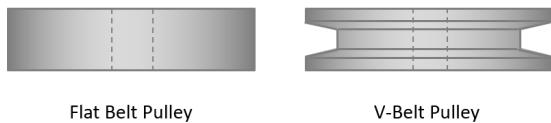


**Figure 9.5.5** A flat belt pulley (left) only interacts with the bottom surface of the belt or cable. A v-belt pulley (right) has a groove, and the belt interacts with the sidewalls of the groove.

When analyzing systems with belts, we are usually interested in the range of values for the tension forces where the belt does not slip relative to the surface. Starting with the smaller tension force on one side  $T_S$  we can increase the second tension force  $T_L$  to some maximum value before slipping. For a flat belt, the maximum value for  $T_L$  depends on the magnitude of  $T_S$ , the static coefficient of friction between the belt and the surface, and the contact angle between the belt and the surface  $\beta$  given in radians.

### 9.5.2 Finding the contact angle $\beta$

On flexible belt problems, you need to translate the geometry of the incoming angles of each belt into a contact angle  $\beta$  between the belt and pulley. The easiest way to do this is to create one or more right triangles using the incoming and outgoing belt paths and work through the various complementary angles to transfer the belt geometry into a contact angle  $\beta$  (see example in [Figure 9.5.6](#)). There is no simplified rule for transferring cable angles over to the contact angle  $\beta$ , but in general, extend radial lines from the center of the pulley out to the belt's tangential lines. Next, create right triangles with each radial line and work to find all the angles which add up to the contact angle  $\beta$ .

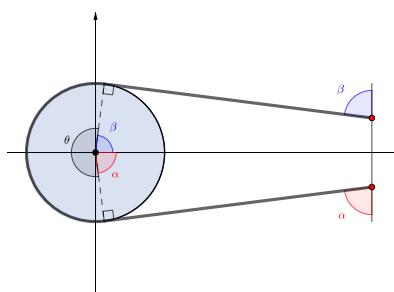


**Figure 9.5.6** In this interactive you can change the directions of the belts and see the relation between the the angles they make with the vertical and the contact angle  $\theta$ .

### 9.5.3 Determining which belt has the largest tension.

Another challenging step in solving flexible belt friction problems is determining which belt has a larger tension  $T_L$  and which has the smaller tension  $T_S$ . Unlike guessing the direction of unknown support forces, this is not a decision that you can make

incorrectly and later learn of your error with a negative value; hence we will guide you through two ways to make this decision up-front.

**Method 1: Draw FBDs and sum tension along the cable.** Draw FBDS and sum tension along the cable. Recall that friction always opposes the motion of the body you are evaluating, thus if you can create an FBD of the cable, you can sum forces along the cable. This equation will verify which tension is larger/smaller.

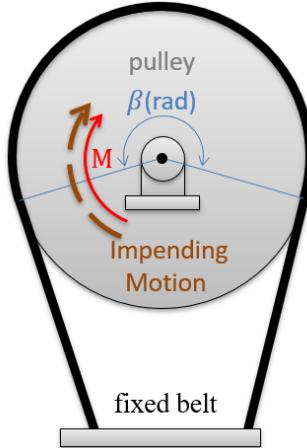


**Figure 9.5.7** The mechanical system of a fixed axis pulley hooked to a motor providing a rotational moment of  $M$  and a fixed belt designed to hold the pulley static. Note that the wheel and belt are considered massless (thus do not have a weight) in this example.

The first FBD shows the following forces acting on the wheel:


- Pin forces ( $O_x$  and  $O_y$ ) from the support at the center
- A distributed normal force  $\sigma N$  acting radially along the contact surface between the wheel and belt
- A distributed friction force  $\sigma F$  acting along the surface of the wheel which is opposing the moment  $M$  and thus the impending motion (I.M.) of the wheel

The second FBDS shows how the contact forces on the wheel are transferred equal and opposite to the belt:

- A distributed normal force  $\sigma N$  acting radially along the contact surface between the wheel and belt
- A distributed friction force  $\sigma F$  acting along the surface of the belt, which is now opposing the relative impending motion of the belt (which is opposite the absolute impending motion of the wheel).
- Cutting the belt exposes the tension forces within.

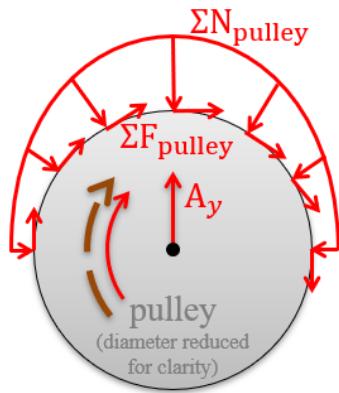

**Figure 9.5.8** First Free Body Diagram

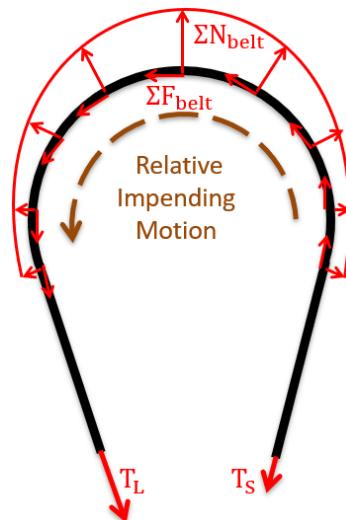

**Figure 9.5.9** Second Free Body Diagram

Finally, the forces along the belt are in must be in equilibrium to keep the acceleration equal to zero. We see in this equation that the tension  $T_1$  plus the distributed friction force  $\Sigma F$  add together to equal  $T_2$ . Therefore,  $T_2$  must be larger  $T_L$  and  $T_1$  smaller  $T_S$ .


$$\begin{aligned}\Sigma F_{\text{axial}} &= 0 \\ T_2 - T_1 - \Sigma F_{\text{belt}} &= 0 \\ T_2 &= T_1 + \Sigma F_{\text{belt}}\end{aligned}$$

**Method 2: Larger tension is always in the direction of the impending motion of the belt.** Following the logic of Method 1, it turns out that the larger tension  $T_L$  is always in the direction of the impending motion of the belt. It does not matter if the belt motion is relative (like in the example for Method 1 above) or absolute, the larger tension is always in the impending motion of the belt. If you are still learning the differences between relative and absolute motion, see the section above.

There are likely other robust ways to determine the smaller and larger sides of tension in a flexible belt system; make sure you learn a method that works for both potentially moving and also fixed-belt systems.

#### 9.5.4 Finding the change in belt tension due to friction

As shown graphically in Figure 9.5.9 above, the friction force engages along the contact surface of the pulley and belt. Zooming in on a single differential element of the belt below in Figure 9.5.10, we will further see the effect of the friction force on the tension within the belt.

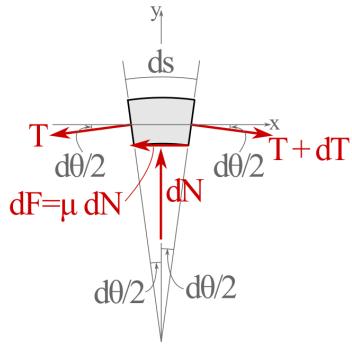

**Figure 9.5.10** Differential element of a flexible belt with applied normal force  $dN$ , friction force  $dF$ , and internal tensions  $T$  and  $T + dT$ .

First, sum the forces in the  $x$  direction in Figure 9.5.10.

$$\begin{aligned}\sum F_x &= 0 \\ \mu dN + T \cos(d\theta/2) &= (T + dT) \cos(d\theta/2) = 0 \\ \mu dN &= dT \cos(d\theta/2)\end{aligned}$$

As  $d\theta$  approaches zero,  $\cos(d\theta/2) \rightarrow 1$ , so in the limit,

$$dN = \frac{\mu}{dT}$$

Now summing forces in the  $y$  direction,

$$\begin{aligned}\sum F_y &= 0 \\ dN &= T \sin(d\theta/2) + (T + dT) \sin(d\theta/2) = 0 \\ dN &= (2T + dT) \sin(d\theta/2) \\ &\approx 2T(d\theta/2) + dT(d\theta/2)\end{aligned}$$

Where we have used the small angle approximation  $\sin(d\theta/2) \approx d\theta/2$ . Dropping the second order differential term  $dT d\theta$  as negligible, yields

$$dN = T d\theta$$

Solving simultaneously by eliminating  $dN$  leaves us with

$$\frac{dT}{T} = \mu d\theta,$$

which we can integrate between  $T_S$  and  $T_L$  to find

$$\int_{T_S}^{T_L} \frac{dT}{T} = \mu \int_0^\beta d\theta$$

$$\ln \frac{T_L}{T_S} = \mu \beta$$

1. or by solving for  $T_L$  we find


$$T_L = T_S e^{\mu \beta},$$

where  $T_L$  is the larger tension pulling on the belt,  $T_S$  is the smaller tension pulling on the belt,  $e$  is the natural log base 2.718,  $\mu$  is the friction coefficient between the belt and pulley, and  $\beta$  is the contact angle between the belt and pulley in radians.

Notice that the differential belt tension is independent of the surface size and shape, provided the belt makes continuous contact.

### Friction in V-belts

V-belts fit into a groove on a pulley and thereby increases the normal force of contact with the pulley sides (see Figure 9.5.11 below). This increase in normal force sequentially increases the contact friction. The belt must only contact the sides and not the groove base to maintain this friction advantage.

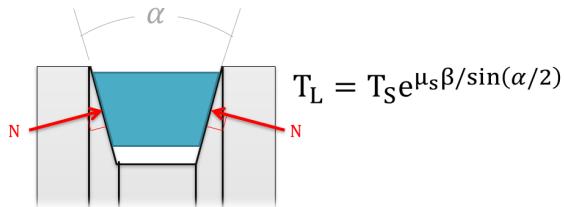


**Figure 9.5.11** A V-belt's "enhanced" friction comes from the increased normal forces, which are a function of the groove angle  $\alpha$ . The sum of the normal force vertical components is the same for a flat belt or V-belt. However, the horizontal components of the normal forces in a V-belt, effectively pinch the belt, thereby increasing the available friction force.

As we can see from the equation above, steeper sides to the groove (corresponding to a smaller groove angle  $\alpha$ ) result in an increased potential difference in the tension forces. The trade-off with steeper sides, however, is that the belt becomes wedged more firmly in the groove and requires a higher force to unwedge itself as it leaves the pulley. This unwedging force decreases the efficiency of the belt-driven system. An alternate design choice would be a chain-driven system which carries very high-tension differences more efficiently.

### Torque in belt systems

In belt-driven systems, there is usually an input pulley and one (or more) output pulleys. To determine the maximum torque or power that can be transmitted by the belt, we will need to consider each of the pulleys independently, understanding that slipping occurring at either the input or the output will result in a failure of the power transmission.

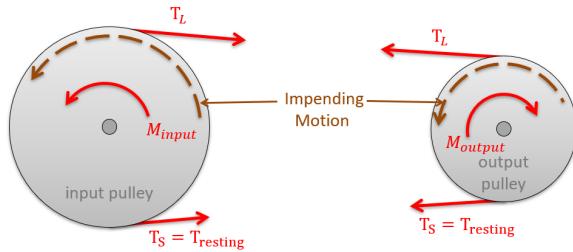

**Figure 9.5.12** A belt-driven set of fixed axis pulleys. Note that the direction of the input moment is opposite that of the resisting output moment, but the impending motion is the same for both pulleys.

The first step in determining the maximum moment (or torque) that can be transmitted in the belt drive is to determine the maximum possible value for  $T_L$  before slipping occurs at either the input or output pulley. To start this process, we you will need to start by solving for the resting tension. This resting tension is the tension the belts prior to anything moving or power transfer (analogous to the tension in your bike chain when it is at rest). Practically, if you wish to increase or decrease the resting tension, many machines have adjustments to increase or decrease the distance between the pulleys slightly. If we turn on the machine and increase the moments on both pulleys, the resting tension  $T_S$  remains constant while the tension on the drive side  $T_L$  increases.

If the pulleys are the same material (and therefore the same coefficients of friction), it can be assumed that the belt will first slip at the smaller of the two pulleys as the smaller pulley has a smaller contact angle  $\beta$ .

Once we have the maximum value for  $T_L$ , we can use that to find the maximum input and output moments. Next, to find the torque, we then find the net moment exerted by the two tension forces, where the radius of the pulley is the moment arm.

The maximum input torque  $M_i$  before slipping is

$$M_i = (T_{L\max} - T_S)r_{\text{input}}$$

The maximum output torque  $M_o$  before slipping is

$$M_o = (T_{L\max} - T_S)r_{\text{output}}$$

To find the maximum power we can transfer with the belt drive system, we will use the rotational definition of power, where the power is equal to the torque times the angular velocity in radians per second. Unlike the torque, the power at the input and the output will be the same, assuming no inefficiencies.

$$P_{\max} = M_i(\omega_{\text{input}}) = M_o(\omega_{\text{output}}) \quad (9.5.1)$$

## 9.6 Journal Bearing Friction

### Key Questions


- Draw a problem sketch and FBD of a journal bearing system including the appropriate shift in contact point due to impending rotation
- Solve for unknown values associated with journal bearing

#### 9.6.1 Journal Bearing Friction

A bearing is a machine element used to support a rotating shaft. Bearing friction is the friction that exists between the rotating shaft and the supporting bearing. Though many types of bearings exist (journal, ball, roller, hydrodynamic), in this course, we only focus on dry friction journal bearings. Most bearings are lubricated and thus require knowledge of fluids to analyze, but dry friction journal bearings have a single contact point between the shaft and bearing (as shown in [Figure 9.6.1](#) below). While the single contact point makes them solvable in statics, the single contact point would be subject to wear and heat build-up if used for long-duration motion; thus, the use of journal bearings is only advisable in situations where there is limited motion.


#### 9.6.2 Journal bearings with a rotating shaft and a fixed bearing

A journal bearing consists of a circular shaft fitted into a slightly larger circular bearing, as shown in [Figure 9.6.1](#). The application of a standard journal bearing includes a rotating shaft, which is also exerting a load  $F_{\text{load}}$  onto the bearing. The friction force and shaft rotation cause the shaft to climb up the side of the bearing.

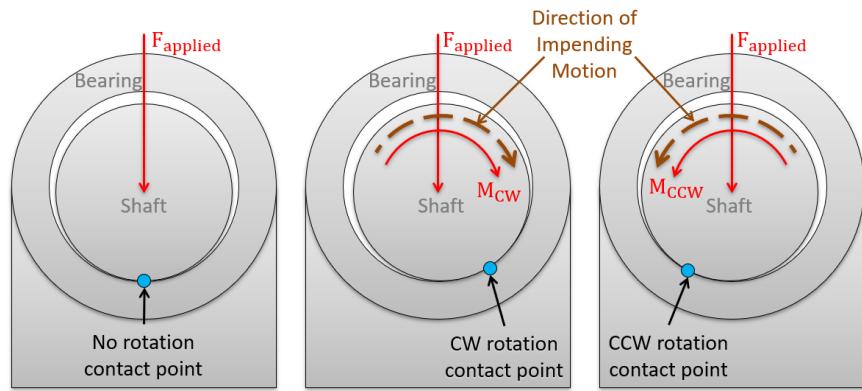

**Figure 9.6.1** (left) In a journal bearing like the one shown here with a vertical force applied to the shaft, the contact point is located along the line of action of the applied force. (middle) If a CW couple-moment  $M_{\text{CW}}$  attempts to rotate the shaft, then the contact point will move to the right as the friction force between the shaft and bearing causes the surfaces to stick, and the shaft climbs up the bearing until impending motion is reached. (right) If a CCW couple-moment  $M_{\text{CCW}}$  is applied, then the contact point will shift to the left as the friction force between the shaft and bearing causes the surfaces to stick, and the shaft climbs up the bearing until impending motion is reached.

Now that you have learned the underlying physical interaction between a shaft and journal bearing, let us transition to the forces which support this interaction. If we create FBDS's for the shaft in all three cases presented in Figure 9.6.1 above, we see a combination of a normal force  $\mathbf{N}$  and a friction force  $\mathbf{F}$  at each contact point (in Figure 9.6.2 below).

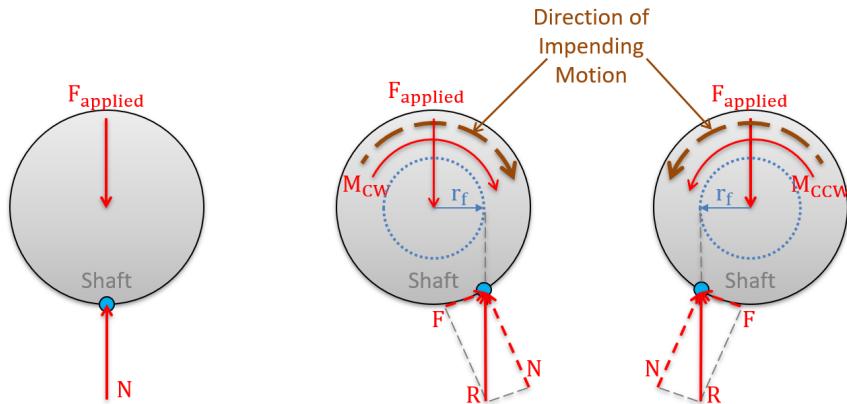

**Figure 9.6.2** The shafts in the three journal bearings above can be turned into FBDS's by replacing the bearing and contact point with the forces which act through the contact point. Note in all three cases the normal force  $\mathbf{N}$  perpendicular to the tangential line of contact, which makes its line of action a radial line through the center of each shaft. Additionally, (left) there is no friction engaged, (middle) the friction resists the CW moment, and (left) the friction resists the CCW moment. The friction circle (radius  $r_f$ ) is explained in the steps below

The most straightforward process to accurately relate the normal and friction forces for a journal bearing is by performing the following steps:

1. First, assume for measured distances that the shaft and bearing opening have the same radius, but always draw the shaft a bit smaller so you can see its contact point with the bearing. Drawing them the same size will make it look like the shaft and bearing are in contact all the way around, which would violate our assumption of a single point of contact.
2. Next, combine the normal and friction forces into a single friction resultant force (as presented in the first section of this chapter)

$$\mathbf{R} = \mathbf{F} + \mathbf{N}.$$


3. The friction resultant can then be assumed to be tangential to a “friction circle.” The friction circle is an imaginary circle of radius  $r_f$  around the center of the shaft and is a function of the radius of the shaft ( $r$ ) and the friction angle  $\phi_s$ .

$$r_f = r \sin \phi_s \text{ where, } \phi_s = \tan^{-1} \mu_s$$

4. Finally, draw your FBD of the shaft (and/or bearing) with all applied loads and the friction resultant  $\mathbf{R}$  and then use your equations of equilibrium to solve the problem.

### 9.6.3 Journal bearings with a fixed shaft and a rotating bearing

Another type of journal bearing is designed with a fixed shaft and a rotating bearing. While the solution process is quite similar to the process covered above, the main difference is that you will draw an FBD of the rotating bearing (instead of the shaft) for this case.

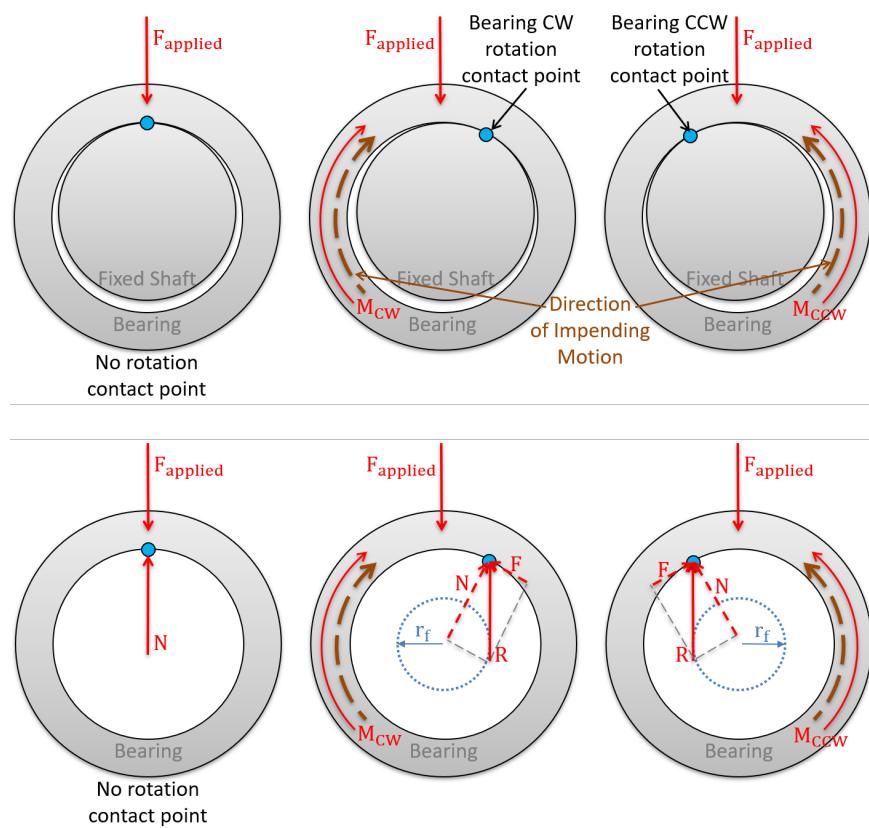

**Figure 9.6.3** Problem sketches (top) and FBDS (bottom) for journal bearings with a fixed shaft and rotating bearing. The left set of drawings has no moment applied. The middle set has a CW moment applied to the bearing, and the right set have a CCW moment applied to the bearing.

**Thinking Deeper 9.6.4 Finding the direction of shift for contact point.** If you are still struggling to determine the direction of the contact point shift, try this rule:

The contact point always shifts in the direction of the impending motion of the bearing.

The impending motion can be absolute (in the case of a fixed shaft and rotating bearing) or relative (in the case of a fixed bearing). Remember, the relative motion of the bearing is always opposite the absolute impending motion of the shaft.

## 9.7 Disc Friction

### Key Questions

- Select the appropriate disc friction equation among those for hollow circular areas, solid areas, and disc brakes with a circular arc and
- Compute the possible moment the friction forces from disc friction can resist.

#### 9.7.1 Disc Friction


Disc friction is the friction that exists between a rotating body and a stationary surface. Disc friction exerts a moment on the bodies involved which resists the relative rotation of each bodies. Disc friction is applicable to a wide variety of designs including end bearings, collar bearings, disc brakes, and clutches.



**Figure 9.7.1** This orbital sander rotates a circular sanding disc against a stationary surface. The disc friction between the sanding disc and the surface will exert a moment on both the surface and the sander.


#### 9.7.2 Collar bearing with a hollow circular contact area

To start our analysis of disc friction we will use the example of a collar bearing, which has a hollow circular contact area between the rotating collar and the stationary surface ([Figure 9.7.2](#)). In this type of bearing, we will have a rotating shaft traveling through a hole in a surface. The shaft is supporting some load force as shown and a collar is used to support the shaft itself.

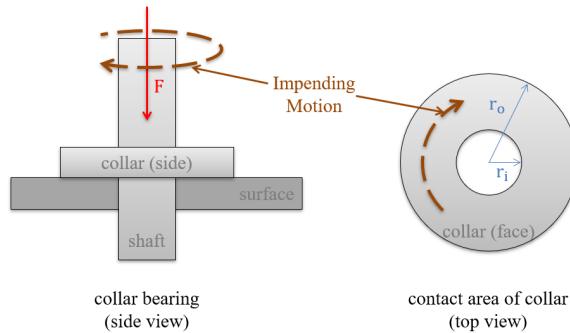

**Figure 9.7.2** A collar bearing has a donut shaped contact area between the rotating collar and the stationary surface. The shaft transfers the applied load

The friction force at any point in the contact area will be equal to the normal force at that point times the kinetic coefficient of friction at that point. If we assume a uniform pressure between the collar and the surface and a uniform coefficient of friction, then we will have the same friction force exerted at all points. This does not translate however into an equal moment exerted by each point. Points further from the center of rotation will exert a larger moment than points closer to the center of rotation because they will have a larger moment arm.

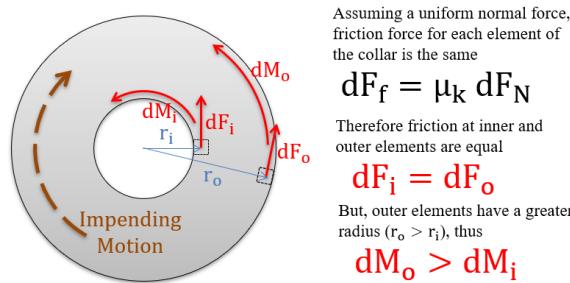

**Figure 9.7.3** The friction forces on any differential element are assumed to be the same (due to a uniformly distributed normal force), yet elements along the outside edge of the contact area will cause a larger moment than those in the inside edge due to a greater radius.

To determine the total moment exerted by the friction forces, we will need to integrate the friction from all elements of the contact area. The moment of each element ( $dM$ ) will be equal to the product of the kinetic coefficient of friction ( $\mu_k$ ), the normal force pressure ( $p$ ), the distance from that point to the center of rotation ( $r$ ), and the area of each element ( $dA$ ).

$$dM = \mu_k p r dA$$

The total friction moment can be found by integrating the moment of each element over the contact area:

$$M = \int_A dM = \int_A \mu_k p r dA$$

To simplify the equation we can move the constant coefficient of friction and the constant normal force pressure term outside of the integral. We can also replace the

pressure term with the applied force on the bearing over the contact area. Finally, so that we can integrate over the range of  $R$  values, we can recognize that the rate of change in the area ( $dA$ ) for the hollow circular areas is simply the rate of change of the  $r dr$  term time the circumference of the circle at  $r$ . These changes lead to the equation below.

$$M = \mu_k \left( \frac{F}{\pi(r_o^2 - r_i^2)} \right) \int_{r_i}^{r_o} r (2\pi r) dr$$


Finally, we can evaluate the integral from the inner radius to the outer radius. If we evaluate the integral and simplify we will end up with the final equation below.

$$M = \frac{2}{3}\mu_k F \left( \frac{r_o^3 - r_i^3}{r_o^2 - r_i^2} \right) \quad (9.7.1)$$

### 9.7.3 End bearing with a solid circular contact area

In cases where we have a solid circular contact area such as with a solid circular shaft in an end bearing or with the orbital sander shown at the top of the page we simply set the inner radius to zero and we can simplify the formula. If we do so, the original formula is reduced to the equation below.


$$M = \frac{2}{3}\mu_k Fr_o \quad (9.7.2)$$

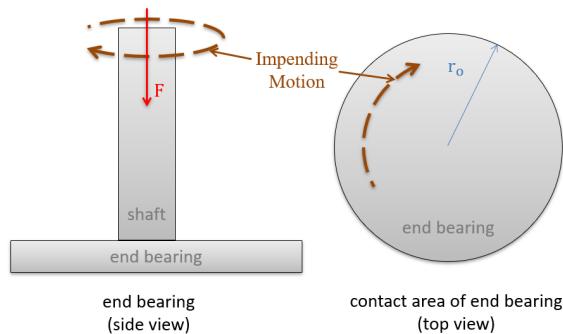

**Figure 9.7.4** An end bearing has a solid circular contact area between the rotating shaft and the stationary bearing.

### 9.7.4 Disc brakes with a circular arc

Disc brakes have a contact area that looks like a section of the hollow circular contact area we covered earlier.

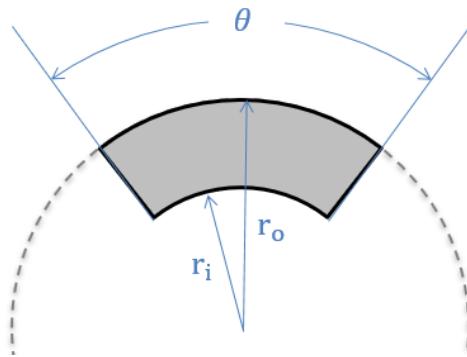

**Figure 9.7.5** The contact area in disc brakes is often approximated as a circular arc (inner radius  $r_i$  and outer radius  $r_o$ ) with a given contact angle ( $\theta$ )

However, disc brakes, due to their smaller contact area, have both smaller area over which to exert friction force and also higher pressure for the same applied force. In the end, these factors cancel each other out and we end up with the same formula we had for the hollow circular contact area (independent of  $\theta$ ).

Brake pad on one side:

$$M = \frac{2}{3}\mu_k F \left( \frac{r_o^3 - r_i^3}{r_o^2 - r_i^2} \right) \quad (9.7.3)$$

Most disc brakes, however, have a pair of pads (one on each side of the rotating disc), so we will need to double the moment in our equation for the usual pair of pads.

Brake pads on each side:

$$M = \frac{4}{3}\mu_k F \left( \frac{r_o^3 - r_i^3}{r_o^2 - r_i^2} \right) \quad (9.7.4)$$

## 9.8 Exercises

# Chapter 10

## Moments of Inertia

Area moments of inertia are a measure of the distribution of a two-dimensional area around a particular axis. Fundamentally, the portions of a shape which are located farther from the axis are more important than the parts which are closer. The primary application is in structural engineering and machine design where they are used to determine a structural member's stiffness. Another application is in Fluid Mechanics where they are used to determine the effect of pressure on a submerged surface. We will use the symbol  $I$  for this property, along with a subscript to indicate the specific axis, so for example,  $I_x$  would indicate the “Area moment of inertia with respect to the  $x$  axis.”

**Warning 10.0.1** The *mass* moment of inertia you learned about in Physics is not the same as the *area* moment of inertia in Statics!

This can be confusing since both are commonly shortened to “moment of inertia” and both use the same symbol,  $I$ . They have different units however, and the intended moment of inertia can easily be determined from context or with a unit analysis.

### 10.1 Integral Properties of Shapes


#### Key Questions

- Why does the area moment of inertia integral equation include a distance squared term?
- When performing a single integral, either  $dx$  or  $dy$ , what is your differential element  $dA$  shape?

As you know, two dimensional shapes like rectangles and circles have properties such as area, perimeter, and centroid. These are purely *geometric* properties since they belong to the shape alone, in contrast to *physical* properties like weight and mass which belong to real physical objects.

In this section we introduce several new geometric properties useful in engineering including the **Area Moment of Inertia**.

The integral properties of shapes, along with the names and symbols commonly used to represent them are given in the table below. You are already familiar with *area* from Geometry and the *first moment of area* from [Chapter 7](#). The remaining properties are the subject of this chapter. They all have a similar form, and can be evaluated using similar integration techniques.

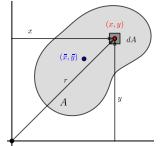

**Figure 10.1.1** Definitions for area properties

This interactive diagram defines the terms which apply to all of the property definitions below. It shows a generic plane area  $A$ , divided into differential elements  $dA = dx dy$ . The differential element  $dA$  is an infinitesimally tiny rectangle centered about point  $(x, y)$ , which can range over the entire area. The distances to the element from the  $y$  axis, the  $x$  axis and the origin are designated  $x, y$ , and  $r$  respectively. The centroid of the entire area is located at  $(\bar{x}, \bar{y})$ .

Definition	Name	More Information
$A = \int_A dA$	Area	<a href="#">Subsection 7.7.2</a>
$Q_x = \int_A y \, dA$	First Moment of Area (with respect to the $x$ axis)	<a href="#">Chapter 7</a>
$Q_y = \int_A x \, dA$	First Moment of Area (with respect to the $y$ axis)	<a href="#">Chapter 7</a>
$I_x = \int_A y^2 \, dA$	Second Moment of Area, or Moment of Inertia (with respect to the $x$ axis)	<a href="#">Section 10.2</a>
$I_y = \int_A x^2 \, dA$	Second Moment of Area, or Moment of Inertia (with respect to the $y$ axis)	<a href="#">Section 10.2</a>
$J_O = \int_A r^2 \, dA$	Polar Moment of Inertia	<a href="#">Section 10.5</a>
$I_{xy} = \int_A x \, y \, dA$	Product of Inertia	<a href="#">Section 10.7</a>

All of these properties are defined as integrals over an area  $A$ . These integrals may be evaluated by double-integrating over  $x$  and  $y$  in Cartesian coordinates or  $r$  and  $\theta$  in polar coordinates. They can also be evaluated using single integration using the methods demonstrated in [Subsection 10.2.2](#).

None of these integrals can be evaluated until a specific shape is chosen. When shape has been specified, the bounding functions and integration limits can be determined and only then may the integral be solved using appropriate integration techniques. If the shape is specified in general terms, say a rectangle with base  $b$  and height  $h$ , then the result of the integration will be a formula for the property applicable to all similar shapes.

### 10.1.1 Area

The total **area** of a shape is found by integrating the differential elements of area over the entire shape.

$$A = \int_A dA. \quad (10.1.1)$$

The limit on this integral is indicated with an  $A$  to indicate that the integration is carried out over the entire area. The resulting value will have units of [length]<sup>2</sup> and does not depend on the position of the shape on the coordinate plane.

Since the area formulas for common shapes are well known, you only need to use integration in uncommon situations.

### 10.1.2 First Moment of Area

The **first moment of area**, which was introduced in [Chapter 7](#), is defined by these two equations.

$$Q_x = \int_A y \, dA \quad Q_y = \int_A x \, dA \quad (10.1.2)$$

and has units of [length]<sup>3</sup>.

The first moment of area with respect to an axis is a measure of the distribution of the shape about an axis. It depends on the shape and also its location on the coordinate plain. Portions of area on the negative side of the selected axis make the first moment smaller, while areas on the positive side make it larger. If the shape's centroid is located exactly on the axis, the integral will sum to zero because the contributions of area above and below the axis cancel each other.

The average value of the first moment of area is found by dividing the first moment by the area of the shape, and the result indicates the distance from the axis to centroid of the shape.

$$\bar{x} = \frac{\sum \bar{x}_i A_i}{\sum A_i} \quad \bar{y} = \frac{\sum \bar{y}_i A_i}{\sum A_i}.$$

### 10.1.3 Moment of Inertia

The **area moment of inertia**, the subject of this chapter, is defined by these two equations.

$$I_x = \int_A y^2 \, dA \quad I_y = \int_A x^2 \, dA \quad (10.1.3)$$

and has units of [length]<sup>4</sup>.


As you can see, these equations are similar to the equations for the [first moment of area \(10.1.2\)](#), except that the distance terms  $x$  and  $y$  are now squared. In recognition

of the similarity, the area moments of inertia are also known as the **second moments of area**. We will use the terms moment of inertia and second moment interchangeably. These two quantities are sometimes designated as *rectangular* moments of inertia to distinguish them from the polar moment of inertia described in the next section.

Like the first moment, the second moment of area provides a measure of the distribution of area around an axis, but in this case the distance to each element is squared. This gives increased importance to portions of the area which are far from the axis. Squaring the distance means that identical elements on opposite sides of the axis *both* contribute to the sum rather than cancel each other out as they do in the first moment. As a result, the moment of inertia is always a positive quantity.

Two identical shapes can have completely different moments of inertia, depending on how the shape is distributed around the axis. A shape with most of its area close to the axis has a smaller moment of inertia than the same shape would if its area was distributed farther from the axis. This is a non-linear effect, because when the distance term is doubled, the contribution of that element to the sum increases fourfold.

**Question 10.1.2** These three triangles are all the same size. Rank them from largest to largest smallest moment of inertia with respect to the  $y$  axis.

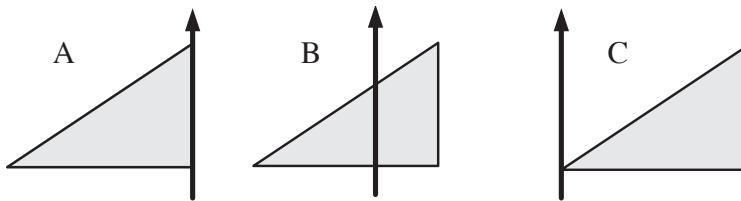

**Answer.** From smallest to largest:  $I_C > I_A > I_B$ .

**Solution.** Although the areas of all three triangles are the same, triangle  $B$  has the area on both sides of the  $y$  axis and relatively close to it, and so has the smallest  $I$ , while triangle  $C$  has the most of its area far from the  $y$  axis which makes its moment of inertia largest. We will be able to show later that the  $I_C = 3I_A = 9I_B$ .  $\square$

Moving a shape away from the axis (or moving the axis away from the shape) increases its moment of inertia, and moving it closer to the axis decreases it, until it crosses to the other side of the axis, and then its moment of inertia will begin to increase again.

The minimum moment of inertia occurs when the centroid of the shape falls on the axis. When this occurs, the moment of inertia is called the **centroidal moment of inertia**. A bar over the symbol  $I$  is used to indicate that a moment of inertia is centroidal. So for example,  $\bar{I}_x$  and  $\bar{I}_y$  represent the “centroidal moment of inertia with respect to the  $x$  axis” and the “the centroidal moment of inertia with respect to the  $y$  axis.” The bar in this case does not mean that moment of inertia is a vector quantity. Note that a shape can have multiple centroidal moments of inertia, because more than one axis can pass through the centroid of a shape. In this text, we will only the vertical and horizontal axes, but they are not the only possibilities.

The centroidal moment of inertia is particularly important. We will see in (10.3.1) that if we know a shape’s centroidal moment of inertia for some axis direction, it is


a simple process to calculate the moment of inertia of the shape about any other parallel axis. The moment of inertia is used in Mechanics of Materials to find stress and deflection in beams and to determine the load which will cause a column to buckle.

We stated earlier that the centroidal moment of inertia is the minimum moment of inertia, but by this we mean, the minimum moment of inertia for a particular axis direction, for example horizontal. Other centroidal axes may have a different moment of inertia, either larger or smaller than the moment of inertia about a horizontal centroidal axis. The centroidal axes which have the absolute minimum and maximum moment of inertia are called the principle axes. The principle axes are not necessarily horizontal and vertical.


**Thinking Deeper 10.1.3 Beam bending.** To get a feel for how moment of inertia affects engineering design, find a ruler, a yardstick, or something similar: long with a rectangular cross section.

Try to bend the ruler both when it's flat and also when it's turned on edge. You will find that bending the ruler around the  $x$  axis while it's flat is easy compared to bending it the other way, around the  $z$  axis. Why is it easier to bend the ruler one way than the other? It's the same object, made of the same material either way.

The answer has to do with the moment of inertia, and how it relates to the bending axis.

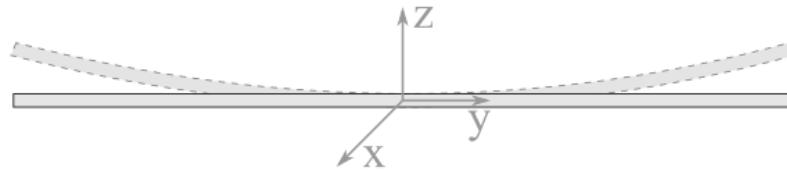

bend ruler when flat around x-axis = EASY

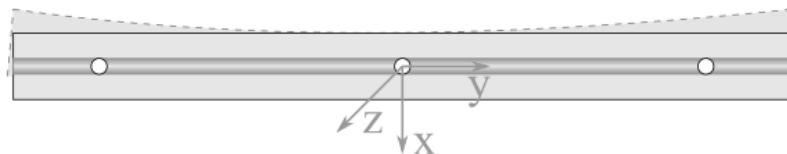

bend ruler on edge around z-axis = HARD


**Figure 10.1.4** Bending a ruler.

As engineers we are not satisfied with merely knowing that it's harder to bend a ruler one way than the other, we'd like to know *how much harder?*

For a 1/8 in thick ruler that is 1 in tall, the bending resistance about the  $z$  axis is over 20 times more than the bending resistance the other way, about the  $x$  axis.

To further see how the moment of inertia comes into play, consider the curvature caused by applying opposing moments to the ends of a beam such as your ruler. You will cause it to bend into an arc of a circle of some radius. A curious engineer would

like to know how the curvature of the beam is related to the applied moment, the geometry, and the physical properties of the beam.

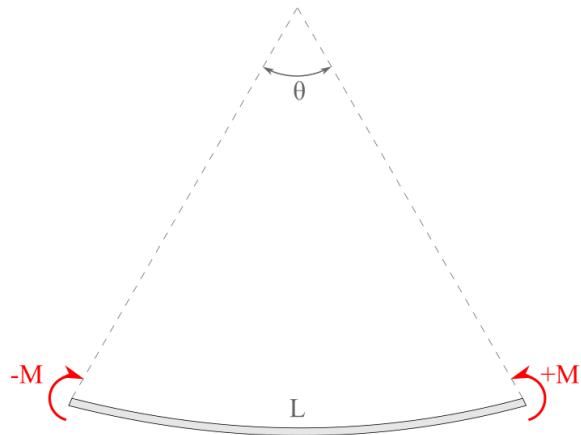

**Figure 10.1.5** Beam of length  $L$  which is being bent by opposing couple-moments to an arc with angle  $\theta$ .

You will learn in Mechanics of Materials that the relationship is:

$$M = \theta \left( \frac{EI}{L} \right) \quad (10.1.4)$$

where:

$E$  is a material property called Young's Modulus or the modulus of elasticity which characterizes the stiffness of a material.

$L$  is the length of the beam, and

$I$  is the moment of inertia of the cross-section of the beam about the bending axis.

$M$  is the moment applied to the ends of the beam, and

$\theta$  is the curvature of the beam.

Since  $E$  and  $I$  are in the numerator and  $L$  is in the denominator, a longer beam is more flexible and larger values of  $E$  or  $I$  make the beam stiffer. With those properties fixed, angle  $\theta$  is directly proportional to the moment  $M$ .

The sag, or **deflection**, of a beam when supporting a load is also related to these factors, and the placement of the load as well. For example, if a beam is loaded with a concentrated force  $P$  at its center its maximum deflection  $\delta_{\max}$  will occur at the midpoint, with

$$\delta_{\max} = \frac{PL^3}{48EI}$$

### 10.1.4 Polar Moment of Inertia

The **polar moment of inertia** is defined as


$$J_O = \int_A r^2 dA \quad (10.1.5)$$

and has units of [length]<sup>4</sup>.

The polar moment of inertia is another measure of the distribution of an area but, in this case, about a point at the origin rather than about an axis. One important application of this value is to quantify the resistance of a shaft to torsion or twisting due to the shape of its cross-section.

**Thinking Deeper 10.1.6 Why don't we call the polar moment of inertia  $I_z$ ?** The squared distance in the polar moment of inertia formula is the distance from the  $z$  axis, so it would seem reasonable to name the polar moment  $I_z$  to be consistent with  $I_x$  and  $I_y$ , which use distances from the  $x$  and  $y$  axes.

Instead engineers use the letter  $J$  to represent this quantity. Why?

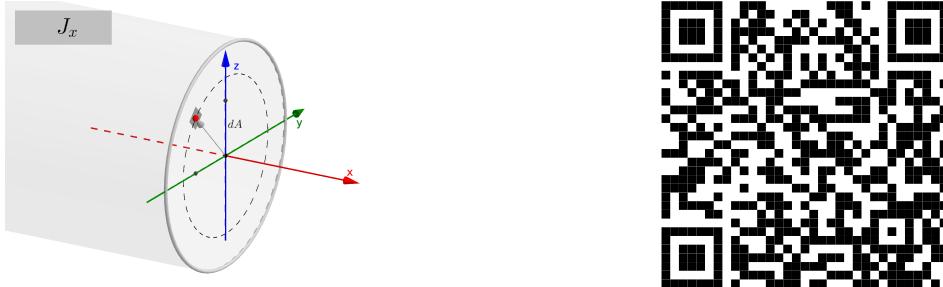

**Figure 10.1.7** In-plane and out-of-plane rotation of element  $dA$  about the  $x$ ,  $y$  and  $z$  axes.

If areas only existed in the  $x-y$  plane, this would be fine, but the real world is three-dimensional, so  $I_z$  must be reserved to use with areas in the  $x-z$  or  $y-z$  plane.

As shown in the interactive, the rectangular moment of inertia  $I$  involves rotating element  $dA$  about out-of-plane around an in-plain axis, and the polar moment  $J$  involves rotating the element in-plane around a perpendicular axis. The two quantities represent fundamentally different things.

### 10.1.5 Product of Inertia

The final property of interest is the **product of inertia** and it is defined as

$$I_{xy} = \int_A xy dA \quad (10.1.6)$$

where  $x$  and  $y$  are defined as in [Figure 10.1.1](#). Like the others, the units associated with this quantity are [length]<sup>4</sup>. The name was chosen because the distance squared term in the integral is the *product* of the element's coordinates. In contrast to the other area moments, which are always positive, the product of inertia can be a positive, negative or zero.


## 10.2 Moments of Inertia of Common Shapes

In following sections we will use the integral definitions of moment of inertia (10.1.3) to find the moments of inertia of five common shapes: rectangle, triangle, circle, semi-circle, and quarter-circle with respect to a specified axis. The integration techniques demonstrated can be used to find the moment of inertia of any two-dimensional shape about any desired axis.

Moments of inertia depend on both the shape, and the axis. Pay attention to the placement of the axis with respect to the shape, because if the axis is located elsewhere or oriented differently, the results will be different.

We will begin with the simplest case: the moment of inertia of a rectangle about a horizontal axis located at its base. This case arises frequently and is especially simple because the boundaries of the shape are all constants.

### 10.2.1 Moment of Inertia of a Rectangle

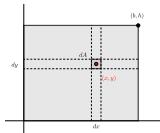

Consider the  $(b \times h)$  rectangle shown. This rectangle is oriented with its bottom-left corner at the origin and its upper-right corner at the point  $(b, h)$ , where  $b$  and  $h$  are constants.

What is the moment of inertia of this rectangle with respect to the  $x$  axis?

To find the moment of inertia, divide the area into square differential elements  $dA$  at  $(x, y)$  where  $x$  and  $y$  can range over the entire rectangle and then evaluate the integral using double integration.

The differential element  $dA$  has width  $dx$  and height  $dy$ , so

$$dA = dx \ dy = dy \ dx. \quad (10.2.1)$$

It would seem like this is an insignificant difference, but the order of  $dx$  and  $dy$  in this expression determines the order of integration of the double integral. We will try both ways and see that the result is identical.

#### Using $dA = dx \ dy$

First, we will evaluate (10.1.3) using  $dA = dx \ dy$ .

If you are not familiar with double integration, briefly you can think of a double integral as two normal single integrals, one ‘inside’ and the other ‘outside,’ which are evaluated one at a time from the inside out. Our integral becomes

$$\begin{aligned} I_x &= \int_A y^2 dA \\ &= \iint y^2 \underbrace{dx \ dy}_{dA} \end{aligned}$$

$$= \int_{\text{bottom}}^{\text{top}} \underbrace{\left[ \int_{\text{left}}^{\text{right}} y^2 dx \right]}_{\substack{\text{inside} \\ \text{outside}}} dy$$

The limits on double integrals are usually *functions* of  $x$  or  $y$ , but for this rectangle the limits are all *constants*. The bottom and top limits are  $y = 0$  and  $y = h$ ; the left and right limits are  $x = 0$  and  $x = b$ . Note that the  $y^2$  term can be taken out of the inside integral, because in terms of  $x$ , it is constant.

Inserting  $dx dy$  for  $dA$  and the limits into (10.1.3), and integrating starting with the inside integral gives

$$\begin{aligned} I_x \int_A y^2 dA &= \int_0^h \int_0^b y^2 dx dy \\ &= \int_0^h y^2 \int_0^b dx dy \\ &= \int_0^h y^2 [b dy] \\ &= b \int_0^h y^2 dy \\ &= b \frac{y^3}{3} \Big|_0^h. \end{aligned}$$

Evaluating the limit gives the result

$$I_x = \frac{bh^3}{3}. \quad (10.2.2)$$


This is the formula for the moment of inertia of a rectangle about an axis passing through its base, and is worth remembering.

The boxed quantity is the *result* of the inside integral times  $dx$ , and can be interpreted as the *differential area* of a horizontal strip,

$$dA = b dy.$$

This will allow us to set up a problem as a single integral using strips and skip the inside integral completely as we will see in [Subsection 10.2.2](#).

This result means that the moment of inertia of the rectangle depends only on the dimensions of the base and height and has units [length]<sup>4</sup>. The height term is cubed and the base is not, which is unsurprising because the moment of inertia gives more importance to parts of the shape which are farther away from the axis. Doubling the width of the rectangle will double  $I_x$  but doubling the height will increase  $I_x$  eightfold.

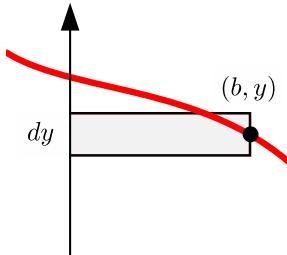

In all moment of inertia formulas, the dimension perpendicular to the axis is always cubed.

**Warning 10.2.1** This result is for this particular situation; you will get a different result for a different shape or a different axis.

### Using $dA = dy dx$

Now, we will evaluate (10.1.3) using  $dA = dy dx$  which reverses the order of integration and means that the integral over  $y$  gets conducted first. Since the distance-squared term  $y^2$  is a function of  $y$  it remains inside the inside integral this time and the result of the inside intergral is not an area as it was previously.


Inserting  $dy dx$  for  $dA$  and the limits into (10.1.3), and integrating gives

$$\begin{aligned} I_x &= \int_A y^2 dA \\ &= \int_0^b \int_0^h y^2 dy dx \\ &= \int_0^b \frac{y^3}{3} \Big|_0^h dx \\ &= \int_0^b \left[ \frac{h^3}{3} \right] dx \\ &= \frac{h^3}{3} \int_0^b dx \\ I_x &= \frac{bh^3}{3}. \end{aligned}$$

As before, the result is the moment of inertia of a rectangle with base  $b$  and height  $h$ , about an axis passing through its base. We have found that the moment of inertia of a rectangle about an axis through its base is (10.2.2), the same as before.

The boxed quantity is the *result* of the inside integral times  $dx$ , and can be interpreted as the *differential moment of inertia* of a vertical strip about the  $x$  axis. This is consistent our previous result. The vertical strip has a base of  $dx$  and a height of  $h$ , so its moment of inertia by (10.2.2) is


$$dI_x = \frac{h^3}{3} dx. \quad (10.2.3)$$

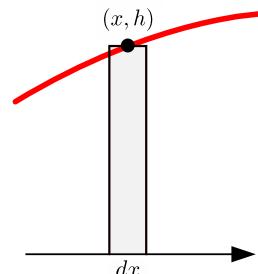

We will use these results to set up problems as a single integral which sum the moments of inertia of the differential strips which cover the area in Subsection 10.2.3.

Example 10.2.2  $I_y$  of a Rectangle.

Find the moment of inertia of the rectangle about the  $y$  axis using square differential elements  $dA$ .

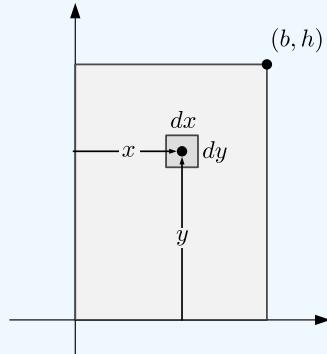

**Answer.**

$$I_x = \frac{1}{3}hb^3$$

**Solution 1.** Following the same procedure as before, we divide the rectangle into square differential elements  $dA = dx dy$  and evaluate the double integral for  $I_y$  from (10.1.3) first by integrating over  $x$ , and then over  $y$ .

$$\begin{aligned} I_y &= \int_A x^2 dA \\ &= \int_0^h \int_0^b x^2 dx dy \\ &= \int_0^h \left[ \int_0^b x^2 dx \right] dy \\ &= \int_0^h \left[ \frac{x^3}{3} \right]_0^b dy \\ &= \int_0^h \boxed{\frac{b^3}{3} dy} \\ &= \frac{b^3}{3} y \Big|_0^h \\ I_y &= \frac{b^3 h}{3} \end{aligned}$$

The formula for  $I_y$  is the same as the formula as we found previously for  $I_x$  except that the base and height terms have reversed roles. Here, the horizontal dimension is cubed and the vertical dimension is the linear term. In all moment of inertia formulas, the dimension perpendicular to the axis is cubed.

**Solution 2.** This solution demonstrates that the result is the same when the order of integration is reversed. This time we evaluate  $I_y$  by dividing the rectangle into square differential elements  $dA = dy dx$  so the inside integral is

now with respect to  $y$  and the outside integral is with respect to  $x$ .


$$\begin{aligned}
 I_y &= \int_A x^2 \, dA \\
 &= \int_0^b x^2 \left[ \int_0^h dy \right] dx \\
 &= \int_0^b x^2 [h \, dx] \\
 &= h \int_0^b x^2 \, dx \\
 &= h \frac{x^3}{3} \Big|_0^b \\
 I_y &= \frac{hb^3}{3}
 \end{aligned}$$

### Centroidal Moment of Inertia

As discussed in Subsection 10.1.3, a moment of inertia about an axis passing through the area's centroid is a *Centroidal* Moment of Inertia. The convention is to place a bar over the symbol  $I$  when the the axis is centroidal.

The following example finds the centroidal moment of inertia for a rectangle using integration.

Example 10.2.3 Rectangle.

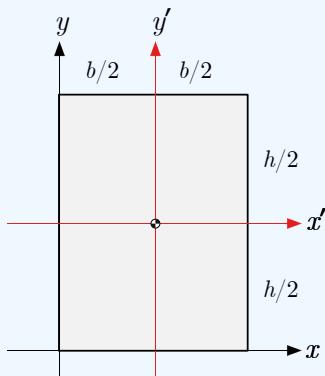

Use integration to find the moment of inertia of a  $(b \times h)$  rectangle about the  $x'$  and  $y'$  axes passing through its centroid.

Indicate that the result is a *centroidal* moment of inertia by putting a bar over the symbol  $I$ .

**Answer.**

$$\begin{aligned}
 \bar{I}_{x'} &= \frac{1}{12}bh^3 \\
 \bar{I}_{y'} &= \frac{1}{12}hb^3.
 \end{aligned}$$

**Solution.** We can use the same approach with  $dA = dy \, dx$ , but now the

limits of integration over  $y$  are now from  $-h/2$  to  $h/2$ .

$$\begin{aligned}\bar{I}_{x'} &= \int_A y^2 dA \\ &= \int_0^b \int_{-h/2}^{h/2} y^2 dy dx \\ &= \int_0^b \left[ \frac{y^3}{3} \right]_{-h/2}^{h/2} dx \\ &= \frac{h^3}{12} \int_0^b dx \\ \bar{I}_{x'} &= \frac{bh^3}{12}\end{aligned}$$


Notice that the centroidal moment of inertia of the rectangle is smaller than the corresponding moment of inertia about the baseline.

The solution for  $\bar{I}_{y'}$  is similar.

**Thinking Deeper 10.2.4 Stresses in a Rectangular Beam.** To provide some context for area moments of inertia, let's examine the internal forces in a elastic beam. Assume that some external load is causing an external bending moment which is opposed by the internal forces exposed at a cut.

When an elastic beam is loaded from above, it will sag. Fibers on the top surface will compress and fibers on the bottom surface will stretch, while somewhere in between the fibers will neither stretch or compress. The points where the fibers are not deformed defines a transverse axis, called the **neutral axis**. The neutral axis passes through the centroid of the beam's cross section.

The change in length of the fibers are caused by internal compression and tension forces which increase linearly with distance from the neutral axis. The internal forces sum to zero in the horizontal direction, but they produce a net couple-moment which resists the external bending moment.

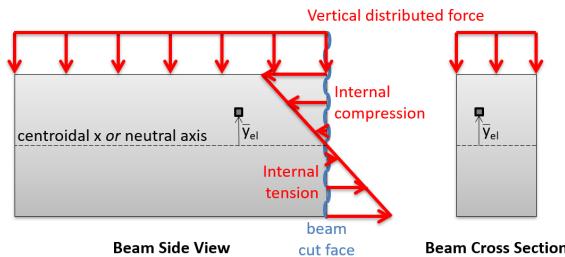

**Figure 10.2.5** Internal forces in a beam caused by an external load.

Think about summing the internal moments about the neutral axis on the beam cut face. This moment at a point on the face increases with the square of the distance  $y$  of the point from the neutral axis because both the internal force and

the moment arm are proportional to this distance. The appearance of  $y^2$  in this relationship is what connects a bending beam to the area moment of inertia.

The shape of the beam's cross-section determines how easily the beam bends. A beam with more material farther from the neutral axis will have a larger moment of inertia and be stiffer. Of course, the material of which the beam is made is also a factor, but it is independent of this geometrical factor.

### 10.2.2 Moment of Inertia of a Triangle


We saw in the last section that when solving (10.1.3) the double integration could be conducted in either order, and that the result of completing the inside integral was a single integral. We will use these observations to optimize the process of finding moments of inertia for other shapes by avoiding double integration.

The most straightforward approach is to use the definitions of the moment of inertia (10.1.3) along with strips *parallel* to the designated axis, i.e. horizontal strips when you want to find the moment of inertia about the  $x$  axis and vertical strips for the moment of inertia about the  $y$  axis.

The strip must be parallel in order for (10.1.3) to work; when parallel, all parts of the strip are the same distance from the axis.

This approach only works if the bounding function can be described as a function of  $y$  and as a function of  $x$ , to enable integration with respect to  $x$  for the vertical strip, and with respect to  $y$  for the horizontal strip.

Example 10.2.6 Triangle.

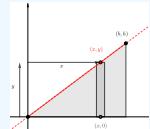

Consider the  $(b \times h)$  right triangle located in the first quadrant with its base on the  $x$  axis.

What is its moment of inertia of this triangle with respect to the  $x$  and  $y$  axes?

**Answer.**

$$I_x = \frac{bh^3}{12} \quad (10.2.4)$$

**Solution.** As we did when finding centroids in Section 7.7 we need to evaluate the bounding function of the triangle. The bottom are constant values,  $y = 0$  and  $x = b$ , but the top boundary is a straight line passing through the origin and the point at  $(b, h)$ , which has the equation

$$y(x) = \frac{h}{b}x. \quad (10.2.5)$$

By inspection we see that the a vertical strip extends from the  $x$  axis to the function so  $dA = y \, dx$ .

Since vertical strips are parallel to the  $y$  axis we can find  $I_y$  by evaluating

this integral with  $dA = y \, dx$ , and substituting  $\frac{h}{b}x$  for  $y$

$$\begin{aligned} I_y &= \int_A x^2 \, dA \\ &= \int_0^b x^2 y \, dx \\ &= \int_0^b x^2 \left( \frac{h}{b}x \right) dx \\ &= \frac{h}{b} \int_0^b x^3 dx \\ &= \frac{h}{b} \frac{x^4}{4} \Big|_0^b \\ I_y &= \frac{hb^3}{4}. \end{aligned}$$

Similarly we will find  $I_x$  using horizontal strips, by evaluating this integral with  $dA = (b - x)dy$

$$I_x = \int_A y^2 dA.$$

We are expressing  $dA$  in terms of  $dy$ , so everything inside the integral must be constant or expressed in terms of  $y$  in order to integrate. In particular, we will need to solve (10.2.5) for  $x$  as a function of  $y$ . This is not difficult.

$$x(y) = \frac{b}{h}y.$$

Once this has been done, evaluating the integral is straightforward.

$$\begin{aligned} I_x &= \int_A y^2 \, dA \\ &= \int_0^h y^2(b - x) \, dy \\ &= \int_0^h y^2 \left( b - \frac{b}{h}y \right) dy \\ &= b \int_0^h y^2 dy - \frac{b}{h} \int_0^h y^3 dy \\ &= \frac{bh^3}{3} - \frac{b}{h} \frac{h^4}{4} \\ I_x &= \frac{bh^3}{12} \end{aligned}$$

This is the moment of inertia of a right triangle about an axis passing through its base. By reversing the roles of  $b$  and  $h$ , we also now have the

moment of inertia of a right triangle about an axis passing through its vertical side.

$$I_y = \frac{hb^3}{12}.$$

### 10.2.3 Moment of Inertia of a Differential Strip

We saw in [Subsection 10.2.2](#) that a straightforward way to find the moment of inertia using a single integration is to use strips which are parallel to the axis of interest, so use vertical strips to find  $I_y$  and horizontal strips to find  $I_x$ .

This method requires expressing the bounding function both as a function of  $x$  and as a function of  $y$ :  $y = f(x)$  and  $x = g(y)$ . There are many functions where converting from one form to the other is not easy.


As an example, let's try finding  $I_x$  and  $I_y$  for the spandrel bounded by

$$y = f(x) = x^3 + x, \text{ the } x \text{ axis, and } x = 1.$$

Finding  $I_y$  using vertical strips is relatively easy.

Letting  $dA = y \, dx$  and substituting  $y = f(x) = x^3 + x$  we have

$$\begin{aligned} I_y &= \int_A x^2 \, dA \\ &= \int_0^1 x^2 y \, dx \\ &= \int_0^1 x^2(x^3 + x) \, dx \\ &= \int_0^1 (x^5 + x^3)dx \\ &= \left. \frac{x^6}{6} + \frac{x^4}{4} \right|_0^1 \\ I_y &= \frac{5}{12}. \end{aligned}$$

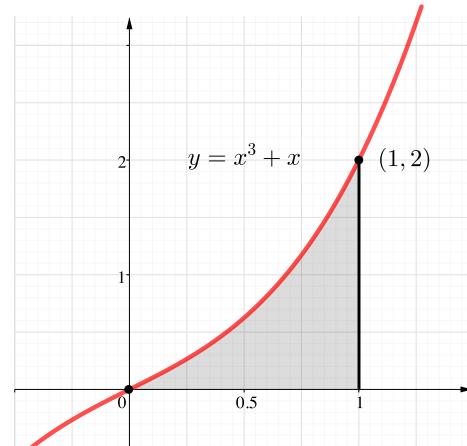

Finding  $I_x$  using horizontal strips is anything but easy. In fact, the integral that needs to be solved is this monstrosity

$$\begin{aligned} I_x &= \int_A y^2 (1 - x) \, dy \\ &= \int_0^2 y^2 \left( 1 - \frac{\sqrt[3]{2} \left( \sqrt{81y^2 + 12} + 9y \right)^{2/3} - 2\sqrt[3]{3}}{6^{2/3} \sqrt[3]{\sqrt{81y^2 + 12} + 9y}} \right) \, dy \end{aligned}$$

... and then a miracle occurs

$$I_x = \frac{49}{120}.$$

Clearly, a better approach would be helpful.

When using strips which are *parallel* to the axis of interest is impractical mathematically, the alternative is to use strips which are *perpendicular* to the axis.

Applying our previous result (10.2.2) to a vertical strip with height  $h$  and infinitesimal width  $dx$  gives the strip's differential moment of inertia. In most cases,  $h$  will be a function of  $x$ .

$$I_x = \frac{bh^3}{3} \quad \rightarrow \quad dI_x = \frac{h^3}{3} dx. \quad (10.2.6)$$

This is the same result that we saw previously (10.2.3) after integrating the inside integral for the moment of inertia of a rectangle.

This result makes it much easier to find  $I_x$  for the spandrel that was nearly impossible to find with horizontal strips.


$$\begin{aligned} I_x &= \int_A dI_x = \frac{y^3}{3} dx \\ &= \int_0^1 \frac{(x^3 + x)^3}{3} dx \\ &= \frac{1}{3} \int_0^1 (x^9 + 3x^7 + 3x^5 + x^3) dx \\ &= \frac{1}{3} \left[ \frac{x^{10}}{10} + \frac{3x^8}{8} + \frac{3x^6}{6} + \frac{x^4}{4} \right]_0^1 \\ &= \frac{1}{3} \left[ \frac{1}{10} + \frac{3}{8} + \frac{3}{6} + \frac{1}{4} \right] \\ &= \frac{1}{3} \left[ \frac{12 + 45 + 60 + 30}{120} \right] \\ I_x &= \frac{49}{120} \end{aligned}$$

The same approach can be used with a horizontal strip  $dy$  high and  $b$  wide, in which case we have

$$I_y = \frac{b^3 h}{3} \quad \rightarrow \quad dI_y = \frac{b^3}{3} dy. \quad (10.2.7)$$

The width  $b$  will usually have to be expressed as a function of  $y$ .


The expression for  $dI_x$  assumes that the vertical strip has a lower bound on the  $x$  axis. If this is not the case, then find the  $dI_x$  for the area between the bounds by subtracting  $dI_x$  for the rectangular element below the lower bound from  $dI_x$  for the element from the  $x$  axis to the upper bound. A similar procedure can be used for horizontal strips.

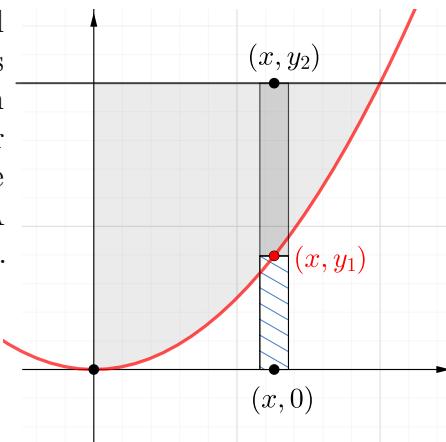

$$dI_x = \frac{y_2^3}{3} - \frac{y_1^3}{3} = \frac{1}{3}(y_2^3 - y_1^3)$$

This approach is illustrated in the next example.

**Example 10.2.7** Moment of Inertia for Area Between Two Curves.

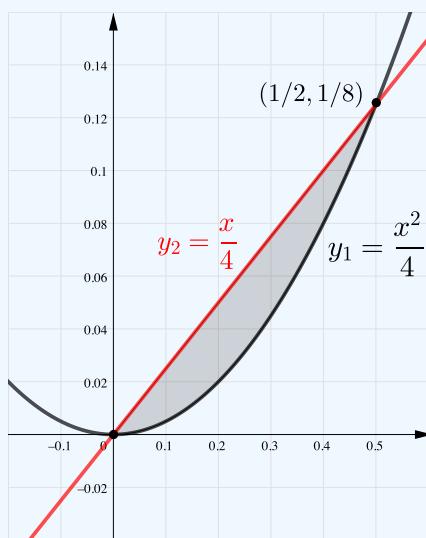

Use vertical strips to find both  $I_x$  and  $I_y$  for the area bounded by the functions

$$y_1 = x^2/2 \text{ and,}$$

$$y_2 = x/4.$$

Units are cm.

**Answer.**

$$I_x = 3.49 \times 10^{-6} \text{ cm}^4$$

$$I_y = 7.81 \times 10^{-6} \text{ cm}^4$$

**Solution.**

**Set up the integral.** The area is bounded by the functions

$$y_2 = x/4$$

$$y_1 = x^2/2$$

By equating the two functions, we learn that they intersect at  $(0, 0)$  and  $(1/2, 1/8)$ , so the limits on  $x$  are  $x = 0$  and  $x = 1/2$ .

The differential area  $dA$  for vertical strip is

$$dA = (y_2 - y_1) dx = \left( \frac{x}{4} - \frac{x^2}{2} \right) dx.$$

**Find  $I_y$ .** For vertical strips, which are parallel to the  $y$  axis we can use the definition of the Moment of Inertia.

$$\begin{aligned}
 I_y &= \int x^2 dA \\
 &= \int_0^{0.5} x^2 \left( \frac{x}{4} - \frac{x^2}{2} \right) dx \\
 &= \int_0^{1/2} \left( \frac{x^3}{4} - \frac{x^4}{2} \right) dx \\
 &= \left( \frac{x^4}{16} - \frac{x^5}{12} \right) \Big|_0^{1/2} \\
 &= \left( \frac{(1/2)^4}{16} - \frac{(1/2)^5}{10} \right) \\
 &= \frac{1}{64} \left( \frac{1}{4} - \frac{1}{5} \right) \\
 I_y &= \frac{1}{1280} = 7.81 \times 10^{-4} \text{ cm}^4
 \end{aligned}$$

**Find  $I_x$ .** For vertical strips, which are perpendicular to the  $x$  axis, we will take subtract the moment of inertia of the area below  $y_1$  from the moment of inertia of the area below  $y_2$ .


$$\begin{aligned}
 I_x &= \int_{A_2} dI_x - \int_{A_1} dI_x \\
 &= \int_0^{1/2} \frac{y_2^3}{3} dx - \int_0^{1/2} \frac{y_1^3}{3} dx \\
 &= \frac{1}{3} \int_0^{1/2} \left[ \left( \frac{x}{4} \right)^3 - \left( \frac{x^2}{2} \right)^3 \right] dx \\
 &= \frac{1}{3} \int_0^{1/2} \left[ \frac{x^3}{64} - \frac{x^6}{8} \right] dx \\
 &= \frac{1}{3} \left[ \frac{x^4}{256} - \frac{x^7}{56} \right]_0^{1/2} \\
 I_x &= \frac{1}{28672} = 3.49 \times 10^{-6} \text{ cm}^4
 \end{aligned}$$

#### 10.2.4 Circles, Semicircles, and Quarter-circles

In this section, we will use polar coordinates and symmetry to find the moments of inertia of circles, semi-circles and quarter-circles.

We will start by finding the polar moment of inertia of a circle with radius  $r$ , cen-

tered at the origin. You will recall from [Subsection 10.1.4](#) that the polar moment of inertia is similar to the ordinary moment of inertia, except the the distance squared term is the distance from the element to a point in the plane rather than the perpendicular distance to an axis, and it uses the symbol  $J$  with a subscript indicating the point.

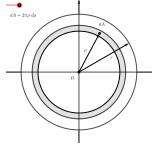

To take advantage of the geometry of a circle, we'll divide the area into thin rings, as shown in the diagram, and define the distance from the origin to a point on the ring as  $\rho$ . The reason for using thin rings for  $dA$  is the same reason we used strips parallel to the axis of interest to find  $I_x$  and  $I_y$ ; all points on the differential ring are the same distance from the origin, so we can find the moment of inertia using single integration.

The differential area of a circular ring is the circumference of a circle of radius  $\rho$  times the thickness  $d\rho$ .

$$dA = 2\pi\rho \, d\rho.$$

Adapting the basic formula for the polar moment of inertia ([10.1.5](#)) to our labels, and noting that limits of integration are from  $\rho = 0$  to  $\rho = r$ , we get


$$J_O = \int_A r^2 \, dA \quad \rightarrow \quad J_O = \int_0^r \rho^2 \, 2\pi\rho \, d\rho. \quad (10.2.8)$$

Proceeding with the integration,

$$\begin{aligned} J_O &= \int_0^r \rho^2 \, 2\pi\rho \, d\rho \\ &= 2\pi \int_0^r \rho^3 \, d\rho \\ &= 2\pi \left[ \frac{\rho^4}{4} \right]_0^r \\ J_O &= \frac{\pi r^4}{2}. \end{aligned} \quad (10.2.9)$$

This is the polar moment of inertia of a circle about a point at its center.

With this result, we can find the rectangular moments of inertia of circles, semi-circles and quarter circle simply. Noting that the polar moment of inertia of a shape is the sum of its rectangular moments of inertia and that  $I_x$  and  $I_y$  are equal for a circle due to its symmetry. Therefore, by ([10.5.2](#)), which is easily proven,

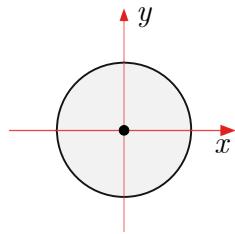


$$J_O = I_x + I_y$$

$$\bar{I}_x = \bar{I}_y = \frac{J_O}{2} = \frac{\pi r^4}{4}. \quad (10.2.10)$$


This is the moment of inertia of a circle about a vertical or horizontal axis passing through its center.

A circle consists of two semi-circles above and below the  $x$  axis, so the moment of inertia of a semi-circle about a diameter on the  $x$  axis is just half of the moment of inertia of a circle. The moment of inertia about the vertical centerline is the same.

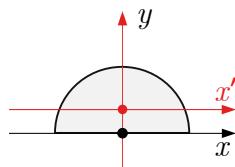

$$I_x = \bar{I}_y = \frac{\pi r^4}{8}. \quad (10.2.11)$$

Similarly, the moment of inertia of a quarter circle is half the moment of inertia of a semi-circle, so

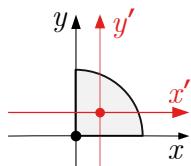

$$I_x = I_y = \frac{\pi r^4}{16}. \quad (10.2.12)$$

In these diagrams, the centroidal axes are red, and moments of inertia about centroidal axes are indicated by the overbar. We will see how to use the parallel axis theorem to find the centroidal moments of inertia for semi- and quarter-circles in [Section 10.3](#).

### 10.2.5 Summary of Integration Techniques

Here is a summary of the alternate approaches to finding the moment of inertia of a shape using integration.

You may choose to divide the shape into square differential elements to compute the moment of inertia, using the fundamental definitions. The disadvantage of this approach is that you need to set up and compute a double integral. Identifying the correct limits on the integrals is often difficult.

If you would like to avoid double integration, you may use vertical or horizontal strips, but you must take care to apply the correct integral. If you use vertical strips to find  $I_y$  or horizontal strips to find  $I_x$ , then you can still use [\(10.1.3\)](#), but skip the double integration. When the entire strip is the same distance from the designated axis, integrating with a parallel strip is equivalent to performing the inside integration of [\(10.1.3\)](#).

As we have seen, it can be difficult to solve the bounding functions properly in terms of  $x$  or  $y$  to use parallel strips. In this case, you can use vertical strips to find


$I_x$  or horizontal strips to find  $I_y$  as discussed by integrating the differential moment of inertia of the strip, as discussed in Subsection 10.2.3.

Element

$$dA$$

$$dI_x$$


$$dI_y$$

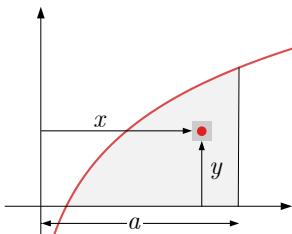

$$dx \, dy \text{ or } dy \, dx$$

$$y^2 \, dA$$


$$x^2 \, dA$$

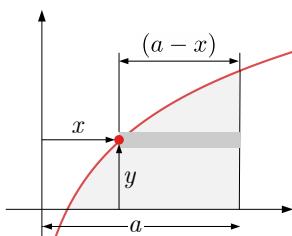

$$(a - x) \, dy$$

$$y^2 \, dA$$

$$\frac{(a^3 - x^3)}{3} \, dx$$

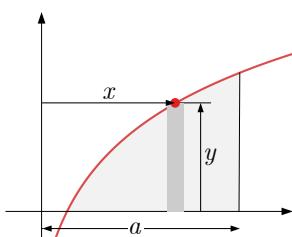

$$y \, dx$$

$$\frac{y^3}{3} \, dx$$

$$x^2 \, dA$$

## 10.3 Parallel Axis Theorem

The parallel axis theorem relates the moment of inertia of a shape about an arbitrary axis to its moment of inertia about a parallel centroidal axis.

This theorem is particularly useful because if we know the centroidal moment of inertia of a shape, we can calculate its moment of inertia about any parallel axis by adding an appropriate correction factor. Alternately, if we know the moment of inertia about an axis, we can find the associated centroidal moment of inertia by subtracting the same factor.

The centroidal moment of inertia of common shapes are well known, and readily available in tables of properties of shapes such as Subsection 10.3.2.

### 10.3.1 Derivation

We will use the defining equation for the moment of inertia (10.1.3) to derive the parallel axis theorem.

The diagram shows an arbitrary shape, and two parallel axes: the  $x'$  axis, drawn in red, passes through the centroid of the shape at  $C$ , and the  $x$  axis, which is parallel and separated by a distance,  $d$ . The shape has area  $A$ , which is divided into square differential elements  $dA$ . The distance from the  $x$  axis to the element  $dA$  is  $y$ , and the distance from the  $x'$  axis is  $y'$ .

By (10.1.3), the moment of inertia of the shape about the  $x$  and  $x'$  axes are

$$I_x = \int_A y^2 dA \quad \bar{I}_{x'} = \int_A (y')^2 dA$$

The first is the value we are looking for, and the second is the centroidal moment of inertia of the shape. These two are related through the distance  $d$ , because  $y = d + y'$ . Substituting that relation into the first equation and expanding the binomial gives

$$\begin{aligned} I_x &= \int_A (d + y')^2 dA \\ &= \int_A [(y')^2 + 2y'd + d^2] dA \\ &= \int_A (y')^2 dA + 2d \int_A y' dA + d^2 \int_A dA. \end{aligned}$$

You should recognize these three integrals. The first is the centroidal moment of inertia of the shape  $\bar{I}_{x'}$ , and the third is the total area of the shape,  $A$ . The middle integral is  $Q_{x'}$ , the first moment of area (10.1.2) with respect to the centroidal axis  $x'$ . So we have,


$$I_x = \bar{I}_{x'} + 2dQ_{x'} + d^2 A.$$

Furthermore,  $Q_{x'}$  is exactly zero because the  $x'$  axis passes through the centroid, meaning that elements of area above and below the centroidal axis exactly balance and cancel each other out. After dropping the middle term we get the version of the parallel axis theorem which you should remember,

$$I = \bar{I} + Ad^2. \quad (10.3.1)$$

The subscripts designating the  $x$  and  $x'$  axes have been dropped because this equation is applicable to any direction of parallel axes, not specifically horizontal axes.

This equation says that you find the moment of inertia of a shape about *any* axis by adding  $Ad^2$  to the *parallel* centroidal moment of inertia. You can consider

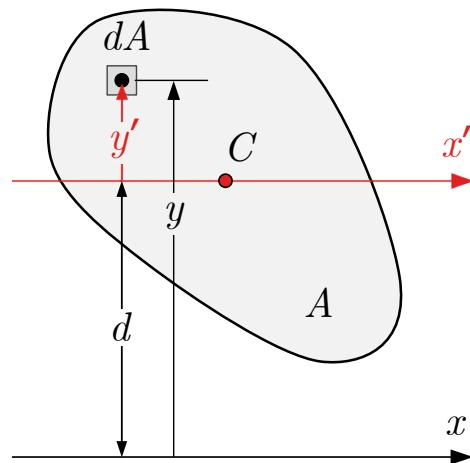

**Figure 10.3.1** Definitions for the parallel axis theorem.


the  $Ad^2$  term as ‘correction factor’ to account for the distance of the axis from the centroid. This term is always positive, so the centroidal moment of inertia is always the minimum moment of inertia for a particular axis direction.

The next example show how the parallel axis theorem is typically used to find the moment of inertia of a shape about an axis, by using then centroidal moment of inertia formulas found in [Subsection 10.3.2](#).

**Example 10.3.2 Circular Ring.**

Use the parallel axis theorem to find the moment of inertia of the circular ring about the  $y$  axis.

The dimensions of the ring are  $R_i = 30$  mm,  $R_o = 45$  mm, and  $a = 80$  mm.

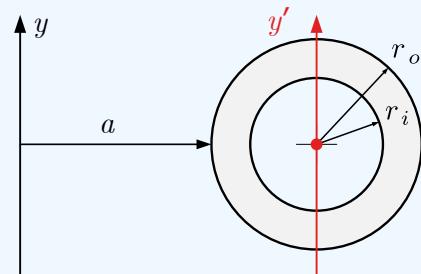

**Answer.**

$$I_y = 57.8 \times 10^6 \text{ mm}^4$$

**Solution.** To apply the parallel axis theorem, we need three pieces of information

1. The centroidal moment of inertia of the ring,  $I_y$ ,
2. the area of the ring,  $A$ ,
3. the distance between the parallel axes,  $d$ .

The area of the ring is found by subtracting the area of the inner circle from the area of the outer circle. The centroidal moment of inertia is calculated similarly using [\(10.2.10\)](#). The distance between the  $y$  and  $y'$  axis is available from the diagram. Inserting these values into the parallel axis theorem gives,

$$\begin{aligned} I_y &= I_y + Ad^2 \\ &= \underbrace{\frac{\pi}{4} (r_o^4 - r_i^4)}_{I_y} + \underbrace{\pi (r_o^2 - r_i^2)}_A \underbrace{(a + r_o)^2}_{d^2} \\ &= \frac{\pi}{4} (45^4 - 30^4) + \pi (45^2 - 30^2) (80 + 45)^2 \\ &= 2.58 \times 10^6 \text{ mm}^4 + 55.2 \times 10^6 \text{ mm}^4 \\ I_y &= 57.8 \times 10^6 \text{ mm}^4 \end{aligned}$$

It is interesting that the ‘correction factor’ is more than 20 times greater than the centroidal moment of inertia of the ring. This indicates the importance of the distance squared term on the moment of inertia of a shape.


You may feel like the answer to this problem is “too big”. Large answers are normal in problems like this because the moment of inertia involves raising lengths the fourth power.

If it really bothers you, you can convert the results from  $\text{mm}^4$  to  $\text{m}^4$ , but then the number will probably feel “too small” to you. It’s best not to worry about it.

The parallel axis theorem can also be used to find a centroidal moment of inertia when you already know the moment of inertia of a shape about another axis, by using the theorem ‘backwards’,

$$I = \bar{I} + Ad^3 \quad \rightarrow \quad \bar{I} = I - Ad^2.$$

### Example 10.3.3 Centroidal Moment of Inertia of a Triangle.

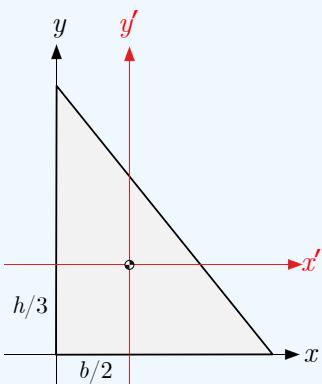

Find the centroidal moment of inertia of a triangle knowing that the moment of inertia about its base is

$$I_x = \frac{1}{12}bh^3.$$

**Answer.**

$$\bar{I}_x = \frac{bh^3}{36}$$

$$\bar{I}_y = \frac{b^3h}{36}$$

**Solution.** For the triangle the moment of we have the following information:  $I_x = bh^3/12$ ,  $A = bh/2$ , and  $d = \bar{y} = h/3$ .

Looking for  $\bar{I}_{x'}$ :

$$I = \bar{I} + Ad^2$$

Parallel Axis Theorem, general statement

$$\bar{I}_{x'} = I_x - A(\bar{y})^2$$

Parallel Axis Theorem, backwards

$$= \frac{bh^3}{12} - \frac{bh}{2} \left( \frac{h}{3} \right)^2$$

Insert values for triangle

$$= bh^3 \left[ \frac{1}{12} - \frac{1}{18} \right]$$

Factor out common terms


$$= bh^3 \left[ \frac{3}{36} - \frac{2}{36} \right]$$

Common denominator

$$\bar{I}_{x'} = \frac{bh^3}{36} \quad \text{Result}$$

The procedure for  $\bar{I}_y$  is similar, or you can simply reverse the roles of  $b$  and  $h$ .

#### Example 10.3.4 Centroidal Moment of inertia of a Semi-Circle.

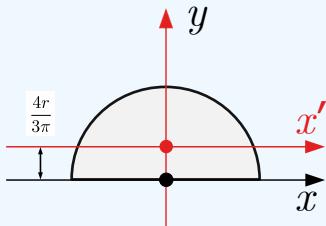

Find the centroidal moment of inertia of a semi-circle knowing that the moment of inertia about its base is

$$I_x = \frac{\pi}{8} r^4.$$

**Answer.**


$$\bar{I}_{x'} = \left( \frac{\pi}{8} + \frac{8}{9\pi} \right) r^4$$

**Solution.** The area of a semicircle is  $A = \pi r^2/2$  and the distance between the parallel axes is  $d = (4r)/(3\pi)$ , so

$$\begin{aligned} \bar{I}_{x'} &= I_x - Ad^2 \\ &= \frac{\pi}{8} r^4 + \left( \frac{\pi r^2}{2} \right) \left( \frac{4r}{3\pi} \right)^2 \\ \bar{I}_{x'} &= \left( \frac{\pi}{8} + \frac{8}{9\pi} \right) r^4 \end{aligned}$$

#### Example 10.3.5 Interactive: Rectangle.


This interactive allows you to change the location and size of the grey rectangle. Try to compute both the centroidal area moment of inertia  $\bar{I}_{x'}$  and  $\bar{I}_{y'}$  and the area moment of inertia about the system axes  $I_x$  and  $I_y$

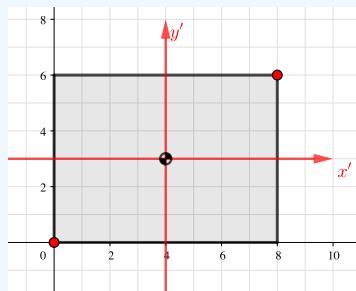

**Figure 10.3.6** Moment of Inertia of a Rectangle

## Example 10.3.7 Interactive: Semi-Circle.




Use this interactive to practice computing the area moments of inertia of the semi-circle about the centroidal  $x'$  axis, the bottom edge  $x''$ , and the system  $x$  axis. You can change the location and size of the semicircle by moving the red points..

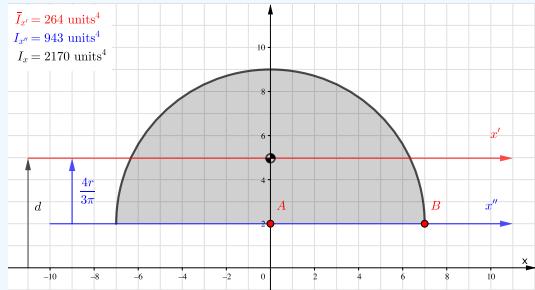


**Figure 10.3.8** Moment of Inertia of a Semi-Circle

### 10.3.2 Moments of Inertia Table


This table summarizes the properties of the common shapes discussed previously.

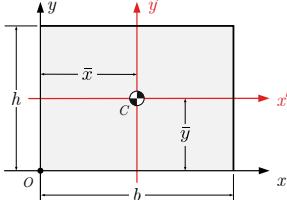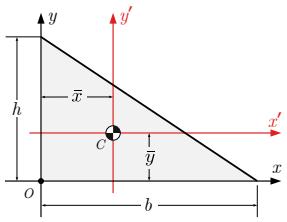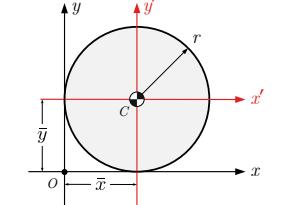Shape	Centroid	Centroidal Moment of Inertia	$I_x, I_y$
	$(b/2, h/2)$	$\bar{I}_{x'} = \frac{1}{12}bh^3$ $\bar{I}_{y'} = \frac{1}{12}b^3h$	$\bar{I}_x = \frac{1}{3}bh^3$ $\bar{I}_y = \frac{1}{3}b^3h$
	$(b/3, h/3)$	$\bar{I}_{x'} = \frac{1}{36}bh^3$ $\bar{I}_{y'} = \frac{1}{36}b^3h$	$\bar{I}_x = \frac{1}{12}bh^3$ $\bar{I}_y = \frac{1}{12}b^3h$
	$(r, r)$	$\bar{I}_{x'} = \bar{I}_{y'} = \frac{\pi}{4}r^4$	$I_x = I_y = \frac{5\pi}{4}r^4$

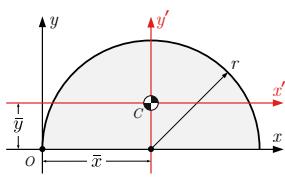

$$\left(r, \frac{4r}{3\pi}\right) \quad \bar{I}_{x'} = \left(\frac{\pi}{8} - \frac{8}{9\pi}\right) r^4 \quad I_x = I_y = \frac{\pi}{8} r^4$$

$$\bar{I}_{y'} = \frac{\pi}{8} r^4$$

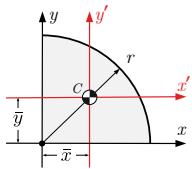

$$\left(\frac{4r}{3\pi}, \frac{4r}{3\pi}\right) \quad \bar{I}_{x'} = \frac{1}{2} \left(\frac{\pi}{8} - \frac{8}{9\pi}\right) r^4 \quad I_x = I_y = \frac{\pi}{16} r^4$$

$$\bar{I}_{y'} = \frac{\pi}{8} r^4$$

## 10.4 Moment of Inertia of Composite Shapes

### Key Questions

- Where do the common shape area moment of inertia equations come from?
- What is the parallel axis theorem?
- When do you need to apply the parallel axis theorem?
- About which point do you find the smallest area moments of inertia? What is it about this point that is so special?

In this section we will find the moment of inertia of shapes formed by combining simple shapes like rectangles, triangles and circles much the same way we did to find centroids in [Section 7.5](#).

The procedure is to divide the complex shape into its sub shapes and then use the centroidal moment of inertia formulas from [Subsection 10.3.2](#), along with the parallel axis theorem ([10.3.1](#)) to calculate the moments of inertia of parts, and finally combine them to find the moment of inertia of the original shape.

#### 10.4.1 Composite Area Method

For a composite shape made up of  $n$  subparts, the moment of inertia of the whole shape is the sum of the moments of inertia of the individual parts, however the moment of inertia of any holes are subtracted from the total of the positive areas.


Moments of inertia are always calculated relative to a specific axis, so the moments of inertia of all the sub shapes must be calculated with respect to this same axis, which will usually involve applying the parallel axis theorem.

$$I = \sum_{i=0}^n (I)_i = \sum_{i=0}^n (\bar{I} + Ad^2)_i. \quad (10.4.1)$$

The method is demonstrated in the following examples.

## Example 10.4.1 Beam Design.

You have three 24 ft long wooden 2×6's and you want to nail them together them to make the stiffest possible beam. The stiffness of a beam is proportional to the moment of inertia of the beam's cross-section about a horizontal axis passing through its centroid. The actual dimensions of nominal 2×6 lumber are 1.5 in by 5.5 in.

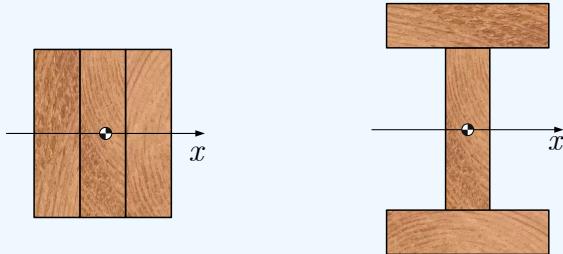

Which of the arrangements will be the stiffest, and what is the ratio of the two moments of inertia?

**Answer.**

$$(I_x)_1 = 62.5 \text{ in}^4$$

$$(I_x)_2 = 226 \text{ in}^4$$

The I-beam has more than 3.6 times the stiffness of the sandwich beam!

**Solution.** Given:  $b = 1.5 \text{ in}$ ,  $h = 5.5 \text{ in}$ .

In case 1 the centroids of all three rectangles are on the  $x$  axis, so the parallel axis theorem is unnecessary.

$$(I_x)_1 = \sum_{i=1}^3 \bar{I} + Ad^2$$

$$= 3 \frac{bh^3}{12}$$

$$= \frac{(1.5)(5.5)^3}{4}$$

$$(I_x)_1 = 62.5 \text{ in}^4$$

This value is the same as the moment of inertia of a  $(4.5 \text{ in} \times 5.5 \text{ in})$  rectangle about its centroid.

In case 2, the parallel axis theorem must be used for the upper and lower rectangles, since their centroids are not on the  $x$  axis.

$$(I_x)_2 = \sum_{i=1}^3 \bar{I} + Ad^2$$


$$= \left( \frac{bh^3}{12} \right) + 2 \left[ \frac{1}{12}hb^3 + (bh)(h/2 + b/2)^2 \right]$$

$$\begin{aligned}
 &= \frac{(1.5)(5.5)^3}{12} + 2 \left[ \frac{(1.5)^3(5.5)}{12} + (1.5 \times 5.5)(3.5)^2 \right] \\
 &= 20.8 \text{ in}^4 + 2 [1.547 \text{ in}^4 + 101.6 \text{ in}^4] \\
 (I_x)_2 &= 226 \text{ in}^4
 \end{aligned}$$

$$(I_x)_2 / (I_x)_1 = 3.61$$

The I-beam is about 3.6 times stiffer than the sandwich beam. This optimization of material usage is the reason we use I-beams.

### Example 10.4.2 T Shape.

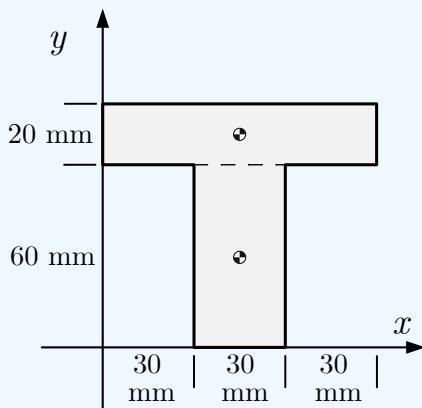

Find the moment of inertia of the T shape about the  $x$  and  $y$  axes.

### Answer.

$$\begin{aligned}
 I_x &= (I_x)_1 + (I_x)_2 &= 11.04 \times 10^6 \text{ mm}^4 \\
 I_y &= (I_y)_1 + (I_y)_2 &= 8.64 \times 10^6 \text{ mm}^4
 \end{aligned}$$

### Solution.

**Strategy.** Divide the T shape into a  $30 \text{ mm} \times 60 \text{ mm}$  vertical rectangle (1), and a  $90 \text{ mm} \times 20 \text{ mm}$  horizontal rectangle (2) then add the moments of inertia of the two parts.

$$I_x = (I_x)_1 + (I_x)_2 \quad I_y = (I_y)_1 + (I_y)_2$$

**MOI about the  $x$  Axis.** The bottom edge of rectangle 1 is on the  $x$  axis. Using the formula from [Subsection 10.3.2](#) gives

$$(I_x)_1 = \frac{bh^3}{3} = \frac{(30)(60)^3}{3} = 2.16 \times 10^6 \text{ mm}^4.$$

The centroid of rectangle 2 is located 70 mm above the  $x$  axis so we must use the parallel axis theorem (10.3.1), so

$$\begin{aligned}(I_x)_2 &= \bar{I} + Ad^2 \\ &= \frac{bh^3}{12} + (bh)d^2 \\ &= \frac{(90)(20)^3}{12} + (90 \times 20)(70)^2 \\ (I_x)_2 &= 8.88 \times 10^6 \text{ mm}^4.\end{aligned}$$

The moment of inertia of the entire T shape about the  $x$  axis is the sum of these two values,

$$I_x = (I_x)_1 + (I_x)_2 = 11.04 \times 10^6 \text{ mm}^4.$$


**MOI about the  $y$  Axis.** We can use the same procedure to find the moment of inertia about the  $y$  axis, however it is usually more convenient to organize all the necessary information in a table rather than writing the equations explicitly.

We will use the parallel axis theorem for both rectangles with  $d$  representing the distance between the  $y$  axis and the centroid of the part. In this example  $d$  is the same for both parts, but that will not always be true.

Part	Dimensions	$\bar{I}_y = hb^3/12$	$A = bh$	$d$	$Ad^2$	$I_y = \bar{I} + Ad^2$
Units	mm	mm <sup>4</sup>	mm <sup>2</sup>	mm	mm <sup>4</sup>	mm <sup>4</sup>
1	$b = 30, h = 60$	$135 \times 10^3$	1800	45	$3.645 \times 10^6$	$3.78 \times 10^6$
2	$b = 90, h = 20$	$1.215 \times 10^6$	1800	45	$3.645 \times 10^6$	$4.86 \times 10^6$
Total						$8.64 \times 10^6$

$$I_y = (I_y)_1 + (I_y)_2 = 8.64 \times 10^6 \text{ mm}^4$$

Example 10.4.3 Fillet.

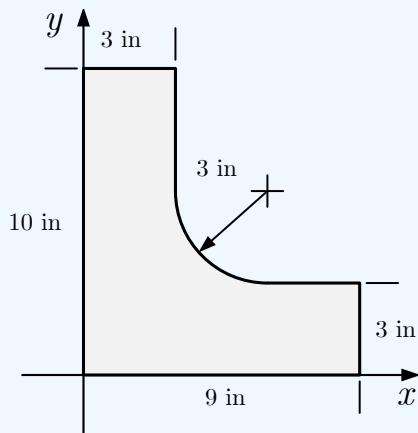

Find the moment inertia of the area about the  $x$  axis.

**Answer.**


$$I_x = 1350 \text{ in}^4$$

**Solution.**

**Strategy.**

First, divide the area into four parts:

1. a 9 in  $\times$  3 in rectangle
2. a 6 in  $\times$  3 in rectangle
3. a 3 in  $\times$  4 in rectangle, and
4. a removed quarter-circle with a 3 in radius.

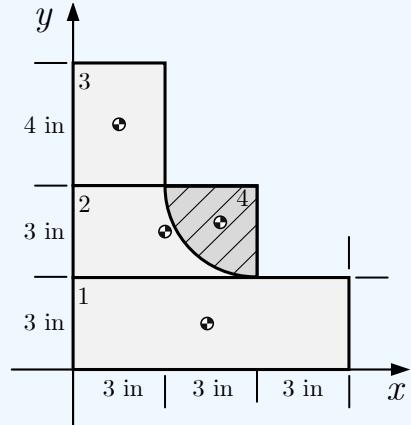

Then set up a table and apply the parallel axis theorem (10.3.1) as in the previous example. Since the quarter-circle is removed, subtract its moment of inertia from total of the other shapes.

**MOI about the  $y$  Axis.** The centroidal moment of inertia of a quarter-circle, from Subsection 10.3.2 is

$$\begin{aligned} I_x &= \left( \frac{\pi}{16} - \frac{4}{9\pi} \right) r^4 \\ &= 0.0549 r^4 \end{aligned}$$

The distance from the top edge of the quarter-circle down to its centroid is  $\frac{4r}{3\pi} = 1.273$  in, so the distance from the  $x$  axis to its centroid is

$$d = 6 - 1.27 = 4.727 \text{ in.}$$

Fill out the table of information.

Part Units	Dimensions inch	$\bar{I}_x$ inch $^4$	$A$ inch $^2$	$d = \bar{y}$ inch	$Ad^2$ inch $^4$	$I_y = \bar{I} + Ad^2$ inch $^4$
1	$b = 9, h = 3$	$bh^3/12 = 20.25$	27	1.5	60.75	81
2	$b = 6, h = 3$	$bh^3/12 = 283$	18	4.5	364.5	647.5
3	$b = 3, h = 4$	$bh^3/12 = 16$	12	8	768	784
4	$r = 3$	$0.0549 r^4 = 4.45$	7.07	4.727	158.0	162.4


Take care to subtract the moment of inertia of the removed quarter-circle from the total.

$$I_x = (I_x)_1 + (I_x)_2 + (I_x)_3 - 1(I_x)_4 = 1350 \text{ in}^4.$$

#### Example 10.4.4 Concrete Pipe Casing.

The cross section of a concrete pipe casing composed of a rectangular block, a triangular wedge, and a circular pipe formed through the middle of the block is shown below.

As the pipe casing will be subject to various loads, find the area moment of inertia of the cross section about the  $x$  and  $y$  axes.

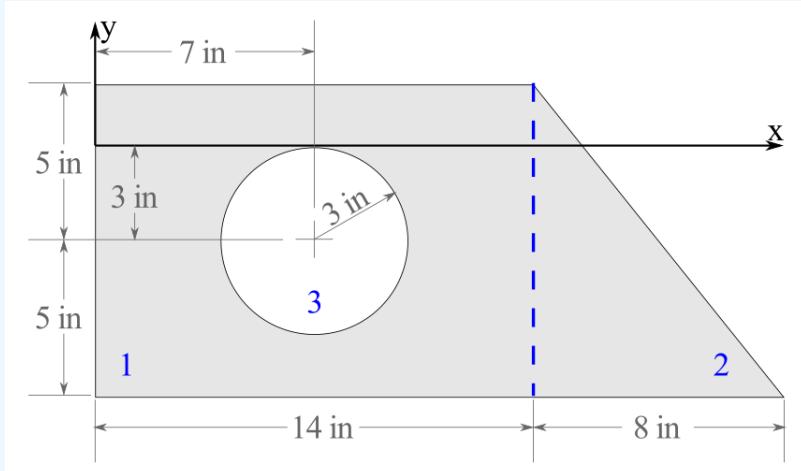

**Answer.**

$$I_x = 3202 \text{ in}^4$$

$$I_y = 18951 \text{ in}^4$$

**Solution.**

**Strategy.** Organize all the necessary information into a table, then total the moments of inertia of the parts to get the moment of inertia of the whole shape. Remember that the hole is removed from the shape, so its contribution to the total moment of inertia is negative.

**Table.**

Part Units	$A_i$ $\text{in}^2$	$d_{x_i}$ $\text{in}$	$d_{y_i}$ $\text{in}$	$A_i d_x^2$ $\text{in}^4$	$Ad_y^2$ $\text{in}^4$	$\bar{I}_x$ $\text{in}^4$	$\bar{I}_y$ $\text{in}^4$
Rectangle 1 $b = 14,$ $h = 10$	$bh$ $= 140$	7	-3	6860	1260	$bh^3/12$ $= 1167$	$b^3h/12$ $= 2287$
Triangle 2 $b = 8,$ $h = 10$	$bh/2$ $= 40$	16.67	-4.67	11111	871.1	$bh^3/36$ $= 222.2$	$b^3h/12$ $= 142.2$
Circular Hole 3 $r = 3$	$-\pi r^2$ $= -28.27$	7	-3	-1385	-254.5	$-\pi r^4/4$ $= -63.62$	$-\pi r^4/4$ $= -63.62$
Total	151.7			16586	1877	1325	2365

**Total.**

$$(I_x)_1 = [\bar{I}_x + Ad_y^2]_1 = 2427 \text{ in}^4 \quad (I_y)_1 = [\bar{I}_y + Ad_x^2]_1 = 9147 \text{ in}^4$$

$$(I_x)_2 = [\bar{I}_x + Ad_y^2]_2 = 1093 \text{ in}^4 \quad (I_y)_2 = [\bar{I}_y + Ad_x^2]_2 = 11253 \text{ in}^4$$

$$(I_x)_3 = [\bar{I}_x + Ad_y^2]_3 = -318.1 \text{ in}^4 \quad (I_y)_3 = [\bar{I}_y + Ad_x^2]_3 = -1449 \text{ in}^4$$

$$I_x = \sum (I_x)_i = 3202 \text{ in}^4 \quad I_y = \sum (I_y)_i = 18951 \text{ in}^4$$


Alternately, you could find the moments of inertia by adding the sums of the columns, since you are adding the same values together, just in a different order.

$$I_x = \sum \bar{I}_x + \sum Ad_y^2 = 3202 \text{ in}^4 \quad I_y = \sum \bar{I}_y + \sum Ad_x^2 = 18951 \text{ in}^4$$

#### Example 10.4.5 Interactive: Composite Rectangles.

This interactive shows a composite shape consisting of a large rectangle with a smaller rectangle subtracted. You can change the location and size of the rectangles by moving the red points.

Use the interactive to practice computing the moments of inertia of this shape about the system  $x$  axis. It is convenient to collect all the needed information in a table.

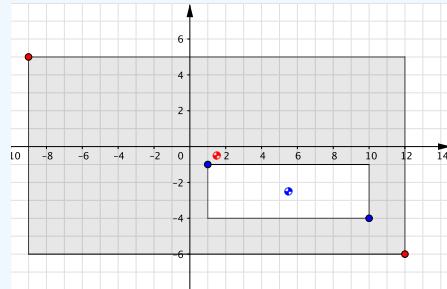


**Figure 10.4.6** Moment of Inertia of a Rectangle

### 10.4.2 Structural Steel Sections

Steel is a strong, versatile, and durable material commonly used for girders, beams, and columns in steel structures such as buildings, bridges, and ships. When possible designers prefer to use prefabricated *Standardized Structural Steel* to minimize material cost.

Structural steel is available in a variety of shapes called *sections*, shown below. These include universal beams and columns (W, S), structural channels (C), equal and unequal angle sections (L), Tee shapes (T), rectangular, square and round hollow structural sections (HSS), bar, rod, and plate. All are available in a range of sizes from small to huge. Steel sections are manufactured by hot or cold rolling or fabricated by welding flat or curved steel plates together.

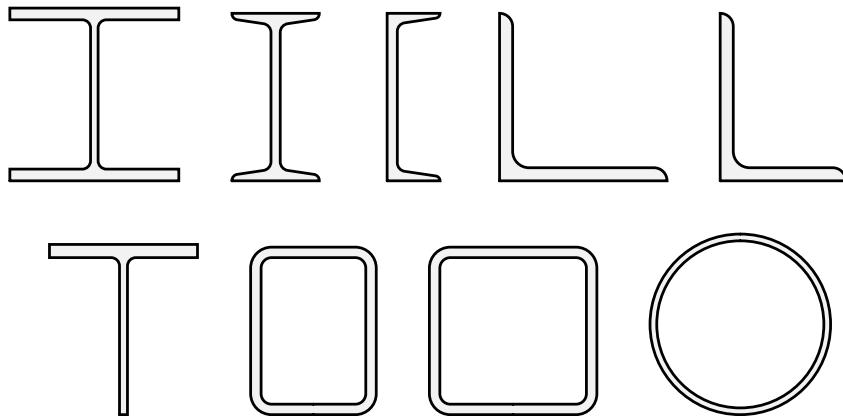


**Figure 10.4.7** AISC Standard Sections: Left to right -- Wide-Flange (W), American Standard (S), Channel (C), Equal Angle (L), Unequal Angle (L), Structural Tee (T), Rectangle (HSS), Square (HSS), Round (HSS).

Designers and engineers must select the most appropriate and economical section which can support the potential tension, compression, shear, torsion and bending loads. Tables of properties of Standard Steel Sections are published by the American Institute of Steel Construction, and are used to simplify the process. The tables contain important properties of the sections, including dimensions, cross sectional

area, weight per foot, and moment of inertia about vertical and horizontal axes. An abbreviated subset of the AISC tables are available in [Appendix C](#).

In this section we will use the information in the AISC tables to find the moments of inertia of standard sections and also of composite shapes incorporating standard sections.

The top and bottom pieces of an I-beam are called flanges. The middle portion is referred to as the web. The flanges take most of the internal compression and tension forces as they are located the furthest from the neutral axis, and the web mainly acts to support any shear forces and hold the two flanges apart. The transverse axis through the centroid of the cross section is called the neutral axis, and cutting plane through the beam at the neutral axis is called the neutral plane, or neutral surface. This surface does not lengthen or shorten during bending.

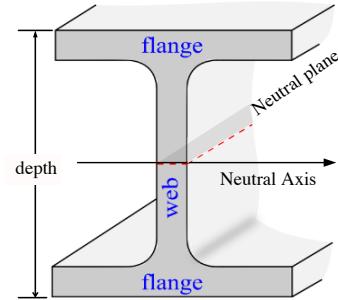


**Figure 10.4.8** Beam Nomenclature

#### Example 10.4.9 Built-up beam.

A built-up beam consists of two L8×4×1/2 angles attached to a 8×1 plate as shown. Determine

- the distance from the  $x$  axis to the neutral axis, which passes through the centroid of the combined shape, and
- the moment of inertia of the combined shape about the neutral axis.

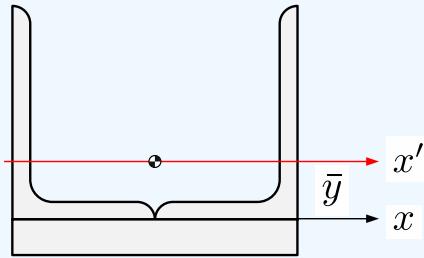

#### Answer.

$$\begin{aligned} \bar{y} &= 1.245 \text{ in} \\ I_{x'} &= 58.6 \text{ in}^4 \end{aligned}$$

#### Solution.

**Strategy.** Determine the properties of the sub shapes with respect to the  $x$  axis, and then use them to find the neutral axis.

Use the parallel axis theorem to find the moment of inertia of the parts with respect to the neutral axis.

Take advantage of the fact that the two angles are identical and positioned similarly.

**Find the neutral axis.** For one L8 × 4 × 1/2 angle, from [Section C.1](#)

$$A_L = 4.75 \text{ in}^2$$

$$\bar{y}_L = 1.98 \text{ in}$$

$$\bar{I}_L = 17.3 \text{ in}^4.$$

For the  $b = 8$  in,  $h = 1$  in rectangle

$$A_R = bh = 8 \text{ in}^2$$

$$\bar{y}_R = -h/2 = -0.5 \text{ in}$$

$$\bar{I}_R = \frac{bh^3}{12} = \frac{8}{12} = 6.67 \text{ in}^4.$$

Find the distance to the neutral axis

$$\begin{aligned}\bar{y} &= \frac{\sum A_i \bar{y}_i}{\sum A_i} = \frac{2A_L \bar{y}_L + A_R \bar{y}_R}{2A_L + A_R} \\ &= \frac{2(4.75)(1.98) + (4)(-0.5)}{2(4.75) + 4}\end{aligned}$$

$$\bar{y} = 1.245 \text{ in}.$$

**Find the Moment of Inertia.** The distance between the neutral axis is and the centroids of the subparts are

$$d_R = |\bar{y} - \bar{y}_R| = |1.245 - (-0.5)| = 1.745 \text{ in}$$

$$d_L = |\bar{y} - \bar{y}_L| = |1.245 - 1.98| = 0.735 \text{ in}.$$

The moment of inertia of the rectangle about the  $x'$  axis

$$\begin{aligned}I'_x &= [\bar{I} + Ad^2]_R \\ &= 6.67 + (4)(1.745)^2 \\ &= 18.85 \text{ in}^4.\end{aligned}$$

The moment of inertia of one angle about the  $x'$  axis

$$\begin{aligned}I'_x &= [\bar{I} + Ad^2]_L \\ &= 17.3 + (4.75)(0.735)^2 \\ &= 19.87 \text{ in}^4.\end{aligned}$$

The moment of inertia of the built up beam about the neutral axis

$$\begin{aligned}I_{x'} &= \sum (I_{x'})_i \\ &= 2(I_{x'})_L + (I_{x'})_R \\ &= 2(19.87) + 18.85 \\ I_{x'} &= 58.6 \text{ in}^4.\end{aligned}$$

## 10.5 Polar Moment of Inertia


### Key Questions

- How are polar moments of inertia similar and different to area moments of inertia about either a horizontal or vertical axis?

The polar moment of inertia is defined by the integral quantity

$$J_O = \int_A r^2 dA, \quad (10.5.1)$$

where  $r$  is the distance from the reference point to a differential element of area  $dA$ .

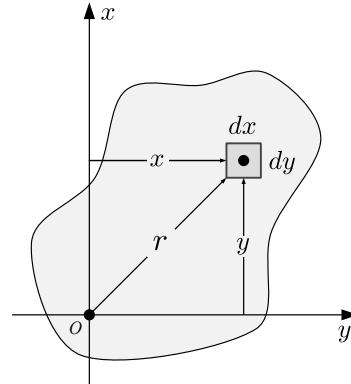

The polar moment of inertia describes the distribution of the area of a body with respect to a point in the plane of the body. Alternately, the point can be considered to be where a perpendicular axis crosses the plane of the body. The subscript on the symbol  $j$  indicates the point or axis.


There is a particularly simple relationship between the polar moment of inertia and the rectangular moments of inertia. Referring to the figure, apply the Pythagorean theorem  $r^2 = x^2 + y^2$  to the definition of polar moment of inertia to get

$$\begin{aligned} J_O &= \int_A r^2 dA \\ &= \int_A (x^2 + y^2) dA \\ &= \int_A x^2 dA + \int_A y^2 dA \\ J_O &= I_x + I_y. \end{aligned} \quad (10.5.2)$$

**Thinking Deeper 10.5.1 Torsional Stress.** The polar moment of inertia is an important factor in the design of drive shafts. When a shaft is subjected to torsion, it experiences internal distributed shearing forces throughout its cross-section which counteract the external torsional load.

This distributed shearing force is called **shear stress**, and is usually given the symbol tau,  $\tau$ . Shear stress is zero at the neutral axis and increases linearly with  $r$  to a maximum value,  $\tau_{\max}$  at the outside surface where  $r = c$ , so

$$\tau = \tau_{\max} \frac{r}{c}$$

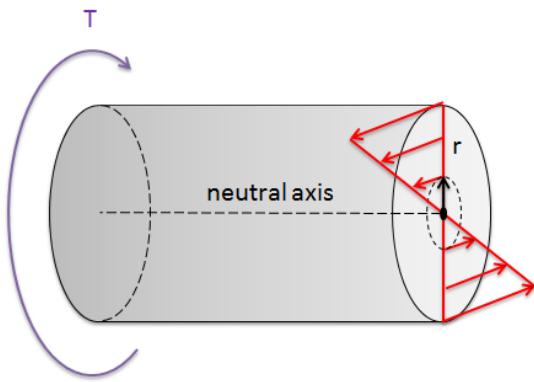

**Figure 10.5.2** Section-cut view of a shaft, showing shearing forces developed to withstand external torsion  $T$ .

The force at any point is  $dF = \tau dA$ , and the moment  $dM$  exerted at any point is  $dF$  times the moment arm, which is  $r$ . The total moment is the integral of this quantity over the area of the cross section, and is proportional to the polar moment of inertia.

$$\begin{aligned} T &= \int dM \\ &= \int r dF \\ &= \int_A r \tau_{\max} \frac{r}{c} dA \\ &= \frac{\tau_{\max}}{c} \int_A r^2 dA \\ T &= \frac{\tau_{\max}}{c} J \\ \tau_{\max} &= \frac{Tc}{J} \end{aligned}$$

This is the relationship between the maximum stress in a circular shaft and the applied torque  $T$  and the geometric properties of the shaft,  $J_O$  and  $c$ .

## 10.6 Radius of Gyration

The radius of gyration is an alternate way of expressing the distribution of area away from an axis which combines the effects of the moments of inertia and cross sectional area.

The radius of gyration can be thought of as the radial distance to a thin strip which has the same area and the same moment of inertia around a specific axis as the original shape. Compared to the moment of inertia, the radius of gyration is easier to visualize since it's a distance, rather than a distance to the fourth power.

The radius of gyration,  $k$  and the corresponding moment of inertia  $I$  are related, and both must refer to the same axis. If one is known, the other is easily found.

The radius of gyration with respect to the  $x$  and  $y$  axes and the origin are given by these formulas

$$k_x = \sqrt{\frac{I_x}{A}} \quad k_y = \sqrt{\frac{I_y}{A}} \quad k_o = \sqrt{\frac{J_o}{A}}. \quad (10.6.1)$$

In engineering design, the radius of gyration is used to determine the stiffness of structural columns and estimate the critical load which will initiate column buckling.

**Question 10.6.1** How are  $k_x$ ,  $k_y$ , and  $k_o$  related to each other?

**Answer.**

$$k_x^2 + k_y^2 = k_o^2$$

**Solution.** Start with (10.5.2)

$$\begin{aligned} J_O &= I_x + I_y && \text{divide each term by } A \\ \frac{J_o}{A} &= \frac{I_x}{A} + \frac{I_y}{A} && \text{apply definitions of } k^2 \\ k_o^2 &= k_x^2 + k_y^2 \end{aligned}$$

□

## 10.7 Products of Inertia

### Key Questions


- Why do we need to quantify the product of inertia for beams?
- Why is the product of inertia of a symmetrical cross section zero?

The **product of inertia** is another integral property of area, and is defined as

$$I_{xy} = \int_A xy \, dA. \quad (10.7.1)$$

The parallel axis theorem for products of inertia is

$$I_{xy} = \bar{I}_{x'y'} + A\bar{x}\bar{y}. \quad (10.7.2)$$

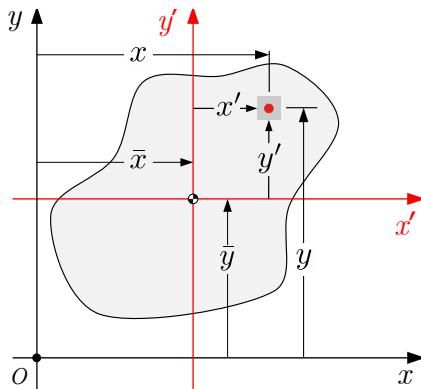

Unlike the rectangular moments of inertia, which are always positive, the product of inertia may be either positive, negative, or zero, depending on the object's shape and the orientation of the coordinate axes. The product of inertia will be zero for symmetrical objects when a coordinate axis is also an axis of symmetry.

If the product of inertia is not zero it is always possible to rotate the coordinate system until it is, in which case the new coordinate axes are called the **principle axes**. When the coordinate axes are oriented in the principle directions, the centroidal moments of inertia are maximum about one axis and minimum about the other, but neither is necessarily zero. The principle directions determine the best way to orient a beam to for maximum stiffness, and how much asymmetrical beams, like channels and angles, will twist when a load is applied.

## 10.8 Mass Moment of Inertia

You may recall from physics the relationship

$$T = I\alpha.$$

This formula is the rotational analog of Newton's second law  $F = ma$ . Here, the  $I$  represents the **mass moment of inertia**, which is the three-dimensional measure of a rigid body's resistance to rotation around an axis. Mass moment of inertia plays the same role for angular motion as *mass* does for linear motion.

Mass moment of inertia is defined by an integral equation identical to (10.1.3), except that the differential area  $dA$  is replaced with a differential element of mass,  $dm$ . The integration is conducted over a three dimensional physical object instead of a two dimensional massless area.

The units of mass moment of inertia are [mass][length]<sup>2</sup>, in contrast to area moment of inertia's units of [length]<sup>4</sup>.

Mass moments of inertia are covered in more detail and used extensively in the study of rigid body kinetics in *Engineering Dynamics*.

## 10.9 Exercises

# **Appendix A**

## **Notation**

Notation refers to the symbols we use to represent physical quantities and variables in mathematical expressions. Notation is a tool for communication and the symbols themselves carry meaning. You will find it easier to understand the contents of engineering textbooks if you are familiar with the notation used, and can pronounce the symbols to yourself when studying the equations.

Symbol	Notes
$\mathbf{F}$ , or $\vec{F}$	Vectors are written in a bold serif font. For handwritten vectors, a superimposed arrow is used.
$F$	Magnitudes and other scalar values are rendered in a regular italic serif font. $F$ is the magnitude of $\mathbf{F}$ .
$ \mathbf{F} $	Vertical bars indicate <i>absolute value</i> . The absolute value of a vector is its magnitude.
$\mathbf{F}_x, \mathbf{F}_y$	Vector component of $\mathbf{F}$ in the $x$ and $y$ directions. Subscripts are used to distinguish different related values.
$F_x, F_y$	Scalar components of vector $\mathbf{F}$ in the $x$ and $y$ directions. These are signed numbers, not vectors. Together, the sign and subscript define a vector component.
$\langle F_x, F_y \rangle$	An ordered pair of scalar components enclosed in angle brackets defines a vector.
$(F; \theta)$	An ordered pair of magnitude and direction separated with a semicolon defines a vector.
$\mathbf{i}, \mathbf{j}, \mathbf{k}$	Unit vectors in the $x$ , $y$ , and $z$ directions. Pronounced ‘ $\mathbf{i}$ hat’, ‘ $\mathbf{j}$ hat’, etc.
$\hat{\mathbf{A}}, \hat{\lambda}$	A hat indicates a unit vector in the vector’s direction.
$\mathbf{F}_x = F_x \mathbf{i}$ $\mathbf{F}_y = F_y \mathbf{j}$	Scalar components multiplied by unit vectors are vector components.
$\begin{aligned} \mathbf{F} &= \mathbf{F}_x + \mathbf{F}_y \\ &= F_x \mathbf{i} + F_y \mathbf{j} \end{aligned}$	A vector is the sum of its vector components.
$\begin{aligned} \mathbf{F} &= \langle F_x, F_y \rangle \\ &= \mathbf{F}_x + \mathbf{F}_y \\ &= F_x \mathbf{i} + F_y \mathbf{j} \\ &= (F \cos \theta) \mathbf{i} + (F \sin \theta) \mathbf{j} \\ &= F (\mathbf{i} \cos \theta + \mathbf{j} \sin \theta) \\ &=  \mathbf{F}  \langle \cos \theta, \sin \theta \rangle \end{aligned}$	These are all equivalent representation of vector $\mathbf{F}$ .


**Figure A.0.1** Notation used in this book

# Appendix B

## Useful Mathematics

### B.1 Distance Formula

The distance formula is used for finding the distance between two points. In two dimensions it is simply an application of the Pythagorean theorem.

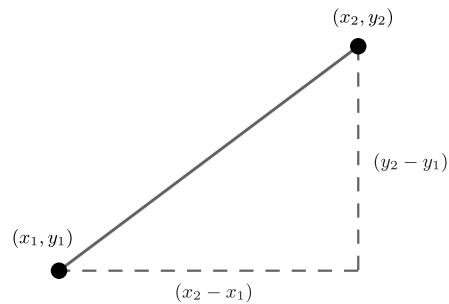

Given two points  $(x_1, y_1)$  and  $(x_2, y_2)$  the distance between them is:

$$d = \sqrt{(x_2 - x_1)^2 + (y_2 - y_1)^2}. \quad (\text{B.1.1})$$

Extension of the distance formula to three dimensions is straightforward.


$$d = \sqrt{(x_2 - x_1)^2 + (y_2 - y_1)^2 + (z_2 - z_1)^2} \quad (\text{B.1.2})$$

### B.2 Right Triangle Trigonometry

A **right triangle** is a triangle containing a  $90^\circ$  angle.

The side opposite to the right angle is called the **hypotenuse**.

The other two angles add to  $90^\circ$  and are called **complementary angles**.

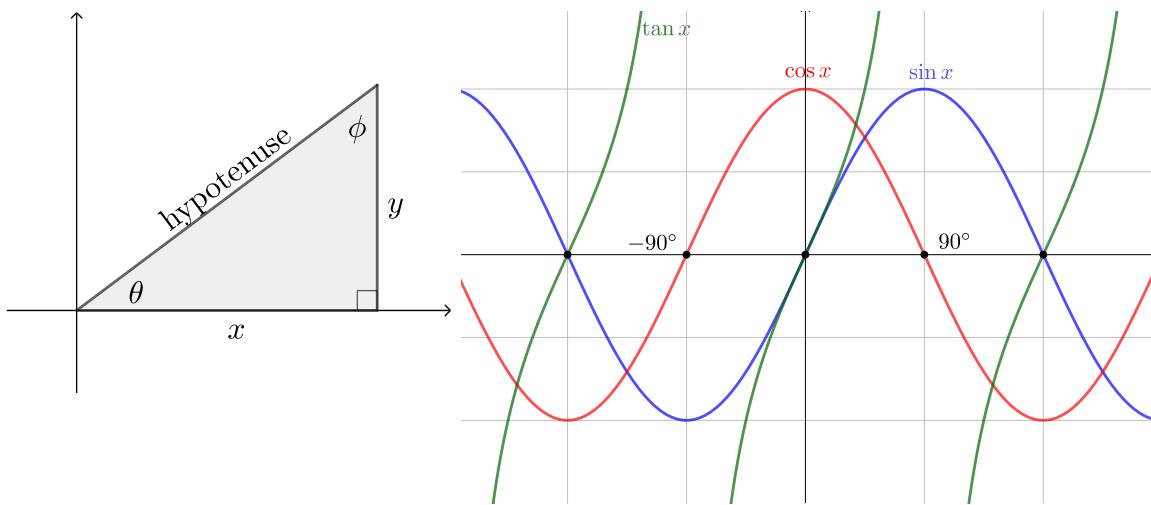

The relationship between the sides and angles of a right triangle are given by the three basic trig relations which may be recalled with the mnemonic **SOH-COH-TOA**.

$$\sin \theta = \frac{\text{opposite}}{\text{hypotenuse}}$$

$$\cos \theta = \frac{\text{adjacent}}{\text{hypotenuse}}$$

$$\tan \theta = \frac{\text{opposite}}{\text{adjacent}}$$

and their inverses,

$$\theta = \sin^{-1} \left( \frac{\text{opposite}}{\text{hypotenuse}} \right) \quad \theta = \cos^{-1} \left( \frac{\text{adjacent}}{\text{hypotenuse}} \right) \quad \theta = \tan^{-1} \left( \frac{\text{opposite}}{\text{adjacent}} \right)$$

**Facts.** The following statements regarding the trig functions and triangles are always true, and remembering them will help you avoid errors.

- $\sin$ ,  $\cos$  and  $\tan$  are functions of an angle and their values are unitless ratios of lengths.
- The inverse trig functions are functions of unitless ratios and their results are angles.
- The sine of an angle equals the cosine of its complement and vice-versa.
- The sine and cosine of any angle is always a unitless number between -1 and 1, inclusive.
- The sine, cosine, and tangent of angles between 0 and  $90^\circ$  are always positive.
- The inverse trig functions of positive numbers will always yield angles between 0 and  $90^\circ$
- The legs of a right triangle are always shorter than the hypotenuse.
- Only right triangles have a hypotenuse.


**Hints.** Here are some useful tips for angle calculations

- Take care that your calculator is set in *degrees mode* for this course.
- Always work with angles between  $0^\circ$  and  $90^\circ$  and use positive arguments for the inverse trig functions.
- Following this advice will avoid unwanted signs and incorrect directions caused because  $\frac{-a}{b} = \frac{a}{-b}$ , and  $\frac{a}{b} = \frac{-a}{-b}$  and the calculator can't distinguish between them.

## B.3 Oblique Triangle Trigonometry

An oblique triangle is any triangle which does not contain a right angle. As such, the rules of [Right Triangle Trigonometry](#) do not apply!

For an oblique triangle labeled as shown, the relations between the sides and angles are given by the **Law of Sines** and the **Law of Cosines**.

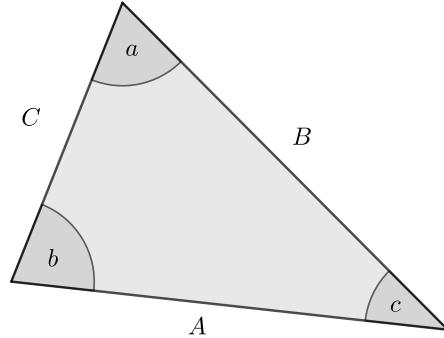

### B.3.1 Law of Sines

$$\frac{\sin a}{A} = \frac{\sin b}{B} = \frac{\sin c}{C} \quad (\text{B.3.1})$$

The law of Sines is used when you know the length of one side, the angle opposite it, and one additional angle (SAA) or side (SSA). If this is not the case use the Law of Cosines.

Take care in the (SSA) situation. This is known as the **ambiguous case**, and you must be alert for it. It occurs because there are two angles between  $0$  and  $180^\circ$  with the same sine. When you use your calculator to find  $\sin^{-1}(x)$  it may return the **supplement** of the angle you want. In fact, there may be two possible solutions to the problem, or one or both solutions may be physically impossible and must be discarded.

If one of the angles is  $90^\circ$ , then the Law of Sines simplifies to the definitions of sine and cosine since the sin of  $90^\circ$  is one.

### B.3.2 Law of Cosines

$$A^2 = B^2 + C^2 - 2BC \cos a \quad (\text{B.3.2})$$

$$B^2 = A^2 + C^2 - 2AC \cos b \quad (\text{B.3.3})$$

$$C^2 = A^2 + B^2 - 2AB \cos c \quad (\text{B.3.4})$$

The Law of Cosines is used when you know two sides and the included angle (SAS), or when you know all three sides but no angles (SSS). In any other situation, use the Law of Sines.

If one of the angles is  $90^\circ$  the Law of Cosines simplifies to the Pythagorean Theorem since  $\cos 90^\circ = 0$ .




# Appendix C

## Properties of Steel Sections


### C.1 Angles

#### C.1.1 Angle Section-US

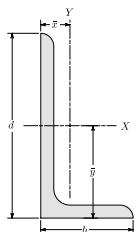

Description $d \times b \times t$	$W$ lb/ft	$A$ in <sup>2</sup>	$b$ in	$d$ in	$t$ in	$\bar{x}$ in	$\bar{y}$ in	$\bar{I}_{xx}$ in <sup>4</sup>	$\bar{I}_{yy}$ in <sup>4</sup>
L6×6×1	37.4	11	6	6	1	1.86	1.86	35.4	35.4
L6×6×7/8	33.1	9.75	6	6	0.875	1.81	1.81	31.9	31.9
L6×6×3/4	28.7	8.46	6	6	0.75	1.77	1.77	28.1	28.1
L6×6×5/8	24.2	7.13	6	6	0.625	1.72	1.72	24.1	24.1
L6×6×9/16	21.9	6.45	6	6	0.563	1.7	1.7	22	22
L6×6×1/2	19.6	5.77	6	6	0.5	1.67	1.67	19.9	19.9
L6×6×7/16	17.2	5.08	6	6	0.438	1.65	1.65	17.6	17.6
L6×6×3/8	14.9	4.38	6	6	0.375	1.62	1.62	15.4	15.4
L6×6×5/16	12.4	3.67	6	6	0.313	1.6	1.6	13	13
L6×4×7/8	27.2	8	6	4	0.875	1.12	2.12	27.7	9.7
L6×4×3/4	23.6	6.94	6	4	0.75	1.07	2.07	24.5	8.63
L6×4×5/8	20	5.86	6	4	0.625	1.03	2.03	21	7.48
L6×4×9/16	18.1	5.31	6	4	0.563	1	2	19.2	6.86
L6×4×1/2	16.2	4.75	6	4	0.5	0.981	1.98	17.3	6.22
L6×4×7/16	14.3	4.18	6	4	0.438	0.957	1.95	15.4	5.56
L6×4×3/8	12.3	3.61	6	4	0.375	0.933	1.93	13.4	4.86
L6×4×5/16	10.3	3.03	6	4	0.313	0.908	1.9	11.4	4.13
L6×3-1/2×1/2	15.3	4.5	6	3.5	0.5	0.829	2.07	16.6	4.24
L6×3-1/2×3/8	11.7	3.44	6	3.5	0.375	0.781	2.02	12.9	3.33
L6×3-1/2×5/16	9.8	2.89	6	3.5	0.313	0.756	2	10.9	2.84
L5×5×7/8	27.2	8	5	5	0.875	1.56	1.56	17.8	17.8
L5×5×3/4	23.6	6.98	5	5	0.75	1.52	1.52	15.7	15.7
L5×5×5/8	20	5.9	5	5	0.625	1.47	1.47	13.6	13.6
L5×5×1/2	16.2	4.79	5	5	0.5	1.42	1.42	11.3	11.3
L5×5×7/16	14.3	4.22	5	5	0.438	1.4	1.4	10	10
L5×5×3/8	12.3	3.65	5	5	0.375	1.37	1.37	8.76	8.76
L5×5×5/16	10.3	3.07	5	5	0.313	1.35	1.35	7.44	7.44
L5×3-1/2×3/4	19.8	5.85	5	3.5	0.75	0.993	1.74	13.9	5.52
L5×3-1/2×5/8	16.8	4.93	5	3.5	0.625	0.947	1.69	12	4.8
L5×3-1/2×1/2	13.6	4	5	3.5	0.5	0.901	1.65	10	4.02
L5×3-1/2×3/8	10.4	3.05	5	3.5	0.375	0.854	1.6	7.75	3.15
L5×3-1/2×5/16	8.7	2.56	5	3.5	0.313	0.829	1.57	6.58	2.69
L5×3-1/2×1/4	7	2.07	5	3.5	0.25	0.804	1.55	5.36	2.2
L5×3-1/2	12.8	3.75	5	3	0.5	0.746	1.74	9.43	2.55

### C.1.2 Angle Section-SI

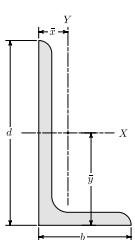


Description $d \times b \times t$	$W$ kg/m	$A$ mm <sup>2</sup>	$b$ mm	$d$ mm	$t$ mm	$\bar{x}$ mm	$\bar{y}$ mm	$\bar{I}_{xx}$ $10^6$ mm <sup>4</sup>	$\bar{I}_{yy}$ $10^6$ mm <sup>4</sup>
L152×152×22.2	49.3	6290	152	152	22.2	46	46	13.3	13.3
L152×152×19	42.7	5460	152	152	19.1	45	45	11.7	11.7
L152×152×15.9	36	4600	152	152	15.9	43.7	43.7	10	10
L152×152×14.3	32.6	4160	152	152	14.3	43.2	43.2	9.16	9.16
L152×152×12.7	29.2	3720	152	152	12.7	42.4	42.4	8.28	8.28
L152×152×11.1	25.6	3280	152	152	11.1	41.9	41.9	7.33	7.33
L152×152×9.5	22.2	2830	152	152	9.53	41.1	41.1	6.41	6.41
L152×152×7.9	18.5	2370	152	152	7.94	40.6	40.6	5.41	5.41
L152×102×22.2	40.3	5160	152	102	22.2	28.4	53.8	11.5	4.04
L152×102×19	35	4480	152	102	19.1	27.2	52.6	10.2	3.59
L152×102×15.9	29.6	3780	152	102	15.9	26.2	51.6	8.74	3.11
L152×102×14.3	26.9	3430	152	102	14.3	25.4	50.8	7.99	2.86
L152×102×12.7	24	3060	152	102	12.7	24.9	50.3	7.2	2.59
L152×102×11.1	21.2	2700	152	102	11.1	24.3	49.5	6.41	2.31
L152×102×9.5	18.2	2330	152	102	9.53	23.7	49	5.58	2.02
L152×102×7.9	15.3	1950	152	102	7.94	23.1	48.3	4.75	1.72
L152×89×12.7	22.7	2900	152	88.9	12.7	21.1	52.6	6.91	1.76
L152×89×9.5	17.3	2220	152	88.9	9.53	19.8	51.3	5.37	1.39
L152×89×7.9	14.5	1860	152	88.9	7.94	19.2	50.8	4.54	1.18
L127×127×22.2	40.5	5160	127	127	22.2	39.6	39.6	7.41	7.41
L127×127×19	35.1	4500	127	127	19.1	38.6	38.6	6.53	6.53
L127×127×15.9	29.8	3810	127	127	15.9	37.3	37.3	5.66	5.66
L127×127×12.7	24.1	3090	127	127	12.7	36.1	36.1	4.7	4.7
L127×127×11.1	21.3	2720	127	127	11.1	35.6	35.6	4.16	4.16
L127×127×9.5	18.3	2350	127	127	9.53	34.8	34.8	3.65	3.65
L127×127×7.9	15.3	1980	127	127	7.94	34.3	34.3	3.1	3.1
L127×89×19	29.3	3770	127	88.9	19.1	25.2	44.2	5.79	2.3
L127×89×15.9	24.9	3180	127	88.9	15.9	24.1	42.9	4.99	2
L127×89×12.7	20.2	2580	127	88.9	12.7	22.9	41.9	4.16	1.67
L127×89×9.5	15.4	1970	127	88.9	9.53	21.7	40.6	3.23	1.31
L127×89×7.9	12.9	1650	127	88.9	7.94	21.1	39.9	2.74	1.12
L127×89×6.4	10.4	1340	127	88.9	6.35	20.4	39.4	2.23	0.916
L127×76×12.7	19	2420	127	76.2	12.7	18.9	44.2	3.93	1.06
L127×76×11.1	16.7	2140	127	76.2	11.1	18.3	43.7	3.5	0.953
L127×76×9.5	14.5	1850	127	76.2	9.53	17.7	42.9	3.06	0.837
L127×76×7.9	12.1	1550	127	76.2	7.94	17.1	42.4	2.6	0.716
L127×76×6.4	9.8	1250	127	76.2	6.35	16.5	41.7	2.12	0.587
L102×102×19	27.5	3510	102	102	19.1	32.3	32.3	3.17	3.17
L102×102×15.9	23.4	2970	102	102	15.9	31	31	2.76	2.76
L102×102×12.7	19	2420	102	102	12.7	30	30	2.3	2.3
L102×102×11.1	16.8	2130	102	102	11.1	29.2	29.2	2.05	2.05
L102×102×9.5	14.6	1850	102	102	9.53	28.7	28.7	1.8	1.8
L102×102×7.9	12.2	1550	102	102	7.94	28.2	28.2	1.53	1.53
L102×102×6.4	9.8	1250	102	102	6.35	27.4	27.4	1.25	1.25
L102×89×12.7	17.6	2260	102	88.9	12.7	25.2	31.5	2.21	1.57
L102×89×9.5	13.5	1730	102	88.9	9.53	24.1	30.5	1.73	1.23
L102×89×7.9	11.4	1450	102	88.9	7.94	23.4	29.7	1.47	1.05
L102×89×6.4	9.2	1170	102	88.9	6.35	22.8	29	1.2	0.862


## C.2 Channels

### C.2.1 Channel Section-US

Description $d \times W$	$W$ lb/ft	$A$ in <sup>2</sup>	$d$ in	$b_f$ in	$t_w$ in	$t_f$ in	$\bar{x}$ in	$\bar{I}_{xx}$ in <sup>4</sup>	$\bar{I}_{yy}$ in <sup>4</sup>
C15×50	50	14.7	15	3.72	0.716	0.65	0.799	404	11
C15×40	40	11.8	15	3.52	0.52	0.65	0.778	348	9.17
C15×33.9	33.9	10	15	3.4	0.4	0.65	0.788	315	8.07
C12×30	30	8.81	12	3.17	0.51	0.501	0.674	162	5.12
C12×25	25	7.34	12	3.05	0.387	0.501	0.674	144	4.45
C12×20.7	20.7	6.08	12	2.94	0.282	0.501	0.698	129	3.86
C10×30	30	8.81	10	3.03	0.673	0.436	0.649	103	3.93
C10×25	25	7.35	10	2.89	0.526	0.436	0.617	91.1	3.34
C10×20	20	5.87	10	2.74	0.379	0.436	0.606	78.9	2.8
C10×15.3	15.3	4.48	10	2.6	0.24	0.436	0.634	67.3	2.27
C9×20	20	5.87	9	2.65	0.448	0.413	0.583	60.9	2.41
C9×15	15	4.4	9	2.49	0.285	0.413	0.586	51	1.91
C9×13.4	13.4	3.94	9	2.43	0.233	0.413	0.601	47.8	1.75
C8×18.75	18.75	5.51	8	2.53	0.487	0.39	0.565	43.9	1.97
C8×13.75	13.75	4.03	8	2.34	0.303	0.39	0.554	36.1	1.52
C8×11.5	11.5	3.37	8	2.26	0.22	0.39	0.572	32.5	1.31
C7×14.75	14.75	4.33	7	2.3	0.419	0.366	0.532	27.2	1.37
C7×12.25	12.25	3.59	7	2.19	0.314	0.366	0.525	24.2	1.16
C7×9.8	9.8	2.87	7	2.09	0.21	0.366	0.541	21.2	0.957
C6×13	13	3.82	6	2.16	0.437	0.343	0.514	17.3	1.05
C6×10.5	10.5	3.07	6	2.03	0.314	0.343	0.5	15.1	0.86
C6×8.2	8.2	2.39	6	1.92	0.2	0.343	0.512	13.1	0.687
C5×9	9	2.64	5	1.89	0.325	0.32	0.478	8.89	0.624
C5×6.7	6.7	1.97	5	1.75	0.19	0.32	0.484	7.48	0.47
C4×7.25	7.25	2.13	4	1.72	0.321	0.296	0.459	4.58	0.425
C4×6.25	6.25	1.84	4	1.65	0.247	0.296	0.453	4.19	0.374
C4×5.4	5.4	1.58	4	1.58	0.184	0.296	0.457	3.85	0.312
C4×4.5	4.5	1.34	4	1.52	0.125	0.296	0.473	3.53	0.265
C3×6	6	1.76	3	1.6	0.356	0.273	0.455	2.07	0.3
C3×5	5	1.47	3	1.5	0.258	0.273	0.439	1.85	0.241
C3×4.1	4.1	1.2	3	1.41	0.17	0.273	0.437	1.65	0.191
C3×3.5	3.5	1.09	3	1.37	0.132	0.273	0.443	1.57	0.169

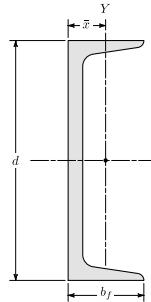

### C.2.2 Channel Section-SI

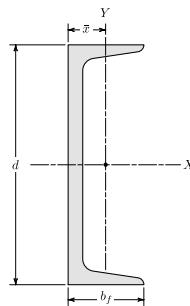


Description $d \times W$	$W$ kg/m	$A$ $\text{mm}^2$	$d$ mm	$b_f$ mm	$t_w$ mm	$t_f$ mm	$\bar{x}$ mm	$\bar{I}_{xx}$ $10^6 \text{ mm}^4$	$\bar{I}_{yy}$ $10^6 \text{ mm}^4$
C380×74	74	9480	381	94.5	18.2	16.5	20.3	168	4.58
C380×60	60	7610	381	89.4	13.2	16.5	19.8	145	3.82
C380×50.4	50.4	6450	381	86.4	10.2	16.5	20	131	3.36
C310×45	45	5680	305	80.5	13	12.7	17.1	67.4	2.13
C310×37	37	4740	305	77.5	9.83	12.7	17.1	59.9	1.85
C310×30.8	30.8	3920	305	74.7	7.16	12.7	17.7	53.7	1.61
C250×45	45	5680	254	77	17.1	11.1	16.5	42.9	1.64
C250×37	37	4740	254	73.4	13.4	11.1	15.7	37.9	1.39
C250×30	30	3790	254	69.6	9.63	11.1	15.4	32.8	1.17
C250×22.8	22.8	2890	254	66	6.1	11.1	16.1	28	0.945
C230×30	30	3790	229	67.3	11.4	10.5	14.8	25.3	1
C230×22	22	2840	229	63.2	7.24	10.5	14.9	21.2	0.795
C230×19.9	19.9	2540	229	61.7	5.92	10.5	15.3	19.9	0.728
C200×27.9	27.9	3550	203	64.3	12.4	9.91	14.4	18.3	0.82
C200×20.5	20.5	2600	203	59.4	7.7	9.91	14.1	15	0.633
C200×17.1	17.1	2170	203	57.4	5.59	9.91	14.5	13.5	0.545
C180×22	22	2790	178	58.4	10.6	9.3	13.5	11.3	0.57
C180×18.2	18.2	2320	178	55.6	7.98	9.3	13.3	10.1	0.483
C180×14.6	14.6	1850	178	53.1	5.33	9.3	13.7	8.82	0.398
C150×19.3	19.3	2460	152	54.9	11.1	8.71	13.1	7.2	0.437
C150×15.6	15.6	1980	152	51.6	7.98	8.71	12.7	6.29	0.358
C150×12.2	12.2	1540	152	48.8	5.08	8.71	13	5.45	0.286
C130×13	13	1700	127	48	8.26	8.13	12.1	3.7	0.26
C130×10.4	10.4	1270	127	44.5	4.83	8.13	12.3	3.11	0.196
C100×10.8	10.8	1370	102	43.7	8.15	7.52	11.7	1.91	0.177
C100×9.3	9.3	1190	102	41.9	6.27	7.52	11.5	1.74	0.156
C100×8	8	1020	102	40.1	4.67	7.52	11.6	1.6	0.13
C100×6.7	6.7	865	102	38.6	3.18	7.52	12	1.47	0.11
C75×8.9	8.9	1140	76.2	40.6	9.04	6.93	11.6	0.862	0.125
C75×7.4	7.4	948	76.2	38.1	6.55	6.93	11.2	0.77	0.1
C75×6.1	6.1	774	76.2	35.8	4.32	6.93	11.1	0.687	0.0795
C75×5.2	5.2	703	76.2	34.8	3.35	6.93	11.3	0.653	0.0703

## C.3 Standard Sections


### C.3.1 Standard Section-US

Description $d \times W$	$W$ lb/ft	$A$ $\text{in}^2$	$d$ in	$b_f$ in	$t_w$ in	$t_f$ in	$\bar{I}_{xx}$ $\text{in}^4$	$\bar{I}_{yy}$ $\text{in}^4$
S24×121	121	35.5	24.5	8.05	0.8	1.09	3160	83
S24×106	106	31.1	24.5	7.87	0.62	1.09	2940	76.8
S24×100	100	29.3	24	7.25	0.745	0.87	2380	47.4
S24×90	90	26.5	24	7.13	0.625	0.87	2250	44.7
S24×80	80	23.5	24	7	0.5	0.87	2100	42
S20×96	96	28.2	20.3	7.2	0.8	0.92	1670	49.9
S20×86	86	25.3	20.3	7.06	0.66	0.92	1570	46.6
S20×75	75	22	20	6.39	0.635	0.795	1280	29.5
S20×66	66	19.4	20	6.26	0.505	0.795	1190	27.5
S18×70	70	20.5	18	6.25	0.711	0.691	923	24
S18×54.7	54.7	16	18	6	0.461	0.691	801	20.7
S15×50	50	14.7	15	5.64	0.55	0.622	485	15.6
S15×42.9	42.9	12.6	15	5.5	0.411	0.622	446	14.3
S12×50	50	14.7	12	5.48	0.687	0.659	303	15.6
S12×40.8	40.8	11.9	12	5.25	0.462	0.659	270	13.5
S12×35	35	10.2	12	5.08	0.428	0.544	228	9.84
S12×31.8	31.8	9.31	12	5	0.35	0.544	217	9.33
S10×35	35	10.3	10	4.94	0.594	0.491	147	8.3
S10×25.4	25.4	7.45	10	4.66	0.311	0.491	123	6.73
S8×23	23	6.76	8	4.17	0.441	0.425	64.7	4.27
S8×18.4	18.4	5.4	8	4	0.271	0.425	57.5	3.69
S6×17.25	17.25	5.05	6	3.57	0.465	0.359	26.2	2.29
S6×12.5	12.5	3.66	6	3.33	0.232	0.359	22	1.8
S5×10	10	2.93	5	3	0.214	0.326	12.3	1.19
S4×9.5	9.5	2.79	4	2.8	0.326	0.293	6.76	0.887
S4×7.7	7.7	2.26	4	2.66	0.193	0.293	6.05	0.748
S3×7.5	7.5	2.2	3	2.51	0.349	0.26	2.91	0.578
S3×5.7	5.7	1.66	3	2.33	0.17	0.26	2.5	0.447

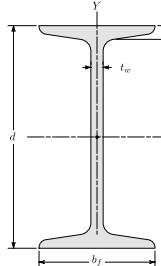

### C.3.2 Standard Section-SI


Description $d \times W$	$W$ kg/m	$A$ mm <sup>2</sup>	$d$ mm	$b_f$ mm	$t_w$ mm	$t_f$ mm	$\bar{I}_{xx}$ $10^6$ mm <sup>4</sup>	$\bar{I}_{yy}$ $10^6$ mm <sup>4</sup>
S610×180	180	22900	622	204	20.3	27.7	1320	34.5
S610×158	158	20100	622	200	15.7	27.7	1220	32
S610×149	149	18900	610	184	18.9	22.1	991	19.7
S610×134	134	17100	610	181	15.9	22.1	937	18.6
S610×119	119	15200	610	178	12.7	22.1	874	17.5
S510×143	143	18200	516	183	20.3	23.4	695	20.8
S510×128	128	16300	516	179	16.8	23.4	653	19.4
S510×112	112	14200	508	162	16.1	20.2	533	12.3
S510×98.2	98.2	12500	508	159	12.8	20.2	495	11.4
S460×104	104	13200	457	159	18.1	17.6	384	9.99
S460×81.4	81.4	10300	457	152	11.7	17.6	333	8.62
S380×74	74	9480	381	143	14	15.8	202	6.49
S380×64	64	8130	381	140	10.4	15.8	186	5.95
S310×74	74	9480	305	139	17.4	16.7	126	6.49
S310×60.7	60.7	7680	305	133	11.7	16.7	112	5.62
S310×52	52	6580	305	129	10.9	13.8	94.9	4.1
S310×47.3	47.3	6010	305	127	8.89	13.8	90.3	3.88
S250×52	52	6650	254	125	15.1	12.5	61.2	3.45
S250×37.8	37.8	4810	254	118	7.9	12.5	51.2	2.8
S200×34	34	4360	203	106	11.2	10.8	26.9	1.78
S200×27.4	27.4	3480	203	102	6.88	10.8	23.9	1.54
S150×25.7	25.7	3260	152	90.7	11.8	9.12	10.9	0.953
S150×18.6	18.6	2360	152	84.6	5.89	9.12	9.16	0.749
S130×15	15	1890	127	76.2	5.44	8.28	5.12	0.495
S100×14.1	14.1	1800	102	71.1	8.28	7.44	2.81	0.369
S100×11.5	11.5	1460	102	67.6	4.9	7.44	2.52	0.311
S75×11.2	11.2	1420	76.2	63.8	8.86	6.6	1.21	0.241
S75×8.5	8.5	1070	76.2	59.2	4.32	6.6	1.04	0.186

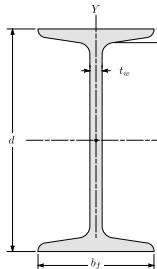



## C.4 Wide Flange Sections


### C.4.1 Wide Flange Section-US

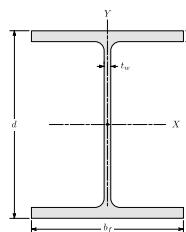

Description $d \times W$	$W$ lb/ft	$A$ in <sup>2</sup>	$d$ in	$b_f$ in	$t_w$ in	$t_f$ in	$\bar{I}_{xx}$ in <sup>4</sup>	$\bar{I}_{yy}$ in <sup>4</sup>
W44×335	335	98.5	44	15.9	1.03	1.77	31100	1200
W44×290	290	85.4	43.6	15.8	0.865	1.58	27000	1040
W44×262	262	77.2	43.3	15.8	0.785	1.42	24100	923
W44×230	230	67.8	42.9	15.8	0.71	1.22	20800	796
W40×655	655	193	43.6	16.9	1.97	3.54	56500	2870
W40×593	593	174	43	16.7	1.79	3.23	50400	2520
W40×503	503	148	42.1	16.4	1.54	2.76	41600	2040
W40×431	431	127	41.3	16.2	1.34	2.36	34800	1690
W40×397	397	117	41	16.1	1.22	2.2	32000	1540
W40×372	372	110	40.6	16.1	1.16	2.05	29600	1420
W40×362	362	106	40.6	16	1.12	2.01	28900	1380
W40×324	324	95.3	40.2	15.9	1	1.81	25600	1220
W40×297	297	87.3	39.8	15.8	0.93	1.65	23200	1090
W40×277	277	81.5	39.7	15.8	0.83	1.58	21900	1040
W40×249	249	73.5	39.4	15.8	0.75	1.42	19600	926
W40×215	215	63.5	39	15.8	0.65	1.22	16700	803
W40×199	199	58.8	38.7	15.8	0.65	1.07	14900	695
W40×392	392	116	41.6	12.4	1.42	2.52	29900	803
W40×331	331	97.7	40.8	12.2	1.22	2.13	24700	644
W40×327	327	95.9	40.8	12.1	1.18	2.13	24500	640
W40×294	294	86.2	40.4	12	1.06	1.93	21900	562
W40×278	278	82.3	40.2	12	1.03	1.81	20500	521
W40×264	264	77.4	40	11.9	0.96	1.73	19400	493
W40×235	235	69.1	39.7	11.9	0.83	1.58	17400	444
W40×211	211	62.1	39.4	11.8	0.75	1.42	15500	390
W40×183	183	53.3	39	11.8	0.65	1.2	13200	331
W40×167	167	49.3	38.6	11.8	0.65	1.03	11600	283
W40×149	149	43.8	38.2	11.8	0.63	0.83	9800	229
W36×925	925	272	43.1	18.6	3.02	4.53	73000	4940
W36×853	853	251	43.1	18.2	2.52	4.53	70000	4600
W36×802	802	236	42.6	18	2.38	4.29	64800	4210
W36×723	723	213	41.8	17.8	2.17	3.9	57300	3700
W36×652	652	192	41.1	17.6	1.97	3.54	50600	3230
W36×529	529	156	39.8	17.2	1.61	2.91	39600	2490
W36×487	487	143	39.3	17.1	1.5	2.68	36000	2250
W36×441	441	130	38.9	17	1.36	2.44	32100	1990
W36×395	395	116	38.4	16.8	1.22	2.2	28500	1750
W36×361	361	106	38	16.7	1.12	2.01	25700	1570
W36×330	330	96.9	37.7	16.6	1.02	1.85	23300	1420
W36×302	302	89	37.3	16.7	0.945	1.68	21100	1300
W36×282	282	82.9	37.1	16.6	0.885	1.57	19600	1200
W36×262	262	77.2	36.9	16.6	0.84	1.44	17900	1090
W36×247	247	72.5	36.7	16.5	0.8	1.35	16700	1010



### C.4.2 Wide Flange Section-SI

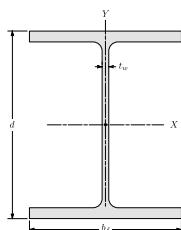

Description $d \times W$	$W$ kg/m	$A$ mm <sup>2</sup>	$d$ mm	$b_f$ mm	$t_w$ mm	$t_f$ mm	$\bar{I}_{xx}$ $10^6$ mm <sup>4</sup>	$\bar{I}_{yy}$ $10^6$ mm <sup>4</sup>
W1100×499	499	63500	1120	404	26.2	45	12900	499
W1100×433	433	55100	1110	401	22	40.1	11200	433
W1100×390	390	49800	1100	401	19.9	36.1	10000	384
W1100×343	343	43700	1090	401	18	31	8660	331
W1000×976	975	125000	1110	429	50	89.9	23500	1190
W1000×883	883	112000	1090	424	45.5	82	21000	1050
W1000×748	748	95500	1070	417	39.1	70.1	17300	849
W1000×642	642	81900	1050	411	34	59.9	14500	703
W1000×591	591	75500	1040	409	31	55.9	13300	641
W1000×554	554	71000	1030	409	29.5	52.1	12300	591
W1000×539	539	68400	1030	406	28.4	51.1	12000	574
W1000×483	483	61500	1020	404	25.4	46	10700	508
W1000×443	443	56300	1010	401	23.6	41.9	9660	454
W1000×412	412	52600	1010	401	21.1	40.1	9120	433
W1000×371	371	47400	1000	401	19.1	36.1	8160	385
W1000×321	321	41000	991	401	16.5	31	6950	334
W1000×296	296	37900	983	401	16.5	27.2	6200	289
W1000×584	584	74800	1060	315	36.1	64	12400	334
W1000×494	494	63000	1040	310	31	54.1	10300	268
W1000×486	486	61900	1040	307	30	54.1	10200	266
W1000×438	438	55600	1030	305	26.9	49	9120	234
W1000×415	415	53100	1020	305	26.2	46	8530	217
W1000×393	393	49900	1020	302	24.4	43.9	8070	205
W1000×350	350	44600	1010	302	21.1	40.1	7240	185
W1000×314	314	40100	1000	300	19.1	36.1	6450	162
W1000×272	272	34400	991	300	16.5	30.5	5490	138
W1000×249	249	31800	980	300	16.5	26.2	4830	118
W1000×222	222	28300	970	300	16	21.1	4080	95.3
W920×1377	1380	175000	1090	472	76.7	115	30400	2060
W920×1269	1270	162000	1090	462	64	115	29100	1910
W920×1194	1190	152000	1080	457	60.5	109	27000	1750
W920×1077	1080	137000	1060	452	55.1	99.1	23800	1540
W920×970	970	124000	1040	447	50	89.9	21100	1340
W920×787	787	101000	1010	437	40.9	73.9	16500	1040
W920×725	725	92300	998	434	38.1	68.1	15000	937
W920×656	656	83900	988	432	34.5	62	13400	828
W920×588	588	74800	975	427	31	55.9	11900	728
W920×537	537	68400	965	424	28.4	51.1	10700	653
W920×491	491	62500	958	422	25.9	47	9700	591
W920×449	449	57400	947	424	24	42.7	8780	541
W920×420	420	53500	942	422	22.5	39.9	8160	499
W920×390	390	49800	937	422	21.3	36.6	7450	454
W920×368	368	46800	932	419	20.3	34.3	6950	420
W920×344	344	44000	927	419	19.3	32	6490	391
W920×381	381	48600	951	310	24.4	43.9	6990	220
W920×345	345	43900	943	307	22.1	39.9	6240	195
W920×313	313	39900	932	310	21.1	34.5	5490	171
W920×289	289	36800	927	307	19.4	32	5040	156
W920×271	271	34600	922	307	18.4	30	4700	144