CSE 560 Computer Systems Architecture

Performance

This Unit

"Speed is not everything but it's kilometers ahead of whatever is in second place."

—Ed McCreight, The Dragon Computer System Xerox PARC September, 1984

- Metrics
 - Latency and throughput
- Reporting performance
 - Benchmarking and averaging
- · CPU performance equation

Performance: Latency vs. Throughput

- Latency (execution time): time to finish a fixed task
- Throughput (bandwidth): number of tasks in fixed time
 - Different: exploit parallelism for throughput, not latency
 - Often contradictory (latency vs. throughput)
 - Will see many examples of this
 - Choose definition of performance that matches your goals
 - Single scientific program: latency; web server: throughput?

Problem #1: Car vs. Bus

Car: speed = 60 miles/hour, capacity = 5
Bus: speed = 20 miles/hour, capacity = 60

Task: transport passengers 10 miles

	Latency (min)	Throughput (PPH)
Car		
Bus		





Problem #1: Car vs. Bus

Car: speed = 60 miles/hour, capacity = 5 Bus: speed = 20 miles/hour, capacity = 60

Task: transport passengers 10 miles

	Latency (min)	Throughput (PPH)	
Car	10 min	15 PPH	
Bus	30 min	60 PPH	





Comparing Performance

• A is X times faster than B if $Latency(A) = Latency(B) \frac{Latency(B)}{X}$

Throughput(A) = Throughput(B) * X

• A is X% faster than B if Latency(A) = Latency(B)1+X/100

Throughput(A) = Throughput(B) * (1+X/100)

Problem #2: Car vs. Bus Revisited

Latency

Car = 10 min, Bus = 30 min

- · Car is __ times faster than bus
- Car is __% faster than bus

Throughput

Car = 15 PPH, Bus = 60 PPH

- Bus is _ times faster than car
- Bus is _% faster than car



Problem #2: Car vs. Bus Revisited

Latency

Car = 10 min, Bus = 30 min

- · Car is 3 times faster than bus
- Car is 200% faster than bus

Throughput

Car = 15 PPH, Bus = 60 PPH

- Bus is 4 times faster than car
- Bus is 300% faster than car

Reporting Performance

Benchmarking & Averaging

SPEC Benchmarks

- **SPEC (Standard Performance Evaluation Corporation)**

 - · Consortium that collects, standardizes, and distributes
 - Post SPECmark results for different processors
 - 1 number that represents performance for entire suite • Benchmark suites for CPU, Java, I/O, Web, Mail, etc.
 - Updated every few years: so companies don't target benchmarks

SPEC CPU 2006

- 12 "integer": bzip2, gcc, perl, hmmer (genomics), h264, ...
- 17 "floating point": wrf (weather), povray, sphynx3 (speech)...
- Written in C/C++ and Fortran

Processor Performance and Workloads Q: what does Latency(ChipA) or Throughput(ChipA) mean?

A: nothing, there must be some associated workload

- Workload: set of tasks someone cares about
 - → Latency(Task1, ChipA) (car/bus Task = drive ppl 10 miles)

Benchmarks: standard workloads

- Used to compare performance across machines
- Are/highly representative of actual programs people run
- Micro-benchmarks: non-standard non-workloads (



- Tiny programs used to isolate certain aspects of
- Not representative of complex behaviors of real applications
- Frequently helpful to examine isolated performance auestions

Other Benchmarks

· Parallel benchmarks

- SPLASH2: Stanford Parallel Applications for Shared Memory
- · NAS: another parallel benchmark suite
- SPECopenMP: parallelized versions of SPECfpSPECjbb: Java multithreaded database-like workload

· Transaction Processing Council (TPC)

- TPC-C: On-line transaction processing (OLTP)
- TPC-H/R: Decision support systems (DSS) TPC-W: E-commerce database backend workload
- Have parallelism (intra-query and inter-query), heavy I/O, memory

Companies have internal benchmarks

- What's going to be important in the future?
- Overfitting ⊗

Mean (Average) Performance Numbers

- 3 Types of Means
- Arithmetic
 - for units that are proportional to time (e.g., latency)
- - for units that are inversely proportional to time (e.g., throughput)
- Geometic
 - For unitless quantities (e.g., speedup ratios)

Know when to use which one & how it is computed.

Arithmetic Mean

For units that are proportional to time (e.g., latency)

Chip A, N programs:

 $\Sigma_{i=1..N}$ Latency(P_i, A)

You can add latencies, but not throughputs

- Latency(P1+P2, A) = Latency(P1, A) + Latency(P2, A)
- Throughput(P1+P2,A) \neq Throughput(P1,A) + Throughput(P2,A)
 - 1 mile @ 10 miles/hour + 1 mile @ 100 miles/hour
 - Average is not 55 miles/hour
 - Need a different mean....

Harmonic Mean

For units that are inversely proportional to time (e.g., throughput)

Performance Equation(s)

Chip A, N programs:

 $\sum_{i=1..N} 1/Throughput(P_i, A)$

P₁: 1 mile @ 30 miles/hour P2: 1 mile @ 90 miles/hour

1/30 + 1/90= 45 mph Geometric Mean

For unitless quantities (e.g., speedup ratios)



 $N\sqrt{\prod_{i=1..N} \text{Speedup}(P_i, A)}$

Processor Performance Equation

Program runtime:

seconds program = instructions x cycles x seconds cycle



- Instructions per program: "dynamic instruction count"
 - Runtime count of instructions executed by the program
- Determined by program, compiler, ISA Cycles per instruction: "CPI" (typical range: 2 to 0.5) About how many cycles does an instruction take to execute? Determined by program, compiler, ISA, micro-architecture
- Seconds per cycle: clock period, length of each cycle
- Inverse metric: cycles/second (Hertz) or cycles/ns (Ghz)
- Determined by micro-architecture, technology parameters
- For lower latency (=better performance) minimize all three
- Difficult: often pull against one another

Cycles per Instruction (CPI)

- CPI: Cycle/instruction for on average
 - **IPC** = 1/CPI
 - · Used more frequently than CPI
 - Favored because "bigger is better", but harder to compute with
 - Different instructions have different cycle costs
 - E.g., "add" typically takes 1 cycle, "divide" takes >10 cycles
 - · Depends on relative instruction frequencies
- · CPI example
 - Program has equal ratio: integer, memory ops, floating point
 - Cycles per instruction type: integer = 1, memory = 2, FP = 3
 - What is the CPI? (33% * 1) + (33% * 2) + (33% * 3) = 2
 - Caveat: this sort of calculation ignores many effects
 - · Back-of-the-envelope arguments only

19

Problem #3: CPI Example

- Assume a processor with instruction frequencies and costs
 - Integer ALU: 50%, 1 cycle
 - Load: 20%, 5 cycle
 - Store: 10%, 1 cycle
 - Branch: 20%, 2 cycle
- Which change would improve performance more?
 - A: "Branch prediction" to reduce branch cost to 1 cycle?
 - B: "Cache" to reduce load cost to 3 cycles?
- Compute CPI

	INT	LD	ST	BR	CPI
Base					
Α					
В					



Problem #3: CPI Example

- Assume a processor with instruction frequencies and costs
 - Integer ALU: 50%, 1 cycleLoad: 20%, 5 cycle
 - Store: 10%, 1 cycle
 - Branch: 20%, 2 cycle
- Which change would improve performance more?
 - A: "Branch prediction" to reduce branch cost to 1 cycle?
 - B: "Cache" to reduce load cost to 3 cycles?
- Compute CPI

	INT	LD	ST	BR	СРІ
Base	0.5 x 1	0.2 x 5	0.1 x 1	0.2 x 2	2.0
Α	0.5 x 1	0.2 x 5	0.1 x 1	0.2 x 1	1.8
В	0.5 x 1	0.2 x 3	0.1 x 1	0.2 x 2	1.6

(winner)

MHz (MegaHertz) and GHz (GigaHertz)

- 1 Hertz = 1 cycle per second
 - 1 GHz is 1 cycle per nanosecond, 1 GHz = 1000 MHz
- General public (mostly) ignores CPI
 - Equates clock frequency with performance!
- Which processor would you buy?
 - Processor A: CPI = 2, clock = 5 GHz
- Processor B: CPI = 1, clock = 3 GHz
 Probably A, but B is faster (assuming same ISA/compiler)
- · Classic example
 - 800 MHz PentiumIII faster than 1 GHz Pentium4!
 - Recent example: Core i7 faster clock-per-clock than Core 2
 - Same ISA and compiler!
- Meta-point: danger of partial performance metrics!

2

MIPS (performance metric, not the ISA)

- (Micro) architects often ignore dynamic instruction count
 - Typically have one ISA, one compiler → treat it as fixed
- CPU performance equation becomes


 $\begin{array}{c|c} \text{Latency:} & \underline{\text{seconds}} = \underline{\text{cycles}} & x & \underline{\text{seconds}} \\ \hline \text{Throughput:} & \underline{\text{insns}} & \underline{\text{second}} & \underline{\text{cycle}} \\ \hline \text{second} & \underline{\text{second}} & \underline{\text{cycles}} \\ \hline \end{array}$


- MIPS (millions of instructions per second)
 - Cycles / second: clock frequency (in MHz)
 - Ex: CPI = 2, clock = 500 MHz \rightarrow 0.5 * 500 MHz = 250 MIPS
- Pitfall: may vary inversely with actual performance
 - Compiler removes insns, program faster, but lower MIPS
 - Work per instruction varies (multiply vs. add, FP vs. integer)

Latency vs. Throughput Revisited

- Two views of performance: latency vs. throughput
- Two scopes of performance: instruction vs. program
- Single instruction latency
 - Doesn't matter: programs comprised of billions+ of insns
 - Difficult to reduce anyway
 - Making 1 insn faster doesn't help unless it's the slowest insn
- $\bullet \quad \textbf{Instruction throughput} \rightarrow \textit{program latency or throughput}$
 - + Can reduce using *parallelism*
 - Multiple cores (more units executing instructions)... more later
 - Inter-instruction parallelism example: pipelining

2.

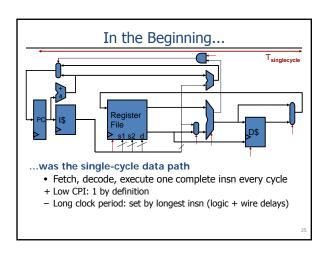

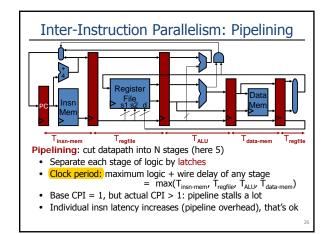



Pipelining: Clock Frequency vs. IPC

- Increase number of pipeline stages ("pipeline depth")
- Keep cutting datapath into finer pieces

Increases clock frequency (decreases clock period)

- Latch overhead & unbalanced stages cause sub-linear scaling
- Double the number of stages won't quite double the frequency
- Decreases IPC (increase CPI)
 - More pipeline "hazards", higher branch penalty
 - Memory latency relatively higher (same absolute lat., more cycles)
- Result: at some point, deeper pipelines decrease performance
- "Optimal" pipeline depth is program and technology specific
- Classic example
 - Pentium III: 12 stage pipeline, 800 MHz
 - Pentium 4: 22 stage pipeline, 1 GHz (and slower due to IPC)

Note: clock frequency implies CPU clock. Other system components have own clocks (or not).

Problem #4: CPI and Clock Frequency

- 1 GHz processor with
 - 80% non-memory instructions @ 1 cycle
 - 20% memory insns @ 6 nanoseconds (= 6 cycles)

Double the core clock frequency?

- Increasing processor clock doesn't accelerate memory!
 - Non-memory instructions retain 1-cycle latency
 - · Memory instructions now have 12-cycle latency

Infinite clock frequency?

· Hello, Amdahl's Law!

	Non-Mem	Mem	СРІ	MIPS	Speedup
1 GHz					
2 GHz					
∞ GHz					
					. 117.



Problem #4: CPI and Clock Frequency

1 GHz processor with

- 80% non-memory instructions @ 1 cycle
- 20% memory insns @ 6 nanoseconds (= 6 cycles)

Double the core clock frequency?

- Increasing processor clock doesn't accelerate memory!
 - Non-memory instructions retain 1-cycle latency
 - Memory instructions now have 12-cycle latency

Infinite clock frequency?

Hello, Amdahl's Law!

- Ticilo, Amaani 3 Law:						
	Non-Mem	Mem	СРІ		Speedup	
1 GHz	0.8 x 1	0.2 x 6	2.0	500		
2 GHz	0.8 x 1	0.2 x 12	3.2	625	1.25 (<< 2)	
∞ GHz	1M insn / (200K x 6 ns)			833	1.66	

Measuring CPI

- How are CPI and execution-time actually measured?
 - Execution time? stopwatch timer (Unix "time" command)
 - CPI = CPU time / (clock period * dynamic insn count)
 - · How is dynamic instruction count measured?
- More useful is CPI breakdown (CPI_{CPU}, CPI_{MEM}, etc.)
 - · So we know what performance problems are and what to fix
 - · Hardware event counters
 - · Available in most processors today
 - One way to measure dynamic instruction count
 - Calculate CPI using counter frequencies / known event costs
 - · Cycle-level micro-architecture simulation (e.g., SimpleScalar)
 - + Measure exactly what you want ... and impact of potential fixes!
 - · Method of choice for many micro-architects
 - · Hardware emulation (e.g., on FPGAs) becoming common

Performance Rules of Thumb

"Make the common case fast" Amdahl's Law:

- Literally: total speedup limited by non-accelerated piece
- Example: can optimize 50% of program A
 - Even "magic" optimization that makes this 50% disappear...
 - ...only yields a 2X speedup

Corollary: build a balanced system

- Don't optimize 1% to the detriment of other 99%
- Don't over-engineer capabilities that cannot be utilized

Design for actual performance, not peak performance

- Peak perf: "Performance you are guaranteed not to exceed"
- Greater than "actual" or "average" or "sustained" performance
- Why? Caches misses, branch mispredictions, limited ILP, etc.
- For actual performance X, machine capability must be > X

Summary

• Latency:

 $\frac{\text{seconds}}{\text{program}} =$ $\frac{\text{instructions}}{\text{program}} \ \ \text{X} \ \frac{\text{cycles}}{\text{instruction}} \ \ \text{X} \ \ \frac{\text{seconds}}{\text{cycle}}$

- Instructions / program: dynamic instruction count
 - Function of program, compiler, instruction set architecture (ISA)
- Cycles / instruction: CPI
- Function of program, compiler, ISA, micro-architecture Seconds / cycle: clock period
- - Function of micro-architecture, technology parameters
- Optimize each component
 - CSE 560 focuses mostly on CPI (caches, parallelism)
 - ...but some on dynamic instruction count (compiler, ISA)
 - ...and some on clock frequency (pipelining, technology)