6.4 Pulse width as digital input

Digital input can also be used to transferee other data. One way is to modulate the data into pulse duration e.g. longer the duration of the pulse, bigger the value. This modulation of data is called **Pulse-width modulatio** or **PWM**. Such an example is ultrasonic distance sensor. Where the distance is hidden in the time duration that sound needed of travel the distance from source to object and back as presented in fig. 1.

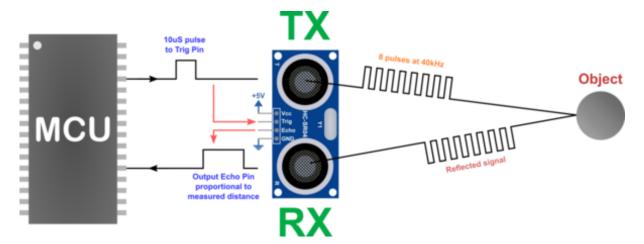


Figure 1: How Ultrasonic sensor works.

Since the speed of sound in air is constant ($v_s=340m/s$) we can easily calculate the distance according to eq. 1.

$$distance = \frac{1}{2}v_s t_{duration} \tag{1}$$

6.4.1 Tasks:

1. Connect the ultrasonic distance sensor to module Robduino according to tbl. 1

Table 1: Connestion of ultrasonic distance sensor.

HC-SR04 pins	RobDuino pins
+5V	+5V
Trigg.	Α0

dr. David Rihtaršič

HC-SR04 pins	RobDuino pins
Echo	A1
GND	GND

2. Test next program if you get reasonable data of time duration in Serial window.

Program 1: PWM as Digital Input.

```
1
       const char TRIGGER_PIN = A0;
2
       const char ECHO_PIN
3
4
       void setup()
5
         pinMode(TRIGGER_PIN, OUTPUT);
6
7
         pinMode(ECHO_PIN, INPUT);
8
         Serial.begin(9600);
9
10
       int getPulseWidth_us()
11
12
         digitalWrite(TRIGGER_PIN,HIGH);
13
         delayMicroseconds(10);
14
15
         digitalWrite(TRIGGER_PIN,LOW);
         return pulseIn(ECHO_PIN, HIGH);
16
17
       }
18
19
       float getDistance_cm()
20
21
         // do distance calculation here...
22
         return 0
       }
23
       void loop()
24
25
26
         float distance_cm = getDistance_cm();
         int duration_us = getPulseWidth_us();
27
28
         Serial.println(duration_us);
29
         delay(2000);
       }
30
```

3. Add needed code in function getDistance_cm() to calculate the distance in cm. Also change the Serial.println(duration_us) program line to output distance_cm value.

6.4.2 Questions:

1. What is PWM?

dr. David Rihtaršič

- 2. How are PWM data presented in digital signal?
- 3. What voltage is used to transmit PWM values?

6.4.3 Summary:

6.4.3.1 <++>

6.4.4 Issues:

6.4.4.1 <++>

dr. David Rihtaršič 3