Basics of Semiconductor Devices

Dinesh Sharma Microelectronics group EE Department, IIT Bombay

May 24, 2016

In this booklet, we review the fundamentals of Semiconductor Physics and basics of device operation. We shall concentrate largely on elemental semiconducors such as silicon or germanium, and most numerical values used for examples are specific to silicon.

1 Semiconductor fundamentals

A semiconductor has two types of mobile charge carriers: negatively charged electrons and positively charged holes. We shall denote the concentrations of these charge carriers by n and p respectively. The discussions in this booklet apply to elemental semiconductors (like silicon) which belong to group IV of the periodic table. We can intentionally add impurities from groups III and V to the semiconductor. These impurities are called dopants. Impurities from group III are called acceptors while those from group V are called donors. Each donor atom has an extra electron, which is very loosely bound to it. At room temperature, there is sufficient thermal energy present, so that the loosely bound electron breaks free from the donor, leaving the donor positively charged. This contributes an additional electron to the free charge carriers in the semiconductor, and a positive ionic charge at a fixed location in the semiconductor. Similarly, an acceptor atom captures an electron, thus producing a mobile hole and becoming negatively charged itself. A semiconductor without any dopants is called intrinsic. An unperturbed semiconductor must be charge neutral as a whole. If we denote the concentration of ionised donors by N_d^+ and the concentration of ionised acceptors by N_a^- , we can write for the net charge density at any point in the semiconductor as:

$$\rho = q(N_d^+ - N_a^- + p - n) \tag{1}$$

where q is the absolute value of the electronic charge. In an unperturbed semiconductor, ρ will be zero everywhere. Electrons and holes are generated thermally - the availability of energy equal to the band gap of the semiconductor results in the generation of an *electron* - *hole pair*. Simultaneously, electrons and holes can recombine to annihilate each other, giving out energy which is equal to the band gap of the semiconductor. Thus we have the reversible reaction:

$$e^- + h^+ \rightleftharpoons E_g$$

Where E_g is the band gap energy of the semiconducor.

Applying the law of mass action to the above reaction, we can write for the equilibrium concentration of holes and electrons:

$$n \cdot p = \text{constant}$$

The above relation applies to doped as well as intrinsic semiconductors. But for an intrinsic semiconductor,

$$n = p \equiv n_i$$

Therefore, the constant in the equation connecting n and p must be n_i^2 . Thus, for a semiconductor in equilibrium,

$$n \cdot p = n_i^2 \tag{2}$$

Since n and p are not independent, but are constrained by the above relation, we can define a single independent variable, the Fermi potential by

$$\Phi_{\rm F} \equiv \frac{K_B T}{q} ln \frac{p}{n_i} = \frac{K_B T}{q} ln \frac{n_i}{n} \tag{3}$$

Where K_B is the Boltzmann constant, T is the absolute temperature and q is the absolute value of the electronic charge. At room temperature, K_BT/q is approximately 26 mV and n_i is of the order of $10^{10}/\text{cm}^3$ for silicon. Now electron and hole concentrations are given by:

$$n = n_i e^{-\frac{q\Phi_{\rm F}}{K_B T}}$$

$$p = n_i e^{\frac{q\Phi_{\rm F}}{K_B T}} \tag{4}$$

To simplify these relations, we define a dimensionless Fermi potential by:

$$u_F \equiv \frac{q\Phi_F}{K_B T} = \ln(p/n_i) = \ln(n_i/n)$$

then:

$$n = n_i e^{-u_F}$$

$$p = n_i e^{u_F}$$
(5)

Generally, a semiconductor will be doped with only one kind of impurity. A semiconductor doped with donors will have many more electrons than holes. This type of semiconductor is called N type, and electrons are the *majority* carriers in this type of semiconductor. Similarly, holes are the majority carriers in a semiconductor doped with acceptors and it is termed P type. If both types of dopants are present, the one present in higher concentration determines the 'type' of the semiconductor. The *net* doping is defined as the difference in the concentrations of the more abundant and the less abundant dopants.

In most practical cases, the ratio of majority to minority carriers is very high. The concentration of majority carriers is very nearly equal to the net dopant concentration. To take a typical example, consider P type silicon with boron concentration of 10¹⁶ atoms/cm³. This gives:

$$\begin{array}{rcl} p &=& N_a = 10^{16}/\mathrm{cm}^3 \\ n &=& n_i^2/p \approx 10^{20}/10^{16}/\mathrm{cm}^3 = 10^4/\mathrm{cm}^3 \\ p/n &\approx& 10^{12} \ ! \end{array}$$

1.1 Band Diagrams

The above concepts are often visualised with the help of band diagrams. The arrangement of atoms in a semiconductor results in certain electron energies which are not permitted. Thus, the energy range is divided into bands of permitted energy values alternating with forbidden gaps.

The highest such band which is nearly filled with electrons is called the valance band. Unoccupied levels in this band correspond to holes. For stability, electrons seek the lowest energy level available. If a vacancy is available at a lower energy - an electron at a higher energy will drop to this level. The vacancy thus bubbles up to a higher level. Therefore, holes seek the highest electron energy available.

The band just above the valance band is called the conduction band. In a semiconductor, this is partially filled. Conduction in a semiconducor is caused by electrons in the conduction band (which are normally to be found at the lowest energy in the conduction band) and holes in the valance band - (found at the highest electron energy in the valance band).

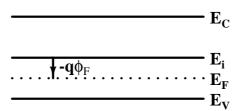


Figure 1: Semiconductor Bands

Band diagrams are plots of electron energies as a function of position in the semiconductor. Typically, the top of the valance band (corresponding to minimum hole energy) and the bottom of the conduction band are plotted. We can show the Fermi potential and the corresponding Fermi energy(= $-q\Phi_F$) in the band diagram of silicon as a level in the band gap. We use the halfway point between the conduction and the valence band as the reference for energy and potential. When $n = p = n_i$, the Fermi potential is 0 (from eq. 3) and correspondingly, the Fermi energy lies at the intrinsic Fermi level halfway in the band gap. (Actually, this level can be slightly away from the middle of the band gap depending on the density of allowed states in the conduction and valance bands - but for now, we'll ignore this). When holes are the majority carriers, Φ_F is positive and the Fermi energy (= $-q\Phi_F$) lies below the mid gap level, as shown in figure 1. When electrons are the majority carriers, Φ_F is negative, and the Fermi energy lies above the mid gap level.

1.2 A semiconducor in the presence of an electric field

In the presence of an electric field, the electrostatic potential is different at different positions. The energy of an electron has an extra component $= -q\phi$ where ϕ is the electrostatic potential.

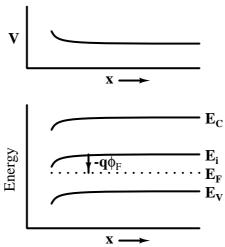


Figure 2: Potential distribution and Band Diagram in the presence of a field

Consequently in the band diagram the conduction, valance and intrinsic levels are bent. In equilibrium, the Fermi level is still straight. (We shall see later that in the absence of a current, the slope of the Fermi level must vanish). Relations for n and p must now take the electrostatic potential as well as the Fermi potential into account and the electron and hole concentrations are not uniform over the semiconductor. If we represent the concentrations of electrons and

holes without any applied field by n_0 and p_0 respectively, then in the presence of a field (but in equilibrium),

$$n = n_0 e^{\frac{q\phi}{K_B T}}$$

$$p = p_0 e^{-\frac{q\phi}{K_B T}}$$
(6)

where ϕ is the electrostatic potential.

If we define a dimensionless electrostatic potential by:

$$u \equiv \frac{q\phi}{K_B T} \tag{7}$$

we can write the above relations as:

$$n = n_0 e^u = n_i e^{(u - u_F)}$$

 $p = p_0 e^{-u} = n_i e^{-(u - u_F)}$ (8)

Since there is equilibrium, even though electron and hole concentration is not uniform, the product of n and p is still constant and equal to n_i^2 everywhere.

1.3 Non-equilibrium case

The above relations assume a semiconductor in equilibrium. It is possible to create excess carriers in the semiconductor over those dictated by equilibrium considerations. For example, if we shine light on a semiconductor, electron-hole pairs will be created. Since the value of n as well as that of p goes up, the np product will exceed n_i^2 , till the equilibrium is restored after the light is turned off (by enhanced recombination). If the number of excess carriers is small compared to the majority carriers, we may assume that the carrier concentrations are still described by relations like those given above. However, the concentrations of electrons and holes are not constrained by relation(2) any more. Therefore, we cannot use the same value of u_F for describing electron as well as hole concentrations. We now have separate values of Φ_F for electrons and holes. These are called quasi Fermi levels (or imrefs) for electrons and holes, Φ_{F_n} and Φ_{F_p} , defined by the relations

$$n = n_i e^{(u-u_{F_n})}$$

$$p = n_i e^{-(u-u_{F_p})}$$
(9)

Where u_{F_n} and u_{F_p} are the dimensionless versions of quasi Fermi levels Φ_{F_n} and Φ_{F_p} defined as in equation(7)). The np product is now given by

$$np = n_i^2 e^{(u_{F_p} - u_{F_n})} (10)$$

and is no longer constant. Because the number of additional carriers is assumed to be small compared to the majority carriers, the concentration of majority carriers and hence its quasi Fermi level is very close to the equilibrium value. The relative change in the concentration of minority carriers could, however, be large and consequently the minority carrier quasi Fermi level could be substantially different from the equilibrium Fermi level.

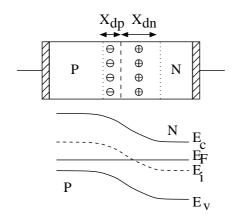


Figure 3: The abrupt p-n junction

2 The p-n diode

We shall analyse the abrupt pn junction, in reverse and forward bias. We assume that the doping density is constant and its value = N_a on the P side and N_d on the N side, changing abruptly at the metallurgical junction as shown. Because there is a strong concentration gradient for electrons and holes at the junction, there will be a diffusion current of holes towards the N side and of electrons towards the P side. As these carriers leave behind ionised dopants, small regions on either side of the junction acquire a charge. The P side, from where positively charged holes have left, (leaving behind negatively charge acceptor ions), acquires a negative potential. Similarly, the N side becomes positively charged. The regions from where mobile charges have left, are called depletion regions. The potential difference resulting from this charge redistribution (called the built-in voltage) opposes further diffusion of carriers. A dynamic equilibrium is reached when the drift current due to this potential difference and the diffusion current due to the concentration gradient become equal and opposite. In equilibrium, The electron as well as hole currents must be zero individually (principle of detailed balance). Writing the electron and hole current densities as sums of their respective drift and diffusion current densities:

$$J_{n} = nq\mu_{n}(-\frac{\partial\phi}{\partial x}) + qD_{n}\frac{\partial n}{\partial x}$$

$$J_{p} = pq\mu_{p}(-\frac{\partial\phi}{\partial x}) - qD_{p}\frac{\partial p}{\partial x}$$
(11)

From equation (9)

$$\frac{\partial n}{\partial x} = n_i e^{(u - u_{F_n})} \frac{\partial}{\partial x} (u - u_{F_n})$$

$$\frac{\partial p}{\partial x} = n_i e^{(u_{F_p} - u)} \frac{\partial}{\partial x} (u_{F_p} - u)$$

or

$$\frac{\partial n}{\partial x} = n \frac{q}{K_B T} \frac{\partial}{\partial x} (\phi - \Phi_{F_n})$$

$$\frac{\partial p}{\partial x} = p \frac{q}{K_B T} \frac{\partial}{\partial x} (\Phi_{F_p} - \phi)$$

Using Einstein relations ($\frac{q}{K_BT}D = \mu$), and Substituting in the relations for J_n and J_p ,

$$J_{n} = -nq\mu_{n}(\frac{\partial\phi}{\partial x}) + nq\mu_{n}\frac{\partial}{\partial x}(\phi - \Phi_{F_{n}})$$

$$J_{p} = -pq\mu_{p}(\frac{\partial\phi}{\partial x}) - pq\mu_{p}\frac{\partial}{\partial x}(\Phi_{F_{p}} - \phi)$$

Which leads to

$$J_{n} = -nq\mu_{n} \frac{\partial \Phi_{F_{n}}}{\partial x};$$

$$J_{p} = -pq\mu_{p} \frac{\partial \Phi_{F_{p}}}{\partial x};$$
(12)

When there is no flow of current, $\Phi_{F_n} = \Phi_{F_p} = \Phi_{F}$. according to the relations derived above, the derivative of Φ_F must vanish everywhere for zero current. Thus, the Fermi level is constant and the same at the two sides of the junction. The Fermi potentials before being put in contact were:

$$\Phi_{\text{F}} = \frac{K_B T}{q} \ln(N_a/ni) \qquad \text{P side} : x < 0$$

$$\Phi_{\text{F}} = -\frac{K_B T}{q} \ln(N_d/ni) \qquad \text{N side} : x > 0$$

The Fermi potential difference was, therefore, $\frac{K_BT}{q} \ln \left(\frac{N_dN_a}{n_i^2} \right)$. Since after being put in contact, the Fermi levels have equalised on the two sides, the built in voltage must be equal and opposite to this potential, taking the P side to a negative potential and the N side to a positive potential. We can write for the magnitude of the built in voltage:

$$V_{bi} = \frac{K_B T}{q} \ln \left(\frac{N_a N_d}{n_i^2} \right) \tag{13}$$

2.1 pn Diode in Reverse Bias

The diode is reverse biased when we apply a voltage such that the n side is more positive as compared to the p side. In this case, the applied voltage is in the same direction as the built-in field, which opposes the movement of majority carriers and widens the depletion regions on either side of the junction. We analyse the reverse biased diode by making the depletion approximation. We assume that in reverse bias, the depletion regions have zero carrier density, and the field is completely confined to depletion regions. Solving Poisson's equation in P region (x < 0) and the N region (x > 0)

$$\frac{\partial^2 \phi}{\partial x^2} = \frac{qN_a}{\epsilon_{si}} \quad \text{(for } x < 0\text{)}$$

$$\frac{\partial^2 \phi}{\partial x^2} = -\frac{qN_d}{\epsilon_{si}} \quad \text{(for } x > 0\text{)}$$

Integrating with respect to x

$$\begin{array}{ll} \frac{\partial \phi}{\partial x} & = \frac{qN_a}{\epsilon_{si}}x + c1 & \text{(for x < 0)} \\ \frac{\partial \phi}{\partial x} & = -\frac{qN_d}{\epsilon_{si}}x + c2 & \text{(for x > 0)} \end{array}$$

where c_1 and c_2 are constants of integration, which can be evaluated from the condition that the field vanishes at the edge of the depletion regions at $-X_{dp}$ and at X_{dn} . This leads to

$$\frac{\partial \phi}{\partial x} = \frac{qN_a}{\epsilon_{si}} (x + X_{dp}) \quad \text{(for } x < 0)$$

$$\frac{\partial \phi}{\partial x} = -\frac{qN_d}{\epsilon_{si}} (x - X_{dn}) \quad \text{(for } x > 0)$$
(14)

Since the value of the field must match at x = 0;

$$N_a X_{dp} = N_d X_{dn} \tag{15}$$

Integrating equation (14) once again with respect to x, we get

$$\phi = \frac{qN_a}{\epsilon_{si}} \left(\frac{x^2}{2} + X_{dp} x \right) + c_3 \quad \text{(for } x < 0)$$

$$\phi = -\frac{qN_d}{\epsilon_{si}} \left(\frac{x^2}{2} - X_{dn} x \right) + c_4 \quad \text{(for } x > 0)$$

Where the constants of integration c_3 and c_4 can again be evaluated from the boundary conditions at $-X_{\rm dp}$ and $X_{\rm dn}$. If we require that the potential is 0 at $-X_{\rm dp}$ and V at $X_{\rm dn}$,

$$c_3 = \frac{qN_a}{2\epsilon_{si}}X_{dp}^2$$

$$c_4 = V - \frac{qN_d}{2\epsilon_{si}}X_{dn}^2$$

Substituting these values, we get:

$$\phi = \frac{qN_a}{\epsilon_{si}} \left(\frac{x^2 + X_{dp}^2}{2} + X_{dp} x \right) \quad \text{(for } x < 0)$$

$$\phi = V - \frac{qN_d}{\epsilon_{si}} \left(\frac{x^2 + X_{dn}^2}{2} - X_{dn} x \right) \quad \text{(for } x > 0)$$
(16)

Since the potential at x = 0 should be continuous,

$$\frac{qN_a}{2\epsilon_{si}}X_{dp}^2 = V - \frac{qN_d}{2\epsilon_{si}}X_{dn}^2$$
so,
$$V = \frac{q}{2\epsilon_{si}}(N_aX_{dp}^2 + N_dX_{dn}^2)$$
(17)

making use of equation (15), we can write

$$V = \frac{qN_aX_{dp}^2}{2\epsilon_{si}N_d}(N_d + N_a)$$
$$= \frac{qN_dX_{dn}^2}{2\epsilon_{si}N_a}(N_d + N_a)$$

which leads to

$$X_{dp} = \sqrt{\frac{2\epsilon_{si}V}{q(N_d + N_a)} \frac{N_d}{N_a}}$$

$$X_{dn} = \sqrt{\frac{2\epsilon_{si}V}{q(N_d + N_a)} \frac{N_a}{N_d}}$$
(18)

From which the total depletion width can be calculated as:

$$X_d \equiv X_{dp} + X_{dn} = \sqrt{\frac{2\epsilon_{si}V}{q(N_d + N_a)}} \left(\sqrt{\frac{N_d}{N_a}} + \sqrt{\frac{N_a}{N_d}}\right)$$

which gives

$$X_d = \sqrt{\frac{2\epsilon_{si}V}{q}\left(\frac{1}{N_a} + \frac{1}{N_d}\right)} \tag{19}$$

The voltage V in the above expressions is the total voltage across the junction. Since there is a reverse bias of V_{bi} for a zero applied voltage, that will add (in magnitude) to the applied reverse voltage. Using equation(13) we can write:

$$V = V_{bi} + V_{appl} = V_{appl} + \frac{K_B T}{q} \ln \left(\frac{N_a N_d}{n_i^2} \right)$$
 (20)

3 The pn diode in forward bias

If we apply an external voltage, such that the P side is made positive with respect to the N side, the applied voltage will reduce the built in voltage across the junction. The magnitude of the built-in voltage is such that it balances the drift and diffusion currents, resulting in zero net current. But if the voltage across the junction is reduced, a net current will flow through the diode. This is the forward mode of operation. Because of this flow of current, electrons are injected into the P side and holes into the N side. Consequently, the concentration of carriers is no longer at the equilibrium value. We denote the equilibrium value of electron and hole concentrations on P and N side by n_{p_0} , n_{n_0} , p_{p_0} , p_{n_0} respectively. Since the majority carrier concentration in equilibrium is equal to the doping density, we have:

$$n_{n_0} \approx N_d$$
, $p_{p_0} \approx N_a$ and $n_{p_0} = n_i^2/N_a$, $p_{n_0} = n_i^2/N_d$

According to equation (10)

$$np = n_i^2 e^{(u_{F_p} - u_{F_n})}$$

As we make the potential of P type more positive compared to N type, the np product in forward bias is greater than n_i^2 . From relations(12), we see that the change in quasi Fermi levels is small wherever the carrier concentration is high. Thus, we can assume that the quasi Fermi levels of the majority carriers at either side of the junction remain at their equilibrium values. Hence the voltage across the junction is given by

$$V = \phi_{F_p} - \phi_{F_n}$$

and therefore the *non-equilibrium* np product is given by

$$np = n_i^2 e^{\left(\frac{qV}{K_B T}\right)}$$

therefore,

$$n_{p} = \frac{n_{i}^{2}}{p_{p}} e^{\left(\frac{qV}{K_{B}T}\right)} = n_{p_{0}} e^{\left(\frac{qV}{K_{B}T}\right)}$$

$$p_{n} = \frac{n_{i}^{2}}{n_{n}} e^{\left(\frac{qV}{K_{B}T}\right)} = p_{n_{0}} e^{\left(\frac{qV}{K_{B}T}\right)}$$
(21)

(22)

The continuity equation for any particle flow can be written as

$$\nabla$$
.(particle current dencity) = $-\frac{\partial}{\partial t}$ (particle concentration)

Applying it to electron and hole currents in 1 dimension on the n side,

$$\frac{\partial}{\partial x} \left(\frac{J_n}{-q} \right) = U$$

$$\frac{\partial}{\partial x} \left(\frac{J_p}{q} \right) = U$$

where U is the net recombination rate. Using relation(11), we have

$$\frac{\partial}{\partial x} \left(n_n \mu_n \frac{\partial \phi}{\partial x} - D_n \frac{\partial n_n}{\partial x} \right) = U$$

$$\frac{\partial}{\partial x} \left(p_n \mu_p \frac{\partial \phi}{\partial x} + D_p \frac{\partial p_n}{\partial x} \right) = U$$

or

$$\mu_n \frac{\partial n_n}{\partial x} \frac{\partial \phi}{\partial x} + \mu_n n_n \frac{\partial^2 \phi}{\partial x^2} - D_n \frac{\partial^2 n_n}{\partial x^2} = U$$

$$\mu_p \frac{\partial p_n}{\partial x} \frac{\partial \phi}{\partial x} + \mu_p p_n \frac{\partial^2 \phi}{\partial x^2} + D_p \frac{\partial^2 p_n}{\partial x^2} = U$$

Assuming the regions outside the small depletion regions to be charge neutral,

$$(n_n - n_{n_0}) \approx (p_n - p_{n_0})$$

We define ambipolar diffusion and lifetime by the relations

$$D_a \equiv \frac{n_n + p_n}{n_n/D_p + p_n/D_p} \tag{23}$$

$$\tau_a \equiv \frac{p_n - p_{n_0}}{U} = \frac{n_n - n_{n_0}}{U} \tag{24}$$

multiplying the electron continuity equation with $\mu_p p_n$ and the hole continuity equation with $\mu_n n_n$ and combining, we get

$$-\frac{p_n - p_{n_0}}{\tau_a} + D_a \frac{\partial^2 p_n}{\partial x^2} + \frac{n_n - p_n}{n_n/\mu_p + p_n/\mu_n} \frac{\partial p_n}{\partial x} \frac{\partial \phi}{\partial x} = 0$$
 (25)

If we make the low injection assumption $(p_n \ll n_n \approx n_{n_0})$, this reduces to

$$-\frac{p_n - p_{n_0}}{\tau_p} + D_p \frac{\partial^2 p_n}{\partial x^2} + \mu_p \frac{\partial p_n}{\partial x} \frac{\partial \phi}{\partial x} = 0$$
 (26)

In the neutral region, $\frac{\partial \phi}{\partial x}$ is zero, so the above simplifies further to

$$\frac{\partial^2 p_n}{\partial x^2} - \frac{p_n - p_{n_0}}{D_n \tau_n} = 0 \tag{27}$$

This can be solved with the boundary condition given by relation (21) and noting that $p_n = p_{n_0}$ at $x = \infty$ to give:

$$p_n - p_{n_0} = p_{n_0} \left(e^{\frac{qV}{K_B T}} - 1 \right) e^{\frac{x - x_n}{L_p}}$$
 (28)

where

$$L_p \equiv \sqrt{D_p \tau_p} \tag{29}$$

Evaluating the hole current at X_{dn} , we get

$$J_p = -qD_p \frac{\partial p_n}{\partial x} = \frac{qD_p p_{n_0}}{L_p} \left(e^{\frac{qV}{K_B T}} - 1 \right)$$
(30)

Similarly, we can evaluate the electron current on the p side as

$$J_n = qD_n \frac{\partial n_p}{\partial x} = \frac{qD_n n_{p_0}}{L_n} \left(e^{\frac{qV}{K_B T}} - 1 \right)$$
(31)

which gives the total current density as

$$J = J_p + J_n = J_s \left(e^{\frac{qV}{K_B T}} - 1 \right) \tag{32}$$

Where
$$J_s \equiv \frac{qD_p p_{n_0}}{L_p} + \frac{qD_n n_{p_0}}{L_n}$$
 (33)

4 The MOS Capacitor

It is important to understand the MOS capacitor in order to understand the behaviour of the the MOS transistor. Before we describe the MOS structure, it is useful to review the basic electrostatics as applied to parallel plate capacitors. We shall then go on to analyse the MOS structure.

4.1 The Parallel Plate Capacitor

The parallel plate capacitor consists of two parallel metallic plates of area A, separated by an insulator of thickness t_i and dielectric constant ϵ . If we place a charge Q on the upper plate, it attracts charges of opposite sign in the bottom plate, while repelling charges of the same sign. If the bottom plate is connected to ground, the repelled charge flows to ground. Now the two

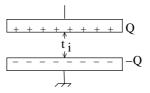


Figure 4: The parallel Plate capacitor

capacitor plates hold equal and opposite charge. This charge resides just next to the insulator on either side of it. This is true, whatever the quantity or sign of charge placed on the upper

plate. The inducing and induced charge are always separated by the thickness of the insulator, t_i . Therefore this structure has a *constant* capacitance given by:

$$C_{\text{total}} = \frac{A\epsilon}{t_i}$$

Since there are no charges inside the dielectric, the electric field in the insulator is constant and the electrostatic potential changes linearly from one plate to the other.

4.2 The MOS capacitor

In a MOS capacitor, we replace the lower plate by a semiconductor. Unlike a metal, a semiconductor can have charges distributed in its bulk. For the sake of an example, let us consider a

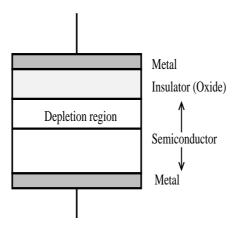


Figure 5: The MOS structure

P type semiconductor (Si) doped to 10^{16} atoms /cm³. As we know, holes outnumber electrons in this semiconductor by an extremely large factor. If we place a negative charge on the upper plate, holes will be attracted by this charge, and will accumulate near the silicon-insulator interface. This situation is analogous to the parallel plate capacitor and thus, the capacitance will be the same as that for a parallel plate capacitor. If, however, we place a positive charge on the upper plate, negative charges will be attracted by it and positive charges will be repelled. In a P type semiconductor, there are very few electrons. The negative charge is provided by the ionised acceptors after the holes have been pushed away from them. But the acceptors are fixed in their locations and cannot be driven to the edge of the insulator. Therefore, the distance between the induced and inducing charges increases - so the capacitance is lower as compared to the parallel plate capacitor. As more and more positive charge is placed on the upper plate, holes from a thicker slice of the semiconductor are driven away, and the incremental induced charge is farther from the inducing charge. Thus the capacitance continues to decrease. This does not, however, continue indefinitely. We know from the law of mass action that as hole density reduces, the electron density increases. At some point, the hole density is reduced and electron density increased to such an extent that electrons now become the "majority" carriers near the interface. This is called *inversion*. Beyond this point, more positive charge on the upper plate is answered by more electrons in the semiconductor. But the electrons are mobile, and will be attracted to the silicon insulator interface. Therefore, the capacitance quickly increases to the parallel plate value.

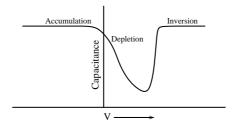


Figure 6: Low frequency capacitance for a MOS capacitor

4.3 Quantitative Analysis

Consider a one dimensional representation of the MOS structures as shown in the figure below. The origin is assumed to be at the silicon-oxide interface and the positive x direction is into the


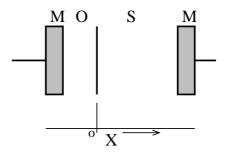


Figure 7: co-ordinate system used for analysis

bulk of silicon. Using a one dimensional analysis, we want to relate the semiconductor charge to the applied gate voltage. In a practical case, there is a potential difference between two dissimilar materials in contact. Also, the silicon - oxide interface will have some fixed charge sitting there. However, we consider the ideal case first - where there is no built in contact potential between the semiconductor and the metal, and there is no interface charge.

4.3.1 Ideal Case

Let the back surface of Si be at zero potential and the voltage applied to the gate terminal be V_g . Let the electrostatic potential at any point x be denoted by $\phi(x)$ and let the potential at the silicon-oxide interface be ϕ_s .

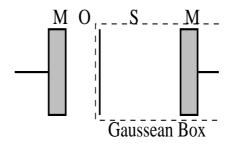

We construct a Gaussian box passing through the interface and extending to $+\infty$. According to Gauss law, the integral of the outward pointing D vector around the box should be equal to the charge contained inside. The only boundary where D is non zero is the one passing through the interface. Therefore,

$$Area \times \epsilon_{ox} \frac{\phi_s - V_g}{tor}$$
 = Total Charge in silicon

If we define Q_{si} to be the semiconductor charge *per unit area*, and C_{ox} to be the parallel plate capacitance *per unit area*, we get

 $V_g = \phi_s - \frac{Q_{si}}{C_{ox}}$

Thus, the surface potential and the applied gate voltage can be related to each other. If the surface potential is known, we can evaluate the semiconductor charge by integrating the Poisson's equation in the semiconductor, once.

We can write the Poisson's equation in the semiconductor as

$$\nabla \cdot \mathbf{D} = \rho$$

or

$$-\epsilon_{si}\frac{\partial^2 \phi}{\partial x^2} = q(N_d^+ - N_a^- + p - n)$$

Since the electrostatic potential is dependent only on x, we can change partial derivatives to total derivatives.

$$-\frac{\mathrm{d}^2 \phi}{\mathrm{d}x^2} = \frac{\mathrm{d}}{\mathrm{d}x} \left(-\frac{\mathrm{d}\phi}{\mathrm{d}x} \right) = \frac{\mathrm{d}}{\mathrm{d}x} \left(\mathcal{E} \right)$$

where \mathcal{E} is the electrostatic field. Changing the variable from x to ϕ .

$$-\frac{\mathrm{d}^2 \phi}{\mathrm{d}x^2} = \frac{\mathrm{d}\mathcal{E}}{\mathrm{d}x} = \left(\frac{\mathrm{d}\phi}{\mathrm{d}x}\right) \frac{\mathrm{d}}{\mathrm{d}\phi}(\mathcal{E}) = -\mathcal{E}\frac{\mathrm{d}}{\mathrm{d}\phi}(\mathcal{E}) = -\frac{1}{2}\frac{\mathrm{d}}{\mathrm{d}\phi}\left(\mathcal{E}^2\right)$$

If we define

$$u \equiv \beta \phi$$
 where $\beta \equiv \frac{q}{K_B T}$

We get

$$-\frac{\mathrm{d}^2 \phi}{\mathrm{d}x^2} = -\frac{1}{2} \frac{\mathrm{d}}{\mathrm{d}\phi} \left(\mathcal{E}^2 \right) = -\frac{\beta}{2} \frac{\mathrm{d}}{\mathrm{d}u} \left(\mathcal{E}^2 \right) \tag{34}$$

The right hand side of the Posson's equation represents the charge density. In the absence of an applied voltage, this must be zero everywhere. Therefore,

$$q(N_d^+ - N_a^- + p_0 - n_0) = 0$$

where p_0 and n_0 represent the hole and electron density in the absence of an applied field. therefore,

$$N_d^+ - N_a^- = -(p_0 - n_0)$$

Sustituting equation (34) and the above in the Poisson's equation,

$$-\frac{\beta \epsilon_{si}}{2} \frac{\mathrm{d}}{\mathrm{d}u} \left(\mathcal{E}^2 \right) = q \left[p - p_0 - (n - n_0) \right]$$

SO

$$\frac{\mathrm{d}}{\mathrm{d}u}\left(\mathcal{E}^2\right) = -\frac{2qp_0}{\beta\epsilon_{si}}\left[\frac{p}{p_0} - 1 - \frac{n_0}{p_0}\left(\frac{n}{n_0} - 1\right)\right]$$

From equation(8)

$$n = n_0 e^u$$
 and $p = p_0 e^{-u}$

So,

$$\frac{\mathrm{d}}{\mathrm{d}u}\left(\mathcal{E}^2\right) = -\frac{2qp_0}{\beta\epsilon_{si}}\left[e^{-u} - 1 - \frac{n_0}{p_0}(e^u - 1)\right]$$

This can be integrated from $x = \infty$ (where $\mathcal{E} = 0$ and u = 0) to x to give

$$\mathcal{E}^{2} = \frac{2qp_{0}}{\beta \epsilon_{si}} \left[e^{-u} - 1 + u - \frac{n_{0}}{p_{0}} (e^{u} - 1 - u) \right]$$

Therefore

$$\mathcal{E} = \pm \sqrt{\frac{2qp_0}{\beta \epsilon_{si}}} \left[e^{-u} - 1 + u - \frac{n_0}{p_0} (e^u - 1 - u) \right]^{\frac{1}{2}}$$

And thus, the displacement vector D can be evaluated as:

$$D = \epsilon_{si} \mathcal{E} = \pm \sqrt{\frac{2qp_0 \epsilon_{si}}{\beta}} \left[e^{-u} - 1 + u - \frac{n_0}{p_0} (e^u - 1 - u) \right]^{\frac{1}{2}}$$
 (35)

This equation permits us to calculate D $(=-\frac{\epsilon_{si}}{\beta}\frac{\partial u}{\partial x})$ from u. In fact if u is very small, the exponentials in u can be exapanded to second order. The first two terms cancel with 1 and u, leaving

$$\frac{\partial u}{\partial x} \simeq \mp \sqrt{\frac{q\beta p_0}{\epsilon_{si}}} \left(1 + \frac{n_0}{p_0} \right) u$$

if we take $n_0 << p_0$, we get exponential solutions for u with a characteristic length $L_D = \sqrt{\frac{\epsilon_{si}}{q\beta p_0}}$. This implies that small local perturbations in potential tend to decrease exponentially, with this characteristic length. This length is known as the extrinsic Debye Length.

By putting $u = u_s$ in eq. 35, we get the D vector at the surface. We construct a Gaussean box passing through the interface and enclosing the semiconductor (as desribed in section 4.3.1) The charge contained in the box is then the integral of the outward pointing D vector over the surface of the box. D is non zero only at the interface. The outward pointing D is along the negative x axis. Therefore by application of Gauss theorem,

Sem. Charge = Area
$$\times (-D)$$

Hence the charge in the semiconductor per unit area is:

$$Q_{si} = \mp \frac{\sqrt{2}\epsilon_{si}}{\beta L_D} \left[e^{-u_s} - 1 + u_s + \frac{n_0}{p_0} \left(e^{u_s} - 1 - u_s \right) \right]^{\frac{1}{2}}$$
where $u_s \equiv \beta \phi_s$

$$\beta \equiv \frac{q}{K_B T}$$
and $L_D \equiv \sqrt{\frac{\epsilon_{si}}{q\beta p_0}} = \text{The Extrinsic Debye Length}$

Notice that Q_{si} is the charge in the semiconductor per unit area. In this treatment, we shall use symbols of the type Q and C with various subscripts to denote the corresponding charges and capacitance values per unit area. Q_{si} consists of mobile as well as fixed charge. The mobile charge is contributed by holes when $u_s < 0$ and by electrons when $u_s > 0$ (for a P type semiconductor). As we shall see later, the mobile electron charge is substantial only when the positive surface potential exceeds a threshold value.

The fixed charge is contributed by the depletion charge when the surface potential is positive. The depletion charge per unit area can be calculated by the depletion formula.

$$Q_{depl} = -qN_aX_d = \sqrt{2qN_a\epsilon_{si}\phi_s} \qquad (\phi_s > 0)$$

A somewhat more accurate expression for depletion charge accounts for slightly lower charge density at the edge of the depletion region by subtracting K_BT/q from ϕ_s .

$$Q_{depl} = -qN_aX_d = \sqrt{2qN_a\epsilon_{si}(\phi_s - K_BT/q)} \qquad (\phi_s > K_BT/q)$$
(37)

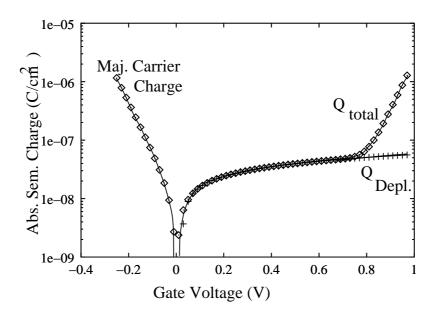


Figure 8: semiconductor charge as a function of surface potential

Calculated values for the total semiconductor charge per unit area (ie. inclusive of depletion and mobile charge) and just the depletion charge per unit area have been plotted in figure 8 for a P type semiconductor doped to $10^{16}/\mathrm{cm}^3$. For small positive surface potential, the total semiconductor charge contains only depletion charge. However, beyond a surface potential near $2\Phi_F$, the total charge exceeds the depletion charge very rapidly. This additional charge is due to mobile minority carriers (in this case, electrons).

4.3.2 Practical case

A practical MOS structure will differ from the ideal case assumed above in a few respects. There is a built-in potential difference between the metal used and Si, due to the difference between their work functions. This shifts the relationship between V_g and ϕ_s . Also, there is a fixed oxide charge

which resides essentially at the silicon-oxide interface. Thus, the total charge in the Gaussian box includes this fixed charge and the semiconductor charge. These two non-idealities can be accounted for by modifying the relationship between V_q and ϕ_s to be

$$V_g = \Phi_{ms} + \phi_s - \frac{Q_{si} + Q_{ox}}{C_{ox}} \tag{38}$$

Where Φ_{ms} is the metal to semiconductor work function difference.

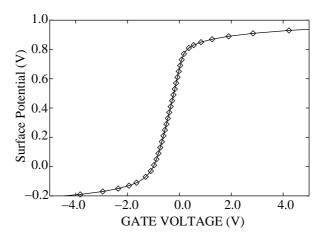


Figure 9: Surface potential as a function of gate voltage

Figure 9 shows the surface potential as a function of applied voltage for a MOS capacitor with oxide thickness of 22.5 nm, substrate doping of $10^{16}/cc$, oxide charge of $4 \times 10^{10}q$ and aluminium as the gate metal. The surface potential changes quite slowly as a function of gate voltage in the accumulation and inversion regions.

The absolute value of semiconductor charge has been plotted as a function of applied gate voltage

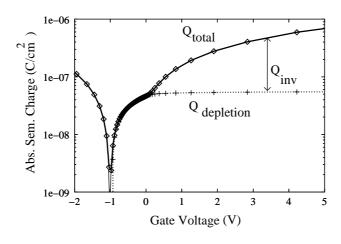


Figure 10: Semiconductor charge as a function of gate voltage

in figure 10. (The charge is actually negative for positive gate voltages). As one can see, for small positive gate voltages, the entire semiconductor charge is depletion charge. As the voltage exceeds a threshold voltage, the total charge becomes much larger than the depletion charge. The excess charge is provided by mobile electron charges. This is the *inversion* region of operation, where electrons become the majority carriers near the surface in a p-type semiconductor. Notice

that the depletion charge is practically constant in this region. This region begins when the surface potential exceeds $2\Phi_{\rm F}$.

5 The MOS Transistor

Inversion converts a p type semiconductor to n type at the surface. We can use this fact to construct a transistor. We place semiconductor regions strongly doped to N type on either side of a MOS capacitor made using P type silicon. Now if we try to pass a current between these

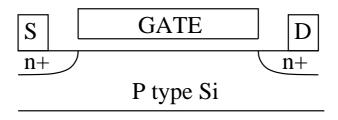


Figure 11: A MOS Transistor

two N regions when inversion has not occurred, we encounter series connected NP and PN diodes on the way. Whatever the polarity of the voltage applied to pass current, one of these will be reverse biased and practically no current will flow.

However, after inversion, the intervening P region would have been converted to N type. Now there are no junctions as the whole surface region is n type. Current can now be easily passed between the two n regions. This structure is an n channel MOS transistor. PMOS transistors can be similarly made using P regions on either side of a MOS capacitor made on n type silicon. When current flows in an n channel transistor, electrons are supplied by the more negative of the two n+ contacts. This is called the source electrode. The more positive n+ contact collects the electrons and is called the drain. The current in the transistor is controlled by the metal electrode on top of the oxide. This is called the gate electrode.

6 I-V characteristics of a MOS transistor

A quantitative derivation of the current-voltage characteristics of the MOS device is complicated by the fact that it is inherently a two dimensional device. The *vertical* field due to the gate voltage sets up a mobile charge density in the channel region as seen in figure 10. The *horizontal* field due to source-drain voltage causes these charges to move, and this constitutes the drain current. Therefore, a two dimensional analysis is required to calculate the transistor current, which can be quite complex. However, reasonably simple models can be derived by making several simplifying assumptions.

6.1 A simple MOS model

We make the following simplifying assumptions:

• The vertical field is much larger than the horizontal field. Then, the resultant field is nearly vertical, and the results derived for the 1 dimensional analysis for the MOS capacitor

can be used to calculate the point-wise charge density in the channel. This is known as the *gradual channel* approximation. Accurate numerical simulations have shown that this approximation is valid in most cases.

- The source is shorted to the bulk.
- The gate and drain voltages are such that a continuous inversion region exists all the way from the source to the drain.
- The depletion charge is constant along the channel.
- The total current is dominated by drift current.
- The mobility of carriers is constant along the channel.

Figure 12 shows the co-ordinate system used for evaluating the drain current. The x axis points

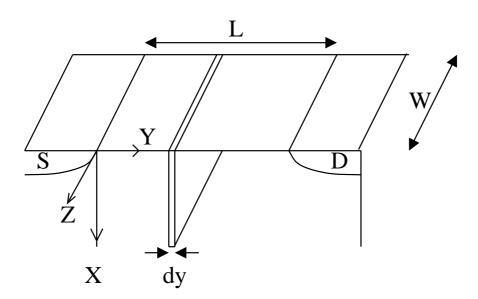


Figure 12: Coordinate system used for analysing the MOS transistor

into the semiconductor, the y axis is from source to the drain and the z axis is along the width of the transistor. The origin is at the source end of the channel. We represent the channel voltage as V(y), which is 0 at the source end and V_d at the drain end. We assume the current to be made up of just the drift current. Since we are carrying out a quasi 2 dimensional analysis, all variables are assumed to be constant along the z axis. Let n(x,y) be the concentration of mobile carriers (electrons for an n channel device) at the position x,y (for any z). The drift current density at a point is

$$\begin{array}{ll} J &=& \text{no. of carriers} \times \text{charge per carrier} \times \text{velocity} \\ &=& n(x,y) \times (-q) \times \mu \times \left(-\frac{\partial V(y)}{\partial y}\right) \\ &=& \mu n(x,y) q \frac{\partial V(y)}{\partial y} \end{array}$$

Integrating the current density over a semi-infinite plane at the channel position y (as shown in the figure 12) will then give the drain current.

$$I_d = \int_{x=0}^{\infty} \int_{z=0}^{W} \mu n(x, y) q \frac{\partial V(y)}{\partial y} dz dx$$

Since there is no dependence on z, the z integral just gives a multiplication by W. Therefore,

$$I_d = \mu W q \int_{x=0}^{\infty} n(x,y) \frac{\partial V(y)}{\partial y} dx$$

the value of n(x,y) is non zero in a very narrow channel near the surface. We can assume that $\frac{\partial V(y)}{\partial y}$ is constant over this depth. Then,

$$I_d = \mu W q \frac{\partial V(y)}{\partial y} \int_{x=0}^{\infty} n(x, y) dx$$

but $q \int_{x=0}^{\infty} n(x,y) dx = -Q_n(y)$ where $Q_n(y)$ is the electron charge per unit area in the semiconductor at point y in the channel. $(Q_n(y))$ is negative, of course. therefore

$$I_{d} = -\mu W \frac{\partial V(y)}{\partial y} Q_{n}(y)$$
(39)

Integrating the drain current along the channel gives

$$\int_{0}^{L} I_{d} dy = -\mu W \int_{0}^{L} Q_{n}(y) \frac{\partial V(y)}{\partial y} dy$$

$$I_{d} \times L = -\mu W \int_{0}^{V_{d}} Q_{n}(y) dV(y)$$
So,
$$I_{d} = -\mu \frac{W}{L} \int_{0}^{V_{d}} Q_{n}(y) dV(y)$$

We now use the assumption that the surface potential due to the vertical field saturates around $2\Phi_{\rm F}$ if we are in the inversion region. Therefore, the total surface potential at point y is V(y) + $2\Phi_{\rm F}$. Now, by Gauss law and continuity of normal component of D at the interface,

$$C_{ox}\left(V_g - \Phi_{MS} - \phi_s\right) = -\left(Q_{si} + Q_{ox}\right)$$

therefore,

$$-Q_{si} = C_{ox} \left(V_g - \Phi_{MS} - V(y) - 2\Phi_{F} + Q_{ox}/C_{ox} \right)$$

However,

$$Q_{si} = Q_n + Q_{depl}$$

So

$$\begin{aligned}
-Q_{n}(y) &= -Q_{si}(y) + Q_{depl} \\
&= C_{ox} \left(V_{g} - \Phi_{MS} - V(y) - 2\Phi_{F} + (Q_{ox} + Q_{depl}) / C_{ox} \right)
\end{aligned}$$

We have assumed the depletion charge to be constant along the channel. Let us define

$$V_{\scriptscriptstyle \mathrm{T}} \equiv \Phi_{\mathrm{MS}} + 2\Phi_{\scriptscriptstyle \mathrm{F}} - \frac{(Q_{ox} + \mathrm{Q_{depl}})}{C_{ox}}$$

then

$$-Q_n(y) = C_{ox}(V_q - V_T - V(y))$$

and therefore,

$$I_{d} = \mu C_{ox} \frac{W}{L} \int_{0}^{V_{d}} (V_{g} - V_{T} - V(y)) dV(y)$$

$$= \mu C_{ox} \frac{W}{L} [(V_{g} - V_{T})V_{d} - \frac{1}{2}V_{d}^{2}]$$
(40)

This derivation gives a very simple expression for the drain current. However, it requires a lot of simplifying assumptions, which limit the accuracy of this model.

If we do not assume a constant depletion charge along the channel, we can apply the depletion formula to get its dependence on V(y).

$$Q_{\text{\tiny depl}} = -\sqrt{2\epsilon_{si}qN_a(V(y) + 2\Phi_{\text{\tiny F}})}$$

then,

$$-Q_{\rm n} = C_{ox} \left(V_q - \Phi_{\rm MS} - V(y) - 2\Phi_{\rm F} \right) + Q_{ox} - \sqrt{2\epsilon_{si}qN_a(V(y) + 2\Phi_{\rm F})}$$

which leads to

$$I_{d} = \mu C_{ox} \frac{W}{L} \left[\left(V_{g} - \Phi_{MS} - 2\Phi_{F} + \frac{Q_{ox}}{C_{ox}} \right) V_{d} - \frac{1}{2} V_{d}^{2} - \frac{2}{3} \frac{\sqrt{2\epsilon_{si}qN_{a}}}{C_{ox}} \left((V_{d} + 2\Phi_{F})^{3/2} - (2\Phi_{F})^{3/2} \right) \right]$$

This is a more complex expression, but gives better accuracy.

6.2 Modeling the saturation region

The treatment in the previous section is valid only if there is an inversion layer all the way from the source to the drain. For high drain voltage, the local vertical field near the drain is not adequate to take the semiconductor into inversion. Several models have been used to describe the transistor behaviour in this regime. The simplest of these defines a saturation voltage at which the channel just pinches off at the drain end. The current calculated for this voltage by the above models is then supposed to remain constant at this value for all higher drain voltages. The pinchoff voltage is the drain voltage at which the channel just vanishes near the drain end. Therefore, at this point the gate voltage $V_{\rm g}$ is just less than a threshold voltage above the drain voltage $V_{\rm d}$. Thus, at this point,

$$V_{dsat} = V_g - V_T$$

The current calculated at V_{dsat} will be denoted as I_{dss} . Thus,

$$I_{dss} = \mu C_{ox} \frac{W}{L} [(V_g - V_T)^2 - \frac{1}{2} (V_g - V_T)^2]$$

for the simple transistor model. Thus

$$I_{dss} = \frac{1}{2} \mu C_{ox} \frac{W}{L} (V_g - V_T)^2$$
(41)

The drain current is supposed to remain constant at this V_d independent value for all drain voltages $> V_g - V_T$.

6.2.1 Early Voltage approach

Assuming a constant current in the saturation region leads to an infinite output resistance. This can lead to exaggerated estimates of gain from an amplifier. Therefore, we need a more realistic model for the transistor current in the saturation region. One of these is a generalisation of the model proposed by James Early for bipolar transistors. This model is not strictly applicable to MOS transistors. However, due to its numerical simplicity, it is often used in compact models for circuit simulation.

A geometrical interpretation of the Early model states that the drain current increases linearly in the saturation region with drain voltage, and if saturation characteristics for different gate voltages are produced backwards, they will all cut the drain voltage axis at the same (negative) drain voltage point. The absolute value of this voltage is called the Early Voltage V_E .

The current equations in saturation mode now become:

$$I_{dss} \equiv I_d(V_g, V_{dss})$$

$$I_d = I_{dss} \frac{V_d + V_E}{V_{dss} + V_E} \quad \text{For } V_d > V_{dss}$$

$$(42)$$

Any model can be used for calculating the drain current for $V_d < V_{dss}$. The value of V_{dss} will be determined by considerations of continuity of the drain current and its derivative at the changeover point from linear to saturation regime. For example, if we use the simple model described in eq. 40,

$$\frac{\partial I_d}{\partial V_d} = \mu C_{ox} \frac{W}{L} (V_g - V_T - V_d) \qquad \text{For } V_d \leq V_{dss}$$
And
$$\frac{\partial I_d}{\partial V_d} = \frac{I_{dss}}{V_{dss} + V_E} \qquad \text{For } V_d \geq V_{dss}$$
Where
$$I_{dss} \equiv \mu C_{ox} \frac{W}{L} \left[(V_g - V_T) V_{dss} - \frac{1}{2} V_{dss}^2 \right]$$

On matching the value of $\frac{\partial I_d}{\partial V_d}$ on both sides of V_{dss} , we get

$$V_{dss} = V_E \left(\sqrt{1 + \frac{2(V_g - V_T)}{V_E}} - 1 \right)$$

In practice, V_E is much larger than $V_g - V_T$. If we expand the above expression, we find that to first order the value of V_{dss} remains the same as the one used in the simple model - that is, $V_g - V_T$. Expansion to second order gives

$$V_{dss} \simeq (V_g - V_T) \left(1 - \frac{V_g - V_T}{2V_E} \right) \tag{43}$$

6.2.2 Simulation Model

Since the value of V_{dss} does not change substantially from the ideal saturation case, a simpler approach can be tried. The drain current is calculated using the ideal saturation model and its value is multiplied by a correction factor $= (1 + \lambda V_d)$ in saturation as well as in linear regime. This automatically assures continuity of I_d and its derivative. λ is a fit parameter, whose value is $\approx 1/V_E$. This approach is used in SPICE, a popular circuit simulation program.