CIS-77 Home http://www.c-jump.com/CIS77/CIS77syllabus.htm


Encoding Real x86 Instructions

- 1. Encoding Real x86 Instructions
- 2. x86 Instructions Overview
- 3. x86 Instruction Format Reference
- 4. x86 Opcode Sizes
- 5. x86 ADD Instruction Opcode
- 6. Encoding x86 Instruction Operands, MOD-REG-R/M Byte
- 7. General-Purpose Registers
- 8. REG Field of the MOD-REG-R/M Byte
- 9. MOD R/M Byte and Addressing Modes
- 10. SIB (Scaled Index Byte) Layout
- Scaled Indexed Addressing Mode
- 12. Encoding ADD Instruction Example
- 13. Encoding ADD CL, AL Instruction

- 13. Encoding ADD CL, AL Instruction
 14. Encoding ADD ECX, EAX Instruction
 15. Encoding ADD EDX, DISPLACEMENT Instruction
 16. Encoding ADD EDI, [EBX] Instruction
 17. Encoding ADD EAX, [ESI + disp8] Instruction
 18. Encoding ADD EBX, [EBP + disp32] Instruction
 19. Encoding ADD EBP, [disp32 + EAX*1] Instruction
 20. Encoding ADD ECX, [EBX + EDI*4] Instruction
 21. Encoding ADD ECX, [EBX + EDI*4] Instruction
- 21. Encoding ADD Immediate Instruction
- 22. Encoding Eight, Sixteen, and Thirty-Two Bit Operands
- 23. Encoding Sixteen Bit Operands
- 24. x86 Instruction Prefix Bytes
- 25. Alternate Encodings for Instructions
- 26. x86 Opcode Summary
- 27. MOD-REG-R/M Byte Summary
- 28. ISA Design Considerations
- 29. ISA Design Challenges
- 30. Intel Architecture Software Developer's Manual
- 31. Intel Instruction Set Reference (Volume2)
- 32. Chapter 3 of Intel Instruction Set Reference
- 33. <u>Intel Reference Opcode Bytes</u>
- 34. Intel Reference Opcode Bytes, Cont.
- 35. Intel Reference Opcode Bytes, Cont.
- 36. Intel Reference Opcode Bytes, Cont.
- 37. <u>Intel Reference Opcode Bytes, Cont.</u>
- 38. Intel Reference Opcode Bytes, Cont.
- 39. Intel Reference Instruction Column

1. Encoding Real x86 Instructions

- It is time to take a look that the actual machine instruction format of the x86 CPU family.
- They don't call the x86 CPU a Complex Instruction Set Computer (CISC) for nothing!
- Although more complex instruction encodings exist, no one is going to challenge that the x86 has a complex instruction encoding:

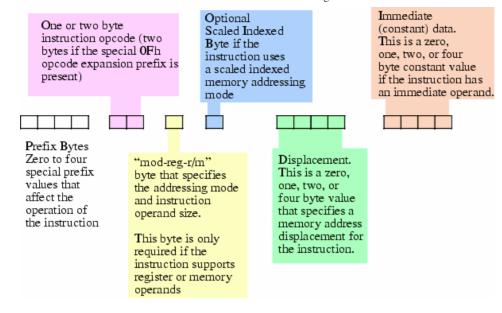


2. x86 Instructions Overview

Although the diagram seems to imply that instructions can be up to 16 bytes long, in actuality the x86 will not allow instructions greater than 15 bytes in length.

The prefix bytes are not the opcode expansion prefix discussed earlier - they are special bytes to modify the behavior of existing instructions.

x86 Instruction Encoding:

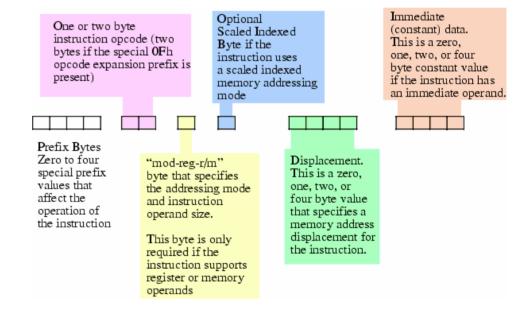

3. x86 Instruction Format Reference

Another view of the x86 instruction format:

Additional reference:

- Intel x86 <u>instructions</u> <u>by opcode</u>
- o Intel x86
 instructions
 by mnemonic

Number of Bytes 0 or 1 0 or 1 0 or 1 0 or 1 Instruction Address-size Operand-size Segment prefix prefix prefix override (a) Optional instruction prefixes Number of Bytes 1 or 2 0 or 1 0 or 1 0, 1, 2, or 4 0, 1, 2, or 4 OpCode Mod-R/M SIB Displacement Immediate Reg/OpCode R/M Index Mod SS Base 5 3 6 1 0 Bits 6 3 2 1

(b) General instruction format

 Brief Intel x86 instruction reference.

4. x86 Opcode Sizes

x86 instruction format: The x86 CPU supports two basic opcode Number of Bytes 0 or 1 0 or 1 0 or 1 0 or 1 sizes: Instruction Address-size Operand-size Seament prefix prefix 1. standard prefix override one-byte (a) Optional instruction prefixes opcode 2. two-byte opcode consisting Number of Bytes 1 or 2 0 or 1 0 or 1 0, 1, 2, or 4 0, 1, 2, or 4 of a **0Fh** OpCode Mod-R/M SIB Displacement Immediate opcode expansion prefix byte. The second byte then Mod Reg/OpCode R/M SS Index Base specifies 6 5 4 1 0 Bits 7 6 5 4 the actual instruction. (b) General instruction format

- The x86 opcode bytes are 8-bit equivalents of **iii** field that we discussed in simplified encoding.
- This provides for up to 512 different instruction classes, although the x86 does not yet use them all.

5. x86 ADD Instruction Opcode


Bit number **zero** marked **s** specifies the **size** of the operands the ADD instruction operates upon:

x86 ADD <u>instruction opcode</u>:

 \circ If s = 0 then the operands are 8-bit registers and memory locations.

- o If s = 1 then the operands are either 16-bits or 32-bits:
 - Under 32-bit operating systems the default is 32-bit operands if **s** = **1**.
 - To specify a 16-bit operand (under Windows or Linux) you must insert a special operand-size prefix byte in front of the instruction (example of this later.)

You'll soon see that this direction bit **d** creates a problem that results in one instruction have two different possible opcodes.



ADD opcode.

d = 0 if adding from register to memory.

d = 1 if adding from memory to register.

s = 0 if adding eight-bit operands. s = 1 if adding 16-bit or 32-bit operands

Bit number **one**, marked **d**, specifies the **direction** of the data transfer:

 If d = 0 then the destination operand is a memory location, e.g.

add [ebx], al

 If d = 1 then the destination operand is a register, e.g.

add al, [ebx]

6. Encoding x86 Instruction Operands, MOD-REG-R/M Byte

The MOD-REG-R/M byte specifies <u>instruction</u> operands and their addressing mode^(*):



The MOD field specifies x86 addressing mode:

MOD	Meaning
00	Register indirect addressing mode or SIB with no displacement (when $R/M=100$) or Displacement only addressing mode (when $R/M=101$).
01	One-byte signed displacement follows addressing mode byte(s).
10	Four-byte signed displacement follows addressing mode byte(s).
11	Register addressing mode.

The **REG** field specifies source or destination register:

The R/M field, combined with MOD, specifies either

- the second operand in a two-operand instruction, or
- 2. the only operand
 in a single operand
 instruction like
 NOT or NEG.

The **d** bit in the opcode determines which operand is the source, and which is the destination:

d=0: MOD R/M <REG, REG is the
source</pre>

d=1: REG <- MOD
R/M, REG is the
destination</pre>


^(*) Technically,
registers do not have
an address, but we
apply the term

addressing mode to
registers nonetheless.

REG Value	Register if data size is eight bits	Register if data size is 16-bits	Register if data size is 32 bits
000	al	ax	eax
001	cl	cx	ecx
010	dl	dx	edx
011	bl	bx	ebx
100	ah	sp	esp
101	ch	bp	ebp
110	dh	si	esi
111	bh	di	edi

7. General-Purpose Registers


- The EAX, EDX, ECX, EBX, EBP, EDI, and ESI registers are 32-bit general-purpose registers, used for temporary data storage and memory access.
- The AX, DX, CX, BX, BP, DI, and SI registers are 16-bit equivalents of the above, they represent the low-order 16 bits of 32-bit registers.
- The AH, DH, CH, and BH registers represent the highorder 8 bits of the corresponding registers.

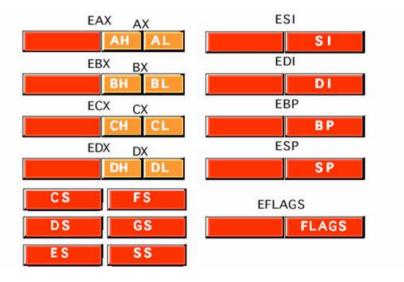

Since the processor accesses registers more quickly than it accesses memory, you can make your programs run faster by keeping the most-frequently used data in registers.

• Similarly, AL, DL, CL, and BL represent the low-order 8 bits of the registers.

8. REG Field of the MOD-REG-R/M Byte



The **REG** field specifies an x86 register(*):

Depending on the <u>instruction</u>, this can be either the *source* or the destination operand.

Many instructions have the **d** (direction) field in their opcode

REG Value	Register if data size is eight bits	Register if data size is 16-bits	Register if data size is 32 bits	
000	al	ax	eax	
001	001 cl ex		ecx	
010	dl	dx	edx	
011	bl	bx	ebx	
100	ah	sp	esp	
101	ch	bp	ebp	
110	dh	si	esi	
111	bh	di	edi	

to choose **REG** operand role:

- If d=0, REG is the source, MOD R/M <- REG.
- 2. If d=1, REG is the
 destination,
 REG <- MOD R/M.</pre>


9. MOD R/M Byte and Addressing Modes

```
MOD R/M Addressing Mode
00 000 [ eax ]
 01 000 [ eax + disp8 ]
                                           (1)
 10 000 [ eax + disp32 ]
 11 000 register ( al / ax / eax )
                                          (2)
 00 001 [ ecx ]
 01 001 [ ecx + disp8 ]
10 001 [ ecx + disp32 ]
 11 001 register ( cl / cx / ecx )
 00 010 [ edx ]
 01 010 [ edx + disp8 ]
 10 010 [ edx + disp32 ]
 11 010 register ( dl / dx / edx )
 00 011 [ ebx ]
 01 011 [ ebx + disp8 ]
 10 011 [ ebx + disp32 ]
 11 011 register ( bl / bx / ebx )
 00 100 SIB Mode
                                           (3)
 01 100 SIB + disp8 Mode
10 100 SIB + disp32 Mode
11 100 register ( ah / sp / esp )
 00 101 32-bit Displacement-Only Mode (4)
01 101 [ ebp + disp8 ]
10 101 [ ebp + disp32 ]
11 101 register ( ch / bp / ebp )
 00 110 [ esi ]
 01 110 [ esi + disp8 ]
10 110 [ esi + disp32 ]
11 110 register ( dh / si / esi )
 00 111 [ edi ]
 01 111 [ edi + disp8 ]
10 111 [ edi + disp32 ]
11 111 register ( bh / di / edi )
```

- Addressing modes with 8-bit displacement fall in the range -128..+127 and require only a single byte displacement after the <u>opcode</u> (Faster!)
- The size bit in the opcode specifies 8 or 32-bit register size. To select a 16-bit register requires a prefix byte.
- 3. The so-called scaled indexed addressing modes, SIB = scaled index byte mode.
- 4. Note that there is no [ebp] addressing. It's slot is occupied by the 32-bit displacement only addressing mode. Intel decided that programmers can use [ebp+disp8] addressing mode instead, with its 8-bit displacement set equal to zero (instruction is a little longer, though.)

10. SIB (Scaled Index Byte) Layout

 Scaled indexed addressing mode uses the second byte (namely, SIB byte) that follows the MOD-REG-R/M byte in the instruction format. Scaled index byte layout:



 $^{^{(*)}}$ For certain (often single-operand or immediate-operand) instructions, the **REG** field may contain an *opcode extension* rather than the register bits. The **R/M** field will specify the operand in such case.

 The MOD field still specifies the displacement size of zero, one, or four bytes.

The MOD-REG-R/M and SIB bytes are complex, because Intel reused 16-bit addressing circuitry in the 32-bit mode, rather than simply abandoning the 16-bit format in the 32-bit mode.

There are good hardware reasons for this, but the end result is a complex scheme for specifying addressing modes in the opcodes.

Scale Value	Index*Scale Value
00	Index*1
01	Index*2
10	Index*4
11	Index*8

Huex	Register
000	EAX
001	ECX
010	EDX
011	EBX
100	Illegal
101	EBP
110	ESI
111	EDI

Index Register

Base	Register
000	EAX
001	ECX
010	EDX
011	EBX
100	ESP
101	Displacement-only if MOD = 00, EBP if MOD = 01 or 10
110	ESI
111	EDI

11. Scaled Indexed Addressing Mode

```
reg32 + eax*n  ] MOD = 00
 reg32 + ebx*n
[ reg32 + ecx*n
[reg32 + edx*n]
[ reg32 + ebp*n
 reg32 + esi*n
[ reg32 + edi*n ]
[ disp + reg8 + eax*n ] MOD = 01
 disp + reg8 + ebx*n ]
[ disp + reg8 + ecx*n ]
 disp + reg8 + edx*n ]
[ disp + reg8 + ebp*n
 disp + reg8 + esi*n
[ disp + reg8 + edi*n ]
[ disp + reg32 + eax*n ] MOD = 10
 disp + reg32 + ebx*n ]
[ disp + reg32 + ecx*n ]
 disp + reg32 + edx*n
[ disp + reg32 + ebp*n ]
 disp + reg32 + esi*n ]
[ disp + reg32 + edi*n ]
[ disp + eax*n ] MOD = 00, and
 disp + ebx*n ] BASE field = 101
[ disp + ecx*n ]
 disp + edx*n 1
[ disp + ebp*n ]
 disp + esi*n
[ disp + edi*n ]
```

Note: n = 1, 2, 4, or 8.

In each scaled indexed addressing mode the MOD field in MOD-REG-R/M byte specifies the size of the displacement. It can be zero, one, or four bytes:


```
MOD R/M Addressing Mode
----
00 100 SIB
01 100 SIB + disp8
10 100 SIB + disp32
```

The **Base** and **Index** fields of the <u>SIB byte</u> select the base and index registers, respectively.

Note that this addressing mode does not allow the use of the **ESP** register as an index register. Presumably, Intel left this particular mode undefined to provide the ability to extend the addressing modes in a future version of the CPU.


12. Encoding ADD Instruction Example

The ADD <u>opcode</u> can be decimal 0, 1, 2, or 3, depending on the direction and size bits in the opcode:

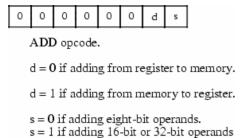

How could we encode various forms of the ADD instruction using different addressing modes?

13. Encoding ADD CL, AL Instruction

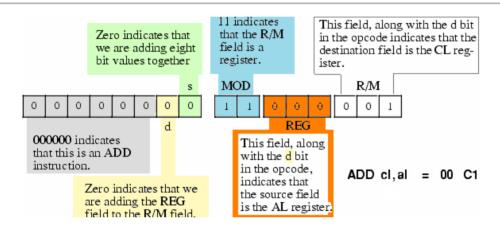

- Interesting side effect of the direction bit and the MOD-REG-R/M byte organization: some instructions can have two different opcodes, and both are legal!
- For example, encoding of


add cl, al

could be **00 C1** (if **d=0**), or **02 C8**, if **d** bit is set to **1**.

• The possibility of opcode duality issue here applies to all instructions with two register operands.

14. Encoding ADD ECX, EAX Instruction


add ecx, eax

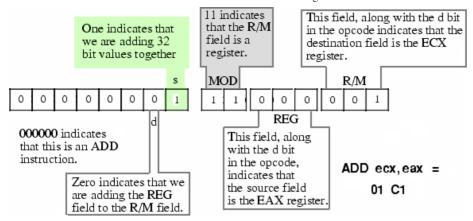

Note that we could also encode ADD ECX, EAX using the bytes 03 C8.


15. Encoding ADD EDX, DISPLACEMENT Instruction

Encoding the ADD EDX, DISP Instruction:

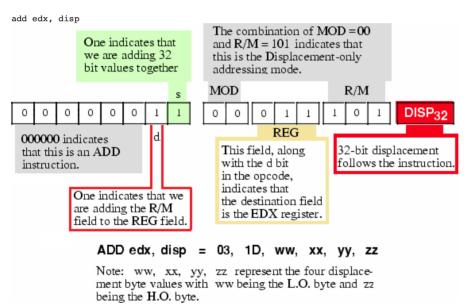


16. Encoding ADD EDI, [EBX] Instruction

Encoding the ADD EDI, [EBX] instruction:

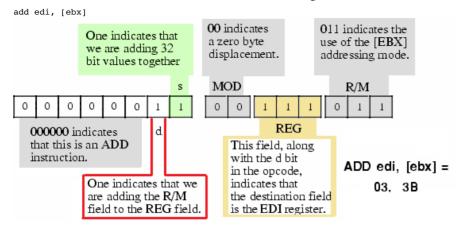


17. Encoding ADD EAX, [ESI + disp8] Instruction

Encoding the ADD EAX, [ESI + disp8] instruction:

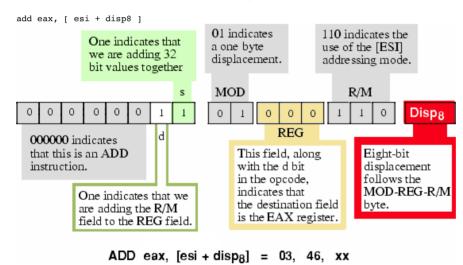


18. Encoding ADD EBX, [EBP + disp32] Instruction

Encoding the ADD EBX, [EBP + disp32] instruction:

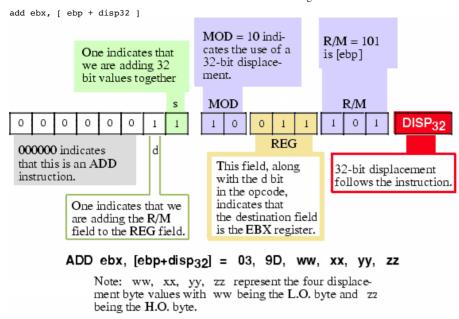

19. Encoding ADD EBP, [disp32 + EAX*1] Instruction

Encoding the ADD EBP, [disp32 + EAX*1] Instruction

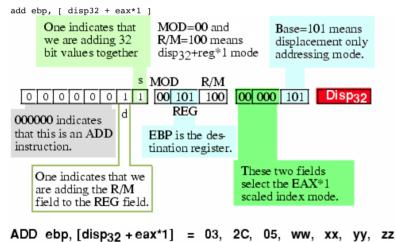


Note: ww, xx, yy, zz represent the four displace-

ment byte values with ww being the L.O. byte and zz being the H.O. byte.

20. Encoding ADD ECX, [EBX + EDI*4] Instruction

Encoding the ADD ECX, [EBX + EDI*4] Instruction

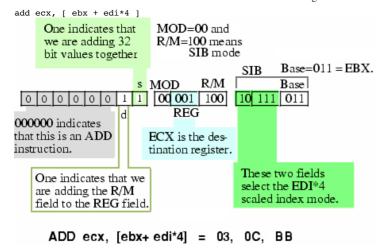


21. Encoding ADD Immediate Instruction

MOD-REG-R/M and SIB bytes have no bit combinations to specify an immediate operand.

Instead, x86 uses a entirely different instruction format to specify instruction with an immediate operand.

There are three rules that apply:

Encoding x86 immediate operands:

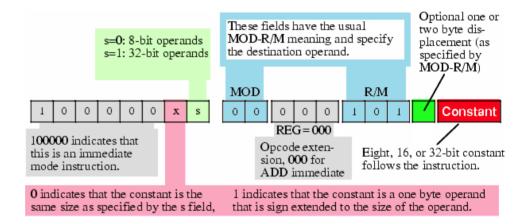

- 1. If opcode high-order bit set to 1, then instruction has an immediate constant.
- 2. There is no direction bit in the opcode:
 - : indeed, you cannot specify a constant as a destination operand!

Therefore, destination operand is always the location encoded in the MOD-R/M bits of the the MOD-REG-R/M byte.

In place of the direction bit \mathbf{d} , the opcode has a sign extension \mathbf{x} bit instead:

- For 8-bit operands, the CPU ignores x bit.
- For 16-bit and 32-bit operands, **x** bit specifies the size of the Constant following at the end of the instruction:
 - If x bit contains zero, the Constant is the same size as the operand (i.e., 16 or 32 bits).
 - If x bit contains one, the Constant is a signed 8-bit value, and the CPU sign-extends this value to the appropriate size before adding it to the operand.
- This little x trick often makes programs shorter, because adding small-value constants to 16 or 32 bit operands is very common.

- 3. The third difference between the ADD-immediate and the standard ADD instruction is the meaning of the REG field in the MOD-REG-R/M byte:
 - Since the instruction implies that
 - the source operand is a constant, and
 - MOD-R/M fields specify the destination operand,

the instruction does not need to use the **REG** field to specify an operand.

- Instead, the x86 CPU uses these three bits as an opcode extension.
- For the ADD-immediate instruction the **REG** bits must contain zero.
- Other bit patterns would correspond to a different instruction.

Note that when adding a constant to a memory location, the displacement (if any) immediately precedes the immediate (constant) value in the opcode sequence.


22. Encoding Eight, Sixteen, and Thirty-Two Bit Operands

- When Intel designed the 8086, one bit in the opcode,
 s, selected between 8 and 16 bit integer operand
 sizes.
- Later, when CPU added 32-bit integers to its architecture on 80386 chip, there was a problem:

three encodings were needed to support 8, 16, and 32 bit sizes.

• Solution was an operand size prefix byte.

x86 ADD Opcode:



ADD opcode.

d = 0 if adding from register to memory.

d = 1 if adding from memory to register.

s=0 if adding eight-bit operands. s=1 if adding 16-bit or 32-bit operands

• Intel studied x86 instruction set and came to the conclusion:

in a 32-bit environment, programs were more likely to use 8-bit and 32-bit operands far more often than 16-bit operands.

• So Intel decided to let the size bit **s** in the opcode select between 8- and 32-bit operands.

23. Encoding Sixteen Bit Operands


32-bit programs don't use 16-bit operands that often, but they do need them now and then.

x86 instruction format:

To allow for 16-bit operands, Intel added prefix a 32-bit mode instruction with the operand size

prefix byte
with value 66h.

This prefix byte tells the CPU to operand on 16-bit data rather than 32bit data.

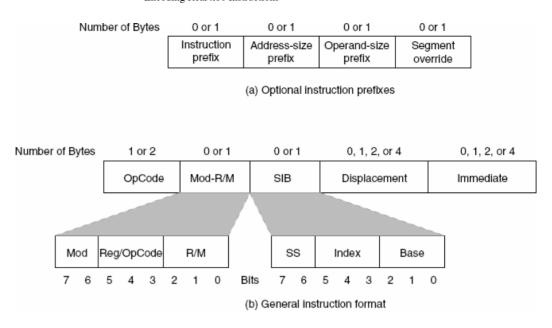

• There is nothing programmer has to do explicitly to put an operand size prefix byte in front of a 16-bit instruction:

the assembler does this automatically as soon as 16-bit operand is found in the instruction.

• However, keep in mind that whenever you use a 16-bit operand in a 32-bit program, the instruction is longer by one byte:

```
Opcode Instruction
-------
41h INC ECX
66h 41h INC CX
```

- Be careful about using 16-bit instructions if size (and to a lesser extent, speed) are important, because
 - 1. instructions are longer, and
 - 2. slower because of their effect on the instruction cache.

24. x86 Instruction Prefix Bytes

- x86 instruction can have up to 4 prefixes.
- Each prefix adjusts interpretation of the opcode:
 - Repeat/lock prefix byte guarantees that instruction will have exclusive use of all shared memory, until the instruction completes execution:

```
F0h = LOCK
```

2. String manipulation instruction prefixes

```
F3h = REP, REPE
F2h = REPNE
```

where

REP repeats instruction the number of times specified by iteration count ECX.

REPE and REPNE prefixes allow to terminate loop on the value of ZF CPU flag.

Related string manipulation instructions are:

MOVS, move string

- STOS, store string
- SCAS, scan string
- CMPS, compare string, etc.

See also string manipulation sample program: rep movsb.asm

3. **Segment override** prefix causes memory access to use *specified segment* instead of *default segment* designated for instruction operand.

```
2Eh = CS
36h = SS
3Eh = DS
26h = ES
64h = FS
65h = GS
```

- 4. **Operand override, 66h.** Changes size of data expected by default mode of the instruction e.g. 16-bit to 32-bit and vice versa.
- 5. Address override, 67h. Changes size of address expected by the instruction. 32-bit address could switch to 16-bit and vice versa.

25. Alternate Encodings for Instructions

- To shorten program code, Intel created alternate (shorter) encodings of some very commonly used instructions.
- For example, x86 provides a single byte opcode for

```
add al, constant ; one-byte opcode and no MOD-REG-R/M byte add eax, constant ; one-byte opcode and no MOD-REG-R/M byte
```

the opcodes are **04h** and **05h**, respectively. Also,

- These instructions are one byte shorter than their standard ADD immediate counterparts.
- Note that

```
add ax, constant \, ; operand size prefix byte + one-byte opcode, no MOD-REG-R/M byte
```

requires an operand size prefix just as a standard ADD AX, constant instruction, yet is still one byte shorter than the corresponding standard version of ADD immediate.

- Any decent assembler will *automatically* choose the shortest possible instruction when translating program into machine code.
- Intel only provides alternate encodings only for the accumulator registers AL, AX, EAX.
- This is a good reason to use accumulator registers if you have a choice

(also a good reason to take some time and study encodings of the x86 instructions.)

26. x86 Opcode Summary


- x86 opcodes are represented by one or two bytes.
- Opcode could extend into unused bits of MOD-REG-R/M byte.
- Opcode encodes information about
 - operation type,

- o operands,
- size of each operand, including the size of an immediate operand.

27. MOD-REG-R/M Byte Summary

- MOD-REG-R/M byte follows one or two opcode bytes of the <u>instruction</u>
- It provides addressing mode information for one or two operands.

MOD-REG-R/M Byte:



- If operand is in memory, or operand is a register:
 - MOD field (bits [7:6]), combined with the R/M field (bits [2:0]), specify memory/register operand, as well as its addressing mode.
 - **REG** field (bits [5:3]) specifies another register operand in of the two-operand instruction.

28. ISA Design Considerations

- Instruction set architecture design that can stand the test of time is a true intellectual challenge.
- It takes several compromises between space and efficiency to assign opcodes and encode instruction formats.
- Today people are using Intel x86 instruction set for purposes never intended by original designers.
- Extending the CPU is a very difficult task.
- The instruction set can become extremely complex.
- If x86 CPU was designed from scratch today, it would have a totally different ISA!
- Software developers usually don't have a problem adapting to a new architecture when writing new software...
 - ...but they are very resistant to moving existing software from one platform to another.
- This is the primary reason the Intel x86 platform remains so popular to this day.

29. ISA Design Challenges

- Allowing for future expansion of the chip requires some undefined opcodes.
- From the beginning there should be a balance between the number of undefined opcodes and
 - 1. the number of initial instructions, and
 - 2. the size of your opcodes (including special assignments.)

- Hard decisions:
 - Reduce the number of instructions in the initial instruction set?
 - Increase the size of the opcode?
 - Rely on an opcode prefix byte(s), which makes later added instructions longer?
- There are no easy answers to these challenges for CPU designers!

30. Intel Architecture Software Developer's Manual

Classic Intel Pentium II Architecture Software Developer's Manual contains three parts:

- 1. <u>Volume 1</u>, Intel Basic Architecture: <u>Order Number 243190</u>, PDF, 2.6 MB.
- 2. <u>Volume 2</u>, Instruction Set Reference: <u>Order Number 243191</u>, PDF, 6.6 MB.
- 3. Volume 3 , System Programing Guide: Order Number 243192 , PDF, 5.1 MB.

It is highly recommended that you download the above manuals and use them as a reference.

31. Intel Instruction Set Reference (Volume2)

- Chapter 3 of the <u>Instruction Set Reference</u> describes
 - each Intel instruction in detail
 - algorithmic description of each operation
 - effect on flags
 - operand(s), their sizes and attributes
 - CPU exceptions that may be generated.
- The instructions are arranged in alphabetical order.
- Appendix A provides opcode map for the entire Intel Architecture instruction set.

32. Chapter 3 of Intel Instruction Set Reference

- Chapter 3 begins with instruction format example and explains the Opcode column encoding.
- The Opcode column gives the complete machine codes as it is understood by the CPU.
- When possible, the actual *machine code bytes* are given as exact hexadecimal bytes, in the same order in which they appear in memory.
- However, there are opcode definitions other than hexadecimal bytes...

33. Intel Reference Opcode Bytes

Fow example,



INSTRUCTION SET REFERENCE

INC-Increment by 1

Opcode	Instruction	Description
FE /0	INC r/m8	Increment r/m byte by 1
FF /0	INC r/m16	Increment r/m word by 1
FF /0	INC r/m32	Increment r/m doubleword by 1
40+ rw	INC r16	Increment word register by 1
40+ rd	INC r32	Increment doubleword register by 1

Description

This instruction adds one to the destination operand, while preserving the state of the CF flag. The destination operand can be a register or a memory location. This instruction allows a loop counter to be updated without disturbing the CF flag. (Use a ADD instruction with an immediate operand of 1 to perform an increment operation that does updates the CF flag.)

34. Intel Reference Opcode Bytes, Cont.

- /digit A digit between 0 and 7 indicates that
 - The reg field of Mod R/M byte contains the instruction opcode extension.
 - The r/m (register or memory) operand of Mod R/M byte indicates

- The size bit in the opcode specifies 8 or 32-bit register size.
- A 16-bit register requires a prefix byte:

```
Opcode Instruction
-------
41h INC ECX
66h 41h INC CX
```

35. Intel Reference Opcode Bytes, Cont.

- \bullet /r Indicates that the instruction uses the Mod R/M byte of the instruction.
- Mod R/M byte contains both
 - a register operand reg and
 - ∘ an **r/m** (register or memory) operand.

36. Intel Reference Opcode Bytes, Cont.

cb, cw, cd, cp - A 1-byte (cb), 2-byte (cw), 4-byte (cd), or 6-byte (cp) value, following the opcode, is used to specify

- a code offset,
- and possibly a new value for the code segment register CS.

37. Intel Reference Opcode Bytes, Cont.

- ib, iw, id A 1-byte (ib), 2-byte (iw), or 4-byte (id) indicates presence of the **immediate operand** in the instruction.
- Typical order of opcode bytes is
 - opcode
 - Mod R/M byte (optional)
 - SIB scale-indexing byte (optional)
 - immediate operand.
- The opcode determines if the operand is a signed value.
- All words and doublewords are given with the low-order byte first (little endian).

38. Intel Reference Opcode Bytes, Cont.

- +rb, +rw, +rd A register code, from 0 through 7, added to the hexadecimal byte given at the left of the plus sign to form a single opcode byte.
- Register Encodings Associated with the +rb, +rw, and +rd:

Table 3-1. Register Encodings Associated with the +rb, +rw, and +rd Nomenclature

						,		
	rb			rw			rd	
AL	=	0	AX	=	0	EAX	=	0
CL	=	1	CX	=	1	ECX	=	1
DL	=	2	DX	=	2	EDX	=	2
BL	=	3	BX	=	3	EBX	=	3
	rb			rw			rd	
AH	=	4	SP	=	4	ESP	=	4
СН	=	5	BP	=	5	EBP	=	5
DH	=	6	SI	=	6	ESI	=	6
ВН	=	7	DI	=	7	EDI	=	7

For example,

intel.

INSTRUCTION SET REFERENCE

INC-Increment by 1

Opcode	Instruction	Description	
FE /0	INC r/m8	Increment r/m byte by 1	
FF /0	INC r/m16	Increment r/m word by 1	
FF /0	INC r/m32	Increment r/m doubleword by 1	
40+ rw	INC r16	Increment word register by 1	
40+ rd	INC r32	Increment doubleword register by 1	

Description

This instruction adds one to the destination operand, while preserving the state of the CF flag. The destination operand can be a register or a memory location. This instruction allows a loop counter to be updated without disturbing the CF flag. (Use a ADD instruction with an immediate operand of 1 to perform an increment operation that does updates the CF flag.)

39. Intel Reference Instruction Column

- The **Instruction** column gives the syntax of the instruction statement as it would appear in a 386 Assembly program.
- For example,



INSTRUCTION SET REFERENCE

INC-Increment by 1

Opcode	Instruction	Description
FE /0	INC r/m8	Increment r/m byte by 1
FF /0	INC r/m16	Increment r/m word by 1
FF /0	INC r/m32	Increment r/m doubleword by 1
40+ rw	INC r16	Increment word register by 1
40+ rd	INC r32	Increment doubleword register by 1

Description

This instruction adds one to the destination operand, while preserving the state of the CF flag. The destination operand can be a register or a memory location. This instruction allows a loop counter to be updated without disturbing the CF flag. (Use a ADD instruction with an immediate operand of 1 to perform an increment operation that does updates the CF flag.)