

© Copyright 1980 by Ohio Scientific Inc.

All rights reserved. This book, or any part thereof, may not be reproduced in any form without permission of the publishers. Printed in the United States of America.

Although great care has been taken in the preparation of this Operator's Manual to insure the technical correctness, no responsibility is assumed by Ohio Scientific for any consequences resulting from the use of its contents. Nor does Ohio Scientific assume any responsibility for any infringements of patents or other rights of third parties which may result from its use.

CONTENTS

SECTION	PAGE
INTRODUCTION	1
1. COMPUTERS, PROGRAMS AND THE MONITOR.....	2
2. EXPLORING SPACE WITH THE MONITOR.....	3, 4
3. CREATING A GOOD LISTENER	5, 6
4. THE MIGHTY BIT	7
5. THE UGLY TRUTH ABOUT BINARY	8, 9
6. HEXABURGER HELPER	10, 11
7. MAKING UP ORDERS FROM HEADQUARTERS.....	12-15
8. MAKING YOUR MOVE	16, 17
9. FETCH AND STEP IT	18-20
10. START WAVING YOUR FLAG	21-23
11. A TOTAL MYSTERY.....	24-26
12. A LOOP YOU CAN COUNT ON.....	27-30
13. A STACK OF LETTERS	31, 32
14. IT'S THE SAME OLD ROUTINE.....	33-35
15. EXTENDING THE MYSTERY.....	36-39
16. BIT BY BIT	40-42
17. IT'S VERY LOGICAL.....	43, 44
18. HARDWORKING SUBROUTINES	45, 46
19. TWO-WAY ARITHMETIC	47-49
20. A SPARKLING FINISH	50
APPENDICES	
A. ASCII CHARACTER CODES.....	51
B. 6502 MICROPROCESSOR ARCHITECTURE	52
6502 INSTRUCTION SET	
C. MNEMONIC LIST	53, 54
D. HEX LISTING	55-57
E. 6502 DISASSEMBLY TABLE.....	58
F. SPECIAL SYMBOLS	59
G. COMPLETE INSTRUCTION LIST WITH OPCODES.....	60-74
H. OSI 65V MONITOR MOD 2 LISTING.....	75-77
I. BIBLIOGRAPHY	78, 79
J. 65V MONITOR COMMAND SUMMARY	80
K. TWO-WAY ARITHMETIC LISTINGS	81, 82
INDEX.....	83, 84

SECTION DESCRIPTIONS

SECTION 1—COMPUTERS, PROGRAMS AND THE MONITOR

Introduction of elementary computer terminology and concepts. Tells you what the Monitor is.

SECTION 2—EXPLORING SPACE WITH THE MONITOR

An explanation of memory and how to examine and change your computer's memory with the Monitor.

SECTION 3—CREATING A GOOD LISTENER

You encounter your first "machine code" program, "Good Listener," in this section and get an introduction to flowcharts.

SECTION 4—THE MIGHTY BIT

Binary and the ASCII code are introduced and "Good Listener" is expanded.

SECTION 5—THE UGLY TRUTH ABOUT BINARY

More binary, the introduction of BCD and hex.

SECTION 6—HEXABURGER HELPER

Arithmetic in the world of hex.

SECTION 7—MAKING UP ORDERS FROM HEADQUARTERS

Introduction of registers, flowchart explanation of "Good Listener." Introduction of opcodes, addressing modes, mnemonics and assembly language.

SECTION 8—MAKING YOUR MOVE

Data moving instructions and associated addressing modes.

SECTION 9—FETCH AND STEP IT

The Program Counter, Instruction Register, branch and jump instructions and zero page are introduced. "Execute-in-a-Box" program.

SECTION 10—START WAVING YOUR FLAG

Flags, compare instructions are covered.

SECTION 11—A TOTAL MYSTERY

A "mystery program" presented, flow charted and explained. Two's complement introduced.

SECTION 12—A LOOP YOU CAN COUNT ON

Loops are discussed along with increment and decrement instructions.

SECTION 13—A STACK OF LETTERS

Stack, push, pull and stack pointers are examined. "Execute-in-a-Box" is reviewed.

SECTION 14—IT'S THE SAME OLD ROUTINE

Disassembly table and subroutine concepts are covered.

SECTION 15—EXTENDING THE MYSTERY

"Total Mystery" is explained. Add and subtract instructions and carry flag introduced.

SECTION 16—BIT BY BIT

Arithmetic and logical shifts and rotate instructions.

SECTION 17—IT'S VERY LOGICAL

Masking bits, logical operation (AND, ORA and EOR) discussed.

SECTION 18—HARDWORKING SUBROUTINES

Some handy subroutines.

SECTION 19—TWO-WAY ARITHMETIC

Decimal mode and relocatable code.

SECTION 20—A SPARKLING FINISH

Indexed Indirect Addressing Mode and a sparkling program.

6502 INSTRUCTION SUMMARY TABLES

DESCRIPTION	PAGE
Data Moving LDS, STA, LDX, STX, LDY, STY TAX, TAY, TXA, TYA	Figure 8.1 16
Branch and Compare BCC, BCS, BEQ, BNE, BMI, BPL, JMP, CMP, CPX, CPY	Figure 10.1 21
Increment and Decrement DEC, INC, DEX, DEY, INX, INY	Figure 12.2 28
Stack Operations PHA, PHP, PLA, PLP, TSX, TXS	Figure 13.2 32
Add, Subtract and Carry ADC, SBC, CLC, SEI	Figure 15.2 37
Shift ASL, LSR, ROL, ROR	Figure 16.1 40
Logical AND, ORA, EOR, BIT	Figure 17.2 44
Decimal CLD, SED	Figure 19.1 47

INTRODUCTION

Your Ohio Scientific microcomputer is in many ways like the computers that write company paychecks and run factories, control space missions and predict the weather. This manual is to show how your microcomputer and its big brothers work.

It is not assumed that you know anything about computers already, just that you want to know the inside story. You will be discovering how to use your computer at a very direct level, one that permits you to control every capability that it has. Convenient access to this level is available through a part of your system known as the 65V Machine Monitor. The 65V Monitor is present in all Ohio Scientific personal computers. The first section will tell what the Monitor is. The remainder of the manual will guide you in using the Monitor to explore and control your computer. There will be twenty sections. Each section will discuss a new topic and will suggest something new for you to do with your system that will help you to understand computers.

Take your time and play around with the new elements introduced in each section before going into the next section. Enjoy yourself.

SECTION 1

COMPUTERS, PROGRAMS AND THE MONITOR

Computers are information processing devices. That is their thing! They accept input information and transforms it into output data that we can read and interpret, or into sequences of actions which we find useful or pleasing.

Not all information processing takes place in computers. One drives a car by giving it the necessary input through the ignition, steering wheel, accelerator, etc. The result is a mechanical amplification of the input information. But, a car is not a computer. There is but one way to process information through a car and that is to drive it. Social benefits aside, it is a single-purpose device.

A computer can be redirected easily to different information processing tasks. It is a general-purpose device. Switching tasks is easy because the description of a task is itself information, the natural food for a computer. Of course, the computer is a machine without intelligence, so the input must be put into a completely prescribed form, leaving nothing to be figured out on the basis of previous experience.

Computer input is of two kinds: the information to be processed and the directions for the processing. Information to be processed is called input data. Several kinds of input data will be introduced later. The directions for processing take the form of a sequence of actions called a program. The actions to complete a task may be called an algorithm. Expressing the algorithm in a form suitable for computer input, we have a program. The algorithm must be described in a language that can be "understood" by the computer, in the sense that the computer takes the right action.

Languages developed for this purpose are called computer languages. One type of computer language spells out the precise way in which each part of the computer is to participate in processing the data. This is the machine language of the computer. Since the parts of different computers are arranged differently, their machine languages are different.

When carrying out a task by executing the program which describes it, a computer is actually processing a machine language program. This does not mean that people who develop programs (programmers) always write their programs in machine language. After all, the translation of a program from another computer language into machine language is just another information processing task for the computer. When a translation is being done, the input computer language is called the source language or source code. The source language is translated by the computer into the object language. Since the objective of the translation is usually machine language, the term object language or object code is often used for machine language.

The 65V Machine Monitor is a machine language program. We will refer to it by using just the term Monitor. It does not have to be fed into your computer as input because it is built-in. Built-in programs control your computer from the time it is switched on or reset (see your operator's manual for specific directions), until the control of the computer is given to a program you have entered as input information. The program in control at start-up places a "prompting" message on the video display requesting that you select which built-in program should be executed next. One of the options in the prompting message is an "M." The program is reading the keyboard for input over and over, just waiting for you to type something.

As you depress the "M" key, control of the computer is turned over to the 65V Machine Monitor. The transfer to the Monitor program occurs before you can release the "M" key. The Monitor writes a message on the video display, to be explained in the next section, and begins to read the keyboard, searching for your next input.

Make sure the 'SHIFT LOCK' key on your keyboard is depressed. Reset the computer (this method varies between different OSI computers—consult your operator's manual). Type "M" in response to the displayed message. This starts execution of the 65V Machine Monitor.

Observe the display while depressing various keys and try to determine which keys the Monitor interprets as commands. You'll find the answer as you read on. Two commands 'G' and 'L' terminate the execution of the Monitor. Avoid them until you are finished playing hide and seek. Soon you will be entering the executing machine language programs with the aid of your humble and ever present servant, the 65V Machine Monitor.

The appendix contains a listing of the Monitor. This manual will teach you how to read and understand that listing.

SECTION 2

EXPLORING SPACE WITH THE MONITOR

Your computer is a system consisting of physical machinery controlled by stored information in the form of programs and data. The physical configuration does not change as programs execute. That part of the system is called hardware—the circuit boards, metal cases, etc. Computer programs are frequently changed and are collectively referred to as software. The hardware components of your system are represented in Figure 2.1.

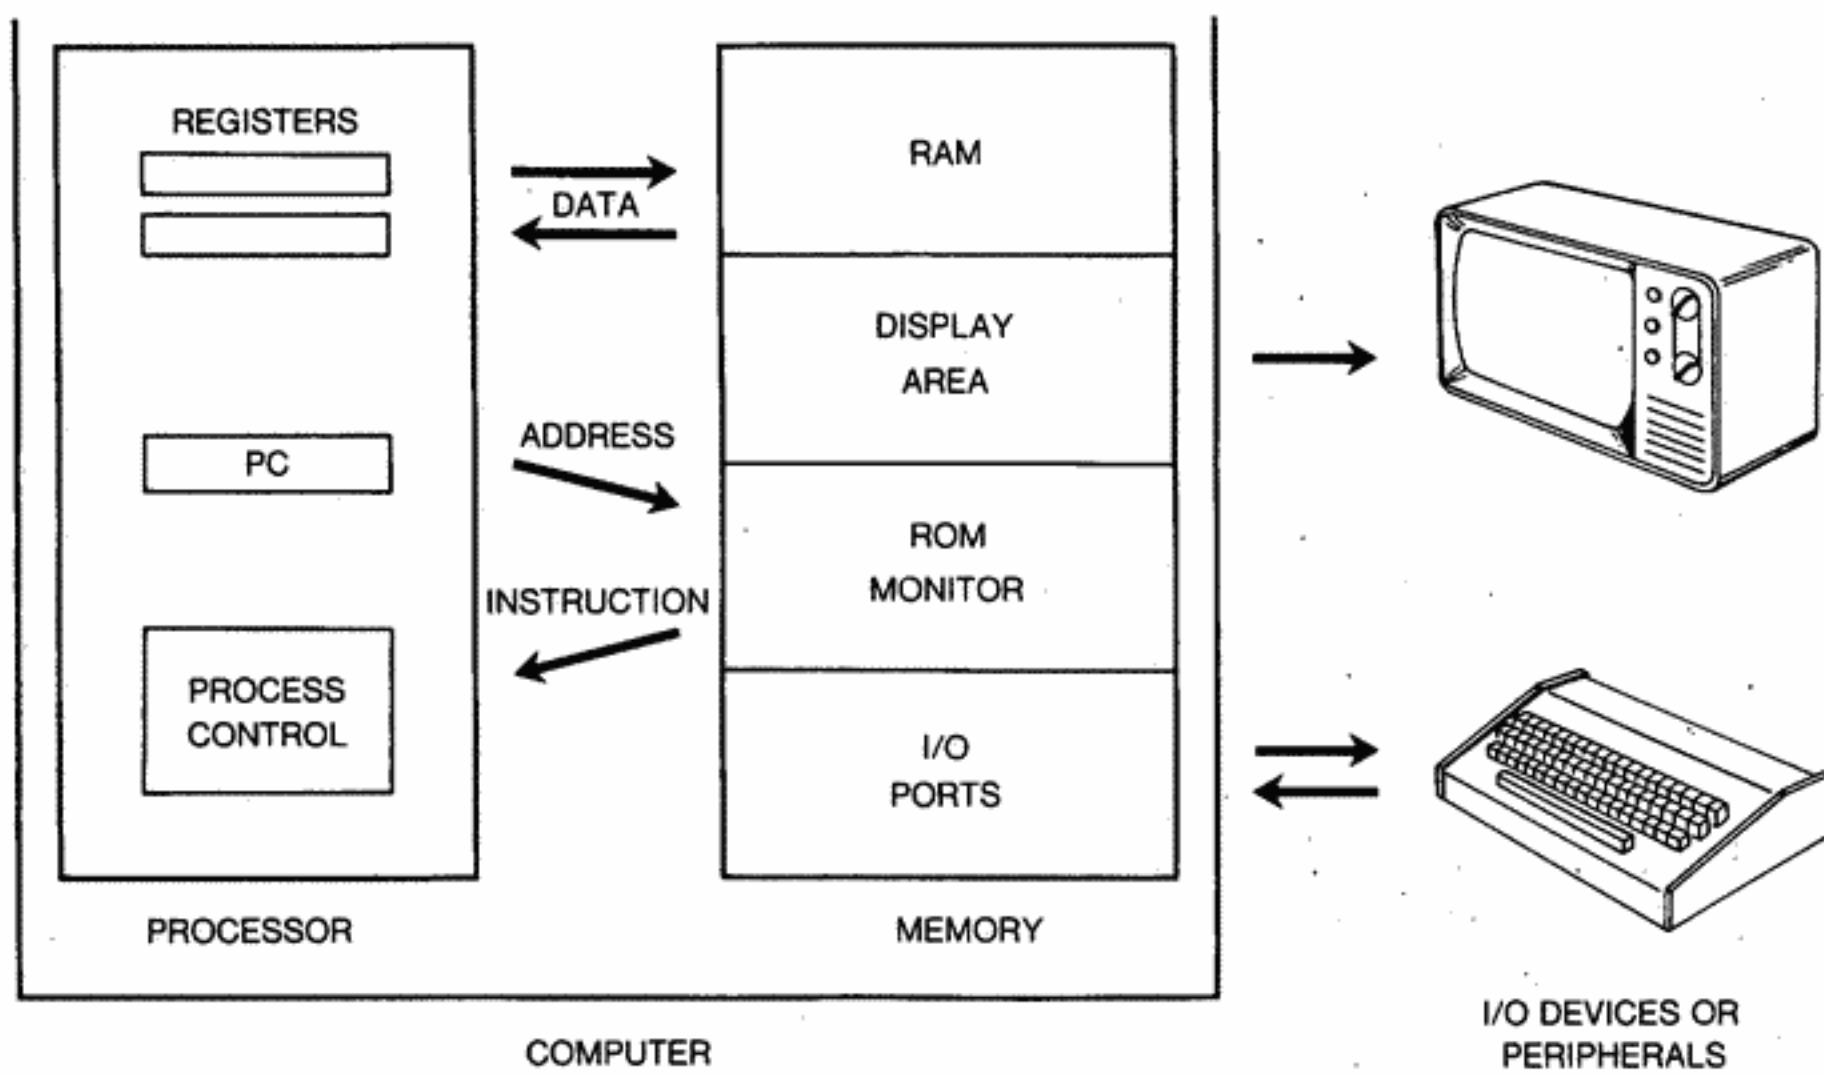


Figure 2.1 Major Hardware Components

The programs in control of the system are stored in the memory. A memory consists of a large number of cells. The contents of a cell are made available to other components by means of its address, a unique number associated only with that cell. One cell contains a piece of information we call a byte. The byte is defined in Section 4. Cells are also called memory locations.

The "action" component that processes data from the memory is the processor. In your system, the processor is a 6502 microprocessor. Information storage locations and processing stations within the processor are called registers. A single action that a processor can take with some register is called an instruction. A machine language program is a series of instructions. When one of the processor's registers, the program counter (PC), is set to the address of the beginning cell of a program, the processor begins to read and execute the machine language instruction contained in those cells. The resulting execution of the program causes some memory cells to be altered and exchanges of information to take place between the memory and input/output (I/O) devices. The result is the activity of the computer system that you can observe, from a loan calculation to video animation.

Memory cells are not all alike. Some portions of memory hold fixed information that cannot be altered as programs are executed or when the computer is turned off. This portion is called Read Only Memory (ROM). The 65V Machine Monitor and other built-in programs are located in ROM. Other parts of memory are for temporary information, like the data being processed by executing programs, or programs which are brought into memory to produce a desired behavior at a particular time. This kind of memory is known as Random Access Memory (RAM) or read/write memory.

As you start the execution of the 65V Machine Monitor, the processor clears the CRT screen (video display) and writes a four-digit number and a two-digit on a small portion of the display. This is done by transferring characters

into the RAM display area as shown in Figure 2.1. Contents of this RAM display area are regularly transmitted to the CRT display screen.

The characters appearing on the screen represent two numbers written in a number system called hexadecimal or base sixteen. In a section to follow you will learn how these numbers are constructed. The left number is the address (location) of a memory cell and the right number shows the information contained in that cell. Two hex digits are enough to express the contents of any 8-bit memory cell. Addresses or memory cell numbers are two bytes long and are represented by four hex digits or represented by four hexadecimal digits. For reasons we can appreciate shortly, the Monitor ignores most keys reacting only to the decimal digits 0-9, the letters A-G and L, the special symbols: “/” (slash), ‘.’ (period), and the ‘RETURN’ key.

The decimal digits 0-9, along with the letters A-F are hexadecimal digits. The Monitor has two ways to react to keyed in hexadecimal digits. In the Monitor address mode, digits are rolled into the address value (left or four-digit number) displayed. This changes the right value too, since the new address designates a different memory cell. In the Monitor data mode, digits are rolled into the data value (right or two-digit number). Actually, the addressed memory cell is being altered and the display change reflects the alteration.

The Monitor starts in the address mode. Depressing ‘/’ changes it to data mode. When ‘.’ is depressed, the Monitor returns to address mode. The ‘RETURN’ key advances the address by one, changing the data value. You can use it to move through memory, reading or writing into cells.

The 65V Machine Monitor program starts at a location whose address is \$FE00 (read F, E, zero, zero—the \$ indicates that this is a hex value). See if you can get that number (without the \$) into the address side of the display. This displays the first instruction of the Monitor on the data side. It should be ‘A2’. Now depress ‘/’ and the ‘RETURN’ key several times. What is happening? You are counting up on the address side and getting a display of the contents of successive memory cells on the data side. Wherever you stop, write down the address and write ‘22’ into that cell using the data mode. Now return to address mode (‘.’) and key-in the address over itself. Disappointed? The ‘22’ is not there because you are addressing ROM, where the contents of cells cannot be changed.

Can you enter data and see the result immediately? Yes, in the display area. Each character position of the CRT screen has a RAM cell associated with it which you can alter in data mode. Most of them now contain the ‘blank’ character. Given the address of a cell in the display area, (see the user’s manual for specific video display locations for your computer) you can place non-blank characters in nearby cells to create a pattern on the screen. When you learn how to count in hexadecimal, you can systematically explore the display area and find out exactly where screen positions are recorded in the display memory. A starting location for some preliminary exploration is the hexadecimal number \$D140, a strange looking number if I ever saw one:

SECTION 3

CREATING A GOOD LISTENER

It may be that good listeners are born, not made. But your computer can be programmed to pay strict attention to every character you type. It cannot nod its head in agreement but it can repeat or echo each character on the television screen.

Let's think about the program which describes the "good listener" task. In order to write a program we have to specify the desired behavior completely, leaving nothing unspecified. The computer understands nothing and must be told everything. For starters, exactly where on the screen do we want the input to be echoed? Where the Monitor prompt message was? Okay. When our program is executing, the Monitor will be asleep, having no processor to execute it, so these display locations are available for display. Let's extend the display across the screen so we can read the glorious stuff we shall be entering. What happens when we reach the right of the screen? Later you can implement other choices, but for now, let's start pushing characters to the left making room for new input to the right, just as the Monitor does to its address and contents display. Will there be any keys which will be used to cause the "good listener" to alter its behavior, like the '.' and '/' commands affect the Monitor? No, not in the 'first pass' version. How will the good listening end? We can't tell it to stop so let it go on forever! "Forever" means as long as the program has control of the processor. The best way to see what the program does is to try it. The sequence of steps in the flowchart (See Figure 3.1) must be expressed in computer language. This programming step is called coding. Coding in machine language requires the programmer to express the required processing in terms of operations which the processor can do with its registers. Using techniques you will be learning in this manual, a machine language version of the "good listener" was created in hexadecimal numbers, so that you can load it from the keyboard. It should be loaded starting at location **0000**, as shown. All key-in's for loading, using the Monitor, are shown below. We use the symbol '*' to represent the 'RETURN' key. Some locations are shown to the left for checking during loading.

LOCATION (HEX)	WHAT YOU SHOULD KEY-IN
0000	.0000/A2*00*20*ED*FE*9D*46*D1*
0008	E8*E0*14*D0*F5*20*ED*FE*
0010	A8*A2*00*BD*47*D1*9D*46*
0018	D1*E8*E0*13*D0*F5*98*8D*
0020	59*D1*4C*0D*00

Before executing the program let's check the loading. One key-in error can make a big difference. How do we check it? Type ".0000/"—this resets the Monitor to the data mode and resets the display to the beginning of the program (\$0000). Repeated use of the 'RETURN' key allows you to "step" through the program examining each location. If you find a mistake, enter the correction.

Computers do one thing at a time, so a program must be organized that way. An important tool for planning or showing the sequence of steps in a program is a flowchart, a diagram such as the one to the right. Arrows in a flowchart mark the path of the processor, boxes represent the processing that it does along the way. Box shapes have meaning to programmers. Rectangular boxes stand for processing steps. Slanted sides signal an input or an output. Diamonds are decision boxes, representing tests which select paths for the processor. In the program a decision step is called a branch. Branches allow sets of steps to be repeated and decisions to be made. A set of repeated steps is called a loop. The six-sided box near the top denotes preparation for a loop. Ovals show the start and termination points of the program.

You probably have realized that the flowchart represents the "good listener." There are two loops, one to fill the display line and another to add characters to a full line. The lower loop has no decision box, therefore, there is no way for it to end. There is usually one start point and there can be several termination points.

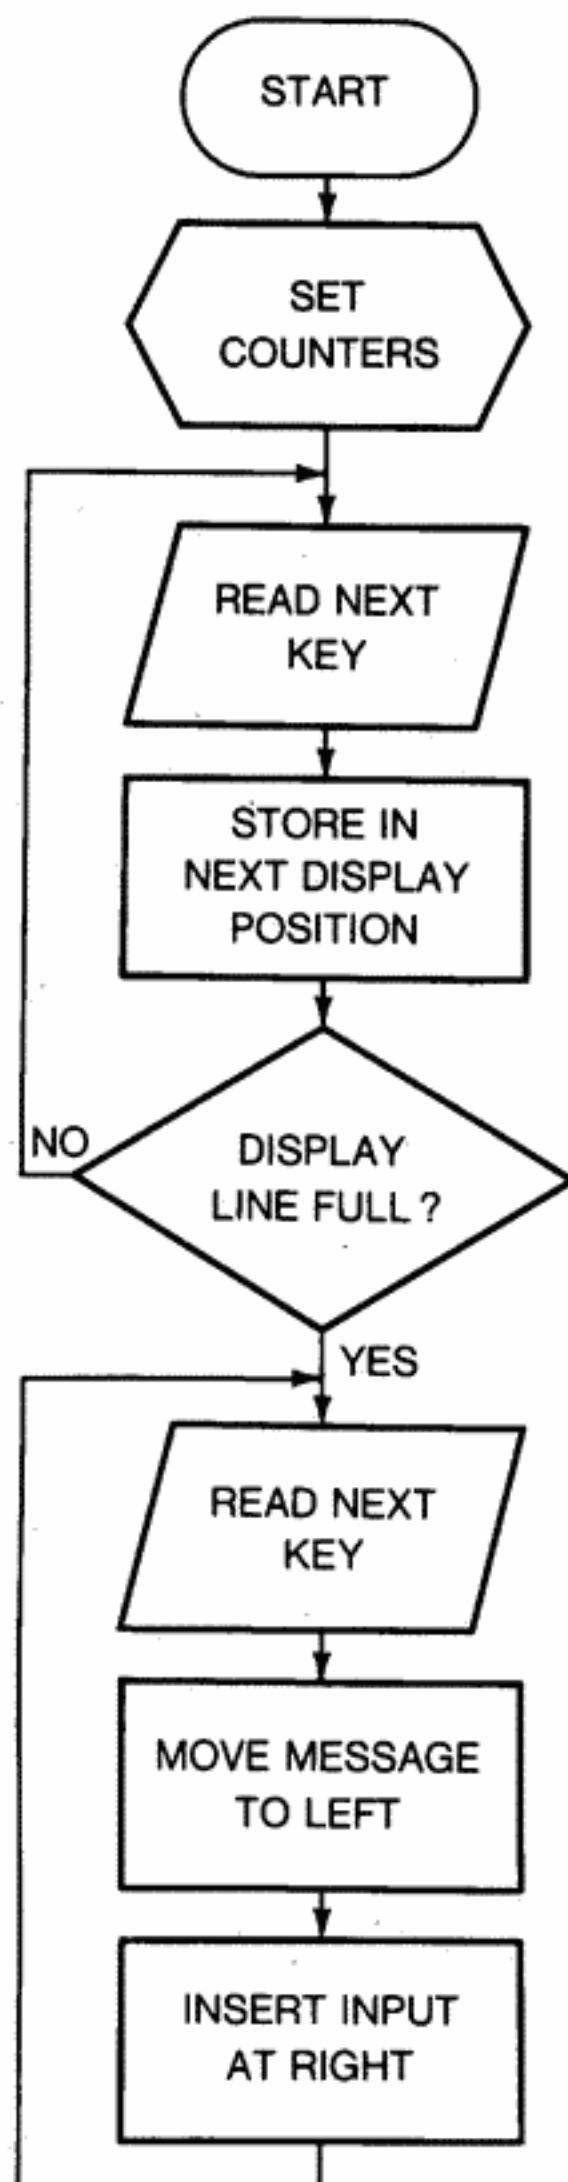


Figure 3.1 A Flowchart

For example, suppose you type ".0000/" and depress the 'RETURN' key three times. Suppose the display reads "0003 DD," this is wrong, it should be "0003 ED." To enter the correction, simply type the correct contents, E followed by D. Note that the display now reads "0003 ED" which is correct. Your correction is now entered. Continue with the 'RETURN' key to check the code. Repeat the above process as necessary until the code on Page 5 is entirely correct.

Now that the program is loaded and checked, it can be executed. The 'G' command tells the Monitor to load the displayed location into the program counter, thus, starting the execution of the program beginning at the displayed cell. So, .0000G will start the "good listener." Is it listening?

SECTION 4

THE MIGHTY BIT

Information comes into the computer system through its input/output (I/O) devices and is stored in memory. It moves around inside the processor. Output information appears on the display as numbers, words or pictures. But if we were inside the computer watching the information go by, we would see it in a strange internal form.

A computer is made of electrical circuits and connecting paths which hold, transmit or process the smallest particle of computer information there is, the bit. A bit is a simple yes or no, a true or false, one of two possible values. Internally, this is seen as a one or a zero. It is the universal measure of the amount of information content in any message. A set of bits taken together is a binary code. Just as a bicycle has two wheels, a binary code is based on two values. Like the parallel rails of a railroad track, sets of electrical paths carry binary codes around inside the computer.

Anything that can be said, can be said in a binary code, provided there are enough bits and the bit values have been assigned a meaning. The bits themselves do not carry the meaning. Sitting there in the computer, we would not get any message by reading a passing binary code unless we knew the meaning assigned to the bit values by the sender and receiver of the code.

To represent a binary code on paper, we write it as a string of characters in which each bit is represented by one of two possible characters. Bit values are traditionally represented by the symbols '0' (zero) and '1' (one).

A byte is a binary code composed of eight bits. In your computer each memory cell contains one byte. A character, such as a letter, digit, or punctuation mark, is the type of information which is (forgive the pun) byte size. When reading the keyboard, the processor loads a byte from the keyboard into one of its registers. This byte indicates which key is being depressed. "Good listener" stores each byte it obtains in memory cells in the display area. A byte in the display area directs the display subsystem to a pattern for the character which is to be seen at that position.

Somebody had to decide what bit pattern should represent each character. Many computer manufacturers use the same code, so that computers can transmit character information to each other. The common code used in almost all small computers is the American Standard Code for Information Interchange or ASCII code.

You can look up the ASCII code for any keyboard character in the table in the appendix at the rear of this manual. We have another way to determine the ASCII value—we can execute a program which reads the keyboard, converts and displays the bit values it is receiving. The load and execute Monitor commands for this conversion program are:

```
.0000/20*ED*FE*85*F0*A9*18*A2*
    07*9D*D2*D0*66*F0*3E*D2*
        D0*CA*10*F5*30*EA
.0000G
```

As you examine ASCII codes, go through the sequence of digit characters 0,1, . . . ,9 and note what you see.

If it is convenient to leave your computer on while reading the next section, it will save time. The next section suggests a small change in the binary display program, which can be made without keying in the program again, provided the computer has not been turned off or used for any other purposes.

SECTION 5

THE UGLY TRUTH ABOUT BINARY

Numbers are important to computers. Addresses of memory cells are numbers. The contents of registers and memory cells often represent numbers. Computers spend a lot of their working time counting and calculating with numbers. So, numbers have to be represented in binary codes, don't they? One way of doing it could be seen in the ASCII codes for digits 0-9. Ignoring the left four bits which remain fixed at 0011, the digits are represented this way:

0-0000	5-0101
1-0001	6-0110
2-0010	7-0111
3-0011	8-1000
4-0100	9-1001

To represent a number like 6502, we can string these codes together, packing two-digit codes to a byte like this:

$$6502 = \underline{0110} \underline{0101} \underline{0000} \underline{0010}$$

6 5 0 2

This is a frequently used code for numbers. It is called Binary Coded Decimal or BCD. Can you write the four-bit codes that are not used in BCD for digits? There are six of them. (The unused codes are: 1010, 1011, 1100, 1101, 1110 and 1111). These unused codes are the reason why BCD is not the most efficient way to represent numbers in a computer. A memory cell containing a BCD byte is storing only 5/8 of the information it could, because its bits are not free to express all of their values. Also, the processor circuits which carry out such pleasing operations as addition and subtraction are complicated by the need to avoid the codes that do not represent digits.

So what is a "natural" number system for computers? One that will allow them to do their thing? We humans are partial to tens. We write the digits 6502 to mean:

$$(6 \times 10^3) + (5 \times 10^2) + (0 \times 10^1) + (2 \times 10^0)$$

or $(6 \times 10^3) + (5 \times 10^2) + (0 \times 10^1) + (2 \times 10^0)$

The decimal digits 0, 1, . . . , 9 express numbers in the decimal number system based on the number ten. What's so great about ten? Take off your mittens.

If you are a computer, how many fingers do you have? Two. The characters '0' and '1' stand for your digits and the natural way for you to express the above number is 1100110010110, meaning:

$$(1 \times 2^{12}) + (1 \times 2^{11}) + (0 \times 2^{10}) + (0 \times 2^9) + \\ (1 \times 2^8) + (1 \times 2^7) + (0 \times 2^6) + (0 \times 2^5) + \\ (1 \times 2^4) + (0 \times 2^3) + (1 \times 2^2) + (1 \times 2^1) + (0 \times 2^0)$$

This is the binary number system based on the number two. The BCD codes for numbers up to ten are the binary representations of these numbers.

In the binary number system every bit pattern is used and stands for a unique number, but only a computer could love a number like 1100110010110. The ugly truth about binary is that it scrambles human brain waves. We lose our place in its maze of zeros and ones. The human brain deals best with a few things at a time. We even put commas in long decimal numbers to mark the place. What we need to deal with binary is something to group those bits into a shorter, more readable pattern.

The answer lies in those six missing four-bit codes in BCD. If we had digits to represent those extra codes, we could write binary compactly because every four-bit group could be replaced by the corresponding digit. A digit is

some character given a numerical meaning. To get six more, we use the letters A-F and assign numbers and their four-bit binary representations to them, arriving at:

0-0000	4-0100	8-1000	C-1100
1-0001	5-0101	9-1001	D-1101
2-0010	6-0110	A-1010	E-1110
3-0011	7-0111	B-1011	F-1111

The number system based on sixteen is called hexadecimal. If our explorations of the universe reveal intelligent life forms with sixteen fingers, they probably will be using hexadecimal.

To see how that ugly binary number 1100110010110 shapes up in its hexadecimal form, just mark off groups of four bits from the right $1/1001/1001/0110$ and replace each group by its hexadecimal digit. You should get 1966_{16} .

Another system that is sometimes used to represent binary in computer literature is the system based on eight. It is called octal. In octal, the digits are zero through seven and each digit replaces three bits.

With all these number systems floating around we could get confused. When there is any question about it, the base number of the system is written as a subscript of the number representation. For example:

$$6502_{10} = 1100110010110_2 = 1966_{16}$$

How would our 16_{10} -fingered friends write that? Answer:

$$6502_A = 1100110010110_2 = 1966_{10}$$

Can you figure out why?

You can enlist your computer's help in a little binary to hexadecimal drill by making a small modification in the binary display program of the last section. The program loops forever, always looking for a new key-in. Let's make it return to the Monitor after accepting one key-in. Then you can use the Monitor to place in a display cell what you think is the hexadecimal version of the binary code that you see. If you are right, the character originally keyed in will appear on the screen.

If you haven't turned your computer off since entering the binary display program, it is still there in RAM! Going to the Monitor, alter the program by entering:

.0014/4C*2A*FE*

Now when you enter .0000G, the modified program will display in binary the ASCII code for your next key-in. Select a nearby display location and enter the hexadecimal code. If you make a mistake on the binary to hexadecimal conversion, something other than the character you expected will appear, maybe something you cannot key-in. Does that make you curious? Then why not make some "intentional" mistakes? Who'll know?

SECTION 6

HEXABURGER HELPER

So why does an alien being with eight fingers to the hand (or four fingers on each of four hands) write

$$6502_A = 1100110010110_2 = 1966_{10}$$

with his little alien BIC? Because to him 10 is the one-digit number A. And to him 10 means sixteen. Of course, he would never call it "sixteen." That's decimal-based terminology. In any number system, 10 stands for the number on which the system is based. This number is referred to as the base or the radix of the system. Remember that there is just one set of integer numbers but many systems with which to express them. The equal signs in (back to earth)

$$6502_{10} = 1100110010110_2 = 1966_{16}$$

belong there because we have three representations of the same number.

To find the decimal representation of a hexadecimal number, say, $D1E4_{16}$, you translate its digits to decimal and carry out the decimal calculation it stands for, namely

$$(13 \times 16^3) + (1 \times 16^2) + (14 \times 16^1) + 4 = 53732$$

The calculation is a bit easier if you alternate multiplications and additions like this:

$$((13 \times 16 + 1) \times 16 + 14) \times 16 + 4 = 53732$$

Written out, the calculations look like this:

$$\begin{array}{r} 13 & 208 & 209 & 3344 & 3358 & 53728 \\ \times 16 & + 1 & \times 16 & + 14 & \times 16 & + 4 \\ \hline 78 & 209 & 1254 & 3358 & 20148 & 53732 \\ 13 & & 209 & & 3358 & \\ \hline 208 & & 3344 & & 53728 & \end{array}$$

The result: $D1E4_{16} = 53732_{10}$.

As you work with machine language programs, you will want to add two hexadecimal numbers and get a hexadecimal result. One way is to convert the numbers to decimal representation, add them, then convert the sum back to hexadecimal. That's the hard way. The easy way is to add in hexadecimal, using the same rules of arithmetic we use in decimal addition. Sounds hard, doesn't it? Well, judge for yourself. First, let's take a close look at what's happening in the decimal addition:

$$\begin{array}{r} 1 \\ 182 \\ + 137 \\ \hline 319 \end{array}$$

Since $8 + 3$ cannot be represented in one decimal digit, you think of it as $10 + 1$ and write the 1, noting the carry into the column to the left, as shown.

Hexadecimal addition works on the same way. Write the digits of $B6_{16} + 89_{16}$ in the format for column-by-column addition, then add the units column digits. The answer, 15_{10} , is represented as F in hexadecimal. In the sixteen's column, we get $11 + 8 = 19_{10}$, which cannot be represented in one hexadecimal digit. So, we think of it as $16 + 3$, write down the 3, and carry the 1 from $16 = 10_{16}$. The whole problem then reads:

$$\begin{array}{r} B6_{16} \\ + 89_{16} \\ \hline 13F_{16} \end{array}$$

Hexadecimal subtraction can be done directly, following the same rules as decimal subtraction: In

$$\begin{array}{r} 13F_{16} \\ - B6_{16} \\ \hline 89_{16} \end{array}$$

we must borrow 1 to go with 3. But, the borrowed 1 stands for 16_{10} , so we calculate $(16 + 3) - 11 = 8$.

Hexadecimal addition and subtraction are a help in finding out exactly where display positions appear on your screen. The number of display positions in a row is a multiple of 16_{10} . It may be $32_{10} = 20_{16}$ or $64_{10} = 40_{16}$. This means that locations displayed in a vertical column differ by that multiple.

SECTION 7

MAKING UP ORDERS FROM HEADQUARTERS

Remember the flowchart for "good listener?" It showed the sequence of steps for doing the desired processing and display task. Such a sequence of steps is called an algorithm, as we mentioned earlier. To bring the "good listening" algorithm to life in your computer, you loaded a machine language program into memory as a sequence of binary codes, keying in each byte of the program as a pair of hexadecimal digits. How did "good listener" get into that form? By a process that will be described in this section, a process involving two stages called coding and assembly.

In the coding stage, the programmer expresses his chosen algorithm as a series of actions that the computer's processor can perform. Each individual action is an instruction. A processor has a menu of available instructions called the instruction set. Working from a flowchart or some other description of the algorithm, the programmer chooses sequences of instructions. These include instructions which select sequences to be executed next and other instructions which cause sequences to be executed repeatedly.

The structure of the microprocessor determines what instructions are available in the instruction set. Coding in machine language requires a knowledge of that structure because you are expressing the algorithm directly in machine instructions.

Translation of algorithms into more general computer languages (also called higher level languages) is also called coding. This approach does not require the programmer to know the "insides" of the processor. This knowledge is applied in a program called a compiler or an interpreter that translates the higher level computer language into machine language instructions. Some high level languages that are translated into machine language are BASIC, FORTRAN, PASCAL, APL and COBOL.

We are going to be coding in the machine language of the 6502 microprocessor. The 6502 has three registers for which programmers use the names X, Y and A. Each of these registers holds one byte of information. The accumulator, A, is the busiest register by virtue of its direct connections with the processing circuitry in the 6502. The X-register and Y-register are called indexing registers. Their usual jobs are counting and maintaining the location (or index) of data being processed.

A translation of the "good listener" flowchart into operations on the contents of 6502 microprocessor registers is given in Figure 7.1. To the left of each box is a description of a way to use the 6502 registers to carry out that step. The programmer may have a choice of several possible ways to use the registers. Of course, Figure 7.1 does not represent the completed coding because the instructions are not specified. Besides spelling out the instructions, the coding step also involves specifying the location and arrangement of data. In the "good listener" coding, for example, access to display locations is done by incrementing the X-register (register X) by one each time a loop is repeated. This approach dictates the arrangement of that data.

Load a zero into Register X.

Use a part of the Monitor which loads the ASCII code for the next key depressed into the accumulator A.

Store from the accumulator A into the memory cell whose address is $D146_{16}$ plus the contents of X.

Increment X by 1 for next store.

Compare X with length of display line. If not yet equal, branch back for next key.

Use the same routine to load the ASCII code for next key depressed into the accumulator.

Load a zero into Register X. Repeat the following loop across the display: load from the contents of $D147_{16}$ plus X into Y, store from Y into $D146_{16}$ plus X. Increment and test X.

Store from the accumulator into the address on the right of the display line. Jump back to the instruction for reading a key.

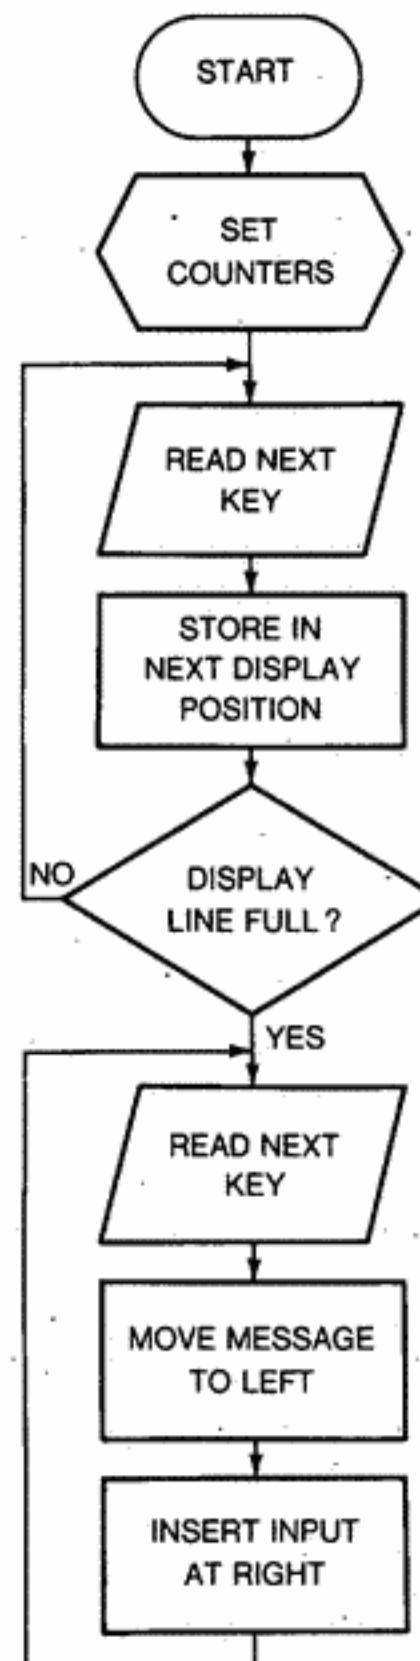


Figure 7.1 "Good Listener" as Register Operations

In the coding stage, some flowchart boxes may be implemented by one or two instructions. Others may take many instructions. In describing the "good listener" algorithm, it is helpful to use a single box for the "move message left" step. Implementing this step with register operations requires a loop, as shown in Figure 7.2. Loops often involve incrementing the testing an index, such as in Figure 7.2. The index must be given an initial value before the loop is executed the first time.

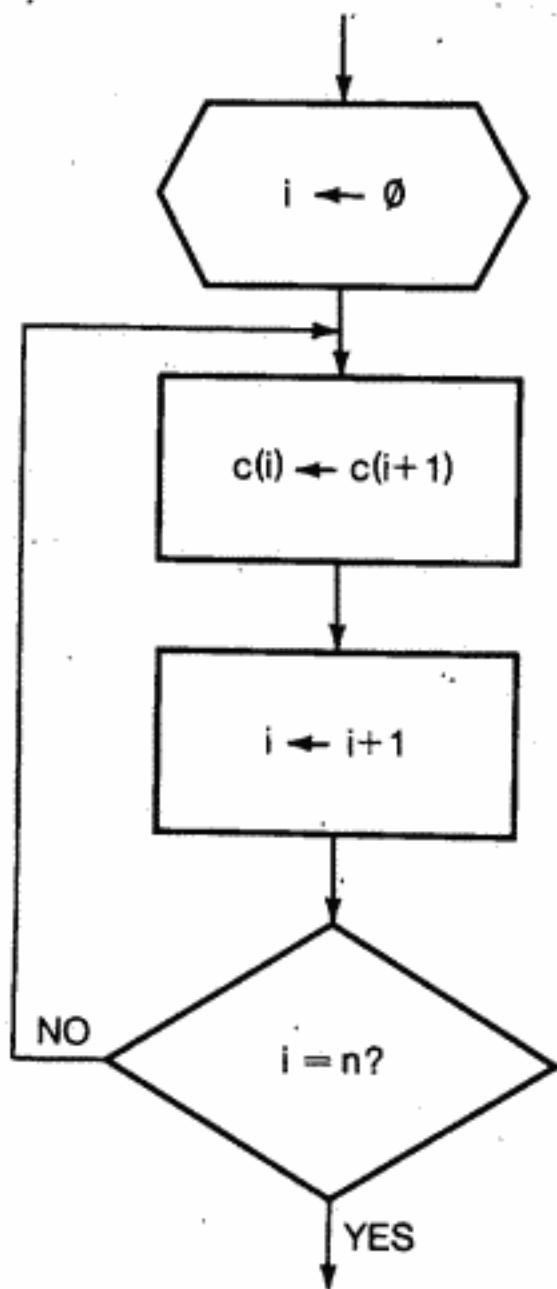


Figure 7.2 A loop for "move message left"

Now getting down to selecting instructions, just what does an instruction contain? An instruction always contains a binary code called an operation code, or opcode, for short. The opcode identifies the operation to take place and the manner in which the operands, the data involved in the operation, are to be accessed. Operands are contained in either microprocessor registers or in memory cells. In the case of memory cells, the instruction selects one of several addressing modes for the operand. Addressing modes are ways of forming the cell address of an operand in memory. In addition to the opcode, instructions often contain the operand address or information that goes into the formation of the address. The operand address derived during the execution of the instruction is called the effective address.

Figure 7.3 shows a coding of "good listener." The symbolic form of the opcode that most programmers use in coding is under the heading Mnemonic. The numeric form of the same opcode that results from the process of assembly is under the heading Opcode.

LOCATION	OPCODE	OPERAND	LABEL	MNEMONIC	OPERAND	REMARK
0000	A2	00		LDX	#0	CLEAR INDEX
0002	20	ED FE	FILL	JSR	GETKEY	NEXT PRESSED TO A
0005	9D	46 D1		STA	\$D146	INTO NEXT LINE CELL
0008	E8			INX		INCREMENT INDEX BY 1
0009	E0	14		CPX	#20	END OF THE LINE?
000B	D0	F5		BNE	FILL	BACK UNTIL EQUAL
000D	20	ED FE	REPEAT	JSR	\$FEED	NEXT PRESSED TO A
0010	A8			TAY		SAVE KEY IN Y
0011	A2	00		LDX	#0	CLEAR INDEX
0013	BD	47 D1	MOVE	LDA	\$D147	LOAD LINE(I+1)
0016	9D	46 D1		STA	\$D146	STORE INTO LINE (I)
0019	E8			INX		INCREMENT INDEX
001A	E0	13		CPX	#19	END OF THE LINE?
001C	D0	F5		BNE	MOVE	BACK UNTIL EQUAL
001E	98			TYA		RESTORE KEY-IN
001F	8D	59 D1		STA	\$D159	STORE NEW KEY
0022	4C	0D 00		JMP	REPEAT	BACK FOR MORE

Figure 7.3 Good Listener as Machine Language Instructions

Compare columns 1-3 with the contents of memory (starting at \$0000) resulting from the program entry exercise on page 5. Notice the pattern of correspondence between the assembly listing here and the machine readable form of the program given on page 5.

Just as binary numbers are hard to interpret, machine language programs in binary form are not easy to deal with. Since programmers want to be able to read and alter programs as well as create them, they usually write them in a symbolic form using names for operations, registers and memory locations. There is also the important matter of getting the new program to work in the first place. This process is called "debugging." There always seem to be some little mistakes or "bugs" in a new program, and finding them requires concentrated study of the program. So a readable form of the program is essential.

Assembly is the process of translating the symbolic form of machine language into binary codes. If the symbolic form of the program is written according to required format rules, a program can do the assembly task. Such a program is called an assembler. The input to the assembler is called assembly language. The symbolic form of Figure 7.3 and other such figures in this manual conform to the standard assembly language mnemonics (symbols) for the 6502 (see list in appendix). (For more information concerning assembly language programming on OSI computers refer to the OSI Assembler/Editor and Extended Monitor Reference Manual.)

In later sections we shall return to Figure 7.3 to learn about every part of it. For the moment, see if you can tell where to change the length of the display line. Compare the assembly language version with the flowchart and description of Figure 7.1. Every instruction is on a separate line and the assembled instruction begins with the opcode. In the assembly language, the numbers relating to display line length are in decimal; the corresponding numbers are in hexadecimal in the assembled code. Can you find them? Now select another line length that will fit on your screen, alter the program and try it. A clue: there are three bytes in the program that must be altered.

SECTION 8

MAKING YOUR MOVE

How is coding a program like sorting potatoes? Answer: It's just one decision after another. Would you like to understand the process and do some coding yourself? Okay, let's examine some of the decision-making that takes place in coding. Mostly, the "good listener" algorithm involves moving data around. For now, we'll concentrate on decisions connected with that.

The part of the 6502 instruction set devoted to moving data around between memory and processor registers X, Y and A appears in Figure 8.1. There you have almost all you need to know about these instructions for coding and assembly. Missing is the time it takes the processor to execute each instruction. We are seldom concerned with that. Many manuals and books provide 6502 instruction tables with execution timing. See the Bibliography for references.

Starting with the leftmost column of Figure 8.1, the operation mnemonic is a name for the operation, a name which is supposed to be easy to remember. Compare the mnemonics to the explanations of the operations. Do mnemonics help you to remember? Next we have hexadecimal opcodes for each of the addressing modes available with that operation. The opcode determines both the operation and the addressing mode. There are many ways to address memory cells with the 6502 processor. Frequently used operations are assigned most of the available addressing modes, so that you will have ways of expressing algorithms effectively, in reasonably small numbers of instructions. Not all combinations of operation and addressing mode are available in the instruction set.

OPCODES FOR VARIOUS MODES

ADDRESS MODES

MNEMONIC	EXPLANATION	immediate	absolute	zero page	(ind,X)	(ind),Y	zero page,X	abs,X	abs,Y	zero page,Y	FLAGS
LDA	Load A	A9	AD	A5	A1	B1	B5	BD	B9		NZ
STA	Store A		8D	85	81	91	95	9D	99		
LDX	Load X	A2	AE	A6					BE	B6	NZ
STX	Store X		8E	86						96	
LDY	Load Y	A0	AC	A4			B4	BC			NZ
STY	Store Y		8C	84			94				

MNEMONIC	EXPLANATION	MODE IS IMPLIED	FLAGS
TAX	Transfer A to X	AA	NZ
TAY	Transfer A to Y	A8	NZ
TXA	Transfer X to A	8A	NZ
TYA	Transfer Y to A	98	NZ

Figure 8.1 Moving Data between Memory, X, Y and A

At the right of Figure 8.1 there is an indication of any flags affected by the operation. This is included here for the sake of completeness. Flags are one-bit registers in the processor whose functions we will go into later.

Most of the addressing modes in Figure 8.1 will be explained in later sections, as we examine different kinds of information processing. Right now, let's review the "moving data" coding decisions in the "good listener" program, Figure 7.3.

In the first instruction, index register X is cleared to zero by loading a zero valued byte from memory. The opcode identifies the addressing mode as immediate mode (A2 in the LDX row, Figure 8.1). In this mode, the operand is the byte in memory following the opcode. It is known as an immediate operand. Note from Figure 8.1 that registers A and Y can also be loaded with immediate operands. There are no immediate mode store-in operations, so immediate bytes must be considered to be constants. Memory locations in which a program stores data can represent variables in the algorithm, quantities that can change during its execution. In the assembler input, an immediate operand is identified by the character '#' preceding the constant. Identify the other immediate operands in the program. A dollar sign indicates the following digits are hexadecimal, not decimal digits.

We must defer explaining the second instruction, the JSR, but its effect here is to place the ASCII code for the next key depressed into the accumulator A.

The natural thing to do is to store from A into the display line. The addressing mode of the STA instruction is absolute, indexed by X. Absolute mode means that a full 16-bit address follows the opcode. For reasons we will cover later, the absolute address bytes are reversed in the instruction. Do you see what we mean? The address intended in the program is the start of the display line, which is D146. The leftmost digits, D and 1, represent the high order byte of the address. This byte is called the high order or high byte because the bits stand for higher powers of two than the low byte (46) bits. As a 16-bit binary number, the address is written D146, with the high byte on the left and the low byte on the right. In an absolute addressing mode instruction, the low byte comes before the high byte in memory. When listing the contents of memory, left to right corresponds to increasing addresses in memory. Thus, the high and low bytes of an absolute address are reversed in the machine language program.

Would you like to change the address of the display line in "good listener?" Then you must alter the program in four places, the absolute addresses with low bytes at hexadecimal 6, 14, 17 and 20.

In the assembly language operands, the characters ',X' denote indexing by X, which means that the effective address is the sum of the absolute address and the contents of register X. What happens to the effective address as X is incremented (by one) with each repeat of the loop? This is a very important question. The answer reveals how "good listener" works.

There is an instruction in the program using an absolute addressing mode without indexing. It is the JMP instruction at 22₁₆. Guess what JMP stands for? In assembly language, names like REPEAT, FILL and MOVE are created by the programmer to stand for addresses of instruction or data locations. Such names are called labels. Each label appears to the left of the opcode mnemonic and in the symbolic form of instructions in which the address affects the assembled code. Labels may be used whenever they are needed.

Continuing with the coding decisions of "good listener," there is a problem in the second loop with having the key code in register A. We would like to use the sequence

```
MOVE LDY $D147,X  
STY $D146,X
```

to accomplish the left face, forward march of the display. The problem is that STY has no absolute indexed addressing mode. No such opcode in Figure 8.1, right? If we used register Y instead of register X as the index register, would we have the same problem? You bet. To get around the problem, the program saves the key code in the Y register and uses the accumulator A for the leftward bunny hop. Could this little inelegance be avoided by bunny hopping first, then getting the new key? The answer is no. Figure out why, then test your theory by arranging the program that way and observing what happens.

Do you get the impression that coding can be fun? Let's see if you can reverse the roles of X and Y in "good listener" and get a working program. To compare contents of Y with an immediate line length, the instruction reads

```
CPY #20 ;END OF THE LINE?
```


and the opcode is C0.

SECTION 9

FETCH AND STEP IT

Many of the 6502 instructions are easier to understand if you know how a computer's processor goes from instruction to instruction during program execution. The processor keeps track of its location in the program by means of a register called the program counter (PC). The program counter is the size of an effective memory address. After the execution of an instruction, it holds the address of the next instruction to be executed.

Each instruction is processed as it is encountered, in a two-part cycle, the fetch-and-execute cycle. In the first part, the program counter contents are sent to the memory unit which sends the opcode back to the processor regis-

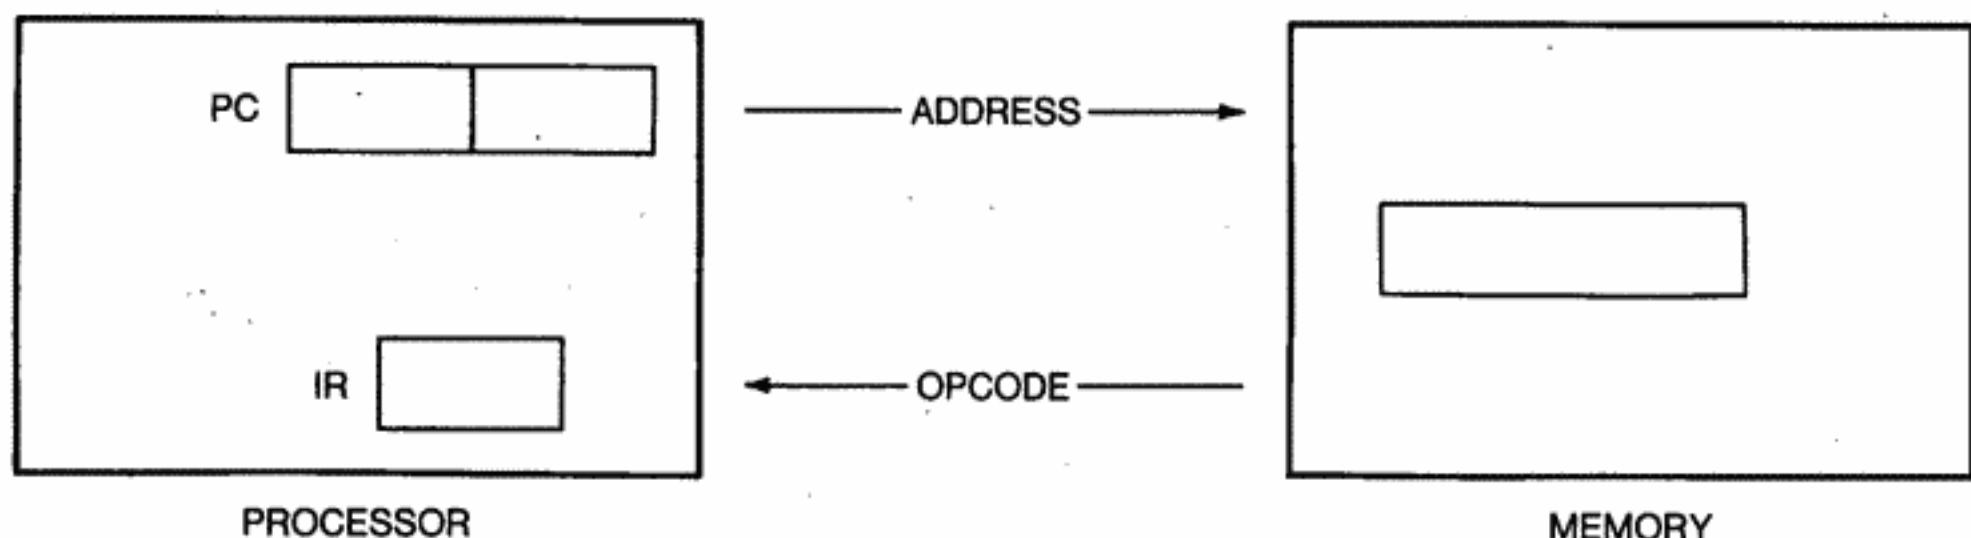

ter called the instruction register (IR). The program counter is incremented by one. This is the fetch cycle. Now the processor determines the operation and address mode and carries out the execution cycle. In the execution of the instruction the program counter advances to the next opcode. It may be further affected by the execution of some instructions, as we shall see.

It is the program counter that provides access to the immediate operands described in the last section. It contains the effective address at the beginning of the execution cycle. It is efficient to access constants this way, but not variables. For a variable, some additional mechanism would be necessary to get back to the stored value, once the program counter had gone past it. Besides, programs in ROM would have to avoid immediate "stores" anyway. Remember why? For these reasons, the immediate addressing mode is for constants only.

In absolute and absolute indexed addressing modes, the program counter is used to fetch a full two-byte address. Because the address bytes are stored in reverse order, the low byte is fetched first. This is handy because in indexing the processor must add a register byte to the absolute address to form the effective address. It gets the low byte first and adds the index register contents to it. The sum can be too large for a byte but there is no real problem. With your knowledge of binary, you can confirm that at worst, only one extra bit is needed. The extra bit is called, appropriately enough, the carry bit. The processor retains the carry bit, advances the program counter and fetches the high address byte, then adds the carry to it, forming the full effective address.

Branch or jump instructions provide an effective address which can replace the contents of the program counter. The replacement causes the processor to start on a sequence of instructions at another location in memory.

With the 65V Machine Monitor, you start the execution of a program by entering its start location into the address display and depressing the 'G' key. This transfers the displayed address into the program counter. From that point the processor is at the mercy of the program you keyed in. Program bugs or loading errors may bring the program counter to the address of an invalid or unintended opcode. When that happens, the program loses control of the processor and, if anything occurs next, it isn't what you had in mind. Fortunately, the reset key forces the program counter to the starting address of a program that will listen to you, so that you can get back to the Monitor and look for the problem.

With the program of Figure 9.1, you can execute a series of instructions one at a time and observe their effects on memory and the processor registers. The program contains a "box" of three "no operation" (mnemonic is NOP, pronounced no op, like co-op) opcodes in its middle. A NOP instruction does nothing but advance the program counter by one. To execute one instruction, you insert it in the box where the program counter will reach it as the

program executes. Any instruction will fit since none are longer than three bytes, but be sure that the unused box bytes are filled with the EA opcode of a NOP instruction.

The instructions preceding the box load the processor registers and flags from memory locations \$00F0 through \$00F3. After the execution of the inserted instruction, the contents of all processor registers are stored in the corresponding memory locations and the program returns to the address mode of the Monitor. At this point you can examine memory to verify the effects of the executed instruction. Where do you look for the contents of X, Y and A? (Answer=\$F1-\$F3)

```
;RESTORE PROCESSOR TO EXECUTE BOX INSTRUCTION
00D0 A5 F0      LDA SAVE    ; LOAD FLAGS AND
00D2 48          PHA         ; PUSH THEM ONTO THE STACK
00D3 A6 F1      LDX SAVE+1 ; LOAD X
00D5 A4 F2      LDY SAVE+2 ; LOAD Y
00D7 A5 F3      LDA SAVE+3 ; LOAD A
00D9 28          PLP         ; PULL FLAGS FROM STACK

;THE BOX
00DA EA          NOP        ; A BOX OF THREE BYTES
00DB EA          NOP        ; TO HOLD LARGEST INSTRUCTION
00DC EA          NOP        ; ALWAYS RESTORE TRAILING NOP'S

;SAVE PROCESSOR STATE AFTER EXECUTION
00DD 08          PHP        ; PUSH FLAGS
00DE 86 F1      STX SAVE+1 ; SAVE X
00E0 84 F2      STY SAVE+2 ; SAVE Y
00E2 85 F3      STA SAVE+3 ; SAVE A
00E4 68          PLA        ; PULL FLAGS
00E5 BA          TSX
00E6 86 FF      STX SAVE+4 ; SAVE STACK POINTER
00E8 85 F0      STA SAVE   ; SAVE FLAGS
00EA 4C 47 FE    JMP $FE47  ; RETURN TO MONITOR ADDRESS
                      MODE
```

Figure 9.1 Execute-in-a-Box Program

When you have looked around enough you are ready to put the next instruction in the box. At the beginning of a sequence of instructions, you may want to set up initial values for the registers by setting the corresponding memory locations.

One restriction you must observe: avoid placing a branch or jump instruction in the box. Such an instruction would allow the processor to escape from the box, with unpredictable results. No problem though. Branches and jumps effect only the sequencing of instructions, which you are handling anyway, so you would leave them out of any sequence of instruction you were executing step by step.

Think of memory (RAM) as divided into blocks of 256 bytes each. These blocks are called pages. The high byte of an effective address can be considered as identifying a page, and the low byte as identifying a location within the page. The first page in memory has the identifying number 00 (zero) and is therefore known as the zero page. By having an opcode for a zero page addressing mode, the processor can be told to supply a zero for the left byte of the effective address and the zero byte can be left out of the program. This saves memory space and the execution cycle time it would take to fetch the zero byte from memory. This feature makes zero page memory locations very valuable. The zero page indexed addressing modes work just as you would suspect. The carry from the indexing sum is added to the zero byte supplied by the processor to form the left byte of the effective address.

To load the "execute-in-a-box" program shown in Figure 9.1, type the following (remember "*" stands for Return):

```
.00D0/A5*F0*48*A6*F1*A4*F2*A5*F3*28*
EA*EA*EA*08*86*F1*84*F2*85*F3*
68*BA*86*FF*85*F0*4C*47*FE.
```

To run the program, simply type .00D0G.

The program will return to the Monitor address mode after executing the instruction located at \$DA-\$DC. This makes it easy to explore the effect of any instruction on the X, Y, A and S internal 6502 registers. You may experiment by inserting opcodes of various instructions into locations \$DA-\$DC, running the program and examining locations \$F0-\$FA to determine that instruction's effect on the 6502's internal registers.

As an example, suppose we want to simulate "good listener" instruction by instruction. We might preset registers X and A by

```
.00F1/00 .00F3/2B    or    .00F1/00**2B
```

and then insert

STA \$D146

in the box and execute "execute-in-a-box," with

```
.00DA/9D*46*D1.00D0G
```

then examine \$D146 to see if it changed.

We are not ready to fully explain the "execute-in-a-box" program now, but one important feature we can consider now is the zero page addressing mode used to access the data beginning at \$00F0 (SAVE).

Load the program and try it out. It may be your best friend when you are trying to find out what is going on in some other program.

SECTION 10

START WAVING YOUR FLAG

Decisions are implemented in programs by branch instructions. In these instructions, the test of a condition determines whether or not the program counter is loaded with a new value. In the 6502, branching is controlled by a set of one-bit registers called flags. The important flags for branching are given the symbolic names N, V, Z and C by 6202 programmers. They are known as the negative (N), overflow (V), zero (Z), and carry (C) flags.

Flags are set (to 1) and cleared (to 0) by the action of instructions. In fact, programmers need to know how each instruction affects the flags. Look at the Figure 8.1 summary of the 6502 move instructions. The letters at the right indicate when the corresponding flag is affected by the instruction. If you know that an operation affects a certain flag, you'll know whether it sets or clears the flag, because flags have consistent, easy-to-learn meanings. Interpret the N, V and Z flags as follows:

N = 1 means the result is negative (0 means positive or zero)

V = 1 means the result is invalid (more about this later)

Z = 1 means the result is zero

The carry flag represents the carry bit or some other one-bit extension of the result. As we go through more of the instruction set you will see how useful the carry bit extension is.

MNEMONIC	EXPLANATION	OPCODE	ADDRESS MODE
BCC	Branch if carry is clear (C = 0)	90	Relative
BCS	Branch if carry is set	B0	Relative
BEQ	Branch if equal (Z = 1)	F0	Relative
BNE	Branch if not equal (Z = 0)	D0	Relative
BMI	Branch if minus (N = 1)	30	Relative
BPL	Branch if plus	10	Relative
JMP	Unconditional jump	4C	Absolute
		6C	Indirect

~~FOR A BACKWARD JUMP TAKE THE NUMBER
OF BYTES FROM 255 AND ADD THAT NUMBER
TO THE OPCODE *~~

~~FOR A FORWARD JUMP TAKE THE NUMBER
OF BYTES YOU WANT TO JUMP STARTING
FROM AFTER THE OPERAND~~

MNEMONIC	EXPLANATION	immediate	absolute	zero page	(ind,X)	(ind,Y)	zero page,X	abs,X	abs,Y	FLAGS
CMP	Set flag by A - Memory	C9	CD	C5	C1	D1	D5	DD	D9	N,Z,C
CPX	Set flag by X - Memory	E0	EC	E4						N,Z,C
CPY	Set flag by Y - Memory	C0	CC	C4						N,Z,C

* START COUNTING THE BYTES AT THE OPCODE OF THE BRANCH INSTRUCTION (COUNT THE OPCODE AS A BYTE)

21
CHECK OUT - MAY BE
THE OPERAND INSTEAD
OF THE OPCODE

Figure 10.1 summarizes the 6502 branch instructions. The conditional branch instructions check for a particular flag condition and loads the program counter if it is met. If the condition is not met, no branch occurs. The program counter simply advances to the next opcode. The conditional branches use the relative address mode. In this mode, a full effective address is loaded into the program counter with a new value formed from a single byte following the opcode. This is done by adding a single byte, the displacement byte, to the program counter. A negative instruction byte allows the processor to branch backwards in the program, as you can see happening in "good listener." More details on relative addressing will come up in the next section.

The mnemonic JMP is used for an unconditional branch or jump. No flag testing is involved and the branch is taken every time. Absolute, rather than relative, addressing mode is used. For an example, see "good listener." The absolute address $000D$ would have to be changed if "good listener" were moved to some other location in memory. It should always be the address of the instruction with the label REPEAT. If the symbolic program were given to an assembler program, the label REPEAT would be assigned the address as a numerical value. If the assembler is told where "good listener" is to be placed in memory, it will know the absolute address for the JMP instruction. The Monitor's machine code provides a good illustration of the JMP indirect mode shown in Figure 10.1. In indirect addressing, the address provided by the instruction is used to fetch the address of the operand. In the case of the JMP, the operand is the jump destination, the address to replace the program counter. When you depress the 'G' key, the Monitor branches to the machine language instruction $6C\ FE\ 00$. Can you figure out what is in locations $00FE_{16}$ and $00FF_{16}$ when the Monitor is running? Elementary, my dear Watson. The answer is on page 23.

Some instructions are devoted to setting flags and do nothing else. They are called "compare" instructions. In the 6502 instruction set, compare instructions subtract a memory byte from the contents of a processor register and set the flags according to the result, leaving the operands unchanged. The 6502 compares are included in Figure 10.1. Many decisions represented by diamond boxes in flowcharts are implemented by a compare instruction, followed by a conditional branch.

When the distance between a branch instruction and the intended branch destination is too great for one byte, the JMP instruction with its absolute address mode can come to the rescue. For example, in

CMP #_____

BEQ AWAY,

if the location represented by AWAY is too far away, requiring too large a value for the displacement byte after the opcode F0, then use

CMP #_____

BNE SKIP

JMP AWAY

SKIP

There are all sorts of interesting variations to be made in "good listener," based on recognizing a particular character as a command. For example, one could have "good listener" return to the address mode of the Monitor on command. In the Monitor you could change the location or length of the display line, then restart "good listener." This version could be used to compose character pictures on the screen. For your JMP into the Monitor, $FE43_{16}$ is a good address, but remember to reverse the bytes. For the compare instruction to recognize the new command you'll need the ASCII code for the command's key. If necessary, you can call upon the binary display program of Section 4, or consult the appendix.

Another idea is to have "good listener" advance the display area to a new line, all by itself, on command. After all, the line location in the program is in RAM when the program is loaded and can be treated as variable data.

When making a change in a program, the insertion of instructions changes the location of instructions following the insertion point. Most instructions are not affected by such relocations, but some are. Absolute address mode instructions may have to be adjusted. In relative addressing, any insertion or deletion between a branch instruction and its branch destination effects the displacement byte following the branch opcode. Watch your step when making changes. Bugs are easier to prevent than to find.

When executing in a box with the program of Figure 9.1, you can follow the changes in the flags. The program restores and saves all flags in location $00F0_{16}$, in the binary format

7	6	5	4	3	2	1	0
N	V					Z	C

For example, if the Monitor command .00F0 displays A6 in the data display, then the binary code

1010 0110

reveals that N = 1, V = 0, Z = 1, C = 0 at that point.

*Answer: 00FE,00FF contain the display address.

SECTION 11

A TOTAL MYSTERY

How about a little challenge? Load the following program, double check the loading and start the execution.

LOCATION	PROGRAM
.0000/	D8*A9*00*85*FF*85*FE*85*
0008	FC*20*ED*FE*C9*2B*D0*09*
0010	A5*FE*18*65*FC*50*36*70*
0018	0B*C9*2D*D0*24*38*A5*FE*
0020	E5*FC*50*29*A2*03*B5*54*
0028	9D*D0*D0*CA*10*F8*20*ED*
0030	FE*C9*0D*D0*F9*A2*03*A9*
0038	20*9D*D0*D0*CA*10*FA*30*
0040	C0*20*93*FE*30*C3*A2*00*
0048	20*DA*FE*50*02*85*FE*20*
0050	AC*FE*D0*B5*54*49*4C*54
.0000 G	

Now key-in data and try to discover what the program does. Here are vital clues: the program reacts only to the hexadecimal digits 0-F, the signs '+' and '−', and the 'RETURN' key. The 'RETURN' key is ignored at one point but is vital at another.

You will find an explanation of the program, starting on the next page, but don't spoil the fun by peeking. Try all sorts of input, watch and record what happens, make guesses and test them. There is a special message which can appear but it goes away. The program loops forever.

Bumfuzzled? If so, here is some information that may clear things up. Do the results you cannot explain involve data having a left hexadecimal digit of eight or greater? To the 6502 processor, such binary codes represent negative numbers. Try starting with a zero and subtracting a positive value, one that reads \$7F (a "\$" preceding a number indicates hexadecimal) or less. The result represents the negative number of the same size. Perhaps now you can explain everything the program is doing, before looking at the flowchart of Figure 11.1, which reveals all. Try to determine the largest positive sum and the smallest negative sum that can be obtained.

There are many ways to represent negative numbers in binary codes. For binary integer arithmetic, most computers use the system that the 6502, the one illustrated by the mystery program. It is called two's complement representation. To change the binary representation of a number to the two's complement negative, you first change every bit to its opposite value. This is referred to as complementing the bits. Then add 1 (one) to the result. Since the process amounts to changing the sign of a number, repeating it should produce the original binary code. Does it?

Two's complementing can be done directly in hexadecimal. Replace each hex digit by a complement digit that you obtain by subtracting the original digit from 15_{10} . This does the complementing. Then add 1 (one) to the result.

Trace through the flowchart of Figure 11.1 and try out any parts you did not get into with your blind exploration of the program. The flowchart shows something important about two's complement representation. There are no tests in the algorithm to determine the sign of the data values. With two's complement representation, positive and negative values are processed in exactly the same way.

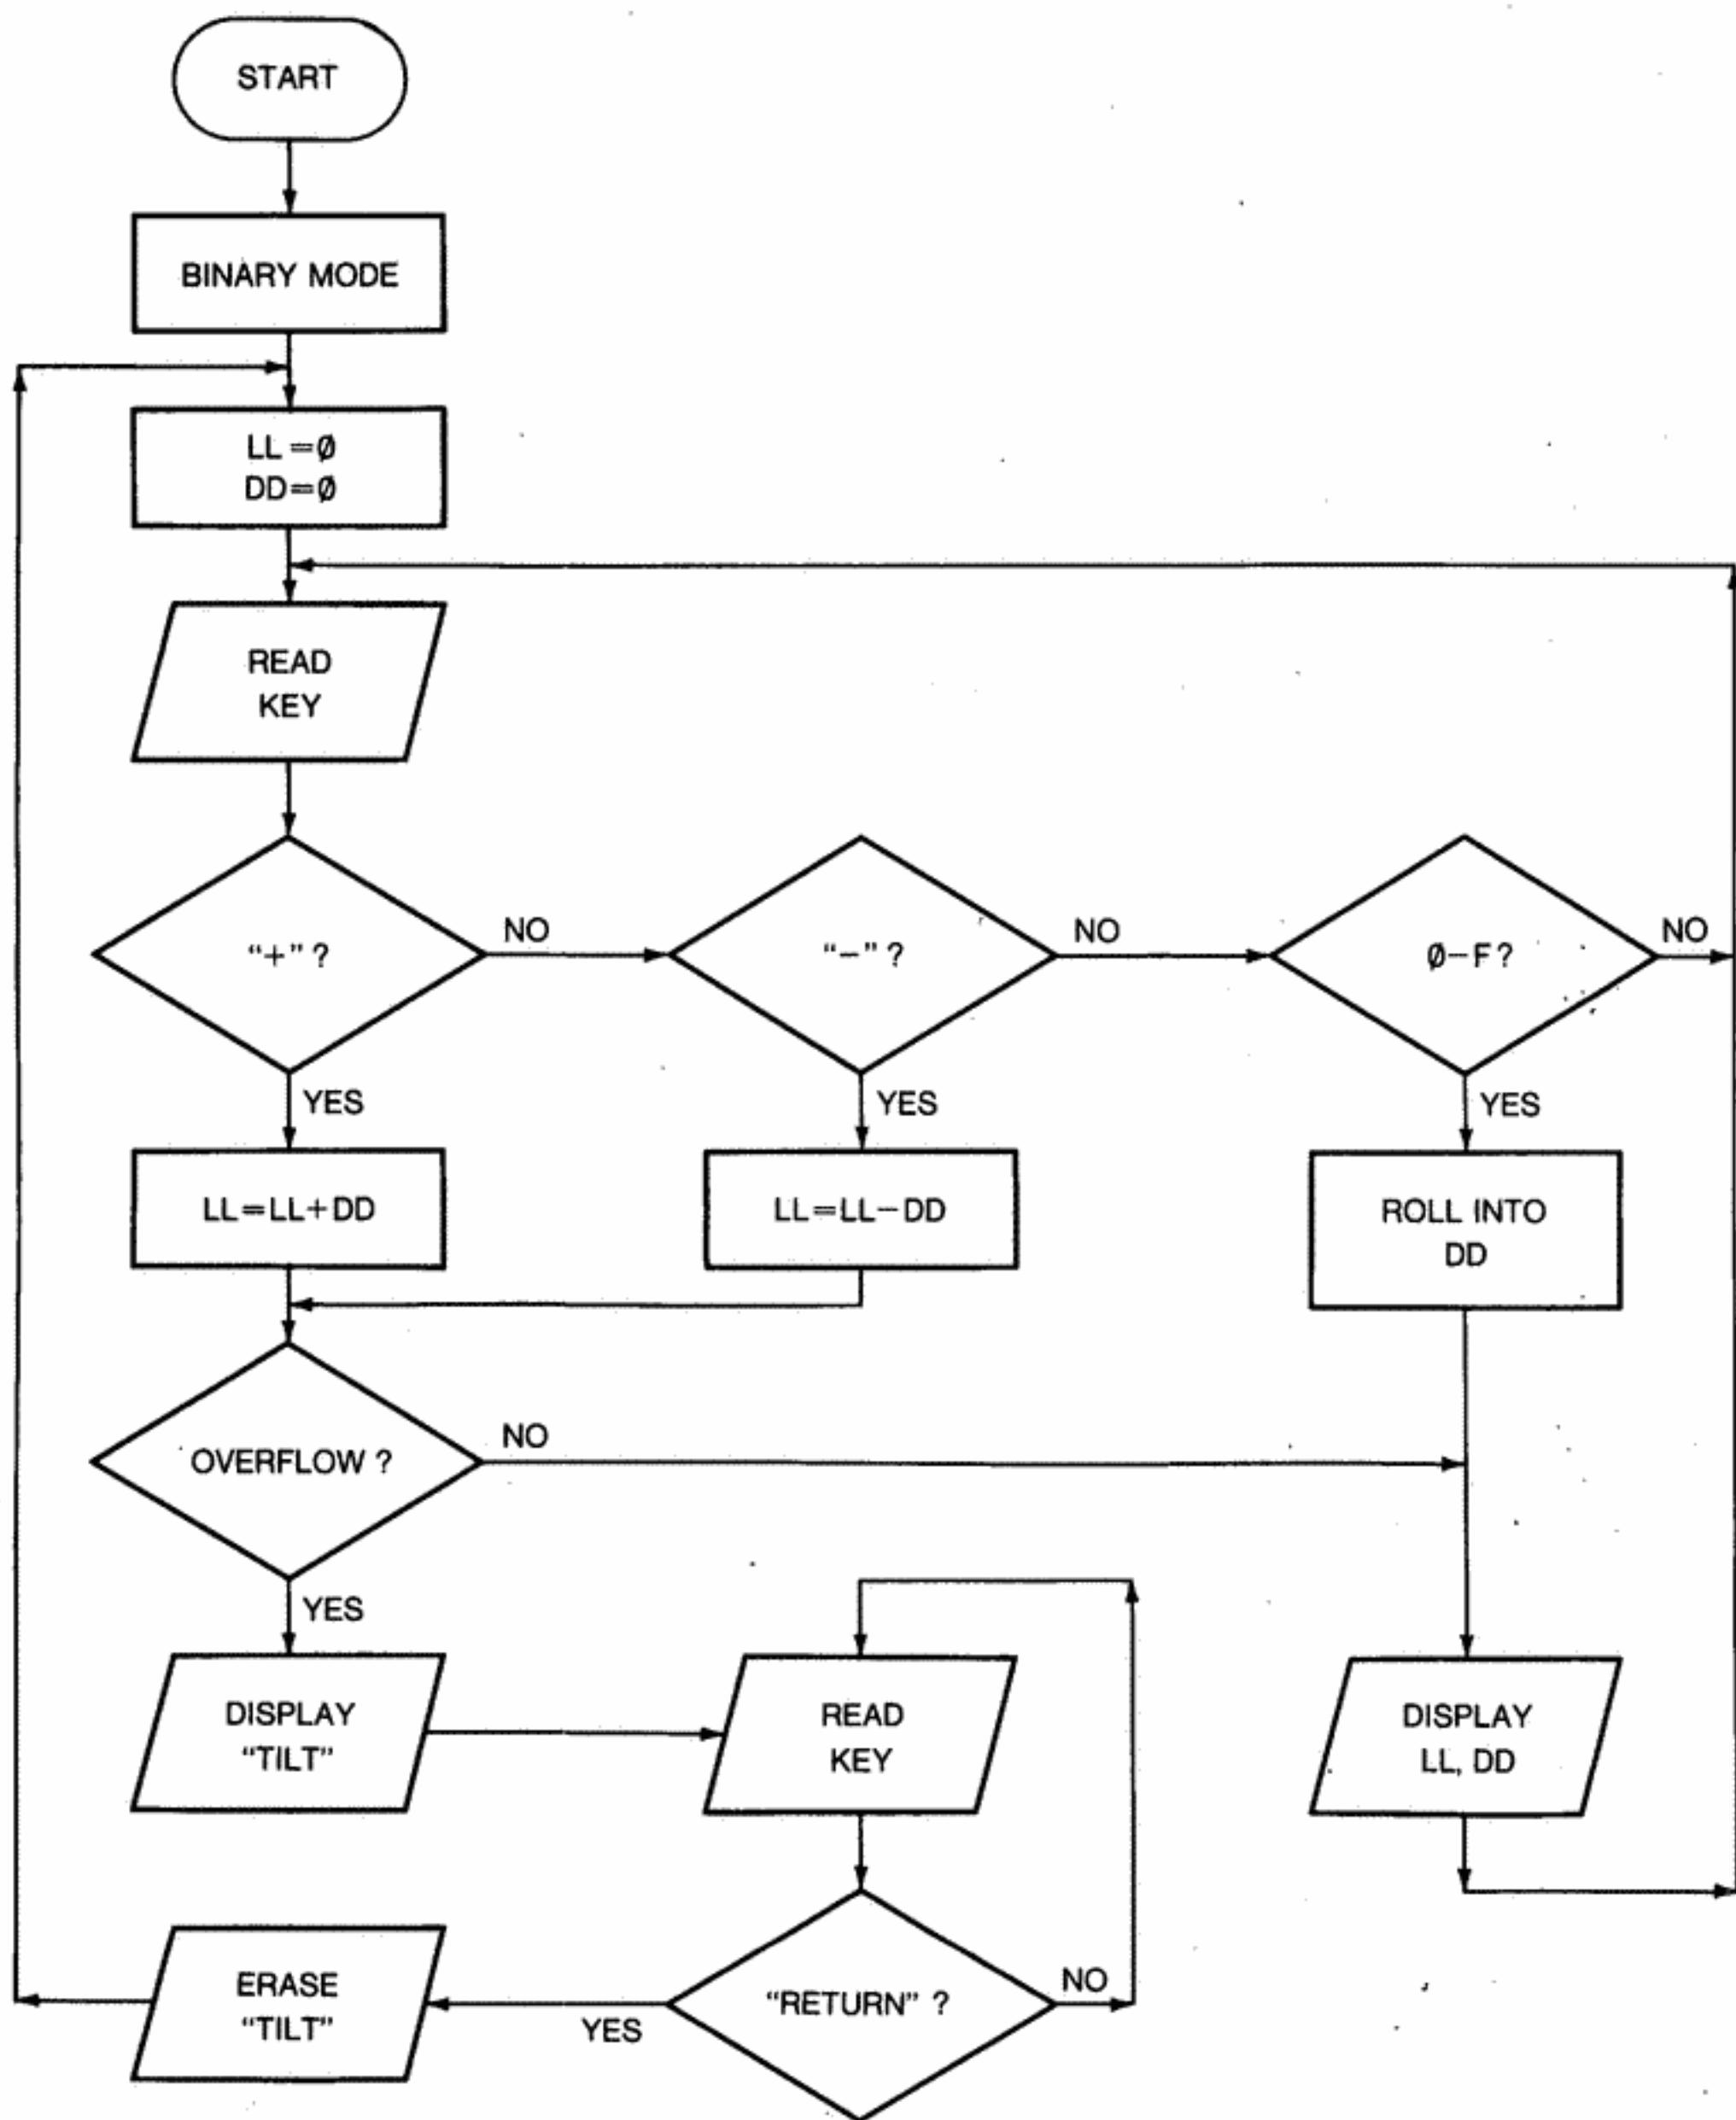


Figure 11.1 Flowchart for "Total Mystery"

Did you get the 'TILT' message? It appears when the overflow flag is set by the add or subtract operations. In either case, the message means that the correct result cannot be represented in one byte.

Now that we have reached two's complement, we can understand the 6502 backward branches in relative addressing. In the Figure 7.3, coding of "good listener," the test for the end of the loop is

BNE FILL

The reference to the label FILL is assembled as \$F5, the two's complement representation of a negative displacement. In the execution of the instruction, the program counter is first advanced to \$000D, then the negative byte \$F5 is expanded to a 16-bit representation of the same number and is added to the updated value of the program counter to produce

$$\begin{array}{rcl} 000D_{16} & & \\ + \underline{FFF5}_{16} & \text{or} & + \underline{FFFF} \\ 0002_{16} & & \$0002 \end{array}$$

as the branch destination. The addition is ordinary garden-variety binary addition whether the displacement is negative or positive. Does the backward branch to MOVE work the same way?

SECTION 12

A LOOP YOU CAN COUNT ON

In the "good listener" code of Figure 7.3, there are three loops. One pair of loops is nested, one within the other. Two of good listener's loops are controlled by counters to execute a prescribed number of times. The index register X is used as the loop counter within each of these counting loops.

Figure 12.1 shows the usual arrangement of the parts of a counting loop. The body of the loop is the part that is repeated. It is a set of instructions that may contain other loops. The loop counter is given an initial value outside of the loop. Within the loop it is incremented or decremented until it reaches some test value. The test value may be a constant or a variable, depending on when the number of times through the loop is determined.

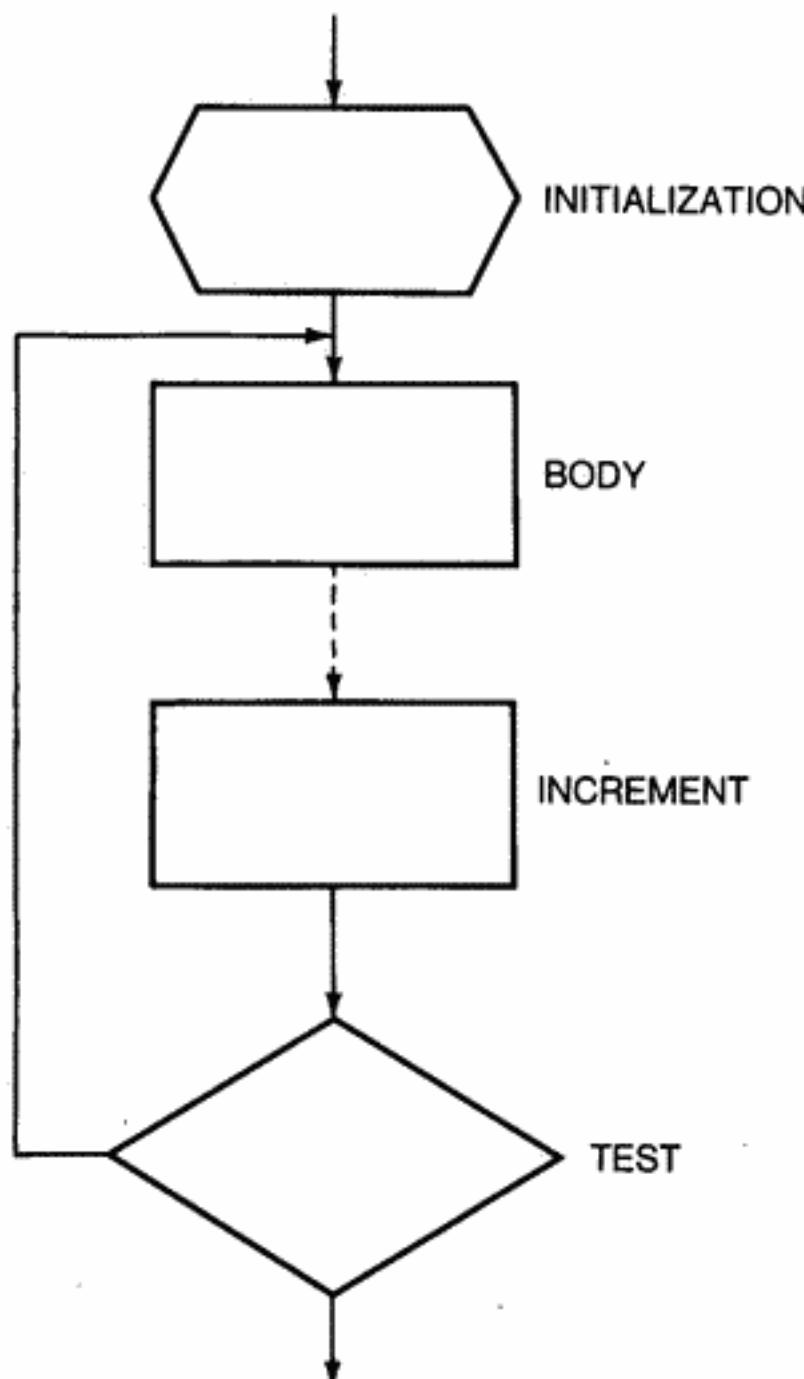


Figure 12.1 Parts of a counting loop

Many a program bug has hatched when the programmer forgot to initialize the loop counter or chose the wrong test value or branch instruction, causing the loop body to be executed the wrong number of times. A wise precaution is to double check immediately after coding a loop to see what values the loop counter will have on the first and last executions of the body. If undetected, this kind of bug crawls off into some other part of the program and causes something apparently unrelated to go awry. A good way to save yourself a lot of effort looking for bugs of this type is to make it a practice to play processor with a new program, going through it instruction by instruction, calculating the changes that take place and looking for surprises. Programmers call this desk checking because it is done at the desk and not on the computer. You can play processor with "execute-in-a-box."

The 6502 instructions for incrementing and decrementing are shown in Figure 12.2. The index registers X and Y make the best loop counters, but a way is provided to use a memory cell as a counter as well. The reason is that with

loops nested within one another, so that several are repeating at one time, an index register would not be available to control each loop. X and Y are preferred as loop counters, primarily because of their ability to access data through indexing. As loop bodies are repeated, the algorithm is often moving through blocks of data in a systematic way. Why do you suppose that increment and decrement instructions are not provided for the accumulator? Generally, it would be occupied with something in the body of the loop and not be available as an index register or loop counter.

ADDRESS MODES

MNEMONIC	EXPLANATION	absolute	zero page	zero page,X	absolute,X	FLAGS	
DEC	Decrement memory by 1		CE	C6	D6	DE	N,Z
INC	Increment memory by 1		EE	E6	F6	FE	N,Z
DEX	Decrement X by 1		CA		Implied		N,Z
DEY	Decrement Y by 1		88		Implied		N,Z
INX	Increment X by 1		EB		Implied		N,Z
INY	Increment Y by 1		C8		Implied		N,Z

Figure 12.2 Counter Increment and Decrement Instruction

You probably noticed that the increment and decrement instructions affect the flags N and Z. This makes it possible to detect when a loop counter reaches a zero or negative value without a compare instruction. When you have a choice, it may be better to count backwards to take advantage of this feature. As an example, look at the program of Figure 12.3 which displays all the graphic symbols with a given high (left) hexadecimal digit in their codes. With this program you can rapidly survey the graphic symbols available to your computer.

```
; USER KEYS HEX DIGIT, D, PROGRAM DISPLAYS ALL GRAPHICS, DK
; WHERE K IS A HEX DIGIT

0000 20 ED FE BEGIN JSR $FEED ; GET A KEY
0003 20 93 FE          JSR $FE93 ; STRIP TO HEX DIGIT
0006 30 F8          BMI BEGIN ; IGNORE NON-DIGITS
0008 0A          ASL A
0009 0A          ASL A
000A 0A          ASL A
000B 0A          ASL A
000C 85 1B          STA TEMP ; SAVE
0003 A2 0F          LDX #15 ; INITIALIZE COUNTER
0010 8A          LOOP TXA ; COUNT TO A FOR LOW DIGIT
0011 05 1B          ORA TEMP ; APPEND HIGH DIGIT
0013 9D 46 D1          STA $D146,X ; STORE IN DISPLAY LINE
0016 CA          DEX ; INCR, TEST
0017 10 F7          BPL LOOP ; DISPLAY LOADING
0019 30 E5          BMI BEGIN ; WAIT FOR ANOTHER INPUT
001B          TEMP
```

To enter this program, type:

```
.0000 / 20*ED*FE*20*93*FE*30*F8*
    0A*0A*0A*0A*85*1B*A2*0F*
    8A*05*1B*9D*46*D1*CA*10*
    F7*30*E5-*.
```

The blanks at \$001B are determined by where you locate TEMP. For example, to locate TEMP at \$D400, put 00 and D4 in the blanks.

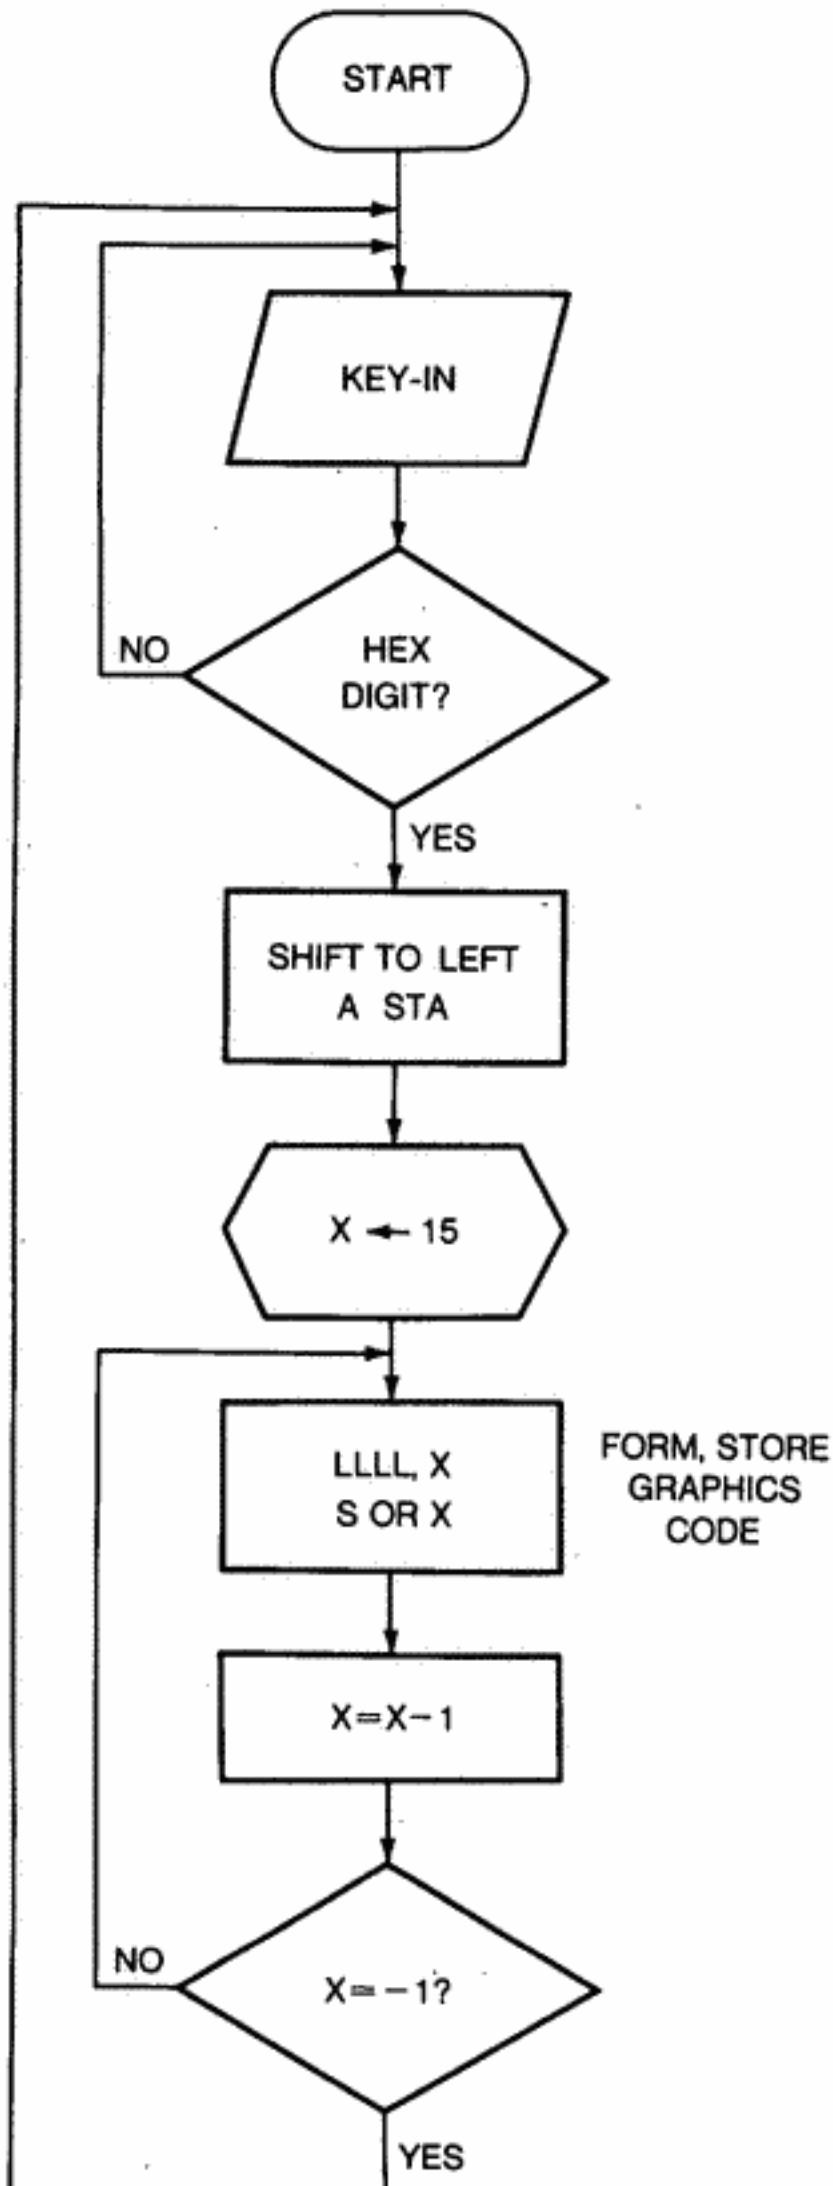


Figure 12.3 A graphics display program

In the algorithm, it doesn't matter which order the graphic codes are loaded into display locations, so they are loaded right-to-left, decreasing order. The BPL instruction allows a repeat of the body of the loop with $X = \emptyset$. A BNE instruction would make the $X = 1$ iteration the last. The BMI instead of the JMP is a trick to save a byte of program. TEMP is assigned a byte at the end of the program instructions.

If you are looking for a programming challenge involving counting loops, you could attempt a program to produce the same output as this one, but with the displayed symbols arranged in a table of four rows by four columns, with single blank spaces between all of the symbols.

SECTION 13

A STACK OF LETTERS

Beware. You are in Section 13. To avoid bad luck while in this section, spell 'abracadabra' backwards. Use the program of Figure 13.1. This program will save a word in memory without letting you see it until you depress the space bar. Then it moves the word into the display area in reverse order. Without modification, the program allows up to 256 characters in an input word.

```
;BACKWARDS SPELLER: ENTER A WORD, FOLLOWED BY A BLANK.  
;THE WORD THEN APPEARS, BACKWARDS.  
;TO ERASE, PRESS ANY KEY, THEN START A NEW WORD.  
  
0000  A2  40          GO   LDX   #64      ; LONGEST WORD  
0002  A9  20          GO   LDA   #'C'  
0004  9D  45 D1       BLA  STA   $D145,X ; BLANK OLD WORD  
0007  CA              DEX  
0008  D0  FA          BNE  BLA   ; TEST LEAVES X=0  
000A  20  ED  FE       BUILD JSR   $FEED  ; GET A LETTER  
000D  C9  20          CMP   #'C'  ; IF A BLANK  
000F  F0  04          BEQ   DUMP  ; WORD ENDS  
0011  48              PHA  
0012  E8              INX  
0013  D0  F5          BNE   BUILD ; RETURN FOR ANOTHER  
0015  A0  00          DUMP  LDY   #0      ; INDEX FRONTWARDS  
0017  68              POP   PLA  
0018  99  46 D1       STA   $D146,Y ; SPELL IT OUT  
001B  C8              INY  
001C  CA              DEX  
001D  D0  F8          BNE   POP  
001F  20  ED  FE       JSR   $FEED  ; DELAY BLANKOUT UNTIL NEXT KEY  
0022  4C  00  00       JMP   GO    ; IS PRESSED ON RELEASE, REPEAT
```

Figure 13.1 The Backwards Speller

This little trick can be coded a number of ways on the 6502, but our program uses a feature of this processor that we have not yet considered, the stack pointer. A stack is a type of data structure, an arrangement of data that provides access to an item of data in a particular way. The stack provides last-in first-out (LIFO) access, meaning that it makes available one item at a time, and the available item is the latest one that was placed on the stack. Take that item from the stack and the previously entered item becomes available.

In computer terminology, the available item is called the top of the stack. The operation of placing an item on the stack is a push; removal of an item is a pop or a pull. The backwards speller pushes characters on the stack as you

enter them, then pulls them all when it sees a blank. They come out in reverse order.

In the 6502, each item on the stack is a byte of information. The data on the stack is not kept in the processor but in memory. The processor has a one-byte register called the stack pointer, S. The stack pointer contains the location of the top of the stack. A value of 1 (one) is always used as the page number in stack operations, so the stacked data is always contained in page one of memory (the second block of 256 bytes). A push involves writing the byte into the page one memory byte specified by the stack pointer and decrementing the stack pointer. A pull involves incrementing the stack pointer and reading the byte from the page one memory byte specified by the stack pointer.

Figure 13.2 shows several 6502 stack instructions. The first group is used to access the stack. In the second group, the TXS instruction is the means provided to set the stack pointer to its initial value. In your system, the Monitor has taken care of that, so a TXS need not appear in your programs. Whenever a program uses the stack, it should pull from the stack just what it pushed, no more and no less. This leaves the stack in its beginning state. The backwards speller uses a loop counter to see that this is done.

MNEMONIC	EXPLANATION	OPCODE	ADDRESS MODE	FLAGS
PHA	Push A onto the stack	48	Implied	None
PHP	Push flags onto the stack	08	Implied	None
PLA	Pull from the stack into A	68	Implied	N,Z
PLP	Pull from the stack into flags	28	Implied	All
TSX	Copy stack pointer into X	BA	Implied	N,Z
TXS	Copy X into stack pointer	9A	Implied	None

Figure 13.2 Explicit 6502 Stack Operations

The "execute-in-a-box" program of Section 9 takes advantage of available stack operations to keep track of changing flags. The set of flags is considered collectively as a register, P, which can be pushed or pulled from the stack. That represents the 6502's only access to the flags as a group. Once on the stack, a pull into the accumulator is a means of transferring the flags to a memory cell for your inspection.

You are allowed to use push and pull operations within the "execute-in-a-box" program because the segments of the program before and after the box leave the stack as they found it. The TSX instruction is used after the contents of X have been saved, to allow you to follow changes in the stack pointer contents.

SECTION 14

IT'S THE SAME OLD ROUTINE

You must have noticed the same instruction occupying an important spot in "good listener," the graphics display and backwards speller, namely

JSR \$FEED

From the remarks in the programs, the effect of the instruction appears to be to put the ASCII code for the next key depressed into the accumulator. Have you tried executing this instruction in a box yet? When you put the code 20 ED FE in the box and execute the program, there is no return to the Monitor, as usual. That is, not until you depress a key and release it. It's an extraordinary instruction that can make the processor wait around all day until you depress that key, isn't it?

To tell the truth, the JSR doesn't do all this. Rather, it branches to a sequence of instructions that does. The set of instructions is called a closed subroutine or simply, a subroutine. The processor begins to execute code starting at \$FEED, continuing until it encounters the opcode \$60. (RTS) Then, magically enough, it branches right back to the instruction following the JSR instruction. With this information and the help of Figure 14.1, you can do some detective work and figure out what the subroutine at \$FEED really does.

Figure 14.1 is a disassembly table. Take the hexadecimal code in a location and select a row in the table by the left digit and a column by the right digit. If the code is an opcode, the row and column intersection will show the operation and the addressing mode. What makes it fun is that now you must find which bytes represents the next opcode, and the correct interpretation of the bytes in between. Happy hunting!

Where the subroutine at \$FEED appears to be reading a memory location, it is not a memory location at all. It is what is called a port, a connection to an input or output device. In this case, it is an input device, the computer's keyboard. There is a signal transmitted to the port when a key is depressed. When all keys are released, the data received through the port is loaded into the accumulator.

A program containing a JSR is said to call the subroutine starting at the branch address in the instruction. The JSR makes provisions for returning the processor to the calling program. It does so by pushing the value contained in the advanced program counter onto the stack before replacing it to execute the branch. The pushed address is called the return address. A subroutine may contain any number of return instructions, written as a mnemonic RTS in the symbolic form of the subroutine. When the RTS (\$60) is encountered, the return address is pulled from the stack into the program counter producing the branch to the point immediately after the JSR instruction.

When are subroutines useful? Primarily, when the same processing is needed in more than one place. "Good listener," for example, reads the next key-in in two places. The single copy of the processing code is executed wherever it is needed. Subroutine calling is an important feature that multiplies the power of computer systems. Collections of subroutines can be built to carry out frequently used functions in users' programs.

Figure 14.2 describes some of the subroutines in the Monitor. The display subroutine at \$FEAC can be used to make an improvement in "execute-in-a-box" without adding much to its length. When storing register contents in \$00F0 through \$00F4, also store key register contents in \$00FC, \$00FE and \$00FF. Or, replace a key memory location in the simulated program by one of these addresses. When "execute-in-a-box" returns to the Monitor, a call to \$FEAC is the first instruction executed, so the display of desired trace data is automatic.

OPCODE TABLE

LSD MSD	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0 BRK	ORA-IND,X						ORA-Z,Page	ASL-Z,Page		PHP ORA-IMM	ASL-A			ORA-ABS	ASL-ABS	
1 BPL	ORA-IND,Y						ORA-Z,Page,X	ASL-Z,Page,X	CLC ORA-ABS,Y					ORA-ABS,X	ASL-ABS,X	
2 JSR	AND-IND,X						BIT-Z,Page	AND-Z,Page	PLP AND-IMM	ROL-A	BIT-ABS	AND-ABS	ROL-ABS			
3 BMI	AND-IND,Y						AND-Z,Page,X	ROL-Z,Page,X	SEC AND-ABS,Y			AND-ABS,X	ROL-ABS,X			
4 RTI	EOR-IND,X						EOR-Z,Page	LSR-Z,Page	PHA EOR-IMM	LSR-A	JMP-ABS	EOR-ABS	LSR-ABS			
5 BVC	EOR-IND,Y						EOR-Z,Page,X	LSR-Z,Page,X	CLI EOR-ABS,Y					EOR-ABS,X	LSR-ABS,X	
6 RTS	ADC-IND,X						ADC-Z,Page	ROR-Z,Page	PLA ADC-IMM	ROR-A	JMP-IND	ADC-ABS	ROR-ABS			
7 BVS	ADC-IND,Y						ADC-Z,Page,X	ROR-Z,Page,X	SEI ADC-ABS,Y					ADC-ABS,X	ROR-ABS,X	
8	STA-IND,X						STY-Z,Page	STA-Z,Page	STX-Z,Page	DEY		TYA STA-ABS,Y	TXS	STY-ABS	STA-ABS	STX-ABS
9 BCC	STA-IND,Y						STY-Z,Page,X	STA-Z,Page,X	STX-Z,Page,Y							
A LDY-IMM	LDA-IND,X	LDX-IMM					LDY-Z,Page	LDA-Z,Page	TAY LDA-IMM	TAX	LDY-ABS	LDA-ABS	LDX-ABS			
B BCS	LDA-IND,Y						LDY-Z,Page,X	LDA-Z,Page,X	LDX-Z,Page,Y		LDY-ABS,X	LDA-ABS,X	LDX-ABS,Y			
C CPY-IMM	CMP-IND,X						CPY-Z,Page	CMP-Z,Page	DEC-Z,Page		CPY-ABS	CMP-ABS	DEC-ABS			
D BNE	CMP-IND,Y						CMP-Z,Page,X	DEC-Z,Page,X	CLD CMP-ABS,Y		CMP-ABS,X	DEC-ABS,X				
E CPX-IMM	SBC-IND,X						CPX-Z,Page	SBC-Z,Page	INC-Z,Page		CPX-ABS	SBC-ABS	INC-ABS			
F BEQ	SBC-IND,Y						SBC-Z,Page,X	INC-Z,Page,X	SED SBC-ABS,Y		SBC-ABS,X	INC-ABS,X				

LSD—Least Significant Digit
MSD—Most Significant Digit

Figure 14.1 6502 Disassembly Table

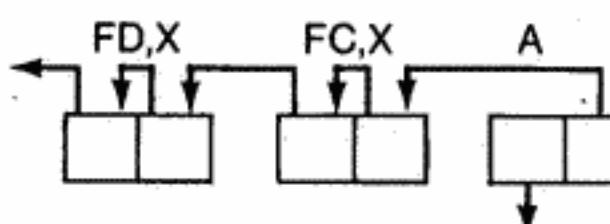
ENTRY	EFFECT REGISTERS	EFFECT
\$FE93	A	Replaces ASCII hexadecimal digit with its binary value, N=0 If not a digit, returns \$80 and N=1
\$FEAC	A,X,Y	Displays as hexadecimal digits LLLL DD the contents of 00FF and 00FE (LLLL) and 00FC (DD)
\$FECA	A,Y	Stores the ASCII code for the right hexadecimal digit A in LLLL,Y and increments Y by 1
\$FEDA	A,Y	Shifts right digit of A into 00FD,X and 00FC,X as shown. Clears A,Y.
		
\$FEE9	A	Get next ASCII character from keyboard or UART, depending on location 00FB

Figure 14.2 Some Useful Monitor Subroutines

SECTION 15

EXTENDING THE MYSTERY

It's time to come forward with the whole story on the "total mystery" program of Section 11. Since "total mystery" calls many monitor subroutines, it seemed only right to keep its workings under wraps until the subroutines were explained. Now Figure 15.1 exposes all of total mystery's secrets.

;						
;TOTAL MYSTERY						
;						
0000	D8	BEGIN	CLD			; CLEAR DECIMAL MODE
0001	A9 00	REPEAT	LDA #0			; CLEAR LLLL, DD DISPLAY
0003	85 FF		STA \$FF			
0005	85 FE		STA \$FE			
0007	85 FC		STA \$FC			
0009	20 ED FE GET		JSR \$FEED			; GET KEY
000C	C9 2B		CMP #\$2B			; A '+'?
000E	D0 09		BNE NEG			; NO, TEST FOR MINUS
0010	A5 FE		LDA \$FE			; FOR
0012	18		CLC			; YES, CLEAR CARRY
0013	65 FC		ADC \$FC			; ONE-BYTE ADD
0015	50 36		BVC STORE			; NO OVRFLW, STORE AND DISPLAY
0017	70 0B		BVS TILT			
0019	C9 2D	NEG	CMP #\$2D			; A '-'?
001B	D0 24		BNE DIG			; NO, TEST FOR DIGIT
001D	38		SEC			; SET CARRY
001E	A5 FE		LDA \$FE			
0020	E5 FC		SBC \$FC			; ONE-BYTE SUBTRACT
0022	50 29		BVC STORE			; NO OVRFLW, STORE AND DISPLAY
0024	A2 03	TILT	LDX #3			
0026	B5 54	MLP	LDA MESS,X			; WRITE MESSAGE TO DISPLAY
0028	9D D0 D0		STA \$D0D0,X			
002B	CA		DEX			
002C	10 F8		BPL MLP			
002E	20 ED FE WAIT		JSR \$FEED			; WAIT FOR RETURN KEY
0031	C9 0D		CMP #\$0D			

0033	D0 F9	BNE	WAIT				
0035	A2 03		LDX	#3			
0037	A9 20		LDA	#\$20	; CLEAR MESSAGE		
0039	9D D0 D0	ERASE	STA	\$D0D0,X			
003C	CA		DEX				
003D	10 FA		BPL	ERASE			
003F	30 C0		BMI	REPEAT			
0041	20 93 FE	DIG	JSR	\$FE93	; STRIP TO DIGIT		
0044	30 C3		BMI	GET	; IF NOT A DIGIT, IGNORE		
0046	A2 00		LDX	#0			
0048	20 DA FE		JSR	\$FEDA	; ROLL DIGIT INTO DD		
004B	50 02		BVC	DISP			
004D	85 FE	STORE	STA	\$FE	; STORE RESULT IN LLLL+1		
004F	20 AC FE	DISP	JSR	\$FEAC	; DISPLAY LLLL DD, CLEAR Z		
0052	D0 B5		BNE	GET			
0054	54 49	MESS	.BYTE	'TILT'			
0056	4C 54						


Figure 15.1 The Total Mystery Program

The heart of "total mystery" is the add and subtract instructions ADC and SBC. Since they are the basis of all arithmetic processing on the 6502, an ample set of addressing modes is provided for these instructions, as seen in Figure 15.2. Addition and subtraction are carried out in the 6502 by loading the accumulator, then using ADC or SBC to form the sum or difference in the accumulator. The carry flag gets in on the act: ADC sums accumulator, operand byte and carry flag. SBC subtracts the operand from the accumulator and adds in the complement of the carry as a "borrow." To get a correct one-byte addition, you must make sure that the carry flag is cleared beforehand. An instruction CLC is available to do this. It was not necessary in "total mystery" because the compare instruction at \$001C clears the carry flag so that no borrow is assumed. The SEI instruction of Figure 15.2 serves that purpose.

MNEMONIC	EXPLANATION	ADDRESS MODES								FLAGS AFFECTED
		immediate	absolute	zero page	(ind,X)	(ind),Y	zero page,X	absolute,X	absolute Y	
ADC	Add with carry to accumulator	69	6D	65	61	71	75	7D	79	NZCV
SBC	Subtract with carry from accumulator	E9	ED	E5	E1	F1	F5	FD	F9	NZCV
CLC	Clear carry flag	18	Implied							C=0
SEC	Set carry flag	38	Implied							C=1

Figure 15.2 Add and Subtract and Carry Flag Set Up

The reason for involving the carry flag in ADC and SBC is to enable addition and subtraction to be extended to numbers larger than one byte. Starting at the rightmost byte of the numbers, the value of C, resulting from each addition or subtraction represents the carry or borrow required into the next byte to the left.

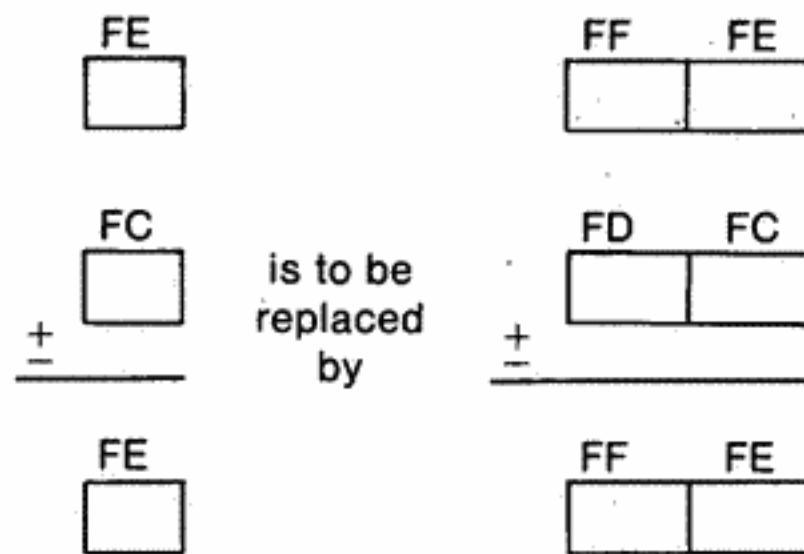

Replace ADC \$FC at 0013 with:

0013	90	43	BCC	ADD2
------	----	----	-----	------

and add to the end of the program (0058):

0058	65	FC	ADD2	ADC	\$FC
005A	85	FE		STA	\$FE
005C	A5	FF		LDA	\$FF
005E	65	FD		ADC	\$FD
0060	4C	15	00	JMP	\$0015

Replace SBC \$FC at 0020 with:

0020	B0	41	BCS	SUB 2
------	----	----	-----	-------

and add to the end of the program (0063):

0063	E5	FC	SUB2	SBC	\$FC
0065	85	FE		STA	\$FE
0067	A5	FF		LDA	\$FF
0069	E5	FD		SBC	\$FD
006B	4C	22	00	JMP	\$0022

and change STA \$FE at 004D to

004D	85	FF	STORE	STA	\$FF
------	----	----	-------	-----	------

Figure 15.3 Extending Total Mystery to Two-Byte Arithmetic

Figure 15.3 shows how to extend the “total mystery” program to two-byte arithmetic. The carry produced by adding \$00FE and \$00FC contributes to the sum of \$00FF and \$00FD. The overflow flag has meaning only when the most significant, or leftmost, bytes of the numbers have been processed. The arrangement of the numbers in memory may not seem very natural to you. It is done this way in order to make use of the Monitor subroutines at \$FEAC and \$FEDA. A more natural arrangement is illustrated in the subroutines of Figure 15.4. Can you assemble machine language versions of these routines?

```
; ADD INTEGERS IN BYTES LONG, STARTING AT $E0 AND $E8  
; WORKS FOR N UP TO 8.  
; CALL WITH X=N-1. AFFECTS A.
```

```
18      ADDN CLC  
B5 E0    ANLP LDA $E0,X  
75 E8    ADC $E8,X  
95 E0    STA $E0,X  
CA      DEX  
10 F7    BPL ANLP  
60      RTS
```

```
; UNSIGNED ADD, OF A TO N-BYTE ACCUMULATOR AT $E0  
; CALL WITH X=N-1.
```

```
18      ADD1 CLC  
75 E0    A1LP ADC $E0,X  
95 E0    STA $E0,X  
CA      DEX  
A9 00    LDA #0  
B0 F7    BCS A1LP  
60      RTS
```

Figure 15.4 Two Subroutines for N-Byte Addition

SECTION 16

BIT BY BIT

The 6502 processor can address bytes, but not bits within a byte. Two groups of instructions handle information at the bit level: shift instructions move bits to where they are needed, and bit logical instructions operate on bits individually.

6502 shift instructions are illustrated in Figure 16.1. The byte contents of the accumulator, or a memory cell, can be shifted one bit position, left or right. The carry flag acts as an extension of the shifted byte, receiving the bit value shifted out of the byte. The ASL and LSR instructions bring a cleared bit into the opposite end of the byte. The rotate instructions bring in the previous value of the carry flag. Generally, "arithmetic" shifts are those that produce multiplication or division by two, for both positive and negative values. Since shifting right to divide by two would not work for two's complement negative values, the right shift is called a logical shift rather than an arithmetic shift.

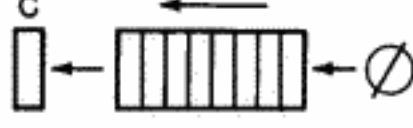
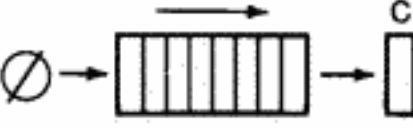
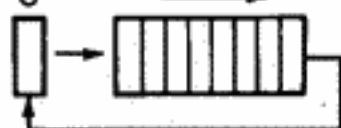
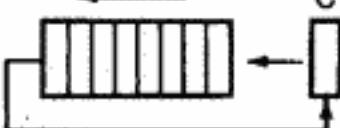
ADDRESS MODES						FLAGS
Absolute	Zero Page	Accumulator	Z Page, X	Abs, X		
						N,Z,C
	ASL	0E	06	0A	16	1E
	LSR	4E	46	4A	56	5E N=0,Z,C
	ROL	2E	26	2A	36	3E N,Z,C
	ROR	6E	66	6A	76	7E N,Z,C

Figure 16.1 Shift instructions

The binary display program of Section 4 is based on shift instructions, using them to extract and use one bit of the displayed value at a time. The symbolic form is shown in Figure 16.2.

```

; BINARY DISPLAY PROGRAM OF SECTION 4

20 ED FE LOOP    JSR $FEED ; GET A KEY
85 F0             STA $F0   ; SAVE IN $F0
A9 18             LDA #$18 ; HEX 30, SHIFTED RIGHT
A2 07             LDX #7
9D D2 D0 OUT    STA $D0D2,X ; SET UP DISPLAY CELL
66 F0             ROR $F0   ; GET NEXT BIT
3E D2 D0         ROL $D0D2,X ; SHIFT BIT IN, PRESERVE CARRY
CA               DEX
10 F5             BPL OUT
30 EA             BMI LOOP

```

Figure 16.2 Binary Display Program

A logical shift right in the accumulator is central to the subroutine of Figure 16.3. This subroutine could prove useful in many places. For one, use it to improve “execute-in-a-box” so that it displays the flags, X, Y, A and S automatically. You can put the subroutine anywhere without changing any code. Subroutines with this property are called relocatable. The key to writing relocatable subroutines is to avoid absolute or zero page addressing modes referencing bytes within the subroutine.

```

; HEX DISPLAY OF ZERO PAGE BINARY CODE STARTING AT X
; DISPLAY STARTS AT $D0C6,Y
; NUMBER OF BINARY BYTES IN A
; USES $FF FOR COUNTER
;
85 FF HEXTV STA $FF ; BINARY BYTE COUNTER
B5 00 LOOPH LDA $0,X ; GET BINARY BYTE
4A           LSR A ; SHIFT LEFT HEX DIGIT
4A           LSR A ; TO RIGHT DIGIT
4A           LSR A
4A           LSR A
20 CA FE JSR $FECA ; ASCII TO $D0C6,Y; INCREMENT Y
B5 00 LDA $0,X ; GET A FRESH COPY
20 CA FE JSR $FECA ; RIGHT DIGIT ASCII T0 $D0C6,Y AND INC Y
EA           NOP ; FOR GAP BETWEEN BYTES, INSERT INY HERE
E8           INX ; ADVANCE IN BINARY INPUT
C6 FF DEC $FF ; COUNTING INPUT BYTES
D0 EC BNE LOOPH
60           RTS

```

Figure 16.3 Binary to Hexadecimal Display Subroutine

Normally you would put a subroutine somewhere beyond the first two pages of memory. Zero page locations are too valuable because any data in the zero page can be addressed with a single byte in the instruction. The stack

occupies page one of memory.

What happens when register Y is incremented beyond 255_{10} or FF_{16} ? It just starts over, right? You can take advantage of this to display several lines in "execute-in-a-box," letting the active line do a 'round robin' progression over the display.

SECTION 17

IT'S VERY LOGICAL

In most computers the individual bits within addressable units are operated on by a technique known as masking. A binary code called a mask selects the bits to be operated upon. The operations are called bit logical or simply, logical operations. Like most processors, the 6502 provides bit logical operations for selectively clearing, setting and complementing bits.

In the logical operations, each bit of the mask interacts with the corresponding bit of the operand in the same position. The effects on operand bits are shown in Figure 17.1. The names AND and OR are rather universal names for these operations. EOR is short for exclusive or. The AND operation clears all bits in the operand selected by 0's of the mask. The OR sets all bits selected by mask 1's, while the EOR complements them. Figure 17.2 covers the 6502 logical instructions and a special compare instruction (BIT) which uses the accumulator as a mask to select individual bits for setting the zero flag Z.

As an example, if the accumulator contains

10101100,

the instruction AND with 11110000 produces 10100000 in the accumulator,

the instruction AND with 00001111 produces 00001100 in the accumulator,

the instruction ORA with 11110000 produces 11111100 in the accumulator,

the instruction ORA with 00001111 produces 10101111 in the accumulator,

the instruction EOR with 11110000 produces 01011100 in the accumulator,

the instruction EOR with 00001111 produces 10100011 in the accumulator.

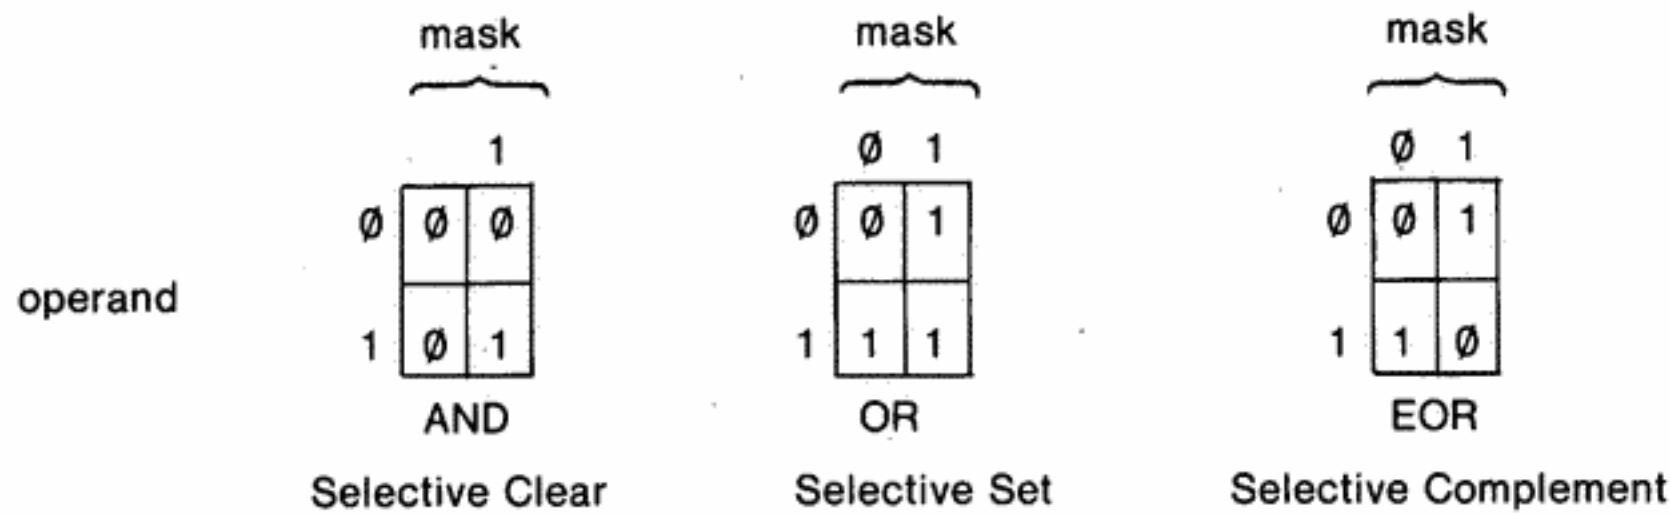


Figure 17.1 The Effect of Logical Operations

MNEMONIC EXPLANATION		immediate	absolute	zero page	(ind),X	(ind),Y	zero page,X	abs,X	abs,Y	FLAGS
AND	AND accumulator and memory mask	29	2D	25	21	31	35	3D	39	N,Z
ORA	OR accumulator and memory mask	09	0D	05	01	11	15	1D	19	N,Z
EOR	EXCLUSIVE-OR accumulator and memory mask	49	4D	45	41	51	55	5D	59	N,Z
BIT	Test memory by accumulator mask			2C - Absolute 24 - Zero page			Z = 0 if A AND memory = 0 = 1 otherwise N = memory sign bit V = next bit of memory			

Figure 17.2 6502 Logical Instructions

Logical operations are important in many algorithms because they represent, very neatly, the combining of sets of objects to form new sets. Imagine that we have devoted one bit to each object. Then a set of objects is represented by a binary code in which '1' means 'belongs to the set.' Now the AND of two codes is the intersection of the sets, the objects belonging to both. OR the codes to get the union of the sets, the set of objects belonging to one or the other. EOR produces the union but eliminates objects in both sets.

The Monitor subroutine starting at \$FECA illustrates masking with logical instructions. It is called by the hexadecimal display subroutine of the last section. As Figure 17.3 shows, the subroutine constructs and stores the ASCII code for a hexadecimal digit contained in the right four bits of the accumulator. With your improved "execute-in-a-box," trace through the routine with some typical input data and confirm its behavior.

```

; DISPLAY AT $D0C6,Y THE ASCII CODE
; FOR THE RIGHT NIBBLE OF A
; INCREMENTS Y
;
; FECA 29 0F    ASCII AND #$0F    ; REPLACE LEFT NIBBLE
; 09 30          ORA #$30      ; BY '3'
; C9 3A          CMP #$3A      ; WAS IT 0-9?
; 30 03          BMI STO      ; YES, NO ADJUST NECESSARY
; 18              CLC          ;
; 69 07          ADC #7       ; NO, ADD 7 FOR A-F ASCII
; 99 C6 D0 STO   STA $D0C6,Y  ; STORE IN DISPLAY LOCATION
; C8              INY          ; ADVANCE TO NEXT DISPLAY LOCATION
; 60              RTS          ;

```

Figure 17.3 Monitor Subroutine Featuring Logical Operations

SECTION 18

HARDWORKING SUBROUTINES

Machine language programs take considerable effort to code and get working because they involve large numbers of instructions. On the other hand, they are the most machine efficient form of program. A good way to increase the power of a computer is to build a collection of machine language subroutines that can be combined in different ways to form executing programs. Some subroutines do commonly useful tasks which can be used in many programs. In writing such subroutines, it is important to keep them as general as possible. Avoid combining several processing tasks together into one subroutine, restricting it to fewer situations.

There are many ways to provide input data and locations for output data for subroutines. Input data can be left in processor registers. One example would be the Monitor subroutine at \$FE93, described in Figure 14.2. The input and output result are transmitted in the accumulator. Another useful example is the 'time delay' subroutine of Figure 18.1, with input data left in register X. It passes time by executing an inner loop 256 times and repeating this the number of times specified by X. Place calls to this subroutine in a program to slow down the action, so you can actually see something happening. If X is in use at the point of the desired delay, then you must save its contents somewhere before calling 'time delay' and restore its contents afterwards. The location \$00FD, which is wiped out by the call to 'time delay,' does not have to be initially set to any particular value before the call unless an exact time is required.

			; TIME DELAY OF ABOUT 2265.X CYCLES
			; CLEARS \$FD
EA	TIME	NOP	; EACH NOP ADDS 512 CYCLES TO THE LOOP
C6 FD		DEC \$FD	; 256 TIMES, AFTER THE FIRST
D0 FB		BNE TIME	
88		DEX	; COUNTS EXECUTED LOOPS
D0 F8		BNE TIME	
60		RTS	

Figure 18.1 Time Display Subroutine

Another way of passing data to subroutines is illustrated in Figure 18.2. The address and length of the 'scroll' field are placed in zero page locations. The LDA and STA instructions use an addressing mode called indirect indexed, in which the instruction identifies the zero page location of the address of the scroll field, and the contents of Y are added to form the effective address of a byte in the field. The scroll field address is a two-byte address which can be changed to relocate the scroll field anywhere in the display. The scroll subroutine does a big part of good listener's task. See if you can rewrite "good listener" to use the scroll subroutine. Don't forget to load appropriate values into locations 00F8, 00F9 and 00FA.

You can experiment with the time delay subroutine by loading it and inserting the instructions

LDX #_____

JSR TIME

within the scroll subroutine's loop. Remember to subtract five from the relative addressing displacement in

BNE SHIFT

to adjust for the insertion. Adjust the immediate value loaded into X for a pleasing 'ripple' effect as you enter data.

; SHIFT DISPLAY FIELD LEFT, STORE A INTO RIGHTMOST CHARACTER
; FIELD ADDRESS AT \$F9,\$F8, LENGTH-1 AT \$FA
; AFFECTS Y

A0 00	SCROLL	LDY #0	; STRING POINTER
48		PHA	; SAVE INSERT
C8	SHIFT	INY	; I+1
B1 F8		LDA (\$F8),Y	; MOVE (I+1) ST POSITION
88		DEY	; I
91 F8		STA (\$F8),Y	; TO (I)TH POSITION
C8		INY	; ADVANCE I
C4 FA		CPY \$FA	; LOOP TEST VALUE
D0 F5		BNE SHIFT	
68		PLA	; RESTORE AND
91 F8		STA (\$F8),Y	; INSERT INTO RIGHTMOST
60		RTS	

Figure 18.2 Character Scroll

SECTION 19

TWO-WAY ARITHMETIC

Many computers can do decimal arithmetic directly, in addition to binary arithmetic. As you know, converting numbers between the binary and decimal number systems is not so easy. A program that receives decimal data and outputs decimal results, while doing all internal computations in binary, can have a lot of converting to do. Decimal arithmetic, though not as efficient as binary arithmetic, can be better in many situations as an alternative to conversions in both directions.

The 6502 processor has a switch that can be thrown to make add and subtract operations produce decimal, rather than binary results. In this mode of operation, byte operands which are valid BCD (Binary Coded Decimal) inputs are combined into valid BCD sums and differences, with the carry flag representing carries or borrows of ten. See Section 5 to review BCD. Although a ten's complement corresponding to the two's complement does exist for the representation of negative numbers, decimal arithmetic is usually done with positive numbers.

A decimal mode flag is the means of controlling the arithmetic mode of the processor and indicating which mode the processor is in. One-byte instructions set this flag to enter decimal mode and clear it to return to binary arithmetic. These instructions and the position of the decimal mode flag (D) in the P register which is pushed onto the stack by the PHP instruction, are shown in Figure 19.1

MNEMONIC	EXPLANATION	OPCODE	FLAGS
CLD	Clear Decimal Mode Flag	D8	D=0
SED	Set Decimal Mode Flag	F8	D=1

Figure 19.1 The Decimal Mode Flag

Decimal mode arithmetic can be explored by changing the first instruction in "total mystery" (original or your extended version) to an SED instruction. This makes the program execute in decimal mode. The Monitor clears the decimal mode flag as it begins execution, but care must be taken when entering the Monitor at other points that the decimal mode flag is cleared.

You might enjoy the program of Figure 19.2, which requires several of the subroutines you have seen in previous sections. The program converts decimal numbers to hexadecimal by using decimal arithmetic. Minor changes allow it to convert decimal numbers to hexadecimal by doing the same operations in binary arithmetic. A necessary multiplication is carried out by adding repeatedly; not the most efficient method, but simple enough to make the two-way arithmetic idea work. More efficient multiplication methods involving adding and shifting are spelled out in many references. The bibliography at the end of this manual will lead you to specific methods and coded subroutines.

; DECIMAL-HEX CONVERTER:

```
4000 D8      START    CLD      ; CLD OR SED
4001 A9 20    REPEAT   LDA #\$20  ; ASCII BLANK
4003 A0 00    LDY #0    ; ZERO
4005 A2 07    LDX #07
4007 9D C6 D0 CLEAR  STA \$D0C6,X ; CLEAR ENTRY FIELD
400A 94 E0    STY \$E0,X  ; CLEAR ACCUMULATOR
400C CA      DEX
```

400D	10	F8		BPL	CLEAR		
400F	A2	E0	AOUT	LDX	#\$E0	; INPUT ADDRESS	
4011	A0	40		LDY	#\$40	; DISPLAY POSITION	
4013	A9	08		LDA	#\$08		
4015	20	-	-	JSR	HEXTV	; ACCUMULATOR DISPLAY, FIG. 16.3	
4018	20	ED	FE	JSR	\$FEED	; GET DIGIT	
401B	48			PHA		; SAVE ASCII	
401C	20	93	FE	JSR	\$FE93	; STRIP TO DIGIT, FIG 14.2	
401F	10	03		BPL	DIGIT	; BRANCH IF DIGIT	
4021	68			PLA		; IF NOT, DISCARD IT	
4022	50	DD		BVC	REPEAT	;	
4024	48			PHA		; SAVE STRIPPED FOR ADD	
4025	A2	07		LDX	#7		
4027	EA			NOP		; F8 SED - FOR HEX-DEC	*
4028	B5	E0	COPY	LDA	\$E0,X	; COPY FOR MULTIPLY	
402A	95	E8		STA	\$E8,X	;	
402C	CA			DEX			
402D	10	F9		BPL	COPY		
402F	A0	09	CNT	LDY	#9	; CHANGE #9 to #\$F - FOR HEX-DEC	*
4031	A2	07	MULT	LDX	#7	; MULTIPLY BY ADDING	
4033	20	-	-	JSR	ADDN	; FIGURE 15.4	
4036	88			DEY			
4037	D0	F8		BNE	MULT		
4039	68			PLA		; PULL STRIPPED DIGIT	
403A	A2	07		LDX	#7		
403C	EA			NOP		; D8 CLD - FOR HEX-DEC	*
403D	EA	EA		NOPs		; C9 0A CMP #\$A - FOR HEX-DEX	*
403F	EA	EA		NOPs		; 90 02 BCC - FOR HEX-DEC	*
4041	EA	EA		NOPs		; 69 05 ADC #\$5 - FOR HEX-DEC	*
4043	EA			NOP		; F8 SED - FOR HEX-DEC	*
4044	20	-	-	JSR	ADD1	; ADD TO ACCUMULATOR, FIGURE 15.4	
4047	68			PLA		; PULL DIGIT ASCII	
4048	20	-	-	JSR	SCROLL	; ROLL INTO INPUT DISPLAY, FIG. 18.2	
404B	EA			NOP		; D8 CLD - FOR HEX-DEC	*
404C	4C	0F	40	JMP	AOUT	; DISPLAY NEW ACCUMULATOR	

* Make these changes to convert this program to a Hexadecimal-Decimal Converter.

Figure 19.2 Decimal-Hexadecimal Converter

The machine code addresses in Figure 19.2 assume the program is loaded into memory beginning at location \$4000. Actually it can be loaded anywhere in RAM, provided the absolute address in the last instruction is adjusted to the location of the instruction labeled AOUT. This one dependence on the load address of the program can be removed by replacing the last instruction with a conditional branch that is known to branch from the known value of its flag. This strategy was followed in the instruction shown at \$401F.

Blanks occur in some absolute address positions in the program, corresponding to subroutine calls. The subroutines are those defined in this manual. You can load them anywhere in RAM and fill in their absolute addresses (with reversed bytes) to make a complete program.

Adjusting a program to its loading location is called relocation. Filling in addresses to reflect the location of other routines and data is called linking or resolving references. Many computer systems have a system program, called a loader, which loads, relocates and links the user's programs.

If you have trouble getting the routines to run please refer to Appendix K which contains completed listings.

SECTION 20

A SPARKLING FINISH

You have almost reached the end of this guide, but that is no reason to slow down in enabling your computer to do new useful and amusing things, through machine language programming.

We have explored almost every 6502 instruction, but there is an addressing mode we have not encountered. It is called indexed indirect. In this mode, the index register X selects an address from a block of reversed-byte addresses in the zero page. The starting byte of the block is designated by the second byte of the indexed instruction. In the symbolic assembler language form the indexed indirect mode is indicated by an operand of the form.

(zero-page-address,X)

The indexed indirect addressing mode is useful for accessing bytes in random order rather than in increasing or decreasing order. The program of Figure 20.1 illustrates the situation. Select a set of displayed cells scattered 'randomly' around on the screen. List them in a block of reversed-byte addresses, not in any particular order. Load the program somewhere beyond the block of addresses and load the 'time delay' subroutine (pg.45) along with it. Link the 'time delay' into your program. Place the number of addresses in location \$0001 and adjust the timing constant for a pleasing effect.

In the sparkle program, the 'stars' stay off most of the time. To make a 'twinkle, twinkle, little star' version, reverse the star and blank characters \$E8 and \$20.

```
; SPARKLING FINISH
;
; LOAD A TIMING CONSTANT FOR THE 'ON' TIME IN $00
; LOAD N INTO $01
; PLACE ADDRESSES OF SPARKLE DISPLAY POINTS IN LOCATIONS
; $04$05 THROUGH 2N, 2N+1 IN REVERSED BYTE FORM
;
A6 01    BEGIN   LDX  1      ;
A9 E8    LOOP    LDA  #$E8    ; A 'STAR'
81 02        STA  ($02,X)  ; THE STAR APPEARS
8A          TXA      ; SAVE FOR TIME
A6 00        LDX  0      ;
20  - -    JSR   TIME    ; FLASH A STAR
AA          TAX      ; RESTORE STAR POINTER
A9 20        LDA  #$20    ; BLANK
81 02        STA  ($02,X)  ; TURN STAR OFF
CA          DEX      ;
CA          DEX      ; INDEX NEXT STAR LOCATION
D0 ED    BNE   LOOP    ; FLASH NEXT STAR
F0 E9    BEQ   BEGIN    ; CYCLE THROUGH STARS AGAIN
```

Figure 20.1 A Sparkling Program


APPENDIX A

ASCII CHARACTER CODES

CODE	CHAR	CODE	CHAR	CODE	CHAR
00	NUL	2B	+	56	V
01	SOH	2C	,	57	W
02	STX	2D	-	58	X
03	ETX	2E	.	59	Y
04	EOT	2F	/	5A	Z
05	ENQ	30	Ø	5B	[
06	ACK	31	1	5C	/
07	BEL	32	2	5D]
08	BS	33	3	5E	^
09	HT	34	4	5F	—
0A	LF	35	5	60	a
0B	VT	36	6	61	b
0C	FF	37	7	62	c
0D	CR	38	8	63	d
0E	SO	39	9	64	e
0F	SI	3A	:	65	f
10	DLE	3B	;	66	g
11	DC1	3C	<	67	h
12	DC2	3D	=	68	i
13	DC3	3E	>	69	j
14	DC4	3F	?	6A	k
15	NAK	40	@	6B	l
16	SYN	41	A	6C	m
17	ETB	42	B	6D	n
18	CAN	43	C	6E	o
19	EM	44	D	6F	p
1A	SUB	45	E	70	q
1B	ESC	46	F	71	r
1C	FS	47	G	72	s
1D	GS	48	H	73	t
1E	RS	49	I	74	u
1F	US	4A	J	75	v
20	SP	4B	K	76	w
21	!	4C	L	77	x
22	"	4D	M	78	y
23	#	4E	N	79	z
24	\$	4F	Ø	7A	{
25	%	50	P	7B	}
26	&	51	Q	7C	:
27	,	52	R	7D	;
28	(53	S	7E	÷
29)	54	T	7F	DEL
2A	*	55	U		

APPENDIX B

6502 MICROPROCESSOR ARCHITECTURE

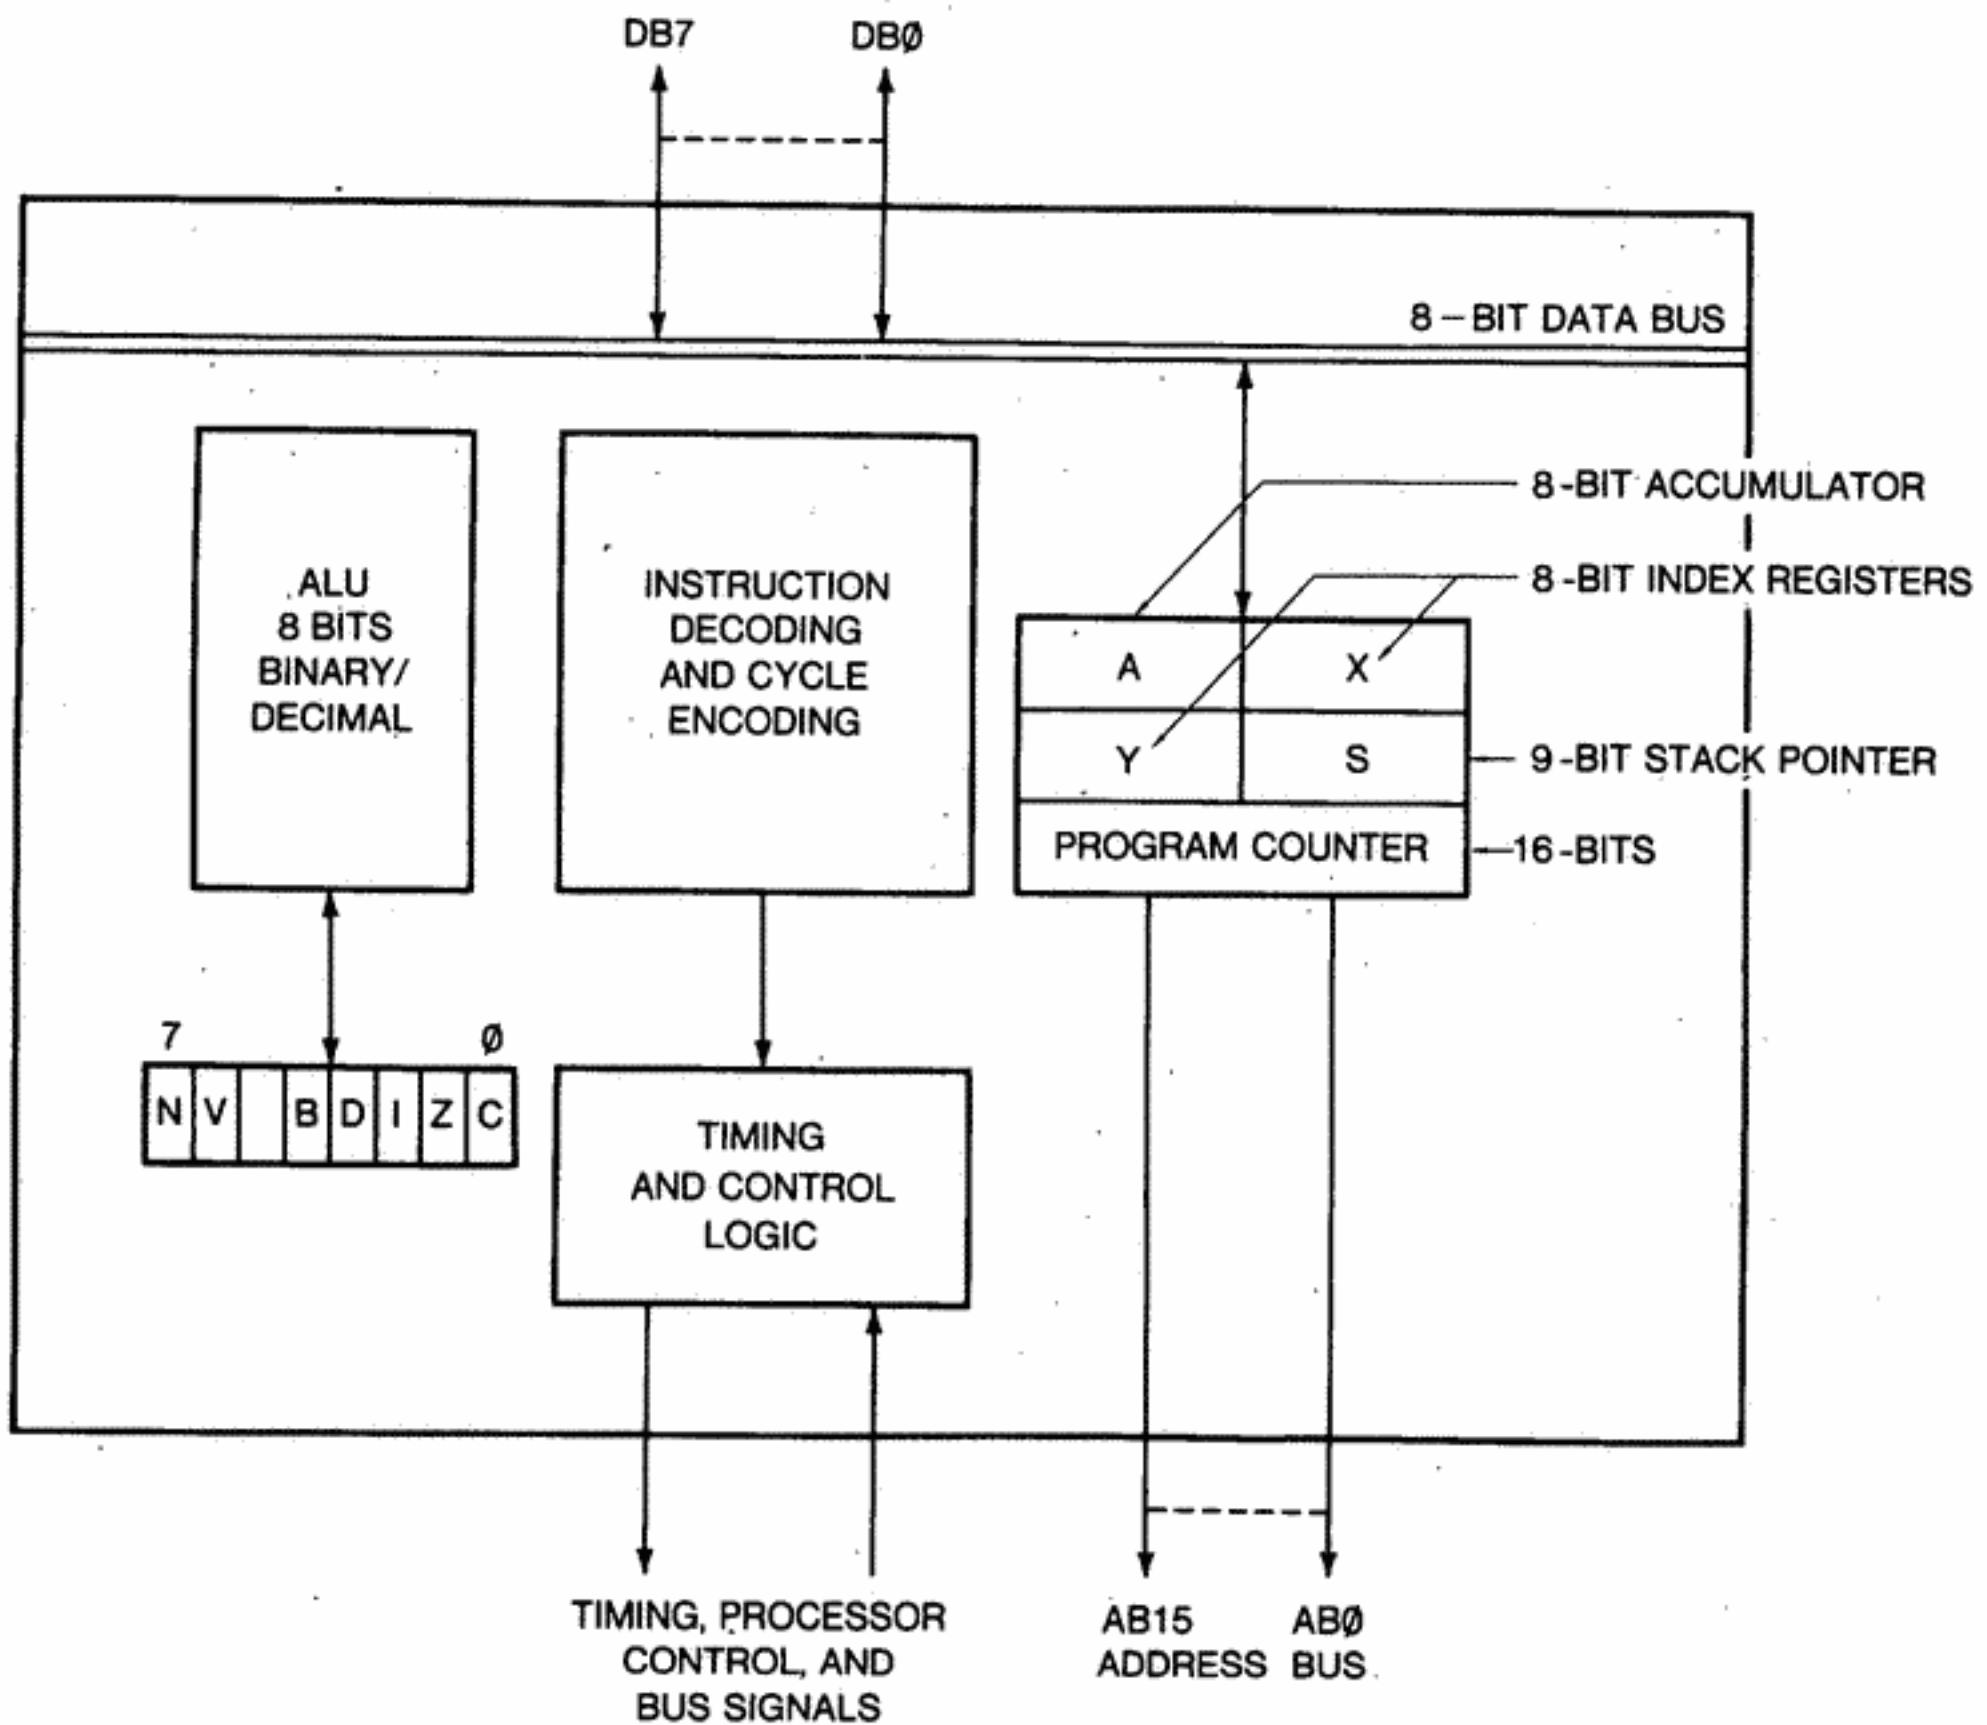

APPENDIX C

6502 INSTRUCTION SET - MNEMONIC LIST

—ADC	Add Memory to Accumulator with Carry
—AND	“AND” Memory with Accumulator
¬ ASL	Shift Left One Bit (Memory or Accumulator)
—BCC	Branch on Carry Clear
—BCS	Branch on Carry Set
¬ BEQ	Branch on Result Zero
¬ BIT	Test Bits in Memory with Accumulator
—BMI	Branch on Result Minus
—BNE	Branch on Result not Zero
—BPL	Branch on Result Plus
—BRK	Force Break
—BVC	Branch on Overflow Clear
—BVS	Branch on Overflow Set
—CLC	Clear Carry Flag
—CLD	Clear Decimal Mode
—CLI	Clear Interrupt Disable Bit
¬ CLV	Clear Overflow Flag
—CMP	Compare Memory and Accumulator
¬ CPX	Compare Memory and Index X
—CPY	Compare Memory and Index Y
—DEC	Decrement Memory by One
¬ DEX	Decrement Index X by One
—DEY	Decrement Index Y by One
—EOR	“Exclusive Or” Memory with Accumulator
—INC	Increment Memory by One
—INX	Increment Index X by One
—INY	Increment Index Y by One
—JMP	Jump to New Location
—JSR	Jump to New Location Saving Return Address
—LDA	Load Accumulator with Memory
—LDX	Load Index X with Memory
—LDY	Load Index Y with Memory
—LSR	Shift Right One Bit (Memory or Accumulator)
—NOP	No Operation
—ORA	“OR” Memory with Accumulator
—PHA	Push Accumulator on Stack
—PHP	Push Processor Status on Stack
—PLA	Pull Accumulator from Stack
—PLP	Pull Processor Status from Stack

6502 INSTRUCTION SET - MNEMONIC LIST (CONTINUED)

- ROL	Rotate One Bit Left (Memory or Accumulator)
- ROR	Rotate One Bit Right (Memory or Accumulator)
- RTI	Return from Interrupt
- RTS	Return from Subroutine
- SBC	Subtract Memory from Accumulator with Borrow
- SEC	Set Carry Flag
- SED	Set Decimal Mode
- SEI	Set Interrupt Disable Status
- STA	Store Accumulator in Memory
- STX	Store Index X in Memory
- STY	Store Index Y in Memory
- TAX	Transfer Accumulator to Index X
- TAY	Transfer Accumulator to Index Y
- TSX	Transfer Stack Pointer to Index X
- TXA	Transfer Index X to Accumulator
- TXS	Transfer Index X to Stack Pointer
- TYA	Transfer Index Y to Accumulator

APPENDIX D

6502 INSTRUCTION SET - HEX LISTING

00	-	BRK	47	2F	-	Future Expansion
01	-	ORA-(Indirect,X)	48	30	-	BMI
02	-	Future Expansion	49	31	-	AND-(Indirect),Y
03	-	Future Expansion	50	32	-	Future Expansion
04	-	Future Expansion	51	33	-	Future Expansion
05	-	ORA-Zero Page	52	34	-	Future Expansion
06	-	ASL-Zero Page	53	35	-	AND-Zero Page,X
07	-	Future Expansion	54	36	-	ROL-Zero Page,X
08	-	PHP	55	37	-	Future Expansion
09	-	ORA-Immediate	56	38	-	SEC
10	0A	- ASL-Accumulator	57	39	-	AND-Absolute,Y
11	0B	- Future Expansion	58	3A	-	Future Expansion
12	0C	- Future Expansion	59	3B	-	Future Expansion
13	0D	- ORA-Absolute	60	3C	-	Future Expansion
14	0E	- ASL-Absolute	61	3D	-	AND-Absolute,X
15	0F	- Future Expansion	62	3E	-	ROL-Absolute,X
16	10	- BPL	63	3F	-	Future Expansion
17	11	- ORA-(Indirect),Y	64	40	-	RTI
18	12	- Future Expansion	65	41	-	EOR-(Indirect,X)
19	13	- Future Expansion	66	42	-	Future Expansion
20	14	- Future Expansion	67	43	-	Future Expansion
21	15	- ORA-Zero Page,X	68	44	-	Future Expansion
22	16	- ASL-Zero Page,X	69	45	-	EOR-Zero Page
23	17	- Future Expansion	70	46	-	LSR-Zero Page
24	18	- CLC	71	47	-	Future Expansion
25	19	- ORA-Absolute,Y	72	48	-	PHA
26	1A	- Future Expansion	73	49	-	EOR-Immediate
27	1B	- Future Expansion	74	4A	-	LSR-Accumulator
28	1C	- Future Expansion	75	4B	-	Future Expansion
29	1D	- ORA-Absolute,X	76	4C	-	JMP-Absolute
30	1E	- ASL-Absolute,X	77	4D	-	EOR-Absolute
31	1F	- Future Expansion	78	4E	-	LSR-Absolute
32	20	- JSR	79	4F	-	Future Expansion
33	21	- AND-(Indirect,X)	80	50	-	BVC
34	22	- Future Expansion	81	51	-	EOR-(Indirect),Y
35	23	- Future Expansion	82	52	-	Future Expansion
36	24	- BIT-Zero Page	83	53	-	Future Expansion
37	25	- AND-Zero Page	84	54	-	Future Expansion
38	26	- ROL-Zero Page	85	55	-	EOR-Zero Page,X
39	27	- Future Expansion	86	56	-	LSR-Zero Page,X
40	28	- PLP	87	57	-	Future Expansion
41	29	- AND-Immediate	88	58	-	CLI
42	2A	- ROL-Accumulator	89	59	-	EOR-Absolute,Y
43	2B	- Future Expansion	90	5A	-	Future Expansion
44	2C	- BIT-Absolute	91	5B	-	Future Expansion
45	2D	- AND-Absolute	92	5C	-	Future Expansion
46	2E	- ROL-Absolute	93	5D	-	EOR-Absolute,X

6502 INSTRUCTION SET - HEX LISTING (CONTINUED)

94 5E	- LSR-Absolute,X	149 95	- STA-Zero Page,X
95 5F	- Future Expansion	150 96	- STX-Zero Page,Y
96 60	- RTS	151 97	- Future Expansion
97 61	- ADC-(Indirect,X)	152 98	- TYA
98 62	- Future Expansion	153 99	- STA-Absolute,Y
99 63	- Future Expansion	154 9A	- TXS
100 64	- Future Expansion	155 9B	- Future Expansion
101 65	- ADC-Zero Page	156 9C	- Future Expansion
102 66	- ROR-Zero Page	157 9D	- STA-Absolute,X
103 67	- Future Expansion	158 9E	- Future Expansion
104 68	- PLA	159 9F	- Future Expansion
105 69	- ADC-Immediate	160 A0	- LDY-Immediate
106 6A	- ROR-Accumulator	161 A1	- LDA-(Indirect,X)
107 6B	- Future Expansion	162 A2	- LDX-Immediate
108 6C	- JMP-Indirect	163 A3	- Future Expansion
109 6D	- ADC-Absolute	164 A4	- LDY-Zero Page
110 6E	- ROR-Absolute	165 A5	- LDA-Zero Page
111 6F	- Future Expansion	166 A6	- LDX-Zero Page
112 70	- BVS	167 A7	- Future Expansion
113 71	- ADC-(Indirect),Y	168 A8	- TAY
114 72	- Future Expansion	169 A9	- LDA-Immediate
115 73	- Future Expansion	170 AA	- TAX
116 74	- Future Expansion	171 AB	- Future Expansion
117 75	- ADC-Zero Page,X	172 AC	- LDY-Absolute
118 76	- ROR-Zero Page,X	173 AD	- LDA-Absolute
119 77	- Future Expansion	174 AE	- LDX-Absolute
120 78	- SEI	175 AF	- Future Expansion
121 79	- ADC-Absolute,Y	176 B0	- BCS
122 7A	- Future Expansion	177 B1	- LDA-(Indirect),Y
123 7B	- Future Expansion	178 B2	- Future Expansion
124 7C	- Future Expansion	179 B3	- Future Expansion
125 7D	- ADC-Absolute,X	180 B4	- LDY-Zero Page,X
126 7E	- ROR-Absolute,X	181 B5	- LDA-Zero Page,X
127 7F	- Future Expansion	182 B6	- LDX-Zero Page,Y
128 80	- Future Expansion	183 B7	- Future Expansion
129 81	- STA-(Indirect,X)	184 B8	- CLV
130 82	- Future Expansion	185 B9	- LDA-Absolute,Y
131 83	- Future Expansion	186 BA	- TSX
132 84	- STY-Zero Page	187 BB	- Future Expansion
133 85	- STA-Zero Page	188 BC	- LDY-Absolute,X
134 86	- STX-Zero Page	189 BD	- LDA-Absolute,X
135 87	- Future Expansion	190 BE	- LDX-Absolute,Y
136 88	- DEY	191 BF	- Future Expansion
137 89	- Future Expansion	192 C0	- CPY-Immediate
138 8A	- TXA	193 C1	- CMP-(Indirect,X)
139 8B	- Future Expansion	194 C2	- Future Expansion
140 8C	- STY-Absolute	195 C3	- Future Expansion
141 8D	- STA-Absolute	196 C4	- CPY-Zero Page
142 8E	- STX-Absolute	197 C5	- CMP-Zero Page
143 8F	- Future Expansion	198 C6	- DEC-Zero Page
144 90	- BCC	199 C7	- Future Expansion
145 91	- STA-(Indirect),Y	200 C8	- INY
146 92	- Future Expansion	201 C9	- CMP-Immediate
147 93	- Future Expansion	202 CA	- DEX
148 94	- STY-Zero Page,X	203 CB	- Future Expansion

6502 INSTRUCTION SET - HEX LISTING (CONTINUED)

208 CC	- CPY-Absolute	230 E6	- INC-Zero Page
209 CD	- CMP-Absolute	231 E7	- Future Expansion
20A CE	- DEC-Absolute	232 E8	- INX
20B CF	- Future Expansion	233 E9	- SBC-Immediate
20C D0	- BNE	234 EA	- NOP
20D D1	- CMP-(Indirect),Y	235 EB	- Future Expansion
20E D2	- Future Expansion	236 EC	- CPX-Absolute
20F D3	- Future Expansion	237 ED	- SBC-Absolute
210 D4	- Future Expansion	238 EE	- INC-Absolute
211 D5	- CMP-Zero Page,X	239 EF	- Future Expansion
212 D6	- DEC-Zero Page,X	240 F0	- BEQ
213 D7	- Future Expansion	241 F1	- SBC-(Indirect),Y
214 D8	- CLD	242 F2	- Future Expansion
215 D9	- CMP-Absolute,Y	243 F3	- Future Expansion
216 DA	- Future Expansion	244 F4	- Future Expansion
217 DB	- Future Expansion	245 F5	- SBC-Zero Page,X
218 DC	- Future Expansion	246 F6	- INC-Zero Page,X
219 DD	- CMP-Absolute,X	247 F7	- Future Expansion
21A DE	- DEC-Absolute,X	248 F8	- SED
21B DF	- Future Expansion	249 F9	- SBC-Absolute,Y
21C E0	- CPX-Immediate	250 FA	- Future Expansion
21D E1	- SBC-(Indirect,X)	251 FB	- Future Expansion
21E E2	- Future Expansion	252 FC	- Future Expansion
21F E3	- Future Expansion	253 FD	- SBC-Absolute,X
220 E4	- CPX-Zero Page	254 FE	- INC-Absolute,X
221 E5	- SBC-Zero Page	255 FF	- Future Expansion

APPENDIX E

6502 DISASSEMBLY TABLE

OPCODE TABLE

LSD MSD	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0 BRK	ORA-IND,X															
1 BPL	ORA-IND,Y															
2 JSR	AND-IND,X	BIT-Z,Page	AND-Z,Page	ROL-Z,Page	PLP AND-IMM	ROL-A	BIT-ABS									
3 BMI	AND-IND,Y															
4 RTI	EOR-IND,X															
5 BVC	EOR-IND,Y															
6 RTS	ADC-IND,X															
7 BVS	ADC-IND,Y															
8 STA-IND,X	STY-Z,Page	STA-Z,Page	STX-Z,Page	DEY												
9 BCC	STA-IND,Y	STY-Z,Page,X	STA-Z,Page,X	STX-Z,Page,Y	TYA	STA-ABS,Y	TXS									
A LDY-IMM	LDA-IND,X	LDX-IMM	LDY-Z,Page	LDA-Z,Page	LDX-Z,Page	TAY	LDA-IMM	TAX	LDY-ABS	LDA-ABS	LDX-ABS					
B BCS	LDA-IND,Y		LDY-Z,Page,X	LDA-Z,Page,X	LDX-Z,Page,Y	CLV	LDA-ABS,Y	TSX	LDY-ABS,X	LDA-ABS,X	LDX-ABS,Y					
C CPY-IMM	CMP-IND,X			CPY-Z,Page	CMP-Z,Page	DEC-Z,Page	INY	CMP-IMM	DEX	CPY-ABS	CMP-ABS	DEC-ABS				
D BNE	CMP-IND,Y				CMP-Z,Page,X	DEC-Z,Page,X	CLD	CMP-ABS,Y			CMP-ABS,X	DEC-ABS,X				
E CPX-IMM	SBC-IND,X		CPX-Z,Page	SBC-Z,Page	INC-Z,Page	INX	SBC-IMM	NOP	CPX-ABS	SBC-ABS	INC-ABS					
F BEQ	SBC-IND,Y			SBC-Z,Page,X	INC-Z,Page,X	SED	SBC-ABS,Y			SBC-ABS,X	INC-ABS,X					

LSD—Least Significant Digit

MSD—Most Significant Digit

APPENDIX F

SPECIAL SYMBOLS

A	Accumulator
X,Y	Index Registers
M	Memory
P	Processor Status Register
S	Stack Pointer
✓	Change
-	No Change
+	Add
Λ	Logic AND
-	Subtract
▼	Logic Exclusive Or
↑	Transfer from Stack
↓	Transfer to Stack
→	Transfer to
←	Transfer to
V	Logical OR
PC	Program Counter
PCH	Program Counter High
PCL	Program Counter Low
OPER	OPERAND
#	IMMEDIATE ADDRESSING MODE
\$	Indicates a Hex Value

APPENDIX G

COMPLETE INSTRUCTION LIST WITH OPCODES

ADC

ADD MEMORY TO ACCUMULATOR WITH CARRY

Operation: $A + M + C \rightarrow A, C$

N Z C I D V
✓ ✓ ✓ — — ✓

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Immediate	ADC # Oper	69 105
Zero Page	ADC Oper	65 101
Zero Page, X	ADC Oper, X	75 117
Absolute	ADC Oper	6D 109
Absolute, X	ADC Oper, X	7D 125
Absolute, Y	ADC Oper, Y	79 121
(Indirect, X)	ADC (Oper, X)	61 97
(Indirect), Y	ADC (Oper), Y	71 113

AND

"AND" MEMORY WITH ACCUMULATOR

Logical AND to the Accumulator

Operation: $A \wedge M \rightarrow A$

N Z C I D V
✓ ✓ — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Immediate	AND # Oper	29 41
Zero Page	AND Oper	25 37
Zero Page, X	AND Oper, X	35 53
Absolute	AND Oper	2D 45
Absolute, X	AND Oper, X	3D 61
Absolute, Y	AND Oper, Y	39 57
(Indirect, X)	AND (Oper, X)	21 33
(Indirect), Y	AND (Oper), Y	31 49

ASL**ASL SHIFT LEFT ONE BIT (MEMORY OR ACCUMULATOR)**Operation: $C \leftarrow [7|6|5|4|3|2|1|0] \leftarrow 0$ N Z C I D V
✓ ✓ ✓ — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Accumulator	ASL A	0A 10
Zero Page	ASL Oper	06 6
Zero Page, X	ASL Oper, X	16 22
Absolute	ASL Oper	0E 14
Absolute, X	ASL Oper, X	1E 30

BCC**BCC BRANCH ON CARRY CLEAR**Operation: Branch on $C = 0$ N Z C I D V
— — — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Relative	BCC Oper	90 144

BCS**BCS BRANCH ON CARRY SET**Operation: Branch on $C = 1$ N Z C I D V
— — — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Relative	BCS Oper	B0 176

BEQ**BEQ BRANCH ON RESULT ZERO**Operation: Branch on $Z = 1$ N Z C I D V
— — — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Relative	BEQ Oper	F0 240

BIT**BIT TEST BITS IN MEMORY WITH ACCUMULATOR**Operation: $A \wedge M, M_7 \rightarrow N, M_6 \rightarrow V$

Bit 6 and 7 are transferred to the status Register.

N Z C I D V

If the result of $A \wedge M$ is zero then $Z = 1$, otherwise \emptyset . $M_7 \checkmark - - - M_6$

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Zero Page	BIT	Oper
Absolute	BIT	Oper

BMI**BMI BRANCH ON RESULT MINUS**Operation: Branch on $N = 1$

N Z C I D V

- - - - - - -

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Relative	BMI	Oper

BNE**BNE BRANCH ON RESULT NOT ZERO**Operation: Branch on $Z = \emptyset$

N Z C I D V

- - - - - - -

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Relative	BNE	Oper

BPL**BPL BRANCH ON RESULT PLUS**Operation: Branch on $N = \emptyset$

N Z C I D V

- - - - - - -

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Relative	BPL	Oper

BRK**BRK FORCE BREAK**

Operation: Forced Interrupt PC + 2 | P |

N Z C I D V
— — — 1 — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	BRK	00 0

A BRK command cannot be masked by setting I.

BVC**BVC BRANCH ON OVERFLOW CLEAR**

Operation: Branch on V = 0

N Z C I D V
— — — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Relative	BVC	50 80

BVS**BVS BRANCH ON OVERFLOW SET**

Operation: Branch on V = 1

N Z C I D V
— — — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Relative	BVS	70 112

CLC**CLC CLEAR CARRY FLAG**Operation: $\emptyset \rightarrow C$ N Z C I D V
— — 0 — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	CLC	18 24

CLD**CLD CLEAR DECIMAL MODE**Operation: $\emptyset \rightarrow D$ N Z C I D V
— — — — 0 —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	CLD	D8 216

CLI**CLI CLEAR INTERRUPT DISABLE BIT**Operation: $\emptyset \rightarrow I$

N	Z	C	I	D	V
—	—	—	\emptyset	—	—

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	CLI	58 <i>68</i>

CLV**CLV CLEAR OVERFLOW FLAG**Operation: $\emptyset \rightarrow V$

N	Z	C	I	D	V
—	—	—	—	—	\emptyset

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	CLV	B8 <i>184</i>

CMP**CMP COMPARE MEMORY AND ACCUMULATOR**

Operation: A - M

N	Z	C	I	D	V
✓	✓	✓	—	—	—

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Immediate	CMP # Oper	C9 <i>201</i>
Zero Page	CMP Oper	C5 <i>197</i>
Zero Page, X	CMP Oper, X	D5 <i>213</i>
Absolute	CMP Oper	CD <i>205</i>
Absolute, X	CMP Oper, X	DD <i>221</i>
Absolute, Y	CMP Oper, Y	D9 <i>217</i>
(Indirect, X)	CMP (Oper, X)	C1 <i>193</i>
(Indirect), Y	CMP (Oper), Y	D1 <i>209</i>

CPX**CPX COMPARE MEMORY AND INDEX X**

Operation: X - M

N	Z	C	I	D	V
✓	✓	✓	—	—	—

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Immediate	CPX # Oper	E0 <i>224</i>
Zero Page	CPX Oper	E4 <i>228</i>
Absolute	CPX Oper	EC <i>236</i>

CPY**CPY COMPARE MEMORY AND INDEX Y**

Operation: Y - M

N	Z	C	I	D	V
✓	✓	✓	-	-	-

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Immediate	CPY # Oper	C0 192
Zero Page	CPY Oper	C4 196
Absolute	CPY Oper	CC 204

DEC**DEC DECREMENT MEMORY BY ONE**

Operation: M - 1 → M

N	Z	C	I	D	V
✓	✓	-	-	-	-

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Zero Page	DEC Oper	C6 198
Zero Page, X	DEC Oper, X	D6 214
Absolute	DEC Oper	CE 206
Absolute, X	DEC Oper, X	DE 222

DEX**DEX DECREMENT INDEX X BY ONE**

Operation: X - 1 → X

N	Z	C	I	D	V
✓	✓	-	-	-	-

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	DEX	CA 202

DEY**DEY DECREMENT INDEX Y BY ONE**

Operation: Y - 1 → Y

N	Z	C	I	D	V
✓	✓	-	-	-	-

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	DEY	88 136

EOR**EOR "EXCLUSIVE-OR" MEMORY WITH ACCUMULATOR**Operation: $A \vee M \rightarrow A$

N Z C I D V

✓ ✓ — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Immediate	EOR # Oper	49 73
Zero Page	EOR Oper	45 69
Zero Page, X	EOR Oper, X	55 85
Absolute	EOR Oper	4D 77
Absolute, X	EOR Oper, X	5D 93
Absolute, Y	EOR Oper, Y	59 89
(Indirect, X)	EOR (Oper, X)	41 65
(Indirect), Y	EOR (Oper), Y	51 81

INC**INC INCREMENT MEMORY BY ONE**Operation: $M + 1 \rightarrow M$

N Z C I D V

✓ ✓ — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Zero Page	INC Oper	E6 230
Zero Page, X	INC Oper, X	F6 246
Absolute	INC Oper	EE 238
Absolute, X	INC Oper, X	FE 254

INX**INX INCREMENT INDEX X BY ONE**Operation: $X + 1 \rightarrow X$

N Z C I D V

✓ ✓ — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	INX	E8 232

INY**INY INCREMENT INDEX Y BY ONE**Operation: $Y + 1 \rightarrow Y$

N Z C I D V

✓ ✓ — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	INY	C8 200

JMP**JMP JUMP TO NEW LOCATION**

Operation: $(PC + 1) \rightarrow PCL$
 $(PC + 2) \rightarrow PCH$

N Z C I D V
 — — — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Absolute	JMP	Oper
Indirect	JMP	(Oper)

JSR**JSR JUMP TO NEW LOCATION SAVING RETURN ADDRESS**

Operation: $PC + 2 \downarrow, (PC + 1) \rightarrow PCL$
 $(PC + 2) \rightarrow PCH$

N Z C I D V
 — — — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Absolute	JSR	Oper

LDA**LDA LOAD ACCUMULATOR WITH MEMORY**Operation: $M \rightarrow A$

N Z C I D V

✓ ✓ — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Immediate	LDA	# Oper
Zero Page	LDA	Oper
Zero Page, X	LDA	Oper, X
Absolute	LDA	Oper
Absolute, X	LDA	Oper, X
Absolute, Y	LDA	Oper, Y
(Indirect, X)	LDA	(Oper, X)
(Indirect), Y	LDA	(Oper), Y

LDX**LDX LOAD INDEX X WITH MEMORY**Operation: $M \rightarrow X$

N Z C I D V

✓ ✓ — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Immediate	LDX	# Oper
Zero Page	LDX	Oper
Zero Page, Y	LDX	Oper, Y
Absolute	LDX	Oper
Absolute, Y	LDX	Oper, Y

LDY**LDY LOAD INDEX Y WITH MEMORY**

Operation: M → Y

N Z C I D V

✓ ✓ — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Immediate	LDY # Oper	A0 160
Zero Page	LDY Oper	A4 164
Zero Page, X	LDY Oper, X	B4 180
Absolute	LDY Oper	AC 172
Absolute, X	LDY Oper, X	BC 188

LSR**LSR SHIFT RIGHT ONE BIT (MEMORY OR ACCUMULATOR)**

Operation: Ø → [7 6 5 4 3 2 1 Ø] → C

N Z C I D V

Ø ✓ ✓ — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Accumulator	LSR A	4A 74
Zero Page	LSR Oper	46 70
Zero Page, X	LSR Oper, X	56 86
Absolute	LSR Oper	4E 78
Absolute, X	LSR Oper, X	5E 94

NOP**NOP NO OPERATION**

Operation: No Operation (2 cycles)

N Z C I D V

— — — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	NOP	EA 234

ORA**ORA "OR" MEMORY WITH ACCUMULATOR**

Operation: A V M → A

N	Z	C	I	D	V
✓	✓	—	—	—	—

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Immediate	ORA	# Oper
Zero Page	ORA	Oper
Zero Page, X	ORA	Oper, X
Absolute	ORA	Oper
Absolute, X	ORA	Oper, X
Absolute, Y	ORA	Oper, Y
(Indirect, X)	ORA	(Oper, X)
(Indirect), Y	ORA	(Oper), Y

PHA**PHA PUSH ACCUMULATOR ON STACK**

Operation: A ↓

N	Z	C	I	D	V
—	—	—	—	—	—

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	PHA	48 <u>72</u>

PHP**PHP PUSH PROCESSOR STATUS ON STACK**

Operation: P ↓

N	Z	C	I	D	V
—	—	—	—	—	—

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	PHP	08 <u>8</u>

PLA**PLA PULL ACCUMULATOR FROM STACK**

Operation: A ↑

N	Z	C	I	D	V
✓	✓	—	—	—	—

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	PLA	68 <u>104</u>

PLP**PLP PULL PROCESSOR STATUS FROM STACK**

Operation: P↑


N Z C I D V

From Stack

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	PLP	28 40

ROL**ROL ROTATE ONE BIT LEFT (MEMORY OR ACCUMULATOR)**

Operation:

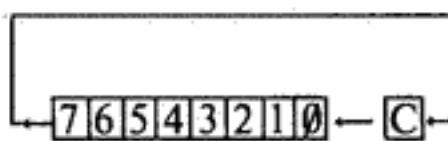


N Z C I D V

✓ ✓ ✓ — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Accumulator	ROL	A 2A 42
Zero Page	ROL	Oper 26 38
Zero Page, X	ROL	Oper, X 36 54
Absolute	ROL	Oper 2E 46
Absolute, X	ROL	Oper, X 3E 62

ROR**ROR ROTATE ONE BIT RIGHT (MEMORY OR ACCUMULATOR)**

Operation:

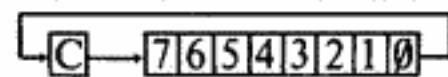

N Z C I D V

✓ ✓ ✓ — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Accumulator	ROR	A 6A 106
Zero Page	ROR	Oper 66 102
Zero Page, X	ROR	Oper, X 76 118
Absolute	ROR	Oper 6E 110
Absolute, X	ROR	Oper, X 7E 126

RTI**RTI RETURN FROM INTERRUPT**

Operation: P↑ PC↑

N Z C I D V

From Stack

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	RTI	40 64

RTS**RTS RETURN FROM SUBROUTINE**Operation: PC \uparrow , PC + 1 \rightarrow PC

N Z C I D V

— — — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	RTS	60 96

SBC**SBC SUBTRACT MEMORY FROM ACCUMULATOR WITH BORROW**Operation: A - M - \bar{C} \rightarrow A

N Z C I D V

✓ ✓ ✓ — — ✓

Note: \bar{C} = Borrow

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Immediate	SBC # Oper	E9 233
Zero Page	SBC Oper	E5 229
Zero Page, X	SBC Oper, X	F5 245
Absolute	SBC Oper	ED 237
Absolute, X	SBC Oper, X	FD 253
Absolute, Y	SBC Oper, Y	F9 249
(Indirect, X)	SBC (Oper, X)	E1 225
(Indirect), Y	SBC (Oper), Y	F1 241

SEC**SEC SET CARRY FLAG**Operation: 1 \rightarrow C

N Z C I D V

— — 1 — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	SEC	38 56

SED**SED SET DECIMAL MODE**Operation: 1 \rightarrow D

N Z C I D V

— — — — 1 —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	SED	F8 248

SEI**SEI SET INTERRUPT DISABLE STATUS**Operation: $1 \rightarrow I$

N	Z	C	I	D	V
—	—	—	1	—	—

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	SEI	78 /20

STA**STA STORE ACCUMULATOR IN MEMORY**Operation: $A \rightarrow M$

N	Z	C	I	D	V
—	—	—	—	—	—

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Zero Page	STA	Oper 85 /33
Zero Page, X	STA	Oper, X 95 /49
Absolute	STA	Oper 8D /41
Absolute, X	STA	Oper, X 9D /57
Absolute, Y	STA	Oper, Y 99 /53
(Indirect, X)	STA	(Oper, X) 81 /29
(Indirect), Y	STA	(Oper), Y 91 /45

STX**STX STORE INDEX X IN MEMORY**Operation: $X \rightarrow M$

N	Z	C	I	D	V
—	—	—	—	—	—

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Zero Page	STX	Oper 86 /34
Zero Page, Y	STX	Oper, Y 96 /50
Absolute	STX	Oper 8E /42

STY**STY STORE INDEX Y IN MEMORY**Operation: $Y \rightarrow M$

N	Z	C	I	D	V
—	—	—	—	—	—

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Zero Page	STY	Oper 84 /32
Zero Page, X	STY	Oper, X 94 /48
Absolute	STY	Oper 8C /40

TAX**TAX TRANSFER ACCUMULATOR TO INDEX X**

Operation: A → X

N	Z	C	I	D	V
✓	✓	—	—	—	—

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	TAX	AA 170

TAY**TAY TRANSFER ACCUMULATOR TO INDEX Y**

Operation: A → Y

N	Z	C	I	D	V
✓	✓	—	—	—	—

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	TAY	A8 168

TYA**TYA TRANSFER INDEX Y TO ACCUMULATOR**

Operation: Y → A

N	Z	C	I	D	V
✓	✓	—	—	—	—

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	TYA	98 152

TSX**TSX TRANSFER STACK POINTER TO INDEX X**

Operation: S → X

N	Z	C	I	D	V
✓	✓	—	—	—	—

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	TSX	BA 186

TXA**TXA TRANSFER INDEX X TO ACCUMULATOR**

Operation: X → A

N	Z	C	I	D	V
✓	✓	—	—	—	—

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	TXA	8A 138

TXS**TSX TRANSFER INDEX X TO STACK POINTER**Operation: $X \rightarrow S$

N Z C I D V

— — — — — —

ADDRESSING MODE	ASSEMBLY LANGUAGE FORM	OP CODE
Implied	TXS	9A 154

APPENDIX H

OSI 65V MONITOR MOD 2 LISTING

ASSEM

10 0000			; OSI 65U PROM MONITOR MOD 2		
20 0000			;		
30 0000			FLAG=\$FB		
40 0000			DAT=\$FC		
50 0000			PNTL=\$FE		
60 0000			PNTH=\$FF		
70 0000			;		
80 FE00			*=\$FE00		
90 FE00	A228	VM	LDX	*\$28	INITIALIZATION
100 FE02	9A		TXS		
110 FE03	D8		CLD		
120 FE04	AD06FB		LDA	\$FB06	
130 FE07	A9FF		LDA	#\$FF	
140 FE09	8D05FB		STA	\$FB05	
150 FE0C	A2D8		LDX	#\$D8	
160 FE0E	A9D0		LDA	#\$D0	
170 FE10	85FF		STA	PNTH	
180 FE12	A900		LDA	#0	
190 FE14	85FE		STA	PNTL	
200 FE16	85FB		STA	FLAG	
210 FE18	A8		TAY		
220 FE19	A920		LDA	#'	
230 FE1B	91FE	VM1	STA	(PNTL),Y	
240 FE1D	C8		INY		
250 FE1E	D0FB		BNE	VM1	
260 FE20	E6FF		INC	PNTH	
270 FE22	E4FF		CPX	PNTH	
280 FE24	D0F5		BNE	VM1	
290 FE26	84FF		STY	PNTH	
300 FE28	F019		BEQ	IN	
310 FE2A					
320 FE2A	20E9FE	ADDR	JSR	INPUT	ADDRESS MODE
330 FE2D	C92F		CMP	#'/	
340 FE2F	F01E		BEQ	DATA	
350 FE31	C947		CMP	#'G	
360 FE33	F017		BEQ	GO	
370 FE35	C94C		CMP	#'L	
380 FE37	F043		BEQ	LOAD	
390 FE39	2093FE		JSR	LEGAL	
400 FE3C	30EC		BMI	ADDR	
410 FE3E	A202		LDX	#2	
420 FE40	20DAFE		JSR	ROLL	
430 FE43	B1FE	IN	LDA	(PNTL),Y	
440 FE45	85FC		STA	DAT	
450 FE47	20ACFE		JSR	OUTPUT	
460 FE4A	D0DE		BNE	ADDR	

ASSEM

470 FE4C						
480 FE4C	6CFE00	GO	JMP	(PNTL)		
490 FE4F						
500 FE47	20E9FE	DATA	JSR	INPUT	DATA MODE	
510 FE52	C92E		CMP	#'		
520 FE54	F0D4		BEQ	ADDR		
530 FE56	C90D		CMP	#\$D		
540 FE58	D00F		BNE	DAT4		
550 FE5A	E6FE		INC	PNTL		
560 FE5C	D002		BNE	DAT3		
570 FE5E	E6FF		INC	PNTH		
580 FE60	A000	DAT3	LDY	#0		
590 FE62	B1FE		LDA	(PNTL),Y		
600 FE64	85FC		STA	DAT		
610 FE66	4C77FE		JMP	INNER		
620 FE69	2093FE	DAT4	JSR	LEGAL		
630 FE6C	30E1		BMI	DATA		
640 FE6E	A200		LDX	#0		
650 FE70	20DAFE		JSR	ROLL		
660 FE73	A5FC		LDA	DAT		
670 FE75	91FE		STA	(PNTL),Y		
680 FE77	20ACFE	INNER	JSR	OUTPUT		
690 FE7A	D0D3		BNE	DATA		
700 FE7C						
710 FE7C	85FB	LOAD	STA	FLAG	KICK INPUT DEVICE FLAG	
720 FE7E	F0CF		BEQ	DATA		
730 FE80						
740 FE80	AD00FC	OTHER	LDA	\$FC00	SERIAL INPUT SUB.	
750 FE83	4A		LSR	A	(FOR AUDIO CASSETTE)	
760 FE84	90FA		BCC	OTHER		
770 FE86	AD01FC		LDA	\$FC01		
780 FE89	EAEEAA		NOP	NOP	NOP	
790 FE8C	297F		AND	#\$7F		
800 FE8E	60		RTS			
810 FE8F						
820 FE8F	00		.BYTE	0,0,0,0	EXCESS ROOM	
820 FE90	00					
820 FE91	00					
820 FE92	00					
830 FE93						
840 FE93	C930	LEGAL	CMP	#'0	IGNORE NON HEX CHAR.	
850 FE95	3012		BMI	FAIL		
860 FE97	C93A		CMP	#':		
870 FE99	300B		BMI	OK		
880 FE9B	C941		CMP	#'A		
890 FE9D	300A		BMI	FAIL		
900 FE9F	C947		CMP	#'G		
910 FEA1	1006		BPL	FAIL		
920 FEA3	38		SEC			
930 FEA4	E907		SBC	#7		
940 FEA6	290F	OK	AND	#\$F		
950 FEA8	60		RTS			
960 FEA9	A980	FAIL	LDA	#\$80		
970 FEAB	60		RTS			
980 FEAC						

ASSEM

990 FEAC A203	OUTPUT	LDX #3	OUTPUT LLLL DD
1000 FEAЕ A000		LDY #0	ONTO SCREEN
1010 FEB0 B5FC	OUI	LDA DAT, X	
1020 FEB2 4A		LSR A	
1030 FEB3 4A		LSR A	
1040 FEB4 4A		LSR A	
1050 FEB5 4A		LSR A	
1060 FEB6 20CAFE		JSR DIGIT	
1070 FEB9 B5FC		LDA DAT,X	
1080 FEBB 20CAFE		JSR DIGIT	
1090 FEBE CA		DEX	
1100 FEBF 10EF		BPL OUI	
1110 FEC1 A920		LDA #'	
1120 FEC3 8DCAD0		STA \$D0CA	
1130 FEC6 8DCBD0		STA \$D0CB	
1140 FEC9 60		RTS	
1150 FECA			
1160 FECA 290F	DIGIT	AND #\$F	OUTPUT 1 DIGIT TO SCREEN
1170 FECC 0930		ORA #\$30	
1180 FECE C93A		CMP #\$3A	
1190 FED0 3003		BMI HA1	
1200 FED2 18		CLC	
1210 FED3 6907		ADC #7	
1220 FED5 99C6D0	HA1	STA \$D0C6,Y	
1230 FED8 C8		INY	
1240 FED9 60		RTS	
1250 FEDA			
1260 FEDA A004	ROLL	LDY #4	MOVE LSD IN AC TO
1270 FEDC 0A		ASL A	LSD IN 2 BYTE NUM.
1280 FEDD 0A		ASL A	
1290 FEDE 0A		ASL A	
1300 FEDF 0A		ASL A	
1310 FEE0 2A	R01	ROL A	
1320 FEE1 36FC		ROL DAT,X	
1330 FEE3 36FD		ROL DAT+1,X	
1340 FEE5 88		DEY	
1350 FEE6 D0F8		BNE R01	
1360 FEE8 60		RTS	
1370 FEE9 A5FB		LDA FLAG	CASSETTE IN?
1380 FEEB D091		BNE \$FE7E	YES-GO DO ACIA INPUT
1390 FEED 4C00FD		JMP \$FD00	NO-GO POLL KB
1400 FEF0 A9FF	KBTEST	LDA #\$FF	KB TEST SUBR.
1410 FEF2 8D00DF		STA \$DF00	
1420 FEF5 AD00DF		LDA \$DF00	
1430 FEF8 60		RTS	
1440 FEF9 EA		NOP	
1450 FEFA 3001		.WORD \$130	NMI VECTOR
1460 FEFC 00FE		.WORD \$FE00	RESET VECTOR
1470 FEFE C001		WORD \$1C0	IRQ VECTOR
1480 FF00		.END	

APPENDIX I

BIBLIOGRAPHY

- 1.* How to Program Microcomputers
by William Barden
Howard W. Sams & Company, Inc.
Indianapolis, IN 46268
2. 6502 Software Gourmet Guide and Cookbook
by Robert Findley
SCELBI Publications
20 Hurlbut Street
Elmwood, CT 06110
3. The First Book of KIM
4. Programming a Microcomputer: 6502
by Caxton C. Foster
Addison Wesley Publishing Company, Inc.
Reading, MA 01867
5. 6502 Assembly Language Programming
by Lance Leventhal
Osborne/McGraw-Hill
6. MCS6500 Microcomputer Family Programming Manual
MOS Technology, Inc.
950 Rittenhouse Road
Norristown, PA 19401
7. MICRO: The 6502 Journal
P.O. Box 6502
Chelmsford, MA 01824
8. SY6500/MCS6500 Microcomputer Family Hardware Manual
Synertek
3050 Coronado Drive
Santa Clara, CA 95051
9. Programming the 6502 (Second Edition)
by Rodney Zaks
Sybex
2344 Sixth Street
Berkeley, CA 94710
10. 6502 Applications Book
by Rodney Zaks
Sybex
2344 Sixth Street
Berkeley, CA 94710

11. 6502 Games
by Rodney Zaks
Sybex
2344 Sixth Street
Berkeley, CA 94710
12. Programming & Interfacing The 6502, With Experiments
by Marvin L. De Jong
Howard W. Sams & Co., Inc.
4300 West 62nd Street
Indianapolis, IN 46268

* Available from OSI

APPENDIX J

65V MONITOR COMMAND SUMMARY

The OS-65V Monitor responds to the following key:

- 0-9,A-F Hex digits
 - . Change to Address Mode
 - / Change to Data Mode
- G Go to address shown on screen and execute code there
- RETURN Increment address (only in Data Mode)
- L Transfer control to audio cassette. This command enters the Data Mode, ignores the keyboard and listens only to the cassette port (if present). To transfer control back to the keyboard, press reset or load \$00FD with a \$00 via tape.

APPENDIX K

TWO-WAY ARITHMETIC LISTINGS

The following listings show one possible way to implement the Decimal-Hex and Hex-Decimal Converter programs from page 47. The four relocatable subroutines are included. The initial address of \$4000 was arbitrarily chosen as a convenient location for disk systems (cassette systems would typically use \$1000).

DECIMAL-HEX CONVERTER

4000	D8	CLD	
4001	A920	LDA	#\$20
4003	A000	LDY	#\$00
4005	A207	LDX	#\$07
4007	9DC6D0	STA	\$D0C6,X
400A	94E0	STY	\$E0,X
400C	CA	DEX	
400D	10F8	BPL	\$4007
400F	A2E0	LDX	#\$E0
4011	A040	LDY	#\$40
4013	A908	LDA	#\$08
4015	200041	JSR	\$4100
4018	20EDFE	JSR	\$FEED
401B	48	PHA	
401C	2093FE	JSR	\$FE93
401F	1003	BPL	\$4024
4021	68	PLA	
4022	50DD	BVC	\$4001
4024	48	PHA	
4025	A207	LDX	#\$07
4027	EA	NOP	
4028	B5E0	LDA	\$E0,X
402A	95E8	STA	\$E8,X
402C	CA	DEX	
402D	10F9	BPL	\$4028
402F	A009	LDY	#\$09
4031	A207	LDX	#\$07
4033	200042	JSR	\$4200
4036	88	DEY	
4037	D0F8	BNE	\$4031
4039	68	PLA	
403A	A207	LDX	#\$07
403C	EA	NOP	
403D	EA	NOP	
403E	EA	NOP	
403F	EA	NOP	
4040	EA	NOP	
4041	EA	NOP	
4042	EA	NOP	
4043	EA	NOP	
4044	200043	JSR	\$4300
4047	68	PLA	
4048	200044	JSR	\$4400
404B	EA	NOP	
404C	4C0F40	JMP	\$400F

The Decimal-Hex Converter program uses four subroutines: HEXTV, ADDN, ADD1 and SCROLL. The listings of these that follow are located to coincide with the calling routines on the previous page.

		HEXTV	
4100	85FF	STA	\$FF
4102	B500	LDA	\$00,X
4104	4A	LSR	A
4105	4A	LSR	A
4106	4A	LSR	A
4107	4A	LSR	A
4108	20CAFE	JSR	\$FECA
410B	B500	LDA	\$00,X
410D	20CAFE	JSR	\$FECA
4110	EA	NOP	
4111	E8	INX	
4112	C6FF	DEC	\$FF
4114	D0EC	BNE	\$4102
4116	60	RTS	
		ADDN	
4200	18	CLC	
4201	B5E0	LDA	\$E0,X
4203	75E8	ADC	\$E8,X
4205	95E0	STA	\$E0,X
4207	CA	DEX	
4208	10F7	BPL	\$4201
420A	60	RTS	
		ADD1	
4300	18	CLC	
4301	75E0	ADC	\$E0,X
4303	95E0	STA	\$E0,X
4305	CA	DEX	
4306	A900	LDA	#\$00
4308	B0F7	BCS	\$4301
430A	60	RTS	
		SCROLL	
4400	A000	LDY	#\$00
4402	48	PHA	
4403	C8	INY	
4404	B1F8	LDA	(\$F8),Y
4406	88	DEY	
4407	91F8	STA	(\$F8),Y
4409	C8	INY	
440A	C4FA	CPY	\$FA
440C	D0F5	BNE	\$4403
440E	68	PLA	
440F	91F8	STA	(\$F8),Y
4411	60	RTS	

Make these changes to the Decimal-Hex Converter code on page 81 to complete the transition into Hex-Decimal Converter. The subroutines will remain unchanged.

4027	F8	SED	
402F	A00F	LDY	#\$0F
403C	D8	CLD	
403D	C90A	CMP	#\$0A
403F	9002	BCC	\$4043
4041	6905	ADC	#\$05
4043	F8	SED	
404B	D8	CLD	

INDEX

A

Absolute Addressing Mode	17, 18
Absolute, Indexed X (Absolute, X).....	17, 18
Accumulator.....	13
ADC.....	37, 43, 60
Addition.....	37
Address	3
Addressing Mode.....	4, 13
Algorithm	2
AND.....	41, 44, 60
Arithmetic Shift.....	40
ASCII Code.....	7, 51
ASL.....	40, 61
Assembler.....	14
Assembly.....	14

B

BCC.....	21, 61
BCD.....	8, 47
BCS.....	21, 61
BEQ.....	21, 61
Binary Code.....	7, 8
Bit.....	7
BIT.....	44, 61
BMI.....	21, 61
BNE.....	21, 62
BPL.....	21, 62
Branch.....	6, 18, 21, 22
BRK.....	63
BVC.....	63
BVS.....	63
Byte	3, 7

C

C (flag).....	21, 37
Carry Bit.....	18, 21
CLC.....	37, 63
CLD	47, 63
CLI.....	64
CLV.....	64
CMP	21, 64
Coding.....	5, 12
Compare Instructions	22
Compiler	13
Conditional Branch	22
CPX.....	21, 64
CPY.....	21, 65

D

D (flag)	47
Data Mode	4
Debugging	14, 27

DEC	28, 65
Decimal Mode	47
DEX	28, 65
DEY	28, 65
Disassembly Table.....	34
Displacement Byte.....	22

E

Effective Address	13, 17
EOR	43, 44, 66
"Executive-in-a box"	19

F

Flag	17, 21
Flag (clear)	21
Flag (set)	21
Flowchart	6

G

"Good Listener"	12, 14
-----------------------	--------

H

Hardware	3
Hexadecimal (hex)	4, 9
High Byte	17

I

Immediate Addressing Mode	17
Immediate Operand	17, 18
INC	28, 66
Indexed Indirect Address Mode (IND,X)	50
Indexing Registers	13
Indirect Addressing	22
Indirect Indexed Mode (IND),Y	45
Input Data	2
Instruction	3
Instruction Register	18
Instruction Set	12
Interpreter	13
INX	28, 66
INY	28, 66

J

JMP	17, 21, 22, 67
JSR	67

L

Label	17
LDA	16, 67
LDX	16, 67

LDY	16, 68
LIFO	31
Linking	49
Loader	49
Logical Shift	41
Loop	6, 27
Low Byte	17
LSR	40, 68

M

Machine Language	2
Mash	43
Memory	3
Mnemonic	14, 16, 53
Monitor	2

N

N (flag)	21, 28
NOP	18, 68

O

Object Code	2
Object Language	2
Octal	9
Opcode	13, 16
Operand	13
OR	4, 43
ORA	44, 69

P

P (flag)	3, 32, 47
Page (of memory)	19
PHA	32, 69
PHL	32, 69
PLA	32, 69
PLP	32, 70
Port	33
Program	2
Program Counter (PC)	3, 17, 18
Pull	31
Push	31

R

Radix	10
RAM	3
Registers	3, 13
Relative Addressing Mode	22
Relocatable	40, 49
Return Address	33
ROL	40, 70
ROM	3

ROR	40
RTI	70
RTS	71

S

S (stack Pointer)	31
SBC	37
SEC	71
SED	47, 71
SEI	32, 72
Shift	40
Software	3
Source Code	2
Source Language	2
STA	16, 17, 73
Stack	31
Stack Pointer	31
STX	16, 72
STY	16, 72
Subroutine	33, 45
Subtraction	37

T

TAX	73
TAY	73
Time Delay	45
"Total Mystery"	36
TSX	32, 75
Two's Complement	24, 26, 40, 47
TXA	73
TXS	32, 74
TYA	73

U

Unconditional Branch	22
----------------------	----

V

V (flag)	21
----------	----

X

X-Register	13
------------	----

Y

Y-Register	13
------------	----

Z

Z (flag)	21, 28, 43
Zero Page	20
Zero Page Addressing Mode (Z, page)	19
Zero Page Indexed (ZPAGE,X and ZPAGE,Y)	19