Optimizing subroutines in assembly language An optimization guide for x86 platforms

By Agner Fog. Copenhagen University College of Engineering. Copyright © 1996 - 2009. Last updated 2009-05-03.

Contents	
1 Introduction	
1.1 Reasons for using assembly code	5
1.2 Reasons for not using assembly code	5
1.3 Microprocessors covered by this manual	6
1.4 Operating systems covered by this manual	
2 Before you start	
2.1 Things to decide before you start programming	
2.2 Make a test strategy	
2.3 Common coding pitfalls	9
3 The basics of assembly coding	
3.1 Assemblers available	11
3.2 Register set and basic instructions	
3.3 Addressing modes	
3.4 Instruction code format	
3.5 Instruction prefixes	
4 ABI standards	
4.1 Register usage	
4.2 Data storage	
4.3 Function calling conventions	
4.4 Name mangling and name decoration	
4.5 Function examples	
5 Using intrinsic functions in C++	
5.1 Using intrinsic functions for system code	
5.2 Using intrinsic functions for instructions not available in standard C++	
5.3 Using intrinsic functions for vector operations	
5.4 Availability of intrinsic functions	
6 Using inline assembly in C++	
6.1 MASM style inline assembly	
6.2 Gnu style inline assembly	
7 Using an assembler	
7.1 Static link libraries	
7.2 Dynamic link libraries	
7.3 Libraries in source code form	
7.4 Making classes in assembly	
7.5 Thread-safe functions	49
7.6 Makefiles	
8 Making function libraries compatible with multiple compilers and platforms	
8.1 Supporting multiple name mangling schemes	
8.2 Supporting multiple calling conventions in 32 bit mode	
8.3 Supporting multiple calling conventions in 64 bit mode	
8.4 Supporting different object file formats	56
8.5 Supporting other high level languages	
9 Optimizing for speed	
9.1 Identify the most critical parts of your code	58
9.2 Out of order execution	

9.3 Instruction fetch, decoding and retirement	
9.4 Instruction latency and throughput	
9.5 Break dependency chains	
9.6 Jumps and calls	
10 Optimizing for size	71
10.1 Choosing shorter instructions	
10.2 Using shorter constants and addresses	73
10.3 Reusing constants	74
10.4 Constants in 64-bit mode	
10.5 Addresses and pointers in 64-bit mode	75
10.6 Making instructions longer for the sake of alignment	76
11 Optimizing memory access	
11.1 How caching works	
11.2 Trace cache	
11.3 Alignment of data	
11.4 Alignment of code	
11.5 Organizing data for improved caching	
11.6 Organizing code for improved caching	
11.7 Cache control instructions	
12 Loops	
12.1 Minimize loop overhead	
12.2 Induction variables	
12.3 Move loop-invariant code	
12.4 Find the bottlenecks	
12.5 Instruction fetch, decoding and retirement in a loop	
12.6 Distribute µops evenly between execution units	
12.7 An example of analysis for bottlenecks on PM	
12.8 Same example on Core2	
12.9 Loop unrolling	
12.10 Optimize caching	
12.12 Analyzing dependences	
12.13 Loops on processors without out-of-order execution	
12.14 Macro loops	
13 Vector programming	
•	
13.2 Using vector instructions with other types of data than they are in	
13.3 Shuffling data	
13.4 Generating constants	
13.5 Accessing unaligned data	
13.6 Using AVX instruction set and YMM registers	
13.7 Vector operations in general purpose registers	
14 Multithreading	
15 CPU dispatching	
15.1 Checking for operating system support for XMM and YMM registed	
16 Problematic Instructions	
16.1 LEA instruction (all processors)	
16.2 INC and DEC (all Intel processors)	
16.3 XCHG (all processors)	
16.4 Shifts and rotates (P4)	
16.5 Rotates through carry (all processors)	
16.6 Bit test (all processors)	
16.7 LAHF and SAHF (all processors)	
16.8 Integer multiplication (all processors)	
16.9 Division (all processors)	
16.10 String instructions (all processors)	
16.11 WAIT instruction (all processors)	
16.12 FCOM + FSTSW AX (all processors)	142
2	
-	

16.13 FPREM (all processors)	143
16.14 FRNDINT (all processors)	143
16.15 FSCALE and exponential function (all processors)	
16.16 FPTAN (all processors)	
16.17 FSQRT (SSE processors)	
16.18 FLDCW (Most Intel processors)	145
17 Special topics	
17.1 XMM versus floating point registers (Processors with SSE)	
17.2 MMX versus XMM registers (Processors with SSE2)	147
17.3 XMM versus YMM registers (Processors with AVX)	147
17.4 Freeing floating point registers (all processors)	148
17.5 Transitions between floating point and MMX instructions (Processors with MMX).	148
17.6 Converting from floating point to integer (All processors)	148
17.7 Using integer instructions for floating point operations	150
17.8 Using floating point instructions for integer operations	152
17.9 Moving blocks of data (All processors)	153
17.10 Self-modifying code (All processors)	
18 Measuring performance	154
18.1 Testing speed	154
18.2 The pitfalls of unit-testing	156
19 Literature	156

1 Introduction

This is the second in a series of five manuals:

- 1. Optimizing software in C++: An optimization guide for Windows, Linux and Mac platforms.
- 2. Optimizing subroutines in assembly language: An optimization guide for x86 platforms.
- 3. The microarchitecture of Intel and AMD CPU's: An optimization guide for assembly programmers and compiler makers.
- 4. Instruction tables: Lists of instruction latencies, throughputs and micro-operation breakdowns for Intel and AMD CPU's.
- 5. Calling conventions for different C++ compilers and operating systems.

The latest versions of these manuals are always available from www.agner.org/optimize. Copyright conditions are listed in manual 5.

The present manual explains how to combine assembly code with a high level programming language and how to optimize CPU-intensive code for speed by using assembly code.

This manual is intended for advanced assembly programmers and compiler makers. It is assumed that the reader has a good understanding of assembly language and some experience with assembly coding. Beginners are advised to seek information elsewhere and get some programming experience before trying the optimization techniques described here. I can recommend the various introductions, tutorials, discussion forums and newsgroups on the Internet (see links from www.agner.org/optimize) and the book "Introduction to 80x86 Assembly Language and Computer Architecture" by R. C. Detmer, 2. ed. 2006.

The present manual covers all platforms that use the x86 instruction set. This instruction set is used by most microprocessors from Intel and AMD. Operating systems that can use this instruction set include DOS (16 and 32 bits), Windows (16, 32 and 64 bits), Linux (32 and 64 bits), FreeBSD/Open BSD (32 and 64 bits), and Intel-based Mac OS (32 bits).

Optimization techniques that are not specific to assembly language are discussed in manual 1: "Optimizing software in C++". Details that are specific to a particular microprocessor are covered by manual 3: "The microarchitecture of Intel and AMD CPU's". Tables of instruction timings etc. are provided in manual 4: "Instruction tables: Lists of instruction latencies, throughputs and micro-operation breakdowns for Intel and AMD CPU's". Details about calling conventions for different operating systems and compilers are covered in manual 5: "Calling conventions for different C++ compilers and operating systems".

Programming in assembly language is much more difficult than high-level language. Making bugs is very easy, and finding them is very difficult. Now you have been warned! Please don't send your programming questions to me. Such mails will not be answered. There are various discussion forums on the Internet where you can get answers to your programming questions if you cannot find the answers in the relevant books and manuals.

Good luck with your hunt for nanoseconds!

1.1 Reasons for using assembly code

Assembly coding is not used as much today as previously. However, there are still reasons for learning and using assembly code. The main reasons are:

- Educational reasons. It is important to know how microprocessors and compilers work at the instruction level in order to be able to predict which coding techniques are most efficient, to understand how various constructs in high level languages work, and to track hard-to-find errors.
- 2. Debugging and verifying. Looking at compiler-generated assembly code or the disassembly window in a debugger is useful for finding errors and for checking how well a compiler optimizes a particular piece of code.
- 3. Making compilers. Understanding assembly coding techniques is necessary for making compilers, debuggers and other development tools.
- 4. Embedded systems. Small embedded systems have fewer resources than PC's and mainframes. Assembly programming can be necessary for optimizing code for speed or size in small embedded systems.
- 5. Hardware drivers and system code. Accessing hardware, system control registers etc. may sometimes be difficult or impossible with high level code.
- 6. Accessing instructions that are not accessible from high level language. Certain assembly instructions have no high-level language equivalent.
- 7. Self-modifying code. Self-modifying code is generally not profitable because it interferes with efficient code caching. It may, however, be advantageous for example to include a small compiler in math programs where a user-defined function has to be calculated many times.
- 8. Optimizing code for size. Storage space and memory is so cheap nowadays that it is not worth the effort to use assembly language for reducing code size. However, cache size is still such a critical resource that it may be useful in some cases to optimize a critical piece of code for size in order to make it fit into the code cache.
- Optimizing code for speed. Modern C++ compilers generally optimize code quite well in most cases. But there are still many cases where compilers perform poorly and where dramatic increases in speed can be achieved by careful assembly programming.
- 10. Function libraries. The total benefit of optimizing code is higher in function libraries that are used by many programmers.
- 11. Making function libraries compatible with multiple compilers and operating systems. It is possible to make library functions with multiple entries that are compatible with different compilers and different operating systems. This requires assembly programming.

The main focus in this manual is on optimizing code for speed, though some of the other topics are also discussed.

1.2 Reasons for not using assembly code

There are so many disadvantages and problems involved in assembly programming that it is advisable to consider the alternatives before deciding to use assembly code for a particular task. The most important reasons for *not* using assembly programming are:

- 1. Development time. Writing code in assembly language takes much longer time than in a high level language.
- 2. Reliability and security. It is easy to make errors in assembly code. The assembler is not checking if the calling conventions and register save conventions are obeyed. Nobody is checking for you if the number of PUSH and POP instructions is the same in all possible branches and paths. There are so many possibilities for hidden errors in assembly code that it affects the reliability and security of the project unless you have a very systematic approach to testing and verifying.
- 3. Debugging and verifying. Assembly code is more difficult to debug and verify because there are more possibilities for errors than in high level code.
- 4. Maintainability. Assembly code is more difficult to modify and maintain because the language allows unstructured spaghetti code and all kinds of dirty tricks that are difficult for others to understand. Thorough documentation and a consistent programming style is needed.
- 5. Portability. Assembly code is very platform-specific. Porting to a different platform is difficult.
- 6. System code can use intrinsic functions instead of assembly. The best modern C++ compilers have intrinsic functions for accessing system control registers and other system instructions. Assembly code is no longer needed for device drivers and other system code when intrinsic functions are available.
- 7. Application code can use intrinsic functions or vector classes instead of assembly. The best modern C++ compilers have intrinsic functions for vector operations and other special instructions that previously required assembly programming. It is no longer necessary to use old fashioned assembly code to take advantage of the XMM vector instructions. See page 33.
- 8. Compilers have been improved a lot in recent years. The best compilers are now quite good. It takes a lot of expertise and experience to optimize better than the best C++ compiler.

1.3 Microprocessors covered by this manual

The following families of x86-family microprocessors are discussed in this manual:

Microprocessor name	Abbreviation	
Intel Pentium (without name suffix)	P1	
Intel Pentium MMX	PMMX	
Intel Pentium Pro	PPro	
Intel Pentium II	P2	
Intel Pentium III	P3	
Intel Pentium 4 (NetBurst)	P4	
Intel Pentium 4 with EM64T, Pentium D, etc.	P4E	
Intel Pentium M, Core Solo, Core Duo	PM	
Intel Core 2	Core2	
AMD Athlon	AMD K7	
AMD Athlon 64, Opteron, etc., 64-bit	AMD K8	
AMD Family 10h, Phenom, third generation Opteron	AMD K10	
Table 1.1. Microprocessor families		

6

See manual 3: "The microarchitecture of Intel and AMD CPU's" for details.

1.4 Operating systems covered by this manual

The following operating systems can use x86 family microprocessors:

16 bit: DOS, Windows 3.x.

32 bit: Windows, Linux, FreeBSD, OpenBSD, NetBSD, Intel-based Mac OS X.

64 bit: Windows, Linux, FreeBSD, OpenBSD, NetBSD, Intel-based Mac OS X.

All the UNIX-like operating systems (Linux, BSD, Mac OS) use the same calling conventions, with very few exceptions. Everything that is said in this manual about Linux also applies to other UNIX-like systems, possibly including systems not mentioned here.

2 Before you start

2.1 Things to decide before you start programming

Before you start to program in assembly, you have to think about why you want to use assembly language, which part of your program you need to make in assembly, and what programming method to use. If you haven't made your development strategy clear, then you will soon find yourself wasting time optimizing the wrong parts of the program, doing things in assembly that could have been done in C++, attempting to optimize things that cannot be optimized further, making spaghetti code that is difficult to maintain, and making code that is full or errors and difficult to debug.

Here is a checklist of things to consider before you start programming:

- Never make the whole program in assembly. That is a waste of time. Assembly code should be used only where speed is critical and where a significant improvement in speed can be obtained. Most of the program should be made in C or C++. These are the programming languages that are most easily combined with assembly code.
- If the purpose of using assembly is to make system code or use special instructions that are not available in standard C++ then you should isolate the part of the program that needs these instructions in a separate function or class with a well defined functionality. Use intrinsic functions (see p. 33) if possible.
- If the purpose of using assembly is to optimize for speed then you have to identify the part of the program that consumes the most CPU time, possibly with the use of a profiler. Check if the bottleneck is file access, memory access, CPU instructions, or something else, as described in manual 1: "Optimizing software in C++". Isolate the critical part of the program into a function or class with a well-defined functionality.
- If the purpose of using assembly is to make a function library then you should clearly define the functionality of the library. Decide whether to make a function library or a class library. Decide whether to use static linking (.lib in Windows, .a in Linux) or dynamic linking (.dll in Windows, .so in Linux). Static linking is usually more efficient, but dynamic linking may be necessary if the library is called from languages such as C# and Visual Basic. You may possibly make both a static and a dynamic link version of the library.

- If the purpose of using assembly is to optimize an embedded application for size or speed then find a development tool that supports both C/C++ and assembly and make as much as possible in C or C++.
- Decide if the code is reusable or application-specific. Spending time on careful
 optimization is more justified if the code is reusable. A reusable code is most
 appropriately implemented as a function library or class library.
- Decide if the code should support multithreading. A multithreading application can take advantage of microprocessors with multiple cores. Any data that must be preserved from one function call to the next on a per-thread basis should be stored in a C++ class or a per-thread buffer supplied by the calling program.
- Decide if portability is important for your application. Should the application work in both Windows, Linux and Intel-based Mac OS? Should it work in both 32 bit and 64 bit mode? Should it work on non-x86 platforms? This is important for the choice of compiler, assembler and programming method.
- Decide if your application should work on old microprocessors. If so, then you may
 make one version for microprocessors with, for example, the SSE2 instruction set,
 and another version which is compatible with old microprocessors. You may even
 make several versions, each optimized for a particular CPU. It is recommended to
 make automatic CPU dispatching (see page 130).
- There are three assembly programming methods to choose between: (1) Use intrinsic functions and vector classes in a C++ compiler. (2) Use inline assembly in a C++ compiler. (3) Use an assembler. These three methods and their relative advantages and disadvantages are described in chapter 5, 6 and 7 respectively (page 33, 35 and 44 respectively).
- If you are using an assembler then you have to choose between different syntax dialects. It may be preferred to use an assembler that is compatible with the assembly code that your C++ compiler can generate.
- Make your code in C++ first and optimize it as much as you can, using the methods described in manual 1: "Optimizing software in C++". Make the compiler translate the code to assembly. Look at the compiler-generated code and see if there are any possibilities for improvement in the code.
- Highly optimized code tends to be very difficult to read and understand for others
 and even for yourself when you get back to it after some time. In order to make it
 possible to maintain the code, it is important that you organize it into small logical
 units (procedures or macros) with a well-defined interface and calling convention and
 appropriate comments. Decide on a consistent strategy for code comments and
 documentation.
- Save the compiler, assembler and all other development tools together with the source code and project files for later maintenance. Compatible tools may not be available in a few years when updates and modifications in the code are needed.

2.2 Make a test strategy

Assembly code is error prone, difficult to debug, difficult to make in a clearly structured way, difficult to read, and difficult to maintain, as I have already mentioned. A consistent test strategy can ameliorate some of these problems and save you a lot of time.

My recommendation is to make the assembly code as an isolated module, function, class or library with a well-defined interface to the calling program. Make it all in C++ first. Then make a test program which can test all aspects of the code you want to optimize. It is easier and safer to use a test program than to test the module in the final application.

The test program has two purposes. The first purpose is to verify that the assembly code works correctly in all situations. And the second purpose is to test the speed of the assembly code without invoking the user interface, file access and other parts of the final application program that may make the speed measurements less accurate and less reproducible.

You should use the test program repeatedly after each step in the development process and after each modification of the code.

Make sure the test program works correctly. It is quite common to spend a lot of time looking for an error in the code under test when in fact the error is in the test program.

There are different test methods that can be used for verifying that the code works correctly. A white box test supplies a carefully chosen series of different sets of input data to make sure that all branches, paths and special cases in the code are tested. A black box test supplies a series of random input data and verifies that the output is correct. A very long series of random data from a good random number generator can sometimes find rarely occurring errors that the white box test hasn't found.

The test program may compare the output of the assembly code with the output of a C++ implementation to verify that it is correct. The test should cover all boundary cases and preferably also illegal input data to see if the code generates the correct error responses.

The speed test should supply a realistic set of input data. A significant part of the CPU time may be spent on branch mispredictions in code that contains a lot of branches. The amount of branch mispredictions depends on the degree of randomness in the input data. You may experiment with the degree of randomness in the input data to see how much it influences the computation time, and then decide on a realistic degree of randomness that matches a typical real application.

An automatic test program that supplies a long stream of test data will typically find more errors and find them much faster than testing the code in the final application. A good test program will find most errors, but you cannot be sure that it finds all errors. It is possible that some errors show up only in combination with the final application.

2.3 Common coding pitfalls

The following list points out some of the most common programming errors in assembly code.

- 1. Forgetting to save registers. Some registers have callee-save status, for example EBX. These registers must be saved in the prolog of a function and restored in the epilog if they are modified inside the function. Remember that the order of POP instructions must be the opposite of the order of PUSH instructions. See page 27 for a list of callee-save registers.
- 2. Unmatched PUSH and POP instructions. The number of PUSH and POP instructions must be equal for all possible paths through a function. Example:

```
Example 2.1. Unmatched push/pop
push ebx
test ecx, ecx
jz Finished
```

```
pop ebx
Finished: ; Wrong! Label should be before pop ebx
ret
```

Here, the value of EBX that is pushed is not popped again if ECX is zero. The result is that the RET instruction will pop the former value of EBX and jump to a wrong address.

- 3. Using a register that is reserved for another purpose. Some compilers reserve the use of EBP or EBX for a frame pointer or other purpose. Using these registers for a different purpose in inline assembly can cause errors.
- 4. Stack-relative addressing after push. When addressing a variable relative to the stack pointer, you must take into account all preceding instructions that modify the stack pointer. Example:

```
Example 2.2. Stack-relative addressing
mov [esp+4], edi
push ebp
push ebx
cmp esi, [esp+4] ; Probably wrong!
```

Here, the programmer probably intended to compare ESI with EDI, but the value of ESP that is used for addressing has been changed by the two PUSH instructions, so that ESI is in fact compared with EBP instead.

5. Confusing value and address of a variable. Example:

```
Example 2.3. Value versus address (MASM syntax)
.data
MyVariable DD 0 ; Define variable

.code
mov eax, MyVariable ; Gets value of MyVariable
mov eax, offset MyVariable; Gets address of MyVariable
lea eax, MyVariable ; Gets address of MyVariable
mov ebx, [eax] ; Gets value of MyVariable through pointer
mov ebx, [100] ; Gets the constant 100 despite brackets
mov ebx, ds:[100] ; Gets value from address 100
```

- 6. Ignoring calling conventions. It is important to observe the calling conventions for functions, such as the order of parameters, whether parameters are transferred on the stack or in registers, and whether the stack is cleaned up by the caller or the called function. See page 27.
- 7. Function name mangling. A C++ code that calls an assembly function should use extern "C" to avoid name mangling. Some systems require that an underscore (_) is put in front of the name in the assembly code. See page 30.
- 8. Forgetting return. A function declaration must end with both RET and ENDP. Using one of these is not enough. The execution will continue in the code after the procedure if there is no RET.
- 9. Forgetting stack alignment. The stack pointer must point to an address divisible by 16 before any call statement, except in 16-bit systems and 32-bit Windows. See page 27.

- 10. Forgetting shadow space in 64-bit Windows. It is required to reserve 32 bytes of empty stack space before any function call in 64-bit Windows. See page 29.
- 11. Mixing calling conventions. The calling conventions in 64-bit Windows and 64-bit Linux are different. See page 27.
- 12. Forgetting to clean up floating point stack. All floating point stack registers that are used by a function must be cleared, typically with FSTP ST(0), before the function returns, except for ST(0) if it is used for return value. It is necessary to keep track of exactly how many floating point registers are in use. If a functions pushes more values on the floating point register stack than it pops, then the register stack will grow each time the function is called. An exception is generated when the stack is full. This exception may occur somewhere else in the program.
- 13. Forgetting to clear MMX state. A function that uses MMX registers must clear these with the EMMS instruction before any call or return.
- 14. Forgetting to clear YMM state. A function that uses YMM registers must clear these with the VZEROUPPER or VZEROALL instruction before any call or return.
- 15. Forgetting to clear direction flag. Any function that sets the direction flag with STD must clear it with CLD before any call or return.
- 16. Mixing signed and unsigned integers. Unsigned integers are compared using the JB and JA instructions. Signed integers are compared using the JL and JG instructions. Mixing signed and unsigned integers can have unintended consequences.
- 17. Forgetting to scale array index. An array index must be multiplied by the size of one array element. For example mov eax, MyIntegerArray[ebx*4].
- 18. Exceeding array bounds. An array with n elements is indexed from 0 to n 1, not from 1 to n. A defective loop writing outside the bounds of an array can cause errors elsewhere in the program that are hard to find.
- 19. Loop with ECX = 0. A loop that ends with the LOOP instruction will repeat 2^{32} times if ECX is zero. Be sure to check if ECX is zero before the loop.
- 20. Reading carry flag after INC or DEC. The INC and DEC instructions do not change the carry flag. Do not use instructions that read the carry flag, such as ADC, SBB, JC, JBE, SETA, etc. after INC or DEC. Use ADD and SUB instead of INC and DEC to avoid this problem.

3 The basics of assembly coding

3.1 Assemblers available

There are several assemblers available for the x86 instruction set, but currently none of them is good enough for universal recommendation. Assembly programmers are in the unfortunate situation that there is no universally agreed syntax for x86 assembly. Different assemblers use different syntax variants. The most common assemblers are listed below.

MASM

The Microsoft assembler is included with Microsoft C++ compilers. Free versions can sometimes be obtained by downloading the Microsoft Windows driver kit (WDK) or the platforms software development kit (SDK) or as an add-on to the free Visual C++ Express

Edition. MASM has been a de-facto standard in the Windows world for many years, and the assembly output of most Windows compilers uses MASM syntax. MASM has many advanced language features. The syntax is somewhat messy and inconsistent due to a heritage that dates back to the very first assemblers for the 8086 processor. Microsoft is still maintaining MASM in order to provide a complete set of development tools for Windows, but it is obviously not profitable and the maintenance of MASM is apparently kept at a minimum. New instruction sets are still added regularly, but the 64-bit version has several deficiencies. The newest version can run only when the compiler is installed and only in Windows XP or later. Version 6 and earlier can run in any system, including Linux with a Windows emulator. Such versions are circulating on the web.

<u>GAS</u>

The Gnu assembler is part of the Gnu Binutils package that is included with most distributions of Linux, BSD and Mac OS X. The Gnu compilers produce assembly output that goes through the Gnu assembler before it is linked. The Gnu assembler traditionally uses the AT&T syntax that works well for machine-generated code, but it is very inconvenient for human-generated assembly code. The AT&T syntax has the operands in an order that differs from all other x86 assemblers and from the instruction documentation published by Intel and AMD. It uses various prefixes like % and \$ for specifying operand types.

Fortunately, newer versions of the Gnu assembler has an option for using Intel syntax instead. The Gnu-Intel syntax is almost identical to MASM syntax. The Gnu-Intel syntax defines only the syntax for instruction codes, not for directives, functions, macros, etc. The directives still use the old Gnu-AT&T syntax. Specify .intel_syntax noprefix to use the Intel syntax. Specify .att_syntax prefix to return to the AT&T syntax before leaving inline assembly in C or C++ code.

The Gnu assembler is available for all platforms, but the Windows version is currently not fully up to date.

NASM

NASM is a free open source assembler with support for several platforms and object file formats. The syntax is more clear and consistent than MASM syntax. NASM has fewer high-level features than MASM, but it is sufficient for most purposes.

YASM

YASM is very similar to NASM and uses exactly the same syntax. YASM has turned out to be more versatile, stable and reliable than NASM in my tests and to produce better code. Does not support OMF format. YASM has often been the first assembler to support new instruction sets. YASM would be my best recommendation for a free multi-platform assembler if you don't need MASM syntax.

FASM

The Flat assembler is another open source assembler for multiple platforms. The syntax is not compatible with other assemblers. FASM is itself written in assembly language - an enticing idea, but unfortunately this makes the development and maintenance of it less efficient. FASM is currently not fully up to date with the latest instruction sets.

WASM

The WASM assembler is included with the Open Watcom C++ compiler. The syntax resembles MASM but is somewhat different. Not fully up to date.

JWASM

JWASM is a further development of WASM. It is fully compatible with MASM syntax, including advanced macro and high level directives. Does not currently support 64-bit mode. JWASM is a good choice if MASM syntax is desired.

TASM

Borland Turbo Assembler is included with CodeGear C++ Builder. It is compatible with MASM syntax except for some newer syntax additions. TASM is no longer maintained but is still available. It is obsolete and does not support current instruction sets.

HLA

High Level Assembler is actually a high level language compiler that allows assembly-like statements and produces assembly output. This was probably a good idea at the time it was invented, but today where the best C++ compilers support intrinsic functions, I believe that HLA is no longer needed.

Inline assembly

Microsoft and Intel C++ compilers support inline assembly using a subset of the MASM syntax. It is possible to access C++ variables, functions and labels simply by inserting their names in the assembly code. This is easy, but does not support C++ register variables. See page 35.

The Gnu assembler supports inline assembly with access to the full range of instructions and directives of the Gnu assembler in both Intel and AT&T syntax. The access to C++ variables from assembly uses a quite complicated method.

The Intel compilers for Linux and Mac systems support both the Microsoft style and the Gnu style of inline assembly.

Intrinsic functions in C++

This is the newest and most convenient way of combining low-level and high-level code. Intrinsic functions are high-level language representatives of machine instructions. For example, you can do a vector addition in C++ by calling the intrinsic function that is equivalent to an assembly instruction for vector addition. Furthermore, it is possible to define a vector class with an overloaded + operator so that a vector addition is obtained simply by writing +. Intrinsic functions are supported by Microsoft, Intel and Gnu compilers. See page 33 and manual 1: "Optimizing software in C++".

Which assembler to choose?

In most cases, the easiest solution is to use intrinsic functions in C++ code. The compiler can take care of most of the optimization so that the programmer can concentrate on choosing the best algorithm and organizing the data into vectors. System programmers can access system instructions by using intrinsic functions without having to use assembly language.

Where real low-level programming is needed, such as in highly optimized function libraries, you may use an assembler.

It may be preferred to use an assembler that is compatible with the C++ compiler you are using. This allows you to use the compiler for translating C++ to assembly, optimize the assembly code further, and then assemble it. If the assembler is not compatible with the syntax generated by the compiler then you may generate an object file with the compiler and disassemble the object file to the assembly syntax you need. The objconv disassembler supports several different syntax dialects.

The examples in this manual use MASM syntax, unless otherwise noted. The MASM syntax is described in Microsoft Macro Assembler Reference at msdn.microsoft.com.

See <u>www.agner.org/optimize</u> for links to various syntax manuals, coding manuals and discussion forums.

3.2 Register set and basic instructions

Registers in 16 bit mode

General purpose and integer registers

Full register bit 0 - 15	Partial register bit 8 - 15	Partial register bit 0 - 7
AX	AH	AL
BX	ВН	BL
CX	СН	CL
DX	DH	DL
SI		
DI		
BP		
SP		
Flags		
IP		

Table 3.1. General purpose registers in 16 bit mode.

The 32-bit registers are also available in 16-bit mode if supported by the microprocessor and operating system. The high word of ${\tt ESP}$ should not be used because it is not saved during interrupts.

Floating point registers

i loating point registers		
Full register		
bit 0 - 79		
ST(0)		
ST(1)		
ST(2)		
ST(3)		
ST(4)		
ST(5)		
ST(6)		
ST(7)		

Table 3.2. Floating point stack registers

MMX registers may be available if supported by the microprocessor. XMM registers may be available if supported by microprocessor and operating system.

Segment registers

Full register bit 0 - 15			
CS			
DS			
ES			
SS			

Table 3.3. Segment registers in 16 bit mode

Register FS and GS may be available.

Registers in 32 bit mode

General purpose and integer registers

Full register bit 0 - 31	Partial register bit 0 - 15	Partial register bit 8 - 15	Partial register bit 0 - 7
EAX	AX	AH	AL
EBX	BX	BH	BL
ECX	CX	CH	CL
EDX	DX	DH	DL
ESI	SI		
EDI	DI		
EBP	BP		
ESP	SP		
EFlags	Flags		
EIP	IP		

Table 3.4. General purpose registers in 32 bit mode

Floating point and 64-bit vector registers

Full register	Partial register
bit 0 - 79	bit 0 - 63
ST(0)	MMO
ST(1)	MM1
ST(2)	MM2
ST(3)	MM3
ST(4)	MM4
ST(5)	MM5
ST(6)	ММб
ST(7)	MM7

Table 3.5. Floating point and MMX registers

The MMX registers are only available if supported by the microprocessor. The ST and MMX registers cannot be used in the same part of the code. A section of code using MMX registers must be separated from any subsequent section using ST registers by executing an EMMS instruction.

128- and 256-bit integer and floating point vector registers

Full register bit 0 - 255	Full or partial register bit 0 - 127	
OMMY	XMM0	
YMM1	XMM1	
YMM2	XMM2	
YMM3	XMM3	
YMM4	XMM4	
YMM5	XMM5	
<u> ҮММ</u> б	XMM6	
YMM7	XMM7	

Table 3.6. XMM and YMM registers in 32 bit mode

The XMM registers are only available if supported both by the microprocessor and the operating system. Scalar floating point instructions use only 32 or 64 bits of the XMM registers for single or double precision, respectively. The YMM registers are expected to be available in 2010.

Segment registers

Full register bit 0 - 15
CS
DS
ES
FS
GS
SS
Table 3.7. Segment registers in 32 bit mode

Registers in 64 bit mode

General purpose and integer registers

Full register bit 0 - 63	Partial register bit 0 - 31	Partial register bit 0 - 15	Partial register bit 8 - 15	Partial register bit 0 - 7
RAX	EAX	AX	AH	AL
RBX	EBX	BX	BH	BL
RCX	ECX	CX	СН	CL
RDX	EDX	DX	DH	DL
RSI	ESI	SI		SIL
RDI	EDI	DI		DIL
RBP	EBP	BP		BPL
RSP	ESP	SP		SPL
R8	R8D	R8W		R8B
R9	R9D	R9W		R9B
R10	R10D	R10W		R10B
R11	R11D	R11W		R11B
R12	R12D	R12W		R12B
R13	R13D	R13W		R13B
R14	R14D	R14W		R14B
R15	R15D	R15W		R15B
RFlags		Flags		
RIP				

Table 3.8. Registers in 64 bit mode

The high 8-bit registers AH, BH, CH, DH can only be used in instructions that have no REX prefix.

Note that modifying a 32-bit partial register will set the rest of the register (bit 32-63) to zero, but modifying an 8-bit or 16-bit partial register does not affect the rest of the register. This can be illustrated by the following sequence:

There is a good reason for this inconsistency. Setting the unused part of a register to zero is more efficient than leaving it unchanged because this removes a false dependence on previous values. But the principle of resetting the unused part of a register cannot be extended to 16 bit and 8 bit partial registers because this would break the backwards compatibility with 32-bit and 16-bit modes.

The only instruction that can have a 64-bit immediate data operand is MOV. Other integer instructions can only have a 32-bit sign extended operand. Examples:

```
; Example 3.2. Immediate operands, full and sign extended mov rax, 11111111111111111 ; Full 64 bit immediate operand mov rax, -1 ; 32 bit sign-extended operand mov eax, Offfffffh ; 32 bit zero-extended operand add rax, 1 ; 8 bit sign-extended operand add rax, 100H ; 32 bit sign-extended operand add eax, 100H ; 32 bit operand. result is zero-extended mov rbx, 100000000H ; 64 bit immediate operand add rax, rbx ; Use an extra register if big operand
```

It is not possible to use a 16-bit sign-extended operand. If you need to add an immediate value to a 64 bit register then it is necessary to first move the value into another register if the value is too big for fitting into a 32 bit sign-extended operand.

Floating point and 64-bit vector registers

Full register bit 0 - 79	Partial register bit 0 - 63
ST(0)	MMO
ST(1)	MM1
ST(2)	MM2
ST(3)	MM3
ST(4)	MM4
ST(5)	MM5
ST(6)	MM6
ST(7)	MM7

Table 3.9. Floating point and MMX registers

The ST and MMX registers cannot be used in the same part of the code. A section of code using MMX registers must be separated from any subsequent section using ST registers by executing an EMMS instruction. The ST and MMX registers cannot be used in device drivers for 64-bit Windows.

128- and 256-bit integer and floating point vector registers

Full register bit 0 - 255	Full or partial register bit 0 - 127
0MMY	XMM0
YMM1	XMM1
YMM2	XMM2
YMM3	XMM3
YMM4	XMM4
YMM5	XMM5
YMM6	ХММб
YMM7	XMM7
YMM8	XMM8
YMM9	XMM9
YMM10	XMM10
YMM11	XMM11
YMM12	XMM12
YMM13	XMM13
YMM14	XMM14
YMM15	XMM15

Scalar floating point instructions use only 32 or 64 bits of the XMM registers for single or double precision, respectively. The YMM registers are expected to be available in 2010.

Segment registers

Full register	
---------------	--

bit 0 - 15	
CS	
FS	
GS	

Table 3.11. Segment registers in 64 bit mode

Segment registers are only used for special purposes.

3.3 Addressing modes

Addressing in 16-bit mode

16-bit code uses a segmented memory model. A memory operand can have any of these components:

- A segment specification. This can be any segment register or a segment or group name associated with a segment register. (The default segment is DS, except if BP is used as base register). The segment can be implied from a label defined inside a segment.
- A label defining a relocatable offset. The offset relative to the start of the segment is calculated by the linker.
- An immediate offset. This is a constant. If there is also a relocatable offset then the values are added.
- A base register. This can only be BX or BP.
- An index register. This can only be SI or DI. There can be no scale factor.

A memory operand can have all of these components. An operand containing only an immediate offset is not interpreted as a memory operand by the MASM assembler, even if it has a []. Examples:

```
; Example 3.3. Memory operands in 16-bit mode
MOV AX, DS:[100H] ; Address has segment and immediate offset
ADD AX, MEM[SI]+4 ; Has relocatable offset and index and immediate
```

Data structures bigger than 64 kb are handled in the following ways. In real mode and virtual mode (DOS): Adding 1 to the segment register corresponds to adding 10H to the offset. In protected mode (Windows 3.x): Adding 8 to the segment register corresponds to adding 10000H to the offset. The value added to the segment must be a multiple of 8.

Addressing in 32-bit mode

32-bit code uses a flat memory model in most cases. Segmentation is possible but only used for special purposes (e.g. thread environment block in FS).

A memory operand can have any of these components:

- A segment specification. Not used in flat mode.
- A label defining a relocatable offset. The offset relative to the FLAT segment group is calculated by the linker.
- An immediate offset. This is a constant. If there is also a relocatable offset then the values are added.

- A base register. This can be any 32 bit register.
- An index register. This can be any 32 bit register except ESP.
- A scale factor applied to the index register. Allowed values are 1, 2, 4, 8.

A memory operand can have all of these components. Examples:

```
; Example 3.4. Memory operands in 32-bit mode
mov eax, fs:[10H] ; Address has segment and immediate offset
add eax, mem[esi] ; Has relocatable offset and index
add eax, [esp+ecx*4+8]; Base, index, scale and immediate offset
```

Position-independent code in 32-bit mode

Position-independent code is required for making shared objects (* . so) in 32-bit Unix-like systems. The most common method for making position-independent code in 32-bit Linux and BSD is to use a global offset table (GOT) containing the addresses of all static objects. The GOT method is quite inefficient because the code has to fetch an address from the GOT every time it reads or writes data in the data segment. A faster method is to use an arbitrary reference point, as shown in the following example:

The only instruction that can read the instruction pointer in 32-bit mode is the <code>call</code> instruction. In example 3.5 we are using <code>call get_thunk_ecx</code> for reading the instruction pointer (eip) into <code>ecx. ecx</code> will then point to the first instruction after the call. This is our reference point, named <code>refpoint</code>. (<code>get_thunk_ecx</code> must be a separate function with its own return because a call without a return would cause mispredictions of subsequent returns). All objects in the data segment can now be addressed relative to <code>refpoint</code> with <code>ecx</code> as pointer.

This method is commonly used in Mac systems, where the mach-o file format supports references relative to an arbitrary point. Other file formats don't support this kind of reference, but it is possible to use a self-relative reference with an offset. The YASM and Gnu assemblers will do this automatically, while most other assemblers are unable to handle this situation. It is therefore necessary to use a YASM or Gnu assembler if you want to generate position-independent code in 32-bit mode with this method. The code may look strange in a debugger or disassembler, but it executes without any problems in all 32-bit x86 operating systems.

The GOT method would use the same reference point method as in example 3.5 for addressing the GOT, and then use the GOT to read the addresses of alpha and beta into other pointer registers. This is an unnecessary waste of time and registers because if we

can access the GOT relative to the reference point, then we can just as well access alpha and beta relative to the reference point.

The pointer tables used in switch/case statements can use the same reference point for the table and for the pointers in the table:

```
; Example 3.6. Position-independent switch, 32 bit, YASM syntax
SECTION .data
jumptable: dd casel-refpoint, case2-refpoint, case3-refpoint
SECTION .text
funcb: ; This function implements a switch statement
        mov eax, [esp+4] ; function parameter call get_thunk_ecx ; get ecx = eip
                                            ; ecx points here
refpoint:
               eax, 3
        cmp
        jnb case_default ; index out of range
mov eax, [ecx+eax*4+jumptable-refpoint] ; read table entry
; The jump addresses are relative to refpoint, get absolute address:
        add eax, ecx
               eax
        jmp
                                             ; jump to desired case
casel: ...
        ret
case2: ...
        ret
case3: ...
        ret
case_default:
        . . .
        ret
get thunk ecx: ; Function for reading instruction pointer
               ecx, [esp]
        ret
```

Addressing in 64-bit mode

64-bit code always uses a flat memory model. Segmentation is impossible except for FS and GS which are used for special purposes only (thread environment block, etc.).

There are several different addressing modes in 64-bit mode: RIP-relative, 32-bit absolute, 64-bit absolute, and relative to a base register.

RIP-relative addressing

This is the preferred addressing mode for static data. The address contains a 32-bit sign-extended offset relative to the instruction pointer. The address cannot contain any segment register or index register, and no base register other than RIP, which is implicit. Example:

```
; Example 3.7a. RIP-relative memory operand, MASM syntax
mov eax, [mem]

; Example 3.7b. RIP-relative memory operand, NASM/YASM syntax
default rel
mov eax, [mem]

; Example 3.7c. RIP-relative memory operand, Gas/Intel syntax
mov eax, [mem+rip]
```

The MASM assembler always generates RIP-relative addresses for static data when no explicit base or index register is specified. On other assemblers you must remember to specify relative addressing.

32-bit absolute addressing in 64 bit mode

A 32-bit constant address is sign-extended to 64 bits. This addressing mode works only if it is certain that all addresses are below 2³¹ (or above -2³¹ for system code).

It is safe to use 32-bit absolute addressing in Linux and BSD, where all addresses are below 2³¹ by default. It is unsafe in Windows DLL's because they might be relocated to any address. It will not work in Mac systems, where addresses are above 2³² by default.

Note that NASM, YASM and Gas assemblers can make 32-bit absolute addresses when you do not explicitly specify rip-relative addresses. You have to specify <code>default rel</code> in NASM/YASM or <code>[mem+rip]</code> in Gas to avoid 32-bit absolute addresses.

There is absolutely no reason to use absolute addresses for simple memory operands. Riprelative addresses make instructions shorter, they eliminate the need for relocation at load time, and they are safe to use in all systems.

Absolute addresses are needed only for accessing arrays where there is an index register, e.g.

```
; Example 3.8. 32 bit absolute addresses in 64-bit mode
mov al, [chararray + rsi]
mov ebx, [intarray + rsi*4]
```

This method can be used only if the address is guaranteed to be $< 2^{31}$, as explained above. See below for alternative methods of addressing static arrays.

The MASM assembler generates absolute addresses only when a base or index register is specified together with a memory label as in example 3.8 above.

The index register should preferably be a 64-bit register, not a 32-bit register. Segmentation is possible only with FS or GS.

64-bit absolute addressing

This uses a 64-bit absolute virtual address. The address cannot contain any segment register, base or index register. 64-bit absolute addresses can only be used with the MOV instruction, and only with AL, AX, EAX or RAX as source or destination.

```
; Example 3.9. 64 bit absolute address, YASM/NASM syntax
mov eax, dword [qword a]
```

This addressing mode is not supported by the MASM assembler, but it is supported by other assemblers.

Addressing relative to 64-bit base register

A memory operand in this mode can have any of these components:

- A base register. This can be any 64 bit integer register.
- An index register. This can be any 64 bit integer register except RSP.
- A scale factor applied to the index register. The only possible values are 1, 2, 4, 8.
- An immediate offset. This is a constant offset relative to the base register.

A base register is always needed for this addressing mode. The other components are optional. Examples:

```
; Example 3.10. Base register addressing in 64 bit mode
mov eax, [rsi]
add eax, [rsp + 4*rcx + 8]
```

This addressing mode is used for data on the stack, for structure and class members and for arrays.

Addressing static arrays in 64 bit mode

It is not possible to access static arrays with RIP-relative addressing and an index register. There are several possible alternatives.

The following examples address static arrays. The C++ code for this example is:

```
// Example 3.11a. Static arrays in 64 bit mode
// C++ code:
static int a[100], b[100];
for (int i = 0; i < 100; i++) {
   b[i] = -a[i];
}</pre>
```

The simplest solution is to use 32-bit absolute addresses. This is possible as long as the addresses are below 2^{31} .

```
; Example 3.11b. Use 32-bit absolute addresses
; (64 bit Linux)
; Assumes that image base < 80000000H
.data
A DD 100 dup (?) ; Define static array A B DD 100 dup (?) ; Define static array B
.code
                         ; i = 0
xor ecx, ecx
TOPOFLOOP: ; Top of loop
mov eax, [A+rcx*4] ; 32-bit address + scaled index
     eax
     [B+rcx*4], eax
                         ; 32-bit address + scaled index
add ecx, 1
cmp ecx, 100
     TOPOFLOOP
                         ; i < 100
                         ; Loop
```

The assembler will generate a 32-bit relocatable address for \mathbb{A} and \mathbb{B} in example 3.11b because it cannot combine a RIP-relative address with an index register.

This method is used by Gnu and Intel compilers in 64-bit Linux to access static arrays. It is not used by any compiler for 64-bit Windows, I have seen, but it works in Windows as well if the address is less than 2^{31} . The image base is typically 2^{22} for application programs and between 2^{28} and 2^{29} for DLL's, so this method will work in most cases, but not all. This method cannot normally be used in 64-bit Mac systems because all addresses are above 2^{32} by default.

The second method is to use image-relative addressing. The following solution loads the image base into register RBX by using a LEA instruction with a RIP-relative address:

```
; Example 3.11c. Address relative to image base
; 64 bit, Windows only, MASM assembler
.data
A      DD 100 dup (?)
B      DD 100 dup (?)
extern __ImageBase:byte
```

```
.code
lea rbx, __ImageBase ; Use RIP-relative address of image base
xor ecx, ecx ; i = 0

TOPOFLOOP: ; Top of loop
; imagerel(A) = address of A relative to image base:
mov eax, [(imagerel A) + rbx + rcx*4]
neg eax
mov [(imagerel B) + rbx + rcx*4], eax
add ecx, 1
cmp ecx, 100
ib TOPOFLOOP
```

This method is used in 64 bit Windows only. In Linux, the image base is available as __executable_start, but image-relative addresses are not supported in the ELF file format. The Mach-O format allows addresses relative to an arbitrary reference point, including the image base, which is available as __mh_execute_header.

The third solution loads the address of array A into register RBX by using a LEA instruction with a RIP-relative address. The address of B is calculated relative to A.

```
; Example 3.11d.
; Load address of array into base register
; (All 64-bit systems)
.data
A DD 100 dup (?)
B DD 100 dup (?)
.code
TOPOFLOOP:
                 ; Top of loop
mov eax, [rbx + 4*rcx]; A[i]
neg eax
mov [(B-A) + rbx + 4*rcx], eax ; Use offset of B relative to A
add ecx, 1
cmp ecx, 100
jb TOPOFLOOP
```

Note that we can use a 32-bit instruction for incrementing the index (ADD ECX, 1), even though we are using the 64-bit register for index (RCX). This works because we are sure that the index is non-negative and less than 2^{32} . This method can use any address in the data segment as a reference point and calculate other addresses relative to this reference point.

If an array is more than 2^{31} bytes away from the instruction pointer then we have to load the full 64 bit address into a base register. For example, we can replace LEA RBX, [A] with MOV RBX, OFFSET A in example 3.11d.

Position-independent code in 64-bit mode

Position-independent code is rarely required in 64-bit systems, but it is easy to make. Static data can be accessed with rip-relative addressing. Static arrays can be accessed as in example 3.11d.

The pointer tables of switch statements can be made relative to an arbitrary reference point. It may be convenient to use the table itself as the reference point:

```
; Example 3.12. switch with relative pointers, 64 bit, YASM syntax SECTION .data jumptable: dd case1-jumptable, case2-jumptable, case3-jumptable
```

```
SECTION .text
default rel
                                 ; use relative addresses
funcb: ; This function implements a switch statement
      mov eax, [rsp+8] ; function parameter
      cmp
           eax, 3
     ; The jump addresses are relative to jumptable, get absolute address:
     add rax, rdx
      jmp
           rax
                                 ; jump to desired case
case1: ...
     ret
case2: ...
     ret
case3: ...
     ret
case default:
      . . .
      ret
```

This method can be useful for reducing the size of long pointer tables because it uses 32-bit relative pointers rather than 64-bit absolute pointers.

The MASM assembler cannot generate the relative tables in example 3.12 unless the jump table is placed in the code segment. It is preferred to place the jump table in the data segment for optimal caching and code prefetching, and this can be done with the YASM or Gnu assembler.

3.4 Instruction code format

The format for instruction codes is described in detail in manuals from Intel and AMD. The basic principles of instruction encoding are explained here because of its relevance to microprocessor performance. In general, you can rely on the assembler for generating the smallest possible encoding of an instruction.

Each instruction can consist of the following elements, in the order mentioned:

1. Prefixes (0-5 bytes)

These are prefixes that modify the meaning of the opcode that follows. There are several different kinds of prefixes as described in table 3.12 below.

2. Opcode (1-3 bytes)

This is the instruction code. The first byte is 0Fh if there are two or three bytes. The second byte is 38h - 3Ah if there are three bytes.

3. mod-reg-r/m byte (0-1 byte)

This byte specifies the operands. It consists of three fields. The mod field is two bits specifying the addressing mode, the reg field is three bits specifying a register for the first operand (most often the destination operand), the r/m field is three bits specifying the second operand (most often the source operand), which can be a register or a memory operand. The reg field can be part of the opcode if there is only one operand.

4. SIB byte (0-1 byte)

This byte is used for memory operands with complex addressing modes, and only if there is a mod-reg-r/m byte. It has two bits for a scale factor, three bits specifying a

scaled index register, and three bits specifying a base pointer register. A SIB byte is needed in the following cases:

- a. If a memory operand has two pointer or index registers,
- b. If a memory operand has a scaled index register,
- c. If a memory operand has the stack pointer (ESP or RSP) as base pointer,
- d. If a memory operand in 64-bit mode uses a 32-bit sign-extended direct memory address rather than a RIP-relative address.

A SIB byte cannot be used in 16-bit addressing mode.

5. Displacement (0, 1, 2, 4 or 8 bytes)

This is part of the address of a memory operand. It is added to the value of the pointer registers (base or index or both), if any.

A 1-byte sign-extended displacement is possible in all addressing modes if a pointer register is specified.

A 2-byte displacement is possible only in 16-bit addressing mode.

A 4-byte displacement is possible in 32-bit addressing mode.

A 4-byte sign-extended displacement is possible in 64-bit addressing mode. If there are any pointer registers specified then the displacement is added to these. If there is no pointer register specified and no SIB byte then the displacement is added to RIP. If there is a SIB byte and no pointer register then the sign-extended value is an absolute direct address.

An 8-byte absolute direct address is possible in 64-bit addressing mode for a few MOV instructions that have no mod-reg-r/m byte.

6. Immediate operand (0, 1, 2, 4 or 8 bytes)

This is a data constant which in most cases is a source operand for the operation.

A 1-byte sign-extended immediate operand is possible in all modes for all instructions that can have immediate operands, except MOV, CALL and RET.

A 2-byte immediate operand is possible for instructions with 16-bit operand size.

A 4-byte immediate operand is possible for instructions with 32-bit operand size.

A 4-byte sign-extended immediate operand is possible for instructions with 64-bit operand size.

An 8-byte immediate operand is possible only for moves into a 64-bit register.

3.5 Instruction prefixes

The following table summarizes the use of instruction prefixes.

prefix for:	16 bit mode	32 bit mode	64 bit mode
8 bit operand size	none	none	none
16 bit operand size	none	66h	66h
32 bit operand size	66h	none	none
64 bit operand size	n.a.	n.a.	REX.W (48h)
packed integers in mmx register	none	none	none
packed integers in xmm register	66h	66h	66h
packed single-precision floats in xmm register	none	none	none
packed double-precision floats in xmm register	66h	66h	66h
scalar single-precision floats in xmm register	F3h	F3h	F3h
scalar double-precision floats in xmm register	F2h	F2h	F2h
16 bit address size	none	67h	n.a.
32 bit address size	67h	none	67h
64 bit address size	n.a.	n.a.	none
cs segment	2Eh	2Eh	n.a.
DS segment	3Eh	3Eh	n.a.
ES segment	26h	26h	n.a.
ss segment	36h	36h	n.a.

FS segment	64h	64h	64h
GS segment	65h	65h	65h
REP or REPE string operation	F3h	F3h	F3h
REPNE string operation	F2h	F2h	F2h
Locked memory operand	F0h	F0h	F0h
Register R8 - R15, XMM8 - XMM15 in reg field	n.a.	n.a.	REX.R (44h)
Register R8 - R15, XMM8 - XMM15 in r/m field	n.a.	n.a.	REX.B (41h)
Register R8 - R15 in SIB.base field	n.a.	n.a.	REX.B (41h)
Register R8 - R15 in SIB.index field	n.a.	n.a.	REX.X (42h)
Register SIL, DIL, BPL, SPL	n.a.	n.a.	REX (40h)
Predict branch taken first time	3Eh	3Eh	3Eh
Predict branch not taken first time	2Eh	2Eh	2Eh
VEX prefix, 2 bytes	C5h	C5h	C5h
VEX prefix, 3 bytes	C4h	C4h	C4h
Table 2.12 Instruction profixes			

Table 3.12. Instruction prefixes

Segment prefixes are rarely needed in a flat memory model. The DS segment prefix is only needed if a memory operand has base register BP, EBP or ESP and the DS segment is desired rather than SS.

The lock prefix is only allowed on certain instructions that read, modify and write a memory operand.

The branch prediction prefixes work only on Pentium 4 and are rarely needed.

There can be no more than one REX prefix. If more than one REX prefix is needed then the values are OR'ed into a single byte with a value in the range 40h to 4Fh. These prefixes are available only in 64-bit mode. The bytes 40h to 4Fh are instruction opcodes in 16-bit and 32-bit mode. These instructions (INC r and DEC r) are coded differently in 64-bit mode.

The prefixes can be inserted in any order, except for the REX and VEX prefixes which must come after any other prefixes.

The future AVX instruction set will use 2- and 3-byte prefixes called VEX prefixes. The VEX prefixes include bits to replace all 66h, F2h, F3h and REX prefixes as well as the first byte of two-byte opcodes and the first two bytes of three-byte opcodes. VEX prefixes also include bits for specifying YMM registers, an extra register operand, and bits for future extensions. The only prefixes allowed before a VEX prefix are segment prefixes and address size prefixes. No additional prefixes are allowed after a VEX prefix.

Meaningless, redundant or misplaced prefixes are ignored, except for the LOCK and VEX prefixes. But prefixes that have no effect in a particular context may have an effect in future processors.

Unnecessary prefixes may be used instead of NOP's for aligning code, but an excessive number of prefixes can slow down instruction decoding.

There can be any number of prefixes as long as the total instruction length does not exceed 15 bytes. For example, a MOV EAX, EBX with ten ES segment prefixes will still work, but it may take a long time to decode.

4 ABI standards

ABI stands for Application Binary Interface. An ABI is a standard for how functions are called, how parameters and return values are transferred, and which registers a function is allowed to change. It is important to obey the appropriate ABI standard when combining assembly with high level language. The details of calling conventions etc. are covered in manual 5: "Calling conventions for different C++ compilers and operating systems". The most important rules are summarized here for your convenience.

4.1 Register usage

	16 bit DOS, Windows	32 bit Windows, Unix	64 bit Windows	64 bit Unix
Registers that can be used freely	AX, BX, CX, DX, ES, ST(0)-ST(7)	EAX, ECX, EDX, ST(0)-ST(7), XMM0-XMM7, YMM0-YMM7	RAX, RCX, RDX, R8-R11, ST(0)-ST(7), XMM0-XMM5, YMM0-YMM5, YMM6-YMM15H	RAX, RCX, RDX, RSI, RDI, R8-R11, ST(0)-ST(7), XMM0-XMM15, YMM0-YMM15
Registers that must be saved and restored	SI, DI, BP, DS	EBX, ESI, EDI, EBP	RBX, RSI, RDI, RBP, R12-R15, XMM6-XMM15	RBX, RBP, R12-R15
Registers that cannot be changed		DS, ES, FS, GS, SS		
Registers used for para- meter transfer		(ECX)	RCX, RDX, R8,R9, XMM0-XMM3, YMM0-YMM3	RDI, RSI, RDX, RCX, R8, R9, XMM0-XMM7, YMM0-YMM7
Registers used for return values	AX, DX, ST(0)	EAX, EDX, ST(0)	RAX, XMMO, YMMO	RAX, RDX, XMM0, XMM1, YMM0 ST(0), ST(1)
Table 4.1. Registe	r usage		1	DI(0), DI(I)

The floating point registers ST(0) - ST(7) must be empty before any call or return, except when used for function return value. The MMX registers must be cleared by EMMS before any call or return.

The arithmetic flags can be changed freely. The direction flag may be set temporarily, but must be cleared before any call or return in 32-bit and 64-bit systems. The interrupt flag cannot be cleared in protected operating systems. The floating point control word and bit 6-15 of the MXCSR register must be saved and restored in functions that modify them.

Register FS and GS are used for thread information blocks etc. and should not be changed. Other segment registers should not be changed, except in segmented 16-bit models.

4.2 Data storage

Variables and objects that are declared inside a function in C or C++ are stored on the stack and addressed relative to the stack pointer or a stack frame. This is the most efficient way of storing data, for two reasons. Firstly, the stack space used for local storage is released when the function returns and may be reused by the next function that is called. Using the same memory area repeatedly improves data caching. The second reason is that data stored on the stack can often be addressed with an 8-bit offset relative to a pointer rather

than the 32 bits required for addressing data in the data segment. This makes the code more compact so that it takes less space in the code cache or trace cache.

Global and static data in C++ are stored in the data segment and addressed with 32-bit absolute addresses in 32-bit systems and with 32-bit RIP-relative addresses in 64-bit systems. A third way of storing data in C++ is to allocate space with new or malloc. This method should be avoided if speed is critical.

4.3 Function calling conventions

Calling convention in 16 bit mode DOS and Windows 3.x

Function parameters are passed on the stack with the first parameter at the lowest address. This corresponds to pushing the last parameter first. The stack is cleaned up by the caller.

Parameters of 8 or 16 bits size use one word of stack space. Parameters bigger than 16 bits are stored in little-endian form, i.e. with the least significant word at the lowest address. All stack parameters are aligned by 2.

Function return values are passed in registers in most cases. 8-bit integers are returned in AL, 16-bit integers and near pointers in AX, 32-bit integers and far pointers in DX:AX, Booleans in AX, and floating point values in ST(0).

Calling convention in 32 bit Windows, Linux, BSD, Mac OS X

Function parameters are passed on the stack according to the following calling conventions:

Calling convention	Parameter order on stack	Parameters removed by	
cdecl	First par. at low address	Caller	
stdcall	First par. at low address	Subroutine	
fastcall Microsoft	First 2 parameters in ecx, edx.	Subroutine	
and Gnu	Rest asstdcall		
fastcall Borland	First 3 parameters in eax, edx,	Subroutine	
	ecx. Rest asstdcall		
_pascal	First par. at high address	Subroutine	
thiscall Microsoft	this in ecx. Rest asstdcall	Subroutine	
T. I. A. O. W			

Table 4.2. Calling conventions in 32 bit mode

The __cdecl calling convention is the default in Linux. In Windows, the __cdecl convention is also the default except for member functions, system functions and DLL's. Statically linked modules in .obj and .lib files should preferably use __cdecl, while dynamic link libraries in .dll files should use __stdcall. The Microsoft, Intel, Digital Mars and Codeplay compilers use __thiscall by default for member functions under Windows, the Borland compiler uses __cdecl with 'this' as the first parameter.

The fastest calling convention for functions with integer parameters is __fastcall, but this calling convention is not standardized.

Remember that the stack pointer is decreased when a value is pushed on the stack. This means that the parameter pushed first will be at the highest address, in accordance with the <code>_pascal</code> convention. You must push parameters in reverse order to satisfy the <code>__cdecl</code> and <code>__stdcall</code> conventions.

Parameters of 32 bits size or less use 4 bytes of stack space. Parameters bigger than 32 bits are stored in little-endian form, i.e. with the least significant <code>DWORD</code> at the lowest address, and aligned by 4.

Mac OS X and the Gnu compiler version 3 and later align the stack by 16 before every call instruction, though this behavior is not consistent. Sometimes the stack is aligned by 4. This discrepancy is an unresolved issue at the time of writing. See manual 5: "Calling conventions for different C++ compilers and operating systems" for details.

Function return values are passed in registers in most cases. 8-bit integers are returned in AL, 16-bit integers in AX, 32-bit integers, pointers, references and Booleans in EAX, 64-bit integers in EDX: EAX, and floating point values in ST(0).

See manual 5: "Calling conventions for different C++ compilers and operating systems" for details about parameters of composite types (struct, class, union) and vector types (__m64, __m128).

Calling conventions in 64 bit Windows

The first parameter is transferred in RCX if it is an integer or in XMM0 if it is a float or double. The second parameter is transferred in RDX or XMM1. The third parameter is transferred in R8 or XMM2. The fourth parameter is transferred in R9 or XMM3. Note that RCX is not used for parameter transfer if XMM0 is used, and vice versa. No more than four parameters can be transferred in registers, regardless of type. Any further parameters are transferred on the stack with the first parameter at the lowest address and aligned by 8. Member functions have 'this' as the first parameter.

The caller must allocate 32 bytes of free space on the stack in addition to any parameters transferred on the stack. This is a shadow space where the called function can save the four parameter registers if it needs to. The shadow space is the place where the first four parameters would have been stored if they were transferred on the stack according to the <code>__cdecl</code> rule. The shadow space belongs to the called function which is allowed to store the parameters (or anything else) in the shadow space. The caller must reserve the 32 bytes of shadow space even for functions that have no parameters. The caller must clean up the stack, including the shadow space. Return values are in RAX or XMMO.

The stack pointer must be aligned by 16 before any CALL instruction, so that the value of RSP is 8 modulo 16 at the entry of a function. The function can rely on this alignment when storing XMM registers to the stack.

See manual 5: "Calling conventions for different C++ compilers and operating systems" for details about parameters of composite types (struct, class, union) and vector types (m64, m128).

Calling conventions in 64 bit Linux, BSD and Mac OS X

The first six integer parameters are transferred in RDI, RSI, RDX, RCX, R8, R9, respectively. The first eight floating point parameters are transferred in XMM0 - XMM7. All these registers can be used, so that a maximum of fourteen parameters can be transferred in registers. Any further parameters are transferred on the stack with the first parameters at the lowest address and aligned by 8. The stack is cleaned up by the caller if there are any parameters on the stack. There is no shadow space. Member functions have 'this' as the first parameter. Return values are in RAX or XMM0.

The stack pointer must be aligned by 16 before any CALL instruction, so that the value of RSP is 8 modulo 16 at the entry of a function. The function can rely on this alignment when storing XMM registers to the stack.

The address range from [RSP-1] to [RSP-128] is called the red zone. A function can safely store data above the stack in the red zone as long as this is not overwritten by any PUSH or CALL instructions.

See manual 5: "Calling conventions for different C++ compilers and operating systems" for details about parameters of composite types (struct, class, union) and vector types (__m64, __m128, __m256).

4.4 Name mangling and name decoration

The support for function overloading in C++ makes it necessary to supply information about the parameters of a function to the linker. This is done by appending codes for the parameter types to the function name. This is called name mangling. The name mangling codes have traditionally been compiler specific. Fortunately, there is a growing tendency towards standardization in this area in order to improve compatibility between different compilers. The name mangling codes for different compilers are described in detail in manual 5: "Calling conventions for different C++ compilers and operating systems".

The problem of incompatible name mangling codes is most easily solved by using extern "C" declarations. Functions with extern "C" declaration have no name mangling. The only decoration is an underscore prefix in 16- and 32-bit Windows and 32- and 64-bit Mac OS. There is some additional decoration of the name for functions with __stdcall and __fastcall declarations.

The extern "C" declaration cannot be used for member functions, overloaded functions, operators, and other constructs that are not supported in the C language. You can avoid name mangling in these cases by defining a mangled function that calls an unmangled function. If the mangled function is defined as inline then the compiler will simply replace the call to the mangled function by the call to the unmangled function. For example, to define an overloaded C++ operator in assembly without name mangling:

```
class C1;
// unmangled assembly function;
extern "C" C1 cplus (C1 const & a, C1 const & b);
// mangled C++ operator
inline C1 operator + (C1 const & a, C1 const & b) {
    // operator + replaced inline by function cplus
    return cplus(a, b);
}
```

Overloaded functions can be inlined in the same way. Class member functions can be translated to friend functions as illustrated in example 7.1b page 48.

4.5 Function examples

The following examples show how to code a function in assembly that obeys the calling conventions. First the code in C++:

```
// Example 4.1a
extern "C" double sinxpnx (double x, int n) {
  return sin(x) + n * x;
}
```

The same function can be coded in assembly. The following examples show the same function coded for different platforms.

```
; Example 4.1b. 16-bit DOS and Windows 3.x
ALIGN 4
_sinxpnx PROC NEAR
; parameter x = [SP+2]
; parameter n = [SP+10]
; return value = ST(0)
```

In 16-bit mode we need BP as a stack frame because SP cannot be used as base pointer. The integer n is only 16 bits. I have used the hardware instruction FSIN for the sin function.

```
; Example 4.1c. 32-bit Windows
EXTRN
        _sin:near
        4
ALIGN
_sinxpnx PROC near
; parameter x = [ESP+4]
; parameter n = [ESP+12]
; return value = ST(0)
   fld qword ptr [esp+4] ; x
   sub
             ; library function for sin()
8 : clean up stack after sall
   call _sin add esp,
                         ; clean up stack after call
        esp, 8
   fild dword ptr [esp+12]; n
   fmul qword ptr [esp+4] ; n*x
   fadd
                         ; \sin(x) + n*x
   ret
                         ; return value is in st(0)
sinxpnx ENDP
```

Here, I have chosen to use the library function $_sin$ instead of FSIN. This may be faster in some cases because FSIN gives higher precision than needed. The parameter for $_sin$ is transferred as 8 bytes on the stack.

```
; Example 4.1d. 32-bit Linux
EXTRN sin:near
       4
ALIGN
sinxpnx PROC near
; parameter x = [ESP+4]
; parameter n = [ESP+12]
; return value = ST(0)
      qword ptr [esp+4] ; x
   sub
               ; Library proc. may be faster than fsin
   call sin
   add esp, 12
                      ; Clean up stack after call
   fild dword ptr [esp+12] ; n
   fmul qword ptr [esp+4] ; n*x
   fadd
                       ; \sin(x) + n*x
   ret
                       ; Return value is in st(0)
sinxpnx ENDP
```

In 32-bit Linux there is no underscore on function names. The stack must be kept aligned by 16 in Linux (GCC version 3 or later). The call to sinxpnx subtracts 4 from ESP. We are subtracting 12 more from ESP so that the total amount subtracted is 16. We may subtract more, as long as the total amount is a multiple of 16. In example 4.1c we subtracted only 8 from ESP because the stack is only aligned by 4 in 32-bit Windows.

```
; Example 4.1e. 64-bit Windows
EXTRN sin:near
ALIGN
             4
sinxpnx PROC
; parameter x = xmm0
; parameter n = edx
; return value = xmm0
     push
                 rbx
                                          ; rbx must be saved
     movaps [rsp+16],xmm6 ; save xmm6 in my shadow space
     movaps [rsp+16],xmm6; save xmm6 in my shadow space sub rsp, 32; shadow space for call to sin mov ebx, edx; save n movsd xmm6, xmm0; save x call sin; xmm0 = sin(xmm0) cvtsi2sd xmm1, ebx; convert n to double mulsd xmm1, xmm6; n * x addsd xmm0, xmm1; sin(x) + n * x add rsp, 32; restore stack pointer
     movaps xmm6, [rsp+16] ; restore xmm6
     pop rbx ; restore rbx
      ret
                                           ; return value is in xmm0
sinxpnx ENDP
```

Function parameters are transferred in registers in 64-bit Windows. Ecx is not used for parameter transfer because the first parameter is not an integer. We are using RBX and XMM6 for storing n and x across the call to \sin . We have to use registers with callee-save status for this, and we have to save these registers on the stack before using them. The stack must be aligned by 16 before the call to \sin . The call to \sin xpnx subtracts 8 from RSP; the PUSH RBX instruction subtracts 8; and the SUB instruction subtracts 32. The total amount subtracted is 8+8+32 = 48, which is a multiple of 16. The extra 32 bytes on the stack is shadow space for the call to \sin . Note that example 4.1e does not include support for exception handling. It is necessary to add tables with stack unwind information if the program relies on catching exceptions generated in the function \sin .

```
; Example 4.1f. 64-bit Linux
EXTRN sin:near
ALIGN
              4
sinxpnx PROC
PUBLIC
              sinxpnx
; parameter x = xmm0
; parameter n = edi
; return value = xmm0
     push rbx ; rbx must be saved
sub rsp, 16 ; make local space and align stack by 16
movaps [rsp], xmm0 ; save x
mov ebx, edi ; save n
call sin ; xmm0 = sin(xmm0)
cvtsi2sd xmm1, ebx ; convert n to double
mulsd xmm1, [rsp] ; n * x
addsd xmm0, xmm1 ; sin(x) + n * x
add rsp, 16 ; restore stack pointer
      add
                 rsp, 16
                                           ; restore stack pointer
     pop rbx
                                           ; restore rbx
     ret
                                           ; return value is in xmm0
sinxpnx ENDP
```

64-bit Linux does not use the same registers for parameter transfer as 64-bit Windows does. There are no XMM registers with callee-save status, so we have to save \times on the stack across the call to \sin , even though saving it in a register might be faster (Saving \times in a 64-bit integer register is possible, but slow). n can still be saved in a general purpose register with callee-save status. The stack is aligned by 16. There is no need for shadow

space on the stack. The red zone cannot be used because it would be overwritten by the call to sin. Note that example 4.1f does not include support for exception handling. It is necessary to add tables with stack unwind information if the program relies on catching exceptions generated in the function sin.

5 Using intrinsic functions in C++

As already mentioned, there are three different ways of making assembly code: using intrinsic functions and vector classes in C++, using inline assembly in C++, and making separate assembly modules. Intrinsic functions are described in this chapter. The other two methods are described in the following chapters.

Intrinsic functions and vector classes are highly recommended because they are much easier and safer to use than assembly language syntax.

The Microsoft, Intel and Gnu C++ compilers have support for intrinsic functions. Most of the intrinsic functions generate one machine instruction each. An intrinsic function is therefore equivalent to an assembly instruction.

Coding with intrinsic functions is a kind of high-level assembly. It can easily be combined with C++ language constructs such as if-statements, loops, functions, classes and operator overloading. Using intrinsic functions is an easier way of doing high level assembly coding than using if constructs etc. in an assembler or using the so-called high level assembler (HLA).

The invention of intrinsic functions has made it much easier to do programming tasks that previously required coding with assembly syntax. The advantages of using intrinsic functions are:

- No need to learn assembly language syntax.
- Seamless integration into C++ code.
- Branches, loops, functions, classes, etc. are easily made with C++ syntax.
- The compiler takes care of calling conventions, register usage conventions, etc.
- The code is portable to almost all x86 platforms: 32-bit and 64-bit Windows, Linux, Mac OS, etc. Some intrinsic functions can even be used on Itanium and other non-x86 platforms.
- The code is compatible with Microsoft, Gnu and Intel compilers.
- The compiler takes care of register variables, register allocation and register spilling.
 The programmer doesn't have to care about which register is used for which variable.
- Different instances of the same inlined function or operator can use different registers for its parameters. This eliminates the need for register-to-register moves. The same function coded with assembly syntax would typically use a specific register for each parameter; and a move instruction would be required if the value happens to be in a different register.
- It is possible to define overloaded operators for the intrinsic functions. For example, the instruction that adds two 4-element vectors of floats is coded as ADDPS in

assembly language, and as $_{mm_add_ps}$ when intrinsic functions are used. But an overloaded operator can be defined for the latter so that it is simply coded as a + when using the so-called vector classes. This makes the code look like plain old C++.

• The compiler can optimize the code further, for example by common subexpression elimination, loop-invariant code motion, scheduling and reordering, etc. This would have to be done manually if assembly syntax was used. The Gnu and Intel compilers provide the best optimization.

The disadvantages of using intrinsic functions are:

- Not all assembly instructions have intrinsic function equivalents.
- The function names are sometimes long and difficult to remember.
- An expression with many intrinsic functions looks kludgy and is difficult to read.
- Requires a good understanding of the underlying mechanisms.
- The compilers may not be able to optimize code containing intrinsic functions as much as it optimizes other code, especially when constant propagation is needed.
- Unskilled use of intrinsic functions can make the code less efficient than simple C++
 code.
- The compiler can modify the code or implement it in a less efficient way than the
 programmer intended. It may be necessary to look at the code generated by the
 compiler to see if it is optimized in the way the programmer intended.
- Mixture of __m128 and __m256 types can cause severe delays if the programmer doesn't follow certain rules (see Intel AVX manuals).

5.1 Using intrinsic functions for system code

Intrinsic functions are useful for making system code and access system registers that are not accessible with standard C++. Some of these functions are listed below.

Functions for accessing system registers:

```
__rdtsc, __readpmc, __readmsr, __readcr0, __readcr2, __readcr3, __readcr4, __readcr8, __writecr0, __writecr3, __writecr4, __writecr8, __writemsr, __mm_getcsr, __mm_setcsr, __getcallerseflags.
```

Functions for input and output:

```
__inbyte, __inword, __indword, __outbyte, __outword, __outdword.
```

Functions for atomic memory read/write operations:

```
_InterlockedExchange, etc.
```

Functions for accessing FS and GS segments:

```
__readfsbyte, __writefsbyte, etc.
```

Cache control instructions (Require SSE or SSE2 instruction set):

```
_mm_prefetch, _mm_stream_si32, _mm_stream_pi, _mm_stream_si128, _ReadBarrier, _WriteBarrier, _ReadWriteBarrier, _mm_sfence.
```

Other system functions:

```
__cpuid, __debugbreak, _disable, _enable.
```

5.2 Using intrinsic functions for instructions not available in standard C++

Some simple instructions that are not available in standard C++ can be coded with intrinsic functions, for example functions for bit-rotate, bit-scan, etc.:

_rot18, _rotr8, _rot116, _rotr16, _rotr, _rot164, _rotr64, _BitScanForward, BitScanReverse.

5.3 Using intrinsic functions for vector operations

Vector instructions are very useful for improving the speed of code with inherent parallelism. There are intrinsic functions for almost all vector operations using the MMX and XMM registers.

The use of these intrinsic functions for vector operations is thoroughly described in manual 1: "Optimizing software in C++".

5.4 Availability of intrinsic functions

The intrinsic functions are available on newer versions of Microsoft, Gnu and Intel compilers. Most intrinsic functions have the same names in all three compilers. You have to include a header file named <code>intrin.h</code> or <code>emmintrin.h</code> to get access to the intrinsic functions. The Codeplay compiler has limited support for intrinsic vector functions, but the function names are not compatible with the other compilers.

The intrinsic functions are listed in the help documentation for each compiler, in the appropriate header files, in msdn.microsoft.com, in "Intel 64 and IA-32 Architectures Software Developer's Manual", volume 2A and 2B (developer.intel.com) and in "Intel Intrinsic Guide" (softwareprojects.intel.com/avx/).

6 Using inline assembly in C++

Inline assembly is another way of putting assembly code into a C++ file. The keyword asm or __asm or __asm or __asm or __asm tells the compiler that the code is assembly. Different compilers have different syntaxes for inline assembly. The different syntaxes are explained below.

The advantages of using inline assembly are:

- It is easy to combine with C++.
- Variables and other symbols defined in C++ code can be accessed from the assembly code.
- Only the part of the code that cannot be coded in C++ is coded in assembly.
- All assembly instructions are available.
- The code generated is exactly what you write.
- It is possible to optimize in details.
- The compiler takes care of calling conventions, name mangling and saving registers.

- The compiler can inline a function containing inline assembly.
- Portable to different x86 platforms when using the Intel compiler.

The disadvantages of using inline assembly are:

- Different compilers use different syntax.
- Requires knowledge of assembly language.
- Requires a good understanding of how the compiler works. It is easy to make errors.
- The allocation of registers is mostly done manually. The compiler may allocate different registers for the same variables.
- The compiler cannot optimize well across the inline assembly code.
- It may be difficult to control function prolog and epilog code.
- It may not be possible to define data.
- It may not be possible to use macros and other directives.
- It may not be possible to make functions with multiple entries.
- The Microsoft compiler does not support inline assembly on 64-bit platforms.
- The Borland compiler is poor on inline assembly.

The following sections illustrate how to make inline assembly with different compilers.

6.1 MASM style inline assembly

The most common syntax for inline assembly is a MASM-style syntax. This is the easiest way of making inline assembly and it is supported by most compilers, but not the Gnu compiler. Unfortunately, the syntax for inline assembly is poorly documented or not documented at all in the compiler manuals. I will therefore briefly describe the syntax here.

The following examples show a function that raises a floating point number x to an integer power n. The algorithm is to multiply x^1 , x^2 , x^4 , x^8 , etc. according to each bit in the binary representation of n. Actually, it is not necessary to code this in assembly because a good compiler will optimize it almost as much when you just write pow(x,n). My purpose here is just to illustrate the syntax of inline assembly.

First the code in C++ to illustrate the algorithm:

}

And then the optimized code using inline assembly with MASM style syntax:

```
// Example 6.1b. MASM style inline assembly, 32 bit mode
double ipow (double x, int n) {
  __asm {
     mov eax, n
                       // Move n to eax
// abs(n) is calculated by inverting all bits and adding 1 if n < 0:
     cdq // Get sign bit into all bits of edx xor eax, edx // Invert bits if negative sub eax, edx // Add 1 if negative. Now eax = abs(n) fld1 // st(0) = 1.0
                      // st(0) = 1.0
     fld1
     jmp L2
                      // Jump into loop
  L1:
                       // Top of loop
     fmul st(0), st(0) // Square x
                      // Loop entered here
     shr eax, 1 // Get each bit of n into carry flag
                      // No carry. Skip multiplication, goto next
     jnc L1
     fmul st(1), st(0) // Multiply by x squared i times for bit \# i
     jnz L1
                      // End of loop. Stop when nn = 0
     fld1
                      // st(0) = 1.0, st(1) = x^abs(n)
                      // Reciprocal
     fdivr
  L9:
                       // Finish
                       // Result is in st(0)
#pragma warning(disable:1011) // Don't warn for missing return value
```

Note that the function entry and parameters are declared with C++ syntax. The function body, or part of it, can then be coded with inline assembly. The parameters x and n, which are declared with C++ syntax, can be accessed directly in the assembly code using the same names. The compiler simply replaces x and n in the assembly code with the appropriate memory operands, probably [esp+4] and [esp+12]. If the inline assembly code needs to access a variable that happens to be in a register, then the compiler will store it to a memory variable on the stack and then insert the address of this memory variable in the inline assembly code.

The result is returned in st(0) according to the 32-bit calling convention. The compiler will normally issue a warning because there is no return y; statement in the end of the function. This statement is not needed if you know which register to return the value in. The #pragma warning(disable:1011) removes the warning. If you want the code to work with different calling conventions (e.g. 64-bit systems) then it is necessary to store the result in a temporary variable inside the assembly block:

```
jmp L2
L1:fmul st(0), st(0)
L2:shr eax, 1
    jnc L1
    fmul st(1), st(0)
    jnz L1
    fstp st(0)
    test edx, edx
    jns L9
    fld1
    fdivr
L9:fstp qword ptr result // store result to temporary variable
}
return result;
}
```

Now the compiler takes care of all aspects of the calling convention and the code works on all x86 platforms.

The compiler inspects the inline assembly code to see which registers are modified. The compiler will automatically save and restore these registers if required by the register usage convention. In some compilers it is not allowed to modify register <code>ebp</code> or <code>ebx</code> in the inline assembly code because these registers are needed for a stack frame. The compiler will generally issue a warning in this case.

It is possible to remove the automatically generated prolog and epilog code by adding __declspec(naked) to the function declaration. In this case it is the responsibility of the programmer to add any necessary prolog and epilog code and to save any modified registers if necessary. The only thing the compiler takes care of in a naked function is name mangling. Automatic variable name substitution may not work with naked functions because it depends on how the function prolog is made. A naked function cannot be inlined.

Accessing register variables

Register variables cannot be accessed directly by their symbolic names in MASM-style inline assembly. Accessing a variable by name in an inline assembly code will force the compiler to store the variable to a temporary memory location.

If you know which register a variable is in then you can simply write the name of the register. This makes the code more efficient but less portable.

For example, if the code in the above example is used in 64-bit Windows, then x = 1 will be in register x = 1 multiple in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 will be in register x = 1 and x = 1 will be in register x = 1 and x = 1 will be in register x = 1 will be in

```
// Example 6.1d. MASM style, 64-bit Windows
double ipow (double x, int n) {
  cdq
    xor eax, edx
    sub eax, edx
    movsd xmm1, one
                      // load 1.0
    jz L9
     jmp L2
  L1:mulsd xmm0, xmm0
                       // square x
  L2:shr eax, 1
    inc L1
    mulsd xmm1, xmm0
                      // Multiply by x squared i times
    jnz L1
    movsd xmm0, xmm1
                      // Put result in xmm0
```

In 64-bit Linux we will have n in register EDI so the line mov eax,edx should be changed to mov eax,edi.

Accessing class members and structure members

Let's take as an example a C++ class containing a list of integers:

```
// Example 6.2a. Accessing class data members
// define C++ class
class MyList {
  protected:
public:
  MyList();
                         // Constructor
  void AttItem(int item); // Add item to list
  int Sum();
                          // Compute sum of items
};
MyList::MyList() {
                        // Constructor
  length = 0;}
void MyList::AttItem(int item) { // Add item to list
  if (length < 100) {
     buffer[length++] = item;
}
int MyList::Sum() {
                        // Member function Sum
  int i, sum = 0;
  for (i = 0; i < length; i++) sum += buffer[i];</pre>
  return sum; }
```

Below, I will show how to code the member function MyList::Sum in inline assembly. I have not tried to optimize the code, my purpose here is simply to show the syntax.

Class members are accessed by loading 'this' into a pointer register and addressing class data members relative to the pointer with the dot operator (.).

```
// Example 6.2b. Accessing class members (32-bit)
int MyList::Sum() {
  __asm {
     mov ecx, this
                              // 'this' pointer
                              // sum = 0
     xor eax, eax
                              // loop index, i = 0
     xor edx, edx
     cmp [ecx].length, 0
                              // if (this->length != 0)
     ie L9
  L1: add eax, [ecx].buffer[edx*4] // sum += buffer[i]
                              // i++
     add edx, 1
     jb L1
  L9:
                              // Return value is in eax
  #pragma warning(disable:1011)
```

Here the 'this' pointer is accessed by its name 'this', and all class data members are addressed relative to 'this'. The offset of the class member relative to 'this' is obtained by writing the member name preceded by the dot operator. The index into the array named buffer must be multiplied by the size of each element in buffer [edx*4].

Some 32-bit compilers for Windows put 'this' in ecx, so the instruction mov ecx, this can be omitted. 64-bit systems require 64-bit pointers, so ecx should be replaced by rcx and edx by rdx. 64-bit Windows has 'this' in rcx, while 64-bit Linux has 'this' in rdi.

Structure members are accessed in the same way by loading a pointer to the structure into a register and using the dot operator. There is no syntax check against accessing private and protected members. There is no way to resolve the ambiguity if more than one structure or class has a member with the same name. The MASM assembler can resolve such ambiguities by using the assume directive or by putting the name of the structure before the dot, but this is not possible with inline assembly.

Calling functions

Functions are called by their name in inline assembly. Member functions can only be called from other member functions of the same class. Overloaded functions cannot be called because there is no way to resolve the ambiguity. It is not possible to use mangled function names. It is the responsibility of the programmer to put any function parameters on the stack or in the right registers before calling a function and to clean up the stack after the call. It is also the programmer's responsibility to save any registers you want to preserve across the function call, unless these registers have callee-save status.

Because of these complications, I will recommend that you go out of the assembly block and use C++ syntax when making function calls.

Syntax overview

The syntax for MASM-style inline assembly is not well described in any compiler manual I have seen. I will therefore summarize the most important rules here.

In most cases, the MASM-style inline assembly is interpreted by the compiler without invoking any assembler. You can therefore not assume that the compiler will accept anything that the assembler understands.

The inline assembly code is marked by the keyword __asm. Some compilers allow the alias _asm. The assembly code must be enclosed in curly brackets {} unless there is only one line. The assembly instructions are separated by newlines. Alternatively, you may separate the assembly instructions by the _asm keyword without any semicolons.

Instructions and labels are coded in the same way as in MASM. The size of memory operands can be specified with the PTR operator, for example INC DWORD PTR [ESI]. The names of instructions and registers are not case sensitive.

Variables, functions, and goto labels declared in C++ can be accessed by the same names in the inline assembly code. These names are case sensitive.

Data members of structures, classes and unions are accessed relative to a pointer register using the dot operator.

Comments are initiated with a semicolon (;) or a double slash (//).

Hard-coded opcodes are made with _emit followed by a byte constant, where you would use DB in MASM. For example _emit 0x90 is equivalent to NOP.

Directives and macros are not allowed.

The compiler takes care of calling conventions and register saving for the function that contains inline assembly, but not for any function calls from the inline assembly.

Compilers using MASM style inline assembly

MASM-style inline assembly is supported by 16-bit and 32-bit Microsoft C++ compilers, but the 64-bit Microsoft compiler has no inline assembly.

The Intel C++ compiler supports MASM-style inline assembly in both 32-bit and 64-bit Windows as well as 32-bit and 64-bit Linux (and Mac OS?). This is the preferred compiler for making portable code with inline assembly. The Intel compiler under Linux requires the command line option <code>-use-msasm</code> to recognize this syntax for inline assembly. Only the keyword <code>_asm</code> works in this case, not the synonyms <code>asm</code> or <code>_asm_</code>. The Intel compiler converts the MASM syntax to AT&T syntax before sending it to the assembler. The Intel compiler can therefore be useful as a syntax converter.

The MASM-style inline assembly is also supported by Borland, Digital Mars, Watcom and Codeplay compilers. The Borland assembler is not up to date and the Watcom compiler has some limitations on inline assembly.

6.2 Gnu style inline assembly

Inline assembly works quite differently on the Gnu compiler because the Gnu compiler compiles via assembly rather than producing object code directly, as most other compilers do. The assembly code is entered as a string constant which is passed through to the assembler with very little change. The default syntax is the AT&T syntax that the Gnu assembler uses.

The Gnu-style inline assembly has the advantage that you can pass on any instruction or directive to the assembler. Everything is possible. The disadvantage is that the syntax is very elaborate and difficult to learn, as the examples below show.

The Gnu-style inline assembly is supported by the Gnu compiler and the Intel compiler for Linux in both 32-bit and 64-bit mode.

AT&T syntax

Let's return to example 6.1b and translate it to Gnu style inline assembly with AT&T syntax:

```
// Example 6.1e. Gnu-style inline assembly, AT&T syntax
double ipow (double x, int n) {
  double y;
  __asm__ (
     "cltd
                            \n" // cdq
     "xorl %%edx, %%eax
                            \n"
     "subl %%edx, %%eax
                            \n"
     "fld1
                            \n"
      "jz 9f
                            \n" // Forward jump to nearest 9:
     "fldl %[xx]
"jmp 2f
                           \n" // Substituted with x
                           \n" // Forward jump to nearest 2:
                            \n" // Local label 1:
      "1:
      "fmul %st(0), %st(0) \n"
      "2:
                            \n" // Local label 2:
```

```
"fmul %st(0), %st(1) \n"
     "jnz 1b
                        \n" // Backward jump to nearest 1:
     "fstp %%st(0)
                         \n"
     "testl %%edx, %%edx n"
     "jns 9f
                         \n" // Forward jump to nearest 9:
     "fld1
                         \n"
     "fdivp %%st(0), %%st(1)\n"
                         \n" // Assembly string ends here
     // Use extended assembly syntax to specify operands:
     // Output operands:
     : "=t" (y)
                           // Output top of stack to y
     // Input operands:
     : [xx] "m" (x), "a" (n) // Input operand <math>[xx] = x, eax = n
     // Clobbered registers:
     : "%edx", "%st(1)" // Clobber edx and st(1)
  );
                            // __asm__ statement ends here
  return y;
}
```

We immediately notice that the syntax is very different from the previous examples. Many of the instruction codes have suffixes for specifying the operand size. Integer instructions use b for BYTE, w for WORD, 1 for DWORD, q for QWORD. Floating point instructions use s for DWORD (float), 1 for QWORD (double), t for TBYTE (long double). Some instruction codes are completely different, for example CDQ is changed to CLTD. The order of the operands is the opposite of MASM syntax. The source operand comes before the destination operand. Register names have \$\$ prefix, which is changed to \$ before the string is passed on to the assembler. Constants have \$ prefix. Memory operands are also different. For example, [ebx+ecx*4+20h] is changed to 0x20(\$\$ebx, \$\$ecx, 4).

Jump labels can be coded in the same way as in MASM, e.g. $\mathtt{L1:}$, $\mathtt{L2:}$, but I have chosen to use the syntax for local labels, which is a decimal number followed by a colon. The jump instructions can then use \mathtt{jmp} 1b for jumping backwards to the nearest preceding 1: label, and \mathtt{jmp} 1f for jumping forwards to the nearest following 1: label. The reason why I have used this kind of labels is that the compiler will produce multiple instances of the inline assembly code if the function is inlined, which is quite likely to happen. If we use normal labels like $\mathtt{L1:}$ then there will be more than one label with the same name in the final assembly file, which of course will produce an error. If you want to use normal labels then add $\mathtt{_attribute}_{\mathtt{(noinline)}}$ to the function declaration to prevent inlining of the function.

The Gnu style inline assembly does not allow you to put the names of local C++ variables directly into the assembly code. Only global variable names will work because they have the same names in the assembly code. Instead you can use the so-called extended syntax as illustrated above. The extended syntax looks like this:

```
__asm__ ("assembly code string" : [output list] : [input list] :
[clobbered registers list] );
```

The assembly code string is a string constant containing assembly instructions separated by newline characters (\n).

In the above example, the output list is "=t" (y). t means the top-of-stack floating point register st(0), and y means that this should be stored in the C++ variable named y after the assembly code string.

There are two input operands in the input list. [xx] "m" (x) means replace [xx] in the assembly string with a memory operand for the C++ variable x. "a" (n) means load the C++ variable n into register eax before the assembly string. There are many different constraints symbols for specifying different kinds of operands and registers for input and output. See the GCC manual for details.

The clobbered registers list "*edx", "*st(1)" tells that registers edx and st(1) are modified by the inline assembly code. The compiler would falsely assume that these registers were unchanged if they didn't occur in the clobber list.

Intel syntax

The above example will be a little easier to code if we use Intel syntax for the assembly string. The Gnu assembler now accepts Intel syntax with the directive <code>.intel_syntax</code> <code>noprefix</code>. The <code>noprefix</code> means that registers don't need a %-sign as prefix.

```
// Example 6.1f. Gnu-style inline assembly, Intel syntax
double ipow (double x, int n) {
  double y;
  __asm__ (
     ".intel_syntax noprefix \n" // use Intel syntax for convenience
     "xor eax, edx
                          n'
                          \n"
     "sub eax, edx
                         \n"
                         \n"
     "fld1
                          \n"
     "jz 9f
     "jmp 2f
                          n"
     "1:
                          \n"
     "fmul st(0), st(0) \n"
     "2:
                          \n"
     "shr eax, 1
                          \n"
     "inc 1b
                          \n"
     "fmul st(1), st(0) \n"
     "inz 1b
                          \n"
     "fstp st(0)
                          \n"
                       \n"
     "test edx, edx
     "jns 9f
                          \n"
     "fld1
                          \n"
     "fdivrp
                          \n"
                          \n"
     ".att_syntax prefix \n" // switch back to AT&T syntax
     // output operands:
     : "=t" (y)
                           // output in top-of-stack goes to y
     // input operands:
     : [xx] "m" (x), "a" (n) // input memory %[x] for x, eax for n
     // clobbered registers:
     : "%edx", "%st(1)" );
                           // edx and st(1) are modified
  return y;
}
```

Here, I have inserted <code>.intel_syntax noprefix</code> in the start of the assembly string which allows me to use Intel syntax for the instructions. The string must end with <code>.att_syntax prefix</code> to return to the default AT&T syntax, because this syntax is used in the subsequent code generated by the compiler. The instruction that loads the memory operand <code>x</code> must use AT&T syntax because the operand substitution mechanism uses AT&T syntax for the

operand substituted for $\{xx\}$. The instruction fldl $\{xx\}$ must therefore be written in AT&T syntax. We can still use AT&T-style local labels. The lists of output operands, input operands and clobbered registers are the same as in example 6.1e.

7 Using an assembler

There are certain limitations on what you can do with intrinsic functions and inline assembly. These limitations can be overcome by using an assembler. The principle is to write one or more assembly files containing the most critical functions of a program and writing the less critical parts in C++. The different modules are then linked together into an executable file.

The advantages of using an assembler are:

- There are almost no limitations on what you can do.
- You have complete control of all details of the final executable code.
- All aspects of the code can be optimized, including function prolog and epilog, parameter transfer methods, register usage, data alignment, etc.
- It is possible to make functions with multiple entries.
- It is possible to make code that is compatible with multiple compilers and multiple operating systems (see page 51).
- MASM and some other assemblers have a powerful macro language which opens up possibilities that are absent in most compiled high-level languages (see page 106).

The disadvantages of using an assembler are:

- Assembly language is difficult to learn. There are many instructions to remember.
- Coding in assembly takes more time than coding in a high level language.
- The assembly language syntax is not fully standardized.
- Assembly code tends to become poorly structured and spaghetti-like. It takes a lot of discipline to make assembly code well structured and readable for others.
- Assembly code is not portable between different microprocessor architectures.
- The programmer must know all details of the calling conventions and obey these conventions in the code.
- The assembler provides very little syntax checking. Many programming errors are not detected by the assembler.
- There are many things that you can do wrong in assembly code and the errors can have serious consequences.
- Errors in assembly code can be difficult to trace. For example, the error of not saving a register can cause a completely different part of the program to malfunction.

 Assembly language is not suitable for making a complete program. Most of the program has to be made in a different programming language.

The best way to start if you want to make assembly code is to first make the entire program in C or C++. Optimize the program with the use of the methods described in manual 1: "Optimizing software in C++". If any part of the program needs further optimization then isolate this part in a separate module. Then translate the critical module from C++ to assembly. There is no need to do this translation manually. Most C++ compilers can produce assembly code. Turn on all relevant optimization options in the compiler when translating the C++ code to assembly. The assembly code thus produced by the compiler is a good starting point for further optimization. The compiler-generated assembly code is sure to have the calling conventions right. (The output produced by 64-bit compilers for Windows is not yet fully compatible with any assembler).

Inspect the assembly code produced by the compiler to see if there are any possibilities for further optimization. Sometimes compilers are very smart and produce code that is better optimized than what an average assembly programmer can do. In other cases, compilers are incredibly stupid and do things in very awkward and inefficient ways. It is in the latter case that it is justified to spend time on assembly coding.

Most IDE's (Integrated Development Environments) provide a way of including assembly modules in a C++ project. For example in Microsoft Visual Studio, you can define a "custom build step" for an assembly source file. The specification for the custom build step may, for example, look like this. Command line: ml /c /Cx /Zi /coff \$(InputName).asm. Outputs: \$(InputName).obj. Alternatively, you may use a makefile (see page 49) or a batch file.

The C++ files that call the functions in the assembly module should include a header file (*.h) containing function prototypes for the assembly functions. It is recommended to add extern "C" to the function prototypes to remove the compiler-specific name mangling codes from the function names.

Examples of assembly functions for different platforms are provided in paragraph 4.5, page 30ff.

7.1 Static link libraries

It is convenient to collect assembled code from multiple assembly files into a function library. The advantages of organizing assembly modules into function libraries are:

- The library can contain many functions and modules. The linker will automatically
 pick the modules that are needed in a particular project and leave out the rest so
 that no superfluous code is added to the project.
- A function library is easy and convenient to include in a C++ project. All C++ compilers and IDE's support function libraries.
- A function library is reusable. The extra time spent on coding and testing a function in assembly language is better justified if the code can be reused in different projects.
- Making as a reusable function library forces you to make well tested and well
 documented code with a well defined functionality and a well defined interface to the
 calling program.

- A reusable function library with a general functionality is easier to maintain and verify than an application-specific assembly code with a less well-defined responsibility.
- A function library can be used by other programmers who have no knowledge of assembly language.

A static link function library for Windows is built by using the library manager (e.g. lib.exe) to combine one or more *.obj files into a *.lib file.

A static link function library for Linux is built by using the archive manager (ar) to combine one or more *.o files into an *.a file.

A function library must be supplemented by a header file (* . h) containing function prototypes for the functions in the library. This header file is included in the C++ files that call the library functions (e.g. #include "mylibrary.h").

It is convenient to use a makefile (see page 49) for managing the commands necessary for building and updating a function library.

7.2 Dynamic link libraries

The difference between static linking and dynamic linking is that the static link library is linked into the executable program file so that the executable file contains a copy of the necessary parts of the library. A dynamic link library (* .dll in Windows, * .so in Linux) is distributed as a separate file which is loaded at runtime by the executable file.

The advantages of dynamic link libraries are:

- Only one instance of the dynamic link library is loaded into memory when multiple programs running simultaneously use the same library.
- The dynamic link library can be updated without modifying the executable file.
- A dynamic link library can be called from most programming languages, such as Pascal, C#, Visual Basic (Calling from Java is possible but difficult).

The disadvantages of dynamic link libraries are:

- The whole library is loaded into memory even when only a small part of it is needed.
- Loading a dynamic link library takes extra time when the executable program file is loaded.
- Calling a function in a dynamic link library is less efficient than a static library because of extra call overhead and because of less efficient code cache use.
- The dynamic link library must be distributed together with the executable file.
- Multiple programs installed on the same computer must use the same version of a dynamic link library. This can cause many compatibility problems.

A DLL for Windows is made with the Microsoft linker (link.exe). The linker must be supplied one or more .obj or .lib files containing the necessary library functions and a DllEntry function, which just returns 1. A module definition file (*.def) is also needed. Note that DLL functions in 32-bit Windows use the __stdcall calling convention, while

static link library functions use the ___cdecl calling convention by default. An example source code can be found in www.agner.org/random/randoma.zip. Further instructions can be found in the Microsoft compiler documentation and in Iczelion's tutorials at win32asm.cjb.net.

I have no experience in making dynamic link libraries (shared objects) for Linux.

7.3 Libraries in source code form

A problem with subroutine libraries in binary form is that the compiler cannot optimize the function call. This problem can be solved by supplying the library functions as C++ source code.

If the library functions are supplied as C++ source code then the compiler can optimize away the function calling overhead by inlining the function. It can optimize register allocation across the function. It can do constant propagation. It can move invariant code when the function is called inside a loop, etc.

The compiler can only do these optimizations with C++ source code, not with assembly code. The code may contain inline assembly or intrinsic function calls. The compiler can do further optimizations if the code uses intrinsic function calls, but not if it uses inline assembly. Note that different compilers will not optimize the code equally well.

If the compiler uses whole program optimization then the library functions can simply be supplied as a C++ source file. If not, then the library code must be included with #include statements in order to enable optimization across the function calls. A function defined in an included file should be declared static and/or inline in order to avoid clashes between multiple instances of the function.

Some compilers with whole program optimization features can produce half-compiled object files that allow further optimization at the link stage. Unfortunately, the format of such files is not standardized - not even between different versions of the same compiler. It is possible that future compiler technology will allow a standardized format for half-compiled code. This format should, as a minimum, specify which registers are used for parameter transfer and which registers are modified by each function. It should preferably also allow register allocation at link time, constant propagation, common subexpression elimination across functions, and invariant code motion.

As long as such facilities are not available, we may consider using the alternative strategy of putting the entire innermost loop into an optimized library function rather than calling the library function from inside a C++ loop. This solution is used in Intel's Math Kernel Library (www.intel.com). If, for example, you need to calculate a thousand logarithms then you can supply an array of thousand arguments to a vector logarithm function in the library and receive an array of thousand results back from the library. This has the disadvantage that intermediate results have to be stored in arrays rather than transferred in registers.

7.4 Making classes in assembly

Classes are coded as structures in assembly and member functions are coded as functions that receive a pointer to the class/structure as a parameter.

It is not possible to apply the <code>extern "C"</code> declaration to a member function in C++ because <code>extern "C"</code> refers to the calling conventions of the C language which doesn't have classes and member functions. The most logical solution is to use the mangled function name. Returning to example 6.2a and b page 39, we can write the member function <code>int MyList::Sum()</code> with a mangled name as follows:

```
; Example 7.1a (Example 6.2b translated to stand alone assembly)
; Member function, 32-bit Windows, Microsoft compiler
; Define structure corresponding to class MyList:
MyList STRUC
length_ DD ?
                         ; length is a reserved name. Use length_
buffer DD 100 DUP (?) ; int buffer[100];
MyList ENDS
; int MyList::Sum()
; Mangled function name compatible with Microsoft compiler (32 bit):
?Sum@MyList@@QAEHXZ PROC near
; Microsoft compiler puts 'this' in ECX
assume ecx: ptr MyList ; ecx points to structure MyList
     xor eax, eax xor edx, edx
                                 ; sum = 0
                                 ; Loop index i = 0
     cmp [ecx].length_, 0
                                ; this->length
     je L9
                                 ; Skip if length = 0
L1: add eax, [ecx].buffer[edx*4]; sum += buffer[i]
     add edx, 1 ; i++
cmp edx, [ecx].length_ ; while (i < length)
                                 ; Loop
     jb L1
                                 ; Return value is in eax
     ret
?Sum@MyList@@QAEHXZ ENDP
                                ; End of int MyList::Sum()
                                 ; ecx no longer points to anything
assume ecx: nothing
```

The mangled function name <code>?Sum@MyList@@QAEHXZ</code> is compiler specific. Other compilers may have other name-mangling codes. Furthermore, other compilers may put 'this' on the stack rather than in a register. These incompatibilities can be solved by using a <code>friend</code> function rather than a member function. This solves the problem that a member function cannot be declared <code>extern "C"</code>. The declaration in the C++ header file must then be changed to the following:

```
// Example 7.1b. Member function changed to friend function:
// An incomplete class declaration is needed here:
class MyList;
// Function prototype for friend function with 'this' as parameter:
extern "C" int MyList_Sum(MyList * ThisP);
// Class declaration:
class MyList {
  protected:
  int length;
                           // Data members:
  int buffer[100];
  public:
                           // Constructor
  MyList();
  void AttItem(int item);  // Add item to list
   // Make MyList_Sum a friend:
  friend int MyList_Sum(MyList * ThisP);
   // Translate Sum to MyList_Sum by inline call:
  int Sum() {return MyList_Sum(this);}
};
```

The prototype for the friend function must come before the class declaration because some compilers do not allow <code>extern "C"</code> inside the class declaration. An incomplete class declaration is needed because the friend function needs a pointer to the class.

The above declarations will make the compiler replace any call to MyList::Sum by a call to MyList_Sum because the latter function is inlined into the former. The assembly implementation of MyList_Sum does not need a mangled name:

7.5 Thread-safe functions

A thread-safe or reentrant function is a function that works correctly when it is called simultaneously from more than one thread. Multithreading is used for taking advantage of computers with multiple CPU cores. It is therefore reasonable to require that a function library intended for speed-critical applications should be thread-safe.

Functions are thread-safe when no variables are shared between threads, except for intended communication between the threads. Constant data can be shared between threads without problems. Variables that are stored on the stack are thread-safe because each thread has its own stack. The problem arises only with static variables stored in the data segment. Static variables are used when data have to be saved from one function call to the next. It is possible to make thread-local static variables, but this is inefficient and system-specific.

The best way to store data from one function call to the next in a thread-safe way is to let the calling function allocate storage space for these data. The most elegant way to do this is to encapsulate the data and the functions that need them in a class. Each thread must create an object of the class and call the member functions on this object. The previous paragraph shows how to make member functions in assembly.

If the thread-safe assembly function has to be called from C or another language that does not support classes, or does so in an incompatible way, then the solution is to allocate a storage buffer in each thread and supply a pointer to this buffer to the function.

7.6 Makefiles

A make utility is a universal tool to manage software projects. It keeps track of all the source files, object files, library files, executable files, etc. in a software project. It does so by means of a general set of rules based on the date/time stamps of all the files. If a source file is

newer than the corresponding object file then the object file has to be re-made. If the object file is newer than the executable file then the executable file has to be re-made.

Any IDE (Integrated Development Environment) contains a make utility which is activated from a graphical user interface, but in most cases it is also possible to use a command-line version of the make utility. The command line make utility (called make or nmake) is based on a set of rules that you can define in a so-called makefile. The advantage of using a makefile is that it is possible to define rules for any type of files, such as source files in any programming language, object files, library files, module definition files, resource files, executable files, zip files, etc. The only requirement is that a tool exists for converting one type of file to another and that this tool can be called from a command line with the file names as parameters.

The syntax for defining rules in a makefile is almost the same for all the different make utilities that come with different compilers for Windows and Linux.

Many IDE's also provide features for user-defined make rules for file types not known to the IDE, but these utilities are often less general and flexible than a stand-alone make utility.

The following is an example of a makefile for making a function library mylibrary.lib from three assembly source files func1.asm, func2.asm, func3.asm and packing it together with the corresponding header file mylibrary.h into a zip file mylibrary.zip.

```
# Example 7.2. makefile for mylibrary
mylibrary.zip: mylibrary.lib mylibrary.h
   wzzip $@ $?

mylibrary.lib: func1.obj func2.obj func3.obj
   lib /out:$@ $**

.asm.obj
   ml /c /Cx /coff /Fo$@ $*.asm
```

The line mylibrary.zip: mylibrary.lib mylibrary.h tells that the file mylibrary.zip is built from mylibrary.lib and mylibrary.h, and that it must be rebuilt if any of these has been modified later than the zip file. The next line, which must be indented, specifies the command needed for building the target file mylibrary.zip from its dependents mylibrary.lib and mylibrary.h. (wzzip is a command line version of WinZip. Any other command line zip utility may be used). The next two lines tell how to build the library file mylibrary.lib from the three object files. The line .asm.obj is a generic rule. It tells that any file with extension .obj can be built from a file with the same name and extension .asm by using the rule in the following indented line.

The build rules can use the following macros for specifying file names:

```
$ = Current target's full name

$ < = Full name of dependent file

$ * = Current target's base name without extension

$ * * = All dependents of the current target, separated by spaces (nmake)

$ + = All dependents of the current target, separated by spaces (Gnu make)

$ ? = All dependents with a later timestamp than the current target
```

The make utility is activated with the command

```
nmake /Fmakefile or
make -f makefile.
```

See the manual for the particular make utility for details.

8 Making function libraries compatible with multiple compilers and platforms

There are a number of compatibility problems to take care of if you want to make a function library that is compatible with multiple compilers, multiple programming languages, and multiple operating systems. The most important compatibility problems have to do with:

- 1. Name mangling
- 2. Calling conventions
- 3. Object file formats

The easiest solution to these portability problems is to make the code in a high level language such as C++ and make any necessary low-level constructs with the use of intrinsic functions or inline assembly. The code can then be compiled with different compilers for the different platforms. Note that not all C++ compilers support intrinsic functions or inline assembly and that the syntax may differ.

If assembly language programming is necessary or desired then there are various methods for overcoming the compatibility problems between different x86 platforms. These methods are discussed in the following paragraphs.

8.1 Supporting multiple name mangling schemes

The easiest way to deal with the problems of compiler-specific name mangling schemes is to turn off name mangling with the <code>extern "C"</code> directive, as explained on page 30.

The extern "C" directive cannot be used for class member functions, overloaded functions and operators. This problem can be used by making an inline function with a mangled name to call an assembly function with an unmangled name:

```
// Example 8.1. Avoid name mangling of overloaded functions in C++
// Prototypes for unmangled assembly functions:
extern "C" double power_d (double x, double n);
extern "C" double power_i (double x, int n);

// Wrap these into overloaded functions:
inline double power (double x, double n) {return power_d(x, n);
inline double power (double x, int n) {return power_i(x, n);
```

The compiler will simply replace a call to the mangled function with a call to the appropriate unmangled assembly function without any extra code. The same method can be used for class member functions, as explained on page 48.

However, in some cases it is desired to preserve the name mangling. Either because it makes the C++ code simpler, or because the mangled names contain information about calling conventions and other compatibility issues.

An assembly function can be made compatible with multiple name mangling schemes simply by giving it multiple public names. Returning to example 4.1c page 31, we can add mangled names for multiple compilers in the following way:

```
; Example 8.2. (Example 4.1c rewritten)
```

```
; Function with multiple mangled names (32-bit mode)
; double sinxpnx (double x, int n) {return sin(x) + n*x;}
ALTGN
_sinxpnx PROC NEAR
                     ; extern "C" name
; Make public names for each name mangling scheme:
?sinxpnx@@YANNH@Z LABEL NEAR ; Microsoft compiler
@sinxpnx$qdi LABEL NEAR ; Borland compiler
PUBLIC ?sinxpnx@@YANNH@Z, @sinxpnx$qdi, _Z7sinxpnxdi, __Z7sinxpnxdi
; parameter x = [ESP+4]
; parameter n = [ESP+12]
; return value = ST(0)
   fild dword ptr [esp+12]; n
   fld qword ptr [esp+4] ; x
   fmul st(1), st(0) ; n*x
                        ; sin(x)
   fsin
                        i \sin(x) + n*x
   fadd
                        ; return value is in st(0)
   ret
_sinxpnx ENDP
```

Example 8.2 works with most compilers in both 32-bit Windows and 32-bit Linux because the calling conventions are the same. A function can have multiple public names and the linker will simply search for a name that matches the call from the C++ file. But a function call cannot have more than one external name.

The syntax for name mangling for different compilers is described in manual 5: "Calling conventions for different C++ compilers and operating systems". Applying this syntax manually is a difficult job. It is much easier and safer to generate each mangled name by compiling the function in C++ with the appropriate compiler. Command line versions of most compilers are available for free or as trial versions.

The Intel, Digital Mars and Codeplay compilers for Windows are compatible with the Microsoft name mangling scheme. The Intel compiler for Linux is compatible with the Gnu name mangling scheme. Gnu compilers version 2.x and earlier have a different name mangling scheme which I have not included in example 8.2. Mangled names for the Watcom compiler contain special characters which are only allowed by the Watcom assembler.

8.2 Supporting multiple calling conventions in 32 bit mode

Member functions in 32-bit Windows do not always have the same calling convention. The Microsoft-compatible compilers use the __thiscall convention with 'this' in register ecx, while Borland and Gnu compilers use the __cdecl convention with 'this' on the stack. One solution is to use friend functions as explained on page 48. Another possibility is to make a function with multiple entries. The following example is a rewrite of example 7.1a page 48 with two entries for the two different calling conventions:

```
; Example 8.3a (Example 7.1a with two entries)
; Member function, 32-bit mode
; int MyList::Sum()

; Define structure corresponding to class MyList:
MyList STRUC
length_ DD ?
buffer DD 100 DUP (?)
```

```
MyList ENDS
           PROC NEAR ; for extern "C" friend function
MyList Sum
; Make mangled names for compilers with __cdecl convention:
@MyList@Sum$qv LABEL NEAR ; Borland compiler
_ZN6MyList3SumEv LABEL NEAR ; Gnu comp. for Linux
__ZN6MyList3SumEv LABEL NEAR ; Gnu comp. for Windows and Mac OS
PUBLIC @MyList@Sum$qv, _ZN6MyList3SumEv, __ZN6MyList3SumEv
     ; Move 'this' from the stack to register ecx:
     mov ecx, [esp+4]
; Make mangled names for compilers with __thiscall convention:
?Sum@MyList@@QAEHXZ LABEL NEAR ; Microsoft compiler
PUBLIC ?Sum@MyList@@QAEHXZ
assume ecx: ptr MyList
                               ; ecx points to structure MyList
     xor eax, eax xor edx, edx
                               ; sum = 0
                               ; Loop index i = 0
     je L9
                                ; Skip if length = 0
L1: add eax, [ecx].buffer[edx*4] ; sum += buffer[i]
     add edx, 1 ; i++
cmp edx, [ecx].length_ ; while (i < length)
ib [1]
                                ; Loop
     jb L1
L9: ret
                                ; Return value is in eax
_MyList_Sum ENDP
                                ; End of int MyList::Sum()
assume ecx: nothing
                                ; ecx no longer points to anything
```

The difference in name mangling schemes is actually an advantage here because it enables the linker to lead the call to the entry that corresponds to the right calling convention.

The method becomes more complicated if the member function has more parameters. Consider the function <code>void MyList::AttItem(int item)</code> on page 39. The <code>__thiscall</code> convention has the parameter 'this' in <code>ecx</code> and the parameter <code>item</code> on the stack at <code>[esp+4]</code> and requires that the stack is cleaned up by the function. The <code>__cdecl</code> convention has both parameters on the stack with 'this' at <code>[esp+4]</code> and <code>item</code> at <code>[esp+8]</code> and the stack cleaned up by the caller. A solution with two function entries requires a jump:

```
; Example 8.3b
; void MyList::AttItem(int item);
                 PROC NEAR ; for extern "C" friend function
MyList AttItem
; Make mangled names for compilers with __cdecl convention:
PUBLIC @MyList@AttItem$qi, _ZN6MyList7AttItemEi, __ZN6MyList7AttItemEi
     ; Move parameters into registers:
     mov ecx, [esp+4]; ecx = this
     mov edx, [esp+8]
                               ; edx = item
     jmp L0
                              ; jump into common section
; Make mangled names for compilers with __thiscall convention:
?AttItem@MyList@@QAEXH@Z LABEL NEAR; Microsoft compiler
PUBLIC ?AttItem@MyList@@QAEXH@Z
     pop eax
                               ; Remove return address from stack
                               ; Get parameter 'item' from stack
     pop edx
                               ; Put return address back on stack
     push eax
LO: ; common section where parameters are in registers
```

In example 8.3b, the two function entries each load all parameters into registers and then jumps to a common section that doesn't need to read parameters from the stack. The __thiscall entry must remove parameters from the stack before the common section.

Another compatibility problem occurs when we want to have a static and a dynamic link version of the same function library in 32-bit Windows. The static link library uses the __cdecl convention by default, while the dynamic link library uses the __stdcall convention by default. The static link library is the most efficient solution for C++ programs, but the dynamic link library is needed for several other programming languages.

One solution to this problem is to specify the __cdecl or the __stdcall convention for both libraries. Another solution is to make functions with two entries.

The following example shows the function from example 8.2 with two entries for the __cdecl and __stdcall calling conventions. Both conventions have the parameters on the stack. The difference is that the stack is cleaned up by the caller in the __cdecl convention and by the called function in the __stdcall convention.

```
; Example 8.4a (Example 8.2 with __stdcall and __cdecl entries)
; Function with entries for __stdcall and __cdecl (32-bit Windows):
ALIGN
; __stdcall entry:
; extern "C" double stdcall sinxpnx (double x, int n);
            PROC NEAR
    ; Get all parameters into registers
   fild dword ptr [esp+12]; n
   fld gword ptr [esp+4] ; x
   ; Remove parameters from stack:
   pop eax ; Pop return address add esp, 12 ; remove 12 bytes of
                          ; remove 12 bytes of parameters
                   ; Put return address back on stack
   push eax
   jmp L0
; __cdecl entry:
; extern "C" double __cdecl sinxpnx (double x, int n);
_sinxpnx LABEL NEAR
PUBLIC _sinxpnx
   ; Get all parameters into registers
   fild dword ptr [esp+12]; n
   fld qword ptr [esp+4] ; x
    ; Don't remove parameters from the stack. This is done by caller
LO: ; Common entry with parameters all in registers
; parameter x = st(0)
; parameter n = st(1)
   fmul st(1), st(0) ; n*x
   fsin
                           ; sin(x)
```

The method of removing parameters from the stack in the function prolog rather than in the epilog is admittedly rather kludgy. A more efficient solution is to use conditional assembly:

```
; Example 8.4b
; Function with versions for __stdcall and __cdecl (32-bit Windows)
; Choose function prolog according to calling convention:
IFDEF STDCALL_ ; If STDCALL_ is defined
  _sinxpnx@12 PROC NEAR ; extern "C" __stdcall function name
ELSE
   _sinxpnx PROC NEAR ; extern "C" __cdecl function name
ENDIF
; Function body common to both calling conventions:
   fild dword ptr [esp+12]; n
   fld qword ptr [esp+4] ; x
   fmul st(1), st(0) ; n*x
   fsin
                        ; sin(x)
   fadd
                         ; \sin(x) + n*x
; Choose function epilog according to calling convention:
ret 12
                        ; Clean up stack if stdcall
   _sinxpnx@12 ENDP ; End of function
ELSE
   ret ; Don't clean up stack if __cdecl _sinxpnx ENDP ; End of function
ENDIF
```

This solution requires that you make two versions of the object file, one with __cdecl calling convention for the static link library and one with __stdcall calling convention for the dynamic link library. The distinction is made on the command line for the assembler. The __stdcall version is assembled with /DSTDCALL_ on the command line to define the macro STDCALL_, which is detected by the IFDEF conditional.

8.3 Supporting multiple calling conventions in 64 bit mode

Calling conventions are better standardized in 64-bit systems than in 32-bit systems. There is only one calling convention for 64-bit Windows and one calling convention for 64-bit Linux and other Unix-like systems. Unfortunately, the two sets of calling conventions are quite different. The most important differences are:

- Function parameters are transferred in different registers in the two systems.
- Registers RSI, RDI, and XMM6 XMM15 have callee-save status in 64-bit Windows but not in 64-bit Linux.
- The caller must reserve a "shadow space" of 32 bytes on the stack for the called function in 64-bit Windows but not in Linux.
- A "red zone" of 128 bytes below the stack pointer is available for storage in 64-bit Linux but not in Windows.
- The Microsoft name mangling scheme is used in 64-bit Windows, the Gnu name mangling scheme is used in 64-bit Linux.

Both systems have the stack aligned by 16 before any call, and both systems have the stack cleaned up by the caller.

It is possible to make functions that can be used in both systems when the differences between the two systems are taken into account. The function should save the registers that have callee-save status in Windows or leave them untouched. The function should not use the shadow space or the red zone. The function should reserve a shadow space for any function it calls. The function needs two entries in order to resolve the differences in registers used for parameter transfer if it has any integer parameters.

Let's use example 4.1 page 30 once more and make an implementation that works in both 64-bit Windows and 64-bit Linux.

```
; Example 8.5a (Example 4.1e/f combined).
; Support for both 64-bit Windows and 64-bit Linux
; double sinxpnx (double x, int n) {return sin(x) + n * x;}
EXTRN
        sin:near
ALIGN
        8
; 64-bit Linux entry:
_Z7sinxpnxdi PROC NEAR ; Gnu name mangling
    ; Linux has n in edi, Windows has n in edx. Move it:
   mov edx, edi
; 64-bit Windows entry:
?sinxpnx@@YANNH@Z LABEL NEAR ; Microsoft name mangling
PUBLIC ?sinxpnx@@YANNH@Z
; parameter x = xmm0
; parameter n = edx
; return value = xmm0
   mov ebx, edx ; save n across call to sin call sin ; xmm0 = sin(xmm0)
   call \sin ; xmm0 = \sin(xmm0)

cvtsi2sd xmm1, ebx ; convert n to double

mulsd xmm1, [rsp+32] ; n * x
   addsd
           xmm0, xmm1 ; sin(x) + n * x
   add rsp, 48
                           ; restore stack pointer
   pop rbx
                          ; restore rbx
ret ; return value is in xmm0 _Z7sinxpnxdi ENDP ; End of function
```

We are not using <code>extern "C"</code> declaration here because we are relying on the different name mangling schemes for distinguishing between Windows and Linux. The two entries are used for resolving the differences in parameter transfer. If the function declaration had <code>n</code> before <code>x</code>, i.e. <code>double sinxpnx (int n, double x);</code>, then the Windows version would have <code>x</code> in <code>xmm1</code> and <code>n</code> in <code>ecx</code>, while the Linux version would still have <code>x</code> in <code>xmm0</code> and <code>n</code> in <code>EDI</code>.

The function is storing x on the stack across the call to \sin because there are no XMM registers with callee-save status in 64-bit Linux. The function reserves 32 bytes of shadow space for the call to \sin even though this is not needed in Linux.

8.4 Supporting different object file formats

Another compatibility problem stems from differences in the formats of object files.

Borland, Digital Mars and 16-bit Microsoft compilers use the OMF format for object files. Microsoft, Intel and Gnu compilers for 32-bit Windows use the COFF format, also called PE32. Gnu and Intel compilers under 32-bit Linux prefer the ELF32 format. Gnu and Intel compilers for Mac OS X use the 32- and 64-bit Mach-O format. The 32-bit Codeplay compiler supports both the OMF, PE32 and ELF32 formats. All compilers for 64-bit Windows use the COFF/PE32+ format, while compilers for 64-bit Linux use the ELF64 format.

The MASM assembler can produce both OMF, COFF/PE32 and COFF/PE32+ format object files, but not ELF format. The NASM assembler can produce OMF, COFF/PE32 and ELF32 formats. The YASM assembler can produce OMF, COFF/PE32, ELF32/64, COFF/PE32+ and MachO32/64 formats. The Gnu assembler (Gas) can produce ELF32/64 and MachO32/64 formats.

It is possible to do cross-platform development if you have an assembler that supports all the object file formats you need or a suitable object file conversion utility. This is useful for making function libraries that work on multiple platforms. An object file converter and cross-platform library manager named object is available from www.agner.org/optimize.

The objconv utility can change function names in the object file as well as converting to a different object file format. This eliminates the need for name mangling. Repeating example 8.5 without name mangling:

```
; Example 8.5b.
; Support for both 64-bit Windows and 64-bit Unix systems.
; double sinxpnx (double x, int n) {return sin(x) + n * x;}
         sin:near
ALIGN
         8
; 64-bit Linux entry:
Unix sinxpnx PROC NEAR ; Linux, BSD, Mac entry
    ; Unix has n in edi, Windows has n in edx. Move it:
   mov edx, edi
; 64-bit Windows entry:
Win_sinxpnx LABEL NEAR ; Microsoft entry
PUBLIC Win_sinxpnx
; parameter x = xmm0
; parameter n = edx
; return value = xmm0
   push rbx ; rbx must be saved
sub rsp, 48 ; space for x, shadow space f. sin, align
   movapd [rsp+32], xmm0 ; save x across call to sin
   mov ebx, edx ; save n across call to sin call sin ; xmm0 = sin(xmm0)
   call sin ; xmm0 = sin(xmm0)
cvtsi2sd xmm1, ebx ; convert n to double
   mulsd xmm1, [rsp+32]; n * x
   addsd xmm0, xmm1 ; sin(x) + n * x
   add rsp, 48
                           ; restore stack pointer
   pop rbx
ret
                           ; restore rbx
                           ; return value is in xmm0
Unix_sinxpnx ENDP ; End of function
```

This function can now be assembled and converted to multiple file formats with the following commands:

```
ml64 /c sinxpnx.asm
objconv -cof64 -np:Win_: sinxpnx.obj sinxpnx_win.obj
objconv -elf64 -np:Unix_: sinxpnx.obj sinxpnx_linux.o
```

```
objconv -mac64 -np:Unix_:_ sinxpnx.obj sinxpnx_mac.o
```

The first line assembles the code using the Microsoft 64-bit assembler ml64 and produces a COFF object file.

The second line replaces "win_" with nothing in the beginning of function names in the object file. The result is a COFF object file for 64-bit Windows where the Windows entry for our function is available as <code>extern "C" double sinxpnx(double x, int n)</code>. The name <code>unix_sinxpnx</code> for the Unix entry is still unchanged in the object file, but is not used. The third line converts the file to ELF format for 64-bit Linux and BSD, and replaces "unix_" with nothing in the beginning of function names in the object file. This makes the Unix entry for the function available as sinxpnx, while the unused Windows entry is $win_sinxpnx$. The fourth line does the same for the MachO file format, and puts an underscore prefix on the function name, as required by Mac compilers.

Objconv can also build and convert static library files (*.lib, *.a). This makes it possible to build a multi-platform function library on a single source platform.

An example of using this method is the multi-platform function library asmlib.zip available from www.agner.org/optimize/. asmlib.zip includes a makefile (see page 49) that makes multiple versions of the same library by using the object file converter objconv.

More details about object file formats can be found in the book "Linkers and Loaders" by J. R. Levine (Morgan Kaufmann Publ. 2000).

8.5 Supporting other high level languages

If you are using other high-level languages than C++, and the compiler manual has no information on how to link with assembly, then see if the manual has any information on how to link with C or C++ modules. You can probably find out how to link with assembly from this information.

In general, it is preferred to use simple functions without name mangling, compatible with the ${\tt extern}$ "C" and ${\tt _cdecl}$ or ${\tt _stdcall}$ conventions in C++. This will work with most compiled languages. Arrays and strings are usually implemented differently in different languages.

Many modern programming languages such as C# and Visual Basic.NET cannot link to static link libraries. You have to make a dynamic link library instead. Delphi Pascal may have problems linking to object files - it is easier to use a DLL.

Calling assembly code from Java is quite complicated. You have to compile the code to a DLL and use the Java Native Interface (JNI).

9 Optimizing for speed

9.1 Identify the most critical parts of your code

Optimizing software is not just a question of fiddling with the right assembly instructions. Many modern applications use much more time on loading modules, resource files, databases, interface frameworks, etc. than on actually doing the calculations the program is made for. Optimizing the calculation time does not help when the program spends 99.9% of its time on something other than calculation. It is important to find out where the biggest time consumers are before you start to optimize anything. Sometimes the solution can be to change from C# to C++, to use a different user interface framework, to organize file input and output differently, to cache network data, to avoid dynamic memory allocation, etc.,

rather than using assembly language. See manual 1: "Optimizing software in C++" for further discussion.

The use of assembly code for optimizing software is relevant only for highly CPU-intensive programs such as sound and image processing, encryption, sorting, data compression and complicated mathematical calculations.

In CPU-intensive software programs, you will often find that more than 99% of the CPU time is used in the innermost loop. Identifying the most critical part of the software is therefore necessary if you want to improve the speed of computation. Optimizing less critical parts of the code will not only be a waste of time, it also makes the code less clear, and less easy to debug and maintain. Most compiler packages include a profiler that can tell you which part of the code is most critical. If you don't have a profiler and if it is not obvious which part of the code is most critical, then set up a number of counter variables that are incremented at different places in the code to see which part is executed most times. Use the methods described on page 154 for measuring how long time each part of the code takes.

It is important to study the algorithm used in the critical part of the code to see if it can be improved. Often you can gain more speed simply by choosing the optimal algorithm than by any other optimization method.

9.2 Out of order execution

All modern x86 processors can execute instructions out of order. Consider this example:

```
; Example 9.1a, Out-of-order execution
mov eax, [mem1]
imul eax, 6
mov [mem2], eax
mov ebx, [mem3]
add ebx, 2
mov [mem4], ebx
```

This piece of code is doing two things that have nothing to do with each other: multiplying <code>[mem1]</code> by 6 and adding 2 to <code>[mem3]</code>. If it happens that <code>[mem1]</code> is not in the cache then the CPU has to wait many clock cycles while this operand is being fetched from main memory. The CPU will look for something else to do in the meantime. It cannot do the second instruction <code>imu1 eax,6</code> because it depends on the output of the first instruction. But the third instruction <code>mov ebx,[mem3]</code> is independent of the preceding instructions so it is possible to execute <code>mov ebx,[mem3]</code> and <code>add ebx,2</code> while it is waiting for <code>[mem1]</code>. The CPU's have many features to support efficient out-of-order execution. Most important is, of course, the ability to detect whether an instruction depends on the output of a previous instruction. Another important feature is register renaming. Assume that the we are using the same register for multiplying and adding in example 9.1a because there are no more spare registers:

```
; Example 9.1b, Out-of-order execution with register renaming
mov eax, [mem1]
imul eax, 6
mov [mem2], eax
mov eax, [mem3]
add eax, 2
mov [mem4], eax
```

Example 9.1b will work exactly as fast as example 9.1a because the CPU is able to use different physical registers for the same logical register <code>eax</code>. This works in a very elegant way. The CPU assigns a new physical register to hold the value of <code>eax</code> every time <code>eax</code> is written to. This means that the above code is changed inside the CPU to a code that uses four different physical registers for <code>eax</code>. The first register is used for the value loaded from

[mem1]. The second register is used for the output of the imul instruction. The third register is used for the value loaded from [mem3]. And the fourth register is used for the output of the add instruction. The use of different physical registers for the same logical register enables the CPU to make the last three instructions in example 9.1b independent of the first three instructions. The CPU must have a lot of physical registers for this mechanism to work efficiently. The number of physical registers is different for different microprocessors, but you can generally assume that the number is sufficient for quite a lot of instruction reordering.

Some CPU's can keep different parts of a register separate, while other CPU's always treat a register as a whole. If we change example 9.1b so that the second part uses 16-bit registers then we have the problem of a false dependence:

```
; Example 9.1c, False dependence of partial register
mov eax, [mem1] ; 32 bit memory operand
imul eax, 6
mov [mem2], eax
mov ax, [mem3] ; 16 bit memory operand
add ax, 2
mov [mem4], ax
```

Here the instruction <code>mov ax,[mem3]</code> changes only the lower 16 bits of register <code>eax</code>, while the upper 16 bits retain the value they got from the <code>imul</code> instruction. Many CPU's from both Intel and AMD are unable to rename a partial register. The consequence is that the <code>movax,[mem3]</code> instruction has to wait for the <code>imul</code> instruction to finish because it needs to combine the 16 lower bits from <code>[mem3]</code> with the 16 upper bits from the <code>imul</code> instruction. Other CPU's are able to resolve the situation and avoid the false dependence in various more or less efficient ways. The problem is avoided by replacing <code>mov ax,[mem3]</code> with <code>movzx eax,[mem3]</code>. This resets the high bits of <code>eax</code> and breaks the dependence on any previous value of <code>eax</code>. In 64-bit mode, it is sufficient to write to the 32-bit register because this always resets the upper part of a 64-bit register. Thus, <code>movzx eax,[mem3]</code> and <code>movzx rax,[mem3]</code> are doing exactly the same thing. The 32-bit version of the instruction is one byte shorter than the 64-bit version. Any use of the high 8-bit registers <code>AH, BH, CH, DH</code> should be avoided because it can cause false dependences and less efficient code.

Another important feature is the splitting of instructions into micro-operations (abbreviated µops or uops). The following example shows the advantage of this:

```
; Example 9.2, Splitting instructions into uops
push eax
call SomeFunction
```

The push eax instruction does two things. It subtracts 4 from the stack pointer and stores eax to the address pointed to by the stack pointer. Assume now that eax is the result of a long and time-consuming calculation. This delays the push instruction. The call instruction depends on the value of the stack pointer which is modified by the push instruction. If instructions were not split into pups then the call instruction would have to wait until the push instruction was finished. But the CPU splits the push eax instruction into sub esp, 4 followed by mov [esp], eax. The sub esp, 4 micro-operation can be executed before eax is ready, so the call instruction will wait only for sub esp, 4 but not for mov [esp], eax.

Out-of-order execution becomes even more efficient when the CPU can do more than one thing at the same time. Many CPU's can do two, three or four things at the same time if the things to do are independent of each other and do not use the same execution units in the CPU. Most CPU's have at least two integer ALU's (Arithmetic Logic Units) so that they can do two or more integer additions per clock cycle. There is usually one floating point add unit and one floating point multiplication unit so that it is possible to do a floating point addition and a multiplication at the same time. There is at least one memory read unit and one

memory write unit so that it is possible to read and write to memory at the same time. The maximum average number of μ ops per clock cycle is three or four so that it is possible, for example, to do an integer operation, a floating point operation, and a memory operation in the same clock cycle. The maximum number of arithmetic operations (i.e. anything else than memory read or write) is limited to two or three μ ops per clock cycle, depending on the CPU.

Floating point operations are usually pipelined so that a new floating point addition can start before the previous addition is finished. MMX and XMM instructions use the floating point execution units even for integer instructions on many CPU's. The details about which instructions can be executed simultaneously or pipelined and how many clock cycles each instruction takes are CPU specific. The details for each type of CPU are explained manual 3: "The microarchitecture of Intel and AMD CPU's" and manual 4: "Instruction tables".

The most important things you have to be aware of in order to take maximum advantage of out-or-order execution are:

- At least the following registers can be renamed: all integer registers, the stack pointer, the flags register, floating point registers, MMX registers, and XMM registers. Some CPU's can also rename segment registers and the floating point control word.
- Prevent false dependences by writing to a full register rather than a partial register.
- The INC and DEC instructions should be avoided because they write to only part of the flags register (excluding the carry flag). Use ADD or SUB instead to avoid false dependences or inefficient splitting of the flags register.
- A chain of instructions where each instruction depends on the previous one cannot execute out of order. Avoid long dependency chains. (See page 63).
- Memory operands cannot be renamed.
- A memory read can execute before a preceding memory write to a different address.
 Any pointer or index registers should be calculated as early as possible so that the CPU can verify that the addresses of memory operands are different.
- A memory write cannot execute before a preceding write, but the write buffers can hold a number of pending writes, typically four or six.
- A memory read can execute before another preceding read on Intel processors, but not on AMD processors.
- The CPU can do more things simultaneously if the code contains a good mixture of instructions from different categories, such as: simple integer instructions, floating point addition, multiplication, memory read, memory write.

9.3 Instruction fetch, decoding and retirement

Instruction fetching can be a bottleneck. Many processors cannot fetch more than 16 bytes of instruction code per clock cycle. It may be necessary to make instructions as short as possible if this limit turns out to be critical. One way of making instructions shorter is to replace memory operands by pointers (see chapter 10 page 71). The address of memory operands can possibly be loaded into pointer registers outside of a loop if instruction fetching is a bottleneck. Large constants can likewise be loaded into registers.

Instruction fetching is delayed by jumps on most processors. It is important to minimize the number of jumps in critical code. Branches that are not taken and correctly predicted do not delay instruction fetching. It is therefore advantageous to organize if-else branches so that the branch that is followed most commonly is the one where the conditional jump is not taken.

Most processors fetch instructions in aligned 16-byte or 32-byte blocks. It can be advantageous to align critical loop entries and subroutine entries by 16 in order to minimize the number of 16-byte boundaries in the code. Alternatively, make sure that there is no 16-byte boundary in the first few instructions after a critical loop entry or subroutine entry.

Instruction decoding is often a bottleneck. The organization of instructions that gives the optimal decoding is processor-specific. Intel PM processors require a 4-1-1 decode pattern. This means that instructions which generate 2, 3 or 4 µops should be interspersed by two single-µop instructions. On Core2 processors the optimal decode pattern is 4-1-1-1. On AMD processors it is preferred to avoid instructions that generate more than 2 µops.

Instructions with multiple prefixes can slow down decoding. The maximum number of prefixes that an instruction can have without slowing down decoding is 1 on 32-bit Intel processors, 2 on Intel P4E processors, 3 on AMD processors, and unlimited on Core2. Avoid address size prefixes. Avoid operand size prefixes on instructions with an immediate operand. For example, it is preferred to replace MOV AX, 2 by MOV EAX, 2.

Decoding is rarely a bottleneck on processors with a trace cache, but there are specific requirements for optimal use of the trace cache.

Most Intel processors have a problem called register read stalls. This occurs if the code has several registers which are often read from but seldom written to.

Instruction retirement can be a bottleneck on most processors. AMD processors and Intel PM and P4 processors can retire no more than 3 µops per clock cycle. Core2 processors can retire 4 µops per clock cycle. No more than one taken jump can retire per clock cycle.

All these details are processor-specific. See manual 3: "The microarchitecture of Intel and AMD CPU's" for details.

9.4 Instruction latency and throughput

The latency of an instruction is the number of clock cycles it takes from the time the instruction starts to execute till the result is ready. The time it takes to execute a dependency chain is the sum of the latencies of all instructions in the chain.

The throughput of an instruction is the maximum number of instructions of the same kind that can be executed per clock cycle if the instructions are independent. I prefer to list the reciprocal throughputs because this makes it easier to compare latency and throughput. The reciprocal throughput is the average time it takes from the time an instruction starts to execute till another independent instruction of the same type can start to execute, or the number of clock cycles per instruction in a series of independent instructions of the same kind. For example, floating point addition on a Core 2 processor has a latency of 3 clock cycles and a reciprocal throughput of 1 clock per instruction. This means that the processor uses 3 clock cycles per addition if each addition depends on the result of the preceding addition, but only 1 clock cycle per addition if the additions are independent.

Manual 4: "Instruction tables" contains detailed lists of latencies and throughputs for almost all instructions on many different microprocessors from Intel and AMD.

The following list shows some typical values.

Instruction	Typical latency	Typical reciprocal throughput
Integer move	1	0.33-0.5
Integer addition	1	0.33-0.5
Integer Boolean	1	0.33-1
Integer shift	1	0.33-1
Integer multiplication	3-10	1-2
Integer division	20-80	20-40
Floating point addition	3-6	1
Floating point multiplication	4-8	1-2
Floating point division	20-45	20-45
Integer vector addition (XMM)	1-2	0.5-2
Integer vector multiplication (XMM)	3-7	1-2
Floating point vector addition (XMM)	3-5	1-2
Floating point vector multiplication (XMM)	4-7	1-4
Floating point vector division (XMM)	20-60	20-60
Memory read (cached)	3-4	0.5-1
Memory write (cached)	3-4	1
Jump or call	0	1-2

Table 9.1. Typical instruction latencies and throughputs

9.5 Break dependency chains

In order to take advantage of out-of-order execution, you have to avoid long dependency chains. Consider the following C++ example, which calculates the sum of 100 numbers:

```
// Example 9.3a, Loop-carried dependency chain
double list[100], sum = 0.;
for (int i = 0; i < 100; i++) sum += list[i];</pre>
```

This code is doing a hundred additions, and each addition depends on the result of the preceding one. This is a loop-carried dependency chain. A loop-carried dependency chain can be very long and completely prevent out-of-order execution for a long time. Only the calculation of \pm can be done in parallel with the floating point addition.

Assuming that floating point addition has a latency of 4 and a reciprocal throughput of 1, the optimal implementation will have four accumulators so that we always have four additions in the pipeline of the floating point adder. In C++ this will look like:

```
// Example 9.3b, Multiple accumulators
double list[100], sum1 = 0., sum2 = 0., sum3 = 0., sum4 = 0.;
for (int i = 0; i < 100; i += 4) {
   sum1 += list[i];
   sum2 += list[i+1];
   sum3 += list[i+2];
   sum4 += list[i+3];
}
sum1 = (sum1 + sum2) + (sum3 + sum4);</pre>
```

Here we have four dependency chains running in parallel and each dependency chain is one fourths as long as the original one. See page 63 for examples of assembly code for loops with multiple accumulators.

It may not be possible to obtain the theoretical maximum throughput. The more parallel dependency chains there are, the more difficult is it for the CPU to schedule and reorder the µops optimally. It is particularly difficult if the dependency chains are branched or entangled.

Dependency chains occur not only in loops but also in linear code. Such dependency chains can also be broken up. For example, y = a + b + c + d can be changed to y = (a + b) + (c + d) so that the two parentheses can be calculated in parallel.

Sometimes there are different possible ways of implementing the same calculation with different latencies. For example, you may have the choice between a branch and a conditional move. The branch has the shortest latency, but the conditional move avoids the risk of branch misprediction (see page 65). Which implementation is optimal depends on how predictable the branch is and how long the dependency chain is.

A common way of setting a register to zero is XOR EAX, EAX OF SUB EAX, EAX. Some processors recognize that these instructions are independent of the prior value of the register. So any instruction that uses the new value of the register will not have to wait for the value prior to the XOR OF SUB instruction to be ready. These instructions are useful for breaking an unnecessary dependence. The following list summarizes which instructions are recognized as breaking dependence when source and destination are the same, on different processors:

Instruction	P3 and earlier	P4	PM	Core2	AMD
XOR	-	Х	-	Х	Х
SUB	-	Х	-	Х	Х
SBB	-	-	-	-	Х
CMP	-	-	-	-	-
PXOR	-	Х	-	Х	Х
XORPS, XORPD	-	-	-	Х	Х
PANDN	-	-	-	-	-
PSUBxx	-	-	-	Х	-
PCMPxx	-	-	-	Х	-

Table 9.2. Instructions that break dependence when source and destination are the same

You should not break a dependence by an 8-bit or 16-bit part of a register. For example XOR AX, AX breaks a dependence on some processors, but not all. But XOR EAX, EAX is sufficient for breaking the dependence on RAX in 64-bit mode.

The SBB EAX, EAX is of course dependent on the carry flag, even when it does not depend on EAX.

You may also use these instructions for breaking dependences on the flags. For example, rotate instructions have a false dependence on the flags in Intel processors. This can be removed in the following way:

```
; Example 9.4, Break dependence on flags ror eax, 1 sub edx, edx ; Remove false dependence on the flags ror ebx, 1
```

You cannot use CLC for breaking dependences on the carry flag.

9.6 Jumps and calls

Jumps, branches, calls and returns do not necessarily add to the execution time of a code because they will typically be executed in parallel with something else. The number of jumps etc. should nevertheless be kept at a minimum in critical code for the following reasons:

- Instruction prefetching is less efficient after a jump, especially if the target is near the end of a 16-byte block.
- The code cache becomes fragmented and less efficient when jumping around between noncontiguous subroutines.
- Microprocessors with a trace cache are likely to store multiple instances of the same code in the trace cache when the code contains many jumps.
- The branch target buffer (BTB) can store only a limited number of jump target addresses. A BTB miss costs many clock cycles.
- Conditional jumps are predicted according to advanced branch prediction mechanisms. Mispredictions are expensive, as explained below.
- On most processors, branches can interfere with each other in the global branch pattern history table and the branch history register. One branch may therefore reduce the prediction rate of other branches.
- Returns are predicted by the use of a return stack buffer, which can only hold a limited number of return addresses, typically 8 or 16.
- Indirect jumps and indirect calls are poorly predicted on older processors.

All modern CPU's have an execution pipeline that contains stages for instruction prefetching, decoding, register renaming, µop reordering and scheduling, execution, retirement, etc. The number of stages in the pipeline range from 12 to 22, depending on the specific microarchitecture. When a branch instruction is fed into the pipeline then the CPU doesn't know for sure which instruction is the next one to fetch into the pipeline. It takes at least 12 more clock cycles before the branch instruction is executed so that it is known with certainty which way the branch goes. This uncertainty is likely to break the flow through the pipeline. Rather than waiting 12 or more clock cycles for an answer, the CPU attempts to guess which way the branch will go. The guess is based on the previous behavior of the branch. If the branch has gone the same way the last several times then it is predicted that it will go the same way this time. If the branch has alternated regularly between the two ways then it is predicted that it will continue to alternate.

If the prediction is right then the CPU has saved a lot of time by loading the right branch into the pipeline and started to decode and speculatively execute the instructions in the branch. If the prediction was wrong then the mistake is discovered after several clock cycles and the mistake has to be fixed by flushing the pipeline and discarding the results of the speculative executions. The cost of a branch misprediction ranges from 12 to more than 50 clock cycles, depending on the length of the pipeline and other details of the microarchitecture. This cost is so high that very advanced algorithms have been implemented in order to refine the branch prediction. These algorithms are explained in detail in manual 3: "The microarchitecture of Intel and AMD CPU's".

In general, you can assume that branches are predicted correctly most of the time in these cases:

- If the branch always goes the same way.
- If the branch follows a simple repetitive pattern and is inside a loop with few or no other branches.

- If the branch is correlated with a preceding branch.
- If the branch is a loop with a constant, small repeat count and few or no conditional jumps inside the loop.

The worst case is a branch that goes either way approximately 50% of the time, does not follow any regular pattern, and is not correlated with any preceding branch. Such a branch will be mispredicted 50% of the time. This is so costly that the branch should be replaced by conditional moves or a table lookup if possible.

In general, you should try to keep the number of poorly predicted branches at a minimum and keep the number of branches inside a loop at a minimum. It may be useful to split up or unroll a loop if this can reduce the number of branches inside the loop.

Indirect jumps and indirect calls are often poorly predicted. Most processors will simply predict an indirect jump or call to go the same way as it did last time. The PM and Core2 processors are able to recognize simple repetitive patterns for indirect jumps.

Returns are predicted by means of a so-called return stack buffer which is a first-in-last-out buffer that mirrors the return addresses pushed on the stack. A return stack buffer with 16 entries can correctly predict all returns for subroutines at a nesting level up to 16. If the subroutine nesting level is deeper than the size of the return stack buffer then the failure will be seen at the outer nesting levels, not the presumably more critical inner nesting levels. A return stack buffer size of 8 or 16 is therefore sufficient in most cases, except for deeply nested recursive functions.

The return stack buffer will fail if there is a call without a matching return or a return without a preceding call. It is therefore important to always match calls and returns. Do not jump out of a subroutine by any other means than by a RET instruction. And do not use the RET instruction as an indirect jump. Far calls should be matched with far returns.

Eliminating calls

It is possible to replace a call followed by a return by a jump:

```
; Example 9.5a, call/ret sequence (32-bit Windows)
Func1 PROC NEAR
    ...
    call Func2
    ret
Func1 ENDP
```

This can be changed to:

This modification does not conflict with the return stack buffer mechanism because the call to Func1 is matched with the return from Func2. In systems with stack alignment, it is necessary to restore the stack pointer before the jump:

```
ret
Func1 ENDP
```

This can be changed to:

Eliminating unconditional jumps

It is often possible to eliminate a jump by copying the code that it jumps to. The code that is copied can typically be a loop epilog or function epilog. The following example is a function with an if-else branch inside a loop:

```
; Example 9.7a, Function with jump that can be eliminated
FuncA PROC NEAR
       push ebp
       mov ebp, esp
       sub esp, StackSpaceNeeded lea edx, EndOfSomeArray xor eax, eax
Loop1:
                                      ; Loop starts here
              [edx+eax*4], eax
       cmp
                                     ; if-else
               ElseBranch
       je
                                      ; First branch
            End_If
       jmp
ElseBranch:
                                      ; Second branch
End If:
       add eax, 1
                                     ; Loop epilog
       jnz
              Loop1
              esp, ebp
                             ; Function epilog
               ebp
       pop
       ret
FuncA ENDP
```

The jump to End_If may be eliminated by duplicating the loop epilog:

```
; Example 9.7b, Loop epilog copied to eliminate jump
FuncA PROC
             NEAR
       push ebp
             ebp, esp
       mov
             esp, StackSpaceNeeded
             edx, EndOfSomeArray
       lea
       xor
             eax, eax
Loop1:
                                   ; Loop starts here
              [edx+eax*4], eax
                                   ; if-else
       cmp
       je
              ElseBranch
                                   ; First branch
       . . .
       add
             eax, 1
                                   ; Loop epilog for first branch
       jnz
             Loop1
       jmp
             AfterLoop
ElseBranch:
                                    ; Second branch
             eax, 1
                                    ; Loop epilog for second branch
       add
             Loop1
       jnz
```

```
AfterLoop:

mov esp, ebp ; Function epilog
pop ebp
ret

FuncA ENDP
```

In example 9.7b, the unconditional jump inside the loop has been eliminated by making two copies of the loop epilog. The branch that is executed most often should come first because the first branch is fastest. The unconditional jump to AfterLoop can also be eliminated. This is done by copying the function epilog:

```
; Example 9.7b, Function epilog copied to eliminate jump
FuncA PROC NEAR
       push
              ebp
              ebp, esp
esp, StackSpaceNeeded
       mov
sub
       lea edx, EndOfSomeArray
xor eax, eax
Loop1:
                                     ; Loop starts here
       cmp [edx+eax*4], eax ; if-else je ElseBranch
              ElseBranch
       je
                                   ; First branch
       . . .
       add eax, 1 jnz Loop1
                                     ; Loop epilog for first branch
                                   ; Function epilog 1
       mov esp, ebp
             ebp
       pop
       ret
ElseBranch:
                                     ; Second branch
            eax, 1
                                    ; Loop epilog for second branch
       add
             Loop1
       jnz
                            ; Function epilog 2
       mov
             esp, ebp
       pop
              ebp
       ret
FuncA ENDP
```

The gain that is obtained by eliminating the jump to AfterLoop is less than the gain obtained by eliminating the jump to End_If because it is outside the loop. But I have shown it here to illustrate the general method of duplicating a function epilog.

Replacing conditional jumps with conditional moves

The most important jumps to eliminate are conditional jumps, especially if they are poorly predicted. Example:

```
// Example 9.8a. C++ branch to optimize
a = b > c ? d : e;
```

This can be implemented with either a conditional jump or a conditional move:

```
; Example 9.8b. Branch implemented with conditional jump
mov eax, [b]
cmp eax, [c]
jng L1
mov eax, [d]
jmp L2
L1: mov eax, [e]
L2: mov [a], eax
```

```
; Example 9.8c. Branch implemented with conditional move
mov    eax, [b]
cmp    eax, [c]
mov    eax, [d]
cmovng    eax, [e]
mov    [a], eax
```

Conditional move instructions may not be available on old processors from the 1990'es.

The advantage of a conditional move is that it avoids branch mispredictions. But it has the disadvantage that it increases the length of a dependency chain, while a predicted branch breaks the dependency chain. If the code in example 9.8c is part of a dependency chain then the $\tt cmov$ instruction adds to the length of the chain. The latency of $\tt cmov$ is two clock cycles on Intel processors, and one clock cycle on AMD processors. If the same code is implemented with a conditional jump as in example 9.8b and if the branch is predicted correctly, then the result doesn't have to wait for $\tt b$ and $\tt c$ to be ready. It only has to wait for either $\tt d$ or $\tt e$, whichever is chosen. This means that the dependency chain is broken by the predicted branch, while the implementation with a conditional move has to wait for both $\tt b$, $\tt c$, $\tt d$ and $\tt e$ to be available. If $\tt d$ and $\tt e$ are complicated expressions, then both have to be calculated when the conditional move is used, while only one of them has to be calculated if a conditional jump is used.

As a rule of thumb, we can say that a conditional jump is faster than a conditional move if the code is part of a dependency chain and the prediction rate is better than 75%. A conditional jump is also preferred if we can avoid a lengthy calculation of $\tt d$ or $\tt e$ when the other operand is chosen.

Loop-carried dependency chains are particularly sensitive to the disadvantages of conditional moves. For example, the code in example 12.13a on page 107 works more efficiently with a branch inside the loop than with a conditional move, even if the branch is poorly predicted. This is because the floating point conditional move adds to the loop-carried dependency chain and because the implementation with a conditional move has to calculate all the power*xp values, even when they are not used.

Another example of a loop-carried dependency chain is a binary search in a sorted list. If the items to search for are randomly distributed over the entire list then the branch prediction rate will be close to 50% and it will be faster to use conditional moves. But if the items are often close to each other so that the prediction rate will be better, then it is more efficient to use conditional jumps than conditional moves because the dependency chain is broken every time a correct branch prediction is made.

It is also possible to do conditional moves in vector registers on an element-by-element basis. See page 109ff for details. There are special vector instructions for getting the minimum or maximum of two numbers. It may be faster to use vector registers than integer or floating point registers for finding minimums or maximums.

Replacing conditional jumps with conditional set instructions

If a conditional jump is used for setting a Boolean variable to 0 or 1 then it is often more efficient to use the conditional set instruction. Example:

```
// Example 9.9a. Set a bool variable on some condition
int b, c;
bool a = b > c;

; Example 9.9b. Implementation with conditional set
mov eax, [b]
cmp eax, [c]
setg al
mov [a], al
```

The conditional set instruction writes only to 8-bit registers. If a 32-bit result is needed then set the rest of the register to zero before the compare:

```
; Example 9.9c. Implementation with conditional set, 32 bits
mov eax, [b]
xor ebx, ebx ; zero register before cmp to avoid changing flags
cmp eax, [c]
setg bl
mov [a], ebx
```

If there is no vacant register then use movzx:

```
; Example 9.9d. Implementation with conditional set, 32 bits
mov    eax, [b]
cmp    eax, [c]
setg    al
movzx    eax, al
mov    [a], eax
```

If a value of all ones is needed for true then use neg eax.

An implementation with conditional jumps may be faster than conditional set if the prediction rate is good and the code is part of a long dependency chain, as explained in the previous section (page 68).

Replacing conditional jumps with bit-manipulation instructions

It is sometimes possible to obtain the same effect as a branch by ingenious manipulation of bits and flags. The carry flag is particularly useful for bit manipulation tricks:

```
; Example 9.10, Set carry flag if eax is zero:
cmp eax, 1

; Example 9.11, Set carry flag if eax is not zero:
neg eax

; Example 9.12, Increment eax if carry flag is set:
adc eax, 0

; Example 9.13, Copy carry flag to all bits of eax:
sbb eax, eax

; Example 9.14, Copy bits one by one from carry into a bit vector:
rcl eax, 1
```

It is possible to calculate the absolute value of a signed integer without branching:

The following example finds the minimum of two unsigned numbers: if (b > a) b = a;

```
; Example 9.16a, Find minimum of eax and ebx (unsigned): sub eax, ebx ; = a-b sbb edx, edx ; = (b > a) ? 0xFFFFFFFFF : 0 and edx, eax ; = (b > a) ? a-b : 0 add ebx, edx ; Result is in ebx
```

Or, for signed numbers, ignoring overflow:

```
; Example 9.16b, Find minimum of eax and ebx (signed):
sub eax, ebx ; Will not work if overflow here
cdq ; = (b > a) ? 0xFFFFFFFF : 0
and edx, eax ; = (b > a) ? a-b : 0
add ebx, edx ; Result is in ebx
```

The next example chooses between two numbers: if (a < 0) d = b; else d = c;

```
; Example 9.17a, Choose between two numbers
test eax, eax
mov edx, ecx
cmovs edx, ebx ; = (a < 0) ? b : c</pre>
```

Conditional moves are not very efficient on Intel processors and not available on old processors. Alternative implementations may be faster in some cases. The following example gives the same result as example 9.17a.

```
; Example 9.17b, Choose between two numbers without conditional move: cdq ; = (a < 0) ? 0xFFFFFFFFF : 0 xor ebx, ecx ; b ^ c = bits that differ between b and c and edx, ebx ; = (a < 0) ? (b ^ c) : 0 xor edx, ecx ; = (a < 0) ? b : c
```

Example 9.17b may be faster than 9.17a on processors where conditional moves are inefficient. Example 9.17b destroys the value of ebx.

Whether these tricks are faster than a conditional jump depends on the prediction rate, as explained above.

10 Optimizing for size

The code cache can hold from 8 to 32 kb of code, as explained in chapter 11 page 79. If there are problems keeping the critical parts of the code within the code cache, then you may consider reducing the size of the code. Reducing the code size can also improve the decoding of instructions. Loops that have no more than 64 bytes of code perform particularly fast on the Core2 processor.

You may even want to reduce the size of the code at the cost of reduced speed if speed is not important.

32-bit code is usually bigger than 16-bit code because addresses and data constants take 4 bytes in 32-bit code and only 2 bytes in 16-bit code. However, 16-bit code has other penalties, especially because of segment prefixes. 64-bit code does not need more bytes for addresses than 32-bit code because it can use 32-bit RIP-relative addresses. 64-bit code may be slightly bigger than 32-bit code because of REX prefixes and other minor differences, but it may as well be smaller than 32-bit code because the increased number of registers reduces the need for memory variables.

10.1 Choosing shorter instructions

Certain instructions have short forms. PUSH and POP instructions with an integer register take only one byte. XCHG EAX, reg32 is also a single-byte instruction and thus takes less space than a MOV instruction, but XCHG is slower than MOV. INC and DEC with a 32-bit register in 32-bit mode, or a 16-bit register in 16-bit mode take only one byte. The short form of INC and DEC is not available in 64-bit mode.

The following instructions take one byte less when they use the accumulator than when they use any other register: ADD, ADC, SUB, SBB, AND, OR, XOR, CMP, TEST with an immediate operand without sign extension. This also applies to the MOV instruction with a memory operand and no pointer register in 16 and 32 bit mode, but not in 64 bit mode. Examples:

```
; Example 10.1. Instruction sizes
add eax,1000 is smaller than add ebx,1000
mov eax,[mem] is smaller than mov ebx,[mem], except in 64 bit mode.
```

Instructions with pointers take one byte less when they have only a base pointer (except ESP, RSP or R12) and a displacement than when they have a scaled index register, or both base pointer and index register, or ESP, RSP or R12 as base pointer. Examples:

```
; Example 10.2. Instruction sizes
mov eax,array[ebx] is smaller than mov eax,array[ebx*4]
mov eax,[ebp+12] is smaller than mov eax,[esp+12]
```

Instructions with BP, EBP, RBP or R13 as base pointer and no displacement and no index take one byte more than with other registers:

```
; Example 10.3. Instruction sizes
mov eax,[ebx] is smaller than mov eax,[ebp], but
mov eax,[ebx+4] is same size as mov eax,[ebp+4].
```

Instructions with a scaled index pointer and no base pointer must have a four bytes displacement, even when it is 0:

```
; Example 10.4. Instruction sizes
lea eax,[ebx+ebx] is shorter than lea eax,[ebx*2].
```

Instructions in 64-bit mode need a REX prefix if at least one of the registers R8 - R15 or XMM8 - XMM15 are used. Instructions that use these registers are therefore one byte longer than instructions that use other registers, unless a REX prefix is needed anyway for other reasons:

```
; Example 10.5a. Instruction sizes (64 bit mode)
mov eax,[rbx] is smaller than mov eax,[r8].

; Example 10.5b. Instruction sizes (64 bit mode)
mov rax,[rbx] is same size as mov rax,[r8].
```

In example 10.5a, we can avoid a REX prefix by using register $_{RBX}$ instead of $_{R8}$ as pointer. But in example 10.5b, we need a REX prefix anyway for the 64-bit operand size, and the instruction cannot have more than one REX prefix.

Floating point calculations can be done either with the old floating point stack registers ST(0)-ST(7) or the new XMM registers on microprocessors with the SSE2 or later instruction set. The former instructions are more compact than the latter, for example:

```
; Example 10.6. Floating point instruction sizes
fadd st(0), st(1) ; 2 bytes
addsd xmm0, xmm1 ; 4 bytes
```

The use of ST(0)-ST(7) may be advantageous even if it requires extra FXCH instructions. There is no big difference in execution speed between the two types of floating point instructions on current processors.

Processors supporting the AVX instruction set (expected available in 2010) can code XMM instructions in two different ways, with a VEX prefix or with the old prefixes. Sometimes the VEX version is shorter and sometimes the old version is shorter. However, there is a severe performance penalty to mixing XMM instructions without VEX prefix with instructions using YMM registers.

10.2 Using shorter constants and addresses

Many jump addresses, data addresses, and data constants can be expressed as sign-extended 8-bit constants. This saves a lot of space. A sign-extended byte can only be used if the value is within the interval from -128 to +127.

For jump addresses, this means that short jumps take two bytes of code, whereas jumps beyond 127 bytes take 5 bytes if unconditional and 6 bytes if conditional.

Likewise, data addresses take less space if they can be expressed as a pointer and a displacement between -128 and +127. The following example assumes that [mem1] and [mem2] are static memory addresses in the data segment and that the distance between them is less than 128 bytes:

```
; Example 10.7a, Static memory operands
mov ebx, [mem1] ; 6 bytes
add ebx, [mem2] ; 6 bytes
```

Reduce to:

```
; Example 10.7b, Replace addresses by pointer
mov eax, offset mem1 ; 5 bytes
mov ebx, [eax] ; 2 bytes
add ebx, [eax] + (mem2 - mem1) ; 3 bytes
```

In 64-bit mode you need to replace <code>mov eax,offset mem1</code> with <code>lea rax,[mem1]</code>, which is one byte longer. The advantage of using a pointer obviously increases if you can use the same pointer many times. Storing data on the stack and using <code>EBP</code> or <code>ESP</code> as pointer will thus make the code smaller than if you use static memory locations and absolute addresses, provided of course that the data are within <code>+/-127</code> bytes of the pointer. Using <code>PUSH</code> and <code>POP</code> to write and read temporary integer data is even shorter.

Data constants may also take less space if they are between -128 and +127. Most instructions with immediate operands have a short form where the operand is a sign-extended single byte. Examples:

The only instructions with an immediate operand that do not have a short form with a sign-extended 8-bit constant are MOV, TEST, CALL and RET. You may save space, for example by replacing TEST with AND:

Shorter alternatives for MOV register, constant are often useful. Examples:

You may also consider reducing the size of static data. Obviously, an array can be made smaller by using a smaller data size for the elements. For example 16-bit integers instead of 32-bit integers if the data are sure to fit into the smaller data size. The code for accessing 16-bit integers is slightly bigger than for accessing 32-bit integers, but the increase in code size is small compared to the decrease in data size for a large array. Instructions with 16-bit immediate data operands should be avoided in 32-bit and 64-bit mode because of inefficient decoding.

10.3 Reusing constants

If the same address or constant is used more than once then you may load it into a register. A MOV with a 4-byte immediate operand may sometimes be replaced by an arithmetic instruction if the value of the register before the MOV is known. Example:

Replace with:

10.4 Constants in 64-bit mode

In 64-bit mode, there are three ways to move a constant into a 64-bit register: with a 64-bit constant, with a 32-bit sign-extended constant, and with a 32-bit zero-extended constant:

```
; Example 10.12, Loading constants into 64-bit registers
mov rax, 123456789abcdef0h ; 10 bytes (64-bit constant)
mov rax, -100 ; 7 bytes (32-bit sign-extended)
mov eax, 100 ; 5 bytes (32-bit zero-extended)
```

Some assemblers use the sign-extended version rather than the shorter zero-extended version, even when the constant is within the range that fits into a zero-extended constant. You can force the assembler to use the zero-extended version by specifying a 32-bit destination register. Writes to a 32-bit register are always zero-extended into the 64-bit register.

10.5 Addresses and pointers in 64-bit mode

64-bit code should preferably use 64-bit register size for base and index in addresses, and 32-bit register size for everything else. Example:

```
; Example 10.13, 64-bit versus 32-bit registers
mov eax, [rbx + 4*rcx]
inc rcx
```

Here, you can save one byte by changing inc rex to inc eex. This will work because the value of the index register is certain to be less than 2^{32} . The base pointer however, may be bigger than 2^{32} in some systems so you can't replace add rbx, 4 by add ebx, 4. Never use 32-bit registers as base or index inside the square brackets in 64-bit mode.

The rule of using 64-bit registers inside the square brackets of an indirect address and 32-bit registers everywhere else also applies to the $_{\rm LEA}$ instruction. Examples:

```
; Example 10.14. LEA in 64-bit mode
lea eax, [ebx + ecx] ; 4 bytes (needs address size prefix)
lea eax, [rbx + rcx] ; 3 bytes (no prefix)
lea rax, [ebx + ecx] ; 5 bytes (address size and REX prefix)
lea rax, [rbx + rcx] ; 4 bytes (needs REX prefix)
```

The form with 32-bit destination and 64-bit address is preferred unless a 64-bit result is needed. This version takes no more time to execute than the version with 64-bit destination. The forms with address size prefix should never be used.

An array of 64-bit pointers in a 64-bit program can be made smaller by using 32-bit pointers relative to the image base or to some reference point. This makes the array of pointers smaller at the cost of making the code that uses the pointers bigger since it needs to add the image base. Whether this gives a net advantage depends on the size of the array. Example:

```
; Example 10.15a. Jump-table in 64-bit mode
.data
JumpTable DQ Label1, Label2, Label3, ..

.code
mov eax, [n] ; Index
lea rdx, JumpTable ; Address of jump table
jmp qword ptr [rdx+rax*8] ; Jump to JumpTable[n]
```

Implementation with image-relative pointers:

The Gnu compiler for Mac OS X uses the jump table itself as a reference point:

```
; Example 10.15c. Self-relative jump-table in 64-bit Mac .data
JumpTable DD Label1-JumpTable, Label2-JumpTable, Label3-JumpTable
```

```
.code
mov eax, [n] ; Index
lea rdx, JumpTable ; Table and reference point
movsxd rax, [rdx + rax*4] ; Load address relative to table
add rax, rdx ; Add table base to address
jmp rax ; Jump to computed address
```

The assembler may not be able to make self-relative references form the data segment to the code segment.

The shortest alternative is to use 32-bit absolute pointers. This method can be used only if there is certainty that all addresses are less than 2³¹:

```
; Example 10.15d. 32-bit absolute jump table in 64-bit Linux
; Requires that addresses < 2^31
.data
JumpTable DD Label1, Label2, Label3, .. ; 32-bit addresses
.code
mov eax, [n] ; Index
mov eax, JumpTable[rax*4] ; Load 32-bit address
jmp rax ; Jump to zero-extended address</pre>
```

In example 10.15d, the address of <code>JumpTable</code> is a 32-bit relocatable address which is zero-extended or sign-extended to 64 bits. This works if the address is less than 2³¹. The addresses of <code>Label1</code>, etc., are zero-extended, so this will work if the addresses are less than 2³². The method of example 10.15d can be used if there is certainty that the image base plus the program size is less than 2³¹, which will be true in most cases for application programs in Windows, Linux and BSD, but not in Mac OS X (see page 22).

It is even possible to replace the 64-bit or 32-bit pointers with 16-bit offsets relative to a suitable reference point:

Example 10.15d uses Label1 as a reference point. It works only if all labels are within the interval Label1 \pm 2¹⁵. The table contains the 16-bit offsets which are sign-extended and added to the reference point.

The examples above show different methods for storing code pointers. The same methods can be used for data pointers. A pointer can be stored as a 64-bit absolute address, a 32-bit relative address, a 32-bit absolute address, or a 16-bit offset relative to a suitable reference point. The methods that use pointers relative to the image base or a reference point are only worth the extra code if there are many pointers. This is typically the case in large switch statements and in linked lists.

10.6 Making instructions longer for the sake of alignment

There are situations where it can be advantageous to reverse the advice of the previous paragraphs in order to make instructions longer. Most important is the case where a loop

entry needs to be aligned (see p. 83). Rather than inserting NOP's to align the loop entry label you may make the preceding instructions longer than their minimum lengths in such a way that the loop entry becomes properly aligned. The longer versions of the instructions do not take longer time to execute, so we can save the time it takes to execute the NOP's.

The assembler will normally choose the shortest possible form of an instruction. It is often possible to choose a longer form of the same or an equivalent instruction. This can be done in several ways.

Use general form instead of short form of an instruction

The short forms of INC, DEC, PUSH, POP, XCHG, ADD, MOV do not have a mod-reg-r/m byte (see p. 24). The same instructions can be coded in the general form with a mod-reg-r/m byte. Examples:

Use an equivalent instruction that is longer

Examples:

Use 4-bytes immediate operand

Instructions with a sign-extended 8-bit immediate operand can be replaced by the version with a 32-bit immediate operand:

```
; Example 10.18. Making instructions longer
add ebx,1 ; 3 bytes. Uses sign-extended 8-bit operand

add ebx,9999 ; Use dummy constant too big for 8-bit operand

ORG $ - 4 ; Go back 4 bytes..

DD 1 ; and overwrite the 9999 operand with a 1.
```

The above will encode ADD EBX,1 using 6 bytes of code.

Add zero displacement to pointer

An instruction with a pointer can have a displacement of 1 or 4 bytes in 32-bit or 64-bit mode (1 or 2 bytes in 16-bit mode). A dummy displacement of zero can be used for making the instruction longer:

The same can be done with LEA EAX, [EBX+0] as a replacement for MOV EAX, EBX.

Use SIB byte

An instruction with a memory operand can have a SIB byte (see p. 24). A SIB byte can be added to an instruction that doesn't already have one to make the instruction one byte longer. A SIB byte cannot be used in 16-bit mode or in 64-bit mode with a RIP-relative address. Example:

```
; Example 10.20. Making instructions longer
mov eax, [ebx] ; Length = 2 bytes
DB 8BH, 04H, 23H ; Same with SIB byte. Length = 3 bytes
DB 8BH, 44H, 23H, 00H ; With SIB byte and displacement. 4 bytes
```

Use prefixes

An easy way to make an instruction longer is to add unnecessary prefixes. All instructions with a memory operand can have a segment prefix. The DS segment prefix is rarely needed, but it can be added without changing the meaning of the instruction:

```
; Example 10.21. Making instructions longer

DB 3EH ; DS segment prefix
mov eax,[ebx] ; prefix + instruction = 3 bytes
```

All instructions with a memory operand can have a segment prefix, including LEA. It is actually possible to add a segment prefix even to instructions without a memory operand. Such meaningless prefixes are simply ignored. But there is no absolute guarantee that the meaningless prefix will not have some meaning on future processors. For example, the P4 uses segment prefixes on branch instructions as branch prediction hints. The probability is very low, I would say, that segment prefixes will have any adverse effect on future processors for instructions that *could* have a memory operand, i.e. instructions with a modreg-r/m byte.

CS, DS, ES and SS segment prefixes have no effect in 64-bit mode, but they are still allowed, according to AMD64 Architecture Programmer's Manual, Volume 3: General-Purpose and System Instructions, 2003.

In 64-bit mode, you can also use an empty REX prefix to make instructions longer:

```
; Example 10.22. Making instructions longer
DB 40H ; empty REX prefix
mov eax,[rbx] ; prefix + instruction = 3 bytes
```

Empty REX prefixes can safely be applied to almost all instructions in 64-bit mode that do not already have a REX prefix, except instructions that use AH, BH, CH or DH. REX prefixes cannot be used in 32-bit or 16-bit mode. A REX prefix must come after any other prefixes, and no instruction can have more than one REX prefix.

AMD's optimization manual recommends the use of up to three operand size prefixes (66H) as fillers. But this prefix can only be used on instructions that are not affected by this prefix, i.e. NOP and floating point ST() instructions. Segment prefixes are more widely applicable and have the same effect - or rather lack of effect.

It is possible to add multiple identical prefixes to any instruction as long as the total instruction length does not exceed 15. For example, you can have an instruction with two or three DS segment prefixes. But instructions with multiple prefixes take extra time to decode, especially on older processors. Do not use more than three prefixes on AMD processors, including any necessary prefixes. There is no limit to the number of prefixes that can be decoded efficiently on Core2 processors, as long as the total instruction length is no more

than 15 bytes, but earlier Intel processors can handle no more than one or two prefixes without penalty.

It is not a good idea to use address size prefixes as fillers because this may slow down instruction decoding.

Do not place dummy prefixes immediately before a jump label to align it:

In this example, the MOV EAX, [ESI] instruction will be decoded with a DS segment prefix when we come from L1, but without the prefix when we come from L2. This works in principle, but some microprocessors remember where the instruction boundaries are, and such processors will be confused when the same instruction begins at two different locations. There may be a performance penalty for this.

Processors supporting the AVX instruction set use VEX prefixes, which are 2 or 3 bytes long. A 2-bytes VEX prefix can always be replaced by a 3-bytes VEX prefix. A VEX prefix can be preceded by segment prefixes but not by any other prefixes. No other prefix is allowed after the VEX prefix. Only instructions using XMM or YMM registers can have a VEX prefix. The VEX prefix is optional only for instructions that read XMM registers but do not write to XMM registers. It is possible that VEX prefixes will be allowed on other instructions in future instruction sets.

It is recommended to check hand-coded instructions with a debugger or disassembler to make sure they are correct.

11 Optimizing memory access

Reading from the level-1 cache takes approximately 3 clock cycles. Reading from the level-2 cache takes in the order of magnitude of 10 clock cycles. Reading from main memory takes in the order of magnitude of 100 clock cycles. The access time is even longer if a DRAM page boundary is crossed, and extremely long if the memory area has been swapped to disk. I cannot give exact access times here because it depends on the hardware configuration and the figures keep changing thanks to the fast technological development.

However, it is obvious from these numbers that caching of code and data is extremely important for performance. If the code has many cache misses, and each cache miss costs more than a hundred clock cycles, then this can be a very serious bottleneck for the performance.

More advice on how to organize data for optimal caching are given in manual 1: "Optimizing software in C++". Processor-specific details are given in manual 3: "The microarchitecture of Intel and AMD CPU's" and in Intel's and AMD's software optimization manuals.

11.1 How caching works

A cache is a means of temporary storage that is closer to the microprocessor than the main memory. Data and code that is used often, or that is expected to be used soon, is stored in a cache so that it is accessed faster. Different microprocessors have one, two or three levels of cache. The level-1 cache is close to the microprocessor kernel and is accessed in

just a few clock cycles. A bigger level-2 cache is placed on the same chip or at least in the same housing.

The level-1 data cache in the P4 processor, for example, can contain 8 kb of data. It is organized as 128 lines of 64 bytes each. The cache is 4-way set-associative. This means that the data from a particular memory address cannot be assigned to an arbitrary cache line, but only to one of four possible lines. The line length in this example is 2^6 = 64. So each line must be aligned to an address divisible by 64. The least significant 6 bits, i.e. bit 0 - 5, of the memory address are used for addressing a byte within the 64 bytes of the cache line. As each set comprises 4 lines, there will be $128 / 4 = 32 = 2^5$ different sets. The next five bits, i.e. bits 6 - 10, of a memory address will therefore select between these 32 sets. The remaining bits can have any value. The conclusion of this mathematical exercise is that if bits 6 - 10 of two memory addresses are equal, then they will be cached in the same set of cache lines. The 64-byte memory blocks that contend for the same set of cache lines are spaced 2^{11} = 2048 bytes apart. No more than 4 such addresses can be cached at the same time.

Let me illustrate this by the following piece of code, where EDI holds an address divisible by 64:

```
; Example 11.1. Level-1 cache contention
again: mov eax, [edi]
    mov ebx, [edi + 0804h]
    mov ecx, [edi + 1000h]
    mov edx, [edi + 5008h]
    mov esi, [edi + 583ch]
    sub ebp, 1
    jnz again
```

The five addresses used here all have the same set-value because the differences between the addresses with the lower 6 bits truncated are multiples of 2048 = 800H. This loop will perform poorly because at the time we read ESI, there is no free cache line with the proper set-value, so the processor takes the least recently used of the four possible cache lines - that is the one which was used for EAX - and fills it with the data from [EDI+5800H] to [EDI+583FH] and reads ESI. Next, when reading EAX, we find that the cache line that held the value for EAX has now been discarded, so the processor takes the least recently used line, which is the one holding the EBX value, and so on. We have nothing but cache misses, but if the 5'th line is changed to MOV ESI, [EDI + 5840H] then we have crossed a 64 byte boundary, so that we do not have the same set-value as in the first four lines, and there will be no problem assigning a cache line to each of the five addresses.

The cache sizes, cache line sizes, and set associativity on different microprocessors are listed in manual 4: "Instruction tables". The performance penalty for level-1 cache line contention can be quite considerable on older microprocessors, but on newer processors such as the P4 we loose only a few clock cycles because the data are likely to be prefetched from the level-2 cache, which is accessed quite fast through a full-speed 256 bit data bus. The improved efficiency of the level-2 cache in the P4 compensates for the smaller level-1 data cache.

The cache lines are always aligned to physical addresses divisible by the cache line size (in the above example 64). When we have read a byte at an address divisible by 64, then the next 63 bytes will be cached as well, and can be read or written to at almost no extra cost. We can take advantage of this by arranging data items that are used near each other together into aligned blocks of 64 bytes of memory.

The level-1 code cache works in the same way as the data cache, except on processors with a trace cache (see below). The level-2 cache is usually shared between code and data.

11.2 Trace cache

The P4 and P4E processors have a trace cache instead of a code cache. The trace cache stores the code after it has been translated to micro-operations (µops) while a normal code cache stores the raw code without translation. The trace cache makes the design more RISC-like and removes the bottleneck of instruction decoding. Another difference between a code cache and a trace cache is that the trace cache attempts to store the code in the order in which it is executed rather than the order in which it occurs in memory. This reduces the number of jumps in the trace cache.

The main disadvantage of a trace cache is that the code takes more space in a trace cache than in a code cache, because µops take more space than CISC code and because the same code may occur in several traces. The trace cache is therefore most advantageous when the critical hot spot of the program is a small innermost loop that fits into the trace cache. The trace cache is not an advantage when the critical part of the code is distributed over so many functions and loops that it can fill up the trace cache.

The newest processors do not have a trace cache.

11.3 Alignment of data

All data in RAM should be aligned at addresses divisible by a power of 2 according to this scheme:

Operand size	Alignment			
1 (byte)	1			
2 (word)	2			
4 (dword)	4			
6 (fword)	8			
8 (qword)	8			
10 (tbyte)	16			
16 (oword, xmmword)	16			
32 (ymmword)	32			
Table 11.1. Preferred data alignme	nt			

The following example illustrates alignment of static data.

In the above example, A, B and C all start at addresses divisible by 16. D starts at an address divisible by 4, which is more than sufficient because it only needs to be aligned by 2. An alignment directive must be inserted before ${\tt E}$ because the address after D is not divisible by 16 as required by the MOVDQA instruction. Alternatively, ${\tt E}$ could be placed after A or B to make it aligned.

All microprocessors have a penalty of several clock cycles when accessing misaligned data that cross a cache line boundary. AMD K8 and earlier processors also have a penalty when

misaligned data cross an 8-byte boundary, and some early Intel processors (P1, PMMX) have a penalty for misaligned data crossing a 4-byte boundary. Most processors have a penalty when reading a misaligned operand shortly after writing to the same operand.

Most XMM instructions that read or write 16-byte memory operands require that the operand is aligned by 16. Instructions that accept unaligned 16-byte operands can be quite inefficient.

Aligning data stored on the stack can be done by rounding down the value of the stack pointer. The old value of the stack pointer must of course be restored before returning. A function with aligned local data may look like this:

This function uses EBP to address function parameters, and ESP to address aligned local data. ESP is rounded down to the nearest value divisible by 16 simply by AND'ing it with -16. You can align the stack by any power of 2 by AND'ing the stack pointer with the negative value.

All 64-bit operating systems, and some 32-bit operating systems (Mac OS, optional in Linux) keep the stack aligned by 16 at all CALL instructions. This eliminates the need for the AND instruction and the frame pointer. It is necessary to propagate this alignment from one CALL instruction to the next by proper adjustment of the stack pointer in each function:

In example 11.3b we are relying on the fact that the stack pointer is aligned by 16 before the call to FuncWithAlign. The CALL FuncWithAlign instruction (not shown here) has pushed the return address on the stack, whereby 4 is subtracted from the stack pointer. We have to subtract another 12 from the stack pointer before it is aligned by 16 again. The 12 is not enough for the local variable that needs 16 bytes so we have to subtract 28 to keep the stack pointer aligned by 16. 4 for the return address + 28 = 32, which is divisible by 16. Remember to include any PUSH instructions in the calculation. If, for example, there had been one PUSH instruction in the function prolog then we would subtract 24 from ESP to keep it aligned by 16. Example 11.3b needs to align the stack for two reasons. The MOVDQA instruction needs an aligned operand, and the CALL SomeOtherFunction needs to be aligned in order to propagate the correct stack alignment to SomeOtherFunction.

The principle is the same in 64-bit mode:

Here, the return address takes 8 bytes and we subtract 24 from RSP, so that the total amount subtracted is 8 + 24 = 32, which is divisible by 16. Every PUSH instruction subtracts 8 from RSP in 64-bit mode.

Alignment issues are also important when mixing C++ and assembly language. Consider this C++ structure:

Most compilers (but not all) will insert three empty bytes between $\tt a$ and $\tt b$, and six empty bytes between $\tt c$ and $\tt d$ in order to give each element its natural alignment. You may change the structure definition to:

This has several advantages: The implementation is identical on compilers with and without automatic alignment, the structure is easily translated to assembly, all members are properly aligned, and there are fewer unused bytes. The extra unused character in the end makes sure that all elements in an array of structures are properly aligned.

See page 153 for how to move unaligned blocks of data efficiently.

11.4 Alignment of code

Most microprocessors fetch code in aligned 16-byte or 32-byte blocks. If an important subroutine entry or jump label happens to be near the end of a 16-byte block then the microprocessor will only get a few useful bytes of code when fetching that block of code. It may have to fetch the next 16 bytes too before it can decode the first instructions after the label. This can be avoided by aligning important subroutine entries and loop entries by 16. Aligning by 8 will assure that at least 8 bytes of code can be loaded with the first instruction fetch, which may be sufficient if the instructions are small. We may align subroutine entries by the cache line size (typically 64 bytes) if the subroutine is part of a critical hot spot and the preceding code is unlikely to be executed in the same context.

A disadvantage of code alignment is that some cache space is lost to empty spaces before the aligned code entries.

In most cases, the effect of code alignment is minimal. So my recommendation is to align code only in the most critical cases like critical subroutines and critical innermost loops.

Aligning a subroutine entry is as simple as putting as many NOP's as needed before the subroutine entry to make the address divisible by 8, 16, 32 or 64, as desired. The assembler does this with the ALIGN directive. The NOP's that are inserted will not slow down the performance because they are never executed.

It is more problematic to align a loop entry because the preceding code is also executed. It may require up to 15 NOP's to align a loop entry by 16. These NOP's will be executed before the loop is entered and this will cost processor time. It is more efficient to use longer instructions that do nothing than to use a lot of single-byte NOP's. The best modern assemblers will do just that and use instructions like MOV EAX, EAX and LEA EBX, [EBX+00000000H] to fill the space before an ALIGN nn statement. The LEA instruction is particularly flexible. It is possible to give an instruction like LEA EBX, [EBX] any length from 2 to 8 by variously adding a SIB byte, a segment prefix and an offset of one or four bytes of zero. Don't use a two-byte offset in 32-bit mode as this will slow down decoding. And don't use more than one prefix because this will slow down decoding on older Intel processors.

Using an instruction like LEA EBX, [EBX+0] as a NOP has the disadvantage that it has a false dependence on EBX. If this causes unwanted dependences then you may alternatively use the multi-byte NOP instruction which has the code 0FH, 1FH, mod-000-rm. This code can have any combination of offset, SIB byte, and prefix without doing anything. This multi-byte NOP instruction is available in Intel processors with conditional move or SSE and in AMD processors K7 and later.

Another useful filler is FXCH ST(0) because this instruction is resolved by register renaming without going to any execution port on most modern Intel processors. Remember that FXCH cannot be used in code that uses MMX registers.

A more efficient way of aligning a loop entry is to code the preceding instructions in ways that are longer than necessary. In most cases, this will not add to the execution time, but possibly to the instruction fetch time. See page 76 for details on how to code instructions in longer versions.

The most efficient way to align an innermost loop is to move the preceding subroutine entry. The following example shows how to do this:

```
; Example 11.5, Aligning loop entry
ALIGN 16
DB (-X1 AND 0FH) DUP (90H) ; Insert calculated number of NOP's.
X1 = 9
                              ; Replace value with whatever X2 is.
                              ; This address will be adjusted
INNERFUNCTION PROC NEAR
  mov eax,[esp+4]
   mov ecx,10000
                               ; Loop entry will be aligned by 16
TNNERLOOP:
X2 = INNERLOOP - INNERFUNCTION ; This value is needed above
.ERRNZ X1 NE X2
                               ; Make error message if X1 != X2
   i ...
   sub ecx, 1
    jnz INNERLOOP
   ret
INNERFUNCTION ENDP
```

This code looks awkward because most assemblers cannot resolve the forward reference to a difference between two labels in this case. x2 is the distance from INNERFUNCTION to INNERLOOP. x1 must be manually adjusted to the same value as x2 by looking at the assembly listing. The .ERRNZ line will generate an error message from the assembler if x1 and x2 are different. The number of bytes to insert before INNERFUNCTION in order to align INNERLOOP by 16 is ((-x1) modulo 16). The modulo 16 is calculated here by AND'ing with 15. The DB line calculates this value and inserts the appropriate number of NOP's with opcode 90H.

INNERLOOP is aligned here by misaligning INNERFUNCTION. The cost of misaligning INNERFUNCTION is negligible compared to the gain by aligning INNERLOOP because the latter label is jumped to 10000 times as often.

11.5 Organizing data for improved caching

The caching of data works best if critical data are contained in a small contiguous area of memory. The best place to store critical data is on the stack. The stack space that is allocated by a subroutine is released when the subroutine returns. The same stack space is then reused by the next subroutine that is called. Reusing the same memory area gives the optimal caching. Variables should therefore be stored on the stack rather than in the data segment when possible.

Floating point constants are typically stored in the data segment. This is a problem because it is difficult to keep the constants used by different subroutines contiguous. An alternative is to store the constants in the code. In 64-bit mode it is possible to load a double precision constant via an integer register to avoid using the data segment. Example:

```
; Example 11.6a. Loading double constant from data segment
.data
C1 DQ SomeConstant
.code
movsd xmm0, C1
```

This can be changed to:

See page 117 for various methods of generating constants without loading data from memory. This is advantageous if data cache misses are expected, but not if data caching is efficient.

Constant tables are typically stored in the data segment. It may be advantageous to copy such a table from the data segment to the stack outside the innermost loop if this can improve caching inside the loop.

Static variables are variables that are preserved from one function call to the next. Such variables are typically stored in the data segment. It may be a better alternative to encapsulate the function together with its data in a class. The class may be declared in the C++ part of the code even when the member function is coded in assembly.

Data structures that are too large for the data cache should preferably be accessed in a linear, forward way for optimal prefetching and caching. Non-sequential access can cause cache line contentions if the stride is a high power of 2. Manual 1: "Optimizing software in C++" contains examples of how to avoid access strides that are high powers of 2.

11.6 Organizing code for improved caching

The caching of code works best if the critical part of the code is contained within a contiguous area of memory no bigger than the code cache. Avoid scattering critical subroutines around at random memory addresses. Rarely accessed code such as error handling routines should be kept separate from the critical hot spot code.

It may be useful to split the code segment into different segments for different parts of the code. For example, you may make a hot code segment for the code that is executed most often and a cold code segment for code that is not speed-critical.

Alternatively, you may control the order in which modules are liked, so that modules that are used in the same part of the program are linked at addresses near each other.

Dynamic linking of function libraries (DLL's or shared objects) makes code caching less efficient. Dynamic link libraries are typically loaded at round memory addresses. This can cause cache contentions if the distances between multiple DLL's are divisible by high powers of 2.

11.7 Cache control instructions

Memory writes are more expensive than reads when cache misses occur in a write-back cache. A whole cache line has to be read from memory, modified, and written back in case of a cache miss. This can be avoided by using the non-temporal write instructions MOVNTI, MOVNTQ, MOVNTPD, MOVNTPD, MOVNTPS. These instructions should be used when writing to a memory location that is unlikely to be cached and unlikely to be read from again before the would-be cache line is evicted. As a rule of thumb, it can be recommended to use non-temporal writes only when writing a memory block that is bigger than half the size of the largest-level cache.

Explicit data prefetching with the PREFETCH instructions can sometimes improve cache performance, but in most cases the automatic prefetching is sufficient.

12 Loops

The critical hot spot of a CPU-intensive program is almost always a loop. The clock frequency of modern computers is so high that even the most time-consuming instructions, cache misses and inefficient exceptions are finished in a fraction of a microsecond. The delay caused by inefficient code is only noticeable when repeated millions of times. Such high repeat counts are likely to be seen only in the innermost level of a series of nested loops. The things that can be done to improve the performance of loops is discussed in this chapter.

12.1 Minimize loop overhead

The loop overhead is the instructions needed for jumping back to the beginning of the loop and to determine when to exit the loop. Optimizing these instructions is a fairly general technique that can be applied in many situations. Optimizing the loop overhead is not needed, however, if some other bottleneck is limiting the speed. See page 90ff for a description of possible bottlenecks in a loop.

A typical loop in C++ may look like this:

```
// Example 12.1a. Typical for-loop in C++
```

```
for (int i = 0; i < n; i++) {
    // (loop body)
}</pre>
```

Without optimization, the assembly implementation will look like this:

It may be unwise to use the inc instruction for adding 1 to the loop counter. The inc instruction has a problem with writing to only part of the flags register, which makes it less efficient than the add instruction on P4 processors and may cause false dependences on other processors.

The most important problem with the loop in example 12.1b is that there are two jump instructions. We can eliminate one jump from the loop by putting the branch instruction in the end:

Now we have got rid of the unconditional jump instruction in the loop by putting the loop exit branch in the end. We have to put an extra check before the loop to cover the case where the loop should run zero times. Without this check, the loop would run one time when n = 0.

The method of putting the loop exit branch in the end can even be used for complicated loop structures that have the exit condition in the middle. Consider a C++ loop with the exit condition in the middle:

This can be implemented in assembly by reorganizing the loop so that the exit comes in the end and the entry comes in the middle:

```
; Example 12.2b. Assembly loop with entry in the middle
    xor eax, eax ; i = 0
    jmp LoopEntry ; Jump into middle of loop
LoopTop:
```

The cmp instruction in example 12.1c and 12.2b can be eliminated if the counter ends at zero because we can rely on the add instruction for setting the zero flag. This can be done by counting down from n to zero rather counting up from zero to n:

Now the loop overhead is reduced to just two instructions, which is the best possible. The jecxz and loop instructions should be avoided because they are less efficient.

The solution in example 12.3 is not good if \pm is needed inside the loop, for example for an array index. The following example adds 1 to all elements in an integer array:

The address of the start of the array is in esi and the index in eax. The index is multiplied by 4 in the address calculation because the size of each array element is 4 bytes.

It is possible to modify example 12.4a to make it count down rather than up, but the data cache is optimized for accessing data forwards, not backwards. Therefore it is better to count up through negative values from -n to zero. This is possible by making a pointer to the end of the array and using a negative offset from the end of the array:

A slightly different solution is to multiply n by 4 and count from -4*n to zero:

There is no difference in speed between example 12.4b and 12.4c, but the latter method is useful if the size of the array elements is not 1, 2, 4 or 8 so that we cannot use the scaled index addressing.

The loop counter should always be an integer because floating point compare instructions are less efficient than integer compare instructions, even with the SSE2 instruction set. Some loops have a floating point exit condition by nature. A well-known example is a Taylor expansion which is ended when the terms become sufficiently small. It may be useful in such cases to always use the worst-case maximum repeat count (see page 101). The cost of repeating the loop more times than necessary is often less than what is saved by avoiding the calculation of the exit condition in the loop and using an integer counter as loop control. A further advantage of this method is that the loop exit branch becomes more predictable. Even when the loop exit branch is mispredicted, the cost of the misprediction is smaller with an integer counter because the integer instructions are likely to be executed way ahead of the slower floating point instructions so that the misprediction can be resolved much earlier.

12.2 Induction variables

If the floating point value of the loop counter is needed for some other purpose then it is better to have both an integer counter and a floating point counter. Consider the example of a loop that makes a sine table:

```
// Example 12.5a. C++ loop to make sine table double Table[100]; int i; for (i = 0; i < 100; i++) Table[i] = sin(0.01 * i);
```

This can be changed to:

```
// Example 12.5b. C++ loop to make sine table double Table[100], x; int i; for (i = 0, x = 0.; i < 100; i++, x += 0.01) Table[i] = sin(x);
```

Here we have an integer counter i for the loop control and array index, and a floating point counter x for replacing 0.01*i. The calculation of x by adding 0.01 to the previous value is much faster than converting i to floating point and multiplying by 0.01. The assembly implementation looks like this:

There is no need to optimize the loop overhead in this case because the speed is limited by the floating point calculations. Another possible optimization is to use a library function that calculates two or four sine values at a time in an XMM register. Such functions can be found in libraries from Intel and AMD, see manual 1: "Optimizing software in C++".

The method of calculating x in example 12.5c by adding 0.01 to the previous value rather than multiplying x by 0.01 is commonly known as using an induction variable. Induction variables are useful whenever it is easier to calculate some value in a loop from the previous value than to calculate it from the loop counter. An induction variable can be integer or floating point. The most common use of induction variables is for calculating array addresses, as in example 12.4c, but induction variables can also be used for more complex expressions. Any function that is an n'th degree polynomial of the loop counter can be calculated with just n additions and no multiplications by the use of n induction variables. See manual 1: "Optimizing software in C++" for an example.

The calculation of a function of the loop counter by the induction variable method makes a loop-carried dependency chain. If this chain is too long then it may be advantageous to calculate each value from a value that is two or more iterations back, as in the Taylor expansion example on page 104.

12.3 Move loop-invariant code

The calculation of any expression that doesn't change inside the loop should be moved out of the loop.

The same applies to if-else branches with a condition that doesn't change inside the loop. Such a branch can be avoided by making two loops, one for each branch, and making a branch that chooses between the two loops.

12.4 Find the bottlenecks

There are a number of possible bottlenecks that can limit the performance of a loop. The most likely bottlenecks are:

- Cache misses and cache contentions
- Loop-carried dependency chains
- Instruction fetching
- Instruction decoding
- Instruction retirement

- Register read stalls
- Execution port throughput
- · Execution unit throughput
- Suboptimal reordering and scheduling of µops
- Branch mispredictions
- Floating point exceptions and denormal operands

If one particular bottleneck is limiting the performance then it doesn't help to optimize anything else. It is therefore very important to analyze the loop carefully in order to identify which bottleneck is the limiting factor. Only when the narrowest bottleneck has successfully been removed does it make sense to look at the next bottleneck. The various bottlenecks are discussed in the following sections. All these details are processor-specific. See manual 3: "The microarchitecture of Intel and AMD CPU's" for explanation of the processor-specific details mentioned below.

Sometimes a lot of experimentation is needed in order to find and fix the limiting bottleneck. It is important to remember that a solution found by experimentation is CPU-specific and unlikely to be optimal on CPU's with a different microarchitecture.

12.5 Instruction fetch, decoding and retirement in a loop

The details about how to optimize instruction fetching, decoding, retirement, etc. is processor-specific, as mentioned on page 61.

If code fetching is a bottleneck then it is necessary to align the loop entry by 16 and reduce instruction sizes in order to minimize the number of 16-byte boundaries in the loop.

If instruction decoding is a bottleneck then it is necessary to observe the CPU-specific rules about decoding patterns. Avoid complex instructions such as LOOP, JECXZ, LODS, STOS, etc.

Register read stalls can occur in most Intel processors. If register read stalls are likely to occur then it can be necessary to reorder instructions or to refresh registers that are read multiple times but not written to inside the loop.

Jumps and calls inside the loop should be avoided because it delays code fetching. Subroutines that are called inside the loop should be inlined if possible.

Branches inside the loop should be avoided if possible because they interfere with the prediction of the loop exit branch. However, branches should not be replaced by conditional moves if this increases the length of a loop-carried dependency chain.

If instruction retirement is a bottleneck then it may be preferred to make the total number of μ ops inside the loop a multiple of the retirement rate (4 for Core2, 3 for all other processors). Some experimentation is needed in this case.

12.6 Distribute µops evenly between execution units

Manual 4: "Instruction tables" contains tables of how many μ ops each instruction generates and which execution port each μ op goes to. This information is CPU-specific, of course. It is necessary to calculate how many μ ops the loop generates in total and how many of these μ ops go to each execution port and each execution unit.

The time it takes to retire all instructions in the loop is the total number of μ ops divided by the retirement rate. The retirement rate is 4 μ ops per clock cycle for Core2 processors and 3 for all other processors. The calculated retirement time is the minimum execution time for the loop. This value is useful as a norm which other potential bottlenecks can be compared against.

The throughput for an execution port is 1 μ op per clock cycle on most Intel processors. The load on a particular execution port is calculated as the number of μ ops that goes to this port divided by the throughput of the port. If this value exceeds the retirement time as calculated above, then this particular execution port is likely to be a bottleneck. AMD processors do not have execution ports, but they have three pipelines with similar throughputs.

There may be more than one execution unit on each execution port on Intel processors. Most execution units have the same throughput as the execution port. If this is the case then the execution unit cannot be a narrower bottleneck than the execution port. But an execution unit can be a bottleneck in the following situations: (1) if the throughput of the execution unit is lower than the throughput of the execution port, e.g. for multiplication and division; (2) if the execution unit is accessible though more than one execution port, e.g. floating point addition on PM; and (3) on AMD processors that have no execution ports.

The load on a particular execution unit is calculated as the total number of µops going to that execution unit multiplied by the reciprocal throughput for that unit. If this value exceeds the retirement time as calculated above, then this particular execution unit is likely to be a bottleneck.

12.7 An example of analysis for bottlenecks on PM

The way to do these calculations is illustrated in the following example, which is the so-called DAXPY algorithm used in linear algebra:

```
// Example 12.6a. C++ code for DAXPY algorithm int i; const int n = 100; double X[n]; double Y[n]; double DA; for (i = 0; i < n; i++) Y[i] = Y[i] - DA * X[i];
```

The following implementation is for a processor with the SSE2 instruction set in 32-bit mode, assuming that x and y are aligned by 16:

Now let's analyze this code for bottlenecks on a Pentium M processor, assuming that there are no cache misses. The CPU-specific details that I am referring to are explained in manual 3: "The microarchitecture of Intel and AMD CPU's".

We are only interested in the loop, i.e. the code after ${\tt L1}$. We need to list the ${\tt \muop}$ breakdown for all instructions in the loop, using the table in manual 4: "Instruction tables". The list looks as follows:

Instruction	μορs fused	μορs for each execution port					execution units		
		port	port	port	port	port	port	FADD	FMUL
		0	1	0 or 1	2	3	4		
movapd xmm1,[esi+eax]	2				2				
mulpd xmm1, xmm2	2	2							2
<pre>movapd xmm0,[edi+eax]</pre>	2				2				
subpd xmm0, xmm1	2			2				2	
movapd [edi+eax],xmm0	2					2	2		
add eax, 16	1			1					
cmp eax, ecx	1			1					
jl L1	1		1						
Total	13	2	1	4	4	2	2	2	2

Table 12.1. Total µops for DAXPY loop on Pentium M

The total number of μ possing to all the ports is 15. The 4 μ poss from μ movapd [edi+eax], xmm0 are fused into 2 μ poss so the total number of μ poss in the fused domain is 13. The total retirement time is 13 μ poss / 3 μ poss per clock cycle = 4.33 clock cycles.

Now, we will calculate the number of μ ops going to each port. There are 2 μ ops for port 0, 1 for port 1, and 4 which can go to either port 0 or port 1. This totals 7 μ ops for port 0 and port 1 combined so that each of these ports will get 3.5 μ ops on average per iteration. Each port has a throughput of 1 μ op per clock cycle so the total load corresponds to 3.5 clock cycles. This is less than the 4.33 clock cycles for retirement, so port 0 and 1 will not be bottlenecks. Port 2 receives 4 μ ops per clock cycle so it is close to being saturated. Port 3 and 4 receive only 2 μ ops each.

The next analysis concerns the execution units. The FADD unit has a throughput of 1 μ op per clock and it can receive μ ops from both port 0 and 1. The total load is 2 μ ops / 1 μ op per clock = 2 clocks. Thus the FADD unit is far from saturated. The FMUL unit has a throughput of 0.5 μ op per clock and it can receive μ ops only from port 0. The total load is 2 μ ops / 0.5 μ op per clock = 4 clocks. Thus the FMUL unit is close to being saturated.

There is a dependency chain in the loop. The latencies are: 2 for memory read, 5 for multiplication, 3 for subtraction, and 3 for memory write, which totals 13 clock cycles. This is three times as much as the retirement time but it is not a loop-carried dependence because the results from each iteration are saved to memory and not reused in the next iteration. The out-of-order execution mechanism and pipelining makes it possible that each calculation can start before the preceding calculation is finished. The only loop-carried dependency chain is add eax, 16 which has a latency of only 1.

The time needed for instruction fetching can be calculated from the lengths of the instructions. The total length of the eight instructions in the loop is 30 bytes. The processor needs to fetch two 16-byte blocks if the loop entry is aligned by 16, or at most three 16-byte blocks in the worst case. Instruction fetching is therefore not a bottleneck.

Instruction decoding in the PM processor follows the 4-1-1 pattern. The pattern of (fused) µops for each instruction in the loop in example 12.6b is 2-2-2-2-1-1-1. This is not optimal, and it will take 6 clock cycles to decode. This is more than the retirement time, so we can conclude that instruction decoding is the bottleneck in example 12.6b. The total execution time is 6 clock cycles per iteration or 3 clock cycles per calculated Y[i] value. The decoding can be improved by moving one of the 1-µop instructions and by changing the sign of xmm2

so that movapd xmm0, [edi+eax] and subpd xmm0, xmm1 can be combined into one instruction addpd xmm1, [edi+eax]. We will therefore change the code of the loop as follows:

```
; Example 12.6c. Loop of DAXPY algorithm with improved decoding
.data
align 16
SignBit DD 0, 80000000H ; qword with sign bit set
n = 100 ; Define constant n (even and positive)

.code
   mov ecx, n * 8 ; Load n * sizeof(double)
   xor eax, eax ; i = 0
   lea esi, X ; X must be aligned by 16
   lea edi, Y ; Y must be aligned by 16
   movsd xmm2, DA ; Load DA
   xorpd xmm2, SignBit ; Change sign
   shufpd xmm2, xmm2, 0 ; Get -DA into both qwords of xmm2

L1: movapd xmm1, [esi+eax] ; X[i], X[i+1]
   mulpd xmm1, xmm2 ; X[i] * (-DA), X[i+1] * (-DA)
   addpd xmm1, [edi+eax] ; Y[i]-X[i]*DA, Y[i+1]-X[i+1]*DA
   add eax, 16 ; Add size of two elements to index
   movapd [edi+eax-16],xmm1 ; Address corrected for changed eax
   cmp eax, ecx ; Compare with n*8
   jl L1 ; Loop back
```

The number of μ ops in the loop is the same as before, but the decode pattern is now 2-2-4-1-2-1-1 and the decode time is reduced from 6 to 4 clock cycles so that decoding is no longer a bottleneck.

An experimental test shows that the expected improvement is not obtained. The execution time is only reduced from 6.0 to 5.6 clock cycles per iteration. There are three reasons why the execution time is higher than the expected 4.3 clocks per iteration.

The first reason is register read stalls. The reorder buffer can handle no more than three reads per clock cycle from registers that have not been modified recently. Register <code>esi, edi, ecx</code> and <code>xmm2</code> are not modified inside the loop. <code>xmm2</code> counts as two because it is implemented as two 64-bit registers. <code>eax</code> also contributes to the register read stalls because its value has enough time to retire before it is used again. This causes a register read stall in two out of three iterations. The execution time can be reduced to 5.4 by moving the <code>add eax,16</code> instruction up before the <code>mulpd</code> so that the reads of register <code>esi, xmm2</code> and <code>edi</code> are separated further apart and therefore prevented from going into the reorder buffer in the same clock cycle.

The second reason is retirement. The number of fused μ ops in the loop is not divisible by 3. Therefore, the taken jump to L1 will not always go into the first slot of the retirement station which it has to. This can sometimes cost a clock cycle.

The third reason is that the two µops for addpd may be issued in the same clock cycle through port 0 and port 1, respectively, though there is only one execution unit for floating point addition. This is the consequence of a bad design, as explained in manual 3: "The microarchitecture of Intel and AMD CPU's".

A solution which happens to work better is to get rid of the cmp instruction by using a negative index from the end of the arrays:

```
; Example 12.6d. Loop of DAXPY algorithm with negative indexes .data align 16
```

```
SignBit DD 0, 80000000H  ; qword with sign bit set
n = 100  ; Define constant n (even and positive)

.code
  mov eax, -n * 8  ; Index = -n * sizeof(double)
  lea esi, X + 8 * n  ; Point to end of array X (aligned)
  lea edi, Y + 8 * n  ; Point to end of array Y (aligned)
  movsd xmm2, DA  ; Load DA
  xorpd xmm2, SignBit  ; Change sign
  shufpd xmm2, xmm2, 0  ; Get -DA into both qwords of xmm2

L1: movapd xmm1, [esi+eax]  ; X[i], X[i+1]
  mulpd xmm1, xmm2  ; X[i] * (-DA), X[i+1] * (-DA)
  addpd xmm1, [edi+eax]  ; Y[i]-X[i]*DA, Y[i+1]-X[i+1]*DA
  movapd [edi+eax],xmm1  ; Store result
  add eax, 16  ; Add size of two elements to index
  js L1  ; Loop back
```

This removes one μ op from the loop. My measurements show an execution time for example 12.6d of 5.0 clock cycles per iteration on a PM processor. The theoretical minimum is 4. The register read stalls have disappeared because eax now has less time to retire before it is used again. The retirement is also improved because the number of fused μ ops in the loop is now 12, which is divisible by the retirement rate of 3. The problem with the floating point addition μ ops clashing remains and this is responsible for the extra clock cycle. This problem can only be targeted by experimentation. I found that the optimal order of the instructions has the add instruction immediately after the mulpd:

```
; Example 12.6e. Loop of DAXPY. Optimal solution for PM
.data
align 16
SignBit DD 0, 80000000H ; qword with sign bit set
n = 100 ; Define constant n (even and positive)

.code
   mov eax, -n * 8 ; Index = -n * sizeof(double)
   lea esi, X + 8 * n ; Point to end of array X (aligned)
   lea edi, Y + 8 * n ; Point to end of array Y (aligned)
   movsd xmm2, DA ; Load DA
   xorpd xmm2, SignBit ; Change sign
   shufpd xmm2, xmm2, 0 ; Get -DA into both qwords of xmm2

L1: movapd xmm1, [esi+eax] ;
   mulpd xmm1, xmm2 ;
   add eax, 16 ; Optimal position of add instruction
   addpd xmm1, [edi+eax-16]; Address corrected for changed eax
   movapd [edi+eax-16],xmm1; Address corrected for changed eax
   js L1 ;
```

The execution time is now reduced to 4.0 clock cycles per iteration, which is the theoretical minimum. An analysis of the bottlenecks in the loop of example 12.6e gives the following results: The decoding time is 4 clock cycles. The retirement time is 12/3 = 4 clock cycles. Port 0 and 1 are used at 75% or their capacity. Port 2 is used 100%. Port 3 and 4 are used 50%. The FMUL execution unit is used at 100% of its maximum throughput. The FADD unit is used 50%. The conclusion is that the speed is limited by four equally narrow bottlenecks and that no further improvement is possible.

The fact that we found an instruction order that removes the floating point μ op clashing problem is sheer luck. In more complicated cases there may not exist a solution that eliminates this problem.

12.8 Same example on Core2

The same loop will run more efficiently on a Core2 thanks to better μ op fusion and more powerful execution units. Example 12.6c and 12.6d are good candidates for running on a Core2. The jl ll instruction in example 12.6c should be changed to jb ll in order to enable macro-op fusion in 32-bit mode. This change is possible because the loop counter cannot be negative in example 12.6c.

We will now analyze the resource use of the loop in example 12.6d for a Core2 processor. The resource use of each instruction in the loop is listed in table 12.2 below.

Instruction	Instruction length	μορs fused domain	μορs for each execution port					
			port 0	port 1	port 2	port 3	port 4	port 5
movapd xmm1, [esi+eax]	5	1				1		
mulpd xmm1, xmm2	4	1	1					
addpd xmm1, [edi+eax]	5	1		1		1		
movapd [edi+eax], xmm1	5	1					1	1
add eax, 16	3	1	Х	Х	Х			
js L1	2	1			1			
Total	24	6	1.33	1.33	1.33	2	1	1

Table 12.2. Total µops for DAXPY loop on Core2 (example 12.6d).

Predecoding is not a problem here because the total size of the loop is less than 64 bytes. There is no need to align the loop because the size is less than 50 bytes. If the loop had been bigger than 64 bytes then we would notice that the predecoder can handle only the first three instructions in one clock cycle because it cannot handle more than 16 bytes.

There are no restrictions on the decoders because all the instructions generate only a single μ op each. The decoders can handle four instructions per clock cycle, so the decoding time will be 6/4 = 1.5 clock cycles per iteration.

Port 0, 1 and 2 each have one μ op that can go nowhere else. In addition, the ADD EAX, 16 instruction can go to any one of these three ports. If these instructions are distributed evenly between port 0, 1 and 2, then these ports will be busy for 1.33 clock cycle per iteration on average.

Port 3 receives two μ ops per iteration for reading x[i] and y[i]. We can therefore conclude that memory reads on port 3 is the bottleneck for the DAXPY loop, and that the execution time is 2 clock cycles per iteration.

Example 12.6c has one instruction more than example 12.6d, which we have just analyzed. The extra instruction is CMP EAX, ECX, which can go to any of the ports 0, 1 and 2. This will increase the pressure on these ports to 1.67, which is still less than the 2 μ ops on port 3. The extra μ op can be eliminated by macro-op fusion in 32-bit mode, but not in 64-bit mode.

The floating point addition and multiplication units all have a throughput of 1. These units are therefore not bottlenecks in the DAXPY loop.

We need to consider the possibility of register read stalls in the loop. Example 12.6c has four registers that are read, but not modified, inside the loop. This is register ESI, EDI, XMM2

and ECX. This could cause a register read stall if all of these registers were read within four consecutive μ ops. But the μ ops that read these registers are spaced so much apart that no more than three of these can possibly be read in four consecutive μ ops. Example 12.6d has one register less to read because ECX is not used. Register read stalls are therefore unlikely to cause troubles in these loops.

The conclusion is that the Core2 processor runs the DAXPY loop in half as many clock cycles as the PM. The problem with µop clashing that made the optimization particularly difficult on the PM has been eliminated in the Core2 design.

12.9 Loop unrolling

A loop that does n repetitions can be replaced by a loop that repeats n / r times and does r calculations for each repetition, where r is the unroll factor. n should preferably be divisible by r.

Loop unrolling can be used for the following purposes:

- Reducing loop overhead. The loop overhead per calculation is divided by the loop unroll factor r. This is only useful if the loop overhead contributes significantly to the calculation time. There is no reason to unroll a loop if some other bottleneck limits the execution speed. For example, the loop in example 12.6e above cannot benefit from further unrolling.
- Vectorization. A loop must be rolled out by r or a multiple of r in order to use vector registers with r elements. The loop in example 12.6e is rolled out by 2 in order to use vectors of two double-precision numbers. If we had used single-precision numbers then we would have rolled out the loop by 4 and used vectors of 4 elements.
- Improve branch prediction. The prediction of the loop exit branch can be improved by unrolling the loop so much that the repeat count n / r does not exceed the maximum repeat count that can be predicted on a specific CPU.
- Improve caching. If the loop suffers from many data cache misses or cache contentions then it may be advantageous to schedule memory reads and writes in the way that is optimal for a specific processor. See the optimization manual from the microprocessor vendor for details.
- Eliminate integer divisions. If the loop contains an expression where the loop counter i is divided by an integer r or the modulo of i by r is calculated, then the integer division can be avoided by unrolling the loop by r.
- Eliminate branch inside loop. If there is a branch or a switch statement inside the loop with a repetitive pattern of period r then this can be eliminated by unrolling the loop by r. For example, if an if-else branch goes either way every second time then this branch can be eliminated by rolling out by 2.
- Break loop-carried dependency chain. A loop-carried dependency chain can in some cases be broken up by using multiple accumulators. The unroll factor *r* is equal to the number of accumulators. See example 9.3b page 63.
- Reduce dependence of induction variable. If the latency of calculating an induction variable from the value in the previous iteration is so long that it becomes a bottleneck then it may be possible to solve this problem by unrolling by r and calculate each value of the induction variable from the value that is r places behind in the sequence.

- Improving μop retirement. If the number of μops in the loop is not divisible by the retirement rate and retirement is inefficient for this reason then this problem may in some cases be solved by loop unrolling.
- Parallel operations on microprocessors without out-of-order capabilities. The old P1 and PMMX processors cannot do calculations out of order, but they can execute two instructions in parallel. Rolling out by 2 can facilitate this.
- Complete unrolling. A loop is completely unrolled when r = n. This eliminates the loop overhead completely. Every expression that is a function of the loop counter can be replaced by constants. Every branch that depends only on the loop counter can be eliminated. See page 106 for examples.

There is a problem with loop unrolling when the repeat count n is not divisible by the unroll factor r. There will be a remainder of n modulo r extra calculations that are not done inside the loop. These extra calculations have to be done either before or after the main loop.

Getting the extra calculations right can be somewhat tricky if we are using a negative index as in example 12.6d and e. The following example shows the DAXPY algorithm again, this time with single precision and unrolled by 4. In this example n is a variable which may or may not be divisible by 4. The arrays x and y must be aligned by 16. (The optimization that was specific to the PM processor has been omitted for the sake of clarity).

```
; Example 12.7. Unrolled Loop of DAXPY, single precision.
.data
align
              16
SignBitS DD 80000000H ; dword with sign bit set
.code
    mov eax, n ; Number of calculations, n sub eax, 4 ; n - 4 lea esi, [X + eax*4] ; Point to X[n-4] lea edi, [Y + eax*4] ; Point to Y[n-4] movss xmm2, DA ; Load DA xorps xmm2, SignBitS ; Change sign shufps xmm2, xmm2, 0 ; Get -DA into all four dwords of xmm2 neg eax ; -(n-4) ; Skip main loop if n < 4
     neg eax
jg L2
                                             ; Skip main loop if n < 4
     jg
L1: ; Main loop rolled out by 4
     movaps xmm1, [esi+eax*4] ; Load 4 values from X mulps xmm1, xmm2 ; Multiply with -DA addps xmm1, [edi+eax*4] ; Add 4 values from Y movaps [edi+eax*4], xmm1 ; Store 4 results in Y add eax, 4 ; i += 4
     add eax, 4 jle L1
                                              ; Loop as long as <= 0
L2: ; Check for remaining calculations
     sub eax, 4 ; = -remainder
      jns
               L4
                                              ; Skip extra loop if remainder = 0
L3: ; Extra loop for up to 3 remaining calculations
     movss xmm1, [esi+eax*4+16]; Load 1 value from X
     mulss xmm1, xmm2 ; Multiply with -DA
addss xmm1, [edi+eax*4+16] ; Add 1 value from Y
     movss [edi+eax*4+16],xmm1 ; Store 1 result in Y
                                              ; i += 1
     add eax, 1
              L3
     js
                                              ; Loop as long as negative
L4:
```

An alternative solution for an unrolled loop that does calculations on arrays is to extend the arrays with up to r-1 unused spaces and rounding up the repeat count n to the nearest multiple of the unroll factor r. This eliminates the need for calculating the remainder (n mod r) and for the extra loop for the remaining calculations. The unused array elements must be initialized to zero or some other valid floating point value in order to avoid denormal numbers, NAN, overflow, underflow, or any other condition that can slow down the floating point calculations. If the arrays are of integer type then the only condition you have to avoid is division by zero.

Loop unrolling should only be used when there is a reason to do so and a significant gain in speed can be obtained. Excessive loop unrolling should be avoided. The disadvantages of loop unrolling are:

- The code becomes bigger and takes more space in the code cache. This can cause code cache misses that cost more than what is gained by the unrolling. Note that the code cache misses are not detected when the loop is tested in isolation.
- The Core2 processor performs much better on loops that are no bigger than 64 bytes of code. Loop unrolling will decrease performance on the Core2 if it makes the loop bigger than 64 bytes. (See manual 3: "The microarchitecture of Intel and AMD CPU's".)
- The need to do extra calculations outside the unrolled loop in case *n* is not divisible by *r* makes the code more complicated and clumsy and increases the number of branches.
- The unrolled loop may need more registers, e.g. for multiple accumulators.

12.10 Optimize caching

Memory access is likely to take more time than anything else in a loop that accesses uncached memory. Data should be held contiguous if possible and accessed sequentially, as explained in chapter 11 page 79.

The number of arrays accessed in a loop should not exceed the number of read/write buffers in the microprocessor. One way of reducing the number of data streams is to combine multiple arrays into an array of structures so that the multiple data streams are interleaved into a single stream.

Some microprocessors have advanced data prefetching mechanisms. These mechanisms can detect regularities in the data access pattern such as accessing data with a particular stride. It is recommended to take advantage of such prefetching mechanisms by keeping the number of different data streams at a minimum and keeping the access stride constant if possible. Automatic data prefetching often works better than explicit data prefetching when the data access pattern is sufficiently regular.

Explicit prefetching of data with the prefetch instructions may be necessary in cases where the data access pattern is too irregular to be predicted by the automatic prefetch mechanisms. A good deal of experimentation is often needed to find the optimal prefetching strategy for a program that accesses data in an irregular manner.

It is possible to put the data prefetching into a separate thread if the system has multiple CPU cores. The Intel C++ compiler has a feature for doing this.

Data access with a stride that is a high power of 2 is likely to cause cache line contentions. This can be avoided by changing the stride or by loop blocking. See the chapter on optimizing memory access in manual 1: "Optimizing software in C++" for details.

The non-temporal write instructions are useful for writing to uncached memory that is unlikely to be accessed again soon. You may use vector instructions in order to minimize the number of non-temporal write instructions.

12.11 Parallelization

The most important way of improving the performance of CPU-intensive code is to do things in parallel. The main methods of doing things in parallel are:

- Improve the possibilities of the CPU to do out-of-order execution. This is done by breaking long dependency chains (see page 63) and distributing µops evenly between the different execution units or execution ports (see page 91).
- Use vector instructions. See chapter 13 page 108.
- Use multiple threads. See chapter 14 page 130.

Loop-carried dependency chains can be broken by using multiple accumulators, as explained on page 63. The optimal number of accumulators if the CPU has nothing else to do is the latency of the most critical instruction in the dependency chain divided by the reciprocal throughput for that instruction. For example, the latency of floating point addition on an AMD processor is 4 clock cycles and the reciprocal throughput is 1. This means that the optimal number of accumulators is 4. Example 12.8b below shows a loop that adds numbers with four floating point registers as accumulators.

```
// Example 12.8a, Loop-carried dependency chain
// (Same as example 9.3a page 63)
double list[100], sum = 0.;
for (int i = 0; i < 100; i++) sum += list[i];</pre>
```

An implementation with 4 floating point registers as accumulators looks like this:

In example 12.8b, I have loaded the four accumulators with the first four values from list.

Then the number of additions to do in the loop happens to be divisible by the rollout factor, which is 3. The funny thing about using floating point registers as accumulators is that the number of accumulators is equal to the rollout factor *plus one*. This is a consequence of the way the fxch instructions are used for swapping the accumulators. You have to play computer and follow the position of each accumulator on the floating point register stack to verify that the four accumulators are actually rotated one place after each iteration of the loop so that each accumulator is used for every fourth addition despite the fact that the loop is only rolled out by three.

The loop in example 12.8b takes 1 clock cycle per addition, which is the maximum throughput of the floating point adder. The latency of 4 clock cycles for floating point addition is taken care of by using four accumulators. The fxch instructions have zero latency because they are translated to register renaming on both Intel and AMD processors.

The fxch instructions can be avoided on processors with the SSE2 instruction set by using XMM registers instead of floating point stack registers as shown in example 12.8c. The latency of floating point vector addition is 4 on an AMD and the reciprocal throughput is 2 so the optimal number of accumulators is 2 vector registers.

Example 12.8b and 12.8c are exactly equally fast on an AMD processor because both are limited by the throughput of the floating point adder.

Example 12.8c is faster than 12.8b on an Intel Core2 processor because this processor has a 128 bits wide floating point adder that can handle a whole vector in one operation.

12.12 Analyzing dependences

A loop may have several interlocked dependency chains. Such complex cases require a careful analysis.

The next example is a Taylor expansion. As you probably know, many functions can be approximated by a Taylor polynomial of the form

$$f(x) \approx \sum_{i=0}^{n} c_i x^i$$

Each power x^i is conveniently calculated by multiplying the preceding power x^{i-1} with x. The coefficients c_i are stored in a table.

```
; Example 12.9a. Taylor expansion .data align 16 one dq 1.0 ; 1.0 x dq ? ; x
```

```
dq c0, c1, c2, ... ; Taylor coefficients
   coeff
              label qword
   coeff end
                                    ; end of coeff. list
.code
   movsd xmm2, [x]
                                    ; xmm2 = x
   movsd xmm1, [one]
                                   ; xmm1 = x^i
   pxor xmm0, xmm0
                                   ; xmm0 = sum. init. to 0
         eax, offset coeff
                                   ; point to c[i]
   mov
L1: movsd xmm3, [eax]
                                   ; c[i]
                                    ; c[i] * x^i
   mulsd xmm3, xmm1
   mulsd xmm1, xmm2
                                    ; x^{(i+1)}
                                    ; sum += c[i] * x^i
   addsd xmm0, xmm3
   add eax, 8
                                   ; point to c[i+1]
         eax, offset coeff_end
                                   ; stop at end of list
   cmp
   jb
                                    ; loop
```

(If your assembler confuses the movsd instruction with the string instruction of the same name, then code it as DB 0F2H / movups).

And now to the analysis. The list of coefficients is so short that we can expect it to stay cached. Trace cache and retirement are obviously not limiting factors in this example.

In order to check whether latencies are important, we have to look at the dependences in this code. The dependences are shown in figure 12.1.

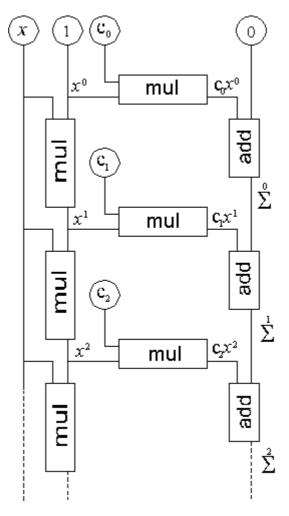


Figure 12.1: Dependences in example 12.9.

There are two continued dependency chains, one for calculating x^i and one for calculating the sum. The latency of the mulsd instruction is longer than the addsd on Intel processors.

The vertical multiplication chain is therefore more critical than the addition chain. The additions have to wait for $c_i x^i$, which come one multiplication latency after x^i , and later than the preceding additions. If nothing else limits the performance, then we can expect this code to take one multiplication latency per iteration, which is 4 - 7 clock cycles, depending on the processor.

Throughput is not a limiting factor because the throughput of the multiplication unit is one multiplication per clock cycle on processors with a 128 bit execution unit.

Measuring the time of example 12.9a, we find that the loop takes at least one clock cycle more than the multiplication latency. The explanation is as follows: Both multiplications have to wait for the value of x^{i-1} in xmm1 from the preceding iteration. Thus, both multiplications are ready to start at the same time. We would like the vertical multiplication in the ladder of figure 12.1 to start first, because it is part of the most critical dependency chain. But the microprocessor sees no reason to swap the order of the two multiplications, so the horizontal multiplication on figure 12.1 starts first. The vertical multiplication is delayed for one clock cycles, which is the reciprocal throughput of the floating point multiplication unit. The problem can be solved by putting the horizontal multiplication in figure 12.1 after the vertical multiplication:

```
; Example 12.9b. Taylor expansion
  movsd xmm2, [x] ; xmm2 = x
  movsd xmm1, [one] ; xmm1 = x^i
  pxor xmm0, xmm0 ; xmm0 = sum. initialize to 0
  mov eax, offset coeff ; point to c[i]
L1: movapd xmm3, xmm1 ; copy x^i
  mulsd xmm1, xmm2 ; x^(i+1) (vertical multipl.)
  mulsd xmm3, [eax] ; c[i]*x^i (horizontal multipl.)
  add eax, 8 ; point to c[i+1]
  cmp eax, offset coeff_end ; stop at end of list
  addsd xmm0, xmm3 ; sum += c[i] * x^i
  jb L1 ; loop
```

Here we need an extra instruction for copying x^i (movapd xmm3, xmm1) so that we can make the vertical multiplication before the horizontal multiplication. This makes the execution one clock cycle faster per iteration of the loop.

We are still using only the lower part of the xmm registers. There is more to gain by doing two multiplications simultaneously and taking two steps in the Taylor expansion at a time. The trick is to calculate each value of x^i from x^{i-2} by multiplying with x^2 :

The speed is now doubled. The loop still takes the multiplication latency per iteration, but the number of iterations is halved. The multiplication latency is 5 clock cycles for an Intel Core 2 and 4 for an AMD K10. Doing two vector multiplies per iteration, we are using only

40 or 50% of the maximum multiplier throughput. This means that there is more to gain by further parallelization. We can do this by taking four Taylor steps at a time and calculating each value of x^i from x^{i-4} by multiplying with x^4 :

We are using two registers, xmm1 and xmm2, for keeping four consecutive powers of x in example 12.9d in order to split the vertical dependency chain in figure 12.1 into four parallel chains. Each power x^i is calculated from x^{i-4} . Similarly, we are using two accumulators for the sum, xmm5 and xmm6 in order to split the addition chain into four parallel chains. The four sums are added together after the loop. A measurement on a Core 2 shows 5.04 clock cycles per iteration or 1.26 clock cycle per Taylor term for example 12.9d. This is close to the expectation of 5 clock cycles per iteration as determined by the multiplication latency. This solution uses 80% of the maximum throughput of the multiplier which is a very satisfactory result. There is hardly anything to gain by unrolling further. The vector addition and other instructions do not add to the execution time because they do not need to use the same execution units as the multiplications. Instruction fetch and decoding is not a bottleneck in this case.

The time spent outside the loop is of course higher in example 12.9d than in the previous examples, but the performance gain is still very significant even for a small number of iterations. A little final twist is to put the first coefficient into the accumulator before the loop and start with x^1 rather than x^0 . A better precision is obtained by adding the first term last, but at the cost of an extra addition latency.

It is common to stop a Taylor expansion when the terms become negligible. However, it may be wise to always include the worst case maximum number of terms in order to avoid the floating point comparisons needed for checking the stop condition. A constant repetition count will also prevent misprediction of the loop exit. Set the <code>mxcsr</code> register to "Flush to zero" mode in order to avoid the possible penalty of underflows when doing more iterations than necessary.

12.13 Loops on processors without out-of-order execution

The P1 and PMMX processors have no capabilities for out-of-order execution. These processors are of course obsolete today, but the principles described here may be applied to smaller embedded processors.

I have chosen the simple example of a procedure that reads integers from an array, changes the sign of each integer, and stores the results in another array. A C++ language code for this procedure would be:

```
// Example 12.10a. Loop to change sign
void ChangeSign (int * A, int * B, int N) {
  for (int i = 0; i < N; i++) B[i] = -A[i];
}</pre>
```

An assembly implementation optimized for P1 may look like this:

```
; Example 12.10b
      mov esi, [A]
      mov
            eax, [N]
      mov
            edi, [B]
            ecx, ecx
      xor
            esi, [esi+4*eax] ; point to end of array a
      lea
            ecx, eax
edi, [edi+4*eax]
      sub
                                   ; -n
                                 ; point to end of array b
      lea
      jz
            short L3
      xor
            ebx, ebx
                                   ; start first calculation
      mov
            eax, [esi+4*ecx]
      inc
            ecx
      jz
            short L2
L1:
     sub
            ebx, eax
                                   ; u
            ebx, eax
eax, [esi+4*ecx]
                                 ; v (pairs)
      mov
            [edi+4*ecx-4], ebx
                                   ; u
      mov
      inc
            ecx
                                   ; v (pairs)
            ebx, 0
                                   ; u
      mov
      jnz
            L1
                                   ; v (pairs)
     sub ebx, eax mov [edi+4*ecx
L2:
                                   ; end last calculation
            [edi+4*ecx-4], ebx
L3:
```

Here the iterations are overlapped in order to improve pairing opportunities. We begin reading the second value before we have stored the first one. The mov = bx, 0 instruction has been put in between inc = ecx and jnz = L1, not to improve pairing, but to avoid the AGI stall that would result from using ecx as address index in the first instruction pair after it has been incremented.

Loops with floating point operations are somewhat different because the floating point instructions are pipelined and overlapping rather than pairing. Consider the DAXPY loop of example 12.6 page 92. An optimal solution for P1 is as follows:

```
; Example 12.11. DAXPY optimized for P1 and PMMX
    mov eax, [n] ; number of elements
mov esi, [X] ; pointer to X
     mov esi, [X]
                                               ; pointer to X
     mov edi, [Y]
                                              ; pointer to Y
     xor ecx, ecx
     lea esi, [esi+8*eax] ; point to end of X
     sub ecx, eax
    sub ecx, eax , -n
lea edi, [edi+8*eax] ; point to end of Y
jz short L3 ; test for n = 0
fld qword ptr [DA] ; start first calc.
fmul qword ptr [esi+8*ecx] ; DA * X[0]

: jump into loop
                                              ; -n
     jmp short L2 ; jump into
fld qword ptr [DA]
fmul qword ptr [esi+8*ecx] ; DA * X[i]
jmp
L1: fld
                                              ; jump into loop
                                               ; get old result
     fxch
     fstp qword ptr [edi+8*ecx-8] ; store Y[i]
L2: fsubr qword ptr [edi+8*ecx] ; subtract from Y[i]
```

Here we are using the loop counter as array index and counting through negative values up to zero.

Each operation begins before the previous one is finished, in order to improve calculation overlaps. Processors with out-of-order execution will do this automatically, but for processors with no out-of-order capabilities we have to do this overlapping explicitly.

The interleaving of floating point operations works perfectly here: The 2 clock stall between FMUL and FSUBR is filled with the FSTP of the previous result. The 3 clock stall between FSUBR and FSTP is filled with the loop overhead and the first two instructions of the next operation. An address generation interlock (AGI) stall has been avoided by reading the only parameter that doesn't depend on the index counter in the first clock cycle after the index has been incremented.

This solution takes 6 clock cycles per iteration, which is better than unrolled solutions published elsewhere.

12.14 Macro loops

If the repetition count for a loop is small and constant, then it is possible to unroll the loop completely. The advantage of this is that calculations that depend only on the loop counter can be done at assembly time rather than at execution time. The disadvantage is, of course, that it takes up more space in the code cache if the repeat count is high.

The MASM syntax includes a powerful macro language with full support of metaprogramming, which can be quite useful. Other assemblers have similar capabilities, but the syntax is different.

If, for example, we need a list of square numbers, then the C++ code may look like this:

```
// Example 12.12a. Loop to make list of squares
int squares[10];
for (int i = 0; i < 10; i++) squares[i] = i*i;</pre>
```

The same list can be generated by a macro loop in MASM language:

Here, ${\tt I}$ is a preprocessing variable. The ${\tt I}$ loop is run at assembly time, not at execution time. The variable ${\tt I}$ and the statement ${\tt I}$ = ${\tt I}$ + ${\tt I}$ never make it into the final code, and hence take no time to execute. In fact, example 12.12b generates no executable code, only data. The macro preprocessor will translate the above code to:

```
; Example 12.12c. Resuls of macro loop expansion squares LABEL DWORD \, ; label at start of array DD 0 \, DD 1
```

```
DD 4
DD 9
DD 16
DD 25
DD 36
DD 49
DD 64
DD 81
```

Macro loops are also useful for generating code. The next example calculates x^n , where x is a floating point number and n is a positive integer. This is done most efficiently by repeatedly squaring x and multiplying together the factors that correspond to the binary digits in n. The algorithm can be expressed by the C++ code:

```
// Example 12.13a. Calculate pow(x,n) where n is a positive integer
double x, xp, power;
unsigned int n, i;
xp = x; power = 1.0;
for (i = n; i != 0; i >>= 1) {
   if (i & 1) power *= xp;
   xp *= xp;
}
```

If n is known at assembly time, then the power function can be implemented using the following macro loop:

```
; Example 12.13b.
 ; This macro will raise two packed double-precision floats in X
; to the power of N, where N is a positive integer constant.
 ; The result is returned in Y. X and Y must be two different
 ; XMM registers. X is not preserved.
 ; (Only for processors with SSE2)
INTPOWER MACRO X, Y, N
                 LOCAL I, YUSED
I = N
                                                                                                                                                                          ; define local identifiers
; I used for shifting N
                                                                                                                                                                                           ; remember if Y contains valid data
                    YUSED = 0
                                                       in a contains variate data
in a contains variate data
in a contains variate data
in a contains data
in
                   REPT 32
                                      IF I AND 1
                                                                        movsd Y, X ; copy data to Y

YUSED = 1 ; remember that Y now contains data
                                   ### In the control of the contr
                                                         ENDIF
                                                                                                                                                                                            ; end of IF YUSED
                    ENDM
                                                                                                                                                                                              ; end of REPT 32 loop
ENDM
                                                                                                                                                                                                      ; end of INTPOWER macro definition
```

This macro generates the minimum number of instructions needed to do the job. There is no loop overhead, prolog or epilog in the final code. And, most importantly, no branches. All branches have been resolved by the macro preprocessor. To calculate xmm0 to the power of 12, you write:

```
; Example 12.13c. Macro invocation INTPOWER xmm0, xmm1, 12
```

This will be expanded to:

This even has fewer instructions than an optimized assembly loop without unrolling. The macro can also work on vectors when mulsd is replaced by mulpd and movsd is replaced by movapd.

13 Vector programming

Since there are technological limits to the maximum clock frequency of microprocessors, the trend goes towards increasing processor throughput by handling multiple data in parallel.

When optimizing code, it is important to consider if there are data that can be handled in parallel. The principle of Single-Instruction-Multiple-Data (SIMD) programming is that a vector or set of data are packed together in one large register and handled together in one operation. There are many hundred different SIMD instructions available. These instructions are listed in "IA-32 Intel Architecture Software Developer's Manual" vol. 2A and 2B, and in "AMD64 Architecture Programmer's Manual", vol. 4.

Multiple data can be packed into 64-bit MMX registers, 128-bit XMM registers or 256-bit YMM registers in the following ways:

data type	data per pack	register size	instruction set	microprocessor
8-bit integer	8	64 bit (MMX)	MMX	PMMX and later
16-bit integer	4	64 bit (MMX)	MMX	PMMX and later
32-bit integer	2	64 bit (MMX)	MMX	PMMX and later
64-bit integer	1	64 bit (MMX)	SSE2	P4 and later
32-bit float	2	64 bit (MMX)	3DNow	AMD only
8-bit integer	16	128 bit (XMM)	SSE2	P4 and later
16-bit integer	8	128 bit (XMM)	SSE2	P4 and later
32-bit integer	4	128 bit (XMM)	SSE2	P4 and later
64-bit integer	2	128 bit (XMM)	SSE2	P4 and later
32-bit float	4	128 bit (XMM)	SSE	P3 and later
64-bit float	2	128 bit (XMM)	SSE2	P4 and later
32-bit float	8	256 bit (YMM)	AVX	future (2010)
64-bit float	4	256 bit (YMM)	AVX	future (2010)

Table 13.1. Vector types

The 64- and 128-bit packing modes are available on the latest microprocessors from Intel and AMD, except for the 3DNow mode, which is available only on AMD processors. Whether the different instruction sets are supported on a particular microprocessor can be determined with the CPUID instruction, as explained on page 130. The 64-bit MMX registers cannot be used together with the floating point registers. The XMM and YMM registers can only be used if supported by the operating system. See page 132 for how to check if the use of XMM and YMM registers is enabled by the operating system.

It is advantageous to choose the smallest data size that fits the purpose in order to pack as many data as possible into one vector register. Mathematical computations may require double precision (64-bit) floats in order to avoid loss of precision in the intermediate calculations, even if single precision is sufficient for the final result.

Before you choose to use vector instructions, you have to consider whether the resulting code will be faster than the simple instructions without vectors. With vector code, you may spend more instructions on trivial things such as moving data into the right positions in the registers and emulating conditional moves, than on the actual calculations. Example 13.5 below is an example of this. Vector instructions are relatively slow on older processors, but the newest processors can do a vector calculation just as fast as a scalar (single) calculation.

For floating point calculations, it is often advantageous to use XMM registers, even if there are no opportunities for handling data in parallel. The registers are handled in a more straightforward way than the old x87 register stack.

Memory operands for XMM instructions have to be aligned by 16. Memory operands for YMM instructions have to be aligned by 32 in some cases. See page 83 for how to align data in memory.

13.1 Conditional moves in SIMD registers

Consider this C++ code which finds the biggest values in four pairs of values:

```
// Example 13.2a. Loop to find maximums
float a[4], b[4], c[4];
for (int i = 0; i < 4; i++) {
   c[i] = a[i] > b[i] ? a[i] : b[i];
}
```

If we want to implement this code with XMM registers then we cannot use a conditional jump for the branch inside the loop because the branch condition is not the same for all four elements. Fortunately, there is a maximum instruction that does the same:

```
; Example 13.2b. Maximum in XMM
movaps xmm0, a ; Load a vector
maxps xmm0, b ; max(a,b)
movaps c, xmm0 ; c = a > b ? a : b
```

Minimum and maximum vector instructions exist for single and double precision floats and for 8-bit and 16-bit integers. The absolute value of floating point vector elements is calculated by AND'ing out the sign bit, as shown in example 13.8 page 119. Instructions for the absolute value of integer vector elements exist in the "Supplementary SSE3" instruction set. The integer saturated addition vector instructions (e.g. PADDSW) can also be used for finding maximum or minimum or for limiting values to a specific range.

These methods are not very general, however. The most general way of doing conditional moves in vector registers is to use Boolean vector instructions. The following example is a modification of the above example where we cannot use the MAXPS instruction:

```
// Example 13.3a. Branch in loop
```

```
float a[4], b[4], c[4], x[4], y[4];
for (int i = 0; i < 4; i++) {
   c[i] = x[i] > y[i] ? a[i] : b[i];
}
```

The necessary conditional move is done by making a mask that consists of all 1's when the condition is true and all 0's when the condition is false. $a[\pm]$ is AND'ed with this mask and $b[\pm]$ is AND'ed with the inverted mask:

```
; Example 13.3b. Conditional move in XMM registers
movaps xmm1, y ; Load y vector
cmpltps xmm1, x ; Compare with x. xmm1 = mask for y < x
movaps xmm0, a ; Load a vector
andps xmm0, xmm1 ; a AND mask
andnps xmm1, b ; b AND NOT mask
orps xmm0, xmm1 ; (a AND mask) OR (b AND NOT mask)
movaps c, xmm0 ; c = x > y ? a : b
```

The vectors that make the condition (x and y in example 13.3b) and the vectors that are selected (x and y in example 13.3b) need not be the same type. For example, x and y could be integers. But they should have the same number of elements per vector. If x and y are double's with two elements per vector, and x and y are 32-bit integers with four elements per vector, then we have to duplicate each element in x and y in order to get the right size of the mask (See example 13.5b below).

Note that the AND-NOT instruction (andnps, andnpd, pandn) inverts the destination operand, not the source operand. This means that it destroys the mask. Therefore we must have andps before andnps in example 13.3b. If the mask is needed more than once then it may be more efficient to AND the mask with an XOR combination of a and b. This is illustrated in the next example which makes a conditional swapping of a and b:

And now the assembly code using XMM vectors:

The xorps xmm0, xmm1 instruction generates a pattern of the bits that differ between a and b. This bit pattern is AND'ed with the mask so that xmm2 contains the bits that need to be changed if a and b should be swapped, and zeroes if they should not be swapped. The last two xorps instructions flip the bits that have to be changed if a and b should be swapped and leave the values unchanged if not.

The mask used for conditional moves can also be generated by copying the sign bit into all bit positions using the arithmetic shift right instruction psrad. This is illustrated in the next example where vector elements are raised to different integer powers. We are using the method in example 12.13a page 107 for calculating powers.

```
// Example 13.5a. Raise vector elements to different integer powers double x[2], y[2]; unsigned int n[2]; for (int i = 0; i < 2; i++) { y[i] = pow(x[i],n[i]);}
```

If the elements of ${\tt n}$ are equal then the simplest solution is to use a branch. But if the powers are different then we have to use conditional moves:

```
; Example 13.5b. Raise vector to power, using integer mask
 .data
                                                            ; Data segment
                                                                ; Must be aligned
 align 16
ONE DQ 1.0, 1.0 ; Make constant 1.0 

X DQ ?, ? ; x[0], x[1] 

Y DQ ?, ? ; y[0], y[1] 

N DD ?, ? ; n[0], n[1]
 .code
 ; register use:
 ; xmm0 = xp
 ; xmm1 = power
 ; xmm2 = i (i0 and i1 each stored twice as DWORD integers)
 ; xmm3 = 1.0 if not(i & 1)
 ; xmm4 = xp if (i & 1)
         movq xmm2, [N] ; Load n0, n1
punpckldq xmm2, xmm2 ; Copy to get n0, n0, n1, n1
movapd xmm0, [X] ; Load x0, x1
movapd xmm1, [one] ; power initialized to 1.0
         mov eax, [N]; n0
or eax, [N+4]; n0 OR n1 to get highest significant bit
xor ecx, ecx; 0 if n0 and n1 are both zero
bsr ecx, eax; Compute repeat count for max(n0,n1)
L1: movdqa xmm3, xmm2 ; Copy i pslld xmm3, 31 ; Get least significant bit of i psrad xmm3, 31 ; Copy to all bit positions to make mask psrld xmm2, 1 ; i >>= 1 movapd xmm4, xmm0 ; Copy of xp andpd xmm4, xmm3 ; xp if bit = 1 andnpd xmm3, [one] ; 1.0 if bit = 0 orpd xmm3, xmm4 ; (i & 1) ? xp : 1.0 mulpd xmm1, xmm3 ; power *= (i & 1) ? xp : 1.0 mulpd xmm0, xmm0 ; xp *= xp sub ecx, 1 ; Loop counter jns L1 ; Repeat ecx+1 times movapd [Y], xmm1 ; Store result
```

The repeat count of the loop is calculated separately outside the loop in order to reduce the number of instructions inside the loop.

Timing analysis for example 13.5b in P4E: There are four continued dependency chains: xmm0: 7 clocks, xmm1: 7 clocks, xmm2: 4 clocks, ecx: 1 clock. Throughput for the different execution units: MMX-SHIFT: 3 μ ops, 6 clocks. MMX-ALU: 3 μ ops, 6 clocks. FP-MUL: 2 μ ops, 4 clocks. Throughput for port 1: 8 μ ops, 8 clocks. Thus, the loop appears to be limited by port 1 throughput. The best timing we can hope for is 8 clocks per iteration which is the

number of μ ops that must go to port 1. However, three of the continued dependency chains are interconnected by two broken, but quite long, dependency chains involving μ mm3 and μ mm4, which take 23 and 19 clocks, respectively. This tends to hinder the optimal reordering of μ ops. The measured time is approximately 10 μ ops per iteration. This timing actually requires a quite impressive reordering capability, considering that several iterations must be overlapped and several dependency chains interwoven in order to satisfy the restrictions on all ports and execution units.

Conditional moves in general purpose registers using <code>CMOVCC</code> and floating point registers using <code>FCMOVCC</code> are no faster than in XMM registers.

A faster implementation of conditional moves in XMM registers has been implemented in newer instructions sets which, unfortunately, are different for Intel and AMD processors. On Intel processors with the SSE4.1 instruction set we can use the PBLENDVB, BLENDVPS or BLENDVPD instructions instead of the AND/OR operations:

```
; Example 13.3c. Conditional move in XMM registers, Intel SSE4.1 only movaps xmm0, y ; Load y vector cmpltps xmm0, x ; Compare with x. xmm1 = mask for y < x movaps xmm1, b ; Load b vector blendvps xmm1, a, xmm0 ; Conditionally replace b[i] by a[i] movaps c, xmm1 ; c = x > y? a : b
```

On future AMD processors with the XOP instruction set we can use the VPCMOV instruction in the same way:

```
; Example 13.3d. Conditional move in XMM registers, AMD XOP only movaps xmm0, y ; Load y vector cmpltps xmm0, x ; Compare with x. xmm1 = mask for y < x movaps xmm1, b ; Load b vector vpcmov xmm1, xmm1, a, xmm0 ; Conditionally replace b[i] by a[i] movaps c, xmm1 ; c = x > y? a : b
```

13.2 Using vector instructions with other types of data than they are intended for

Most XMM and YMM instructions are 'typed' in the sense that they are intended for a particular type of data. For example, it doesn't make sense to use an instruction for adding integers on floating point data. But instructions that only move data around will work with any type of data even though they are intended for one particular type of data. This can be quite useful if an equivalent instruction doesn't exist for the type of data you have or if an instruction for another type of data is more efficient.

All XMM and YMM instructions that move, shuffle, blend or shift data as well as the Boolean instructions can be used for other types of data than they are intended for. But instructions that do any kind of arithmetic operation, type conversion or precision conversion can only be used for the type of data it is intended for. For example, the FLD instruction does more than move floating point data, it also converts to a different precision. If you try to use FLD and FSTP for moving integer data then you may get exceptions for denormal operands in case the integer data do not happen to represent a normal floating point number. The instruction may even change the value of the data in some cases. But the instruction MOVAPS, which is also intended for moving floating point data, does not convert precision or anything else. It just moves the data. Therefore, it is OK to use MOVAPS for moving integer data.

If you are in doubt whether a particular instruction will work with any type of data then check the software manual from Intel or AMD. If the instruction can generate any kind of "floating point exception" then it should not be used for any other kind of data than it is intended for.

There is a penalty for using the wrong type of instructions in some cases. This is because the processor may have different data buses or different execution units for integer and floating point data. Moving data between the integer and floating point units takes an extra clock cycle on Intel processors and one or two clock cycles on AMD processors. See manual 3 "The microarchitecture of Intel and AMD CPU's" and manual 4: "Instruction tables" for details on specific processors. In some cases there can be another reason for the delay. Some AMD processors store extra information about floating point numbers in order to remember if the number is zero, normal or denormal. This information is lost if an instruction intended for integer vectors is used for moving floating point data. The processor needs one or two clock cycles extra for re-generating the lost information. This is called a reformatting delay. The reformatting delay occurs whenever the output of an integer XMM instruction is used as input for a floating point XMM instruction, except when the floating point XMM instruction does nothing else than writing the value to memory. Interestingly, there is no reformatting delay when using single-precision XMM instructions for double-precision data or vice versa.

Using an instruction of a wrong type can be advantageous in cases where there is no extra delay and in cases where the gain by using a particular instruction is more than the delay. Some cases are described below.

Using the shortest instruction

The instructions for packed single precision floating point numbers, with names ending in PS, are one byte shorter than equivalent instructions for double precision or integers. For example, you may use MOVAPS instead of MOVAPD or MOVDQA for moving data to or from memory or between registers. A reformatting delay occurs in AMD processors when using MOVAPS for moving the result of an integer instruction to another register, but not when moving data to or from memory.

Using the most efficient instruction

There are several different ways of reading an XMM register from unaligned memory. The typed instructions are MOVDQU, MOVUPD, and MOVUPS. These are all quite inefficient on older processors. LDDQU is faster, but requires the SSE3 instruction set. On some processors, the most efficient way of reading an XMM register from unaligned memory is to read 64 bits at a time using MOVQ and MOVHPS. Likewise, the fastest way of writing to unaligned memory may be to use MOVLPS and MOVHPS. See page 119 for more discussion of unaligned access.

An efficient way of setting a vector register to zero is PXOR XMM0, XMM0. Many processors recognize this instruction as being independent of the previous value of XMM0, while not all processors recognize the same for XORPS and XORPD. The PXOR instruction is therefore preferred for setting a register to zero.

The integer versions of the Boolean vector instructions (PAND, PANDN, POR, PXOR) can use the FADD or FMUL unit in an AMD K8 processor, while the floating point versions can use only the FMUL unit.

Using an instruction that is not available for other types of data

There are many situations where it is advantageous to use an instruction intended for a different type of data simply because an equivalent instruction doesn't exist for the type of data you have.

The instructions for single precision float vectors are available in the SSE instruction set, while the equivalent instructions for double precision and integers require the SSE2 instruction set. Using MOVAPS instead of MOVAPD or MOVDQA for moving data makes the code compatible with processors that have SSE but not SSE2.

There are many useful instructions for data shuffling that are available for only one type of data. These instructions can easily be used for other types of data than they are intended for. The transition delay, if any, is often less than the cost of alternative solutions. The data shuffling instructions are listed in the next paragraph.

13.3 Shuffling data

Vectorized code sometimes needs a lot of instructions for swapping and copying vector elements and putting data into the right positions in the vectors. The need for these extra instructions reduces the advantage of using vector operations. It can often be an advantage to use a shuffling instruction that is intended for a different type of data than you have, as explained in the previous paragraph. Some instructions that are useful for data shuffling are listed below.

Moving data between different elements of a register (Use same register for source and destination)

Instruction	Block size, bits	Description	Instruction set
PSHUFD	32	Universal shuffle	SSE2
PSHUFLW	16	Shuffles low half of register only	SSE2
PSHUFHW	16	Shuffles high half of register only	SSE2
SHUFPS	32	Shuffle	SSE
SHUFPD	64	Shuffle	SSE2
PSLLDQ	8	Shifts to a different position and sets the original position to zero	SSE2
PSHUFB	8	Universal shuffle	Suppl. SSE3
PALIGNR	8	Rotate vector of 8 or 16 bytes	Suppl. SSE3

Table 13.2. Shuffle instructions

Moving data from one register to different elements of another register

Instruction	Block size,	Description	Instruction	
	bits	_	set	
PSHUFD	32	Universal shuffle	SSE2	
PSHUFLW	16	Shuffles low half of register only	SSE2	
PSHUFHW	16	Shuffles high half of register only	SSE2	
PINSRB	8	Insert byte into vector	SSE4.1	
PINSRW	16	Insert word into vector	SSE	
PINSRD	32	Insert dword into vector	SSE4.1	
PINSRQ	64	Insert qword into vector	SSE4.1	
INSERTPS	32	Insert dword into vector	SSE4.1	
VPERMILPS	32	Shuffle with variable selector	AVX	
VPERMILPD	64	Shuffle with variable selector AVX		
VPPERM	8	Shuffle with variable selector	AMD XOP	

Table 13.3. Move-and-shuffle instructions

Combining data from two different sources

Instruction	Block size, bits	Description	Instruction set
SHUFPS	32	Lower 2 dwords from any position of destination higher 2 dwords from any position of source	SSE
SHUFPD	64	Low qword from any position of destination high qword from any position of source	SSE2

		T	T
MOVLPS/D	= - · · · · · · · · · · · · · · · · · ·		SSE/SSE2
MOTHIDG /D	0.4	high qword unchanged	005/0050
MOVHPS/D	64	High qword from memory,	SSE/SSE2
	2.4	low qword unchanged	005
MOVLHPS	64	Low qword unchanged,	SSE
		high qword from low of source	
MOVHLPS	64	Low qword from high of source,	SSE
		high qword unchanged	
MOVSS	32	Lowest dword from source (register only),	SSE
		bits 32-127 unchanged	
MOVSD	64	Low qword from source (register only),	SSE2
		high qword unchanged	
PUNPCKLBW	8	Low 8 bytes from source and destination	SSE2
		interleaved	
PUNPCKLWD	16	Low 4 words from source and destination	SSE2
		interleaved	
PUNPCKLDQ	32	Low 2 dwords from source and destination	SSE2
~	02	interleaved	0022
PUNPCKLQDQ	64	Low gword unchanged,	SSE2
	0-7	high qword from low of source	JOLZ
PUNPCKHBW	8	High 8 bytes from source and destination	SSE2
PONFCRIBW	0	interleaved	SSEZ
DIMPORIUM	40		0050
PUNPCKHWD	16	High 4 words from source and destination	SSE2
		interleaved	0050
PUNPCKHDQ	32	High 2 dwords from source and destination	SSE2
		interleaved	
PUNPCKHQDQ	64	Low qword from high of destination,	SSE2
		high qword from high of source	
PACKUSWB	8	Low 8 bytes from 8 words of destination, high 8	SSE2
		bytes from 8 words of source. Converted with	
		unsigned saturation.	
PACKSSWB	8	Low 8 bytes from 8 words of destination, high 8	SSE2
		bytes from 8 words of source. Converted with	
		signed saturation.	
PACKSSDW	16	Low 4 words from 4 dwords of destination, high	SSE2
	. •	4 words from 4 dwords of source. Converted	
		with signed saturation.	
MOVQ	64	Low gword from source, high gword set to zero	SSE2
PINSRB	8	Insert byte into vector	SSE4.1
PINSRW	16	Insert word into vector	SSE _{4.1}
PINSRD	32	Insert dword into vector	SSE4.1
INSERTPS			
	32	Insert dword into vector	SSE4.1
PINSRQ	64	Insert qword into vector	SSE4.1
PBLENDW	16	Blend from two different sources	SSE4.1
BLENDPS	32	Blend from two different sources	SSE4.1
BLENDPD	64	Blend from two different sources	SSE4.1
PBLENDVB	8	Multiplexer	SSE4.1
	32		
	32	· · · · · · · · · · · · · · · · · · ·	
BLENDVPS BLENDVPD	64	•	SSE4.1
BLENDVPS		Multiplexer Multiplexer	SSE4.1 AMD XOP

Table 13.4. Combine data

Copying data to multiple elements of a register (broadcast) (Use same register for source and destination)

Instruction	Block size, bits	Description	Instruction set
PSHUFD	32	Broadcast any dword	SSE2
SHUFPS	32	Broadcast dword	SSE
SHUFPD	64	Broadcast qword	SSE2
MOVLHPS	64	Broadcast qword	SSE2
MOVHLPS	64	Broadcast high qword	SSE2
MOVDDUP	64	Broadcast qword	SSE3
MOVSLDUP	32	Copy dword 0 to 1, copy dword 2 to 3	SSE3
MOVSHDUP	32	Copy dword 1 to 0, copy dword 3 to 2	SSE3
PUNPCKLBW	8	Duplicate each of the lower 8 bytes	SSE2
PUNPCKLWD	16	Duplicate each of the lower 4 words	SSE2
PUNPCKLDQ	32	Duplicate each of the lower 2 dwords	SSE2
PUNPCKLQDQ	64	Broadcast qword	SSE2
PUNPCKHBW	8	Duplicate each of the higher 8 bytes	SSE2
PUNPCKHWD	16	Duplicate each of the higher 4 words	SSE2
PUNPCKHDQ	32	Duplicate each of the higher 2 dwords	SSE2
PUNPCKHQDQ	64	Broadcast high qword	SSE2
PSHUFB	8	Broadcast any byte or larger element	Suppl. SSE3

Copy data from one register to all elements of another register (broadcast)

Instruction	Block	Description	Instruction
	size, bits		set
PSHUFD xmm2,xmm1,0	32	Broadcast dword	SSE2
PSHUFD xmm2,xmm1,0EEH	64	Broadcast qword	SSE2
MOVDDUP	64	Broadcast qword	SSE3
MOVSLDUP	32	2 copies of each of dword 0 and 2	SSE3
MOVSHDUP	32	2 copies of each of dword 1 and 3	SSE3
VBROADCASTSS	32	Broadcast dword from memory	AVX
VBROADCASTSD	64	Broadcast qword from memory	AVX
VBROADCASTF128	128	Broadcast 16 bytes from memory	AVX

Table 13.6. Move and broadcast data

Example: Horizontal addition

The following examples show how to add all elements of a vector.

(If suppl. SSE3 instruction set is available, use PHADDD after PSADBW.

```
pshufd xmm1, xmm0, 01H; Get bit 32-63 from xmm0 paddw xmm0, xmm1; Sums are in 2 words pshuflw xmm1, xmm0, 01H; Get bit 16-31 from xmm0 paddw xmm0, xmm1; Sum is in one word moved eax, xmm0; Sum is in low word of each and are summed to summe and summode ax xmm0; Sum is in low word of each and summode ax xmm0; Sum is in low word of each and summode ax xmm0.
      movd eax, xmm0 ; Sum is in low word of eax mov [sum], ax ; Store sum
(If suppl. SSE3 instruction set is available, use PHADDW three times).
       ; Example 13.6c. Add four elements in vector of 32-bit integers
      movaps xmm0, source ; Source vector, 4 32-bit integers
     pshufd xmm1, xmm0, 0EH; Get bit 64-127 from xmm1 paddd xmm0, xmm1; Sums are in 2 dwords pshufd xmm1, xmm0, 01H; Get bit 32-63 from xmm0 paddd xmm0, xmm1; Sum is in one dword movd [sum], xmm0; Store sum
                        xmm1, xmm0, 0EH; Get bit 64-127 from xmm1 (or use movhlps)
(If suppl. SSE3 instruction set is available, use PHADDD twice.
       ; Example 13.6d. Add two elements in vector of 64-bit integers
      movaps xmm0, source ; Source vector, 4 32-bit integers
                        xmm1, xmm0, 0EH; Get bit 64-127 from xmm1 (or use movhlps)
      pshufd
      paddq xmm0, xmm1 ; Sum is in one qword
movlps [sum],xmm0 ; Store sum
       ; Example 13.6e. Add four elements in vector of 32-bit floats
      movaps xmm0, source ; Source vector, 4 32-bit floats movhlps xmm1, xmm0 ; Get bit 64-127 from xmm1 addps xmm0, xmm1 ; Sums are in 2 dwords pshufd xmm1, xmm0, 01H; Get bit 32-63 from xmm0 addss xmm0, xmm1 ; Sum is in one dword movss [sum],xmm0 ; Store sum
(If SSE3 instruction set is available, use HADDPS twice).
```

(If SSE3 instruction set is available, use HADDPD).

13.4 Generating constants

There is no instruction for moving a constant into an XMM register. The default way of putting a constant into an XMM register is to load it from a memory constant. This is also the most efficient way if cache misses are rare. But if cache misses are frequent then we may look for alternatives.

One alternative is to copy the constant from a static memory location to the stack outside the innermost loop and use the stack copy inside the innermost loop. A memory location on the stack is less likely to cause cache misses than a memory location in a constant data segment. However, this option may not be possible in library functions.

A second alternative is to store the constant to stack memory using integer instructions and then load the value from the stack memory to the XMM register.

A third alternative is to generate the constant by clever use of various instructions. This does not use the data cache but takes more space in the code cache. The code cache is less likely to cause cache misses because the code is contiguous.

The constants may be reused many times as long as the register is not needed for something else.

The table 13.7 below shows how to make various integer constants in XMM registers. The same value is generated in all cells in the vector:

Making constants for integer vectors in XMM registers

Value	8 bit	16 bit	32 bit	64 bit
0	pxor xmm0,xmm0	pxor xmm0,xmm0	pxor xmm0,xmm0	pxor xmm0,xmm0
1	pcmpeqw xmm0,xmm0 psrlw xmm0,15 packuswb xmm0,xmm0	pcmpeqw xmm0,xmm0 psrlw xmm0,15	pcmpeqd xmm0,xmm0 psrld xmm0,31	pcmpeqw xmm0,xmm0 psrlq xmm0,63
2	pcmpeqw xmm0,xmm0 psrlw xmm0,15 psllw xmm0,1 packuswb xmm0,xmm0	pcmpeqw xmm0,xmm0 psrlw xmm0,15 psllw xmm0,1	pcmpeqd xmm0,xmm0 psrld xmm0,31 pslld xmm0,1	pcmpeqw xmm0,xmm0 psrlq xmm0,63 psllq xmm0,1
3	pcmpeqw xmm0,xmm0 psrlw xmm0,14 packuswb xmm0,xmm0	pcmpeqw xmm0,xmm0 psrlw xmm0,14	pcmpeqd xmm0,xmm0 psrld xmm0,30	pcmpeqw xmm0,xmm0 psrlq xmm0,62
4	pcmpeqw xmm0,xmm0 psrlw xmm0,15 psllw xmm0,2 packuswb xmm0,xmm0	pcmpeqw xmm0,xmm0 psrlw xmm0,15 psllw xmm0,2	pcmpeqd xmm0,xmm0 psrld xmm0,31 pslld xmm0,2	pcmpeqw xmm0,xmm0 psrlq xmm0,63 psllq xmm0,2
-1	pcmpeqw xmm0,xmm0	pcmpeqw xmm0,xmm0	pcmpeqd xmm0,xmm0	pcmpeqw xmm0,xmm0
-2	pcmpeqw xmm0,xmm0 psllw xmm0,1 packsswb xmm0,xmm0	pcmpeqw xmm0,xmm0 psllw xmm0,1	pcmpeqd xmm0,xmm0 pslld xmm0,1	pcmpeqw xmm0,xmm0 psllq xmm0,1
Other value	mov eax, value*01010101H movd xmm0,eax pshufd xmm0,xmm0,0	mov eax, value*10001H movd xmm0,eax pshufd xmm0,xmm0,0	mov eax,value movd xmm0,eax pshufd xmm0,xmm0,0	mov rax,value movq xmm0,rax punpcklqdq xmm0,xmm0 (64 bit mode only)

Table 13.7. Generate integer vector constants

Table 13.8 below shows how to make various floating point constants in XMM registers. The same value is generated in one or all cells in the vector:

Making floating point constants in XMM registers

Value	scalar single	scalar double	vector single	vector double
0.0	pxor xmm0,xmm0	pxor xmm0,xmm0	pxor xmm0,xmm0	pxor xmm0,xmm0
0.5	pcmpeqw xmm0,xmm0	pcmpeqw xmm0,xmm0	pcmpeqw xmm0,xmm0	pcmpeqw xmm0,xmm0
	pslld xmm0,26	psllq xmm0,55	pslld xmm0,26	psllq xmm0,55
	psrld xmm0,2	psrlq xmm0,2	psrld xmm0,2	psrlq xmm0,2
1.0	pcmpeqw xmm0,xmm0	pcmpeqw xmm0,xmm0	pcmpeqw xmm0,xmm0	pcmpeqw xmm0,xmm0
	pslld xmm0,25	psllq xmm0,54	pslld xmm0,25	psllq xmm0,54
	psrld xmm0,2	psrlq xmm0,2	psrld xmm0,2	psrlq xmm0,2
1.5	pcmpeqw xmm0,xmm0	pcmpeqw xmm0,xmm0	pcmpeqw xmm0,xmm0	pcmpeqw xmm0,xmm0
	pslld xmm0,24	psllq xmm0,53	pslld xmm0,24	psllq xmm0,53
	psrld xmm0,2	psrlq xmm0,2	psrld xmm0,2	psrlq xmm0,2
2.0	pcmpeqw xmm0,xmm0	pcmpeqw xmm0,xmm0	pcmpeqw xmm0,xmm0	pcmpeqw xmm0,xmm0
	pslld xmm0,31	psllq xmm0,63	pslld xmm0,31	psllq xmm0,63
	psrld xmm0,1	psrlq xmm0,1	psrld xmm0,1	psrlq xmm0,1
-2.0	<pre>pcmpeqw xmm0,xmm0 pslld xmm0,30</pre>	pcmpeqw xmm0,xmm0 psllq xmm0,62	pcmpeqw xmm0,xmm0 pslld xmm0,30	pcmpeqw xmm0,xmm0 psllq xmm0,62
sign bit	<pre>pcmpeqw xmm0,xmm0 pslld xmm0,31</pre>	pcmpeqw xmm0,xmm0 psllq xmm0,63	pcmpeqw xmm0,xmm0 pslld xmm0,31	pcmpeqw xmm0,xmm0 psllq xmm0,63
not	pcmpeqw xmm0,xmm0	pcmpeqw xmm0,xmm0	pcmpeqw xmm0,xmm0	pcmpeqw xmm0,xmm0
sign bit	psrld xmm0,1	psrlq xmm0,1	psrld xmm0,1	psrlq xmm0,1
Other	mov eax, value movd xmm0,eax	<pre>mov eax, value>>32 movd xmm0,eax</pre>	mov eax, value movd xmm0,eax	mov eax, value>>32 movd xmm0,eax

value		psllq xmm0,32	shufps xmm0,xmm0,0	pshufd xmm0,xmm0,22H
(32 bit				
mode)				
	Ī	The state of the s	The state of the s	mov rax, value
value	movd xmm0,eax	movq xmm0,rax	· ·	movq xmm0,rax
(64 bit			shufps xmm0,xmm0,0	shufpd xmm0,xmm0,0
mode)				

The "sign bit" is a value with the sign bit set and all other bits = 0. This is used for changing or setting the sign of a variable. For example to change the sign of a 2*double vector in xmm0:

```
; Example 13.7. Change sign of 2*double vector pcmpeqw xmm7, xmm7 ; All 1's psllq xmm7, 63 ; Shift out the lower 63 1's xorpd xmm0, xmm7 ; Flip sign bit of xmm0
```

Table 13.8. Generate floating point vector constants

The "not sign bit" is the inverted value of "sign bit". It has the sign bit = 0 and all other bits = 1. This is used for getting the absolute value of a variable. For example to get the absolute value of a 2*double vector in xmm0:

```
; Example 13.8. Absolute value of 2*double vector pcmpeqw xmm6, xmm6 ; All 1's psrlq xmm6, 1 ; Shift out the highest bit andpd xmm0, xmm6 ; Set sign bit to 0
```

Generating an arbitrary double precision value in 32-bit mode is more complicated. The method in table 13.8 uses only the upper 32 bits of the 64-bit representation of the number, assuming that the lower binary decimals of the number are zero or that an approximation is acceptable. For example, to generate the double value 9.25, we first use a compiler or assembler to find that the hexadecimal representation of 9.25 is 402280000000000H. The lower 32 bits can be ignored, so we can do as follows:

In 64-bit mode, we can use 64-bit integer registers:

```
; Example 13.9b. Set 2*double vector to arbitrary value (64 bit mode) mov rax, 40228000000000000; Full representation of 9.25 movq xmm0, rax ; Move to xmm0 shufpd xmm0, xmm0, 0 ; Broadcast
```

Note that some assemblers use the very misleading name movd instead of movg for the instruction that moves 64 bits between a general purpose register and an XMM register.

13.5 Accessing unaligned data

All data that are read or written with vector registers should be aligned by the vector size if possible. See page 81 for how to align data.

However, there are situations where alignment is not possible, for example if a library function receives a pointer to an array and it is unknown whether the array is aligned or not.

The following methods can be used for reading unaligned vectors:

Using unaligned read instructions

The instructions <code>movdqu</code>, <code>movups</code>, <code>movupd</code> and <code>lddqu</code> are all able to read unaligned vectors. <code>lddqu</code> is faster than the alternatives on some processors, but requires the SSE3 instruction set. The unaligned read instructions are relatively slow on current processors (2008), but it is expected that these instructions will be faster on future AMD and Intel processors.

```
; Example 13.10. Unaligned vector read
; esi contains pointer to unaligned array
movdqu xmm0, [esi] ; Read vector unaligned
```

Reading 8 bytes at a time

Instructions that read 8 bytes or less have no alignment requirements and are often quite fast unless the read crosses a cache boundary. Example:

```
; Example 13.11. Unaligned vector read split in two
; esi contains pointer to unaligned array
movq xmm0, qword ptr [esi] ; Read lower half of vector
movhps xmm0, qword ptr [esi+8] ; Read upper half of vector
```

This method is faster than using unaligned read instructions on current processors (2008), but probably not on future processors.

Partially overlapping reads

Make the first read from the unaligned address and the next read from the nearest following 16-bytes boundary. The first two reads will therefore possibly overlap:

```
; Example 13.12. First unaligned read overlaps next aligned read
; esi contains pointer to unaligned array
movdqu xmm1, [esi] ; Read vector unaligned
add esi, 10H
and esi, 0FH ; = nearest following 16B boundary
movdqa xmm2, [esi] ; Read next vector aligned
```

Here, the data in xmm1 and xmm2 will be partially overlapping if esi is not divisible by 16. This, of course, only works if the following algorithm allows the redundant data. The last vector read can also overlap with the last-but-one if the end of the array is not aligned.

Reading from the nearest preceding 16-bytes boundary

It is possible to start reading from the nearest preceding 16-bytes boundary of an unaligned array. This will put irrelevant data into part of the vector register, and these data must be ignored. Likewise, the last read may go past the end of the array until the next 16-bytes boundary:

In the above example, xmm1 contains eax bytes of junk followed by (16-eax) useful bytes. xmm2 contains the remaining eax bytes of the vector followed by (16-eax) bytes which are either junk or belonging to the next vector. The value in eax should then be used for masking out or ignoring the part of the register that contains junk data.

Here we are taking advantage of the fact that vector sizes, cache line sizes and memory page sizes are always powers of 2. The cache line boundaries and memory page boundaries will therefore coincide with vector boundaries. While we are reading some irrelevant data with this method, we will never load any unnecessary cache line, because cache lines are always aligned by some multiple of 16. There is therefore no cost to reading the irrelevant data. And, more importantly, we will never get a read fault for reading from non-existing memory addresses, because data memory is always allocated in pages of 4096 (= 2^{12}) bytes or more so the aligned vector read can never cross a memory page boundary.

An example using this method is shown in the strlenSSE2.asm example in the appendix www.agner.org/optimize/asmexamples.zip.

Combine two unaligned vector parts into one aligned vector

The above method can be extended by combining the valid parts of two registers into one full register. If xmm1 in example 13.13 is shifted right by the unalignment value (eax) and xmm2 is shifted left by (16-eax) then the two registers can be combined into one vector containing only valid data.

Unfortunately, there is no instruction to shift a whole vector register right or left by a variable count (analogous to shr eax,cl) so we have to use a shuffle instruction. The next example uses a byte shuffle instruction, PSHUFB, with appropriate mask values for shifting a vector register right or left:

```
; Example 13.14. Combining two unaligned parts into one vector.
; (Supplementary-SSE3 instruction set required)
; This example takes the squareroot of n floats in an unaligned
; array src and stores the result in an aligned array dest.
; C++ code:
; const int n = 100;
; float * src;
; float dest[n];
; for (int i=0; i<n; i++) dest[i] = sqrt(src[i]);</pre>
; Define masks for using PSHUFB instruction as shift instruction:
; The 16 bytes from SMask[16+a] will shift right a bytes
; The 16 bytes from SMask[16-a] will shift left a bytes
.data
SMask label xmmword
  .code
    mov esi, src
lea edi, dest
mov eax, esi
and eax, OFH
                            ; Unaligned pointer src
; Aligned array dest
                                      ; Get misalignment, a
    movdqu xmm4, [SMask+10H+eax]; Mask for shift right by a
    movdqu xmm5, [SMask+eax] ; Mask for shift left by 16-a and esi, -10H ; Nearest preceding 16B boundary xor ecx, ecx ; Loop counter i = 0
L: ; Loop
    movdqa xmm1, [esi+ecx] ; Read from preceding boundary movdqa xmm2, [esi+ecx+10H] ; Read next block pshufb xmm1, xmm4 ; shift right by a pshufb xmm2, xmm5 ; shift left by 16-a por xmm1, xmm2 ; combine blocks
```

```
sqrtps xmm1, xmm1 ; compute four squareroots movaps [edi+ecx], xmm1 ; Save result aligned add ecx, 10H ; Loop to next four values cmp ecx, 400 ; 4*n ; Loop
```

This method gets easier if the value of the misalignment (eax) is a known constant. We can use PSRLDQ and PSLLDQ instead of PSHUFB for shifting the registers right and left. PSRLDQ and PSLLDQ belong to the SSE2 instruction set, while PSHUFB requires supplementary-SSE3. The number of instructions can be reduced by using the PALIGNR instruction (Supplementary-SSE3) when the shift count is constant. Certain tricks with MOVSS or MOVSD are possible when the misalignment is 4, 8 or 12, as shown in example 13.15b below.

The fastest implementation has sixteen branches of code for each of the possible alignment values in eax. See the examples for memcpy and memset in the appendix www.agner.org/optimize/asmexamples.zip.

Combining unaligned vector parts from same array

Misalignment is inevitable when an operation is performed between two elements in the same array and the distance between the elements is not a multiple of the vector size. In the following C++ example, each array element is added to the preceding element:

```
// Example 13.15a. Add each array element to the preceding element float x[100]; for (int i = 0; i < 99; i++) x[i] += x[i+1];
```

Here x[i+1] is inevitably misaligned relative to x[i]. We can still use the method of combining parts of two aligned vectors, and take advantage of the fact that the misalignment is a known constant, 4.

Now we have discussed several methods for reading unaligned vectors. Of course we also have to discuss how to write vectors to unaligned addresses. Some of the methods are virtually the same.

Using unaligned write instructions

The instructions movdqu, movups, and movupd are all able to write unaligned vectors. The unaligned write instructions are relatively slow on current processors (2008), but it is expected that these instructions will be faster on future AMD and Intel processors.

```
; Example 13.16. Unaligned vector write
; edi contains pointer to unaligned array
movdqu [edi], xmm0 ; Write vector unaligned
```

Writing 8 bytes at a time

Instructions that write 8 bytes or less have no alignment requirements and are often quite fast unless the write crosses a cache boundary. Example:

```
; Example 13.17. Unaligned vector read split in two ; edi contains pointer to unaligned array movq qword ptr [edi], xmm0 ; Write lower half of vector movhps qword ptr [edi+8], xmm0 ; Write upper half of vector
```

This method is faster than using unaligned write instructions on current processors (2008), but probably not on future processors.

Partially overlapping writes

Make the first write to the unaligned address and the next write to the nearest following 16bytes boundary. The first two writes will therefore possibly overlap:

Here, the data from xmm1 and xmm2 will be partially overlapping if edi is not divisible by 16. This, of course, only works if the algorithm can generate the overlapping data. The last vector write can also overlap with the last-but-one if the end of the array is not aligned. See the memset example in the appendix www.agner.org/optimize/asmexamples.zip.

Writing the beginning and the end separately

Use non-vector instructions for writing from the beginning of an unaligned array until the first 16-bytes boundary, and again from the last 16-bytes boundary to the end of the array. See the memcpy example in the appendix www.agner.org/optimize/asmexamples.zip.

Using masked write

The instruction MASKMOVDQU can be used for writing to the first part of an unaligned array up to the first 16-bytes boundary as well as the last part after the last 16-bytes boundary. This method is quite slow because it doesn't use the cache.

13.6 Using AVX instruction set and YMM registers

A planned extension of the 128-bit XMM registers to 256-bit YMM registers is expected to be available in 2010. Further extensions to 512 or 1024 bits are likely in the future. Each XMM register forms the lower half of a YMM register. A YMM register can hold a vector of 8 single precision or 4 double precision floating point numbers. Integer vector instructions may be available in later versions. Most XMM and YMM instructions will allow three operands: one destination and two source operands.

Almost all the existing XMM instructions will have two versions in the AVX instruction set. A legacy version which leaves the upper half (bit 128-255) of the target YMM register unchanged, and a VEX-prefix version which sets the upper half to zero in order to remove false dependences. If a code sequence contains both 128-bit and 256-bit instructions then it is important to use the VEX-prefix version of the 128-bit instructions. Mixing 256 bit instructions with legacy 128-bit instructions without VEX prefix will cause the processor to switch the register file between different states which may cost many clock cycles.

For the sake of compatibility with existing code, the register set will have three different states:

- A. The upper half of all YMM registers is unused and known to be zero.
- B. The upper half of at least one YMM register is used and contains data.
- C. All YMM registers are split in two. The lower half is used by legacy XMM instructions which leave the upper part unchanged. All the upper-part halves are stored in a scratchpad. The two parts of each register will be joined together again if needed by a transition to state B.

Two instructions are available for the sake of fast transition between the states. VZEROALL which sets all YMM registers to zero, and VZEROUPPER which sets the upper half of all the registers to zero. Both instructions give state A. The state transitions can be illustrated by the following state transition table:

Current state →	А	В	С	
Instruction ↓				
VZEROALL / UPPER	Α	Α	Α	
XMM	Α	С	С	
VEX XMM	Α	В	В	
YMM	В	В	В	
Table 13.9. YMM state transitions				

State A is the neutral initial state. State B is needed when the full YMM registers are used. State C is needed for making legacy XMM code fast and free of false dependences when called from state B. A transition from state B to C is costly because all YMM registers must be split in two halves which are stored separately. A transition from state C to B is equally costly because all the registers have to be merged together again. A tradition from state C to A is also costly because the scratchpad containing the upper part of the registers does not support out-of-order access and must be protected from speculative execution in possibly mispredicted branches. The transitions $B \to C$, $C \to B$ and $C \to A$ can take up to 50 clock cycles or more because they have to wait for all registers to retire.

Transitions $A \to B$ and $B \to A$ are fast, probably taking only one clock cycle. C should be regarded as an undesired state, and the transition $A \to C$ is not possible.

The following examples illustrate the state transitions:

```
; Example 13.19a. Transition between YMM states
vaddps    ymm0, ymm1, ymm2    ; State B
addss    xmm3, xmm4    ; State C
vmulps    ymm0, ymm0, ymm5    ; State B
```

Example 13.19a has two expensive state transitions, from B to C, and back to state B. This can be avoided by replacing the legacy ADDSS instruction by the VEX-coded version VADDSS:

```
; Example 13.19b. Transition between YMM states avoided
vaddps    ymm0, ymm1, ymm2    ; State B
vaddss    xmm3, xmm4    ; State B
vmulps    ymm0, ymm5    ; State B
```

This method cannot be used when calling a library function that uses XMM instructions. The solution here is to save any used YMM registers and go to state A:

Any program that mixes XMM and YMM code should follow certain guidelines in order to avoid the costly transitions to and from state C:

- A function that uses YMM instructions should issue a VZEROALL or VZEROUPPER before returning if there is a possibility that it might be called from XMM code.
- A function that uses YMM instructions should save any used YMM register and issue a VZEROALL or VZEROUPPER before calling any function that might contain XMM code.
- A function that has a CPU dispatcher for choosing YMM code if available and XMM code otherwise, should issue a VZEROALL or VZEROUPPER before leaving the YMM part.

In other words: The ABI allows any function to use XMM or YMM registers, but a function that uses YMM registers must leave the registers in state A before calling any ABI compliant function and before returning to any ABI compliant function.

Obviously, this does not apply to functions that use full YMM registers for parameter transfer or return. A function that uses YMM registers for parameter transfer allows state B on entry. A function that uses a YMM register (YMM0) for the return value can be in state B on return. State C should always be avoided.

It is more efficient to use <code>vzeroall</code> than <code>vzeroupper</code> to end a section of YMM code because <code>vzeroall</code> tells the CPU that all YMM registers are now unused. This frees resources in the out-of-order core and it also makes state transitions faster because the YMM registers do not have to be saved.

VZEROALL cannot be used in 64-bit Windows because the ABI specifies that registers xmm6 - xmm15 have callee-save status. In other words, the calling function can assume that register xmm6 - xmm15, but not the upper halves of the YMM registers, are unchanged after return. No XMM or YMM registers have callee-save status in 32-bit Windows or in any Unix system (Linux, BSD, Mac). Therefore it is OK to use VZEROALL in e.g. 64-bit Linux. Obviously, VZEROALL cannot be used if any XMM register contains a function parameter or return value. VZEROUPPER must be used in these cases.

YMM and system code

A situation where transitions between state B and C must take place is when YMM code is interrupted and the interrupt handler contains legacy XMM code that saves the XMM registers but not the full YMM registers. In fact, state C was invented exactly for the sake of preserving the upper part of the YMM registers in this situation.

It is very important to follow certain rules when writing device drivers and other system code that might be called from interrupt handlers. If any YMM register is modified by a YMM instruction or a VEX-XMM instruction then it is necessary to save the entire register state with XSAVE first and restore it with XRESTOR before returning. It is not sufficient to save the individual YMM registers because future processors, which may extend the YMM registers further to 512-bit ZMM registers (or whatever they will be called), will zero-extend the YMM registers to ZMM when executing YMM instructions and thereby destroy the highest part of the ZMM registers. XSAVE / XRESTOR is the only way of saving these registers that is compatible with future extensions beyond 256 bits. Future extensions will not use the complicated method of having two versions of every YMM instruction.

If a device driver does not use XSAVE / XRESTOR then there is a risk that it might inadvertently use YMM registers even if the programmer did not intend this. The compiler may insert implicit calls to library functions such as memset and memcpy. These functions typically have their own CPU dispatcher which selects the largest register size available. Letting the operating system save everything with XSAVE before calling a device driver from an interrupt is the safest solution, but not the most efficient solution. See manual 5: "Calling conventions" for further discussion.

Using non-destructive three-operand instructions

The AVX instruction set which defines the YMM instructions also defines an alternative encoding of all existing XMM instructions by replacing existing prefixes and escape codes with the new VEX prefix. The VEX prefix has the further advantage that it defines an extra register operand. Almost all XMM instructions that previously had two operands now have three operands when the VEX prefix is used. This includes the integer vector XMM instructions that do not yet support the full YMM registers.

The two-operand version of an instruction typically uses the same register for the destination and for one of the source operands:

This has the disadvantage that the result overwrites the value of the source operand in xmm1. The three-operand version allows both source operands to remain unchanged:

```
; Example 13.20b. Three-operand instruction
vaddss xmm0, xmm1, xmm2 ; xmm0 = xmm1 + xmm2
```

Here the source operand in xmm1 is not destroyed because the result can be stored in a different destination register. This can be useful for avoiding register-to-register moves. The instructions in example 13.20a and 13.20b have exactly the same length. Therefore there is no penalty for using the three-operand version. The instructions with names ending in ps (packed single precision) are one byte shorter in the two-operand version than the three-operand version if the source register is not xmm8 - xmm15. The three-operand version is shorter than the two-operand version in a few cases. In most cases the two- and three-operand versions have the same length.

It is possible to mix two-operand and three-operand instructions in the same code as long as the register set is in state A. But if the register set happens to be in state C for whatever reason then the mixing of XMM instructions with and without VEX will cause a costly state

change every time the instruction type changes. It is therefore better to use VEX versions only or non-VEX only. If YMM registers are used (state B) then you should use only the VEX-prefix version for all XMM instructions until the VEX-section of code is ended with a VZEROALL OF VZEROUPPER.

The 64-bit MMX instructions and general purpose register instructions do not have three operand versions. There is no penalty for mixing MMX and VEX instructions. It is possible that some general purpose register instructions will have three-operand versions in a future instruction set.

Compilers should use the VEX prefix version for all XMM instructions, including intrinsic functions, if compiling for the AVX instruction set. The Intel compiler will have switches and #pragmas for this as well as for making inline assembly instructions with or without VEX prefix. The compiler using AVX should also issue a VZEROALL or VZEROUPPER before calling any library function unless there is a separate VEX version of the function.

Taylor series example

The following example illustrates the use of the AVX instruction set by using three-operand instructions and a vector size of 256 bits. The example computes the same Taylor series as in example 12.9 page 101.

```
; Example 13.21a. Taylor expansion using AVX (64-bit mode)
 ; (This example has not been tested because the relevant
 ; processor is not available yet)
 .data
                          dq 1.0
                                                                ; 1.0
 align 32
       ; double Taylor (double x) {
        double sum = 0;
         for (int i = 0; i < NumCoeff; i++) sum += coeff[i]*pow(x,i);
         return sum;
 ; }
 Taylor proc near
; xmm0 = x
vshufpd xmm2, xmm0, xmm0, 0 ; xmm2 = x, x
vmovsd xmm1, [one] ; xmm1 = 1
vshufpd xmm1, xmm1, xmm0, 0 ; xmm1 = x, 1
vmulpd xmm2, xmm2, xmm2 ; xmm2 = x^2, x^2
vmulpd xmm3, xmm1, xmm2 ; xmm3 = x^3, x^2
vmulpd xmm2, xmm2, xmm2 ; xmm2 = x^4, x^4
insertf128 ymm2, ymm2, ymm2, 1 ; ymm2 = x^4, x^4, x^4, x^4
insertf128 ymm1, ymm1, ymm3, 1 ; ymm1 = x^3, x^2, x^1, 1
vxorpd xmm0, xmm0, xmm0 ; ymm0 = 0
lea rax, coeff ; point to coeff[i]
lea rdx, coeff_end ; point to end of coeff

L1: ; Loop for all coefficients
vmovapd ymm3, ymm1 ; save ymm1 before multiplying
vmulpd ymm1, ymm1, ymm2 ; ymm1 = x^7, x^6, x^5, x^4
vmulpd ymm3, ymm3, coeff[rax] ; ymm3 = c3*x^3,...c0*1
vaddpd ymm0, ymm0, ymm3 ; ymm0 = sum3, sum2, sum1, sum0
add rax, 32 ; stop at end of coeff list
jb L1 ; loop
; Add all elements in ymm0 to get result
        ; xmm0 = x
         ; Add all elements in ymm0 to get result
```

```
; clear upper registers for compatibility with non-AVX code:
   zeroupper
   ret
Taylor endp
```

We have used 128-bit instructions rather than 256-bit instructions where possible because this may be faster on processors with 128-bit execution units. For example, the vxorpd instruction sets the entire ymm0 register to zero, even though it uses only the 128-bit xmm0 as operand. The v in front of the instruction names indicate that the VEX version is used in order to avoid mixing VEX and non-VEX instructions.

The execution time for the L1 loop is determined by the critical dependency chain of multiplying ymm1 with ymm2. The loop in example 13.21a is limited by the latency of the floating point multiplier, just as in example 12.9d page 104. If the latency is the same then there is nothing gained by using ymm registers. The first processors with VEX instructions will probably have 128-bit execution units. Later versions may have 256-bit execution units. This will double the throughput of the multiplier so that we can double the speed by unrolling the loop in example 13.21a once more and multiplying by x^8 each time.

We may use fused multiply-and-add instructions if the FMA instruction set is available:

However, this is probably no advantage in this case because the bottleneck is the latency of vmulpd.

13.7 Vector operations in general purpose registers

Sometimes it is possible to handle packed data in 32-bit or 64-bit general purpose registers. You may use this method on processors where integer operations are faster than vector operations or where vector operations are not available.

A 64-bit register can hold two 32-bit integers, four 16-bit integers, eight 8-bit integers, or 64 Booleans. When doing calculations on packed integers in 32-bit or 64-bit registers, you have to take special care to avoid carries from one operand going into the next operand if overflow is possible. Carry does not occur if all operands are positive and so small that overflow cannot occur. For example, you can pack four positive 16-bit integers into RAX and use ADD RAX, RBX instead of PADDW MM0, MM1 if you are sure that overflow will not occur. If carry cannot be ruled out then you have to mask out the highest bit, as in the following example, which adds 2 to all four bytes in EAX:

```
; Example 13.22. Byte vector addition in 32-bit register
mov    eax, [esi]    ; read 4-bytes operand
mov    ebx, eax    ; copy into ebx
and    eax, 7f7f7f7fh ; get lower 7 bits of each byte in eax
xor    ebx, eax    ; get the highest bit of each byte
add    eax, 02020202h ; add desired value to all four bytes
xor    eax, ebx    ; combine bits again
mov    [edi],eax    ; store result
```

Here the highest bit of each byte is masked out to avoid a possible carry from each byte into the next one when adding. The code is using xox rather than ADD to put back the high bit

again, in order to avoid carry. If the second addend may have the high bit set as well, it must be masked too. No masking is needed if none of the two addends have the high bit set.

It is also possible to search for a specific byte. This C code illustrates the principle by checking if a 32-bit integer contains at least one byte of zero:

```
// Example 13.23. Return nonzero if dword contains null byte
inline int dword_has_nullbyte(int w) {
  return ((w - 0x01010101) & ~w & 0x80808080);}
```

The output is zero if all four bytes of $_{\rm w}$ are nonzero. The output will have 0x80 in the position of the first byte of zero. If there are more than one bytes of zero then the subsequent bytes are not necessarily indicated. (This method was invented by Alan Mycroft and published in 1987. I published the same method in 1996 in the first version of this manual unaware that Mycroft had made the same invention before me).

This principle can be used for finding the length of a zero-terminated string by searching for the first byte of zero. It is faster than using REPNE SCASE:

```
; Example 13.24, optimized strlen procedure (32-bit):
_strlen PROC NEAR
; extern "C" int strlen (const char * s);
            push ebx ; ebx must be saved

mov ecx, [esp+8] ; get pointer to string

mov eax, ecx ; copy pointer

and ecx, 3 ; lower 2 bits, check alignment

jz L2 ; s is aligned by 4. Go to loop

and eax, -4 ; align pointer by 4

mov ebx, [eax] ; read from preceding boundary

shl ecx, 3 ; *8 = displacement in bits

mov edx, -1

shl edx, cl ; make byte mask

not edx ; mask = 0FFH for false bytes

or ebx, edx ; mask out false bytes
                          ebx, edx
                                                                 ; mask out false bytes
             ; check first four bytes for zero
             lea ecx, [ebx-01010101H] ; subtract 1 from each byte
             not ebx ; invert all bytes and ecx, ebx ; and these two and ecx, 80808080H ; test all sign bits
             jnz
                        L3
                                                                ; zero-byte found
            ; Main loop, read 4 bytes aligned
            add eax, 4 ; increment pointer mov ebx, [eax] ; read 4 bytes of statement pointer
L1:
                                                               ; read 4 bytes of string
L2:
             lea
                        ecx, [ebx-01010101H] ; subtract 1 from each byte
             not
             not ebx ; invert all bytes and ecx, ebx ; and these two and ecx, 80808080H ; test all sign bits
                        ebx
                                                                ; no zero bytes, continue loop
             jz
                        L1
            bsf ecx, ecx ; find right-most 1-bit shr ecx, 3 ; divide by 8 = byte index sub eax, [esp+8] ; subtract start address add eax, ecx ; add index to byte pop ebx ; restore ebx
T.3:
             qoq
                        ebx
                                                                ; restore ebx
            ret
                                                                ; return value in eax
strlen ENDP
```

The alignment check makes sure that we are only reading from addresses aligned by 4. The function may read both before the beginning of the string and after the end, but since all reads are aligned, we will not cross any cache line boundary or page boundary unnecessarily. Most importantly, we will not get any page fault for reading beyond allocated memory because page boundaries are always aligned by 2¹² or more.

If the SSE2 instruction set is available then it may be faster to use XMM instructions with the same alignment trick. Example 13.24 as well as a similar function using XMM registers are provided in the appendix at www.agner.org/optimize/asmexamples.zip.

Other common functions that search for a specific byte, such as strcpy, strchr, memchr can use the same trick. To search for a byte different from zero, just XOR with the desired byte as illustrated in this C code:

```
// Example 13.25. Return nonzero if byte b contained in dword w
inline int dword_has_byte(int w, unsigned char b) {
   w ^= b * 0x01010101;
   return ((w - 0x01010101) & ~w & 0x80808080);}
```

Note if searching backwards (e.g. strrchr) that the above method will indicate the position of the *first* occurrence of b in w in case there is more than one occurrence.

14 Multithreading

There is a limit to how much processing power you can get out of a single CPU. Therefore, many modern computer systems have multiple CPU cores. The way to make use of multiple CPU cores is to divide the computing job between multiple threads. The optimal number of threads is equal to the number of CPU cores. The workload should ideally be divided evenly between the threads.

Multithreading is useful where the code has an inherent parallelism that is coarse-grained. Multithreading cannot be used for fine-grained parallelism because there is a considerable overhead cost of starting and stopping threads and synchronizing the threads. Communication between threads can be quite costly. Therefore, the computing job should preferably be divided into threads at the highest possible level. If the outermost loop can be parallelized, then it should be divided into one loop for each thread, each doing its share of the whole job.

Thread-local storage should preferably use the stack, because accessing thread-local static memory is inefficient.

See manual 1: "Optimizing software in C++" for more details on multithreading.

15 CPU dispatching

What is optimal for one microprocessor may not be optimal for another. Therefore, you may make the most critical part of your program in different versions, each optimized for a specific microprocessor, and select the desired version at runtime after detecting which microprocessor the program is running on. The CPUID instruction tells which instructions the microprocessor supports. If you are using instructions that are not supported by all microprocessors, then you must first check if the program is running on a microprocessor that supports these instructions. If your program can benefit significantly from using Single-Instruction-Multiple-Data (SIMD) instructions, then you may make one version of a critical part of the program that uses these instructions, and another version which does not and which is compatible with old microprocessors.

If you are in doubt how many different versions of the code to make then you should consider the expected lifetime of your software application and what kind of hardware the typical user can be expected to have. Most software applications have a lifetime of at least several years. The newest microprocessors that are available today will probably be the most common microprocessors in a few years time. Therefore, it makes sense to optimize for the newest microarchitecture. Few users will run a speed-critical application on an old microprocessor. In most cases it will be sufficient to make one code version which is optimized for the newest processors and one version that is compatible with older processors. There is no reason to require the latest instruction set if you cannot take advantage of the instructions it contains. The SSE2 or SSE3 instruction set will satisfy most needs.

CPU dispatching can be implemented with branches or with a code pointer, as shown in the following example.

```
Example 15.1. Function with CPU dispatching
MyFunction proc near
   ; Jump through pointer. The code pointer initially points to
    ; MyFunctionDispatch. MyFunctionDispatch changes the pointer
    ; so that it points to the appropriate version of MyFunction.
    ; The next time MyFunction is called, it jumps directly to
    ; the right version of the function
           [MyFunctionPoint]
    ; Code for each version. Put the most probable version first:
MyFunctionSSE3:
   ; SSE3 version of MyFunction
   ret
MyFunctionSSE2:
    ; SSE2 version of MyFunction
   ret
MyFunction386:
    ; Generic/80386 version of MyFunction
MyFunctionDispatch:
    ; Detect which instruction set is supported.
    ; Function InstructionSet is in asmlib
   call InstructionSet
                                      ; eax indicates instruction set
   mov edx, offset MyFunction386
    cmp eax, 4
                                      ; eax >= 4 if SSE2
         DispEnd
    jb
   mov edx, offset MyFunctionSSE2
   cmp eax, 5 jb DispEnd
                                      i eax >= 5 if SSE3
   mov
         edx, offset MyFunctionSSE3
DispEnd:
   ; Save pointer to appropriate version of MyFunction
   mov [MyFunctionPoint], edx jmp edx
                                      ; Jump to this version
MyFunctionPoint DD MyFunctionDispatch ; Code pointer
.code
MyFunction endp
```

The function InstructionSet, which detects which instruction set is supported, is provided in the library that can be downloaded from www.agner.org/optimize/asmlib.zip. Most

operating systems also have functions for this purpose. Obviously, it is recommended to store the output from InstructionSet rather than calling it again each time the information is needed. See also www.agner.org/optimize/asmexamples.zip for detailed examples of functions with CPU dispatching.

For assemblers that don't support the newest instruction sets, you may use the macros at www.agner.org/optimize/macros.zip for coding the new instructions.

15.1 Checking for operating system support for XMM and YMM registers

Unfortunately, the information that can be obtained from the CPUID instruction is not sufficient for determining whether it is possible to use XMM registers. The operating system has to save these registers during a task switch and restore them when the task is resumed. The microprocessor can disable the use of the XMM registers in order to prevent their use under old operating systems that do not save these registers. Operating systems that support the use of XMM registers must set bit 9 of the control register CR4 to enable the use of XMM registers and indicate its ability to save and restore these registers during task switches. (Saving and restoring registers is actually faster when XMM registers are enabled).

Unfortunately, the CR4 register can only be read in privileged mode. Application programs therefore have a problem determining whether they are allowed to use the XMM registers or not. According to official Intel documents, the only way for an application program to determine whether the operating system supports the use of XMM registers is to try to execute an XMM instruction and see if you get an invalid opcode exception. This is ridiculous, because not all operating systems, compilers and programming languages provide facilities for application programs to catch invalid opcode exceptions. The advantage of using XMM registers evaporates completely if you have no way of knowing whether you can use these registers without crashing your software.

These serious problems led me to search for an alternative way of checking if the operating system supports the use of XMM registers, and fortunately I have found a way that works reliably. If XMM registers are enabled, then the FXSAVE and FXRSTOR instructions can read and modify the XMM registers. If XMM registers are disabled, then FXSAVE and FXRSTOR cannot access these registers. It is therefore possible to check if XMM registers are enabled, by trying to read and write these registers with FXSAVE and FXRSTOR. The subroutines in www.agner.org/optimize/asmlib.zip use this method. These subroutines can be called from assembly as well as from high-level languages, and provide an easy way of detecting whether XMM registers can be used.

In order to verify that this detection method works correctly with all microprocessors, I first checked various manuals. The 1999 version of Intel's software developer's manual says about the FXRSTOR instruction: "The Streaming SIMD Extension fields in the save image (XMM0-XMM7 and MXCSR) will not be loaded into the processor if the CR4.0SFXSR bit is not set." AMD's Programmer's Manual says effectively the same. However, the 2003 version of Intel's manual says that this behavior is implementation dependent. In order to clarify this, I contacted Intel Technical Support and got the reply, "If the OSFXSR bit in CR4 in not set, then XMMx registers are not restored when FXRSTOR is executed". They further confirmed that this is true for all versions of Intel microprocessors and all microcode updates. I regard this as a guarantee from Intel that my detection method will work on all Intel microprocessors. We can rely on the method working correctly on AMD processors as well since the AMD manual is unambiguous on this question. It appears to be safe to rely on this method working correctly on future microprocessors as well, because any microprocessor that deviates from the above specification would introduce a security problem as well as failing to run existing programs. Compatibility with existing programs is of great concern to microprocessor producers.

The subroutines in www.agner.org/optimize/asmlib.zip are constructed so that the detection will give a correct answer unless FXSAVE and FXRSTOR are both buggy. My detection method has been further verified by testing on many different versions of Intel and AMD processors and different operating systems.

The detection method recommended in Intel manuals has the drawback that it relies on the ability of the compiler and the operating system to catch invalid opcode exceptions. A Windows application, for example, using Intel's detection method would therefore have to be tested in all compatible operating systems, including various Windows emulators running under a number of other operating systems. My detection method does not have this problem because it is independent of compiler and operating system. My method has the further advantage that it makes modular programming easier, because a module, subroutine library, or DLL using XMM instructions can include the detection procedure so that the problem of XMM support is of no concern to the calling program, which may even be written in a different programming language. Some operating systems provide system functions that tell which instruction set is supported, but the method mentioned above is independent of the operating system.

See "Intel Advanced Vector Extensions Programming Reference" for details on how to check both the CPU and the operating system for support of YMM registers.

The above discussion has relied on the following documents:

Intel application note AP-900: "Identifying support for Streaming SIMD Extensions in the Processor and Operating System". 1999.

Intel application note AP-485: "Intel Processor Identification and the CPUID Instruction". 2002.

"Intel Architecture Software Developer's Manual, Volume 2: Instruction Set Reference", 1999.

"IA-32 Intel Architecture Software Developer's Manual, Volume 2: Instruction Set Reference", 2003.

"AMD64 Architecture Programmer's Manual, Volume 4: 128-Bit Media Instructions", 2003.

"Intel Advanced Vector Extensions Programming Reference", 2008.

16 Problematic Instructions

16.1 LEA instruction (all processors)

The LEA instruction is useful for many purposes because it can do a shift operation, two additions, and a move in just one instruction. Example:

```
; Example 16.1a, LEA instruction
lea eax, [ebx+8*ecx-1000]
```

is much faster than

```
; Example 16.1b
mov eax, ecx
shl eax, 3
add eax, ebx
sub eax, 1000
```

A typical use of LEA is as a three-register addition: lea eax, [ebx+ecx]. The LEA instruction can also be used for doing an addition or shift without changing the flags.

The processors have no documented addressing mode with a scaled index register and nothing else. Therefore, an instruction like lea eax, [ebx*2] is actually coded as lea eax, [ebx*2+00000000H] with an immediate displacement of 4 bytes. The size of this instruction can be reduced by writing lea eax, [ebx+ebx]. If you happen to have a register that is zero (like a loop counter after a loop) then you may use it as a base register to reduce the code size:

```
; Example 16.2, LEA instruction without base pointer
lea eax, [ebx*4] ; 7 bytes
lea eax, [ecx+ebx*4] ; 3 bytes
```

LEA with a scale factor is slow on the P4, and may be replaced by additions. This applies only to the LEA instruction, not to instructions accessing memory with a scaled index register.

The size of the base and index registers can be changed with an address size prefix. The size of the destination register can be changed with an operand size prefix (See prefixes, page 25). If the operand size is less than the address size then the result is truncated. If the operand size is more than the address size then the result is zero-extended.

The shortest version of LEA in 64-bit mode has 32-bit operand size and 64-bit address size, e.g. LEA EAX, [RBX+RCX], see page 75. Use this version when the result is sure to be less than 2^{32} . Use the version with a 64-bit destination register for address calculation in 64-bit mode when the address may be bigger than 2^{32} .

The preferred version in 32-bit mode has 32-bit operand size and 32-bit address size. LEA with a 16-bit operand size is slow on AMD processors. LEA with a 16-bit address size in 32-bit mode should be avoided because the decoding of this instruction is slow on many processors.

LEA can also be used in 64-bit mode for loading a RIP-relative address. A RIP-relative address cannot be combined with base or index registers.

16.2 INC and DEC (all Intel processors)

The INC and DEC instructions do not modify the carry flag but they do modify the other arithmetic flags. Writing to only part of the flags register costs an extra µop on P4 and P4E. It can cause a partial flags stalls on other Intel processors if a subsequent instruction reads the carry flag or all the flag bits. On all processors, it can cause a false dependence on the carry flag from a previous instruction.

Use ${\tt ADD}$ and ${\tt SUB}$ when optimizing for speed. Use ${\tt INC}$ and ${\tt DEC}$ when optimizing for size or when no penalty is expected.

16.3 XCHG (all processors)

The xCHG register, [memory] instruction is dangerous. This instruction always has an implicit LOCK prefix which prevents it from using the cache. This instruction is therefore very time consuming, and should always be avoided.

The xCHG instruction with register operands may be useful when optimizing for size as explained on page 71.

16.4 Shifts and rotates (P4)

Shifts and rotates on general purpose registers are slow on the P4. You may consider using MMX or XMM registers instead or replacing left shifts by additions.

16.5 Rotates through carry (all processors)

RCR and RCL with CL or with a count different from one are slow on all processors and should be avoided.

16.6 Bit test (all processors)

BT, BTC, BTR, and BTS instructions should preferably be replaced by instructions like TEST, AND, OR, XOR, or shifts on older processors. Bit tests with a memory operand should be avoided on Intel processors. BTC, BTR, and BTS use 2 μ ops on AMD processors. Bit test instructions are useful when optimizing for size.

16.7 LAHF and SAHF (all processors)

LAHF is slow on P4 and P4E. Use SETCC instead for storing the value of a flag.

SAHF is slow on P4E and AMD processors. Use TEST instead for testing a bit in AH. Use FCOMI if available as a replacement for the sequence FCOM / FNSTSW AX / SAHF.

LAHF and SAHF are not available in 64 bit mode on some early 64-bit Intel processors.

16.8 Integer multiplication (all processors)

An integer multiplication takes from 3 to 14 clock cycles, depending on the processor. It is therefore often advantageous to replace a multiplication by a constant with a combination of other instructions such as SHL, ADD, SUB, and LEA. For example IMUL EAX, 5 can be replaced by LEA EAX, [EAX+4*EAX].

16.9 Division (all processors)

Both integer division and floating point division are quite time consuming on all processors. Various methods for reducing the number of divisions are explained in manual 1: "Optimizing software in C++". Several methods to improve code that contains division are discussed below.

Integer division by a power of 2 (all processors)

Integer division by a power of two can be done by shifting right. Dividing an unsigned integer by 2^N :

```
; Example 16.3. Divide unsigned integer by 2^N shr eax, N
```

Dividing a signed integer by 2^N:

```
; Example 16.4. Divide signed integer by 2^N cdq and edx, (1 \text{ shl } n) - 1; (\text{Or: shr edx,32-n}) add eax, edx sar eax, n
```

Obviously, you should prefer the unsigned version if the dividend is certain to be non-negative.

Integer division by a constant (all processors)

Dividing by a constant can be done by multiplying with the reciprocal. A useful algorithm for integer division by a constant is as follows:

To calculate the unsigned integer division q = x / d in integers with a word size of w bits, you first calculate the reciprocal of the divisor, $f = 2^r / d$, where r defines the position of the binary decimal point (radix point). Then multiply x with f and shift right r positions. The maximum value of r is w+b, where b is the number of binary digits in d minus 1. (b is the highest integer for which $2^b \le d$). Use r = w+b to cover the maximum range for the value of the dividend x.

This method needs some refinement in order to compensate for rounding errors. The following algorithm will give you the correct result for unsigned integer division with truncation, i.e. the same result as the DIV instruction gives (Thanks to Terje Mathisen who (re-)invented this method):

```
b = (the number of significant bits in d) - 1
       r = w + b
       f = 2^{r} / d
       If f is an integer then d is a power of 2: go to case A.
       If f is not an integer, then check if the fractional part of f is < 0.5
       If the fractional part of f < 0.5: go to case B.
       If the fractional part of f > 0.5: go to case C.
       case A (d = 2b):
       result = x SHR b
       case B (fractional part of f < 0.5):
       round f down to nearest integer
       result = ((x+1) * f) SHR r
       case C (fractional part of f > 0.5):
       round f up to nearest integer
       result = (x * f) SHR r
Example:
Assume that you want to divide by 5.
5 = 101B.
w = 32.
b = \text{(number of significant binary digits)} - 1 = 2
r = 32+2 = 34
f = 2^{34} / 5 = 3435973836.8 = 0CCCCCCC...(hexadecimal)
The fractional part is greater than a half: use case C.
Round f up to 0CCCCCCDH.
```

The following code divides \mathtt{EAX} by 5 and returns the result in \mathtt{EDX} :

```
; Example 16.5a. Divide unsigned integer by 5 mov \, edx, 0CCCCCCDH \, mul \, edx \, shr \, edx, 2
```

After the multiplication, EDX contains the product shifted right 32 places. Since r = 34 you have to shift 2 more places to get the result. To divide by 10, just change the last line to SHR EDX, 3.

In case B we would have:

```
; Example 16.5b. Divide unsigned integer, case B
add eax, 1
mov edx, f
mul edx
shr edx, b
```

This code works for all values of x except 0FFFFFFH which gives zero because of overflow in the ADD EAX,1 instruction. If x = 0FFFFFFFH is possible, then change the code to:

```
; Example 16.5c. Divide unsigned integer, case B, check for overflow
    mov    edx, f
    add    eax, 1
    jc    DOVERFL
    mul    edx
DOVERFL: shr    edx, b
```

If the value of x is limited, then you may use a lower value of r, i.e. fewer digits. There can be several reasons for using a lower value of r:

- You may set r = w = 32 to avoid the SHR EDX, b in the end.
- You may set r = 16+b and use a multiplication instruction that gives a 32-bit result rather than 64 bits. This will free the EDX register:

```
; Example 16.5d. Divide unsigned integer by 5, limited range imul eax, 0 \mbox{CCCDH} shr eax, 18
```

• You may choose a value of r that gives case C rather than case B in order to avoid the ADD EAX, 1 instruction

The maximum value for x in these cases is at least 2^r -b, sometimes higher. You have to do a systematic test if you want to know the exact maximum value of x for which the code works correctly.

You may want to replace the slow multiplication instruction with faster instructions as explained on page 135.

The following example divides EAX by 10 and returns the result in EAX. I have chosen r=17 rather than 19 because it happens to give code that is easier to optimize, and covers the same range for x. $f = 2^{17} / 10 = 3333$ H, case B: q = (x+1)*3333H:

```
; Example 16.5e. Divide unsigned integer by 10, limited range
lea   ebx, [eax+2*eax+3]
lea   ecx, [eax+2*eax+3]
shl   ebx, 4
mov   eax, ecx
shl   ecx, 8
add   eax, ebx
shl   ebx, 8
add   eax, ecx
add   eax, ecx
shr   eax, 17
```

A systematic test shows that this code works correctly for all x < 10004H.

The division method can also be used for vector operands. Example 16.5f divides eight unsigned 16-bit integers by 10:

```
; Example 16.5f. Divide vector of unsigned integers by 10
.data
align 16
RECIPDIV DW 8 dup (OCCCDH); Vector of reciprocal divisor
.code
pmulhuw xmm0, RECIPDIV
psrlw xmm0, 3
```

Repeated integer division by the same value (all processors)

If the divisor is not known at assembly time, but you are dividing repeatedly with the same divisor, then you may use the same method as above. The code has to distinguish between case A, B and C and calculate f before doing the divisions.

The code that follows shows how to do multiple divisions with the same divisor (unsigned division with truncation). First call SET_DIVISOR to specify the divisor and calculate the reciprocal, then call DIVIDE FIXED for each value to divide by the same divisor.

```
Example 16.6, repeated integer division with same divisor
.DATA
RECIPROCAL_DIVISOR DD ?
                               ; rounded reciprocal divisor
CORRECTION DD ?
BSHIFT DD ?
                               ; case A: -1, case B: 1, case C: 0
                               ; number of bits in divisor - 1
. CODE
SET DIVISOR PROC NEAR
                              ; divisor in EAX
       push ebx
       mov ebx, eax
            ecx, eax
                              ; b = number of bits in divisor - 1
       bsr
       mov edx, 1
            ERROR
       jz
                             ; error: divisor is zero
           edx, cl
                              ; 2^b
       shl
       mov [BSHIFT], ecx ; save b
       cmp eax, edx
      mov eax, 0
           short CASE_A ; divisor is a power of 2
       je
                              ; 2^(32+b) / d
       div ebx
                              ; divisor / 2
       shr ebx, 1
       xor ecx, ecx
                        ; compare remainder with divisor/2
       cmp edx, ebx
       setbe cl
                              ; 1 if case b
       mov [CORRECTION], ecx ; correction for rounding errors
       xor
            ecx, 1
       add eax, ecx
                              ; add 1 if case c
            [RECIPROCAL_DIVISOR], eax ; rounded reciprocal divisor
       mov
       pop
      ret
CASE_A: mov [CORRECTION], -1 ; remember that we have case a
      pop ebx
      ret
SET_DIVISOR
            ENDP
DIVIDE FIXED PROC NEAR
                                 ; dividend in EAX, result in EAX
      mov edx, [CORRECTION]
       mov
            ecx, [BSHIFT]
       test edx, edx
       js
            DSHIFT
                                 ; divisor is power of 2
       add eax, edx
                                 ; correct for rounding error
            DOVERFL
                                 ; correct for overflow
       ic
       mul
            [RECIPROCAL_DIVISOR] ; multiply w. reciprocal divisor
       mov eax, edx
```

This code gives the same result as the DIV instruction for $0 \le x < 2^{32}$, $0 < d < 2^{32}$.

The line jc DOVERFL and its target are not needed if you are certain that x < 0FFFFFFFH.

If powers of 2 occur so seldom that it is not worth optimizing for them, then you may leave out the jump to <code>DSHIFT</code> and instead do a multiplication with <code>CORRECTION</code> = 0 for case A.

Floating point division (all processors)

Two or more floating point divisions can be combined into one, using the method described in manual 1: "Optimizing software in C++".

The time it takes to make a floating point division depends on the precision. When floating point registers are used, you can make division faster by specifying a lower precision in the floating point control word. This also speeds up the FSQRT instruction, but not any other instructions. When XMM registers are used, you don't have to change any control word. Just use single-precision instructions if your application allows this.

It is not possible to do a floating point division and an integer division at the same time because they are using the same execution unit on most processors.

Using reciprocal instruction for fast division (processors with SSE)

On processors with the SSE instruction set, you can use the fast reciprocal instruction RCPSS or RCPPS on the divisor and then multiply with the dividend. However, the precision is only 12 bits. You can increase the precision to 23 bits by using the Newton-Raphson method described in Intel's application note AP-803:

```
x0 = rcpss(d);

x1 = x0 * (2 - d * x0) = 2 * x0 - d * x0 * x0;
```

where x_0 is the first approximation to the reciprocal of the divisor d, and x_1 is a better approximation. You must use this formula before multiplying with the dividend.

```
; Example 16.7, fast division, single precision (SSE)
movaps xmm1, [divisors] ; load divisors
rcpps xmm0, xmm1 ; approximate reciprocal
mulps xmm1, xmm0 ; newton-raphson formula
mulps xmm1, xmm0
addps xmm0, xmm0
subps xmm0, xmm1
mulps xmm0, [dividends] ; results in xmm0
```

This makes four divisions in approximately 23 clock cycles on a PM with a precision of 23 bits. Increasing the precision further by repeating the Newton-Raphson formula with double precision is possible, but not very advantageous.

If you want to use this method for integer divisions then you have to check for rounding errors. The following code makes four integer divisions with truncation on packed word size integers in approximately 39 clock cycles on the PM. It gives exactly the same results as the DIV instruction for $0 \le \text{dividend} \le 7\text{FFFFH}$ and $0 < \text{divisor} \le 7\text{FFFFH}$:

```
; Example 16.8, integer division with packed 16-bit words (SSE2):
; compute QUOTIENTS = DIVIDENDS / DIVISORS
```

```
movq xmm1, [DIVISORS] ; load four divisors
movq xmm2, [DIVIDENDS] ; load four dividends
pxor xmm0, xmm0 ; temporary 0
punpcklwd xmm1, xmm0 ; convert divisors to dwords
cvtdq2ps xmm1, xmm1 ; convert divisors to floats
cvtdq2ps xmm2, xmm2 ; convert dividends to floats
cvtdq2ps xmm2, xmm2 ; convert dividends to floats
rcpps xmm0, xmm1 ; approximate reciprocal of divisors
mulps xmm1, xmm0 ; improve precision with..
mulps xmm1, xmm0 ; newton-raphson method
addps xmm0, xmm0
subps xmm0, xmm1 ; reciprocal divisors (23 bit precision)
mulps xmm0, xmm2 ; multiply with dividends
cvttps2dq xmm0, xmm0 ; truncate result of division
packssdw xmm0, xmm0 ; truncate result of division
packssdw xmm0, xmm0 ; convert quotients to word size
movq xmm1, [DIVISORS] ; load divisors again
movq xmm2, [DIVIDENDS] ; load divisors
pmullw xmm1, xmm0 ; dividends - divisors
pmullw xmm1, xmm0 ; divisors * quotients
pcmpgtw xmm1, xmm2 ; -1 if quotient not too small
pcmpeqw xmm2, xmm2 ; make integer -1's
pxor xmm1, xmm0 ; correct quotient
movq [QUOTIENTS], xmm0 ; save the four corrected quotients
```

This code checks if the result is too small and makes the appropriate correction. It is not necessary to check if the result is too big.

16.10 String instructions (all processors)

String instructions without a repeat prefix are too slow and should be replaced by simpler instructions. The same applies to LOOP on all processors and to JECXZ on some processors.

REP MOVSD and REP STOSD are quite fast if the repeat count is not too small. Always use the largest word size possible (DWORD in 32-bit mode, QWORD in 64-bit mode), and make sure that both source and destination are aligned by the word size. In most cases, however, it is faster to use XMM registers. Moving data in XMM registers is faster than REP MOVSD and REP STOSD in most cases. See page 153 for details.

Note that while the REP MOVS instruction writes a word to the destination, it reads the next word from the source in the same clock cycle. You can have a cache bank conflict if bit 2-4 are the same in these two addresses on P2 and P3. In other words, you will get a penalty of one clock extra per iteration if ESI+WORDSIZE-EDI is divisible by 32. The easiest way to avoid cache bank conflicts is to align both source and destination by 8. Never use MOVSB or MOVSW in optimized code, not even in 16-bit mode.

On PM, REP MOVS and REP STOS can perform fast by moving an entire cache line at a time. This happens only when the following conditions are met:

- Both source and destination must be aligned by 8
- Direction must be forward (direction flag cleared)
- The difference between EDI and ESI must be numerically greater than or equal to 64
- The memory type for both source and destination must be either write-back or write-combining (you can normally assume this).

Under these conditions, the speed is approximately 5-6 bytes per clock cycle for both instructions, which is more than 4 times as fast as when the above conditions are not met. The speed is higher for high values of ECX.

On P4, the number of clock cycles for REP MOVSD is difficult to predict, but it is always faster to use MOVAPS for moving data, except possibly for small repeat counts if a loop would suffer a branch misprediction penalty.

While the string instructions can be quite convenient, it must be emphasized that other solutions are faster in almost all cases. If the above conditions for fast move are not met then there is a lot to gain by using other methods. See page 153 for alternatives to REP MOVS.

REP LOADS, REP SCAS, and REP CMPS take more time per iteration than simple loops. See page 129 for alternatives to REPNE SCASB.

16.11 WAIT instruction (all processors)

You can often increase speed by omitting the WAIT instruction (also known as FWAIT). The WAIT instruction has three functions:

<u>A.</u> The old 8087 processor requires a WAIT before every floating point instruction to make sure the coprocessor is ready to receive it.

<u>B.</u> WAIT is used for coordinating memory access between the floating point unit and the integer unit. Examples:

<u>C.</u> WAIT is sometimes used to check for exceptions. It will generate an interrupt if an unmasked exception bit in the floating point status word has been set by a preceding floating point instruction.

Regarding A:

The functionality in point A is never needed on any other processors than the old 8087. Unless you want your 16-bit code to be compatible with the 8087, you should tell your assembler not to put in these WAIT's by specifying a higher processor. An 8087 floating point emulator also inserts WAIT instructions. You should therefore tell your assembler not to generate emulation code unless you need it.

Regarding B:

WAIT instructions to coordinate memory access are definitely needed on the 8087 and 80287 but not on the Pentiums. It is not quite clear whether it is needed on the 80387 and 80486. I have made several tests on these Intel processors and not been able to provoke any error by omitting the WAIT on any 32-bit Intel processor, although Intel manuals say that the WAIT is needed for this purpose except after FNSTSW and FNSTCW. Omitting WAIT instructions for coordinating memory access is not 100 % safe, even when writing 32-bit

code, because the code may be able to run on the very rare combination of a 80386 main processor with a 287 coprocessor, which requires the WAIT. Also, I have no information on non-Intel processors, and I have not tested all possible hardware and software combinations, so there may be other situations where the WAIT is needed.

If you want to be certain that your code will work on even the oldest 32-bit processors then I would recommend that you include the \mathtt{WAIT} here in order to be safe. If rare and obsolete hardware platforms such as the combination of 80386 and 80287 can be ruled out, then you may omit the \mathtt{WAIT} .

Regarding C:

The assembler automatically inserts a wait for this purpose before the following instructions: FCLEX, FINIT, FSAVE, FSTCW, FSTENV, FSTSW. You can omit the WAIT by writing FNCLEX, etc. My tests show that the WAIT is unnecessary in most cases because these instructions without WAIT will still generate an interrupt on exceptions except for FNCLEX and FNINIT on the 80387. (There is some inconsistency about whether the IRET from the interrupt points to the FN.. instruction or to the next instruction).

Almost all other floating point instructions will also generate an interrupt if a previous floating point instruction has set an unmasked exception bit, so the exception is likely to be detected sooner or later anyway. You may insert a WAIT after the last floating point instruction in your program to be sure to catch all exceptions.

You may still need the WAIT if you want to know exactly where an exception occurred in order to be able to recover from the situation. Consider, for example, the code under B3 above: If you want to be able to recover from an exception generated by the FLD here, then you need the WAIT because an interrupt after ADD ESP, 8 might overwrite the value to load. FNOP may be faster than WAIT on some processors and serve the same purpose.

16.12 FCOM + FSTSW AX (all processors)

The finstsw instruction is very slow on all processors. Most processors have from instructions to avoid the slow finstsw. Using from instead of the common sequence from / finstsw ax / sahf will save 4 - 8 clock cycles. You should therefore use from it to avoid finstsw wherever possible, even in cases where it costs some extra code.

On P1 and PMMX processors, which don't have FCOMI instructions, the usual way of doing floating point comparisons is:

```
; Example 16.10a.
   fld [a]
   fcomp [b]
   fstsw ax
   sahf
   jb ASmallerThanB
```

You may improve this code by using <code>FNSTSW</code> AX rather than <code>FSTSW</code> AX and test AH directly rather than using the non-pairable <code>SAHF</code>:

```
; Example 16.10b.
  fld [a]
  fcomp [b]
  fnstsw ax
  shr ah,1
  jc ASmallerThanB
```

Testing for zero or equality:

```
; Example 16.10c.
   ftst
   fnstsw ax
   and   ah, 40H   ; Don't use TEST instruction, it's not pairable
   jnz   IsZero   ; (the zero flag is inverted!)
```

Test if greater:

```
; Example 16.10d.
  fld [a]
  fcomp [b]
  fnstsw ax
  and ah, 41H
  jz AGreaterThanB
```

On the P1 and PMMX, the FNSTSW instruction takes 2 clocks, but it is delayed for an additional 4 clocks after any floating point instruction because it is waiting for the status word to retire from the pipeline. You may fill this gap with integer instructions.

It is sometimes faster to use integer instructions for comparing floating point values, as described on page 150 and 152.

16.13 FPREM (all processors)

The FPREM and FPREM1 instructions are slow on all processors. You may replace it by the following algorithm: Multiply by the reciprocal divisor, get the fractional part by subtracting the truncated value, and then multiply by the divisor. (See page 149 on how to truncate on processors that don't have truncate instructions).

Some documents say that these instructions may give incomplete reductions and that it is therefore necessary to repeat the FPREM or FPREM1 instruction until the reduction is complete. I have tested this on several processors beginning with the old 8087 and I have found no situation where a repetition of the FPREM or FPREM1 was needed.

16.14 FRNDINT (all processors)

This instruction is slow on all processors. Replace it by:

```
; Example 16.11.
  fistp qword ptr [TEMP]
  fild qword ptr [TEMP]
```

This code is faster despite a possible penalty for attempting to read from [TEMP] before the write is finished. It is recommended to put other instructions in between in order to avoid this penalty. See page 149 on how to truncate on processors that don't have truncate instructions. On processors with SSE instructions, use the conversion instructions such as CVTSS2SI and CVTTSS2SI.

16.15 FSCALE and exponential function (all processors)

FSCALE is slow on all processors. Computing integer powers of 2 can be done much faster by inserting the desired power in the exponent field of the floating point number. To calculate 2^N , where N is a signed integer, select from the examples below the one that fits your range of N:

For $|N| < 2^7-1$ you can use single precision:

```
; Example 16.12a.
```

```
mov eax, [N]
shl eax, 23
add eax, 3f800000h
mov dword ptr [TEMP], eax
fld dword ptr [TEMP]
```

For $|N| < 2^{10}$ -1 you can use double precision:

```
; Example 16.12b.
  mov   eax, [N]
  shl   eax, 20
  add   eax, 3ff00000h
  mov   dword ptr [TEMP], 0
  mov   dword ptr [TEMP+4], eax
  fld   qword ptr [TEMP]
```

For $|N| < 2^{14}$ -1 use long double precision:

```
; Example 16.12c.
  mov     eax, [N]
  add     eax, 00003fffh
  mov     dword ptr [TEMP], 0
  mov     dword ptr [TEMP+4], 80000000h
  mov     dword ptr [TEMP+8], eax
  fld     tbyte ptr [TEMP]
```

On processors with SSE2 instructions, you can make these operations in XMM registers without the need for a memory intermediate (see page 151).

FSCALE is often used in the calculation of exponential functions. The following code shows an exponential function without the slow FRNDINT and FSCALE instructions:

```
; Example 16.13. Exponential function
; extern "C" long double exp (double x);
              NEAR
_exp PROC
PUBLIC _exp
        fldl2e
        fld
              qword ptr [esp+4]
                                              ; x
                                              z = x*log2(e)
        fmul
        fist dword ptr [esp+4]
                                              ; round(z)
        sub esp, 12
        mov dword ptr [esp], 0
mov dword ptr [esp+4], 80000000h
        fisub dword ptr [esp+16] ; z - round(z)
        mov eax, [esp+16]
        add eax,3fffh
mov [esp+8],eax
jle short UNDERFLOW
cmp eax,8000h
jge short OVERFLOW
        f2xm1
        fld1
        fadd
                                              ; 2^(z-round(z))
        fld tbyte ptr [esp]
                                              ; 2^(round(z))
        add
              esp,12
        fmul
                                               i 2^z = e^x
        ret
UNDERFLOW:
        fstp st
        fldz
                                              ; return 0
        add esp,12
        ret
OVERFLOW:
```

```
push 07f800000h ; +infinity
fstp st
fld dword ptr [esp] ; return infinity
add esp,16
ret
exp ENDP
```

16.16 FPTAN (all processors)

According to the manuals, FPTAN returns two values, X and Y, and leaves it to the programmer to divide Y with X to get the result; but in fact it always returns 1 in X so you can save the division. My tests show that on all 32-bit Intel processors with floating point unit or coprocessor, FPTAN always returns 1 in X regardless of the argument. If you want to be absolutely sure that your code will run correctly on all processors, then you may test if X is 1, which is faster than dividing with X. The Y value may be very high, but never infinity, so you don't have to test if Y contains a valid number if you know that the argument is valid.

16.17 FSQRT (SSE processors)

A fast way of calculating an approximate square root on processors with SSE is to multiply the reciprocal square root of x by x:

```
sqrt(x) = x * rsqrt(x)
```

The instruction RSQRTSS or RSQRTPS gives the reciprocal square root with a precision of 12 bits. You can improve the precision to 23 bits by using the Newton-Raphson formula described in Intel's application note AP-803:

```
x0 = rsqrtss(a)

x1 = 0.5 * x0 * (3 - (a * x0) * x0)
```

where $\mathbf{x}0$ is the first approximation to the reciprocal square root of a, and $\mathbf{x}1$ is a better approximation. The order of evaluation is important. You must use this formula before multiplying with a to get the square root.

16.18 FLDCW (Most Intel processors)

Many processors have a serious stall after the FLDCW instruction if followed by any floating point instruction which reads the control word (which almost all floating point instructions do).

When C or C++ code is compiled, it often generates a lot of FLDCW instructions because conversion of floating point numbers to integers is done with truncation while other floating point instructions use rounding. After translation to assembly, you can improve this code by using rounding instead of truncation where possible, or by moving the FLDCW out of a loop where truncation is needed inside the loop.

On the P4, this stall is even longer, approximately 143 clocks. But the P4 has made a special case out of the situation where the control word is alternating between two different values. This is the typical case in C++ programs where the control word is changed to specify truncation when a floating point number is converted to integer, and changed back to rounding after this conversion. The latency for FLDCW is 3 when the new value loaded is the same as the value of the control word before the preceding FLDCW. The latency is still 143, however, when loading the same value into the control word as it already has, if this is not the same as the value it had one time earlier.

See page 149 on how to convert floating point numbers to integers without changing the control word. On processors with SSE, use truncation instructions such as CVTTSS2SI instead.

17 Special topics

17.1 XMM versus floating point registers (Processors with SSE)

Processors with the SSE instruction set can do single precision floating point calculations in xmm registers. Processors with the SSE2 instruction set can also do double precision calculations in xmm registers. Floating point calculations are approximately equally fast in xmm registers and ST() registers. The decision of whether to use the floating point stack registers ST(0) - ST(7) or the new xmm registers depends on the following factors.

Advantages of using ST() registers:

- Compatible with old processors without SSE or SSE2.
- Compatible with old operating systems without XMM support.
- Supports long double precision.
- Intermediate results are always calculated with long double precision.
- Precision conversions are free in the sense that they require no extra instructions and take no extra time. Use ST() registers for expressions where operands have mixed precision.
- Mathematical functions such as logarithms and trigonometric functions are supported by hardware instructions. These functions are useful when optimizing for size, but not necessarily faster than library functions using XMM registers.
- Conversions to and from decimal numbers can use the FBLD and FBSTP instructions when optimizing for size.
- Floating point instructions using ST() registers are smaller than the corresponding instructions using XMM registers. For example, FADD ST(0),ST(1) is 2 bytes, while ADDSD XMM0,XMM1 is 4 bytes.

Advantages of using XMM or YMM registers:

- Can do multiple operations with a single vector instruction.
- Avoids the need to use FXCH for getting the desired register to the top of the stack.
- No need to clean up the register stack after use.
- Can be used together with MMX instructions.
- No need for memory intermediates when converting between integers and floating point numbers.
- 64-bit systems have 16 xmm/ymm registers, but only 8 st() registers.

- ST() registers cannot be used in device drivers in 64-bit Windows.
- ST() registers may be implemented less efficiently in future processors when most code uses vector registers.

17.2 MMX versus XMM registers (Processors with SSE2)

Integer vector instructions can use either the 64-bit MMX registers or the 128-bit XMM registers.

Advantages of using MMX registers:

- Compatible with older microprocessors since the PMMX.
- Compatible with old operating systems without XMM support.
- No need for data alignment.

Advantages of using XMM registers:

- The number of elements per vector in XMM registers is double the number in MMX registers.
- MMX registers cannot be used together with ST() registers.
- A series of MMX instructions must end with EMMS.
- 64-bit systems have 16 xmm registers, but only 8 mmx registers.
- MMX registers cannot be used in device drivers in 64-bit Windows.
- XMM instructions have higher throughput than MMX instructions.
- MMX registers are going out of use and may be implemented less efficiently in future processors.

17.3 XMM versus YMM registers (Processors with AVX)

Vector instructions can use the 128-bit XMM registers or their 256-bit extension named YMM registers (expected available 2010).

Advantages of using YMM registers:

Double vector size

Advantages of using XMM registers:

- Compatible with existing processors
- There is a penalty for switching between YMM instructions and XMM instructions without VEX prefix, see page 124.
- YMM registers cannot be used in device drivers without saving everything with XSAVE / XRESTOR., see page 126.

17.4 Freeing floating point registers (all processors)

You have to free all used floating point ST() registers before exiting a subroutine, except for any register used for the result.

The fastest way of freeing one register is FSTP ST. To free two registers you may use either FCOMPP or twice FSTP ST, whichever fits best into the decoding sequence or port load.

It is not recommended to use FFREE.

17.5 Transitions between floating point and MMX instructions (Processors with MMX)

It is not possible to use 64-bit MMX registers and 80-bit floating point ST() registers in the same part of the code. You must issue an EMMS instruction after the last instruction that uses MMX registers if there is a possibility that later code uses floating point registers. You may avoid this problem by using 128-bit XMM registers instead.

On PMMX there is a high penalty for switching between floating point and MMX instructions. The first floating point instruction after an EMMS takes approximately 58 clocks extra, and the first MMX instruction after a floating point instruction takes approximately 38 clocks extra.

On processors with out-of-order execution there is no such penalty.

17.6 Converting from floating point to integer (All processors)

All conversions between floating point registers and integer registers must go via a memory location:

```
; Example 17.1.
fistp dword ptr [TEMP]
mov eax, [TEMP]
```

On many processors, and especially the P4, this code is likely to have a penalty for attempting to read from [TEMP] before the write to [TEMP] is finished. It doesn't help to put in a WAIT. It is recommended that you put in other instructions between the write to [TEMP] and the read from [TEMP] if possible in order to avoid this penalty. This applies to all the examples that follow.

The specifications for the C and C++ language requires that conversion from floating point numbers to integers use truncation rather than rounding. The method used by most C libraries is to change the floating point control word to indicate truncation before using an FISTP instruction, and changing it back again afterwards. This method is very slow on all processors. On many processors, the floating point control word cannot be renamed, so all subsequent floating point instructions must wait for the FLDCW instruction to retire. See page 145.

On processors with SSE or SSE2 instructions you can avoid all these problems by using $_{\text{XMM}}$ registers instead of floating point registers and use the $_{\text{CVT}}$. instructions to avoid the memory intermediate.

Whenever you have a conversion from a floating point register to an integer register, you should think of whether you can use rounding to nearest integer instead of truncation.

If you need truncation inside a loop then you should change the control word only outside the loop if the rest of the floating point instructions in the loop can work correctly in truncation mode.

You may use various tricks for truncating without changing the control word, as illustrated in the examples below. These examples presume that the control word is set to default, i.e. rounding to nearest or even.

```
; Example 17.2a. Rounding to nearest or even:
; extern "C" int round (double x);
_round PROC NEAR ; (32 bit mode)
PUBLIC _round
        fld qword ptr [esp+4]
        fistp dword ptr [esp+4]
         mov eax, dword ptr [esp+4]
         ret
_round ENDP
; Example 17.2b. Truncation towards zero:
; extern "C" int truncate (double x);
_truncate PROC NEAR ; (32 bit mode)
PUBLIC _truncate
         fld qword ptr [esp+4] ; x
        sub esp, 12 ; space for local variable fist dword ptr [esp] ; rounded value fst dword ptr [esp+4] ; float value fisub dword ptr [esp] ; subtract rounded value fstp dword ptr [esp+8] ; difference
                                        ; space for local variables
         pop
                 eax
                                         ; rounded value
         pop
                 ecx
                                         ; float value
                 edx
                                        ; difference (float)
         pop
               ecx, ecx
                                        ; test sign of x
         test
              short NEGATIVE
         js
                edx, 7FFFFFFFH ; produce carry if difference < -0
         add
                                        ; subtract 1 if x-round(x) < -0
         sbb
                eax, 0
        ret
NEGATIVE:
        xor ecx, ecx test edx, edx
         setg cl
                                       ; 1 if difference > 0
                eax, ecx
                                       ; add 1 if x-round(x) > 0
         add
         ret
_truncate ENDP
; Example 17.2c. Truncation towards minus infinity:
; extern "C" int ifloor (double x);
ifloor PROC NEAR ; (32 bit mode)
PUBLIC ifloor
         fld qword ptr [esp+4] ; x
        sub esp, 8 ; space for local variables fist dword ptr [esp] ; rounded value fisub dword ptr [esp] ; subtract rounded value
         fstp dword ptr [esp+4] ; difference
                eax
                                       ; rounded value
         pop
                edx ; difference (from: ) edx, 7FFFFFFFH ; produce carry if difference < -0 eax. 0 ; subtract 1 if x-round(x) < -0
                 edx
                                       ; difference (float)
         pop
         add
         sbb
         ret
_ifloor ENDP
```

These procedures work for $-2^{31} < x < 2^{31}$ -1. They do not check for overflow or NAN's.

17.7 Using integer instructions for floating point operations

Integer instructions are generally faster than floating point instructions, so it is often advantageous to use integer instructions for doing simple floating point operations. The most obvious example is moving data. For example

```
; Example 17.3a. Moving floating point data fld qword ptr [esi] fstp qword ptr [edi]
```

can be replaced by:

```
; Example 17.3b
mov eax,[esi]
mov ebx,[esi+4]
mov [edi],eax
mov [edi+4],ebx

; Example 17.3c
movq mm0,[esi]
```

movq [edi],mm0

In 64-bit mode, use:

or:

```
; Example 17.3d
mov rax,[rsi]
mov [rdi],rax
```

Many other manipulations are possible if you know how floating point numbers are represented in binary format. See the chapter "Using integer operations for manipulating floating point variables" in manual 1: "Optimizing software in C++".

The bit positions are shown in this table:

ecision ma	ıntissa	always 1	exponent	sign
gle (32 bits) bit	0 - 22		bit 23 - 30	bit 31
uble (64 bits) bit	0 - 51		bit 52 - 62	bit 63
g double (80 bits) bit	0 - 62	bit 63	bit 64 - 78	bit 79
\ /	• • • •	bit 63		

Table 17.1. Floating point formats

From this table we can find that the value 1.0 is represented as 3F80,0000H in single precision format, 3FF0,0000,0000,0000H in double precision, and 3FFF,8000,0000,0000,0000H in long double precision.

It is possible to generate simple floating point constants without using data in memory as explained on page 117.

Testing if a floating point value is zero

To test if a floating point number is zero, we have to test all bits except the sign bit, which may be either 0 or 1. For example:

```
; Example 17.4a. Testing floating point value for zero fld dword ptr [ebx] ftst fnstsw ax and ah, 40h jnz IsZero
```

can be replaced by

```
; Example 17.4b. Testing floating point value for zero mov eax, [ebx] add eax, eax jz IsZero
```

where the ADD EAX, EAX shifts out the sign bit. Double precision floats have 63 bits to test, but if denormal numbers can be ruled out, then you can be certain that the value is zero if the exponent bits are all zero. Example:

```
; Example 17.4c. Testing double value for zero
fld    qword ptr [ebx]
ftst
fnstsw ax
and    ah, 40h
jnz    IsZero
```

can be replaced by

```
; Example 17.4d. Testing double value for zero
mov eax, [ebx+4]
add eax,eax
jz IsZero
```

Manipulating the sign bit

A floating point number is negative if the sign bit is set and at least one other bit is set. Example (single precision):

```
; Example 17.5. Testing floating point value for negative
mov eax, [NumberToTest]
cmp eax, 80000000H
ja IsNegative
```

You can change the sign of a floating point number simply by flipping the sign bit. This is useful when XMM registers are used, because there is no XMM change sign instruction. Example:

You can get the absolute value of a floating point number by AND'ing out the sign bit:

```
; Example 17.7. Absolute value of four single-precision floats in xmm0 cmpeqd xmm1, xmm1 ; generate all 1's psrld xmm1,1 ; 1 in all but the leftmost bit of each dword andps xmm0 ,xmm1 ; set sign bits to 0
```

You can extract the sign bit of a floating point number:

```
; Example 17.8. Generate a bit-mask if single-precision floats in ; xmm0 are negative or -0.0 psrad xmm0,31 ; copy sign bit into all bit positions
```

Manipulating the exponent

You can multiply a non-zero number by a power of 2 by simply adding to the exponent:

```
; Example 17.9. Multiply vector by power of 2
movaps xmm0, [x] ; four single-precision floats
movdqa xmm1, [n] ; four 32-bit positive integers
pslld xmm1, 23 ; shift integers into exponent field
paddd xmm0, xmm1 ; x * 2^n
```

Likewise, you can divide by a power of 2 by subtracting from the exponent. Note that this code does not work if x is zero or if overflow or underflow is possible.

Manipulating the mantissa

You can convert an integer to a floating point number in an interval of length 1.0 by putting bits into the mantissa field. The following code computes $x = n / 2^{32}$, where n in an unsigned integer in the interval $0 \le n < 2^{32}$, and the resulting x is in the interval $0 \le x < 1.0$.

```
; Example 17.10. Convert bits to value between 0 and 1
.data
one    dq    1.0
x     dq   ?
n     dd   ?
.code
movsd    xmm0, [one]    ; 1.0, double precision
movd    xmm1, [n]     ; n, 32-bit unsigned integer
psllq    xmm1, 20     ; align n left in mantissa field
orpd    xmm1, xmm0     ; combine mantissa and exponent
subsd    xmm1, xmm0     ; subtract 1.0
movsd [x], xmm1     ; store result
```

In the above code, the exponent from 1.0 is combined with a mantissa containing the bits of n. This gives a double-precision value in the interval $1.0 \le x < 2.0$. The SUBSD instruction subtracts 1.0 to get x into the desired interval. This is useful for random number generators.

Comparing numbers

Thanks to the fact that the exponent is stored in the biased format and to the left of the mantissa, it is possible to use integer instructions for comparing positive floating point numbers. Example (single precision):

```
; Example 17.11a. Compare single precision float numbers
fld [a]
fcomp [b]
fnstsw ax
and ah, 1
jnz ASmallerThanB
```

can be replaced by:

```
; Example 17.11b. Compare single precision float numbers
mov eax, [a]
mov ebx, [b]
cmp eax, ebx
ib ASmallerThanB
```

This method works only if you are certain that none of the numbers have the sign bit set. You may compare absolute values by shifting out the sign bit of both numbers. For double-precision numbers, you can make an approximate comparison by comparing the upper 32 bits using integer instructions.

17.8 Using floating point instructions for integer operations

While there are no problems using integer instructions for moving floating point data, it is not always safe to use floating point instructions for moving integer data. For example, you may

be tempted to use <code>FLD QWORD PTR [ESI] / FSTP QWORD PTR [EDI]</code> to move 8 bytes at a time. However, this method may fail if the data do not represent valid floating point numbers. The <code>FLD</code> instruction may generate an exception and it may even change the value of the data. If you want your code to be compatible with processors that don't have MMX and XMM registers then you can only use the slower <code>FILD</code> and <code>FISTP</code> for moving 8 bytes at a time.

However, some floating point instructions can handle integer data without generating exceptions or modifying data. See page 112 for details.

Converting binary to decimal numbers

The FBLD and FBSTP instructions provide a simple and convenient way of converting numbers between binary and decimal, but this is not the fastest method.

17.9 Moving blocks of data (All processors)

There are several ways of moving large blocks of data. The most common method is REP MOVS, but this is rarely the fastest method. On processors with SSE or later instruction sets, the fastest way of moving data is to use vector registers if the conditions for fast REP MOVS described on page 140 are not met or if the destination is in the level 1 or level 2 cache. If SSE is available then use XMM registers. If AVX is available then use YMM registers.

It is preferred to use the largest available register size (i.e. xmm or ymm) to move the largest possible number of bytes per operation. Make sure that both source and destination are aligned by the register size. If the size of the block you want to move is not a multiple of the register size and you are using a loop for moving data, then it is better to pad the buffers with extra space in the end and move a little more data than needed than to move the extra data outside the loop. If the amount of data is constant and so small that you want to unroll the loop completely then there is no problem in using smaller registers for moving the last data.

If the source and destination are not aligned properly according to the size of the registers used then the optimal way of moving data is to align all the reads at the proper address boundaries (16-bytes boundaries for XMM registers) and shift and combine consecutive reads into registers used for writing so that the writes to the destination can also be aligned. The speed can typically be increased by a factor 4 or more by this method if source and destination are both in the level-1 cache and unaligned. See the memcpySSE2.asm example in the appendix www.agner.org/optimize/asmexamples.zip. This code is so complicated that it should be placed in a function library. The library at www.agner.org/optimize/asmlib.zip contains an implementation of the memcpy function using this method. See manual 1: "Optimizing software in C++" for a comparison of function libraries.

On processors with SSE you also have the option of writing directly to RAM memory without involving the cache by using the MOVNTQ, MOVNTPS and similar instructions. This can be useful if you don't want the destination to go into a cache. As a rule of thumb, it can be recommended to use these non-temporal writes when the amount of data written is more than half the size of the largest-level cache.

More advices on improving memory access can be found in Intel's "IA-32 Intel Architecture Optimization Reference Manual" and AMD's "Software Optimization Guide for AMD64 Processors".

17.10 Self-modifying code (All processors)

The penalty for executing a piece of code immediately after modifying it is approximately 19 clocks for P1, 31 for PMMX, and 150-300 for PPro, P2, P3, PM. The P4 will purge the entire trace cache after self-modifying code. The 80486 and earlier processors require a jump between the modifying and the modified code in order to flush the code cache.

To get permission to modify code in a protected operating system you need to call special system functions: In 16-bit Windows call ChangeSelector, in 32-bit and 64-bit Windows call VirtualProtect and FlushInstructionCache. The trick of putting the code in a data segment doesn't work in newer systems.

Self-modifying code is not considered good programming practice. It should be used only if the gain in speed is substantial and the modified code is executed so many times that the advantage outweighs the penalties for using self-modifying code.

Self-modifying code can be useful for example in a math program where a user-defined function has to be evaluated many times. The program may contain a small compiler that converts the function to binary code.

18 Measuring performance

18.1 Testing speed

Many compilers have a profiler which makes it possible to measure how many times each function in a program is called and how long time it takes. This is very useful for finding any hot spot in the program. If a particular hot spot is taking a high proportion of the total execution time then this hot spot should be the target for your optimization efforts.

Many profilers are not very accurate, and certainly not accurate enough for fine-tuning a small part of the code. The most accurate way of testing the speed of a piece of code is to use the so-called time stamp counter. This is an internal 64-bit clock counter which can be read into EDX:EAX using the instruction RDTSC (read time stamp counter). The time stamp counter counts at the CPU clock frequency so that one count equals one clock cycle, which is the smallest relevant time unit. Some overclocked processors count at a slightly different frequency.

The time stamp counter is very useful because it can measure how many clock cycles a piece of code takes. Some processors are able to change the clock frequency in response to changing workloads. However, when searching for bottlenecks in small pieces of code, it is more informative to measure clock cycles than to measure microseconds.

The resolution of the time measurement is equal to the value of the clock multiplier (e.g. 11) on Intel processors with SpeedStep technology. The resolution is one clock cycle on other processors. The processors with SpeedStep technology have a performance counter for unhalted core cycles which gives more accurate measurements than the time stamp counter. Privileged access is necessary to enable this counter.

On all processors with out-of-order execution, you have to insert XOR EAX, EAX / CPUID before and after each read of the counter in order to prevent it from executing in parallel with anything else. CPUID is a serializing instruction, which means that it flushes the pipeline and waits for all pending operations to finish before proceeding. This is very useful for testing purposes.

The biggest problem when counting clock ticks is to avoid interrupts. Protected operating systems do not allow you to clear the interrupt flag, so you cannot avoid interrupts and task

switches during the test. This makes test results inaccurate and irreproducible. There are several alternative ways to overcome this problem:

- 1. Run the test code with a high priority to minimize the risk of interrupts and task switches.
- 2. If the piece of code you are testing is not too long then you may repeat the test several times and assume that the lowest of the clock counts measured represents a situation where no interrupt has occurred.
- 3. If the piece of code you are testing takes so long time that interrupts are unavoidable then you may repeat the test many times and take the average of the clock count measurements.
- 4. Make a virtual device driver to clear the interrupt flag.
- 5. Use an operating system that allows clearing the interrupt flag (e.g. Windows 98 without network, in console mode).
- 6. Start the test program in real mode using the old DOS operating system.

I have made a series of test programs that use method 1, 2 and possibly 6. These programs are available at www.agner.org/optimize/testp.zip.

A further complication occurs on processors with multiple cores if a thread can jump from one core to another. The time stamp counters on different cores are not necessarily synchronized. This is not a problem when testing small pieces of code if the above precautions are taken to minimize interrupts. But it can be a problem when measuring longer time intervals. You may need to lock the process to a single CPU core, for example with the function <code>SetProcessAffinityMask</code> in Windows. This is discussed in the document "Game Timing and Multicore Processors", Microsoft 2005. msdn2.microsoft.com/en-us/library/bb173458.aspx.

You will soon observe when measuring clock cycles that a piece of code always takes longer time the first time it is executed where it is not in the cache. Furthermore, it may take two or three iterations before the branch predictor has adapted to the code. The first measurement gives the execution time when code and data are not in the cache. The subsequent measurements give the execution time with the best possible caching.

The alignment effects on the PPro, P2 and P3 processors make time measurements very difficult on these processors. Assume that you have a piece code and you want to make a change which you expect to make the code a few clocks faster. The modified code does not have exactly the same size as the original. This means that the code below the modification will be aligned differently and the instruction fetch blocks will be different. If instruction fetch and decoding is a bottleneck, which is often the case on these processors, then the change in the alignment may make the code several clock cycles faster or slower. The change in the alignment may actually have a larger effect on the clock count than the modification you have made. So you may be unable to verify whether the modification in itself makes the code faster or slower. It can be quite difficult to predict where each instruction fetch block begins, as explained in manual 3: "The microarchitecture of Intel and AMD CPUs".

Other processors do not have serious alignment problems. The P4 does, however, have a somewhat similar, though less severe, effect. This effect is caused by changes in the alignment of μ pops in the trace cache. The time it takes to jump to the least common (but predicted) branch after a conditional jump instruction may differ by up to two clock cycles on different alignments if trace cache delivery is the bottleneck. The alignment of μ pops in the trace cache lines is difficult to predict.

Most x86 processors also have a set of so-called performance monitor counters which can count events such as cache misses, misalignments, branch mispredictions, etc. These are very useful for diagnosing performance problems. The performance monitor counters are processor-specific. You need a different test setup for each type of CPU.

Details about the performance monitor counters can be found in Intel's "IA-32 Intel Architecture Software Developer's Manual", vol. 3 and in AMD's "BIOS and Kernel Developer's Guide".

You need privileged access to set up the performance monitor counters. This is done most conveniently with a device driver. The test programs at www.agner.org/optimize/testp.zip give access to the performance monitor counters under 32-bit and 64-bit Windows and 16-bit real mode DOS. These test program support the different kinds of performance monitor counters in most Intel and AMD processors.

Intel and AMD are providing profilers that use the performance monitor counters of their respective processors. Intel's profiler is called Vtune and AMD's profiler is called CodeAnalyst.

18.2 The pitfalls of unit-testing

If you want to find out which version of a function performs best then it is not sufficient to measure clock cycles in a small test program that calls the function many times. Such a test is unlikely to give a realistic measure of cache misses because the test program may use less memory than the cache size. For example, an isolated test may show that it is advantageous to roll out a loop while a test where the function is inserted in the final program shows a large amount of cache misses when the loop is rolled out.

Therefore, it is important not only to count clock cycles when evaluating the performance of a function, but also to consider how much space it uses in the code cache, data cache and branch target buffer.

See the section named "The pitfalls of unit-testing" in manual 1: "Optimizing software in C++" for further discussion of this problem.

19 Literature

The present manual is part of a series available from www.agner.org/optimize as mentioned in the introduction on page 4. See manual 3: "The microarchitecture of Intel and AMD CPU's" of a list of relevant literature on specific processors.

A lot of other sources also have useful information. These sources are listed in the FAQ for the newsgroup comp.lang.asm.x86. For other internet resources follow the links from www.agner.org/optimize.

Some useful textbooks:

- R. C. Detmer: Introduction to 80x86 Assembly Language and Computer Architecture, 2'nd ed. Jones & Bartlett, 2006. Essentials of 80x86 Assembly Language. Jones & Bartlett, 2006.
- J. L. Hennessy and D. A. Patterson: Computer Architecture: A Quantitative Approach, 3'rd ed. 2002.
- S. Goedecker and A. Hoisie: Performance Optimization of Numerically Intensive Codes. SIAM, 2001.

• John R. Levine: Linkers and Loaders. Morgan Kaufmann, 2000.