Experiment 7: Pulse-Width Modulation

1.0 Introduction

A microcontroller's interaction with the real world (and real humans) often requires the generation of voltages that can vary over a continuous spectrum. Although your microcontroller has an on-board digital-to-analog converter (DAC), it is too weak to drive any load that requires high power. Even with amplification, a DAC is inefficient for the purpose of driving heavy loads. Digital electronic systems are well-suited to switching circuits on and off. In circumstances where a load can be switched on and off in such a way that the average output voltage is treated (or perceived) as the signal, a solution is Pulse-Width Modulation (PWM). In this experiment, you will learn about configuring and using PWM to control a high-power load (a light) and generate a variable duty-cycle waveform.

Step		Points
4.0	Prelab	10
6.1	Wiring	10
6.2	Simple PWM	10
6.3	Debounce keypad	10
6.4	RGB color mixing control using keypad	10
7.0	Post lab submission	*
Total		50

^{*}All lab points are contingent on submission of code completed in lab.

2.0 Objectives

1. To understand the concepts of pulse-width modulation

3.0 Equipment and Software

- 1. Standard ECE362 Software Toolchain (Installation instructions available in Experiment 0: Getting Started)
- 2. STM32F0-DISCOVERY development board (For procurement instructions, see Experiment 0: Getting Started)

4.0 Prelab

Read over the experiment background in section 5, and then complete the prelab assignment on the course web page.

5.0 Background

5.1 Pulse-Width Modulation

Consider a digital logic circuit which outputs a repeating, periodic signal over a known time period, t_s. Within the signal period, the circuit can output logic '1' for a subinterval, t_h, and for the remaining time, outputs a logic '0'. This is illustrated in figure 1, below

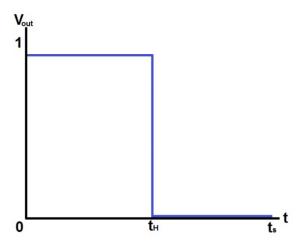


Figure 1. Simple Periodic Output

Expanding on the output above, suppose the circuit can be made to vary the logic '1' interval t_H to any value between 0 and t_S . A variety of potential outputs could result:

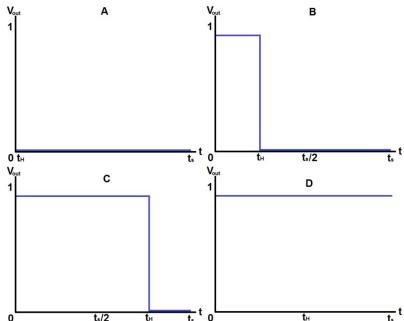


Figure 2. Periodic Output a) $t_H = 0$ b) $t_H = t_S/4$ c) $t_H = 3t_S/4$ d) $t_H = t_S$

The relationship between the time the periodic signal spends high (tH) and the total period of the repeating signal (ts) is known as the signal's duty cycle and is usually expressed as a percentage. In figure 2, signal 2a could be said to have a 0% duty cycle, signal 2b, 25%, 2c, 75%, and 2d, 100%. By controlling the duty cycle of the repeating, periodic output signal, a pulse-width modulator is capable of controlling average delivered current or power to a given load, and can further be used, possibly in

Last Modified: 2019-03-03

conjunction with filtering, for crude approximations of analog values. Sometimes these values must be low-pass filtered to yield an analog value. For devices such as LEDs, the human visual system acts as a natural low-pass filter.

5.2 PWM on the STM32F0

On STM32 microcontrollers, pulse-width modulation is integrated into the various TIM peripherals. For the purposes of this experiment, TIM1 will be used for PWM outputs; you may wish to revisit the basics of timer operation from Lab Experiment 5.

As with all other peripheral configurations, the first step for configuring a peripheral is to enable the clock signal to it. This is done within the reset and clock control (RCC) system of the processor. Use of PWM, as well as other non-analog microcontroller peripherals, requires the use of alternative pin input functions. Alternate pin functions are detailed in the pin definitions table of the STM32F051R8T6 datasheet. Alternate function mode is specified using the GPIOx_MODER register for the appropriate GPIO port. Some pins can have more than one alternate function associated with them; specifying which alternate function is to be used is the purpose of the GPIOx_AFRL and GPIOx_AFRH registers.

Each timer peripheral on the STM32F0 features 4 independent channels, each of which can be set up to output a PWM signal. Specifying a channel as a PWM output requires writing to the TIMx_CCMRx registers. In PWM mode, the PWM frequency is specified through the TIMx_ARR register and duty cycles of the channels are controlled through the TIMx_CCRx registers. Aside from specifying alternate function mode on the associated I/O, additional steps must be taken in order to route the PWM signal from the internal peripheral to the external I/O pin. PWM is part of the timer's capture/compare subsystem, thus the capture compare output for the selected channels must be activated in the timer capture/compare enable register, TIMx_CCER. The TIM1 subsystem is very similar to the TIM3 subsystem which was studied at length in lecture. One difference with TIM1 is that it has a "break and dead-time register" (BDTR). We will not use these features for this experiment, but the MOE bit of this register must be enabled to generate output on any of the channels of TIM1. At the end of timer configurations, remember to enable the timer, in the TIMx_CR1 register. For further assistance in setting up PWM, consult the example in appendix A.9.8 of the family reference manual.

5.3 Debouncing a keypad

Because switches are mechanical devices, they bounce. This means we do not get a stable electrical signal reading on a press or a release. The voltage changes as the switch bounces. To fix this, we perform something called debouncing. The simplest debouncing method is to read the voltage, wait for the switch to settle and read it again. This is a simple solution.

A more robust approach, which is appropriate for a keypad matrix, is the "history" method. In this method we store N previous values of the button state. We accomplish this by ORing a bit into a variable. The next sample is incorporated by simply left-shifting the variable and ORing the current state of the bit into it. Look at the skeleton file for the actual implementation (see <code>update_samples()</code>). We can then look for a bit pattern that corresponds to an edge. For instance, 01111111 represents a non-press followed by seven consecutive reading of an press which can be interpreted as a stable press. 10000000 would then represent a stable release. A more detailed description is available at the following link:

https://hackaday.com/2015/12/10/embed-with-elliot-debounce-your-noisy-buttons-part-ii/

6.0 Experiment

In this lab experiment will use PWM to control the RGB LED to perform color mixing. In addition, you will debounce the keypad and use it as input to control the PWM frequency and duty cycle of the three LEDs. You are also given some code which interfaces with the LCD screen which you will use to output PWM information.

6.1 Wiring

Connect the RGB LED, the keypad, and the LCD screen to the STM32 discovery board as shown in Figure 3. First, you'll need to connect the RGB LED to the STM32. The RGB LED is a common anode configuration. Connect to connect the anode to 3V and the three RGB leads to TIM1_CH3, TIM1_CH2 and TIM1_CH1, respectively. You should be able to place the LED directly between the 3V power rail and the pins on the STM32 without using additional wires.

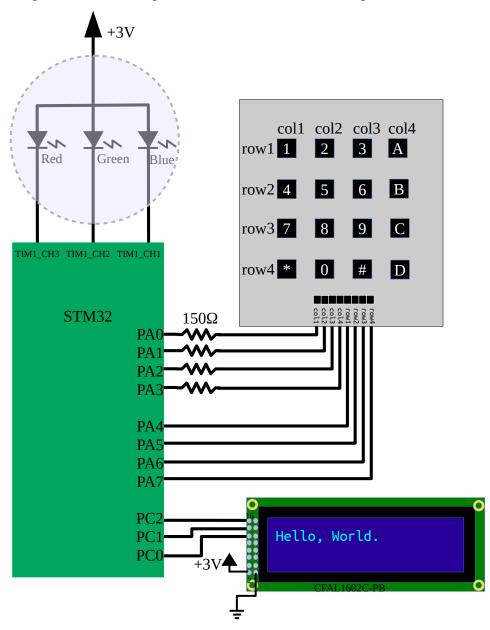


Figure 3. Wiring for lab experiment 7.

When you have connected all components for the lab experiment, uncomment **test_wiring()**. You will observe the following:

- 1) When you press any key it shows up on the first line of the LCD
- 2) A Text, "This is a test" on the second line of the LCD
- 3) A brightening and fading RGB LED

Demonstrate this to your TA.

6.2 Simple PWM

This section, you will need to complete four functions:

- 1) **setup_gpio()**: Should enable the clock to GPIO port A, and configure the modes of the three pins corresponding to TIM1_CH1, TIM1_CH2 and TIM1_CH3 with alternate functions.
- 2) **setup_pwm()**: Should configure TIM1 so that it is non-centered and upcounting. All channels should be set for the PWM1 output compare mode. The prescaler output should be 100 kHz, and choose the value of ARR so that the PWM frequency is 1 kHz. The duty cycle of each channel will be set by writing a value between 0 and 100 to the CCRx registers. **Note that since we have a common anode configuration, CCRx of 100 will result in a LED being off and a CCRx of 0 will result in maximum brightness.**
- 3) **update_freq()**: This function accepts an integer argument that is used to update the TIM1_PSC to produce the requested frequency (as close as possible) on the output pins. Remember that the output frequency will be 100 times slower than the TIM1_PSC due to TIM1_ARR always being 100-1 (99). The formula for calculating the output frequency is then:

freq =
$$48,000,000.0 / (TIM1 PSC + 1) / 100.0$$

You should determine the formula to use to put the proper value into TIM1_PSC given the frequency. Use floating point values to do the calculation to avoid rounding errors. Although TIM1_PSC is an integer, there is no problem with a C program assigning a floating point result to it. It is automatically rounded and converted to an integer.

4) **update_rgb()**: This function accepts three arguments – the red, green, and blue values used to set the CCRx registers. The values should never be smaller than zero or larger than 100. The value can be assigned directly to the appropriate CCR registers. E.g., the red LED is connected to channel 1.

Uncomment **prob2()** in your main program. You should see red fade to green which fades into blue.

Demonstrate this to your TA.

6.3 Debounce keypad

For this section you will debounce the entire keypad. To understand the logic of debouncing, read though the background section of the lab. The keypad is scanned by driving the columns and observing the rows of the keypad. You need to complete the following functions:

- 1) **init_keypad()**: This function should enable the clock to port A, configure pins 0, 1, 2 and 3 as outputs (we will use these to drive the columns of the keypad). Configure pins 4, 5, 6 and 7 to be inputs with a pull-down resistor (these four pins connected to the rows will being scanned to determine the row of a button press). If you do not configure a pull-down resistor, the voltage level will float high or low and you will produce very strange results.
- 2) **setup_timer3()**: This function should enable clock to timer 3, setup the timer so that it triggers **TIM3_IRQHandler()** every 1ms.
- 3) **TIM3_IRQhandler()**: This subroutine will refer to the global variable 'col' provided in the skeleton file. The subroutine should do the following things:
 - a. Initialize a local variable named 'current_row' and set it to -1.
 - b. Read GPIOA->IDR to identify the row of the button being pressed. Recall that the rows are connected to PA4, PA5, PA6 and PA7. If bit corresponding to PA4 is set, then row 0 is pressed. If the bit corresponding to PA5 is set, then row1 is pressed, and so on. If a row is set to 1, update current_row to that row.
 - c. Call **update_samples(current_row)**. This subroutine stores a history of the previous button states and updates it with a new row.
 - d. Call **update_key_press()**. This subroutine uses the samples to identify a button press.
 - e. Increment col. If col exceeds 3, reset it to 0.
 - f. Set the output data register of port A to (1 << col). This will drive the corresponding column to 'logic 1'.
 - g. Acknowledge the interrupt.

Uncomment **prob3()**. When you press any key, the LCD will display which key was pressed.

Demonstrate this to your TA.

6.4 RGB color mixing control using keypad

For this section you will need to complete the function **prob4()**.

You should make the following assumptions:

- 1) **get_key_pressed()** returns the current key that is pressed, returns 0xf if '*' and 0xe when '#' is pressed.
- 2) **get_user_freq()** returns the frequency entered by the user. It will wait for 6 digits to be pressed, or the number can be terminated by pressing 'D'.
- 3) **get_pwm_duty()** updates the duty cycles in variables 'red', 'grn' and 'blue'. Enter two digits for each color. E.g., to turn red on fully, green on at half intensity, and blue on at quarter intensity, enter 995025. You must enter 6 digits.

In the while(1) loop in **prob4()** add logic to does the following:

- a) Check if '*' is pressed. If it is, call get_user_freq() and update_freq() to update the PWM frequency.
- b) Check if '#' is pressed. If it is, call the **get_pwm_duty()** and **update_rgb()** to update the PWM duty cycles for 'red', 'grn' and 'blue'.

Uncomment **prob4()**. Once completed, you should be able to control PWM frequency and duty cycle using the keypad.

Use the oscilloscope at your station to view the voltage level on the red LED pin. Remember that you should never try to attach scope leads directly to pins on your STM32 development board. Instead, you should attach the lead to a ground wire and the red lead on the RGB LED. You should be able to demonstrate any frequency and duty cycle that your TA suggests.

Demonstrate this to your TA.

7.0 Complete post lab and submit code

Submit your code and complete the post lab on the website. The portal for post-lab will close 10 minutes after your scheduled lab.