



Lab Procedure for Simulink

Line Following

Setup

- 1. It is recommended that you review Lab 3 Application Guide before starting this lab.
- 2. Turn on the QBot Platform by pressing the power button once. To ensure the robot is ready for the lab, check the following conditions.
 - a. The LEDs on the robot base should be solid red.
 - b. The LCD should display the battery level. It is recommended that the battery level is over 12.5V.
 - c. The Logitech F710 joystick's wireless receiver is connected to the QBot Platform. Before use, always make sure the switch on top is in the X position and that the LED next to the Mode button is off.
 - d. Make sure your computer is connected to the same network that the QBot Platform is on. If using the provided router, the network should be Quanser UVS-5G.
 - e. Test connectivity to the QBot. Using the IP displayed in the robot's LCD display, enter the following command in your local computer terminal and hit enter: ping 192.168.2.x
- 3. Deploy and run qbot_platform_driver_physical on QBot Platform:
 - a. Right click on qbot_platform_driver_physical.rt-linux_qbot_platform, select "Show more options", then select "Run on target".
 - b. Change Target URI to: tcpip://192.168.2.x:17000
 - c. Change Model Arguments to -d /tmp -uri tcpip://192.168.2.x:17099
 - d. Click Run.
 - e. The QBot Platform LEDs should pulse white if the driver is deployed and running successfully.
- 4. Open the Simulink Model line_following.slx, as shown in Figure 1. Configure the model so that it can be deployed to the QBot Platform:
 - a. Open Hardware Settings under the Hardware ribbon in your model.

- b. Expand and browse to Code Generation > Interface.
- c. Change the MEX-file arguments to the following string including single quotes,

'-w -d /tmp -uri %u', 'tcpip://192.168.2.x:17001' PQUARC-Skills Progression 1 - Task Automation Lab 3 - Line Following [new_downCam] nev Downward Camera Imag img Video Downward Camera Compressed Display [new_hardware] Cmd Voltage Image Processing Joystick Driver QBot Data Bu [new hardware] [new_downCam Current (Amps) [2]> Battery (Volts)

Figure 1. Line Following Simulink Model

Preparing the Image

1. In this lab you will be focusing on processing the information from the downward facing camera to allow the QBot to drive by itself. This will be done in the **Image Processing** subsystem. At the end of the lab, it should look like Figure 2.

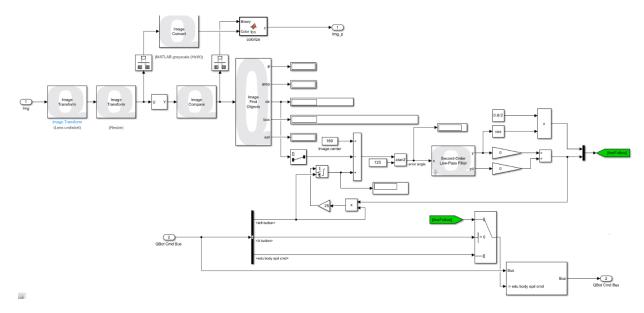


Figure 2. Image Processing Block

2. Currently, your block should look like Figure 3. It is incomplete and you will fill it as you go through the next sections.

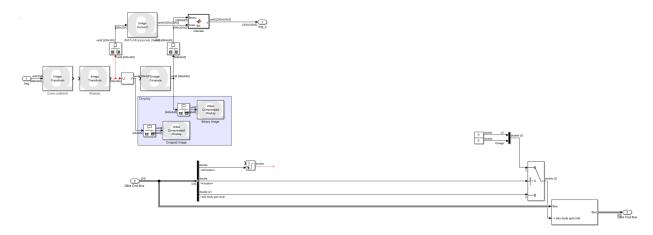


Figure 3. Student Image Processing Block

- Some blocks have been laid out for you, with the first two Image Transform blocks undistorting the wide angle on the downward facing camera as well as resizing it for faster processing.
- 4. The next block will select the part of the image you are interested in looking at. Open the **selector** block and change the index so that pixels in row 51 to 100 are selected. Your output from that block should be a 50x320 image.
- 5. The **Image Compare** block will do a comparison to create a binary or bitonal image where the color/area of interest is white (the line), and the rest of the image appears as black.
- 6. Connect all the blocks up to the **Image Compare**.
- 7. Click Monitor & Tune in the Hardware or QUARC ribbon to deploy and run the model. When the model is run successfully, the QBot Platform LEDs will turn blue.
- 8. Use the two **Video Compressed Display** blocks on the purple area to see your input and output image. While the code is running, arm the robot with the LB button (LEDs should go green) and move it over a line and straighten the robot such that the line is vertical. As you hover your mouse over the input image, the title ribbon at the top of the window will tell you the RGB and HSV value of each pixel. Particularly, focus on the **Red** value (which applies to grayscale images as well) for the line, as well as the background.
- 9. Try to tune the parameters in the **Image Compare** block using the values you see in the **cropped image** video display (since you have a grayscale image, you only care about the first range of values under *Primary plane or grayscale image*). Observing the output **binary image**, verify that you are properly highlighting the area of interest. It

- should look white while the rest of the image is black. If it is not correct, change the values in the **image compare** block and try again as many times as needed.
- 10. You should now have properly highlighted your area of interest. Stop the code and delete the purple Display area and all 4 blocks in it. The blocks at the top of this subsystem create the **Downward Camera Image** block shown as part of figure 1. This output will highlight the area of interest as red on the full undistorted original image. Run your code to verify this.

Find Objects of Interest and Line Follow

- Add an Image Find Objects block to find the blob of interest. Set the block settings as follows: Number of objects to 1, Sort order to Sort by number of pixels and only select the Find largest objects in the options. Using your previous reading on connectivity, select the connectivity you see fit as well as a minimum number of pixels.
- 2. Using the ctr output (center of the blob) from the **Image Find Objects** block, find the error representing the difference between the center of the line and the center of the camera feed. Consider the image is 320 pixels wide and you want the distance between the blob center and the image center. Figure 4 will help you visualize this.

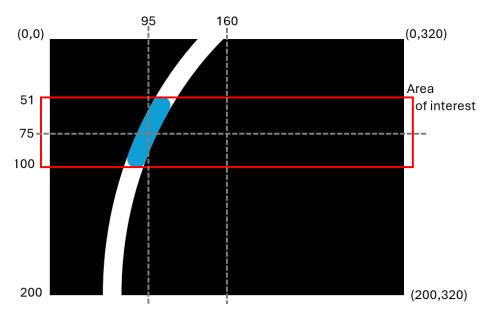


Figure 4. Image with the blob of interest in blue.

- 3. Find the error angle of the blob center based on the bottom center of the image. Use Figure 4 as a reference to find the correct geometric function to use. The angle error angle will be used for determining the turn speed command for the QBot.
- 4. Put the error angle through a **Second Order Low-Pass Filter** block to get rid of noise. Set the cut-off frequency to $2\pi * 5$, the damping ratio to 1, and 0 as the initial condition.

- 5. Set the forward speed, vC, as 0.3 * cos(y) where y is the output from the **Second-Order Low-Pass** filter block. This will make sure that the speed is inversely proportional to the angle error and the QBot drives faster when there is less error.
- 6. Add gains with a value of 0 on the y and yd outputs of the **Second-Order Low-Pass Filter** block. Add these values and use its output as the turn speed input for your QBot. These two gains create a proportional-derivative controller for the robot (also referred to as Visual Servoing). You will tune these gains as your robot moves. Make sure your Omega output does not exceed 1.78 for a maximum angle error.
- 7. Use your new Omega to compensate for curves when finding the center. The left button should reset values when needed. Use the completed subsystem from Figure 2 as a reference. What does this code do? Take notes.
- 8. Run the code again. Press the left button (**LB**) to arm the robot and keep it pressed. You should be able to drive it using the joysticks as you did in the previous lab. Drive the robot so it sees the line to follow. Then press and hold the "A" button, and your line following code will be enabled.
- 9. Does your robot turn when it sees a line? Why not? Stop pressing the **A** button and using the joysticks, bring the robot back on top of the line.
- 10. Try increasing the gains after the low-pass filter. Slowly increase these gains to tune your PD controller and test until you like the result. If the robot ever misses the line, let the **A** button go, drive over the line again manually and repeat.
- 11. Observe your line following behaviour and let it run it for a bit. What does the turn speed feedback to the integrator feeding into the error estimate do when following lines turning in different directions?
- 12. When you are happy with the line following behavior, stop the Simulink model. Ensure that you save a copy of your completed files for review later.
- 13. Turn OFF the robot by single pressing the power button (do not keep it pressed until it turns off). Post shutdown, all the LEDs should be completely OFF.