
ECE 382N-Sec (FA25):

# L1: Cache-Based Covert/Side Channels

Neil Zhao neil.zhao@utexas.edu


## Previously on ECE 382N: Sharing Resource => Side Channel

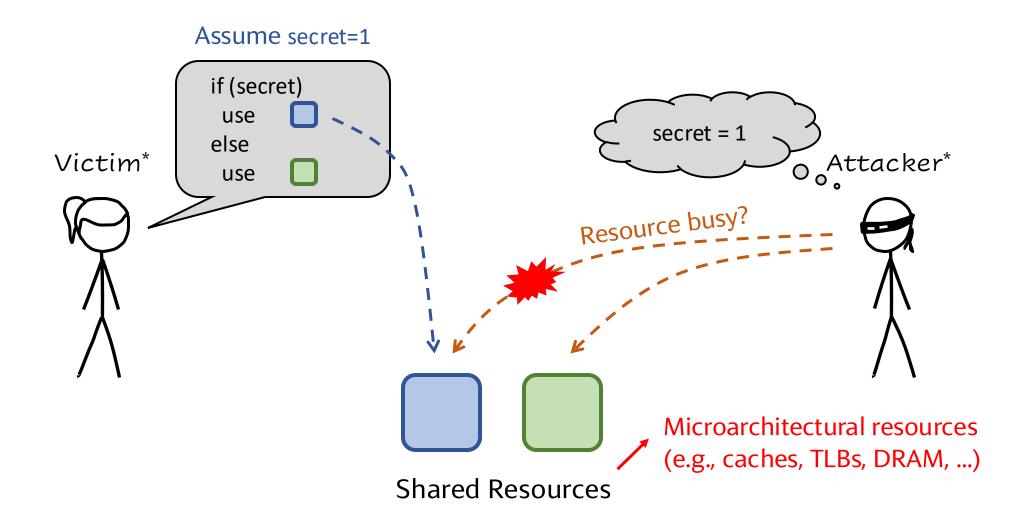

<sup>\*</sup>Characters are based on https://xkcd.com/2176 and https://xkcd.com/1808 (under a CC Attribution-NonCommercial 2.5 License)


## Why Cache?

Many cache and cache-like resources => large attack surface

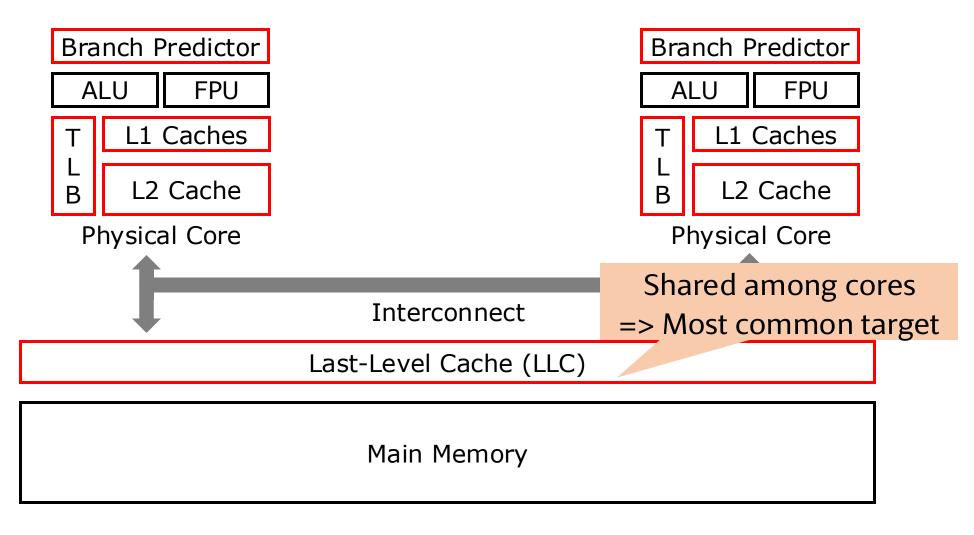


## Previously on ECE 382N: Side Channels vs. Covert Channels

#### Side Channel

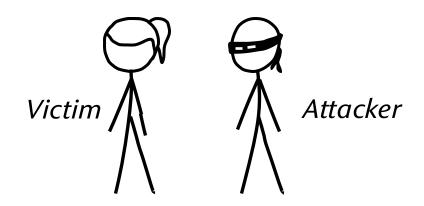

Victim is not cooperating, the leakage is incidental


#### **Covert Channel**

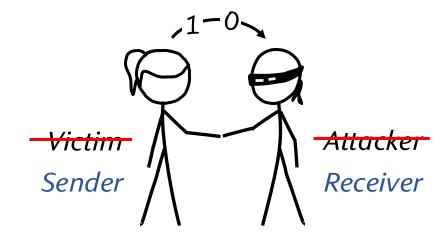

Victim/sender is colluding


A covert channel is more capable than a side channel. Side-channel attacks often start with building a covert channel

### Flush+Reload: Leveraging "Cache Flush" Instructions

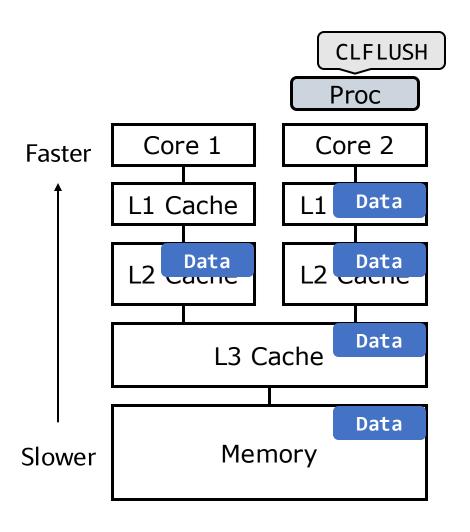

- CPUs often provide instructions to flush a cache line at given virtual address from every level of the cache hierarchy
  - Invalidate the cache line
  - Write back its data if it's modified
- Examples:
  - x86: CLFLUSH < vaddr>
  - ARM: DC CIVAC <vaddr> (Data or unified Cache line Clean and Invalidate by VA to PoC)
- Why?
  - Maintaining Coherence with Cached Memory-Mapped IO<sup>1</sup>
  - Push modified data to non-volatile memory for crash recovery

### Flush+Reload Covert Channel Setup

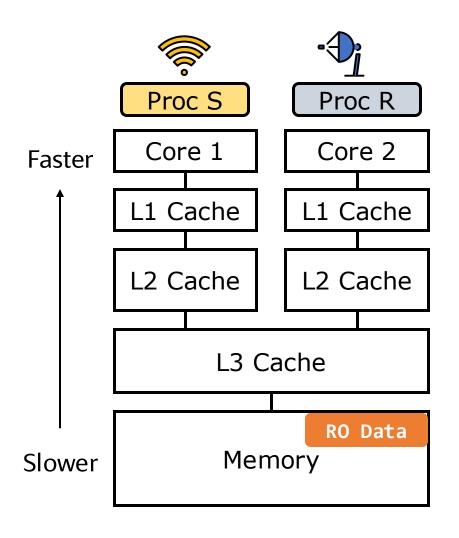



#### **Setup:**


- Sender and receiver processes run on the same host (co-location)
- Both processes cannot communicate with each other
- There are **read-only** memory pages shared between these two processes


**Goal:** Covertly transmit information from the sender to the receiver, bypassing the communication restrictions

RO Data Shared memory page (read-only)

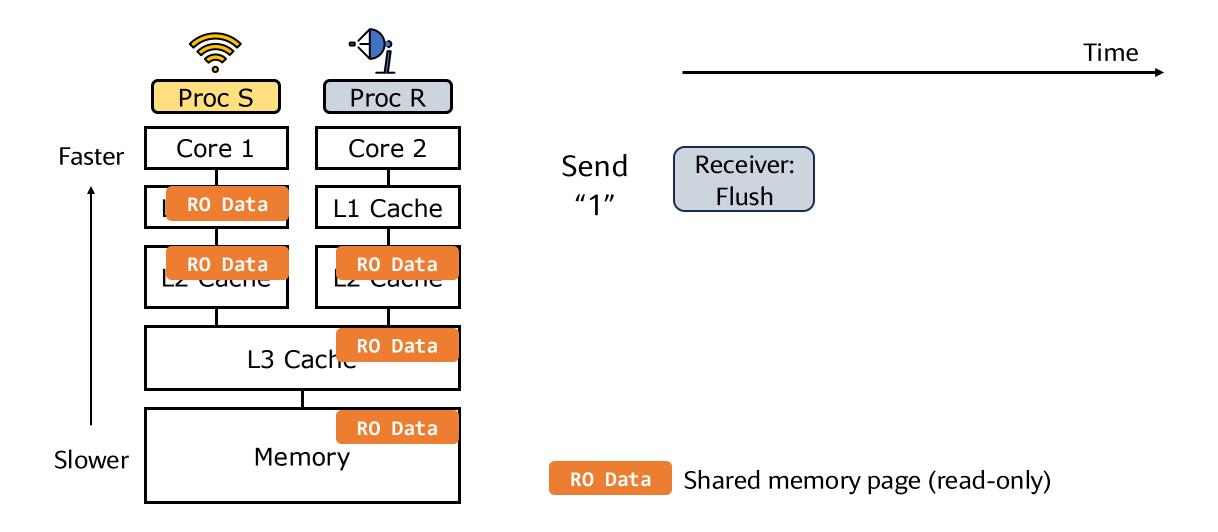

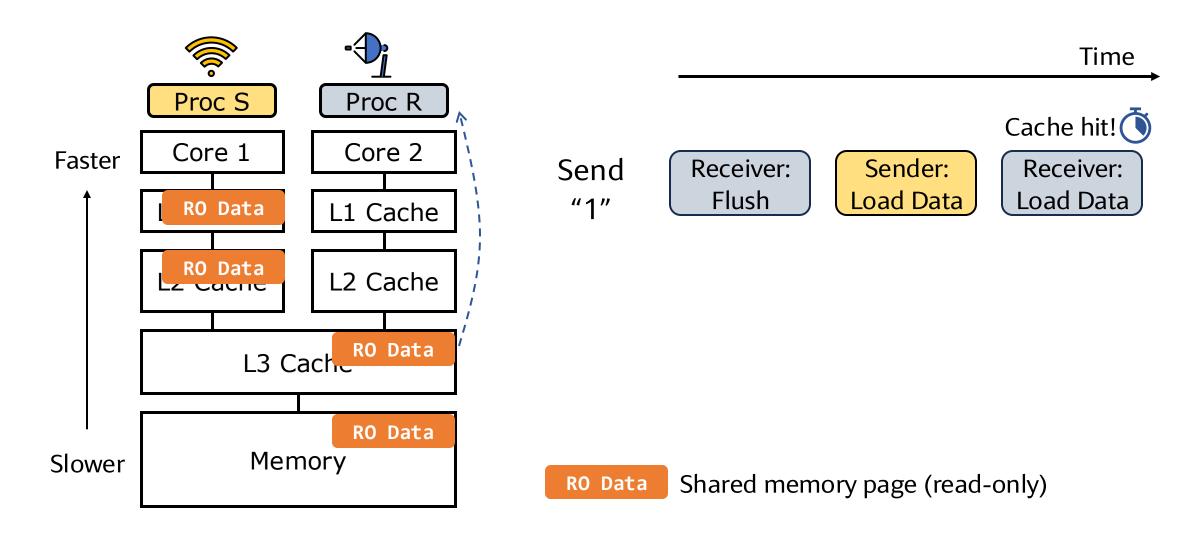


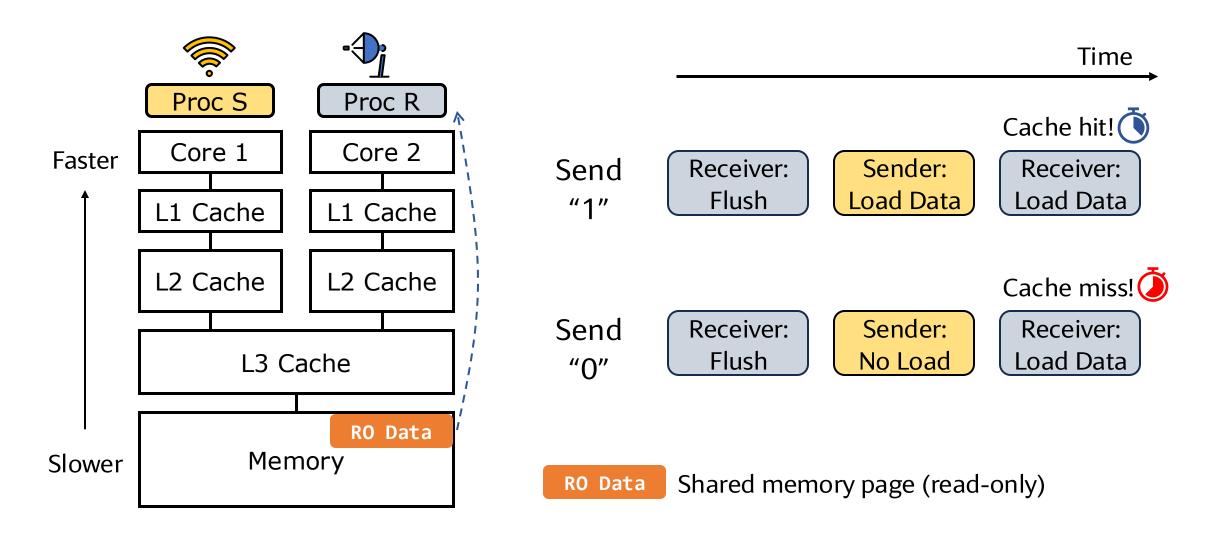

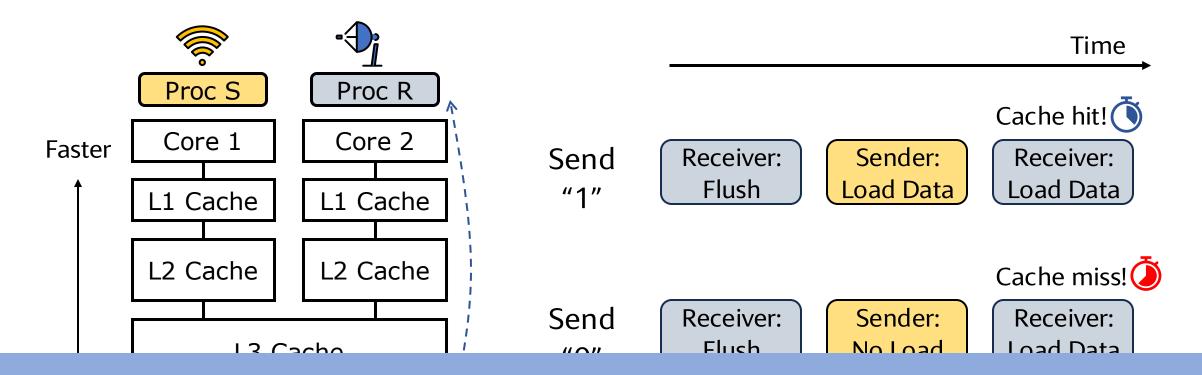


Important! The information is encoded as whether the share cache line is cached Flush+Reload works regardless of the actual cache line data


### Flush+Reload Covert Channel (Multi-Bit)

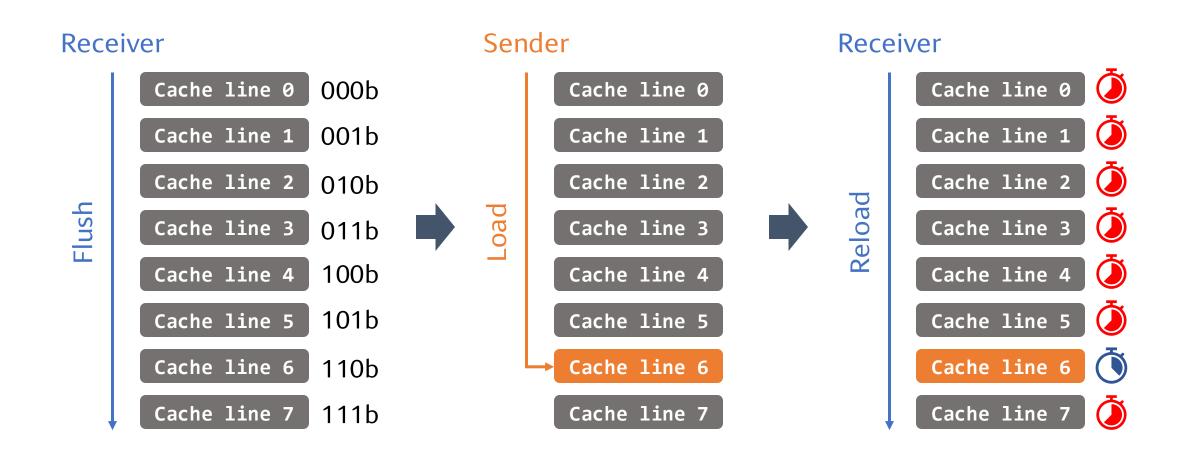

Reason 1: Page cache

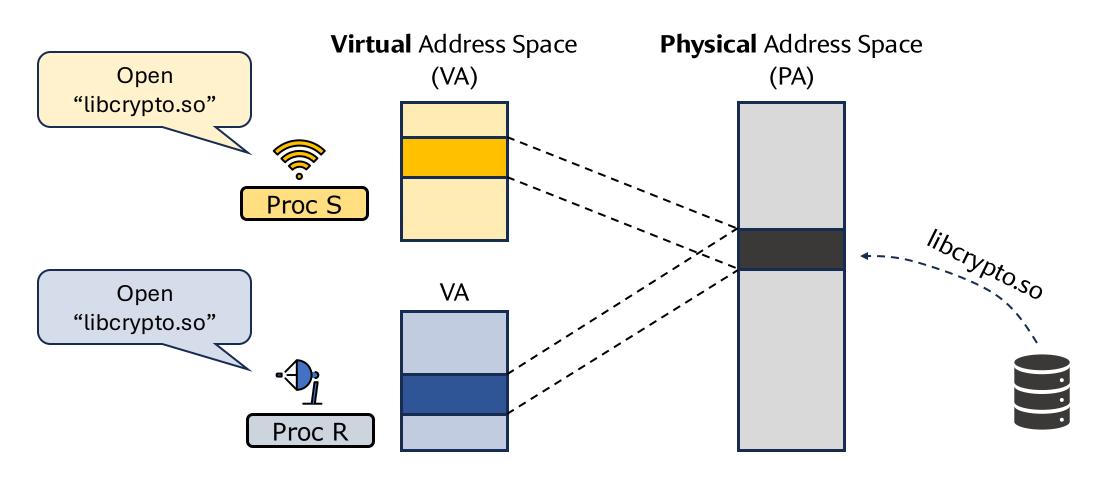


Reason 1: Page cache

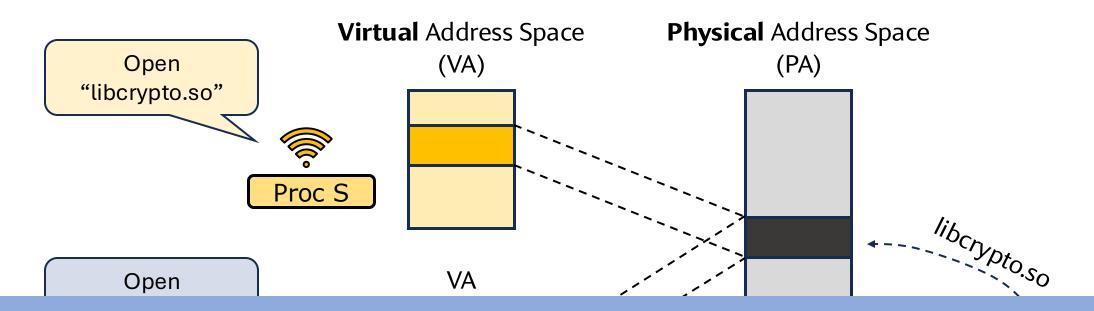


Note: Page cache, by itself, creates a side channel See "Page Cache Attacks" by Gruss et al. (CCS '19)


Reason 2: Memory Deduplication

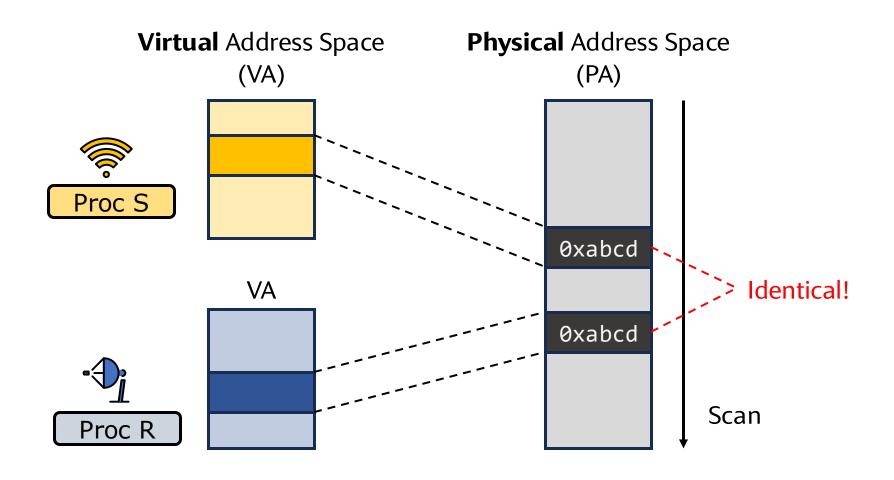

Reason 2: Memory Deduplication

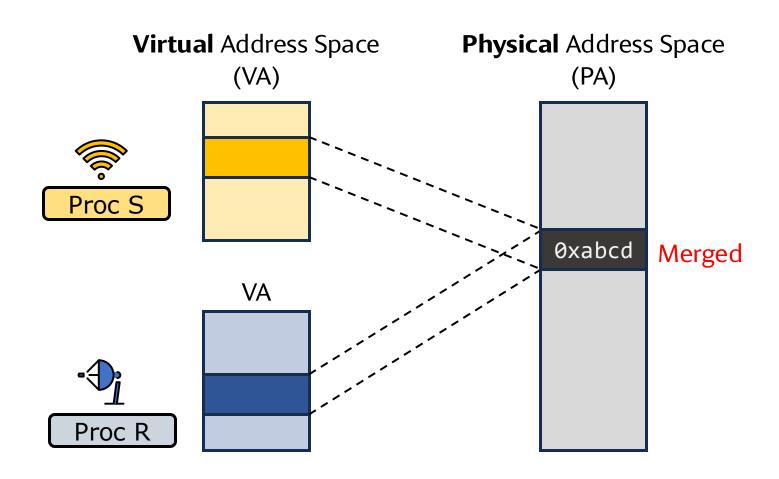

Reason 2: Memory Deduplication

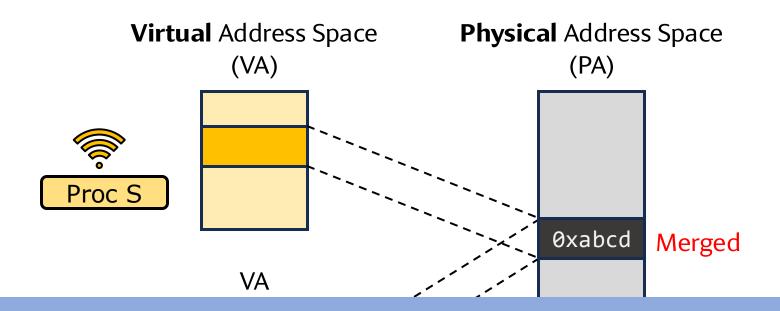


Note: Memory deduplication, by itself, creates a (remote) side channel See "Remote Memory-Deduplication Attacks" by Schwarzl et al. (NDSS '22)

### **Covert Channel Demo**

#### **Tools and shortcuts:**

- Inline assembly: <a href="https://gcc.gnu.org/onlinedocs/gcc/Extended-Asm.html">https://gcc.gnu.org/onlinedocs/gcc/Extended-Asm.html</a>
- High-resolution timer on x86:
  - Timestamp counter (TSC)
  - Synchronized across all cores
  - Accessible via rdtsc and rdtscp, no root privileged required
  - Useful for measuring latency and synchronization

#### Sender-Receiver Synchronization Protocol

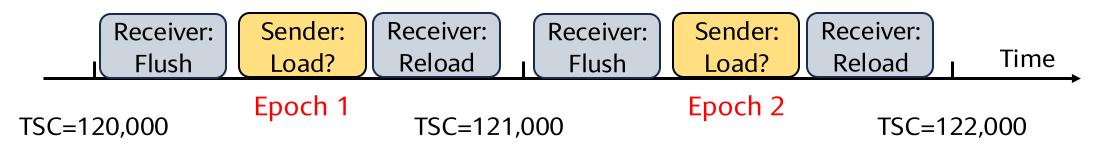


### **Covert Channel Demo**

#### Try it yourself:

- Code repo: <a href="https://github.com/ece382n-sec/Example-PoCs">https://github.com/ece382n-sec/Example-PoCs</a>
- ECE-LRC has the perfect machines to try it
  - Access to ECE LRC: <u>https://cloud.wikis.utexas.edu/wiki/spaces/eceit/pages/37752870/</u> <u>ECE+Linux+Application+Servers</u>
- Change existing code and see what happens (and understand why)
- Try to re-implement it based on your own understanding

## Why Covert Channels?

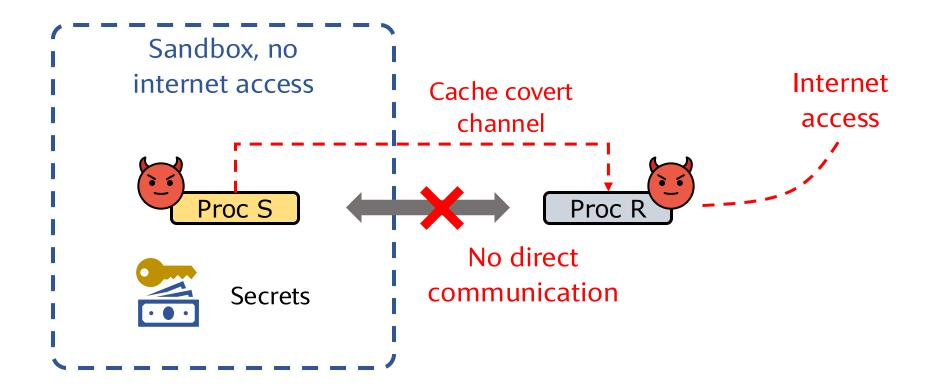

### From Covert Channel to Side Channel

Square-and-Multiply Exponentiation (Used in RSA)

#### Inputs:

- *b*: base
- *m*: modulo
- *e*: exponent (secret!)
- *n*: the bit width of *e*

#### Output:

 $b^e \mod m$ 


```
def expMod(b, m, e, n):
    r = 1
    for i in n-1...0:
    r = square(r, r)
    r = reduce(r, m)
    if get_bit(e, i) == 1:
        r = multiply(r, b)
        r = reduce(r, m)
    return r

VA

Code
Segment
```

Flush+Reload monitors which function is called and when

## Flush+Reload Trace for Square-and-Multiply (From Yarom et al.)

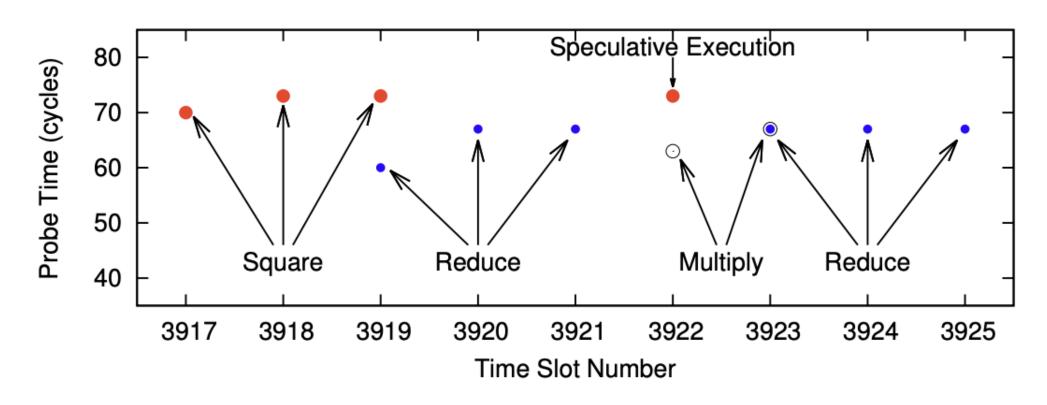

One time slot = 2500 cycles

### What If We Cannot Flush... => Evict+Reload

#### Why?:


- No CLFLUSH in browser's JavaScript runtime
- Arm's "DC CIVAC <vaddr>" can be disabled in the userspace (EL0)

**Workaround:** Cache has a limited capacity => evict the target cache line


**Eviction set:** A set of cache lines, once accessed, evict the target cache line

A trivial eviction set: A large memory buffer that thrashes the entire cache

### What We Want is a Minimal Eviction Set

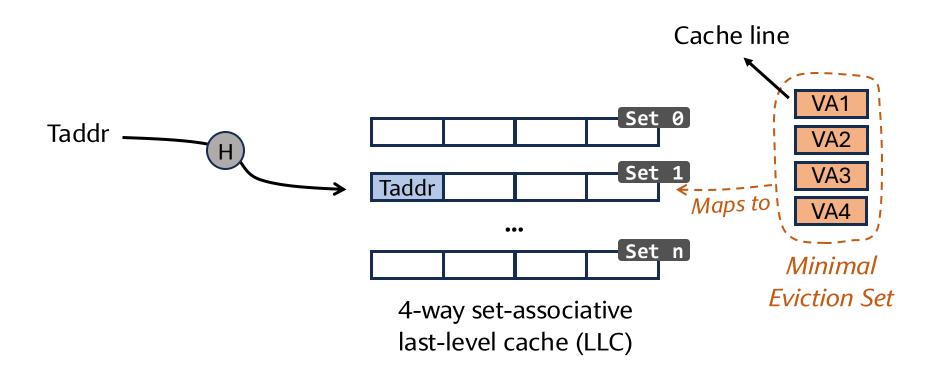



### Mapping Addresses to Cache Sets

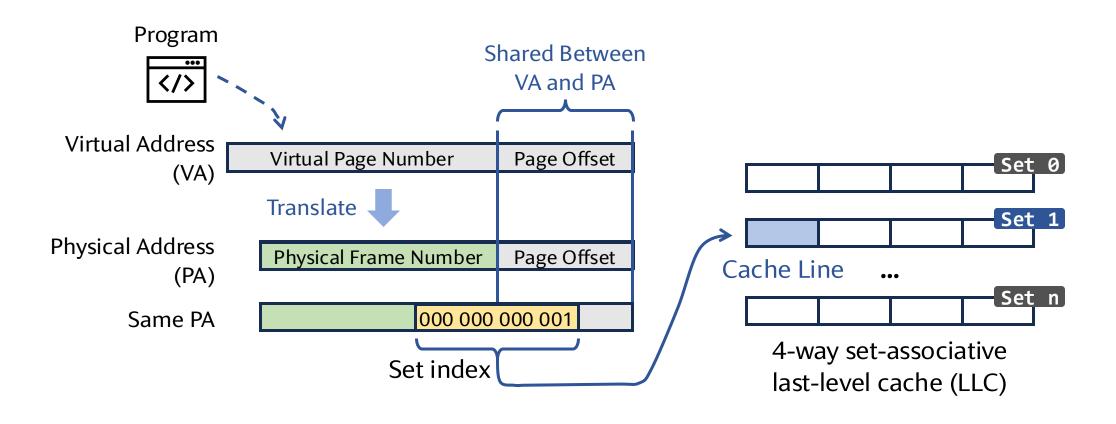



### Mapping Addresses to Cache Sets


Attacker cannot force a VA to be mapped to a specific cache set

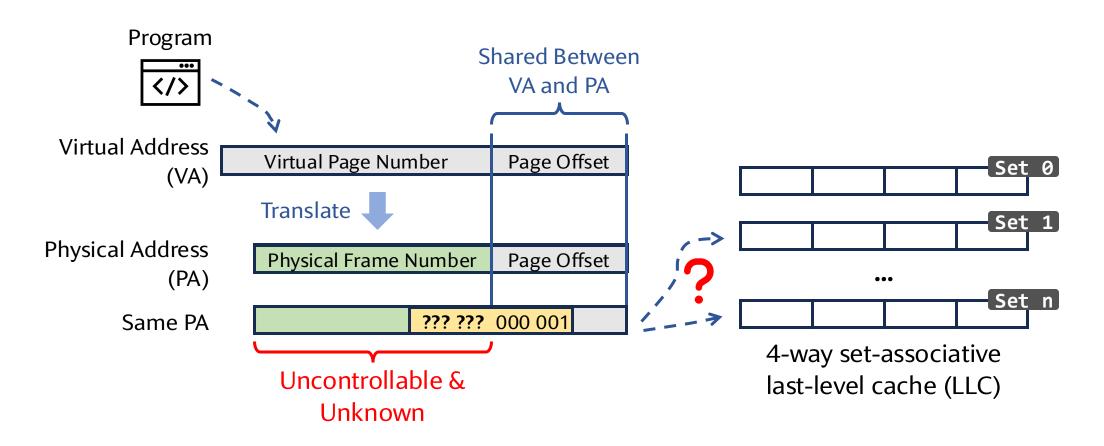

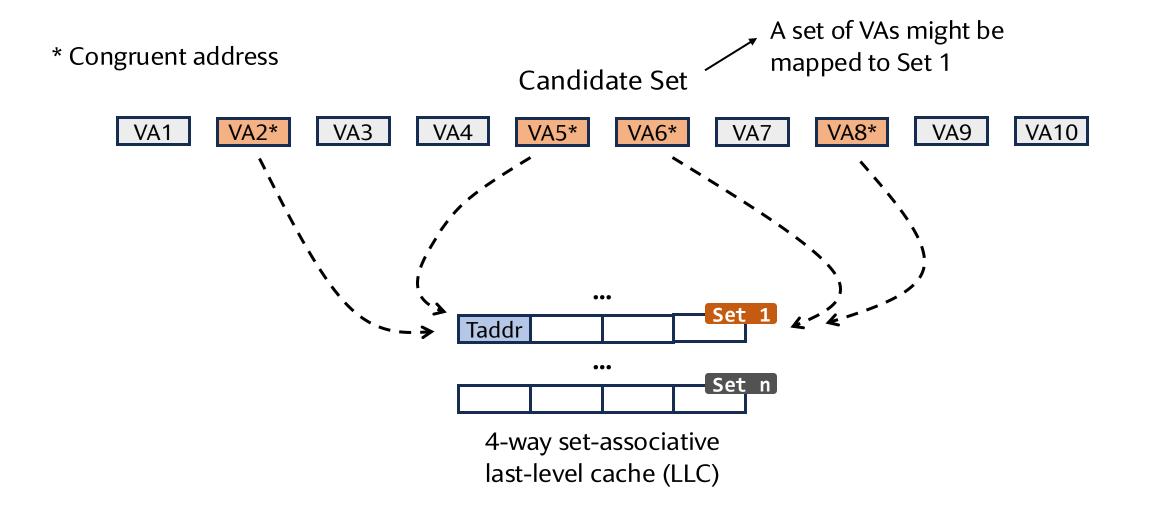

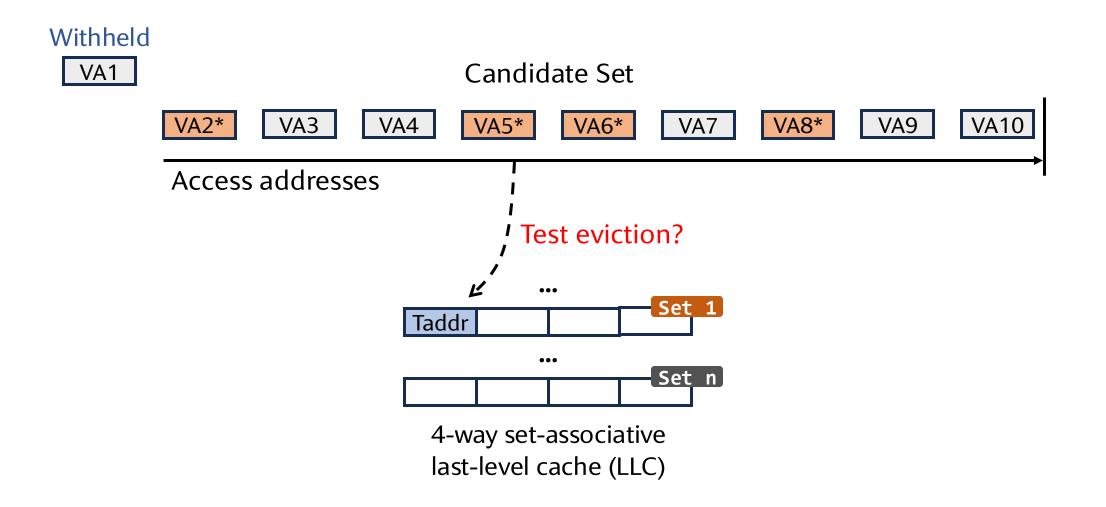

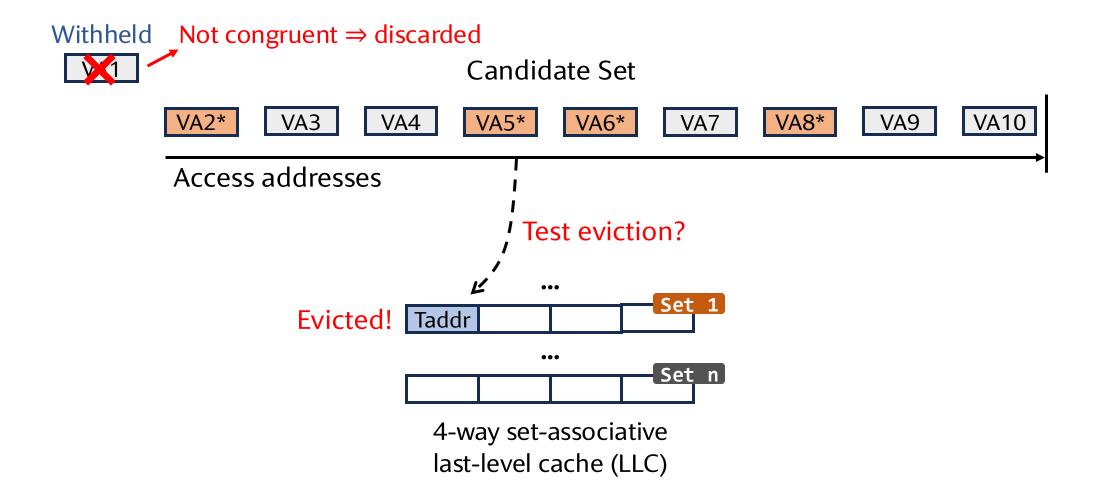

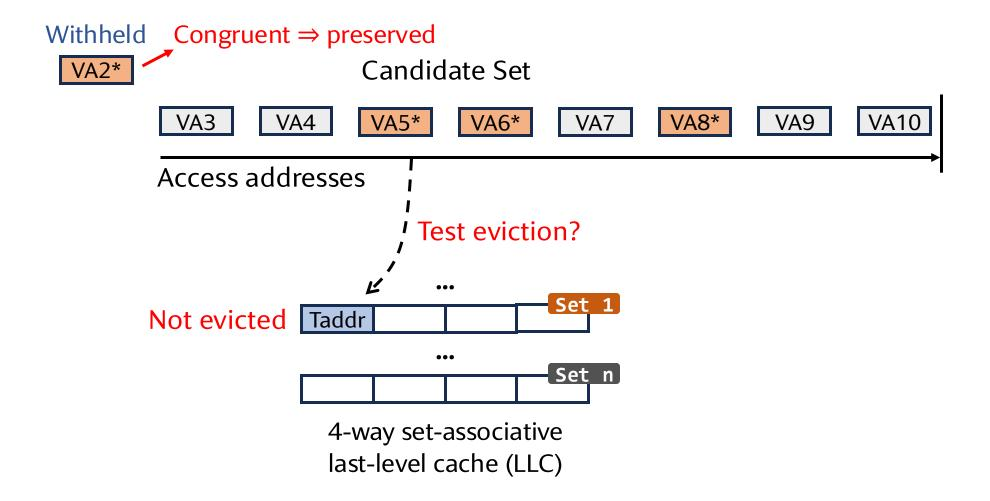

#### **Candidate Set**





















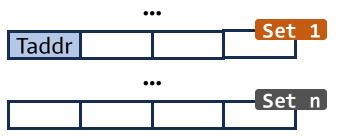


4-way set-associative last-level cache (LLC)

### Test Eviction is Susceptible to Noise

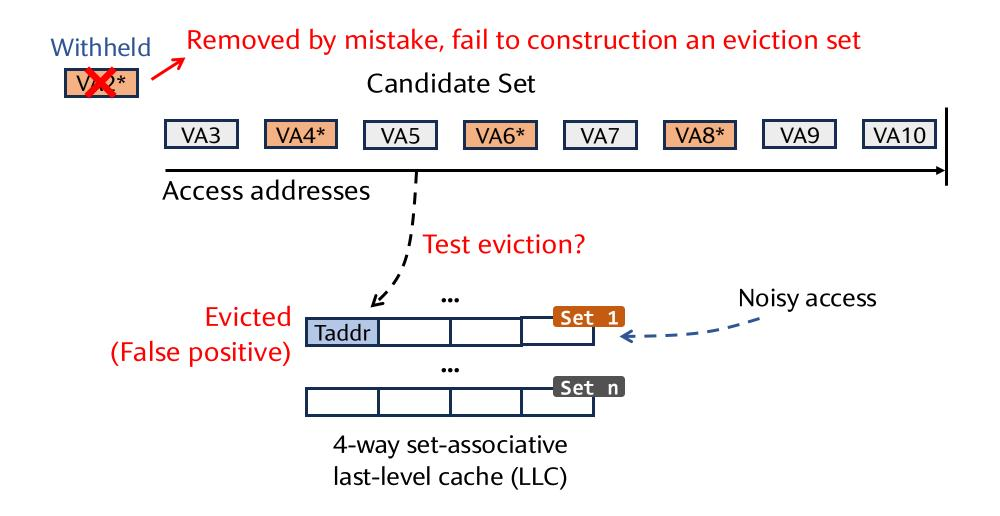


### Test Eviction is Susceptible to Noise

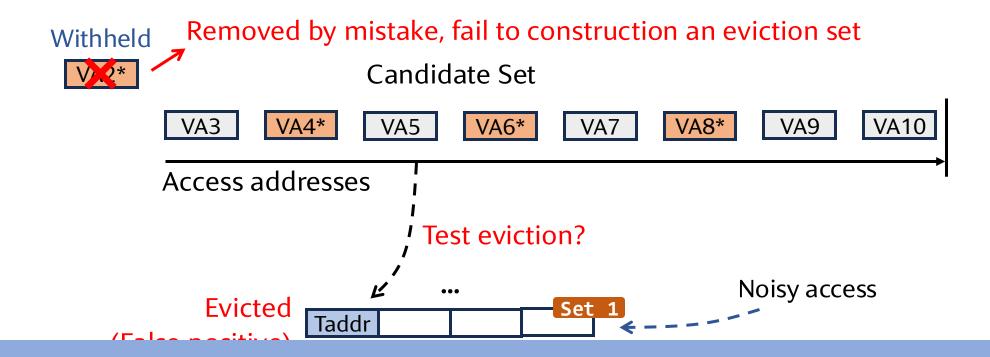


Note: Developing eviction set construction algorithms that are resilient to noise is a very good term project direction


### A More Efficient Algorithm of Constructing an Eviction Set

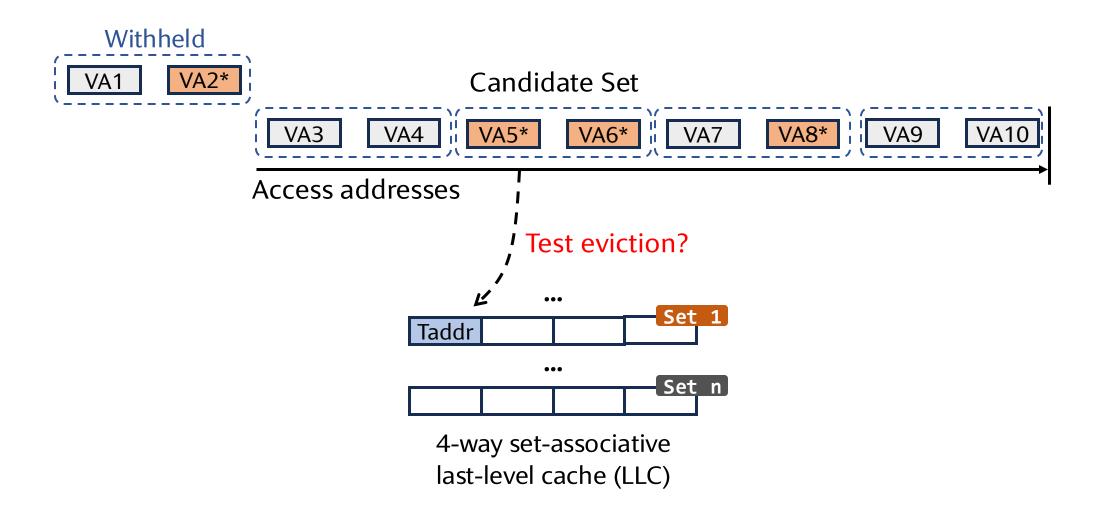

## A More Efficient Algorithm of Constructing an Eviction Set

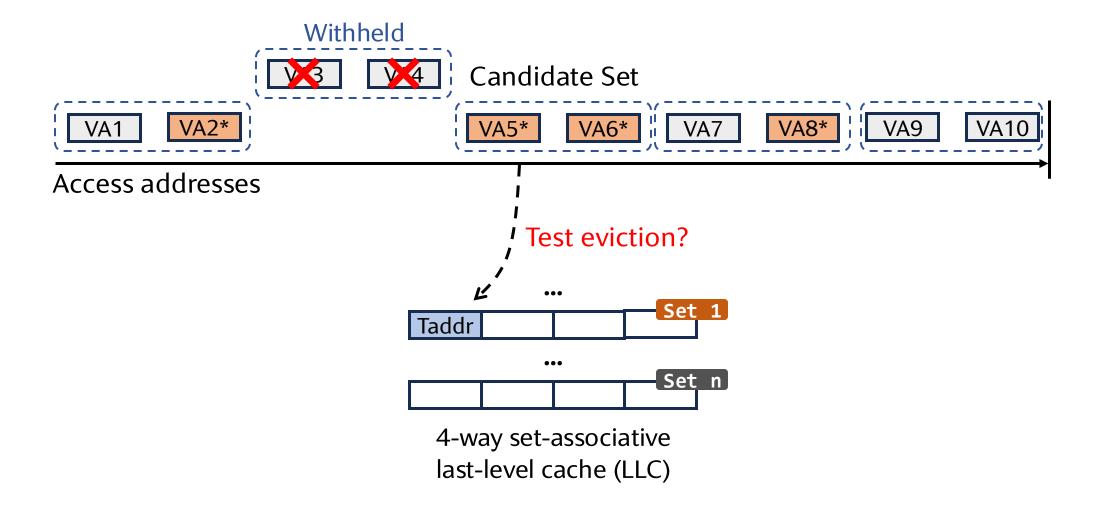



## A More Efficient Algorithm of Constructing an Eviction Set

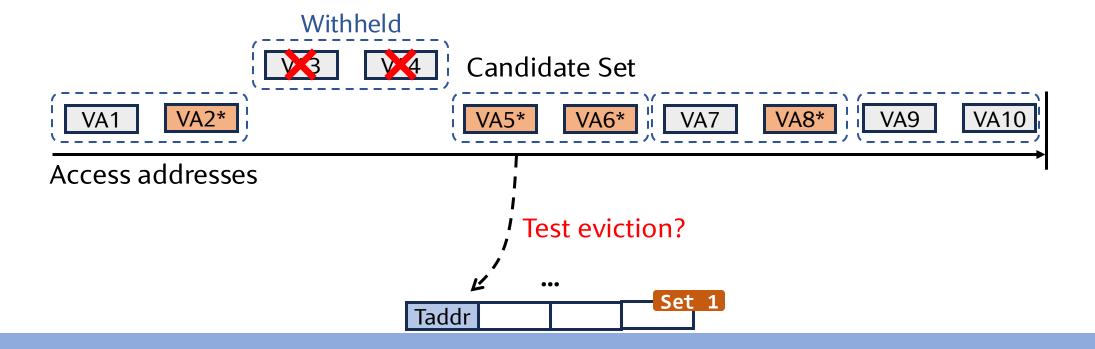



Note: Developing algorithms that can efficiently construct eviction sets, especially in a noisy environment, has been a popular research topic (and a great term project)


### Evict+Reload Timeline

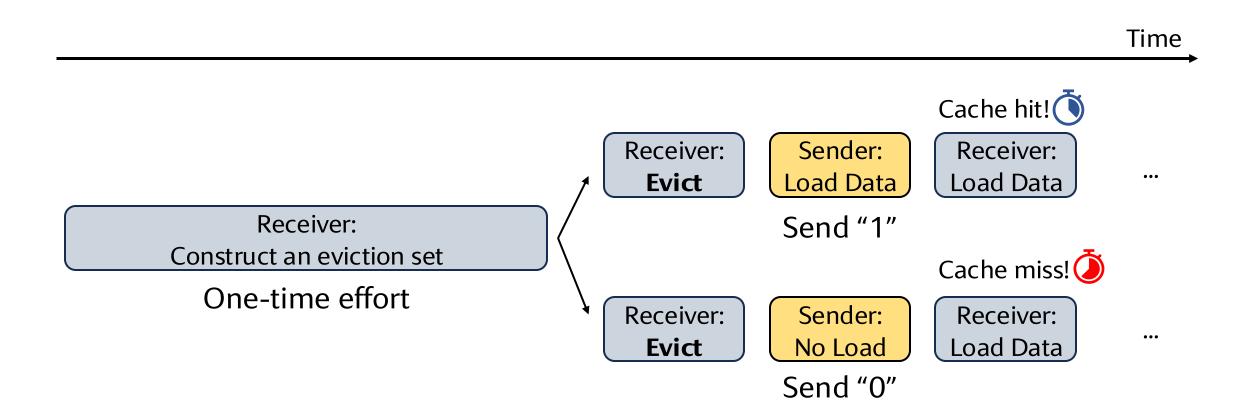

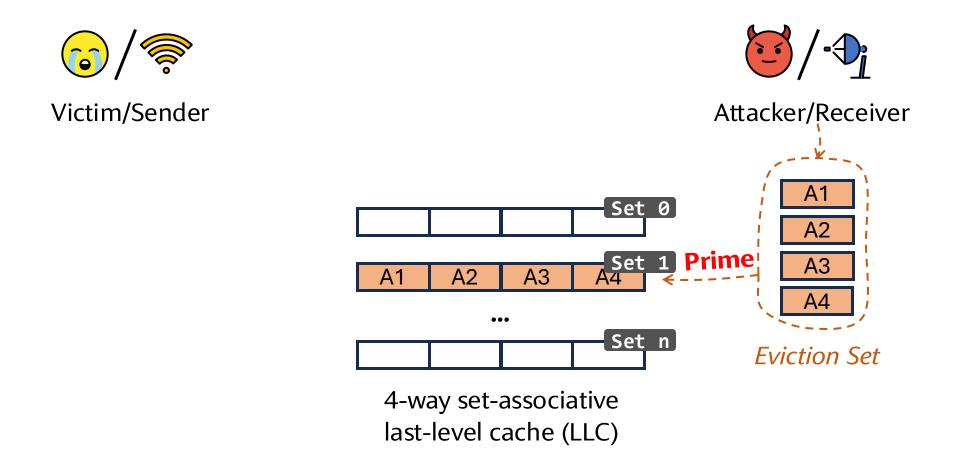


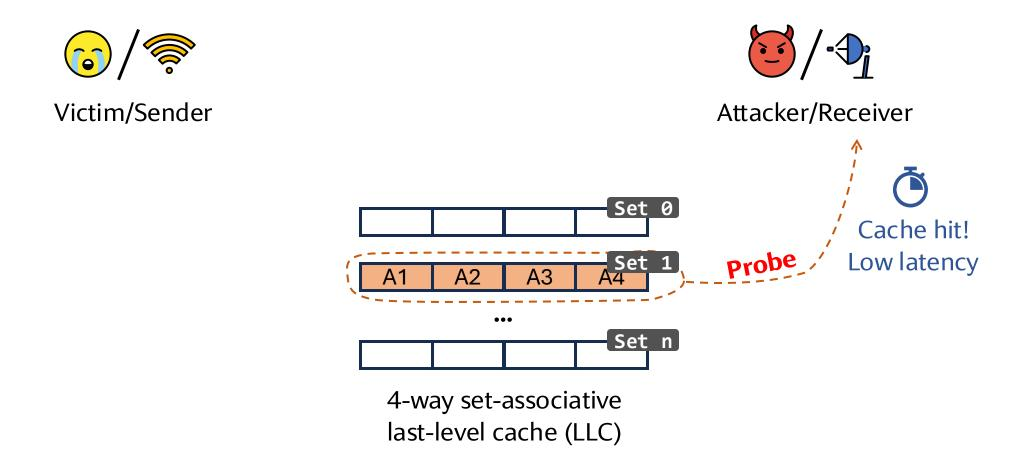

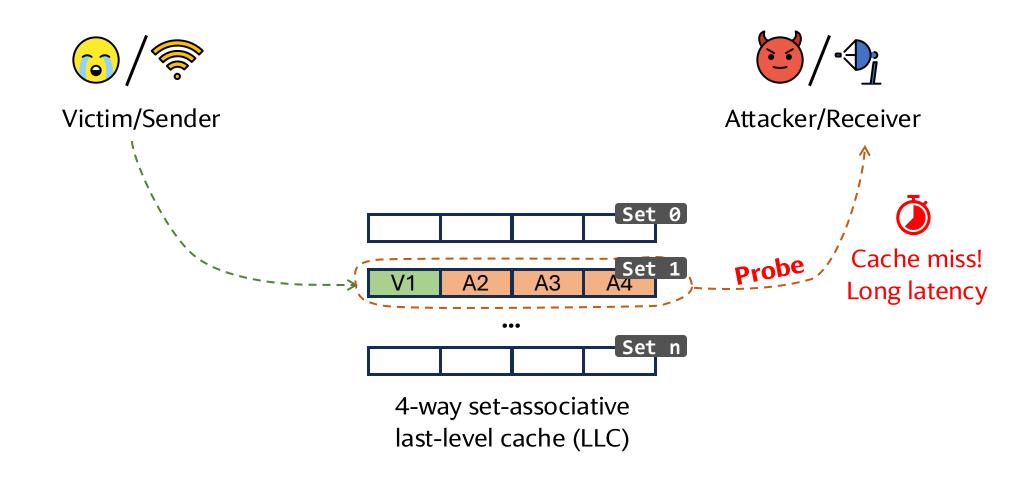


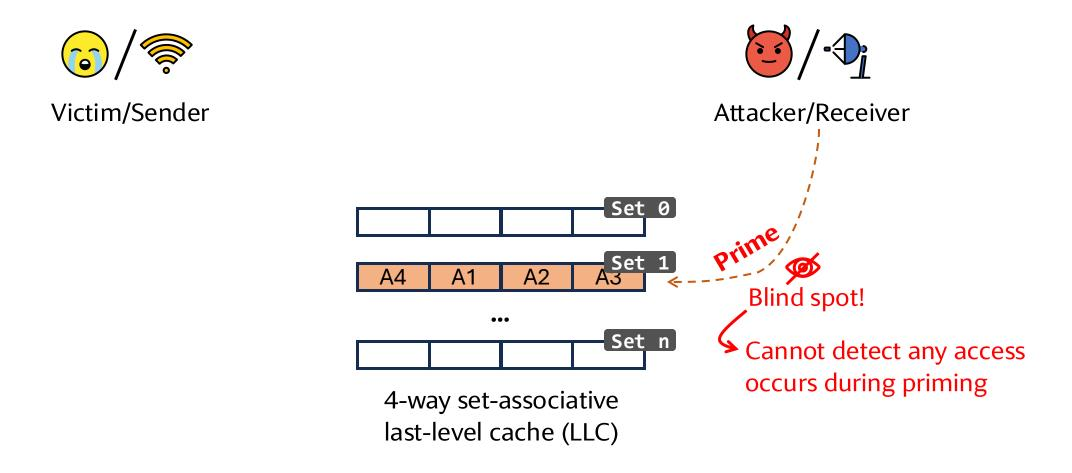

### Prime+Probe Timeline

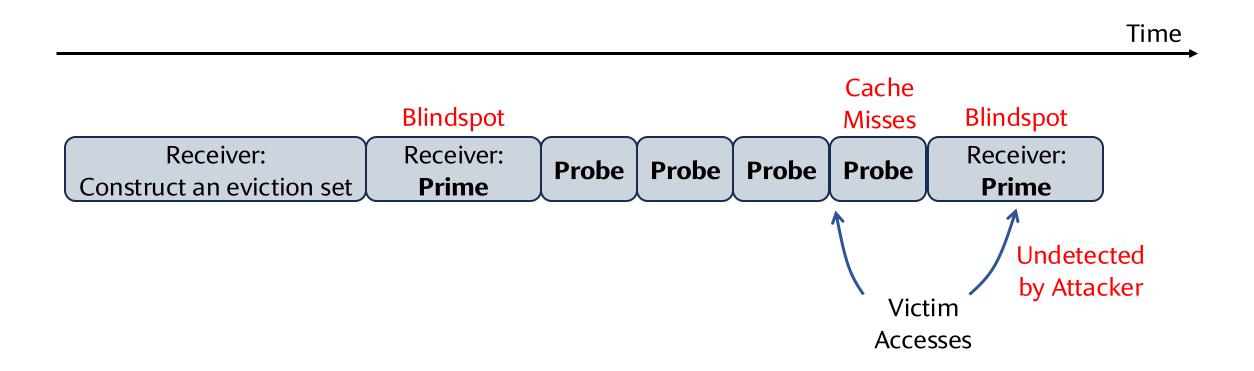

### Prime+Probe Timeline

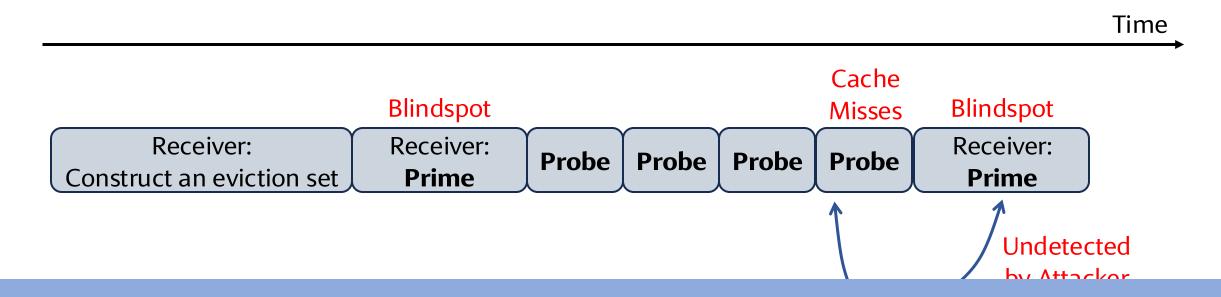


Note: Developing fast prime and probe operations is also a popular research topic (and a great term project)

### Compared to Flush+Reload/Evict+Reload


- Different leakage mechanism
  - Flush+Reload (F+R)/Evict+Reload (E+R) => <u>Cache reuse</u>
  - Prime+Probe (P+P) => <u>Cache contention</u>
- Pro: P+P does not need shared pages between the attack and victim
  - This is very important because cloud vendors generally prohibit different tenants from sharing pages
  - See: "The Security Design of the AWS Nitro System" from AWS, chapter "The EC2 approach to preventing side-channels"
- Con: P+P is more coarse grained
  - If the victim accesses two different cache lines mapped to the same cache set
    - P+P cannot distinguish which line is accessed
    - But F+R and E+R can

## Prime+Probe Trace for Square-and-Multiply (From Yan et al.<sup>1</sup>)

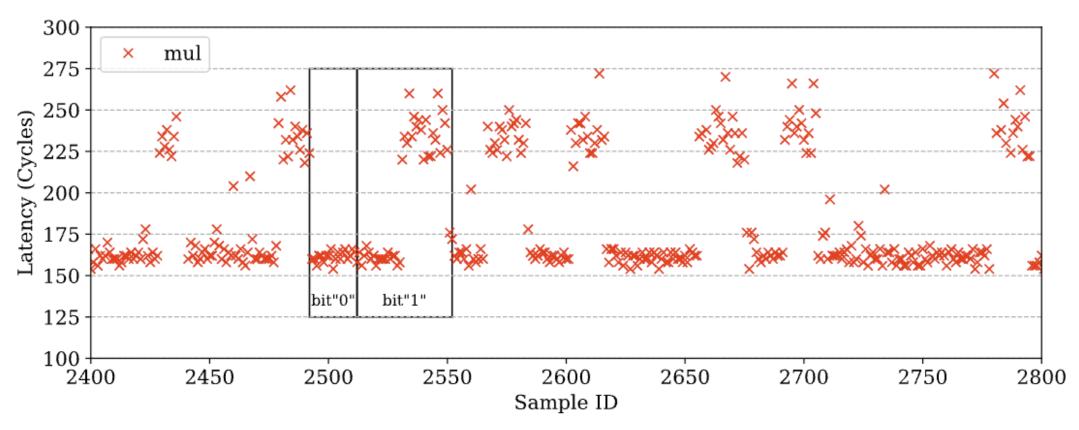

Victim executes "multiply" => Longer probe latency

## Next Lecture: Side Channels in Public Clouds

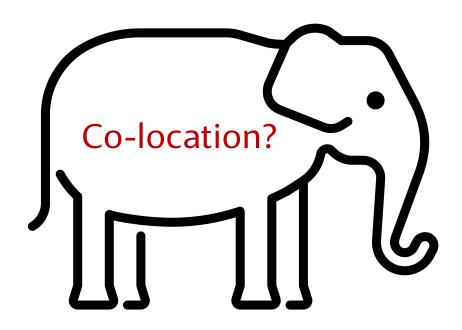

### A Few Announcements and Reminders

- Our first paper review due this Sunday
  - Review guidelines and examples posted on Canvas
- Please form groups for the term project (due today)
- Please sign up for the presentation slots (due this Sunday)
  - Signing up for the early-bird slots (i.e., the four Sep slots) gives you 5 bonus points