






# Working with GPU memory

Ben Cumming, CSCS July 19, 2017

# Memory on a Piz Daint Node

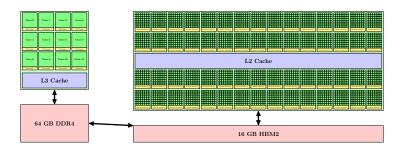





# Host and Device Memory Spaces

- The GPU has separate memory to the host CPU
  - The host CPU has 64 GB of DDR4 host memory
  - The P100 GPU has 16 GB of HBM2 device memory
- Kernels executing on the GPU only have access to device memory
  - Kernel accesses to host memory are copied to GPU memory first over the (slow) PCIe connection.


$\mathbf{host}  \leftrightarrow  \mathbf{device}$	$11 \times 2 \text{ GB/s}$	PCIe gen3
host memory	45  GB/s	DDR4
device memory	$558 \; \mathrm{GB/s}$	HBM2

• Optimization tip: The massive bandwidth of HBM2 on P100 GPUs can only help if data is in the right memory space before computation starts.





## Unified Memory

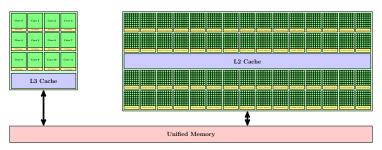

CUDA unified memory presents a single memory space that can be accessed by both host and GPU code





# Unified Memory

Unified memory presents a single memory space.

- Both CPU and GPU can access the same memory.
- First introduced with CUDA 6 and Keplar.
- Improved with CUDA 8 and Pascal:
  - All host and device memory can be addressed
  - The page migration engine transfers data between GPU and CPU memory as needed
  - API provides fine-grained control of page migration
- Simplifies memory management for GPU programming





# Accessing Memory

CUDA uses C pointers to address memory:

double\* data = //address to either host, device or managed memory

- A pointer can hold an address in
  - either device or host memory
  - managed memory that can migrate between host and device
- The CUDA runtime library provides functions that can be used to allocate, free and copy managed and device memory.





# Managing Managed Memory

## Allocating managed memory

```
cudaMallocManaged(void** ptr, size_t size, unsigned flags)
```

- size number of bytes to allocate.
- ptr points to allocated memory on return.
- flags by default is set to cudaMemAttachGlobal.

### Freeing managed memory

```
cudaFree(void* ptr)
```

### Allocate memory for 100 doubles in managed memory

```
double* v;
auto bytes = 100*sizeof(double);
cudaMallocManaged(&v, bytes); // allocate memory
cudaFree(v); // free memory
```





# Exercise: Managed Memory Example

- 1. open the files api/managed.cu and api/util.hpp
- 2. what does managed.cu do?
  - you can use Google!
- 3. run it with 20 and 22

```
> cd topics/cuda/practicals/api
> make
> srun ./managed 20
```

- 4. does it work?
- 5. run the cuda profiler

```
> srun nvprof -o managed.nvvp --profile-from-start off -f
./managed 25
> nvvp managed.nvvp &
```



## Concurrent Host-Device Memory Access

#### The CPU:

- launches the GPU code gpu\_call
- executes CPU function cpu\_call

#### The GPU:

executes gpu code asynchronously


### The problem:

 both cpu\_call and gpu\_call may try to access the same memory

### The solution:

 synchronize calls between host and device



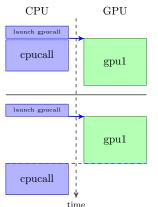



# Concurrent Host-Device Memory Access

The CPU can't access managed memory at the same time a GPU kernel is accessing it:

- Doing so causes a segmentation faults or undefined behavior.
- To test for synchronization issues run with an environment variable

```
> export CUDA_LAUNCH_BLOCKING=1
```

■ The CUDA API function cudaDeviceSynchronize can be used to force synchronization.

```
gpu call <<<...>>>():
cudaDeviceSynchronize();
cpu call():
```





# Exercise: Managed Memory Debugging

- 1. Test if concurrent host-device memory access caused the incorrect results in the api/managed.cu example.
- 2. Can you fix the issue by adding one cudaDeviceSynchronize() call?
- 3. does the profile from nyprof look different?





# Allocating Device Memory

It is possible to allocate host and device memory directly

- Explicitly allocate memory on device.
  - can't be read from host.
- Manually copy data to and from host.
- For memory that should always reside on device.
- The programmer can optimize memory transfers by hand.
  - with effort, you can get the best performance this way.





## Allocating device memory

cudaMalloc(void\*\* ptr, size\_t size)

- size number of bytes to allocate
- ptr points to allocated memory on return

### Freeing device memory

cudaFree(void\* ptr)

### Allocate memory for 100 doubles on device

```
double * v; // C pointer that will point to device memory
auto bytes = 100*sizeof(double); // size in bytes!
cudaMalloc(&v, bytes); // allocate memory
cudaFree(v);
              // free memory
```





## Perform blocking copy (host waits for copy to finish)

```
cudaMemcpy(void *dst, void *src, size_t size, cudaMemcpyKind kind)
```

- dst destination pointer
- src source pointer
- size number of bytes to copy to dst
- kind enumerated type specifying direction of copy: one of cudaMemcpyHostToDevice, cudaMemcpyDeviceToHost,

cudaMemcpyDeviceToDevice , cudaMemcpyHostToHost

### Copy 100 doubles to device, then back to host

```
auto size = 100*sizeof(double); // size in bytes
double *v d:
cudaMalloc(&v d. size):
                       // allocate on device
double *v_h = (double*)malloc(size); // allocate on host
cudaMemcpy(v_d, v_h, size, cudaMemcpyHostToDevice);
cudaMemcpy(v_h, v_d, size, cudaMemcpyDeviceToHost);
```



## Errors happen...

All API functions return error codes that indicate either:

- success;
- an error in the API call;
- an error in an earlier asynchronous call.

The return value is the enum type cudaError\_t

- e.g. cudaError\_t status = cudaMalloc(&v, 100);
  - status is { cudaSuccess , cudaErrorMemoryAllocation }

## Handling errors

const char\* cudaGetErrorString(status)

returns a string describing status

cudaError\_t cudaGetLastError()

- returns the last error
- resets status to cudaSuccess

## Copy 100 doubles to device with error checking

```
double *v d:
auto size = sizeof(double)*100;
double *v host = (double*)malloc(size):
cudaError t status:
status = cudaMalloc(&v_d, size);
if(status != cudaSuccess) {
  printf("cuda error : %s\n", cudaGetErrorString(status));
  exit(1);
status = cudaMemcpy(v_d, v_h, size, cudaMemcpyHostToDevice);
if (status != cudaSuccess) {
  printf("cuda error : %s\n", cudaGetErrorString(status));
  exit(1);
```

### It is essential to test for errors

But it is tedious and obfuscates our source code if it is done in line for every API and kernel call...



# Exercise: Device Memory API

## Open topics/cuda/practicals/api/util.hpp

- 1. what does cuda\_check\_status() do?
- 2. look at the template wrappers malloc\_host & malloc\_device
  - what do they do?
  - what are the benefits over using cudaMalloc and free directly?
  - do we need corresponding functions for cudaFree and free?
- 3. write a wrapper around cudaMemcpy for copying data  $host \rightarrow device \& device \rightarrow host$ 
  - remember to check for errors!
- 4. compile the test and run
  - it will pass with no errors on success

```
> make explicit
 srun ./explicit 8
```



# Exercise: Device Memory API

- 1. How does performance compare with the managed memory version?
- 2. What does the nyprof profile look like?
  - contrast with managed memory profile.

```
> srun nvprof -o explicit.nvvp --profile-from-start off -f
    ./explicit 25
> nvvp explicit.nvvp &
```



