

## Single-Lead, Heart Rate Monitor Front End

Data Sheet AD8232

#### **FEATURES**

Fully integrated single-lead ECG front end Low supply current: 170 μA (typical)

Common-mode rejection ratio: 80 dB (dc to 60 Hz)

Two or three electrode configurations

High signal gain (G = 100) with dc blocking capabilities

2-pole adjustable high-pass filter

Accepts up to ±300 mV of half cell potential Fast restore feature improves filter settling

**Uncommitted op amp** 

3-pole adjustable low-pass filter with adjustable gain

Leads off detection: ac or dc options Integrated right leg drive (RLD) amplifier Single-supply operation: 2.0 V to 3.5 V

Integrated reference buffer generates virtual ground

Rail-to-rail output
Internal RFI filter
8 kV HBM ESD rating
Shutdown pin
20-lead 4 mm × 4 mm LFCSP package

#### **APPLICATIONS**

Fitness and activity heart rate monitors
Portable ECG
Remote health monitors
Gaming peripherals
Biopotential signal acquisition


#### **GENERAL DESCRIPTION**

The AD8232 is an integrated signal conditioning block for ECG and other biopotential measurement applications. It is designed to extract, amplify, and filter small biopotential signals in the presence of noisy conditions, such as those created by motion or remote electrode placement. This design allows for an ultralow power analog-to-digital converter (ADC) or an embedded microcontroller to acquire the output signal easily.

The AD8232 can implement a two-pole high-pass filter for eliminating motion artifacts and the electrode half-cell potential. This filter is tightly coupled with the instrumentation architecture of the amplifier to allow both large gain and high-pass filtering in a single stage, thereby saving space and cost.

An uncommitted operational amplifier enables the AD8232 to create a three-pole low-pass filter to remove additional noise. The user can select the frequency cutoff of all filters to suit different types of applications.

#### **FUNCTIONAL BLOCK DIAGRAM**

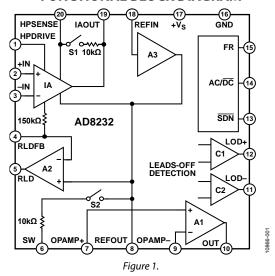

To improve common-mode rejection of the line frequencies in the system and other undesired interferences, the AD8232 includes an amplifier for driven lead applications, such as right leg drive (RLD).

The AD8232 includes a fast restore function that reduces the duration of otherwise long settling tails of the high-pass filters. After an abrupt signal change that rails the amplifier (such as a leads off condition), the AD8232 automatically adjusts to a higher filter cutoff. This feature allows the AD8232 to recover quickly, and therefore, to take valid measurements soon after connecting the electrodes to the subject.

The AD8232 is available in a 4 mm  $\times$  4 mm, 20-lead LFCSP package. Performance is specified from 0°C to 70°C and is operational from -40°C to +85°C.

T	Δ	R	ı	F	N	F	C.	N	N.	ΓF	N	TS
	п	שו	L	_	u		U	u	11	ᄔ	11	ıυ

Features	Standby Operation19
Applications1	Input Protection
Functional Block Diagram 1	Radio Frequency Interference (RFI)
General Description	Power Supply Regulation and Bypassing
Revision History	Input Referred Offsets
Specifications	Layout Recommendations
Absolute Maximum Ratings	Applications Information
ESD Caution	Eliminating Electrode Offsets
Pin Configuration and Function Descriptions	High-Pass Filtering
-	
Typical Performance Characteristics	Low-Pass Filtering and Gain
Instrumentation Amplifier Performance Curves7	Driving Analog-to-Digital Converters
Operational Amplifier Performance Curves	Driven Electrode
Right Leg Drive (RLD) Amplifier Performance Curves 13	Application Circuits
Reference Buffer Performance Curves	Heart Rate Measurement Next to the Heart24
System Performance Curves15	Exercise Application: Heart Rate Measured at the Hands 24
Theory of Operation16	Cardiac Monitor Configuration25
Architecture Overview	Portable Cardiac Monitor with Elimination of Motion
Instrumentation Amplifier16	Artifacts
Operational Amplifier16	Packaging and Ordering Information
	Outline Dimensions
Right Leg Drive Amplifier	Ordering Guide
Reference Buffer	Crucing dutae
Fast Restore Circuit	
Leads Off Detection	
REVISION HISTORY	
6/2018—Rev. B to Rev. C	Changes to Figure 49
Changes to Figure 24	Changes to AC Leads Off Detection Section and Standby
Changes to Radio Frequency Interference (RFI) Section 20	Operation Section
Updated Outline Dimensions	Changes to Input Referred Offsets Section
3/2017—Rev. A to Rev. B	Changes to Additional High-Pass Filtering Options Section;
Updated Outline Dimensions	Added Table 4
Changes to Ordering Guide	Changes to Low-Pass Filtering and Gain Section; Added Driving
0/2012 P 04 P 4	Analog-to-Digital Converters Section and Figure 61
2/2013—Rev. 0 to Rev. A	Changes to Figure 62, Figure 64, and Heart Rate Measurement
Changes to Table 1	Next to the Heart Section
Change to Figure 17	Hands and Figure 66
Changes to Figure 22 and Figure 25	Changes to Figure 68
Changes to Figure 34 and Figure 36	
Changes to Figure 45, Architecture Overview Section, and	8/2012—Revision 0: Initial Version
Instrumentation Amplifier Section	
Changes to Right Leg Drive Amplifier Section, Reference Buffer	
Section, Fast Restore Circuit Section, and Figure 48; Added	
Figure 46, Renumbered Sequentially	

## **SPECIFICATIONS**

 $V_S = 3 \text{ V}, V_{REF} = 1.5 \text{ V}, V_{CM} = 1.5 \text{ V}, T_A = 25^{\circ}\text{C}, FR = \text{low, SDN} = \text{high, AC/} \overline{DC} = \text{low, unless otherwise noted.}$ 

Table 1.

Parameter	Symbol	Test Conditions/Comments	Min	Тур	Max	Unit
INSTRUMENTATION AMPLIFIER						
Common-Mode Rejection Ratio, DC to 60 Hz	CMRR	$V_{CM} = 0.35 \text{ V to } 2.85 \text{ V}, V_{DIFF} = 0 \text{ V}$	80	86		dB
		$V_{CM} = 0.35 \text{ V to } 2.85 \text{ V, } V_{DIFF} = \pm 0.3 \text{ V}$		80		dB
Power Supply Rejection Ratio Offset Voltage (RTI)	PSRR V <sub>os</sub>	$V_s = 2.0 \text{ V to } 3.5 \text{ V}$	76	90		dB
Instrumentation Amplifier Inputs				3	8	mV
DC Blocking Input <sup>1</sup>				5	50	μV
Average Offset Drift						
Instrumentation Amplifier Inputs				10		μV/°C
DC Blocking Input <sup>1</sup>				0.05		μV/°C
Input Bias Current	I <sub>B</sub>			50	200	рА
		$T_A = 0$ °C to 70°C		1		nA
Input Offset Current	los			25	100	рА
		$T_A = 0$ °C to 70°C		1		nA
Input Impedance						
Differential				10  7.5		GΩ  pF
Common Mode				5  15		GΩ  pF
Input Voltage Noise (RTI)						
Spectral Noise Density		f = 1 kHz		100		nV/√Hz
Peak-to-Peak Voltage Noise		f = 0.1 Hz to 10 Hz		12		μV р-р
		f = 0.5 Hz to 40 Hz		14		μV p-p
Input Voltage Range	.,	$T_A = 0$ °C to 70°C	0.2		+V <sub>s</sub>	V
DC Differential Input Range	$V_{DIFF}$		-300		+300	mV
Output		D 5010	0.1		0.1	
Output Swing		$R_L = 50 \text{ k}\Omega$	0.1	6.3	$+V_{s}-0.1$	V
Short-Circuit Current Gain	I <sub>OUT</sub>			6.3		mA V/V
Gain Error	Av	$V_{DIFF} = 0 V$		100 0.4		%
Gain Enoi		$V_{\text{DIFF}} = 0 \text{ V}$ $V_{\text{DIFF}} = -300 \text{ mV to } +300 \text{ mV}$		1	3.5	% %
Average Gain Drift		$T_A = 0^{\circ}C \text{ to } 70^{\circ}C$		12	5.5	ppm/°C
Bandwidth	BW	1A = 0 C to 70 C		2		kHz
RFI Filter Cutoff (Each Input)	J			1		MHz
OPERATIONAL AMPLIFIER (A1)				•		141112
Offset Voltage	Vos			1	5	mV
Average TC	•03	$T_A = 0$ °C to 70°C		5	3	μV/°C
Input Bias Current	I <sub>B</sub>	.,, 0 0 10 70 0		100		pA
	.5	$T_A = 0$ °C to 70°C		1		nA
Input Offset Current	los			100		рА
P		$T_A = 0$ °C to $70$ °C		1		nA
Input Voltage Range			0.1		$+V_{s}-0.1$	V
Common-Mode Rejection Ratio	CMRR	$V_{CM} = 0.5 \text{ V to } 2.5 \text{ V}$		100		dB
Power Supply Rejection Ratio	PSRR			100		dB
Large Signal Voltage Gain	Avo			110		dB
Output Voltage Range		$R_L = 50 \text{ k}\Omega$	0.1		$+V_{s}-0.1$	V
Short-Circuit Current Limit	Іоит			12		mA
Gain Bandwidth Product	GBP			100		kHz
Slew Rate	SR			0.02		V/µs
Voltage Noise Density (RTI)	e <sub>n</sub>	f = 1 kHz		60		nV/√Hz
Peak-to-Peak Voltage Noise (RTI)	e <sub>n p-p</sub>	f = 0.1 Hz to 10 Hz		6		μV р-р
		f = 0.5 Hz to 40 Hz		8		μV p-p

Parameter	Symbol	Test Conditions/Comments	Min	Тур	Max	Unit
RIGHT LEG DRIVE AMPLIFIER (A2)						
Output Swing		$R_L = 50 \text{ k}\Omega$	0.1		$+V_{s}-0.1$	V
Short-Circuit Current	louт			11		mA
Integrator Input Resistor			120	150	180	kΩ
Gain Bandwidth Product	GDP			100		kHz
REFERENCE BUFFER (A3)						
Offset Error	Vos	$R_L > 50 \text{ k}\Omega$		1		mV
Input Bias Current	I <sub>B</sub>			100		pА
Short-Circuit Current Limit	Іоит			12		mA
Voltage Range		$R_L = 50 \text{ k}\Omega$	0.1		$+V_{s}-0.7$	V
DC LEADS OFF COMPARATORS						
Threshold Voltage				$+V_{S}-0.5$		V
Hysteresis				60		mV
Propagation Delay				0.5		μs
AC LEADS OFF DETECTOR						1
Square Wave Frequency	F <sub>AC</sub>		50	100	175	kHz
Square Wave Amplitude	I <sub>AC</sub>			200		nA p-p
Impedance Threshold	710	Between +IN and -IN	10	20		МΩ
Detection Delay				110		μs
FAST RESTORE CIRCUIT						P
Switches		S1 and S2				
On Resistance	Ron	31 4114 32	8	10	12	kΩ
Off Leakage	TION			100		pA
Window Comparator				100		P
Threshold Voltage		From either rail		50		mV
Propagation Delay		Trom cicier run		2		μs
Switch Timing Characteristics				_		μ3
Feedback Recovery Switch On Time	t <sub>SW1</sub>			110		ms
Filter Recovery Switch On Time	t <sub>SW2</sub>			55		ms
Fast Restore Reset	t <sub>RST</sub>			2		μs
LOGIC INTERFACE	ensi					μз
Input Characteristics						
Input Voltage (AC/DC and FR)						
Low	V <sub>IL</sub>			1.24		V
Low High	V <sub>IL</sub> V <sub>IH</sub>			1.24		V
Input Voltage (SDN)	VIH			1.55		\ \ \
·	.,			2.4		1,,
Low	V <sub>IL</sub>			2.1		V
High	V <sub>IH</sub>			0.5		V
Output Characteristics		LOD+ and LOD- terminals				
Output Voltage	.,					l
Low	V <sub>OL</sub>			0.05		V
High	V <sub>OH</sub>			2.95		V
SYSTEM SPECIFICATIONS						
Quiescent Supply Current				170	230	μΑ
		$T_A = 0$ °C to 70°C		210		μΑ
Shutdown Current				40	500	nA
		$T_A = 0$ °C to 70°C		100		nA
Supply Range			2.0		3.5	V
Specified Temperature Range			0		70	°C
Operational Temperature Range			-40		+85	°C

<sup>&</sup>lt;sup>1</sup> Offset referred to the input of the instrumentation amplifier inputs. See the Input Referred Offsets section for additional information.

## **ABSOLUTE MAXIMUM RATINGS**

Table 2

Table 2.	
Parameter	Rating
Supply Voltage	3.6 V
Output Short-Circuit Current Duration	Indefinite
Maximum Voltage, Any Terminal <sup>1</sup>	$+V_{S} + 0.3 V$
Minimum Voltage, Any Terminal <sup>1</sup>	-0.3 V
Storage Temperature Range	−65°C to +125°C
Operating Temperature Range	-40°C to +85°C
Maximum Junction Temperature	140°C
$\theta_{JA}$ Thermal Impedance <sup>2</sup>	48°C/W
$\theta_{JC}$ Thermal Impedance	4.4°C/W
ESD Rating	
Human Body Model (HBM)	8 kV
Charged Device Model (FICDM)	1.25 kV
Machine Model (MM)	200 V

<sup>&</sup>lt;sup>1</sup> This level or the maximum specified supply voltage, whichever is the lesser, indicates the superior voltage limit for any terminal. If input voltages beyond the specified minimum or maximum voltages are expected, place resistors in series with the inputs to limit the current to less than 5 mA.

Stresses at or above those listed under Absolute Maximum Ratings may cause permanent damage to the product. This is a stress rating only; functional operation of the product at these or any other conditions above those indicated in the operational section of this specification is not implied. Operation beyond the maximum operating conditions for extended periods may affect product reliability.

#### **ESD CAUTION**



**ESD** (electrostatic discharge) sensitive device. Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

 $<sup>^2\,\</sup>theta_{JA}$  is specified for a device in free air on a 4-layer JEDEC board.

## PIN CONFIGURATION AND FUNCTION DESCRIPTIONS

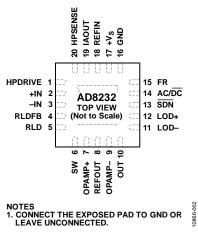


Figure 2. Pin Configuration

**Table 3. Pin Function Descriptions** 

Pin No.	Mnemonic	Description
1	HPDRIVE	High-Pass Driver Output. Connect HPDRIVE to the capacitor in the first high-pass filter. The AD8232 drives this pin to keep HPSENSE at the same level as the reference voltage.
2	+IN	Instrumentation Amplifier Positive Input. +IN is typically connected to the left arm (LA) electrode.
3	-IN	Instrumentation Amplifier Negative Input. –IN is typically connected to the right arm (RA) electrode.
4	RLDFB	Right Leg Drive Feedback Input. RLDFB is the feedback terminal for the right leg drive circuit.
5	RLD	Right Leg Drive Output. Connect the driven electrode (typically, right leg) to the RLD pin.
6	SW	Fast Restore Switch Terminal. Connect this terminal to the output of the second high-pass filter.
7	OPAMP+	Operational Amplifier Noninverting Input.
8	REFOUT	Reference Buffer Output. The instrumentation amplifier output is referenced to this potential. Use REFOUT as a virtual ground for any point in the circuit that needs a signal reference.
9	OPAMP-	Operational Amplifier Inverting Input.
10	OUT	Operational Amplifier Output. The fully conditioned heart rate signal is present at this output. OUT can be connected to the input of an ADC.
11	LOD-	Leads Off Comparator Output. In dc leads off detection mode, LOD— is high when the electrode to –IN is disconnected, and it is low when connected. In ac leads off detection mode, LOD— is always low.
12	LOD+	Leads Off Comparator Output. In dc leads off detection mode, LOD+ is high when the +IN electrode is disconnected, and it is low when connected. In ac leads off detection mode, LOD+ is high when either the –IN or +IN electrode is disconnected, and it is low when both electrodes are connected.
13	SDN	Shutdown Control Input. Drive SDN low to enter the low power shutdown mode.
14	AC/DC	Leads Off Mode Control Input. Drive the AC/DC pin low for dc leads off mode. Drive the AC/DC pin high for ac leads off mode.
15	FR	Fast Restore Control Input. Drive FR high to enable fast recovery mode; otherwise, drive it low.
16	GND	Power Supply Ground.
17	+V <sub>S</sub>	Power Supply Terminal.
18	REFIN	Reference Buffer Input. Use REFIN, a high impedance input terminal, to set the level of the reference buffer.
19	IAOUT	Instrumentation Amplifier Output Terminal.
20	HPSENSE	High-Pass Sense Input for Instrumentation Amplifier. Connect HPSENSE to the junction of R and C that sets the corner frequency of the dc blocking circuit.
	EP	Exposed Pad. Connect the exposed pad to GND or leave it unconnected.

## TYPICAL PERFORMANCE CHARACTERISTICS

 $V_S = 3$  V,  $V_{REF} = 1.5$  V,  $V_{CM} = 1.5$  V,  $T_A = 25$ °C, unless otherwise noted.

#### **INSTRUMENTATION AMPLIFIER PERFORMANCE CURVES**

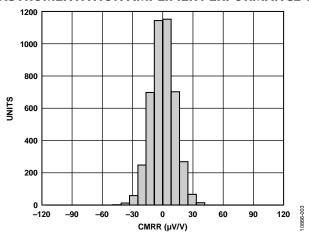


Figure 3. Instrumentation Amplifier CMRR Distribution

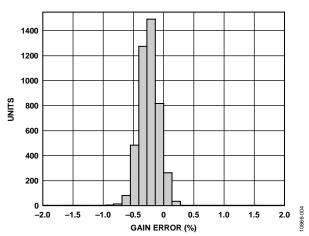


Figure 4. Instrumentation Amplifier Gain Error Distribution

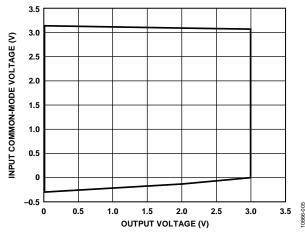


Figure 5. Instrumentation Amplifier Input Common-Mode Range vs. Output Voltage

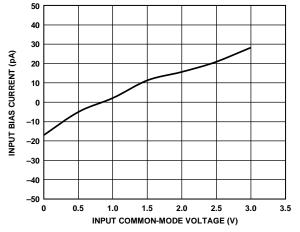


Figure 6. Instrumentation Amplifier Input Bias Current vs. CMV

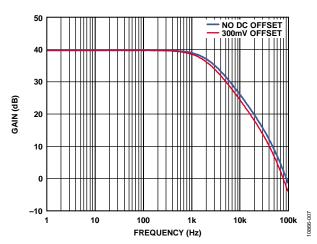


Figure 7. Instrumentation Amplifier Gain vs. Frequency

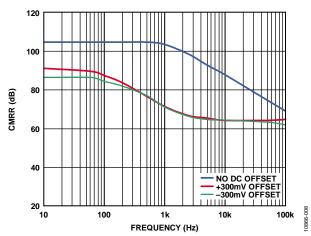


Figure 8. Instrumentation Amplifier CMRR vs. Frequency, RTI

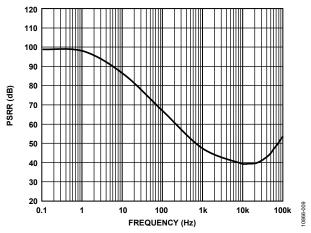


Figure 9. Instrumentation Amplifier PSRR vs. Frequency

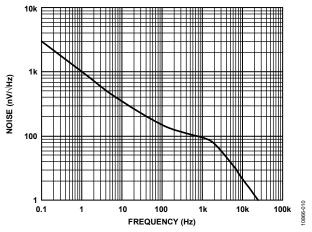


Figure 10. Instrumentation Amplifier Voltage Noise Spectral Density (RTI)

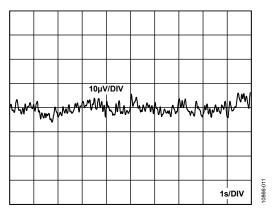


Figure 11. Instrumentation Amplifier 0.1 Hz to 10 Hz Noise

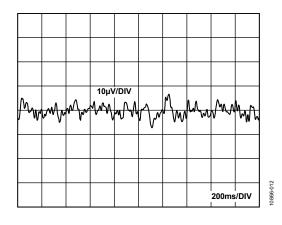


Figure 12. Instrumentation Amplifier 0.5 Hz to 40 Hz Noise

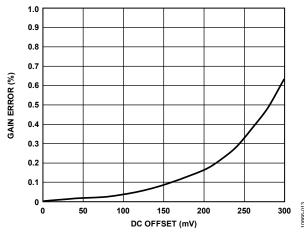


Figure 13. Instrumentation Amplifier Gain Error vs. DC Offset

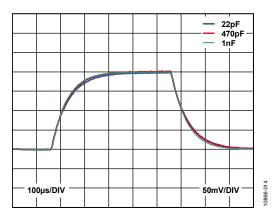


Figure 14. Instrumentation Amplifier Small Signal Pulse Response

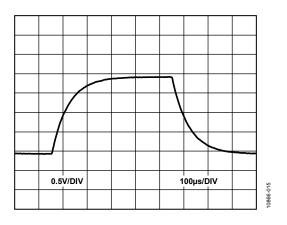


Figure 15. Instrumentation Amplifier Large Signal Pulse Response

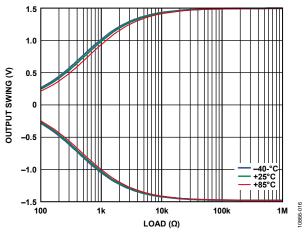


Figure 16. Instrumentation Amplifier Output Swing vs. Load

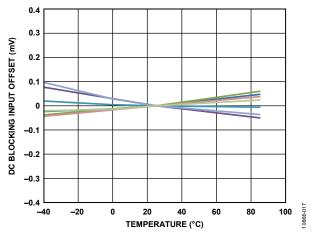


Figure 17. Instrumentation Amplifier DC Blocking Input Offset Drift

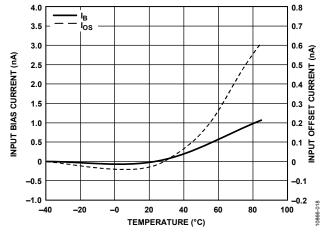


Figure 18. Instrumentation Amplifier Input Bias Current and Input Offset Current vs. Temperature

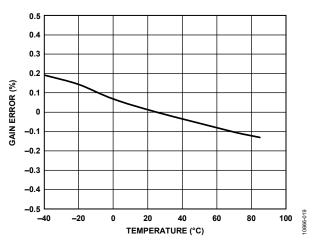


Figure 19. Instrumentation Amplifier Gain Error vs. Temperature

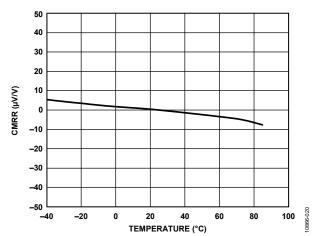


Figure 20. Instrumentation Amplifier CMRR vs. Temperature

#### **OPERATIONAL AMPLIFIER PERFORMANCE CURVES**

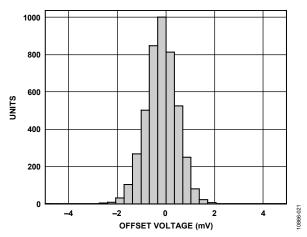


Figure 21. Operational Amplifier Offset Distribution

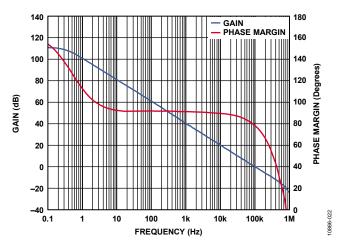


Figure 22. Operational Amplifier Open-Loop Gain and Phase vs. Frequency

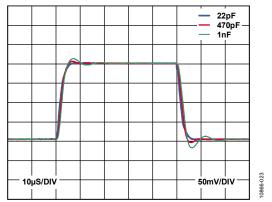


Figure 23. Operational Amplifier Small Signal Response for Various Capacitive Loads

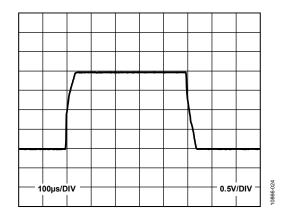


Figure 24. Operational Amplifier Large Signal Transient Response

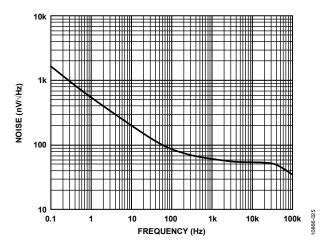


Figure 25. Operational Amplifier Voltage Spectral Noise Density vs. Frequency

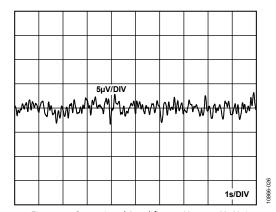


Figure 26. Operational Amplifier 0.1 Hz to 10 Hz Noise

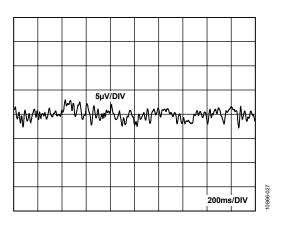


Figure 27. Operational Amplifier 0.5 Hz to 40 Hz Noise

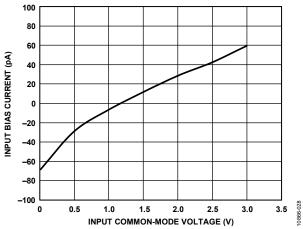


Figure 28. Operational Amplifier Bias Current vs. Input Common-Mode Voltage

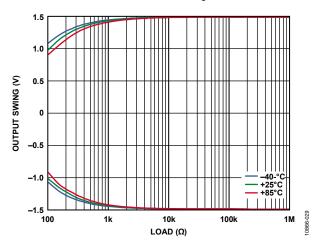


Figure 29. Operational Amplifier Output Voltage Swing vs. Output Current

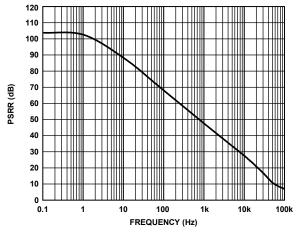


Figure 30. Operational Amplifier Power Supply Rejection Ratio

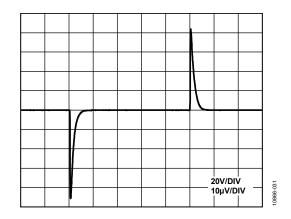


Figure 31. Operational Amplifier Load Transient Response (100 µA Load Change)

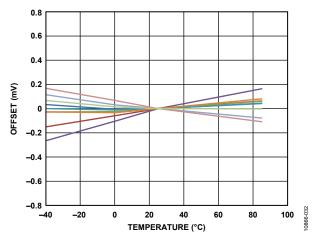


Figure 32. Operational Amplifier Offset vs. Temperature

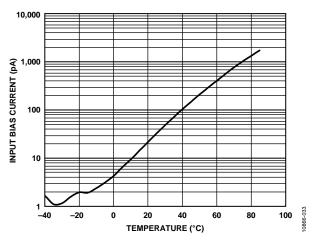


Figure 33. Operational Amplifier Bias Current vs. Temperature

#### RIGHT LEG DRIVE (RLD) AMPLIFIER PERFORMANCE CURVES

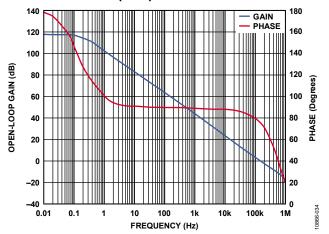


Figure 34. RLD Amplifier Open-Loop Gain and Phase vs. Frequency

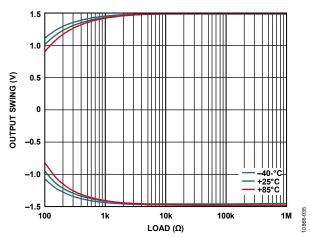


Figure 35. RLD Amplifier Output Voltage Swing vs. Output Current

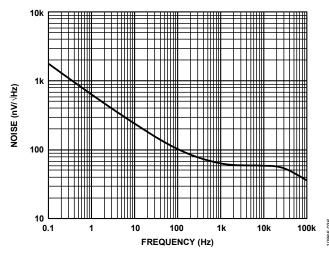


Figure 36. RLD Amplifier Voltage Spectral Noise Density vs. Frequency

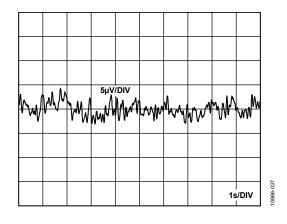


Figure 37. RLD Amplifier 0.1 Hz to 10 Hz Noise

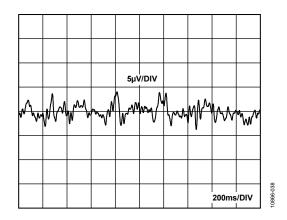


Figure 38. RLD Amplifier 0.5 Hz to 40 Hz Noise

#### REFERENCE BUFFER PERFORMANCE CURVES

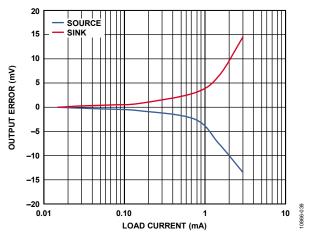


Figure 39. Reference Buffer Load Regulation

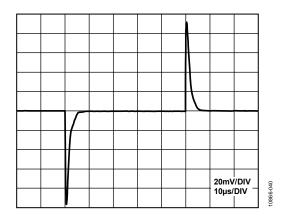


Figure 40. Reference Buffer Load Transient Response (100 μA Load Change)

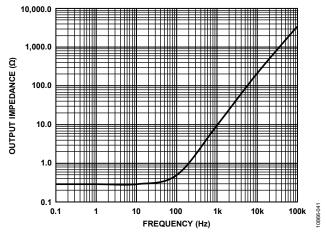


Figure 41. Reference Buffer Output Impedance vs. Frequency

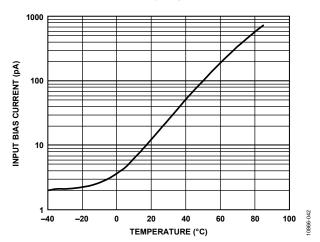


Figure 42. Reference Buffer Bias Current vs. Temperature

#### **SYSTEM PERFORMANCE CURVES**

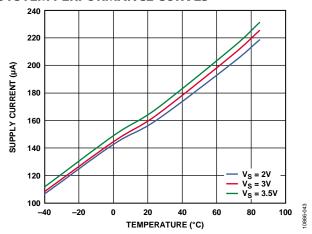


Figure 43. Supply Current vs. Temperature

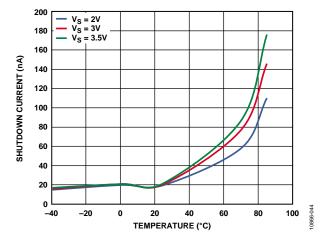


Figure 44. Shutdown Current vs. Temperature

### THEORY OF OPERATION

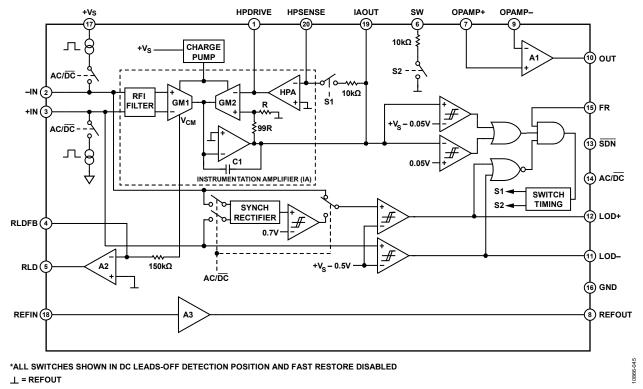


Figure 45. Simplified Schematic Diagram

#### **ARCHITECTURE OVERVIEW**

The AD8232 is an integrated front end for signal conditioning of cardiac biopotentials for heart rate monitoring. It consists of a specialized instrumentation amplifier (IA), an operational amplifier (A1), a right leg drive amplifier (A2), and a midsupply reference buffer (A3). In addition, the AD8232 includes leads off detection circuitry and an automatic fast restore circuit that brings back the signal shortly after leads are reconnected.

The AD8232 contains a specialized instrumentation amplifier that amplifies the ECG signal while rejecting the electrode half-cell potential on the same stage. This is possible with an indirect current feedback architecture, which reduces size and power compared with traditional implementations

#### **INSTRUMENTATION AMPLIFIER**

The instrumentation amplifier is shown in Figure 45 as comprised by two well-matched transconductance amplifiers (GM1 and GM2), the dc blocking amplifier (HPA), and an integrator formed by C1 and an op amp. The transconductance amplifier, GM1, generates a current that is proportional to the voltage present at its inputs. When the feedback is satisfied, an equal voltage appears across the inputs of the transconductance amplifier, GM2, thereby matching the current generated by GM1. The difference generates an error current that is integrated across Capacitor C1. The resulting voltage appears at the output of the instrumentation amplifier.

The feedback of the amplifier is applied via GM2 through two separate paths: the two resistors divide the output signal to set an overall gain of 100, whereas the dc blocking amplifier integrates any deviation from the reference level. Consequently, dc offsets as large as  $\pm 300$  mV across the GM1 inputs appear inverted and with the same magnitude across the inputs of GM2, all without saturating the signal of interest.

To increase the common-mode voltage range of the instrumentation amplifier, a charge pump boosts the supply voltage for the two transconductance amplifiers. This further prevents saturation of the amplifier in the presence of large common-mode signals, such as line interference. The charge pump runs from an internal oscillator, the frequency of which is set around 500 kHz.

#### **OPERATIONAL AMPLIFIER**

This general-purpose operational amplifier (A1) is a rail-to-rail device that can be used for low-pass filtering and to add additional gain. The following sections provide details and example circuits that use this amplifier.

#### RIGHT LEG DRIVE AMPLIFIER

The right leg drive (RLD) amplifier inverts the common-mode signal that is present at the instrumentation amplifier inputs. When the right leg drive output current is injected into the subject, it counteracts common-mode voltage variations, thus improving the common-mode rejection of the system.

The common-mode signal that is present across the inputs of the instrumentation amplifier is derived from the transconductance amplifier, GM1. It is then connected to the inverting input of A2 through a 150 k $\Omega$  resistor.

An integrator can be built by connecting a capacitor between the RLD FB and RLD terminals. A good starting point is a 1 nF capacitor, which places the crossover frequency at about 1 kHz (the frequency at which the amplifier has an inverting unity gain). This configuration results in about 26 dB of loop gain available at a frequency range from 50 Hz to 60 Hz for common-mode line rejection. Higher capacitor values reduce the crossover frequency, thereby reducing the gain that is available for rejection and, consequently, increasing the line noise. Lower capacitor values move the crossover frequency to higher frequencies, allowing increased gain. The tradeoff is that with higher gain, the system can become unstable and saturate the output of the right leg amplifier.

Note that when using this amplifier to drive an electrode, there should be a resistor in series with the output to limit the current to be always less than 10  $\mu A$  even in fault conditions. For example, if the supply used is 3.0 V, this resistor should be greater than 330  $k\Omega$  to account for component and supply variations.

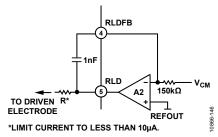


Figure 46. Typical Configuration of Right-Leg Drive Circuit

In two-electrode configurations, RLD can be used to bias the inputs through 10  $M\Omega$  resistors as described in the Leads Off Detection section. If left unused, it is recommended to configure A2 as a follower by connecting RLDFB directly to RLD.

#### **REFERENCE BUFFER**

The AD8232 operates from a single supply. To simplify the design of single-supply applications, the AD8232 includes a reference buffer to create a virtual ground between the supply voltage and the system ground. The signals present at the output of the instrumentation amplifier are referenced around this voltage. For example, if there is zero differential input voltage,

the voltage at the output of the instrumentation amplifier is this reference voltage.

The reference voltage level is set at the REFIN pin. It can be set with a voltage divider or by driving the REFIN pin from some other point in the circuit (for example, from the ADC reference). The voltage is available at the REFOUT pin for the filtering circuits or for an ADC input.




Figure 47. Setting the Internal Reference

To limit the power consumption of the voltage divider, the use of large resistors is recommended, such as  $10~\text{M}\Omega$ . The designer must keep in mind that high resistor values make it easier for interfering signals to appear at the input of the reference buffer. To minimize noise pickup, it is recommended to place the resistors close to each other and as near as possible to the REFIN terminal. Furthermore, use a capacitor in parallel with the lower resistor on the divider for additional filtering, as shown in Figure 47. Keep in mind that a large capacitor results in better noise filtering but it takes longer to settle the reference after power-up. The total time it takes the reference to settle within 1% can be estimated with the formula

$$t_{SETTLE\_REFERENCE} = 5 \times \frac{R1R2C1}{R1 + R2}$$

Note that disabling the AD8232 with the shutdown terminal does not discharge this capacitor.

#### **FAST RESTORE CIRCUIT**

Because of the low cutoff frequency used in high-pass filters in ECG applications, signals may require several seconds to settle. This settling time can result in a frustrating delay for the user after a step response: for example, when the electrodes are first connected.

This fast restore function is implemented internally, as shown in Figure 48. The output of the instrumentation amplifier is connected to a window comparator. The window comparator detects a saturation condition at the output of the instrumentation amplifier when its voltage approaches 50 mV from either supply rail.




Figure 48. Fast Restore Circuit

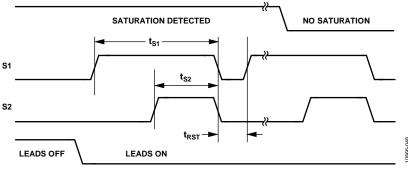


Figure 49. Timing Diagram for Fast Restore Switches (Time Base Not to Scale)

If this saturation condition is present when both input electrodes are attached to the subject, the comparator triggers a timing circuit that automatically closes Switch S1 and Switch S2 (see Figure 49 for a timing diagram).

These two switches (S1 and S2) enable two different 10 k $\Omega$  resistor paths: one between HPSENSE and IAOUT and another between SW and REFOUT. During the time Switch S1 and Switch S2 are enabled, these internal resistors appear in parallel with their corresponding external resistors forming high-pass filters. The result is that the equivalent lower resistance shifts the pole to a higher frequency, delivering a quicker settling time. Note that the fast restore settling time depends on how quickly the internal 10 k $\Omega$  resistors of the AD8232 can drain the capacitors in the high-pass circuit. Smaller capacitor values result in a shorter settling time.

If, by the end of the timing, the saturation condition persists, the cycle repeats. Otherwise, the AD8232 returns to its normal operation. If either of the leads off comparator outputs is indicating that an electrode has been disconnected, the timing circuit is prevented from triggering because it is assumed that no valid signal is present. To disable fast restore, drive the FR pin low or tie it permanently to GND.

#### **LEADS OFF DETECTION**

The AD8232 includes leads off detection. It features ac and dc detection modes optimized for either two- or three-electrode configurations, respectively.

#### **DC Leads Off Detection**

The dc leads off detection mode is used in three-electrode configurations only. It works by sensing when either instrumentation amplifier input voltage is within 0.5 V from the positive rail. In this case, each input must have a pull-up resistor connected to the positive supply. During normal operation, the subject's potential must be inside the common-mode range of the instrumentation amplifier, which is only possible if a third electrode is connected to the output of the right leg drive amplifier.

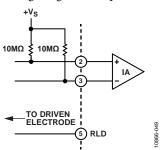


Figure 50. Circuit Configuration for DC Leads Off Detection

Because in dc leads off mode the AD8232 checks each input individually, it is possible to indicate which electrode is disconnected. The AD8232 indicates which electrode is disconnected by setting the corresponding LOD— or LOD+ pin high. To use this mode, connect the AC/ $\overline{DC}$  pin to ground.

#### **AC Leads Off Detection**

The ac leads off detection mode is useful when using two electrodes only (it does not require the use of a driven electrode). In this case, a conduction path must exist between the two electrodes, which is usually formed by two resistors, as shown in Figure 51.

These resistors also provide a path for bias return on each input. Connect each resistor to REFOUT or RLD to maintain the inputs within the common-mode range of the instrumentation amplifier.

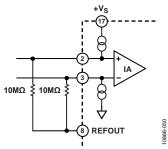


Figure 51. Circuit Configuration for AC Leads Off Detection

The AD8232 detects when an electrode is disconnected by forcing a small 100 kHz current into the input terminals. This current flows through the external resistors from IN+ to IN– and develops a differential voltage across the inputs, which is then synchronously detected and compared to an internal threshold. The recommended value for these external resistors is 10 M $\Omega$ . Low resistance values make the differential drop too low to be detected and lower the input impedance of the amplifier. When the electrodes are attached to the subject, the impedance of this path should be less than 3 M $\Omega$  to maintain the drop below the comparator's threshold.

As opposed to the dc leads off detection mode, the AD8232 is able to determine only that an electrode has lost its connection, not which one. During such an event, the LOD+ pin goes high. In this mode, the LOD– pin is not used and remains in a logic low state. To use the ac leads off mode, tie the  $AC/\overline{DC}$  pin to the positive supply rail.

Note that while REFOUT is at a constant voltage value, using the RLD output as the input bias may be more effective in rejecting common-mode interference.

#### **STANDBY OPERATION**

The AD8232 includes a shutdown pin (SDN) that further enhances the flexibility and ease of use in portable applications

where power consumption is critical. A logic level signal can be applied to this pin to switch to shutdown mode, even when the supply is still on.

Driving the  $\overline{SDN}$  pin low places the AD8232 in shutdown mode and draws less than 200 nA of supply current, offering considerable power savings. To enter normal operation, drive  $\overline{SDN}$  high; when not using this feature, permanently tie  $\overline{SDN}$  to +Vs.

During shutdown operation, the AD8232 is not able to maintain the REFOUT voltage, but it does not drain the REFIN voltage, thereby maintaining this additional conduction path from the supply to ground.

When emerging from a shutdown condition, the charge stored in the capacitors on the high-pass filters can saturate the instrumentation amplifier and subsequent stages. The use of the fast restore feature helps reduce the recovery time and, therefore, minimize on time in power sensitive applications.

#### INPUT PROTECTION

All terminals of the AD8232 are protected against ESD. In addition, the input structure allows for dc overload conditions that are a diode drop above the positive supply and a diode drop below the negative supply. Voltages beyond a diode drop of the supplies cause the ESD diodes to conduct and enable current to flow through the diode. Therefore, use an external resistor in series with each of the inputs to limit current for voltages beyond the supplies. In either scenario, the AD8232 safely handles a continuous 5 mA current at room temperature.

For applications where the AD8232 encounters extreme overload voltages, such as in cardiac defibrillators, use external series resistors and gas discharge tubes (GDT). Neon lamps are commonly used as an inexpensive alternative to GDTs. These devices can handle the application of large voltages but do not maintain the voltage below the absolute maximum ratings for the AD8232. A complete solution includes further clamping to either supply using additional resistors and low leakage diode clamps, such as BAV199 or FJH1100.

As a safety measure, place a resistor between the input pin and the electrode that is connected to the subject to ensure that the current flow never exceeds 10  $\mu A.$  Calculate the value of this resistor to be equal to the supply voltage across the AD8232 divided by 10  $\mu A.$ 

#### **RADIO FREQUENCY INTERFERENCE (RFI)**

Radio frequency (RF) rectification is often a problem in applications where there are large RF signals. The problem appears as a dc offset voltage at the output. The AD8232 has a 15 pF gate capacitance and 10 k $\Omega$  resistors at each input. This forms a low-pass filter on each input that reduces rectification at high frequency (see Figure 52) without the addition of external elements.




Figure 52. RFI Filter Without External Capacitors

For increased filtering, additional resistors can be added in series with each input. They must be placed as close as possible to the instrumentation amplifier inputs. These can be the same resistors used for overload and patient protection.

#### POWER SUPPLY REGULATION AND BYPASSING

The AD8232 is designed to be powered directly from a single 3 V battery, such as CR2032 type. It can also operate from rechargeable lithium-ion batteries, but the designer must take into account that the voltage during a charge cycle may exceed the absolute maximum ratings of the AD8232. To avoid damage to the part, use a power switch or a low power, low dropout regulator, such as ADP150.

In addition, excessive noise on the supply pins can adversely affect performance. As in all linear circuits, bypass capacitors must be used to decouple the chip power supplies. Place a 0.1  $\mu F$  capacitor close to the supply pin. A 1  $\mu F$  capacitor can be used farther away from the part. In most cases, the capacitor can be shared by other integrated circuits. Keep in mind that excessive decoupling capacitance increases power dissipation during power cycling.

#### INPUT REFERRED OFFSETS

Because of its internal architecture, the instrumentation amplifier should be used always with the dc blocking amplifier, shown as HPA in Figure 45.

As described in the Theory of Operation section, the dc blocking amplifier attenuates the input referred offsets present at the inputs of the instrumentation amplifier. However, this is true only when the dc blocking amplifier is used as an integrator. In this configuration, the input offsets from the dc blocking amplifier dominate appear directly at the output of the instrumentation amplifier.

If the dc blocking amplifier is used as a follower instead of its intended function as an integrator, the input referred offsets of the in-amp are amplified by a factor of 100.

#### LAYOUT RECOMMENDATIONS

It is important to follow good layout practices to optimize system performance. In low power applications, most resistors are of a high value to minimize additional supply current. The challenge of using high value resistors is that high impedance nodes become even more susceptible to noise pickup and board parasitics, such as capacitance and surface leakages. Keep all of the connections between high impedance nodes as short as possible to avoid introducing additional noise and errors from corrupting the signal.

To maintain high CMRR over frequency, keep the input traces symmetrical and length matched. Place safety and input bias resistors in the same position relative to each input. In addition, the use of a ground plane significantly improves the noise rejection of the system.

# APPLICATIONS INFORMATION ELIMINATING ELECTRODE OFFSETS

The instrumentation amplifier in the AD8232 is designed to apply gain and to filter out near dc signals simultaneously. This capability allows it to amplify a small ECG signal by a factor of 100 yet reject electrode offsets as large as  $\pm 300$  mV.

To achieve offset rejection, connect an RC network between the output of the instrumentation amplifier, HPSENSE, and HPDRIVE, as shown in Figure 53.

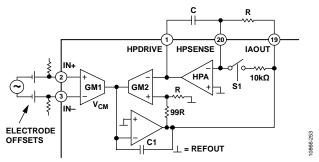


Figure 53. Eliminating Electrode Offsets

This RC network forms an integrator that feeds any near dc signals back into the instrumentation amplifier, thus eliminating the offsets without saturating any node and maintaining high signal gain.

In addition to blocking offsets present across the inputs of the instrumentation amplifier, this integrator also works as a high-pass filter that minimizes the effect of slow moving signals, such as baseline wander. The cutoff frequency of the filter is given by the equation

$$f_{-3dB} = \frac{100}{2\pi RC}$$

where *R* is in ohms and C is in farads.

Note that the filter cutoff is 100 times higher than is typically expected from a single-pole filter. Because of the feedback architecture of the instrumentation amplifier, the typical filter cutoff equation is modified by the gain of 100 of the instrumentation amplifier.

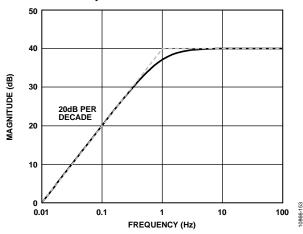


Figure 54. Frequency Response of Single-Pole DC Blocking Circuit

Just like with any high-pass filter with low frequency cutoff, any fast change in dc offset takes a long time to settle. If such change saturates the instrumentation amplifier output, the S1 switch briefly enables the  $10~k\Omega$  resistor path, thus moving the cutoff frequency to

$$f_{-3dB} = \frac{100(R+10^4)}{2\pi RC(10^4)} \tag{1}$$

For values of R greater than 100 k $\Omega$ , the expression in Equation 1 can be approximated by

$$f_{-3dB} = \frac{1}{200\pi C}$$

This higher cutoff reduces the settling time and enables faster recovery of the ECG signal. For more information, see the Fast Restore Circuit section.

#### **HIGH-PASS FILTERING**

The AD8232 can implement higher order high-pass filters. A higher filter order yields better artifact rejection but at a cost of increased signal distortion and more passive components on the printed circuit board (PCB).

#### Two-Pole High-Pass Filter

A two-pole architecture can be implemented by adding a simple ac coupling RC at the output of the instrumentation amplifier, as shown in Figure 55.

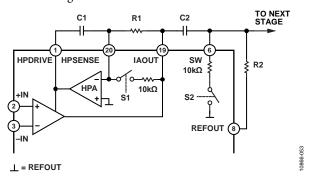


Figure 55. Schematic for a Two-Pole High-Pass Filter

Note that the right side of C2 connects to the SW terminal. Just like S1, S2 reduces the recovery time for this ac coupling network by placing 10  $k\Omega$  in parallel with R2. See the Fast Restore Circuit section for additional details on switch timing and trigger conditions.

Keep in mind that if this passive network is not buffered, it exhibits higher output impedance at the input of a subsequent low-pass filter, such as with Sallen-Key filter topologies. Careful component selection can yield good results without a buffer. See the Low-Pass Filtering and Gain section for additional information on component selection.

#### **Additional High-Pass Filtering Options**

In addition to the topologies explained in the previous sections, an additional pole may be added to the dc blocking circuit for additional rejection of low frequency signals. This configuration is shown in Figure 56.

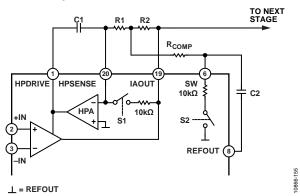


Figure 56. Schematic for an Alternative Two-Pole High-Pass Filter

An extra benefit of this circuit topology is that it allows lower cutoff frequency with lower R and C values and the resistor, R<sub>COMP</sub>, can be used to control the Q of the filter to achieve narrow band-pass filters (for heart rate detection) or maximum passband flatness (for cardiac monitoring).

With this topology, the filter attenuation reverts to a single pole roll off at very low frequencies. Because the initial roll off was 40 dB per decade, this reversion to 20 dB per decade has little impact on the ability of the filter to reject out-of-band low frequency signals.

The designer may choose different values to achieve the desired filter performance. To simplify the design process, use the following recommendations as a starting point for component value selection.

$$R1 = R2 \ge 100 \text{ k}\Omega$$

C1 = C2

 $R_{COMP} = 0.14 \times R1$ 

The cutoff frequency is located at

$$f_C = \frac{10}{2\pi\sqrt{R1\ C1\ R2\ C2}}$$

The selection of  $R_{\text{COMP}}$  to be 0.14 times the value of the other two resistors optimizes the filter for a maximally flat pass band. Reduce its value to increase the Q and, consequently, the peaking of the filter. Keep in mind that a very low value of  $R_{\text{COMP}}$  can result in an unstable circuit. The selection of values based on these criteria result in a transfer function similar to the one shown in Figure 58.

When additional low frequency rejection is desired, a high-order high-pass filter can be implemented by adding an ac coupling network at the output of the instrumentation amplifier, as shown in Figure 57. The SW terminal is connected to the ac coupling network to obtain the best settling time response when fast restore engages.

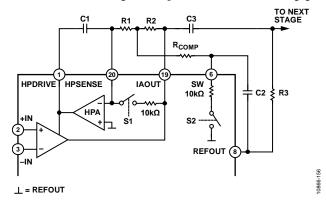


Figure 57. Schematic for a Three-Pole High-Pass Filter

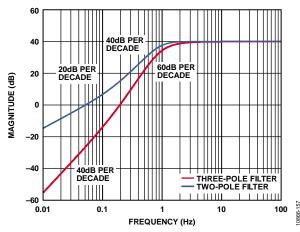


Figure 58. Frequency Response of Circuits in Figure 56 and Figure 57

Careful analysis and adjustment of all of the component values in practice is recommended to optimize the filter characteristics. A useful hint is to reduce the value of  $R_{\text{COMP}}$  to increase the peaking of the active filter to overcome the additional roll off introduced by the ac coupling network. Proper adjustment can yield the best pass-band flatness.

The design of the high-pass filter involves tradeoffs between signal distortion, component count, low frequency rejection, and component sizes. For example, a single-pole high-pass filter results in the least distortion to the signal, but its rejection of low-frequency artifacts is the lowest Table 4 compares the recommended filtering options.

Table 4. Comparison of High-Pass Filtering Options

	1 0 0 1								
	Filter Order	Component Count	Low Frequency Rejection	Capacitor Sizes/Values	Signal Distortion <sup>1</sup>	Output Impedance <sup>2</sup>			
Figure 53	1	2	Good	Large	Low	Low			
Figure 55	2	4	Better	Large	Medium	Higher			
Figure 56	2	5	Better	Smaller	Medium	Low			
Figure 57	3	7	Best	Smaller	Highest	Higher			

<sup>&</sup>lt;sup>1</sup>For equivalent corner frequency location.

<sup>&</sup>lt;sup>2</sup> Output impedance refers to the drive capability of the high-pass filter before the low-pass filter. Low output impedance is desirable to allow flexibility in the selection of values for a low-pass filter, as explained in the Low-Pass Filtering and Gain section.

#### **LOW-PASS FILTERING AND GAIN**

The AD8232 includes an uncommitted op amp that can be used for extra gain and filtering. For applications that do not require a high-order filter, a simple RC low-pass filter should suffice, and the op amp can buffer or further amplify the signal.




Figure 59. Schematic for a Single-Pole Low-Pass Filter and Additional Gain

Applications that require a steeper roll off or a sharper cut off, a Sallen-Key filter topology can be implemented, as shown in Figure 60.

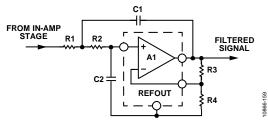


Figure 60. Schematic for a Two-Pole Low-Pass Filter

The following equations describe the low-pass cut off frequency, gain, and Q:

$$f_C = 1/(2\pi\sqrt{(R1\ C1\ R2\ C2)})$$

$$Gain = 1 + R3/R4$$

$$Q = \frac{\sqrt{R1 \times C1 \times R2 \times C2}}{R1 \times C2 + R2 \times C2 + R1 \times C1(1 - Gain)}$$

Note that changing the gain has an effect on Q and vice versa. Common values for Q are 0.5 to avoid peaking or 0.7 for maximum flatness and sharp cut off. A high value of Q can be used in narrow-band applications to increase peaking and the selectivity of the band-pass filter.

A common design procedure is to set R1 = R2 = R and C1 = C2 = C, which simplifies the expressions for cutoff frequency and Q to

$$f_C = 1/(2\pi RC)$$

$$Q = \frac{1}{3 - Gain}$$


Note that Q can be controlled by setting the gain with R3 and R4; however, this limits the gain to be less than 3. For gain values equal to or greater than 3, the circuit becomes unstable. A simple modification that allows higher gains is to make the value of C2 at least four times larger than C1.

It is important to note that these design equations only hold true in the case that the output impedance of the previous stage is much lower than the input impedance of the Sallen-Key filter. This is not the case when using an ac coupling network between the instrumentation amplifier output and the input of the lowpass filter without a buffer.

To connect these two filtering stages properly without a buffer, make the value of R1 at least ten times larger than the resistor of the ac coupling network (labeled as R2 in Figure 55).

#### **DRIVING ANALOG-TO-DIGITAL CONVERTERS**

The ability of AD8232 to drive capacitive loads makes it ideal to drive an ADC without the need for an additional buffer. However, depending on the input architecture of the ADC, a simple low-pass RC network may be required to decouple the transients from the switched-capacitor input typical of modern ADCs. This RC network also acts as an additional filter that can help reduce noise and aliasing. Follow the recommended guidelines from the ADC data sheet for the selection of proper R and C values.



#### **DRIVEN ELECTRODE**

A driven lead (or reference electrode) is often used to minimize the effects of common-mode voltages induced by the power line and other interfering sources. The AD8232 extracts the common-mode voltage from the instrumentation amplifier inputs and makes it available through the RLD amplifier to drive an opposing signal into the patient. This functionality maintains the voltage between the patient and the AD8232 at a near constant, greatly improving the common-mode rejection ratio.

As a safety measure, place a resistor between the RLD pin and the electrode connected to the subject to ensure that current flow never exceeds 10  $\mu$ A. Calculate the value of this resistor to be equal to the supply voltage across the AD8232 divided by 10  $\mu$ A.

The AD8232 implements an integrator formed by an internal  $150~\mathrm{k}\Omega$  resistor and an external capacitor to drive this electrode. Choice of the integrator capacitor is a tradeoff between line rejection capability and stability. The capacitor should be small to maintain as much loop gain as possible, around 50 Hz and 60 Hz, which are typical line frequencies. For stability, the gain of the integrator should be less than unity at the frequency of any other poles in the loop, such as those formed by the patient's capacitance and the safety resistors. The suggested application circuits use a 1 nF capacitor, which results in a loop gain of about 20 at line frequencies, with a crossover frequency of about 1 kHz.

In a two-lead configuration, the RLD amplifier can be used to drive the bias current resistors on the inputs. Although not as effective as a true driven electrode, this configuration can provide some common-mode rejection improvement if the sense electrode impedance is small and well matched.

## **APPLICATION CIRCUITS**

#### **HEART RATE MEASUREMENT NEXT TO THE HEART**

For wearable exercise devices, the AD8232 is typically placed in a pod near the heart. The two sense electrodes are placed underneath the pectoral muscles; no driven electrode is used. Because the distance from the heart to the AD8232 is small, the heart signal is strong and there is less muscle artifact interference.

In this configuration, space is at a premium. By using as few external components as possible, the circuit in Figure 62 is optimized for size.

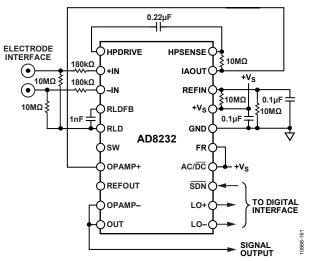


Figure 62. Circuit for Heart Rate Measurement Next to Heart

A shorter distance from the AD8232 to the heart makes this application less vulnerable to common-mode interference. However, since RLD is not used to drive an electrode, it can be used to improve the common-mode rejection by maintaining the midscale voltage through the  $10\ M\Omega$  bias resistors.

A single-pole high-pass filter is set at 7 Hz, and there is no low-pass filter. No gain is used on the output op amp thereby reducing the number of resistors for a total system gain of 100.

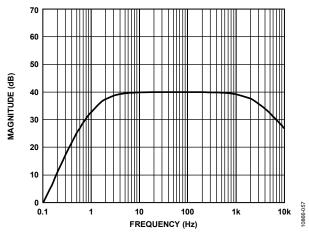


Figure 63. Frequency Response for HRM Next to Heart Circuit

The input terminals in this configuration use two 180 k $\Omega$  resistors, to protect the user from fault conditions. Two 10 M $\Omega$  resistors provide input bias. Use higher values for electrodes with high output impedance, such as cloth electrodes.

The schematic also shows two 10  $M\Omega$  resistors to set the midscale reference voltage. If there is already a reference voltage available, it can be driven into the REFIN input to eliminate these two 10  $M\Omega$  resistors.

# **EXERCISE APPLICATION: HEART RATE MEASURED AT THE HANDS**

In this application, the heart rate signal is measured at the hands with stainless steel electrodes. The user's arm and upper body movement create large motion artifacts and the long lead length makes the system susceptible to common-mode interference. A very narrow band-pass characteristic is required to separate the heart signal from the interferers.

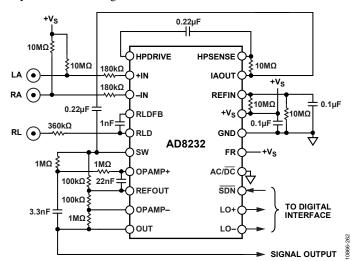


Figure 64. Circuit for Heart Rate Measurement at Hands

The circuit in Figure 64 uses a two-pole high-pass filter set at 7 Hz. A two-pole low-pass filter at 24 Hz follows the high-pass filters to eliminate any other artifacts and line noise.

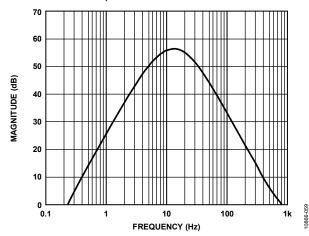


Figure 65. Frequency Response for HRM Circuit Taken at the Hands

The overall narrow-band nature of this filter combination distorts the ECG waveform significantly. Therefore, it is only suitable to determine the heart rate, and not to analyze the ECG signal characteristics.

The low-pass filter stage also includes a gain of 11, to bring the total system gain close to 1100 (note that the filter roll off prevents the maximum gain from reaching this value). Because the ECG signal is measured at the hands, it is weaker than when measured closer to the heart.

The RLD circuit drives to the third electrode, which can also be located at the hands, to cancel common-mode interference.

#### **CARDIAC MONITOR CONFIGURATION**

This configuration is designed for monitoring the shape of the ECG waveform. It assumes that the patient remains relatively still during the measurement, and therefore, motion artifacts are less of an issue.

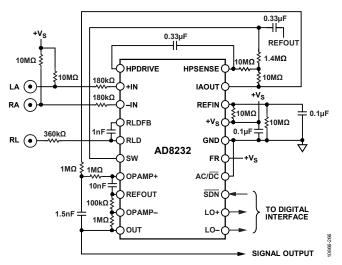


Figure 66. Circuit for ECG Waveform Monitoring

To obtain an ECG waveform with minimal distortion, the AD8232 is configured with a 0.5 Hz two-pole high-pass filter followed by a two-pole, 40 Hz, low-pass filter. A third electrode is driven for optimum common-mode rejection.

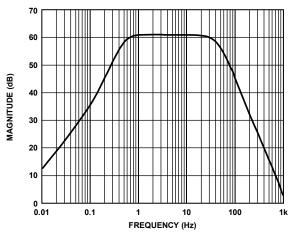


Figure 67. Frequency Response of Cardiac Monitor Circuit

In addition to 40 Hz filtering, the op amp stage is configured for a gain of 11, resulting in a total system gain of 1100. To optimize the dynamic range of the system, the gain level is adjustable, depending on the input signal amplitude (which may vary with electrode placement) and ADC input range.

#### PORTABLE CARDIAC MONITOR WITH ELIMINA-TION OF MOTION ARTIFACTS

The circuit in Figure 68 shows an implementation of a battery-powered embedded system for monitoring heart rate in applications where the patient engages in moderate activity, such as with a Holter monitor. The AD8232 uses a three-electrode patient interface and implements a two-pole high-pass filter with a cutoff at 0.3 Hz, and a two-pole low-pass filter with a cutoff frequency of 37 Hz. The total signal gain in the pass band is 400. The fully conditioned signal is sampled by the sigma-delta ADC integrated on the low power microcontroller, ADuCM360. The wide dynamic range of this ADC provides flexibility to reduce the signal gain to avoid saturation, depending on electrode placement.

Because the pass band is relatively wide for ambulatory applications, the ADXL346 accelerometer signal can be used to further minimize the noise introduced by the motion of the patient. Moreover, the microcontroller can use the motion information to monitor inactivity and to issue a system shutdown to save battery power.

The low dropout regulator ensures that the maximum of 3 V is not exceeded, especially during charge cycles of the battery, which can be a lithium-ion cell.

In this application, the ADuCM360 uses its Port 0 to perform DMA transfers to the host communication interface or to an on-board memory, if recording the waveform for later transfer. However, in any particular application, this port should be used for the busiest interface to minimize CPU cycles and maintain low power operation.

Note that this circuit is shown to demonstrate the capabilities of AD8232 and other system components. It is not a complete system design and additional effort must be made to ensure compliance with medical safety guidelines from regulatory agencies.

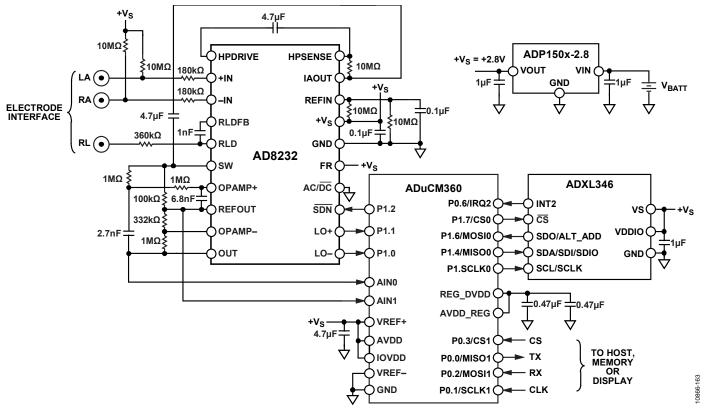


Figure 68. Low Power Portable Cardiac Monitor

## PACKAGING AND ORDERING INFORMATION

#### **OUTLINE DIMENSIONS**

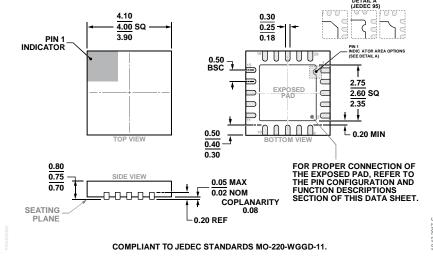


Figure 69. 20-Lead Lead Frame Chip Scale Package [LFCSP] 4 mm × 4 mm Body and 0.75 mm Package Height (CP-20-8) Dimensions shown in millimeters

#### **ORDERING GUIDE**

Model <sup>1</sup>	Temperature Range	Package Description	Package Option
AD8232ACPZ-R7	-40°C to +85°C	20-Lead Lead Frame Chip Scale Package [LFCSP]	CP-20-8
AD8232ACPZ-RL	-40°C to +85°C	20-Lead Lead Frame Chip Scale Package [LFCSP]	CP-20-8
AD8232ACPZ-WP	-40°C to +85°C	20-Lead Lead Frame Chip Scale Package [LFCSP]	CP-20-8
AD8232-EVALZ		Evaluation Board	

 $<sup>^{1}</sup>$  Z = RoHS Compliant Part.

**NOTES**