Lucis NuBryte

Extended Product Manual

Document Version 1.1

Product Description

NuBryte is the brand name for a connected home management console developed by Lucis Technologies.

The product does not require a qualified electrician for installation and is completely DIY.

It replaces US standard 1 and 2 gang light switches in the home to help user control their lighting as well as provide additional features via it's touch-screen interface, including:

- Digital dimming
- Ambient light adjustment
- LearningLights™ behavioural monitoring
- Subscription free security including real time video surveillance and push alerts
- Family calendars, weather alerts and more.

NuBryte runs on the standard WiFi protocol and can communicate with other NuBryte in the home if more than one is installed to increase security coverage and act as an intercom.

NuBryte will initially be exclusive to the US market and due for release Summer 2015.

Package Includes

- 1 X NuBryte LCD Display Unit
- 1 X NuBryte Base Unit
- 1 X NuBryte Base Cover
- 8 X Wire nuts
- 8 X Screws
- 1 X Quick Start Guide
- 2 X Security window stickers
- 1 X Sheet wire labels

(Single Gang: 4 x Wire nuts, 4 x Screws)



System Requirements

Wireless (WiFi) Router

Neutral wire

Replace Single / Double gang switch (Not to be installed with a 3-way or Multiway Switch!)

For mobile connectivity, ensure your phone runs on: Android 4.0 or higher, or IOS V7 or higher

Compatibility

NuBryte operates with most types of light bulbs. To ensure optimal Advanced Lighting performance, we suggest using:

Dimmable LED (≤150W)

Dimmable CFL (≤150W)

Incandescent (≤600W)

Quick Install Guide


(!) Risk of Electrical Shock. Please thoroughly read instructions and safety warnings before installing.




Turn power OFF at the circuit breaker.




Remove your old switch. Attach the provided labels to the corresponding wires to help you remember which were wired together. Refer to the color key below for help identifying the wires:

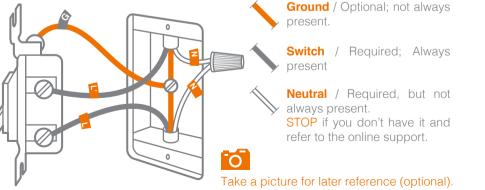

Install the NuBryte Base Unit, using the labels to identify the correct wires to twist together with enclosed wire nuts.

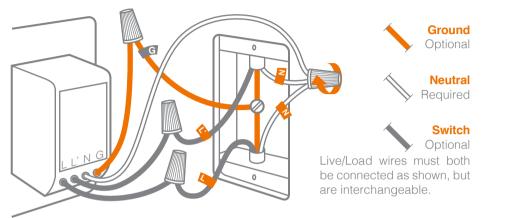


4 Screw the Base Unit into your home's existing junction box, using the provided screws. Make sure all of the wires are neatly tucked into the box and enclosed behind the Base Unit. Use the built-in level to ensure the unit is straight.

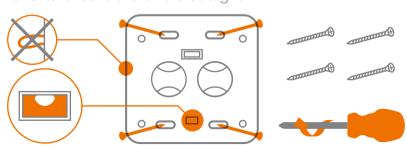

5 Attach the Display Unit

Align the four pegs in each corner on the back of the LCD Display Unit with the corresponding holes on the Base Unit (Match A with A1). Once aligned, press the LCD Display Unit onto the Base Unit until you hear a click.

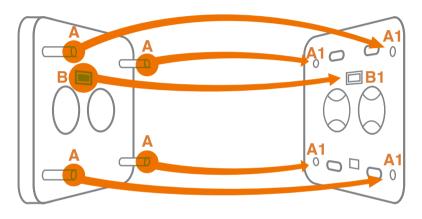

6 Turn ON power
Turn ON power at the circuit breaker



Download the **NuBryte** App and **install** on your smart phone.









- 8 Log onto www.nubryte.com to register a free family account for the whole family. This account is to make sure that only you and your family members have access to the NuBryte system.
- 9 Follow the setup wizard on the device to get started with the NuBryte system.
- Go online at www.nubryte.com to see our Master User Guide to learn more about NuBryte and it's features.
- + You could also take off your LCD Display Unit and operate your lighting manually with Base Unit. Attach Base Cover to the Base Unit to prevent dust and keep aesthetic appearance.

Limited Warranty

Lucis Technologies warrants NuBryte products purchased in the U.S. for one year. For full warranty information please visit: www.nubryte.com

Important Notes & Safety

Your safety is important. Please read these notes before installing.

CAUTION: Use only with permanently-installed lighting fixtures. To avoid overheating and possible damage to other equipment, do not use to control receptacles, fluorescent lighting fixtures, motor-driven appliances, or transformer-supplied appliances.

Installations should be performed in accordance with all national and local electrical codes. This product should not be installed on circuits where multiway switches exist (two or more switches controlling the same light). NuBryte requires a neutral wire.

If you are unsure or have questions about the installation, please visit **www.nubryte.com** or seek the advice of a qualified electrician.

If you notice anything unusual about the electricity supply to your light switch, such as loose wires, exposed cabling, burn marks, holes in the insulating materials or damage to the electric wires, STOP IMMEDIATELY and seek the advice of a qualified electrician.

NuBryte Quick Start Guide

User Interface Manual

Lighting (Primary Mode)

- **1**. Default screen displays main light bulb controls; tap once for on/ off and slide inwards/ outward to dim and brighten bulb(s).
- **2.** If two lighting fixtures are wired a switching button is available on-screen to switch between fixture A and B; tap the button once to alternate between controls for fixture A and B.
- **3**. Control all fixtures connected to NuBryte, whether hard-wired or WiFi connected, with the Control Panel button; tap once to display all fixtures in range (this may take a few seconds to load) and tap each control button once to turn a light on/ off. Press "Back" to revert to the default screen.

(**Please note,** different lighting control options can be found within the 'Lighting' settings and their operation may differ slightly from the description above.)

Temperature & Weather

- **1**. The first screen shows the current room temperature & humidity level. This information is provided by sensors built into the NuBryte console.
- **2**. Swipe left to the second screen to show the current outdoor weather conditions. The actual temperature and current conditions in the form of an icon are provided along with a "Feels like" value based on a number of factors. This data is provided by a development partner and updated in real time throughout the day.
- 3. The next screen gives a breakdown of the weather forecast for the next 24 hours, detailing how the conditions are expected to change in a list format.
- **4** Lastly a 5 day weather forecast is provided, showing the expected high and low temperature values and weather conditions for each day.

(**Please note**, NuBryte will push weather-related alerts to you when appropriate to inform you of unexpected changes in weather. These alerts will trigger as you pass the console at home and can be dismissed by swiping left on the touchscreen. However, NuBryte has not been designed to act as an early warning system for extreme weather events, i.e. hurricanes, tornadoes, etc and so must not be used as such.)

Time Management

- 1. The default screen displays the current time in either 12 or 24 hour format (based on your preferred setting) and todays date.
- 2. The second screen features a programmable alarm. Touch the alarm numerals and swipe up and down to set and select the days you would like the alarm to repeat.
- 3. The last screen is a timer feature that will countdown from the set value in hours/minutes/ seconds. Touch the timer numerals and swipe up and down to set. Press once to start and again to pause. Once pause select to resume the timer or reset it to zero.

(**Please note**, NuBryte's iOS & Android APP includes a shared family calendar feature that allows you to set up events and share them with others. If an event has been set-up and is due, it will be displayed on the NuBryte console at the desired time to notify family members at home and on their cell phones when they are out.)

Energy Monitoring

- **1** NuBryte monitors how much energy the lighting fixtures that are connected to the system consume. This includes both hard-wired fixtures and WiFi connected fixtures.
- **2** Each day's consumptions is represented by a circular disc. The default units are kWh, represented in the kWh consumed and the average kWh normally consumed.
- 3. Tap the disc once to display the estimated cost of this consumption in \$USD.
- **4**. You can quickly see if you have consumed more than your average consumption by noting the size of the disc. If the outer circle is large, then you have consumed more than normal, if smaller then you have made a saving.

NuBryte Settings

- 1 General Settings:
- A. Volume: adjust the device volume size
- B. Choose room type: living room, bedroom, kitchen, bathroom, nursery
- C. Give your device a name
- 2 Network Settings: Select network from a list found in range. Next enter your network password. Use the "Show Password" option to check for any typing errors.

3 Lighting:

- A. Choose one of the 3 light control design options available.
- **B**. Enable or disable the LearningLights[™] smart lighting mode.
- **C**. Confirm whether or not the bulbs in the lighting fixtures hard-wired to your NuBryte console are dimmable or not.
- **D**. If they are dimmable, they need to be calibrated with the controller. Slide the bar just beyond the point where they stop flickering. Conduct this process twice if two fixtures are hard-wired.
- **E**. Choose to enable or disable lighting notifications, e.g. push messages that ask you if you want to turn off lights you have left on.
- **4. Security:** Security settings allow you to modify the set pin number used to enable/ disable security. To do this first enter the existing pin code, followed by the desired new code. Enter the new code again to confirm and complete the process.

5 Time:

- **A.** Set the time and choose between 12 and 24 hour time formats.
- **B.** Select the clock style, with traditional quartz clock and digital clock types available.
- **C.** Select the timer style, choosing between either a segmented timer or digital counter.

6. Appearance:

- **A.** Select what type of information you want to be displayed during the Screen Saver (activated when more than 1m away from NuBryte but within sight). Choose between Time, Weather and Photo Slideshow or a combination of all three options. Photos can be uploaded via the NuBryte iOS & Android APP.
- B. Adjust the backlight brightness of the NuBryte console.

7. Setup Wizard:

- **A.** Select your WiFi network
- **B.** Enter your WIFI Password
- **C.** Confirm if your bulbs are dimmable
- **D.** Calibrate your dimmable bulbs.
- **E.** Select room type
- **F.** Give your device a name
- G. Select a time zone
- **8. Device Information:** Displays system version, MAC address and other information.

Touch-sensitive Shortcut Buttons

- 1. Lighting Control button: Tap to switch directly to the lighting control interface
- 2. Intercom button: Choose a room you want to speak to then press and hold the relevant icon whilst speaking to communicate.
- 3. Main Menu button: Takes you to the console menu.
- **4. Security Key:** Tap to enable/ disable the security mode. A pin code will be required for interaction.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Information and Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.