

Unit 3

Basic Computer Organization and Design

Introduction

We introduce here a basic computer whose operation can be specified by the register transfer statements. Internal organization of the computer is defined by the sequence of microoperations it performs on data stored in its registers. Every different processor type has its own design (different registers, buses, microoperations, machine instructions, etc). Modern processor is a very complex device. It contains:

- Many registers
- Multiple arithmetic units, for both integer and floating point calculations
- The ability to pipeline several consecutive instructions for execution speedup.

However, to understand how processors work, we will start with a simplified processor model. M. Morris Mano introduces a simple processor model; he calls it a “Basic Computer”. The Basic Computer has two components, a processor and memory


- The memory has 4096 words in it
 - $4096 = 2^{12}$, so it takes 12 bits to select a word in memory
- Each word is 16 bits long

Instruction code and Stored program organization

Question: What do you understand by stored program organization?

Question: What is instruction and instruction format?

Instruction code is a group of bits that instructs the computer to perform a specific operation. It is usually divided into parts. Most basic part is operation (**operation code**). Operation code is group of bits that defines operations as add, subtract, multiply, shift, complement etc. The instructions of a program, along with any needed data are stored in memory. The CPU reads the next instruction from memory. It is placed in an *Instruction Register* (IR). Control circuitry in control unit then translates the instruction into the sequence of microoperations necessary to implement it. Stored program concept is the ability to store and execute instructions.

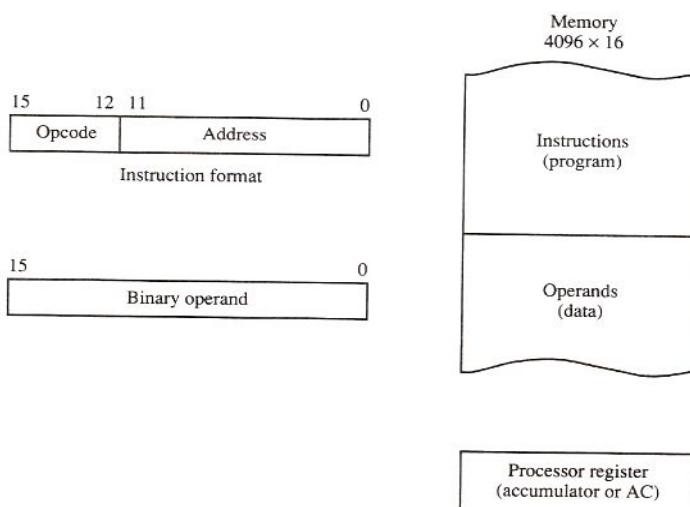


Instruction Format of Basic Computer

A computer instruction is often divided into two parts

- An *opcode* (Operation Code) that specifies the operation for that instruction
- An *address* that specifies the registers and/or locations in memory to use for that operation

In the Basic Computer, since the memory contains 4096 ($= 2^{12}$) words, we need 12 bit to specify the memory address that is used by this instruction. In the Basic Computer, bit 15 of the instruction specifies the *addressing mode* (0: direct addressing, 1: indirect addressing). Since the memory words, and hence the instructions, are 16 bits long, that leaves 3 bits for the instruction's opcode.




(a) Instruction format


Addressing Modes

The address field of an instruction can represent either

- Direct address: the address operand field is effective address (the address of the operand) or,
- Indirect address: the address in operand field contains the memory address where effective address resides.

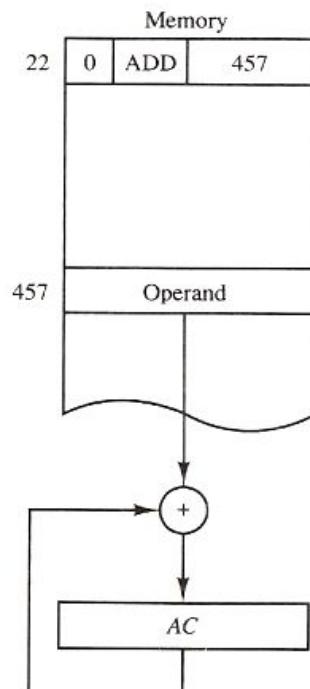

(b) Direct address

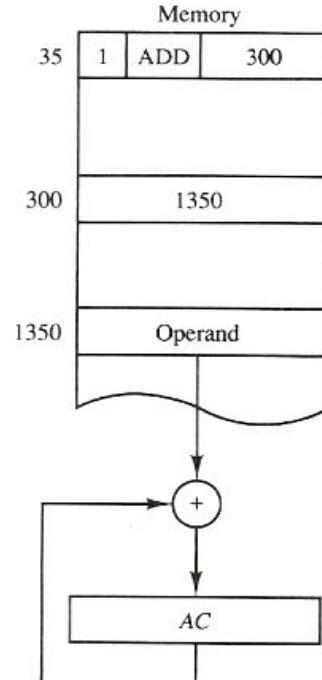

(c) Indirect address

Effective Address (EA): The address, where actual data resides is called effective address.

Basic Computer Registers

Computer instructions are normally stored in the consecutive memory locations and are executed sequentially one at a time. Thus computer needs processor registers for manipulating data and holding memory address which are shown in the following table:

Symbol	Size	Register Name	Description
DR	16	Data Register	Holds memory operand
AR	12	Address Register	Holds address for memory
AC	16	Accumulator	Processor register
IR	16	Instruction Register	Holds instruction code
PC	12	Program Counter	Holds address of instruction
TR	16	Temporary Register	Holds temporary data
INPR	8	Input Register	Holds input character
OUTR	8	Output Register	Holds output character

Since the memory in the Basic Computer only has 4096 ($=2^{12}$) locations, PC and AR only needs 12 bits. Since the word size of Basic Computer only has 16 bit, the DR, AC, IR and TR needs 16 bits. The Basic Computer uses a very simple model of input/output (I/O) operations

- Input devices are considered to send 8 bits of character data to the processor
- The processor can send 8 bits of character data to output devices

The Input Register (INPR) holds an 8 bit character gotten from an input device and the Output Register (OUTR) holds an 8 bit character to be sent to an output device.

Common Bus system of Basic computer

The registers in the Basic Computer are connected using a bus. This gives a savings in circuitry over complete connections between registers. Three control lines, S₂, S₁, and S₀ control which register the bus selects as its input.

S ₂ S ₁ S ₀	Register
0 0 0	X (nothing)
0 0 1	AR
0 1 0	PC
0 1 1	DR
1 0 0	AC
1 0 1	IR
1 1 0	TR
1 1 1	Memory

Either one of the registers will have its load signal activated, or the memory will have its read signal activated which will determine where the data from the bus gets loaded. The 12-bit registers, AR and PC, have 0's loaded onto the bus in the high order 4 bit positions. When the 8-bit register OUTR is loaded from the bus, the data comes from the low order 8 bits on the bus.

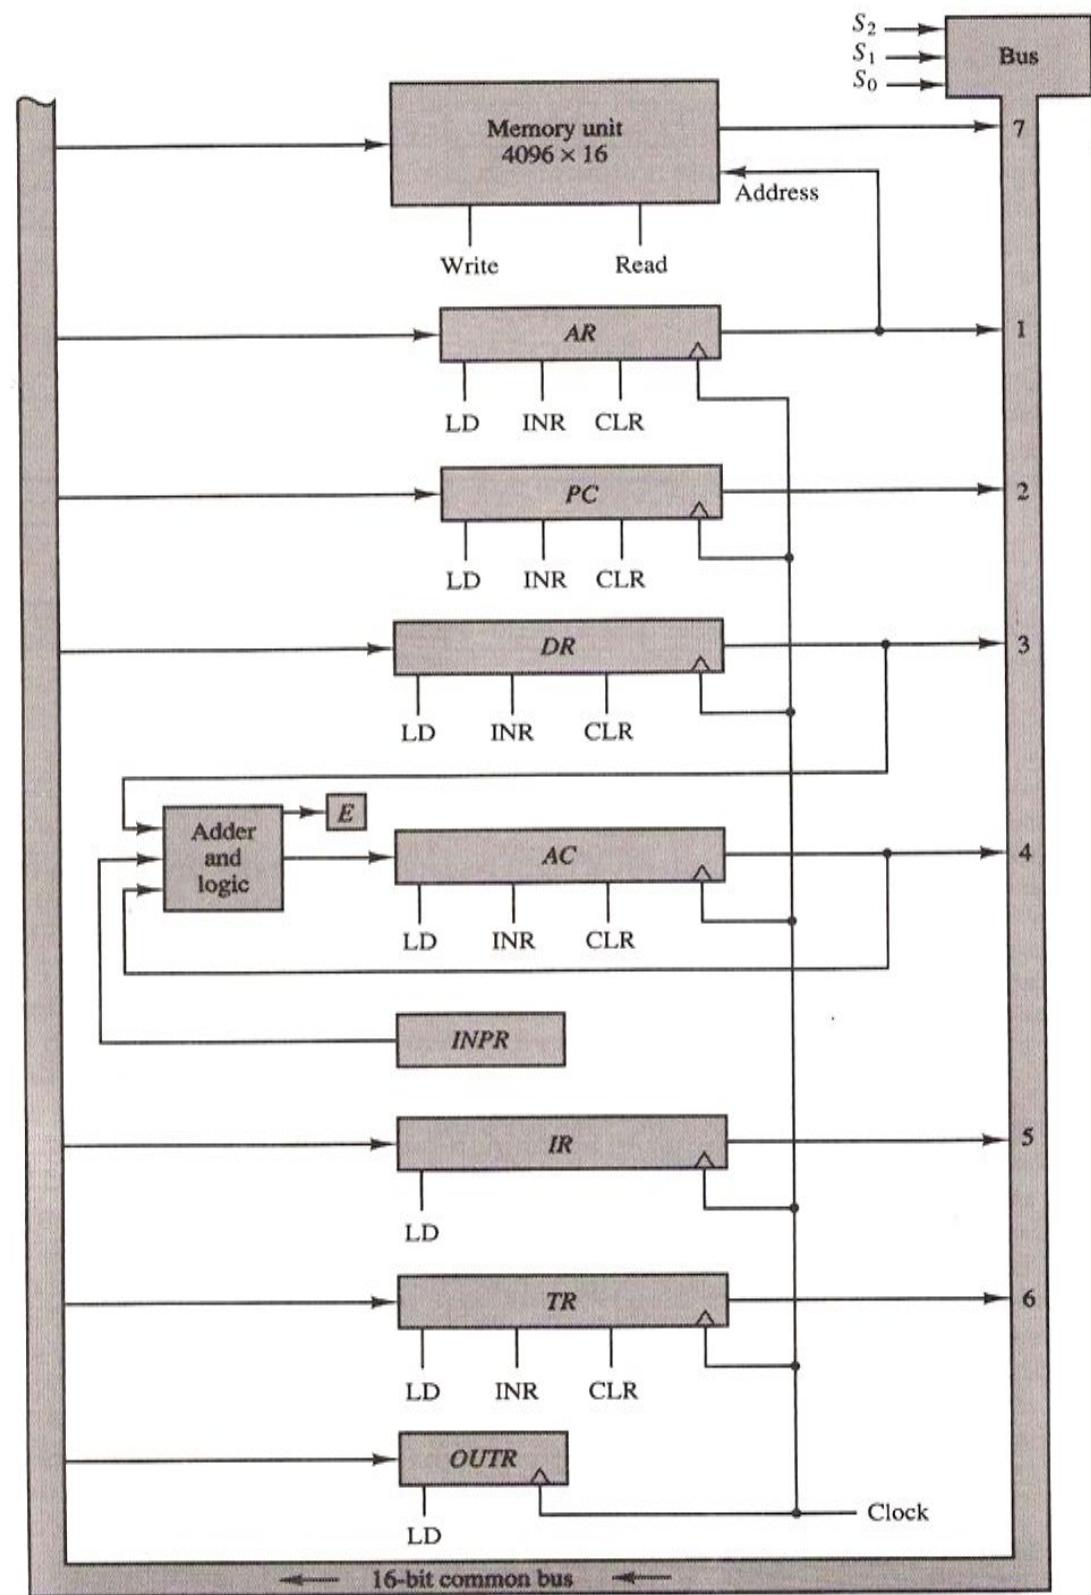


Fig: Basic computer register connected in a common bus.

Instruction Formats of Basic Computer

Question: What are different instruction format used basic computer?

Question: What is instruction set completeness? Is instruction set of basic computer complete?

The basic computer has 3 instruction code formats. Type of the instruction is recognized by the computer control from 4-bit positions 12 through 15 of the instruction.

Memory-Reference Instructions (OP-code = 000 ~ 110)

15 14	12 11	0
I	Opcode	Address

Symbol	Hex Code		Description
	I = 0	I = 1	
AND	0xxx	8xxx	AND memory word to AC
ADD	1xxx	9xxx	Add memory word to AC
LDA	2xxx	Axxx	Load AC from memory
STA	3xxx	Bxxx	Store content of AC into memory
BUN	4xxx	Cxxx	Branch unconditionally
BSA	5xxx	Dxxx	Branch and save return address
ISZ	6xxx	Exxx	Increment and skip if zero

Register-Reference Instructions (OP-code = 111, I = 0)

15	12 11	0
0	1	1 1 Register operation

CLA	7800	Clear AC
CLE	7400	Clear E
CMA	7200	Complement AC
CME	7100	Complement E
CIR	7080	Circulate right AC and E
CIL	7040	Circulate left AC and E
INC	7020	Increment AC
SPA	7010	Skip next instr. if AC is positive
SNA	7008	Skip next instr. if AC is negative
SZA	7004	Skip next instr. if AC is zero
SZE	7002	Skip next instr. if E is zero
HLT	7001	Halt computer

Input-Output Instructions (OP-code = 111, I = 1)

15	12 11	0
1	1	1 1 I/O operation

INP	F800	Input character to AC
OUT	F400	Output character from AC
SKI	F200	Skip on input flag
SKO	F100	Skip on output flag
ION	F080	Interrupt on
IOF	F040	Interrupt off

Instruction Set Completeness

An instruction set is said to be complete if it contains sufficient instructions to perform operations in following categories:

Functional Instructions

- Arithmetic, logic, and shift instructions
- Examples: ADD, CMA, INC, CIR, CIL, AND, CLA

Transfer Instructions

- Data transfers between the main memory and the processor registers
- Examples: LDA, STA

Control Instructions

- Program sequencing and control
- Examples: BUN, BSA, ISZ

Input/output Instructions

- Input and output
- Examples: INP, OUT

Instruction set of Basic computer is complete because:

- ADD, CMA (complement), INC can be used to perform addition and subtraction and CIR (circular right shift), CIL (circular left shift) instructions can be used to achieve any kind of shift operations. Addition subtraction and shifting can be used together to achieve multiplication and division. AND, CMA and CLA (clear accumulator) can be used to achieve any logical operations.
- LDA instruction moves data from memory to register and STA instruction moves data from register to memory.
- The branch instructions BUN, BSA and ISZ together with skip instruction provide the mechanism of program control and sequencing.
- INP instruction is used to read data from input device and OUT instruction is used to send data from processor to output device.

Instruction Processing & Instruction Cycle (of Basic computer)

Control Unit

Control unit (CU) of a processor translates from machine instructions to the control signals for the microoperations that implement them. There are two types of control organization:

Hardwired Control

- CU is made up of sequential and combinational circuits to generate the control signals.
- If logic is changed we need to change the whole circuitry
- Expensive
- Fast

Microprogrammed Control

- A control memory on the processor contains microprograms that activate the necessary control signals
- If logic is changed we only need to change the microprogram
- Cheap
- Slow

NOTE: Microprogrammed control unit will be discussed in next chapter.

Question: How basic computer translates machine instructions to control signals using hardwired control? Explain with block diagram. (OR Discuss hardwired control unit of basic computer?)

The block diagram of a hardwired control unit is shown below. It consists of two decoders, a sequence counter, and a number of control logic gates.

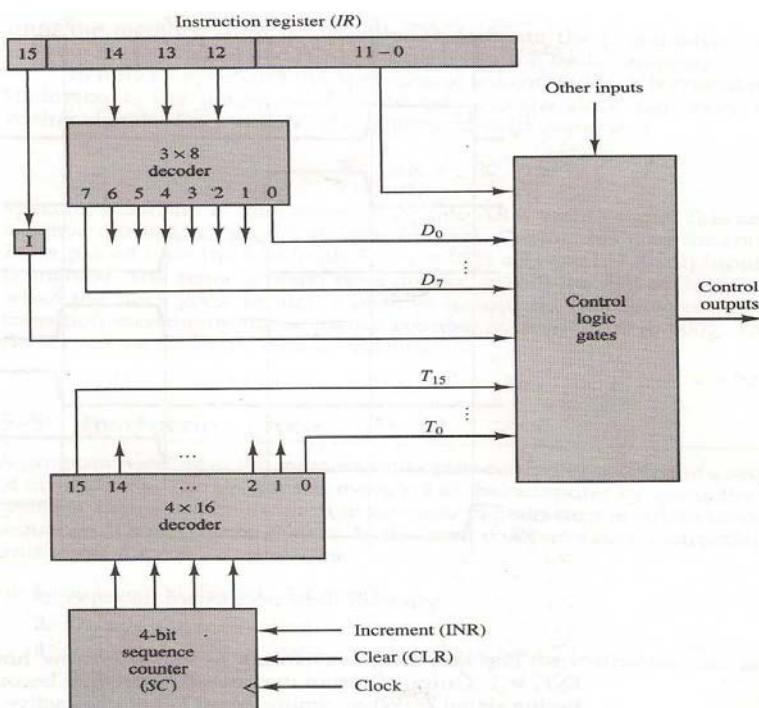


Fig: Control unit of a basic computer

Mechanism:


- An instruction read from memory is placed in the instruction register (IR) where it is decoded into three parts: I bit, **operation code** and bits **0 through 11**.
- The operation code bit is decoded with 3×8 decoder producing 8 outputs D_0 through D_7 .
- Bit 15 of the instruction is transferred to a flip-flop I.
- And operand bits are applied to control logic gates.
- The 16 outputs of 4-bit sequence counter (SC) are decoded into 16 timing signals T_0 through T_{15} .

This means instruction cycle of basic computer can not take more than 16 clock cycles.

Timing signals

- Generated by 4-bit sequence counter and 4×16 decoder.
- The SC can be incremented or cleared.
- Example: $T_0, T_1, T_2, T_3, T_4, T_0, T_1 \dots$

Assume: At time T_4 , SC is cleared to 0 if decoder output D_3 is active: $D_3 T_4: SC \square 0$

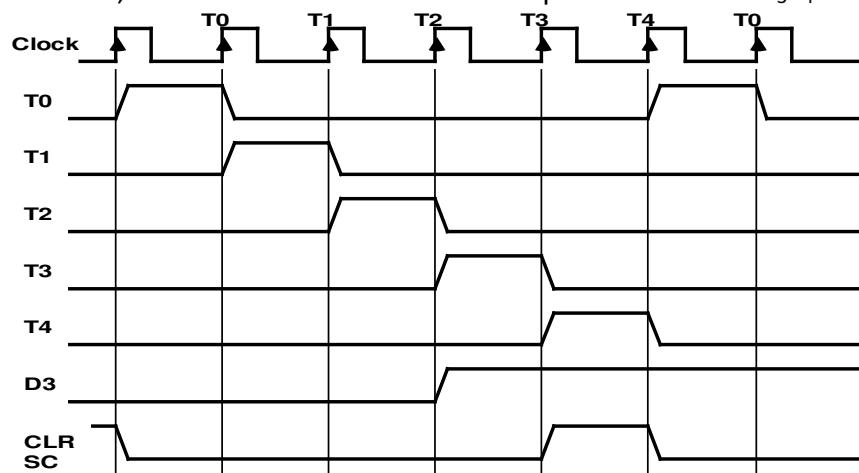

Instruction cycle

In Basic Computer, a machine instruction is executed in the following cycle:

1. Fetch an instruction from memory
2. Decode the instruction
3. Read the effective address from memory if the instruction has an indirect address
4. Execute the instruction

Upon the completion of step 4, control goes back to step 1 to fetch, decode and execute the next instruction. This process is continued indefinitely until HALT instruction is encountered.

Fetch and decode

The microoperations for the fetch and decode phases can be specified by the following register transfer statements:

T0: AR \leftarrow PC ($S_0 S_1 S_2 = 010$, T0=1)
T1: IR \leftarrow M [AR], PC \leftarrow PC + 1 ($S_0 S_1 S_2 = 111$, T1=1)
T2: D0, ..., D7 \leftarrow Decode IR(12-14), AR \leftarrow IR(0-11), I \leftarrow IR(15)

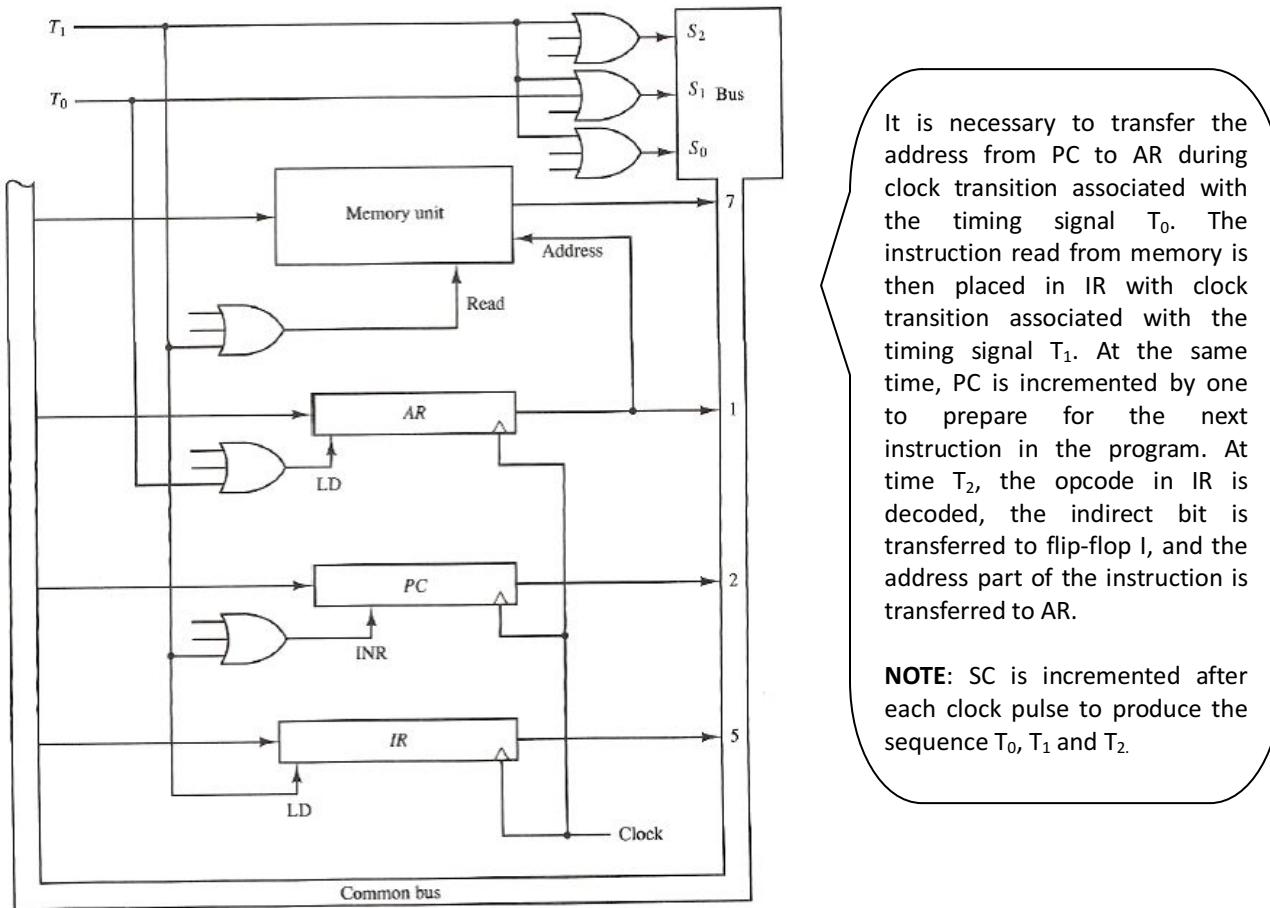


Fig: Register transfers for the fetch phase

Determine the type of the instruction

The timing signal that is active after decoding is T_3 . During time T_3 , the control unit determines the type of instruction that was just read from memory. Following flowchart presents an initial configuration for the instruction cycle and shows how the control determines the instruction type after decoding.

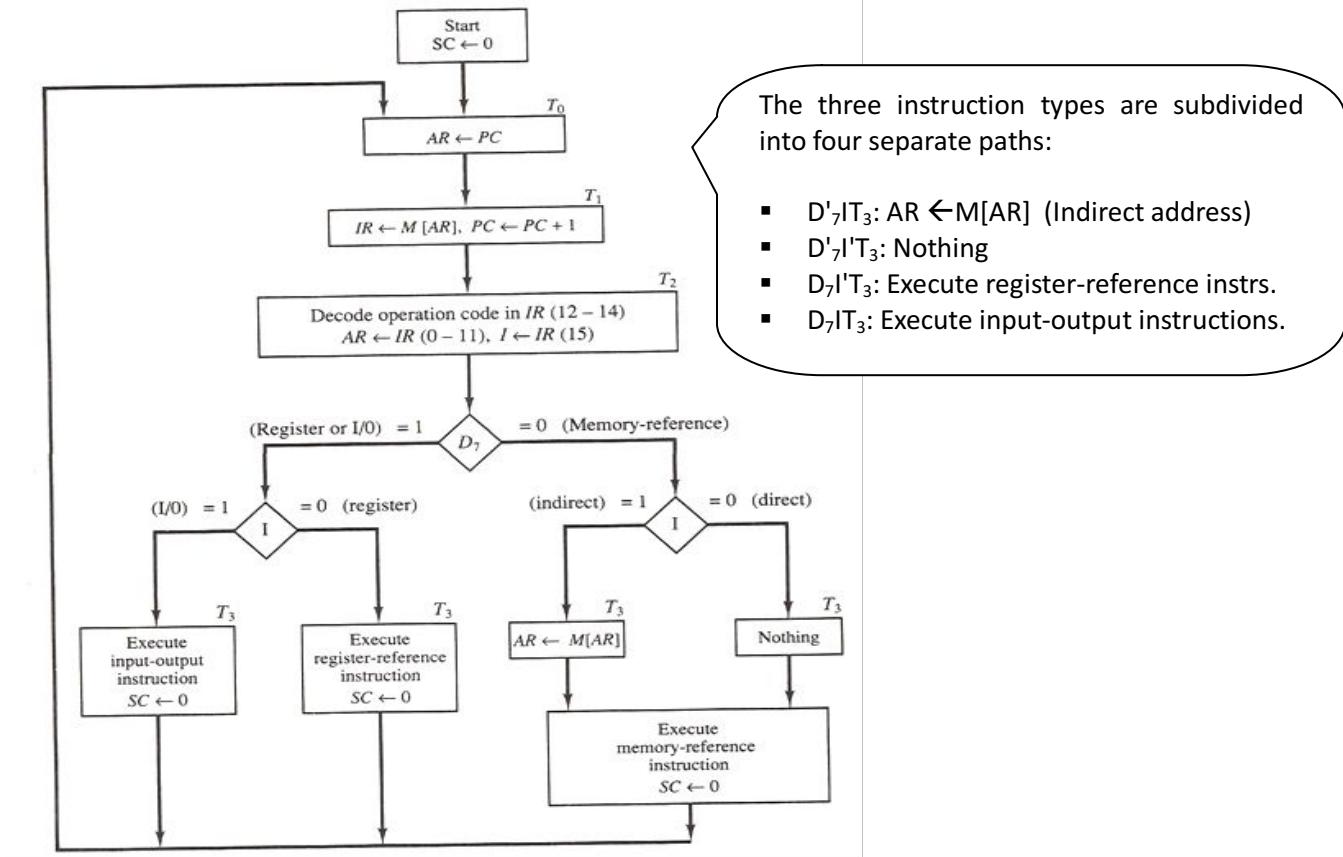


Fig: Flowchart for instruction cycle (Initial configuration)

Register transfers needed for the execution of register-reference and memory-reference instructions are explained below: (I/O instructions will be discussed later)

Register-reference instructions:

Register Reference Instructions are recognized with

- $D_7 = 1, I = 0$
- Register Ref. Instr. is specified in $b_0 \sim b_{11}$ of IR
- Execution starts with timing signal T_3

Let

$r = D_7 IT_3 \Rightarrow$ Common to all Register Reference Instruction

$B_i = IR(i), i=0, 1, 2 \dots 11.$ [Bit in IR(0-11) that specifies the operation]

CLA $rB_{11}: AC \leftarrow 0, SC \leftarrow 0$

Clear AC

CLE $rB_{10}: E \leftarrow 0, SC \leftarrow 0$

Clear E

CMA	$rB_9:$	$AC \leftarrow AC', SC \leftarrow 0$	Complement AC
CME	$rB_8:$	$E \leftarrow E', SC \leftarrow 0$	Complement E
CIR	$rB_7:$	$AC \leftarrow \text{shr } AC, AC(15) \leftarrow E, E \leftarrow AC(0), SC \leftarrow 0$	Circulate right
CIL	$rB_6:$	$AC \leftarrow \text{shl } AC, AC(0) \leftarrow E, E \leftarrow AC(15), SC \leftarrow 0$	Circulate Left
INC	$rB_5:$	$AC \leftarrow AC + 1, SC \leftarrow 0$	Increment AC
SPA	$rB_4:$	if $(AC(15) = 0)$ then $(PC \leftarrow PC+1), SC \leftarrow 0$	Skip if positive
SNA	$rB_3:$	if $(AC(15) = 1)$ then $(PC \leftarrow PC+1), SC \leftarrow 0$	skip if negative
SZA	$rB_2:$	if $(AC = 0)$ then $(PC \leftarrow PC+1), SC \leftarrow 0$	skip if AC zero
SZE	$rB_1:$	if $(E = 0)$ then $(PC \leftarrow PC+1), SC \leftarrow 0$	skip if E zero
HLT	$rB_0:$	$S \leftarrow 0, SC \leftarrow 0$ (S is a start-stop flip-flop)	Halt computer

Memory-reference instructions

- Once an instruction has been loaded to IR, it may require further access to memory to perform its intended function (direct or indirect).
- The effective address of the instruction is in the AR and was placed there during:
 - Time signal T2 when $I = 0$ or
 - Time signal T3 when $I = 1$
- Execution of memory reference instructions starts with the timing signal T4.
- Described symbolically using RTL.

Symbol	Operation Decoder	Symbolic Description
AND	D_0	$AC \leftarrow AC \wedge M[AR]$
ADD	D_1	$AC \leftarrow AC + M[AR], E \leftarrow C_{out}$
LDA	D_2	$AC \leftarrow M[AR]$
STA	D_3	$M[AR] \leftarrow AC$
BUN	D_4	$PC \leftarrow AR$
BSA	D_5	$M[AR] \leftarrow PC, PC \leftarrow AR + 1$
ISZ	D_6	$M[AR] \leftarrow M[AR] + 1, \text{ if } M[AR] + 1 = 0 \text{ then } PC \leftarrow PC + 1$

AND to AC

This instruction performs the AND logical operation on pairs of bits on AC and the memory word specified by the effective address. The result is transferred to AC. Microoperations that execute these instructions are:

$D_0 T_4: DR \leftarrow M[AR]$ //Read operand
 $D_0 T_5: AC \leftarrow AC \wedge DR, SC \leftarrow 0$ //AND with AC

ADD to AC

$D_1 T_4: DR \leftarrow M[AR]$ //Read operand
 $D_1 T_5: AC \leftarrow AC + DR, E \leftarrow C_{out}, SC \leftarrow 0$ //Add to AC and stores carry in E

LDA: Load to AC

$D_2 T_4: DR \leftarrow M[AR]$ //Read operand
 $D_2 T_5: AC \leftarrow DR, SC \leftarrow 0$ //Load AC with DR

STA: Store AC

D₃T₄: M[AR] ← AC, SC ← 0 // store data into memory location

BUN: Branch Unconditionally

D₄T₄: PC ← AR, SC ← 0 //Branch to specified address

BSA: Branch and Save Return Address

D₅T₄: M[AR] ← PC, AR ← AR + 1 // save return address and increment AR

D₅T₅: PC ← AR, SC ← 0 // load PC with AR

ISZ: Increment and Skip-if-Zero

D₆T₄: DR ← M[AR] //Load data into DR

D₆T₅: DR ← DR + 1 // Increment the data

D₆T₄: M[AR] ← DR, if (DR = 0) then (PC ← PC + 1), SC ← 0 // if DR=0 skip next instruction by incrementing PC

Input-Output and Interrupt

In computer, instructions and data stored in memory come from some input device and Computational results must be transmitted to the user through some output device.

Input-output configuration

The terminal sends and receives serial information. Each quantity of information has 8 bits of an alphanumeric code. Two basic computer registers INPR and OUTR communicate with a communication interfaces.

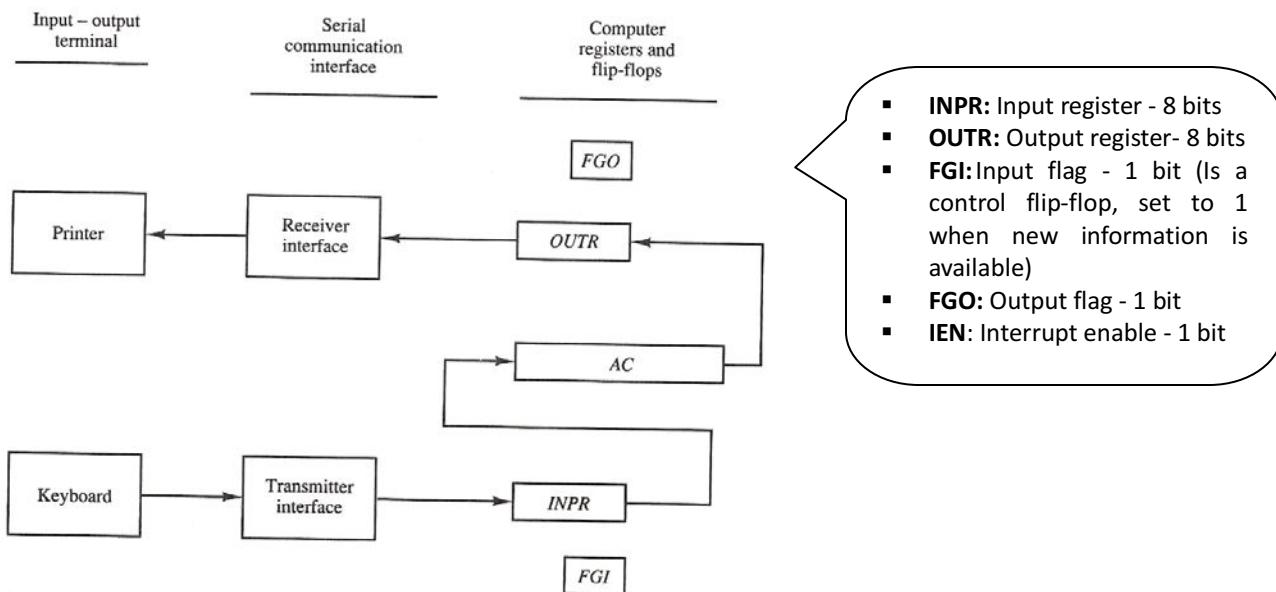


Fig: Input-output configuration

Scenario1: when a key is struck in the keyboard, an 8-bit alphanumeric code is shifted into INPR and the input flag FGI is set to 1. As long as the flag is set, the information in INPR can not be changed by striking another key. The control checks the flag bit, if 1, contents of INPR is transferred in parallel to AC and FGI is cleared to 0. Once the flag is cleared, new information can be shifted into INPR by striking another key.

Scenario2: OUTR works similarly but the direction of information flow is reversed. Initially FGO is set to 1. The computer checks the flag bit; if it is 1, the information is transferred in parallel to OUTR and FGO is cleared to 0. The output device accepts the coded information, prints the corresponding character and when operation is completed, it sets FGO to 1.

Input-output Instructions

I/O instructions are needed to transferring information to and from AC register, for checking the flag bits and for controlling the interrupt facility.

$$D_7IT_3 = p \text{ (common to all input-output instructions)}$$

$$IR(i) = B_i \text{ [bit in } IR(6-11) \text{ that specifies the instruction]}$$

	$p:$	$SC \leftarrow 0$	Clear SC
INP	$pB_{11}:$	$AC(0-7) \leftarrow INPR, FGI \leftarrow 0$	Input character
OUT	$pB_{10}:$	$OUTR \leftarrow AC(0-7), FGO \leftarrow 0$	Output character
SKI	$pB_9:$	If ($FGI = 1$) then ($PC \leftarrow PC + 1$)	Skip on input flag
SKO	$pB_8:$	If ($FGO = 1$) then ($PC \leftarrow PC + 1$)	Skip on output flag
ION	$pB_7:$	$IEN \leftarrow 1$	Interrupt enable on
IOF	$pB_6:$	$IEN \leftarrow 0$	Interrupt enable off

Program Interrupt

- Input and Output interactions with electromechanical peripheral devices require huge processing times compared with CPU processing times
 - I/O (milliseconds) versus CPU (nano/micro-seconds)
- Interrupts permit other CPU instructions to execute while waiting for I/O to complete
- The I/O interface, instead of the CPU, monitors the I/O device.
- When the interface finds that the I/O device is ready for data transfer, it generates an interrupt request to the CPU
- Upon detecting an interrupt, the CPU stops momentarily the task it is doing, branches to the service routine to process the data transfer, and then returns to the task it was performing.

Scenario3: consider a computer which completes instruction cycle in $1\mu s$. Assume I/O device that can transfer information at the maximum rate of 10 characters/sec. Equivalently, one character every $100000\mu s$. Two instructions are executed when computer checks the flag bit and decides not to transfer information. Which means computer will check the flag 50000 times between each transfer. Computer is wasting time while checking the flag instead of doing some useful processing task.

- IEN (Interrupt-enable flip-flop)
 - can be set and cleared by instructions
 - When cleared, the computer cannot be interrupted

Interrupt cycle

This is a hardware implementation of a branch and save return address operation.

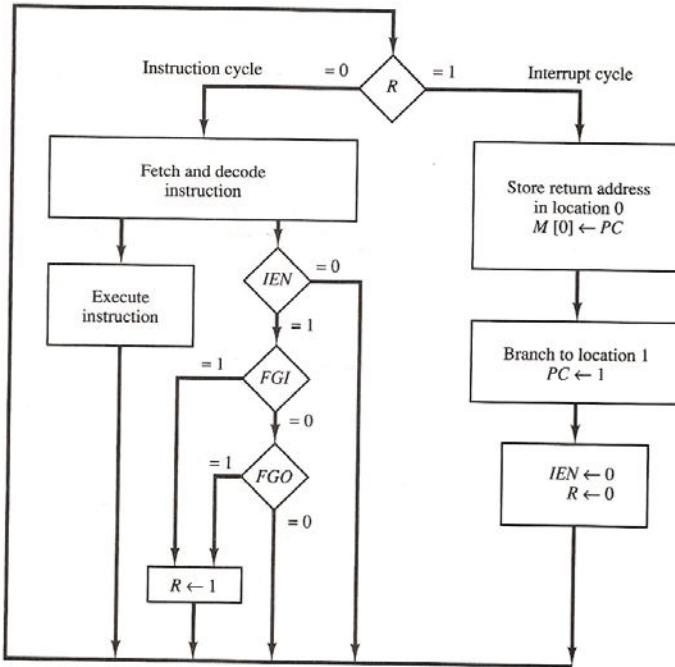


Fig: flowchart of interrupt cycle

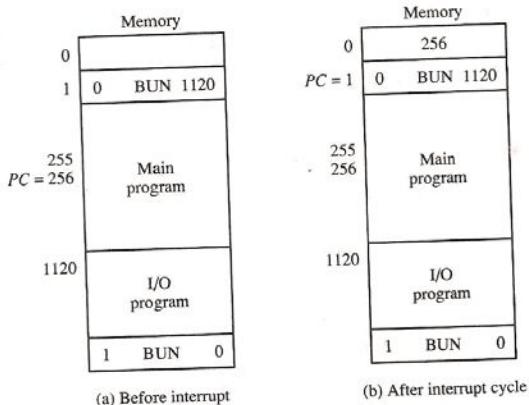


Fig: Demonstration of interrupt cycle

- At the beginning of the instruction cycle, the instruction that is read from memory is in address 1.
- At memory address 1, the programmer must store a branch instruction that sends the control to an interrupt service routine
- The instruction that returns the control to the original program is "indirect BUN 0"

Register transfer operations in interrupt cycle


Register Transfer Statements for Interrupt Cycle

- $R \leftarrow 1$ if $IEN (FGI + FGO) T_0 T_1 T_2' \leftrightarrow T_0' T_1' T_2' (IEN) (FGI + FGO)$: $R \leftarrow 1$
- The fetch and decode phases of the instruction cycle must be modified: Replace T_0, T_1, T_2 with $R'T_0, R'T_1, R'T_2$
- The interrupt cycle : $RT_0: AR \leftarrow 0, TR \leftarrow PC$
 $RT_1: M[AR] \leftarrow TR, PC \leftarrow 0$
 $RT_2: PC \leftarrow PC + 1, IEN \leftarrow 0, R \leftarrow 0, SC \leftarrow 0$

Complete computer description

Flowchart

This is the final flowchart of the instruction cycle including interrupt cycle for the basic computer.

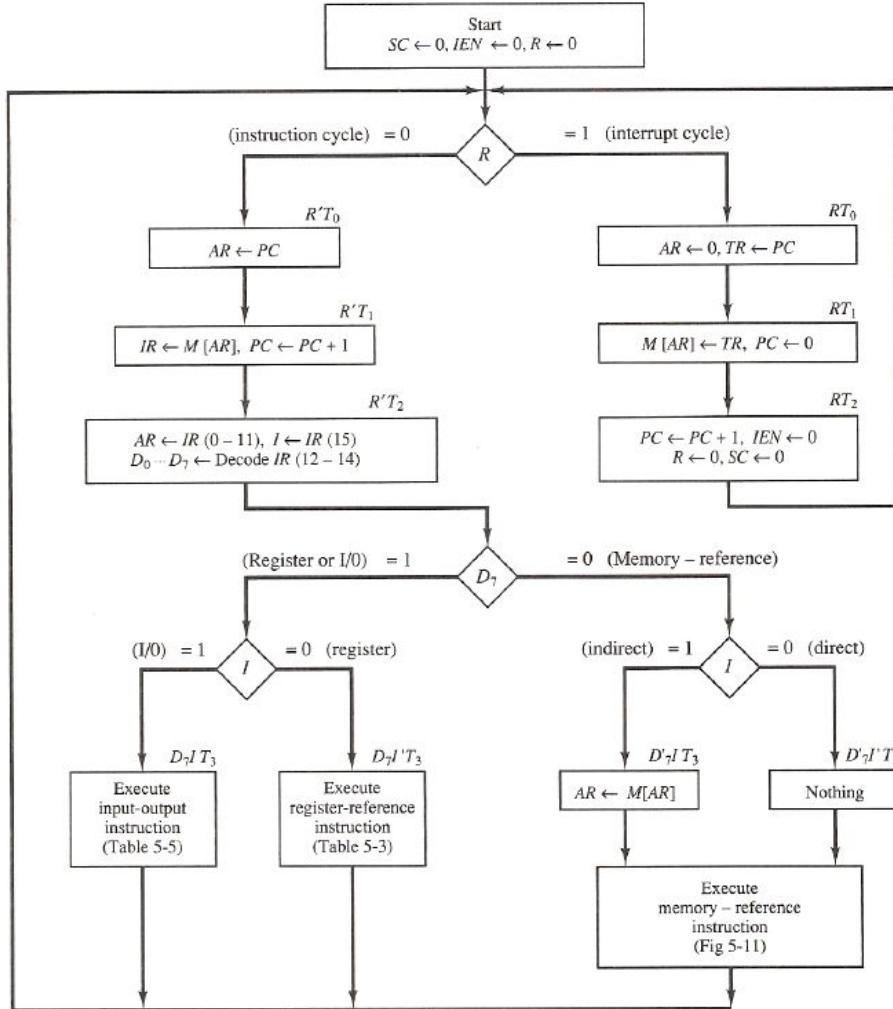

Microoperations

Fetch	$R'T_0:$	$AR \leftarrow PC$
	$R'T_1:$	$IR \leftarrow M[AR]$, $PC \leftarrow PC + 1$
Decode	$R'T_2:$	$D_0, \dots, D_7 \leftarrow \text{Decode } IR(12 \sim 14)$, $AR \leftarrow IR(0 \sim 11)$, $I \leftarrow IR(15)$
Indirect Interrupt	$D'I'T_3:$	$AR \leftarrow M[AR]$
	$T_0'T_1'T_2'(IEN)(FGI + FGO):$	$R \leftarrow 1$ $R'T_0:$ $AR \leftarrow 0$, $TR \leftarrow PC$ $R'T_1:$ $M[AR] \leftarrow TR$, $PC \leftarrow 0$ $R'T_2:$ $PC \leftarrow PC + 1$, $IEN \leftarrow 0$, $R \leftarrow 0$, $SC \leftarrow 0$
Memory-Reference		
AND	$D0T4:$	$DR \leftarrow M[AR]$
	$D0T5:$	$AC \leftarrow AC . DR$, $SC \leftarrow 0$
ADD	$D1T4:$	$DR \leftarrow M[AR]$
	$D1T5:$	$AC \leftarrow AC + DR$, $E \leftarrow Cout$, $SC \leftarrow 0$
LDA	$D2T4:$	$DR \leftarrow M[AR]$
	$D2T5:$	$AC \leftarrow DR$, $SC \leftarrow 0$
STA	$D3T4:$	$M[AR] \leftarrow AC$, $SC \leftarrow 0$
BUN	$D4T4:$	$PC \leftarrow AR$, $SC \leftarrow 0$
BSA	$D5T4:$	$M[AR] \leftarrow PC$, $AR \leftarrow AR + 1$
	$D5T5:$	$PC \leftarrow AR$, $SC \leftarrow 0$
ISZ	$D6T4:$	$DR \leftarrow M[AR]$
	$D6T5:$	$DR \leftarrow DR + 1$
	$D6T6:$	$M[AR] \leftarrow DR$, if $(DR = 0)$ then $(PC \leftarrow PC + 1)$, $SC \leftarrow 0$

Register-Reference		
	D7IT3 = r	(Common to all register-reference instr)
	IR(i) = Bi	(i = 0,1,2, ..., 11)
	r:	SC <- 0
CLA	rB11:	AC <- 0
CLE	rB10:	E <- 0
CMA	rB9:	AC <- AC'
CME	rB8:	E <- E'
CIR	rB7:	AC <- shr AC, AC(15) <- E, E <- AC(0)
CIL	rB6:	AC <- shl AC, AC(0) <- E, E <- AC(15)
INC	rB5:	AC <- AC + 1
SPA	rB4:	If(AC(15) = 0) then (PC <- PC + 1)
SNA	rB3:	If(AC(15) = 1) then (PC <- PC + 1)
SZA	rB2:	If(AC = 0) then (PC <- PC + 1)
SZE	rB1:	If(E=0) then (PC <- PC + 1)
HLT	rB0:	S <- 0
Input-Output		
	D7IT3 = p	(Common to all input-output instructions)
	IR(i) = Bi	(i = 6,7,8,9,10,11)
	p:	SC <- 0
INP	pB11:	AC(0-7) <- INPR, FGI <- 0
OUT	pB10:	OUTR <- AC(0-7), FGO <- 0
SKI	pB9:	If(FGI=1) then (PC <- PC + 1)
SKO	pB8:	If(FGO=1) then (PC <- PC + 1)
ION	pB7:	IEN <- 1
IOF	pB6:	IEN <- 0

Design of Basic Computer (BC)

Hardware Components of BC

1. A memory unit: 4096 x 16.
2. Registers:
AR, PC, DR, AC, IR, TR, OUTR, INPR, and SC
3. Flip-Flops(Status):
I, S, E, R, IEN, FGI, and FGO
4. Decoders: A 3x8 Opcode decoder
A 4x16 timing decoder
5. Common bus: 16 bits
6. Control logic gates
7. Adder and Logic circuit: Connected to AC

Control Logic Gates

Inputs:

1. Two decoder outputs
2. I flip-flop
3. IR(0-11)
4. AC(0-15)
 - To check if AC = 0
 - To detect sign bit AC(15)
5. DR(0-15)
 - To check if DR = 0
6. Values of seven flip-flops

Outputs:

1. Input Controls of the nine registers
2. Read and Write Controls of memory
3. Set, Clear, or Complement Controls of the flip-flops
4. S₂, S₁, S₀ Controls to select a register for the bus
5. AC, and Adder and Logic circuit

Control of registers and memory

The control inputs of the registers are LD (load), INR (increment) and CLR (clear).

- Address Register (AR)

To derive the gate structure associated with the control inputs of AR: we find all the statements that change the contents of AR.

$R'T_0:$	$AR \leftarrow PC$	LD(AR)
$R'T_2:$	$AR \leftarrow IR(0-11)$	LD(AR)
$D'_7IT_3:$	$AR \leftarrow M[AR]$	LD(AR)
$RT_0:$	$AR \leftarrow 0$	CLR(AR)
$D_5T_4:$	$AR \leftarrow AR + 1$	INR(AR)



$$\begin{aligned} LD(AR) &= R'T_0 + R'T_2 + D'_7IT_3 \\ CLR(AR) &= RT_0 \\ INR(AR) &= D_5T_4 \end{aligned}$$

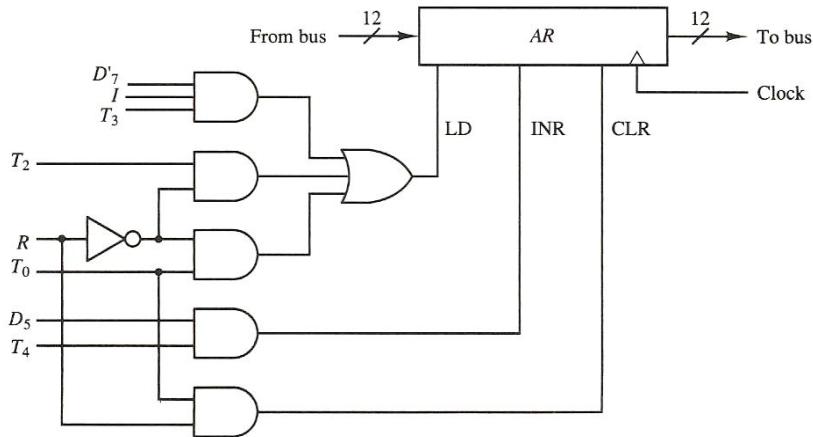


Fig: Control gates associated with AR

Similarly, control gates for the other registers as well as the read and write inputs of memory can be derived. Viz. the logic gates associated with the read inputs of memory is derived by scanning all statements that contain a read operation. (Read operation is recognized by the symbol $\leftarrow M[AR]$).

$$Read = R'T_1 + D'_7IT_3 + (D_0 + D_1 + D_2 + D_6)T_4$$

The output of the logic gates that implement the Boolean expression above must be connected to the read input of memory.

Control of flip-flops

The control gates for the seven flip-flops can be determined in a similar manner.

Example:

- IEN(Interrupt Enable Flag)

pB7: IEN $\leftarrow 1$ (I/O Instruction)

pB6: IEN $\leftarrow 0$ (I/O Instruction)

RT₂: IEN $\leftarrow 0$ (Interrupt)

These three instructions can cause IEN flag to change its value.

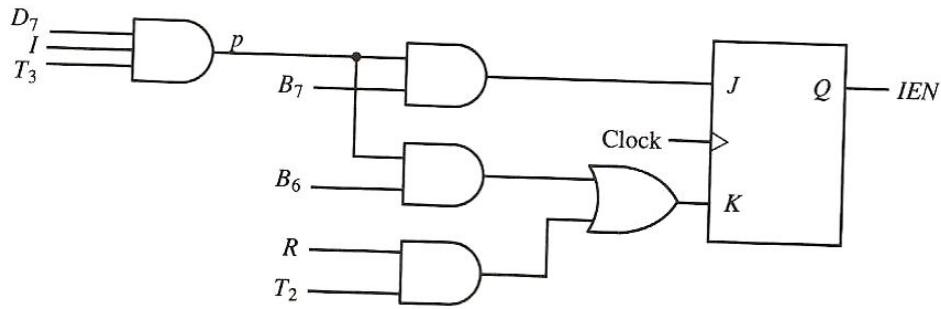


Fig: control inputs for IEN

Control of Common Bus

The 16-bit common bus is controlled by the selection inputs S_2 , S_1 and S_0 . Binary numbers for $S_2S_1S_0$ is associated with a Boolean variable x_1 through x_7 , which must be active in order to select the register or memory for the bus.

Inputs							Outputs			Register selected for bus
x_1	x_2	x_3	x_4	x_5	x_6	x_7	S_2	S_1	S_0	
0	0	0	0	0	0	0	0	0	0	None
1	0	0	0	0	0	0	0	0	1	AR
0	1	0	0	0	0	0	0	1	0	PC
0	0	1	0	0	0	0	0	1	1	DR
0	0	0	1	0	0	0	1	0	0	AC
0	0	0	0	1	0	0	1	0	1	IR
0	0	0	0	0	1	0	1	1	0	TR
0	0	0	0	0	0	1	1	1	1	Memory

Fig: Encoder for Bus Selection Circuit

Example: when $x_1 = 1$, $S_2S_1S_0$ must be 001 and thus output of AR will be selected for the bus.

To determine the logic for each encoder input, it is necessary to find the control functions that place the corresponding register onto the bus.

Example: to find the logic that makes $x_1 = 1$, we scan all register transfer statements that have AR as a source.

$$\begin{aligned} D_4T_4: \quad & PC \leftarrow AR \\ D_5T_5: \quad & PC \leftarrow AR \end{aligned}$$

Therefore the Boolean function for x_1 is,

$$x_1 = D_4T_4 + D_5T_5$$

Similarly, for memory read operation,

$$x_7 = R'T_1 + D'_7IT_3 + (D_0 + D_1 + D_2 + D_6)T_4$$

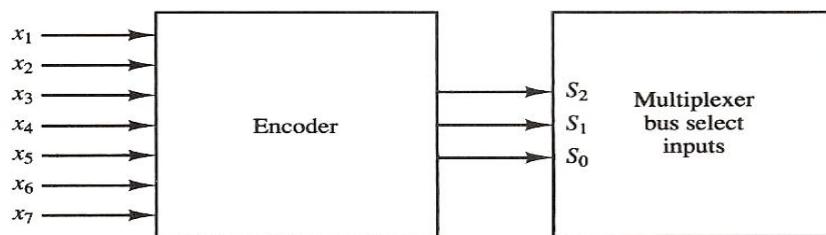


Fig: Encoder for bus selection inputs

Design of Accumulator Logic

To design the logic associated with AC, we extract all register transfer statements that change the contents of AC. The circuit associated with the AC register is shown below:

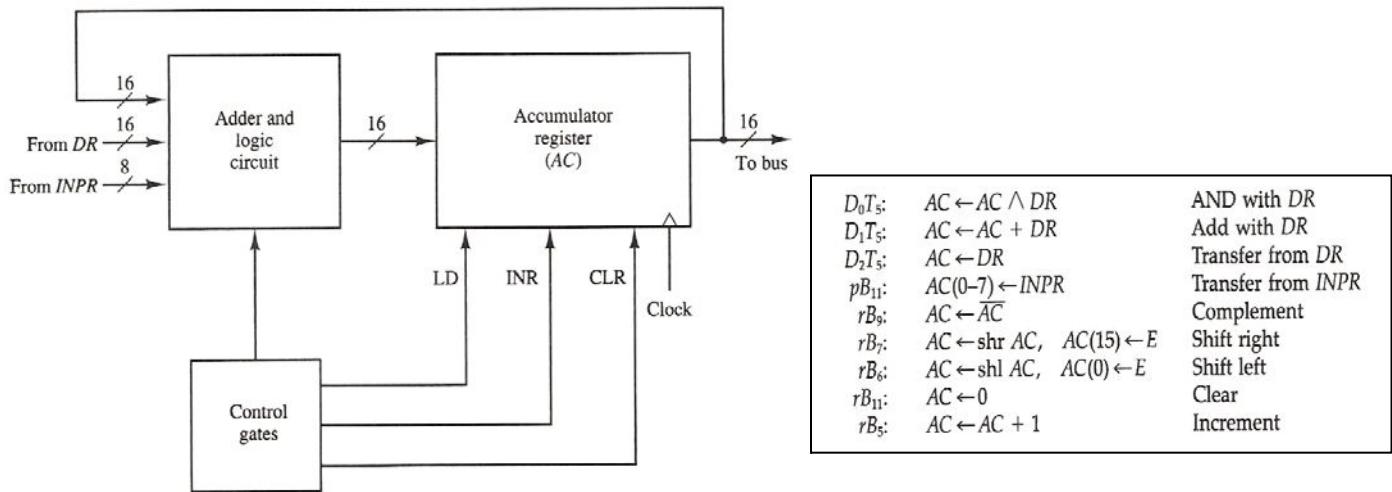


Fig: circuits associated with AC

Control of AC Resister

The gate structure that controls the LD, INR and CLR inputs of AC is shown below:

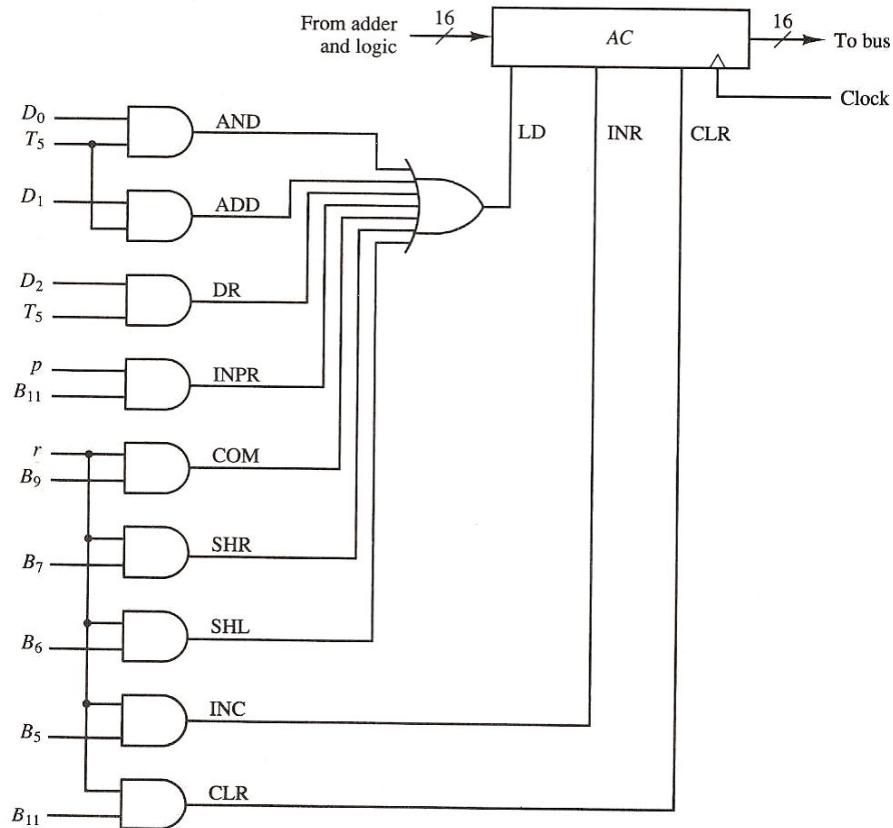


Fig: Gate structure for controlling LD, INR and CLR of AC

Adder and Logic Circuit

The adder and logic circuit can be subdivided into 16 stages, with each bit corresponding to one bit of AC.

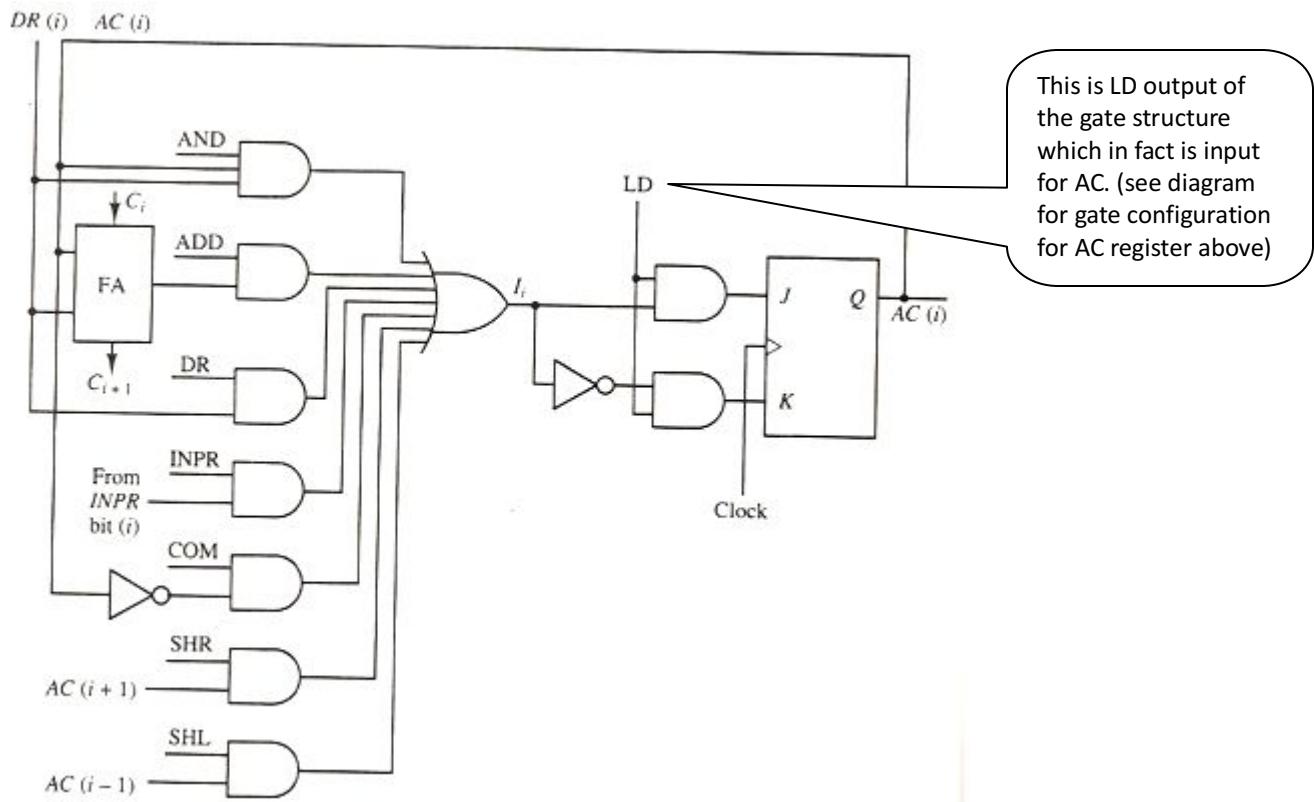


Fig: One stage of adder and logic circuit

- One stage of the adder and logic circuit consists of seven AND gates, one OR gate and a full adder (FA) as shown above.
- The input is labeled I_i output $AC(i)$.
- When LD input is enabled, the 16 inputs I_i for $i = 0, 1, 2 \dots 15$ are transferred to $AC(i)$.
- The AND operation is achieved by ANDing $AC(i)$ with the corresponding bit in $DR(i)$.
- The transfer from INPR to AC is only for bits 0 through 7.
- The complement microoperation is obtained by inverting the bit value in AC.
- Shift-right operation transfers bit from $AC(i+1)$ and shift-left operation transfers the bit from $AC(i-1)$.

HEY! : The complete adder and logic circuit consists of 16 stages connected together.

EXERCISES: Textbook chapter 5 → 5.1, 5.2, 5.10, 5.23

5.1(solution)

$$256K = 2^8 \times 2^{10} = 2^{18}$$

$$64 = 2^6$$

(a) Address : 18 bits

Register code: 6 bits

Indirect bit: 1 bit

$$\frac{25}{25} \quad 32 - 25 = 7 \text{ bits for opcode.}$$

(b)

	7	6	18	= 32 bits
I	opcode	Register	Address	

(c) Data : 32 bits ; address : 18 bits.

5-2

A direct address instruction needs two references to memory : (1) Read instruction ; (2) Read operand.

An indirect address instruction needs three references to memory : (1) Read instruction ; (2) Read effective address ; (3) Read operand.

5.10 (Solution)

	PC	AR	DR	AC	IR
Initial	021	—	—	A937	—
AND	022	083	B8F2	A832	0083
ADD	022	083	B8F2	6229	1083
LDA	022	083	B8F2	B8F2	2083
STA	022	083	—	A937	3083
BUN	083	083	—	A937	4083
BSA	084	084	—	A937	5083
TSZ	022	083	B8F3	A937	6083

5.23 (Solution)

$$(T_0 + T_1 + T_2)'(IEN)(FGI + FGO) : R \leftarrow 1$$

$$RT_2 : R \leftarrow 0$$

