
Fundamentals of Computer Design

What is "Computer Architecture"?


Applications

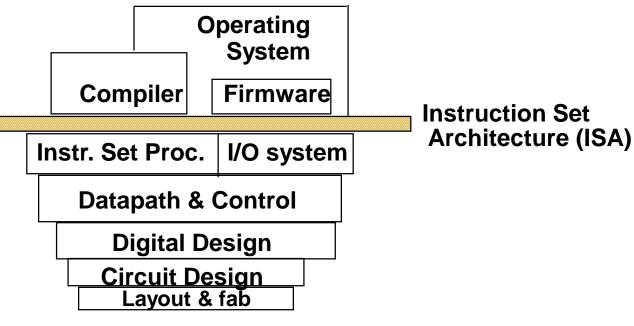


- Semiconductor Materials
- Coordination of many levels of abstraction
- Under a rapidly changing set of forces
- Design, Measurement, and Evaluation

Computer Architecture Topics

Input/Output and Storage

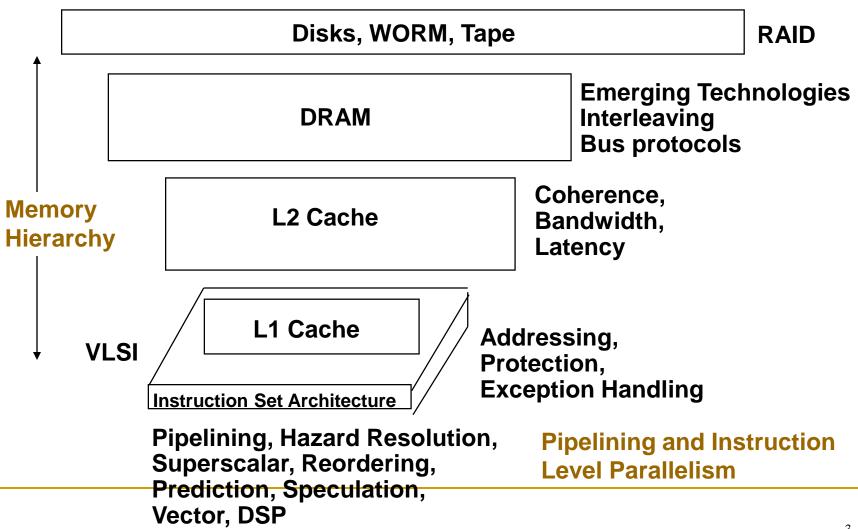

Growth in Processor Performance since the mid-1980s

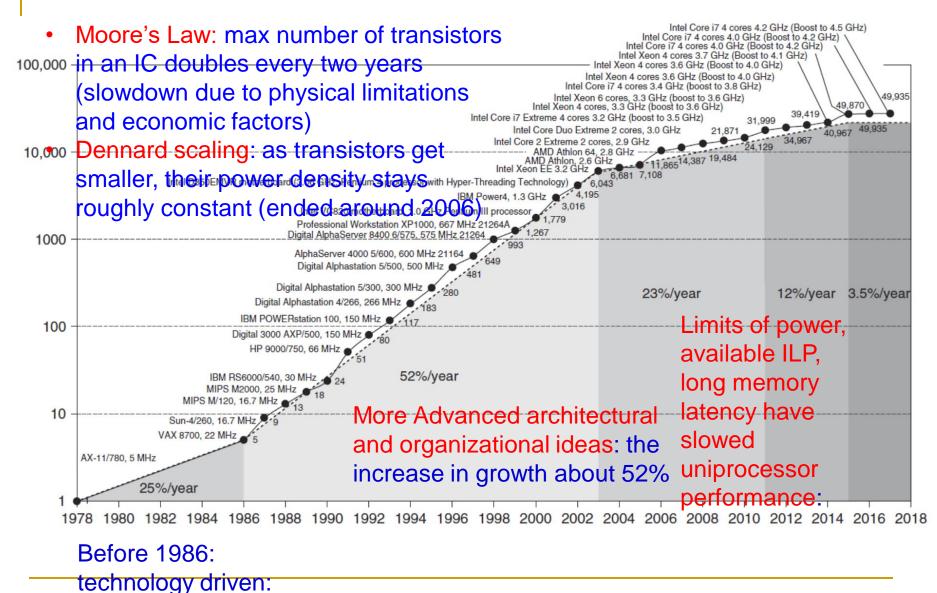

25% per year

4

History

- Simpler instructions: Reduced Instruction Set Computer (RISC) in early 1980s
 - Focused the attention of designers on Instruction Level Parallelism and the use of caches
- RISC-based computers force prior architectures to keep up or disappear
- Intel rose to the challenge and translated x86 instructions into RISC-like instructions internally
- As transistor counts soared in late 1990s, the hardware overhead of translating the more complex x86 architecture became negligible.

RISC

- For any given level of general performance, a RISC chip will typically have far fewer transistors dedicated to the core logic which originally allowed designers to increase the size of the register set and increase internal parallelism.
- Uniform instruction format, using a single word with the opcode in the same bit positions in every instruction, demanding less decoding
- Identical <u>general purpose registers</u>, allowing any register to be used in any context, **simplifying compiler design** (although normally there are separate floating point registers)
- Simple <u>addressing modes</u>, with complex addressing performed via sequences of arithmetic and/or load-store operations

16 years of sustained growth in performance at an annual rate of over 50%

- It has significantly enhanced the capability available to computer users.
- For many applications, the highest-performance microprocessors of today outperform the supercomputers of less than 10 years ago.
- It has led to dominance of microprocessor-based computers.
 - PC and workstations are major products
 - Minicomputers are replaced by servers made with microprocessors
 - Even high-end supercomputers are being built with collections of microprocessors

The 16-year renaissance is over

- Performance dropped to about 20% per year
 - Maximum power dissipation of air-cooled chips
 - Little ILP (instruction-level parallelism) left to exploit efficiently
 - Almost unchanged memory latency
- The road to higher performance would be via multiple processor per chip rather than faster uni-processors

Classes of Computers

Classes of computers

Personal Mobile Device

- Price of System: \$100-\$1000
- □ Price of microprocessor module: \$10-\$100
- Cost, Energy, Media Performance, Responsiveness

Desktop computing

- Price of System: \$300-\$2500
- Price of microprocessor module: \$50-\$500 (per processor)
- Price performance, Graphics performance, Energy

Servers

- Price of System: \$5000-\$10,000,000
- Price of microprocessor module: \$200-\$20,000
- Throughput, Availability, Scalability, Energy

Classes of computers

- Clusters/Warehouse-Scale Computers
 - Price of System: \$100,000-\$200,000,000
 - □ Price of microprocessor module: \$50-\$250
 - Price-performance, Throughput, Energy Proportionality

Embedded computing

- Price of System: \$10-\$100,000 (include high-end network routers)
- □ Price of microprocessor module: \$0.01-\$100
- Price, Application-specific performance, Energy

Cost of downtime for an unavailable system

	Cost of downtime per hour (thousands of \$)	Annual losses (millions of \$) with downtime of		
Application		1% (87.6 hrs/yr)	0.5% (43.8 hrs/yr)	0.1% (8.8 hrs/yr)
Brokerage operations	\$6450	\$565	\$283	\$56.5
Credit card authorization	\$2600	\$228	\$114	\$22.8
Package shipping services	\$150	\$13	\$6.6	\$1.3
Home shopping channel	\$113	\$9.9	\$4.9	\$1.0
Catalog sales center	\$90	\$7.9	\$3.9	\$0.8
Airline reservation center	\$89	\$7.9	\$3.9	\$0.8
Cellular service activation	\$41	\$3.6	\$1.8	\$0.4
Online network fees	\$25	\$2.2	\$1.1	\$0.2
ATM service fees	\$14	\$1.2	\$0.6	\$0.1

Figure 1.3 The cost of an unavailable system is shown by analyzing the cost of downtime (in terms of immediately lost revenue), assuming three different levels of availability, and that downtime is distributed uniformly. These data are from Kembel [2000] and were collected and analyzed by Contingency Planning Research.

Defining Computer Architecture

Defining Computer Architecture

- In the past, computer architecture often referred to instruction set design.
 - Other aspects were called "implementation".
- The architect's job is much more than instruction set design.
- Task of computer designer:
 - Determine what attributes are important
 - Maximize performance while staying with cost, power, availability constraints

Issues of Instruction Set Architecture (ISA)

- Class of ISA
- Memory Addressing
- Addressing modes
- Types and sizes of operands
- Operations
- Control flow instructions
- Encoding an ISA

Class of ISA

- ISAs today: General-purpose register architecture
- 80x86
 - 16 general purpose registers, 16 floating point registers
 - Register-memory
- MIPS
 - 32 general purpose registers, 32 floating point registers
 - Load-store
- Recent ISAs are load-store

Memory addressing

- Byte addressing
- MIPS requires that objects must be aligned (accesses are faster)
- 80x86 does not require alignment

Addressing Mode

- Register
- Immediate (for constants)
- Displacement
- Register Indirect
- Indexed
- Direct/Absolute
- Memory Indirect

Types and sizes of operands

- MIPS and 80x86 support operand sizes of 8-bit (ASCII character), 16-bit (Uni-code character or half word), 32-bit (integer or word), 64-bit (double word or long integer), and IEEE 754 floating point in 32-bit (single precision) and 64-bit (double precision)
- 80x86 also supports 80-bit floating point (extended double precision)

Name	Number	Use	Preserved across a call?
\$zero	0	The constant value 0	N.A.
\$at	1	Assembler temporary	No
\$v0 - \$v1	2–3	Values for function results and expression evaluation	No
\$a0-\$a3	4–7	Arguments	No
\$t0-\$t7	8–15	Temporaries	No
\$s0 - \$s7	16–23	Saved temporaries	Yes
\$t8-\$t9	24–25	Temporaries	No
\$k0-\$k1	26–27	Reserved for OS kernel	No
\$gp	28	Global pointer	Yes
\$sp	29	Stack pointer	Yes
\$fp	30	Frame pointer	Yes
\$ra	31	Return address	Yes

Figure 1.4 MIPS registers and usage conventions. In addition to the 32 general-purpose registers (R0–R31), MIPS has 32 floating-point registers (F0–F31) that can hold either a 32-bit single-precision number or a 64-bit double-precision number.

Operations

Subset of MIPS 64

Instruction type/opcode	Instruction meaning	
Data transfers	Move data between registers and memory, or between the integer and FP or special registers; only memory address mode is 16-bit displacement + contents of a GPR	
LB, LBU, SB	Load byte, load byte unsigned, store byte (to/from integer registers)	
LH, LHU, SH	Load half word, load half word unsigned, store half word (to/from integer registers)	
LW, LWU, SW	Load word, load word unsigned, store word (to/from integer registers)	
LD, SD	Load double word, store double word (to/from integer registers)	
L.S, L.D, S.S, S.D	Load SP float, load DP float, store SP float, store DP float	
MFCO, MTCO	Copy from/to GPR to/from a special register	
MOV.S, MOV.D	Copy one SP or DP FP register to another FP register	
MFC1, MTC1	Copy 32 bits to/from FP registers from/to integer registers	
Arithmetic/logical	Operations on integer or logical data in GPRs; signed arithmetic trap on overflow	
DADD, DADDI, DADDU, DADDIU	Add, add immediate (all immediates are 16 bits); signed and unsigned	
DSUB, DSUBU	Subtract; signed and unsigned	
DMUL, DMULU, DDIV, DDIVU, MADD	Multiply and divide, signed and unsigned; multiply-add; all operations take and yield 64-bit values	
AND, ANDI	And, and immediate	
OR, ORI, XOR, XORI	Or, or immediate, exclusive or, exclusive or immediate	
LUI	Load upper immediate; loads bits 32 to 47 of register with immediate, then sign-extends	
DSLL, DSRL, DSRA, DSLLV, DSRLV, DSRAV	Shifts: both immediate (DS) and variable form (DSV); shifts are shift left logical, right logical, right arithmetic	
SLT, SLTI, SLTU, SLTIU	Set less than, set less than immediate; signed and unsigned	
Control	Conditional branches and jumps; PC-relative or through register	
BEQZ, BNEZ	Branch GPRs equal/not equal to zero; 16-bit offset from PC + 4	
BEQ, BNE	Branch GPR equal/not equal; 16-bit offset from PC + 4	
BC1T, BC1F	Test comparison bit in the FP status register and branch; 16-bit offset from PC + 4	
MOVN, MOVZ	Copy GPR to another GPR if third GPR is negative, zero	
J, JR	Jumps: 26-bit offset from PC + 4 (J) or target in register (JR)	
JAL, JALR	Jump and link: save PC + 4 in R31, target is PC-relative (JAL) or a register (JALR)	
TRAP	Transfer to operating system at a vectored address	
ERET	Return to user code from an exception; restore user mode	
Floating point	FP operations on DP and SP formats	
ADD.D, ADD.S, ADD.PS	Add DP, SP numbers, and pairs of SP numbers	
SUB.D, SUB.S, SUB.PS	Subtract DP, SP numbers, and pairs of SP numbers	
MUL.D, MUL.S, MUL.PS	Multiply DP, SP floating point, and pairs of SP numbers	
MADD.D, MADD.S, MADD.PS	Multiply-add DP, SP numbers, and pairs of SP numbers	
DIV.D, DIV.S, DIV.PS	Divide DP, SP floating point, and pairs of SP numbers	
CVT	Convert instructions: CVT.x.y converts from type x to type y, where x and y are L (64-bit integer), W (32-bit integer), D (DP), or S (SP). Both operands are FPRs.	
CD, CS	DP and SP compares: "" = LT,GT,LE,GE,EQ,NE; sets bit in FP status register	

Figure 1.5 Subset of the instructions in MIPS64. SP = single precision; DP = double precision. Appendix B gives much more detail on MIPS64. For data, the most significant bit number is 0; least is 63.

Control flow instructions

- Conditional branches
- Unconditional jumps
- Procedure Calls
- Returns

 PC-relative addressing (branch address is specified by an address field that is added to Program Counter)

Encoding an ISA

MIPS

- Fixed length encoding
- □ 32-bit
- Simplifies instruction decoding

80x86

- Variable length encoding
- 1 to 18 bytes
- Takes less space than fixed-length instructions

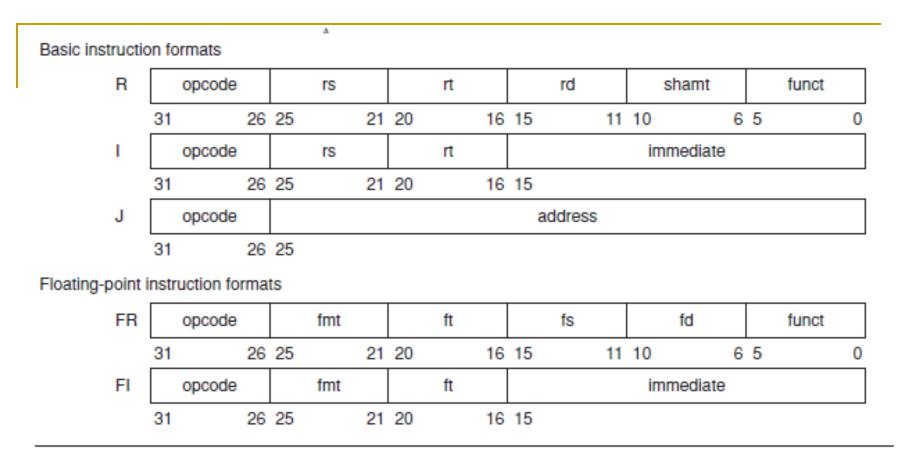


Figure 1.6 MIPS64 instruction set architecture formats. All instructions are 32 bits long. The R format is for integer register-to-register operations, such as DADDU, DSUBU, and so on. The I format is for data transfers, branches, and immediate instructions, such as LD, SD, BEQZ, and DADDIs. The J format is for jumps, the FR format for floating point operations, and the FI format for floating point branches.

Trends in Technology

Trends in power in integrated circuits

 For CMOS chips, the traditional dominant energy consumptions has been in switching transistors, also called dynamic power (watts)

$$Power_{dynamic} = \frac{1}{2} \cdot Capacitive load \cdot Voltage^2 \cdot Frequency switched$$

Energy (joules)

$$Energy_{dynamic} = Capacitive load \cdot Voltage^2$$

- Voltages: dropped form 5v to 1v in 20 years
- Capacitive load: function(#transistors connected to an output, technology determining the capacitance of the wires and transistors))
- For a fixed task, slowing clock rate reduces power, not energy

Example of trends in power

- Microprocessors are designed to have adjustable voltage
- 15% reduction in voltage may result in 15% reduction in frequency
- What would be the impact on dynamic power?

$$\frac{Power_{new}}{Power_{old}} = ?$$

Ans:

The capacitance is unchanged

$$\frac{Power_{new}}{Power_{old}}$$

$$= \frac{\frac{1}{2}Capacitive load \cdot (Voltage \cdot 0.85)^2 \cdot (Frequency \ switched \cdot 0.85)}{\frac{1}{2}Capacitive load \cdot Voltage^2 \cdot Frequency \ switched}$$

$$= 0.85^3 = 0.61$$

Reducing power to about 60% of the original

Trends in power in integrated circuits

- The increase in the number of transistors switching, the frequency of the switching leading to an overall growth in power consumption and energy
 - First microprocessor consumes tenths of a watt
 - 3.2G pentium 4 extreme edition consumes 135 watts
- The limit of what can be cooled by air (the heat must be dissipated from a chip that is about 1 cm on a side)
- Increasingly difficult challenges
 - Distributing the power, removing the heat, preventing hot spots


Trends in power in integrated circuits


- Although dynamic power is the primary source of power dissipating in CMOS, static power is becoming an important issue too because leakage current flows even when a transistor is off
- Limits of air cooling led to exploration of multiple processors on a chip running at relatively lower voltages and clock rates.

Integrated Circuits Costs

$$IC cost = \frac{Die cost + Testing cost + Packaging cost}{Final test yield}$$

$$Die cost = \frac{Wafer cost}{Dies per Wafer \times Die yield}$$

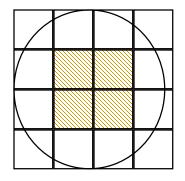

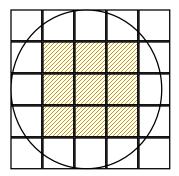


Dies per wafer =
$$\frac{\pi (\text{Wafer_diam/2})^2}{\text{Die_Area}} - \frac{\pi \times \text{Wafer_diam}}{\sqrt{2 \cdot \text{Die_Area}}} - \text{Test_Die}$$


• Find the number of dies per 300mm wafer for a die that is 1.5cm on a side

Die Area =
$$2.25 \text{ cm}^2$$

Dies per wafer = $pi*(15)^2/2.25 - pi*30/\text{sqrt}(2)*1.5$
= $706.9/2.25 - 94.2/2.12$
= 270

AMD Opteron microprocessor die 300mm wafer contains 117 AMD Opteron chips implemented in a 90 nm process

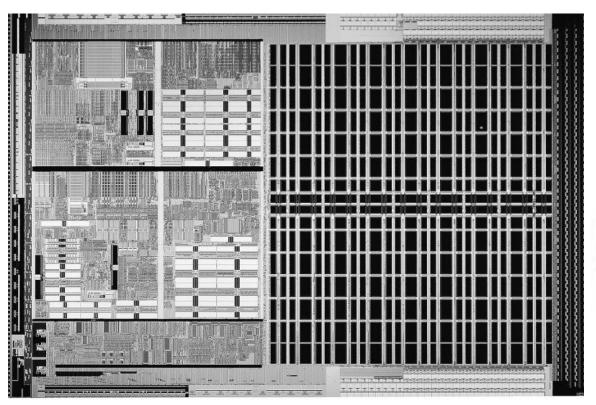

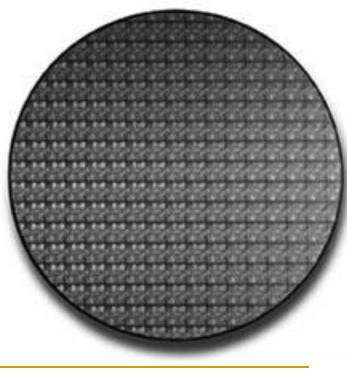



Integrated Circuits Costs

- The critical question is: what is the fraction of good dies on a wafer (die yield)
- Empirical model developed by looking at the yield of many manufacturing lines

Die Yield = Wafer_yield ×
$$\left\{1 + \left(\frac{\text{Defect_Density} \times \text{Die_area}}{\alpha}\right)\right\}^{-\alpha}$$

 Wafer yield accounts for wafers that are completely bad and need not be tested

Example of Die Yield

- Assume wafer yield 100%
- Defects per unit area: 0.4 defects per square centimeter for 90nm process
- For Multilevel metal CMOS processes in 2006, alpha is around 4
- Find the die yield for dies that are (A) 1.5 cm on a side and (B) 1.0 cm on a side
 - □ DieAreaA=2.25
 - □ DieYieldA= $(1 + 0.4x2.25/4)^{-4}$ =0.44
 - □ DieAreaB=1.00
 - \Box DieYieldB=(1 + 0.4x1.00/4)⁻⁴=0.68

Die Yield = Wafer_yield ×
$$\left\{1 + \left(\frac{\text{Defect_Density} \times \text{Die_area}}{\alpha}\right)\right\}^{-\alpha}$$

Why should a computer designer know about chip costs

- Manufacturing process dictates the wafer cost, wafer yield, and defects per unit area
- The computer designers can only control the die area.
- In practice $Die Yield = Wafer_yield \times \left\{ 1 + \left(\frac{Defect_Density \times Die_area}{\alpha} \right) \right\}^{-\alpha}$
 - defects per area is small
 - the cost per die (determined by the number of good dies per wafer) roughly grows with the die area
- The computer designer affects die size and hence cost, by determining
 - What functions are included on or excluded from the die
 - Number of I/O pins

Define and quantify dependability

- How to decide when a system is operating properly?
- Infrastructure providers now offer Service Level
 Agreements (SLA) to guarantee that their networking or
 power service would be dependable (reliable)
- Systems alternate between 2 states of service with respect to an SLA:
- Service accomplishment, where the service is delivered as specified in SLA
- Service interruption, where the delivered service is different from the SLA
- Failure = transition from state 1 to state 2
- Restoration = transition from state 2 to state 1

Define and quantify dependability

- Module reliability = measure of continuous service accomplishment (or time to failure).
 2 metrics
- 1. Mean Time To Failure (MTTF) measures Reliability
- Failures In Time (FIT) = 1/MTTF, the rate of failures
 - Traditionally reported as failures per billion hours of operation
- Mean Time To Repair (MTTR) measures Service Interruption
 - Mean Time Between Failures (MTBF) = MTTF+MTTR
- Module availability measures service as alternate between the 2 states of accomplishment and interruption (number between 0 and 1, e.g. 0.9)
- Module availability = MTTF / (MTTF + MTTR)

Example calculating reliability

- If modules have exponentially distributed lifetimes (age of module does not affect probability of failure), overall failure rate is the sum of failure rates of the modules
- Calculate FIT and MTTF for 10 disks (1M hour MTTF per disk), 1 disk controller (0.5M hour MTTF), and 1 power supply (0.2M hour MTTF):

Overall Failure Rate =

MTTF =

Example calculating reliability

$$FailureRate = 10 \times (1/1,000,000) + 1/500,000 + 1/200,000$$

$$= (10 + 2 + 5)/1,000,000$$

$$= 17/1,000,000$$

$$= 17000/1000,000,000 hours$$

17000 failures per billion hours (Failures In Time, FIT)

$$MTTF = \frac{1}{Failure\ Rate}$$

= 1,000,000,000/17,000
\$\approx\ 59,000hours

Example of Redundant Power Supplies

 Disk systems often have redundant power supplies to improve dependability.

 $MTTF_{\text{power supply pair}} = \frac{MTTF_{\text{power supply}}/2}{MTTR_{\text{power supply}}/MTTF_{\text{power supply}}}$ The other power supply fails before the first one is repaired

Example of Redundant Power Supplies

- Assume MTTF of power supply: 0.2M hour
- Assume it takes on average 24 hours for an operator to notice that a power supply has failed and replace it.

$$MTTF_{power supply pair} = \frac{MTTF_{power supply} / 2}{MTTR_{power supply} / MTTF_{power supply}}$$

$$= \frac{MTTF^{2}_{power supply}}{2MTTR_{power supply}}$$

$$= \frac{200,000 \times 200,000}{2 \times 24} = 830,000,000$$

(About 4150 times more reliable than a single power supply)

Fallacies

- Fallacy: The rated mean time to failure of disks is 1200000 hours or almost 140 years, so disks practically never fail.
 - Misleading information
 - How is the MTTF calculated? Put thousands of disks in a room, run them for a few months, and count the number that fail.
 - MTTF = total number of hours the disks worked cumulatively/the number of that failed
 - This number far exceeds the lifetime of a disk (commonly 5 years or 43800 hours)
 - □ For the MTTF to make sense, a user should keep replacing the disk every 5 years. (replace a disk 27 times before a failure)
 - Percentage of disks that fail in a year:
 - Failed disks = Number of disks x Time period / MTTF
 - = 1000 disks x 8760 hours /1000000 = 9
 - i.e. 9/1000 = 0.9 % would fail per year

Exercise

- Assume a disk subsystem with the following components and MTTF
 - 5 disks, each 1000000-hour MTTF
 - 1 SCSI controller, 500000-hour MTTF
 - 1 power supply, and 1 redundant power supply, each
 200000-hour MTTF
 - 1 fan, 500000-hour MTTF
 - 1 SCSI cable, 500000-hour MTTF
- Assume it takes averaged 20 hours to notice a failed power supply and repair it
- Compute the MTTF of the system as a whole

Performance

X is n times faster than Y

$$n = \frac{\text{ExTime}_{Y}}{\text{ExTime}_{X}} = \frac{\text{Performance}_{X}}{\text{Performance}_{Y}}$$

The throughput of X is 1.3 times higher than Y

The number of tasks completed per unit time on computer X is 1.3 times the number completed on Y



Evaluation of Performance - Benchmarks

Real Programs

- Including input, output, options in UI
- Kernels
 - Small, key pieces from real programs
- Toy Benchmarks
 - Small, easy to type, and run on almost any computer. E.g. sorting
- Synthetic Benchmarks
 - Created to match an average execution profile

Evaluation of Performance - Benchmarks


- Compiler writer and architect can conspire to make the computer appear faster on these benchmarks
- Conditions under which benchmarks are run also mater: require the vendor to use one compiler and one set of flags for all programs in the same language

Benchmarks

- SPEC (System Performance Evaluation Cooperative) has more than just CPU benchmarks. Check out http://www.spec.org
 - Graphics/Applications
 - High-performance computing (HPC) / OpenMP
 - Java Client/Server
 - Mail Servers
 - Network File System
 - Web Servers
- Other important benchmarks
 - TPC (Transaction Processing Performance Council)
 - Commercial apps
 - http://www.tpc.org
 - EEMBC (Embedded Microprocessor Benchmark Consortium)
 - Embedded apps
 - http://www.eembc.com
 - NAS Parallel Benchmark (NASA Advanced Supercomputing)
 - Parallel apps
 - http://www.nas.nasa.gov/

SPEC 2006 Programs

Reproducibility

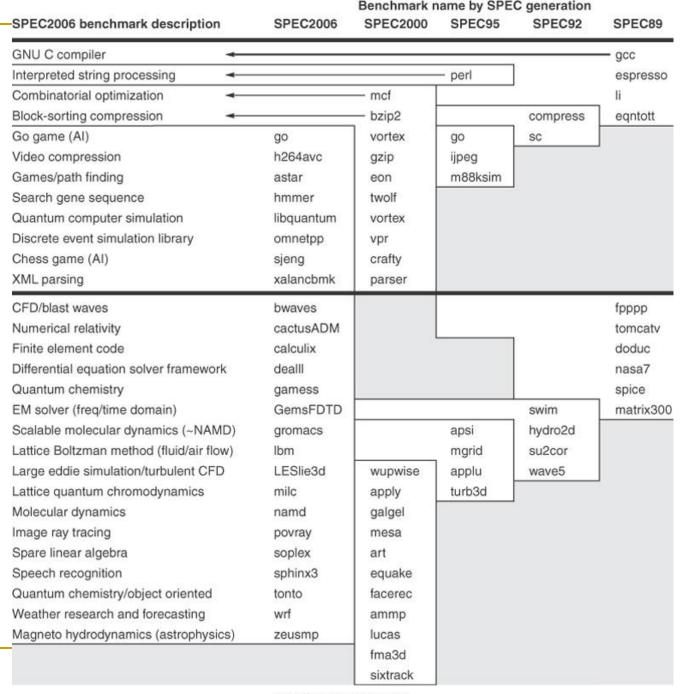

How to Summarize Suite Performance

- Arithmetic average of execution time of all programs?
 - Some SPEC programs take four times longer than others
 - So these programs would become much more important than others in arithmetic average
- Could add a weight per program, but how to select the weights?
 - Different companies want different weights for their products
 - Could be hard to reach consensus

How to Summarize Suite Performance

- Idea: use weights that make all programs execute an equal time on some reference computer
 - But we do not want the results to be biased to the performance of the reference computer
- Normalize execution times to a reference computer by dividing the time on the reference computer by the time on the computer being rated SPECRatio

SPECRatio

 Normalize execution times to reference computer, yielding a ratio proportional to performance =

time on reference computer time on computer being rated



How to Summarize Suite Performance

 If program SPECRatio on Computer A is 1.25 times bigger than Computer B, then

$$1.25 = \frac{SPECRatio_{A}}{SPECRatio_{B}}$$

$$= \frac{ExecutionTime_{reference}}{ExecutionTime_{A}}$$

$$= \frac{ExecutionTime_{eference}}{ExecutionTime_{B}}$$

$$= \frac{ExecutionTime_{B}}{ExecutionTime_{A}} = \frac{Performance_{A}}{Performance_{B}}$$

 Note that when comparing 2 computers as a ratio, execution times on the reference computer drop out, so choice of reference computer is irrelevant

How to Summarize Suite Performance

 For ratios, proper mean is geometric mean (SPECRatio is unit-less, so arithmetic mean is meaningless)

Geometric Mean =
$$\sqrt[n]{\prod_{i=1}^{n} SPECRatio_i}$$

Ratio of geometric means

- = Geometric mean of performance ratios
- ⇒ choice of reference computer is irrelevant.
- Geometric mean of ratios is chosen for summarizing performance.

The ratio of the geometric means is equal to the geometric mean of the performance ratios

$$\frac{Geometric\ Mean_{A}}{Geometric\ Mean_{B}} = \frac{\sqrt[n]{\prod_{i=1}^{n} SPECRatioA_{i}}}{\sqrt[n]{\prod_{i=1}^{n} SPECRatioB_{i}}}$$

$$= \sqrt[n]{\prod_{i=1}^{n} \frac{SPECRatioA_{i}}{SPECRatioB_{i}}} = \sqrt[n]{\prod_{i=1}^{n} \frac{ExeTime_{reference_{i}}}{ExeTime_{reference_{i}}}} \frac{ExeTimeA_{i}}{ExeTimeB_{i}}}$$

$$\sqrt[n]{\prod_{i=1}^{n} \frac{ExeTimeB_{i}}{ExeTimeA_{i}}} = \sqrt[n]{\prod_{i=1}^{n} \frac{PerformanceA_{i}}{PerformanceB_{i}}}}$$

Quantitative Principles of Computer Design

- Take Advantage of Parallelism
- Principle of Locality
- Make the Common Case Fast
 - Amdahl's Law
 - The CPU Performance Equation

Amdahl's Law

$$ExTime_{new} = ExTime_{old} \times \left[(1 - Fraction_{enhanced}) + \frac{Fraction_{enhanced}}{Speedup_{enhanced}} \right]$$

$$Speedup_{overall} = \frac{ExTime_{old}}{ExTime_{new}} = \frac{1}{(1 - Fraction_{enhanced}) + \frac{Fraction_{enhanced}}{Speedup_{enhanced}}}$$

Best you could ever hope to do:

Speedup_{maximum} =
$$\frac{1}{(1 - Fraction_{enhanced})}$$

- How to distribute resources to improve cost-performance
- Comparing the overall system performance of two alternatives/ two processor design alternatives

Amdahl's Law Example

Enhancement A

- Floating point instructions are improved by a factor of 2
- Suppose 50% of actual instruction execution time is contributed by FP.

Enhancement B

- Floating point square root (FPSQR) instructions are improved by a factor of 10.
- Suppose FPSQR is responsible for 20% of execution time
- Which enhancement is better

Amdahl's Law Example Enhancement A

- Floating point instructions are improved to run 2X; Suppose 50% of actual instruction execution time is contributed by FP.
- What is the overall speedup?

ExTime_{new} = ExTime_{old} x
$$(0.5 + 0.5/2) = 0.75$$
 x ExTime_{old}

Speedup_{overall} =
$$\frac{1}{0.75}$$
 = 1.33

Amdahl's Law Example Enhancement B

- Floating point square root (FPSQR) instructions are improved by a factor of 10.
- Suppose FPSQR is responsible for 20% of execution time. What is the overall speedup?

ExTime_{new} = ExTime_{old} x
$$(0.8 + 0.2/10) = 0.82$$
 x ExTime_{old}

Speedup_{overall} =
$$\frac{1}{0.82}$$
 = 1.22

Amdahl's Law can be applicable beyond performance

- Example of Amdahl's law applied on reliability
- Assume a disk subsystem with the following components and MTTF
 - 5 disks, each 1000000-hour MTTF
 - 1 SCSI controller, 500000-hour MTTF
 - 1 power supply, and 1 redundant power supply,
 - each 200000-hour MTTF
 - 1 fan, 500000-hour MTTF
 - 1 SCSI cable, 500000-hour MTTF
- Assume it takes averaged 20 hours to notice a failed power supply and repair it
- What is the overall enhancement for redundant power supply

Method 1: Without applying Amdahl's Law

Compute the MTTF for power supply pair first

$$MTTF_{\text{power supply pair}} = \frac{MTTF_{\text{power supply}} / 2}{MTTR_{\text{power supply}} / MTTF_{\text{power supply}}}$$
$$= \frac{200000^{2}}{2 \times 20} = 10^{9}$$

Failure rate_system:

FailureRate

$$= 5 \times (1/1,000,000) + 1/500,000 + 1/10^9 + 1/500,000 + 1/500,000$$
$$= (5 + 2 + 0.001 + 2 + 2)/1,000,000$$
$$= 11001/1000000000$$

$$MTTF = 1000000000/11001$$

Failure rate after redundant power supply

$$11001/1000000000$$
 $MTTF = 1000000000/11001$

Failure rate before redundant power supply

FailureRate

$$= 5 \times (1/1,000,000) + 1/500,000 + 1/20,0000 + 1/500,000 + 1/500,000$$

$$= (5+2+5+2+2)/1,000,000$$

=16/1000000

$$MTTF = 1000000000/16000$$

• Enhancement: 16000/11001 = 1.45(times)

Method 2: Apply Amdahl's Law

power supply pair enhancement

$$10^9 / 200000 = 5000(times)$$

Power supply contributes to a fraction of 5/16

$$\frac{1}{(1-5/16) + \frac{5/16}{5000}} = 1.45(times)$$

The CPU Performance Equation

- Instruction Count (IC)
- Clock cycles Per Instruction (CPI)

CPI = CPU clock cycles for a program / Instruction Count

CPU time

CPU time

- = CPU clock cycles for a program×Clock cycle time
- = CPU clock cycles for a program/clock rate
- $= IC \times CPI \times Clock \ cycle \ time = IC \times CPI / clock \ rate$

The processor Performance Equation

Example: Calculating CPI

Ор	Freq	Cycles	CPI (i)	(% Time)
ALU	50%	1	.5	(33%)
Load	20%	2	.4	(27%)
Store	10%	2	.2	(13%)
Branch	20%	2	.4	(27%)
			1.5	

Typical Mix

Example

- □ Frequency of FP operations = 25%
- Average CPI of FP operations = 4
- Average CPI of other instructions = 1.33
- □ Frequency of FPSQR = 2%
- □ CPI of FPSQR = 20
- Alternative 1: reduce the CPI of FPSQR to 2
- Alternative 2: reduce the average CPI of all FP to 2
 - Which alternative is better?
 - What is the performance <u>speedup</u> of each alternative?



Answer of the Example on previous page

Before Enhancement

$$CPI_{ori} = \sum_{i=1}^{n} CPI_{i} \times (IC_{i} / InstructionCount)$$
$$= 4 \times 25\% + 1.33 \times 75\% = 2.0$$

- Alternative 1: $CPI_1 = CPI_{ori} 2\% \times (CPI_{OldFPSQR} CPI_{NewFPSQR})$ = $2.0 - 2\% \times (20 - 2) = 1.64$
- Alternative 2: $CPI_2 = 75\% \times 1.33 + 25\% \times 2.0 = 1.5$
- Alternative 2 is better

Speedup for alternative 1

$$\frac{CPU_Time_{ori}}{CPU_Time_{2}} = \frac{IC \times Clock\ Cycle \times CPI_{ori}}{IC \times Clock\ Cycle \times CPI_{1}} = \frac{2}{1.64} = 1.22$$

Speedup for alternative 2

$$\frac{CPU_Time_{ori}}{CPU_Time_{2}} = \frac{IC \times Clock\ Cycle \times CPI_{ori}}{IC \times Clock\ Cycle \times CPI_{2}} = \frac{2}{1.5} = 1.33$$

Why can't we use the following equations:

Alternative 1 speedup =
$$\frac{1}{(1-0.02) + \frac{0.02}{10}} = 1.0183$$

Alternative 2 speedup =
$$\frac{1}{(1-0.25) + \frac{0.25}{2}} = 1.1428$$

We got different answers? What's wrong with it?



Example

- Two alternatives of conditional branch
 - CPU A:
 - A condition code is set by a compare instruction and followed by a branch that tests the condition code
 - 20% of instructions are conditional branches
 - CPU A's clock cycle time is 1.1 times faster than CPU B

CPU B:

- compare is included in the branch
- Since every branch needs a compare, another 20% of the instructions are compares. Therefore, The instruction count for CPU B is 80% of instruction count of CPU A
- 25% of instructions are conditional branches
- Conditional branch takes 2 cycles for both A and B
- All other instructions take 1 cycle
- Compare the CPU time of the two alternatives.
- Which alternative is faster?

$$\begin{split} &CPU_Time_A\\ &= IC_A \cdot CPI_A \cdot ClockCycleTim_A\\ &= IC_A \cdot (0.2 \times 2 + 0.8 \times 1) \cdot ClockCycleTim_A\\ &= 1.2\ IC_A \cdot ClockCycleTim_A \end{split}$$

$$\begin{split} &CPU_Time_A\\ &= IC_B \cdot CPI_B \cdot ClockCycleTim_B\\ &= 0.8IC_A \cdot (0.25 \times 2 + 0.75 \times 1) \cdot 1.1ClockCycleTim_A\\ &= 1.1 \ IC_A \cdot ClockCycleTim_A \end{split}$$

Alternative B is faster

Exercise

- Frequency of ALU instructions: 40%
- Frequency of data transfer instructions: 35%
- Frequency of branch instructions: 25%
- ALU instructions take 2 cycles, data transfer instructions take 3 cycles, branch instructions take 3 cycles.
- Enhancement A: reduce ALU instructions to 1 cycle
- Enhancement B: reduce data transfer and branch instructions to 2 cycles
- Apply Amdahl's Law to compute the performance speedup for each method.
- Which is better?