


Computer Organization

Lab13 Cache(1)


Load program on CPU (optional)



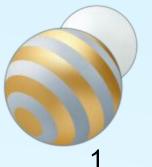

Topic

- > Cache (1)
 - ➤ Direct Mapped Cache(implementation)
 - ➤ Components in Cache
 - ➤ Read/Write

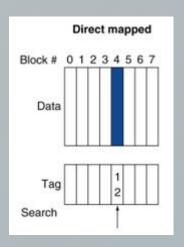


- > Load program on CPU (optional)
 - > Re-program the FPGA chip with updated bitstream file
 - > (*) No need to re-program the FPGA chip by getting the updated coe files through Uart port



Direct Mapped Cache

- Direct mapped cache
 - > ONE data in MEMORY is mapped to ONLY ONE location in CACHE.
 - Location determined by the ADDRESS:
 - > The **lower bits of address** define the place of the unit(aka **block**) in the cache.
 - The **higher bits of address** are called **tag** which would be **stored in the cache unit**(aka cache block).

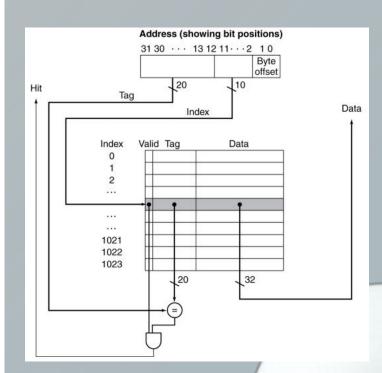




Direct Mapped Cache continued

Componets in Cache


- Valid(1bit)
 - > Initial value is 1' b0
 - > Turns to 1' b1 while the cache unit has been written which means there has been data in the cache unit
- > **Tag:** Higer bits of the address
- > **Data:** Store the data which has been cached

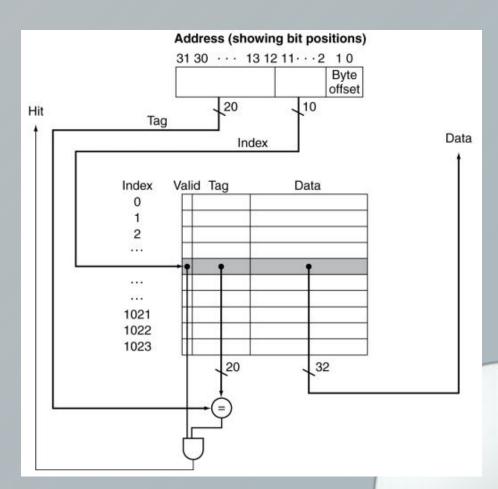



Direct Mapped Cache continued

- Cache Hit vs Cache Miss
 - > Hit
 - > Find the cache unit based on the 'Index' of 'Address'
 - > Find the 'valid' and 'Tag' parts from the cache unit
 - ➤ If 'valid' is 1 and the 'Tag' is the same as the tag part(higer bits) of 'Address', then it is cache hit.
 - Miss: If not hit, then miss
 - hit ratio = hits / accesses

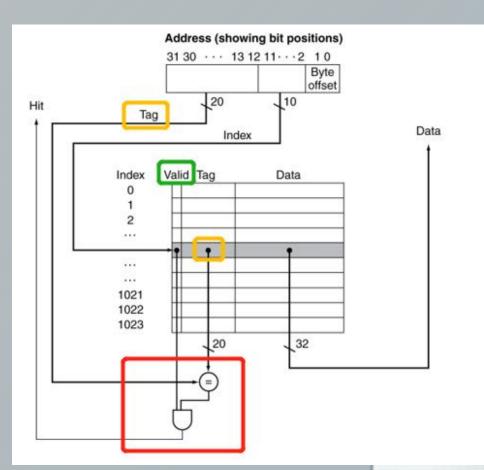




Implement Direct Map Cache(ports)

```
module cache
#(parameter A WIDTH=32, parameter C INDEX=10, parameter D WIDTH=32)
(clk,resetn,
p a, p dout, p din, p strobe, p rw, p ready,
m a, m dout, m din, m strobe, m rw, m ready);
    input clk, resetn;
     input [A_WIDTH-1:0] p_a; //address of memory tobe accessed
    input [D_WIDTH-1:0] p_dout; //the data from cpu
     output [D_WIDTH-1:0] p_din; //the data to cpu
    input p_strobe; // 1 means to do the reading or writing
    input p_rw; // 0:read, 1:write
     output p ready; // tell cpu, outside of cpu is ready
                               //address of memory tobe accessed
     output [A WIDTH-1:0] m a;
     input [D_WIDTH-1:0] m_dout; //the data from memory
    output [D_WIDTH-1:0] m_din; //the data to memory output m_strobe; //1 means to do the reading or writing
                       //0:read, 1:write
     output m rw;
                                  //memory is ready
     input m ready;
```

Q. What's the relationship between A_WIDTH, C_INDEX and D_WIDTH?

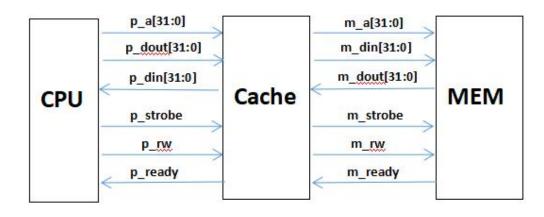

TIPS:

parameter in verilog makes the design more **flexiable**, which is highly recommended.



Implement Direct Map Cache(componets)

Build the cache, complete the following statement


```
// d_valie is a piece of memory stored the valid info for every block reg d_valid [ 0 : complete code here p7-1]; (1<<C_INDEX)-1

// T_WIDTH is the width of 'Tag' 2. A_WIDTH-C_INDEX-1 localparam T_WIDTH = complete code here p7-2; //d_tags is a piece of memory stored the tag info for every block reg [T_WIDTH-1: 0] d_tags [0 : complete code here p7-1]; //d_data is a piece of memory stored the data for every block reg [D_WIDTH-1:0] d_data [0 : complete code here p7-1];
```

A WIDTH: the width of 'Address', here its value is 32.

C INDEX: the width of 'Index', here its value is 10.

T_WIDTH: used as the width of 'Tag'. 'Byte offset': 2 bit-width

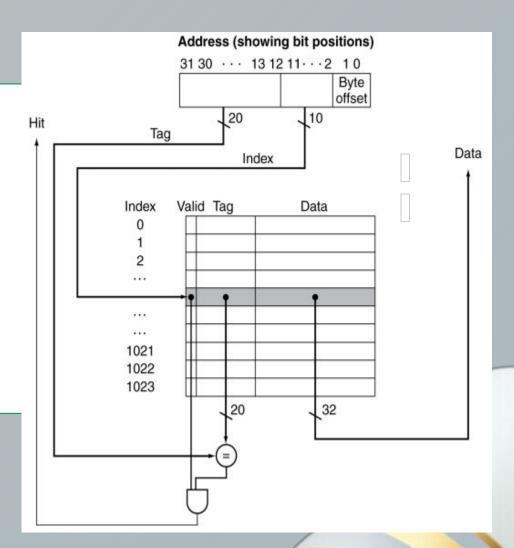



Implement Direct Map Cache (cache hit vs cache miss)


Complete the following code to implement cache hit

```
// d valie is a piece of memory stored the valid info for every block in cache
// d tags is a piece of memory stored the tag info for every block in cache
// d data is a piece of memory stored the data for every block in cache
wire [C_INDEX-1:0] index = p_a[C_INDEX+1:2];
wire [T WIDTH-1:0] tag = p a[A WIDTH-1: C_INDEX+2];
wire valid = d valid[index];
wire [T WIDTH-1:0] tagout = d tags[index];
wire [D WIDTH-1:0] c dout = d data[index];
//cache control
wire cache hit = complete the code here p8
                                                  valid & (tagout ==
wire cache miss = ~cache hit;
                                                         valid && (tag ==
                                                         tagout)
```

A_WIDTH: the width of 'Address', here its value is 32.

C INDEX: the width of 'Index', here its value is 10.

T WIDTH: used as the width of 'Tag'. 'Byte offset': 2 bit-width

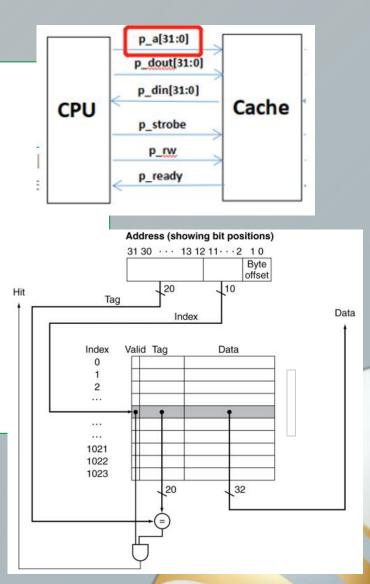





Implement Direct Map Cache(cache write)

Complete the following code to implement cache write

```
wire c write = p rw | cache miss & m ready;
integer i;
                                           1'B0
always @ (posedge clk, negedge resetn)
     if( resetn == complete code here p9-1 ) begin
          for(i=0; i<(complete code here p9-2); i=i+1)
                d valid[i] <=1'b0;
     end
                                               1<<C INDEX
     else if(c write==1'b1)
          d valid[index] <=1'b1;
always @ (posedge clk)
     if(c write==1'b1) d tags[index] <= tag;</pre>
wire sel in = p rw;
wire [D WIDTH-1:0] c din = complete code here p9-3
                                              p dout:m dout
always @ (posedge clk)
     if(c_write==1'b1) d_data[index] <= c din;</pre>
```

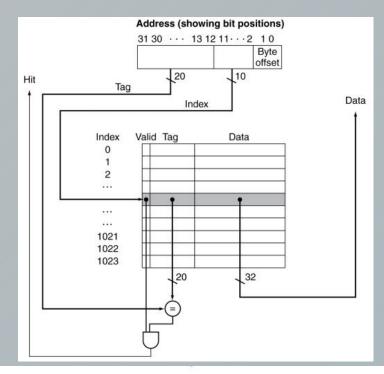

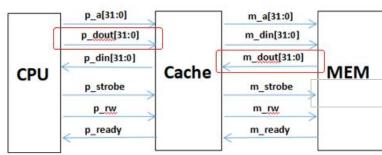



Implement Direct Map Cache(memory write)

Complete the following code to implement memory write (write_through)


```
// write data (m_din) to the memory unit specified by m_a
    assign m_a = p_a;

assign m_din = p_dout;

// p_strobe (1 means to do the reading or writing, 0 means else)
// m_strobe (1 means to do the reading or writing, 0 mean else)
// p_rw, m_rw (0:read, 1:write)

assign m_strobe = p_strobe & (p_rw | cache_miss);


assign m_rw = complete code here p10;
    p_strobe & p_rw
```

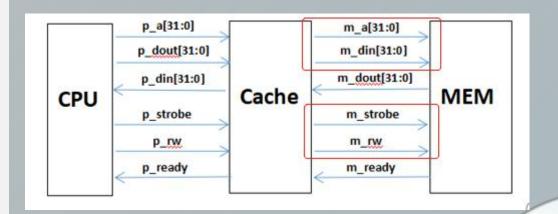



Implement Direct Map Cache(CPU read)

Complete the following code to implement CPU read

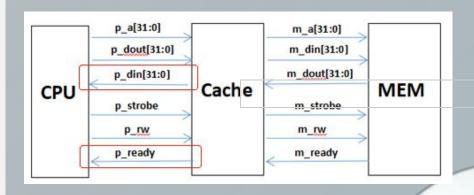



- 1. Complete the code of the Directly Mapped Cache(page 7-11)
- **2.** Build a testbench to verify the function of the Directly Mapped Cache.




How to make CPU work on a new program?

- How to make CPU work on a new program?
 - new program -> new machine code and initial data (new coe(s))

 As this 2 ram are implemented by ip core, we can implement it
 - Solution1: by changing the parameter in the ip core setting
 - update the **ProgramRom** and **DataRAM** of CPU with new coe(s) -> re-generate bitstream of updatad CPU -> re-program the FPGA chip by updated bitstream file
 - Solution2: let our
 - While CPU work on **Communicate mode**: CPU get the new coe(s) by uart port, then rewrite its '**PrgramROM'** and **DataRAM**
 - While CPU work on **Normal mode**: work on the updated program
 - 2 tools(GenUBit_Minisys3.0, UartAssist) and some modifications on the CPU are needed for solution2.



Solution2 on load program on CPU

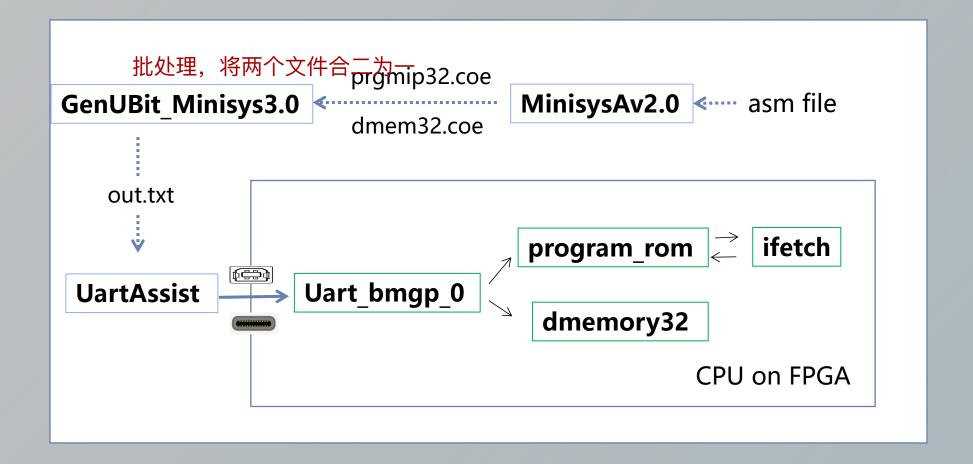


"GenUBit_Minisys3.0", "UartAssist" and "UARTCoe_v3.0" could be found in the "uart_tools.rar" of "labs/lab13_uart" on BlackBoard site



Uart Interface on Minisys Board and EGO1 Board


21,18作用不同:用于下发

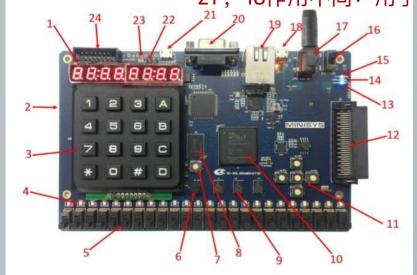

For **Minisys board(old version**, the type of USB_Jtag interface is typeB),

port 18(as shown on the left hand) is the USB to UART interface.

For **Minisys board(new vesrion**, the type of USB_Jtag interface is typeC), USB_Jtag and USB to UART interface share the same port.

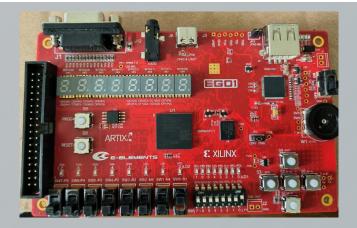

For **EGO1 board**, USB_Jtag and USB(typeC) to UART interface share the same port.

The handbook of Minisys board and EGO1 board could be found in the "Handbook_of_Minisys_EGO" of "labs" on BlackBoard site



Changes on Single Cycle CPU

- 1. Two working modes on the CPU
 - Normal mode vs Uart Communication mode
- 2. A new module(Uart bmgp 0) which works as Uart interface
- 3. A new clock for uart communication
- 4. Changes
 - > 3-1) **CPU** top:

New module, new ports, new internal connection and new logic

> 3-2) Changes on **Data-meomroy**


Working mode: Normal mode vs Uart Communication mode

- > 3-3) Changes on IFetch
 - > Change IP core "prgrom" from ROM to RAM
 - > Working mode: Normal mode vs Uart Communication mode
 - > Separate "prgrom" from IFetch (optional)



Uart-tool.rar in lab13 folder

Part assist.exe

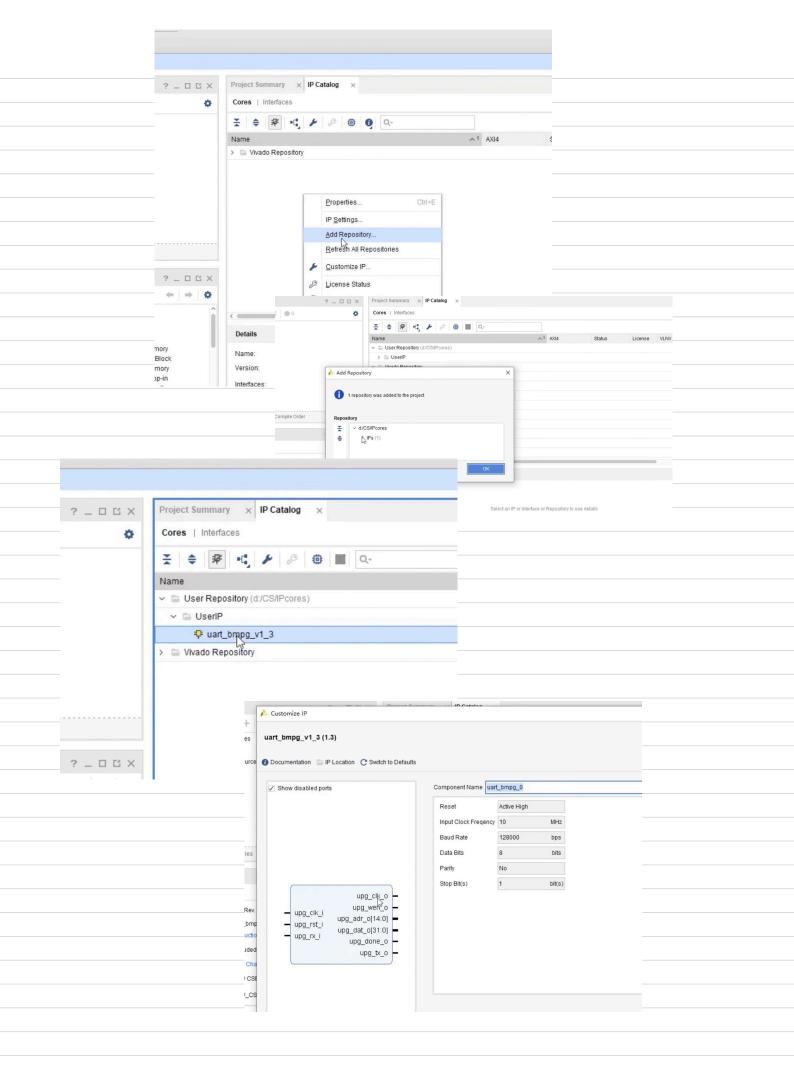





Add an IP core Which Processes Uart Data

Step1: Add the **IP core** to IP catalog(User Repository) of vivado.

- The Communication between this IP core and Uart port:
 - Receive data from Uart port and forward to data-memory and instruction-memory
 - **Send** data back to uart port to info that all the data has been received.

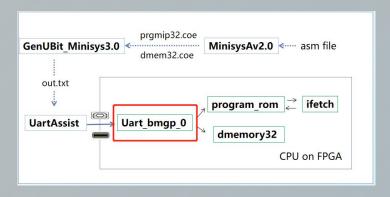


Step1-1: download the ziped IPcore file, then unzip it

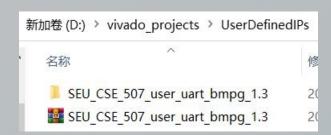


The IP core could be found in the "labs/lab13_uart" on BlackBoard site

Step1-2: open "IP Catalog" pane, right click on the blank space and select "Add Repository"

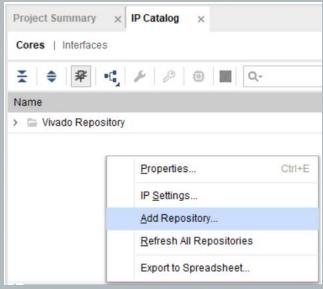

CS202 wangw6@sustech.edu.cn


Step1-3: in "Add Repository" pane select the diretory where the upzipped IPcore is placed. vivado would detect the IPcore and pop up the following prompt window, click "OK".

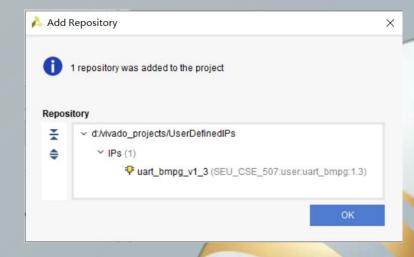




Add an IP core Which Processes Uart Data continued

Step2: Add the IP core(uart_bmpg_0) from IP catalog into vivado project: in "IP catalog" pane, the IPcore(uart_bmpg_v1_3) could be found in the "User Repository", click it to add it to your vivado project.

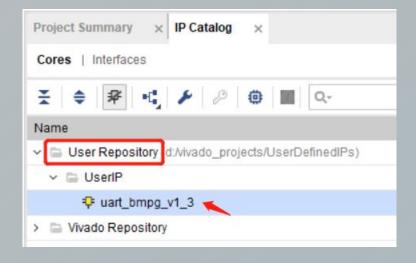


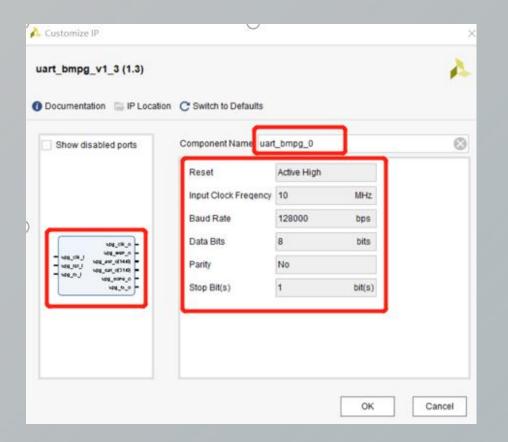

NOTE:

Don't change the settings of this IP core.


While using the IPcore, its name, features on uart communication and ports are important!

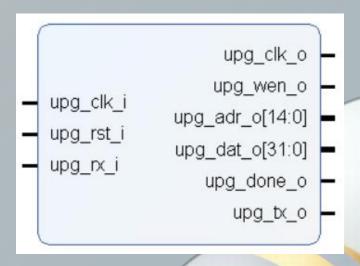




Add a New Clock For The New IP core

- Reset the "cpuclk" IP core to make a new clock
 - Add a new clk_out (clk_out2) whose frequence is 10 Mhz for the IP core(uart_bmpg_0) which is used for Uart communication(on last page)

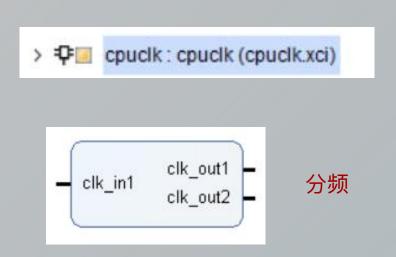

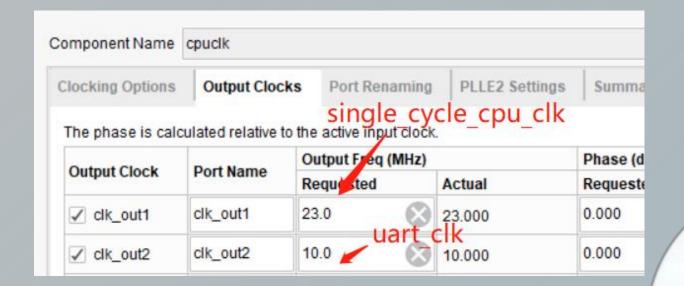



Changes on CPU Top Module

```
module CPU_TOP(
    input fpga_rst, //Active High
    input fpga_clk,
    input[23:0] switch2N4,
    output[23:0] led2N4,

// UART Programmer Pinouts
// start Uart communicate at high level
    input start_pg, // Active High
    input rx,
    output tx // send data by UART
);
```

```
out.txt

program_rom ifetch

UartAssist

uart_bmgp_0

dmemory32

CPU on FPGA
```

```
// For Minisys, the package_pin relationship in the constraints file set_property -dict {IOSTANDARD LVCMOS33 PACKAGE_PIN Y19} [get_ports rx] set_property -dict {IOSTANDARD LVCMOS33 PACKAGE_PIN V18} [get_ports tx] // For EGO1, the package_pin relationship in the constraints file set_property -dict {IOSTANDARD LVCMOS33 PACKAGE_PIN T4} [get_ports rx] set_property -dict {IOSTANDARD LVCMOS33 PACKAGE_PIN N5} [get_ports tx]
```

add rx, tx in top and constraint file

Here the usage of "fpga_rst" and "start_pg" are only one type of implements, not the request.

The Y19(UART_RX) and V18(UART_TX) are the USB-UART pins of the FPGA chip(Artix7 fgg484) on Minisys Board.

The T4(UART_RX) and N5(UART_TX) are the USB-UART pins of the FPGA chip(Artix7 csg324) on EGO1 Board



Changes on CPU Top Module continued

```
module CPU_TOP(
    input fpga_rst, //Active High
    input fpga_clk,
    input[23:0] switch2N4, cpu have 3 status
    output[23:0] led2N4,

// UART Programmer Pinouts
// start Uart communicate at high level
    input start_pg, // Active High
    input rx, // receive data by UART
    output tx // send data by UART
);
```

```
// UART Programmer Pinouts
wire upg_clk, upg_clk_o;
wire upg_wen_o; //Uart write out enable
wire upg_done_o; //Uart rx data have done

//data to which memory unit of program_rom/dmemory32
wire [14:0] upg_adr_o;

//data to program_rom or dmemory32
wire [31:0] upg_dat_o;
```

Q1. How many types of working mode on the CPU which support uart communication to download the program and the data? How to identify different types of working mode?

Q2. What's the relationship between the working mode and the "fpga_rst" and "start_pg"?

TIPS: Here the usage of "fpga_rst" and "start_pg" are only one type of implements, not the request.



Changes on Demeory32

```
module dmemory32 (
              ram clk i,
                                 // from CPU top
    input
                                 // from Controller
    input
              ram wen i,
    input [13:0]
                                 // from alu result of ALU
                   ram adr i,
                                 // from read data 2 of Decoder
    input [31:0]
                   ram dat i,
                                 // the data read from data-ram
                   ram dat o,
    output [31:0]
    // UART Programmer Pinouts
                                 // UPG reset (Active High)
    input
                   upg rst i,
    input
                   upg clk i, // UPG ram clk i (10MHz)
                                 // UPG write enable
                   upg wen i,
    input
                   upg adr i,
                                // UPG write address
    input [13:0]
                   upg_dat_i, // UPG write data
    input [31:0]
                                // 1 if programming is finished
    input
                   upg done i
```

Q. While "**kickOff**" is 1'b1, what's the working mode of the CPU? How about while "**kickOff**" 1'b0?

```
ram_clk_i
ram_wen_i
ram_adr_[(13:0)]
ram_dat_i(31:0)]
upg_rst_i
upg_clk_i
upg_wen_i
upg_adr_i(13:0)]
upg_dat_i(31:0)]
upg_done_i


dmemory32_v1_0
```

```
wire ram clk = !ram clk i;
/* CPU work on normal mode when kickOff is 1.
CPU work on Uart communicate mode when kickOff is 0.*/
wire kickOff = upg_rst_i | (~upg_rst_i & upg_done_i);
ram ram (
     .clka (kickOff ?
                       ram clk
                                   : upg clk i),
     .wea (kickOff?
                       ram wen i : upg wen i),
                       ram_adr_i : upg_adr_i),
     .addra (kickOff ?
                       ram_dat i : upg_dat_i),
) 多路选择器输出;
     .dina (kickOff ?
     .douta (ram dat o)
);
                           kickoff=1:
```



Changes on Demeory32 continued


- upg_wen_i (uart write enable on Dmemory32) :
 - determined by: upg_wen_o(from uart_bmpg_0) & upg_adr_o[14] (from uart_bmpg_0)
- upg_adr_i[13:0] (uart write address on Dmemory32):
 - connect with: upg_adr_o[13:0] (from uart_bmpg_0)

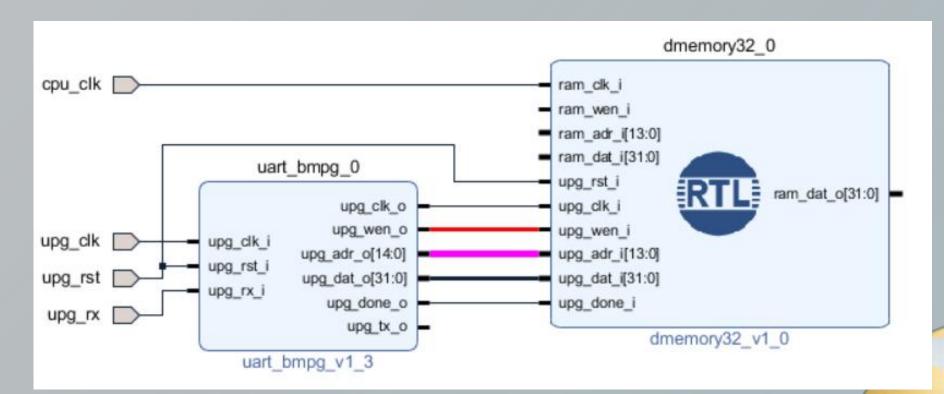




Changes on IFetch

- Separae IP core("programrom_0") which stores the Instruction from IFeth(optional)
- Change prgrom from ROM to RAM(writabel while work on Uart communication mode, read only while work on normal mode)
- upg_wen_i (uart write enable on "programrom") , determined by: upg_wen_o(from uart_bmpg_0) &
 (!upg_adr_o[14]) (from uart_bmpg_0)
- upg_adr_i[13:0] (uart write address on "programrom"), connect with upg_adr_o[13:0] (from uart_bmpg_0)

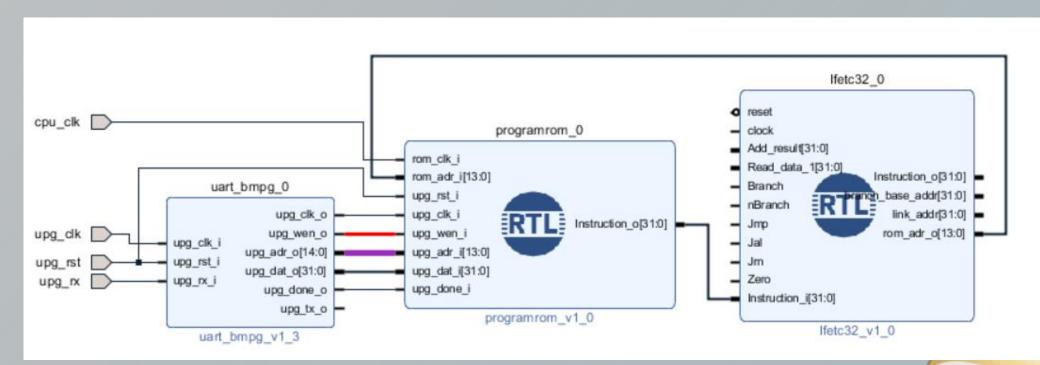



Changes on IFetch continued

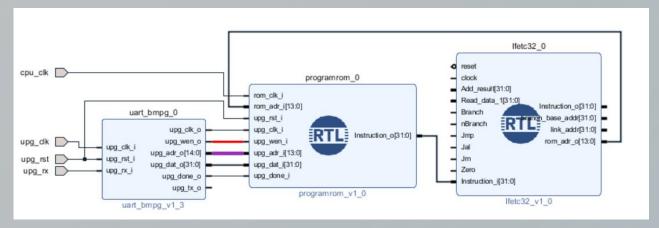

```
module programrom (
    // Program ROM Pinouts
                  rom clk i,
                             // ROM clock
    input
    input[13:0] rom adr i,
                            // From IFetch
           [31:0] Instruction_o, // To IFetch
    output
    // UART Programmer Pinouts
                  upg rst i,
                              // UPG reset (Active High)
    input
                  upg clk i, // UPG clock (10MHz)
    input
                  upg_wen i, // UPG write enable
    input
                  upg_adr_i, // UPG write address
    input[13:0]
                  upg_dat_i, // UPG write data
    input[31:0]
                  upg done i
                              // 1 if program finished
    input
);
```





Changes on IFetch continued

Make a **new** programrom(which is a **RAM** memory):

TIPS about the "programrom":

- While on CPU communication mode, "programrom" is writable.
- While on CPU normal mode, "programrom" is readOnly.

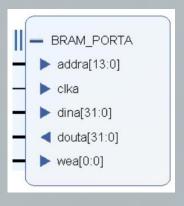


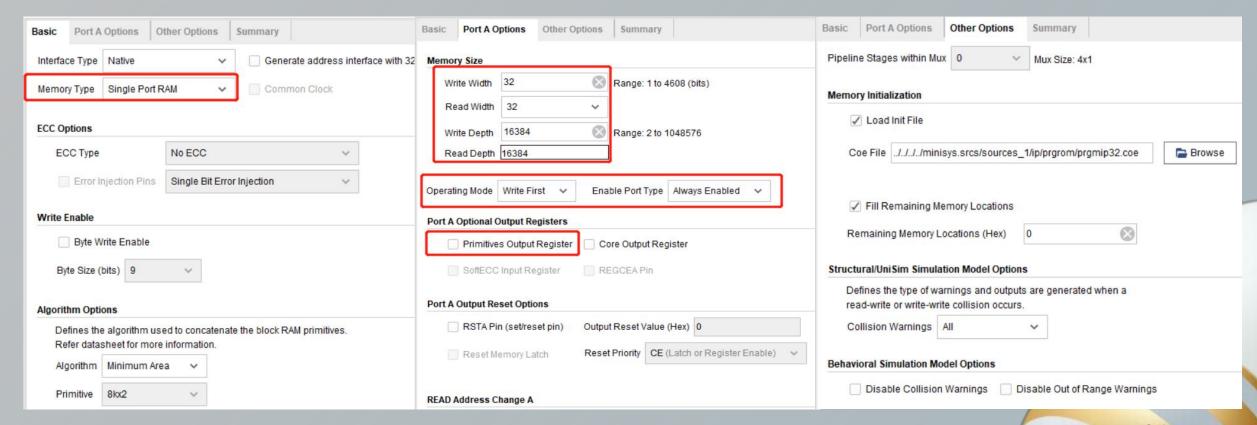




Tools(1): Generate the Data For Uart Port

- Step1: Using "MinisysAv2.0" to assemble the asm file and generate the coe files(prgmip32.coe and dmem32.coe)
- Step2: Using "GenUBit_Minisys3.0" to merge the coe files(prgmip32.coe and dmem32.coe) into one file "out.txt"
 - Tips on Step2:
 - put "prgmips32.coe" and "dmem32.coe" into the same directory with "UARTCoe_v3.0" and "GenUBit_Minisys3.0", or you will need to make some modification on GenUBit Minisys3.0

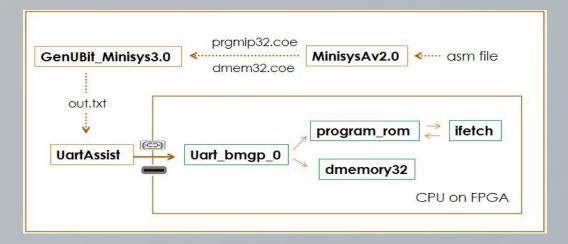

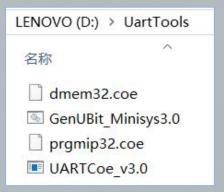

d:\UartTools>GenUBit_Minisys3.0.bat 2 files are read successfully Hexadecimal file(s) detected. Done.

"GenUBit_Minisys3.0" , "UartAssist" and "UARTCoe_v3.0" could be found in the "uart_tools.rar" of "labs/lab13_uart" on BlackBoard site



Tools(2): Using "UartAssist"

- > Step 1: Connect the Computer which runs "UartAssist" with Minisysboard on which your designed CPU has already been programed on its FPGA chip.
- > Step 2: Double click on "UartAssist" to open it
- > Step 3: Set the items in "串口设置" as the settings of screen snap on the right hand, then click on "打开"
 - ➤ **NOTICE:** "串口号" could be an **serial port** other than "COM4", which **is up to your Computer**. The port which you choose here and then click on "打开" hasn't report error is the right port.







Tips: Using "UartAssist" continued

- Step 4: Make sure the CPU on FPGA works on uart communication mode.
- > Step 5: Set the items in "发送区设置" as the screen snap on the right hand. Click on "启用文件数据源", find the data file which is to be transformed by uart port to FPGA chip.
- Step 6: Wait until a notice info "Program done!" has appeared in the "串口数据接收" window as the screen snap on the right hand.



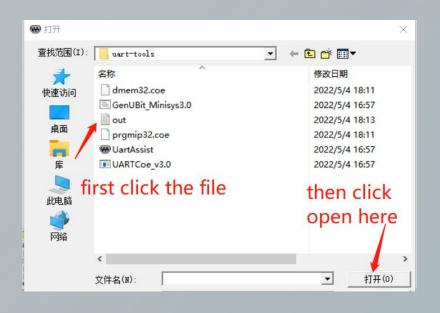

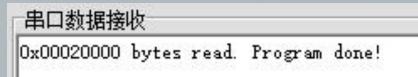



Practice(optional)

- > 1. Modify the Data-memory module, do the unit test on the updated Data-memory.
- > 2. Modify the IFetch, do the unit test on the updated IFetch.
- > 3. Update the CPU with uart communication implemented.
- ➤ 4. Do the test: Programe FPGA chip only once, make the CPU run the different programs by using uart communication to update the instructions and data of new program.

It is strongly recommended to conduct unit test first, and then conduct integration test after passing the unit test.