
#### **CSE 321a**

# Computer Organization (1) تنظيم الحاسبات (1)



3<sup>rd</sup> year, Computer Engineering Fall 2017



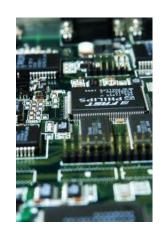

Dr. Hazem Ibrahim Shehata Dept. of Computer & Systems Engineering

Credits to Dr. Ahmed Abdul-Monem Ahmed for the slides

#### **Administrivia**

- Midterm:
  - —Date: Saturday, Nov. 18, 2017.
  - —Time: TBA.
  - —Location: TBA.
  - —Coverage: lecture #1 → lecture #6.
- Assignment #2:
  - —Deadline extended!
  - —Due: Thursday, Nov. 16, 2017.

Website: <a href="http://hshehata.github.io/courses/zu/cse321a">http://hshehata.github.io/courses/zu/cse321a</a>

Office hours: Sunday 1:00pm-2:00pm

# Chapter 12. Instruction Sets: Characteristics and Functions


#### **Outline**

- Machine Instruction Characteristics
  - Elements of machine instructions, instruction representation, instruction types, number of addresses, instruction set design issues.
- Types of Operands
  - —Addresses, numbers, characters, logical data.
  - —Example: x86 data types.
- Types of Operations
  - Data transfer, arithmetic, logical, conversion, input/output, system control, transfer of control.

#### **Outline**

- Machine Instruction Characteristics
  - Elements of machine instructions, instruction representation, instruction types, number of addresses, instruction set design issues.
- Types of Operands
  - —Addresses, numbers, characters, logical data.
  - —Example: x86 data types.
- Types of Operations
  - —Data transfer, arithmetic, logical, conversion, input/output, system control, transfer of control.

# **Instruction Cycle State Diagram**

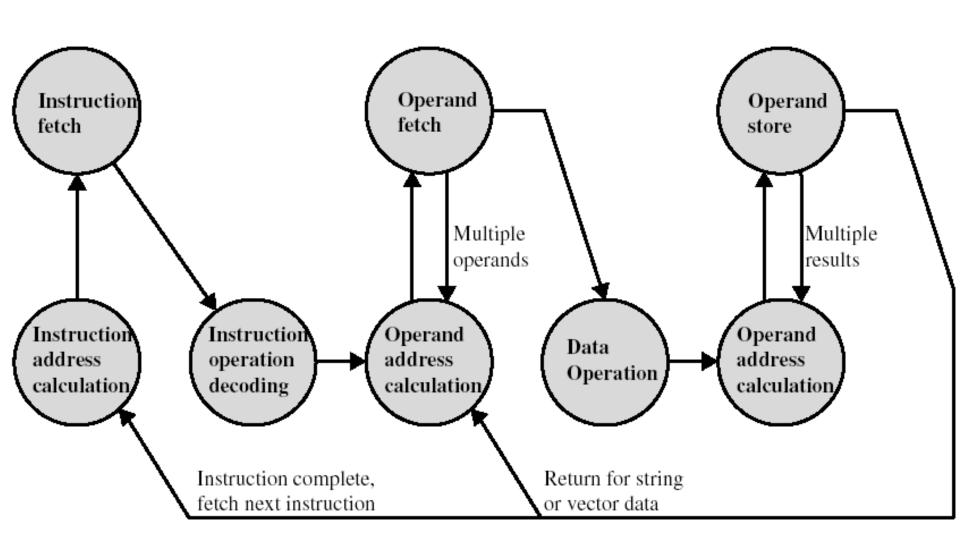

#### **Instructions**

#### Instruction set

- Complete collection of instructions that are understood by a certain CPU, i.e., the set of all machine instructions.
- —Instructions are represented in a binary form (machine language), or a symbolic form (assembly language).

#### Elements of an instruction

- Operation code (opcode)
  - Do this ... (e.g., ADD, I/O).
- Source operand(s) reference
  - To this ...
- Result operand reference
  - Put the answer here ...
- Next instruction reference
  - When you have done that, do this next ...
  - Usually implicit (from PC).

- Immediate: value.
- Main memory: address.
- CPU register: register number. Implicit if one register exists.
- I/O device: I/O module & device.

  MM address if memory-mapped I/O.

# **Instruction Representation**

- Within computer, each instruction is represented by a sequence of bits, divided into fields.
- During the execution phase, an instruction is read from the IR register.
- CPU extracts the data from these fields to perform the required operation.
- Programmers represent instructions symbolically:
  - Opcodes → mnemonics, e.g., ADD, SUB, LOAD.
  - Operands → symbolic names, e.g., Y = 514.
  - Example: ADD R1, Y

| 4 bits | 6 bits            | 6 bits            |
|--------|-------------------|-------------------|
| Opcode | Operand Reference | Operand Reference |
|        | 16 hi4a           |                   |

# **Types of Instructions**

- Data processing
  - Arithmetic and logic instructions.
  - Arithmetic: computations (processing) on numeric data.
  - Logic: operate on the bits of a word (any data type).
- Data storage
  - Memory instructions.
- Data movement
  - I/O instructions.
- Program flow control
  - Jump and branch instructions.

# **Number of Addresses (1)**

- What is the maximum number of addresses that need to be represented in an instruction?
  - —"addresses" here means "explicit operand references".
  - —Instructions that perform binary arithmetic/logic operations (e.g., +, &) require most # of "addresses".
    - 2 addresses to specify source operands, 1 to specify destination operand (i.e., result), 1 to specify next instruction.
    - Four addresses must be specified in this case!
  - —Problem: Specifying 4 addresses → too long instruction!
  - —Solution: Specify some operands implicitly!
    - Address of next instruction is implicitly known → [PC]+1!
    - Destination: same as source, or always the accumulator!
  - —In most architectures, most instructions are one-, two-, or three-address instructions.

# Program to Execute: $Y = (A-B)/(C+D\times E)$

Comment

 $Y \leftarrow Y - B$ 

 $T \leftarrow D$ 

#### 3-address instructions

Instruction

| CIID V A D         | $Y \leftarrow A - B$      | 1 dddi C55  | iiioti dottoiio             |
|--------------------|---------------------------|-------------|-----------------------------|
| SUB Y, A, B        | ·                         | Instruction | Comment                     |
| MPY T, D, E        | $T \leftarrow D \times E$ | LOAD D      | $AC \leftarrow D$           |
| ADD T, T, C        | $T \leftarrow T + C$      | MPY E       | $AC \leftarrow AC \times E$ |
| DIV Y, Y, T        | $Y \leftarrow Y \div T$   | ADD C       | $AC \leftarrow AC + C$      |
|                    |                           | STOR Y      | $Y \leftarrow AC$           |
|                    |                           | LOAD A      | $AC \leftarrow A$           |
| 2-address ins      |                           | SUB B       | $AC \leftarrow AC - B$      |
| <b>Instruction</b> |                           | DIV Y       | $AC \leftarrow AC \div Y$   |
| MOVE Y, A          | $Y \leftarrow A$          | STOR V      | $V \leftarrow \Delta C$     |

STOR Y

T, E  $T \leftarrow T \times E$ 

Y, B

**SUB** 

"MPY D, E" would alter D. So, it is replaced by these two instructions!

 $Y \leftarrow AC$ 

1-address instructions

# **Number of Addresses (2)**

#### 3 addresses


- Operand 1, Operand 2, Result.
- Template: a = b + c.
- Needs very long words to hold everything.

#### 2 addresses

- One address doubles as operand and result.
- Template: a = a + b.
- Reduces length of instruction.
- Requires some extra work.
  - Temporary storage to hold some results!

# **Number of Addresses (3)**

- 1 address
  - —Implicit second address.
  - —Usually a register (accumulator: AC).
  - —Common on early machines.
- 0 (zero) addresses
  - —All addresses implicit.
  - —Usually the top element(s) of the stack.
    - Stack: set of locations used as last-in-first-out buffer.

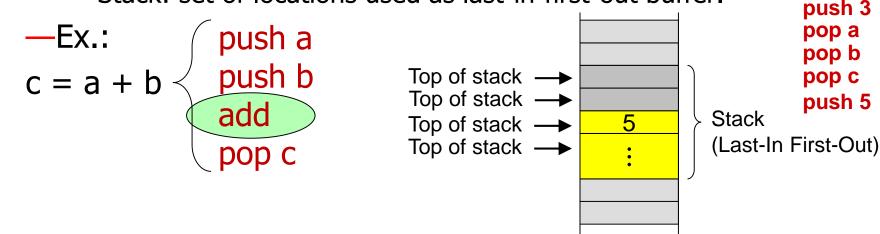

# Instruction Addresses (nonbranching instructions)

| Number of Addresses | Symbolic Representation | Interpretation                       |
|---------------------|-------------------------|--------------------------------------|
| 3                   | OP A, B, C              | $A \leftarrow B OP C$                |
| 2                   | OP A, B                 | $A \leftarrow A \text{ OP B}$        |
| 1                   | OP A                    | $AC \leftarrow AC OP A$              |
| 0                   | OP                      | $T \leftarrow (T - 1) \text{ OP } T$ |

AC = accumulator

T = top of stack

(T-1) = second element of stack

A, B, C = memory or register locations

# **Summary: How Many Addresses?**

#### More addresses

- —More complex instructions → more complex CPU.
- —Longer-length instructions → slower fetch/execution.
- —Fewer instructions per program.
- ──More registers are available → more operations performed solely on registers → quicker processing
- Fewer addresses
- $\blacksquare$  —Shorter-length instructions  $\Rightarrow$  faster fetch/execution.
- —More instructions per program.
- Most modern machines employ a mixture of one-, two- and three-address instructions.

# **Instruction Set Design**

- Instruction set defines how many functions performed by CPU → significantly affects CPU implementation.
- Most important issues in designing instruction set:
  - —Operation repertoire: number of op's, their complexity.
  - —Data types: types of data dealt with by instructions.
  - —Instruction formats: instruction length, number of addresses, size of various fields.
  - —Registers: number of CPU registers available, which operations can be performed on which registers?
  - —Addressing modes: ways of referencing operands.
  - —Style: RISC vs CISC!

#### **Outline**

- Machine Instruction Characteristics
  - Elements of machine instructions, instruction representation, instruction types, number of addresses, instruction set design issues.
- Types of Operands
  - —Addresses, numbers, characters, logical data.
  - —Example: x86 data types
- Types of Operations
  - —Data transfer, arithmetic, logical, conversion, input/output, system control, transfer of control.

# **Types of Operands**

 Machine instructions operate on data (strings of 1's and 0's) interpreted as one of the following:

#### —Addresses

Unsigned integers representing pointers to memory locations.

#### —Numbers

- Signed/unsigned integers, floating point, BCD.
- Limited → limited magnitude (& precision for real numbers).

#### —Characters

- IRA (ASCII): 7-bit code. An 8<sup>th</sup> bit could be used for parity.
- EBCDIC: 8-bit code (used on IBM mainframes).

#### —Logical Data


- Bit-oriented view of data → array of logical values (true/false).
- Each bit in the array can be individually manipulated!

# Ex.: x86 Data Types

- The x86 instructions can handle so many types of data. Most common types are:
  - —General: arbitrary binary contents.
    - Size: byte, word (16 bit), double-word (32 bit), quad-word (64 bit), and double-quad-word (128 bit).
    - Note: x86 memory is byte-addressable.
  - —Integer: singed binary value (two's complement)
    - Size: byte, word, double-word, quad-word.
    - Note: Multi-byte numeric data in x86 are saved in "littleendian" style, i.e., least significant bytes are stored first.
  - —Ordinal: unsigned binary values
    - Size: byte, word, double-word, quad-word.

#### Ex.: x86 Data Types

- ... (cont.):
  - —Floating-point: conforming to IEEE-754 standard.

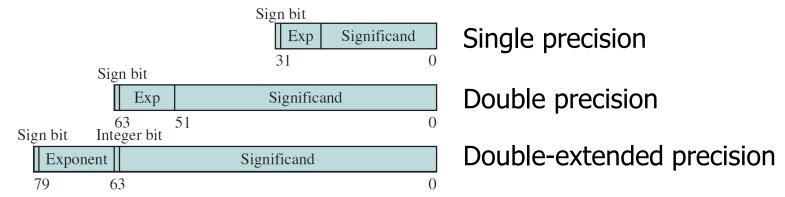

- —Binary-Coded-Decimal (BCD):
  - Unpacked BCD: One BCD digit per byte.
  - Packed BCD: Two BCD digits per byte.
- —Bit fields: sequence of independent bits (up to 32 bits).
- —Byte strings: sequence of bytes, words, or double-words.
- —Others: near/far pointers, packed byte/word/... SIMD, and many more!!

#### **Outline**

- Machine Instruction Characteristics
  - Elements of machine instructions, instruction representation, instruction types, number of addresses, instruction set design issues.
- Types of Operands
  - —Addresses, numbers, characters, logical data.
  - —Example: x86 data types
- Types of Operations
  - —Data transfer, arithmetic, logical, conversion, input/output, system control, transfer of control.

#### 1. Data Transfer

- Instruction must specify:
  - —Location of source operand.
  - -Location of destination operand.
  - —Amount of data.
  - —Addressing mode for each operand.
- Location of operand and amount of data could be specified as part of opcode or operand fields:
  - Specified in opcode → different instructions for different kinds of movements (reg./mem.) and amounts of data.
    - e.g. IBM EAS/390 (next slide) → Disadv.: hard to program!
  - 2. Specified in operand  $\rightarrow$  1 instruction for same amount of data. Kind of movement is specified in operand.
    - e.g. VAX and x86 → Disadv.: less compact!

# 1. Data Transfer - Ex.: IBM EAS/390

| Operation<br>Mnemonic | Name            | Number of Bits<br>Transferred | Description  |
|-----------------------|-----------------|-------------------------------|--|
| L                     | Load            | 32                            | Transfer from memory to register                                 |
| LH                    | Load Halfword   | 16                            | Transfer from memory to register                                 |
| LR                    | Load            | 32                            | Transfer from register to register                               |
| LER                   | Load (short)    | 32                            | Transfer from floating-point register to floating-point register |
| LE                    | Load (short)    | 32                            | Transfer from memory to floating-point register                  |
| LDR                   | Load (long)     | 64                            | Transfer from floating-point register to floating-point register |
| LD                    | Load (long)     | 64                            | Transfer from memory to floating-point register                  |
| ST                    | Store           | 32                            | Transfer from register to memory                                 |
| STH                   | Store Halfword  | 16                            | Transfer from register to memory                                 |
| STC                   | Store Character | 8                             | Transfer from register to memory                                 |
| STE                   | Store (short)   | 32                            | Transfer from floating-point register to memory                  |
| STD                   | Store (long)    | 64                            | Transfer from floating-point register to memory                  |

# 1. Data Transfer – Common Operations

| Description                                       |
|---|
| Transfer word or block from source to destination |
| Transfer word from processor to memory            |
| Transfer word from memory to processor            |
| Swap contents of source and destination           |
| Transfer word of 0s to destination                |
| Transfer word of 1s to destination                |
| Transfer word from source to top of stack         |
| Transfer word from top of stack to destination    |
|   |

#### 2. Arithmetic

- Add, Subtract, Multiply, Divide
  - —Signed Integer (fixed-point) numbers
  - —Floating point numbers.
- May include
  - —Increment (a++)
  - —Decrement (a--)
  - —Negate (-a)
  - —Absolute (if a<0 then -a else a)</p>
- May involve data transfer
- Desired arithmetic operation performed by ALU.

# 3. Logical – Common Operations

| <b>Operation Name</b> | Description  |
|-----------------------|--|
| AND                   | Perform logical AND  |
| OR                    | Perform logical OR   |
| NOT (complement)      | Perform logical NOT  |
| Exclusive-OR          | Perform logical XOR  |
| Test                  | Test specified condition; set flag(s) based on outcome   |
| Compare               | Make logical or arithmetic comparison of two or more operands; set flag(s) based on outcome            |
| Set Control Variables | Class of instructions to set controls for protection purposes, interrupt handling, timer control, etc. |
| Shift                 | Left (right) shift operand, introducing constants at end   |
| Rotate                | Left (right) shift operand, with wraparound end  |

# 3. Logical – AND, OR, NOT, XOR, ...

- To manipulate individual bits → bit twiddling.
- Could be used for bit masking:
  - —Reset a specific group of bits:
    - Operation: AND
    - Mask: 0 for each bit to be reset and 1 otherwise.
  - —Set a specific group of bits:
    - Operation: OR
    - Mask: 1 for each bit to be set and 0 otherwise.
  - —Toggle a specific group of bits:
    - Operation: XOR
    - Mask: 1 for each bit to be inverted and 0 otherwise.

# 3. Logical – Shift and Rotate Operations

Logical right shift


**Logical left shift** 

**Arithmetic right shift** 

**Arithmetic left shift** 

Right rotate

Left rotate

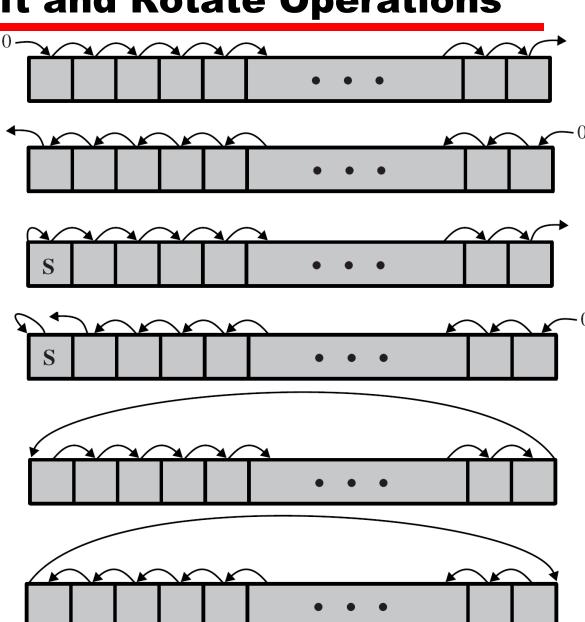

# 3. Logical – Shift and Rotate Operations

- Example: suppose we wish to unpack 2 characters from 16-bit location and send them to an I/O device.
  - 1. Process left-hand character:
    - a) Load word into register.
    - b) Shift 8-bit positions to right.
    - c) Perform I/O.
  - 2. Process right-hand character:
    - a) Load word again into register.
    - b) AND with 000000011111111.
    - c) Perform I/O.

# **Reading Material**

- Stallings, Chapter 12:
  - —Pages 406 424