### Basic I/O System Design

#### **Course Teacher:**

#### Md. Fahmidur Rahman Sakib


Lecturer, Department of Computer Science & Engineering Metropolitan University

Course ID: CSE 237

Course Title: Microprocessor and Interfacing


- ☐ A **Microprocessor** is a great tool for solving problem but is of little or no use if it can't communicate with other devices.
- □ Input-Output devices (or peripherals) such as Keyboards, Mouse, LEDs, Displays are essential components of the microprocessor-based or microcontroller-based systems.
- Input Devices
  - Receive data from peripheral (i.e., device)
  - Send data to computer
- Output Devices
  - Receive data from computer
  - ☐ Send data to peripheral (i.e., device)

- 8086 processor uses address bus pins AD[15:0] to locate an
   I/O port
- □ 65,536 possible I/O ports
- Data transfer between ports and the processor occurs over data bus
- AL (or AX) is the processor register that takes input data (or provide output data)

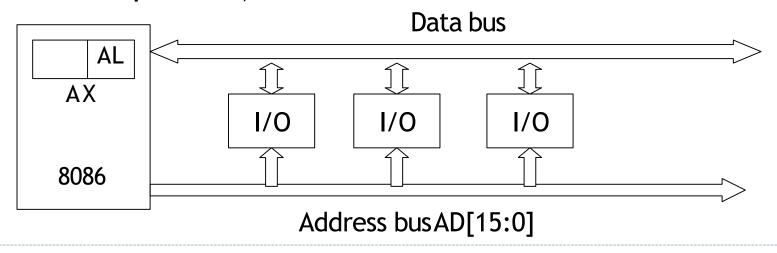

- I/O devices serve two main purposes
  - To communicate with outside world
  - To store data
- □ **I/O Controller** is a **microchip** that acts as an interface between the systems bus and I/O device and helps to facilitate the flow of data between these devices. For e.g., 8255
  - Relieves the processor of low-level details
  - Takes care of electrical interface
- I/O Controller Chips have three types of registers
  - Data
  - Command
  - Status

### Block Diagram of Basic I/O System

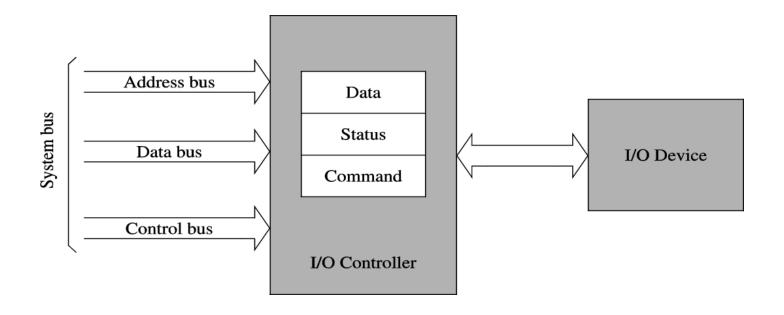

#### ☐ Read Operation: To receive binary data from an input peripheral

➤ MPU places the address of an input port on the address bus to locate the I/O device, then it enables the input port by asserting the RD signal, and reads data using the data bus.

#### ☐ Write Operation: To send binary data to an output peripheral

> MPU places the address of an output port on the address bus, places data on data bus, and asserts the WR signal to enable the output port.

#### ☐ Important Points:

- Writing to the port: When the MPU sends out or transfers data to an output port
- Reading from the port: When the MPU receives data from an input port
- One port can be accessed at a time (Serial Interfacing)

- I/O Instructions are commands given by the microprocessor to the I/O devices or peripherals in order to perform a specific task.
- IN is the instruction that reads information from an I/O device.
- OUT is the instruction that writes/sends data to an I/O device.
- Data transfer takes place between the microprocessor accumulator (AL or AX) and the I/O device.

- ☐ The I/O device may be identified using two methods:
  - **Fixed address** A byte called **p8** immediately following the opcode stores an 8 bit I/O address. This is called fixed because this is stored with the opcode in the ROM.
  - Variable address Register DX holds a 16 bit I/O address. Because this can be changed.

- □ **IN AX, 25 -** Here 25 (p8) refers to port 25 which is an 8 bit address (direct format)
- □ IN AL, DX A byte input from the port addressed by
   DX into AL (indirect format)
- □ IN AX, DX -A word input from the port addressed by DX into AX (indirect format)

- If **p8** is used, only 8 bits are used thus the address or port number appears on lines A0-A7.
  - > Hence, the first 28 or 256 I/O port addresses (00H
    - FFH) are accessed by both fixed and variable I/O instructions.
- If DX is used, then 16 bits are used thus the address or port number appears on lines A0-A15
  - > Hence the addresses 0100H-FFFFH (257<sup>th</sup> address to 65535<sup>th</sup> address) are accessed only by variable I/O Address instructions.


### Accessing I/O Devices

To establish a stable passage of communication between the CPU and the I/O devices, the peripherals must first be mapped to specific addresses so that they can accessed. Also to enable the flow of data the help of the system bus (address, data and control) is also required. This allocation of the system bus and mapping the I/O devices to addresses is performed in two different ways:

- ☐ Memory-mapped I/O
- ☐ Isolated I/O

### Memory Mapped I/O

- A part of the memory is used to map I/O devices.
- A device is mapped to a memory location. Sending data to the particular location causes interaction with the device.
- Common address, data and control lines for both memory and I/O.
- Uses same memory read and write signals for memory and I/O.
- Most processors use this I/O mapping.

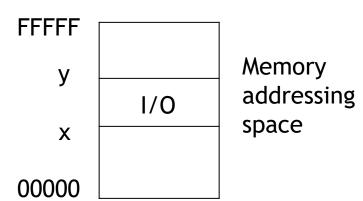

- Memory Mapped I/O
  - Advantages:
    - Less complication,
    - Less circuitry
    - Less decoding
    - MOV Instruction can also be used instead of IN and OUT
  - Disadvantage:
    - A portion of the memory system is used as the I/O Map

#### Isolated I/O

- Separate I/O address space
- Common data and address bus for peripherals, CPU and memory
- But separate or isolated control signals for I/O and memory.
- IORC and (IOWC) signals are for I/O devices.
- MEMR and MEMW signals are for memory
- This is the most common form of I/O transfer technique used with Intel processors and PC.
- Pentium supports isolated I/O of 64 KB address space.

**FFFFF** 

Memory addressing space

00000

**FFFF** 

1/0 addressing space

0000

- □ Isolated I/O
  - □ On Personal computers **Isolated I/O** is used.
  - 8 bit port addresses are used to access devices located on system board.
  - 16 bit port address are used to access serial and parallel ports as well as video and disk drive systems.

#### □ Isolated I/O

- Advantages:
  - ☐ In this system no memory is wasted for I/O mapping.
- Disadvantage:
  - Instructions IN and OUT need to be used to perform data transfer.
  - Separate signals are also needed to interact with the I/O devices which separate it from normal memory access instructions.

### Accessing I/O Ports in 8086

Register I/O instructions

IN accumulator, port8; direct format


Useful to access first 256 ports

IN accumulator, DX; indirect format

- D X gives the port address
- Simple MOV instruction can be used instead of IN and OUT.

### Accessing I/O Ports in 8086

#### **Addressing Space**

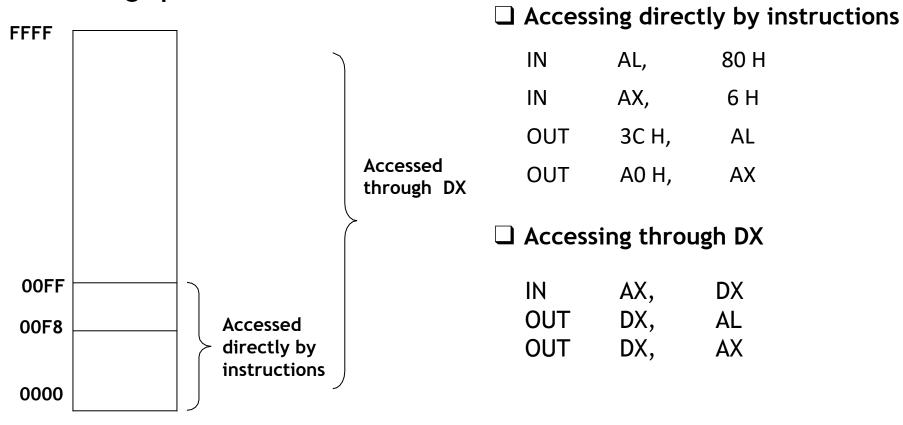

### I/O Data Transfer Techniques

Different ways of transfer of data between the CPU and the I/O devices, namely:

- Programmed I/O
- Interrupt-driven I/O
- DMA

### Programmed I/O

#### Transfer of data between CPU and I/O using programmed I/O:

- Invoke read / write command to peripheral
- Check ready status of I/O device
- If not ready, continue checking status until ready
- If ready, initiate operation
- Thus transfer of data takes place

#### Key points to remember:

- CPU waits for I/O device to complete the operation if its not ready
- Programmed I/O Wastes CPU time
- CPU performance is degraded

#### Now to improve this situation to some extent, we will use Interrupt-Driven I/O

### Interrupt-driven I/O

#### Transfer of data between CPU and I/O using Interrupt-driven I/O:

- Invoke read / write command to peripheral
- □ Now instead of waiting for I/O device, it continues it's other tasks
- I/O device when ready, gives an Interrupt signal to CPU signaling its ready for data transfer
- Since I/O device is ready, operation is initiated.
- Thus transfer of data takes place

#### Key points to remember:

- CPU does not continuously wait for I/O device
- I/O device itself alerts the CPU when it is ready
- CPU performance is better than programmed I/O

#### But there is still room for making CPU performance more efficient

### Why do we require an alternate?

- □ Interrupt driven and programmed I/O require active CPU intervention.
- Makes the CPU wait
- ☐ For typical microprocessor 1 byte of data transfer between RAM and I/O take 5-10 microseconds
- □ Requires CPU's attention during data transfer
- □ CPU is tied up and processing time is being wasted

### DMA is the answer

### Direct Memory Access (DMA)

**Direct Memory Access (DMA)** is a process of data transfer between the memory and I/O devices. An external device takes over the control of system bus from the CPU and facilitates with the data transfer.


- The basic idea of DMA is to transfer blocks of data directly between memory and peripherals. The data does not have to go through the microprocessor.
- DMA controller can perform this task, relieving the CPU from the burden of transferring data.
- The CPU just issues the command for data transfer and shift its focus on actual data processing while the DMA handles the transfer of data
- Can be used for high-speed data transfer between memory and peripherals such as HDD, magnetic tape etc.

Nowadays, DMA can transfer data as fast as 40-60M byte per second.


### Direct Memory Access (DMA)

- DMA doesn't make use of the microprocessor to do the transfer so who is going to do the READ and WRITE operation?
- ☐ A *DMA Controller Chip* is may be built into the microprocessor or may be found external.
- We can see that the DMA controller has to perform operations that are very similar to operations performed by a microprocessor.
- They are thus generally designed and built by microprocessor manufacturers.

- A DMA controller is connected with several peripherals that may request DMA.
- The controller can decides the priority of the DMA requests, can communicate with the I/O devices and the CPU, and provides memory addresses for data transfer.
- □ For e.g. the Intel 8237 is a DMA controller
- □ It is a 4-channel device. Each channel is dedicated to a specific I/O device
- □ It is capable of addressing 64KB section of memory

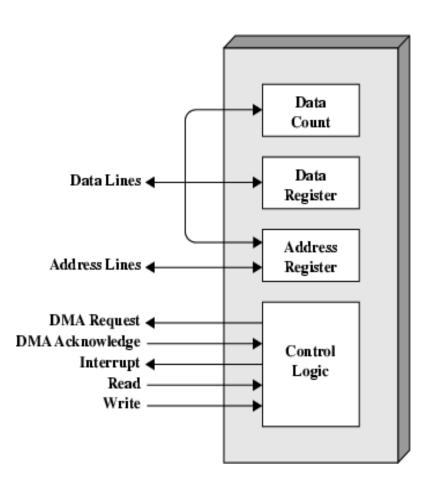


**Typical DMA Module Diagram** 

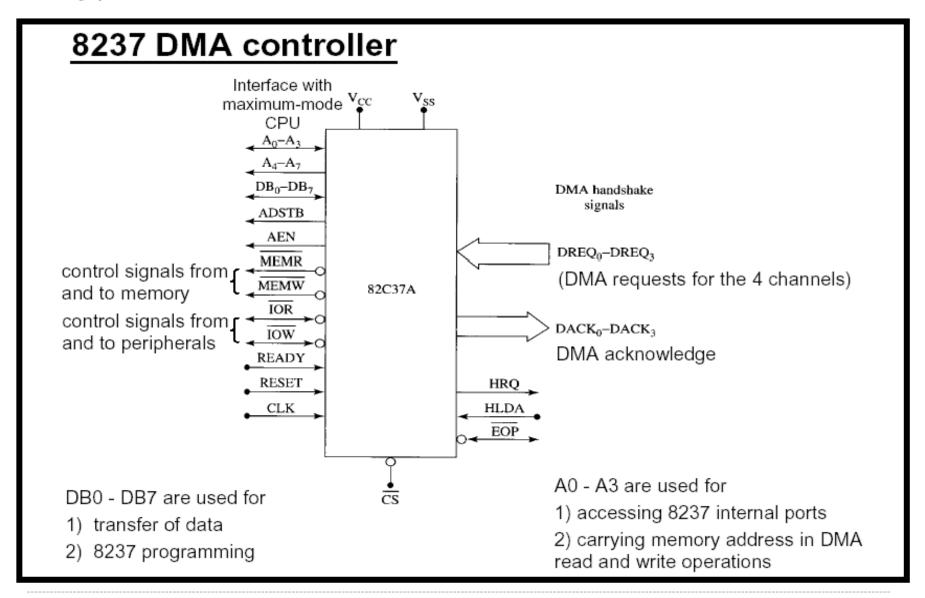


#### Pin Description:


- ☐ DREQ3 DREQ0 (DMA channel request): Used to request a DMA transfer from a particular DMA channel.
- ☐ DACK3 DACKO (DMA channel acknowledge):
  Acknowledges a channel DMA request from a device.
- ☐ **HRQ** (**Hold request**): Requests control of the system bus to the CPU.
- ☐ HLDA (Hold acknowledge): Signals the 8237 that the microprocessor has acknowledged the hold request and relinquished control of the system bus.

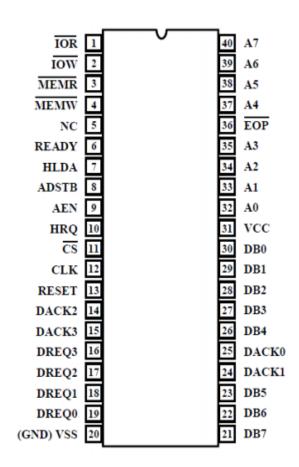


- ☐ AEN (Address enable): Enables the DMA address latch connected to the 8237 (Use to take the control of the address bus from the microprocessor)
- ☐ ADSTB (Address strobe): It is used to latch the higher 8 bits of the address during DMA operation.
- ☐ EOP (End of process): It is a bi directional pin that signals the end of the DMA process.
- □ IOR (I/O read): A bi-directional pin which the CPU can use to read data from the internal registers of 8237 and can be used as an output to read data from a peripheral during a DMA write cycle.

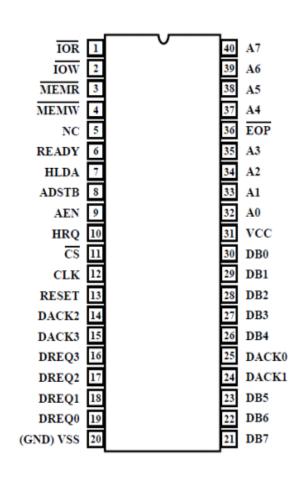

- □ IOW (I/O write) A bi-directional pin which the CPU can use to write data to the internal registers of 8237 and can be used as an output strobe to write data to a peripheral during a DMA read cycle.
- ☐ MEMW (Memory write): Used to write data to the selected memory during a DMA write cycle.
- ☐ MEMR (Memory read): Used to read data from the selected memory during a DMA read cycle.
- A3 A0: They are bi directional pins. They can be used to select the internal registers of the 8237 by the CPU. Otherwise holds the lower nibble of the lower 8 bits of the memory address from where data is to be read / write during DMA operation.

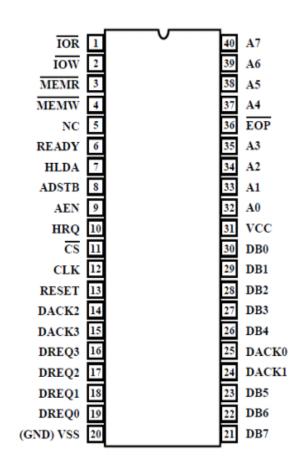

- □ A7 A4: Used to provide the higher nibble of the lower 8 bits of the memory address from where data is to be read / write during DMA operation.
- □ DBO DB7: Carries data during data transfer. Otherwise stores the higher 8 bits of the memory address from where data is to be read / write during DMA operation.

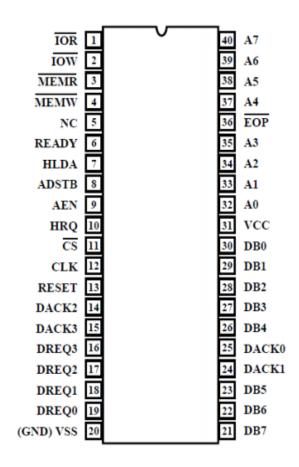

### DMA Operation in Brief

- CPU tells DMA controller:-
  - Read/Write
  - Device address
  - Starting address of memory block for data
  - Amount of data to be transferred
- □ CPU carries on with other work
- DMA controller deals with transfer
- DMA controller sends interrupt when finished

### DMA Operation in Details

- CPU invokes a read/write command to the peripherals
- The peripherals when ready sends a DMA request (DREQ) signal to the DMA controller
- The DMA controller sends a Hold Request (HRQ) signal to the CPU to gain control of the system bus
- The CPU replies with a Hold Acknowledgement signal to the DMA giving the DMA controller total control over the system bus
- The DMA controller then sends a DMA Acknowledgement signal to the peripherals in reply to the previous DMA request signal

### DMA Operation in Details

- Data can now be transferred between Memory and I/O with the help of the DMA controller
- DMA controller sends interrupt signal to the CPU when finished with data transfer.
- The DMA disables the DMA Acknowledgement signal and the CPU disables the Hold Acknowledgement signal taking back control of the system bus.

### **DMA Operation**


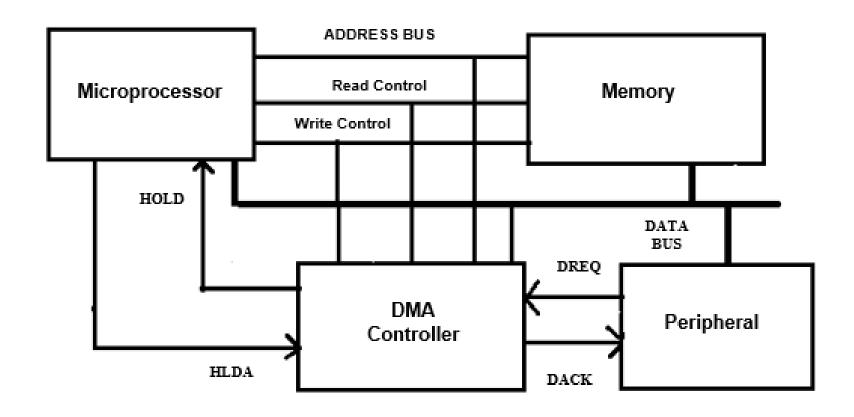



Fig: Simplified Block Diagram of a DMA Operation

### **DMA Operation**

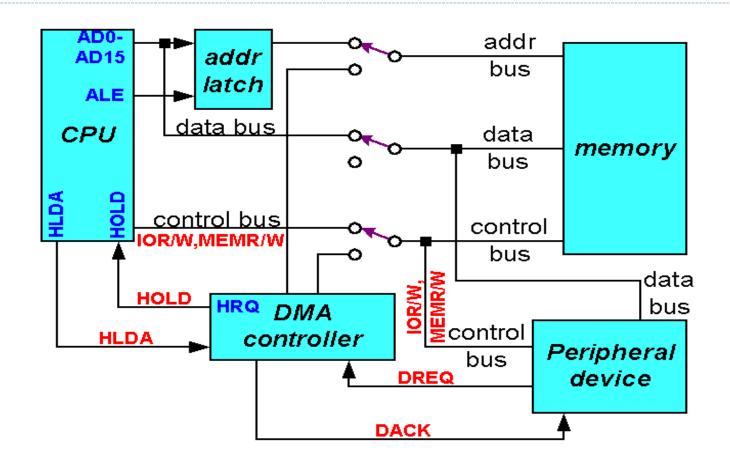


When the CPU is Bus Master

### **DMA** Operation

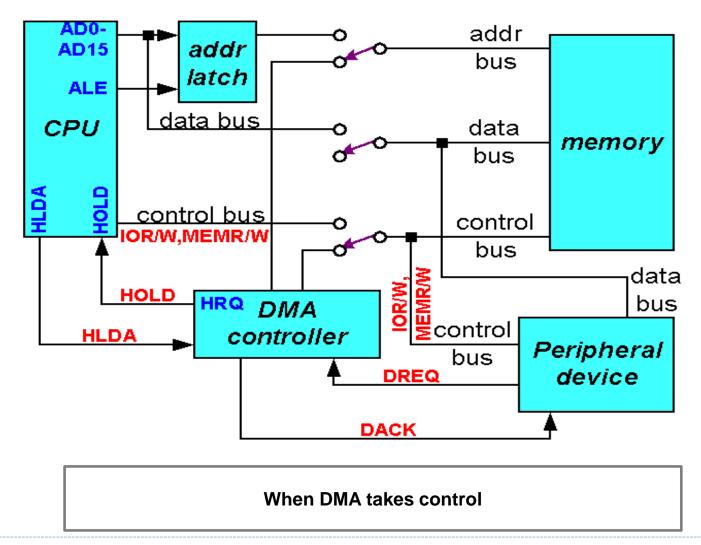

### DMA Cascade Mode

- Using this method more than one 8237 DMA Controller can be connected.
- ☐ This can be adopted to get the utility of more than 4 channels
- ☐ The HRQ and HLDA signals from the additional controllers are connected with the DREQ and DACK pins of the primary or "Host" controller
- ☐ It is the responsibility of the host to prioritize and co ordinate the secondary controllers.

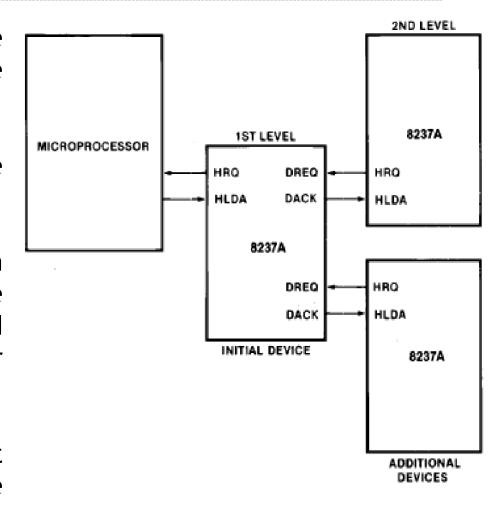

# Thank You!!