

BIFF User Guide

Board Instrumentation Framework

Flexible, data agnostic instrumentation



Legal

Copyright © 2016-2023 Intel Corporation

Licensed under the Apache License, Version 2.0 (the "License");

You may not use this file except in compliance with the License.

You may obtain a copy of the License at

<http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.

See the License for the specific language governing permissions and limitations under the License.

Revisions

Revision	Description
16.04	Initial Release
16.06	Added Peekaboo Options
16.07	Fixed <Modifier> section. Added experimental SyncFile. Added ProcessThread.
16.08	Added note on Multi-Source widgets Added <Plugin> for DynamicWidgets Added <Synchronized> for charts.
16.09	Added -altSplash option for Marvin. Added new entry to trouble shooting. Added new feature to <Operator>Average. Added <Bound> option for collectors Added MinValue and MaxValue operators
16.10	Added <Oscar> settings to Marvin <Network> for dynamic connections. Operator <Input> added DefaultValue. Added <Import> and <DefaultAlias> for Marvin Alias's, SVG widget, PrevRowAlias and PrevColumnAlias. Added <AutoAdvance> for dynamic Grids and Images.
16.12	Added <Shunt> capability in Oscar Added Stepped to TaskList Added DataPulse and Mathematic Task Added Case Conditional Added MarvinLocalData application option
17.01	Added PDF_Reader widget Added <BITW> In Oscar %(Namespace, ID) for Tasks in Marvin added Added Marvin <If>then-else ability
17.02	Can now use OscarTask to load and playback file in one command. Added MarvinMath Changed Name Added <ToolTip> and <SelectedStyle>to Marvin
17.03	Added <Transition> to DynamicImage
17.04	Added Marvin Ability to loop through files in a directory as part of<For> Deprecated <Repeat> in favor of <For> for looping. Added 'LegacyMode' for application padding.
17.05	Added info about updated collectors – libvirt, ovsdb, ipmi, SystemInfo, IPC Added <Format> tag to Text widget.
17.07	Doc cleanup and more troubleshooting info
17.10	Added <SplitToken> to DynamicCollector. Note about Java 9 support.

17.12	Added <ClickThroughTransparent> ability for all widgets/grids. Added % for dimensions. Added <MonitorNumber> and \$(CANVAS_WIDTH),\$(CANVAS_HEIGHT),\$(SCREEN_H2W_RATIO),\$(SCREEN_W2H_RATIO)
18.01	Added GridMacro ability. Hgap and vgap can be % for dimensions. Added ability to specify dimensions and stylesheet for prompts. Added WORKING_DIR (in Minion too) and WORKING_DIR_URI aliases. Added ExcludeForAutoActions to DynamicGrid
18.02	Added Tasks for individual video files if clicked. Added blurb for Linux_CPU collector. Added precision option for MarvinMath
18.04	Added <And>/<Or> to Marvin Conditionals. Added BatchConvert to Oscar. Added %(Namespace,ID) for Marvin Task Data.
18.05	Added MarvinAdminTask 'Terminate', 'RefreshData' and FileWriteWidget.
18.07	Added Oscar InsertBookmark Task, and OscarBind Task.
18.10	Added Peekaboo Marvin:[ValueRange]. Tabs now have a task option.
19.01	Added <OnDemand> Tabs,Grids. OverrideNamespace for Collectors. UserDefined collectors can now set Scale and Normalization Added <GenerateDatapoint> to Marvin.
19.02	Added DataSetFile,SaveScreenshot Task. SteppedRanges.InfluxDB
19.03	Added MenuButton Widget. Ability to add images and styles to Menu Items. Added <ListView> to Grids. Scale to some charts. Scale ability to multi-source charts. Added TextBox Widget.
19.04	Added ToggleButton and <Decimals> section in Marvin application.
19.05	Changed to support Java 11+. Added BIFM file format to Oscar and Marvin.
19.07	Added GenerateDatapoint: Proxy, GenerateDatapoint: SplitList and ListIndex
19.08	Added CreateDataPoint to MenuItem. CreateDataPoint for MenuItem Tasks. GenerateDataPoint MakeNamespaceList,MakeIDList. Peekaboo Reset.
19.09	Added TCP Proxy for Oscar, in general should allow the passing of data through a firewall. Added TableChart widget.
20.02	Added Prometheus collector.
20.12	Added CollectInfoForDevice
21.09	Added example of collecting telemetry from Linux driver, SkipLineToken to DynamicCollector
21.12	Added Wildcards to MinionTask Namespace selection, added id and slim to LinuxNetworkCollector
22.01	Adding RunningAverage Operator. Adding 'interval' to <tasklist>, adding DeltaValue task for Marvin
23.04	Adding 4.8.17 IpRoute2GatherVfStatsForPF collector.

Contents

1	Introduction	19
1.1	History and Design Goals	19
1.2	Coding.....	19
1.3	Versioning.....	20
2	High Level Overview	21
3	System Requirements.....	22
4	Minion.....	23
4.1	Invoking Minion	23
4.1.1	One-and-done	24
4.1.2	Using Alias File.....	24
4.2	Configuration File.....	24
4.2.1	<Minion>	25
4.2.2	<Namespace>	25
4.2.2.1	<Name>	25
4.2.2.2	<TargetConnection>	25
4.2.2.3	<DefaultFrequency>	26
4.2.2.4	<DefaultPrecision>.....	26
4.2.2.5	<IncomingConnection>	27
4.3	<Collector>	27
4.3.1	Attributes	28
4.3.1.1	ID	28
4.3.1.2	OverrideID	28
4.3.1.3	OverrideNamespace	28
4.3.1.4	Frequency	28
4.3.1.5	OnlySendOnChange.....	29
4.3.1.6	SendOnlyOnChange.....	29
4.3.1.7	DoNotSend	29
4.3.1.8	Scale	29
4.3.1.9	ProcessThread	29
4.3.2	<Executable>	30
4.3.3	<Bound>	30
4.3.4	<Param>	31
4.3.4.1	Example.....	31
4.3.4.2	kwargs.....	31

4.3.5	Using another Collector as a <Param>	31
4.3.6	<Normalize>	31
4.3.6.1	SyncFile Attribute.....	32
4.3.7	<Precision>.....	32
4.3.8	Example.....	32
4.4	<Group>	33
4.4.1.1	Frequency	33
4.4.1.2	AlwaysCollect	33
4.4.1.3	Example.....	33
4.5	<DynamicCollector>	34
4.5.1	Attributes.....	35
4.5.1.1	Frequency	35
4.5.1.2	OnlySendOnChange.....	35
4.5.1.3	DoNotSend.....	35
4.5.1.4	Prefix.....	35
4.5.1.5	Suffix.....	36
4.5.2	<File>	36
4.5.2.1	Example.....	36
4.5.3	<SplitToken>	36
4.5.3.1	Example.....	36
4.5.4	<SkipLineToken>	37
4.5.4.1	Example.....	37
4.5.5	<Normalize>	37
4.5.5.1	Example.....	38
4.5.6	<LockFile>	39
4.5.7	<Modifier>	39
4.5.8	Attributes	40
4.5.9	<Normalize>	40
4.5.10	<Precision>.....	40
4.5.11	<Plugin>.....	40
4.5.11.1	<PythonFile>.....	41
4.5.11.2	<EntryPoint>.....	41
4.6	<ProcessThread>	41
4.7	Aliases.....	42
4.7.1	Reading Alias From external File	43
4.7.2	ComputerName Alias	43
4.7.3	WORKING_DIR Alias.....	43
4.7.4	Usage	43

4.8	Build-In Collectors.....	45
4.8.1	FileCollector.....	45
4.8.1.1	ReadFromFile.....	45
4.8.1.2	ReadFromFileWithLock	45
4.8.1.3	ParseFile	46
4.8.1.4	ParseFileWithLock	47
4.8.2	Network	48
4.8.2.1	GetNetworkRx	48
4.8.2.2	GetNetworkTx.....	49
4.8.3	CPU	49
4.8.3.1	GetCPU_Percentage.....	49
4.8.3.2	GetCPU_Core_Percentage	49
4.8.4	Linux_CPU.....	50
4.8.5	PowerShell	50
4.8.6	RandomVal.....	50
4.8.7	Parrot	51
4.8.8	IPC_Linux	51
4.8.9	OVSdb	52
4.8.10	LibVirt.....	52
4.8.11	Collectd	52
4.8.12	InfluxDB	53
4.8.13	Prometheus	54
4.8.14	IPMI	56
4.8.15	SystemInfo - Linux.....	56
4.8.16	LinuxNetwork	56
	4.8.16.1 Alternate Collector Method	57
4.8.17	IpRoute2GatherVfStatsForPF	58
4.9	Operator Collectors	58
4.9.1	Operator <Input>	59
4.9.1.1	Default Value.....	60
4.9.2	Operator Addition.....	60
4.9.3	Operator Average.....	60
4.9.4	Operator RuningAverage	60
4.9.5	Operator MakeList	60
4.9.6	Operator Duplicate	60
4.9.7	Compare Operators	61
4.9.8	Operator Compare_EQ	61
4.9.9	Operator Compare_NE	61
4.9.10	Operator Compare_GT	61
4.9.11	Operator Compare_GE	62

4.9.12	Operator Compare_LT.....	62
4.9.13	Operator Compare_LE.....	62
4.9.14	Greatest.....	62
4.9.15	Least	62
4.9.16	MaxValue	62
4.9.17	MinValue	62
4.9.18	UserDefined.....	62
4.9.19	Looping for Input	63
4.10	Making your own collectors	64
4.10.1	Python	64
4.10.2	Considerations	65
4.11	Mute Collector	65
4.12	<Actor> (Tasks)	66
4.12.1	Attributes	66
4.12.1.1	ID	66
4.12.2	<Executable>	66
4.12.3	<Param>	66
4.12.4	Example.....	66
4.13	Using Additional Files	67
5	Oscar.....	68
5.1	Running Oscar	68
5.2	The configuration file	69
5.2.1	<Oscar>	69
5.2.2	<IncomingMinionConnection>	70
5.2.2.1	Attributes	70
5.2.2.2	IP.....	70
5.2.2.3	Port.....	70
5.2.2.4	Oscar.....	70
5.2.3	<TargetConnection>	70
5.2.3.1	Attributes	71
5.2.3.2	IP.....	71
5.2.3.3	Port.....	71
5.2.4	<IncomingMarvinConnection>	71
5.2.4.1	Attributes	71
5.2.4.2	IP.....	71
5.2.4.3	Port.....	71
5.2.5	<MarvinAutoConnect>	71
5.2.6	<Shunt>.....	72
5.2.6.1	Attributes	72

5.2.7	<BITW>	73
5.2.8	<IncomingProxyConnection> and <ProxyOscarServer>	73
5.3	Using Oscar.....	74
5.3.1	Live Data	74
5.3.2	Recording Data feed	74
5.3.2.1	Saving Data to be used directly by Marvin	75
5.3.3	Playing back Recorded Data.....	75
6	Marvin	76
6.1	General Components	76
6.1.1	Grids	77
6.1.2	Grids within Grids.....	78
6.2	Running Marvin	78
6.2.1	External Alias File.....	79
6.3	Configuration File.....	80
6.3.1	<Marvin>	81
6.3.2	<Application>	81
6.3.2.1	Attributes.....	81
6.3.2.2	<Title>	82
6.3.2.3	<RefreshInterval>	82
6.3.2.4	<MonitorNumber>	82
6.3.2.5	<Network>	82
6.3.2.6	<CreationSize>	83
6.3.2.7	Attributes.....	84
6.3.2.8	Padding	84
6.3.2.9	StyleSheet	84
6.3.2.10	IgnoreWebCerts	85
6.3.2.11	Heartbeat.....	85
6.3.2.12	Tasks.....	85
6.3.2.13	MainMenu	85
6.3.2.14	Tabs	87
6.3.2.15	Defines the Tab to be <UnregisteredData>	89
6.3.3	Tab	90
6.3.3.1	Attributes.....	91
6.3.3.2	Title.....	92
6.3.3.3	Padding/PaddingOverride	92
6.3.3.4	StyleOverride	92
6.3.3.5	Widget.....	93

6.3.3.6	Grid.....	93
6.3.4	AliasList	93
6.3.4.1	Scope	93
6.3.4.2	Using	93
6.3.4.3	Environment Variables	94
6.3.4.4	Creating Alias when Specifying External File	94
6.3.4.5	Automatically Generated Alias'.....	94
6.3.4.6	Using an Alias in the name of an Alias.....	95
6.3.4.7	<Import>	95
6.3.4.8	<DefaultAlias>	95
6.3.5	TaskList	95
6.3.6	<For> option.....	96
6.3.6.1	Count – Option to iterate through files	97
6.3.7	\$(CurrentRowAlias), \$(CurrentColumnAlias) etc.	97
6.3.8	<If> then-else.....	98
6.3.9	MarvinMath	98
6.3.10	GenerateDatapoint	99
6.3.10.1	ListEntry	101
6.3.10.2	Separator tag	101
6.3.10.3	Method Options.....	101
6.3.10.4	ADD	101
6.3.10.5	AVERAGE	102
6.3.10.6	PROXY	102
6.3.10.7	MakeNamespaceList	103
6.3.10.8	MakeIDList	103
6.3.10.9	SPLITLIST	103
6.3.10.10	GETLISSIZE.....	103
6.3.10.11	MAKEINDEXLIST	103
7	Widgets	104
7.1	Widgets	105
7.1.1	Dials.....	106
7.1.2	Indicators.....	107
7.1.3	Charts	107
7.1.4	Images	108
7.1.5	Media	109
7.1.6	Other.....	109
7.2	Directory Structure	111

7.3	Common Application Settings	111
7.3.1	Attributes	111
7.3.1.1	File	111
7.3.1.2	Row	111
7.3.1.3	Column	111
7.3.1.4	Rowspan	112
7.3.1.5	Colspan	112
7.3.1.6	Align	112
7.3.1.7	Width	112
7.3.1.8	Height	112
7.3.1.9	Width and Height as percentages	112
7.3.1.10	Task	113
7.3.2	MinionSrc	113
7.3.3	ClickThroughTransparent	113
7.3.4	StyleOverride	114
7.3.4.1	Attributes	114
7.3.4.2	Item	114
7.3.5	Peekaboo	115
7.3.5.1	Attributes	115
7.3.5.2	Peekaboo Options	116
7.3.6	Peekaboo – Marvin	116
7.3.6.1	Set New Title	116
7.3.6.2	Change Style	117
7.3.6.3	Change ValueRange	117
7.3.7	<Decimals>	118
7.3.8	2</Decimals>	118
7.3.9	<ValueRange>	118
7.3.9.1	Attributes	118
7.3.10	<ToolTip>	118
7.3.11	<SelectedStyle>	119
7.3.12	<MaxSteppedRange> & <MinSteppedRange>	119
7.4	Common Widget Definition File Definitions	119
7.4.1	Type Attribute	119
7.4.2	Style	119
7.4.3	ClickThroughTransparent	120
7.5	How to understand the following sections	120
7.6	Dials	120

7.6.1	Gauge.....	121
7.6.1.1	Definition File	121
7.6.1.2	Application Settings.....	124
7.6.2	SteelGauge180	125
7.6.2.1	Definition File	125
7.6.2.2	Application Settings.....	125
7.6.3	SteelSimpleGauge	126
7.6.3.1	Definition File	126
7.6.3.2	Application Settings.....	127
7.6.4	SteelGaugeRadial	128
7.6.4.1	Definition File	128
7.6.4.2	Application Settings.....	130
7.6.5	SteelGaugeRadialSteel	131
7.6.5.1	Definition File	131
7.6.5.2	Application Settings.....	133
7.6.6	Bar Gauge	134
7.6.6.1	Definition File	134
7.6.6.2	Application Settings.....	135
7.6.7	Double Bar Gauge	136
7.6.7.1	Definition File	136
7.6.7.2	Application Settings.....	136
7.7	Indicators	137
7.7.1	ProgressBar.....	137
7.7.1.1	Definition File	137
7.7.1.2	Application Settings.....	138
7.7.2	ProgressIndicator	138
7.7.2.1	Definition File	138
7.7.2.2	Application Settings.....	138
7.7.3	LEDBargraph	139
7.7.3.1	Definition File	139
7.7.3.2	Application Settings.....	140
7.8	Charts & Graphs	140
7.8.1	MultiSourceAreaChart	141
7.8.1.1	Definition File	141
7.8.1.2	Application Settings.....	143
7.8.2	AreaChart	144

7.8.2.1	Definition File	144
7.8.2.2	Application Settings.....	145
7.8.3	MultiSourceStackedAreaChart	147
7.8.3.1	Definition File	147
7.8.3.2	Application Settings.....	148
7.8.4	StackedAreaChart	150
7.8.4.1	Definition File	150
7.8.4.2	Application Settings.....	151
7.8.5	MultiSourceLineChart.....	152
7.8.5.1	Definition File	152
7.8.5.2	Application Settings.....	154
7.8.6	LineChart	155
7.8.6.1	Definition File	156
7.8.6.2	Application Settings.....	157
7.8.7	PieChart.....	158
7.8.7.1	Definition File	158
7.8.7.2	Application Settings.....	158
7.8.8	Bar Chart	159
7.8.8.1	Definition File	160
7.8.8.2	Application Settings.....	160
7.8.9	StackedBarChart	163
7.8.9.1	Definition File	163
7.8.9.2	Application Settings.....	164
7.8.10	TableChart Chart.....	165
7.8.10.1	Definition File	165
7.8.10.2	Application Settings.....	166
7.9	Images/Video/Sound.....	168
7.9.1	StaticImage.....	168
7.9.1.1	Definition File	168
7.9.1.2	Application Settings.....	168
7.9.2	DynamicImage	169
7.9.2.1	Definition File	169
7.9.2.2	Application Settings.....	170
7.9.2.3	AutoAdvance	170
7.9.2.4	<Transition>	171

7.9.3	VideoPlayer	171
7.9.3.1	Supported File Types:	171
7.9.3.2	Definition File	171
7.9.3.3	Application Settings.....	172
7.9.4	AudioPlayer	174
7.9.4.1	Supported Audio File Types:	175
7.9.4.2	Definition File	175
7.9.4.3	Application Settings.....	175
7.10	Text Display Widgets	178
7.10.1	Text	178
7.10.1.1	Definition File	178
7.10.1.2	Application Settings.....	178
7.10.2	TextListBox	179
7.10.2.1	Definition File	179
7.10.2.2	Application Settings.....	179
7.10.3	Scalable Vector Graphic Widget (SVG)	179
7.10.3.1	Definition File	180
7.10.4	SteelLCD	180
7.10.4.1	Definition File	180
7.10.4.2	Application Settings.....	181
7.11	Web Widget	182
7.11.1.1	Definition File	182
7.11.1.2	Application Settings.....	182
7.12	QuickView Widget	183
7.12.1.1	Definition File	183
7.12.1.2	Application Settings.....	185
7.13	QuickViewLCD Widget.....	187
7.14	Other	187
7.14.1	Button	187
7.14.1.1	Definition File	187
7.14.1.2	Application Settings.....	188
7.14.2	ToggleButton	188
7.14.2.1	Definition File	188
7.14.2.2	</Widget>Application Settings.....	188
7.14.3	MenuButton.....	189
7.14.3.1	Definition File	189

7.14.3.2	Application Settings.....	189
7.14.4	PDF_Reader Widget.....	190
7.14.4.1	Definition File	190
7.14.4.2	Application Settings.....	191
7.14.5	Spacer.....	191
7.14.6	FileWriterWidget	192
7.14.7	FlipPanel	192
7.14.7.1	Definition File	192
7.14.7.2	Application Settings.....	194
7.14.7.3	Flipping the Panel.....	195
7.15	Grid	195
7.15.1.1	Attributes.....	196
7.15.1.2	PaddingOverride/Padding	197
7.15.1.3	StyleOverride	197
7.15.1.4	Widget.....	198
7.15.1.5	<Grid>	198
7.15.1.6	<ListView>.....	198
7.15.1.7	<Peekaboo>.....	198
7.15.1.8	<OnDemand>	198
7.15.1.9	Sorting and Styling OnDemand Grids	199
7.15.1.10	Tokenizing the Triggered ID	200
7.15.1.11	OnDemandTask	200
7.16	GridMacro	200
7.17	DynamicGrid	201
7.17.1	Attributes of <GridFile>	201
7.17.2	Transitions	202
7.17.3	Peekaboo	203
7.17.4	AutoAdvance	203
8	Tasks.....	205
8.1	Defining a Task.....	205
8.1.1	Attributes	205
8.1.1.1	StyleOverride	206
8.2	Calling/Executing a Task.....	206
8.3	Minion Task.....	207
8.3.1	Defining a Minion Task in Marvin	207
8.3.2	Minion Task Parameters	208
8.3.3	Mixing Minion Task Parameters	209

8.3.4	Using a MinionSrc as a Parameter	209
8.4	Oscar Task	209
8.4.1	LoadFile	210
8.4.2	Playback	211
8.4.2.1	Speed	211
8.4.2.2	Repeat	212
8.4.2.3	Loop	212
8.4.2.4	File	212
8.4.3	StopPlayback	212
8.4.4	PausePlayback	213
8.4.5	StopLive	213
8.4.6	StartLive	213
8.4.7	StartRecording	213
8.4.8	StopRecording	214
8.4.9	InsertBookmark	214
8.5	Marvin Task	214
8.6	DataSetFile	216
8.7	SaveScreenshot	217
8.8	MarvinPlayback Task	217
8.8.1	Load File	217
8.8.2	Play	218
8.8.3	Stop	218
8.8.4	Pause	218
8.8.5	Resume	218
8.8.6	Play File	218
8.8.7	Set Options	219
8.8.8	A note about Speed	219
8.9	Marvin Admin Task	219
	Marvin Admin Task is an EXPERIMENTAL mechanism to do some manipulation of the GUI	219
	Currently it allows you to, via a task, change the active Tab being displayed in the GUI, and allows you to hide and show a Tab	219
8.9.1	SetActiveTab	219
8.9.2	SetTabVisibility	220
8.9.3	Terminate	220
8.9.4	RefreshData	221
8.10	Remote Marvin Task	221
8.11	Chained Task	222
8.12	Random Task	222
8.13	DataPulse Task	223
8.14	OscarBind Task	223
8.15	Mathematic Task	223

8.16	Delta Value Task	224
8.17	Desktop Task	224
8.18	LaunchProgram Task	225
8.19	UpdateProxy Task	225
8.20	Running a Task at Startup.....	225
8.21	User Prompts	226
8.21.1	Defining a Prompt	226
8.21.1.1	ListBox Prompt	226
8.21.1.2	InputBox Prompt.....	228
8.21.2	Prompting the user.....	228
8.22	Postponing Task Action	229
8.22.1	Random Postpone Time.....	229
9	Conditionals.....	231
9.1	Defining a Conditional	231
9.1.1	Type.....	231
9.1.2	CaseSensitive	232
9.1.3	<MinionSrc>	232
9.1.4	<Value>	232
9.1.5	<Then>	232
9.1.6	<Else>	232
9.2	Compound Conditionals	233
9.3	CASE.....	233
10	Connectivity Overview	235
10.1	Secondary communication Channels.....	235
11	Advanced Tactics.....	237
11.1	Widget Stacking.....	237
11.2	Show Current Computer Name	237
11.3	Changing the Images being shown	238
12	Support.....	239
13	Summary	240
14	Troubleshooting	241
14.1	Stack overflow error.....	241
14.2	Getting Audio and Video working in a VM	241
14.3	Connectivity Problems	242
14.4	The Dynamic type Widget isn't working	242
14.5	The Web Widget isn't working all the time.....	243
14.6	Slow network performance, tasks not getting run in a timely manner	243
14.7	Collector Data not showing up in Oscar or Marvin	243
14.8	Multi-Source Widgets not Updating properly	243
14.9	Error: Could not find or load main class kutch.biff.marvin.Marvin	244

14.10 java.lang.UnsupportedOperationException: Unable to open DISPLAY	244
14.11 The fonts on one system do not look the same as on another	244
14.12 My images and goodies don't look right on another computer	245
14.13 My widgets don't line up anymore	245
14.14 Images don't always appear	245
15 Thanx and Recognitions	247
16 About Me	248

1 Introduction

This document serves as a guide to the various components of the BIFF Instrumentation Framework project.

It is intended to provide an overview of the various components as well as provide technical details on the XML configuration files that are at the heart of its flexibility.

1.1 History and Design Goals

I set out to create a flexible framework that could be used for demonstrations. Years ago I wrote a fairly simple Java application to demonstrate the power of SR-IOV (you can see it in action here: https://www.youtube.com/watch?v=bOMB9RsQfo4&list=WL&feature=mh_lolz)

This little application helped the industry understand what SR-IOV is and what it can do for them. It helped take something fairly complex and put it into simple understandable dials. Years later and I still get requests for updates to this tool for in-house demos.

Now I am working on new things that are even more complicated, so I set out to create a way of demonstrating not just Ethernet traffic as my first application did, but anything that could be instrumented.

The first founding principle of this framework is that you can display any data you wish. If you can gather a piece of information somehow, this framework should be able to display it, whether it be CPU utilization, network bandwidth, temperature, voltage or the number of users on a system.

The second design goal is that the framework should know nothing about the data it is collecting and displaying. It is agnostic to the data, could be string, could be an integer could be a real number, Gigabits per/second, I/O operations per second, power usage etc. The framework does not know anything about this.

The last major design goal is that it be completely configurable via external files that describe how to gather data and how to display it. You should be able to put a Dial on the screen with a few lines in a text file and with a few more lines in another file describe how to go get the data to feed that dial.

So in summary the design goals are:

- If you can instrument it, the framework can display it
- Framework is agnostic to the data being collected and displayed
- Changes to data being collected and displayed can be achieved via external text files

1.2 Coding

Minion and Oscar are written in Python while Marvin is written in Java. I could have written all in Java, however I had never done any Python it seemed like a good opportunity to learn it.

As it turns out, Python is a very good choice for Minion as it provides a great framework for the data collection and is available in all Linux distros.

This entire project has been and continues to be very organic. I had an idea of what I wanted and just started coding (and learning). As such, the code is much more erratic and spaghetti like than I would have preferred, but it does work even if it is a bit hard to follow.

A quick note on my coding style, especially for the Java purists – if you don't like it (especially my indentation style), then suck it up ☺ I'm a dinosaur and that's the coding style I learned nearly 30 years ago and it works for me. If you can't read it, use the pretty-printer in your editor to make it how you like☺. Note though that if you push updates to my repository, I reserve the right to pretty-print it myself if I tweak it. ☺

Also note that this was my first attempt at coding in Python – not my most elegant work. ☺

1.3 Versioning

I have chosen to version all the components of BIFF, including this document much in the same way Ubuntu does its versioning, where the version number is the Year and Month of the release. Followed possibly by the day of the month and a build #.

2 High Level Overview

The BIFF Instrumentation Framework project has three components:

1. Minion - the data collector
2. Oscar – The orchestrator
3. Marvin – The display GUI

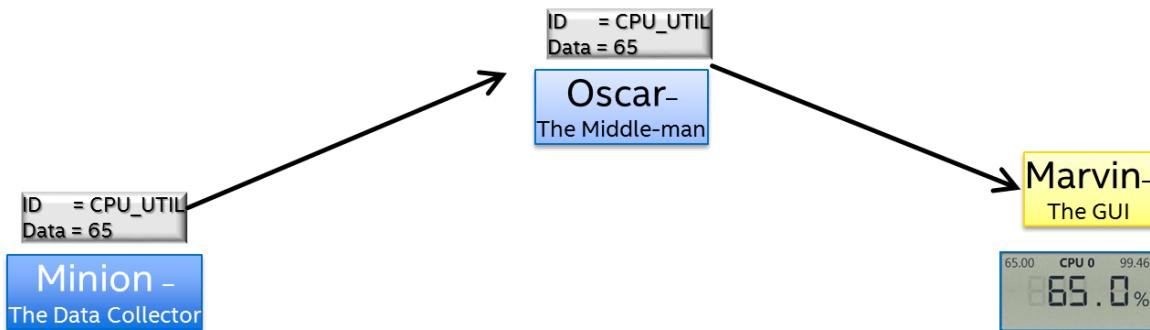


Figure 1 Components of Instrumentation Framework

The operation is fairly straight forward, the Minion framework collects data (as defined and described in an external XML file) associated an ID with it (also defined in the XML file) and passes it to Oscar over a UDP socket in XML format.

Oscar receives data from one or more Minions and simply passes it on to one or more Marvin GUI's. Additionally Oscar can save the incoming data to a file and play it back at a later time.

The GUI, named Marvin receives the data originally sent by a Minion and after validating it, pushes it to one or more 'Widgets' (dial, graph, text etc.) for displaying. The association of a data point ID with a widget, as well as the location, size, color and more for a widget is defined in an external XML file.

All of these components can exist on a single computer or on separate ones. It makes no difference to the framework.

3 System Requirements

Minion and Oscar are written in Python and require Python v3.3 or later. I chose Python 3.3 because my initial development was on a Microsoft Windows system, and I just grabbed the latest version, unaware that most Linux distros come with a 2.x release.

While originally written for Java 8, recent changes to Java have caused incompatibility between Java 8/9 and later revisions. As such as of May 2019, Java 8/9 will no longer be supported (though there is a branch you can checkout to compile it). Java 11+ is now required.

If you require Java 8 support, after you clone the repository, checkout the JAVA_8 branch. This branch is likely to have little or no updates to it.

Note: I have successfully converted Minion to python 2 using the python 3to2 package, and even have some build-in support in Minion for 2.x. So if you need python2 support you can use this package to convert.

4 Minion

Minion, the data collection portion of the BIFF Instrumentation Framework project is written in Python. It is a command line application with no GUI components.

It is designed to be a light-weight framework that collects data at defined intervals, packages it up and sends it to an Oscar.

The basic operation of Minion is that it will call an [external application](#) (defined in an XML file) at a given interval (also defined in the XML file), take the output of that external application, assign an ID (again, defined in the XML file) then send it to an Oscar (whose IP and port are in the XML file).

Minion itself knows nothing about how to collect the data, it simply calls the external application (or script), takes the output, tags it with an ID and sends it on its way.

The Minion framework can call as many external applications (or scripts) as you define in the XML file.

Minion supports normalization of data (averaging it to a per second basis) if so configured in the XML file.

There are two 'bundles' for Minion. One that works with Python 2.x and the other that works with Python 3.x.

4.1 Invoking Minion

Running minion is the same as launching any other Python application, by running Python with the parameter of Minion.py.

Minion itself requires a parameter to specify the application definition file, which is an XML file. An example invocation is:

```
python Minion.py -i MinionConfig.xml
```

Minion can also be invoked with additional parameters.

Parameter	Description / Use
-i <filename>	Application XML definition file
-h -help	Show the help information
-v # -verbose #	Prints out debug information as it runs at a level 1-4
-r or -runonce	Runs each of the collectors once and only once and then exit
-a -aliasfile	

4.1.1 One-and-done

There is an additional Minion command line parameter `-r` or `-runonce`. This parameter will run each of the collectors once and only once and then exit.

The usage for this is that you could setup a Task to call a script that in turn launches a minion with a `-r` option in which the configuration file might send default/initial values for all dials as a kind of 'reset'.

4.1.2 Using Alias File

```
-a | -aliasfile
```

The Alias file is a simple `AliasName=AliasValue`. Where each Alias is on a different line. For example:

```
NumberOfCores=72
TimeZone>New Zealand
Author=Patrick Kutch
```

If these are in an alias file and used, then within the configuration file, the aliases of `$(NumberOfCores)`, `$(TimeZone)` and `$(Author)` would be available.

4.2 Configuration File

The XML configuration file is where you will define what data you want to collect, how often to collect it, the ID to tag it with and where to send it.

The basic hierarchy for the XML file is as follows:

```
<Minion>
  <Namespace>
    <Name><Name>
      <TargetConnection></TargetConnection>
      <Collector>
        </Collector>
        ...
        <Collector>
          </Collector>
      </Namespace>
      <Namespace>
        <Name><Name>
          <TargetConnection></TargetConnection>
          <Collector>
            </Collector>
            ...
            <Collector>
              </Collector>
          </Namespace>
          ....
        <Namespace>
```

```
</Namespace>  
</Minion>
```

Where <Minion> is the root XML node and there are one or more <Namespace> nodes – though in most cases there is only one <Namespace>

Note: Since Linux is case-sensitive it is important to use the same case in the Minion xml and both Oscar and Marvin definition files.

4.2.1 <Minion>

The Minion Tag (the root) can take a single optional attribute which determines the threading model Minion uses. Each collector can be run in its own thread, or all collectors within a single <Namespace> can be run in a single thread.

This is an experimental setting for testing purposes.

The attribute is **SingleThreading** and can be either True or False, or not there at all, which is the same as False.

4.2.2 <Namespace>

A Namespace can be thought of as a container or an identifier. In most cases it is used to identify the computer from which the data is being gathered.

The Namespace and ID for a data point are used for a unique identifier for a Widget. In this way one could use the same minion configuration file on multiple different systems to gather the same data (such CPU Utilization) and the ID for the collectors would be the same (say CPU_UTIL) but the namespace would be different to reflect the different computers from where the data was collected.

4.2.2.1 <Name>

This is the name of the Namespace, it must be unique per instance of a minion. It can be repeated in other Minions, but not within the same XML configuration file.

4.2.2.1.1 Example

```
<Minion>  
  <Namespace>  
    <Name>Workload_Server</Name>  
  </Namespace>  
</Minion>
```

4.2.2.2 <TargetConnection>

The TargetConnection tag defines where the target Oscar can be found on the network.

4.2.2.2.1 Attributes

The <TargetConnection> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
IP	M	Target IP Address or FQDN or DNS Name

PORT	M	Target UDP Port Number
------	---	------------------------

4.2.2.2 IP

IP address of the target Oscar. This can be a DNS name or an IP address.

Note: If the target Oscar does not have a static IP address and uses DHCP to set the IP Address it is recommended to use the Full Qualified Domain Name (FQDN). Additionally, if the target Oscar is not in a permanent location or the IP address changes it may take some time for the DNS name resolution to point to the new IP address.

4.2.2.3 Port

Port on which the target Oscar is listening

4.2.2.4 Example

```
<Minion>
  <Namespace>
    <TargetConnection IP="localhost" PORT="3232"/>
  </Namespace>
</Minion>
```

Note: Verify that the UDP Port is not already assigned and that it is not blocked by Firewalls or Routers such as firewalld or iptables in Linux.

4.2.2.3 <DefaultFrequency>

This is the default frequency, in milliseconds for which the Minion framework will call every Collector within this Namespace, unless the Collector specifies its own frequency.

Note: The faster the DefaultFrequency (Lower number) the more often the Collectors will run which may impact system performance and increase network traffic between Minion and Oscar. Using a slower DefaultFrequency (Higher number) will increase the amount of time between data collection for all Collectors. Setting the DefaultFrequency between 3000-5000 (3-5 seconds) and then specifying 1000 (1 second) Frequency on individual collectors is a good way to balance data collection and system performance.

4.2.2.3.1 Example

This example specifies a default frequency of 1.5 seconds (1500ms).

```
<Minion>
  <Namespace>
    <DefaultFrequency>1500</DefaultFrequency>
  </Namespace>
</Minion>
```

4.2.2.4 <DefaultPrecision>

This is the default precision for numeric values collected within the namespace. The default is two decimal places. With this setting you can change the default for all collectors in the Namespace.

The default precision can be overridden in any individual collector using the [`<Precision>`](#) capability.

4.2.2.4.1 Example

This example specifies a default precision of 4. With this if a collector has a value of 1.25, the value sent will be 1.2500.

```
<Minion>
  <Namespace>
    <DefaultPrecision>4</ DefaultPrecision >
  </Namespace>
</Minion>
```

4.2.2.5 [`<IncomingConnection>`](#)

The IncomingConnection tag defines a socket where Minion will listen for incoming data packets. This connection point will be for performing Tasks and other data exchanges.

This tag is optional, if you do not have it, the framework will listen on all interfaces and pick a random port.

4.2.2.5.1 Attributes

The [`<IncomingConnection>`](#) tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
IP	O	Local IP Address
PORt	O	Local UDP Port

4.2.2.5.2 IP

IP address for Minion to listen on. If not specified, it will listen on all available interfaces

4.2.2.5.3 Port

UDP Port on which the minion will listen for incoming data. If not specified a random, unused UDP port number will be chosen. Example

```
<Minion>
  <Namespace>
    <IncomingConnection IP="192.168.1.10" PORT="6032"/>
  </Namespace>
</Minion>
```

4.3 [`<Collector>`](#)

Each namespace contains one or more collector. A collector can be thought of as a plugin that is responsible for going and gathering a desired piece of data. The Collector calls the specified executable program and takes the result, tags it with the given ID and sends it to Oscar.

4.3.1 Attributes

The <Collector> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
ID	M	The ID the resulting data is tagged with
Frequency	O	How often, in milliseconds, to collect data or OnDemand, or RunOnce
OnlySendOnChange	O	Boolean (Default is False)
SendOnlyOnChange	O	Boolean (Default is False)
DoNotSend	O	Boolean (Default is False)
Scale	O	Multiplier for the collected value (Default is 1)
OverrideID	O	Different ID to use when sent to Marvin.
OverrideNamespace	O	Different Namespace to use.
ProcessThread	O	Specify an ID of a separate worker thread group

4.3.1.1 ID

This is the ID the collected data will be tagged with, the Widget in the GUI uses the Namespace + ID as an identifier. The ID must be unique within the Namespace.

4.3.1.2 OverrideID

This was added to accommodate Compare <Operator>s. Every collector must have a unique ID within the namespace, however you may want different compare operators to send data to the same ID. In this case you can use the OverrideID. The Minion demonstration has an example in the AdditionalFile.xml file for LCD.Override.

4.3.1.3 OverrideNamespace

You can use this to specify a different Namespace to be sent with this collector.

4.3.1.4 Frequency

How often to call this collector, in milliseconds. If Frequency is not specified for a Collector, then the [DefaultFrequency](#) for the [Namespace](#) is used.

If you specify "OnDemand" for the frequency, then the collector will only collect when it receives a [task](#) from Marvin.

4.3.1.4.1 "OnDemand" Frequency

If you specify this value, then the Collector will act more like a [task](#) than a collector. The

difference being that a task does not return data, an OnDemand collector will. In order to activate the OnDemand collector, Marvin sends a Task with the appropriate TaskID, which is the ID of the Collector and the corresponding Namespace, along with any optional parameters you wish to add to the Collector. The collector can have its own list of parameters defined in the config file, and an OnDemand one can also have additional parameters sent from Marvin as part of the task.

4.3.1.4.2 “RunOnce” Frequency

If you specify this value, then the collector will run at the default frequency once and only once.

4.3.1.5 OnlySendOnChange

This Attribute can have a value of “True” or “False”. If True, then the data collected is only sent to Oscar if it has changed since the last time it was sent.

This can be useful for things such as a flag indicating if a test has finished or not. For example if you have a [FileCollector](#) reading a status every 200ms that updates an image in Marvin, it may not be desirable to send an update every 200ms when the data may not change for several minutes.

Note: In order to ensure that the GUI gets all data when it starts up, it sends a message to Oscar, which in turn sends a message to all Minion to an update from all collectors, even if it is marked as OnlySendOnChange.

4.3.1.6 SendOnlyOnChange

Is the same as OnlySendOnChange – added this because I kept typing it in instead of OnlySendOnChange ☺

4.3.1.7 DoNotSend

This Attribute can have a value of “True” or “False”. If True, then the data collected but not sent. The default value is False, which is the same as not specifying DoNotSend, and the data will be sent.

This can be useful for [Operators](#) that can take data from other collectors and do something with them. Say for example you want to use the average operator that averages the data from several collectors – you may not need or want the data from the individual collectors to be sent, in such a case use the DoNotSend attribute.

4.3.1.8 Scale

If you specify the Scale=“value” value then the resulting numeric value from the collection (or [Normalization](#) if you do that) will be multiplied by the value specified.

4.3.1.9 ProcessThread

The collection process is done sequentially in the order you specify within the configuration files. Some collectors may take a relatively long time to perform. You can create a new ProcessThread group using the ‘ProcessThread’ attribute for a collector, or the [`<ProcessThread>`](#) tag.

When you use the 'ProcessThread' attribute or Tag you specify an ID that you create. Each unique ID you specify will place the Collector in a process that only processes collectors with that ProcessThread ID. In this way you can place 'slow' collectors in their own process.

Specifying a ProcessThread is pretty flexible, and is case sensitive. So if you specify an ID of 'Foo' on one collector and create a <ProcessThread> tag for a group of collectors with an ID of 'foo' they will be in different processes; if you however specify 'Foo' for both, they will all run in the same process/worker thread.

Example:

```
<Collector ID="RX-1" ProcessThread="MyOtherWorker">
    <Executable>Collectors/Network2.py</Executable>
</Collector>
```

4.3.2 <Executable>

This specifies the external program to be launched that will return the data to be sent to Oscar. The Minion framework will use the exact case that is provided in the XML file, as such if the OS and or program you are calling is case sensitive, take care.

When the external program is launched, it is done so in an external process, this is not very fast and does take resources. Please view section 4.10.2 for more information.

Note that I've done some interesting work that allows Python collectors to be dynamically loaded into the Minion process, rather than launching a separate process. Please refer to section 4.10.1 for more details.

4.3.3 <Bound>

Optional

This tag allows you to specify a range to bound the numeric data in and what to do if the data falls outside that range.

Example:

```
<Bound Max="20000" Min="15555" Action="set"/>
```

The <Bound> allows you to specify a minimum or maximum, or both and what to do if the collected value is outside those. The values must be numeric, they can be integer or float values.

Valid Actions are:

- Drop – drop the data, do not send it
- Set – change the collected value to the bound which it passed
- RepeatLast – re-send the last value sent that falls within the bounds.

Set is the default Action if you do not specify one. You must specify either Min or Max or both.

4.3.4 <Param>

The <Executable> specified may need parameters. You may put one or more <Param> nodes in a collector to provide the parameters.

4.3.4.1 Example

The following is an example of a collector that is written in Python, it will be called every 250ms. Note that the name of the executable is Python.exe and the parameters are the actual Python file to run (GetProgress.py).

```
<Collector ID="Progress" Frequency="250">
    <Executable>Python.exe</Executable>
    <Param>GetProgress.py </Param>
</Collector>
```

4.3.4.2 kwargs

If the <Executable> specified is a python script, you may also use named parameters (in python is known as kwargs).

```
<Collector ID="Progress" Frequency="250">
    <Executable>Python.exe</Executable>
    <Param>GetProgress.py </Param>
    <Param>Name=Foo</Param>
    <Param>Age=22</Param>
</Collector>
```

The <Executable> must of course use the **kwargs parameter declaration.

4.3.5 Using another Collector as a <Param>

You may wish to use the output of another collector or operator as a <Param> to a collector. To do this, you specify the ID of the collector wrapped in @() as the parameter:

```
<Collector ID="ProcessProgress" Frequency="250">
    <Executable>MyBashScript.sh</Executable>
    <Param>@(Progress)</Param>
</Collector>
```

In this collector, we call an external script called "MyBashScript.sh" and pass the value of the data collected from the 'Progress' Collector.

The two collectors must be in the same Namespace. If the 'ProcessProgress' collector is run before the 'Progress' collector has actually collected any data, then the 'ProcessProgress' collector will not collect anything.

4.3.6 <Normalize>

Sometimes the data being collected is desired to be in a per second or per time period basis. Network throughput for example is usually in a Megabits Per Second or Gigabits Per Second resolution.

A Collector may go out and read the current # of Bytes that have been send or received over a given network interface every second. However that is raw data not normalized (or averaged).

If you specify a Normalization factor the framework will do some calculations to determine the difference from the last time the data was collected and normalize it to a per second basis.

The <Normalize> number is a float value, it should be a positive non-zero number.

A value of 1, will simply normalize the data to a per second value.

However if you wish to do other calculations, you can specify a different value. For example the build-in [Network Collectors](#) return BytesPerSecond. This is not the way most customers in the networking world think, they are used to Megabits Per Second. To convert from Bytes to second to Bits per second, a Normilize value of 0.00000008. (1Byte per second = 0.00000008 Mbps)

4.3.6.1 SyncFile Attribute

Experimental

Normalization is a data rate over calculated based upon the time between collections that is factored into a rate per second value and then scaled with whatever number you provide. The time between collections is done within the Minion framework. You can use the timestamp of a file as the time between collections instead if you like:

```
<Collector ID="TX-1" Frequency="250">
  <Executable>Collectors/Network.py</Executable>
  <Param>GetNetTx</Param>
  <Param>Local Area Connection</Param>
  <Normalize SyncFile="NetworkIo.txt">0.00000008<Normalize>
</Collector>
```

Here you gather some data and instead of using the current system time and comparing it to the last time the collection was run as part of the normalization factoring, it uses the current timestamp on the NetworkIo.txt file and compares to the last time the collection was run and it checked the timestamp on the same file.

This type of calculation likely has limited value and maybe most suited for DynamicCollectors.

4.3.7 <Precision>

Many times the data collected, normalized and scaled is a float value. The <Precision> tag specifies how many digits to the right of the decimal you wish the data to have. The default is to leave the precision as none, meaning as many decimal places as was provided by the collector.

4.3.8 Example

The following example calls a built-in collector to read the network TX bytes from the 'Local Area Connection' LAN Port. Note the <Normalize> tag and value. The resulting value will have a single digit to the right of the decimal place via the <Precision> tag.

```

<Collector ID="TX-1" Frequency="250">
  <Executable>Collectors/Network.py</Executable>
  <Param>GetNetTx</Param>
  <Param>Local Area Connection</Param>
  <Normalize>0.0000008<Normalize>
    <Precision>1</Precision>
</Collector>

```

4.4 <Group>

The <Group> tag allows you to group a bunch of collectors together. The collectors <Collector> listed within a <Group> tag are all collected in sequential order and the results from all the collectors are packaged up into a single network packet and sent.

This could be useful if you are charting many individual pieces of data within one chart – it makes sure they all arrive at the same time.

Attribute	M/O	Comments
Frequency	O	Frequency to collect data – for ALL collectors within the group
AlwaysCollect	O	Defaults to True.

4.4.1.1 Frequency

How often to call this group of collectors, in milliseconds. If Frequency is not specified for a group, then the [DefaultFrequency](#) for the [Namespace](#) is used. Any frequencies listed on an individual Collector within the group will be ignored.

4.4.1.2 AlwaysCollect

This boolean value of “True” or “False”, defaults to True. All collectors within the Group will go and collect data – even if it hasn’t changed, or been updated in the case of a dynamic collector, even if the dynamic collector (in case of a plugin) stopped working or exited.

By setting this flag to False, it will not collect any data for a collector within a group that isn’t ready for collection.

4.4.1.3 Example

```

<Group Frequency="300">
  <Collector ID="TX" Frequency="250">
    <Executable>Collectors\FileCollector.py</Executable>
    <Param>ParseFile</Param>
    <Param>BX_Simulator.txt</Param>
    <Param>TX</Param>
    <Param>=</Param>
    <Param>1</Param>
  </Collector>
  <Collector ID="RX" Frequency="250">

```

```

<Executable>Collectors\FileCollector.py</Executable>
<Param>ParseFile</Param>
<Param>BX_Simulator.txt</Param>
<Param>RX</Param>
<Param>=</Param>
<Param>1</Param>
    </Collector>

    <Collector ID="BX" Frequency="250">
<Executable>Collectors\FileCollector.py</Executable>
<Param>ParseFile</Param>
<Param>BX_Simulator.txt</Param>
<Param>BX</Param>
<Param>=</Param>
<Param>1</Param>
    </Collector>
</Group>

```

4.5 <DynamicCollector>

A DynamicCollector reads the contents of a text file containing one or more lines and ID and DATA pairing such as:

Temp=75

NumCPUs=4

NumCores=16

It will read this text file at the period defined by the Namespace Frequency, or one specified for the DynamicCollector itself.

When it reads the file, it will make a <Collector> for each ID found in the file and assign the value associated with it. If new IDs are added to the file, they will dynamically be added as well.

As the DynamicCollector runs, it will update the data associated with each <Collector> it adds to the framework, and the data for those collectors will be sent onwards.

The key point is that the DynamicCollector is the piece that creates other Collectors based upon it doing something – usually reading the contents of a file.

Note: There is no ID associated with the <DynamicCollector>

Note: If you have a large file as your source (many data points) you are likely to get an OS level error something like: Minion - WARNING - Error sending data :[WinError 10040] A message sent on a datagram socket was larger than the internal message buffer or some other network limit, or the buffer used to receive a datagram into was smaller than the datagram itself.

This is because the single packet it attempted to create was too huge for the network to handle. It can happen if you put the <DynamicCollector> in a group.

4.5.1 Attributes

The <DynamicCollector> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
Frequency	O	How often, in milliseconds, to collect data or OnDemand
OnlySendOnChange	O	Boolean (Default is False)
DoNotSend	O	Boolean (Default is False)
Prefix	O	Text to prepend to the ID
Suffix	O	Text to append to the ID

4.5.1.1 Frequency

How often to call this collector, in milliseconds. If Frequency is not specified for a Collector, then the [DefaultFrequency](#) for the [Namespace](#) is used.

If you specify "OnDemand" for the frequency, then the collector will only collect when it receives a [task](#) from Marvin.

Keep in mind that this collector goes and reads a file and creates <Collector>s based upon the data within the file which in turn sends data. It does not send data itself.

4.5.1.1.1 "OnDemand" Frequency

This has not been tested for the <DynamicCollector>, it will most likely work just fine, just be aware that it won't update the resulting <Collector>s data until you active this collector.

See the [<Collector> OnDemand](#) for an explanation on how it work.

4.5.1.2 OnlySendOnChange

This Attribute can have a value of "True" or "False". If True, then the data collected is only sent to Oscar if it has changed since the last time it was sent. In the case of the <DynamicCollector> it will pass this flag down to any <Collector>s it creates.

4.5.1.3 DoNotSend

This Attribute can have a value of "True" or "False". If True, then the data collected but not sent. The default value is False, which is the same as not specifying DoNotSend, and the data will be sent.

In the case of the <DynamicCollector> it will pass this flag down to any <Collector>s it creates.

4.5.1.4 Prefix

The DynamicCollector makes the ID for the resulting collector from the data within the specified file. If you specify a Prefix, it will prepend that to the ID string found in the file.

So if in the file you have:

Temp=75

And you specify Prefix="CPU." The resulting data ID will be "CPU.Temp"

4.5.1.5 Suffix

The DynamicCollector makes the ID for the resulting collector from the data within the specified file. If you specify a Suffix it will append that to the ID string found in the file.

4.5.2 <File>

This specifies the external text file that the <DynamicCollector> is to go read. This is required, unless you are making your own DynamicCollector and using the <Plugin> capability.

4.5.2.1 Example

The following is an example of a dynamic collector, it reads the file 'perfdata.txt' and I specify a prefix of 'Wow'.

```
<DynamicCollector Prefix="Wow." OnlySendOnChange="True">
    <File>perfdata.txt</File>
</DynamicCollector>
```

Let's assume the file looks like this:

Temp=75

NumCPUs=4

NumCores=16

It will create three collectors with ID's of:

Wow.Temp

Wow.NumCPUs

Wow.NumCores

As it reads the file, it will re-read those ID and values and update the values within those Collectors

4.5.3 <SplitToken>

You may specify one or more of these to indicate the string you wish to use to determine the ID from the value. The defaults used are '=','=';':',';',''

Note that these are specified in order of priority, the 1st token that works is used

4.5.3.1 Example

```
<DynamicCollector Prefix="Wow." OnlySendOnChange="True">
    <File>perfdata.txt</File>
```

```

<SplitToken>=</SplitToken>
<SplitToken>= </SplitToken>
</DynamicCollector>

```

This make it so the only two tokens used to split the data is an equal or an equal followed by a space.

4.5.4 <SkipLineToken>

If you have lines in your text file being parsed, here may be lines marked with some sort of 'comment' indication, such as # or // or /* etc. You can specify a bunch of tokens to search for and skip those lines.

Note that these are specified in order of priority, the 1st token that works is used

4.5.4.1 Example

```

<DynamicCollector Prefix="Wow." OnlySendOnChange="True">
  <File>perfdata.txt</File>
  <SkipLineToken>#</SkipLineToken>
  <SkipLineToken>//</SkipLineToken>
  <SkipLineToken>/*</SkipLineToken>
  <SkipLineToken>*</SkipLineToken>
</DynamicCollector>

```

This make it so any line that start with '#' '// '/*' or '*' will be skipped. Note that these are compared (searched) for each line in the file, so if you have a long file, be thoughtful on adding these – only add what you need to.

4.5.5 <Normalize>

Sometimes the data being collected is desired to be in a per second or per timeperiod basis. Network throughput for example is usually in a Megabits Per Second or Gigabits Per Second resolution.

A Collector may go out and read the current # of Bytes that have been send or received over a given network interface every second. However that is raw data not normalized (or averaged).

If you specify a Normalization factor the framework will do some calculations to determine the difference from the last time the data was collected and normalize it to a per second basis.

The <Normalize> number is a float value, it should be a positive non-zero number.

A value of 1, will simply normalize the data to a per second value.

However if you wish to do other calculations, you can specify a different value. For example the build-in [Network Collectors](#) return BytesPerSecond. This is not the way most customers in the networking world think, they are used to Megabits Per Second. To convert from Bytes to second to Bits per second, a Normalize value of 0.00000008. (1Byte per second = 0.00000008 Mbps)

4.5.5.1 Example

The following example calls a built-in collector to read the network TX bytes from the 'Local Area Connection' LAN Port. Note the <Normalize> tag and value.

```
<Collector ID="TX-1" Frequency="250">
    <Executable>Collectors/Network.py</Executable>
    <Param>GetNetTx</Param>
    <Param>Local Area Connection</Param>
    <Normalize>0.00000008</Normalize>
```

4.5.6 <LockFile>

This optional tag allows you to specify a lockfile to be used when the file collector is running. It acts as a semaphore or lock. While the file exist this collector does not run. When the file is not present, it creates the file, reads the data from the file specified in <File> and creates/updates the collectors. When finished it deletes the lockfile. In this way an external program that is generating the file can use the lockfile in the same way to prevent reading only a partially updated file.

4.5.7 <Modifier>

Sometimes the data being collected in a DynamicCollector is something you may want to have treated differently than the rest of the data collected. Say for example the dynamic collector collects some data that you don't care about so you don't want to send it to Oscar, or you want to change the precision, scale or normalization of a data point. You can use a modifier.

Example:

```
<DynamicCollector DoNotSend="True">
    <File>foo.txt</File>
    <Normalize>1</Normalize>
    <Precision>2</Precision>
    <Modifier ID="ErrorCount_TX" DoNotSend="False" SendOnlyOnChange="True">
        <Normalize>0</Normalize>
        <Precision>0</Precision>
    </Modifier>
    <Modifier ID="ErrorCount_BX" DoNotSend="False" SendOnlyOnChange="True">
        <Normalize>0</Normalize>
        <Precision>0</Precision>
    </Modifier>
    <Modifier ID="ErrorCount_RX" DoNotSend="False" SendOnlyOnChange="True">
        <Normalize>0</Normalize>
        <Precision>0</Precision>
    </Modifier>
</DynamicCollector>
```

So in this example, the DynamicCollector goes and reads data from the foo.txt file and creates dynamic collects from it. For each of those it normalizes them to a per second value (with Normalize = 1) and it sets the Precision to 2 decimal places, in addition the DynamicCollector itself specifies not to send any of the data it collects (which can be useful if it gathers 100's of pieces of data but you only care about say 1 of them).

So then we add a Modifier (you can add as many as you like). In this case I say for the ErrorCount_TX collector (read from the foo.txt file) I want you to send the data, but only if it changes from collection to collection, I want a precision of zero and I don't want the data normalized.

I do the same with the ErrorCount_BX and ErrorCount_RX collectors.

An interesting feature (if I do say so myself) is that I made it so you can specify a RegEx filter for the ID. So you could specify an ID of ErrorCount_(*) once and be done in order to accomplish what was above:

```
<DynamicCollector DoNotSend="True">
    <File>foo.txt</File>
    <Normalize>1</Normalize>
    <Precision>2</Precision>
    <Modifier ID="ErrorCount_(.*)" DoNotSend="False" SendOnlyOnChange="True">
        <Normalize>0</Normalize>
        <Precision>0</Precision>
    </Modifier>
</DynamicCollector>
```

4.5.8 Attributes

The `<Modifier>` tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
SendOnlyOnChange	O	Boolean (Default is False)
OnlySendOnChange	O	Boolean (Default is False)
Scale	O	Float value

4.5.9 <Normalize>

See [`<Normalize>`](#)

4.5.10 <Precision>

See [`<Precision>`](#)

4.5.11 <Plugin>

The DynamicCollector by default reads information from a file (as specified in the `<File>` tag, and creates collectors based upon what is in the file.

Rather than specifying a file, you can specify a plugin where you identify a specific function to call within a python file to run. This function then can dynamically create and update Collectors using 'callback' object passed as a required parameter to the function.

All the other capabilities of a DynamicCollector remain the same, except you replace `<File>` with `<Plugin>` and the tags it requires.

Example:

```
<DynamicCollector Frequency="1000">
```

```

<Plugin>
  <PythonFile>Collectors/Collectd.py</PythonFile>
  <EntryPoint SpawnThread="True">CollectionThread</EntryPoint>
  <Param>localhost</Param>
  <Param>3232</Param>
</Plugin>

```

4.5.11.1 <PythonFile>

Specifies the external python file where the function to call resides. Only python is supported currently.

4.5.11.2 <EntryPoint>

Specifies the function within the python file to execute. The function specified must have at least one parameter, the first parameter will always be a frameworkInterface object that the function can use to add new collectors. Other parameters can also be added per <Param> tags.

This Tag has an option attribute of SpawnThread (case sensitive) and it takes a boolean string ("True" or "False"). If it is True, then the framework will create a new thread to run your custom DynamicCollector in. It is up to you to implement it in a thread-safe manner. The frameworkInterface object passes along a lot of useful things, including a function (KillThreadSignalled) that you can call each loop to see if you should gracefully exit.

For example the function signature for the Collectd plugin collector looks like:

```
def CollectionThread(frameworkInterface, IP, Port):
```

4.5.11.2.1 frameworkInterface object

This object is the 1st parameter passed to your function, and it contains functions and information you need for your own custom DynamicCollector.

```

frameworkInterface.DoesCollectorExist(ID) # does a collector with ID already exist
frameworkInterface.AddCollector(ID)       # Add a new collectr
frameworkInterface.SetCollectorValue(ID,Value,ElapsedTime) # Assign the collector a
                                                          # new value, along with how
                                                          # long since last update
frameworkInterface.KillThreadSignalled() # returns True if signalled to end your
                                         # worker thread, else False
frameworkInterface.LockFileName()   # lockfile name for dynamic collector, if specified
frameworkInterface.Interval()      # the frequency from the config file
frameworkInterface.SetNormalization() #
frameworkInterface.setScale()

```

For the function SetCollectorValue() if you do not provide the optional ElapsedTime parameter, the framework will automatically calculate this for you.

4.6 <ProcessThread>

You can specify that a group of collectors/groups etc. all reside within a ProcessThread, which will create a new worker thread to process all of those

The <ProcessThread> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
Name	M	How often, in milliseconds, to collect data or OnDemand

Example:

```
<ProcessThread Name="MyWorker">
    Collector ID="TX-1" Frequency="250">
        <Executable>Collectors/Network.py</Executable>
    </Collector>
    <Collector ID="RX-1">
        <Executable>Collectors/Network2.py</Executable>
    </Collector>
</ProcessThread>
```

See [ProcessThread](#) attribute for more information.

4.7 Aliases

I added the ability to have Aliases within the configuration XML file. Aliases come from two places, a global <AliasList> section in the XML file (per file, not per Namespace) and also all environment variables are automatically added as Aliases.

Why would you use an Alias you may ask? An easy example is from Section 4.3.8 where a numeric value of 0.00000008 was used as a normalization value. This could be defined as an Alias and used to make it much more readable and easy to change throughout the file:

```
<Alias BytesPerSec2MBPS=".00000008"/>
...
<Collector ID="TX-1" Frequency="250">
    <Normalize>$(BytesPerSec2MBPS)</Normalize>
    <Executable>Collectors/Network.py</Executable>
    <Param>GetNetTx</Param>
    <Param>Local Area Connection</Param>
</Collector>
```

The use of an alias can be anywhere that you would provide a piece of data, such as Frequency, ID, Parameters etc. They are bounded by "\$()"

When defining an Alias it must be within the <AliasList> tag. Each Alias is define as:

```
<Alias YourDesiredAlias="Value to be substituted"/>
```

Another example is as follows:

```
<AliasList>
    <Alias BytesPerSec2MBPS=".00000008"/>
    <Alias BytesPerSec2GBPS=".000000008"/>
    <Alias MyFreq="500"/>
    <Alias NS="$(COMPUTERNAME)"/>
    <Alias Test="$(NS).$(MyFreq)"/>
```

```
</AliasList>
```

You may use one alias within the definition of another, so long as it has already been defined, as seen in this example:

```
<Alias NS="$COMPUTERNAME" />
```

Here I create an alias of NS and associate it with the COMPUTERNAME alias – which in this case came from the environment variable on my Windows box.

You can also combine aliases:

```
<Alias Test="$NS.$MyFreq" />
```

This creates an alias of Test that results in the NS and MyFreq aliases being combined with a period between the two, which would be "Patrick-Laptop.500". This is a silly example, however it illustrates the feature.

4.7.1 Reading Alias From external File

The AliasList tag can take an optional File attribute. You can specify an external file to load additional aliases from.

```
<AliasList File="MyAliasList.txt">
    <Alias.....>
</AliasList>
```

You can specify an AliasList and therefore an external Alias File for every xml file used for Minion configuration. See [<ExternalFile>](#) for more information.

4.7.2 ComputerName Alias

On a Microsoft Windows system, the Computername environment variable exists. However there is no environment variable under Linux for this. So I create one. The \$(ComputerName) alias is available under both Linux and Windows.

4.7.3 WORKING_DIR Alias

The current working directory of where the Minion.py file is running from.

4.7.4 Usage

It may be desirable to send a Minion with some pre-defined collectors to somebody to gather say Network statistics, you can create scripts to be called that take as a parameter the Network device that return such things as data rate, errors, packet count, queue count etc.

However you will not know what the actual system name for the port you want that person to gather data on is. For example in Windows the default name is "Local Area Connection", however the user could have changed it to something more useful for them such as "IT Connection" or "Test Network". You can create an Alias that can be changed in one place:

```
<Alias NIC="Test Network"/>
<Collector ID="TX-1" Frequency="250">
```

```
<Normalize>$ (BytesPerSec2MBPS) </Normalize>
<Executable>Collectors/Network.py</Executable>
<Param>GetNetTx</Param>
<Param>$ (NIC)</Param>
</Collector>
```

You could even get fancy and based upon some environment variable call different scripts depending on the OS you are running, one set for Windows and another for Linux.

4.8 Build-In Collectors

I have provided a small yet growing library of build in collectors that can be used and modeled after if you wish to make your own based upon Python. They are located in the Collectors directory.

Note: New collectors provided in releases of Minion may not be reflected here in the documentation; best to go and take a peek in there once in a while.

4.8.1 FileCollector

Located in the Collectors\FileCollector.py file. The File Collectors provide an easy mechanism to read a value from a file and use it as the dataset to be sent to Oscar.

This can be useful if you are running a long test and want to occasionally write the progress of that test to a file, you can define a collector to go read that file and send the value (presumably 0 to 100) to some Widget in the GUI.

There are two functions defined within the Collectors\FileCollector.py:

4.8.1.1 ReadFromFile

Takes a single parameter, the filename to open and read. If the file does not exist or cannot be opened, "Error" will be returned.

4.8.1.1.1 Example

The following example calls the ReadFromFile function from the FileCollector.py source file with the parameter of "Demonstration\ServerName.txt", which is the name of the file to go read the data from.

This collector also uses the [OnlySendOnChange](#) attribute.

```
<Collector ID="ServerName" OnlySendOnChange="True">
    <Executable>Collectors\FileCollector.py</Executable>
    <Param>ReadFromFile</Param>
    <Param>Demonstration\ServerName.txt</Param>
</Collector>
```

4.8.1.2 ReadFromFileWithLock

Takes two parameters, the first is the filename to open and read. If the file does not exist or cannot be opened, "Error" will be returned. The second is a semaphore file to be used for exclusivity. How this works is if the file exists, then the data file is assumed to be in the process of being updated by something else and the collector will wait for up to 1 second for the lock file to not be present.

Once the lockfile is not present, it will then create it, read the datafile, close the lockfile and return the contents of the datafile.

The algorithm another process should use to update the datafile is as follows:

```
While (Lockfile Exists)
{
    Wait
```

```
}
```

Create Lockfile
Open Datafile
Write data to Datafile
Close Datafile
Delete Lockfile

4.8.1.2.1 Example

The following example calls the ReadFromFileWithLock function from the FileCollector.py source file with the parameter of "Demonstration\ServerName.txt", which is the name of the file to go read the data from and the lock file is "TempDir\ServerNameLockFile.txt"

```
<Collector ID="ServerName">
    <Executable>Collectors\FileCollector.py</Executable>
    <Param>ReadFromFileWithLock</Param>
    <Param>Demonstration\ServerName.txt</Param>
    <Param>TempDir\ServerNameLockFile.txt</Param>
</Collector>
```

4.8.1.3 ParseFile

I've provided a kinda cool collector that will allow you to parse a file. Let's say for example that you have a worker script that is always running that is every 100ms dumping the output from Ethtool to a file. You can use this collector to specify which individual piece of data you want from that file!

Example file resulting from piping Ethtool -S:

```
NIC statistics:
    rx_bytes: 1124739465
    rx_error_bytes: 0
    tx_bytes: 12467736
    tx_error_bytes: 0
    rx_icast_packets: 198836
    rx_mcast_packets: 686
    rx_bcast_packets: 10546993
    tx_icast_packets: 130518
    tx_mcast_packets: 8
    tx_bcast_packets: 2097
    tx_mac_errors: 0
    tx_carrier_errors: 0
    rx_crc_errors: 0
    rx_align_errors: 0
    tx_single_collisions: 0
    tx_multi_collisions: 0
    tx_deferred: 0
    tx_excess_collisions: 0
    tx_late_collisions: 0
    tx_total_collisions: 0
    rx_fragments: 0
```

```

rx_jabbers: 0
rx_undersize_packets: 0
rx_oversize_packets: 0
rx_64_byte_packets: 8662169
rx_65_to_127_byte_packets: 1416121
rx_128_to_255_byte_packets: 135089
rx_256_to_511_byte_packets: 255267
rx_512_to_1023_byte_packets: 101485
rx_1024_to_1522_byte_packets: 176384
rx_1523_to_9022_byte_packets: 0
tx_64_byte_packets: 13332
tx_65_to_127_byte_packets: 104450
tx_128_to_255_byte_packets: 4689
tx_256_to_511_byte_packets: 10152
tx_512_to_1023_byte_packets: 0
tx_1024_to_1522_byte_packets: 0
tx_1523_to_9022_byte_packets: 0
rx_xon_frames: 0
rx_xoff_frames: 0
tx_xon_frames: 0
tx_xoff_frames: 0
rx_mac_ctrl_frames: 0
rx_filtered_packets: 11408451
rx_ftq_discards: 0
rx_discards: 0
rx_fw_discards: 0

```

You specify the File to open, the pattern you are searching for (such as 'rx_bytes'), the tokens to use to break the line where the pattern is found up into an array of individual string, and the index of the string you want from the resulting array, zero based.

4.8.1.3.1 Example

The following example calls the Parse function from the FileCollector.py source file with the parameter of "Demonstration\ethtool.txt", which is the name of the file to go read the data, searching for the rx_65_to_127_byte_packets statistic, tokenized by a colon and a space, and you want the string[1] result. Per the above example, it will return 1416121

```

<Collector ID="ParseTest" Frequency="250">
    <Executable>Collectors\FileCollector.py</Executable>
    <Param>ParseFile</Param>
    <Param>Demonstration\ethtool.txt</Param>
    <Param>rx_65_to_127_byte_packets</Param>
    <Param>: </Param>
    <Param>1</Param>
</Collector>

```

4.8.1.4 ParseFileWithLock

This performs the same thing as [ParseFile](#), with the addition of a lock file, as discussed in [ReadFromFileWithLock](#).

You specify the File to open, the lockfile, the pattern you are searching for (such as 'rx_bytes'), the tokens to use to break the line where the pattern is found up into an array of individual string, and the index of the string you want from the resulting array, zero based.

4.8.1.4.1 Example

The following example calls the Parse function from the FileCollector.py source file with the parameter of "Demonstration\ethtool.txt", which is the name of the file to go read the data, the lockfile "Demonstration\ethtool.txt.lock" searching for the rx_65_to_127_byte_packets statistic, tokenized by a colon and a space, and you want the string[1] result. Per the above example, it will return 1416121

```
<Collector ID="ParseTest" Frequency="250">
  <Executable>Collectors\FileCollector.py</Executable>
  <Param>ParseFileWithLock</Param>
  <Param>Demonstration\ethtool.txt</Param>
  <Param>Demonstration\ethtool.txt.lock</Param>
  <Param>rx_65_to_127_byte_packets</Param>
  <Param>:</Param>
  <Param>1</Param>
</Collector>
```

4.8.2 Network

Note: If gathering data on a Linux system, better to use LinuxNetwork collector.

The Collectors\Network.py file contains two routines, one to read the Network Tx data for a device and another to read the Network Rx data for a device.

This Collector file uses the PSUTIL library that is available for both Windows and LINUX based system. If you wish to use the collector, you must install PSUTIL on the system where it will be used. See <http://code.google.com/p/psutil/> for details.

4.8.2.1 GetNetworkRx

Takes a single parameter, the name of the network device to go read data from. This will be OS and possibly system specific. Examples are ETH0, eth0, Local Network Connection.

The data returned will be in Total Bytes Received on that interface. Using the Normalization capability of the Minion framework, this can be converted to Bytes/Sec, Bits/Sec, Mbps, Gbps etc.

4.8.2.1.1 Example

This example reads the network RX data from the 'Local Area Connection' device and normalizes it to Gbps.

```
<Collector ID="RX-1" Frequency="250">
  <Executable>Collectors/Network.py</Executable>
  <Param>GetNetworkRx</Param>
  <Param>Local Area Connection</Param>
  <Normalize>0.0000008<Normalize>
</Collector>
```

4.8.2.2 GetNetworkTx

Takes a single parameter, the name of the network device to go read data from. This will be OS and possibly system specific. Examples are ETH0, eth0, Local Network Connection.

The data returned will be in Total Bytes Received on that interface. Using the Normalization capability of the Minion framework, this can be converted to Bytes/Sec, Bits/Sec, Mbps,Gbps etc.

4.8.2.2.1 Example

This example reads the network RX data from the 'Local Area Connection' device and normalizes it to Gbps.

```
<Collector ID="RX-1" Frequency="250">
  <Executable>Collectors/Network.py</Executable>
  <Param>GetNetworkTx</Param>
  <Param>Local Area Connection</Param>
  <Normalize>0.00000008<Normalize>
</Collector>
```

4.8.3 CPU

Note: If gathering data on a Linux system, better to use Linux_CPU collector.

The Collectors\CPU.py file contains two routines, one to read the overall CPU Utilization percentage and another to read for a specific core.

This Collector file uses the PSUTIL library that is available for both Windows and LINUX based system. If you wish to use the collector, you must install PSUTIL on the system where it will be used. See <http://code.google.com/p/psutil/> for details.

4.8.3.1 GetCPU_Percentage

Takes no parameters, it simply reads the overall CPU utilization for ¼ of a second and returns the utilization value percentage.

4.8.3.1.1 Example

This example reads the overall CPU utilization.

```
<Collector ID="CPU" >
  <Executable>Collectors/CPU.py</Executable>
  <Param>GetCPU_Percentage</Param>
</Collector>
```

4.8.3.2 GetCPU_Core_Percentage

Takes a single parameter – the core # to read the utilization from, it reads the CPU utilization for the specified cor for ¼ of a second and returns the utilization value percentage.

4.8.3.2.1 Example

This example reads the I CPU utilization for core 12.

```
<Collector ID="CPU_Core_12" >
```

```

<Executable>Collectors/CPU.py</Executable>
<Param>GetCPU_Core_Percentage</Param>
<Param>12</Param>
</Collector>

```

4.8.4 Linux_CPU

The Collectors\Linux_CPU.py file contains two real functions of use. The First is CreateUtilizationList, which creates a comma separated list of CPU utilization for every core – useful for feeding a bar chart in Marvin.

Usage in Minion:

```

<Collector ID="CPU_Utilization_List" >
    <Executable>Collectors/Linux_CPU.py</Executable>
    <Param>CreateUtilizationList</Param>
</Collector>

```

If you require more details (essentially all the info linux ‘top’ will give you) then you can use the dynamic collector function CollectStatsFunction like so:

```

<DynamicCollector>
    <Plugin>
        <PythonFile>Collectors/Linux_CPU.py</PythonFile>
        <EntryPoint SpawnThread="True">CollectStatsFunction</EntryPoint>
    </Plugin>
</DynamicCollector>

```

4.8.5 PowerShell

This collector allows you to call a PowerShell script. Not used it much.

4.8.6 RandomVal

This collector is used for testing or simulating a data feed when a feed is not available. The RandomVal collector can generate a single integer, floating point or a comma separated integer list between a defined min and max value.

GetBoundedRandomValue(min,max) This will return a random integer between the two values, not inclusive of second value. The collector below will create a single value of 3 through 14 every second.

```

<Collector ID="StackedTx_Server1" Frequency="1000">
    <Executable>Collectors\RandomVal.py</Executable>
    <Param>GetBoundedRandomValue</Param>
    <Param>3</Param>    <!-- Min -->
    <Param>15</Param> <!-- Max -->
</Collector>

```

GetBoundedRandomList(min,max,listSize) Returns a comma separated list of random integer between the two values, not inclusive of second value. Size of list is determined by

the fourth param. The collector below will create a 20 list with integer values of 1 through 9 every 250 milliseconds.

```
<Collector ID="RandomList" Frequency="250">
    <Executable>Collectors\RandomVal.py</Executable>
    <Param>GetBoundedRandomList</Param>
    <Param>1</Param> <!-- Min -->
    <Param>10</Param> <!-- Max -->
    <Param>20</Param> <!-- List Size -->
</Collector>
```

`GetScaledBoundedRandomValue(min,max,scale)` Returns a scaled random value. So if you want values of 1.0 to 100.0 send min=10,max=100,scale=0.1 to get the float value.

```
<Collector ID="RandomList" Frequency="250">
    <Executable>Collectors\RandomVal.py</Executable>
    <Param>GetScaledBoundedRandomValue</Param>
    <Param>10</Param> <!-- Min -->
    <Param>100</Param> <!-- Max -->
    <Param>0.1</Param> <!-- Scale -->
</Collector>
```

4.8.7 Parrot

This collector is used for testing, not much use in a real environment. All it does is return the string you send to it as the parameter. Is useful for testing a widget, or doing something like sending the ComputerName to the Gui by using an environment variable Alias for the single parameter.

Maybe something like:

```
<Collector ID="Computer_Name" >
    <Executable>Collectors/Parrot.py</Executable>
    <Param>Echo </Param>
    <Param>$ (ComputerName)</Param>
</Collector>
```

4.8.8 IPC_Linux

This collector is now a plugin collector. It will call one or more of the programs that is part of the [Intel Performance Counter Monitor](#). It will actually call those executables for you and parse the output. The result is potentially > 1000 data points.

```
<DynamicCollector SendOnlyOnChange="True">
    <Plugin>
        <PythonFile>Collectors/IPC_Linux.py</PythonFile>
        <EntryPoint SpawnThread="True">PCM_Collector</EntryPoint>
        <Param>pcm,core,memory,numa,pcie</Param>
        <Param>1.0</Param>
    </Plugin>
</DynamicCollector>
```

This config example says to go run the PCM_Collector function in the IPC_Linux.py file, give it its own worker thread. The Parameters are a list of the names of the IPC programs (currently pcm,pcm-core,pcm-memory,pcm-numa and pcm-pcie). And to call each one of them for 1 second in order to gather data. Do not make the value of the 2nd param less than 1.0. The names in the list are as in the example – the order does't matter, only the spelling. If you only want one of them, then don't enter the others.

The programs will be called sequentially, so this collector example will take a bit over 5 seconds to loop through and collect data from all of the programs.

4.8.9 OVSdb

This collector will connect to an OVSdb to gather information. You must have configured OVSdb to accept json socket calls.

Example:

```
<DynamicCollector SendOnlyOnChange="True">
    <Plugin>
        <PythonFile>Collectors/OVSdb.py</PythonFile>
        <EntryPoint SpawnThread="True">OVSDB_Collector</EntryPoint>
        <Param>sut ip or dns name </Param>
        <Param>6640</Param>
        <Param>False</Param>
    </Plugin>
</DynamicCollector>
```

The three params are the location of the OVSdb (could be local or remote), the port it is listening on and lastly a Boolean (True or False) flag to indicate that the collector should gather a minimal dataset (True) or everything (False).

4.8.10 LibVirt

This collector will connect to an libvirt to gather information about virtualization. It theoretically could connect to a libvirt on another system – have not yet tested that.

Example:

```
<DynamicCollector SendOnlyOnChange="False">
    <Plugin>
        <PythonFile>Collectors/LibVirt.py</PythonFile>
        <EntryPoint SpawnThread="True">LibVirt_Collector</EntryPoint>
        <Param>qemu:///system</Param>
    </Plugin>
</DynamicCollector>
```

The single parameter is the location of the libvirt service.

4.8.11 Collectd

This collector will listen for data from collectd (which needs to be configured to send data over the network).

Example:

```

<DynamicCollector SendOnlyOnChange="True">
  <Plugin>
    <PythonFile>Collectors/Collectd.py</PythonFile>
    <EntryPoint SpawnThread="True">CollectionThread</EntryPoint>
    <Param>0.0.0.0</Param>
    <Param>4444</Param>
  </Plugin>
</DynamicCollector>

```

The Parameters indicate where to listen for incoming collectd data. The 1st Parameter is the IP to listen on, can be a DNS name, or IP. In this example it will listen on ALL interfaces.

4.8.12 InfluxDB

This collector will go grab data from an influxDB database. The Parameters are:

- IP:Port – connection point to DB
- Username
- Password
- Database name
- One or more descriptions what data to get

```

<DynamicCollector Frequency="1000">
  <Plugin>
    <PythonFile>Collectors\InfluxDB.py</PythonFile>
    <EntryPoint SpawnThread="True">CollectFunction</EntryPoint>
    <Param>My-Server:8086</Param>
    <Param>admin</Param>
    <Param>admin</Param>
    <Param>collectd</Param>
    <Param>one=
    {
      "measurement": ["*","-upstream_value","-downstream_value","-
upstream_tx","-upstream_rx","-downstream_tx","-downstream_rx","-ds_per_cm_value","-
turbostat_value"],
      "select": "*",
      "where": "time > now() - 10s GROUP by type",
      "value" : "{value}",
      "namespace": "106",
      "id" : ["{type_instance}","{instance}"],
      "separator" : ".",
      "csv" : "makelist"
    }
  </Param>
  <Param>two=
  {
    "measurement":
    ["upstream_value","downstream_value","upstream_tx","upstream_rx","downstream_tx","down-
stream_rx","ds_per_cm_value"],


```

```

        "select": "*",
        "separator" : ".",
        "namespace": "106",
        "id" : ["{host}","{type_instance}","{instance}"],
        "value" : "{value}",

        "where": "time > now() - 10s GROUP by type"
    }
</Param>
</Plugin>

```

This description is basically a giant string that python will turn into a dictionary. So must have be surrounded in {}. The parts are:

- “measurement” – Array of measurements to go get. “*” Indicates all available. Any that start with a ‘-’ will be excluded
- “select” – influxdb select parameters
- “where” – influxDB where parameters
- “id” – the parts of the table that will make up the ID. If has “{}” around the string, then it will get that value from the database entry (or try to). If there are no “{}” then it will use a hard string.
- “value” – which field to get the value from (should be in “{}”, otherwise will be hard coded”)
- “separator” – optional field, will be put in between the pieces that make up the “id”
- Namespace – optional you can specify a string or field (if use “{}”) to override the namespace, this is useful if for example you have a bunch of collectd items sending to the same influxDB.
- “csv” – optional. Will make a list out of sequential items. For example cpu utilization, if there is a bunch of cpu utilization data, for each core, it will make a comma separated list of each of the entries for you. It will also create another datapoint telling you how many items are in the list. The CSV can have 2 valid strings associated with “makelist”, which will make the list and “makelist_only” which will make the list, but not bother to send all the individual datapoints that make up the list

4.8.13 Prometheus

This collector will go grab data from a Prometheus database. It works in many ways very similar to the InfluxDB collector, with the major difference being the ‘query’ vs the ‘measurement’ parameter. The Parameters are:

- IP:Port – connection point to DB
- One or more descriptions what data to get

```

<DynamicCollector>
    <Plugin>
        <PythonFile>Collectors\Prometheus.py</PythonFile>
        <EntryPoint SpawnThread="True">PointCollectFunction</EntryPoint>
        <Param>nd-r720-115.jf.intel.com:9090</Param>
        <Param>cpuInfo=

```

```

{
  "query": '{__name__=~"collectd_cpu.+",exported_instance=~"npg-srv-3.+"}',
  "namespace": "{exported_instance}",
  "id" : ["{__name__}","{type}","{cpu}"],
  "instance" : "cpu",
  "separator" : ".",
  "csv" : "makelist"
}
</Param>
<Param>cpuInfoRange=
{
  "query": 'rate({__name__=~"collectd_cpu.+",exported_instance=~"npg-srv-3.+"}[30m])',
  "namespace": "{exported_instance}",
  "id" : ["cpu_range","{type}","{cpu}"],
  "instance" : "cpu",
  "separator" : ".",
  "csv" : "makelist"
}
</Param>
</Plugin>
</DynamicCollector>

```

This description is basically a giant string that python will turn into a dictionary. So must have be surrounded in {}. The parts are:

- “query” – A Prometheus query statement. See <https://prometheus.io/docs/prometheus/latest/querying/api/>
- “id” – the parts of the table that will make up the ID. If has “{}” around the string, then it will get that value from the database entry (or try to). If there are no “{}” then it will use a hard string.
- “separator” – optional field, will be put in between the pieces that make up the “id”
- Namespace – optional you can specify a string or field (if use “{}”) to override the namespace, this is useful if for example you have a bunch of collectd items sending to the same influxDB.
- “csv” – optional. Will make a list out of sequential items. For example cpu utilization, if there is a bunch of cpu utilization data, for each core, it will make a comma separated list of each of the entries for you. It will also create another datapoint telling you how many items are in the list. The CSV can have 2 valid strings associated with “makelist”, which will make the list and “makelist_only” which will make the list, but not bother to send all the individual datapoints that make up the list

Prometheus is not structured, but rather a series of tag:value entries, so you really need to know the format of the data you are trying to retrieve. The examples below are utilizing data placed into Prometheus from a collectd source.

In the examples above, the 1st dataset will query for all datapoints with a name of collectd_cpu* from servers with names matching npg-srv-3*.

The second example is almost the same, in that it will query for all datapoints with a name

of collectd_cpu* from servers with names matching npg-srv-3* but it will apply the Prometheus rate function over a 30 minute period. Which means I will get an average for each datapoint over the past 30 minutes. Note the change in 'id' – when you apply a Prometheus function the __name__ field is not returned by the query. (Do not know why)

4.8.14 IPMI

This collector will run ipmitool locally and gather data from the local BMC. ipmitool must be installed and configured.

Example:

```
<DynamicCollector SendOnlyOnChange="True">
    <Plugin>
        <PythonFile>Collectors/ipmitoolParser.py</PythonFile>
        <EntryPoint SpawnThread="True">CollectIPMI_Info</EntryPoint>
    </Plugin>
</DynamicCollector>
```

4.8.15 SystemInfo - Linux

This collector will go gather a bunch of linux information, such as cpu utilization, BIOS version, system manufacturer etc. Uses the dmidecode application, so it must be present.

Example:

```
<DynamicCollector SendOnlyOnChange="True">
    <Plugin>
        <PythonFile>Collectors/SystemInfo_Linux.py</PythonFile>
        <EntryPoint SpawnThread="True">CollectSystemInfo_Linux</EntryPoint>
    </Plugin>
</DynamicCollector>
```

4.8.16 LinuxNetwork

This collector will go and mine data from the /sys/class/net file system. It is capable of getting data from ALL devices in that tree, or a specific device (depending on which function you call). It can gather all details, or just data about data rates – again depending on parameters.

Example – Single device:

```
<DynamicCollector DoNotSend="False" SendOnlyOnChange="True">
    <Plugin>
        <PythonFile>Collectors/LinuxNetwork.py</PythonFile>
        <EntryPoint SpawnThread="True">CollectDevice</EntryPoint>
        <Param>eth0</Param>
        <Param>False</Param>
    </Plugin>
</DynamicCollector>
```

This example will collect a ton of data available for eth0 by mining the /sys/class/net/eth0 directory structure. The 1st Param indicates the device, the second indicates if the collector

should gather a ‘slim data set’ (only rx/tx information) or not. Value of false gathers a great deal more data.

Example – All devices:

```
<DynamicCollector DoNotSend="False" SendOnlyOnChange="True">
    <Plugin>
        <PythonFile>Collectors/LinuxNetwork.py</PythonFile>
        <EntryPoint SpawnThread="True">CollectAllDevices</EntryPoint>
        <Param>False</Param>
    </Plugin>
</DynamicCollector>
```

Note that this example calls a different Entry Point function. It will gather data from all devices in /sys/class/net. The 2nd parameter is the same as the previous example, for a slim data set or not.

A second <Param> option can be specified to only collect stats from actual devices (no bridges, docker devices etc. when using the CollectAllDevices function).

Use:

```
<Param>PhysicalDevicesOnly=True</Param>
```

LinuxNetwork python file has another collector that will give you data (such as driver name, manufacturer, number of queues etc. for a given device. You use the ‘CollectInfoForDevice’ entry point. Example:

```
<DynamicCollector SendOnlyOnChange="False">
    <Plugin>
        <PythonFile>Collectors/LinuxNetwork.py</PythonFile>
        <EntryPoint SpawnThread="False">CollectInfoForDevice</EntryPoint>
        <Param>enp24s0f0</Param>
    </Plugin>
</DynamicCollector>
```

4.8.16.1 Alternate Collector Method

This collector will collect data from a network device; how it does so depends on the parameters you pass to it. It can read from the /sys/class/net file system or for more details make an IOCTL call (just like ethtool) to the device driver.

Example – reading from sysfs:

```
<DynamicCollector DoNotSend="False" SendOnlyOnChange="True">
    <Plugin>
        <PythonFile>Collectors/LinuxNetwork.py</PythonFile>
        <EntryPoint SpawnThread="True">CollectDeviceStatistics</EntryPoint>
        <Param>device=eth0</Param>
        <Param>source=sysfs</Param>
    </Plugin>
</DynamicCollector>
```

This example will collect a ton of data available for eth0 by mining the /sys/class/net/eth0 directory structure.

The available parameters are:

Parameter	Description	Required
device	device=devname, such as eth0	Y
source	either sysfs or driver or sysfs driver to do both	Y
queues	WIP – not implemented yet	
vfs	not implemented yet	
slim	used with sysfs, does a small dataset	
id	uses the id you specify for in the minion ID rather than dev name	

Example – reading from driver (just like ethtool):

```
<DynamicCollector DoNotSend="False" SendOnlyOnChange="True">
    <Plugin>
        <PythonFile>Collectors/LinuxNetwork.py</PythonFile>
        <EntryPoint SpawnThread="True">CollectDeviceStatistics</EntryPoint>
        <Param>device=eth0</Param>
        <Param>source=driver</Param>
    </Plugin>
</DynamicCollector>
```

4.8.17 IpRoute2GatherVfStatsForPF

This collector calls iproute2 to get the VF stats under linux.

It is within the LinuxNetwork collector. You call the 'IpRoute2GatherVfStatsForPF' function, and the parameters is the netdev you wish to collectet data from

```
<DynamicCollector>
    <Plugin>
        <PythonFile>Collectors/LinuxNetwork.py</PythonFile>
        <EntryPoint SpawnThread="False">IpRoute2GatherVfStatsForPF</EntryPoint>
        <Param>ens785f1</Param>
    </Plugin>
</DynamicCollector>
```

4.9 Operator Collectors

There are times when you might like to take the results of two collectors and perform an operation on them. A good example is that you can easily go read the RX and TX bytes on a Linux system by using the build in [FileCollector](#) to read the /sys/class/net/device/statistics files. However if you want the BX (Bidirectional Value), there is no file to go read that. So I created Operators that will allow you to manipulate data from other collectors within the

same namespace.

An Operator looks the same as a Collector, has an ID, and a frequency however instead of an <Executable> tag, there is an <Operator> tag, followed by 1 or more <Input> tags (instead of <Param>).

Here is an example:

```
<Group Frequency="500">
    <Collector ID="Eth1.TX.bytes">
        <Executable>Collectors\FileCollector.py</Executable>
        <Normalize>$ (BytesPerSec2GBPS) </Normalize>
        <Param>ReadFromFile</Param>
        <Param>/sys/class/net/eth1/statistics/tx_bytes</Param>
    </Collector>

    <Collector ID="Eth1.RX.bytes">
        <Executable>Collectors\FileCollector.py</Executable>
        <Normalize>$ (BytesPerSec2GBPS) </Normalize>
        <Param>ReadFromFile</Param>
        <Param>/sys/class/net/eth1/statistics /rx_bytes</Param>
    </Collector>

    <Collector ID="Eth1.BX.bytes">
        <Operator>Addition</Operator>
        <Input>Eth1.TX.bytes</Input>
        <Input>Eth1.RX.bytes</Input>
    </Collector>
</Group>
```

This example read the RX and TX bytes from standard linux files, then gives you the BX bytes by doing an Addition Operator on the data collected from the RX and TX collectors.

4.9.1 Operator <Input>

All of the Operators take 1 or more <Input>s. The inputs can be either the ID of another collector in the same namespace, or a constant value. The ID of another collector can be a the ID from a [Dynamic Collector](#) and as such it may not be created at the time of the application initialization, if this is true then a message will be logged about the missing Collector ID.

Example:

```
<Input>Eth1.RX.bytes</Input>
<Input Constant="True">52.5<Input>
```

The above example has two inputs, one is from a collector with the ID of *Eth1.rx.bytes* and the second is a constant value.

Example:

```
<Collector ID="QueueAverage">
    <Operator>Average</Operator>
```

```

<Input DefaultValue="0">Queue_0_tx</Input>
<Input DefaultValue="0">Queue_1_tx</Input>
</Collector>

```

Here the Average operator will try to read the data from the collectors with IDs of Queue_0_tx and Queue_1_tx. If those collectors have already been collected their values will be used, otherwise they will use the default value of 0 for their calculations.

4.9.1.1 Default Value

An <Input> is either a Constant as shown above, or another collector ID. However sometimes the input collector specified by the ID is not yet available (meaning the Collector has not run yet, or the value hasn't been created yet by say a DynamicCollector). Yet you will want the Operator to be run. You can specify a DefaultValue to use until the collector becomes valid.:

4.9.2 Operator Addition

This Operator will take 2 or more <Input>s and sum them up. They must be numeric values.

4.9.3 Operator Average

This Operator will take 1 or more <Input>s and average them. They must be numeric values.

If you specify but a single <Input> then the Operator will keep a history of up to 100 values for averaging.

4.9.4 Operator RunningAverage

This Operator will take 1 collector as an input <Input> and average it over the specified time period (in seconds) They must be numeric values.

```

<Collector ID="FOO">
    <Operator>RunningAverage</Operator>
    <Input>RandomVal</Input>
    <Input Constant="True">10</Input>
</Collector>

```

4.9.5 Operator MakeList

This Operator will make a comma separated list from <Input>s. This can be useful for making charts.

4.9.6 Operator Duplicate

This Operator will simply duplicate the <Input> provided. This may not sound too useful, but consider a collector that collects data say every 5 seconds, but you want to make a

chart update every seconds. You could use the Duplicate Operator to accomplish this.

4.9.7 Compare Operators

There are several compare Operators that take 3 or 4 <Inputs>. The first two <Input>s are compared and if the result of the comparison operation is True, then the result of <Input> 3 is sent. If the result is False and <Input> 4 was specified, it is sent. If <Input> 4 is not specified, nothing is sent.

Example:

```
<Collector ID="TestRunning">
    <Operator>Compare_EQ</Operator>
        <Input>StatusCollector</Input>      <!--If StatusCollector == 'True' -->
        <Input Constant="True">Running</Input>
        <Input Constant="True">Yes</Input>     <!--then send 'Yes' -->
        <Input Constant="True">No</Input>      <!--else send 'No' -->
    </Collector>
```

Supported Compare Operators are:

- Compare_EQ
- Compare_NE
- Compare_GT
- Compare_GE
- Compare_LT
- Compare_LE

4.9.8 Operator Compare_EQ

Provides a mechanism to compare two Inputs, if they equal, it will send the value indicated in the 3rd <Input>. If they are not equal, and there is a 4th <Input> specified, it will send that value. This make an if-then-else ability.

Example:

```
<Collector ID="TestRunning">
    <Operator>Compare_Eq</Operator>
        <Input>StatusCollector</Input>  <!--If StatusCollector == 'True' -->
        <Input Constant="True">Running</Input>
        <Input Constant="True">Yes</Input>       <!--then send 'Yes' -->
        <Input Constant="True">No</Input>        <!--else send 'No' -->
    </Collector>
```

4.9.9 Operator Compare_NE

Compare Operator that checks for Not Equal (!=) between the 1st two <Input>s, if result is true then the <Input> 3 is sent, else if specified <Input> 4 is sent.

4.9.10 Operator Compare_GT

Compare Operator that checks for Greater Than (>). Compare Operator that checks for Not

Equal (\neq) between the 1st two <Input>s, if result is true then the <Input> 3 is sent, else if specified <Input> 4 is sent.

4.9.11 Operator Compare_GE

Compare Operator that checks for Greater Than or Equal (\geq).Compare Operator that checks for Not Equal (\neq) between the 1st two <Input>s, if result is true then the <Input> 3 is sent, else if specified <Input> 4 is sent.

4.9.12 Operator Compare_LT

Compare Operator that checks for Less Than ($<$).Compare Operator that checks for Not Equal (\neq) between the 1st two <Input>s, if result is true then the <Input> 3 is sent, else if specified <Input> 4 is sent.

4.9.13 Operator Compare_LE

Compare Operator that checks for Less Than or Equal (\leq).Compare Operator that checks for Not Equal (\neq) between the 1st two <Input>s, if result is true then the <Input> 3 is sent, else if specified <Input> 4 is sent.

4.9.14 Greatest

Sends the greatest <Input> value for a list of <Input>s. If all values are numeric it will send the highest numeric value, otherwise it will be a string compare.

4.9.15 Least

Sends the least <Input> value for a list of <Input>s. If all values are numeric it will send the smallest numeric value, otherwise it will be a string compare

4.9.16 MaxValue

Keeps track of the numeric data sent for the <Input> collectors (1 or more) and always sends the maximum value that has been collected amongst that list since collection began.

4.9.17 MinValue

Keeps track of the numeric data sent for the <Input> collectors (1 or more) and always sends the minimum value that has been collected amongst that list since collection began.

4.9.18 UserDefined

Pretty stoked about this one. ☺

This is an interesting Operator that is a hybrid between a Collector and an Operator. It takes an [<Executable>](#) and [<Param>](#)s as well as <Input>s used for using data from other collectors.

This can be very useful of your own logic. Take for example you want to display a

DyanmicImage in the GUI based upon a state machine that has 4 inputs that are all available via Collectors. With this Operator you can send those inputs to your own externally defined operator and return an state machine state value that corresponds to the appropriate image to be displayed in the GUI.

Example:

```
<Collector ID="BX" Frequency="250">
    <Normalize>2</Normalize>
    <Operator>Addition</Operator>
    <Input>TX</Input>
    <Input>RX</Input>
</Collector>

<Collector ID="dymmyList">
    <Operator>MakeList</Operator>
    <Repeat Count="72">
        <Input Constant="True">CORE$ (CurrentValueAlias).Utilization</Input>
    </Repeat>
</Collector>

<Collector ID="foo">
    <Operator>UserDefined</Operator>
    <Executable>Test.py</Executable>
    <Param>PerfTest5</Param>
    <Param>P1</Param>
    <Param>P2</Param>
    <Input>dymmyList</Input>
    <Input Constant="True">const val</Input>
    <Input>BX</Input>
</Collector>
```

The above example 'foo' Collector uses the UserDefined Operator that calls the user supplied PerfTest5 Function within the user supplied Test.py file, and passes 5 parameters to the function.

The 1st, 2nd and 4th parameters are constant value. The 3rd and 5th are all values from other Collectors.

4.9.19 Looping for Input

There are times when you might have a lot of input for a given Operator. Say you wanted to use the MakeList Operator to make a list of CPU utilization for all of the CPU's in your system, and you have 72 of them. You could do something like this:

```
<Collector ID="CPU.UTIL.LIST ">
    <Operator>MakeList</Operator>
    <Input>CORE0.Utilization</Input>
    <Input>CORE1.Utilization</Input>
    <Input>CORE2.Utilization</Input>
    <Input>CORE3.Utilization</Input>
```

```

<Input>CORE4.Utilization</Input>
...
<Input>CORE71.Utilization</Input>
</Collector>
```

And that would work just fine. But can get tedious and not flexible. Instead you can use the `<Repeat>` ability (currently just for Operator `<Input>`s)

```

<Collector ID="CPU.UTIL.LIST ">
  <Operator>MakeList</Operator>
  <Repeat Count="72">
    <Input>CORE$ (CurrentValueAlias).Utilization</Input>
  </Repeat>
</Collector>
```

When you use `Repeat`, you must specify count. There is automatically going to be two aliases created:

- `CurrentValueAlias` – as used above, range is 0-71
- `CurrentCountAlias` – as used above, range is 0-71

There is another options you can specify which is "StartValue", which indicates the starting # to begin counting at. Final number will be StartValue + Count.

```

<Collector ID="CPU.UTIL.LIST ">
  <Operator>MakeList</Operator>
  <Repeat Count="36" StartValue="36">
    <Input>CORE$ (CurrentValueAlias).Utilization</Input>
  </Repeat>
</Collector>
```

In this example, `CurrentValueAlias` has the range of 36-71 and `CurrentCountAlias` has range of 0-36.

4.10 Making your own collectors

While I've provided a few basic collectors, different demos and tests will likely want a much broader range of data to collect. The basic rule is if you create a runnable 'thing' that can be called by the framework, and that thing returns (if it is Python) or prints to stdout a data point the Minion framework can call it and send the data.

The collectors can be executables, .BAT files, script files, Python, Perl, bash, etc. It matters not.

For example, a .BAT version of the [Parrot](#) collector could look like:

```
Parrot.bat:
echo %1
```

4.10.1 Python

Python scripts can be called just like any other script, making the Python executable the `<Executable>` part of the collector.

However I've also made it so the Minion framework will try to dynamically load the specified python script into its own process space, rather than launching a completely new process. See Section 4.10.2 for information about performance considerations.

If you make a python script that simply runs on its own (as if it has a main()) then the dynamic load will fail. The script will still run and be launched, however it will be done so in a separate process.

In order to make your own Python script that will be dynamically loaded into the process space of the Minion framework, the script must be made up of functions, and those functions called in the framework. Refer to the [build-in-collectors](#) provided for examples.

4.10.2 Considerations

While the Minion framework is robust enough to allow you to call any external program or script you create to gather the data you wish to be displayed, each time this external program or script is run, it is done so in a completely separate process. Think of it as opening a new DOS Box, or Terminal each time you need to gather data. It works fine, but is not very efficient.

The exception to this is if you make Python scripts that can be dynamically loaded into the Minion framework process space as discussed in Section 4.10.1.

To prevent running out of memory, each Collector can only have one active instance at a time. What this means is if your collector takes say 1 second to run, yet the Frequency for the collector is set to say ½ a second, the framework will wait for the previous instance to run before launching the next one.

If the framework did not do this, it would quickly open up so many processes that the system ran out of memory and compute power.

If you need to create many collectors that gather data that are launched in a separate process (for example a bash script, or a binary executable), it may have a noticeable effect on system resources – that could skew the desired test/demo results. If this is the case, consider making your data gathering app/script/etc. run on its own and instead of printing the data to be sent to the GUI to standard out, write it to a file and then use a [File Collector](#) to read the data. It may prove much more efficient.

Note: To see a comparison of performance differences between an internally called (dynamically loaded python script) vs. launching an external script, run both the DemoConfig.xml and DemoConfig_DynaLoad.xml config files and compare the CPU utilizing of the system under test.

4.11 Mute Collector

There are times when you may want to perform a [task](#) at a regular interval, but not send any data to the GUI or Oscar. To accommodate this, make a regular collector but instead of returning a piece of data, return the string "HelenKeller" (very case sensitive). Helen may be the most famous of all mute people in history – even though in reality she was not mute and learned to speak.

4.12 <Actor> (Tasks)

The Minion framework is capable of also performing tasks – which means it is capable of executing external applications to go perform tasks on demand as opposed to on a regular basis.

A Task is initiated by a GUI (such as Marvin) to go do something. For example if you want to go start a performance test of some kind. You can manually start a script from a command line, or you can assign a task to a Widget in the GUI and a message will be sent to the Minion framework to go do that task.

Tasks are defined in the configuration XML file in a manner very similar to that of a collector; there is no [frequency](#) (as it is done on demand) and since the tasks do not return any data, there is no [normalization](#).

4.12.1 Attributes

The <Actor> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
ID	M	The ID the Task to be performed

4.12.1.1 ID

This is the ID the actor to call. As with the ID for a Collector, the ID+Namespace of an Actor should be unique within a Minion Config file.

4.12.2 <Executable>

This is nearly the same as the [<Executable>](#) tag for a Collector. The exception being that if the external program called as a Task returns any data, it is ignored and NOT sent back to the GUI.

4.12.3 <Param>

The <Executable> specified may need parameters. You may put one or more <Param> nodes in a collector to provide the parameters.

Parameters can also be sent from Marvin as part of the Task Request. Any Parameters sent from Marvin will be added to the invocation after the ones listed in the Minion configuration file.

4.12.4 Example

The following is an example Actor entry into the Minion configuration XML file that when invoked will run the 'launchCoreWorkload.sh' script and pass it a parameter of '0'.

```
<Actor ID="RunWorkLoadTask_Core_0">
    <Executable>launchCoreWorkload.sh</Executable>
    <Param>0</Param>
```

```
</Actor>
```

4.13 Using Additional Files

One might want to create a library of files in which you define a common set of collectors. You can do this using the <ExternalFile> tag.

Within a namespace, you simply add this tag. Here is an example (from the DemoConfig.xml file):

```
<!-- Some others are defined externally, and use some aliases-->
<ExternalFile Rate1="250" Rate2="500">Demonstration/AdditionalFile.xml</ExternalFile>
```

Within an external file you can create an alias list (which is only valid for that file, and any files it may load externally) and additional collectors. You cannot create new Actors. All collectors will be part of the Namespace which the <ExternalFile> tag is listed within.

You can pass 'parameters' to an external file as shown above. It is really an Alias that is created just before the file is parsed, and removed when it is done parsing. So this means in the example above, Rate1 and Rate2 are aliases used within the 'AdditionalFile.xml', but they do not exist outside of that.

5 Oscar

In addition to being a character from my early youth, Oscar is the name I've given the 'middle' layer of the BIFF Instrumentation Framework project. Oscar receives data from one or more Minions and sends that data onto one or Marvin. Oscar has the ability to save and playback the data received from minions.

Oscar can now (as of version Beta 1.20) accept input from other Oscars as well – allowing you to chain them. Be careful though, no protection is in place for circular connections ☺

Oscar is written in Python and has a GUI written in tkinter. As of Beta 1.20 you can run Oscar in a session with no gui. If it fails to load a GUI, it will default to command no Gui.

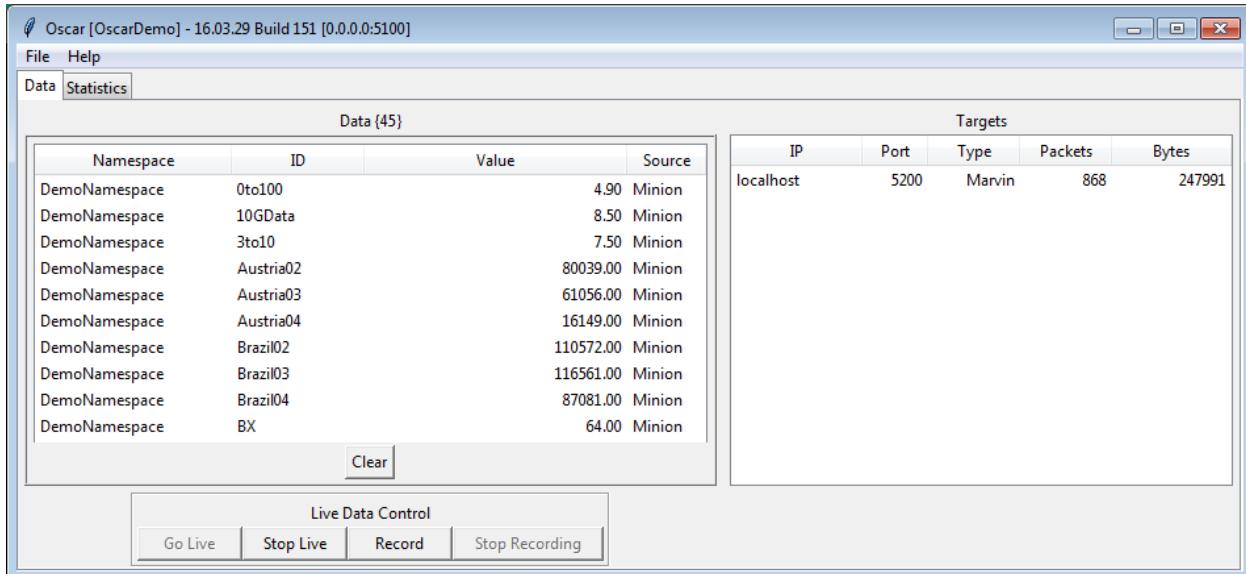


Figure 2 Oscar

5.1 Running Oscar

To run Oscar you simply type:

```
python Oscar.py
```

This will start up Oscar with the default configuration file of OscarConfig.xml.

There are many optional command line parameters when you invoke Oscar:

Parameter	Description / Usage
-i --input filename	Specify a specific configuration filename
-v --verbose	Print debug information to console and log file

-l --logfile	Logfile name – default is OscarLog.txt
-p --playback	Loads and plays the specified file
-rp	Repeat mode – replays the specified playback file
-lp	Loop mode – repeats data in specified file from points Specified by -b and -e options
-b --begin	Data packet # in playback file to begin playback, used with -e option
-e --end	Data packet # to stop at before returning to -begin # when looping
-s --speed	Playback speed, only used with -p option
-r --record filename	Records and when done recording, saves to specified file
-t --time	Runs for specified time (minutes) before exiting. Used with -r option mostly
-m --minimize	Launches gui minimized
-ng --nogui	Command line only
-bc --batchconvert	Via command line, convert one or more specified files with file mask, to csv format.

5.2 The configuration file

Example

```
<?xml version="1.0" encoding="utf-8"?>
<Oscar ID="Oscar1">
  <IncomingMinionConnection IP="localhost" PORT ="3232"/>
  <TargetConnection IP="localhost" PORT="3234"/>
  <TargetConnection IP="patrick-pc" PORT="3234"/>
  <TargetConnection IP="javabox" PORT="3234"/>
  <SendStatus>True</SendStatus>
</Oscar>
```

5.2.1 <Oscar>

The Oscar tag is the root for the configuration file. It takes a required ID. This is used to identify the specific Oscar. This is because you can actually have more than one Oscar feeding data to Marvin(s). Since Marvin(s) need to send data to Oscar(s) this provided a mechanism by which to identify Oscar(s).

The Oscar ID needs to be different for each Oscar connected to a specific Marvin – otherwise undesired results are likely.

5.2.2 <IncomingMinionConnection>

The IncomingMinionConnection tag defines a socket where Oscar will listen for incoming data packets from one or more minions. This connection point will be for receiving data from minions that will then be sent to Marvin.

This tag is required. This is the connection point that you specify in your Minion configuration file [<TargetConnection>](#) tag.

5.2.2.1 Attributes

The <IncomingMinionConnection> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
IP	M	Local IP Address to listen for data from Minion(s)
PORT	M	Local UDP Port to listen for data from Minion(s)

5.2.2.2 IP

IP Address for Oscar to listen on.

5.2.2.3 Port

Port on which the Oscar will listen for incoming data.

5.2.2.4 Oscar

EXPERIMENTAL

I've implemented a mechanism for Oscar to 'dynamically connect' to another Oscar. Just like Marvin can.

```
<IncomingMinionConnection PORT ="5100">
    <Oscar IP="OtherOscar.MyNet.com" Port="6200" Key="MarvinAutoConnectKey"/>
</IncomingMinionConnection>
```

5.2.3 <TargetConnection>

You specify one or more <TagetConnection> tags, each one points to a Marvin Gui. You can run multiple Marvins at the same IP, but they will need different ports. What you specify in the Oscar <TargetConnection> tag should match the Marvin [<Network>](#) information.

Note: Oscar will scan the configuration file for changes while it is running. Any NEW targets added to the configuration file will be added while it is running. Only additions can be made while running. If you wish to remove a target, you must re-start the

application.

5.2.3.1 Attributes

The <TargetConnection> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
IP	M	Remote IP Address to send data to a Marvin
PORT	M	Remote UDP Port to send data to a Marvin

5.2.3.2 IP

Remote Address to send data to a Marvin or a downstream Oscar.

5.2.3.3 Port

Remote Address to send data to a Marvin

5.2.4 <IncomingMarvinConnection>

Marvin needs to communicate with Oscar, to send [Tasks](#) as well as a [heartbeat](#).

If you do not specify the <IncomingMarvinConnection> tag, Oscar will randomly choose a port and listen on all interfaces. If you specify all or part of <IncomingMarvinConnection> that will be used.

Oscar will send a message to Marvin informing Marvin of where to send data to Oscar.

5.2.4.1 Attributes

The <TargetConnection> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
IP	O	IP address for Oscar to listen for Marvin messages on. If not specified, will listen on all devices
PORT	O	UDP Port to listen for Marvin messages on. If not specified, a random port will be chosen

5.2.4.2 IP

IP address to listen for Marvin messages on.

5.2.4.3 Port

UDP Port to listen for Marvin messages on.

5.2.5 <MarvinAutoConnect>

The <MarvinAutoConnect> key is an optional way that a Marvin can automatically connect

to an Oscar. This is opposed to the ‘normal’ mechanism by which the Oscar must explicitly point to a Marvin for Marvin to get data.

Using the MarvinAutoConnect feature a Marvin can point to an Oscar and connect automatically upon startup.

Example

```
<MarvinAutoConnect Key="PatrickKutchKey"/>
```

If a [Marvin is configured](#) for automatic connections it will upon startup (and only upon startup) send a message to Oscar with a hash of the key it has been configured with. If those keys match, then Oscar will add that Marvin to its list of targets to send data to.

Note:

If you specify a Marvin as a traditional target via `<TargetConnection>` and that target also connects via MarvinAutoConnect, that Marvin will receive each data point twice. So take care.

5.2.6 <Shunt>

EXPERIMENTAL: This has not been fully tested

The Shunt option allows you to write specific data sets to files. You can use Regular Expressions for both the Namespace and ID used in selecting the data. Additionally you can specify how the data is written – it can be written to a file in a DynamicCollector format, or it can be written in a historical manner where the file is appended with latest value.

5.2.6.1 Attributes

The `<Shunt>` tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
Namespace	M	Namespace of the dataset to filter on. Can be a RegEx.
ID	M	ID of the dataset to filter on. Can be a RegEx.
Type	O	Current only valid option is ‘History’, which will append the data to the specified file. Default option is to overwrite the data within the file on every update.

Example:

```
<Shunt Namespace=".*" ID="Systime" Type="History">HistoricalData.txt</Shunt>
<Shunt Namespace="DemoNamespace" ID="Brazil">BrazilData.txt</Shunt>
```

The 1st one will match on any incoming Namespace and an ID of SysTime. The data will be written to the HistoricalData.txt file, all changes are appended to the file.

The 2nd one matches on DemoNamespace for the Namespace and any data with the string Brazil will be written to the BrazilData.txt file in a Namespace.DataID=Value format.

5.2.7 <BITW>

EXPERIMENTAL: This has not been fully tested

This is Bump In The Wire. It allows you to change the namespace of data before it is transmitted. Consider the case where you instrument your server or a bunch of VMs or whatever, you run your tests and record the results using Oscar. Then you go and modify the settings on the system run the tests again and record them. Now you have two sets of recorded data and you would like to show them side-by-side in the GUI. You could have 2 instances of Oscar running to play the two recordings – but the Namespace and ID's of the data in both files is the same.

With BITW, you can change the namespace/s from one set of data before it is sent.

Example: <BITW>

```
<BITW>
    <Input Namespace="(.*)" />
    <Output Namespace=".newNamespace" />
    <Mode>Append</Mode>
</BITW>
```

You can specify more than one <BITW> section. Each section must have an Input namespace and out Output Namespace as shown above. The <BITW>, <Input>, <Output> and optional <Mode> tags are case sensitive.

<Input> specifies the namespace to search for. It can be a literal, or a regular expression. In the example above, it is match on ALL.

<Output> is the new namespace to use, or the one to append to the existing, depending on <Mode>

<Mode> by default is Replace. Which will replace the matched namespace with the one specified. If Mode is 'Append', then the string specified in <Output> will be appended to the matched namespace. In the example above, all namespaces will have the string ".newNamespace" appended to them.

```
<BITW>
    <Input Namespace="VM18" />
    <Output Namespace="VM18.SecondTest" />
</BITW>
```

In this example, all data points with the Namespace of VM18 and replace it with "VM18.SecondTest".

Note that the Namespaces themselves are not case dependent, so in this example it will also match on Vm18, vm18 and vM18.

Bump In The wire should work with Saved data, live data and chained data.

5.2.8 <IncomingProxyConnection> and <ProxyOscarServer>

All the network traffic for BIFF was designed to use UDP because it was simple and lightweight; if a data packet was lost and a gauge didn't update it is not critical. However

this has led to firewall issues on occasion. For example if you SUT and Minion are in a lab environment and Marvin is on a corporate network, there may be firewalls rules to prevent UDP traffic from traveling through this.

In general there are fewer firewall rules if a system behind a firewall connects to something outside of the firewall. So with this in mind a TCP/IP based connection is possible between two Oscars.

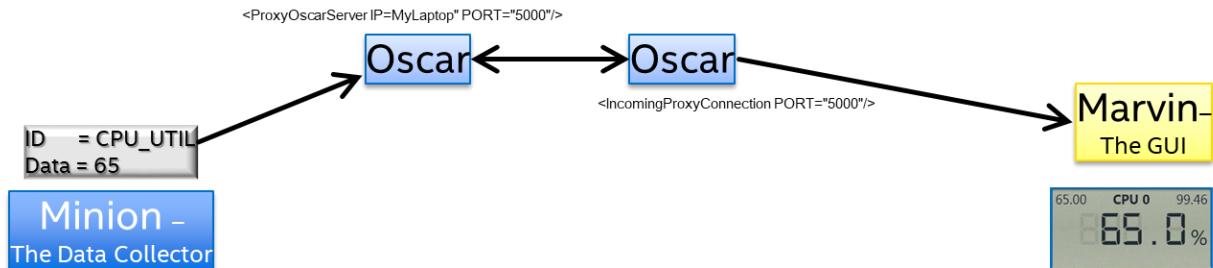


Figure 3 TCP/IP Connection between Oscars

To create a TCP/IP connection between two Oscars, the one receiving data from Minion (or other Oscars) that in turn sends data to another Oscar that in turn sends the data onto a Marvin is setup as the 'client' that connects to the 2nd Oscar that acts as the server and accepts TCP/IP connections on a specified port an IP via the <IncomingProxyConnection> settings.

So the 1st Oscar sets up the PORT and IP for getting data from Minion and also sets up a <ProxyOscarServer> to point to where the 2nd Oscar that is presumably outside of the lab firewall is waiting to accept a socket connection.

Both <ProxyOscarServer> and <IncomingProxyConnection> have an IP and PORT Tag:

```
<ProxyOscarServer IP="MyLaptop" PORT="5000"/>
<IncomingProxyConnection PORT="5000"/>
```

Note that as with other Network configurations, the IP for <IncomingProxyConnection> can be left blank and sockets on ALL devices for the specified port will be listened on.

5.3 Using Oscar

5.3.1 Live Data

Once Oscar has started up, you can press the Start button to start receiving data from Minion(s) and sending it to Marvin(s).

The stop button will stop the live feed.

5.3.2 Recording Data feed

Once you have pressed the Start button, you will start to receive data from Minion(s).

Pressing the record button will keep a copy of the incoming data in memory while also sending it to Marvin(s). It will keep doing so until you press 'Stop'. At which time you can then playback the recorded data with the panel on the right, or you can save the recorded

data for playback. Using the File menu.

You can save the data to either an Oscar file for playback later, or you can save it to a CSV formatted file for using in Excel.

Note: If you exit the app without saving your data, you will not be prompted, it will be gone.

5.3.2.1 Saving Data to be used directly by Marvin

Oscar can play back data at different speeds. I recently tried to pump a large amount of data from a save file into Marvin at 10x speed – which resulted in > 15K data points a second. For each data point it had to be packaged up, sent in a socket to Marvin which in turn validates unpackages and displays in a number of widgets. On mere mortal laptops running on battery power this turned out to be way too much for it to handle.

As such I added the ability to save the recorded data into a .BIFM (BIFF Marvin) file that can be ready by Marvin directly via a [MarvinPlayback](#) task. Oscar cannot load BIFM files, only write them. You can load a .BIFF file and save it as a BIFM file.

The option to save as a BIFM will appear as a file type option in the 'Save' dialog box.

5.3.3 Playing back Recorded Data

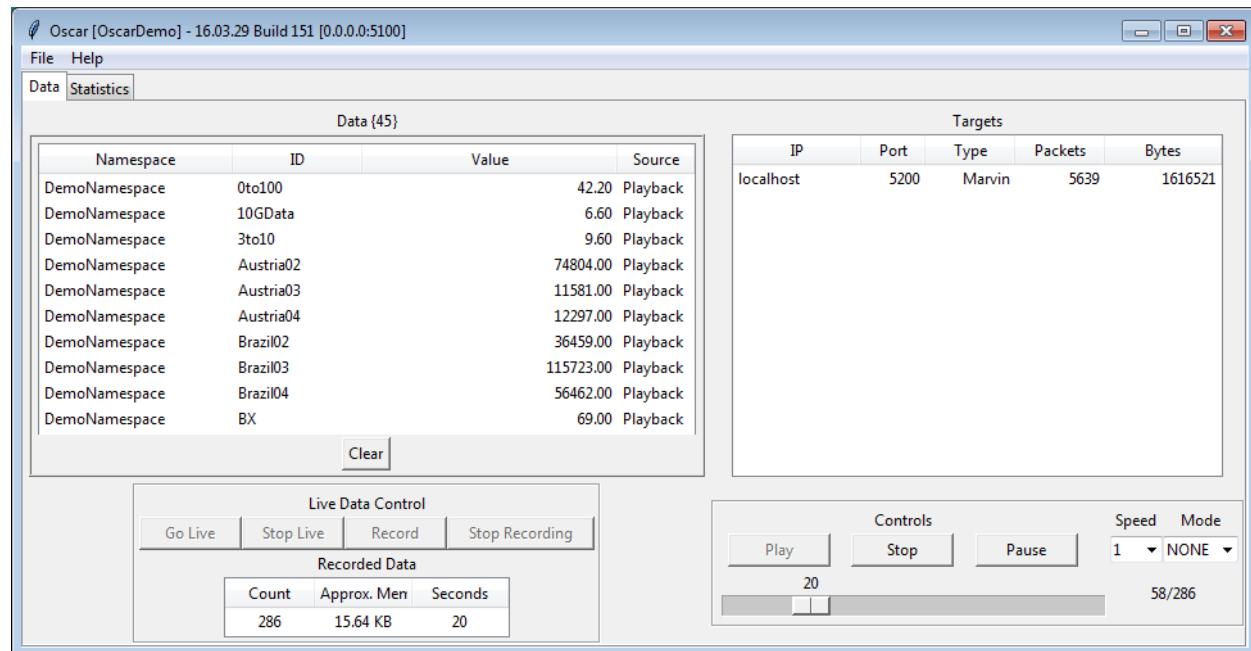


Figure 4 Oscar with Playback Pane

Once you have recorded live data as described above, or loaded a saved recorded session using the File menu, the Playback tab will appear. It works very much like A CD player.

There are some options to repeat the playback (will loop through all the data repeatedly) and to change the speed at which the playback occurs.

6 Marvin

Marvin is the code name for the Java 8 based GUI that is part of the BIFF Instrumentation Framework . It receives a piece of data from [Oscar](#) that can be either live data or recorded that originated from a [Minion](#). Each data packet contains a [Namespace](#) and an [ID](#), these are used to 'connect' a data point to a 'Widget' (GUI component) to be displayed in Marvin.

Marvin has been designed to be highly configurable; everything is configurable via XML files. This includes what you display as well as how it is displayed. The what is a collection of Widgets and the how is determined by stylesheets (CSS Files). Furthermore, Marvin is designed to be agnostic to the data it is displaying – it knows nothing about the kind of data it is getting, could be CPU Utilization, network throughput or the name of the computer.

6.1 General Components

Marvin will have one or more Tabs, similar to what is shown in Figure 1. On each Tab you can place as many Widgets as you like.

Widgets are placed into Grids. Grids are very similar (pretty much identical) to HTML tables. When adding a widget to a Tab, you specify which grid position the widget should be placed.

You can layer widgets on top of each other, there is no restriction on this. You can do some advanced features doing this as discussed in Section 11.1.

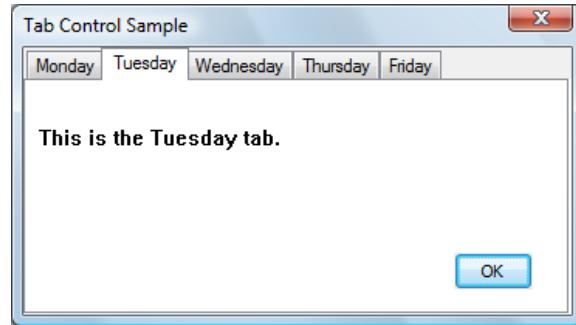


Figure 5 Tab Control

6.1.1 Grids

Grids are the basis of layouts for displaying your Widgets. Figure 6 shows a simple example of a Grid within a Tab.

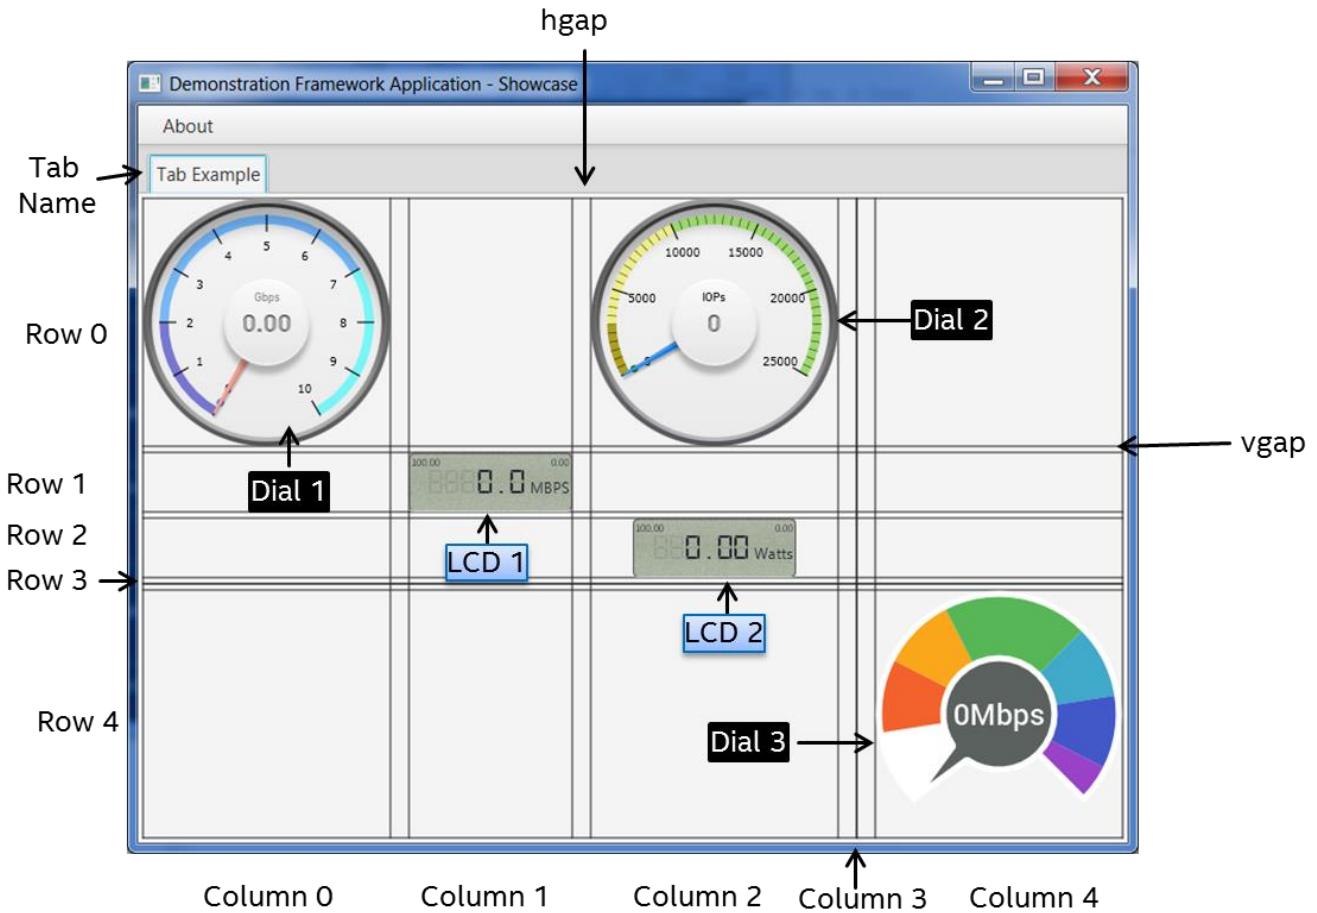


Figure 6 Sample Grid

Grid rows and columns start numbering at 0. The width and height of an individual Grid cell is determined by the largest height and width of widgets within its row and column. If there is no widget placed into a row or column, its size will be 0. The above figure features both a row and column in which no widgets are placed, thus resulting in a size of 0; this would be row 3 and column3.

In between rows and columns there are configurable gaps; hgap is for horizontal spacing (gap) between columns while vgap is the spacing between row. In the above example the hgap is set to 15 and the vgap is set to 5.

Note in Figure 6 how the width of column 0 is determined by the width of the Dial 1 Widget. The same is true for both the height or Row 1 – it is the height of the LCD 1 widget; while the width of Column 1 is the width of the LCD 1 widget.

Note how the height of rows 1 and 2 are the same, but how LCD 2 is not as wide as the column it is in.

6.1.2 Grids within Grids

Each Tab that you define has a grid automatically placed in it by default. You can add more grids within this 'base' grid in order to achieve desired layouts. The following figure provides an example of a tab with multiple grids.



Figure 7 Grids

The standard grid, or Tab Grid, is where the large dial is placed, at location 0,0 (row,column). Next there is a Grid Widget placed at location 0,1 within the Tab Grid. Within this grid widget, 8 dials are placed. Then finally another Grid Widget is placed in grid location 1,1 (the center) of the first Grid Widget and a simple colored pane placed with it.

Using Grids within grids you can achieve very sophisticated layouts – though it will take practice; I suggest reading up on best practices on HTML tables.

6.2 Running Marvin

The working directory from where you launch Marvin must be the directory where the BIFF.Marvin.jar file exists.

Command line options are:

Parameter	Description / Usage
-i	Specify application configuration file, default is Application.xml
-v, -vv, -vvv, -vvvv	Different verbosity levels for debugging

-log	Specify the name of the log file. Default is MarvinLog.html
-aliasfile	Specify an external file (See Section 6.2.1)
-dumpalias	Dumps all aliases at the root (main application level)
-dumpWidgetInfo	Dumps dimensions of widgets, and all files used to create app (tab and grid files)
-altSplash	Specifies an alternate splash image file to use
-enforceMediaSupport	Will not load app if you try to use audio or video files on system that does not support it

Example:

```
java -jar BIFF.Marvin.jar -i demo\DemoApp.xml
```

6.2.1 External Alias File

Note: No spaces between -aliasfile=inputfile

If you use the -aliasfile command line parameter you can specify an external file will be turned into aliases. The format text of the file is pretty simple:

```
Aliasname=aliasvalue
```

You can use the # sign for comments.

This is useful if you want to create a generic tab with alias values for namespaces and ID's, that are defined externally.

See the MyAliasList.txt file packaged with the example app.

6.3 Configuration File

The XML configuration file is where the magic happens for Marvin, it is where you define what data gets displayed, how it is displayed and what [Tasks](#) you might like to perform when you click on a widget.

The default XML file used by Marvin is “Application.xml” in the same directory as the .jar file. You can specify a different XML file, see Section 6.2 for details.

The basic hierarchy for the XML file is as follows:

```
<Marvin>
  <Application>
    <Network></Network>
    <Title></Title>
    <Tabs>
      <Tab ID="tab-1"/>
      ...
      <Tab ID="tab-n"/>
    </Tabs>
  </Application>
  <Tab ID="tab-1">
    <Widget></Widget>
    ...
    <Widget></Widget>
  </Tab>
  ...
  <Tab ID="tab-n">
    <Widget></Widget>
    ...
    <Widget></Widget>
  </Tab>
  </Namespace>
  ...
  <TaskList ID="TaskList-1">
    <TaskItem></TaskItem>
    ...
    <TaskItem></TaskItem>
  </TaskList>
  ...
  <TaskList ID="TaskList-n">
    <TaskItem></TaskItem>
    ...
    <TaskItem></TaskItem>
  </TaskList>
  <AliasList>
    <Alias Foo="Hi Bob" Bar="Bye Bob"/>
  </AliasList>
</Marvin>
```

6.3.1 <Marvin>

This is the root node for the application XML configuration file. It has no attributes.

6.3.2 <Application>

The <Application> section of the XML configuration file defined what components will be used in composing the resulting GUI. This includes the title, look and feel, network connections, tabs etc.

6.3.2.1 Attributes

The <Application> tag supports the following attributes.

Attribute	M/O	Comments
ID	O	ID of the Marvin
Mode	O	Debug or Kiosk
Scale	O	Global size change for widgets
Height	O	
Width	O	
EnableScrollBars	O	
MarvinLocalData	O	Creates some local data points

6.3.2.1.1 ID

The attribute provide an ID for the specific instance of the Marvin. It is used for [RemoteMarvinTasks](#).

6.3.2.1.2 Mode

If 'Debug' is specified then the gridlines in the grids will appear – very helpful for working on layouts. Additionally [Spacer](#) widgets will be red by default instead of invisible. Logging will also be at higher level.

In Debug mode, if you press shift and click on a Widget, the log file will contain information about that Widget, including the Minion Source associated with it.

If 'Kiosk' is specified, no [tasks](#) will be performed. If you have a task associated with a menu item or a Widget, nothing will happen. This is designed to be used at a kiosk or some sort of location where people can play with the Gui and look at stuff, but not manipulate anything directly.

In Debug mode, if you press shift and click on a widget, it will log that widget's information.

If you are pressing CTRL and click on a widget (again Debug mode), the background and border will change, makes it easier to see the different grids within grids.

6.3.2.1.3 Scale

Experimental setting that will grow or shrink sizes of widgets based upon a float value (ex

0.75 or 1.25 to shrink or grow by %25)

There is a way to automatically scale the widgets. Rather than specifying a value for the Scale attribute, set it to "Auto": Scale="Auto", and use the <CreationSize> tag to try automatically scaling.

NOTE: At this time the scaling of charts and graphs does not work.

6.3.2.1.4 **Height**

Height of main window. Note if not specified, will grow to the size of the screen.

6.3.2.1.5 **Width**

Width of main window. Note if not specified, will grow to the size of the screen.

6.3.2.1.6 **EnableScrollBars**

If "True", will add scroll bars to the application on every tab. Default is False.

6.3.2.1.7 **MarvinLocalData**

If set to 'Enabled', Marvin will automatically generate several MinionSrc datapoints that are completely local to that instance of Marvin. They will all have the namespace of 'MarvinLocalNamespace'. Id's are as follows:

- Datapoints - Number of unique datapoints (Namespace+ID)
- DataUpdateCount - Number of times data has come in
- LocalTime
- MarvinID - ID, if set in application config
- RuntimeFormatted - days,hours,minutes,secs Marvin has been running
- RuntimeSecs - seconds Marvin has been running
- TaskCount - Number of tasks created
- TasksExecutedCount - number of tasks Run
- UnassignedDatapointCount - Number of unique datapoints received, but not used
- WidgetCount - # of widgets/grids in app

6.3.2.2 **<Title>**

This specifies the title to be displayed in the title bar of the GUI.

6.3.2.3 **<RefreshInterval>**

Is really a debug type setting that is optional. Specifies the interval in milliseconds at which the widgets should be re-drawn. Default is 350 which is 350ms.

6.3.2.4 **<MonitorNumber>**

Optional setting where you can specify a monitor number that the application will launch on. Monitor numbering starts at 1.

Example:

```
<MonitorNumber>2</MonitorNumber>
```

6.3.2.5 **<Network>**

The Network tag defines where the application should be listening for incoming data coming from one or more Oscars.

6.3.2.5.1 Attributes

The <Network> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
IP	O	Target IP Address
Port	M	Target UDP Port

6.3.2.5.2 IP

IP Address that Marvin will bind to for listening for data on the specified port. If not specified, it will listen on ALL interfaces on the specified port.

6.3.2.5.3 Port

Port on which the Marvin is listening for data.

6.3.2.5.4 Example

```
<Marvin>
  <Application>
    <Network IP="localhost" Port="3232"/>
  </Application>
</Marvin>
```

6.3.2.5.5 Oscar Settings

The <Network> Settings can include any number of additional <Oscar> Tags as in the blow example:

```
<Network Port="5200">
  <Oscar IP="MyOscarBox.kutch.com" Port="6200" Key="PatrickKutchKey"/>
</Network>
```

In this example Marvin is listening on port 5200 on all interfaces for data from one or more Oscars. It also has an <Oscar> tag that points to a specific Oscar IP and Port as well as an identifying Key. The Oscar IP and Port are the [<IncomingMinionConnection>](#) IP and port for a specific Oscar. Using this information, upon startup Marvin will send a 'quick message' to that location with the Marvin connection information so that the Oscar so that the Oscar may in turn perform a 'dynamic connection' to this Marvin.

They Key provided is a minor security measure. A hash of the key is sent along with the message from Marvin to Oscar. If Oscar has been configured with this same Key then it allows the 'dynamic' session to be created. It also logs the connection.

Using this feature you can provide a user or a customer a copy of Marvin and have it point to a specific Oscar somewhere with a specific Key. Your customer can then remotely view your demo using a local GUI and you can see when they ran the demo (again, Oscar will log it) and you can control access by removing that supported Key from the Oscar configuration file.

6.3.2.6 <CreationSize>

CreationSize is an optional tag you can put in that will help automatically scale your widgets

and still maintain the correct relative dimensions.

If you put in the Height and Width of the screen you use to create your GUI (the about box will tell you the Java dimensions. If you use the Scale="Auto" setting, then the framework will attempt to automatically determine a scaling factor based upon the <CreationSize> dimensions and the current screen resolution.

6.3.2.7 Attributes

The <CreationSize> tag supports the following attributes, which are not case sensitive.

Attribute	M/O	Comments
Height	O	Height of screen used when you laid out the widgets
Width	O	Width of screen used when you laid out the widgets

6.3.2.8 Padding

Defines global padding for the space between the edge of a grid and the placement of the Widget. For example if you place a dial, and there is no padding, it will (likely) fill to the size of the grid cell it is in. If you specify a padding, then the specified spacing will be within the grid cell. This is the global default, that may be overridden on a per tab and grid basis.

6.3.2.8.1 Attributes

The <Padding> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
Top	O	Default global padding on top of cell grid, in pixels
Bottom	O	Default global padding on bottom of cell grid, in pixels
Left	O	Default global padding on left of cell grid, in pixels
Right	O	Default global padding on right of cell grid, in pixels
LegacyMode	O	I changed the way padding is not 'inherited' from the application <Padding> setting for grids (it now works as it should), but setting this flag to true will go back to old way, as to not break existing apps.

6.3.2.9 StyleSheet

Specifies the optional external stylesheet that can be provided to change the look and feel for the entire application.

6.3.2.10 IgnoreWebCerts

This Tag is for when you are using the [Web widget](#) and you point it towards a page that has security certificates that are not installed on your system (like most KVM systems in our labs). Since the Web Widget is basically a home-grown browser, I have not implemented support to prompt to continue for this type of situation. So you can use this tag and put in a value of True to ignore them.

```
<IgnoreWebCerts>True</IgnoreWebCerts>
```

This tag is optional.

6.3.2.11 Heartbeat

This is the rate (in seconds) in which Marvin will send an 'I'm Here' message to all of the Oscars sending data. This allows the Oscars to stop sending data if a Marvin goes away – prevents the sending of large amounts of data on the network when nobody is listening.

6.3.2.12 Tasks

This tag allows one to configure if Tasks will be allowed or not. Is similar to [kiosk mode](#).

6.3.2.12.1 Attributes

The <Tasks> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
Enabled	O	Either True or False Default is True

6.3.2.13 MainMenu

Marvin provides a mechanism by which you can create menu's where a menu item is associated with a [Task](#). Note that this feature is used with the [<Tasks>](#) tag. The MainMenu is made up of one or more Menu's.

6.3.2.13.1 Attributes

The <MainMenu> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
Show	O	Either True or False, if false hides the menu, default is True

6.3.2.13.2 Menu

This is a menu to be displayed in the menu bar (MainMenu). It contains a title and a list of menu items. And an optional Image. You can specify the dimensions of the image, but this is also optional. You may also specify a <StyleOverride> just like widgets, however it only supports <Items> not ID or files.

```
<MenuItem Text="Test Menu">
    <Image Height="20" Width="20">$(AppDir)\images\pic.png</Image>
<MenuItem>
```

6.3.2.13.3 Attributes

The <Menu> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
Title	M	Text to be displayed on menu bar

6.3.2.13.4 MenuItem

This is the definition of the menu item. It contains two parts, the Text (what to display in the menu and the [Task](#) to be performed. Additionally, you can specify an Image for the menu item, this is optional, as is specifying the height and width of the image.

You may also specify a <StyleOverride> just like widgets, however it only supports <Items> not ID or files.

Example

```
<MainMenu Show="True">
    <Menu Title="Test">
        <MenuItem Text="Remote Dir" Task="RunDir">
            <StyleOverride><Item>-fx-background-color:yellow</Item></StyleOverride>
        </MenuItem>
        <MenuItem Text="Local Dir" Task="RunLocalDir">
            <Image Height="20" Width="20">$(AppDir) \images\pic.png</Image>
        </MenuItem>
    </Menu>
</MainMenu>
```

6.3.2.13.5 CreateDataPoint

A <MenuItem> can also generate one or more Datapoints as part of the task being executed. In this way you can have the same task specified for menu items and pass a 'parameter' in the form of a Marvin DataPoint.

Example

```
<Menu Title="Run Test">
    <MenuItem Text="Test1" Task="Task_Test" CreateDataPoint="[TestNS,TestID,Test1]"/>
    <MenuItem Text="Test2" Task="Task_Test" CreateDataPoint="[TestNS,TestID,^Text]"/>
</Menu>
```

In this example, when you select the 'Test1' Menu item, before the Task_Test task is called, the datapoint with Namespace of 'TestNS' and ID of 'TestID' will be assigned the value of 'Test1'.

If you select 'Test2' menu item, the the datapoint with Namespace of 'TestNS' and ID of 'TestID' will be assigned the value of 'Test2'. This is because you can specify ^Text (case sensitive) to indicate to use the Menu Text as the parameter. The other special keys you can use is ^Task which will use the task name and ^Index which will give you the number of the selected menu item, starting at zero. You can mix, match and combine these, they are case sensitive.

You may specify more than one Namespace/ID combination to set each Namespace, ID, Value combination is in brackets '[]' and can be combined with commas:

```
<MenuItem Text="Item" Task="Test" CreateDataPoint="[NS1, ID1, ^Text^Task], [NS2, ID2,  
, $(AppDir).$(CONTROLLER_NS)]"/>
```

That example will create 2 datapoints:

Namespace=NS1, ID=ID1 Data=ItemTest

Namespace=NS2, ID=ID2 Data= combination of aliases for AppDir and CONTROLLER_NS

NOTE: The %(Namespace, ID) usage for Tasks, is also available for usage with CreateDataPoint

6.3.2.14 Tabs

The <Tabs> section of the <Application> definition contains the list of Tab ID's to be displayed. The definition of what is in each Tab is defined in a different location in the configuration file. See Section 6.3.3 for details on defining and individual Tab.

The <Tabs> tag can take an optional attribute of 'Side', which allows you to specify a location for the tabs to be placed on the screen. Valid options are 'Top' (the default), 'Bottom', 'Left' and 'Right'

The <Tabs> tag contains no attributes, only a list of one or more <Tab> tags. The Tabs will be displayed in the order listed within this section.

6.3.2.14.1 Tab

Defines the Tab to be displayed, based upon the ID provided. The <Tab> tag contains but a single mandatory Attribute of ID. The ID must have a corresponding [Tab](#) definition later in the file.

6.3.2.14.2 Example

```
<Tabs Side="Right">  
  <Tab ID="DemoTab-Dials"/>  
  <Tab ID="DemoTab-Indicators"/>  
  <Tab ID="DemoTab-LCD"/>  
  <Tab ID="DemoTab-Charts"/>  
  <Tab ID="DemoTab-Charts2"/>  
  <Tab ID="DemoTab-Images"/>  
  <Tab ID="DemoTab-Grids"/>  
  <Tab ID="DemoTab-Playback"/>  
  <Tab ID="DemoTab-Demo"/>  
</Tabs>
```

6.3.2.14.3 OnDemand Tabs

There are times where you may not want a tab to show up until some trigger occurs, or say for example you want a different tab to each server you are monitoring, but the app does not know ahead of time how many servers will be sending data. That is where you use the OnDemand capability. You define the Tab in the Tabs section the same way, with an ID, but you provide a <OnDemand> section as well:

```
<Tab ID="Tab.DynaTab">  
  <OnDemand>  
    <NamespaceTriggerPattern>*</NamespaceTriggerPattern>
```

```

<NamespaceTriggerExcludePattern>Test?</NamespaceTriggerExcludePattern>
<IDTriggerPattern>*</IDTriggerPattern>
<IDTriggerExcludePattern>*Count*</IDTriggerExcludePattern>
<IDTriggerExcludePattern>*Time*</IDTriggerExcludePattern>
</OnDemand>
</Tab>

```

The OnDemand section sets up a number of trigger filters. It can trigger on Namespace or ID or both. When a new combination has been received, a new tab associated with the Tab ID is created.

You can specify more than one filter for Namespace and ID. There is also an exclusion filter that can be used to block out desired matches.

The match filters are the same you would use in DOS file systems.

If you specify * for NamespaceTrigger pattern (as above) and no other triggers, then a new tab will be created for every unique namespace. In the example above, a new tab will be created for each unique namespace unless the namesapace matches "Test?", and a tab is also created for each ID of every namespace unless the ID contains the text 'Count' or 'Time'.

The patterns are case insensitive.

For each tab created, a number of Aliases are created:

`$(TriggeredNamespace)` – the Namespace that matched to create this

`$(TriggeredID)` – the ID that matched

`$(TriggeredIndex)` – the # of times thus far this <OnDemand> has resulted in a creation

6.3.2.14.4 **Sorting OnDemand tabs and custom styles**

If you setup OnDemand tabs, they will by default appear in the order the criteria is triggered. However you can specify a SortBy attribute that will accept 'Namespace', 'ID' or 'Value'.

```

<Tab ID="Tab.DynaTab">
    <OnDemand SortBy="Namespace">
        <NamespaceTriggerPattern>*</NamespaceTriggerPattern>
        <NamespaceTriggerExcludePattern>Test?</NamespaceTriggerExcludePattern>
        <IDTriggerPattern>*</IDTriggerPattern>
        <IDTriggerExcludePattern>*Count*</IDTriggerExcludePattern>
        <IDTriggerExcludePattern>*Time*</IDTriggerExcludePattern>
        <StyleOverride-Even ID="gradient-blue" File="$(AppDir)\TabEven.css"/>
        <StyleOverride-Odd>
            <Item>-fx-background-color:white</Item>
            <Item>-fx-cursor:hand</Item>
        </StyleOverride-Odd>
    </OnDemand>
</Tab>

```

Additionally you may specify a custom style for odd and even number tabs also, as shown in the example above where Even numbered tabs use the style and id specified, and the odd ones sets background to white and a cursor of a hand.

6.3.2.14.5 OnDemandTask

You may specify a task to be run when the OnDemand Tab is created.

6.3.2.15 Defines the Tab to be <UnregisteredData>

There are times when you may be capturing data from Minion but not yet setup a Widget to display that widget. Or you may simply want it displayed as text for a quick visual.

To accommodate this you can fill out the <UnregisteredData> section in the <Application>. If the feature is enabled, then a new tab will be automatically created in the Application at runtime for each Namespace for which there is unregistered data. All unregistered data for that namespace will be displayed as text within that tab. The data will be sorted in Alphabetical order by the ID.

Example:

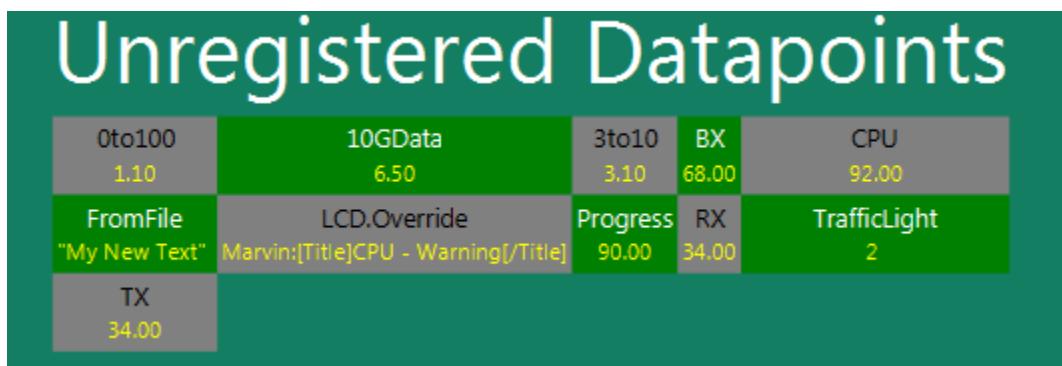


Figure 8 UnregisteredData Example

In the example above, there are nearly 300 data points being automatically displayed. This example uses the [IPC_Linux.py](#) Collector and the [<DynamicCollector>](#) to quickly gather a great deal of performance data from the system under test.

Other than the 'Enabled' attribute, everything else has a default value that can be overridden to change the visual attributes of the feature.

6.3.2.15.1 Attributes

The <Menu> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
Width	O	Maximum # of items to display in a single row. Default is 5
Enabled	O	True or False, default is False. Must be True to enable the feature
Title	O	Sets the title at top of page. Overrides the default.

6.3.2.15.2 <TitleStyle>

Override the display style of the Title, using standard CSS string.

6.3.2.15.3 <EvenStyle>

The data points are designed so that you can have alternating styles to differentiate the data points. EvenStyle defines one of the alternating styles.

6.3.2.15.4 <Background>

Override the background CSS style, using standard CSS string.

6.3.2.15.5 <ID>

Override the CSS style of the ID portion of the data set to be displayed, using standard CSS string.

6.3.2.15.6 <Value>

Override the CSS style of the Value portion of the data set to be displayed, using standard CSS string.

6.3.2.15.7 <OddStyle>

The data points are designed so that you can have alternating styles to differentiate the data points. OddStyle defines one of the alternating styles.

6.3.2.15.8 <Background>

Override the background CSS style, using standard CSS string.

6.3.2.15.9 <ID>

Override the CSS style of the ID portion of the data set to be displayed, using standard CSS string.

6.3.2.15.10 <Value>

Override the CSS style of the Value portion of the data set to be displayed, using standard CSS string.

6.3.2.15.11 <Example>

This example is what was used for the data displayed in Figure 8.

```
<UnregisteredData Width="13" Enabled="True" Title="System Info">
    <TitleStyle>-fx-font-size: 3.5em;</TitleStyle>
    <EvenStyle>
        <Background>-fx-background-color:green</Background>
        <ID>-fx-font-size: 1.0em;</ID>
        <Value>-fx-font-size: .9em;-fx-text-fill:yellow</Value>
    </EvenStyle>
    <OddStyle>
        <Background>-fx-background-color:grey</Background>
        <ID>-fx-font-size: 1.0em;-fx-text-fill:black</ID>
        <Value>-fx-font-size: .9em;-fx-text-fill:yellow</Value>
    </OddStyle>
</UnregisteredData>
```

6.3.3 Tab

The <Tab> section of the XML configuration file defines/describes what should appear on a

Tab screen.

There are several components to a Tab including layout, look and feel and of course the widgets to display within the Tab.

The contents of a <Tab> may be defined wholly within the application XML configuration file, or it may also be defined in another external XML file, using the File attribute. In general, unless doing a very simple GUI, it is recommended to use an external file for each Tab to keep things simple and modular. Additionally one could create a 'library' of tab to use as needed.

Note that you may define a Tab, but not use it – meaning you can define a <Tab> section, but if you do not specify the Tab within the [<Tabs>](#) it will not be displayed. Also note that the order of the <Tab> definitions is not relevant to how they are displayed, tab display order is defined by the order listed in [<Tabs>](#).

Each Tab is a separate application 'screen'. Each can have its own layout, color scheme, padding, Alias's etc. As mentioned in Section 6.1.1, each Tab has a built-in [grid](#) in which to place widgets.

Within the <Tab></Tab> tag is where you will place your widget

6.3.3.1 Attributes

The <Tab> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
ID	M	ID of the Tab, must be unique.
Align	O	Where within application the
File	O	Specifies external file which defines widgets within the tab
hgap	O	Horizontal gap within the tab grid, default is 0
vgap	O	vertical gap within the tab grid, default is 0
task	O	Task to be run when the tab is selected

6.3.3.1.1 ID

This is the ID of the Tab, it must be unique within the XML configuration file. This ID corresponds to the ID in the [<Tabs>](#) section.

6.3.3.1.2 Align

Specifies where in the tab the tab grid should appear. Valid options are (points on a compass):

Center
N
NE
E
SE

S
SW
W
NW

6.3.3.1.3 **File**

Specifies an additional external file where the contents of the tab are specified. As with all additional external files, the root of the XML scheme for the external file is <MarvinExternalFile>. Widgets will then be required to be defined within the <Tab> tag. <AliasList> and <TaskList> tags are at same level as <Tab>

6.3.3.1.4 **hgap**

Specifies the horizontal gap to be inserted in between each column in the grid.

Can be specified as a % of application size, or parent grid size, just like height and width. See Section 7.3.1.9 for details.

6.3.3.1.5 **vgap**

Specifies the vertical gap to be inserted in between each row in the grid.

Can be specified as a % of application size, or parent grid size, just like height and width. See Section 7.3.1.9 for details.

6.3.3.1.6 **Task**

Specifies a task to be run whenever the tab is selected.

6.3.3.2 Title

Specifies the Title of the Tab – the text to be displayed at in the Tab control near the top of the application.

6.3.3.3 Padding/PaddingOverride

Allows you to override the application global setting for the padding described in Section 6.3.2.6. You can use either <Padding> or <PaddingOverride>

6.3.3.3.1 **Attributes**

The <PaddingOverride> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
Top	O	Default Tab padding on top of cell grid, in pixels
Bottom	O	Default Tab padding on bottom of cell grid, in pixels
Left	O	Default Tab padding on left of cell grid, in pixels
Right	O	Default Tab padding on right of cell grid, in pixels

6.3.3.4 StyleOverride

Allows you to change the style of the tab. For example the background is the background

color of the Tab frame or Grid that this grid is within. You can change that here, or add a picture etc.

6.3.3.5 Widget

One or more widgets can be placed within a Tab. See Section □ on widgets information

6.3.3.6 Grid

You may place grids within grids in order to achieve various layouts. See Section 7.15.1.5 for information about Grids. Widgets are then placed within grids.

6.3.4 AliasList

Like the Alias in Minion, Marvin provides a mechanism by which you can create an Alias. Aliases can be created in the main application XML configuration file, external Tab and external Grid files. They must be created at same level as the Tab or Grid (not within a Grid or Tab definition).

Aliases are read before the rest of the file, so you can use them in the top portion of the file, even if not defined until the end of the file.

Example AliasList

```
<AliasList>
    <Alias DownloadFont="Bold-Italic-title"/>
    <Alias TextCSS="MyText.css"/>
</AliasList>
```

The Alias will be propagated all the way down to a Widget definition file. So if you create your own MyTextWidget.xml file and in that specify the <Style> as \$(TextCSS), it will result in using MyText.css.

6.3.4.1 Scope

The scope of an alias is within the file where it is created and any external files called from within that file. So for example you can define an Alias in an external Tab file, and from within that file you can have multiple external Grid files. The alias you create in the Tab file will propagate to each of the Grid files. However it does not propagate to other Tab files – unless you define the alias in the main application XML file from where you call the external Tab Files.

This scoping also works for overriding an Alias. So if you say within one of these external Grid files you redefine the Alias, it will be available within that Grid file, and any subsequent external Grid files called from within that Grid file as well as any widgets placed within these grids that may have an Alias used within them.

6.3.4.2 Using

Using an Alias is pretty easy and is just like using in the Minion definition file – except that Marvin has multiple files that you can use the alias in, such as the main configuration file, external Tab files, external Grid files and Widget definition files.

Usage is simple, →\$(AliasName). A dollar sign followed by the alias name in parenthesis. It can be used within any Tag or Attribute, but cannot be used as the Tag or attribute itself.

This applies to any .XML file within the entire project.

You can do some pretty cool things with aliases and external files.

You can also combine Aliases. Such as \$(ComputerName).TxRate.\$(NIC). If ComputerName="Server2" and NIC="Eth0" the resulting string will be Server2.TxRate.Eth0.

6.3.4.3 Environment Variables

By default, the environment variables of where Marvin is running is automatically sucked in and made an Alias. So for example if you are running Marvin on a Microsoft® Windows system, there will be at your disposal an \$(ComputerName) alias available for your use. You could pass this as a parameter to a [MinionTask](#) that would then write this data to a file, which the a Minion Collector would read and send back to be displayed as a text value. You could also achieve the same thing with a Marvin task that is run on startup. See Section 8.20 for details.

6.3.4.4 Creating Alias when Specifying External File

You can specify external files for Tabs and Grids. I have added the ability to also specify an alias that becomes available within the file you specify.

Example:

```
<Tab ID="DemoTab-Grids" Align="Center" File="Demo\DemoTab_Grids.xml"
Color3="blue"/>
```

Here the Alias of Color3 is set to "blue". This Alias is available when processing the DemoTab_Grids.xml file and any files that it subsequently references.

You can create as many aliases in this way when specify an external file as you like. This only works when calling external Tab and Grid files.

You might wonder how useful this is. Consider that you want to display the same pieces of data from 5 different servers. You could create a Tab definition file that takes an Alias for the Namespace. Then in your application xml file when you specify the external tab file, you specify the same exact external file for each, but create an alias for namespace that is passed. Then in the Tab definition file, each widget you place uses this alias for the <MinionSrc> namespace.

6.3.4.5 Automatically Generated Alias'

I create several aliases that are useful for some.

- \$(TabID) – the Id of the current <Tab> being constructed
- \$(CurrentFileAlias) – Name of the current XML file being parsed
- \$(CurrentFileWithPathAlias) – same as previous, but with full path
- \$(CurrentConfigFilename) –?
- \$(CANVAS_WIDTH) & \$(CANVAS_HEIGHT) - Alias of screen width and height that the app will run on
- \$(SCREEN_H2W_RATIO) & \$(SCREEN_W2H_RATIO)
- \$(WORKING_DIR) – the directory from where Marvin is running
- \$(WORKING_DIR_URI) – same as above but in URI form ([file:/// bla](#))
- \$(DEBUG_STYLE) – This is the default style when in debug mode. You can override this for any widget or grid to help differentiate them when debugging things.

6.3.4.6 Using an Alias in the name of an Alias

A rare corner case can arise where you want to define an Alias, and use another Alias as part of the name for the alias to be created. Using the Symbols \$,(and) breaks XML syntax. So what I did was make a keyword REPLACE be searched for and replaced by, and only by the case sensitive REPLACE value. Must be in the same <Alias> Tag. REPLACE must be case sensitive for both, otherwise will be used as a normal string.

```
<Alias Alias.REPLACE.Name="MyTitle" REPLACE="$(AlreadyDefinedAlias)"/>
```

6.3.4.7 <Import>

Within <AliasList> you can specify another XML file to import that has an <AliasList> within it. If you do this then the framework will only go and read the Aliases from that file, it will do no other processing.

Example:

```
<MarvinExternalFile>
  <AliasList>
    <Import>OtherAliases.xml</Import>
    <Alias Title="MyTitle"/>

  </AliasList>
</MarvinExternalFile>
```

Note: Be careful of circular imports – the framework makes no checks for this ☺

6.3.4.8 <DefaultAlias>

<DefaultAlias> works just like defining an <Alias> and has the same scope. The difference is that if the Alias ID specified already exists it will not create the alias. You can do some powerful overrides this way.

Example:

```
<AliasList>
  <DefaultAlias DownloadFont="Bold-Italic-title"/>
  <Alias FontToUse="$(DownloadFont)"/>
</AliasList>
```

So in the example above, the Alias FontToUse will be set to the alias defined by DownloadFont. If a level above this definition set the 'DownloadFont' alias then that value will be used, otherwise if it wasn't, the value set by DefaultAlias will be used.

6.3.5 TaskList

Being able to display instrumented data is very useful and powerful. However it isn't the complete capability that you really need. What one needs is the ability to press a button on the GUI and have it go run some script on the other end where Minion is running to go start the workload, or to change some hardware config and start a workload, or to stop the workload. This is where Tasks come in.

There are several kinds of Tasks:

- [Minion Task](#) – Sends a message to a Minion to have it run a Minion Task (Actor)
- [Oscar Task](#) – Allows a remote control of Oscar
- [Marvin Task](#) – Can insert data into the incoming <MinionSrc> datastream
- [MarvinAdminTask](#) – Special things you can do in Marvin
- [RemoteMarvinTask](#) – allows one Marvin to execute a Task within another Marvin
- [ChainedTask](#) –Allows defining a task that calls another defined task.
- Many more describe later in doc

A task can be defined in the main application configuration file, an external Grid or external Tab file. The scope of this definition is global – so you can define it in one file and use it in another and the order does not matter; you can use it in the 1st file and define it in another file that isn't loaded until later. You can also of course use an Alias in the tasks.

Section 8 provides details on Tasks.

6.3.6 <For> option

Note: As of April 2017, <Repeat> has been deprecated and no longer supported.

I found that there are times when you may want to repeat something many times. Such as putting down a text widget. You can certainly cut and paste, however I created a <For> option that allows you to repeat things easily for widgets and grids:

```
<For Count="10" StartValue="20">
    <Widget File="Text/Text.xml" row="$(CurrentValueAlias)" column="1">
        <InitialValue>$ (CurrentCountAlias)</InitialValue>
    </Widget>
</For>
```

The above lines will create 10 Text Widgets, each on a separate line, start at line 20, in column1, with a value from 0 to 9.

Attribute	Description / Usage
Count	[required] The number of times to iterate through the repeat.
StartValue	[Optional default is 0] The Start value to use
CurrentValueAlias	automatically generated Alias, = Start + plus loop number
CurrentCountAlias	current loop #

Both CurrentValueAlias and CurrentCountAlias are automatically generated for you, however you can change those names to be something else (in case you want to nest repeats):

```
<For Count="10" StartValue="20" CurrentValueAlias="MyVar">
    <Widget File="Text/Text.xml" row="$(MyVar)" column="1">
        <InitialValue>$ (CurrentCountAlias)</InitialValue>
    </Widget>
```

6.3.6.1 Count – Option to iterate through files

EXPERIMENTAL

If you specify Count as Count=""[DirScan:dir:ext1:ext2]" it will iterate through each of the files in 'dir' and use the optional ext as file extension filters. A new alias of 'CurrentFileAlias' as well as a 'CurrentFileWithPathAlias' will be available. All other things such as start value etc. remain valid.

```
<For Count=""[DirScan:$ (AppDir) :xml:jpg:gif]">
    <Widget File="Text/Text.xml" row="$ (NextRowAlias)" column="1">
        <InitialValue>$ (CurrentFileAlias)</InitialValue>
    </Widget>
</For>
```

6.3.7 \$(CurrentRowAlias), \$(CurrentColumnAlias) etc.

I noticed that it can become tedious when you are placing a bunch of widgets in rows and columns and you need to go back and insert a new widget, to help with that, I automatically create some new Aliases for you. They are scoped to Tabs and grids.

Attribute	Description / Usage
CurrentRowAlias	The last Row value used, changes only when you use a different value.
NextRowAlias	Increments CurrentRowAlias every time you use it, is the CurrentRowAlias + 1
CurrentColumnAlias	The last column value used, changes only when you use a different value.
NextColumnAlias	Increments CurrentColumnAlias every time you use it, is the CurrentColumnAlias + 1
PrevRowAlias	Decrements CurrentRowAlias
PrevColumnAlias	CurrentColumnAlias
Grid_Column_Odd	Set to TRUE if current grid is in odd column, else FALSE
Grid_Row_Odd	Set to TRUE if current grid is in odd row, else FALSE
CurrentRowIsOddAlias	If current widget or grid is in an odd row TRUE, else FALSE
CurrentColumnIsOddAlias	If current widget or grid is in an column row TRUE, else FALSE

6.3.8 <If> then-else

Sometimes you may want to do place or define things in your xml configuration files based upon some variable. You should be able to use this mechanism in pretty much anywhere within the document. If you use an Alias as part of an if input that Alias must be defined within a previous <AliasList> block (you can do an <If> within an <AliasList> block, but an alias you use within the <If> must have been declared previously).

```
<If Value1="$(ShowAlternateDials)" Compare="IF_EQ" Value2="True">
    <Then>
        <Grid File="MyAlteredDialsGrid.xml" row="0" column="0"/>
    </Then>
</If>
```

An If statement must have Value1, Compare, Value2 and <Then>, <Else> is optional.

Value1 and Value2 are compared using the Compare comparison, of which the following are valid:

- If_EQ - If Equal (==)
- If_NE - If Not Equal (!=)
- If_GT - If Greater Than (>)
- If_GE - If Greater Than or Equal (>=)
- If_LT - If Less Than (<)
- If_LE - If Less Than or Equal (<=)

Marvin will attempt a numeric comparison first, if that fails it will do a case insensitive string compare.

If the compare evaluation results in a true value the items in <Then> are used. These can be anything, grids, widgets, repeats, more <If> statements.

If it is not true and you have an <Else> section those will be used. If no Else section is present then nothing is added. See the example below.

```
<If Value1="$(ShowAlternateDials)" Compare="IF_EQ" Value2="True">
    <Then>
        <Grid File="MyAlteredDialsGrid.xml" row="0" column="0"/>
    </Then>
    <Else>
        <Grid File="MyNormalDialsGrid.xml" row="0" column="0"/>
    </Else>
</If>
```

6.3.9 MarvinMath

MarvinMath allows you to do simple math calculations that result in a value. It is only at load time, not run time and only in XML statements. It can be used anywhere an Alias can

be used (so pretty much in any XML content except the tag names).

A MarvinMath statement has 4 or 5 parts, the declarator with is the case insensitive string 'MarvinMath' and a set of parenthesis. Within the parenthesis is a value and operator and another value, and an optional precision value.

Example:

```
ID="MyTask.MarvinMath(2,*,2)"
```

Will result in the ID being "MyTask.4".

```
ID="MyTask.MarvinMath(2,*,2,3)"
```

Will result in the ID being "MyTask.4.000", as the last value indicates how many decimal places to use.

This simple example does not really do anything, however you can replace any of the values for an Alias, which can allow some interesting things.

Valid operators are:

'+', 'Add'

'-', 'Subtract', 'Sub'

'*', 'Multiply', 'Mul'

'Divide', 'Div'

'Maximum', 'Max' – returns the larger of the 2 values

'Minimum', 'Min' – returns the smaller of the 2 values

You may also embed MarvinMath statements within each other:

```
ID="MyOtherTask.Marvinmath(2,*,MarvinMath(MarvinMath(1,ADD,1),-,1))"
```

Will result in ID="MyOtherTask.2"

6.3.10 GenerateDatapoint

This Marvin feature can take a series of <InputPattern>s as well as any number of <Exclude> pattern inputs and will generate a new datapoint using those datapoints.

Example:

```
<GenerateDatapoint ID="Total-Throughput" Namespace="System" Method="Add">
    <InputPattern Namespace="*" ID="*bx_gbps"/>
    <ExcludePattern Namespace="*" ID="netdev.br* "/>
    <Decimals>2</Decimals>
</GenerateDatapoint>
```

In this example a new datapoint with the ID of 'Total-Throughput' and Namespace of 'System' is created using the Input Pattern that is all namespaces and all ID's ending in the string of 'bx_gbps', except if the ID has a pattern of netdev.br* in it. All data incoming that matches are added together and the new datapoint is created.

What this does in the instance is create a new datapoint that give the total bidirection gbps for all devices being monitored on all namespaces unless it is a bridge.

You can use the <Decimals> option to limit the number of decimal places the resulting datapoint will have.

Note that only numeric inputs are allowed – no lists or strings, else it will fail.

You may also specify an optional Refresh setting. It takes both a Policy and a Frequency. Frequency is in milliseconds. The Policy can be "Zero_Out", "REUSE" or "Remove".

```
<GenerateDatapoint ID="TEST1" Namespace="TEST" Method="Average">
    <InputPattern Namespace="*" ID="*bx_gbps"/>
    <Decimals>2</Decimals>
    <Refresh Policy="remove" Frequency="3000"/>
</GenerateDatapoint>
```

That will update this datapoint even if all the selected datapoints (those specified in the <InputPatten> haven't been received in a while. This is in case one of the inputs may have went away. Note though that at least one of the input datapoints must come in for this check to occur, if they all go away, or come in at a lesser rate, it will not be updated until a datapoint has come in.

If you specify "Zero_Out", any inputs that have not been updated in a while will be set to value of 0. Reuse will simply reuse the previous value and Remove will remove that entry.

You may also specify a 'Scale' value as an attribute:

```
<GenerateDatapoint ID="TEST1" Namespace="TEST" Method="Average" Scale="0.001">
    <InputPattern Namespace="*" ID="*bx_gbps"/>
    <Decimals>2</Decimals>
    <Refresh Policy="remove" Frequency="3000"/>
</GenerateDatapoint>
```

EXPERIMENTAL

If the data you are making a data point out of is a list, or if you are generating a list of Namespaces or IDs, you may want to break up the ID's. For example an ID may be *intel_pmu_value.branch-load-misses.list* and you would like to create a list of the pmu values only,not the stuff before the 1st '.' Or after the last.

intelpmu_ If the data you are If the data source for the Widget is a list of sometimes, you may want to get a single data point from that list, or a range of data from that list. To do this, you can specify a DataIndex and Separator.

```
<GenerateDataPoint Namespace="MyNS" ID="AVAIL_PMU_ID_LIST" Method="MakeIDList"
DataIndex="1" Separator="." >
    <InputPattern Namespace="MY_NS" ID="intel_pmu_value.*.list"/>
</GenerateDataPoint>
```

This will use the same DataIndex and Separator as the experimental MinionSrc described earlier. In this case it will generate a list that breaks up any ID's for the Namespace MyNS that match "intel_pmu_value.*.*" by the period, and take the 1st (starting at 0) part. So if the data that came in was *intel_pmu_value.branch-load-misses.list* it will be branch-load-

misses.

This is not yet implemented for all GenerateDataPoint possibilities. Working on it.

6.3.10.1 ListEntry

You can specify a <ListEntry> Tag if you want to add/average or proxy a data point from a list. The number specified is the index into the array list of data in the specified data point, starting at 0.

```
<GenerateDatapoint ID="CORE.1" Namespace="TEST" Method="AVERAGE">
    <InputPattern Namespace="*" ID="cpu_util.list"/>
    <ListEntry>2</ListEntry>
</GenerateDatapoint>
```

This example will average the 3rd (remember, starts at 0) core utilization value for every namespace that has the cpu_util.list ID (which would be presumed to be a comma separated list because the 'Separator' attribute was not specified'

6.3.10.2 Separator tag

When dealing with lists of data, as in the ListEntry option or the SPLITLIST Method, the default separator that will be used in splitting the incoming data to create new data point is a comma. However you may specify an alternate one using the Separator tag:

```
<GenerateDatapoint ID="CORE.1" Namespace="TEST" Method="AVERAGE" Separator=":">
    <InputPattern Namespace="*" ID="cpu_util.list"/>
    <ListEntry>2</ListEntry>
</GenerateDatapoint>
```

6.3.10.3 Method Options

The 'Method' tag is what specifies the type of operation can occur. At present the valid options are:

- ADD - Numerically add all data points specified by the input pattern(s)
- AVERAGE - Numerically averages all data points specified by the input pattern(s)
- PROXY - Makes a new data point out of the incoming data with a specified ID and Namespace that can be changed with a task
- SPLITLIST - Breaks a data point that is a list of items into individual data points
- MAKELIST - Makes a list for sources
- MAKENAMESPACELIST - Makes a comma separated list of all namespaces
- MAKEIDLIST - Makes CSV list of ID's for specified namespace
- GETLISTLIZE - Makes data point whose value is the size of a list
- MAKELISTINDX - makes a CSV list of numbers representing 0-size of list

6.3.10.4 ADD

```
<GenerateDatapoint ID="Total-Throughput" Namespace="System" Method="Add">
    <InputPattern Namespace="*" ID="*bx_gbps"/>
```

```

<ExcludePattern Namespace="*" ID="netdev.br* " />
<Decimals>2</Decimals>
</GenerateDatapoint>

```

6.3.10.5 AVERAGE

```

<GenerateDatapoint ID="TEST1" Namespace="TEST" Method="Average" Scale="0.001">
    <InputPattern Namespace="*" ID="*bx_gbps"/>
    <Decimals>2</Decimals>
    <Refresh Policy="remove" Frequency="3000"/>
</GenerateDatapoint>

```

6.3.10.6 PROXY

This feature was requested by a user of BIFF and I really like it. Consider the situation where you have say 20 different computers you are collecting data from; traditionally in BIFF you would simply have 20 identical tabs to show the data. But using the PROXY ability with the accompanying task to modify the PROXY, you could have a single but change the data source via a proxy. Or you could say have a lot of NICs on a system, but want to select from which NIC you want to display incoming data.

With the proxy you specify an input pattern (but just a single one) and the target ID and namespace. When data comes in that matches, it is essentially copied and put into the new Namespace and ID. You can use the other GenerateDatapoint features such as scaling and decimals and even ListEntry.

In addition, you have limited use of wildcards in creating the new ID and Namespace. If you specify a '*' in the new ID or Namespace, the originating ID or Namespace will be inserted in that location. In this way, you can very easily proxy an entire namespace.

```

<GenerateDatapoint ID="*.proxied" Namespace="CommonNS" Method="Proxy" ProxyID="Prxyl">
    <InputPattern Namespace="System1" ID="CPU*"/>
</GenerateDatapoint>

```

In this example, all data from the Namespace of 'System1' and and ID matching CPU* will be proxied to the Namespace 'CommonNS' and have the same ID with the string '.proxied' added on.

The following:

```

<GenerateDatapoint ID="*" Namespace="CommonNS" Method="Proxy" ProxyID="MyCoolProxy">
    <InputPattern Namespace="System1" ID="*"/>
</GenerateDatapoint>

```

Will proxy all data from the 'System1' Namespace to the 'CommonNS' Namespace and duplicate the ID's exactly.

6.3.10.6.1 **ProxyID**

The ProxyID tag is optional for the Proxy, but if you don't specify it, you won't be able to select an alternate criteria (via the UpdateProxy task) to get data from a different data source.

Example task to change input namespace for above Proxy to System2. Note that you can change Namespace or ID, or both.

```

<Tasklist ID="ChangeToSystem2">
    <TaskItem Type="UpdateProxy">
        <Proxy ProxyID="MyCoolProxy Namespace="System2"/>
    </TaskItem>
</Tasklist>

```

You can also change the "ListEntry" field if you specify that.

6.3.10.7 MakeNamespaceList

tbd

```

<!-- Creates a list of all namespaces we care about -->
<GenerateDataPoint Namespace="MyNS" ID="NamespaceList" Method="MakeNamespaceList">
    <InputPattern Namespace="*"/>
    <ExcludePattern Namespace="MyNS"/> <!-- don't want myself →
</GenerateDataPoint>

```

6.3.10.8 MakeIDList

tbd

```

<GenerateDataPoint Namespace="MyNS" ID="AVAIL_PMU_ID_LIST" Method="MakeIDList"
DataIndex="1" Separator="." >
    <InputPattern Namespace="Server1" ID="intel_pmu_value.*.list"/>
    <InputPattern Namespace="Server1" ID="intel_rdt_value.*.list"/>
    <ExcludePattern ID="*.list.size"/>
</GenerateDataPoint>

```

6.3.10.9 SPLITLIST

SplitList will do as the name implies, break up a data point that is a list into individual points. You can specify what the list separator item is via the Separator tag mentioned above.

6.3.10.10 GETLISSIZE

```

<GenerateDataPoint Namespace="MyNS" ID="CORE_COUNT" Method="GetListSize">
    <InputPattern Namespace="Server1" ID="cpu_util_list "/>
</GenerateDataPoint>

```

Generates a datapoint that contains the size of the indicated list.

6.3.10.11 MAKEINDEXLIST

```

<GenerateDataPoint Namespace="MyNS" ID="CORE_COUNT" Method="MakeIndexList">
    <InputPattern Namespace="Server1" ID="cpu_util_list "/>
</GenerateDataPoint>

```

Generates a datapoint that is a csv list with range of 0 to size of the specified list.

7 Widgets

Widget is the term I use to refer to something that gets placed on the screen. There is a growing library of widgets available for you to use.

In general you place a widget in a specific location in a Tab/grid and usually you assign a data source (originating from a Minion) to it.

All widgets have some common attributes (such as row and column) and some have some unique settings.

To place a widget, at the minimum you specify a widget definition file and where to place the widget.

The widgets themselves are described in the Widget Definition file. These files contain the necessary information to describe the parameters for the widget. For example a Dial widget – the definition file describes (among other things) what the minimum and maximum values to display are. If you need a different range, then copy an existing widget definition file and make the changes you need, and then specify the new file in your application.

We provide a growing library of widgets and corresponding definition files; if your needs differ from what we provide then you simply make a new definition file that suits your needs.

```
Application or Tab xml file
<Widget File="MyWidget.xml" row="2" column="4">
    <Title>Tx Rate</Title>
    <MinionSrc ID="TxData" Namespace="Server-32"
</Widget>
```

Figure 9 Placing a Widget in a Grid or Tab

Figure 9 shows a simplified example of placing a widget in a tab or a grid. It specifies a Widget definition file ("MyWidget.xml"), where to place the widget (row and column) as well as the title for the widget (might be a dial) and the remote data source from where the data will be fed its values.

```

MyWidget.xml

<Widget Type = "SteelGauge">
    <Style>gaugeEthernet.css</Style>
    <MinValue>0</MinValue>
    <MaxValue>10</MaxValue>
    <UnitTxt>Gbps</UnitTxt>
    <Decimals>2</Decimals>
    <DialStartAngle>300</DialStartAngle>
    <DialRangeAngle>240</DialRangeAngle>
    <MajorTicksSpace>1</MajorTicksSpace>
    <MinorTicksSpace>1</MinorTicksSpace>
</Widget>

```

Figure 10 Sample Widget Definition File

Figure 10 provides a sample (not valid) Widget configuration file. In this case it is for a SteelGauge Widget (as specified by the Type attribute). This configuration file describes the display requirements for the widget, including an external stylesheet, the min and max value to be displayed etc.

This sample widget file is for showing 0 to 10 Gbps of data. If you wanted 0 to 40 Gbps, or changed from 0 to 1000 Mbps you could change the widget definition file to reflect your needs. Or you could copy it to another name and modify it and create a library (as we have started for you).

The Type attribute is what determines what the actual widget to be displayed is, and the rest of the file is specific to that widget type – for example a Text Widget does not have angels or ticks.

7.1 Widgets

Below you will find examples of the various widgets. Click on the example to jump to the details.

Note: I might not always remember to update this section with images of new widgets, so read below or look in the Table of Contents.

7.1.1 Dials

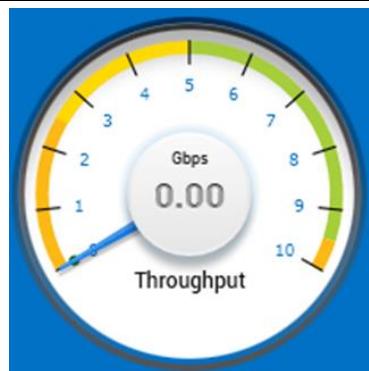


Figure 11 Steel Gauge



Figure 12 Steel Gauge Simple

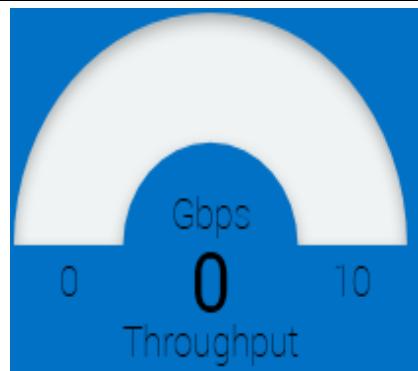


Figure 13 Steel Gauge 180



Figure 14 Steel Gauge Radial

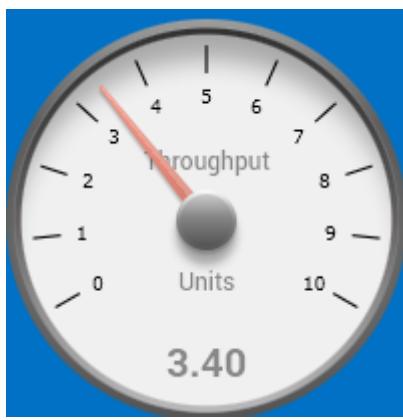


Figure 15 Steel Radial Steel Gauge

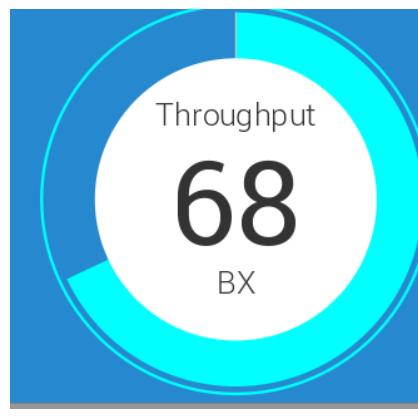


Figure 16 Bar Gauge

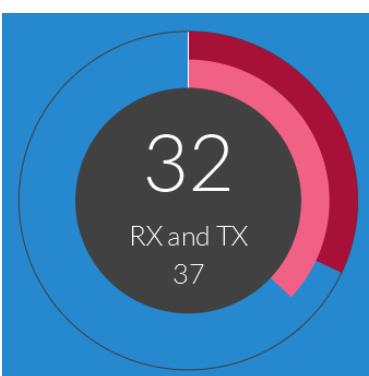
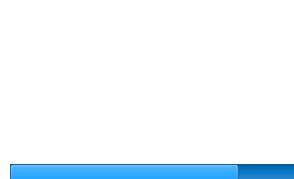
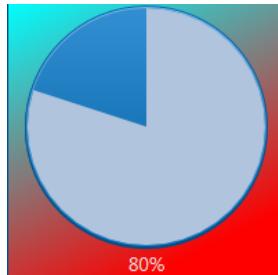



Figure 17 Double Bar Gauge

7.1.2 Indicators

			
Figure 18 Progress Bar	Figure 19 Progress Indicator	Figure 20 Horizontal LED Bar	Figure 21 Vertical LED Bar

7.1.3 Charts







		
Figure 22 Area Chart	Figure 23 Stacked Area Chart	Figure 24 Line Chart
		
Figure 25 Stacked Chart	Figure 26 Pie	Figure 27 Bar

				Chart	Graph
Column1	Column2	3	Column4		
Row 1	Fixed Value	10.00,87.00,55.00,46.00,8...	35.00,61.00,43.00		
Row 2	91939	68	91939.00		
ChartTable					

7.1.4 Images

 <p>Intel® Ethernet CNA XL710 Dual port 40GbE</p> <p>Intel® Ethernet CNA XL710 Quad port 4x10GbE</p> <p>>></p>		
Figure 28 Static Image	Figure 29 Dynamic Image	Figure 30 Animated GIF

7.1.5 Media

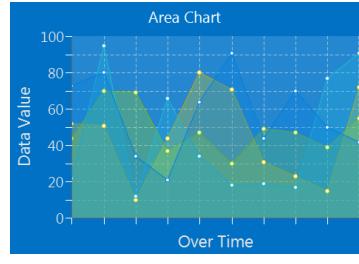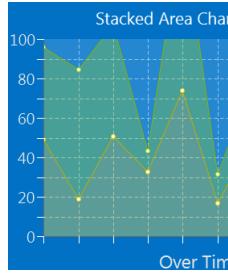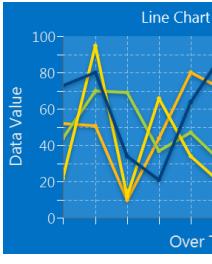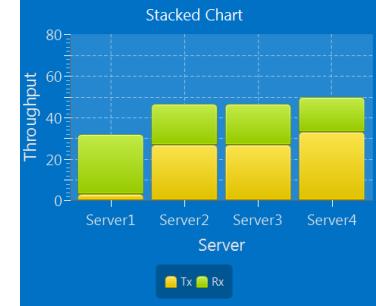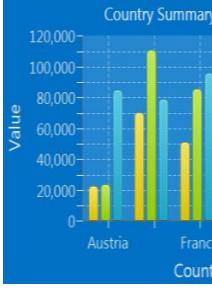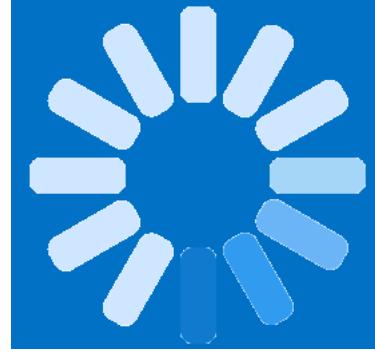

7.1.6 Other

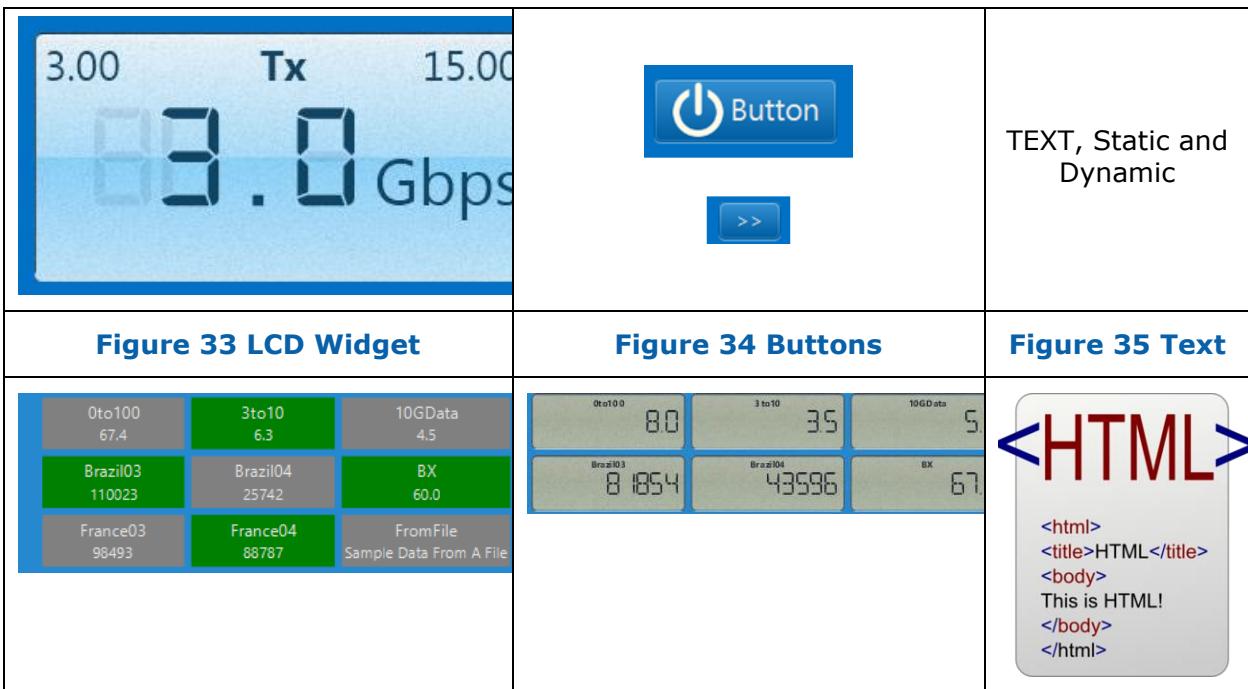


Figure 36 Quick View Widget

**Figure 37 Quick View LCD
Widget**

**Figure 38 Web
View Widget**

7.2 Directory Structure

The default location for widgets is in the 'Widget' directory one level below where the BIFF.Marvin.jar file exists. It is expected that the working directory is where the BIFF.Marvin.jar file exists. You may optionally specify a full path to a widget file. This option is useful for making a self-contained project with custom widgets.

CSS files must exist in the same directory where the widgets are found.

Widgets can exist in a sub-directory off of the Widget directory, such as ./Widgets/Demo. In this case any .CSS files used by any widgets in the Demo directory must also reside in the Demo directory.

7.3 Common Application Settings

7.3.1 Attributes

The <Widget> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
File	M	Specifies the widget definition file
Row	M	The row within a grid where the widget is to be placed
Column	M	The column within a grid where the widget is to be placed
Rowspan	O	The number of rows the widget should span – default is 1
Colspan	O	The number of columns the widget should span – default is 1
Align	O	Where within the grid cell to align the widget
Width	O	'Preferred' width of the widget
Height	O	'Preferred' Height of the widget
Task	O	ID of task to be performed when the widget is clicked

7.3.1.1 File

Specified the widget definition file. This file contains the description of the Widget itself.

7.3.1.2 Row

Zero based row number of where in the grid to place the Widget.

7.3.1.3 Column

Zero based column number of where in the grid to place the Widget.

7.3.1.4 Rowspan

A widget by default takes up a single cell which is in a specific row and column within a grid. Rowspan allows you to have a widget span more than one row. Used for making nice layouts.

7.3.1.5 Colspan

A widget by default takes up a single cell which is in a specific row and column within a grid. Colspan allows you to have a widget span more than one column. Used for making nice layouts.

7.3.1.6 Align

Using the Align attribute you can determine where within the grid cell the Widget will be placed.

Valid options are (points on a compass):

```
Center  
N  
NE  
E  
SE  
S  
SW  
W  
NW
```

7.3.1.7 Width

The Width attribute specifies the ‘preferred’ width for the widget. Desired is in quotes because this width is more of a suggestion to the underlying Java framework than a hard rule. It (Java – not Marvin itself) will try to make it this width; however there are other factors such as the size of other widgets within the same row and column etc. Also the size of the widgets can shrink and grow depending on resizing of the application.

7.3.1.8 Height

The Height attribute specifies the ‘preferred’ height for the widget. Desired is in quotes because this width is more of a suggestion to the underlying Java framework than a hard rule. It (Java – not Marvin itself) will try to make it this height; however there are other factors such as the size of other widgets within the same row and column etc. Also the size of the widgets can shrink and grow depending on resizing of the application.

7.3.1.9 Width and Height as percentages

You can specify either Width our Height as a percentage of the application size, or as a % of the grid whatever you are specifying is within.

Say you specify: Width="80%" then the Width of whatever you are placing is going to be 80% of the width of your application.

It does not matter where the % is – could be %80 or 80%.

You can also do a percentage of the height or width of the grid you are placing the widget/grid within by having a 'g' after the % sign. So Width="25%g" says the width of whatever you are placing is to be 25% of the width of the grid you are placing it within.

The requirement is that the grid, or one of its 'parents' must have a specific dimension set somewhere.

7.3.1.10 Task

Specifies a Task ID for a [tasklist](#) to be executed when the widget is clicked. This is most commonly used with a button however there is no limitation on this, you can assign a task to any widget.

7.3.2 MinionSrc

Optional

The MinionSrc tag is where you connect a data source to a widget.

Example:

```
<Widget File="Gauge\GaugeRadial.xml " row="1" column="1">
    <MinionSrc ID="10GTX" Namespace="MyTestServer-2"/>
</Widget>
```

The ID and Namespace attributes of the MinionSrc Tag corresponds EXACTLY to the [ID](#) and [Namespace](#) from a Minion.

EXPERIMENTAL

If the data source for the Widget is a list of sometimes, you may want to get a single data point from that list, or a range of data from that list. To do this, you can specify a DataIndex and Separator.

```
<MinionSrc ID="CPU_UTIL_LIST" Namespace="MyTestServer-2" DataIndex="2" Separator="," />
```

Assuming the above is a comma separated list of cpu core utilizations then the Separator indicates to break that list up at the commas in the list and make the data for the widget as specified by DataIndex the data at index 2 (lists start at index 0, so 2 would be the 3rd entry in the list).

Separator is a ',' by default.

This is not available for all widgets at this time – takes some re-working to implement it for each Widget.

7.3.3 ClickThroughTransparent

This optional setting (which can also be defined in most Widget Definition files) allows you to stack widgets/grids etc. atop each other, and still be able to click on tasks on things that are not on the top most level, provided the region you are clicking on is transparent.

Example:

```
<ClickThroughTransparent>False</ClickThroughTransparent>
```

The default is false (unless specified in the widget definition file). Valid options are 'true/ or

'false' and is not case sensitive.

If the widget you specify this for is a GRID, then you can put in an attribute of Propagate that is a Boolean. If you set Propagate to True then it will force all widgets within that grid to use the ClickThroughTransparent option you specified for the grid.

```
<ClickThroughTransparent Propagate="faLsE">False</ClickThroughTransparent>
```

7.3.4 StyleOverride

Optional

The StyleOverride tag provides you with a very powerful mechanism to override and add to the stylesheet associated with the widget and in some cases the application.

You can specify a different stylesheet, or a new stylesheet ID number for a brand new layout, or you may override/add new styles.

7.3.4.1 Attributes

The <StyleOverride> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
File	O	Specifies a new stylesheet file to apply to the Widget
ID	O	Specifies a new style ID that is in the stylesheet to use

7.3.4.1.1 File

Specify a new stylesheet file to apply to the widget. If you just specify a .CSS file, it will search for that file in the same directory where the Widget definition file is located. If it is an alternate path, it will search that path.

7.3.4.1.2 ID

ID of style in either default stylesheet or within new stylesheet to apply to the widget. See the LCD.css file for a good example.

7.3.4.2 Item

The <Item> tag within the <StyleOverride> tag allows you to apply different/new stylesheet settings to a Widget. These are STANDARD stylesheet settings and the format for them is per the standard.

There can be more than one <Item>, each will be applied to the widget. Note that if any of the <Items> are incorrect in any way, none will be applied. This is beyond the Marvin application and part of Java itself. The log file should provide some hints as to the reason for failure.

Example 1:

```
<StyleOverride>
<Item>-fx-rotate:-90</Item>
<Item>-fx-font-size:2.5em</Item>
</StyleOverride>
```

You may also combine the individual lines into a single one, separated by a semi-colon.

Example 2:

```
<StyleOverride >
  <Item>-fx-rotate:-90; >-fx-font-size:2.5em </Item>
</StyleOverride>
```

Example 3:

```
<StyleOverride ID="RedBackground"/>
```

7.3.5 Peekaboo

Optional

Peekaboo is a feature I added so we can dynamically hide and show widgets based upon a Minion Collector. This allows you to stack widgets on top of each other and hide and show as needed for interesting results.

For example you may have two LCD Panel Widgets both receiving data from a Minion collecting CPU utilization. One panel may have a stylesheet that makes it the familiar green-gray LCD background and the 2nd may have a bright red background. You can place both widgets at the same location, with the red one placed second (and therefore on top of the green-gray one). You can assign a peekaboo to the red one and have it hidden. Then when the CPU utilization gets above a certain threshold, say 90% a collector can show the red one, giving the appearance that the LCD pane turned red upon reaching a threshold.

The <Peekaboo> has the ID and Namespace attributes just like <[MinionSrc](#)>, however instead of displaying data, the Peekaboo will look for a specific string as the data to either hide or show a widget. The expected data to either hide or show the widget are 'Hide' and 'Show'.

In addition to hiding and showing a widget. Most widgets (where it makes sense) now support pausing and resuming widgets getting updated. If you send a 'Pause' string as the data in a Peekaboo packet, the widget(s) will pause, just as if you send a 'Resume' string they will resume. Not all widgets support this (buttons for example) as I could not think of a good reason to add support to all of them. If you have a need to 'pause' a button, then let me know. This is likely most useful for a MarvinTask that will pause a Widget(s).

The Sample application has a demo of this under the Test menu.

Note: You can assign multiple <Peekaboo>'s to a widget. In this way you can for example modify an individual Widget (say change the Title) and also manipulate a group of Widgets by giving them all the same Peekaboo settings. There will only be one 'default' action, no matter how many you put in, the same goes for the Hide and Show alternate strings, only the last one specified will be used.

7.3.5.1 Attributes

The <Peekaboo> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
ID	M	ID to identify peekaboo action

Namespace	M	Namespace to identify peekaboo action
Default	O	"Hide" or "Show" – determines initial state, default is Show
Hide	O	Additional string to "Hide" string you can use if you like
Show	O	Additional string to "Show" string you can use if you like

Example:

```
<Widget File="Gauge\GaugeSimple.xml" row="2" column="2">
    <Title>Throughput</Title>
    <MinionSrc ID="Port1_RX_" Namespace="Hadoop_Server1"/>
    <Peekaboo ID="AltDials" Namespace="LocalNamespace" Default="Hide"/>
</Widget>
```

Note that as with the MinionSrc, you can have many widgets associated with the same Peekaboo. In this way you can hide and show many widgets at the same time.

7.3.5.2 Peekaboo Options

You can do many things with Peekaboo by sending a specific String to it:

- Hide - Hides the widget
- Show - Shows the widget if hidden
- Remove - Removes the widget from the Grid
- Insert - Re-adds a removed Widget back to the grid
- Disable - Some widgets (like buttons) can be disabled from tasks working
- Enable - Re-enables disabled widgets
- Pause - Pauses data feed for widget
- Resume - Resumes data feed for a paused widget
- Reset - Sets widget (not all support yet) to zero state
 - Can (for some) specify start value: "Reset:5"
- Select - Applies an alternate CSS style see [<SelectedStyle>](#)
- Deselect - Applies default/original CSS style see [<SelectedStyle>](#)
-

7.3.6 Peekaboo – Marvin

I've recently added some functionality by which data that comes in via Peekaboo can change some visual attributes of a Widget while visible. Presently that includes specifying a new Title for the Widget and a new stylesheet.

Example of string send from a Minion to change the Title:

```
Marvin:[Title]New Widget Title[/Title]
```

The data following 'Marvin:' is a modified XML, where the '<>' characters are replaced with '[]'. This is needed because of the way XML works, you can't easily encode an XML payload within an XML document.

7.3.6.1 Set New Title

You can change a Widget in Marvin that has registered for Peekaboo messages during

runtime with this mechanism. Most, but not all Widgets have a Title that can be dynamically updated using this method.

The source of this data can be from either a Minion data feed, or a [Marvin Task](#).

Format:

The string sent to a Peekaboo listener to modify the Title must start with the text 'Marvin:' and be followed by [Title]New Title[/Title].

Example to change the Title:

```
Marvin:[Title]New Widget Title[/Title]
```

Note The format of the data following 'Marvin:' is a modified XML, where the '<>' characters are replaced with '[]'. This is needed because of the way XML works, you can't easily encode an XML payload within an XML document.

7.3.6.2 Change Style

You can change the Style of a Widget in Marvin that has registered for Peekaboo messages during runtime with this mechanism. Most, but not all Widgets have a Style that can be dynamically updated using this method.

The source of this data can be from either a Minion data feed, or a [Marvin Task](#).

Format:

The string sent to a Peekaboo listener to modify the Style must start with the text 'Marvin:' and be followed by the same format as is available in [`<StyleOverride>`](#) in the application xml, except that the '<>' is replaced by '[]'. This includes new CSS file, ID and [Item]s.

Example to change the Style ID of a LCD (this is from the AdditionalFile.xml file in Minion Demo):

```
Marvin:[StyleOverride ID='lcd-red'][/StyleOverride]
```

Note The format of the data following 'Marvin:' is a modified XML, where the '<>' characters are replaced with '[]'. This is needed because of the way XML works, you can't easily encode an XML payload within an XML document.

7.3.6.3 Change ValueRange

Some widgets allow you to change the min and max value on the fly. This is useful for charts and gauges.

The source of this data can be from either a Minion data feed, or a [Marvin Task](#).

See the previous section for details on the format. And the `<ValueRange>` section for details on what that is.

Example

```
Marvin:[ValueRange Min='-10' Max='20'][/ValueRange]"
```

7.3.7 <Decimals>

Optional

Many widgets display a value of some sort, and most have a <Decimals> setting in the widget definition file.

You can also set this in the application as well:

```
<Widget File="gaugeFan.xml" row="$(.CurrentRowAlias)" column="$(NextColumnAlias)">
    <MinionSrc Namespace="$(NS)" ID="ipmi_value.System.Fan.6.fan_cooling (29.6)"/>
    <Title>Sys Fan 6</Title>
    <Decimals>0</Decimals>
</Widget>
```

7.3.8 2</Decimals>

7.3.9 <ValueRange>

Optional

Many (but not all) widgets have the ability to specify the range of valid values when you place them. This will override the settings within the widget definition file. In general, charts and gauges have this feature.

7.3.9.1 Attributes

The <ValueRange> tag supports the following attributes, which are case insensitive.

Attribute	M/O	Comments
Min	O	Specifies the minimum value for the widget
Max	O	Specifies the maximum value for the widget

7.3.10 <ToolTip>

Optional

This allows you to add a tooltip to a widget. You may optionally also set the style of the tooltips.

7.3.10.1.1 Simple form:

```
<ToolTip>My Tool Tip</ToolTip>
```

Customizable form:

```
<ToolTip>
    <DisplayString>My Other Tool Tip</DisplayString>
    <StyleOverride><Item>-fx-background-color:blue</Item></StyleOverride>
</ToolTip>
```

7.3.11 <SelectedStyle>

Optional

This Tag has all the same exact features of the [<StyleOverride>](#) tag, this includes ID, File and <Item>s. This tag is used in conjunction with <Peekaboo> to Select and Deselect a widget. Essentially it allows you to have 2 sets of Styles for a widget and you can go back and forth between them by 'Selecting' and 'Deselecting'.

7.3.12 <MaxSteppedRange> & <MinSteppedRange>

Optional

Many (but not all) widgets have the ability to specify a min and max range of what it can display. These can be defined in either the Widget Definition files, or within the application files. The following is an example of ranges that might be available for Widget (say a gauge or chart) that will display the throughput of a network devices RX traffic.

```
<MaxSteppedRange>1,2.5,10,25,40,50,100,200</MaxSteppedRange>
```

This represents a list of possible Max values for the Widget. If the received value is greater than the current selected max value, the max value for the Widget is set to the next value in the list.

The same thing works for <MinSteppedRange> for the Min value of a widget.

7.4 Common Widget Definition File Definitions

This section describes the settings that are common to all widget definition files.

Example:

```
<Widget Type = "Button">
    <Style ID="#default">Button.css</Style>
</Widget>
```

7.4.1 Type Attribute

In the Widget definition file, the Type attribute is that actually specifies the type of Widget is defined in the rest of the file. The above example is a widget definition file for a Button.

7.4.2 Style

The <Style> Tag is where you specify the default external stylesheet for the widget. In this example we specify the Button.css stylesheet. In addition there is an optional ID attribute that can be added to specify the style ID within the specified stylesheet to apply.

Take a peek at the Button.css file to get a better understanding.

7.4.3 ClickThroughTransparent

This optional setting (which can also be defined when you place a widget) allows you to stack widgets/grids etc. atop each other, and still be able to click on tasks on things that are not on the top most level, provided the region you are clicking on is transparent.

Example:

```
<ClickThroughTransparent>False</ClickThroughTransparent>
```

The default is false. Valid options are 'true/' or 'false' and is not case sensitive.

7.5 How to understand the following sections

Since you can create your own widget definition files and modify them to suit your needs it doesn't make much sense to detail specific widget definition files as a way of describing them. So I will take the approach of providing an image example of the widget, an example widget definition file and details on each part of it and finally any widget specific options that may be used within the application configuration XML file when you add the widget to your app.

7.6 Dials

I used an open source package for all the dials. This package was originally called Steel, the author has subsequently renamed and updated the package, however I kept the name for the Widgets.

The open source package I use is called Enzo and it is available here:

<https://bitbucket.org/hansolo/enzo/wiki/Home>

7.6.1 Gauge

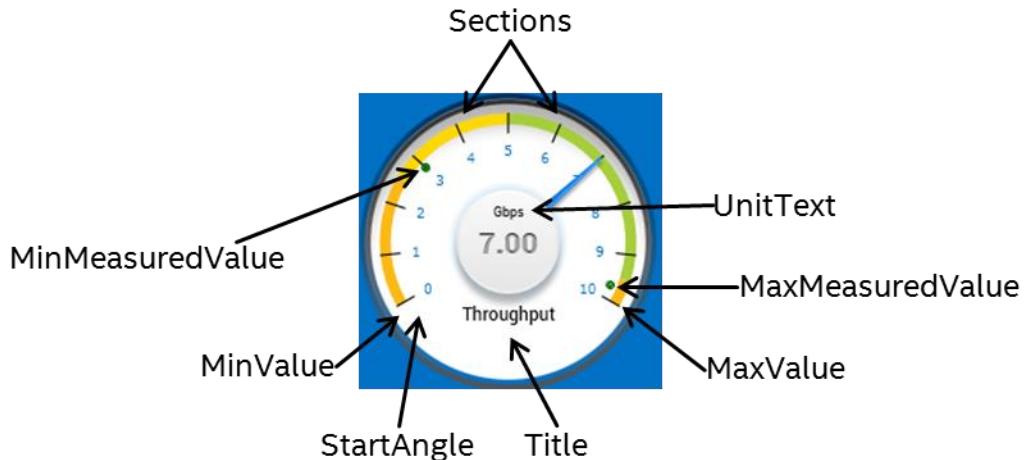


Figure 39 Gauge

7.6.1.1 Definition File

This section discusses what the contents of a Gauge Widget definition file contains.

Example:

```
<Widget Type = "SteelGauge">
    <Style>gaugeEthernet.css</Style>
    <MinValue>0</MinValue>
    <MaxValue>10</MaxValue>
    <UnitText>Gbps</UnitText>
    <Decimals>2</Decimals>
    <DialStartAngle>300</DialStartAngle>
    <DialRangeAngle>240</DialRangeAngle>
    <MajorTicksSpace>1</MajorTicksSpace>
    <MinorTicksSpace>1</MinorTicksSpace>
    <TickLabelOrientation>Horizontal</TickLabelOrientation>
    <EnhancedRateText>True</EnhancedRateText>
    <Shadowed>True</Shadowed>
    <ShowMaxMeasuredValue>True</ShowMaxMeasuredValue>
    <ShowMinMeasuredValue>True</ShowMinMeasuredValue>
    <Sections>
        <Section start="0" end="4" />
        <Section start="2.5" end="5" />
        <Section start="5" end="9.5" />
        <Section start="9.5" end="10" />
    </Sections>
</Widget>
```

7.6.1.1.1 <MinValue>

Required

The minimum value that can be displayed on the dial. Usually zero, but can be whatever you like.

7.6.1.1.2 <MaxValue>

Required

The maximum value that can be displayed on the dial.

7.6.1.1.3 <UnitText>

Required

The kind of data you are wanting to display, such as Gbps, Ghz, RPM etc.

7.6.1.1.4 <Decimals>

Required

The number of decimal places to be available for the current value # displayed in the middle of the dial.

7.6.1.1.5 <DialStartAngle>

Required

This specifies where the numbering on the dial begins, it is in degrees. 180 will start at the bottom of the dial, while 270 will be at 9:00 on a clock.

7.6.1.1.6 <DialRangeAngle>

Required

The angle range that the dial should utilize, in degrees.

7.6.1.1.7 <MajorTicksSpace>

Required

Numeric interval that a major Tick should be shown on the dial.

7.6.1.1.8 <MinorTicksSpace>

Required


Numeric interval that a minor Tick should be shown on the dial.

7.6.1.1.9 <TickLabelOrientation>

Required

Determines the way in which the numbers on the dial are drawn. Valid values are:

Horizontal
Orthogonal
Tangent

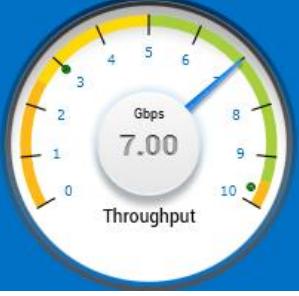		
Figure 40 Horizontal Orientation	Figure 41 Tangent Orientation	Figure 42 Orthogonal Orientation

7.6.1.1.10 <EnhancedRateText>

Required

Is a Boolean value (either True or False) that determines if the value text in the middle of the dial is displayed with shadowing or not.

7.6.1.1.11 <Shadowed>

Required

Is a Boolean value (either True or False) that determines if the dial will be displayed with a shadow effect or not.

7.6.1.1.12 <ShowMaxMeasuredValue>

Required

Is a Boolean value (either True or False) that determines a small dot will appear on the dial that indicates the maximum value that has been received thus far.

7.6.1.1.13 <ShowMinMeasuredValue>

Required

Is a Boolean value (either True or False) that determines a small dot will appear on the dial that indicates the minimum value that has been received thus far.

7.6.1.1.14 <Sections>

Optional

You may create as many sections as you like (by adding a <Section> tag within the <Sections> tag. Each section will be displayed around the edge of the dial in the range you specify. All of the examples in this section of the document have Sections defined as:

```
<Sections>
  <Section start="0" end="4" />
  <Section start="2.5" end="5" />
  <Section start="5" end="9.5" />
  <Section start="9.5" end="10" />
</Sections>
```

Which contains 4 colored sections. These are only for display purposes and are optional.

Note that the color of the sections is defined within the stylesheet.

Node: Section start and end settings can also be specified as a % value. You cannot mix % and hard values.

7.6.1.2 Application Settings

This section discusses the settings used to add a SteelGauges dial in the application configuration XML file.

Example:

```
<Widget File="Gauge\Gauge.xml" row="1" column="1">
    <Title>Throughput</Title>
    <UnitsOverride>Mb per sec</UnitsOverride>
    <MinionSrc ID="3to10" Namespace="DemoNamespace"/>
</Widget>
```

7.6.1.2.1 <Title>

Optional

Sets the title of the Dial, shown at the bottom.

7.6.1.2.2 <UnitsOverride>

Optional

Allows you to use a different units type text than what is defined in the widget definition file.

7.6.1.2.3 <ValueRange>

Optional

Allows you to override the min and max set in the widget definition file.

Example:

```
<ValueRange Min="1" Max="10"/>
```

7.6.1.2.4 <TickCount>

Optional sub-tag of ValueRange

You can use this tag to specify how many Major Ticks and Minor Ticks are displayed on the gauge. In the definition file you specify the interval. This will override it.

```
<ValueRange>
    <TickCount Major="10" Minor="20"/>
</ValueRange>
```

Will have 10 Major ticks, and 20 Minor.

7.6.2 SteelGauge180

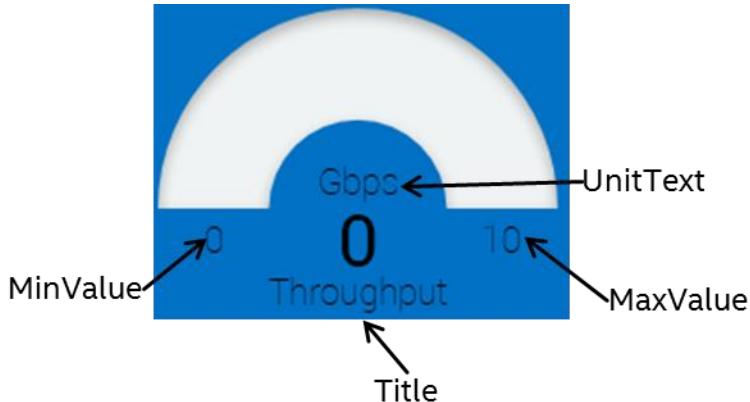


Figure 43 SteelGauge180

7.6.2.1 Definition File

This section discusses what the contents of a SteelGauge180 Widget definition file contains.

Example:

```
<Widget Type = "Steel180Gauge">
    <Style>oneeightygauge.css</Style>
    <MinValue>0</MinValue>
    <MaxValue>500</MaxValue>
    <UnitText>Gb/s</UnitText>
</Widget>
```

7.6.2.1.1 <MinValue>

Required

The minimum value that can be displayed on the dial. Usually zero, but can be whatever you like.

7.6.2.1.2 <MaxValue>

Required

The maximum value that can be displayed on the dial.

7.6.2.1.3 <UnitText>

Required

The kind of data you are wanting to display, such as Gbps, Ghz, RPM etc.

7.6.2.2 Application Settings

This section discusses the settings used to add a SteelGauge180 dial in the application configuration XML file.

Example:

```
<Widget File="Gauge\GaugeOneEighty.xml" row="1" column="1">
```

```

<Title>Throughput</Title>
<UnitsOverride>Mb per sec</UnitsOverride>
<MinionSrc ID="3to10" Namespace="DemoNamespace"/>
</Widget>

```

7.6.2.2.1 <ValueRange>

Optional

Allows you to override the min and max set in the widget definition file.

Example:

```
<ValueRange Min="1" Max="10"/>
```

7.6.3 SteelSimpleGauge

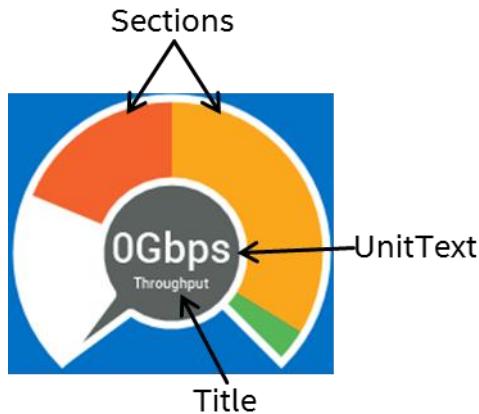


Figure 44 SteelSimpleGauge

7.6.3.1 Definition File

This section discusses what the contents of a SteelSimpleGauge Widget definition file contains.

Example:

```

<Widget Type = "SteelSimpleGauge">
  <Style>SimpleGauge.css</Style>
  <MinValue>0</MinValue>
  <MaxValue>500</MaxValue>
  <Decimals>0</Decimals>
  <UnitText>Mbps</UnitText>
  <Sections>
    <Section start="0" end="20" />
    <Section start="20" end="100" />
    <Section start="100" end="200" />
    <Section start="250" end="500" />
  </Sections>

```

```
</Widget>
```

7.6.3.1.1 <MinValue>

Required

The minimum value that can be displayed on the dial. Usually zero, but can be whatever you like.

7.6.3.1.2 <MaxValue>

Required

The maximum value that can be displayed on the dial.

7.6.3.1.3 <UnitText>

Required

The kind of data you are wanting to display, such as Gbps, Ghz, RPM etc.

7.6.3.1.4 <Decimals>

Required

The number of decimal places to be available for the current value # displayed in the middle of the dial.

7.6.3.1.5 <UnitText>

Required

The kind of data you are wanting to display, such as Gbps, Ghz, RPM etc.

7.6.3.1.6 <Sections>

Optional

You may create as many sections as you like (by adding a <Section> tag within the <Sections> tag. Each section will be displayed around the edge of the dial in the range you specify. All of the examples in this section of the document have Sections defined as:

```
<Sections>
    <Section start="0" end="20" />
    <Section start="20" end="100" />
    <Section start="100" end="200" />
    <Section start="250" end="500" />
</Sections>
```

Which contains 4 colored sections. These are only for display purposes and are optional.

Note that the color of the sections is defined within the stylesheet.

7.6.3.2 Application Settings

This section discusses the settings used to add a SteelSimpleGauge dial in the application configuration XML file.

Example:

```
<Widget File="Gauge\GaugeSimple.xml.xml" row="1" column="2" >
    <Title>Throughput</Title>
    <UnitsOverride>Bytes Per Sec </UnitsOverride>
```

```

<MinionSrc ID="Eth0_BiDir_Data" Namespace="MadeupServer"/>
<Size>
    <Minimum Width="100"/>
</Size>
</Widget>

```

7.6.3.2.1 <Title>

Optional

Sets the title of the Dial, shown at the bottom.

7.6.3.2.2 <UnitsOverride>

Optional

Allows you to use a different units type text than what is defined in the widget definition file.

7.6.3.2.3 <ValueRange>

Optional

Allows you to override the min and max set in the widget definition file.

Example:

```
<ValueRange Min="1" Max="10"/>
```

7.6.4 SteelGaugeRadial

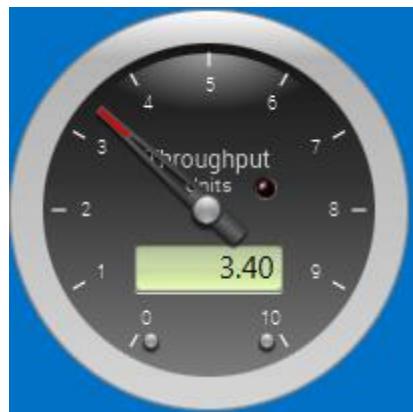


Figure 45 SteelGaugeRadial

7.6.4.1 Definition File

This section discusses what the contents of a SteelRadialGauge Widget definition file contains.

Example:

```

<Widget Type = "SteelGaugeRadial">
    <Style>GaugeRadial.css</Style>
    <MinValue>0</MinValue>
    <MaxValue>10</MaxValue>
    <UnitText>Gbps</UnitText>

```

```

<Decimals>2</Decimals>
<DialStartAngle>300</DialStartAngle>
<DialRangeAngle>240</DialRangeAngle>
<MajorTicksSpace>1</MajorTicksSpace>
<MinorTicksSpace>1</MinorTicksSpace>
<TickLabelOrientation>Horizontal</TickLabelOrientation>
<EnhancedRateText>True</EnhancedRateText>
</Widget>

```

7.6.4.1.1 <**MinValue**>

Required

The minimum value that can be displayed on the dial. Usually zero, but can be whatever you like.

7.6.4.1.2 <**MaxValue**>

Required

The maximum value that can be displayed on the dial.

7.6.4.1.3 <**UnitText**>

Required

The kind of data you are wanting to display, such as Gbps, Ghz, RPM etc.

7.6.4.1.4 <**Decimals**>

Required

The number of decimal places to be available for the current value # displayed in the middle of the dial.

7.6.4.1.5 <**DialStartAngle**>

Optional

This specifies where the numbering on the dial begins, it is in degrees. 180 will start at the bottom of the dial, while 270 will be at 9:00 on a clock.

NOTE: The open source project for this widget does not yet use this field, so I ignore it.

7.6.4.1.6 <**DialRangeAngle**>

Required

The angle range that the dial should utilize, in degrees.

NOTE: The open source project for this widget does not yet use this field, so I ignore it.

7.6.4.1.7 <**MajorTicksSpace**>

Required

Numeric interval that a major Tick should be shown on the dial.

7.6.4.1.8 <**MinorTicksSpace**>

Required

Numeric interval that a minor Tick should be shown on the dial.

7.6.4.1.9 <TickableOrientation>

Required

Determines the way in which the numbers on the dial are drawn. Valid values are:

Horizontal

Orthogonal

Tangent

		
Figure 46 Horizontal Orientation	Figure 47 Tangent Orientation	Figure 48 Orthogonal Orientation

Note: I know – was lazy and re-used the graphic from a previous widget. However the meanings of the settings are the same.

7.6.4.1.10 <EnhancedRateText>

Required

Is a Boolean value (either True or False) that determines if the value text in the middle of the dial is displayed with shadowing or not.

7.6.4.2 Application Settings

This section discusses the settings used to add a SteelRadialGauge dial in the application configuration XML file.

Example:

```
<Widget File="Gauge\GaugeRadial.xml" row="1" column="1">
    <Title>Throughput</Title>
    <UnitsOverride>Mb per sec</UnitsOverride>
    <MinionSrc ID="3to10" Namespace="DemoNamespace"/>
</Widget>
```

7.6.4.2.1 <Title>

Optional

Sets the title of the Dial, shown at the bottom.

7.6.4.2.2 <UnitsOverride>

Optional

Allows you to use a different units type text than what is defined in the widget definition file.

7.6.4.2.3 <ValueRange>

Optional

Allows you to override the min and max set in the widget definition file.

Example:

```
<ValueRange Min="1" Max="10"/>
```

7.6.4.2.4 <TickCount>

Optional sub-tag of ValueRange

You can use this tag to specify how many Major Ticks and Minor Ticks are displayed on the gauge. In the definition file you specify the interval. This will override it.

```
<ValueRange>
  <TickCount Major="10" Minor="20"/>
</ValueRange>
```

Will have 10 Major ticks, and 20 Minor.

7.6.5 SteelGaugeRadialSteel

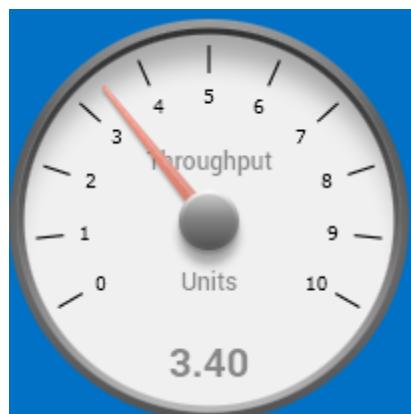


Figure 49 SteelGaugeRadialSteel

7.6.5.1 Definition File

This section discusses what the contents of a SteelRadialSteelGauge Widget definition file contains.

Example:

```
<Widget Type = "SteelGaugeRadialSteel">
  <Style>GaugeRadialSteel.css</Style>
  <MinValue>0</MinValue>
  <MaxValue>10</MaxValue>
  <UnitText>Gbps</UnitText>
  <Decimals>2</Decimals>
  <DialStartAngle>300</DialStartAngle>
  <DialRangeAngle>240</DialRangeAngle>
  <MajorTicksSpace>1</MajorTicksSpace>
```

```
<MinorTicksSpace>0</MinorTicksSpace>
<TickLabelOrientation>Orthogonal</TickLabelOrientation>
<EnhancedRateText>True</EnhancedRateText>
</Widget>
```

7.6.5.1.1 <**MinValue**>

Required

The minimum value that can be displayed on the dial. Usually zero, but can be whatever you like.

7.6.5.1.2 <**MaxValue**>

Required

The maximum value that can be displayed on the dial.

7.6.5.1.3 <**UnitText**>

Required

The kind of data you are wanting to display, such as Gbps, Ghz, RPM etc.

7.6.5.1.4 <**Decimals**>

Required

The number of decimal places to be available for the current value # displayed in the middle of the dial.

7.6.5.1.5 <**DialStartAngle**>

Optional

This specifies where the numbering on the dial begins, it is in degrees. 180 will start at the bottom of the dial, while 270 will be at 9:00 on a clock.

7.6.5.1.6 <**DialRangeAngle**>

Required

The angle range that the dial should utilize, in degrees.

7.6.5.1.7 <**MajorTicksSpace**>

Required

Numeric interval that a major Tick should be shown on the dial.

7.6.5.1.8 <**MinorTicksSpace**>

Required

Numeric interval that a minor Tick should be shown on the dial.

7.6.5.1.9 <**TickLabelOrientation**>

Required

Determines the way in which the numbers on the dial are drawn. Valid values are:

```
Horizontal
Orthogonal
Tangent
```

		
Figure 50 Horizontal Orientation	Figure 51 Tangent Orientation	Figure 52 Orthogonal Orientation

Note: I know – was lazy (again) and re-used the graphic from a previous widget. However the meanings of the settings are the same.

7.6.5.1.10 <EnhancedRateText>

Required

Is a Boolean value (either True or False) that determines if the value text in the middle of the dial is displayed with shadowing or not.

7.6.5.2 Application Settings

This section discusses the settings used to add a SteelGauges dial in the application configuration XML file.

Example:

```
<Widget File="Gauge\GaugeRadialSteel.xml" row="1" column="1">
    <Title>Throughput</Title>
    <UnitsOverride>Mb per sec</UnitsOverride>
    <MinionSrc ID="3to10" Namespace="DemoNamespace"/>
</Widget>
```

7.6.5.2.1 <Title>

Optional

Sets the title of the Dial, shown at the bottom.

7.6.5.2.2 <UnitsOverride>

Optional

Allows you to use a different [units type text](#) than what is defined in the widget definition file.

7.6.5.2.3 <ValueRange>

Optional

Allows you to override the min and max set in the widget definition file.

Example:

```
<ValueRange Min="1" Max="10"/>
```

7.6.5.2.4 <TickCount>

Optional sub-tag of ValueRange

You can use this tag to specify how many Major Ticks and Minor Ticks are displayed on the gauge. In the definition file you specify the interval. This will override it.

```
<ValueRange>
  <TickCount Major="10" Minor="20"/>
</ValueRange>
```

Will have 10 Major ticks, and 20 Minor.

7.6.6 Bar Gauge

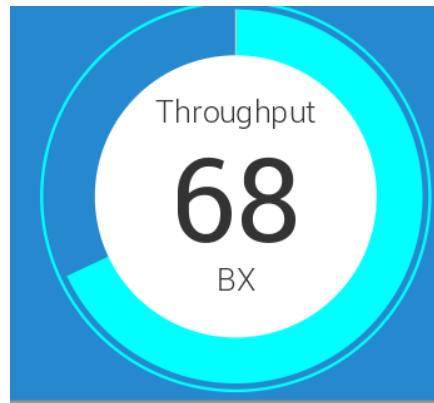


Figure 53 Bar Gauge

7.6.6.1 Definition File

This section discusses what the contents of a BarGauge Widget definition file contains.

Example:

```
<Widget Type = "BarGauge">
  <Style>GaugeBar.css</Style>
  <MinValue>0</MinValue>
  <MaxValue>100</MaxValue>
  <UnitText>Gbps</UnitText>
  <Decimals>2</Decimals>
</Widget>
```

7.6.6.1.1 <MinValue>

Required

The minimum value that can be displayed on the dial. Usually zero, but can be whatever you like.

7.6.6.1.2 <.MaxValue>

Required

The maximum value that can be displayed on the dial.

7.6.6.1.3 <UnitText>

Required

The kind of data you are wanting to display, such as Gbps, Ghz, RPM etc.

7.6.6.1.4 <Decimals>

Optional

The number of decimal places to be available for the current value # displayed in the middle of the dial.

7.6.6.2 Application Settings

This section discusses the settings used to add a BarGauge dial in the application configuration XML file.

Example:

```
<Widget File="Gauge\GaugeBar.xml" row="1" column="1">
    <Title>Throughput</Title>
    <UnitsOverride>Mb per sec</UnitsOverride>
    <MinionSrc ID="3to10" Namespace="DemoNamespace"/>
</Widget>
```

7.6.6.2.1 <Title>

Optional

Sets the title of the Dial, shown at the bottom.

7.6.6.2.2 <UnitsOverride>

Optional

Allows you to use a different [units type text](#) than what is defined in the widget definition file.

7.6.6.2.3 <ValueRange>

Optional

Allows you to override the min and max set in the widget definition file.

Example:

```
<ValueRange Min="1" Max="10"/>
```

7.6.7 Double Bar Gauge

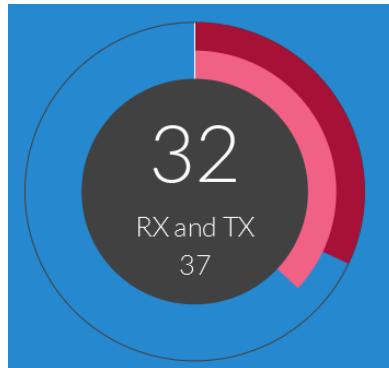


Figure 54 Double Bar Gauge

7.6.7.1 Definition File

This section discusses what the contents of a DoubleBarGauge Widget definition file contains.

Example:

```
<Widget Type = "DoubleBarGauge">
    <Style>DoubleGaugeBar.css</Style>
    <MinValue>0</MinValue>
    <MaxValue>100</MaxValue>
    <Decimals>2</Decimals>
</Widget>
```

7.6.7.1.1 <MinValue>

Required

The minimum value that can be displayed on the dial. Usually zero, but can be whatever you like.

7.6.7.1.2 <MaxValue>

Required

The maximum value that can be displayed on the dial.

7.6.7.1.3 <Decimals>

Optional

The number of decimal places to be available for the current value # displayed in the middle of the dial.

7.6.7.2 Application Settings

This section discusses the settings used to add a DoubleBarGauge dial in the application configuration XML file.

Example:

```
<Widget File="Gauge\GaugeDoubleBar.xml" row="1" column="1">
```

```
<Title>Throughput</Title>
<InnerMinionSrc ID="RX" Namespace="DemoNamespace"/>
<OuterMinionSrc ID="TX" Namespace="DemoNamespace"/>
/Widget>
```

7.6.7.2.1 <**Title**>

Optional

Sets the title of the Dial, shown at the bottom.

7.6.7.2.2 <**InnerMinionSrc**>

Required

Most Widgets have a MinionSrc. This widget has two sources, one for the inner bar and out for the outer bar. This one is for the Inner bar, and works the same was a <MinionSrc> but with a different name.

7.6.7.2.3 <**OuterMinionSrc**>

Required

Most Widgets have a MinionSrc. This widget has two sources, one for the inner bar and out for the outer bar. This one is for the Outer bar, and works the same was a <MinionSrc> but with a different name.

7.6.7.2.4 <**ValueRange**>

Optional

Allows you to override the min and max set in the widget definition file.

Example:

```
<ValueRange Min="1" Max="10"/>
```

7.7 Indicators

Indicators are very simple widgets that take as data a value between 0 and 1. If any value is sent greater than 1, it is repeatedly divided by 10 until <= 1.

7.7.1 ProgressBar



Figure 55 ProgressBar Widget

7.7.1.1 Definition File

This section discusses what the contents of a ProgressBar Widget definition file contains.

Example:

```
<Widget Type = "ProgressBar">
  <Style ID = "default">ProgressBar.css</Style>
</Widget>
```

7.7.1.2 Application Settings

This section discusses the settings used to add a ProgressBar dial in the application configuration XML file.

Example:

```
<Widget File="Indicator\ProgressBar.xml" row="1" column="1" Width="400" Height="40"
colSpan="2">
    <MinionSrc ID="TestProgress" Namespace="SR-IOVSystem1"/>
</Widget>
```

7.7.2 ProgressIndicator

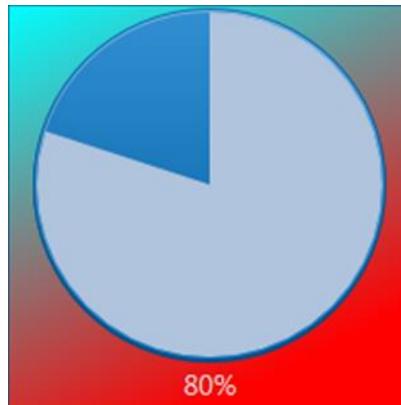


Figure 56 ProgressIndicator Widget

7.7.2.1 Definition File

This section discusses what the contents of a ProgressIndicator Widget definition file contains.

Example:

```
<Widget Type = "ProgressIndicator">
    <Style ID = "default">ProgressIndicator.css</Style>
</Widget>
```

7.7.2.2 Application Settings

This section discusses the settings used to add a ProgressIndicator dial in the application configuration XML file.

Example:

```
<Widget File="Indicator\ProgressIndicator.xml" row="2" column="2" Width="200"
Height="200">
    <StyleOverride ID="red"/>
    <MinionSrc ID="Progress" Namespace="DemoNamespace"/>
</Widget>
```

7.7.3 LEDBargraph

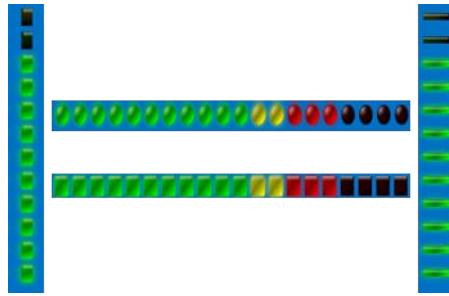


Figure 57 LEDBarGraph Widget

7.7.3.1 Definition File

This section discusses what the contents of a LEDBargraph Widget definition file contains.

Example:

```
<Widget Type = "LedBargraph">
    <Style>ledbargraph.css</Style>
    <Orientation>Vertical</Orientation>
    <LedType>Vertical</LedType>
    <ShowPeakValue>False</ShowPeakValue>
    <NumberOfLeds>12</NumoberLeds>
    <SizeOfLeds>20</SizeOfLeds>
</Widget>
```

7.7.3.1.1 Orientation

Required

Specifies if the LEDBarGraph widget is drawn Horizontal or Vertical. Valid values are "Horizontal" and "Vertical". See above figure for examples.

7.7.3.1.2 LedType

Required

Allows you to configure how the LED's should appear. Valid options (which can be seen in the above figure) are:

```
Horizontal
Vertical
Round
Square
```

7.7.3.1.3 ShowPeakValue

Required

Is a boolean value (True or False). If true, the peak value LED will remain lit for a little while before turning off when the value drops.

7.7.3.1.4 NumberOfLeds

Required

Specifies the number of LED's to display in the LEDBarGraph widget.

7.7.3.1.5 **SizeOfLeds**

Required

Specifies the size of each of the LED's to display in the LEDBarGraph widget.

7.7.3.2 Application Settings

This section discusses the settings used to add a LEDBarGraph dial in the application configuration XML file.

Example:

```
<Widget File="LED\BarGraphLED.xml" row="3" column="1" Align="Center">
    <MinionSrc ID="Progress" Namespace="DemoNamespace"/>
</Widget>
```

Note: The LEDBarGraph widget is a great example of how you can use one widget type to create multiple different looking widgets to display by having different definition files. You can one a definition file for a vertical+round LedBarGraph and another for a horizontal+square one, etc.

7.8 Charts & Graphs

Java 8 comes with a rich library of charts and graphs. I've incorporated many of them into the Marvin Gui.

Some of these widgets can have what I refer to as 'Single Source' inputs – which is a comma separated array of values from a single [<MinionSrc>](#) as well as separate values for each series that comes from individual [<MinionSrc>](#) entries. In general I've found the single source to be easier to use and of more value.

Most charts have what I call a Series. Series will have a Label (like a key). Most charts also have a xAix and yAxix with a label.

EXPERIMENTAL: For many of the multi-source charts, you can specify a 'Scale' Attribute:

```
<Series Label="WATTS">
    <MinionSrc ID="SystemPower" Namespace="$ (NS)" Scale="0.01"/>
</Series>
```

7.8.1 MultiSourceAreaChart

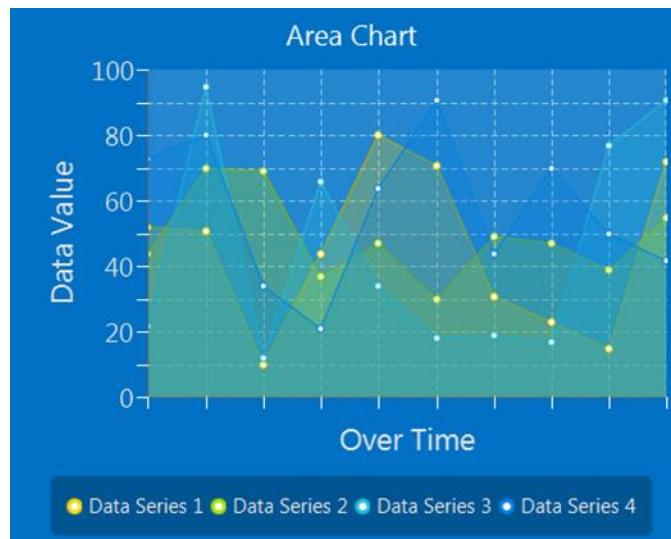


Figure 58 Area Chart

7.8.1.1 Definition File

This section discusses what the contents of a MultiSourceAreaChart Widget definition file contains.

Example:

```
<Widget Type = "MultiSourceAreaChart">
    <Style>LineChart.css</Style>
    <Animated>False</Animated>
    <Synchronized MaxSyncWait="0">True</Synchronized>
    <yAxis MajorTickInterval="10" MinorTickInterval="5" TickLabelVisible="True"/>
    <xAxis MajorTickInterval="1" MinorTickInterval="0" TickLabelVisible="False"/>
</Widget>
```

7.8.1.1.1 < Animated >

Required

Determines if the chart will show the drawing and moving of datapoints. I usually have it off. It is a Boolean (true or false) value.

7.8.1.1.2 < xAxis >

Required

Determines look of the xAxis on the chart.

Attributes

The < xAxis > tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments

MajorTickInterval	M	Numeric interval for Major Ticks on xAxis
MajorTickCount	O	Number of total major ticks use this or Interval
MinorTickInterval	M	Number of minor ticks between Major ticks
TickLabelVisible	M	Boolean – display the value on major ticks

7.8.1.1.3 < yAxis >

Required

Determines look of the yAxis on the chart.

Attributes

The < yAxis > tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
MajorTickInterval	M	Numeric interval for Major Ticks on yAxis
MajorTickCount	O	Number of total major ticks use this or Interval
MinorTickInterval	M	Number of minor ticks between Major ticks
TickLabelVisible	M	Boolean – display the value on major ticks

7.8.1.1.4 < Synchronized >

Optional

For charts with multiple data sources, this option allows you to specify that the chart will not be updated until all of the data sources have sent data. It takes a Boolean value (true or false). The default is true.

Attributes

The < Synchronized > tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
MaxSyncWait	O	MAX time in milliseconds to wait for all data to synchronize before updating chart. A value of 0 (zero) will wait indefinitely. Default value is 0.

Note: Default values are TRUE and a MaxSyncWait is 0. This means if you have say 4 minions feeding a single chart and one of them is currently down, the chart will never update.

7.8.1.2 Application Settings

This section discusses the settings used to add a MultiSrcAreaChart in the application configuration XML file.

Example:

```
<Widget File="Chart\ChartMultiSrcArea.xml" row="1" column="0">
    <Title>Area Chart - Multisourced</Title>
    <xAxis Label="Over Time" MaxEntries="10"/>
    <yAxis Label="Data Value" MaxValue="100" MinValue="0"/>
    <Series Label="Data Series 1">
        <MinionSrc ID="GraphSource1" Namespace="DemoNamespace"/>
    </Series>
    <Series Label="Data Series 2">
        <MinionSrc ID="GraphSource2" Namespace="DemoNamespace"/>
    </Series>
    <Series Label="Data Series 3">
        <MinionSrc ID="GraphSource3" Namespace="DemoNamespace"/>
    </Series>
    <Series Label="Data Series 4">
        <MinionSrc ID="GraphSource4" Namespace="DemoNamespace"/>
    </Series>
</Widget>
```

7.8.1.2.1 <Title>

Optional

Sets the title of the chart, shown at the top.

7.8.1.2.2 <xAxis>

Required

Defines how the xAxis should be handled. Has two attributes, Label and MaxEntries. Label is the label to display on the chart. MaxEntries specifies how many series to display before starting to scroll to the left when new data comes in.

7.8.1.2.3 <yAxis>

Required

Defines how the yAxis should be handled. Has two attributes, Label and MaxValue. Label is the label to display on the chart. MaxValue specifies the maximum value to be displayed. MinValue is optional, defaults to 0.0. Is the bottom of the chart, can be negative value.

For some charts if you specify a 'count' attribute in yAxis: <yAxis MaxValue="100" Count="20"/> you can skip the <Series> and it will expect 20 datapoints in a csv.

7.8.1.2.4 <Series>

Required/Maybe

The Series defines the Source of the data for a series. This is a mulit-src chart, so each series has its own MinionSrc. A Series has a Label Attribute (the name of the series to be displayed) and a MinionSrc:

```

<Series Label="Data Series 1">
    <MinionSrc ID="GraphSource1" Namespace="DemoNamespace"/>
</Series>

```

You must specify a Series for each expected MinionSrc. The example above has 4. Unless for some charts you specify a 'count' in yAxis definition.

Note: Multi-Source charts can be problematic unless used with care. Each data source is an independent stream and even if the collector is run with the same interval, the traffic is UDP and not guaranteed, so it can be dropped. If the collectors feeding the Widget are all from the same Minion, I recommend using the <Group> capability – it is why it was invented.

If your data is coming from different Minions and feeding the same chart/graph then you will almost certainly see update issues. This is simply because you have separate data sources sending data over a network and they are not synchronized. As solving this issue is beyond the scope of BIFF (at this time anyhow) I recommend you coordinate the data collection into a single Minion for that Widget. Use a file share or some other mechanism to collect the desired data into a single comma separated source, or into multiple sources in a <Group>, but from a single Minion.

7.8.2 AreaChart

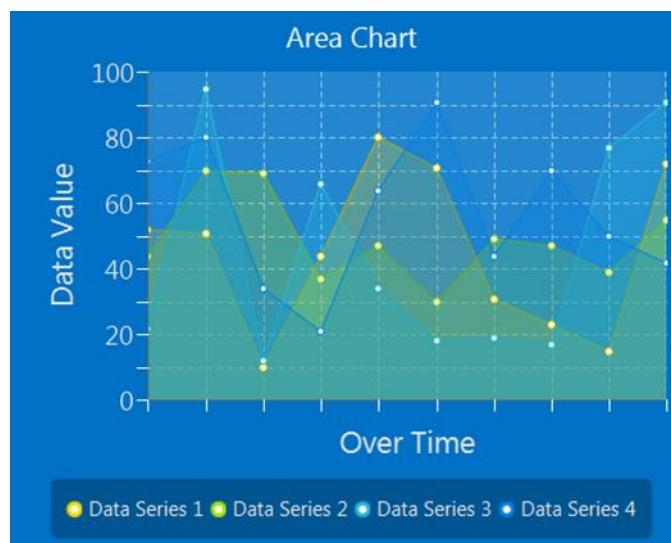


Figure 59 Area Chart

The AreaChart widget is nearly identical to the MultiSourceAreaChart, except that there is a single `<MinionSrc>` that is expected to send data in a comma separated string.

7.8.2.1 Definition File

This section discusses what the contents of a AreaChart Widget definition file contains.

Example:

```
<Widget Type = "AreaChart">
```

```

<Style>LineChart.css</Style>
<Animated>False</Animated>
<yAxis MajorTickInterval="10" MinorTickInterval="5" TickLabelVisible="True"/>
<xAxis MajorTickInterval="1" MinorTickInterval="0" TickLabelVisible="False"/>
</Widget>

```

7.8.2.1.1 < Animated >

Required

Determines if the chart will show the drawing and moving of datapoints. I usually have it off. It is a Boolean (true or false) value.

7.8.2.1.2 < xAxis >

Required

Determines look of the xAxis on the chart.

Attributes

The < xAxis > tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
MajorTickInterval	M	Numeric interval for Major Ticks on xAxis
MinorTickInterval	M	Numeric interval for Minor Ticks on xAxis
TickLabelVisible	M	Boolean – display the value on major ticks

7.8.2.1.1 < yAxis >

Required

Determines look of the yAxis on the chart.

Attributes

The < yAxis > tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
MajorTickInterval	M	Numeric interval for Major Ticks on yAxis
MinorTickInterval	M	Numeric interval for Minor Ticks on yAxis
TickLabelVisible	M	Boolean – display the value on major ticks

7.8.2.2 Application Settings

This section discusses the settings used to add a MultiSrcAreaChart in the application configuration XML file.

Example:

```

<Widget File="Chart\ChartArea.xml" row="1" column="0">
  <Title>Area Chart - Multisourced</Title>
  <xAxis Label="Over Time" MaxEntries="10"/>
  <yAxis Label="Data Value" MaxValue="100"/>
  <MinionSrc ID="CombinedSource" Namespace="DemoNamespace"/>
  <Series Label="Data Series 1"/>
  <Series Label="Data Series 2"/>
  <Series Label="Data Series 3"/>
  <Series Label="Data Series 4"/>
</Widget>

```

7.8.2.2.1 <Title>

Optional

Sets the title of the chart, shown at the top.

7.8.2.2.2 <xAxis>

Required

Defines how the xAxis should be handled. Has two attributes, Label and MaxEntries. Label is the label to display on the chart. MaxEntries specifies how many series to display before starting to scroll to the left when new data comes in.

7.8.2.2.3 <yAxis>

Required

Defines how the yAxis should be handled. Has two attributes, Label and MaxValue. Label is the label to display on the chart. MaxValue specifies the maximum value to be displayed. MinValue is optional, defaults to 0.0. Is the bottom of the chart, can be negative value.

7.8.2.2.4 <Series>

Required

The Series defines how many datapoints are to be expected from each update from the MinionSrc. It also defines the name of each series for display purposes.

```
<Series Label="Data Series 1"/>
```

7.8.3 MultiSourceStackedAreaChart

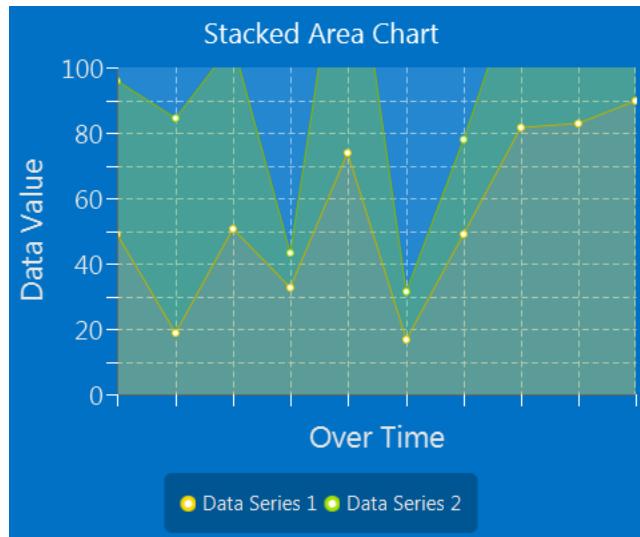


Figure 60 Area Chart

The MultiSourcedStackedArea chart is nearly exactly the same as the MultiSourcedAreaChart. The only difference being that the data points are 'stacked' rather than displayed at a specify y value.

Note: These charts can be useful, however if you have multiple <MinionSrc> they can easily get out of sync and the chart can look 'messy'.

7.8.3.1 Definition File

This section discusses what the contents of a MultiSourcedStackedArea Widget definition file contains.

Example:

```
<Widget Type = "MultiSourceStackedAreaChart">
    <Style>LineChart.css</Style>
    <Animated>False</Animated>
    <yAxis MajorTickInterval="10" MinorTickInterval="5" TickLabelVisible="True"/>
    <xAxis MajorTickInterval="1" MinorTickInterval="0" TickLabelVisible="False"/>
</Widget>
```

7.8.3.1.1 < Animated >

Required

Determines if the chart will show the drawing and moving of datapoints. I usually have it off. It is a Boolean (true or false) value.

7.8.3.1.2 < xAxis >

Required

Determines look of the xAxis on the chart.

Attributes

The < xAxis > tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
MajorTickInterval	M	Numeric interval for Major Ticks on xAxis
MinorTickInterval	M	Numeric interval for Minor Ticks on xAxis
TickLabelVisible	M	Boolean – display the value on major ticks

7.8.3.1.3 < yAxis >

Required

Determines look of the yAxis on the chart.

Attributes

The < yAxis > tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
MajorTickInterval	M	Numeric interval for Major Ticks on yAxis
MinorTickInterval	M	Numeric interval for Minor Ticks on yAxis
TickLabelVisible	M	Boolean – display the value on major ticks

7.8.3.1.4 < Synchronized >

Optional

For charts with multiple data sources, this option allows you to specify that the chart will not be updated until all of the data sources have sent data. It takes a Boolean value (true or false). The default is true.

Attributes

The < Synchronized > tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
MaxSyncWait	0	MAX time in milliseconds to wait for all data to synchronize before updating chart. A value of 0 (zero) will wait indefinitely. Default value is 0.

Note: Default values are TRUE and a MaxSyncWait is 0. This means if you have say 4 minions feeding a single chart and one of them is currently down, the chart will never update.

7.8.3.2 Application Settings

This section discusses the settings used to add a MultiSrcAreaChart in the application

configuration XML file.

Example:

```
<Widget File="Chart\ChartMultiSrcStackedArea.xml" row="2" column="0">
    <Title>Stacked Area Chart - Multisourced</Title>
    <xAxis Label="Over Time" MaxEntries="10"/>
    <yAxis Label="Data Value" MaxValue="100"/>
    <Series Label="Data Series 1">
        <MinionSrc ID="GraphSource1" Namespace="DemoNamespace"/>
    </Series>
    <Series Label="Data Series 2">
        <MinionSrc ID="GraphSource2" Namespace="DemoNamespace"/>
    </Series>
</Widget>
```

7.8.3.2.1 <Title>

Optional

Sets the title of the chart, shown at the top.

7.8.3.2.2 <xAxis>

Required

Defines how the xAixs should be handled. Has two attributes, Label and MaxEntries. Label is the label to display on the chart. MaxEntries specifies how many series to display before starting to scroll to the left when new data comes in.

7.8.3.2.3 <yAxis>

Required

Defines how the yAixs should be handled. Has two attributes, Label and MaxValue. Label is the label to display on the chart. MaxValue specifies the maximum value to be displayed. MinValue is optional, defaults to 0.0. Is the bottom of the chart, can be negative value.

7.8.3.2.4 <Series>

Required

The Series defines the Source of the data for a series. This is a mulit-src chart, so each series has its own MinionSrc. A Series has a Label Attribute (the name of the series to be displayed) and a MinionSrc:

```
<Series Label="Data Series 1">
    <MinionSrc ID="GraphSource1" Namespace="DemoNamespace"/>
</Series>
```

You must specify a Series for each expected MinionSrc. The example above has 2.

Note: Multi-Source charts can be problematic unless used with care. Each data source is an independent stream and even if the collector is run with the same interval, the traffic is UDP and not guaranteed, so it can be dropped. If the collectors feeding the Widget are all from the same Minion, I recommend using the [<Group>](#) capability – it is why it was invented.

If your data is coming from different Minions and feeding the same chart/graph then you will almost certainly see update issues. This is simply because you have separate data sources sending data over a network and they are not synchronized. As solving this issue is beyond the scope of BIFF (at this time anyhow) I recommend you coordinate the data collection into a single Minion for that Widget. Use a file share or some other mechanism to collect the desired data into a single comma separated source, or into multiple sources in a <Group>, but from a single Minion.

7.8.4 StackedAreaChart

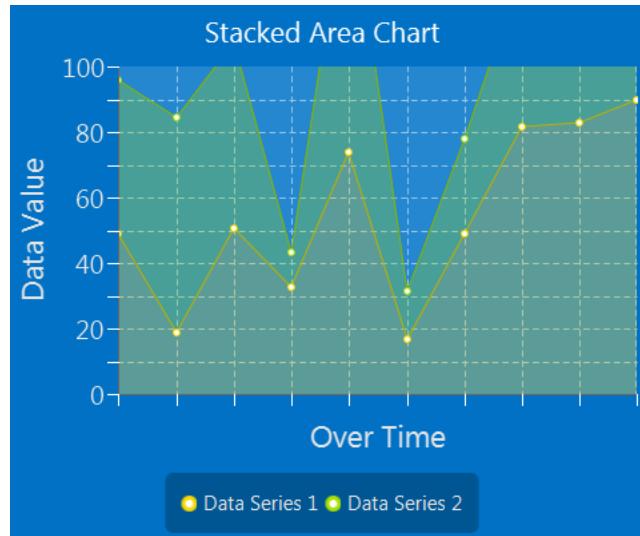


Figure 61 Area Chart

The StackedArea chart is nearly exactly the same as the AreaChart. The only difference being that the data points are 'stacked' rather than displayed at a specify y value.

7.8.4.1 Definition File

This section discusses what the contents of a StackedArea Widget definition file contains.

Example:

```
<Widget Type = "StackedAreaChart">
  <Style>LineChart.css</Style>
  <Animated>False</Animated>
  <yAxis MajorTickInterval="10" MinorTickInterval="5" TickLabelVisible="True"/>
  <xAxis MajorTickInterval="1" MinorTickInterval="0" TickLabelVisible="False"/>
</Widget>
```

7.8.4.1.1 < Animated >

Required

Determines if the chart will show the drawing and moving of datapoints. I usually have it off. It is a Boolean (true or false) value.

7.8.4.1.2 < xAxis >

Required

Determines look of the xAxis on the chart.

Attributes

The < xAxis > tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
MajorTickInterval	M	Numeric interval for Major Ticks on xAxis
MinorTickInterval	M	Numeric interval for Minor Ticks on xAxis
TickLabelVisible	M	Boolean – display the value on major ticks

7.8.4.1.3 < yAxis >

Required

Determines look of the yAxis on the chart.

Attributes

The < yAxis > tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
MajorTickInterval	M	Numeric interval for Major Ticks on yAxis
MinorTickInterval	M	Numeric interval for Minor Ticks on yAxis
TickLabelVisible	M	Boolean – display the value on major ticks

7.8.4.2 Application Settings

This section discusses the settings used to add a MultiSrcAreaChart in the application configuration XML file.

Example:

```
<Widget File="Chart\ChartStackedArea.xml" row="2" column="0">
    <Title>Stacked Area Chart - Singlesourced</Title>
    <xAxis Label="Over Time" MaxEntries="10"/>
    <yAxis Label="Data Value" MaxValue="100"/>
    <MinionSrc ID="TwoDataPts" Namespace="DemoNamespace"\>
        <Series Label="Data Series 1"/>
        <Series Label="Data Series 2"/>
    </Widget>
```

7.8.4.2.1 <Title>

Optional

Sets the title of the chart, shown at the top.

7.8.4.2.2 <xAxis>

Required

Defines how the xAxis should be handled. Has two attributes, Label and MaxEntries. Label is the label to display on the chart. MaxEntries specifies how many series to display before starting to scroll to the left when new data comes in.

7.8.4.2.3 <yAxis>

Required

Defines how the yAxis should be handled. Has two attributes, Label and MaxValue. Label is the label to display on the chart. MaxValue specifies the maximum value to be displayed. MinValue is optional, defaults to 0.0. Is the bottom of the chart, can be negative value.

7.8.4.2.4 <Series>

Required

The Series defines the Source of the data for a series. This is a single-src chart, so each series has only the label.

```
<Series Label="Data Series 1"/>
```

7.8.5 MultiSourceLineChart

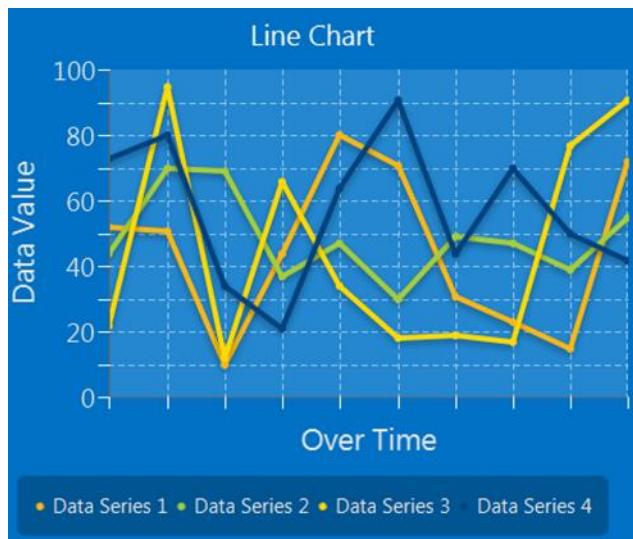


Figure 62 Line Chart

7.8.5.1 Definition File

This section discusses what the contents of a MultiSourceLineChart Widget definition file contains.

Example:

```

<Widget Type = "MultiSourceLineChart">
  <Style>LineChart.css</Style>
  <Animated>False</Animated>
  <yAxis MajorTickInterval="10" MinorTickInterval="5" TickLabelVisible="True"/>
  <xAxis MajorTickInterval="1" MinorTickInterval="0" TickLabelVisible="False"/>
</Widget>

```

7.8.5.1.1 < Animated >

Required

Determines if the chart will show the drawing and moving of datapoints. I usually have it off. It is a Boolean (true or false) value.

7.8.5.1.2 < xAxis >

Required

Determines look of the xAxis on the chart.

Attributes

The < xAxis > tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
MajorTickInterval	M	Numeric interval for Major Ticks on xAxis
MinorTickInterval	M	Numeric interval for Minor Ticks on xAxis
TickLabelVisible	M	Boolean – display the value on major ticks

7.8.5.1.3 < yAxis >

Required

Determines look of the yAxis on the chart.

Attributes

The < yAxis > tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
MajorTickInterval	M	Numeric interval for Major Ticks on yAxis
MinorTickInterval	M	Numeric interval for Minor Ticks on yAxis
TickLabelVisible	M	Boolean – display the value on major ticks

7.8.5.1.4 < Synchronized >

Optional

For charts with multiple data sources, this option allows you to specify that the chart will not be updated until all of the data sources have sent data. It takes a Boolean value (true or false). The default is true.

Attributes

The < Synchronized > tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
MaxSyncWait	0	MAX time in milliseconds to wait for all data to synchronize before updating chart. A value of 0 (zero) will wait indefinitely. Default value is 0.

Note: Default values are TRUE and a MaxSyncWait is 0. This means if you have say 4 minions feeding a single chart and one of them is currently down, the chart will never update.

7.8.5.2 Application Settings

This section discusses the settings used to add a MultiSrcAreaChart in the application configuration XML file.

Example:

```
<Widget File="Chart\ChartMultiSrcLine.xml" row="1" column="1">
    <Title>Line Chart - Multisourced</Title>
    <xAxis Label="Over Time" MaxEntries="10"/>
    <yAxis Label="Data Value" MaxValue="100" MinValue="0"/>
    <Series Label="Data Series 1">
        <MinionSrc ID="GraphSource1" Namespace="DemoNamespace"/>
    </Series>
    <Series Label="Data Series 2">
        <MinionSrc ID="GraphSource2" Namespace="DemoNamespace"/>
    </Series>
    <Series Label="Data Series 3">
        <MinionSrc ID="GraphSource3" Namespace="DemoNamespace"/>
    </Series>
    <Series Label="Data Series 4">
        <MinionSrc ID="GraphSource4" Namespace="DemoNamespace"/>
    </Series>
</Widget>
```

7.8.5.2.1 <Title>

Optional

Sets the title of the chart, shown at the top.

7.8.5.2.2 <xAxis>

Required

Defines how the xAxi should be handled. Has two attributes, Label and MaxEntries. Label is the label to display on the chart. MaxEntries specifies how many series to display before starting to scroll to the left when new data comes in.

7.8.5.2.3 <yAxis>

Required

Defines how the yAxis should be handled. Has two attributes, Label and MaxValue. Label is the label to display on the chart. MaxValue specifies the maximum value to be displayed. MinValue is optional, defaults to 0.0. Is the bottom of the chart, can be negative value.

7.8.5.2.4 <Series>

Required

The Series defines the Source of the data for a series. This is a mulit-src chart, so each series has its own MinionSrc. A Series has a Label Attribute (the name of the series to be displayed) and a MinionSrc:

```
<Series Label="Data Series 1">
    <MinionSrc ID="GraphSource1" Namespace="DemoNamespace"/>
</Series>
```

You must specify a Series for each expected MinionSrc. The example above has 4.

Note: Multi-Source charts can be problematic unless used with care. Each data source is an independent stream and even if the collector is run with the same interval, the traffic is UDP and not guaranteed, so it can be dropped. If the collectors feeding the Widget are all from the same Minion, I recommend using the [<Group>](#) capability – it is why it was invented.

If your data is coming from different Minions and feeding the same chart/graph then you will almost certainly see update issues. This is simply because you have separate data sources sending data over a network and they are not synchronized. As solving this issue is beyond the scope of BIFF (at this time anyhow) I recommend you coordinate the data collection into a single Minion for that Widget. Use a file share or some other mechanism to collect the desired data into a single comma separated source, or into multiple sources in a [<Group>](#), but from a single Minion.

7.8.6 LineChart

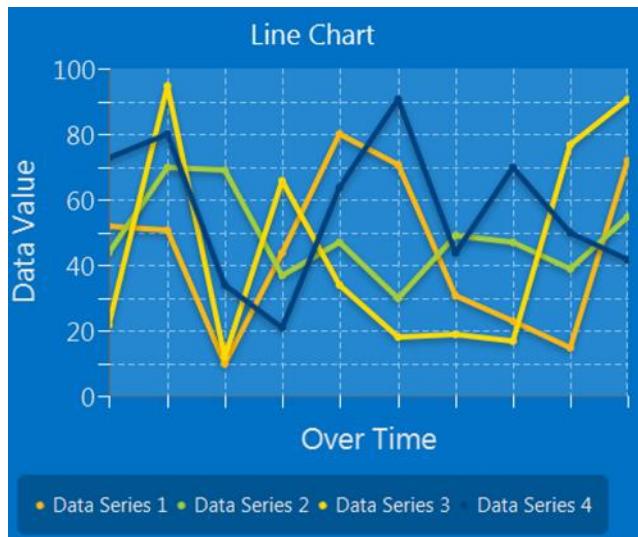


Figure 63 Line Chart

7.8.6.1 Definition File

This section discusses what the contents of a LineChart Widget definition file contains – it is pretty much identical to the other charts.

Example:

```
<Widget Type = "LineChart">
    <Style>LineChart.css</Style>
    <Animated>False</Animated>
    <yAxis MajorTickInterval="10" MinorTickInterval="5" TickLabelVisible="True"/>
    <xAxis MajorTickInterval="1" MinorTickInterval="0" TickLabelVisible="False"/>
</Widget>
```

7.8.6.1.1 < Animated >

Required

Determines if the chart will show the drawing and moving of datapoints. I usually have it off. It is a Boolean (true or false) value.

7.8.6.1.2 < xAxis >

Required

Determines look of the xAixs on the chart.

Attributes

The < xAixs > tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
MajorTickInterval	M	Numeric interval for Major Ticks on xAixs
MinorTickInterval	M	Numeric interval for Minor Ticks on xAixs
TickLabelVisible	M	Boolean – display the value on major ticks

7.8.6.1.3 < yAxis >

Required

Determines look of the yAixs on the chart.

Attributes

The < yAixs > tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
MajorTickInterval	M	Numeric interval for Major Ticks on yAixs
MinorTickInterval	M	Numeric interval for Minor Ticks on yAixs
TickLabelVisible	M	Boolean – display the value on major ticks

7.8.6.2 Application Settings

This section discusses the settings used to add a MultiSrcAreaChart in the application configuration XML file.

Example:

```
<Widget File="Chart\ChartMultiSrcLine.xml" row="1" column="1">
    <Title>Line Chart - Multisourced</Title>
    <xAxis Label="Over Time" MaxEntries="10"/>
    <yAxis Label="Data Value" MaxValue="100"/>
    <MinionSrc ID="CPU_LineChart" Namespace="DemoNamespace"/>
    <Series Label="Data Series 1"/>
    <Series Label="Data Series 2"/>
    <Series Label="Data Series 3"/>
    <Series Label="Data Series 4"/>
</Widget>
```

7.8.6.2.1 <Title>

Optional

Sets the title of the chart, shown at the top.

7.8.6.2.2 <xAxis>

Required

Defines how the xAxis should be handled. Has two attributes, Label and MaxEntries. Label is the label to display on the chart. MaxEntries specifies how many series to display before starting to scroll to the left when new data comes in.

7.8.6.2.3 <yAxis>

Required

Defines how the yAxis should be handled. Has two attributes, Label and MaxValue. Label is the label to display on the chart. MaxValue specifies the maximum value to be displayed. MinValue is optional, defaults to 0.0. Is the bottom of the chart, can be negative value.

7.8.6.2.4 <Series>

Required

The Series defines the number and name of the series data to be sent from a single <MinionSrc> as a comma separated string.

```
<Series Label="Data Series 1"/>
```

7.8.7 PieChart

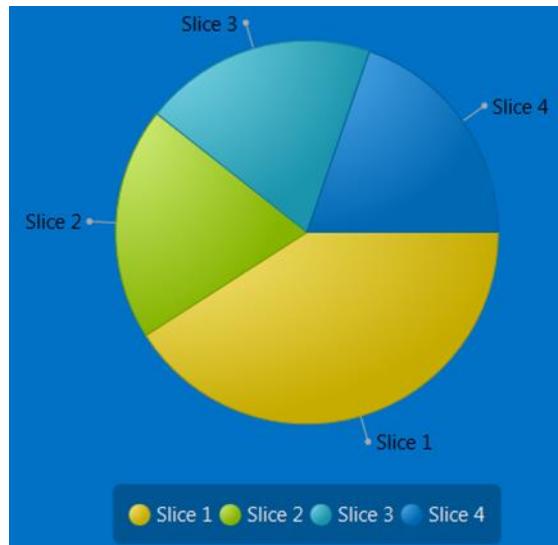


Figure 64 Pie Chart

7.8.7.1 Definition File

This section discusses what the contents of a PieChart Widget definition file contains.

Example:

```
<Widget Type = "PieChart">
    <Style>PieChart.css</Style>
</Widget>
```

Very simple definition file.

7.8.7.2 Application Settings

This section discusses the settings used to add a Pie Chart dial in the application configuration XML file.

Example:

```
<Widget File="Chart\ChartPie.xml" row="3" column="1">
    <Title>Pie Chart</Title>
    <MinionSrc ID="PieSource" Namespace="DemoNamespace"/>
    <Slice Label="Slice 1"/>
    <Slice Label="Slice 2"/>
    <Slice Label="Slice 3"/>
    <Slice Label="Slice 4"/>
</Widget>
```

7.8.7.2.1 <Title>

Optional

Sets the title of the chart, shown at the top.

7.8.7.2.2 <Series>

Required

The Series defines the number and name of the series data to be sent from a single <MinionSrc> as a comma separated string.

```
<Series Label="Slice 1"/>
```

In the above example there are 4.

7.8.8 Bar Chart


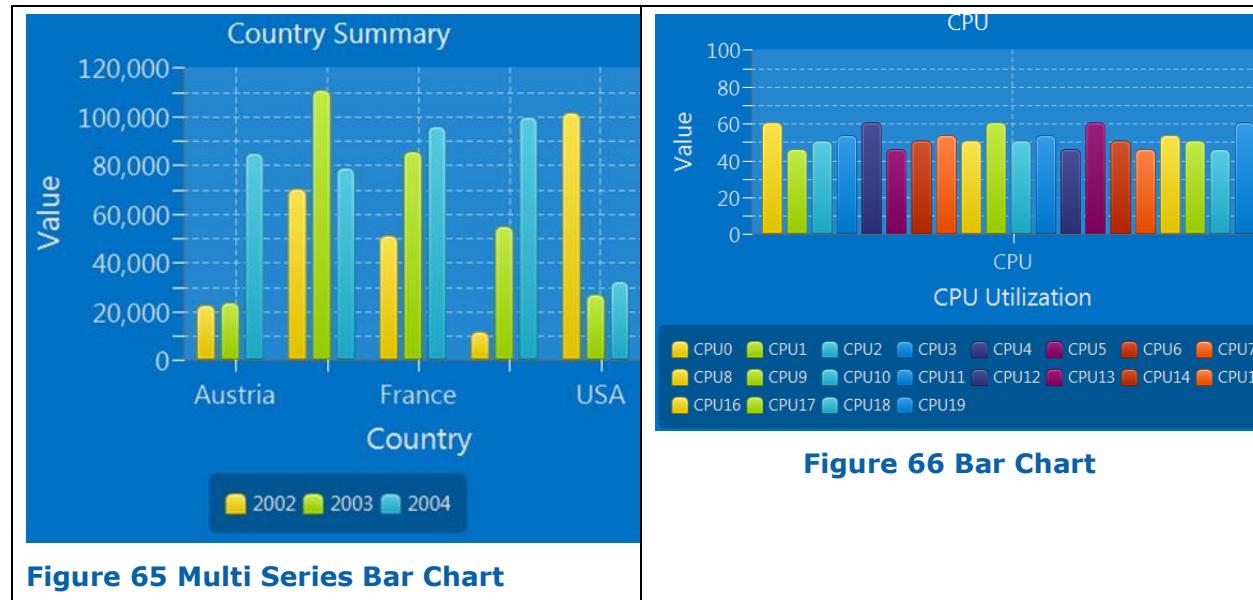


Figure 65 Multi Series Bar Chart

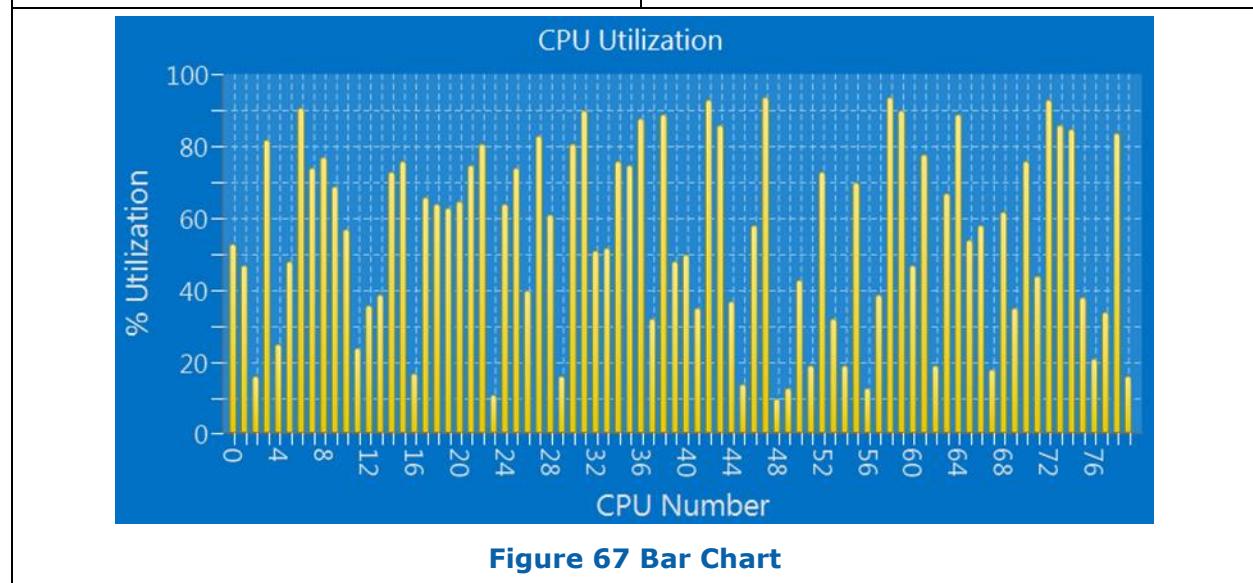

The BarChart was the last chart widget I created. As such, it works a bit differently than

the others. Rather than have multi-src and single source widgets, there is a single widget that gets instantiated differently in the application configuration xml file. The three figures above are all BarChart widgets, but declared differently.

7.8.8.1 Definition File

This section discusses what the contents of a BarChart Widget definition file contains.

Example:

```
<Widget Type = "BarChart">
    <Style>BarChart.css</Style>
    <Animated>True</Animated>
    <yAxis MajorTickInterval="10" MinorTickInterval="0" TickLabelVisible="True"/>
</Widget>
```

7.8.8.1.1 < Animated >

Required

Determines if the chart will show the drawing and moving of datapoints. I usually have it off. It is a Boolean (true or false) value.

7.8.8.1.2 < yAxis >

Required

Determines look of the yAxis on the chart.

Attributes

The < yAxis > tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
MajorTickInterval	M	Numeric interval for Major Ticks on yAxis
MinorTickInterval	M	Numeric interval for Minor Ticks on yAxis
TickLabelVisible	M	Boolean – display the value on major ticks

7.8.8.2 Application Settings

This section discusses the settings used to add a Bar Chart in the application configuration XML file.

Example1:

```
<Widget File="Chart\ChartBar.xml" row="1" column="1">
    <Title>Country Summary</Title>
    <xAxis Label="Country"/>
    <yAxis Label="Value" MaxValue="120000"/>
    <Series ID="Series1" Label="2002"/>
    <Series ID="Series2" Label="2003"/>
    <Series ID="Series3" Label="2004"/>
    <SeriesSet Title="Austria">
```

```

<MinionSrc ID="Austria02" Namespace="DemoNamespace" SeriesID="Series1"/>
<MinionSrc ID="Austria03" Namespace="DemoNamespace" SeriesID="Series2"/>
<MinionSrc ID="Austria04" Namespace="DemoNamespace" SeriesID="Series3"/>
</SeriesSet>
<SeriesSet Title="Brazil">
    <MinionSrc ID="Brazil02" Namespace="DemoNamespace" SeriesID="Series1"/>
    <MinionSrc ID="Brazil03" Namespace="DemoNamespace" SeriesID="Series2"/>
    <MinionSrc ID="Brazil04" Namespace="DemoNamespace" SeriesID="Series3"/>
</SeriesSet>
<SeriesSet Title="France">
    <MinionSrc ID="France02" Namespace="DemoNamespace" SeriesID="Series1"/>
    <MinionSrc ID="France03" Namespace="DemoNamespace" SeriesID="Series2"/>
    <MinionSrc ID="France04" Namespace="DemoNamespace" SeriesID="Series3"/>
</SeriesSet>
<SeriesSet Title="Italy">
    <MinionSrc ID="Italy02" Namespace="DemoNamespace" SeriesID="Series1"/>
    <MinionSrc ID="Italy03" Namespace="DemoNamespace" SeriesID="Series2"/>
    <MinionSrc ID="Italy04" Namespace="DemoNamespace" SeriesID="Series3"/>
</SeriesSet>
<SeriesSet Title="USA">
    <MinionSrc ID="USA02" Namespace="DemoNamespace" SeriesID="Series1"/>
    <MinionSrc ID="USA03" Namespace="DemoNamespace" SeriesID="Series2"/>
    <MinionSrc ID="USA04" Namespace="DemoNamespace" SeriesID="Series3"/>
</SeriesSet>
</Widget>

```

Example2:

```

<Widget File="BarChart.xml" row="1" column="2">
    <Title> CPU Utilization</Title>
    <xAxis Label="CPU Number" Count="80"/>
    <yAxis Label="% Utilization" MaxValue="100"/>
    <MinionSrc ID="CPU_LIST" Namespace="DemoNamespace"/>
    <StyleOverride>
        <Item>-fx-legend-visible:false;-fx-bar-gap:1;-fx-category-gap:1;</Item>
    </StyleOverride>
</Widget>

```

7.8.8.2.1 <Title>

Optional

Sets the title of the chart, shown at the top.

7.8.8.2.2 <xAxis>

Required

Defines how the *xAxis* should be handled. Has two attributes, *Label* and *MaxEntries*. *Label* is the label to display on the chart. *MaxEntries* specifies how many bars to display if you don't specify any series, as in Exampl3, which matches Figure 67.

7.8.8.2.3 <yAxis>

Required

Defines how the yAxis should be handled. Has two attributes, Label and MaxValue. Label is the label to display on the chart. MaxValue specifies the maximum value to be displayed.

7.8.8.2.4 <Series>

Optional

The Series defines the Source of the data for a series. A Series has a Label Attribute (the name of the series to be displayed, which is optional) and an ID:

```
<Series ID="Series1" Label="2002"/>
```

7.8.8.2.5 <SeriesSet>

Series set is where you can make a grouping of series, such as in Figure 65. Each Series Set has a Title Attribute that is the title of the Series. It also has a <MinionSrc> for each dataset in that series, with each <MinionSrc> having a new Attribute of SeriesID, that corresponds to the ID in the <Series> tag described above.

Example:

```
<Series ID="Series1" Label="2002"/>
<Series ID="Series2" Label="2003"/>
<Series ID="Series3" Label="2004"/>
<SeriesSet Title="Austria">
    <MinionSrc ID="Austria02" Namespace="DemoNamespace" SeriesID="Series1"/>
    <MinionSrc ID="Austria03" Namespace="DemoNamespace" SeriesID="Series2"/>
    <MinionSrc ID="Austria04" Namespace="DemoNamespace" SeriesID="Series3"/>
</SeriesSet>
```

You can define a Single SeriesSet as in Figure 66 or many as in Figure 65.

Or you can do as in Example3 above and define no series, but define in the xAxis how many datapoints you expect (with a comma separated list of values coming from your Minion Collector). Very useful for many cores ☺

7.8.9 StackedBarChart

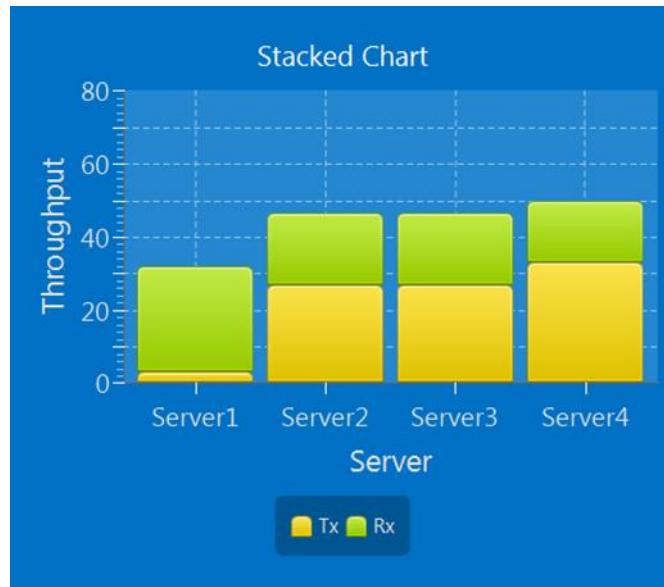


Figure 68 StackedBarChart

7.8.9.1 Definition File

This section discusses what the contents of a StackedBarChart Widget definition file contains.

Example:

```
<Widget Type = "StackedBarChart">
    <Style>ChartStackedBar.css</Style>
    <Animated>True</Animated>
    <yAxis MajorTickInterval="10" MinorTickInterval="5" TickLabelVisible="True"/>
</Widget>
```

Very simple definition file.

7.8.9.1.1 < Animated >

Required

Determines if the chart will show the drawing and moving of datapoints. I usually have it off. It is a Boolean (true or false) value.

7.8.9.1.2 < yAxis >

Required

Determines look of the yAxis on the chart.

Attributes

The < yAxis > tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
MajorTickInterval	M	Numeric interval for Major Ticks on yAxis
MinorTickInterval	M	Numeric interval for Minor Ticks on yAxis
TickLabelVisible	M	Boolean – display the value on major ticks

7.8.9.2 Application Settings

This section discusses the settings used to add a StackedBarChart in the application configuration XML file.

Example:

```
<Widget File="Chart\ChartStackedBar.xml" row="1" column="1">
    <Title>Stacked Chart</Title>
    <xAxis Label="Server"/>
    <yAxis Label="Throughput" MaxValue="80"/>
    <Series ID="Series1" Label="Tx"/>
    <Series ID="Series2" Label="Rx"/>
    <SeriesSet Title="Server1">
        <MinionSrc ID="StackedTx_Server1" Namespace="DemoNamespace" SeriesID="Series1"/>
        <MinionSrc ID="StackedRx_Server1" Namespace="DemoNamespace" SeriesID="Series2"/>
    </SeriesSet>
    <SeriesSet Title="Server2">
        <MinionSrc ID="StackedTx_Server2" Namespace="DemoNamespace" SeriesID="Series1"/>
        <MinionSrc ID="StackedRx_Server2" Namespace="DemoNamespace" SeriesID="Series2"/>
    </SeriesSet>
    <SeriesSet Title="Server3">
        <MinionSrc ID="StackedTx_Server3" Namespace="DemoNamespace" SeriesID="Series1"/>
        <MinionSrc ID="StackedRx_Server3" Namespace="DemoNamespace" SeriesID="Series2"/>
    </SeriesSet>
    <SeriesSet Title="Server4">
        <MinionSrc ID="StackedTx_Server4" Namespace="DemoNamespace" SeriesID="Series1"/>
        <MinionSrc ID="StackedRx_Server4" Namespace="DemoNamespace" SeriesID="Series2"/>
    </SeriesSet>
</Widget>
```

7.8.9.2.1 <Title>

Optional

Sets the title of the chart, shown at the top.

Optional

The Series defines the Source of the data for a series. A Series has a Label Attribute (the name of the series to be displayed, which is optional) and an ID:

```
<Series ID="Series1" Label="2002"/>
```

7.8.9.2.2 <SeriesSet>

Series set is where you can make a grouping of series, such as in Figure 65. Each Series Set has a Title Attribute that is the title of the Series. It also has a <MinionSrc> for each dataset in that series, with each <MinionSrc> having a new Attribute of SeriesID, that corresponds to the ID in the <Series> tag described above.

Example:

```
<SeriesSet>
  <Series ID="Series1" Label="Tx"/>
  <Series ID="Series2" Label="Rx"/>
  <SeriesSet Title="Server1">
    <MinionSrc ID="StackedTx_Server1" Namespace="DemoNamespace" SeriesID="Series1"/>
    <MinionSrc ID="StackedRx_Server1" Namespace="DemoNamespace" SeriesID="Series2"/>
  </SeriesSet>
```

Just as with the BarGraph widget, you can define a single or multiple <SeriesSet>s.

Note: Multi-Source charts can be problematic unless used with care. Each data source is an independent stream and even if the collector is run with the same interval, the traffic is UDP and not guaranteed, so it can be dropped. If the collectors feeding the Widget are all from the same Minion, I recommend using the <Group> capability – it is why it was invented.

If your data is coming from different Minions and feeding the same chart/graph then you will almost certainly see update issues. This is simply because you have separate data sources sending data over a network and they are not synchronized. As solving this issue is beyond the scope of BIFF (at this time anyhow) I recommend you coordinate the data collection into a single Minion for that Widget. Use a file share or some other mechanism to collect the desired data into a single comma separated source, or into multiple sources in a <Group>, but from a single Minion.

7.8.10 TableChart Chart

Column1	Column2	3	Column4	Column5	Column6
Row 1	Fixed Value	10.00,87.00,55.00,46.00,8...	35.00,61.00,43.00,83.00,3...	91939.0	91049
Row 2	91939	68	91939.00	91939.0	91939

Figure 69 TableChart Widget

7.8.10.1 Definition File

This section discusses what the contents of a TableChart Widget definition file contains.

Example:

```
<Widget Type = "TableChart">
  <Style>ChartTable.css</Style>
</Widget>
```

Very simple definition file.

7.8.10.2 Application Settings

This section discusses the settings used to add a TableChart in the application configuration XML file.

Example:

```
<Widget file="chart\ChartTable.xml" row="${NextRowAlias}"  
Column="${CurrentColumnAlias}" Width="50%" Height="20%" Align="S">  
    <Columns>  
        <Column Text="Column1" Width="16.5%" Decimals="3"/>  
        <Column Text="Column2" Width="16.5%"/>  
        <Column Text="3" Width="16.5%"/>  
        <Column Text="Column4" Decimals="2" Width="16.5%"/>  
        <Column Text="Column5" Decimals="1" Width="16.5%"/>  
        <Column Text="Column6" Width="16.5%"/>  
    </Columns>  
    <Rows>  
        <Row>  
            <Column>Row 1</Column>  
            <Column>Fixed Value</Column>  
            <Column ID="CPU_LIST" Namespace="DemoNamespace">subC1</Column>  
            <Column ID="CPU_LIST2" Namespace="DemoNamespace">Sub 2</Column>  
            <Column ID="USA02" Namespace="DemoNamespace"/>  
            <Column ID="USA03" Namespace="DemoNamespace"/>  
        </Row>  
        <Row>  
            <Column>Row 2</Column>  
            <Column ID="USA02" Namespace="DemoNamespace">1</Column>  
            <Column ID="CPU" Namespace="DemoNamespace">3 what the hell</Column>  
            <Column ID="USA02" Namespace="DemoNamespace">4</Column>  
            <Column ID="USA02" Namespace="DemoNamespace">5</Column>  
            <Column ID="USA02" Namespace="DemoNamespace">Col 6</Column>  
        </Row>  
    </Rows>  
    <Decimals>0</Decimals>  
</Widget>
```

For this widget, you define what the columns are, which includes the title for each column, the optional width and decimals for all items in that column.

Then you define the rows, one at a time. Each row must define the exact number of columns as was defined in the <Columns> section. Each row Column can have a Namespace+ID and a default text.

7.8.10.2.1 <Columns>/<Column>

Defines the columns that appear at top of table. Contains a <Column> Tag for each column to be in the table.

Attribute	M/O	Comments
Text	M	Text to appear for the column name
Width	O	# of pixels for the width of the column. Can also specify the width as the percentage of the width of the grid itself by specifying ##%
Decimals	O	The Number of decimal places allowed for numeric data for this column. Overrides the optional Widget <Decimals> option for this specific column.

7.8.10.2.1 <Rows>/<Row><Column>

All Rows must be within the <Rows> tag. Each Row is within an individual <Row> tag, and each column (cell) within a row is defined by the <Column> tag.

Any text between the <Column> </Column> tag will be displayed in the cell at startup.

Attribute	M/O	Comments
ID + Namespace	O	If you do not specify the ID and Namespace, then the default text will never change. If you do specify then, then the contents of the cell will update as the data associated with the Namespace + ID comes in.
DataIndex	O	If data coming in is in a list, you can specify which parts of the list you want. See previous sections of document.
Separator	O	If data coming in is in a list and you want to break it up, you can specify what the separator token is, the default is a comma.

7.9 Images/Video/Sound

7.9.1 StaticImage

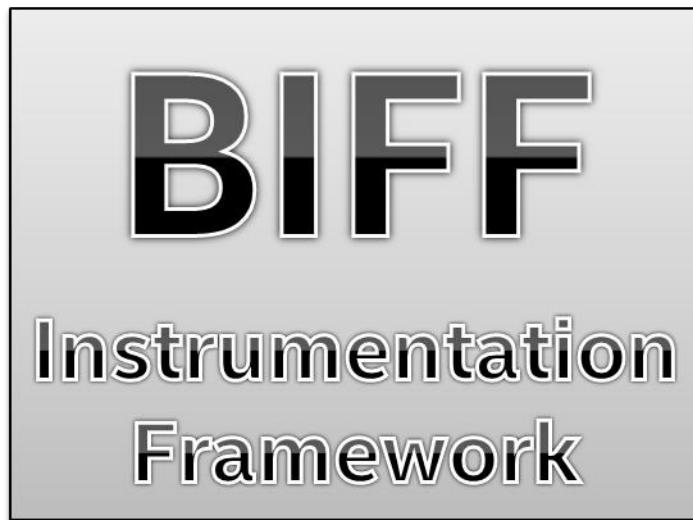


Figure 70 Static Image

A static image is just that. You can place an image (.bmp,.jpg,.gif,.tiff, etc.) in a grid.

7.9.1.1 Definition File

This section discusses what the contents of a StaticImage Widget definition file contains.

Example:

```
<Widget Type = "StaticImage">
    <PreserveRatio>True</PreserveRatio>
    <ScaleToFit>True</ScaleToFit>
</Widget>
```

7.9.1.1.1 < PreserveRatio >

Optional

Value is either True or False. If True, the image will grow in change size in both height and width if you specify only one value when placing the Widget.

7.9.1.1.2 < ScaleToFit >

Optional

TBD - Experimental

7.9.1.2 Application Settings

This section discusses the settings used to add a StaticImage in the application configuration XML file.

Example:

```

<Widget File="Image\ImageScale.xml" row="1" column="1" >
    <Source>Demo\Images\ajax_loader_blue_256.gif</Source>
    <ClickThroughTransparent>False</ClickThroughTransparent>
</Widget>

```

The Source Tag points to the image to load. Pretty easy.

The optional <ClickThroughTransparent> tag takes either True or False, and defaults to True. This is used if you want to put up an image that you assign a task to and ignore clicks to any area of the image that is transparent.

7.9.2 DynamicImage

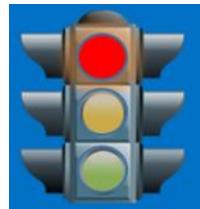


Figure 71 Dynamic Image

The DynamicImage widget allows you to control which image to display at a location depending on a string that comes from a Minion collector.

A good example is when you go start a test, the collector (could be a file collector reading status from a file) sends an ID to make the image one that indicates test is starting. Then when the test is finished, the string ID associated with the 'finished test' image is sent and the image is changed.

In addition to the ID of the specific image you wish to display, you can also send 'Next' or 'Previous', and the next or previous image in the list will be displayed. When using 'Next' or 'Previous' the list is considered to be circular.

7.9.2.1 Definition File

This section discusses what the contents of a DynamicImage Widget definition file contains.

Example:

```

<Widget Type = "DynamicImage">
    <PreserveRatio>True</PreserveRatio>
    <ScaleToFit>False</ScaleToFit>
</Widget>

```

7.9.2.1.1 < PreserveRatio >

Optional

Value is either True or False. If True, the image will grow in change size in both height and width if you specify only one value when placing the Widget.

7.9.2.1.2 < ScaleToFit >

Optional

TBD - Experimental

7.9.2.2 Application Settings

This section discusses the settings used to add a DynamicImage in the application configuration XML file.

Example:

```
<Widget File="Image\DynamicImage.xml" row="3" column="1" Task="ClickedOnAnyButRedTask">
    <MinionSrc ID="TrafficLight" Namespace="DemoNamespace"/>
    <Image Source="Demo\Images\yellowlight.png" ID="2"/>
    <Image Source="Demo\Images\greenlight.png" ID="1"/>
    <Image Source="Demo\Images\redlight.png" ID="3" Task="ClickedOnRedTask"/>
    <Initial ID="1"/>
    <Size>
        <Minimum Height="250"/>
    </Size>
</Widget>
```

The widget has three unique Tags, Image and Initial. Image takes as Attributes a Source, that points to a file containing the image and an ID. The ID is a string that the collector (identified by the MinionSrc) sends to change the image. You may also specify a task to be run for all images if clicked on, by specifying a task at the <Widget> level. Additionally you can specify a task for individual images by adding a Task attribute for each Image Source tag.

Initial indicates what image to display at startup.

The Optional <ClickThroughTransparent> tag takes either True or False, and defaults to True. This is used if you want to put up an image that you assign a task to and ignore clicks to any area of the image that is transparent. This is the same as [StaticImage](#).

7.9.2.3 AutoAdvance

You may wish to automatically advance through all of the images within a DynamicImage rather than issuing a <Peekaboo> "next" repeatedly with say a task, you can configure it for <AutoAdvance>.

```
<Widget File="Image\DynamicImage.xml" row="3" column="1" >
    <AutoadvanceFrequency='1000' Loop='True' />
    <MinionSrc ID="TrafficLight" Namespace="DemoNamespace"/>
    <Image Source="Demo\Images\yellowlight.png" ID="2"/>
    <Image Source="Demo\Images\greenlight.png" ID="1"/>
    <Image Source="Demo\Images\redlight.png" ID="3"/>
    <Initial ID="1"/>
    <Size>
        <Minimum Height="250"/>
    </Size>
</Widget>
```

<AutoAdvance> takes two attributes – the frequency in milliseconds of how often to advance to the next image, and Loop boolean attribute. If True then after going through the entire list of images, it will begin again with the first one.

If you pause a widget using Peekaboo, autoadvance will stop. Issuing a ‘resume’ will resume autoadvance.

7.9.2.4 <Transition>

You may now add [transitions](#) between the images, just as you can with <DynamicGrids>. The syntax is the same, you just use it on an <Image> rather than GridFile:

```
<Image Source="$(AppDir)\Media\Images\Other\Optimizations.png" ID="Optimizations">
    <Transition Duration="1750">CUBE</Transition>
</Image>
```

7.9.3 VideoPlayer

The VideoPlayer widget allows you play video files. Formats include MP4 and FLV. WMV is not supported.

NOTE: you must have the ability to play videos installed in your OS, as the VideoPlayer widget uses that underlying technology.

The most likely used for a VideoPlayer widget is to have a tab where you can have different videos be selected to talk about different technologies or example. However there is nothing to prevent you from having a VideoPlayer widget the ‘pops’ up to show a little video indicating that your test is running, or finished etc.

The VideoPlayer, using a mechanism similar <Peekaboo> (using the <PlaybackControl> tag) provides the ability to Start, Stop and Pause a video. Additionally you can specify a playback volume and seek to a location in the video.

The VideoPlayer widget is very similar to the [DynamicImage](#) Widget, where you specify a list of things to be displayed and an ID for each of them, then the incoming <MinionSrc> data would specify which ID to display.

In addition to the ID of the specific video you wish to display, you can also send ‘Next’ or ‘Previous’, and the next or previous video in the list will be displayed. When using ‘Next’ or ‘Previous’ the list is considered to be circular.

7.9.3.1 Supported File Types:

Java doesn’t support all video types. See the Java support for the list of supported types:

<http://docs.oracle.com/javafx/2/api/javafx/scene/media/package-summary.html#SupportedMediaTypes>

7.9.3.2 Definition File

This section discusses what the contents of a VideoPlayer Widget definition file contains.

Example:

```
<Widget Type = "VideoPlayer">
    <AutoStart>True</AutoStart>
```

```

<InitialVolume>50</InitialVolume>
<Repeat Mode="Single">False</Repeat>
<PreserveRatio>True</PreserveRatio>
</Widget>

```

7.9.3.2.1 <**AutoStart**>

Optional

Value is either True or False. If True, the video will begin as soon as selected/loaded – which could be when your app starts.

7.9.3.2.2 <**InitialVolume**>

Optional

Sets the initial volume level when the VideoPlayer starts. Expressed in range of 0 to 100.

7.9.3.2.3 <**Repeat**>

Optional

Allows the video playing to be automatically repeated or not.

The Mode attribute can be either “Single” (default mode), which, if <Repeat> is True, would repeat the current video over and over. Or it could be “LoopList”, in which case if there is a list of video files, it will cycle through them repeatedly.

7.9.3.2.4 <**PreserveRatio**>

Optional

Value is either True or False. If True, the video will grow in change size in both height and width if you specify only one value when placing the Widget.

NOTE: This is currently experimental and may not work

7.9.3.3 Application Settings

This section discusses the settings used to add a VideoPlayer in the application configuration XML file.

Note: Unlike most other widgets, the <Size> tags will be IGNORED for a video widget. You can specify the Height and Width attributes however.

Example:

```

<Widget File="Media\VideoPlayer.xml" row="3" column="1" >
    <Video Source="Demo\Media\barsandtone.flv" ID="Video_1"/>
    <Video Source="Demo\media\how2.mp4" ID="Video_2" Task="NormalTask"/>
    <Video Source="Demo\media\Sintel.mp4" ID="Video_3">
        <Task Marker='1500'>MyTask</Task>
        <Task Marker="50%">MyOtherTask</Task>
    </Video>
    <Video Source="Demo\Media\20051210-w50s.flv" ID="Video_4"/>
        <Initial ID="Video_3"/>
        <PlaybackControl ID="Video.PlaybackControl.ID"
Namespace="Video.PlaypackControl.NS"/>
        <MinionSrc ID="Vid_ID" Namespace="Vid_NS"/>

```

```

<AutoStart>False</AutoStart>
<Repeat Mode="Single">True</Repeat>
</Widget>

```

7.9.3.3.1 <**MinionSrc**>

Optional

The expected incoming data would get a string indicating the ID of the video to load and automatically play if <AutoStart> is configured for doing so.

7.9.3.3.2 <**Video**>

Optional

You should have at least one of these ☺. Specifies the video file to play via the Source attribute, and the ID of that video.

7.9.3.3.3 <**Task**>

You can specify a standard task to be run if you click on the video with the Task= attribute, or you can specify one or more tasks to be run at different times during the playback. If you specify more than one task to be run at the same time, only the last one specified will be run.

When specify a task, you must specify the Marker, which is the location within the playback you want the task to occur, and the task itself, such as below:

```

<Video Source="Demo\media\Sintel.mp4" ID="Video_3">
    <Task Marker='1500'>MyTask</Task>
    <Task Marker="50%">MyOtherTask</Task>
</Video>

```

The Task specified is the same as all other tasks. The Marker indicates where in the playback to perform the Task. It can be any of the following:

Attribute	Description / Usage
Begin	Start of playback
End	End of Playback
Milliseconds	How many milliseconds into playback to run task
Percentage	At what percentage of playback to run the task

Note: The playback must occur over these points in order to initiate the task. If you 'skip' or jump past using the <PlaybackControl> a Marker, the associated Task will not be run.

Optional

You should have

7.9.3.3.4 <**Initial**>

Optional

The ID attribute specifies the ID of the video (as defined in the <Video> tag) to be the first

loaded.

7.9.3.3.5 <PlaybackControl>

Optional

This is a special tag. You specify a namespace and ID used specifically for controlling the widget. With it you can Play,Pause,Stop, control volume and seek. The supported data format is:

Attribute	Description / Usage
"Play"	Plays the video / resumes from pause
"Stop"	Stops the video and rewinds to the beginning
"Pause"	Pauses playback
"JumpTo:###"	Jumps to a location in the video. The ### indicates the percentage of the video to skip to. So a string of "JumpTo: 25" jumps to the point in the video equal to 25% of the total playback time
"Volume:###"	Sets the playback volume. ### indicates a % of the maximum volume. So a string of "Volume: 50" sets the volume at 50% of maximum

7.9.3.3.6 <AutoStart>

Optional

Value is either True or False. If True, the video will begin as soon as selected/loaded – which could be when your app starts.

7.9.3.3.7 <Repeat>

Optional

Allows the video playing to be automatically repeated or not.

The Mode attribute can be either "Single" (default mode), which, if <Repeat> is True, would repeat the current video over and over. Or it could be "LoopList", in which case if there is a list of video files, it will cycle through them repeatedly.

7.9.4 AudioPlayer

The AudioPlayer widget allows you play Audio files. Formats include MP3 and others.

NOTE: you must have the ability to play videos installed in your OS, as the AudioPlayer widget uses that underlying technology.

There is no visual component to the AudioPlayer.

You can use this to play a short audio clip to indicate the success or failure of a test, or just listen to your favorite tunes!

The AudioPlayer, using a mechanism similar <Peekaboo> (using the <PlaybackControl> tag) provides the ability to Start,Stop and Pause a video. Additionally you can specify a playback volume and seek to a location in the sound clip.

The AudioPlayer widget is very similar to the [DynamicImage](#) Widget, where you specify a list of things to be displayed and an ID for each of them, and then the incoming <MinionSrc> data would specify which ID to play.

In addition to the ID of the specific audio file you wish to play, you can also send 'Next' or 'Previous', and the next or previous audio file in the list will be used. When using 'Next' or 'Previous' the list is considered to be circular.

7.9.4.1 Supported Audio File Types:

Java doesn't support all audio types. See the Java support for the list of supported types:

<http://docs.oracle.com/javafx/2/api/javafx/scene/media/package-summary.html#SupportedMediaTypes>

7.9.4.2 Definition File

This section discusses what the contents of a AudioPlayer Widget definition file contains.

Example:

```
<Widget Type = "AudioPlayer">
    <AutoStart>True</AutoStart>
    <InitialVolume>50</InitialVolume>
    <Repeat Mode="Single">False</Repeat>
</Widget>
```

7.9.4.2.1 <AutoStart>

Optional

Value is either True or False. If True, the audio will begin as soon as selected/loaded – which could be when your app starts.

7.9.4.2.2 <InitialVolume>

Optional

Sets the initial volume level when the AudioPlayer starts. Expressed in range of 0 to 100.

7.9.4.2.3 <Repeat>

Optional

Allows the audio playing to be automatically repeated or not.

The Mode attribute can be either "Single" (default mode), which, if <Repeat> is True, would repeat the current audio over and over. Or it could be "LoopList", in which case if there is a list of video files, it will cycle through them repeatedly.

7.9.4.3 Application Settings

This section discusses the settings used to add a AudioPlayer in the application configuration XML file.

Note: All size components, are ignored.

Example:

```
<Widget File="Media\AudioPlayer.xml" row="3" column="1" >
```

```

<Audio Source="Demo\Media\01 - Heartbreaker.mp3" ID="Audio_1"/>
<Audio Source="Demo\Media\song.mp3" ID="Audio_2"/>
<Audio Source="Demo\Media\02 - We Live For Love.mp3" ID="Audio_3"/>
<Audio Source="Demo\Media\04 - Hell Is For Children.mp3" ID="Audio_4"/>
<Audio Source="Demo\Media\03 - Hit Me With Your Best Shot.mp3" ID="HitME"/>
<Repeat Mode="LoopList">True</Repeat>
<Initial ID="HitME"/>
<PlaybackControl ID="Audio.PlaybackControl.ID" Namespace="Audio.PlaypackControl.NS"/>
    <MinionSrc ID="Audio_ID" Namespace="Audio_NS"/>
    <AutoStart>False</AutoStart>
    <Repeat Mode="Single">True</Repeat>
</Widget>

```

7.9.4.3.1 <**MinionSrc**>

Optional

The expected incoming data would get a string indicating the ID of the audio to load and automatically play if <AutoStart> is configured for doing so.

7.9.4.3.2 <**Audio**>

Optional

You should have at least one of these ☺. Specifies the audio file to play via the Source attribute, and the ID of that audio file.

7.9.4.3.3 <**Task**>

You can specify one or more tasks to be run at different times during the playback. If you specify more than one task to be run at the same time, only the last one specified will be run.

When specify a task, you must specify the Marker, which is the location within the playback you want the task to occur, and the task itself, such as below:

```

<Audio Source="Demo\media\DingDong.mp3" ID="Audio_3">
    <Task Marker='1500'>MyTask</Task>
    <Task Marker="50%">MyOtherTask</Task>
</Audio>

```

The [Task](#) specified is the same as all other tasks. The Marker indicates where in the playback to perform the Task. It can be any of the following:

Attribute	Description / Usage
Begin	Start of Playback
End	End of Playback
Milliseconds	How many milliseconds into playback to run task
Percentage	At what percentage of playback to run the task

Note: The playback must occur over these points in order to initiate the task. If you 'skip'

or jump past using the <PlaybackControl> a Marker, the associated Task will not be run.

Note: There seems to be an issue with trying to run a Task in the last few hundred milliseconds of an audio file. For this reason if any specified Task is less than 300ms from the end of the media (including specifying 'End') then the task Marker will be set at the end – 300ms. In this case if you have a Marker at 'end' and a Marker at say 100ms before the end, they will end up at the same Marker location and only the last one specified will be run.

7.9.4.3.4 <Initial>

Optional

The ID attribute specifies the ID of the audio file (as defined in the <Audio> tag) to be the first loaded.

7.9.4.3.5 <PlaybackControl>

Optional

This is a special tag. You specify a namespace and ID used specifically for controlling the widget. With it you can Play, Pause, Stop, control volume and seek. The supported data format is:

Attribute	Description / Usage
"Play"	Plays the video / resumes from pause
"Stop"	Stops the video and rewinds to the beginning
"Pause"	Pauses playback
"JumpTo:###"	Jumps to a location in the audio file. The ### indicates the percentage of the video to skip to. So a string of "JumpTo: 25" jumps to the point in the video equal to 25% of the total playback time
"Volume:###"	Sets the playback volume. ### indicates a % of the maximum volume. So a string of "Volume: 50" sets the volume at 50% of maximum

7.9.4.3.6 <AutoStart>

Optional

Value is either True or False. If True, the audio will begin as soon as selected/loaded – which could be when your app starts.

7.9.4.3.7 <Repeat>

Optional

Allows the video playing to be automatically repeated or not.

The Mode attribute can be either "Single" (default mode), which, if <Repeat> is True, would repeat the current audio over and over. Or it could be "LoopList", in which case if there is a list of audio files, it will cycle through them repeatedly.

7.10 Text Display Widgets

7.10.1 Text

The Text widget allows you to place text in anyplace. This text can be associated with a [<MinionSrc>](#) and therefore change, or it can be static and never change (by not putting a [<MinionSrc>](#) when you insert the Widget).

7.10.1.1 Definition File

This section discusses what the contents of a TextWidget definition file contains.

Example:

```
<Widget Type="Text">
    <Style ID="default_text">Text.css</Style>
    <ScaleToShape>False</ScaleToShape>
</Widget>
```

Note: ScaleToShape is an experimental setting at this time.

7.10.1.2 Application Settings

This section discusses the settings used to add a Text widget in the application configuration XML file.

Example:

```
<Widget File="Text\Text.xml" row="0" column="0" colSpan="3">
    <InitialValue> Various Indicator and Progress Widgets</InitialValue>
    <StyleOverride ID="Title"/>
</Widget>
```

The optional [<InitialValue>](#) tag is used to provide the text to display at startup. If you don't specify a [<MinionSrc>](#), then this is the only text that will be displayed for this widget.

7.10.1.2.1 [<Format>](#)

You can modify how a text string is displayed by specifying a type and even a suffix string to be added. The types supported are:

- Number (Adds commas)
- Percent (Adds commas and % sign)
- Money (Adds commas and \$)

Example:

```
<Widget File="Text.xml" row="0" column="0" colSpan="3">
    <InitialValue>10000 </InitialValue>
    <Format Type="Number" />
</Widget>
```

In addition to the Type attribute, you can specify a 'Suffix' attribute of the Format tag. Whatever string you specify will be added to the string displayed.

7.10.2 TextBox

The TextBox widget is a listbox that will grow on every data point sent to it.

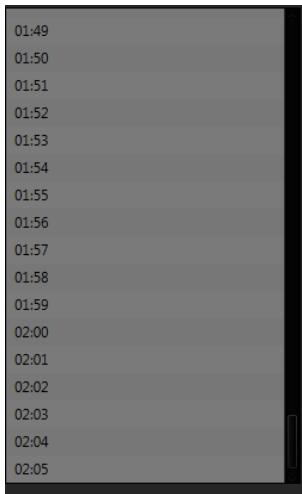


Figure 72 TextBox Widget

7.10.2.1 Definition File

This section discusses what the contents of a TextBox Widget definition file contains.

Example:

```
<Widget Type = "ListBoxText">
    <Style ID="default">ListBoxText.css</Style>
</Widget>
```

7.10.2.2 Application Settings

This section discusses the settings used to add a TextBox widget in the application configuration XML file.

Example:

```
<Widget File="Text\ListBoxText.xml" row="1" Column="1">
    <MinionSrc Namespace="MarvinLocalNamespace" ID="RuntimeFormatted"/>
    <InitialValue>TestData TestData TestData TestData</InitialValue>
</Widget>
```

The optional <InitialValue> tag is used to provide an initial entry in the listbox.

7.10.3 Scalable Vector Graphic Widget (SVG)

The SVG widget is an extension of the Text widget, with the same settings in .XML. The Application settings however takes a <Shape> tag in which you specify a SVG (Scalable Vector Graphic) shape for the widget.

7.10.3.1 Definition File

This section discusses what the contents of a TextWidget definition file contains.

Example:

```
<Widget File="SVG/ScalableVectorGraphic.xml" row="0" column="0">
    <Shape>M 0 0 h 100 v -20 h -100 z </Shape>
    <InitialValue>SVG Text</InitialValue>
</Widget>
```

7.10.4 SteelLCD



Figure 73 LCD Widget

7.10.4.1 Definition File

This section discusses what the contents of a SteelLCD definition file contains.

Example:

```
<Widget Type = "SteelLCD">
    <Style ID="lcd-standard">lcd.css</Style>
    <Decimals>1</Decimals>
    <MinValue>0</MinValue>
    <MaxValue>1000</MaxValue>
    <UnitText>MBPS</UnitText>
    <KeepAspectRatio>True</KeepAspectRatio>
    <ShowMaxMeasuredValue>True</ShowMaxMeasuredValue>
    <ShowMinMeasuredValue>True</ShowMinMeasuredValue>
</Widget>
```

7.10.4.1.1 < Decimals >

Required

Determines how many decimal places the widet will display.

7.10.4.1.2 <MinValue>

Required

The minimum value displayed by the Widget.

7.10.4.1.3 <MaxValue>

Required

The maximum value displayed by the Widget.

7.10.4.1.4 <UnitText>

Required

The units text to be displayed in the widget. Can be overridden in application config.

7.10.4.1.5 <ShowMaxMeasuredValue>

Required

Is a Boolean value (either True or False) that determines a small dot will appear on the dial that indicates the maximum value that has been received thus far.

7.10.4.1.6 <ShowMinMeasuredValue>

Required

Is a Boolean value (either True or False) that determines a small dot will appear on the dial that indicates the minimum value that has been received thus far.

7.10.4.1.7 <KeepAspectRatio>

Optional

Is a Boolean value (either True or False) that determines if the aspect ratio the developer specified is maintained. Prevents you from specifying any ole height and width, should be a ratio of 2.75. Default is true.

With this value set, if you specify a Width of any kind for the widget, it will automatically calculate the Height.

If you do not specify a Width (preferred, minimum or maximum) but you do specify a Height, then the Width will be automatically calculated for you. If both Width and Height are specified, Width will be used and Height automatically re-calculated.

7.10.4.2 Application Settings

This section discusses the settings used to add a SteelLCD widget in the application configuration XML file.

Example:

```
<Widget File="LCD\LCD.xml" row="1" column="2" Width="400">
  <MinionSrc ID="CPU" Namespace="DemoNamespace"/>
  <UnitsOverride>%</UnitsOverride>
  <Title>CPU 0</Title>
</Widget>
```

7.10.4.2.1 <Title>

Optional

Sets the title of the LCD Panel, shown at the top.

7.10.4.2.2 <UnitsOverride>

Optional

Allows you to use a different units type text than what is defined in the widget definition file.

7.11 Web Widget

The Web widget will render HTML web pages. The MinionSrc can take as data a HTML link, or it can receive the HTML content. This allows you to via a Collector generate a detailed HTML page and then send it to Marvin without the need for a web server.

Note: If you want to send your own HTML page, the entire contents of that page needs to be wrapped in a CDATA wrapper – otherwise the XML parsers in Oscar and Marvin will try to parse the HTML data and complain because most HTML isn't properly formed XML.

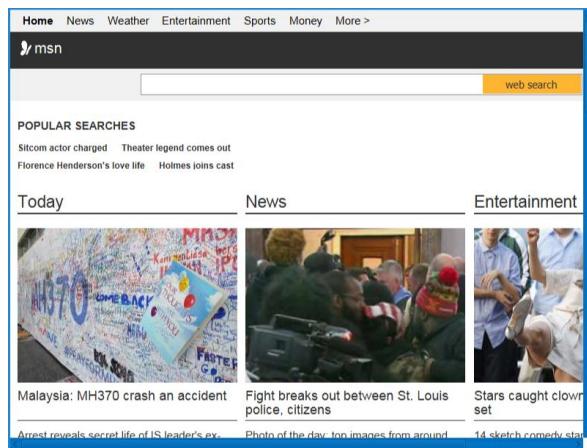


Figure 74 Web Widget

7.11.1.1 Definition File

This section discusses what the contents of a SteelLCD definition file contains.

Example:

```
<Widget Type = "Web">
    <Style ID="default">Web.css</Style>
    <ReverseContent>False</ReverseContent> <!-- fun thing, set it to true.... -->
</Widget>
```

7.11.1.2 Application Settings

This section discusses the settings used to add a SteelLCD widget in the application configuration XML file.

Example:

```
<Widget File="Web\Web.xml" Width = "800" row="0" column="0">
    <InitialValue>http://google.com</InitialValue>
    <MinionSrc="URL" Namespace="DemoNamespace"/>
</Widget>
```

You can pass a URL, or you can point to a file with a fully qualified path name by putting "file:" before the filename. (For files local to Marvin, you can specify a path relative to where Marvin is running). You may also send an entire HTML document wrapped in [CDATA](#) format.

Note: This is a fully baked Web Engine. As such if Marvin is behind a firewall or proxy, you will need to configure the proxy information. This is done via command-line parameters when you launch Marvin:

```
java -Dhttp.proxyHost=proxy.myproxy.company.com -Dhttp.proxyPort=911 -jar
BIFF.Marvin.jar
```

using the `-Dhttp.proxyHost` and `-Dhttp.proxyPort` settings.

You can also use the `http.nonProxyHosts` option (`-D http.nonProxyHosts=`) to create a list of subnets that would not use the proxy.

You may need to enable the `<IgnoreWebCerts>` option.

7.12 QuickView Widget

The QuickView widget allows you to specify a [Regular Expression \(ReqEx\)](#) for the ID, allowing you to easily display many data points from a single Namespace. The data is displayed in alternating Styles for easier viewing.

1 Quick View Ability - uses RegEx filtering							
Oto100 35.60	Bto10 3.80	10GData 6.50	Austria02 114052.00	Austria03 59468.00	Austria04 56150.00	Brazil02 34057.00	
Brazil03 74365.00	Brazil04 102787.00	BX 68.00	CombinedSource 19.00,79.00,48.00,11.00	CombinedSourceStacked 20.00,32.00	CPU 96.00	France02 €3619.00	
France03 72823.00	France04 34959.00	FromFile "My New Text"	GraphSource1 12.00	GraphSource2 39.00	GraphSource3 36.00	GraphSource4 73.00	
IOPS 24862.00	Italy02 109822.00	Italy03 28551.00	Italy04 118603.00	LCD.Override Marvin[Title]CPU - Warning[/Title]	PieSource 15.00,19.00,23.00,43.00	Progress 90.00	
RX 30.00	StackedRx_Server1 36.00	StackedRx_Server2 24.00	StackedRx_Server3 29.00	StackedRx_Server4 26.00	StackedTx_Server1 3.00	StackedTx_Server2 17.00	
StackedTx_Server3 10.00	StackedTx_Server4 32.00	TrafficLight 2	TwiddleText Greater than 75	TX 38.00	tx-allqueues.tx_bytes 2.00,2.00,2.00,1.00,2.00,2.00,2.00,1.00,2.00,1.00,1.00,1.00,2.00,2.00,1.00	USA02 13770.00	
USA03 105623.00	USA04 62593.00						

Figure 75 QuickView Widget

7.12.1.1 Definition File

This section discusses what the contents of a QuickView definition file contains.

Example:

```
<Widget Type = "QuickView">
  <RowWidth>7</RowWidth>
  <Order>Ascending</Order>
  <EvenBackgroundStyle>-fx-background-color:green</EvenBackgroundStyle>
  <EvenIDStyle>-fx-font-size: 1em</EvenIDStyle>
  <EvenDataStyle>-fx-font-size: .9em</EvenDataStyle>
  <OddBackgroundStyle>-fx-background-color:grey</OddBackgroundStyle>
  <OddIDStyle>-fx-font-size: 1em</OddIDStyle>
  <OddDataStyle>-fx-font-size: .9em</OddDataStyle>
</Widget>
```

7.12.1.1.1 < RowWidth >

Optional

The number of values to be displayed in a row before starting a new row. If not specified a default value will be used.

7.12.1.1.2 < Order >

Optional

Specifies the order the data is to be displayed. Valid options are:

- Ascending
- Descending
- None - Displayed in order received

If not specified a default value will be used.

7.12.1.1.3 < ShowID >

Optional

Boolean value. If False then the ID text is not shown. Default is True.

7.12.1.1.4 < EvenBackgroundStyle >

Optional

Background style to specify for every other datapoint displayed. Is a CSS string. If not specified a default value will be used.

7.12.1.1.5 < EvenIDStyle >

Optional

Style to specify for every other datapoint ID displayed. Is a CSS string. If not specified a default value will be used.

7.12.1.1.6 < EvenDataStyle >

Optional

Style to specify for every other datapoint value displayed. Is a CSS string. If not specified a default value will be used.

7.12.1.1.7 < OddBackgroundStyle >

Optional

Background style to specify for every other datapoint displayed. Is a CSS string. If not specified a default value will be used.

7.12.1.1.8 < OddIDStyle >

Optional

Style to specify for every other datapoint ID displayed. Is a CSS string. If not specified a default value will be used.

7.12.1.1.9 < OddDataStyle >

Optional

Style to specify for every other datapoint value displayed. Is a CSS string. If not specified a default value will be used.

7.12.1.2 Application Settings

This section discusses the settings used to add a QuickView widget in the application configuration XML file.

There is an optional <ExcludeList> tag you can use to filter out specific ID's that may be caught by your RegEx expression. Enter as many entries as you like in this list, separated by semi-colons.

Example1:

```
<Widget File="Quick\QuickView.xml" row="2" column="1" >
    <MinionSrc Namespace = "CSX-61" ID="(.*).Socket0(.*)"/>
    <ExcludeList>Core0.Socket0.sleep</ExcludeList>
</Widget>
```

This is a very easy simple example. It is the exact settings used to generate Widget shown in Figure 75.

It specifies it wants all Data from Namespace = CSX-61 that matches the RegEx pattern of "(.*).Socket0(.*)".

Example2:

```
<Widget File="Quick\QuickView.xml" row="2" column="3" >
    <MinionSrc Namespace = "CSX-61" ID="(.*).Socket1(.*)"/>
    <RowWidth>5</RowWidth>
    <Order>Descending</Order>
    <ShowID>True</ShowID>
        <EvenBackgroundStyle>-fx-background-color:blue</EvenBackgroundStyle>
        <EvenIDStyle>-fx-font-size: .7em</EvenIDStyle>
        <EvenDataStyle>-fx-font-size: .6em</EvenDataStyle>
        <OddBackgroundStyle>-fx-background-color:grey</OddBackgroundStyle>
        <OddIDStyle>-fx-font-size: .7em</OddIDStyle>
        <OddDataStyle>-fx-font-size: .6em</OddDataStyle>
</Widget>
```

This is a more complicated example where the application can override any of the settings defined in the Widget definition file.

7.12.1.2.1 < RowWidth >

Optional

The number of values to be displayed in a row before starting a new row.

7.12.1.2.2 < Order >

Optional

Specifies the order the data is to be displayed. Valid options are:

- Ascending
- Descending
- None - Displayed in order received

7.12.1.2.3 <ShowID>

Optional

Takes a value of "True" or "False". Default is True. If set to False, only the value associated with the RegEx ID will be displayed. The ID itself will not be shown.

7.12.1.2.4 < EvenBackgroundColor >

Optional

Background style to specify for every other datapoint displayed. Is a CSS string.

7.12.1.2.5 < EvenIDStyle >

Optional

Style to specify for every other datapoint ID displayed. Is a CSS string.

7.12.1.2.6 < EvenDataStyle >

Optional

Style to specify for every other datapoint value displayed. Is a CSS string.

7.12.1.2.7 < OddBackgroundColor >

Optional

Background style to specify for every other datapoint displayed. Is a CSS string.

7.12.1.2.8 < OddIDStyle >

Optional

Style to specify for every other datapoint ID displayed. Is a CSS string.

7.12.1.2.9 < OddDataStyle >

Optional

Style to specify for every other datapoint value displayed. Is a CSS string.

7.13 QuickViewLCD Widget

The QuickLCD is very similar to the QuickView Widget, allowing you to specify a [Regular Expression \(RegEx\)](#) for the ID. Has all the same settings for both application and widget definition. See the sample application for an example.

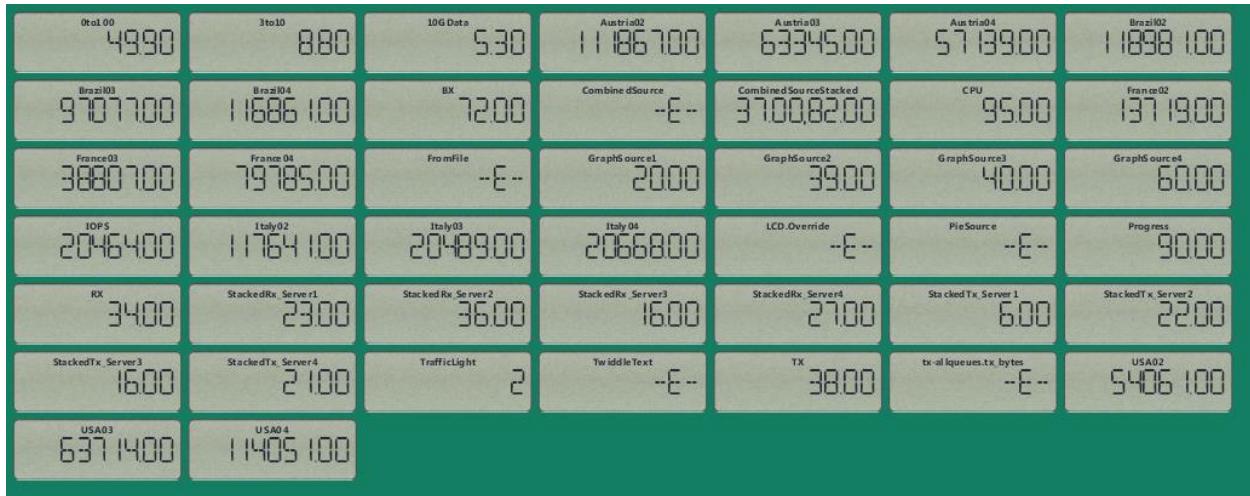


Figure 76 QuickView LCD Widget

7.14 Other

7.14.1 Button



Figure 77 Button Widget

7.14.1.1 Definition File

This section discusses what the contents of a Button definition file contains.

Example:

```
<Widget Type = "Button">
    <Style>Button.css</Style>
</Widget>
```

Not much to this one ☺

7.14.1.2 Application Settings

This section discusses the settings used to add a Button widget in the application configuration XML file.

Example:

```
<Widget File="Button\Button.xml" row="3" column="2" Task="ShowHiddenDials">
    <Title> Click me!</Title>
    <Image Height="40" Width="40">Demo/Images/PlayerControl/LiveBtn1.png</Image>
</Widget>
```

Note the Task!

7.14.1.2.1 <Title>

Optional

This is the text to be displayed in the button.

7.14.1.2.2 <Image>

Optional

You can put an image in the button. This is where you point to the image file. You may also optionally specify a Height and Width for the image as shown above. If you don't specify, the actual height and width of the image will be used.

7.14.2 ToggleButton

Identical to a Button, but it has a toggled state, and ToggleTask that can be specified in addition to the standard task.

7.14.2.1 Definition File

This section discusses what the contents of a ToggleButton definition file contains.

Example:

```
<Widget Type = "ToggleButton">
    <Style>ToggleButton.css</Style>
</Widget>
```

7.14.2.2 </Widget>Application Settings

This section discusses the settings used to add a Button widget in the application configuration XML file.

Example:

```
<Widget File="Button\ToggleButton.xml" row="3" column="2" Task="click.task"
ToggleTask="2ndTask">
    <Title> Click me!</Title>
</Widget>
```

7.14.2.2.1 <Title>

Optional

This is the text to be displayed in the ToggleButton.

7.14.2.2.2 <Image>

Optional

You can put an image in the ToggleButton. This is where you point to the image file. You may also optionally specify a Height and Width for the image as shown above. If you don't specify, the actual height and width of the image will be used.

7.14.3 MenuButton

Similar to a Button, but you specify <MenuItems> as you would under a <Menu> for the application – this includes the CreateDataPoints ability.

7.14.3.1 Definition File

This section discusses what the contents of a MenuButton definition file contains.

Example:

```
<Widget Type = "MenuButton">
    <Style>MenuButton.css</Style>
</Widget>
```

7.14.3.2 Application Settings

This section discusses the settings used to add a Button widget in the application configuration XML file.

Example:

```
<Widget file="Button/MenuButton.xml" row="0" column="$ (CurrentColumnAlias) ">
    <Title>Slide</Title>
    <MenuItem Text="Cover" Task="Slide.Cover"/>
    <MenuItem Text="Legal" Task="Slide.Legal"/>
    <MenuItem Text="Setup" Task="Slide.Setup"/>
</Widget>
```

7.14.3.2.1 Title

The Title section of the MenuButton is the same as all other widgets, except that you can specify a flag to update the title to be the text of the last selected item:

```
<Title UpdateTitleFromSelection="True">Slide</Title>
```

7.14.3.2.2 MinionSrc

You can specify a MinionSrc for the MenuButton. Doing so allows you to dynamically set the

drop down menu items if you send it a comma separated list of strings, which will become the Text for the menu items.

If you already have MenuItems specified, they will be removed and replaced with the new ones.

```
<Widget file="Button/MenuButton.xml" row="0" column="$ (CurrentColumnAlias)">
    <Title>Slide</Title>
    <MenuItem Text="Cover" Task="Slide.Cover"/>
    <MenuItem Text="Legal" Task="Slide.Legal"/>
    <MenuItem Text="Setup" Task="Slide.Setup"/>
    <MinionSrc Namespace="TestNS" ID="ButtonTest">
        <MenuItem Task="TestBtn" CreateDataPoint="[TestNS,MenuButtonTest,^Text]" />
    </MinionSrc>
</Widget>
```

In this example the MenuButton starts out with some items and tasks. If some data comes in, let's say "NIC-0,NIC-1,NIC-2" has been sent with Namesapce="TestNS" and ID="ButtonTest" then all the existing menu items will be removed and 3 new items will replace them.

They will be label NIC-0, NIC-1 and NIC-2. They will all run the task 'TestBtn'. Each will set a variable with Namespace="TestNS" and ID="MenuButtonTest" with the value being the same as the label. The TestBtn task can then use that variable to do something unique.

7.14.4 PDF_Reader Widget

NOTE: This widget has been removed for licensing contamination. Keeping in documentation in case I want to add it back in sometime in the future.

This Widget will read a PDF file and display a page at a time. Is useful if you want to convert a PPT presentation to a PDF and then you can move through the pages with tasks, or have it automatically rotate through the pages.

The PDF_Reader widget uses the very cool [OpenViewerFX](#) library to decode the PDF files. This is the free version and not as robust as an Adobe reader, so you may not see all the text show up (I think this is a font thing). The license for this is available at <https://github.com/IDRSolutions/maven-OpenViewerFX-src>

If you want to use this for PPT presentations – I recommend you save the PPT presentation as a Powerpoint Picture Presentation, then save that presentation as a PDF. This will get rid of font issues.

7.14.4.1 Definition File

This section discusses what the contents of a PDF_Reader definition file contains. Which is nothing ☺.

Example:

```
<Widget Type = "PDF_Reader">
</Widget>
```

Not much to this one ☺

7.14.4.2 Application Settings

This section discusses the settings used to add a Button widget in the application configuration XML file.

Example:

```
<Widget File="PDF.xml" row="3" column="2">
    <MinionSrc ID="PDF" Namespace="PDF"/>
    <AutoadvanceFrequency='1000' Loop='True' />
    <Source>https://www.irs.gov/pub/irs-pdf/f1040.pdf</Source>
</Widget>
```

7.14.4.2.1 <MinionSrc>

Optional

Standard MinionSrc. However instead of taking a value to display, it can take 3 possible values:

- 'Next' – moves to next page
- 'Previous' – moves to previous page
- Numeric values – moves to that page

7.14.4.2.2 <AutoAdvance>

You may wish to automatically advance through all of the pages within a PDF rather than issuing a <MinionSrc> "next" repeatedly with say a task, you can configure it for <AutoAdvance>.

<AutoAdvance> takes two attributes – the frequency in milliseconds of how often to advance to the next page, and Loop boolean attribute. If True then after going through the entire document pages, it will begin again with the first one.

7.14.5 Spacer

The spacer widget is so simple it is almost not worth explaining. It is simple, but without it, making advanced looking interfaces would be nearly impossible.

Spacers are invisible (except when [Mode=Debug](#)), or you do a [<StyleOverride>](#) to give it a color.

Since the Marvin GUI uses grids for all widget layouts, if there is nothing placed in a row or column within a grid, it will have no height or width. Sometimes you really need a blank width or height to get things to align the way you want in other columns. Use the Spacer widget for this.

Example Usage

```
<Widget File="Spacer.xml" row="0" column="1" Width="50" Height="50">
    <StyleOverride>
        <Item>-fx-background-color: white</Item>
    </StyleOverride>
</Widget>
```

Note the override ☺

7.14.6 FileWriterWidget

Experimental

This widget displays nothing, but rather writes data to a file. It takes a source, the ID can be a RegEx expression.

<File> indicates the target file. <Mode> can be either 'append' or 'overwrite'. Format can be KeyPair-ID-Value, or KeyPair-Namespace-ID-Value at this time and has an optional 'Prefix' attribute.

Example Usage

```
<Widget File="Text\File.xml" row="0" column="0">
    <MinionSrc Namespace="foo" ID=".x"/>
    <File>MyOut.txt</File>
    <Mode>Overwrite</Mode>
    <Format Prefix="MyPrefix">KeyPair-ID-Value</Format>
</Widget>
```

7.14.7 FlipPanel

Note: FlipPanels are still supported, but have a better option is DynamicGrids with Transitions.

A flip panel is a special kind of grid that can 'flip over'. Is kinda cool and has uses such as simplified data on one side and detailed on the other, or it can have speaker notes on the back.

The FlipPanel widget has a front and a back, that are actually grids and you place your widgets within the <Front> and the <Back> tags.

The FlipPanel will have a button on each side, which is of course can be styled and can be placed in 8 different possible locations. When the button is pressed, the panel will flip over. It can flip either horizontally or vertically, as configured.

Using StyleOverride you can change the background of the FlipPanel, just as with any other <Grid>.

7.14.7.1 Definition File

This section discusses what the contents of a FlipPanel definition file contains.

Example:

```
<Widget Type = "FlipPanel">
    <Style>FlipPanel.css</Style>
    <RotationDirection>Vertical</RotationDirection>
    <AnimationDuration>500</AnimationDuration>
    <FrontButton Text=">" Position="NE">
```

```

<Style>FlipPanelBtn.css</Style>
</FrontButton>
<BackButton Text="" Position="SW">
    <Style>FlipPanelBtn.css</Style>
</BackButton>
</Widget>

```

7.14.7.1.1 **<RotationDirection>**

Required

Determines which direction the panel will rotate. Valid options are Vertical and Horizontal. This can be overridden in the application configuration XML file with the **<RotationOverride>** tag.

7.14.7.1.2 **<AnimationDuration>**

Optional

Determines the animation time (in ms) it takes to perform the flip. Valid range is 100 to 2000. Default is 700.

7.14.7.1.3 **<FrontButton>**

Optional

Places a button with specified text at the specified location on the panel. Valid options are (points on a compass):

- N
- NE
- E
- SE
- S
- SW
- W
- NW

There is also an ability to specify the stylesheet associated with the button. As with all stylesheet declarations in Marvin, you can specify a stylesheet and/or and ID.

When this front button is pressed, the panel will flip the direction specified by **<RotationDirection>** to the back side.

7.14.7.1.4 **<BackButton>**

Optional

Places a button with specified text at the specified location on the panel. Valid options are (points on a compass):

- N
- NE
- E
- SE
- S
- SW

- W
- NW

There is also an ability to specify the stylesheet associated with the button. As with all stylesheet declarations in Marvin, you can specify a stylesheet and/or and ID.

When this front button is pressed, the panel will flip the direction specified by [<RotationDirection>](#) back to the front side.

7.14.7.2 Application Settings

This section discusses the settings used to add a FlipPanel widget in the application configuration XML file.

Example:

```
<Widget File="FlipPanel\FlipPanelWithButtons.xml" row="1" column="3">
    <RotationOverride>Horizontal</RotationOverride>
    <Front>
        <PaddingOverride bottom="50" top="50" left="50" right="50" />
        <Widget File="xxx" row="1" column="1"/>
        </Widget>
        ...
        <Widget File="yyy" row="3" column="6"/>
        </Widget>
    </Front>

    <Back Align="Center">
        <Widget File="LineChart.xml" row="1" column="2">
            <Title>Line Chart</Title>
            <xAxis Label="Over Time" MaxEntries="10"/>
            <yAxis Label="Data Value" MaxValue="100" Count="4"/>
            <MinionSrc ID="CombinedSource" Namespace="DemoNamespace"/>
        </Widget>
    </Back>
</Widget>
```

7.14.7.2.1 <[RotationOverride](#)>

Optional

This allows you to change the direction the flip panel flips from what is defined in the widget definition file. Valid options are 'Horizontal' and 'Vertical'.

7.14.7.2.2 <[AnimationDuration](#)>

Optional

Determines the animation time (in ms) it takes to perform the flip. Valid range is 100 to 2000.

7.14.7.2.3 <Front>

Required

This is where you put all the widgets on the front of the panel. The <Front> tag can have all the same sub-tags as a [<Grid>](#); this includes PaddingOverride, <StyleOverride> etc.

7.14.7.2.4 <Back>

Required

This is where you put all the widgets on the front of the panel. The <Back> tag can have all the same sub-tags as a [<Grid>](#); this includes PaddingOverride, <StyleOverride> etc.

7.14.7.3 Flipping the Panel

If your widget definition file includes the [<FrontButton>](#) and [<BackButton>](#) then the buttons to flip the panel are already built in.

However this is another way to flip the panel. The FlipPanel can take a [<MinionSrc>](#) which is how you will flip the panel. Valid flip (case insensitive) strings are:

- Flip
- Flip:Horizontal
- Flip:Vertical
- Front
- Front:Horizontal
- Front:Vertical
- Back
- Back:Horizontal
- Back:Vertical

Those with a ':' allow you to override for that flip the flip direction.

Additionally you can place a button somewhere else and assign a [MarvinTask](#) to it that will result in a flip. You can even, via a [MarvinTask](#) and a [RemoteMarvinTask](#) flip it from a different computer running Marvin!

7.15 Grid

A grid isn't really a Widget as it is invisible (unless [Mode=Debug](#)), however it is the thing that all widgets actually are placed into. Each [Tab](#) and [FlipPanel](#) come equipped with a grid for your use (the FlipPanel actually has two, one on each side). In these instances you do not need to create a <Grid> tag in the XML file, it is already there.

Where you would use a <Grid> is for specific layouts. If you are familiar with HTML tables, it is the same basic principle.

A Grid is placed in a [Tab](#), [FlipPanel](#) or another Grid just as you would any other widget, with the same options including Row, Column, StyleOverride etc. (There is no [<MinionSrc>](#) for a

Grid though).

With a grid you can specify the hgap,vgap, alignment just as you can with a [Tab](#). Like a [Tab](#) you can also specify a Grid to be defined in an external file. This will allow you to do some very interesting things, such as create a library of Grids filled with widgets that you can plop anywhere you like.

7.15.1.1 Attributes

The <Grid> tag supports the following attributes, which are case sensitive.

File	O	Specifies the external file where contents for grid are defined
Row	M	The row within a grid where this grid is to be placed
Column	M	The column within a grid where this grid is to be placed
Rowspan	O	The number of rows the grid should span – default is 1
Colspan	O	The number of columns the grid should span – default is 1
Align	O	Where within the parent grid cell to align this grid
Height	O	
Width	O	
Task	O	
Hgap	O	
Vgap	O	

Note: RowSpan,ColSpan,Height,Width,Task,hgap,vgap can all be defined within the opening <Grid> statement of the external file, and also when specified (called) in the XML file indicating the external file. With the latter having precedence. Row and Column are ignored in the opening <Grid> tag of external file. Meaning if you specify Width within the external Grid File, and you specify it when you 'call' that external grid file, the Width specified when you call it will be used.

7.15.1.1.1 Align

Specifies where in the tab the tab grid should appear. Valid options are (points on a compass):

- Center
- N
- NE

- E
- SE
- S
- SW
- W
- NW

7.15.1.1.2 **File**

Specifies an additional external file where the contents of the grid are specified. As with all additional external files, the root of the XML scheme for the external file is <MarvinExternalFile>. Widgets will then be required to be defined within the <Grid> tag. <AliasList> and <TaskList> tags are at same level as <Grid>

Note: you can combine both an external file and widgets when defining a grid with your application configuration file.

```
<Grid File="ExternalGrid.xml" row="3" column="2" colspan="4">
    <Widget File="Gauge\GaugeSteel.xml" row="1" column="1">
        <MinionSrc ID="CPU_Core1" NameSpace="Server1"/>
        <Title>Core 0</Title>
    </Widget>
</Grid>
```

7.15.1.1.3 **hgap**

Specifies the horizontal gap to be inserted in between each column in the grid.

7.15.1.1.4 **vgap**

Specifies the vertical gap to be inserted in between each row in the grid.

7.15.1.2 **PaddingOverride/Padding**

Allows you to override the application global setting for the padding described in Section 6.3.2.6.

7.15.1.2.1 **Attributes**

The <PaddingOverride> or <Padding> tag supports the following attributes, which are case sensitive.

Attribute	M/O	Comments
Top	O	Default Tab padding on top of cell grid, in pixels
Bottom	O	Default Tab padding on bottom of cell grid, in pixels
Left	O	Default Tab padding on left of cell grid, in pixels
Right	O	Default Tab padding on right of cell grid, in pixels

7.15.1.3 **StyleOverride**

Allows you to change the style of the grid. For example the background is the background color of the Tab or Grid that this grid is within. You can change that here, or add a picture

etc.

7.15.1.4 Widget

One or more widgets can be placed within a Grid. See Section □ on widgets for more information.

7.15.1.5 <Grid>

You may place grids within grids in order to achieve various layouts.

7.15.1.6 <ListView>

If you add a <ListView> section to a grid, then it will appear in a listbox! There are no attributes to the ListView. You can specify a <StyleOverride> section within the <ListView> section.

```
<Grid row="$(NextRowAlias)" Column="$(CurrentColumnAlias)" Width="95%" Height="40%>
    <ListView>
        <StyleOverride><Item>-fx-background-color:yellow</Item></StyleOverride>
    </ListView>
    <StyleOverride><Item>-fx-background-color:blue</Item></StyleOverride>
    <Widget File="Text\Text.xml" row="$(NextRowAlias)"
Column="$(CurrentColumnAlias)">
        <InitialValue>1</InitialValue>
    </Widget>
    <Widget File="Text\Text.xml" row="$(NextRowAlias)"
Column="$(CurrentColumnAlias)">
        <InitialValue>sfsfdsfdsdfsfd 1</InitialValue>
    </Widget>
    <Widget File="Text\Text.xml" row="$(NextRowAlias)"
Column="$(CurrentColumnAlias)">
        <InitialValue>sfsfdsfdsdfsfd 1</InitialValue>
        <Title> Click me!</Title>
    </Widget>
</Widget>
```

7.15.1.7 <Peekaboo>

A grid can have a [<Peekaboo>](#) that works just like a Widget <Peekaboo>, though you cannot 'Pause' and 'Resume'.

7.15.1.8 <OnDemand>

There are times where you may not want a grid to show up until some trigger occurs, or say for example you want a different grid to for each NIC on the server you are monitoring, but the app does not know ahead of time how many NICs the system has. That is where you use the OnDemand capability. You define the Grid normally, but you provide a <OnDemand> section as well:

```

<Grid File="$(AppDir)\Grid.Dynatest.xml" row="1" Column="1" Width="30%">
  <OnDemand>
    <Growth Primary="HZ" Secondary="VT" NewLineCount="3"/>
    <NamespaceTriggerPattern>SUT</NamespaceTriggerPattern>
    <!--<NamespaceTriggerExcludePattern>*foo*</NamespaceTriggerExcludePattern>-->
    <IDTriggerPattern>eth*</IDTriggerPattern>
    <IDTriggerExcludePattern>Eth1</IDTriggerExcludePattern>
  </OnDemand>
</Grid>>

```

The OnDemand section sets up a number of trigger filters. It can trigger on Namespace or ID or both. When a new combination has been received, a new grid is created.

You can specify more than one filter for Namespace and ID. There is also an exclusion filter that can be used to block out desired matches.

The match filters are the same you would use in DOS file systems.

If you specify * for NamespaceTrigger pattern (as above) and no other triggers, then a new tab will be created for every unique namespace. In the example above, a new grid will be created for each ID that matches 'NIC*' and has the namespace of SUT", but does not have the ID of eth1.

The patterns are case insensitive.

The Optional Growth section indicates how you want to place the grids, it has a Primay and Secondary attribute as well as NewLineCount that specifies how many grids to be placed before going to a new line.

Options for the Primary and Secondary are:

- Horizontal or HZ – left to right
- Latnoziroh or ZH – right to left
- Vertical or VT – top to bottom
- Lacitrev or TV – bottom to top

Primary and secondary can match, one must be horizontal the other vertical.

For each grid created, a number of Aliases are created:

`$(TriggeredNamespace)` – the Namespace that matched to create this

`$(TriggeredID)` – the ID that matched

`$(TriggeredIndex)` – the # of times thus far this `<OnDemand>` has resulted in a creation

7.15.1.9 Sorting and Styling OnDemand Grids

As with the OnDemand Tabs, you can specify an order to sort the OnDemand grids. And you may also specify an add and/or an even style for the grids that are created.

```

<Grid File="$(AppDir)\Grid.OnDemandNIC.xml" row="$(NextRowAlias)"
Column="$(CurrentColumnAlias"
  <OnDemand SortBy="ID" TriggeredIdToken=".">.
    <Growth Primary="Horizontal" Secondary="Vertical" NewLineCount="3"/>
    <NamespaceTriggerPattern>$(NS)</NamespaceTriggerPattern>
    <IDTriggerPattern>netdev.*.rx_bytes</IDTriggerPattern>

```

```

<StyleOverride-Even>
    <Item> -fx-background-color:BLUE</Item>
</StyleOverride-Even>
<StyleOverride-Odd>
    <Item> -fx-background-color:silver </Item>
</StyleOverride-Odd>
</OnDemand>
</Grid>

```

7.15.1.10 Tokenizing the Triggered ID

When I create a collector that collects data from a lot of the same kinds of devices (like NICS), the ID's generated are generally organized in a common naming scheme, such as netdev.eth0.rx_bytes for one device and netdev.eth3.rx_bytes for another. There are times where I want to get the 'eth0' or 'eth3' piece of data, so I can access specific data ID's for those devices, without having to know the devices beforehand. In such an example, where the parts of the IDs are separated by a nice easy token, you can specify the TriggeredIdToken attribute. In the example in the previous section I used a '.' As the token. When you do this the resulting OnDemand grid when created will end up with three generated aliases - \$(TriggeredIDPart.1) which will be 'netdev', \$(TriggeredIDPart.2) will be the name of the NIC (for example eth0) and \$(TriggeredIDPart.3) which will be the last part of the triggered ID, such as rx_bytes.

This Token is actually a regEx expression. So if for example you have an ID of `downstream_rx.service_group_1.average_frame_size`

That you want to split on the '-' and on the period, use a token Token of:

```
<OnDemand TriggeredIdToken="\\" . | _ \">
```

7.15.1.11 OnDemandTask

You may specify a task to be run when the OnDemand Grid is run.

7.16 GridMacro

A GridMacro is a container for a grid that you can use as a MACRO, as you would an external grid file. It has the same scoping rules as alias's.

Example:

Definition of the macro.

```

<GridMacro Name="My Macro Grid">
    <Widget File="Text\Text.xml" row="0" column="0">
        <InitialValue>$ (My_Text)</InitialValue>
    </Widget>
</GridMacro>

```

The later and in scope of the macro:

```
<Grid Macro="My Macro Grid" row="3" Column="0" MyText="Patrick was"/>
<Grid Macro="My Macro Grid" row="3" Column="1" MyText="Here"/>
```

This is just a very simple example. GridMacro can be used within other grids, including DynamicGrid.

7.17 DynamicGrid

The DynamicGrid is just like the <Grid>, except that it also allows you to specify a list of other grids (defined in external grid files, or GridMacros) with an associated ID, then select which one is visible. This works along the same way as the DynamicImage widget.

```
<DynamicGrid row="1" column="0">
  <GridFile Source="Demo/DemoTab_FlipGrid1.xml" ID="0" Color="Yellow" />
  <GridFile Source="Demo/DemoTab_FlipGrid2.xml" ID="1" Color="Green TaskOnActivate="RunTest"/>
  <GridFile Source="Demo/DemoTab_FlipGrid3.xml" ID="2" Color="Blue" hGap="5" vGap="10" />
  <Initial ID="0"/>
  <MinionSrc ID="DynaGrid" Namespace="DynaGrid"/>
</DynamicGrid>
```

The list of external grid files is specified by having multiple <GridFile> tags, each of which has a required Source attribute which must point to an external <Grid> file.

As you can see in the above example, you can also pass aliases (parameters) to the grid files.

The <Initial> tag work just like the <DynamicImage>, it indicates the default grid to be visible.

In addition to the ID of the specific grid you wish to display, you can also send 'Next' or 'Previous', and the next or previous grid in the list will be displayed. When using 'Next' or 'Previous' the list is considered to be circular.

Example of using a MacroGrid for a DynamicGrid GridFile:

```
<GridFile Macro=" My Macro Grid " ID="PK_Test"/>
```

7.17.1 Attributes of <GridFile>

As you can see in the example above you can specify things other than just the external GridFile. Anything specified other than what is listed below is an [Alias](#) passed to the Grid.

The following are reserved attributes when specifying a Grid within the dynamic grid:

- hGap – Just like any grid, can specify horizontal gap within the grid
- vGap – Just like any grid, can specify vertical gap within the grid
- TaskOnActivate – [Task](#) to perform when the Grid becomes the active Grid. Does NOT apply to the initial grid when the application first begins.
- ExcludeForAutoActions– Optional boolean ('True' or 'False'). If true, then using the 'next' or 'previous' actions will skip that specific grid.
- Task – just a normal Task. If you do not specify a task for an individual grid, if you have specified a task for the DynamicGrid widget itself, that one will be run.

7.17.2 Transitions

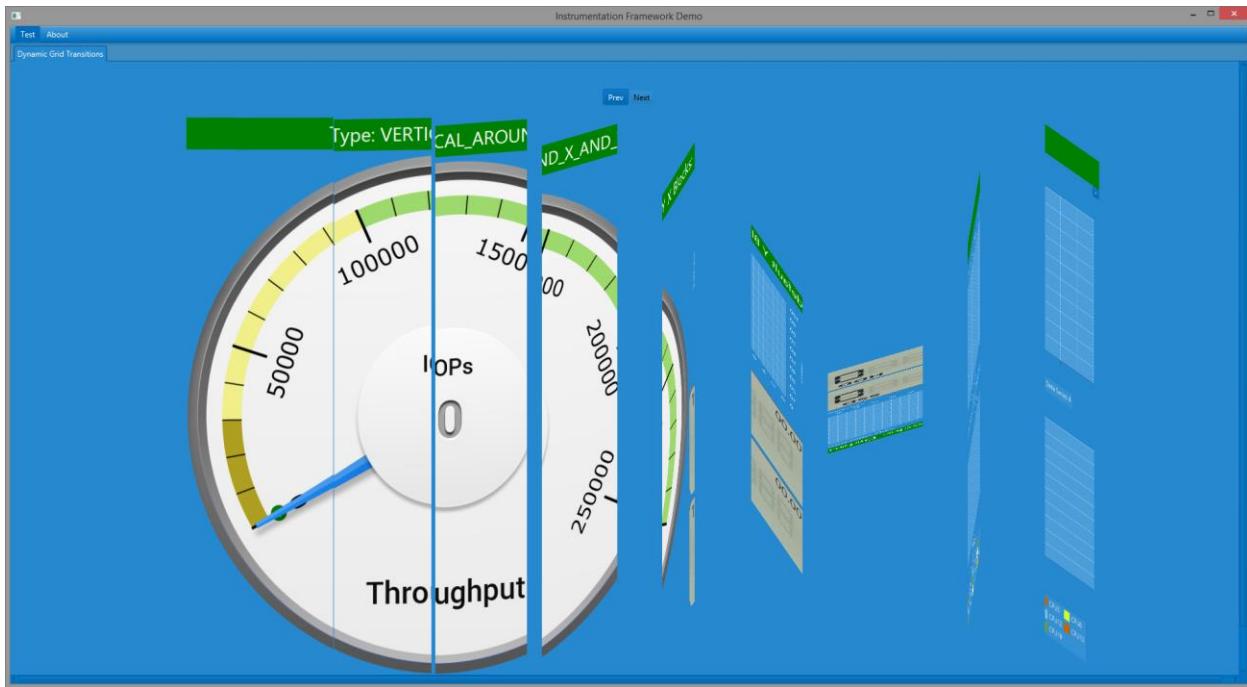


Figure 78 Example Transition

Optional

I thought it would be fun to have the ability to have transition effects when you go from one dynamic grid to another. Much like going from one slide to another in a presentation using PowerPoint or other such application.

To do this, there is a <Transition> tag you can add to the <GridFile> declaration.

```
<GridFile Source="Demo/Grid2.xml" ID="1">
    <Transition>VERTICAL_AROUND_X</Transition>
</GridFile>
```

The specified transition is what the transition to that grid will be – regardless of what the previous grid was.

7.17.2.1.1 <Transition> Attributes

There are default values for all of these, however you can change the way each of the individual transitions look. You can achieve some interesting results by the modification of these settings.

Attribute	M/O	Comments
xGrids	O	Number of columns to divide the transition effect into
yGrids	O	Number of rows to divide the transition effect into

Duration	O	Time for each of the individual animations to run
Delay	O	Time to wait after one animation begins until the next starts

Note: Not all transitions use both xGrids and yGrids.

7.17.2.1.2 Transition Types

The <Transition> Tag needs an actual Transition to use. The following are valid transitions:

- VERTICAL_AROUND_X
- VERTICAL_AROUND_Y
- VERTICAL_AROUND_X_AND_Y
- HORIZONTAL_AROUND_X
- HORIZONTAL_AROUND_Y
- HORIZONTAL_AROUND_X_AND_Y
- RECTANGULAR_AROUND_X
- RECTANGULAR_AROUND_Y
- RECTANGULAR_AROUND_X_AND_Y
- DISSOLVING_BLOCKS
- CUBE
- FLIP_HORIZONTAL
- FLIP_VERTICAL

7.17.3 Peekaboo

If you send the text "Next" or "Previous" to the DynamicGrid peekaboo, it will move to the appropriate grid.

7.17.4 AutoAdvance

You may wish to automatically advance through all of the grids within a DynamicGrid rather than issuing a <Peekaboo> "next" repeatedly with say a task, you can configure it for <AutoAdvance>.

```
<DynamicGrid row="1" column="0">
    <AutoadvanceFrequency='1000' Loop='True' />
    <GridFile Source="Demo/DemoTab_FlipGrid1.xml" ID="0" Color="Yellow" />
    <GridFile Source="Demo/DemoTab_FlipGrid2.xml" ID="1" Color="Green TaskOnActivate="RunTest"/>
    <GridFile Source="Demo/DemoTab_FlipGrid3.xml" ID="2" Color="Blue" hGap="5" vGap="10" />
    <Initial ID="0"/>
    <MinionSrc ID="DynaGrid" Namespace="DynaGrid"/>
</DynamicGrid>
```

<AutoAdvance> takes two attributes – the frequency in milliseconds of how often to advance to the next grid, and Loop boolean attribute. If True then after going through the entire list of grids, it will begin again with the first one.

If you pause a widget using Peekaboo, autoadvance will stop. Issuing a 'resume' will resume

autoadvance.

8 Tasks

This section provided details on Tasks defined in Marvin.

8.1 Defining a Task

Tasks are defined at the same XML level as Tab ,Grid and AliasList. You cannot define a task within any of those tags, must be at the same level.

Each Task definition is created within a <TaskList> Tag, and contains a <TaskItem> Tag. Each Task has a required ID.

Example Task Definition

```
<TaskList ID = "HideX_21">
    <TaskItem Type="Marvin">
        <DataToInsert ID="x_21" Namespace="Demo Tic Tac Toe" Data="Hide"/>
    </TaskItem>
</TaskList>
```

The above example is from the DemoTab_Grids.xml file. The TaskList has an ID that must be unique within the scope of the running application, and 1 or more TaskItems. You can define multiple things to happen when this task is run. The example above only performs a single task, which is a Marvin task and it inserts some data into the datastream for processing by the GUI.

Another Example

```
<TaskList ID="ResetPressed">
    <TaskItem Type="OtherTask" ID="ShowBlank_00"/>
    <TaskItem Type="OtherTask" ID="HideX_00"/>
    <TaskItem Type="OtherTask" ID="HideO_00"/>
    <TaskItem Type="OtherTask" ID="ShowBlank_01"/>
    <TaskItem Type="OtherTask" ID="HideX_01"/>
    <TaskItem Type="OtherTask" ID="HideO_01"/>
    <TaskItem Type="OtherTask" ID="ShowBlank_02"/>
    <TaskItem Type="OtherTask" ID="HideX_02"/>
    <TaskItem Type="OtherTask" ID="HideO_02"/>
    <TaskItem Type="OtherTask" ID="HideO_22"/>
</TaskList>
```

This example shows multiple actions to be performed when the 'RestPresssed' task is executed. They all happened to be the same kind (ChainedTask) in this example, however it could be any kind of task.

8.1.1 Attributes

The <Tag> tag supports the following attributes.

Attribute	M/O	Comments
PerformOnStartup	O	See Running a Task at Startup
Stepped	O	Boolean. Runs the tasks consecutively, one at a time, one per call to the tasklist ID
LoopTasks	O	Boolean, if Stepped=True, will repeatedly loop through all listed tasks when end reached. Default is True.
PerformOnConnect	O	True or False. Runs once, after a connection to Oscar has been made.
Interval	O	Run the task automatically for specified time period in seconds (can be decimal e.g. 2.5)

8.1.1.1 StyleOverride

Allows you to change the style of the grid. For example the background is the background color of the Tab or Grid that this grid is within. You can change that here, or add a picture etc.

8.2 Calling/Executing a Task

Every widget has the ability to specify a [Task](#) to be run when clicked. So if you add a Button and assign a Task to it, when that button is pressed the corresponding Task will be run. The task you specify in the [Task](#) attribute of the Widget is the ID defined above.

Example:

```
<Widget File="Button.xml" row="3" column="2" Task="ShowHiddenDials">
    <Title> Click me!</Title>
</Widget>
```

Here is an example from the DemoTab_Dials.xml file. A [Button](#) widget is placed and a Task is associated with it. When this button is clicked the task with ID "ShowHiddenDials" is run.

A Task can also be set to execute from a [MenuItem](#).

Note: You can associate the same Task with as many widgets as you like!

8.3 Minion Task

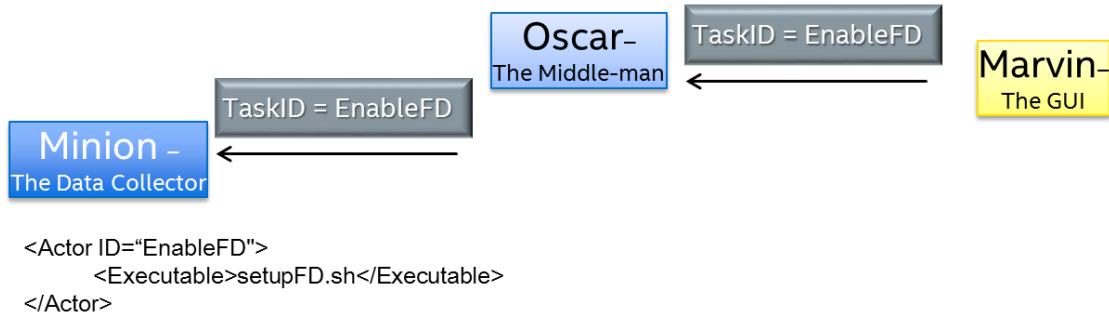


Figure 79 Minion Task Flow

A Minion task is one in which you want to run some external program/script where the Minion is running. When you execute a MinionTask (by clicking a [Widget](#), or a [MenuItem](#)) the Marvin framework will send that TaskID to the Minion. The Minion in turn looks up the Task ID ([Actor](#)) and executes the task associated.

Example:

```
<TaskList ID="EnableFD_On_2_Servers">  
  <TaskItem Type="Minion">  
    <Actor Namespace="Server-22" ID="EnableFD"/>  
  </TaskItem>  
  <TaskItem Type="Minion">  
    <Actor Namespace="Server-11" ID="EnableFD"/>  
  </TaskItem>  
</TaskList>
```

The above example has a Task with an ID of EnableFD_On_2_Servers that you might assign to a Button, MenuItem or any other widget. When pressed, the framework will send two packets to Oscar, who in turn will send it to every minion using the namespaces of Server-22 or Server-11.

If a minion receives a task to perform that hasn't been defined for it, it will log it and ignore – no response is ever sent from a task.

Note: Care should be taken when defining the namespace of your Minions. You can have them all with the same namespace, however that could lead to complications, especially when doing tasks.

8.3.1 Defining a Minion Task in Marvin

```
<TaskList ID="EnableRSSTask">
```

```
<TaskItem Type="Minion">
<Actor Namespace="Server-22" ID="EnableFD"/>
</TaskItem>
```

The TaskItem tag requires the 'Type' attribute. A minion task has a type of "Minion". A minion task also requires an <Actor> tag.

The <Actor> tag takes a Namespace and ID. These correspond to the [Namespace](#) in the Minion and the [Actor ID](#) in the [configuration](#) file.

The Namespace for a Minion task is usually a fully formed string corresponding to a specific Namespace. However, there are a couple of options you can use with the namespace for a MinionTask.

- Using 'broadcast' will send the task to every namespace, and if it has that task defined, it will run it
- Wildcards – Let's say you have 4 namespaces with names of 'Target-1, Target-2, Target-3 and Target-4. If you have a task defined in each of them that does the same thing, you can specify the Namespace as 'Target-*' or 'Target-?' or any other wildcard matching.

Note: Again – the definition of the Task can occur in any of the Marvin configuration files except for a Widget definition file.

8.3.1.1.1 Scope of Minion Task

Keep in mind that there can be multiple [Oscars](#) connected to Marvin, and each Oscar can have multiple [Minions](#), and further, each Minion can have multiple [Namespaces](#). Oscar keeps track of the Namespaces of each Minion, when it receives a Minion Task, it will send the task to all Minions matching the Namespace you define in the <Actor > as described above.

8.3.2 Minion Task Parameters

As discussed in Section 4.12.3, when you define an [Actor](#) for a Minion (in Marvin it is a Minion Task) the Actor can have parameters assigned to it that will be used when invoking the Actor script.

You can also pass parameters from Marvin when it sends the Minion Task:

Example

```
<TaskList ID="EnableRSSTask">
<TaskItem Type="Minion">
<Actor Namespace="Server-22" ID="EnableFD"/>
<Param>eth0</Param>
</TaskItem>
```

When Minion receives this and invokes the Actor associated with the ID of "EnableFD", it will pass the 'eth0' parameter to the externally invoked script.

8.3.3 Mixing Minion Task Parameters

A minion [Actor](#) can define parameters to send to the external script when invoked. Likewise a <MinionTask> definition in Marvin allows you to send parameters that are used when invoking the script.

You can utilize both methods to invoke a script. All parameters defined within the minion Actor (in the Minion configuration file) are used first, in the defined order, followed by any and all parameters defined in the <MinionTask> definition in the Marvin configuration files.

8.3.4 Using a MinionSrc as a Parameter

You may want to use a piece of data collected from a collector as an input to a <Task>. To do that you can Define your <Param> as follows:

```
<Param Namespace="MinionSrcNamespace" ID="MinionSrcID"/>
```

The example above will use a single MinionSrc data point as a parameter. You may also want to use multiple to create a complex string, as you can with Aliases. To do this you use the following format:

`%(Namespace, ID)`

The '%' followed by a comma separated Namespace and ID within parens signals Marvin to go look for a Minsrc with that namespace and ID and use the current value.

For example the following, if SUT_NS,Test1ID datapoint = "PK_TEST" and SUT_NS,INTERFACE1 = ETH0 the following

```
<Param>Recordinig.%(SUT_NS,Test1ID).%(SUT_NS,INTERFACE1).biff</Param>
```

Would be 'Recording.PK_TEST.ETH0.biff'.

Another usage is where you can specify an index to use:

`%(Namespace, ID, indexNum)`

If the ID is say a CSV value. If it is not a CSV value and it is separated by something else, you can specify that with a 4th parameter:

`%(Namespace, ID, indexNum, splitToken)`

8.4 Oscar Task

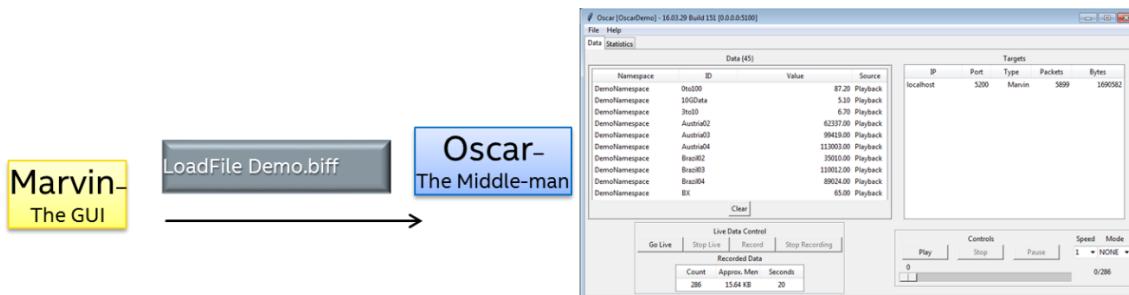


Figure 80 Oscar Task Flow

Oscar Tasks allow you to do things such as start and stop live data capture, load a saved file, start, pause, restart, stop playback of a Oscar from the Gui.

Oscar Tasks have a TaskItem Type of "Oscar". Each Task requires a OscarID and a task to be performed and may take parameters.

Example Task Definition:

```
<TaskItem Type="Oscar">
    <Task OscarID="Oscar1">Load File</Task>
    <Param> SaveFile8.biff</Param>
</TaskItem>
```

An Oscar Task requires a `<Task>` tag that must have a OscarID attribute and the task to be performed. The OscarID corresponds to the [ID](#) within the Oscar configuration file. It is recommended that each Oscar connected to a Marvin have its own ID, otherwise each will be sent the same task, which may nor not be desirable.

Valid Oscar Tasks, defined by the `<Task>` tag currently are:

- LoadFile
- StartPlayback
- Playback
- PausePlayback
- StartLive
- StopLive
- StartRecording
- StopRecording

Note: Marvin does no verification what you place in the `<Task>`. It will send whatever task you specify with whatever Parameters to the Oscar(s). Oscar will be the one that verifies what it receives. Oscar will never send back a response, only log unknown or invalid requests.

8.4.1 LoadFile

Example:

```
<TaskItem Type="Oscar">
    <Task OscarID="Oscar1">LoadFile</Task>
    <Param>c:\MyDemoFiles\BetterTogetherDemo.biff</Param>
</TaskItem>
```

The LoadFile Oscar Task takes a single parameters, which is file to load. Oscar will receive this, and load the specified file. If it is a bad or incorrect filename, it will fail to load and no indication will be sent to Marvin.

8.4.2 Playback

The Playback task is the most powerful of the Oscar Tasks. It has a great number of options to perform the kind of playback you desire.

Example:

```
<TaskItem Type="Oscar">
    <Task OscarID="Oscar1">Playback</Task>
        <Param>speed=2</Param>
    </TaskItem>
```

The Play Oscar task takes a OscarID and Task of 'Playback'. It will play the currently loaded file.

The Playback command can also take optional parameters:

- Speed - specifies the playback speed
- Repeat - play the entire file again when end reached
- Loop - repeatedly play between the start and end packets
- Start - used with 'loop' option, is packet to start playing at, if not specified, will be zero
- End - used with 'loop' option, is packet to stop playing at, if not specified, will be last packet available
- File - specify a file to load and play along with the other options

Example:

```
<TaskItem Type="Oscar">
    <Task OscarID="Oscar1">Playback</Task>
        <Param>speed=10</Param>
        <Param>loop</Param>
        <Param>start=230</Param>
        <Param>end=1230</Param>
    </TaskItem>
```

8.4.2.1 Speed

Indicates the playback speed. Can be a real (with decimals) value >0 and <= 100. Indicates a multiplier of how fast to play the data. So a value of .25 will play at 1/4 speed. A value of 10.0 will playback at 10x speed.

Example:

```
<TaskItem Type="Oscar">
    <Task OscarID="Oscar1">Playback</Task>
        <Param>speed=2</Param>
    </TaskItem>
```

Notice that the speed parameter indicates the speed with an equals sign.

8.4.2.2 Repeat

This indicates that the playback should repeat the entire dataset in an endless loop until told to stop. It will do so at the specified speed (default is 0).

Example:

```
<TaskItem Type="Oscar">
    <Task OscarID="Oscar1">Playback</Task>
        <Param>speed=0.75</Param>
        <Param>repeat</Param>
</TaskItem>
```

8.4.2.3 Loop

Loop is similar to Repeat, except that it takes a start and stop location within the dataset to loop.

Example:

```
TaskItem Type="Oscar">
    <Task OscarID="OscarDemo">Playback</Task>
    <Param>loop</Param>
    <Param>start=123</Param>
    <Param>end=750</Param>
    <Param>speed=10</Param>
</TaskItem>
```

Note start and end are like the optional speed parameter, number is indicated with an equals sign. The start and end values indicate data packet # within the dataset.

If you do not specify a start value, the start default is packet 0. Similarly if you do not specify an end value the default is the last packet in the dataset.

8.4.2.4 File

Specifies the file to load and run automatically – saves a step, you no longer need to load and then run. Note that you need file=.

Example:

```
TaskItem Type="Oscar">
    <Task OscarID="OscarDemo">Playback</Task>
    <Param>loop</Param>
    <Param>start=123</Param>
    <Param>end=750</Param>
    <Param>speed=10</Param>
    <Param>File=MySaveFile.biff</Param>
</TaskItem>
```

8.4.3 StopPlayback

Example:

```
<TaskItem Type="Oscar">
```

```
<Task OscarID="Oscar1">StopPlayback</Task>
</TaskItem>
```

The StopPlayback Oscar task will stop playback of the current file. Starting it again will restart from starting point.

8.4.4 PausePlayback

Example:

```
<TaskItem Type="Oscar">
    <Task OscarID="Oscar1">PausePlayback</Task>
</TaskItem>
```

The Pause Oscar task will pause the playback of a loaded file. Starting again (with just a playback task) will resume from current position.

8.4.5 StopLive

Example:

```
<TaskItem Type="Oscar">
    <Task OscarID="Oscar1">StopLive</Task>
</TaskItem>
```

The StopLive Oscar task will stop reading live data.

8.4.6 StartLive

Example:

```
<TaskItem Type="Oscar">
    <Task OscarID="Oscar1">StartLive</Task>
</TaskItem>
```

The StartLive task will stop playing a loaded file and start receiving live data from Minions or other Oscars.

8.4.7 StartRecording

Example:

```
<TaskItem Type="Oscar">
    <Task OscarID="Oscar1">StartRecording</Task>
</TaskItem>
```

The StartRecording task will begin recording the live data feed. It will continue recording until the app ends or you indicate it should stop.

8.4.8 StopRecording

Example:

```
<TaskItem Type="Oscar">
    <Task OscarID="Oscar1">StopRecording</Task>
    <Param>File=C:\MyRecordings\Session1.biff</Param>
</TaskItem>
```

The StopRecording task will stop an active recording session and save it to the file specified by the File parameter.

8.4.9 InsertBookmark

Example:

```
<TaskItem Type="Oscar">
    <Task OscarID="DaGrouch">InsertBookmark</Task>
    <Param>Namespace=BookmarkNS</Param>
    <Param>ID=TestBM</Param>
    <Param>Data=STartTest1</Param>
    <Param>Propagate=True</Param>
</TaskItem>
```

This task will insert a data point with the given Namespace, ID and Data value into the Oscar data stream. It is intended for you to be able to insert bookmarks in the data you are recording. If you specify true for the OPTIONAL Propagate parameter, then the data point will also be sent back to any Marvin's attached to that Oscar.

8.5 Marvin Task

A Marvin Task is a way to achieve some interesting visual things locally to your GUI. To understand how it works, I need to explain a bit of the internals of how I handle incoming data.

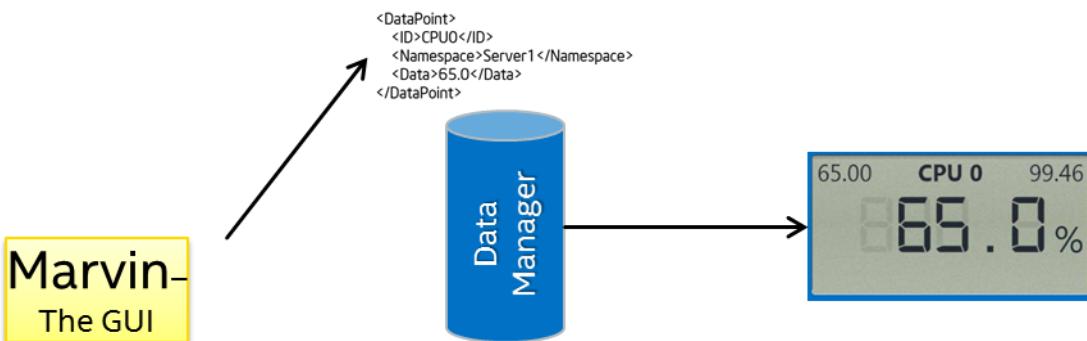


Figure 81 Data Handling

When Marvin receives a piece of data from Oscar, it hands it off to the Data Manager component, which in turn updates all of the widgets that are registered for the Namespace and ID that was associated with the data that was received.

This is the same way both data for [<MinionSrc>](#) and [<Peekaboo>](#) are handled.

A Marvin Task is a way of inserting data into the Data Manager yourself, without the need for a Oscar at all. In this way you can set some local text, set the value of a dial, hide and show (using [<Peekaboo>](#)) widgets. For example you want to have a button you press to go start a script via a [Minion Task](#), you might also have the [<TaskList>](#) have a task that will show a big image saying 'Test Running' using [<Peekaboo>](#) to show the image that was previously hidden.

A good example of this can be seen in the DemoTab_Images.xml file, where by clicking a button you seem to go through a series of images. In reality what happens is there are many many different [Image](#) and [Button](#) widgets that using [<Peekaboo>](#) get hidden and shown to give the appearance of displaying different images.

Example:

```

<TaskList ID="TestTask">
  <TaskItem Type="Marvin">
    <DataToInsert ID="3to10" Namespace="DemoNamespace" Data="3.4"/>
  </TaskItem>
</TaskList>

```

The example above shows that a Marvin Task required a Type of "Marvin" and a [<DataToInsert>](#) tag which has 3 attributes:

- ID - [<MinionSrc>](#) and [<Peekaboo>](#) ID
- Namespace - [<MinionSrc>](#) and [<Peekaboo>](#) Namespace
- Data - The data you wish to insert.

Note that Data can be either an Element as shown above, or a Tag within the [<DataToInsert>](#) tag as show here:

```

<TaskList ID="TestTask">
  <TaskItem Type="Marvin">

```

```

<DataToInsert ID="3to10" Namespace="DemoNamespace">
    <Data>3.4</Data>
</DataToInsert>
</TaskItem>
</TaskList>

```

Note: under a single MarvinTask, you can create many data points:

```

<TaskList ID="TestTask">  fun -->
    <TaskItem Type="Marvin">
        <DataToInsert ID="3to10" Namespace="DemoNamespace" Data="3.4"/>
        <DataToInsert ID="a" Namespace="testNS" Data="2.8"/>
        <DataToInsert ID="b" Namespace="testNS" Data="2.7"/>
        <DataToInsert ID="c" Namespace="testNS" Data="2.7"/>
        <DataToInsert ID="f" Namespace="testNS" Data="7.7"/>
    </TaskItem>
</TaskList>

```

You can use a MinionSrc as a data value in the same way you can for an OscarTask:

`%(Namespace, ID)`

```

<DataToInsert Namespace="MinionSrcNamespace" ID="MinionSrcID"
Data="%(SUT_NS,Test1ID).%(SUT_NS,INTERFACE1)"/>

```

The example above will use a single MinionSrc data point as the data for the MarvinTask. You may also want to use multiple to create a complex string, as you can with Aliases. To do this you use the following format:

`%(Namespace, ID)`

The '%' followed by a comma separated Namespace and ID within parens signals Marvin to go look for a Minionsrc with that namespace and ID and use the current value.

For example the following, if SUT_NS,Test1ID datapoint = "PK_TEST" and SUT_NS,INTERFACE1 = ETH0 the following

`Data="%(SUT_NS,Test1ID).%(SUT_NS,INTERFACE1)"`

Would be PK_TEST.ETH0

8.6 DataSetFile

This Task allows you to automatically setup a series of MarvinData sets based upon a CSV file.

```

<TaskItem Type="DataSetFile" File="Foo.csv" DataRate="1000">
    <Options RepeatCount="2">
        <RandomFluxRange Lower="-.24" Upper=".4"/>
    </Options>
</TaskItem>

```

The format of the input file must be Namespace, ID, Data, data, data, data...

```
DemoNamespace,3to10,3,4,5,6,7,8,9,9.5,10
```

```
DemoNamespace,bx, 20,21
```

This example contents will create 2 datapoints, both with Namespace of DemoNamespace, one with and ID of 3to10 and the other with an ID of bx. If a line starts with a '#' then it becomes a comment.

Note that they have a different number of datasets. Each will be independently cycled through and repeated the specified number of times. If you do not specify RepeatCount, it will repeat indefinitely.

You can specify any number of datapoint lines.

The optional features in <Options> allows you to limit the number of times the data is run though. If you do not specify RepeatCount, it will do so indefinitely.

If you want a little 'wiggle' in your dataset, you can use the RandomFluxRange, and for each datapoint in the list it will add a random value based upon the range specified. If you do not specify a range then no 'flux' will be applied.

8.7 SaveScreenshot

This Task allows you to take a screenshot of the Marvin application and save it to a file.

```
<TaskItem Type="SaveScreenshot" DestFile="Foo.png" SavePolicy="Sequence"/>
```

You must specify the DestFile. SavePolicy can be either "Overwrite" (the default) or "Sequence". Overwrite will overwrite the file if it exists, while "Sequence" will sequentially add a number to the filename until a unique filename has been found.

Supported extensions are .png, .jpg, .jpeg and .gif.

8.8 MarvinPlayback Task

This task allows you to load,play,stop,pause,resume playing a .BIFM file. See Section 5.3.2.1 for details on BIFM file.

```
<TaskItem Type="MarvinPlayback">
    <Task PlayerID="MP_1">Load File</Task>
    <Param>File=Pattern.none.traffic.max.core.min.bifm</Param>
</TaskItem>
```

Every MarvinPlayback task must have a <Task> tag that contains the PlayerID and the action to take. Some actions will have additional Parameters.

You can have multiple Playbacks going on at the same time, so the PlayerID is something used to uniquely identify them. So you load a file with a given ID then subsequently Play that file with same ID.

8.8.1 Load File

```
<TaskItem Type="MarvinPlayback">
    <Task PlayerID="MP_1">Load File</Task>
    <Param>File=Pattern.none.traffic.max.core.min.bifm</Param>
</TaskItem>
```

Loads the specified file, but does not play it. Any active playback for the PlayerID is ended.

8.8.2 Play

```
<TaskItem Type="MarvinPlayback">
    <Task PlayerID="MP_1">Play</Task>
    <Param>Repeat=False</Param>
    <Param>Speed=2.5 </Param>
</TaskItem>
```

Plays the currently loaded file, from the beginning of the file. If the file is currently playing, stopped or paused it does not matter, playback will begin at the start of the file.

You may optionally specify two parameters, to repeat the playback if the end has been reached (default is false) and the speed at which you can playback – default is 1.0.

Note that you can change these options via a few different ways. If you set one of these values, that value will be used for any subsequent playbacks for that PlayerID – so if you change the speed, it doesn't change even if you specify a new file, unless you change the speed specifically.

8.8.3 Stop

```
<TaskItem Type="MarvinPlayback">
    <Task PlayerID="MP_1">Stop</Task>
</TaskItem>
```

Stops current playback.

8.8.4 Pause

```
<TaskItem Type="MarvinPlayback">
    <Task PlayerID="MP_1">Pause</Task>
</TaskItem>
```

Pauses the current playback.

8.8.5 Resume

```
<TaskItem Type="MarvinPlayback">
    <Task PlayerID="MP_1">Resume</Task>
</TaskItem>
```

Resumes the current playback if paused.

8.8.6 Play File

```
<TaskItem Type="MarvinPlayback">
    <Task PlayerID="MP_1">Play File</Task>
    <Param>File=z:\Biff Vm share\Pattern.Wave.bifm</Param>
    <Param>Speed=20</Param>
    <Param>Repeat=true</Param>
```

```
</TaskItem>
```

Combines the 'Load' and 'Play' tasks into one, with the ability to optionally set the speed and repeat options.

8.8.7 Set Options

```
<TaskItem Type="MarvinPlayback">
    <Task PlayerID="MP_1">Set Options</Task>
    <Param>Speed=20</Param>
    <Param>Repeat=True</Param>
</TaskItem>
```

Allows you to set the Speed and Repeat options. You can set just one, or both.

8.8.8 A note about Speed

The speed value can be anything > 0.0 . However you need to be careful, if you have 1000's of data points you send at a high rate, you will reach a rate that is simply too high and it can't go any faster. This means a rate of say 20 may be faster than the data can be processed, so making it 40 will not show any difference. This will of course be very dependent upon the system you are using, faster CPU should run faster data processing.

8.9 Marvin Admin Task

Marvin Admin Task is an **EXPERIMENTAL** mechanism to do some manipulation of the GUI.

Currently it allows you to, via a task, change the active Tab being displayed in the GUI, and allows you to hide and show a Tab.

8.9.1 SetActiveTab

Examples:

```
<TaskList ID="TabSwitch-1" >
    <TaskItem Type="MarvinAdmin">
        <Task ID="SetActiveTab" Data="StartTab"/>
    </TaskItem>
</TaskList>

<TaskList ID="TabSwitch-2">
    <TaskItem Type="MarvinAdmin">
        <Task ID="SetActiveTab" Data="DemoTab"/>
    </TaskItem>
</TaskList>
```

The above two examples create a `<TaskItem>` with `Type="MarvinAdmin"`. The Marvin

Admin task takes a <Task> Tag that has two required Attributes:

- ID – the type of Task to do,
- Data – In this case (only one implemented) it is the [Tab ID](#) to switch to.

A MarvinAdmin Task isn't too exciting or of great use by itself. One usage is that you can use the [PerformOnStartup](#) option to set the default Tab to be displayed when your application starts.

8.9.2 SetTabVisibility

Examples:

```
<TaskList ID="Hide Charts1Tab">
    <TaskItem Type="MarvinAdmin">
        <Task ID="SetTabVisibility" Data="DemoTab-Charts:False"/>
    </TaskItem>
</TaskList>
<TaskList ID="Show Charts1Tab">
    <TaskItem Type="MarvinAdmin">
        <Task ID="SetTabVisibility" Data="DemoTab-Charts:True"/>
    </TaskItem>
    <TaskItem Type="MarvinAdmin">
        <Task ID="SetActiveTab" Data="StartTab"/>
    </TaskItem>
</TaskList>
```

The above two examples create two tasks, one that hides a tab, with ID of 'DemoTab-Charts' and one that will show the same tab. The ID is the Marvin action to take, in this case SetTabVisibility.

The usage is that the Data portion has the name of the Tab (DemoTab-Charts in this case) followed by a color and a Boolean (True or False) value that indicates to make that tab visible or invisible.

8.9.3 Terminate

Examples:

```
<TaskList ID="KillMarvin">
    <TaskItem Type="MarvinAdmin">
        <Task ID="Terminate"/>
    </TaskItem>
</TaskList>
```

Terminates Marvin! ☺

8.9.4 RefreshData

Examples:

```
<TaskList ID="RefreshMinionData">
    <TaskItem Type="MarvinAdmin">
        <Task ID="RefreshData"/>
    </TaskItem>
</TaskList>
```

Forces all Minions to resend all data points.

8.10 Remote Marvin Task

This task is very interesting, and extremely powerful. It allows you to send a message from a Marvin application to all other Marvin's connected to the same Oscar and tell them to perform a specific task. If the remote Marvin doesn't have that task defined it will ignore the request ; if however it has defined the task, it will perform that task, no matter what kind of task it is. This would be the same as pressing a Button widget with a task associated with it.

Example:

```
<TaskItem Type="RemoteMarvinTask">
    <MarvinID>MainMarvin</MarvinID>
    <Task ID="TabSwitch-1"/>
</TaskItem>
```

The TaskItem Type = "RemoteMarvinTask" The <Task> tag takes but a single Attribute, the ID of the task to be run on the remote Marvin(s).

The <MarvinID> tag identifies the specific Marvin to target the task to. The task will be sent to all Marvins, and each Marvin will check to see if it matches the ID of the Marvin as defined in the ID attribute of the [Application](#) tag. Optionally you can also use BROADCAST as the Marvin ID :

```
<TaskItem Type="RemoteMarvinTask">
    <MarvinID>Broadcast</MarvinID>
    <Task ID="TabSwitch-1"/>
</TaskItem>
```

And it will send the message to all Marvins, and any that have a Task defined as TabSwitch-1, will run that task.

This can be very powerful. Consider you have two Marvins running, one on a giant display behind you at a conference, the 2nd on a Tablet. From the tablet you can have buttons that allow you to change the displayed tab on the giant display using the Marvin Admin Task.

Take a peek at the RemoteDemo_Controller.xml and RemoteDemo_Controlee.xml files for examples.

8.11 Chained Task

Say you have a Task (<TaskList>) defined to zero out all of your widgets (using Marvin Tasks) and another one to hide a bunch of Widgets when your demo was over. You may have two different Buttons for MenuItem's for these. There may be a time when you want to run both of these tasks together and other times you want to run them independently.

Rather than having 3 separate <TaskList>s, one for zeroing out things, one for hiding and one that does both, you can reuse the 1st two in the 3rd one using Chained Tasks.

Note: the name Chained isn't very good, and is not even what I call it in the config file, may change/update later, but for now it works ☺

Example:

```
<TaskList ID="ResetPressed">
    <TaskItem Type="OtherTask" ID="ShowBlank_00"/>
    <TaskItem Type="OtherTask" ID="HideX_00"/>
    <TaskItem Type="OtherTask" ID="HideO_00"/>
    <TaskItem Type="OtherTask" ID="ShowBlank_01"/>
</TaskList>
```

The above is a snippet from the DemoTab_Grids.xml file where I created a Tic-Tac-Toe game. When you click on a square successively I use Tasks to hide/show 'X' 'O' and Blank images in a square. Each square has a hide and show task for each of the three possible images to show in that square.

There is also a [Button widget](#) that has a task of 'ResetPressed' ID. This is the task defined above, that in turn will call already defined tasks. In this case to go hide all but the blank images.

Take a look at the DemoTab_Grids.xml for an example.

The chained task takes a TaskItem with a Type of "Other Task" an ID of the other task to run. Can even be another chained task, or a Marvin Task, or Remote Marvin task etc.

8.12 Random Task

A Random task task is one in which you provide a list of <Task>s (which are other Task IDs) that will be chosen at random when the task is run.

Example:

```
<TaskList ID="Twinkle" PerformOnStartup="True">
    <TaskItem Type="Random" postpone="500:2000">
        <Task>Twinkle.FirstBlink</Task>
        <Task Weight="75">Twinkle.SecondBlink</Task>
        <Task>Twinkle.ThirdBlink</Task>
        <Task>Twinkle.FourthBlink</Task>
    </TaskItem>
</TaskList>
```

Each task by default has an even chance of being chosen. You can skew this by providing the optional Weight attribute. In the example above the TwinkleSecondBlink has a 75% chance of being selected, while the other 3 have an 8% chance of being selected – which is an even distribution of the remaining 25% left after TwinkleSecondBlink.

8.13 DataPulse Task

Conditionals are only ‘executed’ when the associated data (a MinionSrc) is updated. Sometimes you may want to cause the conditional to run even though there has not been a real update. You can ‘pulse’ the data to make this occur.

```
<TaskItem Type="DataPulse">
    <MarvinDataPoint ID="MyDataID" Namespace="PK Laptop"/>
</TaskItem>
```

The above TaskItem simply ‘refreshes’ the data with Id MyDataID and Namespace of ‘PK Laptop’.

You may use wildcards for the Namespace and ID for a datapulse task similar to the OnDemand grids and tabs.

8.14 OscarBind Task

This allows you to connect to an Oscar dynamically – at any time, and you can prompt (using the @prompt capability). Is a dynamic way of doing what is specified in section 6.3.2.5.5.

Conditionals are only ‘executed’ when the associated data (a MinionSrc) is updated. Sometimes you may want to cause the conditional to run even though there has not been a real update. You can ‘pulse’ the data to make this occur.

```
<TaskList ID="ConnectToOscar">
    <TaskItem Type="OscarBind">
        <ConnectInfo IP="myOscar.myCompany" port="1234" key="My hash key"/>
    </TaskItem>
</TaskList>
```

Will attempt to connect to that Oscar.

8.15 Mathematic Task

Likely not to be used often, this task will take a data point, perform a mathematical operation on it, and then store the result.

```
<TaskItem Type="Mathematic ">
    <MarvinDataPoint ID="MyData" Namespace="PK Laptop"/>
    <Operation Value="1">Add</Operation>
</TaskItem>
```

Valid operations are:

- Add

- Subtract
- Multiply

Value attribute indicates the other value to be used in the operation.

8.16 Delta Value Task

This task will take two Marvin Data Points and perform an operation on them. Storing the result in the Namesapce and ID indicated in the <Operation>

```
<TaskItem Type="DeltaValue">
    <MarvinDataPoint ID="Val1" Namespace="DemoNamespace"/>
    <MarvinDataPoint ID="Val2" Namespace="DemoNamespace"/>
    <Operation ID="Delta2" Namespace="DemoNamespace">PercentDiff</Operation>
</TaskItem>

<TaskItem Type="DeltaValue">
    <MarvinDataPoint ID="Val1" Namespace="DemoNamespace"/>
    <MarvinDataPoint ID="Val2" Namespace="DemoNamespace"/>
    <Operation ID="Delta1" Namespace="DemoNamespace">Difference</Operation>
</TaskItem>
```

Valid operations are:

- Difference
- PercentDiff

Both will be absolute value operations. So if Val1 is 85 and Val 2 is 100, the Difference will return 15, and the PercentDiff .

8.17 Desktop Task

This task allows you to specify a document or a file on your local system to be opened in the default application for that document type.

The document to open is specified in the <Document> Tag.

```
<TaskItem Type="Desktop">
    <Document>c:\users\patrick\changelog.txt</Document>
</TaskItem>
```

The example above (when placed in a TaskList) automatically opens the specified file in NotePad on my system.

There is an optional Action attribute of Action where you can specify other possible actions:

```
<TaskItem Type="Desktop">
    <Document
Action="Browse">https://www.google.com/intl/en/chrome/browser/welcome.html</Document>
</TaskItem>
```

The example above will open a web browser with the specified url.

The default Action is 'Open', which opens the application associated with the file type specified.

Currently only 'Open' and 'Browse' are supported. May in the future include 'Email', 'and Print'.

8.18 LaunchProgram Task

This task allows you run the specified external Application.

The program to run is specified in the <Application> Tag.

```
<TaskItem Type="LaunchProgram">
    <Application>notepad</Application>
    <Param>MyFile.txt</Param>
</TaskItem>
```

The example above (when placed in a TaskList) runs notepad and tries to open the MyFile.txt file as indicated by the optional Param tag. You can have multiple Param tags.

8.19 UpdateProxy Task

```
<Tasklist ID="ChangeToSystem2">
    <TaskItem Type="UpdateProxy">
        <Proxy ProxyID="MyCoolProxy Namespace="System2" ID="*"/>
    </TaskItem>
</Tasklist>
```

This task is used with a GenerateDatapoint: Proxy setup. Refer to the Proxy section for details on what that is.

The Task takes a ProxyID, that is defined in the Proxy definition and then a Namespace and or an ID to change to proxy SOURCE to. You can use wildcards for this. You can change just the Namespace or the ID or both.

8.20 Running a Task at Startup

A recent addition is when you create a Task, you can specify that it be run when your application starts. This is done with an additional attribute to the <TaskList> tag of PerformOnStartup and it takes a value of either "True" or "False". If you do not specify this attribute it is the same as specifying False.

Example:

```
<TaskList ID="TestTask" PerformOnStartup="true">
    <TaskItem Type="Marvin">
        <DataToInsert ID="3to10" Namespace="DemoNamespace" Data="3.4"/>
    </TaskItem>
</TaskList>
```

The above example is a [Marvin Task](#) that sets some dials (listing for MinionSrc with ID=3to10 and Namespace=DemoNamespace) to a value of 3.4. This task is done as soon as the application is up and running.

You do not even need to assign this task to a Widget, it will run automatically. Take a look at the DemoTab_Dials.xml for an example.

Note: Tasks that are performed on startup are really done on startup. The network communication between Marvin and Oscar are likely to not have occurred yet. As such it is not recommended to rely on performing any tasks other than local ones such as Marvin and Marvin Admin tasks using the PerformOnStartup ability.

8.21 User Prompts

I added the ability to prompt the user for input. This is envisioned to be mostly useful for Tasks, where you want to say send a parameter value as a task that isn't always hard-coded in your XML file somewhere, or if it is, it comes from a list of possibilities.

There are two type of prompt methods. One where the user is presented with a list of items to select from and another where an input box is presented and whatever the user types in is used.

8.21.1 Defining a Prompt

Prompt methods are similar to Tasks. They must be defined and given an ID before they can be used. As with tasks, once a prompt is defined, it is global.

8.21.1.1 ListBox Prompt

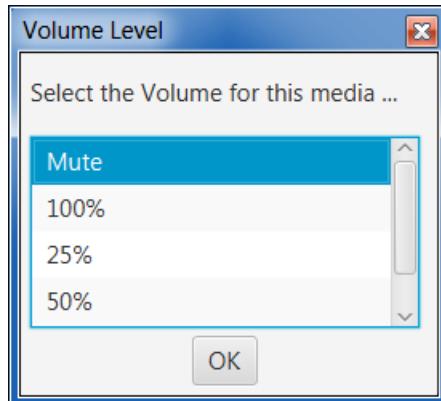


Figure 82: Example of a ListBox Prompt

Example definition:

```
<Prompt ID="Volume Selection" Type="ListBox">
    <Title>Volume Level</Title>
    <Message>Select the Volume for this media player</Message>
    <List>
        <Item Text="Mute">Volume:0</Item>
        <Item Text="100%">Volume:100</Item>
```

```

        <Item Text="25%">Volume:25</Item>
        <Item Text="50%">Volume:50</Item>
        <Item Text="75%">Volume:75</Item>
    </List>
</Prompt>
```

8.21.1.1.1 **ID**

Specifies the unique ID of the prompt. If used again, a warning will be logged, and the new ID ignored.

8.21.1.1.2 **Type**

Specifies the type of the prompt, currently only "ListBox" and "InputBox" are supported.

8.21.1.1.3 **Height and Width**

Optional

You can optionally specify a height and width for the input box as an attribute of the <Prompt line. They can use the percentage options just as with widgets.

8.21.1.1.4 **<Title>**

Optional

Specifies the Title of the listbox.

8.21.1.1.5 **<Message>**

Optional

Explanatory message to be displayed.

8.21.1.1.6 **<List>**

This is where you define the <Items> to be displayed in the list.

8.21.1.1.7 **<Item>**

One or more Items should be defined as part of the <List>.

The value of the Item is what is returned to the framework. So in the above example, if the first item in the list is selected by the user, the string "Volume:0" will be returned.

The optional "Text" attribute provides a mechanism by which you can put a more user-friendly string to be displayed in the listbox. If the Text attribute is not used, then the string used with the <Item> will be displayed.

8.21.1.1.8 **<StyleSheet>**

Optional

Can specify a specific .css file to be used for the style, default will be the one the app uses.

8.21.1.1.9 **<StyleOverride>**

Optional

Can apply style override <Item>s like most other things. You cannot specify an alternate ID or File here though, only items.

8.21.1.2 InputBox Prompt

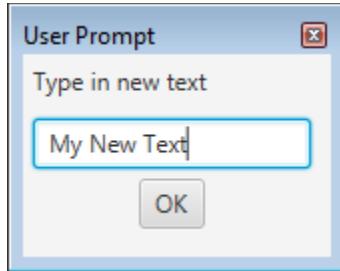


Figure 83: Example of an InputBox Prompt

Example definition:

```
<Prompt ID="NewTextPrompt" Type="InputBox">
    <Title>User Prompt</Title>
    <Message>Type in new text</Message>
</Prompt>
```

8.21.1.2.1 ID

Specifies the unique ID of the prompt. If used again, a warning will be logged, and the new ID ignored.

8.21.1.2.2 Type

Specifies the type of the prompt, currently only "ListBox" and "InputBox" are supported.

8.21.1.2.3 <Title>

Optional

Specifies the Title of the listox.

8.21.1.2.4 <Message>

Optional

Explanatory message to be displayed.

8.21.2 Prompting the user

Now that you have defined a prompt of some kind, you need to use it.

You can use a prompt for any part of a Task. Be it <MinionSrc> or parameters etc.

The usage is pretty simple, just use the ampersand (@) symbol in front of the piece of data you want to prompt for.

As an example:

```
<TaskList ID = "Video_Volume_Control">
    <TaskItem Type="Marvin">
        <DataToInsert ID="VidPlayer" Namespace="VidPlayerNS" Data="@Volume Selection"/>
    </TaskItem>
```

```
</TaskList>
```

If you associate the TaskID with a button, then click on that button, it will see that the Prompt with ID Volume Selection has been requested (the @). The framework will display the following list box:

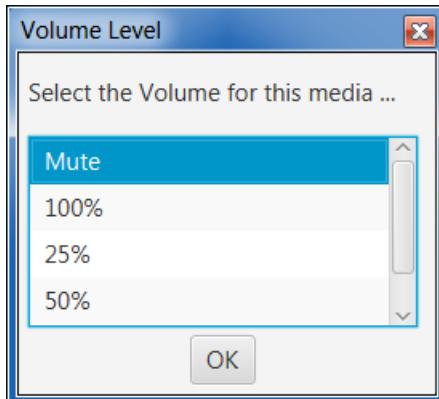


Figure 84: Example listbox

If the Video Player has a [`<PlaybackControl>`](#) with ID="VidPlayer" and Namespace="VidPlayerNS" , then the desired volume setting will be sent to it and changed as requested.

8.22 Postponing Task Action

There may be times when you want to click on a button and have a task take place just a bit later. For example you may want to reveal an image by removing a series of covering panels in a sequential way (See the demo application, Flipping tab).

This can be accomplished by adding a Postpone attribute to the TaskItem declaration and giving it a value, which is a postpone time in milliseconds.

```
<TaskList ID="FlipIt">
    <TaskItem Type="Marvin" Postpone="500">
        <DataToInsert ID="FlipItPanel" Namespace="local" Data="DummyData"/>
    </TaskItem>
</TaskList>
```

In the example above, the Marvin Task will be executed to flip a flip panel. The task will be executed approximately 500ms after the task was initiated.

8.22.1 Random Postpone Time

You may want some things to occur at pseudo 'random' times. Do accomplish this you can specify a range for the Postpone value separated by a colon.

Example:

```
<TaskItem Type="Marvin" Postpone="500:60000">
```

Will postpone for a random time between ½ a second (500) and a minute (60000).

9 Conditionals

This section provided details on Conditionals defined in Marvin. A Conditional is a 'If-Then-Else' mechanism that you can create that will compare a MinionSrc value with another value, if the comparison evaluates to True it will execute the [task](#) associated with the then, otherwise if defined it will execute the task associated with the else.

9.1 Defining a Conditional

Conditionals are defined at the same XML level as Tab, Grid and AliasList. You cannot define a task within any of those tags, must be at the same level.

Each Task definition is created within a <Conditional> Tag. There is no ID associated with a Conditional, so you could define the same Conditional repeatedly.

Just like [Tasks](#), Conditionals can define in external files, grids etc, however once defined has a global scope.

Example Conditional Definition

```
<Conditional Type="IF_GT" CaseSensitive="True">
    <MinionSrc ID="CPU" Namespace="DemoNamespace"/>
    <Value>75</Value>
    <Then>greater</Then>
    <Else>less</Else>
</Conditional>
```

The above example results in the following (in pseudocode):

Whenever the MinionSrc data with ID="CPU" & Namespace of "DemoNamespace" is updated, check to see if it is greater than (>) the value of 75. If it is, then go execute the task with the ID of 'greater', otherwise execute the task with the ID of 'less'.

Note: There is an example of this in the Widget Demonstration, the LCD tab.

9.1.1 Type

Required

Every conditional require a type to be specified. Supported types are:

- If_EQ - If Equal (==)
- If_NE - If Not Equal (!=)
- If_GT - If Greater Than (>)
- If_GE - If Greater Than or Equal (>=)
- If_LT - If Less Than (<)
- If_LE - If Less Than or Equal (<=)
- CASE - CASE statement

9.1.2 CaseSensitive

Optional

The CaseSensitive attribute is optional. The default is FALSE. If you set this to true, then all comparisons for the Conditional will be performed with case sensitivity, else it won't.

9.1.3 <MinionSrc>

Required

This is the same as [`<MinionSrc>`](#) used for widgets. This is the data source that when updated triggers the conditional to be evaluated.

NOTE: This MinionSrc is the ONLY trigger for conditionals. If you specify another MinionSrc as the `<Value>`, if that MinionSrc changes, it will not trigger an evaluation – only the data point in this `<MinionSrc>` tag. Otherwise if both changed, the task would be fired twice.

9.1.4 <Value>

Required

This is the value to be compared against the `<MinionSrc>`. It can be a constant value as below:

```
<Conditional Type="IF_GT">
    <MinionSrc ID="CPU" Namespace="DemoNamespace"/>
    <Value>75</Value>
    <Then>greater</Then>
    <Else>less</Else>
</Conditional>
```

Or it can be another `<MinionSrc>` (declared inside the `<Value>` tag) as below:

```
<Conditional Type="IF_GE">
    <MinionSrc ID="CPU" Namespace="DemoNamespace"/>
    <Value><MinionSrc ID="WarningLevel" Namespace="DemoNamespace"/></Value>
    <Then>greater</Then>
    <Else>less</Else>
</Conditional>
```

In this example the Value is a Minion Src. You could have a Minion collector that sets this value depending on the system configuration.

9.1.5 <Then>

Required

Identifies the [`Task`](#) to be executed if the conditional evaluates to True.

9.1.6 <Else>

Optional

Identifies the [Task](#) to be executed if the conditional evaluates to False. If not defined then the conditional will do nothing.

9.2 Compound Conditionals

Works just like the conditionals described above, except you can add <And> and <Or> statements. Evaluation only occurs for the 1st MinionSrc trigger. When using <Or> if the primary evaluation or any of the <Or> statements evaluate to True, then the <Then> task is fired.

When using <And>s, if the primary evaluates to False, or any of the <And> statements evaluate to false then the <Else> task is fired.

If mixing <And> and <Or>, <Or> is evaluated 1st.

Example1: The following example mixes <And> and <Or>, just for an example (the AND is actually useless, as this will evaluate to True if the primary or any OR is true)

```
<Conditional TYPE="IF_EQ">
    <MinionSrc Namespace="foo" ID="Toggle.Value1"/>
    <Value>True</Value>
    <And Type="IF_EQ">
        <MinionSrc ID="Toggle.Value2" Namespace="foo"/>
        <Value>TRUE</Value>
    </And>
    <Or Type="IF_EQ">
        <MinionSrc ID="Toggle.Value3" Namespace="foo"/>
        <Value>True</Value>
    </Or>
    <Then>Result1.TRUE</Then>
    <Else>Result1.FALSE</Else>
</Conditional>
```

You may have any number of <And> and <Or> statements – however the evaluation is only run when the primary MinionSrc changes, or is [pulsed](#).

9.3 CASE

You can setup a conditional CASE statement that looks something like:

```
<Conditional Type="CASE">
    <MinionSrc Namespace="MyNamespace" ID="StateVar" />
    <Case Value="0">MyTask</Value>
    <Case Value="1">MyTask1</Value>
    <Case Value="2">MyTask2</Value>
    <Default>myDefTask</Default>
</Conditional>
```

Where you have the MinionSrc as is required for all conditionals, followed by one or more Case entries, where each Case has a constant value to compare against. If the value matches then the defined task (for example MyTask) is run.

If none of the defined Case values match, you may optionally put in a <Default> task to run.

10 Connectivity Overview

This section describes the various network connections used amongst Minion, Oscar and Marvin. I add this section mostly for my own reference, it gets confusing sometimes.

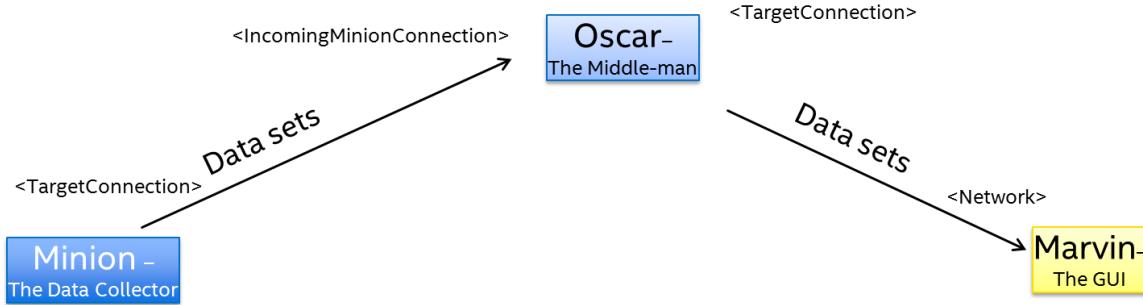


Figure 85 Primary Communication Channels

Figure 85 shows the primary communication paths between Minion and Oscar and between Oscar and Marvin.

Oscar has two primary channels, the path between itself and Minion and between itself and Marvin. Both are defined within the Oscar configuration file and are required. The Oscar-Minion connection is defined within the [<IncomingMinionConnection>](#) tag. What you put in here must match what you place in the [<TargetConnection>](#) tag in the Minion config file. Oscar's second primary channel (I know that didn't sound right) is defined in the [<TargetConnection>](#) tag within the Oscar configuration file. It must match the [<Network>](#) settings within the Marvin configuration file.

These primary channels provide the data from Minion to Oscar, which in turn re-packages and sends it on to Marvin.

10.1 Secondary communication Channels

As shown in Figure 86 there is a 2nd set of communication channels used by the BIFF Instrumentation Framework.

This secondary channel is used to send information such as [heartbeats](#) from Marvin (to keep Oscar from blasting data to a system not running Marvin). Tasks are also sent over this channel.

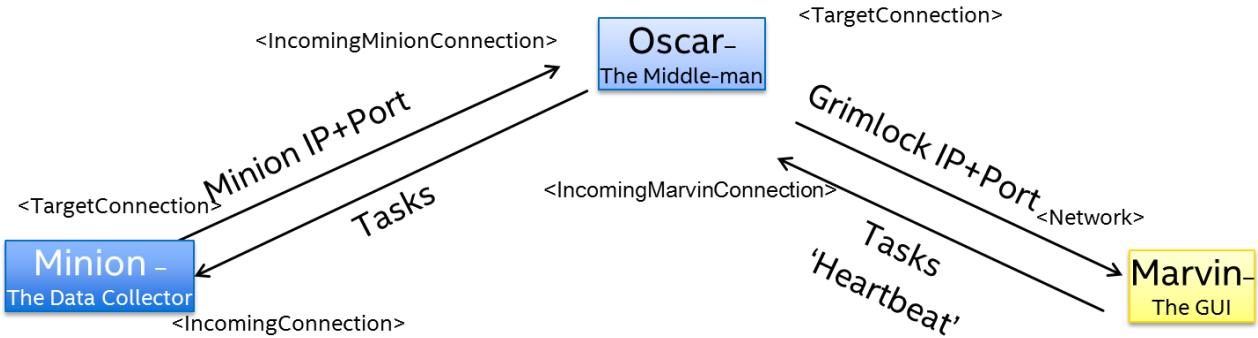


Figure 86 Secondary Channel

Both Minion and Oscar create network connections for use the secondary channels. Both Oscar and Minion can create these channels automatically, or can be specified within the configuration files. Oscar uses the [<IncomingMarvinConnection>](#) tag and Marvin uses the [<IncomingConnection>](#) tag. Both of these are optional, if you don't use the tags the IP and ports will be automatically selected.

You may note that Oscar does not have a configuration as to the secondary channel for Minion, nor does Marvin have any configuration to know where to send Tasks and heartbeats to Oscar. This is because they are 'told' this information over the primary channels. Minion periodically sends a message to Oscar indicating the IP and Port that it is listening for Tasks on, in addition to its namespace. Likewise Oscar periodically sends a message to Marvin informing it what IP and Port (along with the Oscar ID) it is listening for Heartbeats and tasks on.

If you are having troubles with firewalls, you might want to specify [<IncomingMarvinConnection>](#) and [<IncomingConnection>](#) to ease network debugging issues, or to open specific ports in the firewall.

11 Advanced Tactics

11.1 Widget Stacking

You can place as many widgets in the same location as you like. You may not like the results though 😊

One thing you can do is to stack widgets but selectively hide and show them as needed to achieve some interesting effects. For example, if you look in the DemoTab_LCD.xml file you may see that there are two widgets placed in the same location:

```
<Widget File="LCD.xml" row="1" column="2" Height="200" Width="400">
    <MinionSrc ID="CPU" Namespace="DemoNamespace"/>
    <UnitsOverride>%</UnitsOverride>
    <Title>CPU 0</Title>
</Widget>
<Widget File="LCD.xml" row="1" column="2" Height="200" Width="400">
    <MinionSrc ID="CPU" Namespace="DemoNamespace"/>
    <UnitsOverride>%</UnitsOverride>
    <Title>CPU 0 - Warning</Title>
    <StyleOverride ID="lcd-red"/>
    <Peekaboo ID="ShowWarning" Namespace="DemoNamespace_LCD" Default="Hide"/>
</Widget>
```

Both LCD widgets have the same `<MinionSrc>`, which is showing CPU utilization. The 2nd one has a slightly different title (adds 'Warning') and changes the LCD color to red. It also has a `<Peekaboo>` associated with it and by default is hidden.

I've setup a task to show the 2nd widget when I press a button. Since the 2nd LCD widget is defined after the 1st one, it will be displayed on top of the 1st one when made visible.

Using this technique you could, on your Minion side have two Collectors always running. One that is constantly feeding the `<MinionSrc>` for both of these LCD widgets and another that when the CPU utilization is below a certain threshold always sends the `<Peekaboo>` with the data of "Hide". However when the CPU utilization goes above a certain level, it will send "Show", which would then cause the red LCD widget to be visible and give a very noticeable change to the appearance of your application.

11.2 Show Current Computer Name

Using the Alias ability of Marvin and the fact that I suck in all of the environment variables in the system as Aliases, you could display the name of the computer running Marvin:

```
<Widget File="Text.xml" row="2" column="1" >
    <InitialValue>$ (ComputerName)</InitialValue>
</Widget>
```

11.3 Changing the Images being shown

TBD

12 Support

Despite my best efforts to document the pieces of the BIFF Instrumentation Framework project – I know that it is a complicated beast. It was designed to be ‘stupid’ (not know anything about what it is processing) and highly flexible – both of which make it actually kinda complicated ☺

If you have bugs that you have found or questions (after reading this doc) please contact me and I will do my best to help as time allows.

Please keep in mind that this is my ‘spare time’ project and not what I get paid me to do. So please be patient.

13 Summary

So here we are near the end of the doc that I think has more lines than both Minion and Oscar. If you made it this far – thank you!

The overriding design strategy for this ‘shot from the hip’, ‘make it up as I go’ project was to make it ignorant and agnostic to where the data is coming from. This includes everything from Minion to Marvin. I think that goal was met pretty well. The other goal was to make the GUI completely configurable from a text file (XML File) and be very versatile. While there are a few widgets that harder to use and understand than others (some of the charts), in general I think it’s pretty flexible.

Flexibility comes at a cost of complexity in both code and configuration files. Hopefully this document will help some with the configuration files. The code – well if I had it to do over and know what I know now, or if I had done this as a real sanctioned project rather than a ‘hmm, what could I do’ skunk-works project it would be better. As it is, it works and does everything I’ve wanted it to do thus far.

This organic project will, I truly hope continue to grow with new features and refinements over time.

I hope you find the BIFF Instrumentation Framework project useful and have as much fun using it as I did writing it.

14 Troubleshooting

This section will try and cover known issues and challenges.

14.1 Stack overflow error

Symptom: you have a pretty complex GUI with a lot (hundreds) of Widgets. When you run the app you get a stackoverflow error. The app may or may not still run.

This is because Java only reserves a certain amount of memory by default for such gui components. You need to tell Java that you need more memory. To do this add the `-Xss` option to the invocation of the application, and specify more memory.

Try:

```
Java -Xss1M -jar BIFF.Marvin.jar
```

That will reserve one MB of ram for threads and such. If this is not enough, increase the number. Only pick enough to get it to run, you pick too much and it will be a waste of system memory.

If you need more than 2GB of heap/stack (say you have tons of videos or images) then you MUST use a 64bit JVM.

14.2 Getting Audio and Video working in a VM

If you are trying to get the GUI working in a Hyper-V VM, you need to specify in the VM settings to get Desktop Experience.

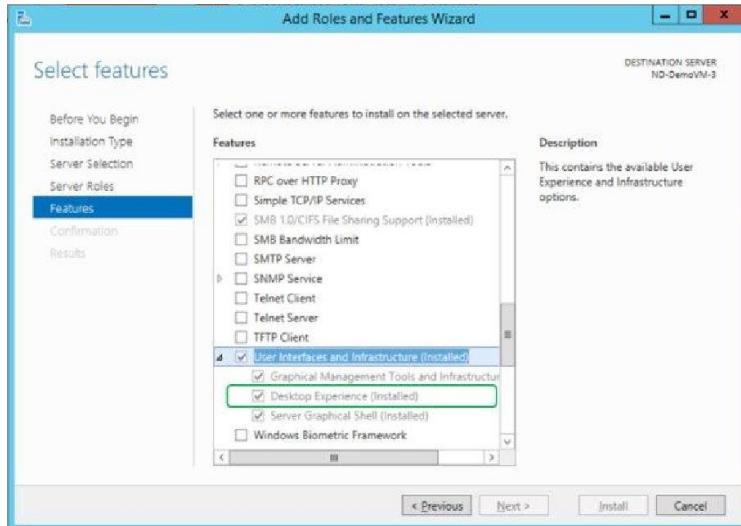


Figure 87: Allowing Video and Sound for a VM

14.3 Connectivity Problems

Sometimes you may see that Marvin gets data for about a minute before it stops getting updated. This is usually an indicator that there is a firewall blocking communication from Marvin to Oscar. Marvin periodically sends a message to Oscar it is a 'heartbeat' indicating to Oscar that there is actually something consuming the data it is sending. If Oscar does not get a notification every 60 seconds, it will nearly stop sending data until a Marvin responds with a heartbeat. If a firewall is blocking the response, you will see data blast for 60 seconds in Marvin right after you start transmitting from Oscar. To test this, exit Oscar and restart. If you get data in Marvin for a short while and then nothing despite Oscar showing new data arriving from Minion then it is likely a firewall problem.

See Section 9 for more details on the various connectivity channels.

14.4 The Dynamic type Widget isn't working

So you have a Dynamic Image or Dynamic Grid etc. type of Widget and your collector is sending the ID that looks correct (you can see it in Oscar), but the widget isn't changing in Marvin.

One possible reason for this is that you are using the 'built-in' [FileCollector](#) to read some file that would contain the ID for your widget. The File collector read the entire file, including any interesting OS specific CR/LF characters. If the widget is looking for an ID of 'foo' and the collector sends 'foo' + an invisible character, the comparison will fail.

14.5 The Web Widget isn't working all the time

The Web widget may need proxy information configured. This is done via command-line arguments to the Java VM (JVM) as shown below:

```
java -Dhttp.proxyHost=proxy.myproxycom -Dhttp.proxyPort=911 -jar BIFF.Marvin.jar
```

using the `-Dhttp.proxyHost` and `-Dhttp.proxyPort` settings.

14.6 Slow network performance, tasks not getting run in a timely manner

We recently found a frustrating, yet interesting problem. For a demo we were instrumenting > 12,000 data points and also running some tasks to start and stop workloads. The systems under test were located in a lab and the demo was running off of the corporate network. We found very poor and bursty performance. It turned out to be a mis-alignment of [MTU](#) between the systems under test, the switch in the lab and the main network. Once we set them all to the standard 1500 on the systems under test and lab switch, these issues went away.

14.7 Collector Data not showing up in Oscar or Marvin

Sometimes you can create a collector that sends a lot of data (for example the FileCollector), or you can `<Group>` a bunch of collectors together. If the resulting packet size is too large (greater than the [MTU](#)) the packet will likely not make it to the destination. If logging is turned on, then you should get a warning message about the specific Collector that is possibly having the problem.

14.8 Multi-Source Widgets not Updating properly

Muliti-Source Widgets can be problematic unless used with care. Each data source is an independent stream and even if the collector is run with the same interval, the traffic is UDP and not guaranteed, so it can be dropped. This can result in data being out of sync and looking poorly.

This is why I added the [`<Synchronized>`](#) capability to the multi-source charts/graphs. The default settings for this option is to synchronize the data and wait for all data sources to

send a data update before updating the chart. The problem with this is if you have a data source that is 'dead' (say a minion that isn't running) then the chart will never update. To get around this set <Synchronized> to false, or change the MaxSyncWait time to something reasonable for the data rate to have the data that is coming in synchronized.

14.9 Error: Could not find or load main class kutch.biff.marvin.Marvin

This usually occurs if you are trying to run with an unsupported version of Java. If using Java 8 and using a non-Oracle version of Java 8, usually OpenJDK. OpenJDK does not include the JavaFX features, which is a requirement for Marvin.

For example doing a java -version will tell you what is going on:

```
# java -version
openjdk version "1.8.0_91"
OpenJDK Runtime Environment (build 1.8.0_91-8u91-b14-3ubuntu1~16.04.1-b14)
OpenJDK 64-Bit Server VM (build 25.91-b14, mixed mode)
```

Try installing openjfx. Using apt-get it would look like:

```
sudo apt-get install openjfx
```

That should get you moving forward.

If you are not using Java 8 (you built it specifically for Java 8) it means you are likely using a later version of Java, which is incompatible with the later versions of Java. In general you should be using Java 10 or later.

14.10 java.lang.UnsupportedOperationException: Unable to open DISPLAY

You most likely get this kind of exception when you try to launch Marvin on a Linux OS via a SSH session. Try using VNC, should have much better results.


14.11 The fonts on one system do not look the same as on another

You may find that you develop your Marvin application on your PC and it all looks great. Then you give it to a friend, or put it on another system and things don't line-up properly or the fonts no longer fit.

Could be a couple of things, one you may be using a font on the 1st system that is not on the other.

The other and more common reason is that the fonts in the application are based upon the system default font size. It is kinda technical and I don't know how to explain it very well,

just know that you should set your font size settings the same on all systems you want to show this on. In windows the settings page looks like:

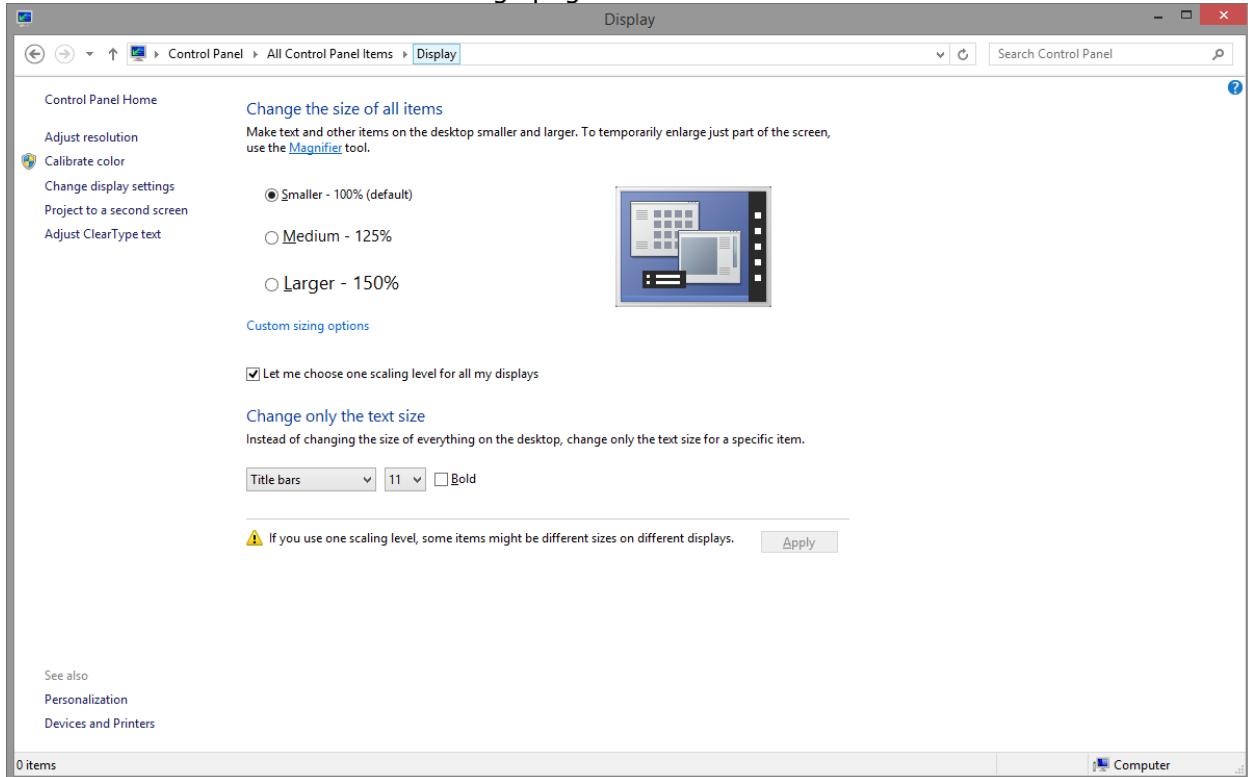

Make sure that all systems you want to use have the same settings of either smaller, medium or larger if you want to ensure they all look the same when you run the gui.

14.12 My images and goodies don't look right on another computer

Marvin has an auto-scaling ability that should re-size your images and widgets if you run the application on a computer with different screen dimensions than the one where you created the application. However you must set [CreationSize](#) property.

14.13 My widgets don't line up anymore

I changed the way Grid padding works, it now properly does not inherit the setting from the parent application the default is 0. If you want to use it 'old' way, look at 'LegacyMode' option in application Padding section.

14.14 Images don't always appear

I've noticed that if you use CSS code to put in images (say background) and the path to the image (such as the directory of your application) have spaces in it, it will fail to load the

image and Java engine (outside of what Marvin can see) will spit out a error message and ignore the image.

15 Thanx and Recognitions

Brian Johnson has been instrumental in this project. While he doesn't write code, he has been my tester and provided more ideas than I can name. Most of which I rejected as idiotic before I took a moment and realized it was a great idea. He also has taught himself a lot about CSS styling and provided a lot of the fun styles.

Gerrit Grunwald (<http://harmoniccode.blogspot.com/>) has been somewhat of an inspiration for me. I leverage his awesome gauges (<https://bitbucket.org/hansolo/enzo/wiki/Home>) for a great number of my Widgets. I muddle through his code to learn new things every chance I get.

16 About Me

I enjoy fishing, reading, video games, hiking, and spending what little time my kids can tolerate being around their parents.

I still have a passion for writing code; I just don't get to do it for pay anymore. Thus another reason I decided to write this project during my off time.

This project has been my passion for years now, since 2014.

I hope you find it of use.

Thanx,

Patrick Kutch

September 2021