"Beware of bugs in the above code; I have only proved it correct, not tried it." - Donald E. Knuth

Learning Objectives

- 1. Combinational logic design.
- 2. Using bitwise logical and shifting operations in a high-level language like C++.

Work that needs to be handed in

These files need to be submitted by the first deadline:

1. keypad.v: Modify as described in the **Keypad** section. We've provided an exhaustive test suite in keypad_tb.v.

These files need to be submitted by the second deadline:

- 1. extractMessage.cpp: Modify as described in the Encryption section.
- 2. countOnes.cpp: Modify as described in the Count Ones section.

Compiling, Running and Testing

If you're on EWS, you'll need to get your PATH set up to be able to easily access various tools throughout the semester. Run the following command to do so; once again, *this is only necessary on EWS*. Google "shell PATH" and take a look at the source of the script if you're interested in what's happening under the hood.

```
source /class/cs233/setup
```

We have included a Makefile in your Lab2 folder that facilitates compilation. The following examples illustrate its use:

```
make keypad - compiles the keypad circuit and runs its test bench
make extractMessage - compiles the extractMessage program
make countOnes - compiles the countOnes program
make clean - removes all compiled files
```

To test message extraction, run the following command, which calls your extractMessage function on the default test message. A correct implementation should print out Knock knock.


```
Race Condition.
Who's there?
```

./extractMessage

To test Problem 2, run the command ./countOnes <number> with any number of your choice; a correct implementation should print out the number of bits that are 1 in that number. You can use 0b to prefix binary constants and 0x to prefix hexadecimal constants. A few examples:

Keypad

Consider the telephone style key pad shown below. This key pad supports numerical buttons 0-9 and has 7 output signals a-g. When no buttons are being pressed all of these signals output a 0. When a button is pressed a 1 is output on both the row and the column of the button pressed (e.g., if 6 was pressed c and e would be 1 and all of the other signals would be zero).

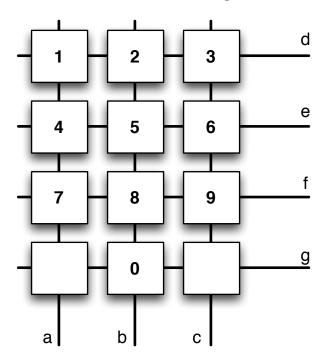

Your job is to design a circuit that indicates numerically which button is being pressed (assuming a single button is pressed at a time). Your circuit will take the 7 signals (a-g) as inputs and produce two outputs: the 1-bit signal valid indicating that a numbered button was pressed, and the 4-bit signal number specifying which number button was pressed (encoded as a binary number).

Write boolean expressions for these signals:

valid =

number[3] =

number[2] =

 $\mathrm{number}[1] =$

 $\operatorname{number}[0] =$

Encryption

Encryption¹ is the process of encoding messages or information in such a way that only authorized parties can read it. Here, we will look at a simple method of "encrypting" a text message as an encoded string. Your task is to write a C++ function to decode these encoded messages.

Messages are encoded/decoded according to the following scheme:

- (a) First, each character in the message is encoded in 1 byte (8 bits) according to its ASCII code². For encoding/decoding purposes, the length of the message must be a multiple of 8 bytes. The length of the message must be provided to the encoder/decoder along with the message itself.
- (b) Each group of 8 bytes is encoded/decoded independently.
- (c) Within each group of 8 bytes, we're going to "reflect" the bits, so that the bits of the *i*th byte of the input becomes the *i*th bit of each of the 8 bytes of the output, with the LSB of the *i*th byte becoming the *i*th bit of the 0th byte of the group. (Alternatively, you could view this as least significant bits (LSbs) of each group of 8 input bytes containing the bits of the first character of the group of 8 output bytes, the second LSbs containing the bits of the second character, ..., the most significant bits (MSbs) of the 8 characters containing the bits of the 8th character.)

As an example, say we're given the message:

Hello World! If we represent this as a set of bits in ASCII, pad it with the null character, and perform the scheme above, the transformation will look like this:

											0	W		o	l	l	e	H
H	0	1	0	0	1	0	0	0		210	1	1	0	1	0	0	1	0
	_		_	_	_	-	-	-		208	1	1	0	1	0	0	0	0
e	0	1	1	0	0	1	0	1		222	1	1	0	1	1	1	1	0
l	0	1	1	0	1	1	0	0		157	1	0	0	1	1	1	0	1
l	0	1	1	0	1	1	0	0		64	0	1	0	0	0	0	0	0
o	0	1	1	0	1	1	1	1			-							
	0	0	1	0	0	0	0	0		190	1	0	1	1	1	1	1	0
W	0	1	0	1	0	1	1	1		223	1	1	0	1	1	1	1	1
0	0	1	1	0	1	1	1	1		0	0	0	0	0	0	0	0	0
				-	_				\rightarrow									
r	0	1	1	1	0	0	1	0							!	d	l	r
l	0	1	1	0	1	1	0	0		8	0	0	0	0	1	0	0	0
d	0	1	1	0	0	1	0	0		1	$\begin{vmatrix} 0 \end{vmatrix}$	0	0	0	0	0	0	1
!	0	0	1	0	0	0	0	1			-		-	-		-	-	
	0	0	0	0	0	0	0	0		6	0	0	0	0	0	1	1	0
	0	0	0	0	0	0	0	0		2	0	0	0	0	0	0	1	0
	0	0	0	0	0	0	0	0		1	0	0	0	0	0	0	0	1
			-	_						15	0	0	0	0	1	1	1	1
	0	0	0	0	0	0	0	0		7	0	0	0	0	0	1	1	1
										0	0	0	0	0	0	0	0	0
										,	1							_

¹Encryption: https://en.wikipedia.org/wiki/Encryption

²ASCII codes: http://www.asciitable.com

The transformation for a group of 8 bytes (8X8 matrix) is a transpose function, where a bit at location (i, j) is stored at location (7 - j, i).

The extractMessage_main.cpp contains the following message encoded according to the above scheme:

Knock knock.
Race Condition.
Who's there?

What you need to do

The C++ function extractMessage in the file extractMessage.cpp accepts two parameters, a pointer to a character array and the length of that character array; Complete it so that it extracts the encoded message according to the scheme just described into the provided character array and returns a pointer to it. To do this, your code must use bitwise logical and shifting operations in C++. Note that all libraries required for the completion of code have been included in the base code provided to you. Additional libraries included by you will be removed before compilation of code for grading.

Count Ones

In this problem, you will write an efficient C++ function to count the number of bits that are equal to one in an unsigned integer. Here is a simple (but *inefficient*) way to solve the problem:

```
unsigned countOnesDumb(unsigned input) {
  int i, count;
  count = 0;
  for (i = 0; i < 8 * sizeof(unsigned); i++) {
    if ((input & 1) != 0) {
       count++;
    }
    input = input >> 1;
  }
  return count;
}
```

This is inefficient, because it takes O(n) operations³ on n-bit numbers to count the number of ones in an n-bit integer. We want you to write a function that performs only $O(\log_2 n)$ operations on n-bit numbers for this task.

Here is a description of an efficient algorithm for this problem (you can assume that integers are 32 bits long):

- (a) Treat each integer as 32 1-bit counters. Pair adjacent counters off, and add each pair. The result will be 16 2-bit counters.
- (b) Take these 16 2-bit counters and pair adjacent counters off. Add the pairs of counters to produce 8 4-bit counters.
- (c) Keep pairing and adding in this fashion until you get a single 32-bit counter, which will contain the result.

Is this really efficient? Think about step 1 of this algorithm. For each pair of bits, we need to perform one addition operation - this means n/2 additions for an n-bit number. For step 2, we need to perform one addition operation for each of the 16 2-bit counters - this means n/4 additions are required for this step. We can continue this trend until we are left with a single 32-bit counter. After all steps are complete, we are left with an algorithm that requires O(n) operations!

The trick to achieve $O(\log_2 n)$ is to do all these additions together (in parallel). In what follows, we'll show you how to do this with an example. To keep things simple, we'll work with 8-bit integers.

 $^{^3 \}text{Recall}$ from CS 125/173/225: O(n) means (roughly) at most $c \cdot n,$ for some constant c > 0

What you need to do

The C++ function countOnes in the file countOnes.cpp accepts an unsigned integer as the input; complete it so that it efficiently counts and returns the number of occurences of 1 in the binary representation of the input 32-bit integer using the algorithm described below, and without using loops or conditionals. You may not use any additional libraries in your solution. Note that all libraries required for the completion of code have been included in the base code provided to you. Additional libraries included by you would be removed before compilation of code for grading.

Doing things efficiently

Suppose the input integer is 10110110. We treat this as eight 1-bit counters. First, let's isolate every alternate counter in this integer. We can do this by AND-ing the number with the bit-pattern 01010101 (i.e. 0x55)

```
1 0 1 1 0 1 1 0 (Our starting number)

AND 0 1 0 1 0 1 0 1 0 1 (The appropriate mask for the "right" 1-bit counters)

-----
0 0 0 1 0 1 0 0 "right" counters
```

Next we get the other counters, this time by AND-ing with the bit-pattern 10101010 (i.e. 0xAA)

```
1 0 1 1 0 1 1 0 (Our starting number)

AND 1 0 1 0 1 0 1 0 (The appropriate mask for the "left" 1-bit counters)

1 0 1 0 0 0 1 0 "left" counters
```

Now we need to pair-up adjacent counters and add them. We can do this by first RIGHT-SHIFTING the "left" counters by 1 to align them with the "right" counters, and then simply adding the two numbers:

This completes step 1 of the algorithm. It takes 4 operations (two ANDs, one RIGHT-SHIFT and one + operation) in the case of 8-bit integers, and will similarly take 4 operations in the case of 32-bit integers.

Moving on to step 2, we need to treat the number 01100101 as four two-bit counters as follows:

We will need appropriate bit-patterns to obtain alternate counters like before. However, because our counters are now two-bits each, the masks and shifts also need to represent that change.

Firstly, isolate the "right" counters:

```
0 1 1 0 0 1 0 1 (The output of adding both 1-bit counters)

AND 0 0 1 1 0 0 1 1 (The appropriate mask for the two-bit "right" counters)

-----
0 0 1 0 0 0 0 1 "right" counters
```

Likewise, we repeat this step for the "left" counters:

Again, we align the counters (this time by right-shifting the "left" counters by 2) and add them:

Finally, we treat 00110010 as two 4-bit counters (repeating the process shown above with a different width) and add them to get the final answer: 5.