





SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for:

BMW 1 Convertible (E88) 120i 2.0, BMW 1 Convertible (E88) 125i 3.0, BMW 1 Convertible (E88) 118i 2.0, BMW 1 Convertible (E88) 135i 3.0, BMW 1 Convertible (E88) 120d 2.0, BMW 1 Convertible (E88) 118d 2.0, BMW 1 Convertible (E88) 123d 2.0, BMW 1 Convertible (E88) 128i 3.0

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 3 Saloon (E90) 318i 2.0







REPLACEMENT: BRAKE DISCS – BMW 1 CONVERTIBLE (E88). TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Sealant
- Drive socket # 18
- HEX bit no.H6.
- HEX bit no.H7.

- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Brake caliper wind back tool
- Flat Screwdriver
- Crow bar
- Wheel chock

Buy tools

CLUB.AUTODOC.CO.UK 2-14







AUTODOC recommends:

- Replace the brake disks on the car BMW 1 Convertible (E88) in complete set for each axis. Regardless of the state of components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- Please note: all work on the car BMW 1 Convertible (E88) should be done
 with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

- Open the bonnet. Unscrew the brake fluid reservoir cap.
- Secure the wheels with chocks.



Loosen the wheel mounting bolts. Use wheel impact socket #17.



CLUB.AUTODOC.CO.UK 3-14







- Raise the front of the car and secure on supports.
- Unscrew the wheel bolts.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
 BMW 1 Convertible (E88)
- Remove the wheel.



- Detach the brake caliper retaining spring. Use a flat screwdriver.
- Remove the dust boot caps of the brake caliper guide pins. Use a flat screwdriver.



CLUB.AUTODOC.CO.UK 4–14







9 Spread the brake pads. Use a crowbar.



- Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.
- Unscrew the brake caliper fastening. Use HEX No.H7. Use a ratchet wrench.



Remove the brake caliper.



CLUB.AUTODOC.CO.UK 5-14







Replacement: brake discs – BMW 1 Convertible (E88). AUTODOC experts recommend:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them.
 Replace, if necessary.

13 Remove the brake pads.

14



Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.



CLUB.AUTODOC.CO.UK 6-14








Unscrew the caliper bracket fastening. Use a drive socket #18. Use a ratchet wrench.



- Remove the fastening bolts (2 pieces).
- 17 Remove the caliper bracket.

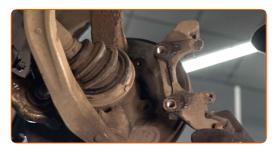

- Clean the brake disc fasteners. Use a wire brush. Use WD-40 spray.
- Unscrew the brake disc fastening. Use HEX No.H6. Use a ratchet wrench.



Remove the brake disc.



CLUB.AUTODOC.CO.UK 7-14







Clean the hub. Use a wire brush. Treat the contacting surface. Use copper grease.



22 Install the brake disc.

24



Tighten the brake disc fastening. Use HEX No.H6. Use a torque wrench. Tighten it to 16 Nm torque.



Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



AUTODOC recommends:

 Replacement: brake discs – BMW 1 Convertible (E88). After applying the spray, wait a few minutes.

CLUB.AUTODOC.CO.UK 8-14







- Treat the fastening bolts. Use a sealant.
- 26 Install the brake caliper bracket.



- Install the fastening bolts (2 pieces).
- Tighten the brake caliper bracket. Use a drive socket #18. Use a torque wrench. Tighten it to 110 Nm torque.



Treat the brake caliper piston. Use a brake cleaner.



Replacement: brake discs – BMW 1 Convertible (E88). AUTODOC experts recommend:

• After applying the spray, wait a few minutes.

CLUB.AUTODOC.CO.UK 9-14







Press in the brake caliper piston. Use brake caliper wind back tool.



Install the brake pads.

34



Install the brake caliper and fix it. Use HEX No.H7. Use a torque wrench. Tighten it to 30 Nm torque.



Install the dust boot caps of the brake caliper guide pins.



Install the brake caliper retaining spring. Use a flat screwdriver.



CLUB.AUTODOC.CO.UK 10-14